

POWER INSTALLATION—GEARBOX AND ACCESSORIES

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
	D.187592	ACCESSORY DRIVE FOR GEARBOX AND EQUIPMENT, ASSEMBLY					—	—		
412	F.187588	Block, clamp (in halves)	...	...	...	...	1	DTD.364	C.	LB.1
414	F.187781	Bolt, special, for securing hydraulic pump	...	...	...	...	4	S.94.B	C.	LB.1
415	F.187782	Bolt, special	...	...	...	...	2	S.94.B	C.	LB.1
420	F.188684	Bolt, "U," supporting driving shaft at frame 34	...	...	...	...	1	S.1	C.	LB.1
6395	F.188685	Channel, stop	...	...	...	...	1	DTD.610	C.	
	F.260908	Clip, bracket (AS.1150/97)	...	...	...	...	2	S.510 or C.511		
37L/363	Rotol GA.19548	Coupling, engine type EC.2/5 (Mod. 832)	...	...	...	...	1	—	A.	
37L/5007	—	Gearbox, accessories drive, type T.G.5/8	...	...	...	...	1	—	A.	
416	A.187589	Eye-end, supporting generators	...	...	...	...	1	Stamping	C.	LB.1
417	A.187590	Fork-end, at stringer "K," supporting generators	...	...	...	...	1	S.94.B	C.	LB.1
5UA/6273	—	Generator, type 515A	...	...	...	...	2	—	A.	
418	F.188834	Nut, lock, for generator support, at stringer "K"	...	...	...	...	1	S.1	C.	LB.1
6104	F.209992	Piece, distance, between gearbox and spar	...	...	...	...	1	DTD.610	C.	
37J/8006	Dowty	Pump, hydraulic, type A8003.Y/R.H./3000	...	...	...	...	1	—	A.	
37L/364	Rotol GA.419546	Shaft, drive, GD.9/44	...	...	...	...	1	—	A.	
	Std.1509/23/075	Tube, distance, at "U" bolt	...	...	...	...	2	T.4		
	Std.914/J/14	Washer, at generator lug	...	...	...	...	1	S.1		
5781	Std.915/E/20	Washer	...	...	...	...	2	DTD.610	C.	4
3953	Std.915/E/22	Washer (shim)	...	...	...	...	1	DTD.610	C.	4

POWER INSTALLATION—GEARBOX AND ACCESSORIES

Ref. No.	Part No.	Description								No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5							
		SUMMARY OF STOCK ITEMS											
28D/1011246	A25.11.E	Bolt,	$\frac{1}{4}$ "	B.S.F.	...	...	...	...	...	...	—	—	—
28D/12812	A25.12.E	Bolt,	$\frac{1}{4}$ "	B.S.F.	...	...	...	...	...	...	—	—	—
28D/12818	A25.9.G	Bolt,	$\frac{5}{16}$ "	B.S.F.	...	...	...	...	...	...	—	—	—
28M/1011467	A27.E.S.	Nut,	$\frac{1}{4}$ "	B.S.F.	...	...	...	...	...	...	—	—	—
28M/13122	A27.G.S.	Nut,	$\frac{5}{16}$ "	B.S.F.	...	...	...	...	...	...	—	—	—
28M/10288	AGS.2001.C.1	Nut,	2	B.A.	...	...	...	...	...	...	—	—	—
28W/9419405	SP.15.E	Washer,	$\frac{1}{4}$ "	dia.	...	...	...	...	...	...	—	—	—
28W/9419476	SP.15.G	Washer,	$\frac{5}{16}$ "	dia.	...	...	...	...	...	...	—	—	—
28W/9419404	SP.16.C	Washer,	2	B.A.	...	...	...	...	...	...	—	—	—
28W/9419438	SP.16.G	Washer,	$\frac{5}{16}$ "	dia.	...	...	...	...	...	...	—	—	—
28W/9419489	SP.16.J	Washer,	$\frac{3}{8}$ "	dia.	...	...	...	...	...	...	—	—	—
28W/9419400	SP.41.L	Washer,	tab	...	...	...	...	...	...	...	—	—	—

POWER INSTALLATION—GEARBOX AND ACCESSORIES

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.	
		1	2	3	4	5					
		SUMMARY OF STOCK ITEMS									
28D/12570	A25.11.E	Bolt,	$\frac{1}{4}$ "	B.S.F.	...	...	...	...	—	—	—
28D/12812	A25.12.E	Bolt,	$\frac{1}{4}$ "	B.S.F.	...	...	...	...	—	—	—
28D/12818	A25.9.G	Bolt,	$\frac{5}{16}$ "	B.S.F.	...	...	...	...	—	—	—
28M/12930	A27.E.S.	Nut,	$\frac{1}{4}$ "	B.S.F.	...	...	...	...	—	—	—
28M/13122	A27.G.S.	Nut,	$\frac{5}{16}$ "	B.S.F.	...	...	...	...	—	—	—
28M/10288	AGS.2001.C.1	Nut,	2	B.A.	...	...	...	...	—	—	—
28W/12496	SP.15.E	Washer,	$\frac{1}{4}$ "	dia.	...	...	...	...	—	—	—
28W/12324	SP.15.G	Washer,	$\frac{5}{16}$ "	dia.	...	...	...	...	—	—	—
28W/12355	SP.16.C	Washer,	2	B.A....	...	...	...	...	—	—	—
28W/12347	SP.16.G	Washer,	$\frac{5}{16}$ "	dia.	...	...	...	...	—	—	—
28W/12322	SP.16.J	Washer,	$\frac{3}{8}$ "	dia.	...	...	...	...	—	—	—
28L/14535	SP.41.L	Washer,	tab	...	...	...	...	...	—	—	—

POWER INSTALLATION—GEARBOX AND ACCESSORIES

[illegible]

RESTRICTED

This file was downloaded
from the RTFM Library.
Link: www.scottbouch.com/rftm
Please see site for usage terms,
and more aircraft documents.

