

PART VI

ILLUSTRATIONS

KEY TO FIGURES 1, 2 and 3

1. Port shelf lamps dimmer switch
2. Wing spread/fold lever
3. Wing locking lever
4. U.V. lamps dimmer switch
5. Red lamps master switch and dimmer
6. I.F.F. F and D switches
7. R.A.T.O.G. jettison switch
8. Pilot's quick-release mic/tel socket
9. Pilot's harness release lever
10. Wing lock magnetic indicators
11. Tip-tank fuel jettison switch
12. H.P. cock lever and relight button
13. Elevator trim indicator
14. Throttle lever, press-to-transmit button and G.G.S. range control
15. Throttle friction damper
16. Airbrakes control lever
17. Aileron trim switch
18. Pneumatic triple-pressure gauge
19. Undercarriage emergency override switch
20. Elevator trim control
21. L.P. cock lever
22. Flap selector lever.
23. Arrestor hook indicator light
24. Cockpit air conditioning control
25. Arrestor hook control lever
26. V.H.F. controller
27. Signal discharger switch (inoperative)
28. Windscreen wiper control
29. Undercarriage warning light
30. Undercarriage position indicator
31. Flap position indicator
32. E.2A compass
33. Undercarriage selector lever
34. Radio altimeter
35. Generator failure warning light
36. Mk. 4B compass
37. Gyro gunsight
38. Emergency lamp switch
39. Gunsight emergency retraction lever
40. G.G.S. control switch
41. Fuel gauge and main tanks contents button
42. Camera sunny/cloudy switch

43. R.P. salvo/pairs selector switch
44. R.A.T.O.G. safety and master switches
45. Engine fire-warning light and extinguisher pushbutton
46. R.A.T.O.G. yellow warning light
47. Guns/R.P. master switch
48. Flight instruments master switch
49. Fuel transfer magnetic indicators
50. Fuel pressure warning light
51. H.P. pump isolating valve switch
52. Cockpit pressure warning light
53. Cockpit pressure altimeter
54. Pilot's oxygen regulator
55. R.P. auto-distributor
56. G.G.S. selector-dimmer control
57. Starter master switch
58. Starter pushbutton
59. Windscreen de-icing control
60. Observer's foot-operated muting switch
61. Hood jettison control
62. Fuel booster pump switch
63. Engine oil temperature gauge
64. Voltmeter
65. Four circuit breakers, from left to right:—
 - Inverter B
 - Inverter A
 - Gunsight
 - Fuel booster pump
66. External lights circuit breaker
67. Generator field circuit breaker
68. Louvre
69. Inspection and chartboard lamps switch
70. Observer's oxygen regulator
71. Inspection and chartboard lamps socket
72. Observer's harness release
73. ZBX controller
74. Hatch strut release
75. Intercomm. switch
76. Intercomm. normal/emergency switch
77. R/T tels/beacon switch
78. IFF controller
79. IFF controls
80. R/T-mix-beacon switch
81. Fuel booster pump test sockets
82. Mk. 4B compass control
83. Observer's red lamps dimmer switch
84. Landing lamp switch
85. Navigation lights switch and morse pushbutton
86. Identification lights switch and morse pushbutton
87. Four switches, from left to right:—
 - Pressure head heater
 - Inverter B
 - Camera master
 - Radar A.C. supply
88. Ground/flight switch
89. Stick shaker switch

7 8 9 10 11 12 13 14 15 16

6

5

4

3


2

1

17

18

19

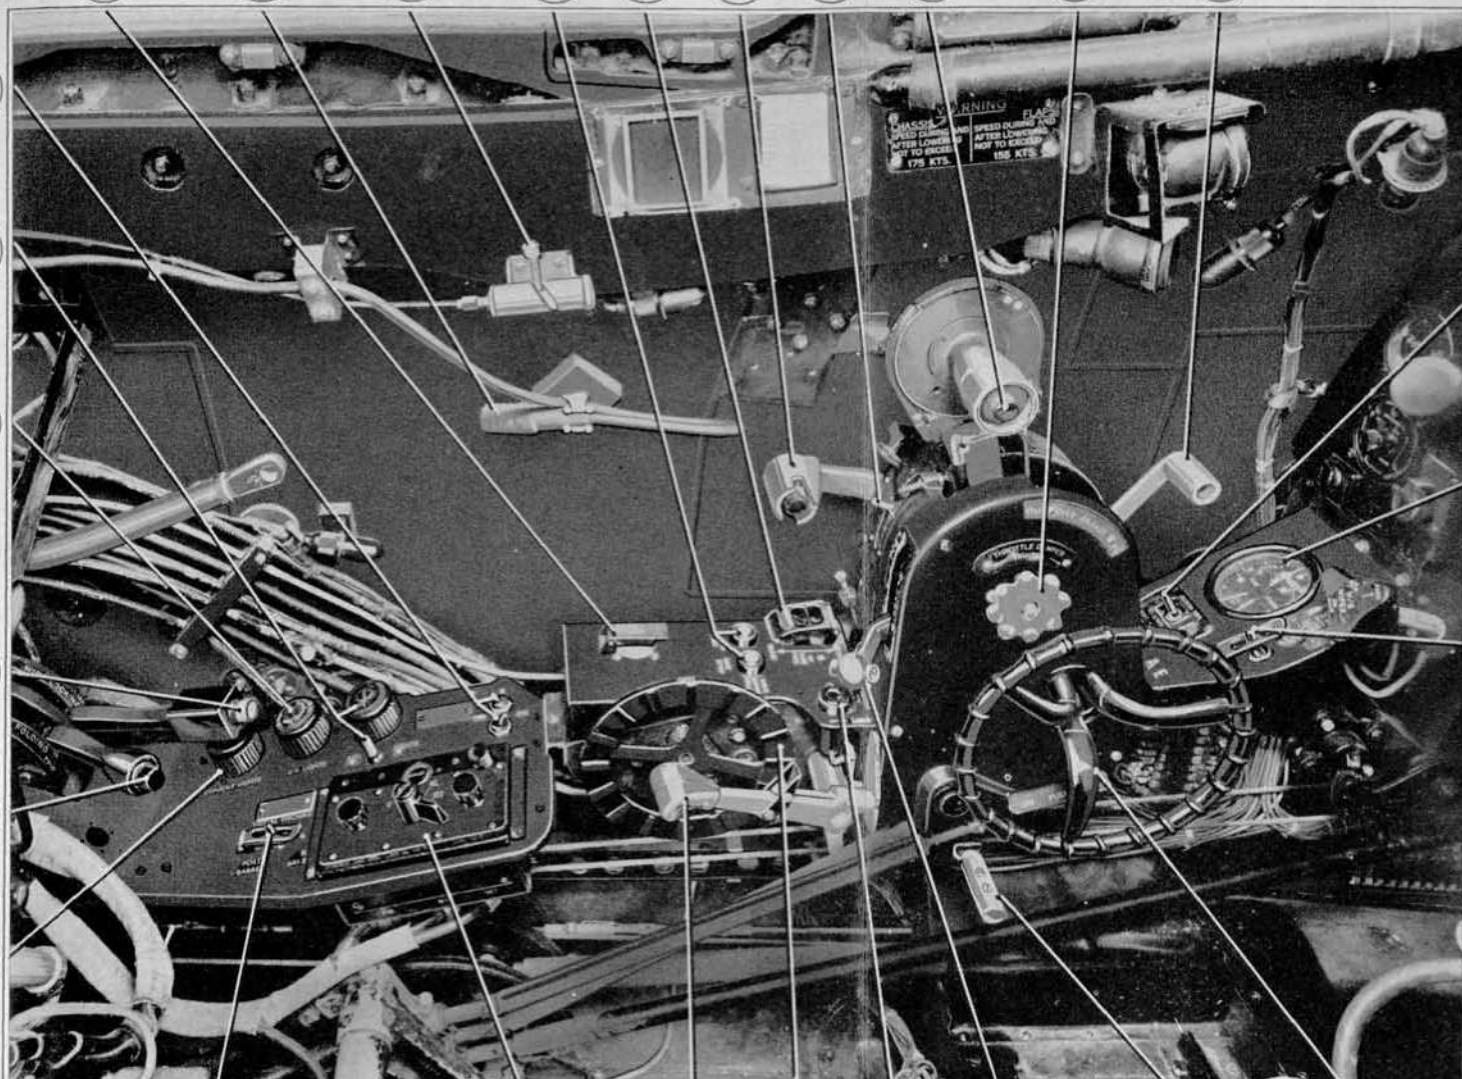

27 26 25 24 23 22 21 20

FIG
1

COCKPIT-PORT SIDE

FIG
1

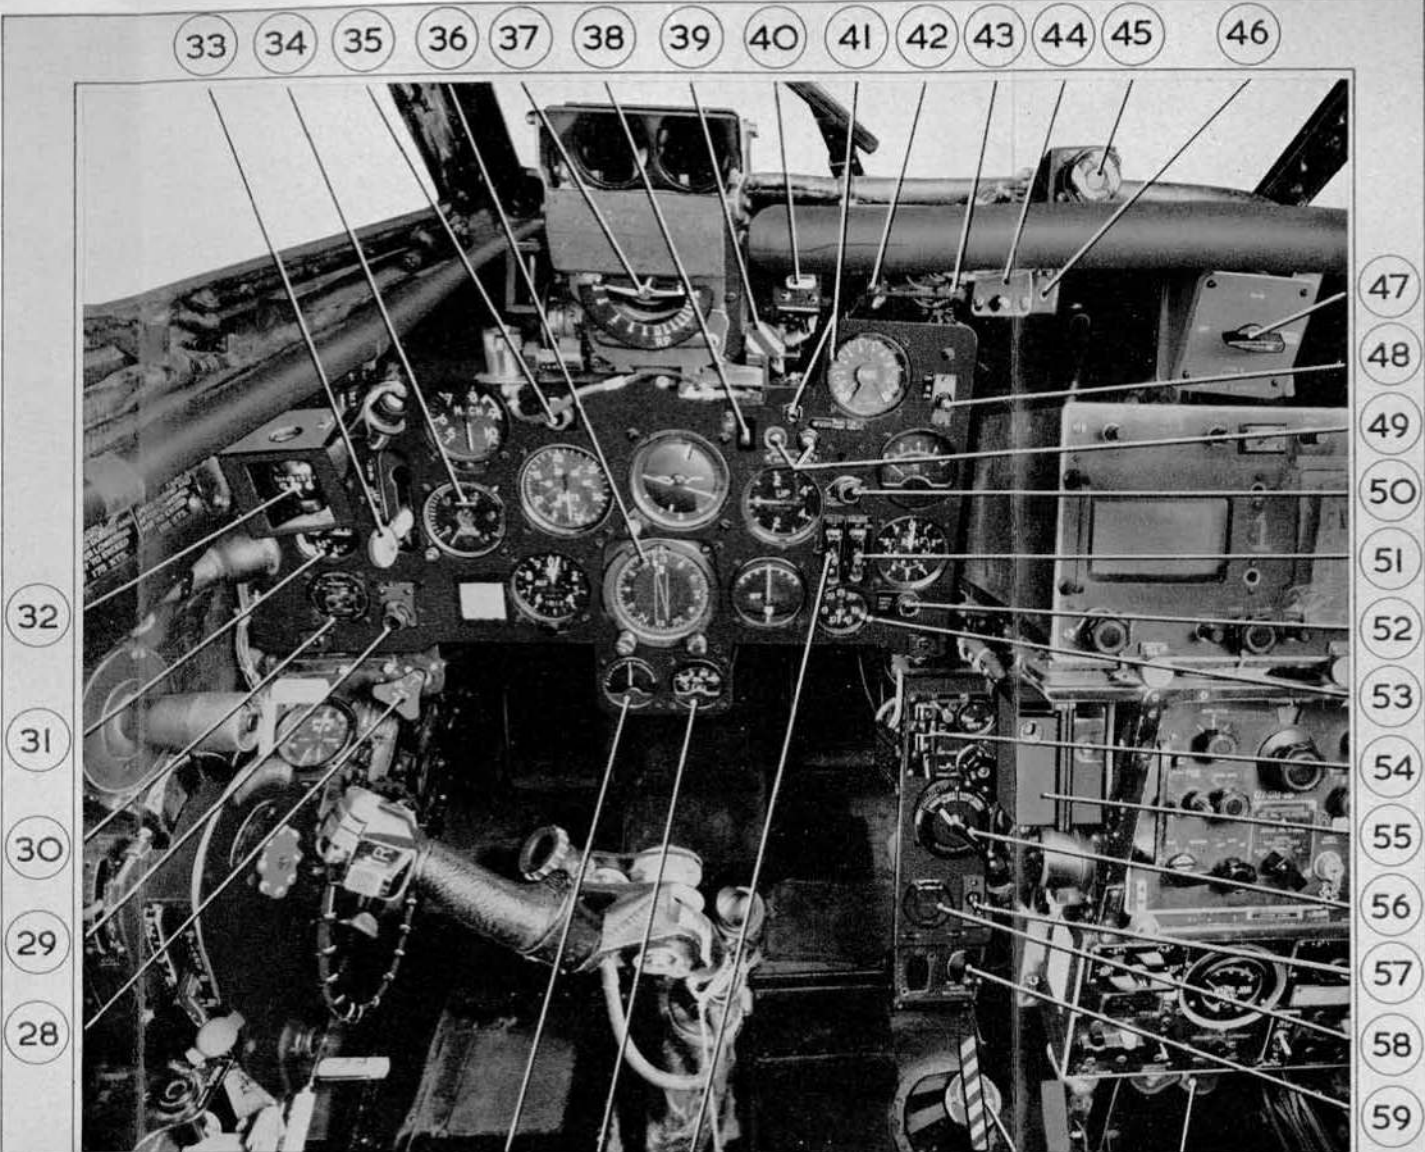


FIG
2

64 63 62 61 60
COCKPIT — FORWARD VIEW

FIG
2

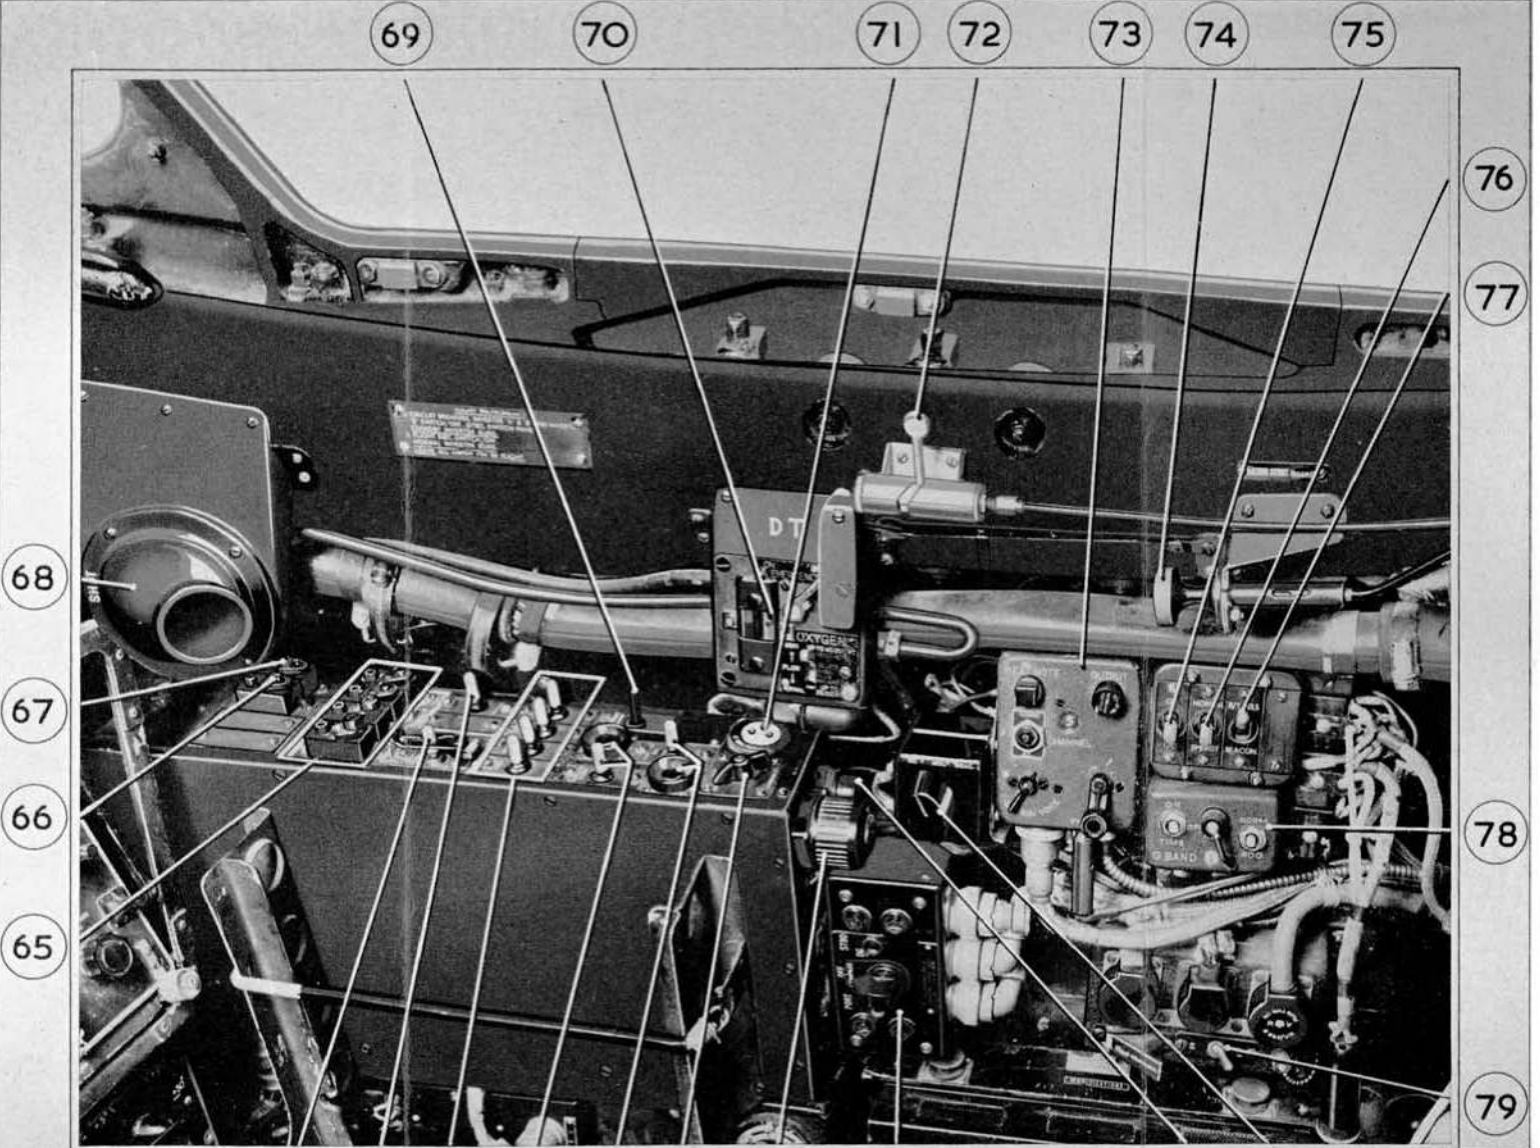


FIG
3

89 88 87 86 85 84 83 82 81 80

COCKPIT- STARBOARD SIDE

FIG
3

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

