

## Chapter 2 RADAR INSTALLATION

## LIST OF GROUPS

	Group
A.R.I. 5284 (A.Y.F.) installation ... ..	A
A.R.I. 5307 (Z.B.X.) installation ... ..	B
A.R.I. 5848 (I.F.F. Mk. 10) installation ... ..	C
A.R.I. 5860 (A.1. Mk. 21) installation ... ..	D

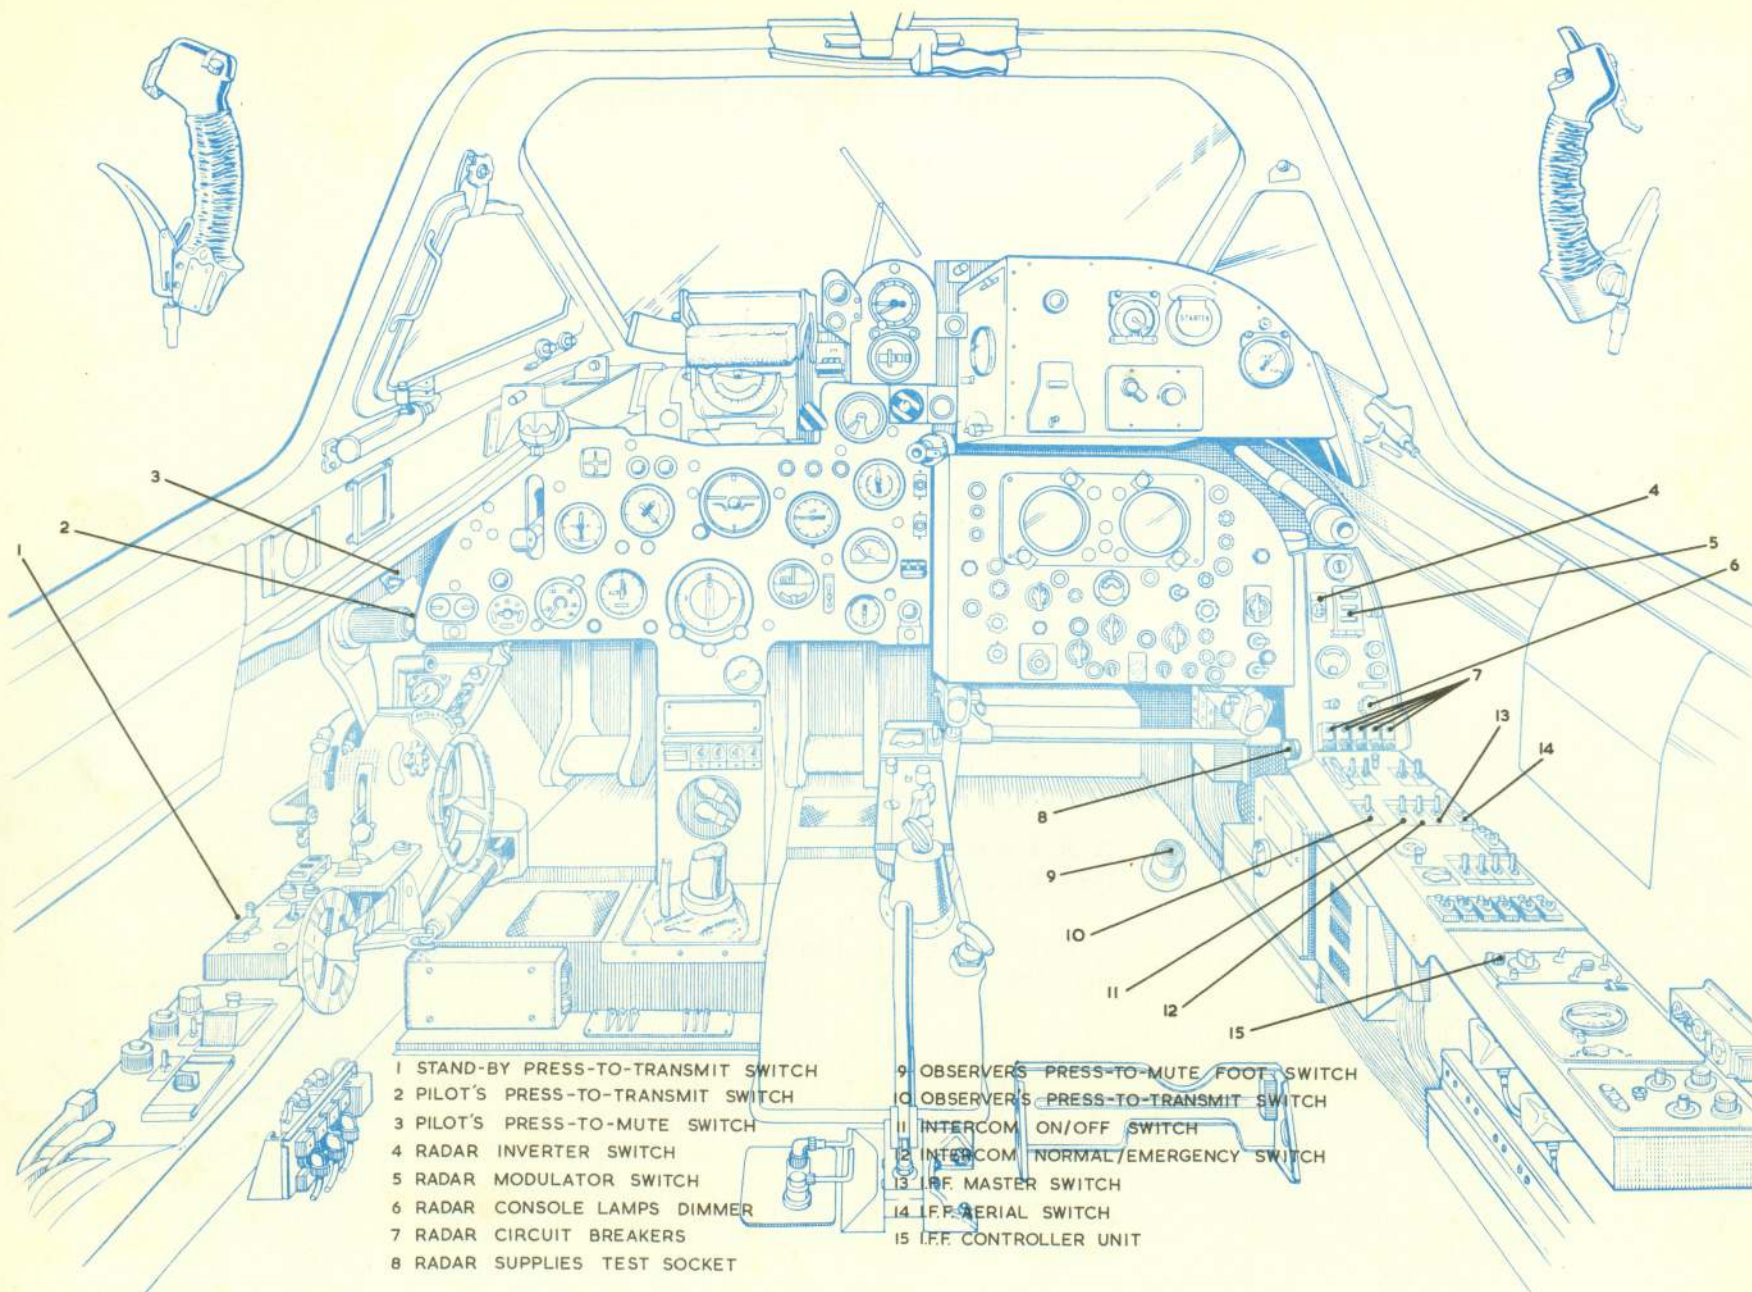


Fig.1 Location of radio and radar controls

RESTRICTED

RESTRICTED

## GENERAL INFORMATION

## LIST OF CONTENTS

	Para.
Introduction ... ..	1
Illustrations ... ..	2

## REMOVAL AND INSTALLATION

General ... ..	3
Units ... ..	4

## LIST OF ILLUSTRATIONS

	Fig.
Location of Radio and Radar Controls ... ..	1

## Introduction

1. This Chapter describes the A.R.I. 5284 (A. Y. F.), A.R.I. 5307 (Z. B. X.), A.R.I. 5848 (I. F. F. Mk. 10) and A.R.I. 5860 (A. I. Mk. 21) radar installations. Each group describes the installation concerned, the location of the units, the method of servicing and references to the relevant Air Publications in which more detailed information may be found.

## Illustrations

2. Each group also contains illustra-

tions and diagrams which show component layout, equipment location and cable routing.

## REMOVAL AND INSTALLATION

## General

3. On every occasion that it is necessary to remove or install an item of equipment, the aircraft must previously be rendered electrically safe. The procedure for this is laid down

in the General Information group of Sect. 5, Chap. 1 of this Volume.

## Units

4. The method of removal of the Units is generally self-evident, and assembly is normally the reverse procedure to removal. However, reference should be made to each group which contains details of special procedures, where these are necessary.

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

