

## Part I—Description and Management of Systems

### Chapter 22—Cockpit Illustrations

#### List of Illustrations

	<i>Fig.</i>
Cockpit—forward view . . . . .	A
Engine controls panel and throttle quadrant . . . . .	B
Cockpit—port console . . . . .	C
Central console . . . . .	D
Cockpit—starboard console . . . . .	E

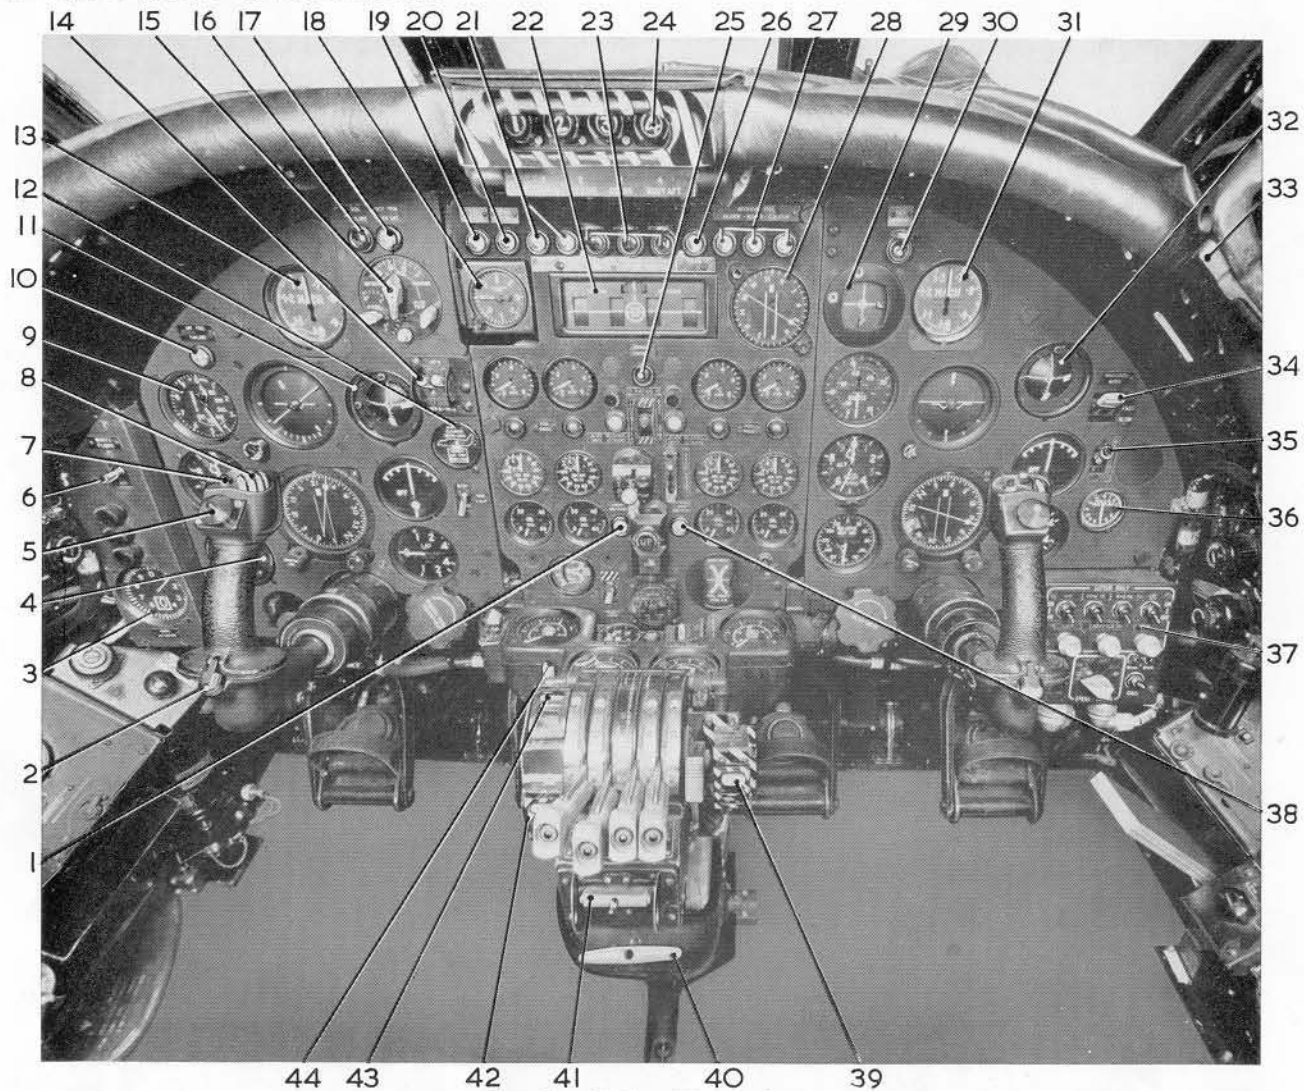


Fig A Cockpit Forward view

RESTRICTED

## Part IV Illustrations

FIG A COCKPIT—FORWARD VIEW

- 1 Canopy unlocked indicator
- 2 Nosewheel steering control switch
- 3 Radio altimeter
- 4 Auto-pilot instinctive cut-out
- 5 Aileron and elevator trim control
- 6 White flood lamps switch—port panel
- 7 Press-to-transmit pushbutton
- 8 Aileron and elevator feel relief switch
- 9 Airspeed indicator
- 10 Artificial feel failure master indicator
- 11 Zero-reader indicator
- 12 Auto-pilot trim indicator
- 13 Machmeter
- 14 Brake parachute switch
- 15 Zero-reader control unit and heading selector
- 16 Total generator failure red warning light
- 17 Mach trim lock out magnetic indicator
- 18 Accelerometer
- 19 Airbrake position indicator
- 20 Bomb-door position indicator
- 21 Pressure-head heater indicators (two)
- 22 Control surfaces indicator
- 23 Powered controls warning red lights (three)
- 24 Engine fire warning lights and operating switches (four)
- 25 Engine control indicator
- 26 Elevator and aileron trim indicator
- 27 Artificial feel indicators (three)
- 28 Auto-pilot heading selector and turn control
- 29 ILS indicator
- 30 ILS marker indicator
- 31 Machmeter
- 32 Zero-reader indicator
- 33 Direct-vision panel opening handle
- 34 Windscreen wiper control switch
- 35 White flood lamp switch—starboard panel
- 36 Fuel flowmeter
- 37 2nd pilot's station box
- 38 Entrance door—unlocked indicator
- 39 Airbrake emergency change-over switch
- 40 Handle for raising and lowering central console
- 41 Airbrake control switch
- 42 Jpt control switch
- 43 Engine control switch
- 44 Parking brake lever

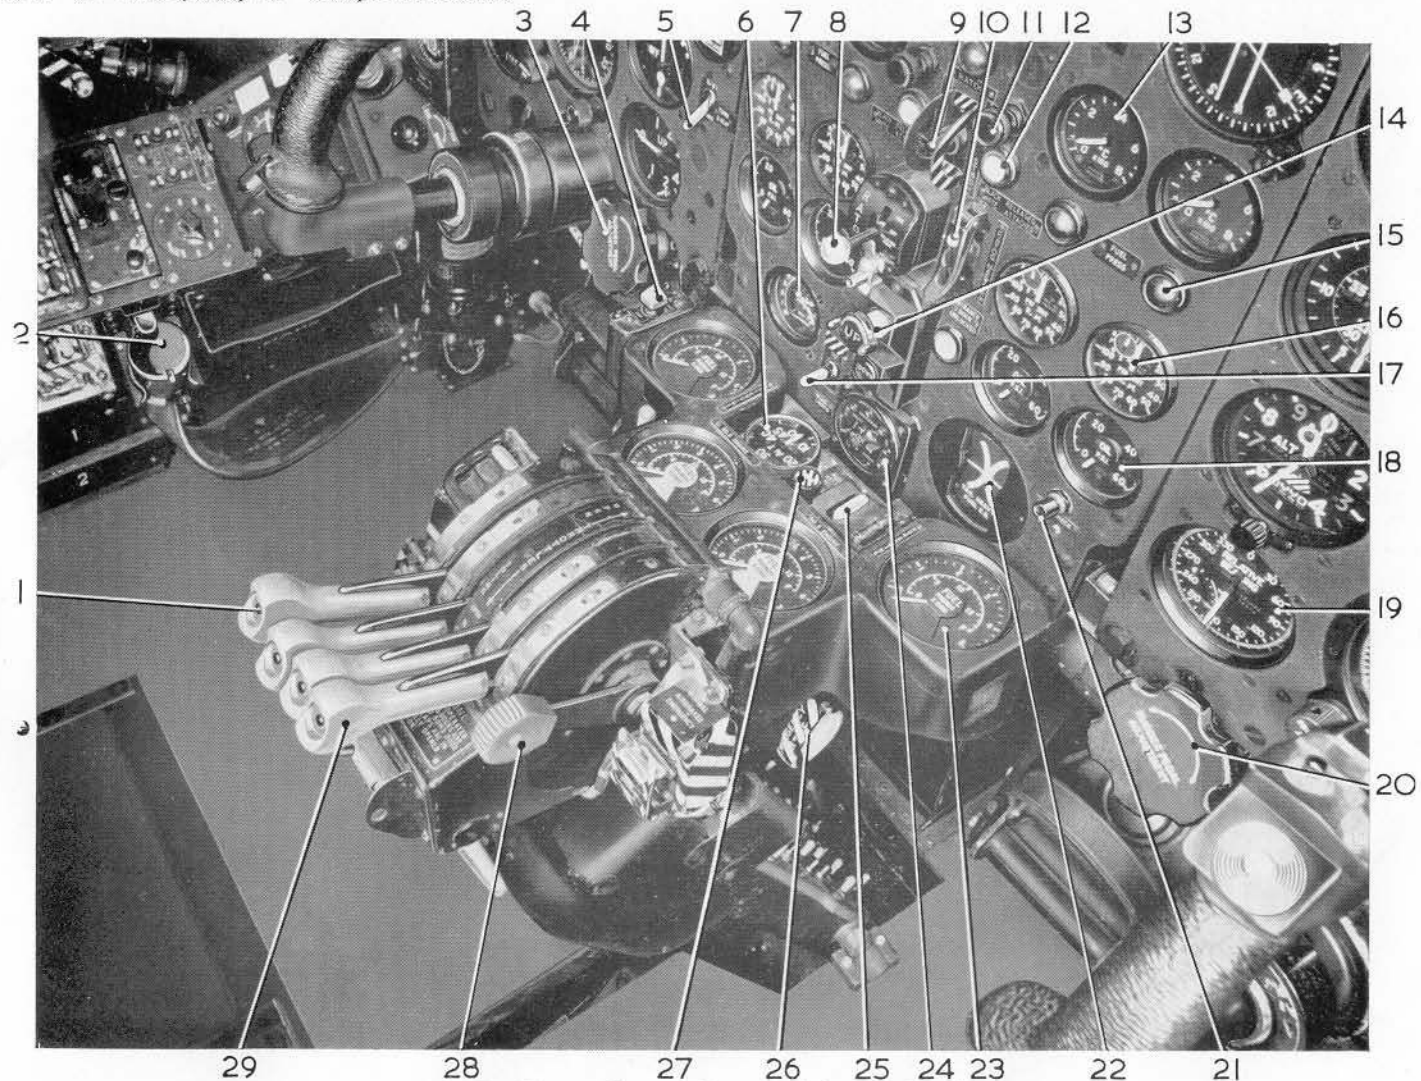


Fig B Engine Controls Panel & Throttle Quadrant

RESTRICTED

## FIG B ENGINE CONTROLS PANEL AND THROTTLE QUADRANT

- 1 Relight buttons (four)
- 2 Sanitary container
- 3 1st pilot's rudder pedal adjuster
- 4 Anti-dazzle light control switch
- 5 Turn-and-slip stand-by supply switch
- 6 Cabin altimeter
- 7 Triple-pressure hydraulic gauge
- 8 RATOG control switch
- 9 RATOG jettison switch
- 10 RATOG master switch
- 11 RATOG power green lights (two)
- 12 RATOG indicators (two)
- 13 Jpt gauges (four)
- 14 Undercarriage normal selector
- 15 Booster-pump fuel pressure indicators (four)
- 16 Engine speed indicators (four)
- 17 Cockpit emergency lighting switch
- 18 Oil pressure gauges (four)
- 19 ADF bearing indicator
- 20 2nd pilot's rudder pedal adjuster
- 21 C of G check button
- 22 C of G indicator
- 23 Fuel contents gauges (four)
- 24 Undercarriage position indicator
- 25 Rudder trim control
- 26 Undercarriage emergency selector
- 27 Rudder feel relief switch
- 28 Throttle levers friction adjuster
- 29 Throttle levers (four)

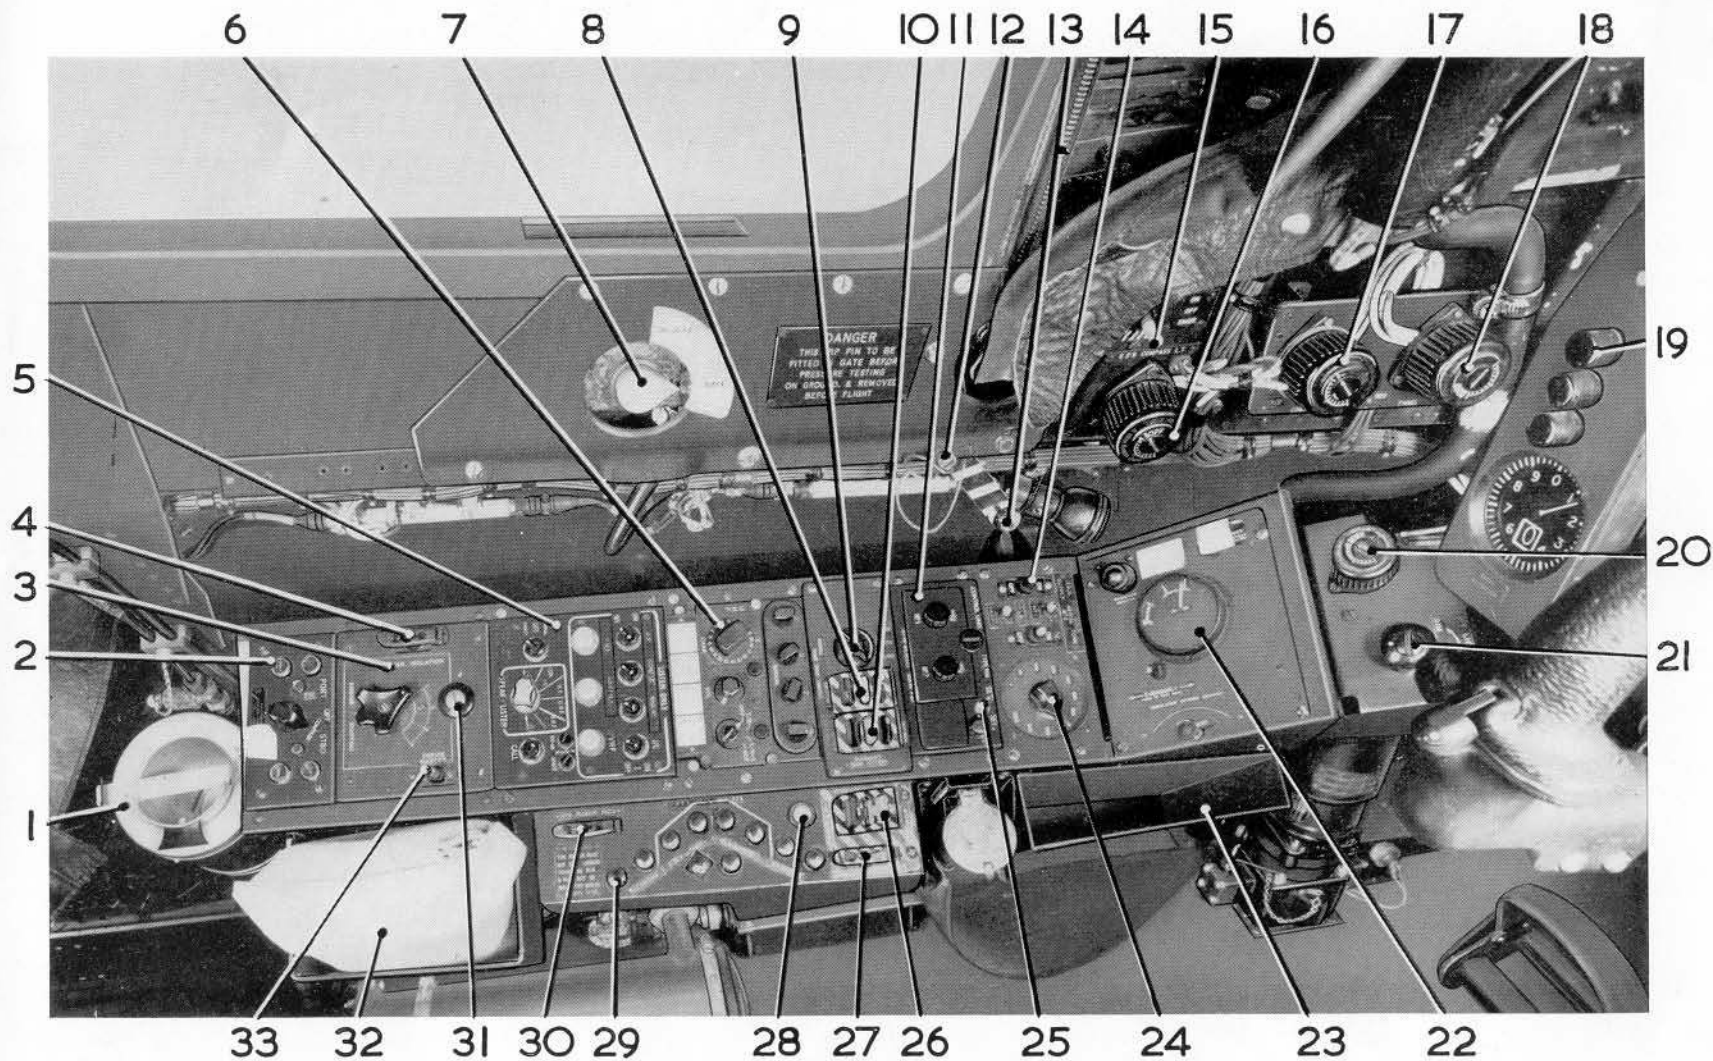


Fig C Cockpit-Port Console

RESTRICTED

FIG C COCKPIT—PORT CONSOLE

- 1 Ration heater
- 2 Mk 4B compass controller
- 3 Engine starting selector
- 4 Ignition isolation switch
- 5 1st pilot's station box
- 6 UHF controls
- 7 Canopy-unlocked indicator
- 8 Emergency bomb jettison switch
- 9 Bomb-doors normal selector
- 10 Bomb-doors emergency control switch
- 11 VHF controls
- 12 Pip-pin for canopy jettison lever
- 13 Canopy jettison lever
- 14 Switches L to R ILS switch UHF aerial selector switch  
ILS/ADF switch Tone switch
- 15 E2B compass light power supply switch
- 16 E2B compass light dimmer switch
- 17 Red floodlamps dimmer, port console and UHF
- 18 Red flood lamps dimmer, port panel
- 19 Radio altimeter limit lights (three)
- 20 UV lighting dimmer—oxygen regulator
- 21 UV lighting dimmer—port panel
- 22 1st pilot's oxygen regulator
- 23 Stowage for Pilot's Notes
- 24 Radio altimeter limit switch
- 25 VHF set change-over switch
- 26 Abandon aircraft switch
- 27 Emergency decompression switch
- 28 PFC motor stop indicator
- 29 PFC motor stop pushbuttons (ten)
- 30 Hydraulic power pack switch
- 31 Engine starter button
- 32 First-aid kit
- 33 Engine master switch

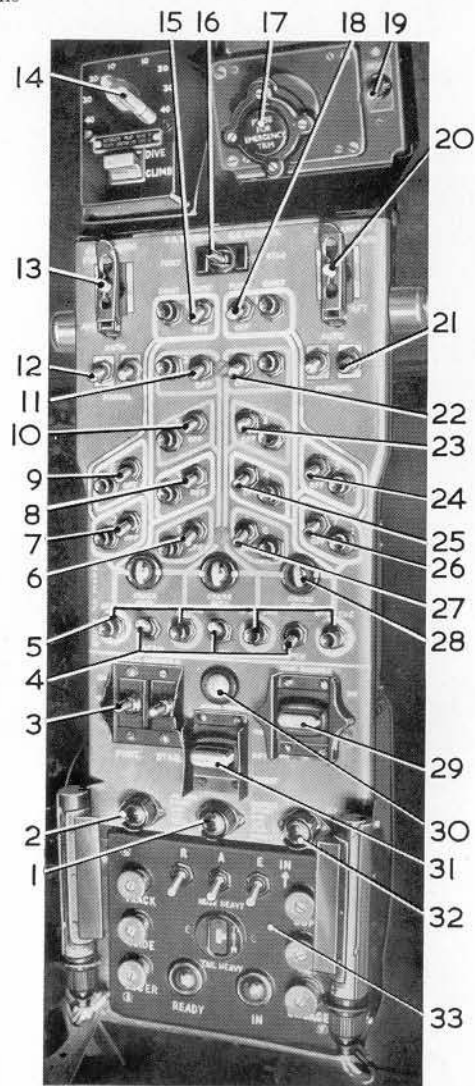


Fig D Central Console

RESTRICTED

## FIG D CENTRAL CONSOLE

- 1 Rudder start and artificial feel reset pushbutton
- 2 Aileron start and artificial feel reset pushbutton
- 3 Pitch damper switches (two)
- 4 Fuel cross-feed cock switches
- 5 Rate of flow engine pushbuttons (four)
- 6 No. 6 tank (port) booster-pump switch and contents pushbutton
- 7 No. 7 tank (port) booster-pump switch and contents pushbutton
- 8 No. 4 tank (port) booster-pump switch and contents pushbutton
- 9 No. 5 tank (port) booster-pump switch and contents pushbutton
- 10 No. 3 tank (port) booster-pump switch and contents pushbutton
- 11 No. 2 tank (port) booster-pump switch and contents pushbutton
- 12 Port engines sequence timer auto-manual switches (two)
- 13 Port side transfer fuel pump switch
- 14 Auto-pilot control switch
- 15 No. 1 tank (port) booster-pump switch and contents pushbutton
- 16 FR C of G lateral control switch
- 17 Emergency trim control
- 18 No. 1 tank (starboard) booster-pump switch and contents pushbutton
- 19 Normal trim reset switch (ailerons and elevators)
- 20 Starboard side transfer fuel pump switch
- 21 Starboard engines sequence timer auto-manual switches (two)
- 22 No. 2 tank (starboard) booster-pump switch and contents pushbutton
- 23 No. 3 tank (starboard) booster-pump switch and contents pushbutton
- 24 No. 5 tank (starboard) booster-pump switch and contents pushbutton
- 25 No. 4 tank (starboard) booster-pump switch and contents pushbutton
- 26 No. 7 tank (starboard) booster-pump switch and contents pushbutton
- 27 No. 6 tank (starboard) booster-pump switch and contents pushbutton
- 28 Fuel cross-feed cock indicators (three)
- 29 Yaw damper switch
- 30 Auto-Mach trimmer indicator
- 31 Auto-Mach trimmer switch
- 32 Elevator start and artificial feel reset pushbutton
- 33 Auto-pilot switch unit

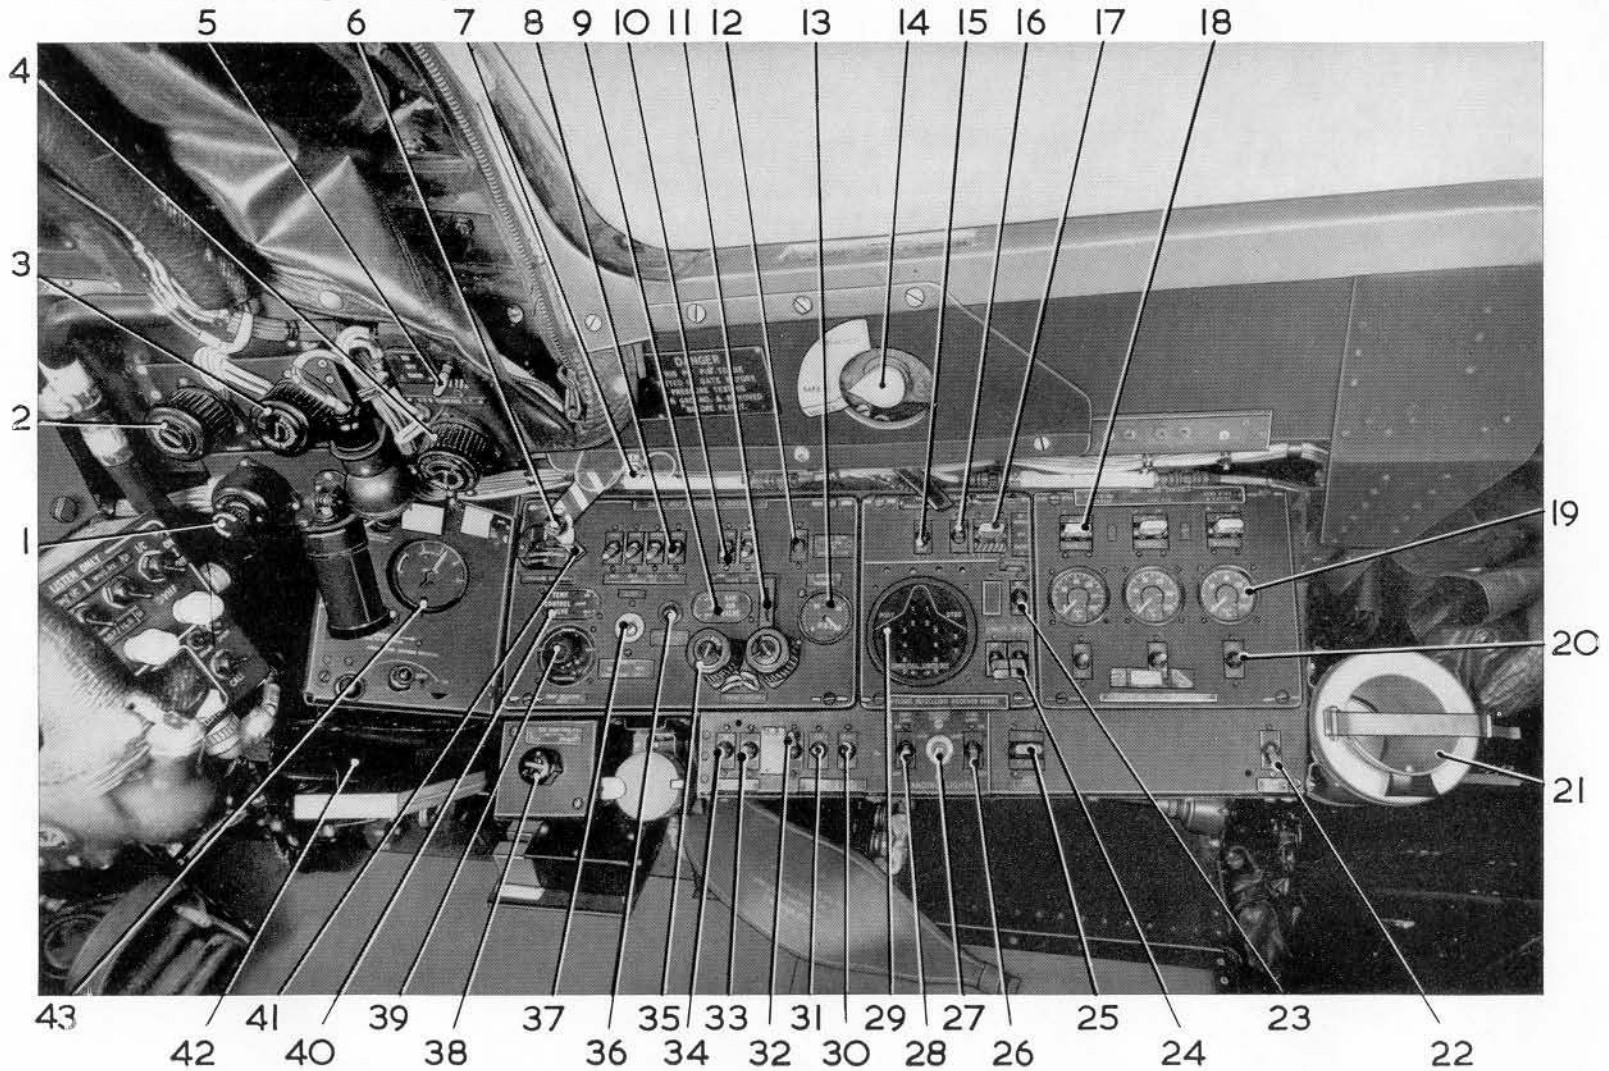


Fig E Cockpit-Starbd Console

RESTRICTED

## FIG E COCKPIT—STARBOARD CONSOLE

- 1 Dimmer for knee pad lamp (2nd pilot)
- 2 Red flood lamp dimmer—starboard panel
- 3 Red flood lamp dimmer—starboard console
- 4 E2B compass light dimmer switch
- 5 E2B compass power supply switch
- 6 Canopy jettison lever
- 7 Canopy jettison lever pip-pin
- 8 Engine air switches (four)
- 9 Ram air valve indicator
- 10 Cabin air switches (two)
- 11 Ram air valve switch
- 12 Flood flow reset switch
- 13 Flight refuelling pressure gauge
- 14 Canopy locked indicator
- 15 Tank pressurisation switch
- 16 Windscreen de-misting switch
- 17 Windscreen de-icing switch
- 18 Anti-icing control switches (three)
- 19 Anti-icing temperature gauges (three)
- 20 Anti-icing temperature control switches (three)
- 21 Ration heater
- 22 Ventilated suit air supply switch
- 23 Nitrogen purge switch
- 24 Flight refuelling master switch
- 25 Navigation lights switch
- 26 Starboard landing lamp switch
- 27 Landing lamp position selector switch
- 28 Port landing lamp switch
- 29 Flight refuelling tanks full indicator
- 30 Identification light switch
- 31 External lights master switch
- 32 Monitor alarm switch
- 33 Pressure-head heater switch
- 34 Pressure-head heater switch
- 35 Probe lighting dimmers (two)
- 36 Cold-air unit overspeed warning indicator
- 37 Cabin temperature control switch
- 38 UV lighting dimmer—starboard panel
- 39 Cabin temperature auto-selector
- 40 Temperature control valve indicator
- 41 Cabin pressure selector switch
- 42 Stowage for Pilot's Notes
- 43 2nd Pilot's oxygen regulator

This file was downloaded  
from the RTFM Library.  
Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

