

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		ELECTRICAL INSTALLATION IN BOMB BAY (V6354) & (V9813)							
		Spares for :—							
5X/9008	—	Adaptor, lug, 4-way, 19 amp.				7	—	C	F3/1
	TEDDINGTON								
5CZ/5076	FLM/A/14	Amplifier, magnetic				2	—	A	F2/2
4675	1V6692	Block, terminal, heavy duty, at bomb arch 108-687*				1	—	C	F3/3
26FP/8735	1V5650	Block, terminal				37	—	C	F3/4
5X/9064	—	Block, connector, heavy duty				2	—	C	F1/5
5X/9402803	—	Block, terminal (Mod. 621)				1	—	C	F2/6
	53V6354	Bolt, special, attachment of cover for micro switch, on elevator servo				4	S1		F3/7
	ROTAX								
5CZ/1983	16337/1	Boot, insulating				16	—	C	F2/8
	ROTAX								
5CZ/1793	16936/1	Boot, insulating				10	—	C	F2/9
	—	BOX, JUNCTION, 1J AND 2J (1 & 2V6349)							
		Spares for :—							
26FP/8735	1V5650	Block, terminal				20	—	C	F2/4
4260	1V6350	BOX, JUNCTION, 1J, GROUP				1	—	C	F2/10
4261	2V6350	BOX, JUNCTION, 2J, GROUP				1	—	C	F2/11
		Spares for :—							
4262	3V6350	COVER, 1J, GROUP				1	—	C	F2/12
4263	4V6350	COVER, 2J, GROUP				1	—	C	F2/13
		Spares for :—							
28FP/146	A4/25	Fastener				6	—	C	
	B.T.H.								
10CV/5100	GJ3M	Rectifier, 2J				2	—	B	F2/14
28FP/9430916	S4-200	Spring				6	—	C	
4264	1V7374	BOX, JUNCTION, 6J, GROUP				1	—	C	F2/15
		Spares for :—							
26FP/8735	1V5650	Block, terminal				5	—	C	F2/4
4265	2V7374	LID, BOX, GROUP				1	—	C	F2/16
		Spares for :—							
28FP/146	A4/25	Fastener				4	—	C	
28FP/9430915	GA4/250	Grommet				4	—	C	
5X/6623	15V5650	Socket, single				24	—	C	F1/17
	SANGAMO								
	WESTON								
	FD751	Cable, 6' 0" long				10	—		
	89V6384	CABLE, 2J TO BOMB DOOR MICRO SWITCHES, GROUP				1	—		
	276V6384	CABLE, 26P TO 2J, GROUP				1	—		
	5908V6384	CABLE, PILLAR (24P) TO TB. 740 (18P), GROUP (Mod. 697)				1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	5909V6384	CABLE, 19P TO 24P, GROUP (Mod. 697)				1	—		
	157V6384	CABLE, 21P TO 38P, GROUP				1	—		
	158V6384	CABLE, 21P TO 38P, GROUP				1	—		
	160V6384	CABLE, Bo. 1 FIRE BOTTLE TO 21P, GROUP (Pre-Mod. 1118)				1	—		
	3530V6384	CABLE, No. 1 FIRE BOTTLE TO 21P, GROUP (Mod. 1118)				1	—		
	163V6384	CABLE, No. 2 FIRE BOTTLE TO 21P, GROUP (Pre-Mod. 1118)				1	—		
	3531V6384	CABLE, No. 2 FIRE BOTTLE TO 21P, GROUP (Mod. 1118)				1	—		
	165V6384	CABLE, PORT TO STARBOARD AFT MICRO SWITCH GROUP				1	—		
	166V6384	CABLE, No. 3 FIRE BOTTLE TO 21P, GROUP (Pre-Mod. 1118)				1	—		
	3532V6384	CABLE, No. 3 FIRE BOTTLE TO 21P, GROUP (Mod. 1118)				1	—		
	167V6384	CABLE, FORWARD TO AFT MICRO SWITCH, PORT, GROUP				1	—		
	169V6384	CABLE, No. 4 FIRE BOTTLE TO 21P, GROUP (Pre-Mod. 1118)				1	—		
	3533V6384	CABLE, No. 4 FIRE BOTTLE TO 21P, GROUP (Mod. 1118)				1	—		
	171V6384	CABLE, PORT TO STARBOARD FORWARD MICRO SWITCHES, GROUP				1	—		
	177V6384	CABLE, 26P TO STARBOARD AFT MICRO SWITCH, GROUP				1	—		
	199V6384	CABLE, STARTER PANEL (2-4), GROUP				1	—		
	202V6384	CABLE, 18P TO EARTH, GROUP ...				1	—		
	203V6384	CABLE, 23P TO FIN OVERHEAT SWITCH AND ICE DETECTOR, GROUP				1	—		
	3534V6384	CABLE, 16P TO 21P, GROUP (Mod. 1118)				1	—		
	3535V6384	CABLE, 16P TO 21P, GROUP (Mod. 1118)				1	—		
	3536V6384	CABLE, 16P TO 21P, GROUP (Mod. 1118)				1	—		
	3537V6384	CABLE, 16P TO 21P, GROUP (Mod. 1118)				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	217V6384	CABLE, STARTER PANEL TO TB. 594, GROUP				1	—		
	218V6384	CABLE, STARTER PANEL TO TB. 594, GROUP				1	—		
	219V6384	CABLE, PORT TO STARBOARD AFT MICRO SWITCHES, GROUP				1	—		
	220V6384	CABLE, TB. 594 TO HD. CONNECTOR, No. 2 ENGINE, GROUP				1	—		
	232V6384	CABLE, TB. 594 TO HD. CONNECTOR, No. 3 ENGINE, GROUP				1	—		
	250V6384	CABLE, TB. 570 (1J) TO STARTER PANEL, GROUP				1	—		
	270V6384	CABLE, 26P TO 1J, GROUP				1	—		
	285V6384	CABLE, TB. 553 (1J) TO EARTH, GROUP				1	—		
	286V6384	CABLE, TB. 588 (2J) TO EARTH, GROUP				1	—		
	332V6384	CABLE, TB. 605 (21P) TO EARTH, GROUP				1	—		
	5904V6384	CABLE, RELAY 194 (19P) TO FUSE 457 (25P), GROUP (Mod. 697)				1	—		
	5905V6384	CABLE, RELAY 212 (18P) TO FUSE 438 (24P), GROUP (Mod. 697)				1	—		
	1474V6384	CABLE, 16P TO TB. 718, GROUP ...				1	—		
	3206V6384	CABLE, RELAY 254 TO RECTIFIER, GRP.				1	—		
	3210V6384	CABLE, RELAY 255 TO RECTIFIER, GRP.				1	—		
	3332V6384	CABLE, 22P TO TB. 456, GROUP (Mod. 696)				1	—		
	3333V6384	CABLE, 22P TO TB. 695, GROUP (Mod. 696)				1	—		
	5205V6384	CABLE, ELECTRIC COMPONENTS BOX TO TB's 610 & 724, GROUP (Mod. 940)				1	—		
	3498V6384	CABLE, 1J TO 26P, GROUP (Mod. 1450)				1	—		
	3388V6384	CABLE, No. 1 AMPLIFIER TO AUTO CONTROL UNIT, GROUP (Mod. 1036)				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
8763	5896V6384	CABLE, FUSE 446 (25P) TO BUS BAR (19P), GROUP (Mod. 697)				1	—	B	
	5897V6384	CABLE, FUSE 446 (25P) TO BUS BAR (19P), GROUP (Mod. 697)				1	—		
	404V6384	CABLE, 18P TO No. 1 STARTER, GROUP				1	—		
	405V6384	CABLE, RELAY 211 (18P) TO RESISTOR, GROUP				1	—		
	406V6384	CABLE, RELAY 192 (19P) TO RESISTOR, GROUP				1	—		
	438V6384	CABLE, CABLE LINK TO RELAY 254, GROUP				1	—		
	439V6384	CABLE, CABLE LINK TO RELAY 254, GROUP				1	—		
	440V6384	CABLE, CABLE LINK TO RELAY 255, GROUP				1	—		
	442V6384	CABLE, No. 1 CONTACTOR TO EARTH, GROUP				1	—		
	443V6384	CABLE, No. 2 CONTACTOR TO EARTH, GROUP				1	—		
	444V6384	CABLE, No. 3 CONTACTOR TO EARTH, GROUP				1	—		
	458V6384	CABLE, ACCUMULATOR VALVE TO RELAY 1255, GROUP (Pre-Mod. 253)				1	—		
	5413V6384	CABLE, ACCUMULATOR VALVE TO RELAY 255 AND EARTH, GROUP				1	—		
	464V6384	CABLE, TB. 585 (2J) TO TB.s 606, 607 AND 610 (21P), GROUP				1	—		
	3389V6384	CABLE, ALTITUDE SWITCH TO AUTO CONTROL UNIT, GROUP (Mod. 1036)				1	—		
	3263V6384	CABLE, 19P TO RELAY 672, GROUP (Mod. 697)				1	—		
	3272V6384	CABLE, RELAY 673 TO RELAY 675, GROUP (Mod. 697)				1	—		
	3299V6384	CABLE, 19P TO RELAY 673, GROUP (Mod. 697)				1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	470V6384	CABLE, RELAY 255 TO PRESSURE SWITCH, GROUP				1	—		
	471V6384	CABLE, RELAY 255 TO RELAY 256, GROUP				1	—		
	473V6384	CABLE, RELAY 256 TO STARTER PANEL, GROUP				1	—		
	475V6384	CABLE, FUSE 406 (19P) TO TERMINAL, GROUP				1	—		
	476V6384	CABLE, FUSE 383 (18P) TO TERMINAL, GROUP				1	—		
	479V6384	CABLE, STARTER PANEL TO EARTH, GROUP				1	—		
	481V6384	CABLE, TO LOW DRAG MICRO SWITCH, GROUP				1	—		
	482V6384	CABLE, TB. 728 TO LOW DRAG MICRO SWITCH, GROUP				1	—		
	486V6384	CABLE, FUSE 416 (19P) TO RELAY 256, GROUP				1	—		
	492V6384	CABLE, AIR BRAKE MOTOR TO CONNECTOR AND EARTH, GROUP				1	—		
	493V6384	CABLE, AIR BRAKE MOTOR TO CONNECTOR AND EARTH, GROUP				1	—		
	494V6384	CABLE, MICRO SWITCH TO MICRO SWITCH, STARBOARD, GROUP				1	—		
	495V6384	CABLE, MICRO SWITCH TO MICRO SWITCH, PORT, GROUP				1	—		
	496V6384	CABLE, MICRO SWITCH (C1 TO D2), PORT, GROUP				1	—		
	497V6384	CABLE, MICRO SWITCH (C4 TO D5), PORT, GROUP				1	—		
	498V6384	CABLE, AIR BRAKE (B) TO EARTH, GROUP				1	—		
	500V6384	CABLE, AIR BRAKE (A) TO EARTH, GROUP				1	—		
	501V6384	CABLE, AIR BRAKE (A) TO EARTH, GROUP				1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
		1	2	3	4			St. M.R.	
	606V6384	CABLE, TB. 556 (1J) TO TB. 585 (2J), GROUP				1	—		
	798V6384	CABLE, 26P TO 21P, GROUP				1	—		
	868V6384	CABLE, TB. 728 TO SWITCH, PORT, GROUP				1	—		
	871V6384	CABLE, TB. 728 TO SWITCH, PORT, GROUP				1	—		
	873V6384	CABLE, SWITCH (E1 TO F2), PORT, GROUP				1	—		
	874V6384	CABLE, SWITCH (E4 TO F5), PORT, GROUP				1	—		
	888V6384	CABLE, 1J TO TB.s 722 AND 723, GROUP				1	—		
	889V6384	CABLE, TO TB. 722, GROUP				1	—		
	891V6384	CABLE, TO TB. 723, GROUP				1	—		
	893V6384	CABLE, AILERON " Q " BOX TO TB. 724, GROUP				1	—		
	3303V6384	CABLE, 18P TO RELAY 670, GROUP (Mod. 697)				1	—		
	3515V6384	CABLE, RESISTOR TO TB. 1216, GROUP (Mod. 951)				1	—		
	3514V6384	CABLE, RESISTOR TO TB. 1215, GROUP (Mod. 951)				1	—		
	6209V6384	CABLE, AUTO CONTROL UNIT TO TB's 598 & 851 & EARTH, GROUP (Mod. 1036)				1	—		
	1368V6384	CABLE, 24P TO HD. CONNECTOR (2), GROUP (Pre-Mod. 988)				1	—		
	6100V6384	CABLE, 24P TO HD. CONNECTOR (2), GROUP (Mod. 988)				1	—		
	1369V6384	CABLE, 24P TO HD. CONNECTOR (2), GROUP (Pre-Mod. 988)				1	—		
	6101V6384	CABLE, 24P TO HD. CONNECTOR (2), GROUP (Mod. 988)				1	—		
	1370V6384	CABLE, 24P TO HD. CONNECTOR (3), GROUP (Pre-Mod. 988)				1	—		
	6102V6384	CABLE, 24P TO HD. CONNECTOR (3), GROUP (Mod. 988)				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	5900V6384	CABLE, BUS BAR (18P) TO FUSE 430 (24P), GROUP (Mod. 697)				1	—		
	5901V6384	CABLE, BUS BAR (18P) TO FUSE 430 (24P), GROUP (Mod. 697)				1	—		
	5902V6384	CABLE, BUS BAR (18P) TO FUSE 591 (24P), GROUP (Mod. 697)				1	—		
	1371V6384	CABLE, 24P TO HD. CONNECTOR (3), GROUP (Pre-Mod. 988)				1	—		
	6103V6384	CABLE, 24P TO HD. CONNECTOR (3), GROUP (Mod. 988)				1	—		
	1372V6384	CABLE, 24P TO HD. CONNECTOR (3), GROUP (Pre-Mod. 988)				1	—		
	6104V6384	CABLE, 24P TO HD. CONNECTOR (3), GROUP (Mod. 988)				1	—		
	5903V6384	CABLE, BUS BAR (18P) TO FUSE 591 (24P), GROUP (Mod. 697)				1	—		
	905V6384	CABLE, 2J TO TB.s 724 AND 1152 AND RELAYS 254, 255, 256 AND 281, GROUP				1	—		
	939V6384	CABLE, ELECTRIC COMP. BOX TO TB.s 611 AND 723, GROUP				1	—		
	941V6384	CABLE, ELECTRIC COMP. BOX TO TB.s 611 AND 722, GROUP				1	—		
	960V6384	CABLE, TB.s 537 AND 538 (38P) TO TB. 256 (18P), GROUP				1	—		
	961V6384	CABLE, 1J TO RELAY 282, GROUP ...				1	—		
	965V6384	CABLE, RELAY 193 (19P) TO FUSE 447 (25P), GROUP				1	—		
	1063V6384	CABLE, MICRO SWITCH TO TB. 635, GROUP				1	—		
	1341V6384	CABLE, TO RELAY 281, GROUP ...				1	—		
	1343V6384	CABLE, TO RELAY 282, GROUP ...				1	—		
	1344V6384	CABLE, TO RELAY 282, GROUP ...				1	—		
	1345V6384	CABLE, RELAY 281 TO RELAY 254, GROUP				1	—		
	1346V6384	CABLE, RELAY 254 TO RESISTOR, GROUP				1	—		
	1347V6384	CABLE, RELAY 256 TO RESISTOR, GROUP				1	—		

**ELECTRICAL INSTALLATION
BOMB BAY**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1348V6384	CABLE, RELAY 282 (2-Ca), GROUP ...				1	—		
	1373V6384	CABLE, 25P TO HD. CONNECTOR (3), GROUP (Pre-Mod. 988)				1	—		
	6105V6384	CABLE, 25P TO HD. CONNECTOR (3), GROUP (Mod. 988)				1	—		
	1374V6384	CABLE, 25P TO HD. CONNECTOR (2), GROUP (Pre-Mod. 988)				1	—		
	6106V6384	CABLE, 25P TO HD. CONNECTOR (2), GROUP (Mod. 988)				1	—		
	1375V6384	CABLE, 25P TO HD. CONNECTOR (2), GROUP (Pre-Mod. 988)				1	—		
	6107V6384	CABLE, 25P TO HD. CONNECTOR (2), GROUP (Mod. 988)				1	—		
	1484V6384	CABLE, No. 1 STARTER RESISTOR (2-4), GROUP				1	—		
	1485V6384	CABLE, No. 2 STARTER RESISTOR (2-4), GROUP				1	—		
	1486V6384	CABLE No. 3 STARTER RESISTOR (2-4), GROUP				1	—		
	1511V6384	CABLE, TB. 557 (1J) TO TB. 574 (2J), GROUP				1	—		
	1519V6384	CABLE, TB. 591 (2J) TO TB.s 811 AND 813, GROUP				1	—		
	1521V6384	CABLE, TB. 821 TO TB. 813, GROUP ...				1	—		
	1522V6384	CABLE, TB. 811 TO TB. 812, GROUP ...				1	—		
	1523V6384	CABLE, TB. 813 TO TB. 816, GROUP ...				1	—		
	1524V6384	CABLE, TB. 811 TO TB. 814, GROUP ...				1	—		
	1526V6384	CABLE, TB. 815 TO TB. 816, GROUP ...				1	—		
	1527V6384	CABLE, TB. 814 TO TB. 815, GROUP ...				1	—		
	1528V6384	CABLE, TB. 814 TO TB. 817, GROUP ...				1	—		
	1529V6384	CABLE, TB. 818 TO TB. 819, GROUP ...				1	—		

**ELECTRICAL INSTALLATION
BOMB BAY**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1530V6384	CABLE, TB. 817 TO TB. 818, GROUP ...				1	—		
	1552V6384	CABLE, 43P TO HOT AIR ACTUATOR, OVERHEAT SWITCH AND MICRO SWITCH, GROUP				1	—		
	1553V6384	CABLE, 43P TO AMPLIFIER AND EARTH, GROUP				1	—		
	6038V6384	CABLE, 43P TO COLD AIR ACTUATOR AND TB. 635, GROUP (Mod. 742)				1	—		
	1555V6384	CABLE, 43P TO INCHING CONTROLLER AND FOLLOW-UP RESISTOR, GROUP				1	—		
	1566V6384	CABLE, HYDRAULIC MOTOR TO STARTER PANEL AND EARTH, GROUP				1	—		
	1629V6384	CABLE, 1J TO RUDDER AND ELEVATOR TRIM ACTUATORS AND RUDDER AND ELEVATOR EMERGENCY ACTUATORS, GROUP				1	—		
	1630V6384	CABLE, 2J TO ACTUATOR, GROUP ...				1	—		
	1666V6384	CABLE, TB. 270 TO TB.s 550 AND 551, GROUP				1	—		
	1669V6384	CABLE, RELAY 282 (7A-8A), GROUP ...				1	—		
	1671V6384	CABLE, TB. 554 (1J) TO TB. 584 (2J), GROUP				1	—		
	1673V6384	CABLE, AFT VALVE TO TB.s 605 AND 614 (21P), GROUP				1	—		
	1674V6384	CABLE, FORWARD VALVE TO TB.s 605 AND 614 (21P), GROUP				1	—		
	1672V6384	CABLE, PORT FORWARD DOOR MICRO SWITCH TO TB. 614 (21P), GROUP				1	—		
	1675V6384	CABLE, RELAY 282 (4-8), GROUP ...				1	—		
	1682V6384	CABLE, TB. 257 (18P) TO No. 1 RESISTOR, GROUP				1	—		
	1685V6384	CABLE, TB.s 255 AND 256 (18P) TO No. 2 RESISTOR, GROUP				1	—		
	1691V6384	CABLE, No. 1 RESISTOR TO TB. 265 (19P), GROUP				1	—		
	1692V6384	CABLE, No. 2 RESISTOR TO TB. 268 (19P), GROUP				1	—		
	1726V6384	CABLE, TB. 266 (19P) TO TEST COILS, GROUP				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1727V6384	CABLE, TB. 506 (35P) TO TEST COIL, GROUP				1	—		
	1728V6384	CABLE, TB.s 256 AND 259 (18P) TO COILS, GROUP				1	—		
	1729V6384	CABLE, TEST COILS TO TB. 499 (34P), GROUP				1	—		
	1746V6384	CABLE, AMPLIFIER TO TB.s 291, 292, 293 AND 294 (23P), GROUP				1	—		
	1780V6384	CABLE, PORT SENSING ELEMENT TO TB. 851, GROUP				1	—		
	1781V6384	CABLE, FORWARD SENSING ELEMENT TO TB. 851, GROUP				1	—		
	1782V6384	CABLE, STARBOARD SENSING ELEMENT TO TB. 852, GROUP				1	—		
	1783V6384	CABLE, AFT SENSING ELEMENT TO TB. 852, GROUP				1	—		
	1871V6384	CABLE, TB. 560 (1J) TO TB. 867 (29P), GROUP				1	—		
	6117V6384	CABLE, TB.s 564, 568 AND 569 (1J) TO TB.s 803, 804 AND 805 (38P), GROUP (Mod. 951)				1	—		
	6118V6384	CABLE, TB.s 565, 566, 568 AND 569 (1J) TO TB.s 807, 808 AND 809 (39P), GROUP (Mod. 951)				1	—		
	6121V6384	CABLE, 18P TO TB. 803 (38P), GROUP (Mod. 951)				1	—		
	6124V6384	CABLE, TB. 270 (19P) TO TB.s 807 AND 808, GROUP (Mod. 951)				1	—		
	6123V6384	CABLE, TB. 556 (1J) TO TB. 235 (18P), GROUP (Mod. 951)				1	—		
	6122V6384	CABLE, TB. 556 (1J) TO TB. 271 (19P), GROUP (Mod. 951)				1	—		
	1973V6384	CABLE, RELAY 217 TO MICRO SWITCH (F), GROUP				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1974V6384	CABLE, RESISTOR TO MICRO SWITCH (A), GROUP				1	—		
	1975V6384	CABLE, MICRO SWITCH (1-2), GROUP				1	—		
	1976V6384	CABLE, TB. 728 TO MICRO SWITCH (O), GROUP				1	—		
	1977V6384	CABLE, TB. 728 TO MICRO SWITCH (H), GROUP				1	—		
	1979V6384	CABLE, RELAY 217 TO EARTH, GROUP				1	—		
	1980V6384	CABLE, RELAY 217 TO MICRO SWITCH (G), GROUP				1	—		
	1981V6384	CABLE, RELAY 217 TO MICRO SWITCH (C), GROUP				1	—		
	1982V6384	CABLE, TB.s 554, 555 AND 557 TO TB. 728, MICRO SWITCH, RELAY 217 AND RESISTOR, GROUP				1	—		
	1987V6384	CABLE, MICRO SWITCH (4-5), GROUP				1	—		
	1988V6384	CABLE, RESISTOR TO MICRO SWITCH, GROUP				1	—		
	1990V6384	CABLE, TB. 728 TO MICRO SWITCH, GROUP				1	—		
	1991V6384	CABLE, CONTACT TO MICRO SWITCH, GROUP				1	—		
	2074V6384	CABLE, TB. 696 TO EARTH, GROUP ...				1	—		
	2083V6384	CABLE, No. 1 AMPLIFIER TO GYRO UNIT, GROUP				1	—		
	2084V6384	CABLE, No. 1 AMPLIFIER TO No. 1 SLAVE RELAY UNIT, GROUP				1	—		
	2091V6384	CABLE, No. 2 AMPLIFIER TO No. 2 SLAVE RELAY UNIT, GROUP				1	—		
	2092V6384	CABLE, No. 1 SLAVE RELAY TO TB.s 283 AND 284 (29J), GROUP				1	—		
	2093V6384	CABLE, No. 2 SLAVE RELAY TO TB.s 284 AND 285 (29J), GROUP				1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	2113V6384	CABLE, TB. 557 (1J) TO RELAY 447, GROUP				1	—		
	2115V6384	CABLE, 18P TO RELAY 447, GROUP ...				1	—		
	2116V6384	CABLE, TB. 261 (18P) TO RELAY 447, GROUP				1	—		
	2123V6384	CABLE, NEGATIVE BUS BAR (22P) TO EARTH, GROUP				1	—		
	2174V6384	CABLE, TB. 290 TO TB. 288, GROUP ...				1	—		
	2175V6384	CABLE, TB.s 290 AND 1250 TO TB. 289, GROUP				1	—		
	2176V6384	CABLE, TB. 288 TO TB. 289, GROUP ...				1	—		
	2178V6384	CABLE, TB. 287 TO TB. 790, GROUP ...				1	—		
	2179V6384	CABLE, TB.s 287 AND 1251 TO TB. 286, GROUP				1	—		
	2180V6384	CABLE, TB. 190 TO TB. 286, GROUP ...				1	—		
	5825V6384	CABLE, TB. 192 TO 22P, GROUP (Mod. 606)				1	—		
	5826V6384	CABLE, TB. 193 TO 22P, GROUP (Mod. 606)				1	—		
	2187V6384	CABLE, No. 1 PHASE ADVANCE UNIT TO No. 1 AMPLIFIER, GROUP				1	—		
	2188V6384	CABLE, No. 2 PHASE ADVANCE UNIT TO No. 2 AMPLIFIER, GROUP				1	—		
	2189V6384	CABLE, No. 2 GYRO UNIT TO No. 2 AMPLIFIER, GROUP				1	—		
	2190V6384	CABLE, 22P TO No. 1 AMPLIFIER, GROUP				1	—		
	2191V6384	CABLE, 23P TO No. 2 AMPLIFIER, GROUP				1	—		
	2215V6384	CABLE, No. 1 A.P.M. TO AUTOGAIN UNIT, GROUP (Pre-Mod. 1036)				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
					St. M.R.	
		1 2 3 4				
	2257V6384	CABLE, AMPLIFIER TO ALTITUDE MONITOR, GROUP	1	—		
	2261V6384	CABLE, AMPLIFIER (1-2), GROUP ...	1	—		
	2262V6384	CABLE, AMPLIFIER (1-2), GROUP ...	1	—		
	2263V6384	CABLE, AMPLIFIER (1) TO S.R. UNIT, GROUP	1	—		
	2264V6384	CABLE, AMPLIFIER (2) TO S.R. UNIT, GROUP	1	—		
	2265V6384	CABLE, RELAY BOX TO SERVO MOTOR, GROUP	1	—		
	2267V6384	CABLE, TB. 1114 (22) TO SERVO MOTOR MICRO SWITCH, GROUP	1	—		
	2268V6384	CABLE, TB. 582 (2J) TO SERVO MOTOR MICRO SWITCH, GROUP	1	—		
	2340V6384	CABLE, TB.s 1144 AND 1145 TO 22P, GROUP	1	—		
	2344V6384	CABLE, BOMB BAY FIREWALL BULK-HEAD PLUG 739 TO No. 2 RESISTOR, GROUP	1	—		
	2345V6384	CABLE, FIREWALL BULKHEAD PLUG 740 TO No. 3 RESISTOR, GROUP	1	—		
	2356V6384	CABLE, 58P 576 TO TB. 1153 AND EARTH, GROUP	1	—		
	2355V6384	CABLE, TB. 1151 TO TB. 572 (1J), GROUP	1	—		
	2374V6384	CABLE, TB. 1249 TO TB. 290, GROUP	1	—		
	5593V6384	CABLE, TB. 215 TO TB. 290, GROUP ...	1	—		
	2376V6384	CABLE, TB. 216 TO TB. 287, GROUP ...	1	—		
	5594V6384	CABLE, TB. 217 TO TB. 287, GROUP ...	1	—		
	2427V6384	CABLE, 59P 764 TO AMPLIFIER A6, GROUP	1	—		
	2428V6384	CABLE, ACCELEROMETER TO TB.s 1114 AND 59P 766, ALSO 59P 766 TO EARTH, GROUP	1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	2434V6384	CABLE, TB. 404 (24P) TO SUPPRESSOR, GROUP				1	—		
	2435V6384	CABLE, TB. 409 (24P) TO SUPPRESSOR, GROUP				1	—		
	2436V6384	CABLE, TB. 414 (25P) TO SUPPRESSOR, GROUP				1	—		
	2437V6384	CABLE, TB. 419 (25P) TO SUPPRESSOR, GROUP				1	—		
	2500V6384	CABLE, No. 1 RESISTOR TO TB. 1176, GROUP					—		
	2501V6384	CABLE, No. 4 RESISTOR TO TB. 1180, GROUP				1	—		
	2526V6384	CABLE, 16P TO FUSES 816 AND 817 IN POWER COMPARTMENT, GROUP				1	—		
	2573V6384	CABLE, TB.s 1109 AND 1110 (22P) TO TB.s 430, 434 AND 435 (26P), GROUP				1	—		
	2574V6384	CABLE, 22P TO 26P, GROUP				1	—		
	2641V6384	CABLE, TB. 1135 (2J) TO STARBOARD AFT, SWITCH, GROUP				1	—		
	2642V6384	CABLE, TB. 1135 (2J) TO PORT AFT SWITCH, GROUP				1	—		
	2643V6384	CABLE, STARBOARD FORWARD TO PORT FORWARD SWITCH, GROUP				1	—		
	2644V6384	CABLE, STARBOARD FORWARD TO PORT AFT SWITCH, GROUP				1	—		
	2658V6384	CABLE, HYDRAULIC PRESSURE MAIN TO TB.s 588 AND 590, GROUP				1	—		
	2676V6384	CABLE, STARBOARD AFT TO PORT AFT MICRO SWITCH, GROUP				1	—		
	2792V6384	CABLE, 62P 835 TO No. 2 PORT DOOR AMPLIFIERS, TB.s 598, 599 AND 851 AND EARTH, ALSO TB. 599 TO AMPLIFIERS, GROUP				1	—		
	5779V6384	CABLE, TB.s 424 AND 436 TO RELAY 577 AND MICRO SWITCH, GROUP (Mod. 564)				1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	2841V6384	CABLE, RELAY 577 (3-C), GROUP ...				1	—		
	2842V6384	CABLE, RELAY 577 (3A-4A), GROUP ...				1	—		
	2843V6384	CABLE, TB. 598 TO TB. 429, GROUP ...				1	—		
	2847V6384	CABLE, TB. 532 (2J) TO EARTH, GROUP				1	—		
	2850V6384	CABLE, RECTIFIER TO TB. 574 (2J), GROUP				1	—		
	2851V6384	CABLE, TB. 290 TO TB. 1250, GROUP				1	—		
	2852V6384	CABLE, TB. 1250 (A), GROUP ...				1	—		
	2853V6384	CABLE, TB. 287 TO TB. 1251, GROUP				1	—		
	2854V6384	CABLE, AT TB. 1251 (A), GROUP ...				1	—		
	2971V6384	CABLE, TB. 573 (2J) TO RELAY 612, GROUP				1	—		
	2972V6384	CABLE, TB. 583 (2J) TO RELAY 613, GROUP				1	—		
	3040V6384	CABLE, 64P 884 TO TB.s 1151, 1152 AND 1320 AND EARTH, GROUP				1	—		
	3041V6384	CABLE, ELEVATOR COMP. BOX TO TB. 1152, GROUP				1	—		
	3054V6384	CABLE, RELAY 577 TO RECTIFIER, GROUP				1	—		
	3055V6384	CABLE, RELAY 577 TO EARTH, GROUP				1	—		
	3071V6384	CABLE, TB. 567 TO TB. 192, GROUP (Mod. 606)				1	—		
	3072V6384	CABLE, TB. 1135 TO TB. 193, GROUP (Mod. 606)				1	—		
	3073V6384	CABLE, 66P 888 TO TB.s. 192, 192 AND 1135 AND EARTH, GROUP (Mod. 606)				1	—		
	3074V6384	CABLE, 66P 886 TO TB. 192, GROUP (Mod. 606)				1	—		
	3075V6384	CABLE, 66P 889 TO TB. 193, GROUP (Mod. 606)				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	3076V6384	CABLE, 66P 887 TO POWER PACKS, GROUP (Mod. 606)				1	—		
	3077V6384	CABLE, PORT POWER PACK TO TB. 192, GROUP (Mod. 606)				1	—		
	3078V6384	CABLE, STARBOARD POWER PACK TO TB. 193, GROUP (Mod. 606)				1	—		
	3086V6384	CABLE, TEST SOCKET TO TEST LAMP, FUSE, TB. 289 AND EARTH, GROUP (Mod. 606)				1	—		
	3088V6384	CABLE, TEST SOCKET TO TEST LAMP, FUSE, TB. 286 AND EARTH, GROUP (Mod. 606)				1	—		
	3089V6384	CABLE, PORT POWER PACK TO TB. 192, GROUP (Mod. 606)				1	—		
	3090V6384	CABLE, STARBOARD POWER PACK TO TB. 193, GROUP (Mod. 606)				1	—		
	3096V6384	CABLE, AIR BRAKE CONTRACTOR TO RECTIFIER, GROUP				1	—		
	3097V6384	CABLE, AIR BRAKE CONTRACTOR TO RECTIFIER, GROUP				1	—		
	3098V6384	CABLE, TB. 1215 TO EARTH, GROUP				1	—		
	3099V6384	CABLE, TB. 1215 TO RECTIFIER, GROUP				1	—		
	3100V6384	CABLE, DELAY UNIT TO TB. 1215 AND CONTRACTOR, GROUP				1	—		
	3101V6384	CABLE, AIR BRAKE CONTRACTOR TO RECTIFIER, GROUP				1	—		
	3102V6384	CABLE, AIR BRAKE CONTRACTOR TO RECTIFIER, GROUP				1	—		
	3103V6384	CABLE, TB. 1216 TO EARTH, GROUP				1	—		
	6165V6384	CABLE, TB. 1216 TO RECTIFIER, GROUP (Mod. 951)				1	—		
	3105V6384	CABLE, DELAY UNIT TO TB. 1216 AND CONTRACTOR, GROUP				1	—		
	3176V6384	CABLE, STARBOARD DOOR FORWARD MICRO SWITCH TO RELAY 282, GROUP (Mod. 659)				1	—		
	3177V6384	CABLE, PORT TO STARBOARD DOOR FORWARD MICRO SWITCHES, GROUP (Mod. 659)				1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	5003V6384	CABLE, TB.s 293 AND 294 (23P) TO TB. 733, GROUP				1	—		
	5004V6384	CABLE, 39P TO TB. 727, GROUP				1	—		
	5028V6384	CABLE, TB. 263 (19P) TO EARTH, GROUP				1	—		
	5074V6384	CABLE, TB. 816 TO TB. 819, GROUP ...				1	—		
	5898V6384	CABLE, FUSE 595 (25P) TO BUS BAR, GROUP (Mod. 697)				1	—		
	5899V6384	CABLE, FUSE 595 (25P) TO BUS BAR (19P), GROUP (Mod. 697)				1	—		
	5100V6384	CABLE, TB. 573 TO TB.s 417 AND 422 (25P), GROUP				1	—		
	5922V6384	CABLE, 18P TO 24P, GROUP (Mod. 697)				1	—		
	6250V6384	CABLE, 19P TO 25P, GROUP (Mod. 1468)				1	—		
	5923V6384	CABLE, 19P TO 25P, GROUP (Mod. 697)				1	—		
	5125V6384	CABLE, CROSS-FEED COCK ACTUATOR TO TB.s 553 AND 572, GROUP				1	—		
	5164V6384	CABLE, PORT TO STARBOARD FORWARD MICRO SWITCHES, GROUP				1	—		
	5197V6384	CABLE, TB. 728 TO REV. CONTACTOR, GROUP				1	—		
	5211V6384	CABLE, RELAY 254 TO RELAY 282, GROUP				1	—		
	5240V6384	CABLE, TB. 728 TO CONTACT, GROUP				1	—		
	5405V6384	CABLE, ELEVATOR "Q" BOX TO TB.s 722 AND 1151, GROUP				1	—		
	5407V6384	CABLE, AILERON "Q" BOX TO TB.s 724 AND 1152, GROUP				1	—		

**ELECTRICAL INSTALLATION
BOMB BAY**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	5686V6384	CABLE, R.P.B. 107 TO 1J AND 2J, GROUP (Mod. 456)				1	—		
	5451V6384	CABLE, No. 4 ENGINE PLUG 419 TO SUPPRESSOR AND TB. 419 (25P), GROUP				1	—		
	5452V6384	CABLE, No. 1 ENGINE PLUG 316 TO SUPPRESSOR AND TB. 1201 (24P), GROUP				1	—		
	5453V6384	CABLE, PLUG BREAK 315 TO TB. 409 AND SUPPRESSOR, GROUP				1	—		
	5454V6384	CABLE, No. 3 ENGINE PLUG 318 TO SUPPRESSOR AND TB. 1202, GROUP				1	—		
	5465V6384	CABLE, TB. 1177 TO RELAY 416, GROUP				1	—		
	5466V6384	CABLE, TB. 1177 TO RELAY 416, GROUP				1	—		
	5467V6384	CABLE, TB. 1177 TO EARTH, GROUP				1	—		
	5476V6384	CABLE, TB. 612 TO STARBOARD DOOR OPEN MICRO SWITCH, GROUP				1	—		
	5477V6384	CABLE, TB. 612 TO STARBOARD DOOR OPEN MICRO SWITCH, GROUP				1	—		
	6001V6384	CABLE, PORT SWITCH PLUG TO TB.s 456, 457 AND 458, GROUP (Mod. 696)				1	—		
	6002V6384	CABLE, STARBOARD SNATCH PLUG TO TB.s 695, 696 AND 697, GROUP (Mod. 696)				1	—		
	6003V6384	CABLE, 56P TO EARTH, GROUP (Mod. 696)				1	—		
	6004V6384	CABLE, STARBOARD ROCKET RELEASE TO TB.s 696 AND 697, GROUP (Mod. 696)				1	—		
	6005V6384	CABLE, PORT ROCKET RELEASE TO TB.s 457 AND 458, GROUP (Mod. 696)				1	—		
	6006V6384	CABLE, 56P PLUG 638 TO TB.s 695, 696 AND 697, GROUP (Mod. 696)				1	—		
	6007V6384	CABLE, 56P PLUG 637 TO TB.s 456, 457 AND 458, GROUP (Mod. 696)				1	—		
	5478V6384	CABLE, TB. 612 TO PORT DOOR OPEN MICRO SWITCH, GROUP				1	—		
	5480V6384	CABLE, TB. 582 TO DOOR OPEN SWITCH, GROUP				1	—		
	5481V6384	CABLE, TB. 612 TO PORT DOOR OPEN MICRO SWITCH, GROUP				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
	5541V6384					1	—		
	5685V6384					1	—		
	5780V6384					1	—		
	5782V6384					1	—		
	5842V6384					1	—		
	6015V6384					1	—		
	5881V6384					1	—		
	22V6354					1	—		
5CW/5049	—					2	—	A	F3/18
5X/9402794	—					1	—	C	F2/19
9499	5R4371					1	—	C	F3/20
5X/5063	—					4	Y227/T5	C	F1/21
	4V8222					2	L72	C	F3/22
	16V6354					1	L72		
4676	10V5650					32	—	C	
5CZ/5214	—					14	—	C	
	9V6359					8	BSS972		F2/24
	10V6359					8	BSS972		F2/25
4679	22V5650					2	—	C	

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	C.I. of	Plate and Illust'n No.
		1	2	3	4			St. M.R.	
4677		LIGHTING, GROUND SERVICE, IN BOMB BAY (1V6816)							
		Spares for :—							
	12SS4204	Bush				2	—	C	F1/26
	284V6384	CABLE, No. 4 LAMP TO TB. 612, GROUP				1	—		
	288V6384	CABLE, No. 9 LAMP TO TB. 612, GROUP				1	—		
	290V6384	CABLE, No. 8 LAMP TO No. 9 LAMP, GROUP				1	—		
	292V6384	CABLE, No. 7 LAMP TO No. 8 LAMP, GROUP				1	—		
	294V6384	CABLE, No. 6 LAMP TO No. 7 LAMP, GROUP				1	—		
	308V6384	CABLE, No. 4 LAMP TO No. 5 LAMP, GROUP				1	—		
	309V6384	CABLE, No. 5 LAMP TO No. 10 LAMP, GROUP				1	—		
	1110V6384	CABLE, No. 10 LAMP TO No. 11 LAMP, GROUP				1	—		
	1111V6384	CABLE, No. 10 LAMP TO TB. 605, GROUP				1	—		
	1113V6384	CABLE, No. 11 LAMP TO INSPECTION SOCKET, GROUP				1	—		
	1114V6384	CABLE, HYDRAULIC RESERVOIR LAMP TO TB. 605, GROUP				1	—		
	1115V6384	CABLE, HYDRAULIC RESERVOIR LAMP TO TB. 612, GROUP				1	—		
	1116V6384	CABLE, No. 5 LAMP TO TB. 605, GROUP				1	—		
	1117V6384	CABLE, No. 8 LAMP TO No. 9 LAMP, GROUP				1	—		
1118V6384	CABLE, No. 9 LAMP TO TB. 605, GROUP				1	—			
1119V6384	CABLE, No. 6 LAMP TO TB. 605, GROUP				1	—			
1120V6384	CABLE, No. 6 LAMP TO No. 7 LAMP, GROUP				1	—			

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		LIGHTING, GROUND SERVICE, IN BOMB BAY (V6816) (Cont'd)							
	1121V6384	CABLE, No. 4 LAMP TO No. 5 LAMP, GROUP				1	—		
	2881V6384	CABLE, INSPECTION SOCKET TO TB. 818, GROUP				1	—		
	5706V6384	CABLE, INSPECTION SOCKET TO TB. 818, GROUP (Mod. 467)				1	—		
	5707V6384	CABLE, TB. 818 TO No. 7 LAMP, GROUP (Mod. 467)				1	—		
4308	3bSS4205	Clip, cable				32	PVC	C	
5CX/720	—	Dome, glass				9	—	C	F1/27
5L/9953278	—	Filament, 28 V., 18 W.				9	—	B	F1/28
26FP/10631	1V6798	LAMPHOLDER, GROUP				5	—	B	F1/29
		Consisting of:—							
	2V6798	Cable, unipren, 6" x 2" long				1	—		
5CX/701	—	Lamp				1	—	B	F1/30
	21V4650	LAMPHOLDER, GROUP				4	—		F1/31
		Consisting of:—							
	21aV4650	Cable, unipren, 6" x 1½" long				1	—		
26FP/13930	13SS3529	Grommet				1	—	C	
5CX/701	—	Lamp				1	—	B	F1/30
5CY/587	—	Socket, inspection lamp				2	—	B	F1/32
10002	2V9472	LINK, TEST PLUG, GROUP				2	—	C	F2/33
		(For Breakdown, See :—Electrical Installation—Mainplane)							
		MOUNTING, MICRO SWITCH, BOMB DOORS CLOSED, FORWARD (1V6639)							F2/34
		MOUNTING, MICRO SWITCH, BOMB DOORS CLOSED, AFT (1V6866)							
		Spares for:—							
4678	4V6219	Block				1	L65	C	F2/35
2204	4V6640	Pin, striking				2	S80	C	F2/36
5CW/4742	DOWTY C1831Y	Unit, sequence switch				2	—	B	F2/37
		MOUNTING, MICRO SWITCH, BOMB DOORS OPEN, FORWARD, PORT AND STARBOARD (1 & 2V8373)							F1/38
		Spares for:—							
	8V8373	BRACKET, C/W LABELS, PORT, GROUP				1	—		F1/39
	9V8373	BRACKET, C/W LABELS, STARBOARD, GROUP				1	—		
	7V8373	BRACKET, BOTTOM, GROUP				1	—		F1/40
11883	18V8372	Pin, striking (Mod. 1580)				2	S80	C	F1/41
5CW/4742	DOWTY C1831Y	Unit, sequence switch				2	—	B	F1/37

ELECTRICAL INSTALLATION

BOMB BAY

		MOUNTING, MICRO SWITCH, BOMB DOORS OPEN, AFT, PORT AND STARBOARD (1 & 2V8372)			F1/42
		Spares for :—			
	13V8372	Bracket, short, top, port	1	L72	F1/43
	14V8372	Bracket, short, top, starboard	1	L72	F1/44
	15V8372	Bracket, long, top, port	1	L72	F1/45
	16V8372	Bracket, long, top, starboard	1	L72	F1/46
9374	12V8372	BRACKET, BOTTOM, GROUP	1	—	C F1/47
11883	18V8372	Pin, striking (Mod. 1580)	2	S80	C F1/41
SCW/4742	DOWTY C1831Y	Unit, sequence switch	2	—	B F1/37
	26V6354	MOUNTING, RESISTOR, ON AFT FACE OF BOMB ARCH 44-592, GROUP	1	—	F1/48
		Spares for :—			
SCZ/5093	BELLING LEE L/744	Block, terminal, 6-way	1	—	C F1/49
SCZ/	BERCO LW/25	Resistor, 33 ohms.	2	—	B F1/50
		MOUNTING, SINGLE POLE CONTACTOR FOR INVERTER COOLER INTAKE DE-ICING HEATER (1V7618) (Mod. 225)			
		Spares for :—			
SCW/4388	—	Contactor, single pole	1	—	B F2/51
	2V7618	PLATE, MOUNTING, GROUP	1	—	F1/52
		MOUNTING, ARTIFICIAL FEEL, FAILURE WARNING PANEL, 58P AND AIRSPEED TRANSMITTERS (1V8152) (Mod. 289)			
		Spares for :—			
9713	16V6622	Bush	9	—	C F1/53
		PANEL, ARTIFICIAL FEEL, WARNING 58P (V8140)			F1/54
		Spares for :—			
26FP/8735	1V5650	Block, terminal	2	—	C F1/4
4650	12V6161	Bolt, special, for moving coil relays (made from A25/13C)	6	—	C F1/55
	4V8140	BRACKET, MOUNTING, RELAY, GROUP	1	—	F1/56
4651	5V6080	Bush, for moving coil relay attachments	12	—	C F1/57
5008	21SS4204	Bush, ring lock	3	—	C F1/58
6401	3V8140	COVER, PANEL, GROUP	1	—	C
		Spares for :—			
28FP/154	A5/30	Fastener	6	—	C
28FP/9425771	GA5/312	Grommet	6	—	C
6402	6V8140	Cover, potentiometer	1	L72	C F1/59

**ELECTRICAL INSTALLATION
BOMB BAY**

		PANEL, ARTIFICIAL FEEL, WARNING 58P (V8140) (Cont'd)			
10QB/130	COLVERN N602	Locknut	9	—	
	—	Lock, potentiometer	1	—	B F1/60
	1V9428	LOOM, CABLE, GROUP	1	—	
	1V8141	PANEL, LESS EQUIPMENT, GROUP	1	—	
10W/O271401	—	Potentiometer, 0-250 ohms.	6	—	C F1/61
	COLVERN CLR1501/263	Potentiometer, 0-10,000 ohms., type RVW. 1	3	—	F1/62
10CV/5100	B.T.H. GJ3/M SANGAMO WESTON SS4/1/285	Rectifier	6	—	B F1/14
5CW/10F/O530289	—	Relay, moving coil	3	—	A F1/63
10F/O530108	—	Relay, P.O. type SM3/HV/52	3	—	B F1/64
10W/O113336	—	Relay, P.O. type SM3/HV/51	3	—	B F1/65
5X/6623	15V5650	Resistor, 4,700 ohms.	3	—	C F1/66
5X/6622	14V5650	Socket, single	6	—	C F1/17
	BULGIN LTD. T21	Socket, double	2	—	C F1/67
		Strip, mounting	1	—	F1/68
					F1/69
		PANEL, TRACK AND GLIDE RELAY, 64P (1V9411)			
9501	3V9411	Spares for :—			
28FP/146	A4/25	COVER, PANEL, GROUP	1	—	C F1/70
28FP/9430915	GA4/250	Spares for :—			
	5V9411	Fastener	4	—	C
	COLVERN N602	Grommet	4	—	C
10QB/130	—	Cover, potentiometer	1	L72	F1/71
	1V9426	Locknut	4	—	
	2V8839	Lock, potentiometer	4	—	B F1/60
	1V9410	LOOM, CABLE, GROUP	1	—	
10W/O271401	—	MOUNTING, RELAY, GROUP	1	—	F1/72
10F/O119239	—	PANEL, LESS EQUIPMENT, GROUP	1	—	
	4V9411	Potentiometer, 0-250 ohms.	4	—	C F1/61
10W/O113308	—	Relay, type SM5/N33	2	—	B F1/73
		UNIT, RESISTOR, GROUP	1	—	F1/74
		Spares for :—			
		Resistor, type RWV-J	2	—	C

**ELECTRICAL INSTALLATION
BOMB BAY**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		MOUNTING, ARTIFICIAL FEEL, FAILURE WARNING PANEL, 58P AND AIRSPEED TRANSMITTERS (V8152) (Cont'd)							
11236	17V6622	Spacer				9	—	C	F1/75
6A/4556	SMITHS 791PG	Transmitter				1	—	A	F1/76
6A/4555	SMITHS 729PG	Transmitter				1	—	A	F1/77
6A/4554	SMITHS 728PG	Transmitter				1	—	A	F1/78
4271	1V7026	PANEL, AMMETER TEST, FOR SECONDARY FUEL PUMPS, GROUP (For Breakdown, See :—Equipment, Aircraft—Instrument Panels)				1		A	F1/79
		PANEL, TERMINAL BLOCK, 21P (V6333) (For Breakdown, See :—Equipment, Aircraft—Instrument Panels)							
		PANEL, DE-ICING, 23P (1V6626) (For Breakdown, See :—Equipment, Aircraft—Instrument Panels)							
		PANEL, HEATING, 43P (1V6335) (For Breakdown, See :—Equipment, Aircraft—Instrument Panels)							
		PANEL, RELAY, AMMETER & LOAD (V9602) (For Breakdown See :—Page FN. 16)					—		
	1V8839	PANEL, RELAY, 59P, GROUP				1	—		F1/80
5724	3V8268	Spares for :— COVER, PANEL, GROUP				1	—	C	F1/81
28FP/146	A4/25	Spares for :— Fastener				4	—	C	
28FP/9430915	GA4/250	Grommet				4	—	C	
	1V8240	LOOM, CABLE, GROUP				1	—		
	2V8839	MOUNTING, RELAY, GROUP				1	—		F1/72
	1V8840	PANEL, LESS EQUIPMENT, GROUP				1	—		
10F/O119244	—	Relay				2	—	B	F1/82
	1V9409	PANEL, AUTO STABILIZER RELAY, 62P, GROUP (Mod. 564) Spares for :—				1	—		F1/83
6855	3V8996	COVER, PANEL, GROUP				1	—	C	F1/84
28FP/146	A4/25	Spares for :— Fastener				4	—	C	
28FP/9430915	GA4/250	Grommet				4	—	C	
	1V9423	LOOM, CABLE, GROUP				1	—		
	2V8839	MOUNTING, RELAY, GROUP				1	—		F1/72
	1V8840	PANEL, LESS EQUIPMENT, C/W LABELS, GROUP				1	—		
10F/O119239	—	Relay, type SMS/N33				2	—	B	F1/73
	GEC M1546	Relay				1	—	B	F1/85

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		PANEL, EXPLOSION SUPPRESSION, RELAY CONTROL 66P (1V9551) (Mod. 606)							F1/86
	1V9542	Spares for :— LOOM, CABLE, GROUP				1	—		
	2V9551	PANEL, 66P, GROUP				1	—		F1/87
26FP/8735	1V5650	Spares for :— Block, terminal				1	—	C	F1/4
	3V9158	BOARD, RESISTOR, GROUP				1	—		F1/88
10W/O216129	—	Spares for :— Resistor, 120 KN.				2	—	C	F1/89
	ROSS COURTNEY 393	Tag, terminal				4	—		
5K/2871	3V9551	Box, moulded				1	—		
	SP40/A12	Grommet				2	—	C	
	DIAMOND "H" SWITCHES, LTD.	Relay, series "R"				2	—	A	F1/90
5CW/7250	R210/C3/P1								
	DIAMOND "H" SWITCHES, LTD.								
5CW/6736	R101/PS	Socket, ceramic				2	—	B	F1/91
5X/6623	15V5650	Socket, single				2	—	C	F1/17
		PANEL, RELAY 56P, R.A.T.O.G. (1V7585)							F1/92
		Spares for :—							
26FP/8735	1V5650	Block, terminal				6	—	C	F1/4
	41SS4204	Bush, ring lock				1	—		F1/93
6141	3V7585	COVER, PANEL, GROUP				1	—	C	F1/94
		Spares for :—							
28FP/146	A4/25	Fastener				6	—	C	
28FP/9430915	GA4/250	Grommet				6	—	C	
	1V9738	LOOM, CABLE, GROUP (Mod. 696)...				1	—		
6142	1V7586	PANEL, GROUP				1	—	C	F1/96
5X6623	15V5650	Socket, single				26	—	C	F1/17
5X/6622	14V5650	Socket, double				2	—	C	F1/67
5CW/6723	—	Switch, relay, type 10B No. II (Mod. 696) ...				2	—	A	F1/97
5CW/6452	—	Switch, relay, type 9B No. IA (Mod. 696) ...				3	—	A	F1/98

ELECTRICAL INSTALLATION

BOMB BAY

PANEL, 112V. DISTRIBUTION, 18P,
PORT AND 19P, STARBOARD (1 &
2V6329)

F2/99

Spares for :—

4237	5bV5832	Block, fuse carrier, 1-55" x 0-6" x 0-45" ...	6	BSS249	C	F2/100
4203	4bV5832	Block, fuse carrier, 1-45" x 1" x 0-31" ...	4	BSS249	C	F2/101
4247	1V6691	Block, terminal, H.D. ...	1	—	C	F2/102
26FP/8735	1V5650	Block, terminal, L.D. ...	10	—	C	F2/4

BUS BAR, FOR PANEL (1V6567) ...

Spares for :—

	2V6567	BUS BAR, GROUP ...	1	—		F2/103
	3V6567	BUS BAR, GROUP ...	1	—		F2/104

4682	31SS4204	Bush, ring lock ...	1	—	C	F2/105
4683	61SS4204	Bush, ring lock ...	3	—	C	F2/106
4646	71SS4204	Bush, ring lock ...	2	—	C	F2/107

5CZ/5055	AP19250	Carrier, fuse, size 1 ...	17	—	C	F2/108
----------	---------	---------------------------	----	---	---	--------

5CZ/5056	AP19258	Carrier, fuse, size 2 ...	4	—	C	F2/109
	19aV5832	Carrier, fuse ...	2	BSS972		F2/110

CARRIER, FUSE, GROUP ...

Consisting of :—

4200	6bV5832	Block ...	2	BSS249	C	F2/112
4201	7aV6337	Carrier, fuse ...	1	BSS249	C	
28M/10328	AGS2002/C1	Nut, stiff, 2 BA ...	4	—	C	
28/1006473	A27/CT	Nut, plain, 2 BA ...	2	—	C	
4202	6cV5832	Stud ...	2	BSS249	C	F2/113
28W/9419402	SP13/C	Washer, 2 BA ...	2	—	C	
28W/14034	SP25/C	Washer, 2 BA ...	2	—	C	

CARRIER, FUSE, GROUP ...

Consisting of :—

4200	6bV5832	Block ...	5	BSS249	C	F2/112
28M/9129528	A54/C	Locknut, 2 BA ...	5	—	C	
28M/10275	AGS2001/C4	Nut, stiff, 2 BA ...	5	—	C	
28M/10310	AGS2002/C4	Nut, stiff, 2 BA ...	5	—	C	
28S/13887	A32/B10	Screw, 4 BA ...	2	—	C	
4211	8bV5832	Seperator ...	1	BSS668	C	F2/115
4202	6cV5832	Stud ...	5	BSS249	C	F2/113
4210	8aV5832	Support, fuse ...	1	BSS668	C	F2/116
28W/9419402	SP13/C	Washer, 2 BA ...	5	—	C	
28W/1009752	SP25/C	Washer, 2 BA ...	5	—	C	
28W/3097	AGS162/B	Washer, spring, 4 BA ...	2	—	C	

4272	12V5686	COIL, AMMETER TEST, GROUP ...	9	—		F2/117
------	---------	-------------------------------	---	---	--	--------

2819	5V6329	COVER, PANEL, 18P, PORT, GROUP	1	—	C	F2/118
------	--------	--------------------------------	---	---	---	--------

2820	6V6329	COVER, PANEL, 19P, STARBOARD, GROUP	1	—	C	F2/119
------	--------	-------------------------------------	---	---	---	--------

Spares for :—

28FP/54	A5/30	Fastener ...	8	—	C	
28FP/9425771	GA5/312	Grommet ...	8	—	C	
	932SS6001	Label, " Live Bus Bars " ...	1	—		

ELECTRICAL INSTALLATION

Page FA. 27

BOMB BAY

**PANEL, 112V. DISTRIBUTION, 18P,
PORT AND 19P, STARBOARD (V6329)**
(Cont'd)

10H/0590118	ENGLISH ELEC. AP19255	Fuse, 5 amp., starboard	1	—	C	
10H/0590124	ENGLISH ELEC. AP19261	Fuse, 20 amp., port	1	—	C	
10H/0590127	ENGLISH ELEC. AP19265	Fuse, 60 amp., starboard	1	—	C	
10H/0590120	ENGLISH ELEC. AP19259	Fuse, 10 amp.	15P	—	C	
10H/0590125	ENGLISH ELEC. AP19262	Fuse, 30 amp.	14S	—	C	
10H/0590129	ENGLISH ELEC. AP19275	Fuse, 100 amp.	2	—	C	
10H/0590114	ENGLISH ELEC. AP19251	Fuse, 0.5 amp.	1	—	C	
10H/0590107	ENGLISH ELEC. —	Fuse, 0.25 amp.	2P	—	C	
10H/19846	BELLING LEE L674	Fuseholder	1S	—	C	F2/120
	9V6329	LAMP, WARNING, NEON, GROUP	1	—		F2/121
		Consisting of :—				
SL/9962110	HIVAC	Lamp, neon	1	—	B	
5CX/1556	CCSL	Lampholder	1	—	B	
	1V9715	LOOM, CABLE, 18P, GROUP ...	1	—		
	1V9691	LOOM, CABLE, 19P, GROUP ...	1	—		
4684	14V6329	MOUNTING, RESISTANCE, GROUP	1	—	C	F2/122
		Spares for :—				
10W/O216096	—	Resistor, 62 K	1	—	C	
	ROSS					
	COURTNEY					
	No. 397	Tag, terminal	2	—		
4238	5cV5832	Stud, fuse carrier, $\frac{1}{8}$ " dia. x 1.63"	6	BSS249	C	F2/123
4234	4cV5832	Stud, fuse carrier, 0.625" dia. x 1.75"	4	BSS249	C	F2/124
5CW/3942	—	Switch, relay, type S1	7	—	A	F2/97
5CW/4381	—	Switch, relay, 120V. D.C.	3	—	A	F2/125
5CW/3944	—	Switch, relay, type S3	5	—	A	F2/98
5CW/4409	—	Switch, thermal overload	2P	—	A	F2/126
			1S	—	A	
	12V6757	Washer, insulating	2	BSS972		F2/127
	31V6354	PANEL, MOUNTING, RELAYS 481, 482 AND 615, ON AFT FACE OF REAR SPAR, GROUP	1	—		F2/128
	35V6354	PANEL, SWITCH AND TB. MOUNTING AT FRONT SPAR, PORT, GROUP	1	—		F2/129
	36V6354	PANEL, SWITCH AND TB. MOUNTING AT FRONT SPAR, STARBOARD, GROUP	1	—		F2/130

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of	Plate and illust'n No.
					St. M.R.	
		1 2 3 4				
	55V6354	PLATE, TEST PLUG MOUNTING, ON FRONT SPAR, PORT, GROUP (Mod. 606)	1	—		F2/131
	56V6354	PLATE, TEST PLUG MOUNTING, ON FRONT SPAR, STARBOARD, GROUP (Mod. 606)	1	—		F2/132
5X/6340	—	Plug, bulkhead, size "Z", on rib 63.5" aft of bomb arch 95.967"	2	—	C	F1/133
	48V6354	PLUG, SHORTING, GROUP ... Consisting of :—	1	—		
5X/6646	HELLERMAN HV3380	Bung, sealing, 6-way ...	1	—	C	
	48aV6354	Cable, unipren 6 ...	1	—		
5X/6642	PLESSEY Z74086	Ferrule, for bung ...	1	—	C	
10H/0560302	—	Plug ...	1	—	C	
27N/	GRAVINER E187	Power-pack (Pre-Mod. 637) ...	1	—		
27N/	GRAVINER E483	Power-pack (Mod. 637) ...	1	—		F1/134
10CV/	B.T.H. GJ/5M	Rectifier ...	5	—	B	F1/14
	S.T.C. Z751502	Rectifier, type MDA/18/2/RCZ ...	1	—		
5CZ/5395	BRITISH ELEC. K7VP	Resistor, c/w clip SA17 at each end, on front spar	4	—	B	F2/135
5CZ/5397	BRITISH ELEC. RAH/KO/12	Resistor (Berco) ...	1	—	B	F1/136
	3V6354	Ring, packing, H.D. connector block ...	2	BSS972		F1/137
	7V6354	Shield, H.D. connector, aft of bomb arch 95.967"	2	BSS972		
	11V6354	Shield, H.D. connector ...	1	BSS972		
5X/6622	14V5650	Socket, double ...	13	—	C	F2/67
5X/6623	15V5650	Socket, single ...	123	—	C	F1/17
5CY/2866	—	Suppressor, type B4 ...	4	—	A	F1/138
5CW/5696	—	Switch, starter unit ...	1	—	A	F1/139
5CW/4396	—	Switch, starter unit ...	3	—	A	F2/140
5CW/3943M	—	Switch, relay, type S2 ...	4	—	A	F1/141
5CW/4102	—	Switch, relay, type Q3 ...	2	—	A	F2/142
5CW/5014	—	Switch, relay, type 9B, No. 1 ...	1	—	A	F2/143
10173	SS4088	Terminal, earth, $\frac{3}{16}$ " BSF ...	1	—	C	
11088	SS4052	Terminal, earth, 2 BA ...	3	—	C	
5X/9402799	—	Terminal, 19 amp., 2-way (Mod. 621) ...	1	—	C	
	1V8282	UNIT, VOLTAGE TRIP, PORT, GROUP (Pre-Mod. 1040)	1	—		F1/144
	5V8282	UNIT, VOLTAGE TRIP, PORT, GROUP (Mod. 1040)	1	—		
	2V8282	UNIT, VOLTAGE TRIP, STARBOARD, GROUP (Pre-Mod. 1040)	1	—		F1/145
	6V8282	UNIT, VOLTAGE, TRIP, STARBOARD, GROUP (Mod. 1040)	—	—		
9306	1V9303	UNIT, TRANSISTORISED TIME DELAY 0.25 SECONDS, GROUP	2	—	A	F3/146

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.	
					M.R.		
		1	2	3	4		
	1V6848	UNIT, AILERON, FOR ARTIFICIAL FEEL UNIT, GROUP (A. V. Roe Fitment Only)	1	—	MR	F3/148	
	2V6848	UNIT, ELEVATOR, FOR ARTIFICIAL FEEL UNIT, GROUP (A. V. Roe Fitment Only)	1	—	MR	F3/149	
	3V6848	UNIT, RUDDER, FOR ARTIFICIAL FEEL UNIT, GROUP (A. V. Roe Fitment Only)	1	—	MR	F3/150	
	22R3569	Spares for :—					
	35R3569	Bolt, special, for aileron and elevator unit	4	—	MR	F3/151	
	5V6080	Bolt, special, rudder unit	4	—	MR	F3/152	
4651	16V6622	Bush, 30°, 1/2" dia. x 3/8" long	4	Rubber	MR/C	F3/153	
9713	SANGAMO WESTON S54/285	Bush, 30°-35°, 1/2" dia. x 3/8" long	3	Rubber	MR/C	F3/154	
5CW/	5V6848	Coil, moving, relay	1	—	A	F3/155	
	6V6848	CONTAINER, AILERON AND ELEVATOR, GROUP	1	—	MR	F3/156	
	BELLING LEE L1382	CONTAINER, RUDDER, GROUP	1	—	MR	F3/157	
10H/0590109	—	Fuseholder, seated panel (Mod. 928)	1	—	C	F3/158	
	237SS6002	Fuse, arc lamp	1	—	C	F3/159	
	238SS6002	Label, " Fuse 558 "	1	—			
	239SS6002	Label, " Fuse 560 "	1	—			
10QB/130	—	Label, " Fuse 560 "	1	—			
	—	Lock, potentiometer	3	—	A	F3/60	
	1/V10590	LOOM, CABLE FOR AILERON & RUDDER A.F.U., GROUP (Mod. 928)	2	—			
	1/V10589	LOOM, CABLE FOR ELEVATOR A.F.U., GROUP (Mod. 928)	1	—			
	COLVERN No. 602	Nut, lock	1	—			
	19V6622	PANEL, MOUNTING, GROUP	1	—		F3/161	
	—	Spares for :—					
10C/9115572	—	Condenser	4	—	C	F3/162	
10W/O243105	—	Resistor, 120 ohms.	2	—	C	F3/163	
10W/O244037	—	Resistor, 2,500 ohms.	2	—	C	F3/164	
	4V6622	PLATE, COVER, GROUP	1	—	MR	F3/165	
10W/O271401	—	Potentiometer, 0-250 ohms.	2	—	C	F3/166	
10W/O271601	—	Potentiometer, 0/1,000 ohms.	1	—	C	F3/167	
6A/4556	730/PG	Transmitter, aileron (alternative, DSS700)	1	—	A	F3/169	
6A/4555	729/PG	Transmitter, elevator (alternative, DSS600)	1	—	A	F3/170	
6A/4554	SMITHS 728/PG	Transmitter, rudder (alternative, DSS800)	1	—	A	F3/171	

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
		1	2	3	4			St. M.R.	
		WIRING, ELECTRICAL EQUIPMENT, FOR BOMB GEAR IN BOMB BAY (V6850)							
		Spares for :—							
5X/9008	—	Adaptor, lug, 4-way, for relay at bomb arch 44-592", and earth terminal at bomb arch 128-015"				10	—	C	F3/1
26FP/8735	1V5650	Block, terminal, 829 and 830 at bomb arch 151-919"				2	—	C	F3/4
5CZ/1786	—	Boot, insulating, for relay at bomb arch 54-592"				2	—	C	F3/172
	10V6099	BOX, JUNCTION, 38J AT BOMB ARCH 95", GROUP				1	—		F3/174
		Spares for :—							
26FP/8735	1V5650	Block, terminal				3	—	C	F3/4
	7V6098	BOX, LESS EQUIPMENT, GROUP				1	—		
	1303V6374	Label, " TB. 1303 "				1	L59		
	1304V6374	Label, " TB. 1304 "				1	L59		
	1305V6374	Label, " TB. 1305 "				1	L59		
	11V6099	LID, BOX, GROUP				1	—		F3/175
5X/2795	—	Sleeve, Helvin				5	—	C	
5X/6622	14V5650	Socket, double				2	—	C	F1/67
5X/6623	15V5650	Socket, single				10	—	C	F1/17
		BRACKETS AND MOUNTINGS, FOR BOMBING EQUIPMENT ON FRONT SPAR (V6851)							
		Spares for :—							
	9V6851	BRACKETS, ANGLE, FOR CONTROL UNIT MOUNTING, OUTBOARD, GROUP				1	—		F2/176
	10V6851	BRACKET, ANGLE, FOR CONTROL UNIT MOUNTING, INBOARD, GROUP				1	—		F2/177
	11V6851	Bracket, angle, for bomb distributor mounting, inboard				1	L72		F2/178
	12V6851	Bracket, angle, for bomb distributor mounting, outboard				1	L72		F2/179
8212	1V7492	BRACKET, MOUNTING AND ANTI-VIBRATION PEDESTAL, FOR FUSE CONTROL UNIT, TYPE 2, GROUP				1	—	B	F2/180
		Spares for :—							
10AJ/159	—	Mounting, anti-vibration				4	—	B	F2/181
	7V6851	BRACKET, MOUNTING, POWER UNIT, GROUP				1	—		F2/182
	8V6851	BRACKET, MOUNTING, PRE-SELECTOR UNIT, GROUP				1	—		F2/183

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
					St. M.R.	
		1 2 3 4				
		BRACKETS AND MOUNTINGS, FOR BOMBING EQUIPMENT ON FRONT SPAR (V6851) (Cont'd)				
5D/1773	—	Tray, mounting, anti-vibration, for bomb distributor, type 12	1	—	A	F2/184
5D/	—	Tray, mounting, anti-vibration, for bomb distributor, type 11	1	—	A	F2/185
9601	8V6850	Bus bar, for relay at bomb arch 44-592" ...	1	—	C	F3/186
	15SS4204	Bush, ring lock, for cables at bomb arch 259-092"	2	—		
	1019V6384	CABLE, PITOT SWITCH TO TB. 586 (2J), GROUP	1	—		
	1021V6384	CABLE, BOMB DISTRIBUTOR, TYPE 12 TO TB. 587 (2J), GROUP	1	—		
	1070V6384	CABLE, AMPLIFIER TO 20P 394, GRP.	1	—		
	1071V6384	CABLE, POWER UNIT TO AMPLIFIER, GROUP	1	—		
	1080V6384	CABLE, PRE-SELECTOR TO 20P 400, GROUP	1	—		
	1081V6384	CABLE, PRE-SELECTOR TO 20P 401, GROUP	1	—		
	1082V6384	CABLE, PRE-SELECTOR TO DISTRIBUTOR, TYPE 12, GROUP	1	—		
	1238V6384	CABLE, 20P 386 TO BUTT CONNECTOR, FORWARD CARRIER, GROUP	1	—		
	1239V6384	CABLE, 20P 395 TO TB. 592 (2J) AND EARTH, GROUP	1	—		
	1465V6384	CABLE, 20P 389 TO FORWARD CARRIER, GROUP	1	—		
	1466V6384	CABLE, 20P 390 TO CENTRE CARRIER, GROUP	1	—		
	1482V6384	CABLE, 20P 485 TO PRE-SELECTOR, GROUP	1	—		
	1496V6384	CABLE, FRONT SPAR PLUG BREAK TO R.C.U., GROUP	1	—		
	1501V6384	CABLE, R.C.U. TO 16P AND EARTH, GROUP	1	—		
	1085V6384	CABLE, PRE-SELECTOR TO BOMB DISTRIBUTOR, GROUP	1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1503V6384	CABLE, R.C.U. TO TB. 570 (1J) AND TB. 574 (2J), GROUP				1	—		
	1512V6384	CABLE, TB. 587 (2J) TO EARTH, GROUP				1	—		
	1515V6384	CABLE, FORWARD MINE CARRIER TO RELAY 335 AND EARTH, GROUP				1	—		
	1535V6384	CABLE, CONTROL UNIT TO 16P AND EARTH, GROUP				1	—		
	1578V6384	CABLE, TB.s AT 43P TO PORT AND CENTRE BOMB CARRIER LOCK INDICATORS, GROUP				1	—		
	1579V6384	CABLE, TEST UNIT TO TB.s AT 43P, GROUP				1	—		
	1580V6384	CABLE, TB.s AT 43P TO STARBOARD BOMB CARRIER LOCK INDICATOR, GROUP				1	—		
	1020V6384	CABLE, BOMB DISTRIBUTOR TYPE 11 TO 2J 15, GROUP				1	—		
	2630V6384	CABLE, FUZING, CHARGING UNIT TO PROTECTIVE RELAY, GROUP				1	—		
	2631V6384	CABLE, FUZING, CHARGING UNIT TO TB.s 1303 AND 1304 (38J), GROUP				1	—		
	2632V6384	CABLE, FUZING, CHARGING UNIT TO TB.s 1304 AND 1305 (38J), GROUP				1	—		
	2677V6384	CABLE, RELAY 554 TO EARTH, GROUP				1	—		
	2834V6384	CABLE, No. 2 FUZING UNIT TO TB. 1304 (2J) AND EARTH, STARBOARD, GROUP				1	—		
	2835V6384	CABLE, No. 1 FUZING UNIT TO TB. 1304 (2J) AND EARTH, STARBOARD, GROUP				1	—		
	2836V6384	CABLE, No. 2 FUZING UNIT TO TB. 1304 (2J) AND EARTH, PORT, GROUP				1	—		
	2837V6384	CABLE, No. 1 FUZING UNIT TO TB. 1304 (2J) AND EARTH, PORT, GROUP				1	—		
	1083V6384	CABLE, PRE-SELECTOR TO BOMB DISTRIBUTOR, GROUP				1	—		
	1084V6384	CABLE, PRE-SELECTOR TO BOMB DISTRIBUTOR, GROUP				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1086V6384	CABLE, BOMB DISTRIBUTOR TYPES 11 TO 12, GROUP				1	—		
	1087V6384	CABLE, BOMB DISTRIBUTOR TYPES 11 TO 12, GROUP				1	—		
	2888V6384	CABLE, TB. 567 (1J) TO EARTH, GROUP				1	—		
	2963V6384	CABLE, RELAY 547 TO EARTH, GROUP				1	—		
	2964V6384	CABLE, RELAY 547 TO RELAY 554, GROUP				1	—		
	2965V6384	CABLE, CENTRE BOMB 815 TO TB.s 1303 AND 1304 (38J), GROUP				1	—		
	2966V6384	CABLE, CENTRE BOMB 816 TO TB.s 1304 AND 1305 (38J), GROUP				1	—		
	3024V6384	CABLE, RELAY 615 TO 16P, GROUP				1	—		
	3025V6384	CABLE, RELAY 615 TO EARTH, GROUP				1	—		
	3026V6384	CABLE, RELAY 615 TO TB. 1135, GROUP				1	—		
	3027V6384	CABLE, RELAY 615 TO TB. 587, GROUP				1	—		
	3095V6384	CABLE, PROTECTIVE, RELAY TO TEST SOCKET, GROUP				1	—		
	1088V6384	CABLE, BOMB DISTRIBUTOR, TYPES 11 TO 12, GROUP				1	—		
	1089V6384	CABLE, BOMB DISTRIBUTOR, TYPES 11 TO 12, GROUP				1	—		
	1137V6384	CABLE, BEARING TEMPERATURE AT TB. 745, GROUP				1	—		
	1224V6384	CABLE, 20P 388 TO 2J15, GROUP ...				1	—		
	1241V6384	CABLE, FRONT SPAR BRACKET 474 TO BOMB DISTRIBUTOR, TYPE 11, GROUP				1	—		
	1467V6384	CABLE, 20P 391 TO BOMB BAY EQUIPMENT, AFT CARRIER, GROUP				1	—		
	1499V6384	CABLE, FRONT SPAR BRACKET 483 TO BOMB BAY EQUIPMENT R.C.U., GROUP				1	—		
	1585V6384	CABLE, FORMER 151 TO TB. 830, GROUP				1	—		
	1584V6384	CABLE, FORMER 151 TO TB. 830, GROUP				1	—		

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
10849	AT62615	CONNECTOR, BUTTING, 2-WAY, AFT OF BOMB ARCHES 44-592', 151', 919' AND 8259-092', PORT, GROUP				3	—	B	F3/192
	AT38798	Spares for :— CABLE, GROUP				1	—		F3/193
5E/3041	—	Spares for :— Cable, unipren 18 x 4"				2	—	C	
10H/0560130	—	Plug, panel, 4-way, Mk. 4				1	—	B	
	AT38549	Cover, main housing				1	L72		F3/194
	AT62616	HOUSING, CONNECTOR, GRP.				1	—		F3/195
	AT38794	Housing, connector				1	L65		F3/196
5D/1846	—	Distributor, bomb, type 11, on front spar				1	—	A	F3/197
5D/1844	—	Distributor, bomb, type 12, on front spar				1	—	A	F3/198
		MOUNTING, RELEASE RELAY UNIT (V9210)							
		Spares for :—							
28D/9436920	A25/1C	Bolt, hex. hd, 2 BA, attachment of relay unit				4	—	C	
28M/10288	AGS2001/C1	Nut, stiff, 2 BA				4	—	C	
	1V9198	UNIT, RELAY, RELEASE, GROUP				1	—	C	F3/199
		Spares for :—							
7754	4V9198	BOARD, RESISTOR, MOUNTING, GROUP				1	—	C	F3/200
		Spares for :—							
10W/O113300	—	Resistor, type RWV4-J				1	—	C	F3/201
7752	5V9198	BOX, LESS EQUIPMENT, GRP.				1	—	C	F3/202
		Spares for :—							
7753	7V9131	COVER, BOX, GROUP				1	—	C	F3/203
	1V9576	LOOM, CABLE, GROUP...				1	—		
	PLESSEY								
5CW/5863	7CZ97225/1	Switch, relay				1	—	A	F3/204
28W/9419404	SP16/C	Washer, 2 BA				4	—	C	
		MOUNTING, STOWAGE PLUG BRACKET ON INTERCOSTAL BETWEEN BOMB ARCHES 123' AND 151' (V9036)							
		Spares for :—							
11701	4V9036	PANEL, REMOVABLE, GROUP				1	—	C	F3/205
	CANNON								
	2182/10	Receptacle, dummy, top				2	—		F3/206
	CANNON								
	2182/11	Receptacle, dummy, bottom				4	—		F3/207
	CANNON								
	2182/5	Receptacle, dummy, on removable panel				1	—		F3/208
	PLESSEY								
10H/	CZ49182	Outlet, plug, on front spar web				1	—	B	F3/209

ELECTRICAL INSTALLATION

BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1V6331	PANEL, BOMB GEAR DISTRIBUTION, 20P AT BOMB ARCH 201-367", GROUP				1	—		F3/210
		Spares for :—							
26FP/8735	1V5650	Block, terminal				10	—	C	F3/4
	8V5830	Bracket, for relay				2	L72		
	791V6374	Label, " TB. 791 "				1	L59		
	792V6374	Label, " TB. 792 "				1	L59		
	793V6374	Label, " TB. 793 "				1	L59		
	794V6374	Label, " TB. 794 "				1	L59		
	795V6374	Label, " TB. 795 "				1	L59		
	796V6374	Label, " TB. 796 "				1	L59		
	797V6374	Label, " TB. 797 "				1	L59		
	798V6374	Label, " TB. 798 "				1	L59		
	799V6374	Label, " TB. 799 "				1	L59		
	800V6374	Label, " TB. 800 "				1	L59		
	3V6331	LID, PANEL, GROUP...				1	—		F3/211
		Spares for :—							
28FP/154	AS/30	Fastener				6	—	C	
28FP/9425771	GA5/312	Grommet				6	—	C	
	1V6531	LOOM, CABLE, GROUP				1	—		
	1V6332	PANEL, LESS EQUIPMENT, GROUP				1	—		
5X/6622	14V5650	Socket, double, for TB.s				12	—	C	F3/67
5X/6623	15V5650	Socket, single, for TB.s				26	—	C	F3/17
5CW/3944	—	Switch, relay, type S3				1	—	A	F3/98
5CY/455	—	Plug, type R, on bomb arch 95"				4	—	B	F3/212
	PLESSEY CZ56735	Plug, on front spar web				1	—	C	F3/213
	PLESSEY Z24923	Plug, shell, at bomb arch 151-919"				2	—	C	F1/214
5X/7005	—	Pre-selector, type C, on front spar				1	—	A	F2/215
5D/1853	—	Attachments :—Pre-selector. Ref. 5D/1853							
	A25/1C	Bolt, hex. hd, 2 BA				2	—	C	
28D/9436920	A25/7C	Bolt, hex. hd, 2 BA				2	—	C	
28D/12514	3V6850	Spacer				4	—		F2/216
	2V6850	Shield, nut, for cleats on front spar				4	—		F2/217
5X/6622	14V5650	Socket, double, for TB. at bomb arch 151-919"				4	—	C	F1/67
	18V6850	Spacer, plug attachment at bomb arch 95"				2	BSS972		
	18SS3951	Stud, for cleats on front spar				12	—		F2/218
5CW/4620	—	Switch, relay, type T at bomb arch 44-592" and on starboard intercostal, aft of bomb arch 123-615"				3	—	A	F3/219
5CW/5500	—	Switch, relay, type 10B, No. 1, on starboard intercostal, aft of bomb arch 123-015"				1	—	A	F3/220
10173	1/SS4088	Terminal, earth, at bomb arch 123-015"				2	—	C	F2/221
5D/1964	—	Unit, E.P. relay, on front spar (service fit)				—	—	A	F2/222
5D/1963	—	Unit, fuze charging, on front spar				1	—	A	F2/222

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
5X/9008 26FP/8735 4621		WIRING AND ELECTRICAL EQUIPMENT FOR ADDITIONAL SERVICES—R.C.M. (V9813)							
			Spares for :—						
		1V5650	Adaptor, lug, 4-way, 19-amp ...				1	—	C C C
		51SS4204	Block, terminal ...				3	—	
			Bush, ringlock ...				1	—	
		3347V6384	CABLE, 1J14 TO 26P39, GROUP ...				1	—	
		3348V6384	CABLE, 26P12 TO 84P, 68P AND RELAY 546, GROUP				1	—	
		3349V6384	CABLE, 1J14 TO TB. 1340, GROUP ...				1	—	
		299V6386	CABLE, No. 2 SERVO TO TB. 85, GRP.				1	—	
		3224V6384	CABLE, 68P TO 26P, GROUP ...				1	—	
		3342V6384	CABLE, 23-15 TO 25P-1, GROUP ...				1	—	
		3350V6384	CABLE, TB. 1342 TO 68P, GROUP ...				1	—	
		3364V6384	CABLE, LINK TO 23P, GROUP ...				1	—	
		3365V6384	CABLE, LINK TO 23P, GROUP ...				1	—	
		3373V6384	CABLE, 26P-38 TO 84P, GROUP ...				1	—	
		3376V6384	CABLE, 16P-18 TO TB. 1348, GROUP ...				1	—	
		3472V6384	CABLE, 92P-1008 TO TB. 599, TB. 1348 EARTH AND No. 2 PD. AMPLIFIER, GRP.				1	—	
	3473V6384	CABLE, No. 2 ALTERNATOR SWITCH TO TB. 1348 AND EARTH, GROUP				1	—		
	3474V6384	CABLE, 16P TO TB. 1348, GROUP ...				1	—		

**ELECTRICAL INSTALLATION
BOMB BAY**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
					Sc. M.R.	
		1 2 3 4				
	3475V6384	CABLE, TB. 598 TO RESISTOR, GROUP	1	—		
	3476V6384	CABLE, TB. 599 TO RESISTOR, GROUP	1	—		
	3477V6384	CABLE, RESISTOR TO 26P, GROUP ...	1	—		
	5921V6384	CABLE, 23P-2 TO AMPLIFIER, FOLLOW UP RESISTOR, EARTH AND TB. 879, GROUP	1	—		
	5981V6384	CABLE, 26P-26 TO RELAY 577 SPRING STRUT. MICRO SWITCH AND RELAY 657, GROUP	1	—		
	6068V6384	CABLE, RPB. 634 TO TB. 598 AND TB. 599, GROUP	1	—		
	6069V6384	CABLE, 62P-835 TO TB. 599, TB. 598, TB. 851, EARTH AND No. 1 PD. AMPLIFIER, GROUP	1	—		
	6070V6384	CABLE, 62P-836 TO FORMER 44 AND 26P33, GROUP	1	—		
	6071V6384	CABLE, RESISTOR TO 26P34, GROUP	1	—		
	6072V6384	CABLE, 22P-6 TO No. 2 AMPLIFIER A4, GROUP	1	—		
	6073V6386	CABLE, TB. 85 TO 26P-19, GROUP ...	1	—		
	6074V6386	CABLE, No. 1 SERVO TO EARTH, GRP.	1	—		
	6166V6384	CABLE, 68P TO TB. 1340, GROUP...	1	—		
	6168V6384	CABLE, 26P-11 TO 14P AND 4P, GR	1	—		

ELECTRICAL INSTALLATION
BOMB BAY

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		WIRING AND ELECTRICAL EQUIPMENT FOR ADDITIONAL SERVICES—R.C.M. (V9813) (Cont'd)							
	4V9813	Spares for:— Conduit, 22 swg. A1 Alloy, 1 1/8" o/d x 14 1/4" lg				1	—		
		CONDUIT TUBES OVER JET PIPES (V3776) (For Breakdown See:—Fuselage—Centre Section)							
	58V6354	Cover, resistor				1	—		
	57V6354	Insulator				1	—		
		PANEL, RELAY 92P (V10133)							
	3V10134	Spares for:— COVER, PANEL, GROUP				1	—	C	
28FP/146	AA/25	Spares for:— Fastener, dzus				4	—	C	
28FP/9430915	GA4/250	Grommet				4	—	C	
	1V10200	LOOM, CABLE, GROUP				1	—		
	1V10134	PANEL, GROUP				1	—	C	
	4V10134	Insulator				1	—		
	GEC M.1456	Relay				1	—		
10F/0119239	—	Relay				1	—	B	
5X/6623	V0/40/10	Resistor, 40W, 10 ohms				2	—		
	15V5650	Socket, single				42	—	C	
	12V6361	Thermostat, strap				1	—		
	18V6361	Thermostat				1	—		
		TROUGHING IN BOMB BAY, PORT (1V9775)							
		TROUGHING IN BOMB BAY, STARBOARD (2V9775)							
		(For Breakdown See:—Fuselage — Centre Section)							

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

