

ELECTRICAL INSTALLATION

Page FG. 1

FUSELAGE CENTRE PORTION—UNDER AIR INTAKES

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		ELECTRICAL INSTALLATION, FUSELAGE CENTRE PORTION, UNDER AIR INTAKES, PORT AND STARBOARD (9 & 10V6360)							
		Spares for :—							
	215V6384	CABLE, 16P TO 32P, GROUP				1	—		
	216V6384	CABLE, 16P TO 33P, GROUP				1	—		
	269V6384	CABLE, INCHING CONTROL TO TB. PANEL, GROUP				1	—		
	725V6384	CABLE, RELAY 229 TO TB. 691, GROUP				1	—		
	728V6384	CABLE, TB. TO EARTH, GROUP ...				1	—		
	748V6384	CABLE, HOT AIR ACTUATOR TO TBs. 694 AND 703, GROUP				1	—		
	749V6384	CABLE, INCHING CONTROL TO TB. 703, GROUP				1	—		
	750V6384	CABLE, COLD AIR ACTUATOR TO TBs. 694, 703 AND 706, GROUP				1	—		
	751V6384	CABLE, EXT. FLAP TO TBs. 694 AND 706, GROUP				1	—		
	769V6384	CABLE, TO TB. 702, GROUP				1	—		
	770V6384	CABLE, TB. 703 TO MICRO SWITCH, GROUP				1	—		
	771V6384	CABLE, TB. 708 TO MICRO SWITCH, GROUP				1	—		
	772V6384	CABLE, TO TBs. 692, 708 AND 709, GROUP				1	—		
	773V6384	CABLE, TO TBs. 692 AND 709, GROUP				1	—		
	774V6384	CABLE, TO TB. 708, GROUP				1	—		
	775V6384	CABLE, FOLLOW-UP RESISTOR TO TB. 707, GROUP				1	—		
	776V6384	CABLE, HOT AIR ACTUATOR TO TBs. 692 AND 708, GROUP				1	—		
	1031V6384	CABLE, TB. 694 TO EARTH, GROUP				1	—		
	1154V6384	CABLE, 33P TO EARTH, GROUP ...				1	—		
	1212V6384	CABLE, TO TBs. 692 AND 708, GROUP				1	—		

ELECTRICAL INSTALLATION
FUSELAGE CENTRE PORTION—UNDER AIR INTAKES

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1215V6384	CABLE, 32P TO EARTH, GROUP ...				1	—		
	1220V6384	CABLE, 30P TO EARTH, GROUP ...				1	—		
	1221V6384	CABLE, 31P TO EARTH, GROUP ...				1	—		
	1540V6384	CABLE, HEATER SWITCH TO TB. 710, GROUP				1	—		
	1541V6384	CABLE, HEATER SWITCH TO TB. 712, GROUP				1	—		
	2111V6384	CABLE, 13P TO TB. 706, GROUP ...				1	—		
	2343V6384	CABLE, ENGINE SEALING BULKHEAD PLUG 738 TO TB. 1176, GROUP				1	—		
	2346V6384	CABLE, ENGINE SEALING BULKHEAD PLUG 741 TO TB. 1180, GROUP				1	—		
	2581V6384	CABLE, TB. 467 TO TB. 469, GROUP ...				1	—		
	2582V6384	CABLE, TB. 475 TO TB. 476, GROUP ...				1	—		
	2583V6384	CABLE, TB. 483 TO TB. 484, GROUP ...				1	—		
	2584V6384	CABLE, TB. 491 TO TB. 492, GROUP ...				1	—		
	2860V6384	CABLE, 30P TO RESISTOR, GROUP ...				1	—		
	2861V6384	CABLE, 31P TO RESISTOR, GROUP ...				1	—		
	2862V6384	CABLE, 32P TO RESISTOR, GROUP ...				1	—		
	2863V6384	CABLE, 33P TO RESISTOR, GROUP ...				1	—		
	3117V6384	CABLE, No. 1 ENGINE SEALING BULKHEAD TO TB. 470, GROUP (Mod. 621)				1	—		
	5123V6384	CABLE, ACTUATOR TO 31P, GROUP				1	—		
	3118V6384	CABLE, No. 2 ENGINE SEALING BULKHEAD TO TB. 478, GROUP (Mod. 621)				1	—		
	5124V6384	CABLE, ACTUATOR TO 32P, GROUP				1	—		
	3119V6384	CABLE, No. 3 ENGINE SEALING BULKHEAD TO TB. 486, GROUP (Mod. 621)				1	—		
	5126V6384	CABLE, No. 1 FUEL COCK TO 30P, GROUP				1	—		

ELECTRICAL INSTALLATION
FUSELAGE CENTRE PORTION—UNDER AIR INTAKES

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	3120V6384	CABLE, No. 4 ENGINE SEALING BULK-HEAD TO TB. 494, GROUP (Mod. 621)				1	—		
	5127V6384	CABLE, No. 3 FUEL COCK TO 32P, GROUP				1	—		
	5128V6384	CABLE, No. 3 FUEL COCK TO 32P, GROUP				1	—		
	5129V6384	CABLE, No. 4 FUEL COCK TO 33P, GROUP				1	—		
	3521V6384	CABLE, STARBOARD ANTI-COLLISION LAMP TO EARTH, GROUP				1	—		
	3522V6384	CABLE, PORT ANTI-COLLISION LAMP TO EARTH, GROUP				1	—		
	3559V6384	CABLE, 30P TO No. 1 ENGINE PLUG, GROUP				1	—		
	3560V6384	CABLE, 30P TO No. 2 ENGINE PLUG, GROUP				1	—		
	3561V6384	CABLE, 30P TO No. 3 ENGINE PLUG, GROUP				1	—		
	3562V6384	CABLE, 30P TO No. 4 ENGINE PLUG, GROUP				1	—		
	3567V6384	CABLE, No. 1 ENGINE BAY TO No. 1 ENGINE PLUG, GROUP				1	—		
	3568V6384	CABLE, No. 1 ENGINE BAY TO No. 1 ENGINE PLUG, GROUP				1	—		
	3569V6384	CABLE, No. 2 ENGINE BAY TO No. 2 ENGINE PLUG, GROUP				1	—		
	3570V6384	CABLE, No. 2 ENGINE BAY TO No. 2 ENGINE PLUG, GROUP				1	—		
	3571V6384	CABLE, No. 3 ENGINE BAY TO No. 3 ENGINE PLUG, GROUP				1	—		
	3572V6384	CABLE, No. 3 ENGINE BAY TO No. 3 ENGINE PLUG, GROUP				1	—		
	3573V6384	CABLE, No. 4 ENGINE BAY TO No. 4 ENGINE PLUG, GROUP				1	—		
	3574V6384	CABLE, No. 4 ENGINE BAY TO No. 4 ENGINE PLUG, GROUP				1	—		

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

