

**ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		ELECTRICAL INSTALLATION IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION (Y6355)							
		Spares for :—							
5J/3303						5	—	A	F13/2
26FP/8735	1V5650					1	—	C	
4247	V6691					1	—	C	
		BLANKET, THERMAL, 96V. BATTERY (2Z7412)							
		Spares for :—							
1994	8Z7412					1	—	C	F14/3
1995	9Z7412					1	—	C	F14/4
1996	10Z7412					1	—	C	F14/5
1997	11Z7412					1	—	C	F14/6
1998	12Z7412					1	—	C	F14/7
		BLANKET, SIDE, THERMAL, 24V. ACCUMULATOR CONTAINER (3Z7562)							
		Spares for :—							
1991	5Z7561					1	—	C	F14/8
1992	6Z7561					1	—	C	F14/9
5CZ/4056	—					7	—	C	F14/10
5CZ/1983	ROTAX 16337/1					5	—	C	F14/11
5CZ/1793	ROTAX 16936/1					1	—	C	F14/12
	ROTAX N118232					1	—	C	
	5V6099					1	—		F13/13
26FP/8735	1V5650					3	—	C	F14/14
	6V6098					1	—		
	283V6374					1	—		
	284V6374					1	—		
	285V6374					1	—		
	6V6099					1	—		F13/15
28FP/144	A3/25					4	—	C	
28FP/307	GA3/175					4	—	C	
5X/2795						4	—	C	
5X/6623	15V5650					15	—	C	
	6176V6384					1	—		
		CABLE, 26P-13, RUDDER AUXILIARY MOTOR TO MAIN RUDDER MOTOR, GROUP							

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
	5846V6384	CABLE, 26P TO 2J, GROUP (Mod. 633)				1	—		
	143V6384	CABLE, 26P 23 TO RUDDER AND TRANSMITTER, LAMP, TB. 597, RELAY 259 AND THERMOSTAT, GROUP				1	—		
	144V6384	CABLE, TB. 433 (26P) TO RELAYS 51 AND 52 AT P.F.C. CONTROL PANEL, GROUP				1	—		
	182V6384	CABLE, No. 1 LAMP TO No. 2 LAMP, GROUP				1	—		
	1068V6384	CABLE, RELAY 259 TO EARTH, GROUP				1	—		
	2547V6384	CABLE, 25P, TB. 418 TO TB. 407, GROUP				1	—		
	5444V6384	CABLE, 26P-38 TO TB. 454 AND FUSES 516 AND 515, GROUP				1	—		
	5845V6384	CABLE, TB. 447 TO RELAYS 154 AND 157, GROUP				1	—		
	200V6384	CABLE, 26P TO LAMP, GROUP				1	—		
	221V6384	CABLE, No. 2 LAMP TO No. 3 LAMP, GROUP				1	—		
	277V6384	CABLE, RELAY 64 (28P) TO TB. 655, GROUP				1	—		
	279V6384	CABLE, RELAY 68 (28P) TO TB. 655, GROUP				1	—		
	281V6384	CABLE, RELAY 61 (28P) TO TB. 659, GROUP				1	—		
	283V6384	CABLE, RELAY 63 (28P) TO TB. 659, GROUP				1	—		
	287V6384	CABLE, RELAY 56 (28P) TO TB. 657, GROUP				1	—		
	289V6384	CABLE, RELAY 60 (28P) TO TB. 657, GROUP				1	—		
	291V6384	CABLE, RELAY 53 (28P) TO TB. 661, GROUP				1	—		
	293V6384	CABLE, RELAY 57 (28P) TO TB. 661, GROUP				1	—		
	295V6384	CABLE, RELAY 44 (28P) TO TB. 663, GROUP				1	—		

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	296V6384	CABLE, RELAY 44 (28P) TO TB. 663, GROUP				1	—		
	297V6384	CABLE, RELAY 47 (28P) TO TB. 664, GROUP				1	—		
	298V6384	CABLE, RELAY 47 (28P) TO TB. 664, GROUP				1	—		
	299V6384	CABLE, RELAY 63 (28P) TO TB. 665, GROUP				1	—		
	300V6384	CABLE, No. 1 VOLTAGE REGULATOR (6-2), GROUP				1	—		
	301V6384	CABLE, No. 2 VOLTAGE REGULATOR (6-2), GROUP				1	—		
	302V6384	CABLE, No. 3 VOLTAGE REGULATOR (6-2), GROUP				1	—		
	303V6384	CABLE, No. 4 VOLTAGE REGULATOR (6-2), GROUP				1	—		
	304V6384	CABLE, No. 1 VOLTAGE REGULATOR TO EARTH, GROUP				1	—		
	305V6384	CABLE, No. 2 VOLTAGE REGULATOR TO EARTH, GROUP				1	—		
	306V6384	CABLE, No. 3 VOLTAGE REGULATOR TO EARTH, GROUP				1	—		
	307V6384	CABLE, No. 4 VOLTAGE REGULATOR TO EARTH, GROUP				1	—		
	324V6384	CABLE, RELAY 67 (28P) TO TB. 665, GROUP				1	—		
	325V6384	CABLE, RELAY 62 (28P) TO TB. 670, GROUP				1	—		
	328V6384	CABLE, RELAY 66 (28P) TO TB. 670, GROUP				1	—		
	329V6384	CABLE, RELAY 55 (28P) TO TB. 667, GROUP				1	—		
	331V6384	CABLE, RELAY 59 (28P) TO TB. 667, GROUP				1	—		
	333V6384	CABLE, RELAY 54 (28P) TO TB. 671, GROUP				1	—		
	334V6384	CABLE, RELAY 259 TO CIRCUIT-BREAKER, GROUP				1	—		
	335V6384	CABLE, RELAY 58 (28P) TO TB. 671, GROUP				1	—		

**ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
					M.R.	
		1 2 3 4				
	5891V6384	CABLE, FUSE 434 (24P) TO RELAY 45 (28P), GROUP (Mod. 697)	1	—		
	5894V6384	CABLE, FUSE 448 (25P) TO RELAY 54 (28P), GROUP (Mod. 697)	1	—		
	5895V6384	CABLE, FUSE 596 (25P) TO RELAY 55 (28P), GROUP (Mod. 697)	1	—		
	364V6384	CABLE, FUSE 454 (25P) TO RELAY 62 (28P), GROUP	1	—		
	3245V6384	CABLE, 24P TO 25P, RELAY 657 & TB. 1340, GROUP	1	—		
	3246V6384	CABLE, RELAY 669, GROUP	1	—		
	3247V6384	CABLE, TBs. 462 AND 464 TO RELAYS 61, 64, 65, AND 68, GROUP	1	—		
	3248V6384	CABLE, TBs. 462 AND 464 TO RELAYS 53, 56, 57 AND 60, GROUP	1	—		
	3249V6384	CABLE, RELAY 670 TO 25P, GROUP	1	—		
	3250V6384	CABLE, RELAY 670 TO RELAY 672, GROUP	1	—		
	5892V6384	CABLE, FUSE 449 (25P) TO RELAY 63 (28P), GROUP (Mod. 697)	1	—		
	5890V6384	CABLE, FUSE 453 (25P) TO RELAY 46 (28P), GROUP (Mod. 697)	1	—		
	367V6384	CABLE, FUSE 435 (24P) TO RELAY 58 (28P), GROUP	1	—		
	368V6384	CABLE, FUSE 436 (24P) TO RELAY 59 (28P), GROUP	1	—		
	5889V6384	CABLE, FUSE 433 (24P) TO RELAY 66 (28P), GROUP (Mod. 697)	1	—		
	370V6384	CABLE, FUSE 437 (24P) TO RELAY 67 (28P), GROUP	1	—		
	371V6384	CABLE, TB. 464 (28P) TO EARTH, GROUP	1	—		
	372V6384	CABLE, TB. 646 (28P) TO EARTH, GROUP	1	—		
	374V6384	CABLE, TB. 465 (28P) TO EARTH, GROUP	1	—		

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	537V6384	CABLE, RELAY (L1) TO 96V. ACCUMULATOR, GROUP				1	—		
	538V6384	CABLE, ACCUMULATOR TO TERMINAL, GROUP (Pre-Mod. 1390)				1	—		
	539V6384	CABLE, AT ACCUMULATOR, GROUP				1	—		
	540V6384	CABLE, AT ACCUMULATOR, GROUP				1	—		
	541V6384	CABLE, AT ACCUMULATOR, GROUP				1	—		
	542V6384	CABLE, AT ACCUMULATOR, GROUP (Pre-Mod. 1390)				1	—		
	5930V6384	CABLE, 112V. PLUG TO RELAY 676, GROUP (Mod. 697)				1	—		
	557V6384	CABLE, 24V. ACCUMULATOR TO TERMINAL, GROUP				1	—		
	558V6384	CABLE, 24V. ACCUMULATOR TO TERMINAL, GROUP				1	—		
	559V6384	CABLE, 24V. ACCUMULATOR TO EMERGENCY BUSBAR, GROUP				1	—		
	3253V6384	CABLE, RELAY 670 TO 25P, GROUP ...				1	—		
	3254V6384	CABLE, RELAY 672 TO 25P, GROUP ...				1	—		
	3255V6384	CABLE, RELAY 670 TO 25P, GROUP ...				1	—		
	3256V6384	CABLE, RELAY 672 TO 25P, GROUP ...				1	—		
	3257V6384	CABLE, RELAY 669 TO 25P, GROUP ...				1	—		
	3258V6384	CABLE, RELAY 671 TO 25P, GROUP ...				1	—		
	3259V6384	CABLE, RELAY 669 TO 670, GROUP ...				1	—		
	3260V6384	CABLE, RELAY 669, GROUP ...				1	—		
	562V6384	CABLE, RELAY 154 TO EARTH, GROUP				1	—		
	563V6384	CABLE, RELAY (EXP. 4299) TO EARTH, GROUP				1	—		
	564V6384	CABLE, RELAY (EXP. 4299) TO RELAY 155, GROUP				1	—		
	565V6384	CABLE, RELAY 154 TO RELAY 155, GROUP				1	—		
	570V6384	CABLE, RELAY 154 TO RELAY 155, GROUP				1	—		
	573V6384	CABLE, RELAY 154 TO RELAY 155, GROUP				1	—		

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
		1	2	3	4			St. M.R.	
	535IV6384	CABLE, RELAY 155 TO RELAY 156, GROUP (Mod. 195)				1	—		
	575V6384	CABLE, RELAY 154 TO RELAY 156, GROUP				1	—		
	577V6384	CABLE, RELAY 156 TO RELAY 157, GROUP				1	—		
	584V6384	CABLE, RELAY 157 TO RELAY 158, GROUP				1	—		
	585V6384	CABLE, RELAY 158 TO EARTH, GROUP				1	—		
	589V6384	CABLE, RELAY 156 TO RELAY 157, GROUP				1	—		
	592V6384	CABLE, RELAY 157 TO RELAY 158, GROUP				1	—		
	593V6384	CABLE, RELAY 157 TO RELAY 28V., GROUP				1	—		
	594V6384	CABLE, RELAY 157 TO RELAY 158, GROUP				1	—		
	595V6384	CABLE, RELAY 158 TO 28V. RELAY, GROUP				1	—		
	596V6384	CABLE, 28V. RELAY TO EARTH, GROUP				1	—		
	3261V6384	CABLE, RELAY 671 TO 672, GROUP ...				1	—		
	3262V6384	CABLE, RELAY 671, GROUP				1	—		
	3264V6384	CABLE, RELAY 673 TO Nos. 1 AND 2 RESISTOR GROUP				1	—		
	3265V6384	CABLE, RELAY 676 TO 673, GROUP ...				1	—		
	3266V6384	CABLE, RELAY 674 TO 669, GROUP ...				1	—		
	3267V6384	CABLE, RELAY 675 TO 674, GROUP ...				1	—		
	3268V6384	CABLE, RELAY 675 GROUP				1	—		
	815V6384	CABLE, 26P TO No. 1 LAMP AND EARTH, GROUP				1	—		
	869V6384	CABLE, RELAY 260 (3-1), GROUP ...				1	—		
	870V6384	CABLE, RELAY 260 (5-7), GROUP ...				1	—		
	882V6384	CABLE, RELAY 260 (1a-7a), GROUP ...				1	—		
	1065V6384	CABLE, RELAY 260 (5a-3a), GROUP ...				1	—		
	1123V6384	CABLE, No. 1 LAMP TO No. 2 LAMP, GROUP				1	—		
	1247V6384	CABLE, SUPPRESSOR TO MOTOR, GROUP				1	—		
	1789V6384	CABLE, FUSE 494 (25P) TO FUSE 591 (24P), GROUP				1	—		
	1810V6384	CABLE, TB. 405 (24P) TO EARTH, GRP.				1	—		
	1811V6384	CABLE, VOLTAGE REGULATOR TO EARTH, GROUP				1	—		

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	1812V6384	CABLE, TB. 410 (24P) TO EARTH, GRP.				1	—		
	1813V6384	CABLE, No. 2 VOLTAGE REGULATOR TO EARTH, GROUP				1	—		
	1814V6384	CABLE, TB. 415 (25P) TO EARTH, GRP.				1	—		
	1815V6384	CABLE, No. 3 VOLTAGE REGULATOR TO EARTH, GROUP				1	—		
	1816V6384	CABLE, TB. 420 (25P) TO EARTH, GRP.				1	—		
	1817V6384	CABLE, No. 4 VOLTAGE REGULATOR TO EARTH, GROUP				1	—		
	1821V6384	CABLE, FUSE 601 (25P) TO TB. 407, GROUP				1	—		
	1822V6384	CABLE, FUSE 602 (25P) TO TB. 412 (24P), GROUP				1	—		
	1823V6384	CABLE, FUSE 601 (25P) TO 96 VOLT ACCUMULATOR, GROUP				1	—		
	1877V6384	CABLE, DOOR ACTUATOR TO TB. 867 (29P) AND EARTH, GROUP				1	—		
	1932V6384	CABLE, STRIPPER UNIT TO 6J, GROUP				1	—		
	1933V6384	CABLE, STRIPPER UNIT TO 6J, GROUP				1	—		
	1938V6384	CABLE, STRIPPER UNIT TO SUPPRESSOR, GROUP				1	—		
	1939V6384	CABLE, STRIPPER UNIT TO SUPPRESSOR, GROUP				1	—		
	2530V6384	CABLE, STARTER RELAY TO RELAY 154, GROUP				1	—		
	3269V6384	CABLE, RELAY 676 TO 675, GROUP ...				1	—		
	3270V6384	CABLE, RELAY 673 TO 674, GROUP ...				1	—		
	3271V6384	CABLE, RELAY 673 TO 675, GROUP ...				1	—		
	3126V6384	CABLE, 67P 940 TO 24V. AND 96V. BATTERY SHUNTS, GROUP (Mod. 621) (Pre-Mod. 1044)				1	—		
	6178V6384	CABLE, 67P 940 TO BATTERY SHUNTS, GROUP (Mod. 1044)				1	—		
	3127V6384	CABLE, 67P 941 TO 24V. AND 96V. BATTERY SHUNTS, GROUP (Mod. 621) (Pre-Mod. 1044)				1	—		
	6179V6384	CABLE, 67P 941 TO BATTERY SHUNTS, GROUP (Mod. 1044)				1	—		
	3128V6384	CABLE, 96V. SHUNT TO EARTH, GRP. (Mod. 621)				1	—		
	3129V6384	CABLE, 24V. SHUNT TO EARTH, GRP. (Mod. 621)				1	—		

**ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate
		1	2	3	4			St. M.R.	and Illust'n No.
	5887V6384	CABLE, TBs. AND FUSES AT 26P TO RELAYS AT 28P, GROUP (Mod. 697)				1	—		
	5869V6384	CABLE, RELAY 685 TO 96V. SHUNT, GROUP (Mod. 621)				1	—		
	2536V6384	CABLE, BUSBAR TO BUSBAR, GROUP				1	—		
	3094V6384	CABLE, RELAY 155 TO RELAY 157, GROUP (Mod. 633)				1	—		
	5043V6384	CABLE, TBs. 405 AND 410 (25P) TO EARTH, GROUP				1	—		
	5044V6384	CABLE, TBs. 415 AND 420 (25P) TO EARTH, GROUP				1	—		
	5925V6384	CABLE, BUSBAR TO RELAY, GROUP (Mod. 697)				1	—		
	5066V6384	CABLE, RELAY 260 TO THERMOSTAT SWITCH, GROUP				1	—		
	5067V6384	CABLE, FUSE 444 (24P) TO RELAY 260, GROUP				1	—		
	5069V6384	CABLE, RELAY 260 TO HEATER, GROUP				1	—		
	5096V6384	CABLE, STARTER PANEL TO EARTH, GROUP				1	—		
	3273V6384	CABLE, RELAY 676 TO TB. 880, GROUP				1	—		
	3274V6384	CABLE, 24P TO RELAY 676, GROUP ...				1	—		
	3275V6384	CABLE, 24P TO RELAY 676, GROUP ...				1	—		
	3277V6384	CABLE, 28V. EARTH TO RELAY 677, GROUP				1	—		
	3278V6384	CABLE, 28V. EARTH TO RELAY 678, GROUP				1	—		
	3279V6384	CABLE, 28V. EARTH TO RELAY 673, GROUP				1	—		
	3280V6384	CABLE, RELAY 676 TO 112V. EARTH, GROUP				1	—		
	3281V6384	CABLE, 112V. EARTH TO RELAY 675, GROUP				1	—		
	3282V6384	CABLE, 112V. EARTH TO RELAY 674, GROUP				1	—		
	3283V6384	CABLE, RELAY 673 TO 24P, GROUP ...				1	—		
	3284V6384	CABLE, 24P TO RELAY 677, GROUP				1	—		
	3285V6384	CABLE, RELAY 677 TO RELAY 676 ...				1	—		
	3286V6384	CABLE, RELAY 678 TO RELAY 677 ...				1	—		
	3287V6384	CABLE, RELAY 671, GROUP ...				1	—		
	3288V6384	CABLE, RELAY 669 TO 28V. EARTH, GROUP				1	—		

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	3289V6384	CABLE, RELAY 671 TO 28V. EARTH, GROUP				1	—		
	3290V6384	CABLE, RELAY 671 TO RELAY 681, GROUP				1	—		
	3291V6384	CABLE, RELAY 681 TO RELAY 673, GROUP				1	—		
	3292V6384	CABLE, RELAY 674 TO RELAY 681, GROUP				1	—		
	3293V6384	CABLE, RELAY 681 TO RELAY 673, GROUP				1	—		
	3294V6384	CABLE, No. 1 RESISTOR TO RELAY 669, GROUP				1	—		
	3295V6384	CABLE, No. 2 RESISTOR TO RELAY 671, GROUP				1	—		
	3296V6384	CABLE, 25P TO RELAY 669, GROUP ...				1	—		
	3297V6384	CABLE, RELAY 669, GROUP ...				1	—		
	3298V6384	CABLE, RELAY 669, GROUP ...				1	—		
	3300V6384	CABLE, 25P TO RELAY 671, GROUP ...				1	—		
	3301V6384	CABLE, RELAY 671, GROUP ...				1	—		
	3302V6384	CABLE, RELAY 671, GROUP ...				1	—		
	3304V6384	CABLE, RELAY 681 TO 28V. EARTH, GROUP				1	—		
	3305V6384	CABLE, 96V. ACCUMULATOR TO RELAY 685, GROUP				1	—		
	3307V6384	CABLE, 24P, ADJACENT TO RELAY 670, GROUP				1	—		
	3308V6384	CABLE, 24P, ADJACENT TO RELAY 672, GROUP				1	—		
	3313V6384	CABLE, No. 2 VOLTMETER TO 24P SOCKET, GROUP				1	—		
	3316V6384	CABLE, No. 1 VOLTMETER TO 24P SOCKET, GROUP				1	—		
	3318V6384	CABLE, 24P TO 25P, GROUP ...				1	—		
	3319V6384	CABLE, No. 3 GENERATOR TRIM TO No. 3V. REGULATOR, GROUP				1	—		

**ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	3320V6384	CABLE, No. 3 VOLTMETER TO 25P SOCKET, GROUP				1	—		
	3323V6384	CABLE, STR PANEL TO TB. 880, GROUP				1	—		
	3324V6384	CABLE, TB. 880 TO RELAY 678, GROUP				1	—		
	3325V6384	CABLE, No. 4 GENERATOR TRIM TO No. 4 REGULATOR, GROUP				1	—		
	3326V6384	CABLE, No. 4 VOLTMETER TO 25P SOCKET, GROUP				1	—		
	3329V6384	CABLE, 24P TO 25P, GROUP				1	—		
	3330V6384	CABLE, RELAY 676 TO RELAY 674, GROUP				1	—		
	3371V6384	CABLE, RELAY 670 TO RELAY 145 AND TB. 416, GROUP				1	—		
	3372V6384	CABLE, 25P, RELAY 672 TO RELAY 150 AND TB. 422, GROUP				1	—		
	3391V6384	CABLE, 28V. GROUND SUPPLY PANEL TO EARTH, GROUP				1	—		
	3392V6384	CABLE, TB. 1349 TO 28V. GROUND SUPPLY PANEL, GROUP				1	—		
	3464V6384	CABLE, No. 1 V. TRIM TO EARTH, GROUP				1	—		
	3465V6384	CABLE, No. 2 V. TRIM TO EARTH, GROUP				1	—		
	3466V6384	CABLE, No. 3 V. TRIM TO EARTH, GROUP				1	—		
	3467V6384	CABLE, No. 4. TRIM TO EARTH, GROUP				1	—		
	3468V6384	CABLE, No. 1 V. TEST SOCKET TO EARTH, GROUP				1	—		
	3469V6384	CABLE, No. 2 V. TEST SOCKET TO EARTH, GROUP				1	—		
	3470V6384	CABLE, No. 3 V. TEST SOCKET TO EARTH, GROUP				1	—		
	3471V6384	CABLE, No. 4 V. TEST SOCKET TO EARTH, GROUP				1	—		
	3549V6384	CABLE, No. 1 GENERATOR TO No. 1 REGULATOR, AMPLIFIER, GROUP				1	—		
	3550V6384	CABLE, No. 1 REGULATOR AMPLIFIER TO EARTH, GROUP				1	—		
	3551V6384	CABLE, 24P TO Nos. 1 AND 2 REGULATOR AMPLIFIER, GROUP				1	—		

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	3552V6384	CABLE, No. 2 GENERATOR TO No. 2 REGULATOR AMPLIFIER, GROUP				1	—		
	3553V6384	CABLE, No. 2 REGULATOR AMPLIFIER TO EARTH, GROUP				1	—		
	3554V6384	CABLE, No. 3 GENERATOR TO No. 3 REGULATOR AMPLIFIER, GROUP				1	—		
	3555V6384	CABLE, No. 3 REGULATOR AMPLIFIER TO EARTH, GROUP				1	—		
	3556V6384	CABLE, 25P TO Nos. 1 AND 2 REGULATOR AMPLIFIER, GROUP				1	—		
	3557V6384	CABLE, No. 4 GENERATOR TO No. 4 REGULATOR AMPLIFIER, GROUP				1	—		
	3558V6384	CABLE, No. 4 REGULATOR AMPLIFIER TO EARTH, GROUP				1	—		
	5924V6384	CABLE, 26P TO RELAYS 154, 156, 678, 680 AND 681 AND TB. 880 GROUP (Mod. 697)				1	—		
	5906V6384	CABLE, FUSE 594 (25P) TO PILLAR (24P) GROUP (Mod. 697)				1	—		
	5231V6384	CABLE, RELAY 45 (28P) TO TB. 673, GROUP				1	—		
	5232V6384	CABLE, RELAY 45 (28P) TO TB. 673, GROUP				1	—		
	5233V6384	CABLE, RELAY 46 (28P) TO TB. 674, GROUP				1	—		
	5234V6384	CABLE, RELAY 46 (28P) TO TB. 674, GROUP				1	—		
	5311V6384	CABLE, RELAY 261 TO TB. 767, GROUP				1	—		
	5888V6384	CABLE, 26P TO 28P GROUP (Mod. 697)				1	—		
	5430V6384	CABLE, 26P TO RELAY 261, GROUP ...				1	—		
	5443V6384	CABLE, TB. 404 (24P) TO TB. 414 (25P), GROUP				1	—		
	5489V6384	CABLE, SUPPRESSOR TO TB. 866 (29P) AND EARTH, GROUP				1	—		
	5491V6384	CABLE, 29P TO DOOR MICRO-SWITCH, GROUP				1	—		
	5492V6384	CABLE, SUPPRESSOR TO TB. 866 (29P) AND EARTH, GROUP				1	—		

**ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	5865V6384	CABLE, 24V. BATTERY TO 24V. SHUNT, GROUP				1	—		
	5521V6384	CABLE, HEATER TO EARTH, GROUP				1	—		
	5522V6384	CABLE, RELAY 259 TO EARTH, GROUP				1	—		
	5523V6384	CABLE, RELAY 260 TO EARTH, GROUP				1	—		
	5542V6384	CABLE, TB. 413 (24P) TO RELAY 154, GROUP				1	—		
	5543V6384	CABLE, 26P TO 57P, GROUP				1	—		
	5938V6384	CABLE, 6P-263 TO 3P, GROUP				1	—		
	6195V6384	CABLE, TBs. 414, 120 AND 419 (25P) TO VOLTAGE REGULATOR REAR SPAR, GROUP				1	—		
	6200V6384	CABLE, 28V. GROUND SUPPLY PANEL (29P) TO BUSBAR, GROUP (Mod. 1416)				1	—		
	6201V6384	CABLE, POWER COMPARTMENT, 28V. GROUND SUPPLY PANEL TO FUSE 514, GROUP				1	—		
	6202V6384	CABLE, 28V. GROUND SUPPLY PANEL TO LIGHT SWITCH, GROUP				1	—		
	6203V6384	CABLE, 28V. GROUND SUPPLY PANEL TO RELAY D-7601-L1, GROUP				1	—		
	6205V6384	CABLE, 112V. GROUND SUPPLY PANEL TO EARTH, GROUP				1	—		
	6206V6384	CABLE, 112V. GROUND SUPPLY PANEL TO EARTH, GROUP				1	—		
	6207V6384	CABLE, 112V. GROUND SUPPLY PANEL TO EARTH, GROUP				1	—		
	6211V6384	CABLE, ACC +VE TO TERMINAL +VE, GROUP (Mod. 1390)				1	—		
	6212V6384	CABLE, ACC. -VE TO TERMINAL -VE, GROUP (Mod. 1390)				1	—		
	1992V7610	CABLE, STR. PANEL +VE TO RELAY 677, GROUP				1	—		
	AS4806/145	Capping, duct 14-5" long (Make from AS4806/29, Ref. 3560)				2	—		
	AS4806/17	Capping, duct 17" long (Make from AS4806/33, Ref. 3564)				2	—		
	AS4806/21	Capping, duct 21" long (Make from AS4806/29, Ref. 3560)				2	—		

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Mati. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
	34V6355	CARRIER, FUSE GROUP ...				1	—		F13/17
		Spares for:—							
	5bV5832	Block	4	BSS249		
	34aV6355	Pedestal, fuse carrier	1	BSS972		
	34bV6355	Separator	1	BSS972		
	34cV6355	Stud	4	BSS249		
5CZ/5055	ENGLISH ELEC. AP19250	Carrier, fuse, size 1, non-shrouded	1	—	B	F13/18
5CZ/5056	ENGLISH ELEC. AP19258	Carrier, fuse, size 2, non-shrouded	4	—	B	F13/19
5CY/4390	—	Circuit breaker, 112 volt, 400 amp.	1	—	A	F13/20
5CY/2559	—	Circuit breaker, type A	1	—	A	
4308	3aSS4205	Clip, cable	4	PVC	C	
4312	3bSS4205	Clip, cable	21	PVC	C	
4313	7bSS4205	Clip, cable	3	PVC	C	
4316	8bSS4205	Clip, cable	8	PVC	C	
4317	10cSS4205	Clip, cable	23	PVC	C	
	11bSS4205	Clip, cable	20	PVC	C	
	13bSS4205	Clip, cable	4	PVC	C	
	13cSS4205	Clip, cable	6	PVC	C	
	14cSS4205	Clip, cable	5	PVC	C	
8834	16cSS4205	Clip, cable	10	PVC	C	
26FP/12721	18cSS4205	Clip, cable	12	PVC	C	
5K/81	—	Collet, for type 0.2 suppressor	4	—	C	F13/22
5CW/4378	—	Contact, 28V.	1	—	B	F13/23
5CW/8714	—	Contact	1	—	B	
5CY/4520	—	Cover, for circuit breaker, type A	1	—	B	
	46V6355	Cover, resistor	1	L72	C	
	145SS4375	Duct, cable, 14.5" long	2	—		
	17SS4375	Duct, cable, 17" long	2	—		F13/26
	21SS4375	Duct, cable, 21" long	2	—		F13/27
5L/995371	—	Filament, 28 volt, 7 watt.	3	—	B	
5CZ/5209	ENGLISH ELEC. TKF300	Fuse, 300 amp.	2	—	B	
5CZ/5061	ENGLISH ELEC. TKF200	Fuse, 200 amp.	3	—	B	
10H/0590117	—	Fuse, 3 amp.	3	—	C	
10H/0590127	—	Fuse, 60 amp.	1	—	C	
10H/0590124	—	Fuse, 20 amp.	6	—	C	
	374SS6005	Label, " 24V. batt. shunt " (Mod. 621)...	1	L59		
	375SS6005	Label, " 96V. batt. shunt " (Mod. 621)...	1	L59		
	38V6355	LAMP, COCKPIT, GROUP ...				3	—		F13/28
		Consisting of:—							
5CX/446	—	Lamp, cockpit	1	—	B	
4669	1906/1	Washer, shakeproof	1	—	C	F13/29
	37V6355	Wire, locking, 22G	Q/R	DTD161		
5X/9008	—	Lug, cable, 4-way, 19 amp.	6	—	C	
	1V6829	MOUNTING, DUMMY TERMINAL, 96V. (RED) STOWAGE, GROUP ...				1	—		F13/30
		Consisting of:—							
4222	3V6829	Mounting	1	BSS972		
	3V6828	Terminal (made from Belling Lee L309, red, type F.)	1	—	C	F13/31

**ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
	2V6829	MOUNTING, DUMMY TERMINAL, 96V (BLACK) STOWAGE, GROUP				1	—		F13/32
4223	3V6829	Consisting of:—				1	BSS972		
	4V6828	Mounting Terminal (made from Belling Lee L309, black, type F)				1	—	C	F13/33
		MOUNTING OF FUSES AND CONTACTORS FOR BUSBAR INTERLINKING (1V9650)							
		Spares for:—							
SCW/8714	6V9650	Contactor				1	—	B	
	BRUSH ELEC.	Cover				1	—	B	
10H/24210	150 III T	Fuse				2	—	C	
	31V6337	Fuse, carrier				2	—		
	2V9650	Plate, mounting				1	—		
		MOUNTING, P.F.C. INDICATOR RELAY PANEL, 57P (1V7592)							
		Spares for:—...							
	1V8974	PANEL, P.F.C. INDICATOR RELAY 57P, GROUP (Mod. 410)				1	—		F13/34
		Spares for:—							
26FP/8735	1V5650	Block, terminal, L.D.				4	—	C	F14/14
5008	21SS4204	Bush				2	—	C	
5551	3V7582	COVER, PANEL, GROUP				1	—	C	F13/35
		Spares for:—							
28FP/146	A4/25	Fastener				6	—	C	
28FP/9430915	GA4/250	Grommet				6	—	C	
10H/0560013	—	Holder, valve, V.H.B. 51				3	—	C	F13/36
	4V8974	Insulator, support				2	BSS972		F13/37
	1V8975	PANEL, LESS EQUIPMENT, GROUP				1	—		
		Spares for:—							
	1SS6003	Label, " 1 "				1	—		
	2SS6003	Label, " 2 "				1	—		
	3SS6003	Label, " 3 "				1	—		
	656SS6004	Label, " Rudder-Elevator-Aileron "				2	—		
4273	10V5857	RETAINER, VALVE, GROUP				3	—	C	F13/38
		Spares for:—							
	10bV5857	Retainer, valve				1	BSS972		
	TERRY	Spring, extension				2	—		F13/39
6854	10aV5857	Stud, special				2	S1	C	F13/40
5X/6622	14V5650	Socket, double				5	—	B	F14/41
5X/6623	15V5650	Socket, single				9	—	B	F14/42
6854	10aV5857	Stud, special				6	S1		F13/40
	3V8974	SUPPORT, RESISTOR, GROUP				2	—		F13/43
		Spares for:—							
	3bV8974	Bolt, 4ba (Made from A25/4B)				3	—		
	3aV8974	Support, resistor				1	BSS972		
SCW/5203	SUNVIC	Switch, c/w resistor				3	—	A	F13/44
	601V								

ELECTRICAL INSTALLATION

IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
		1	2	3	4			St.	
		MOUNTING, FUSE IDENTIFICATION LABELS, 24P AND 25P (1 & 2 V7013)							
		Spares for:—							
	7V7013					1	DTD339		F13/46
		MOUNTING, AFT FUSE AND RELAY PANEL, 29P (1V7434)							F13/47
		Spares for:—							
		PANEL, AFT FUSE AND RELAY, 29P (1V7361)							
		Spares for:—							
5X/9034	—					2	—	C	F13/48
5X/9402803	—					2	—	C	F13/49
26FP/8735	1V5650					2	—	C	F13/14
4237	5bV5832					2	BSS249	C	F13/50
	8V7361					1	—		F13/51
	9V7361					1	—		F13/52
	ENGLISH ELEC.								
5CZ/5056	AP19258					2	—	B	F13/19
	30V6337					2	—		F13/54
		CARRIER, FUSE, GROUP							
		(For Breakdown, see Page GF46)							
	5V5832					1	—		F13/55
		CARRIER, FUSE, GROUP							
		Spares for:—							
4237	5bV5832					2	BSS249	C	F13/57
4241	19bV5832					1	BSS668	C	F13/61
4238	5cV5832					2	S1	C	F13/59
4240	19aV5832					1	BSS668	C	F13/62
4242	2V7361					1	—	C	F13/63
		COVER, 29P, GROUP							
		Spares for:—							
28FP/154	A5/30					8	—	C	
28FP/9425771	GA5/312					8	—	C	
	3V7361					2	BSS972		F13/64
	4V7361					2	BSS972		F13/65
	5V7361					2	BSS972		F13/66
	ENGLISH ELEC.								
5CZ/5209	AS2½					1	—	C	
	ENGLISH ELEC.								
5CZ/5215	AS5					2	—	C	
	ENGLISH ELEC.								
5CZ/5219	AS7½					1	—	C	
	ENGLISH ELEC.								
5CZ/5216	AS10					4	—	C	
	ENGLISH ELEC.								
10H/0590125	AP19262					7	—	C	
	ENGLISH ELEC.								
5CZ/5061	TF200					1	—	C	

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
		PANEL, AFT FUSE AND RELAY, 29P (V7361) (Cont'd)							
	6V7361	Insulator				1	BSS972		F13/67
	7V7361	Insulator				1	BSS972		F13/68
5X/9035	—	Link, commoning, 2-way				1	—	C	F13/69
5X/9037	—	Link, commoning, 4-way				1	—	C	F13/70
	1V7362	PANEL, GROUP				1	—		F13/71
	8V6329	Pedestal				2	BSS972		F13/72
5X6623	15V5650	Socket, single				5	—	B	F13/42
5X/9028	—	Socket, fuse block, type S				12	—	C	F13/53
5X/9994577	—	Socket, single, 19 amp.				2	—	C	F13/73
5X/9402799	—	Socket, double, 19 amp.				1	—	C	F13/74
5CW/3942	—	Switch, relay, type S1				3	—	A	F13/75
		MOUNTING, 96V. BATTERY CONTAINER (1V6435)							F13/76
		Spares for:—							
4217	34D5119	Bolt, terminal				2	BSS249	C	F14/77
4224	1V6436	BOX, 96V. BATTERY CONTAINER GROUP				1	—	B	F14/78
		Spares for:—							
		DIAPHRAGM (1V6438)							
		Spares for:—							
4225	5V5895	Eyebolt				1	S1		F14/79
4226	6V5895	Washer, throat				1	L72		F14/80
4227	36V5894	Peg, locating				8	—	C	F14/81
		PLATE, END, L.H. AND R.H. (1 & 2 V6349)							
		Spares for:—							
4228	10V5896	Bolt, Special				1	S1	C	F14/82
4229	10V6439	Eyebolt				1	S1	C	F14/83
1777	5V6066	Nut, knurled				1	S1	C	F14/84
4218	32D5119	Bush, terminal, insulator				2	BSS972	C	F14/85
10192	1V10795	EYEBOLT, FOR BATTERY CONTAINER GROUP				2	—	B	F14/86
		Consisting of:—							
10296	2V10795	Eyebolt				2	S1	C	
	3V6066	Fork-end				1	S1		F14/87
9977	6V6066	Nut, knurled				2	S1	C	F14/84
	3V10795	Piece, tee				1	—		F14/88
	4V10795	Pin, steel				1	—		F14/89
28Q/1969	AS455/308	Rivet				2	—	C	
28W/9419487	SP10/E	Washer				1	—	C	
4638	7V6435	Gasket, "Gaco" 2½" dia. x ¼" thick ...				2	G40		F14/90

ELECTRICAL INSTALLATION

IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate
		1	2	3	4			St.	and
								M.R.	Illust'n
									No.
		MOUNTING, 96V. BATTERY CON-							
		TAINER (V6435) (Cont'd)							
1774	1V6437	LID, 96V. BATTERY CONTAINER,				1	—	C	F14/91
		GROUP							
		Spares for:—							
26FP/1581	WILMOT BREEDON 7/1285	Catch, c/w hook plate, 7/1405				5	—	C	F14/92
	4V6437	Seal (KO. 118 x 51½" x 0.51")				1	Linatex		
	5V6437	Seal (KO. 118 x 23" x 0.51")				1	Linatex		
	6V6437	Seal (KO. 118 x 23" x 0.51")				1	Linatex		
	7V6437	Seal (KO. 118 x 51½" x 0.51")				1	Linatex		
4639	8V6435	PIPE, STUB, GROUP				1	—	C	F14/93
4640	9V6435	PIPE, STUB, GROUP				1	—	C	F14/94
4219	33D5119	Seal, "Gaco" 2½" dia. x ⅛" thick				2	G40	C	F14/95
1775	4V6435	TRAY, DRIP, GROUP				4	—	C	F14/96
		MOUNTING, 24V. BATTERY CON-							F14/97
		TAINER (1V6307)							
		Spares for:—							
4217	34D5119	Bolt, terminal				2	BSS249	C	F14/77
4218	32D5119	Bush, terminal insulator				2	BSS972	C	F14/85
	WILMOT BREEDON 7/1285	Catch, c/w hook plate 7/1405				2	—	C	F14/92
26FP/1581									
4220	1V6364	CONTAINER, 24V. ACCUMULATOR				1	—	B	F14/98
		GROUP							
		Spares for:—							
4637	13V6364	Bolt, hinge				2	S2	C	F14/99
1772	14V6364	Eyebolt				2	S2	C	F14/100
1773	15V6364	Nut, knurled				2	S1	C	F14/101
4227	36V5894	Peg, locating				2	—	C	F14/81
1770	9V6364	TRAY, DRIP, GROUP				1	—	C	F14/102
1769	1V6365	LID, 24V. ACCUMULATOR CON-				1	—		F14/103
		TAINER, GROUP							
		Spares for:—							
	6V6365	Seal (KO. 109½ x 22.2" long)				2	Linatex		
	10V6365	Seal (KO. 109½ x 12.4" long)				2	Linatex		
4219	33D5119	Seal, "Gaco" 2.08" dia. x ⅛" thick				2	G40		F14/95

**ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		MOUNTING, 112V. DISTRIBUTION PANELS, 24P, PORT AND 25P, STARBOARD (1 & 2 V6616) Spares for:—							
		PANEL, POWER AND DISTRIBUTION, 112V., 24P, PORT AND 25P, STARBOARD (1 & 2 V6337) (See: Equipment, Aircraft—Instrument Panels)							
		MOUNTING, DISTRIBUTION PANEL, 26P (2V5836) Spares for:—							
		PANEL, DISTRIBUTION, 26P (1V6310) (See: Equipment Aircraft, Instrument Panels)							
		MOUNTING, 28V. CONTACTOR AND FUSE (1V6656) Spares for:—							F13/105
4231	7V6656	Block, insulator				2	BSS972	C	F13/106
4203	4bV5832	Block				2	BSS249	C	F13/107
	9V6656	BUSBAR, GROUP				1	—		F13/108
4232	8V6656	Insulator				1			F13/109
4233	6V6656	Pedestal, busbar support				2	BSS972		F13/110
	7V6329	Pedestal				1	BSS772		F13/111
4234	4cV5832	Stud				2	BSS249		F13/112
4235	5V5534	SUPPORT, FUSE, GROUP				2	—	C	F13/113
		MOUNTING, STARTER PANEL (V6573) Spares for:—							F13/114
4230	8V6573	COVER, GROUP				1	—	C	F13/115
		Spares for:—							
28FP/631	AJW5/35	Fastener				10	—	C	
28FP/1200136	GA5/375	Grommet				10	—	C	
	ROTAX								
5CZ/5304	U2602	Panel, starter				1	—	A	F13/116
		MOUNTING, VOLTAGE REGULATORS, PORT AND STARBOARD (1 & 2 V8937) Spares for:—							F13/117
7741	3V8937	Bolt, special attachment of mountings through brackets				4	S96	C	F13/118
	6V8937	Bolt, special attachment of mountings through mounting plate				4	S96	C	F13/119
	9V8937	Buffer, sponge rubber				1	—		
10123	AS4580/3	Clip, cable				3	PVC		
	AS4580/4	Clip, cable				1	PVC	C	
	CEMENTATION (MUFFELITE) LTD. GB770-66	Mounting, "Barrymount"				8	—		F13/120

ELECTTICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
		MOUNTING, VOLTAGE REGULATORS, PORT AND STARBOARD (1 & 2 V8937) (Cont'd)							
5UC/6882	4V8937	PLATE, MOUNTING, GROUP ...				2	—		F13/121
3566	AS4810	Regulator, voltage				2	—	A	F13/122
		Packing, cable duct				12	—	C	F14/123
		MOUNTING OF VOLTAGE TRIM AND TEST PANEL (1V9874)							
		Spares for:—							
5CY/3002	4V/9470	Channel, port				1	—	C	
	5V/9470	Channel, starboard				1	—	C	
	2V9874	Panel, trim and test				1	—	C	
		Socket, test				4	—	C	
5UC/5522	3V/9470	Spindle, lock				4	—	C	
3566	AS4810	Trimmer, voltage				4	—	C	
		Packing, cable duct				12	—	C	F14/123
		PANEL, P.F.C. CONTACTOR, 28P (1V6305)							
		(For Breakdown, See:— Equipment Aircraft, Instrument Panels)							
		PANEL, SPARE FUSE STOWAGE (1V6807)							
		Spares for:—							
28E/10047	TERRY 81/6	Clip, spring				2	—	C	
4243	2V6807	PANEL, SPARE FUSE, GROUP ...				1	—	C	F13/124
		Spares for:—							
28E/9424956	AS2294/1	Clip, $\frac{1}{8}$ " dia.				35	—	C	
28E/9998659	AS2294/2	Clip, $\frac{1}{8}$ " dia.				13	—	C	
28E/10028	AS2294/4	Clip, $\frac{1}{8}$ " dia.				4	—	C	
28E/9138369	AS2294/8	Clip, $1\frac{1}{2}$ " dia.				10	—	C	
28E/10037	AS2294/9	Clip, $1\frac{1}{2}$ " dia.				6	—	C	
10239	1V9602	PANEL, LOAD AMMETER RELAY, 67P GROUP (Mod. 621)				1	—	A	F13/125
		Spares for:—							
	3V9602	LID, PANEL, GROUP				1	—		F14/126
		Spares for:—							
28FP/146	A4/25	Fastener				2	—	C	
28FP/9430915	GA4/250	Grommet				2	—	C	
	V9595	LOOM, CABLE, GROUP				1	—		
	4V8999	MOUNTING, RELAY, GROUP ...				1	—		F14/127
		Consisting of:—							
10353	5V6358	Angle				2	L72	C	
28D/8337	AS1248/1B	Bolt, mush. hd., 4 BA				2	—	C	
	4aV8999	Mounting				1	BSS972	C	
28M/10327	AGS2002/B1	Nut, stiff, 4 BA				2	—	C	
28W/9419401	SP10/B	Washer, 4 BA				2	—	C	
	1V9603	PANEL, C/W LABELS, GROUP ...				1	—		F14/128
10F/O119239	—	Relay, type SMS/N33				1	—		F14/129

ELECTRICAL INSTALLATION
IN POWER COMPARTMENT, FUSELAGE CENTRE PORTION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and illust'n No.
		1	2	3	4			M.R.	
5CW/6098	PLESSEY 7/CZ/105411/1	Relay	2	—	A	
5CW/6453	—	Relay	1	—	A	
5CW/5015	—	Relay	1	—	A	
5CW/6452	—	Relay	1	—	A	
5CW/4379	—	Relay	2	—	A	
5CW/4318	—	Relay, starter	1	—	A	
5Q/4341	—	Shunt, ammeter, 96V. (Mod. 621)	1	—	A	F13/130
5Q/24969	—	Shunt, ammeter, 24V. (Mod. 621)	1	—	A	F13/131
5X/6623	15V5650	Socket, single	1	—	C	
	49V6355	Spacer	1	—		
3568	AS4821	Spacer, for cable duct	12	—	C	F14/132
3570	AS4823	Spring, for cable duct	12	—	C	F14/133
	8V5881	Stud, contactor, 2" long	1	BSS249		F13/135
	10V5881	Stud, contactor, 2.56" long	1	BSS249		F13/136
5CY/2866	—	Suppressor, type B.4	1	—	A	F13/137
5CY/2967	—	Suppressor, type O.2	2	—	A	F13/138
5CW/5029	—	Switch, D.P., ground socket cut-out	1	—	A	
5CW/4184	—	Switch, S.P. of former 370, starboard	1	—	A	F13/140
5CW/3945	—	Switch, relay, type S.4	2	—	A	F13/141
5CW/13943	—	Switch, relay, type S.2	1	—	A	F13/142
5CW/4102	—	Switch, relay, type Q.2	2	—	A	F13/143
5CW/2007	—	Switch, relay, type Q.1	3	—	A	F13/144
5CW/6791	—	Switch, relay, magnetic, type 12B	1	—	A	
5CW/6010	ROTAX D.8153	Switch, time delay	2	—	A	

This file was downloaded
from the RTFM Library:

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

