

RADIO AND RADAR INSTALLATION
A.D.F. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
A.D.F. INSTALLATION (T4777)									
Spares for :—									
10B/16446	—	Aerial, loop, type 1324A				1	—	A	
10U/16584	—	Amplifier, sense, type 1628				1	—	A	
26FP/8735	1V5650	Block, terminal, 381 and 382 in nosewheel bay				1	—	C	
26FP/8735	1V5650	Block, terminal, 591 and 592 on 2J (See Electrical Installation—Bomb Bay)				1	—	C	
5X/9402803	—	Block, terminal, 1005 on front spar				1	—	C	
5X/9402803	—	Block, terminal, 1001 on navigator's shelf				1	—	C	
5X/9402802	—	Block, terminal, 1000 on navigator's shelf				1	—	C	
8827	455T3434	CABLE, AERIAL TRANSFORMER TO SENSE AMPLIFIER, GROUP				1	—	C	
	457T3434	CABLE, SENSE AMPLIFIER TO JUNCTION BOX 1629, GROUP				1	—		
9535	456T3434	CABLE, SENSE AMPLIFIER TO SWITCH UNIT 11113, GROUP				1	—	C	
12305	459T3434	CABLE, TERMINAL BOX 2J TO TERMINAL BLOCK 1005, GROUP				1	—	C	
	542T3434	CABLE, TERMINAL BLOCK 1005 TO EARTH, GROUP				1	—		
11059	200T3434	CABLE, TERMINAL BLOCK 384 TO EARTH, GROUP				1	—	C	
	654T3434	CABLE, A.D.F. SWITCH TO REAR BULKHEAD PLUG 171, GROUP				1	—		
	480T3434	CABLE, SWITCH UNIT 11113, GROUP				1	—		
10HB/3017	—	Connector, pilots' indicator to terminal block 1001				1	—	B	
10HB/3015	—	Connector, bulkhead break plug 117 to terminal block 1001				1	—	B	
10HB/3001	—	Connector, loop aerial to bulkhead break plug 177				1	—	B	
10HB/3018	—	Connector, loop controller to bulkhead break plug 130				1	—	B	
10HB/3002	—	Connector, loop aerial to bulkhead break plug 130				1	—	B	
10HB/3202	—	Connector, control unit to bulkhead break plug 129				1	—	B	
10HB/3201	—	Connector, receiver DW to bulkhead break plug 129				1	—	B	
10HB/3021	—	Connector, receiver DS to bulkhead break plug 112				1	—	B	
10HB/3020	—	Connector, bulkhead break plug 112 to voice panel filter				1	—	B	
10HB/3213	—	Connector, voltage regulator to terminal block 1005				1	—	B	

**RADIO AND RADAR INSTALLATION
A.D.F. INSTALLATION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		A.D.F. INSTALLATION (T4777) (Cont'd)							
		Spares for :—							
10HB/3212	—	Connector, transformer, FQ to terminal block 1005				1	—	B	
10HB/3004	—	Connector, loop aerial to receiver DK/DL ...				1	—	B	
10J/13152	—	Controller, loop, type 1342 ... (See Equipment—Instrument Panels)				1	—	A	
		EQUIPMENT, A.D.F., ABOVE No. 2 FUEL TANK BAY (T4112)							
		Spares for :—							
	MARCONI LTD. XB-476	Bracket, stowage ...				1	—	B	
10AR/1026	—	Backplate, receiver, type 1332 ...				1	—	B	
10D/19525	—	Box, junction, type 1629 ...				1	—	A	
5UC/6007	—	Regulator, type 1355A ...				1	—	A	
10D/19598	—	Receiver, type AD7092D ...				1	—	A	
10K/18225	—	Transformer, type 1343 ...				1	—	A	
10K/16244	—	Transformer, power factor, type 1571 ...				1	—	A	
10Q/16314	—	Indicator, bearing and tuning, type 1630 ... (See Equipment—Instrument Panels)				1	—	A	
		MOUNTING, SENSE AMPLIFIER, (T4541) (Mod. 436)							
		Spares for :—							
10AJ/154	—	Mounting, AV... ..				4	—	B	
		MOUNTING, RADIO COMPASS AERIAL (T4114)							
		Spares for :—							
	3T4114	PLATE, DISHED, FOR AERIAL, GRP.				1	—		
6116	4T4114	Window, aerial ...				1	—	C	
10L/16073	—	Unit, control, type 1274... (See also Fuselage—Crew's Nacelle)				1	—	A	
10F/20109	—	Unit, switch, type 11113... ..				1	—	A	
5CW/5823	—	Switch ... (See also Equipment—Instrument Panels)				1	—	A	

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

