

RADIO AND RADAR INSTALLATION

H.2S. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
H.2S. INSTALLATION (T3408)									
Spares for:—									
10U/16761	—	Amplifier, type A3073				1	—	A	
26FP/8735	1V5650	Block, terminal, Nos. 783, 784, 785, for panel 4J				3	—	C	
10D/18640	—	Calculator, auto, type 5... ..				1	—	A	
10HA/13970	—	Connector, calculator, type 5, to power unit, type 729				1	—	B	
10HA/13960	—	Connector, power unit, type 729, to waveform generator				1	—	B	
10HA/13959	—	Connector, calculator, type 5, to waveform generator				1	—	B	
10HA/17339	—	Connector, power unit, type 729, to bulkhead break plug 107R				1	—	B	
10HA/13972	—	Connector, power unit, type 729, to bulkhead break plug 109R				1	—	B	
10HA/13971	—	Connector, control unit, type 903, to bulkhead break plug 109R				1	—	B	
	4T3408	Connector, control unit, type 1258, to rear bulkhead break plug 120R				1	—	B	
10HA/13998	—	Connector, rear bulkhead plug 120R, to waveform generator				1	—	B	
10HB/1129	—	Connector, waveform generator, to bulkhead break plug 104R				1	—	B	
10HB/1130	—	Connector, indicator unit, type 301, to bulkhead break plug 104R				1	—	B	
10HA/13979	—	Connector, indicator unit, type 301, to control unit, type 595 (Pre-Mod. 390)				1	—	B	
10HB/1128	—	Connector, control unit, type 585, to bulkhead break plug 103R				1	—	B	
10HB/1127	—	Connector, waveform generator, to bulkhead break plug 103R				1	—	B	
10HA/13993	—	Connector, forward bulkhead plug 118R, to rear bulkhead plug 118R				1	—	B	
10HA/13992	—	Connector, rear bulkhead plug 118R, to waveform generator				1	—	B	
10HA/13965	—	Connector, waveform generator, to bulkhead break plug 105R				1	—	B	
10HA/13966	—	Connector, forward bulkhead plug 105R, to rear bulkhead plug 105R				1	—	B	
	53T3408	Connector, indicator, type 301, to control unit, type 12558 (Mod. 390)				1	—	B	
	54T3408	Connector, control unit, type 585, to control unit, type 12558				1	—	B	
10HA/13939	—	Connector, control unit, type 585, to junction box, type 343				1	—	B	
10HA/13974	—	Connector, control unit, type 585, to control unit, type 626				1	—	B	
10HA/13986	—	Connector, control unit, type 903, to control unit, type 585				1	—	B	
10HB/9070	44T3408	Connector, indicator, type 301, to control unit, type 595				1	—	B	
10HB/9072	46T3408	Connector, control unit, type 12580, to indicator, type 301				1	—	B	

RADIO AND RADAR INSTALLATION
H.2S. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
H.2S. INSTALLATION (T3408) (Cont'd)									
Spares for :—									
10HA/13967	—					1	—	B	
10HA/15958	—					1	—	B	
10HA/13987	—					1	—	B	
10HA/13988	—					1	—	B	
10HB/9074	48T3408					1	—	B	
10HB/9075	49T3408					1	—	B	
10HA/13995	—					1	—	B	
10HA/13976	—					1	—	B	
10HA/13975	—					1	—	B	
10HA/13985	—					1	—	B	
10HA/13984	—					1	—	B	
10HA/13977	—					1	—	B	
10HA/13978	—					1	—	B	
10HA/13981	—					1	—	B	
10HA/13982	—					1	—	B	
10HA/13994	—					1	—	B	
10HA/13969	—					1	—	B	
10HA/13990	—					1	—	B	
10HA/13983	—					1	—	B	
10HA/13989	—					1	—	B	
10HA/13991	—					1	—	B	
10VB/6250	—					1	—	A	
50B/5748	—					1	—	A	
10D/18638	—					1	—	A	
MOUNTING, N.B.C. JUNCTION BOX AND RESISTANCE UNIT (T3728)									
Spares for :—									
9D/15	—					1	—	A	
9D/12	—					1	—	A	

**RADIO AND RADAR INSTALLATION
H.2S. INSTALLATION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		MOUNTING, CONTROL UNIT, TYPE 12558 (T5474)							
10L/16493	—	Spares for :— Unit, control, type 12558				1	—	A	
		MOUNTING, CONTROL UNIT, TYPE 12580 (T4709)							
10L/16495	—	Spares for :— Unit, control, type 12580				1	—	A	
10LB/6366	—	Unit, control, type 585				1	—	A	
10L/16060	—	Unit, control, type 626				1	—	A	
10L/16154	—	Unit, control, type 903				1	—	A	
10LB/6376	—	Unit, control, type 595				1	—	A	
10QB/6493	—	Unit, indicating, type 301				1	—	A	
10DB/8811	—	Unit, power, type 729				1	—	A	
10B/16372	—	Unit, scanning, type 121... ..				1	—	A	



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.