

RADIO AND RADAR INSTALLATION

I.F.F. Mk. 10 INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		I.F.F. Mk. 10 INSTALLATION (T3403)							
		Spares for :—							
10B/18265 26FP/8735	— 1V5650	Aerial, I.F.F.				1	—	A	
		Block, terminal, No. 646 in nosewheel bay ...				1	—	C	
	551T3434	CABLE, T/R POWER POINT, TO TERMINAL BLOCK 646, GROUP				1	—		
	274T3434	CABLE, ROTAX, SWITCH TO TERMINAL BLOCK 646, GROUP				1	—		
	625T3424	CABLE, T/R CONTROL POINT, TO R.P.B. PLUG 153, GROUP				1	—		
	626T3434	CABLE, GROUP				1	—		
10HA/15962 10HA/15963	— — 4T3403 5T3403	Connector, aerial switch unit to aerial ...				1	—	B	
		Connector, aerial switch unit to aerial ...				1	—	B	
		Connector, aerial switch unit to T/R ...				1	—		
		Connector, control unit to rear pressure bulk-head plug 155				1	—		
	6T3403	Connector, coder unit to rear pressure bulk-head plug 155				1	—		
	7T3403	Connector, coder unit to T/R				1	—		
	8T3403	Connector, aerial switch unit to aerial switch and TB. 646				1	—		
5CW/4860	—	Guard, locking				1	—	C	
		MOUNTING, SHELF, FOR I.F.F. RECEIVER, AERIAL SWITCH, AND CODER UNIT (T4522)							
		Spares for :—							
5CW/4197 16K/1660	941SS6001 — 036290332	Label, AE POSN—upper-lower-flight ...				1	—	A	
		Switch, aerial position				1	—	A	
16K/1660	036290585	Unit, control, type KY/95A/APX25				1	—	A	
16K/1660	036290584	Unit, control, type C-1128/APX25				1	—	A	
		Unit, control, type C-1158/APX25				1	—	A	
10D/20334	—	Unit, transmitter-receiver, type 4585				1	—	A	



This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.

DO NOT HANDLE ENGINE TO MOVE STAND

DO NOT TOW
DO NOT USE STEERING BAR