

RADIO AND RADAR INSTALLATION

I.L.S. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
I.L.S. INSTALLATION (T432)									
Spares for :—									
10B/16708	—	Aerial, localiser, type 239				1	—	A	
10B/16707	—	Aerial, glide path, type 238				1	—	A	
10B/16706	—	Aerial, suppressed marker, type 237				1	—	A	
10D/17921	—	Box, junction, type 164				1	—	A	
10D/17815	—	Box, junction, type 157				1	—	A	
11058	1T4743	BOX, JUNCTION, i/c, GROUP (Mod. 291)				1	—	A	
Spares for :—									
26FP/8735	10T4743	Box, junction				1	—	C	
5CW/430	1V5650	Block, terminal, No. 1075, 1076, 1081				1	—	C	
26FP/8735	—	Block, terminal, No. 396				1	—	C	
26FP/8735	1V5650	Block, terminal, No. 596				1	—	C	
	751T3434	CABLE, PORT U/C BREAK PLUG 1074 TO LOCALISER AERIAL, GROUP				1	—		
	752T3434	CABLE, PORT U/C BREAK PLUG 1075 TO GLIDE PATH AERIAL, GROUP				1	—		
	749T3434	CABLE, R.P.B. PLUG 508 TO PORT U/C BREAK PLUG 1074, GROUP				1	—		
	750T3434	CABLE, R.P.B. BREAK PLUG 175 TO PORT U/C BREAK PLUG 1075, GROUP				1	—		
	248T3434	CABLE, TERMINAL BLOCK 396 TO VOLTAGE REGULATOR, GROUP				1	—		
	250T3434	CABLE, TERMINAL BLOCK 396 TO VOLTAGE REGULATOR, GROUP				1	—		
	249T3434	CABLE, TERMINAL BLOCK 396 TO VOLTAGE REGULATOR, GROUP				1	—		
	253T3434	CABLE, TERMINAL BLOCK 396 TO EARTH, GROUP				1	—		
	310T3434	CABLE, SWITCH, 1st PILOT'S CONSOLE TO CIRCUIT BREAKER, GROUP				1	—		
	311T3434	CABLE, SWITCH, 1st PILOT'S CONSOLE TO TERMINAL BLOCK 396, GROUP				1	—		
	671T3434	CABLE, SWITCH, 1st PILOT'S CONSOLE TO TB's 1076-1081, GROUP (Mod. 291)				1	—		
10HA/14213	—	Connector, R.P.B., break plug 187 to glide path receiver				1	—	B	
10HB/36	—	Connector,, R.P.B. break plug 175 to marker aerial				1	—	B	
10HA/14208	—	Connector, junction box 164 to junction box 157				1	—	B	
10HB/7652	20T3406	Connector, control unit 705 to junction box 157 (Mod. 291)				1	—	B	

RADIO AND RADAR INSTALLATION
I.L.S. INSTALLATION

Ref. No.	Part No.	Description				No. off	Mati. Spec.	Cl. of	Plate and illust'n No.
		1	2	3	4			St. M.R.	
10HB/7653	21T3406	Connector, control unit 705 to junction box 157 (Mod. 291)				1	—	B	
10HB/7654	22T3406	Connector, control unit 705 to junction box 157 (Mod. 291)				1	—	B	
10HB/8385	18T3406	Connector, junction box 157 to terminal blocks 1075-1081 (Mod. 291)				1	—	B	
10HA/14205	—	Connector, junction box 157 to terminal block 396				1	—	B	
10HA/11992	—	Connector, junction box 157 to junction box 164				1	—	B	
10HB/254	—	Connector, junction box 164 to indicator, type 17				1	—	B	
10HB/208	—	Connector, junction box 164 to terminal block 596				1	—	B	
10HA/14206	—	Connector, junction box 157 to terminal block 396				1	—	B	
10HA/14214	—	Connector, R.P.B. break plug 508 to localiser marker receiver				1	—	B	
10HA/14215	—	Connector, R.P.B. break plug 175 localiser marker receiver				1	—	B	
10Q/61	—	Indicator, type 17				1	—	A	
5CX/1553	—	Lamp, warning, type B, red				1	—	B	
MOUNTING, I.L.S. RECEIVER (T3693)									
Spares for :—									
10AJ/118	—	Mounting				1	—	B	
MOUNTING, I.L.S. VOLTAGE REGULATOR AND I/C AMPLIFIER (T3707)									
Spares for :—									
10U/16596	—	Amplifier				1	—	A	
10AJ/121	—	Mounting				1	—	B	
10AJ/154	—	Mounting, A.V.				1	—	B	
PANEL, TB. AND RELAY (T3700)									
Spares for :—									
5CZ/430	—	Block, terminal				1	—	C	
5X/9402803	—	Block, terminal				1	—	C	
26FP/8735	—	Block, terminal				1	—	C	
10D/17805	—	Box, junction, type 154				1	—	A	
5X/9402794	—	Cover, TB.				1	—	C	
5X/9402800	—	Link				1	—	C	
380T3423	—	Label, TB. 380				1	L59		
396T3423	—	Label, TB. 396				1	L59		
10AJ/154	—	Mounting, A.V.				1	—	A	
2T3700	—	Panel				1	—		
5X/6623	15V5650	Socket, single				10	—	A	
5X/9402799	—	Socket				5	—	C	
5CW/2007	—	Switch, relay, Q, No. 1				1	—	A	
5UC/548	—	Regulator, voltage				1	—	A	

RADIO AND RADAR INSTALLATION

I.L.S. INSTALLATION

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
					St.	
		1 2 3 4			M.R.	
		PANEL, LIMIT HEIGHT SELECTOR AND I.L.S. ATTENUATOR (1T4276), GROUP (Pre-Mod. 291) (See Equipment—Instrument Panels)				
		PANEL, MAIN FUSE AND TB. 3P (1V6312), GROUP (See Equipment—Instrument Panels)				
		PANEL, LIMIT HEIGHT SELECTOR AND SWITCH (T4826)				
		Spares for :—				
11594	9S2042	Cap, helvin	1	—		C
	628SS/6005	Label, I.L.S. supply	1	L59		
	502SS/6005	Label, A.D.F.	1	L59		
	503SS/6005	Label, I.L.S.	1	L59		
	2T4826	Plate, panel	1	DTD626		
10504	2SS/4624	Plate, fixing, shroud	1	—		C
10505	2SS/4625	Plate, fixing, shroud	1	—		C
	ROTAX					
SCW/6659	N136930	Shroud	1	—		C
SCW/5825	—	Switch	1	—		A
	N.S.F.					
SCW/10F/7565	8375B104	Switch	1	—		A
10L/263	—	Unit, switch	1	—		A
	—	Unit, control, type 705	1	—		A
		WINDOW, MARKER AERIAL (T4250) (Mod. 143)				
		Spares for :—				
11888	2T4250	Cover, fibre glass	1	DTD5518		C
	3T4250	Plug	1	—		
2034	4T4250	Washer, Gaso, $\frac{1}{8}$ " thick x 1" dia.	1	—		C

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

