

RADIO AND RADAR INSTALLATION
N.B.C. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
N.B.C. INSTALLATION (T3409)									
Spares for :—									
5CW/4105	—	Box, junction, at rear pressure bulkhead ...				1	—	B	
9D/1110	—	Calculator, type 7 (Pre-Mod. 1201) ...				1	—	A	
9D/2	—	Calculator, type 1 ...				1	—	A	
9D/3	—	Calculator, type 2 ...				1	—	A	
9D/4	—	Calculator, type 3 ...				1	—	A	
	328T3434	CABLE, J.B. 343, GROUP ...				1	—		
	329T3434	CABLE, J.B. 343 TO EARTH, GROUP ...				1	—		
	242T3434	CABLE, SUPPRESSOR TO G4B COMPASS J.B., GROUP				1	—		
	219T3434	CABLE, CALCULATOR TYPE 7 TO 11P, GROUP (Pre-Mod. 1201)				1	—		
10HA/13931	—	Connector, calculator type 3 to J.B. 343 ...				1	—	B	
10HA/13932	—	Connector, calculator type 3 to J.B. 343 ...				1	—	B	
10HA/13933	—	Connector, calculator type 3 to J.B. 343 ...				1	—	B	
10HA/13919	—	Connector, navigator's panel to J.B. 343 ...				1	—	B	
10HA/13930	—	Connector, navigator's panel to J.B. 343 ...				1	—	B	
10HA/17340	—	Connector, J.B. 343 to auto-pilot unit coupling type B				1	—	B	
10HB/1629	48T3409	Connector, J.B. 43 to wind unit ...				1	—	B	
10HB/1630	49T3409	Connector, wind indicator unit to wind indicator				1	—	B	
10HB/1631	50T3409	Connector, control unit 585 to wind unit ...				1	—	B	
	65T3409	Connector, navigator's panel to A.V. salting unit (Mod. 827)				1	—	B	
10HB/6421	56T3409	Connector, junction box 343 to remote control unit (Pre-Mod. 1201)				1	—	B	
10HB/6422	57T3409	Connector, control unit to calculator type 7 (Pre-Mod. 1201)				1	—	B	
10HA/13923	—	Connector, calculator type 1 to bulkhead break plug 5R				1	—	B	
10HA/13918	—	Connector, power unit to bulkhead break plug 1R				1	—	B	
10HA/13925	—	Connector, calculator type 1 to bulkhead break plug 6R				1	—	B	
10HA/13917	—	Connector, J.B. 343 to bulkhead break plug 1R				1	—	B	
10HA/13924	—	Connector, J.B. 343 to bulkhead break plug 6R				1	—	B	
10HA/13945	—	Connector, J.B. 343 to supply 11P ...				1	—	B	
10HA/13946	—	Connector, J.B. 343 to supply 11P ...				1	—	B	
10HA/13924	—	Connector, J.B. 343 to bulkhead break plug 6R				1	—	B	

**RADIO AND RADAR INSTALLATION
N.B.C. INSTALLATION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate
		1	2	3	4			St. M.R.	and Illust'n No.
N.B.C. INSTALLATION (T3409) Cont'd									
Spares for :—									
10HA/13927	—	Connector, calculator type 2 to J.B. 343 ...				1	—	B	
10HA/13922	—	Connector, calculator type 2 to bulkhead break plug 5R				1	—	B	
10HA/13926	—	Connector, calculator type 2 to J.B. 343 ...				1	—	B	
10HA/13929	—	Connector, calculator type 2 to J.B. 343 ...				1	—	B	
10HA/13920	—	Connector, navigator's panel to J.B. 343 ...				1	—	B	
	63T3409	Connector, J.B. 343 to forward throw indicator (Mod. 780)				1	—	B	
	64T3409	Connector, calculator type 2 to variable air speed unit (Mod. 864)				1	—	B	
10HA/13937	—	Connector, auto-pilot coupling unit to directional indicator				1	—	B	
6B/541	—	Indicator, G.P. Mk. 4 ...				1	—	A	
9D/8	—	Indicator, directional Mk. 1 ...				1	—	A	
9D/1400	—	Indicator, forward throw (Mod. 780) ...				1	—	A	
MOUNTING, N.B.C. JUNCTION BOX AND RESISTANCE UNIT (T3728) (See Radio and Radar—H.2S.)									
MOUNTING, WIND UNIT (T4616) Spares for :—									
10H/0970057	—	Cap, protective ...				1	—	C	
	PLESSEY LTD. CZ/62277/0	Socket, bulkhead ...				1	—	A	
9D/1131	—	Tray, mounting ...				1	—	A	
MOUNTING, FRAME, CALCULATOR 2 (T3696) (See Radio and Radar—Crates)									
MOUNTING, VARIABLE AIRSPEED UNIT (T4943) (Mod. 862) Spares for :—									
11184	4T4943	Fairlead, half ...				1	—	C	
	2T4943	Plate, mounting ...				1	—	A	
9D/1566	—	Unit, variable airspeed ...				1	—	A	
9D/1141	—	Panel, navigation ...				1	—	A	
5CY 5151	—	Suppressor, type 65 ...				1	—	A	
9D/757	—	Unit, indicator ...				1	—	A	
9D/11	—	Unit, power, Mk. 1 ...				1	—	A	
9D/756	—	Unit, wind ...				1	—	A	
10LB/6366	—	Unit, control, type 585 ...				1	—	A	
6B/2458	—	Unit, automatic variation (Mod. 827) ...				1	—	A	
9D/1111	—	Unit, remote control, Mk. 2A (Pre-Mod. 1201)				1	—	A	



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.