

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Mati. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
R.C.M. INSTALLATION (T4723)									
Spares for:—									
AERIALS FOR AR1. 5924 IN NOSE (T5024)									
Spares for:—									
10B/19296	—	Aerial, omni, type 12911				2	—	A	
	2T5013	Piece, packing				1	DTD130		
10743	3T5013	Piece, packing				1	DTD130		
10F/20488	9SS4353	Screw, 2 BA				24	S96	C	
	—	Unit, aerial switch, type 16498				1	—	A	
AERIAL, ON AIR INTAKE, PORT (T5023)									
Spares for:—									
10B/19298	—	Aerial, omni, type 6647				1	—	A	
	20T4288	Fairlead, half, 2" x 0-8" x 0-25"				2	BS2966		
	2T5023	Spacer, aerial				1	DTD130		
9264	10SS4353	Screw				12	S96	C	
CUSHION, CARD HOLDER AND MOUNTING OF STOWAGE BAG FOR INDICATOR VISOR AT SEXTANT STEP, PORT (T5032)									
Spares for:—									
	2T5032	BAG, VISOR STOWAGE, GROUP ...				1	—		
	4T5032	Bracket, mounting record card holder ...				1	L72		
9386	11N1428	CUSHION, ON BALLAST BOX, GRP.				1	—	C	
10H/19789	—	Holder, record card				1	—	C	
29G/2165	CARR 852 MURPHY MUR/D829329	Stud				6	—	C	
	—	Visor				1	—		
EQUIPMENT, R.C.M., IN CABIN (T4719)									
Spares for:—									
10H/0540015 26FP/8735	—	Adaptor, bulkhead				3	—	B	
	1V5650	Block, terminal, Nos. 1065 and 1066 ...				2	—	B	
11059	200T3434	CABLE, FR. 200, EARTHING, GROUP				1	—	C	
	438T3434	CABLE, F.R. 438, 54P TO TRANS. OUTPUT SWITCH, GROUP				1	—		
	624T3434	CABLE, F.R. 624, CONTROL UNIT 9562 TO T.B. 1066, GROUP				1	—		
	631T3434	CABLE, F.R. 631, CONTROL UNIT 9562 TO RELAY AND EARTH, GRP.				1	—		
	632T3434	CABLE, F.R. 632, CONTROL UNIT 9562 TO RELAY AND EARTH, GRP.				1	—		

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
EQUIPMENT, R.C.M., IN CABIN (T4719) (Cont'd)									
	635T3434	CABLE, F.R. 635, T.B. 1066 TO T.B's 1075 AND 1076, GROUP				1	—		
	642T3434	CABLE, F.R. 642, GROUP				1	—		
	643T3434	CABLE, F.R. 643, T.B. 1066 TO DIMMER SWITCHES, GROUP				1	—		
	646T3434	CABLE, F.R. 646, T.B. 1065 TO DIMMER SWITCHES, GROUP				1	—		
	671T3434	CABLE, F.R. 671, CUT-OUT SWITCH TO J.B., GROUP				1	—		
	672T3434	CABLE, F.R. 672, T.B. 863 TO DIMMER SWITCHES, GROUP				1	—		
	681T3434	CABLE, F.R. 681, 54P TO RELAY AND T.B. 1, GROUP				1	—		
	682T3434	CABLE, F.R. 682, V.H.F. CONTROL UNIT TO 3P, GROUP				1	—		
	683T3434	CABLE, F.R. 683, AT 54P, GROUP				1	—		
	690T3434	CABLE, F.R. 690, R.P.B. 170 TO 11P, GROUP				1	—		
	745T3434	CABLE, F.R. 745, GROUP				1	—		
	746T3434	CABLE, F.R. 746, T.R. UNIT TO PLUG 443, GROUP				1	—		
	798T3434	CABLE, F.R. 798, TONE SWITCH TO J.B. AT 54P, GROUP				1	—		
26FP/13091	2SS3264	Clip, cable, $\frac{3}{8}$ " dia. ...				3	L72	C	
26FP/13092	3SS3264	Clip, cable, $\frac{1}{2}$ " dia. ...				4	L72	C	
26FP/13620	6SS3264	Clip, cable, $\frac{3}{8}$ " dia. ...				2	L72	C	
26FP/13905	7SS3264	Clip, cable, $\frac{1}{2}$ " dia. ...				4	L72	C	
26FP/13093	8SS3264	Clip, cable, $\frac{1}{2}$ " dia. ...				1	L72	C	
26FP/13108	9SS3264	Clip, cable, $\frac{3}{8}$ " dia. ...				2	L72	C	
26FP/13109	10SS3264	Clip, cable, $\frac{1}{2}$ " dia. ...				6	L72	C	
26FP/13112	12SS3264	Clip, cable, $\frac{1}{2}$ " dia. ...				6	L72	C	
26FP/13687	13SS3264	Clip, cable, $1\frac{1}{8}$ " dia. ...				2	L72	C	
26FP/13924	14SS3264	Clip, cable, $\frac{1}{2}$ " dia. ...				2	L72	C	
26FP/13898	15SS3264	Clip, cable, $1\frac{3}{8}$ " dia. ...				2	L72	C	
26FP/13069	16SS/3264	Clip, cable, $1\frac{1}{2}$ " dia. ...				1	L72	C	
26FP/13309	17SS3264	Clip, cable, $1\frac{7}{8}$ " dia. ...				2	L72	C	
26FP/13266	18SS3264	Clip, cable, $1\frac{1}{8}$ " dia. ...				3	L72	C	
26FP/13297	19SS3264	Clip, cable, $1\frac{7}{8}$ " dia. ...				2	L72	C	
26FP/13461	21SS3264	Clip, cable, $1\frac{7}{8}$ " dia. ...				3	L72	C	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Mati. Spec.	Cl. of St.	Plate and illust'n No.
		1	2	3	4			M.R.	
EQUIPMENT, R.C.M., IN CABIN (T4719)									
<i>(Cont'd)</i>									
26FP/13928	23SS3264					2	L72	C	
26FP/13183	24SS3264					7	L72	C	
26FP/13569	26SS3264					2	L72	C	
4315	10bSS4205					2	PVC	C	
	5T3403					1	—		
	18T3406					1	—		
10HB/9070	44T3408					1	—	B	
10HB/9071	45T3408					1	—	B	
10HB/9072	46T3408					1	—	B	
10HB/9073	47T3408					1	—	B	
10HB/9074	48T3408					1	—	B	
10HB/9075	49T3408					1	—	B	
	53T3408					1	—		
	54T3408					1	—		
	63T3409					1	—		
10HB/9994	65T3409					1	—	B	
10HB/10530	66T3409					1	—	B	
10HB/8386	19T4053					1	—	B	
	2T4714					1	—		
	4T4714					1	—		
	2T4715					1	—		
	2T4716					1	—		
	3T4716					1	—		
	4T4716					1	—		
	32T4716					1	—		
	5T4717					1	—		
	6T4717					1	—		
	10T4717					1	—		
	12T4717					1	—		
	13T4717					1	—		

**RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
		1	2	3	4			St. M.R.	
EQUIPMENT, R.C.M., IN CABIN (T4719)									
(Cont'd)									
10HB/10512	14T4717	Connector, R.P.B. plug 190 to JB.	1	—		
	17T4717	Connector, R.P.B. plug 922 to JB.	1	—		
	18T4717	Connector, R.P.B. plug 923 to JB.	1	—		
	19T4717	Connector, control unit to TB. 1065	1	—		
	8T5122	Connector, F.P.B. plug 1002 to test panel receiver aerial, starboard	1	—	B	
	10HB/10513	9T5122	Connector, F.P.B. plug 1003 to test panel receiver aerial, port	1	—	B
		10T5122	Connector, T.R. unit to F.P.B. plug 1005	1	—	B
	10HB/10514	10T5122	Connector, filter unit to F.P.B. plug 1004	1	—	B	
	10HB/10513	11T5122	Connector, T.R. unit to filter unit	1	—	B	
	10HB/10516	12T5122	Connector, dimmer switch to 3P	1	—	B	
10HB/10517	13T5122	Connector, indicator unit to T.R. unit	1	—	B		
10HB/10518	14T5122	Connector, T.R. unit to F.P.B. plug 1000	1	—	B		
10HB/10519	16T5122	Connector, F.P.B. plug 1001 to test panel transmitter aerial	1	—	B		
10HB/10520	17T5122	Connector, test panel to 11P	1	—	B		
10HB/10521	18T5122	Fairlead, half	2	—		
	16T4287	Plug, socket	1	—		
	PLESSEY CZ62277/0	Plug, socket	1	—		
	PLESSEY CZ62277/1	Plug, socket	1	—		
	PLESSEY CZ62277/2	Plug, socket	1	—		
	PLESSEY CZ62271/0	Plug, socket	1	—		
	PLESSEY Z61889/3	Plug, socket	1	—		
	PLESSEY Z61889/4	Plug, socket	1	—		
	PLESSEY CZ61886/1	Plug, socket	1	—		
	PLESSEY CZ61887/5	Plug, socket	1	—		
10H/20413 5X/6623	—	Socket	1	—	B	
	15V5650	Socket, for terminal blocks	10	—	C	

RADIO AND RADAR INSTALLATION

R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
EQUIPMENT, R.C.M., IN FUSELAGE CENTRE PORTION (T4720)									
		Spares for :—							
	AS4674	Bush, cable				2	—		
	456T3434	CABLE, FR. 456, GROUP				1	—		
26FP/13135	5SS3264	Clip, cable, $\frac{3}{16}$ " dia.				6	L72	C C C C C C C C C C C C C C	
26FP/13093	8SS3264	Clip, cable, $\frac{1}{2}$ " dia.				4	L72		
26FP/13687	13SS3264	Clip, cable, $1\frac{1}{16}$ " dia.				1	L72		
26FP/13266	18SS3264	Clip, cable, $1\frac{1}{8}$ " dia.				1	L72		
26FP/13374	22SS3264	Clip, cable, $1\frac{1}{4}$ " dia.				5	L72		
26FP/13461	21SS3264	Clip, cable, $1\frac{3}{16}$ " dia.				5	L72		
26FP/13928	23SS3264	Clip, cable, $1\frac{1}{2}$ " dia.				2	L72		
26FP/13569	26SS3264	Clip, cable, $1\frac{5}{8}$ " dia.				9	L72		
26FP/13899	28SS3264	Clip, cable, 2" dia.				2	L72		
6234	31SS3264	Clip, cable, $2\frac{1}{8}$ " dia.				1	L72		
26FP/6535	32SS3264	Clip, cable, $2\frac{1}{2}$ " dia.				4	L72		
	10aSS4205	Clip, cable, insulated, $\frac{3}{16}$ " dia.				1	PVC		
	4T3403	Connector, aerial switch unit to T.R.				1	—		
	6T3403	Connector, coder unit to R.P.B. plug 155... ..				1	—		
	7T3403	Connector, coder unit to T.R.				1	—		
	8T3403	Connector, aerial switch unit to aerial switch and TB. 646				1	—		
	3T4713	Connector, R.P.B. plug 189 to plug break 916				1	—		
	4T4713	Connector, R.P.B. plug 915 to plug break 915				1	—		
	3T4714	Connector, R.P.B. plug 174 to plug break 894 former 442.5				1	—		
	5T4714	Connector, R.P.B. plug 1013 to plug break 1020, at former 442.5				1	—		
	3T4715	Connector, R.P.B. plug 200 to plug break 914				1	—		
	5T4716	Connector, R.P.B. plug 925 to plug break 895				1	—		
	6T4716	Connector, R.P.B. plug 926 to plug break 896				1	—		
	7T4716	Connector, R.P.B. plug 927 to plug break 897				1	—		
	23T4717	Connector, R.P.B. plug 922 to plug break 905				1	—		
	24T4717	Connector, R.P.B. plug 923 to plug break 906				1	—		
	25T4717	Connector, R.P.B. plug 190 to plug break 904				1	—		
10HB/10522	19T5122	Connector, transmitter aerial socket 52 to R.P.B. plug 1001				1	—	C	
10HB/10523	20T5122	Connector, transmitter aerial socket 51 to R.P.B. plug 1000				1	—	C	
11284	9SS4294	Strap, cable				41	—		
	10SS4294	Strap, cable				41	—	C	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
		1	2	3	4			St. M.R.	
EQUIPMENT AND CABLES TO R.C.M. AERIAL AT CENTRE ENGINE RIB (T4642)									
Spares for :-									
26FP/15023 12370	8T4642	Bracket, cable clip, at inboard jet pipe ...				1	S510	C	
	10SS3863	Clip, cable, 3/4" dia. ...				7	L72		
	14SS3863	Clip, cable, 1" dia. ...				3	L72		
	11T4507	Connector, No. 1 aerial to plug break 909				1	—		
	12T4507	Connector, No. 2 aerial to plug break 908				1	—		
	13T4507	Connector, No. 3 aerial to plug break 912				1	—		
	9T4642	Fairlead, half, 1/2" x 3/4" x 3" ...				2	BS2572		
	16T4642	Fairlead, half, 1/2" x 1/2" x 2 1/2" ...				6	BS2572		
	5T4642	Packing, for bracket, at jet pipe ...				2	Asbestos		
	10SS3860	Packing, for clips ...				7	Novatex		
6T4642	Washer, special, for clips on rib ...				2	L72			
EQUIPMENT, R.C.M., IN FIN (T4778)									
Spares for :-									
10AD/153	—	Adaptor, aerial feeder, type 145 ...				1	—	A	
				(See Radio and Radar—Gee Installation)					
10B/18937	—	Aerial, V.H.F., type 10228 ...				1	—	A	
				(See Radio and Radar, V.H.F. Installation)					
	5T3484	Bracket, for cleat ...				3	L72		
	4T3484	Bracket, aerial feeder adaptor ...				1	L72		
	480T3434	CABLE, FR. 480, GROUP ...				1	—		
	7T3484	Cleat, cable ...				6	BSS668		
10HA/13916	—	Connector ...				—	—	B	
				(See Radio and Radar—Gee Installation)					
10HB/9155	4T4880	Connector, V.H.F. wide band aerial to aerial relay				1	—	B	
10HB/9153	2T4880	Connector, transmitter to aerial relay ...				1	—	B	
10HB/9154	3T4880	Connector, transmitter unit to aerial relay				1	—	B	

RADIO AND RADAR INSTALLATION

R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and illust'n No.
		1	2	3	4			M.R.	
EQUIPMENT, R.C.M., AT NAVIGATOR'S STATION (Z9834)									
10D/20565	—	Spares for:— Box, junction, type 9775				1	—	A	
	25Z7365	CABLE, SAFETY, 11' LONG, GROUP				1	—		
	26Z7365	CABLE, SAFETY, 12½' LONG, GROUP				1	—		
	1Z9822	CRATE, RADAR, GROUP (See Radio and Radar—Conduits, Crates, Fairleads and Troughs)				1	—		
9D/1400	—	Indicator, forward throw				1	—	A	
10J/214	—	Indicator, control				1	—	A	
MOUNTING, CONTROL UNIT TYPE 12580 (T4709)									
26FP/8735	1V5650	Spares for:— Block, terminal, No. 1217				1	—	C	
	3T4709	BRACKET, MOUNTING, GROUP				1	—		
	3107V6384	CABLE, F3107, GROUP				1	—		
5X/6621	AS4580/1	Clip, cable				1	—		
5L/9959118	10V5650	Ferrule, at terminal block				6	—	C	
11422	25S4204	Filament				3	—	B	
5CX/5364	—	Grommet				1	—	C	
5X/6622	14V5650	Lampholder				3	—	B	
5X/6623	15V5650	Socket, double tier				2	—	C	
10L/16495	—	Socket, single tier				1	—	C	
	7Z9841	Unit, control, type 12580... ..				1	—	A	
	—	PANEL, FORWARD THROW INDICATOR, GROUP				1	—		
	135SS6002	Spares for:— Label, " Instrument Panel Lights—Chart-board Lights "				1	L59		
	152386	PANEL, DIMMER, GROUP				1	—		
10H/0112990	—	Spares for:— Knob, dimmer resistor				2	—	C	
	370SS6005	Label, " Monitor—Alarm "				1	L59		
	345SS6006	Label, " Dimmer—Tail Warning "				1	L59		
	252386	Panel, bare				1	DTD626		
5CW/6660	ROTAX N136931	Plate, fixing, monitor-alarm switch				2	—	C	
5CW/7474	THORN 80/10/0949	Resistor, miniature dimmer				2	—	B	
5CW/6659	ROTAX N136930	Shroud, monitor-alarm switch				1	—	C	
5CW/5823	—	Switch, monitor-alarm				1	—	B	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
EQUIPMENT, R.C.M., AT NAVIGATOR'S STATION (Z9834) (Cont'd)									
PANEL, POWER SUPPLY (S2381)									
Spares for:—									
6A/3682	12S2381	Bracket, plug break				1	L72	A	
	—	Gauge, temperature				1	—		
	671SS6005	Label, " 944-950-952-951 "				1	L59		
	18S2381	PANEL, E.C.M. COOLANT TEMPERATURE GAUGE, GROUP				1	—		
Spares for:—									
12462	401SS6030	Label, " E.C.M. Coolant Temp. "				1	L59	C	
	1S2416	PANEL, BLEED AIR TURBINE, GROUP				1	—		
Spares for:—									
5CZ/5695	DOWTY C5175Y.MK.1	Indicator, magnetic, 3 position				1	—	B	
5CZ/5696	DOWTY C5175Y.MK.2	Indicator, magnetic, 3 position				2	—	B	
	2S2416	PANEL, GROUP				1	—		
Spares for:—									
	645SS6005	Label, " Bleed Valve "				1	L59		
	644SS6005	Label, " Turbine-Alt/Reset "				1	L59		
	314SS6005	Label, " Bleed Air Turbine "				1	L59		
	643SS6005	Label, " 200V. 3 Phase Ground supply "				1	L59		
	646SS6005	Label, " 200 V. 3 Phase Supply "				1	L59		
10502	4SS4624	Plate, shroud fixing, " Run "				1	—	C	
10503	4SS4625	Plate, shroud fixing, " Stop "				1	—	C	
10504	2SS4624	Plate, shroud fixing, " On "				1	—	C	
10505	2SS4625	Plate, shroud fixing, " Off "				1	—	C	
5CW/6659	ROTAX N136930	Shroud, for switches				2	—		
5CW/5060	—	Shroud, centre switch				1	—	C	
5CW/5823	—	Switch, " On-Off ", " Run-Stop "				2	—	B	
5CW/5057	—	Switch, centre				1	—	B	
	1S2382	PANEL, POWER SUPPLY, GROUP				1	—		
Spares for:—									
5CZ/6511	PLESSEY 7CZ107626/32	Indicator, 3 position drum, Mk. 2				1	—		
	2S2382	PANEL, GROUP				1	—		
Spares for:—									
	289SS6005	Label, " RCM. Power Supplies Panel "				1	L59		
	292SS6005	Label, " Cooling "				1	L59		
	290SS6005	Label, " On-Off "				2	L59		
	291SS6005	Label, bottom				1	L59		
5CW/5060	—	Shroud, switch				12	—	C	
5CW/5057	—	Switch, button, " On "				6	—	B	
5CW/5058	—	Switch, button, " Off "				6	—	B	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.	
		1	2	3	4					
EQUIPMENT, R.C.M., AT NAVIGATOR'S STATION (Z9834) (Cont'd)										
9601 5Q/25706 5CW/2530	1S2384	PANEL, FREQUENCY AND VOLT-METER, GROUP				1	—			
		Spares for:—								
		15SS4204	Grommet			1	—	C		
		567SS6002	Label, " Chartboard Light "			1	L59			
		302SS6005	Label, " Bleed Air Turbine "			1	L59			
		SANGAMO WESTON S109/6/60 2S2384	Meter, frequency			1	—	A		
		—	Panel, bare			1	DTD626			
		SANGAMO WESTON S78/5/577	Switch, dimmer			1	—	A		
			Voltmeter			1	—			
	6A/4041 6A/4043 10589 10590 10591 10592	1S2383	PANEL, FUEL CONTENTS, GROUP				1	—		
		Spares for:—								
		SMITH'S AG14	Gauge, fuel contents, No. 1 & 4 engines			2	—	A		
		SMITH'S AG15	Gauge, fuel contents, No. 2 & 3 engines			2	—			
		876SS6001	Label, " No. 1 Engine "			1	L59	A C C C		
		877SS6001	Label, " No. 2 Engine "			1	L59			
		878SS6001	Label, " No. 3 Engine "			1	L59			
		879SS6001	Label, " No. 4 Engine "			1	L59			
		2S2383	PANEL, GROUP				1	—		
		1Z9908	TRAY, MOUNTING, GROUP				1	—		
	10Z9824	Spares for:—								
		Bolt, quick release (made from 10B/17446)			2	—				
10L/16351 10L/16346 10L/16349 16K/1660 16K/1660	—	Unit, control, type 7812			1	—	A A A			
	—	Unit, control, type 9156			1	—				
	—	Unit, control, type 9122			1	—				
	036290584	Unit, I.F.F. control			1	—				
	036290585	Unit, S.I.F. control			1	—				

RADIO AND RADAR INSTALLATION

R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
EQUIPMENT, R.C.M., IN NOSE PORTION (T4718 & Z9774)									
Spares for:—									
10H/9401047	—	Adaptor, bulkhead, right angle				4	—	B	
10B/16904	—	Aerial, type 9774				2	—	A	
10B/16903	—	Aerial, type 9772				2	—	A	
10D/20565	—	Box, junction, type 9775				1	—	A	
11421	4SS4657	Clip, cable, insulated, $\frac{1}{8}$ " dia.				3	—	C	
11428	6SS4657	Clip, cable, insulated, $\frac{3}{16}$ " dia.				2	—	C	
	4bSS4211	Clip, cable, elliptical, insulated				4	—	C	
26FP/13297	19SS3264	Clip, cable, $1\frac{1}{8}$ " dia.				1	L72	C	
26FP/13374	22SS3264	Clip, cable, $1\frac{1}{8}$ " dia.				1	L72	C	
26FP/13266	18SS3264	Clip, cable, $1\frac{1}{8}$ " dia.				2	L72	C	
26FP/13112	12SS3264	Clip, cable, 1" dia.				1	L72	C	
	AS4680	Clip, cable				8	—	C	
28E/17464	AS4686	Clip, cable				7	—	C	
	AS4683	Clip, cable				2	—	C	
10H/0540015	—	Connector, bulkhead, co-axial				4	—	B	
	PLESSEY CZ62271/0	Connector, bulkhead				2	—	B	
	PLESSEY CZ62270/0	Connector, bulkhead				1	—	B	
	2T4717	Connector, receiver (blanking) to junction box				1	—	B	
	3T4717	Connector, receiver (supply) to junction box				1	—	B	
	4T4717	Connector, receiver (output) to junction box				1	—	B	
	7T4717	Connector, receiver (blanking) to junction box				1	—	B	
	8T4717	Connector, receiver (supply) to junction box				1	—	B	
	9T4717	Connector, receiver (output) to junction box				1	—	B	
	11T4717	Connector, forward pressure dome plug 924 to junction box (output)				1	—	B	
	15T4717	Connector, blanking unit (supply) to junction box				1	—	B	
	16T4717	Connector, blanking unit (blanking output) to junction box				1	—	B	
	20T4717	Connector, junction box (supply) to forward pressure dome plug 928				1	—	B	
	21T4717	Connector, blanking unit to modulator plug 604				1	—	B	
	22T4717	Connector, junction box (blanking) to forward pressure dome plug 929				1	—	B	
10HB/10506	2T5122	Connector, port aerial socket 43 to aerial switch unit socket 44				1	—	B	
10HB/10507	3T5122	Connector, starboard aerial socket 43 to aerial switch unit socket 45				1	—	B	
10HB/10508	4T5122	Connector, port aerial socket 42 to F.P.B. plug 1003				1	—	B	
10HB/10509	5T5122	Connector, starboard aerial socket 42 to F.P.B. plug 1002				1	—	B	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
EQUIPMENT, R.C.M., IN NOSE PORTION (T4718 & Z9774) (Cont'd)									
10HB/10510	6T5122					1	—	B	
10HB/10511	7T5122					1	—	B	
10HB/10524	21T5122					1	—	B	
	1Z9761					1	—		
	1Z9789					1	—		
12453	3T4858					2	—	C	
12454	4T4858					2	—	C	
10D/20567	—					2	—	A	
10AJ/278	—					3	—	A	
10D/20570	—					1	—	A	
	69D8628					1	Rubber		
EQUIPMENT, R.C.M., IN NOSE-WHEEL BAY (T5236)									
10D/20334	—					1	—	A	
16K/1660	036290932					1	—	A	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		EQUIPMENT, R.C.M., IN POWER COMPARTMENT AND OVER JET TUBES (4T4724)							
		Spares for:—							
		CONDUIT, OVER JET PIPES, PORT AND STARBOARD (1 & 2F11086)							
		(See Radio and Radar—Conduits, Crates, Ducts, Fairleads and Troughs)							
	AS4580/5	Clip, cable	12	—		
	5T4715	Connector, filter to plug break 921	1	—		
	9T4715	Connector, filter to plug break 920	1	—		
	8T4724	Fairlead, half	4	—		
		EQUIPMENT IN TRAILING EDGE, PORT AND STARBOARD (2 & 3T4724)							
		Spares for:—							
10AD/464	—	Adaptor, at rib 842.186	2	—	B	
	AS4580/5	Clip, cable	42	—		
	10T4715	Connector, port	1	—		
	6T4715	Connector, starboard	1	—		
	11T4724	Plate, adaptor mounting	1	L72		
		MOUNTING, EQUIPMENT IN CRATE AND CONTROL UNIT ON TEST PANEL (T5040)							
		Spares for:—							
10Q/16438	—	Indicator, type 6651	1	—	A	
10L/16497	—	Interrogator, control, type 6652	1	—	A	
10AJ/723	—	Mounting	1	—	A	
10A/19429	—	Washer, check	4	—	C	
10A/17930	—	Washer, check	1	—	C	
		MOUNTING, CONTROL UNITS UNDER PILOT'S FLOOR, PORT (T5026)							
		Spares for:—							
10H/Z540015	—	Adaptor	3	—	B	
10H/Z970055	—	Cap, blanking	1	—	C	
	PATON AP1288	Cap, protective	3	—		
11004	28SS3264	Clip, cable	1	L72	C	
11422	25S4204	Grommet	1	—	C	
	3T5026	PANEL, CONTROL UNIT, GROUP				1	—		
		Spares for:—							
	518SS6006	Label	1	L59		
	4T5026	Strut, panel	1	L54		
5CW/2453	—	Switch, dimmer	1	—	A	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
		MOUNTING, FILTER UNIT IN NOSE-WHEEL BAY (T5037)							
	2T5037	Spares for:—							
		FAIRLEAD, GROUP				2	—		
	2aT5037	Consisting of:—							
	2bT5037	Fairlead, half, 2" x 0.83" x 1/4"				1	BS2572		
		Fairlead, half, 2" x 1.25" x 1/4"				1	BS2572		
10P/16255	—	Unit, filter, type 16437				1	—	A	
		MOUNTING, EQUIPMENT ON AUXILLIARY TOP SHELF AT NAVIGATOR'S STATION (T5038)							
	78D9460	Spares for:—							
	5T5038	Block, eye-end				2	L65		
		CABLE, CHECK, GROUP				2	—		
		MOUNTING, CHARGING POINT FOR TRANSMITTER - RECEIVER (Q2419)							
	3Q2419	Spares for:—							
26FP/13092	4SS3264	Clip, hose				1	L72		
	SCHRADER 257/E	Clip, hose				1	L72	C	
	249SS6006	Hose, charging				1	—		
	52D9460	Label, " R.E.B.10 Pressure "				1	L59		
10D/21477	—	Plate, side, for eye-end block				4	L72		
	1T5039	Transmitter-receiver, type 6649				1	—	A	
		TRAY, MOUNTING, GROUP				1	—		
	10AJ/144	Spares for:—							
10B/17446	—	Mounting, A.V., type 953				4	—	B	
	8T5039	Pin, quick release, type 100				2	—	B	
		Spigot				2	SS10, S21		
10P/16256	—	Unit, filter, type 16438				1	—	A	
10A/17930	—	Washer, check				4	—	C	
	S.T.C. L133987/1	Mounting, sliding unit				1	—		
		MOUNTING, RELAY BOX FOR SIMULATED BOMBING (1T4608- Pre-Mod. 1427) (10T4608-Mod. 1427)							
	9971	Spares for:—							
11357	1T4607	BOX, RELAY, GROUP (Pre-Mod. 1427)				1	—	A	
	10T4607	BOX, RELAY, GROUP (Mod. 1427)				1	—	A	
10C/0124700	—	Spares for:—							
	874SS6003	Capacitor				1	—	C	
	875SS6003	Label, " 874 "				1	L59		
10H/0560070	—	Label, " 875 "				1	L59		
10F/0119239	—	Plug				1	—	B	
10F/0119253	—	Relay				1	—	B	
10W/0222181	—	Relay				1	—	B	
10W/0222085	—	Resistor, 27K, 1/4W (Pre-Mod. 1427)				1	—	B	
		Resistor, 4.7K, 1/4W				1	—	C	

RADIO AND RADAR INSTALLATION
R.C.M. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
BOX, RELAY (1 & 10T4607) (Cont'd)									
10W/0113483	—				Resistor, 680 ohms, 4½W (Mod. 1427) ...	1	—	C	
10W/0221205	—				Resistor, 560 ohms, ½W (Mod. 1427) ...	1	—	C	
8044	5T4607				Seal, rubber	1	—	C	
10H/0560250	—				Socket	1	—	B	
	6T4607				Wire, equipment, 14/-0076 type 2, black, 36" long	1	—		
10AJ/	A.V.A. AVA2305/H				Mounting, A.V.	4	—	A	
	1T5035				SHELF, AUXILLIARY TOP, AT NAVIGATOR'S STATION, GROUP	1	—		
	S.T.C. 140/LRU/170B				Unit, sliding	1	—		

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

