


**RADIO AND RADAR INSTALLATION
TAIL WARNING (E.C.M.) INSTALLATION**

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		TAIL WARNING (E.C.M.) INSTALLATION (T4713)							
		Spares for:—							
10D/18501 26FP/8735	— 1V5650	Head, radar, type 1	1	—	A	
		Block, terminal	5	—	C	
11513	530T3434	CABLE, RADAR HEAD TO TB's 1039-1040-1041, GROUP				1	—	C	
	510T3434	CABLE, TB. 1041 TO EARTH, GROUP ...				1	—		
	545T3434	CABLE, TB. 1041 TO TB. 1321, GROUP				1	—		
	531T3434	CABLE, TB's 1039 & 1040 TO RELAY 630, GROUP				1	—		
	672T3434	CABLE, DIMMER SWITCHES TO TB. 863, GROUP				1	—		
	643T3434	CABLE, DIMMER SWITCHES TO TB. 1065, GROUP							
	642T3434	CABLE, TB. 1065 TO INDICATOR UNIT, GROUP				1	—		
	4T4713	CABLE, R.P.B. PLUG 917 TO PLUG 915, GROUP				1	—		
	3T4713	CABLE, R.P.B. PLUG 189 TO PLUG 916, GROUP				1	—		
	6T4511	CABLE, PANEL 44P, PLUG 915, TO RADAR HEAD, GROUP				1	—		
	5T4511	CABLE, PANEL 44P, PLUG 916, TO RADAR HEAD, GROUP				1	—		
5CW/7474	THORN 80/10/0949	Resistor, miniature dimmer				2	—	C	
10Q/16420	—	(See R.C.M. Installation) Unit, tail warning indicator at navigator's station				1	—	A	

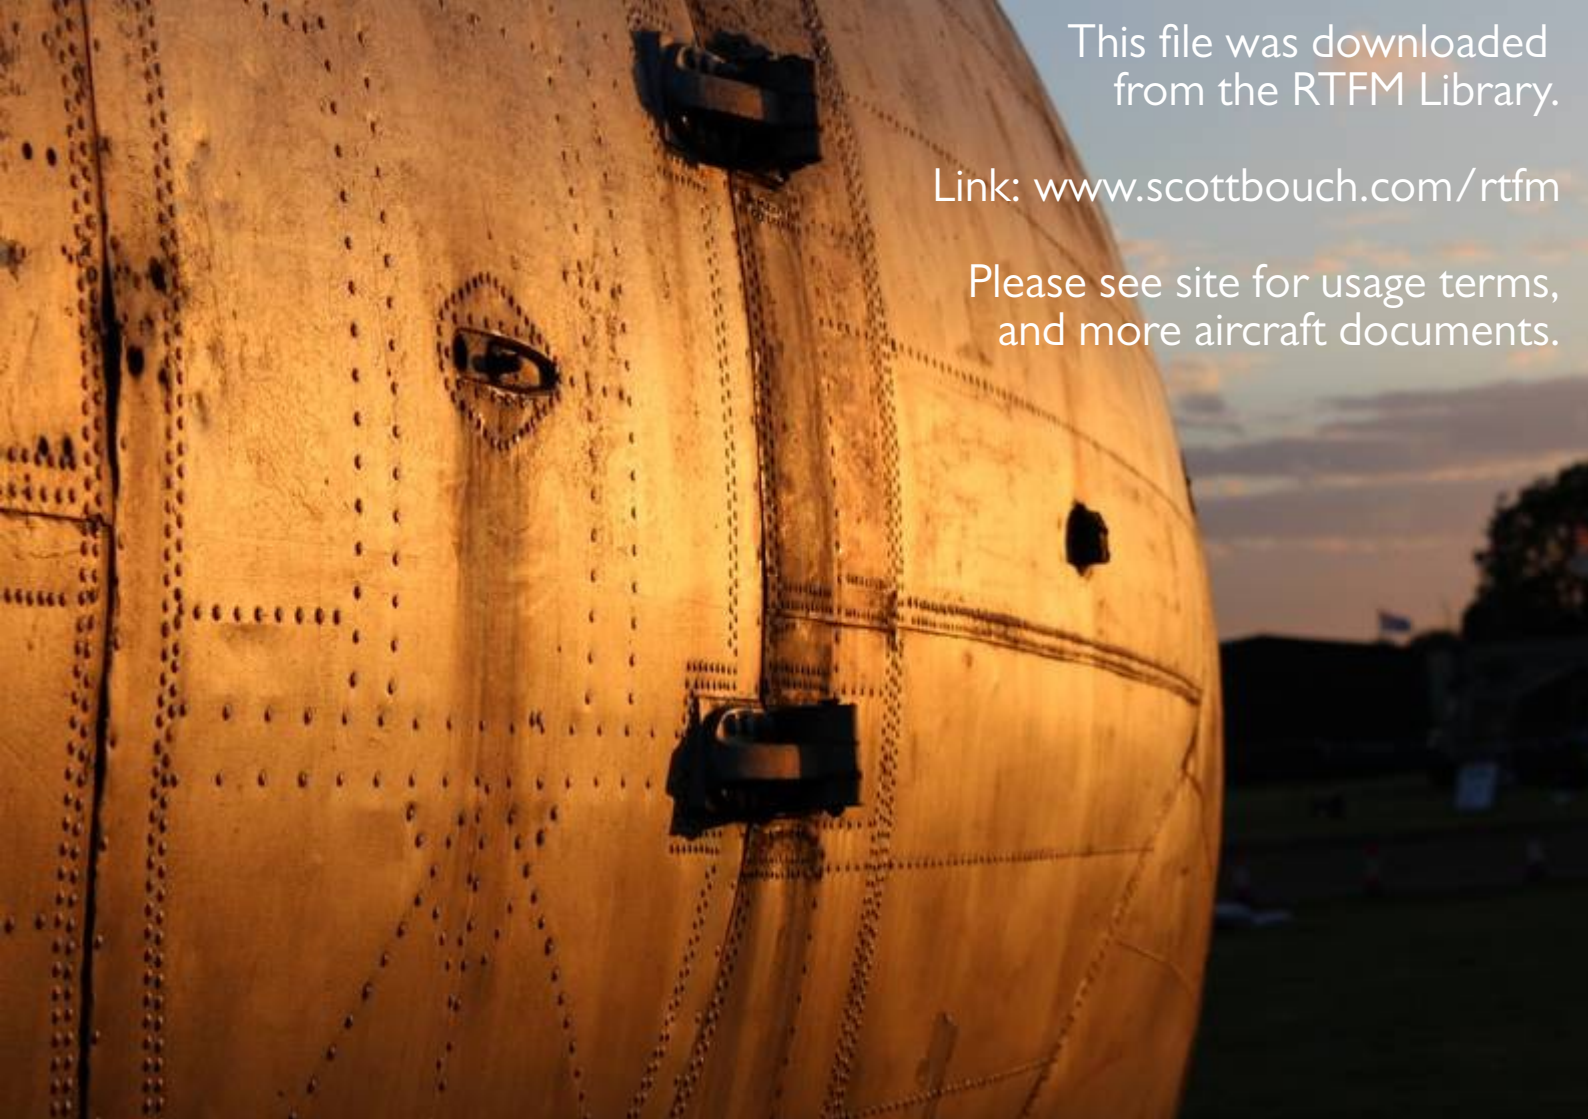

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.