

RADIO AND RADAR INSTALLATION

V.H.F. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St. M.R.	Plate and Illust'n No.
		1	2	3	4				
10B/19122	—	V.H.F. INSTALLATION (T3815) (Pre-Mod. 291) (T4823) (Mod. 291) Spares for:— Aerial, wide band BOX, PLUG AND RESISTOR (T4607) (See R.C.M. Installation)				1	—	B	
	150T3434	CABLE, FR. 150, RELAY TYPE 125 TO 51P, GROUP (Pre-Mod. 291)				1	—		
	151T3434	CABLE, FR. 151, RELAY 125 TO 51P, GROUP (Pre-Mod. 291)				1	—		
	153T3434	CABLE, FR. 153, 51P TO EARTH, GROUP (Pre-Mod. 291)				1	—		
	154T3434	CABLE, FR. 154, 51P TO EARTH, GROUP (Pre-Mod. 291)				1	—		
	155T3434	CABLE, FR. 155, 51P TO 26P, GROUP (Pre-Mod. 291)				1	—		
	156T3434	CABLE, FR. 156, 51P TO 26P, GROUP (Pre-Mod. 291)				1	—		
	197T3434	CABLE, FR. 197, 5J. PLUG 463 TO TB's 371 & 687, GROUP (Pre-Mod. 291)				1	—		
	198T3434	CABLE, FR. 198, 5J. PLUG 461 TO TB's 370 & 684, GROUP (Pre-Mod. 291)				1	—		
	200T3434	CABLE, FR. 200, EARTHING, GROUP ...				2	—		
	204T3434	CABLE, FR. 204, 5J. PLUG 464 TO 54P, GROUP (Pre-Mod. 291)				1	—		
	241T3434	CABLE, FR. 241, R.P.B. PLUG 170 TO 51P, GROUP, (Pre-Mod. 291)				1	—		
	245T3434	CABLE, FR. 245, R.P.B. PLUG 170 TO 11P, GROUP (Pre-Mod. 291)				1	—		
	280T3434	CABLE, FR. 280, R.P.B. PLUG 171 TO 54P, GROUP (Pre-Mod. 291)				1	—		
	281T3434	CABLE, FR. 281, R.P.B. PLUG 171 TO TB's 381 & 384, GROUP (Pre-Mod. 291)				1	—		
	301T3434	CABLE, FR. 301, TB's 381 & 384 TO TB's 385 & 386, GROUP (Pre-Mod. 291)				1	—		
	302T3434	CABLE, FR. 302, TO 51P TO TB. 386, GRP (Pre-Mod. 291)				1	—		
303T3434	CABLE, FR. 303, 51P TO TB. 386, GROUP (Pre-Mod. 291)				1	—			

RADIO AND RADAR INSTALLATION
V.H.F. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
		1	2	3	4			Sec.	
		V.H.F. INSTALLATION (T3815) (Pre-Mod. 291) (T 4823) (Mod. 291) (Cont'd)							
	304T3434	CABLE, FR. 304, 51P TO TB. 385, GROUP (Pre-Mod. 291)				1	—		
	306T3434	CABLE, FR. 306, 51P TO TB. 386, GROUP (Pre-Mod. 291)				1	—		
	307T3434	CABLE, FR. 307, 51P TO TB. 386, GROUP (Pre-Mod. 291)				1	—		
	486T3434	CABLE, FR. 486, 4P TO SIM. BOMB TONE PANEL ON-OFF SWITCH, GROUP				1	—		
	487T3434	CABLE, RELAY AT 54P TO JB. 154, GRP				1	—		
	488T3434	CABLE, FR. 488, RELAY AT 54P TO 4P, GROUP				1	—		
	489T3434	CABLE, FR. 489, LAMP TO EARTH, GRP				1	—		
	490T3434	CABLE, FR. 490, STARTER SWITCH TO LAMP, GROUP				1	—		
	492T3434	CABLE, FR. 492, CONTROL UNIT TO JUNCTION BOX AT 3P, GROUP				1	—		
	660T3434	CABLE, FR. 660, PLUG 874 AT 54P TO SIM. BOMB PANEL, GROUP (Mod. 291)				1	—		
	681T3434	CABLE, FR. 681, J.B. AT 54P TO RELAY 102A, GROUP (Mod. 291)				1	—		
	682T3434	CABLE, FR. 682, CONTROL UNIT TO RELAY 102A, GROUP				1	—		
10HA/14085	—	Connector, No. 1 T.R. unit to plug 176 (Pre-Mod. 291)				1	—		B
10HA/14089	—	Connector, No. 1 T.R. unit to 51P ...				1	—		B
10HA/1490	—	Connector, No. 2 T.R. unit to 51P ...				1	—		B
10HA/14087	—	Connector, No. 2 T.R. unit to plug 178 (Pre-Mod. 291)				1	—		B
10HA/14091	—	Connector, No. 1 T.R. unit to 51P inlet 1 (Pre-Mod. 291)				1	—		B
10HA/14092	—	Connector, No. 2 T.R. unit to 51P inlet 2 (Pre-Mod. 291)				1	—		B
10HA/14093	—	Connector, No. 1 T.R. unit to relay ...				1	—		B
10HA/14094	—	Connector, No. 2 T.R. unit to relay ...				1	—		B
10HA/14095	—	Connector, relay to fin ...				1	—		B
10HB/4039	—	Connector, control unit to plug 176 ...				1	—		B
10HB/4040	—	Connector, control unit to plug 178 ...				1	—		B

RADIO AND RADAR INSTALLATION
V.H.F. INSTALLATION

Ref. No.	Part No.	Description				No. off	Mati. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		MOUNTING, PANEL 51P AND EQUIPMENT (T 3676)							
		Spares for:—							
10H/1332	—	Adaptor, right angled				2	—	B	
	2T3676	BRACKET, MOUNTING PLUG BREAK AND RELAY, GROUP				1	—		
	3T3676	Bracket, aerial plug break				1	L72		
	4T3674	Bracket, support tube, top i/b				2	L72		
	5T3614	Bracket, support tube, top, o/b				2	L72		
	10T3614	Bracket, shelf, starboard				1	L72		
	11T3614	Bracket, shelf, port				1	L72		
10H/19610	—	Connector, co-axial, type 757				2	—	B	
	578SS6001	Label, "A.D.F."				1	L59		
	579SS6001	Label, "GEE"				1	L59		
	1T3657	PANEL, V.H.F. TEST, 51P, GROUP				1	—		
		Spares for:—							
26FP/8735	1V5650	Block, terminal Nos. 361, 362, 363 and 364				4	—	C	
10H/3780	—	Block, terminal, No's 366, 367, 368 and 369				4	—	B	
	HELLERMAN 4367	Body, gland, type "A"				2	—		
	HELLERMAN 4371	Body, gland, type "Z"				2	—		
	5T3791	Bracket, (Made from 10B/13766)				4	—		
	HELLERMAN HV3206	Bung				2	—		
	HELLERMAN HV3229	Bung				2	—		
	200T3434	CABLE, FR. 200, EARTHING GRP				1	—		
	240T3434	CABLE, FR. 240, GROUP				1	—		
5X/3174	—	Gasket				2	—	C	
5X/3175	—	Gasket				2	—		
	361T3423	Label, "TB. 361"				1	L59		
	362T3423	Label, "TB. 362"				1	L59		
	363T3423	Label, TB. 363				1	L59		
	364T3423	Label, "TB. 364"				1	L59		
	366T3423	Label, "TB. 366"				1	L59		
	367T3423	Label, "TB. 367"				1	L59		
	368T3423	Label, "TB. 368"				1	L59		
	369T3423	Label, "TB. 369"				1	L59		
	10T3657	Link, terminal				4	—		
	PLESSEY Z61535	Nut, coupling				2	—		
	PLESSEY Z61536	Nut, coupling				2	—		

RADIO AND RADAR INSTALLATION
V.H.F. INSTALLATION

Ref. No.	Part No.	Description				No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
		1	2	3	4			M.R.	
		PANEL, V.H.F. TEST, 51P (T3657) (Cont'd)							
	3T3657	PANEL, LESS EQUIPMENT GROUP				1	—		
4778	9T3657	COVER, PANEL, GROUP Spares for:—				1	—	C	
28FP/154	A5/30	Fastener, dzus				4	—	C	
28FP/9425771	GA5/312	Grommet, dzus				4	—	C	
	529SS6001	Label, " V.H.F. No. 1 Test Point "				1	L59		
	530SS6001	Label, " V.H.F. No. 2 Test Point "				1	L59		
28FP/9436928	S5/225	Spring, dzus				4	—	C	
5CW/3945	—	Relay, type S, No. 4 (Pre-Mod. 152) ...				1	—	A	
10F/17287	—	Relay, type 102A (Mod. 152)				1	—	A	
5X/282	—	Shroud, plug				2	—	B	
5X/283	—	Shroud, plug				2	—	B	
10H/2206	—	Socket, mic. tel.				2	—	B	
5X/6623	15V5650	Socket, single tier				18	—	C	
5X/6622	14V5650	Socket, double tier				1	—	C	
10F/16827	—	Relay, type 125				1	—	A	
10AJ/80	—	Tray, mounting T.R. units				2	—	A	
	2T3614	TRAY, MOUNTING, PORT, GROUP				1	—		
	3T3614	TRAY, MOUNTING, STARBOARD, GROUP Spares for:—				1	—		
	824SS6000	Label, port				1	L59		
	825SS6000	Label, starboard				1	L59		
10A/17930	7T3614	Tube, support, for trays				4	T45		
	—	Washer, check				8	—	C	
		MOUNTING, SWITCH AND LAMP AT 9P (T4609) (Mod. 510) Spares for:—							
	2T4609	BRACKET, MOUNTING, GROUP ...				1	—		
	73SS6005	Label, " Sim. Bomb Tone Start " ...				1	L59		
5L/9951273	—	Filament				1	—	B	
5CX/1553	—	Lamp, red				1	—	B	
10504	2SS4624	Plate, shroud fixing, upper				2	—	C	
10505	2SS4625	Plate, shroud fixing, lower				2	—	C	
5CW/6659	ROTAX	Shroud, switch				2	—	C	
5CW/5825	N136930	Switch, " On-Off "				1	—	B	
5CW/5830	—	Switch, " Start "				1	—	B	

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

