

GROUP C 4
ENGINE ANTI-ICING (CODE EA)
CONTENTS

	Para		Para
<i>Introduction</i>	1	REMOVAL AND ASSEMBLY	
DESCRIPTION			
<i>Equipment details</i>	2	<i>General</i>	6
<i>Operation</i>	3	ILLUSTRATIONS	
SERVICING			
<i>General</i>	4	<i>Fig.</i>	
<i>Functional checks</i>	5	▶ <i>Engine anti-icing</i> (routeing and theoretical)	1
		▶ <i>Engine anti-icing</i> (routeing and theoretical) - pre-Mod	
		1429	1A ◀

TABLE

<i>Table</i>	
<i>Equipment type and Air Publication</i>	
<i>reference</i>	1

Introduction

1. This group contains the description, and operation, of the engine anti-icing circuit installed in this aircraft, together with information on the servicing required to maintain the equipment in an efficient condition. Routeing and theoretical circuit diagrams are included. For a general description of the aircraft electrical system reference should be made to Groups A1, A2 and A3 of this chapter. Detailed information on the standard items of equipment used in the circuit will be found in the Air Publications listed in Table 1.

DESCRIPTION**Equipment details**

2. To prevent ice formation in the engine compressor inlet, hot air is bled from the compressor and passed through a gate valve to an annular manifold around the leading edge of the compressor casing. From this manifold, the air is directed into the hollow inlet guide vanes, the hollow support struts, the starter exhaust struts, and is finally dispersed into the starter exhaust manifold. The supply of air delivered to the annular manifold is controlled by the gate valve which is

operated by an electric actuator and controlled by a switch in the cabin. The actuator movement controls a magnetic indicator which shows the position of the valve. The gate valve and its actuator are situated on the port side of the engine compressor. The control switch and magnetic indicator, which are both marked OPEN and SHUT, are located together on the starboard side of frame 9 in the cabin.

Operation

3. The diagram of the circuit (fig.1)


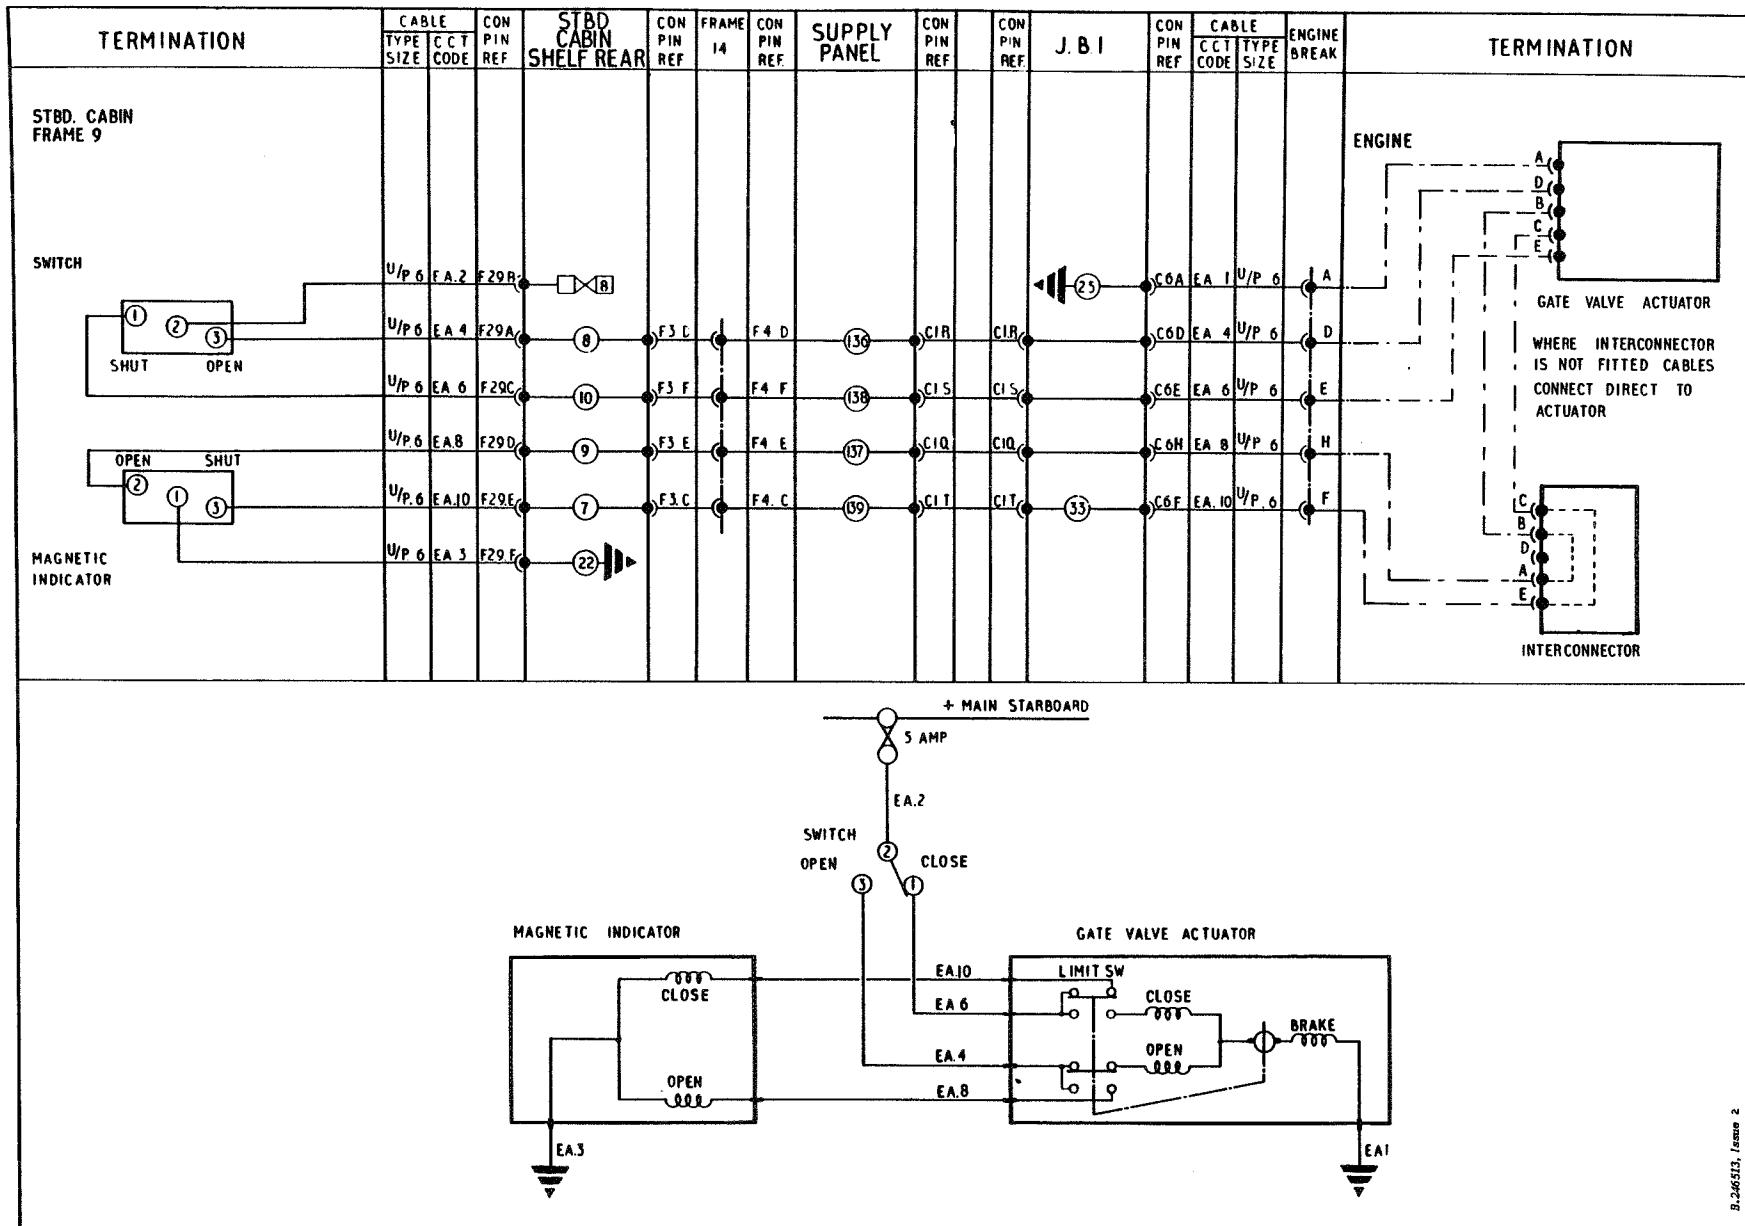


Fig.1 Engine anti-icing (routeing and theoretical) ▶ (Mod 1429 added) ◀

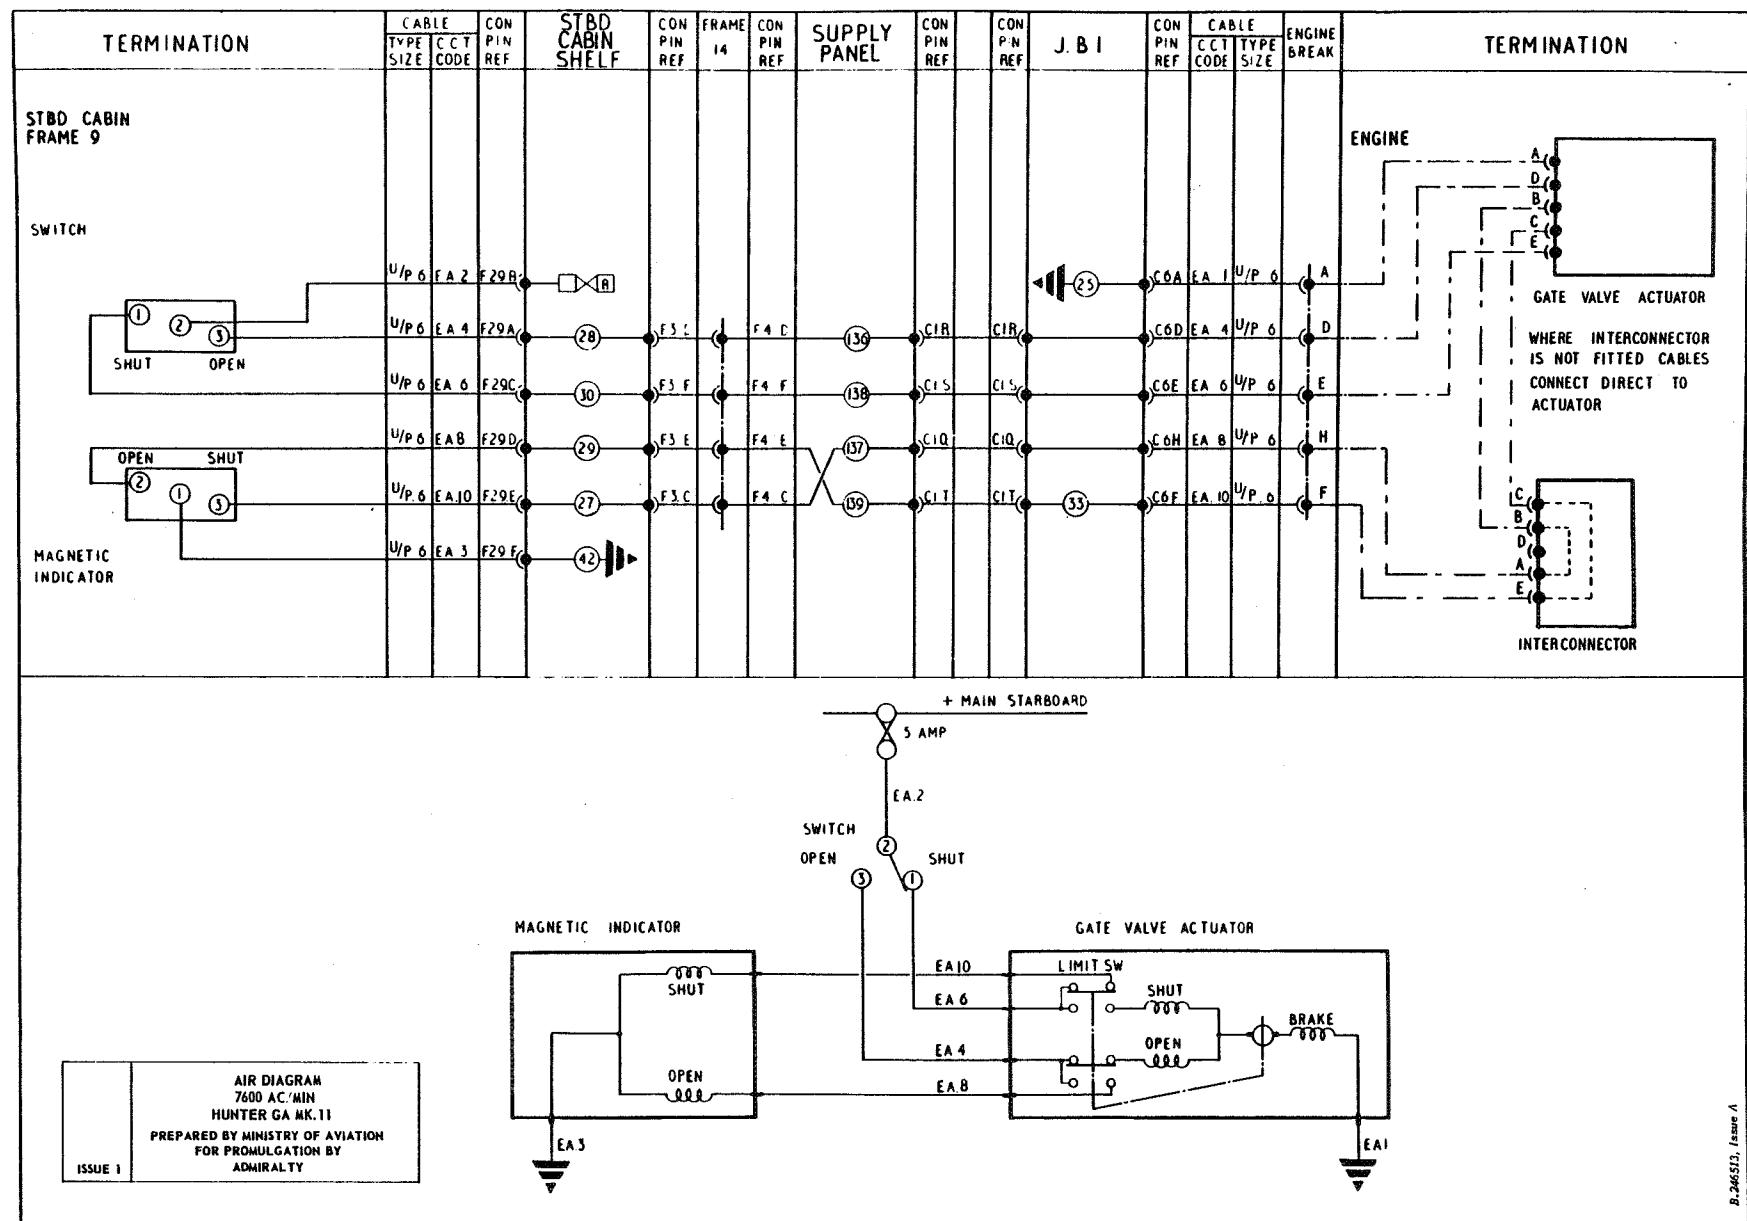

► Fig.1A Engine anti-icing (routeing and theoretical) – pre-Mod 1429 ◄

TABLE 1

Equipment type and Air Publication reference

Equipment	Air Publication
Gate valve actuator	A.P.4343D, Vol.1, Book 3, Sect.14
Tumbler switch, C.W.C. Type XD.442/1 ...	A.P.4343C, Vol.1, Book 3, Sect. 1
Magnetic indicator Plessey, CZ62161/2 ...	A.P.4343E, Vol.1, Sect.18

shows conditions when the control switch is in the SHUT position. The gate valve actuator has operated to shut the valve. The actuator shut limit switch contacts have changed over to break the supply to the 'shut' solenoid of the magnetic indicator to indicate valve SHUT. When the control switch is set to OPEN, both solenoids of the magnetic indicator are de-energized and current is fed from the switch to the 'open' field windings of the actuator, via its 'open' limit switch. The actuator then rotates in such a direction as to open the valve and allow the flow of air into the system. When the actuator reaches the limit of its travel, its 'open' limit contacts change over to stop the actuator and complete the supply to the 'open' solenoid of the magnetic indicator, which now indicates valve OPEN.

SERVICING

General

4. For general servicing of the electrical system, reference should be made to Group A.1 of this chapter. No servicing may be carried out on the gate valve actuator, other than the functional checks described in para.5. If one of the units is found to be faulty, it should be rejected as unserviceable and replaced by a new or reconditioned unit.

Functional checks

5. The following functional checks should be made to ensure that the system is operating satisfactorily:-

(1) Place the control switch to OPEN and check that the gate valve moves to the fully open position, indicated by the markings adjacent to the

gate valve operating lever. The gate valve should take approximately 10 seconds to move to the open position. Also check that the magnetic indicator is indicating OPEN.

(2) Place the control switch to SHUT and check that the valve moves to the fully closed position. Also check that the magnetic indicator is indicating SHUT.

REMOVAL AND ASSEMBLY

General

6. Once the engine has been removed, the removal and assembly of the gate valve actuator should present no difficulty. The removal of the engine is fully described in Section 4, Chapter 1 of this volume, while the location and access to the components is indicated in Group A.3 of this chapter.



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

A close-up photograph of an aircraft's fuselage. The main panel is red with several rivets visible. A grey cylindrical component is attached to the left, featuring the text 'LIGHTNING MK. 1', 'COVER PILOT HEAD', and 'EB2-88-5711'. A small black rectangular plaque is mounted on the red panel to the right of the cylinder.

LIGHTNING MK. 1
COVER PILOT HEAD
EB2-88-5711