5

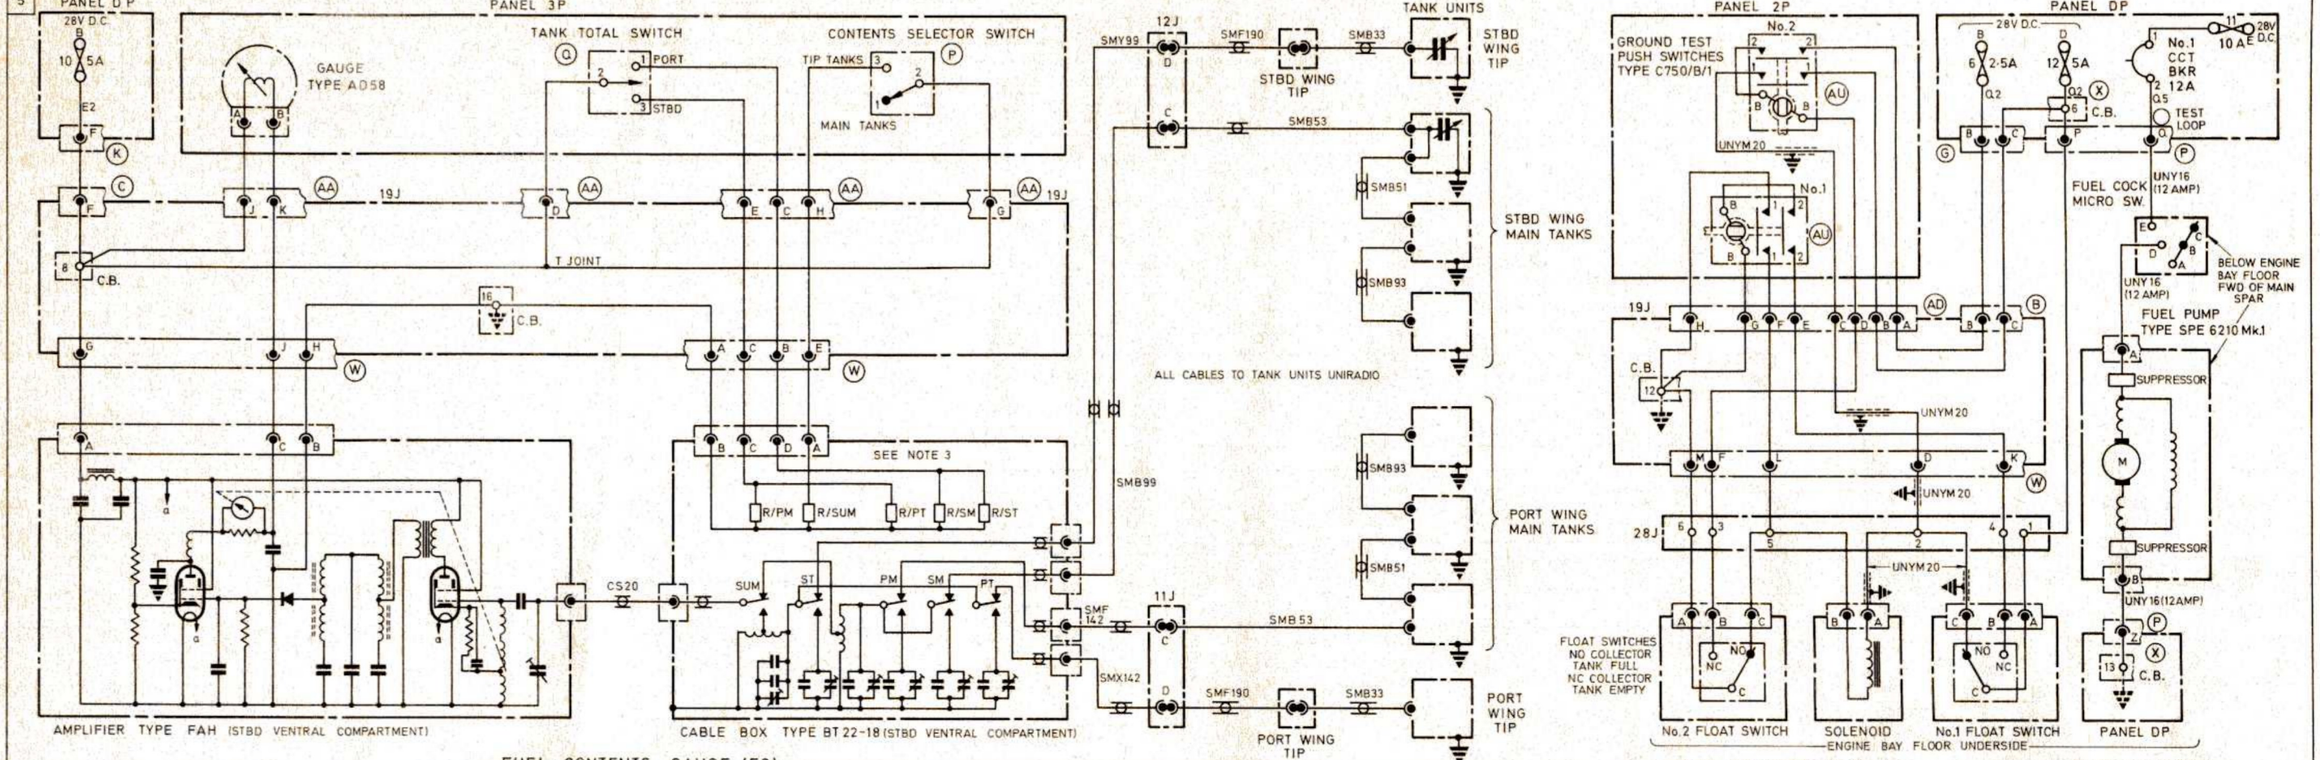

6

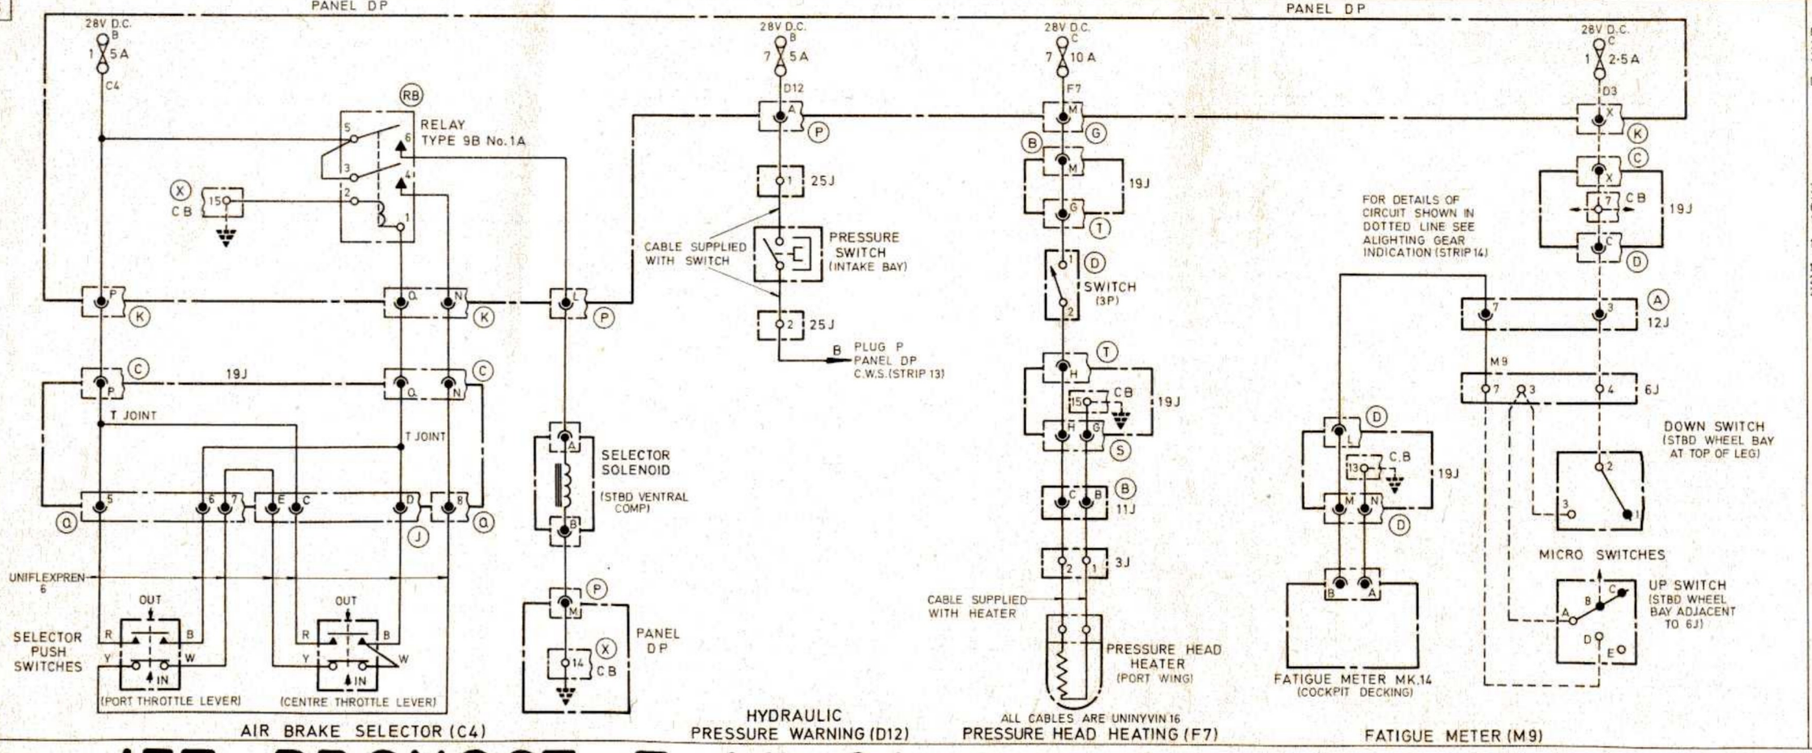

LOCATIONS

PANELS
2P - COCKPIT INSTRUMENT PANEL
3P - COCKPIT INST. PANEL PORT EXTENSION
DP - COCKPIT STBD SIDE

JUNCTIONS
3J - PORT WING
6J - STBD MAIN WHEEL BAY
11J - PORT WING ROOT FWD VENTRAL COMPT.
12J - STBD WING ROOT FWD VENTRAL COMPT.
19J - FWD OF 2P
25J - INTAKE BAY
28J - ENGINE BAY FLOOR UNDERSIDE

NOTES

1. ALL CABLES ON THIS SHEET ARE UNINYVIN 20 (6 AMP) UNLESS OTHERWISE STATED
2. FOR EARTHING SHOWN DOTTED SEE STRIP 12
3. ANNOTATION IN CABLE BOX IS FOR REFERENCE ONLY, THE MARKINGS ARE NOT ON THE RELAYS
4. WITH SWITCH P IN THE MAIN TANKS POSITION, SUMMATION OF PORT AND STBD MAIN TANKS CONTENTS AND INDIVIDUAL PORT AND STBD MAIN TANKS CONTENTS MAY BE PRESENTED BY OPERATING SWITCH Q. WITH SWITCH P IN THE TIP TANKS POSITION CONTENTS OF INDIVIDUAL PORT AND STBD TIP TANKS MAY BE PRESENTED BY OPERATING SWITCH Q.

WARNING

5. AS THE AIR BRAKES ARE HELD IN THE EXTENDED POSITION BY THE SELECTOR SOLENOID BEING ENERGIZED, ANY DISCONNECTION OF THE SUPPLY WILL ALLOW THE AIR BRAKES TO RETRACT