

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No.	Matl. Spec.	Plate No.
		Off		
EA3.00.5	NOSE, FUSELAGE, ASSEMBLY (Pre—Mod 5344)	1	—	
EA3.00.5799	NOSE, FUSELAGE, ASSEMBLY (Spares condition based on EA3.00.5 to LTF standard) (Mod 5344) Spares for:—	1	—	
EA3.74.83	. BLAST, COOLING FOR INVERTER, TYPE 201, ASSEMBLY Spares for:—	—	—	KB1/1
SP144/028	. . CLIP, hose	2	—	KB1/2
EA3.74.77	. . NUT, special	1	L40	KB1/3
EA3.74.71	. . PIPE, to inverter	1	L54	KB1/4
EA3.74.79	. . PIPE, assembly	1	L54	KB1/5
EA3.74.81	. . SLEEVE, pipe, connecting	1	L54	KB1/6
EEAS20/2DU	. . TAB, locking	1	L72	KB1/7
EA3.74.73	. . WASHER, special	1	Langite	KB1/8
†	. . WIRE, locking	QR	—	KB1/9
EA3.74.105	. BLAST, COOLING FOR INVERTER, TYPE 200, ASSEMBLY	—	—	KB1/10
SP144/028	. . CLIP, hose	2	—	KB1/11
EA3.74.103	. . PIPE, assembly	1	—	KB1/12
EA3.74.107	. . SLEEVE, pipe, connecting (Make from 32C/1275038)	1	BSF67 Type 1	KB1/13
EEAS20/2DU	. . TAB, locking	1	L72	KB1/14
EA3.74.99	. . WASHER, special	1	Felt	KB1/15
†	. . WIRE, locking	QR	—	KB1/16
EA3.75.141	. CABIN, PRESSURE SYSTEM (See Sect. SB)	—	—	
EA3.74.21	. COLD AIR SUPPLY TO PILOT (See Sect. SB)	—	—	
EA3.45.3	. CONTROLS, FLYING IN COCKPIT (See Sect. DA)	—	—	
EA1.47.5	. CONTROL, ENGINE (See Sect. CB)	—	—	
EA3.76.215	. DE-MISTING SYSTEM (MOD 76) (See Sect. SD)	—	—	
EA3.81.5	. ELECTRICAL EQUIPMENT (See Sect. EB)	—	—	

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.10.1	FRONT FUSELAGE ASSEMBLY	1	—	
	Spares for:-			
EA3.10.6387	ALTERATIONS TO NAVIGATORS HATCH LONGERONS AND FORWARD AND AFT MEMBERS (Alt R60/88)	—	—	
	Spares for:-			
EA3.10.6417	ANGLE, L.H.	1	—	KB14/1
EA3.10.6418	ANGLE, R.H.	1	—	KB14/2
EA3.10.6419	ANGLE, L.H.	1	—	KB14/3
EA3.10.6420	ANGLE, R.H.	1	—	KB14/4
EA3.10.6421	ANGLE, L.H.	1	—	KB14/5
EA3.10.6422	ANGLE, R.H.	1	—	KB14/6
EA3.10.6427	ANGLE, L.H.	3	—	KB14/7
EA3.10.6428	ANGLE, R.H.	3	—	KB14/8
EA3.10.6429	ANGLE, L.H.	1	—	KB14/9
EA3.10.6430	ANGLE, R.H.	1	—	KB14/10
EA3.10.65	ANGLE, L.H.	1	—	KB14/11
EA3.10.66	ANGLE, R.H.	1	—	KB14/12
EA3.10.6395	ARCH, forward member (Pre-Mod 5344)	1	—	
EA3.00.5737	ARCH, forward member (Spares for EA3.10.6395) (Mod 5344)	1	—	KB14/13
EA3.10.6399	ARCH, aft member (Pre-Mod 5344)	1	—	
EA3.00.5735	ARCH, aft member (Spares for EA3.10.6399) (Mod 5344)	1	—	KB14/14
EA3.10.561	ARM, steady	23	—	KB14/15
EA3.10.173	CLEAT	2	—	KB14/16
EA3.10.171	CLEAT	2	—	KB14/17
EA3.10.6415	DIAPHRAGM, L.H.	1	—	KB14/18
EA3.10.6416	DIAPHRAGM, R.H.	1	—	KB14/19
EA3.10.6501	DIAPHRAGM, L.H.	1	—	KB14/20
EA3.10.6502	DIAPHRAGM, R.H.	1	—	KB14/21
EA3.10.6503	DIAPHRAGM, L.H.	1	—	KB14/22
EA3.10.6504	DIAPHRAGM, R.H.	1	—	KB14/23
EA3.10.6505	DOUBLING, L.H.	1	—	KB14/24
EA3.10.6506	DOUBLING, R.H.	1	—	KB14/25
EA3.10.6389	FRAME, bolt, navigator's hatch (Pre-Mod 5344)	1	—	
EA3.00.5783	FRAME, bolt assembly (Spares for EA3.10.6389) (Mod 5344)	1	—	KB14/26
	Spares for:-			
EA3.10.6391	BLOCK, corner	2	—	KB14/27
EA3.10.6393	BLOCK, corner	2	—	KB14/28
EA3.10.1981	BLOCK	30	—	KB14/29
EA3.10.161	FRAME, bolt, forward	1	—	KB14/30
EA3.10.163	FRAME, bolt, aft	1	—	KB14/31
EA3.10.165	FRAME, bolt, L.H.	1	—	KB14/32
EA3.10.166	FRAME, bolt, R.H.	1	—	KB14/33
AGS2008/E/1	NUT, anchor, 1/4" BSF thin	68	—	KB14/34
	Attaching parts for EA3.10.6389:-			
EA1.10.1029	Bolt, explosive	34	—	KB14/35
EA3.10.6407	Bush	21	—	KB14/36
EA3.10.6511	Bush	2	—	KB14/37
A27LT	Nut, thin, 7/16" BSF	34	—	KB14/38
EA3.10.6411	Tube, distance	2	—	KB14/39
EA3.10.6413	Tube, distance	21	—	KB14/40
AGS2035L	Washer, shakeproof, 7/16" BSF	34	—	KB14/38A

R

R

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Page KB.2A

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
R EA3.10.6401	.	.	.	.	FITTING, forward, L.H.		1	—	KB15/1
R EA3.10.6403	.	.	.	.	FITTING, aft, L.H.		1	—	KB15/2
	.	.	.	.	Attaching parts for EA3.10.6401 and EA3.10.6403:				
R A59/7E	.	.	.	.	Bolt, 1/4" BSF		3	—	KB15/3
R A59/5E	.	.	.	.	Bolt, 1/4" BSF		4	—	KB15/4
R A59/3E	.	.	.	.	Bolt, 1/4" BSF		4	—	KB15/5
R A25/3C	.	.	.	.	Bolt, 2BA		5	—	KB15/6
R A27/CP	.	.	.	.	Nut, 2BA, plain		5	—	KB15/7
R A27/EP	.	.	.	.	Nut, 1/4" BSF, plain		11	—	KB15/8
R SP124/E	.	.	.	.	Washer, thin		4	—	KB15/9
R SP125/E	.	.	.	.	Washer, thick		4	—	KB15/10
R SP125/C	.	.	.	.	Washer, thick		5	—	KB15/11
R EA3.10.6402	.	.	.	.	FITTING, forward, R.H.		1	—	KB15/12
R EA3.10.6404	.	.	.	.	FITTING, aft, R.H.		1	—	KB15/13
	.	.	.	.	Attaching parts for EA3.10.6402 and EA3.10.6404:				
R A59/7E	.	.	.	.	Bolt, 1/4" BSF		3	—	KB15/14
R A59/5E	.	.	.	.	Bolt, 1/4" BSF		4	—	KB15/15
R A59/3E	.	.	.	.	Bolt, 1/4" BSF		4	—	KB15/16
R A25/3C	.	.	.	.	Bolt, 2BA		5	—	KB15/17
R A27/CP	.	.	.	.	Nut, 2BA, plain		5	—	KB15/18
R A27/EP	.	.	.	.	Nut, 1/4" BSF, plain		11	—	KB15/19
R SP124/E	.	.	.	.	Washer, thin		4	—	KB15/20
R SP125/E	.	.	.	.	Washer, thick		4	—	KB15/21
R SP125/C	.	.	.	.	Washer, thick		5	—	KB15/22
R EA3.10.6513	.	.	.	.	GUSSET, L.H.		1	—	KB15/23
R EA3.10.6514	.	.	.	.	GUSSET, R.H.		1	—	KB15/24
R EA3.10.6433	.	.	.	.	LONGERON, escape hatch, L.H.		1	—	KB15/25
R EA3.10.6435	.	.	.	.	LONGERON, escape hatch, R.H.		1	—	KB15/26
R EA3.10.45	.	.	.	.	LONGERON, member, L.H.		1	—	KB15/27
R EA3.10.46	.	.	.	.	LONGERON, member, R.H.		1	—	KB15/28
R EA3.10.6497	.	.	.	.	PACKING		1	—	KB15/29
R EA3.10.6499	.	.	.	.	PACKING		1	—	KB15/30
R EA3.10.6481	.	.	.	.	PANEL, skin, L.H.		1	—	KB15/31
R EA3.10.6482	.	.	.	.	PANEL, skin, R.H.		1	—	KB15/32
R EA3.10.515	.	.	.	.	PANEL, skin		1	—	KB15/33
R EA3.10.1097	.	.	.	.	PANEL, skin		1	—	KB15/34
R EA3.10.503	.	.	.	.	PANEL, skin		1	—	KB15/35
R EA3.10.1099	.	.	.	.	PANEL, skin		1	—	KB15/36
R EA3.10.519	.	.	.	.	PANEL, skin		1	—	KB15/37
R EA3.10.6431	.	.	.	.	PLATE, tie		1	—	KB15/38
R EA3.10.6432	.	.	.	.	PLATE, tie		1	—	KB15/39
R EA3.10.6515	.	.	.	.	REINFORCING, L.H.		1	—	KB15/41
R EA3.10.6516	.	.	.	.	REINFORCING, R.H.		1	—	KB15/42
R EA3.10.549	.	.	.	.	SEAL, pressure		1	—	KB14/41
R EA3.10.6489	.	.	.	.	SHIM		2	—	KB15/44
R EA3.10.6491	.	.	.	.	SHIM		2	—	KB15/45
R EA3.10.6493	.	.	.	.	SHIM		2	—	KB15/46
R EA3.10.6495	.	.	.	.	SHIM		2	—	KB15/47
R EA3.10.6397	.	.	.	.	STIFFENER, hatch frame		1	—	KB15/48
R EA3.10.6483	.	.	.	.	STRAP, butt		2	—	KB15/49
R EA3.10.6485	.	.	.	.	STRAP, butt		2	—	KB15/50
R EA3.10.6487	.	.	.	.	STRAP, butt		2	—	KB15/51
R EA3.10.471	.	.	.	.	WEDGE, packing		10	—	KB15/52

FUSELAGE

FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.391	• •	ARM, steady, L.H. for escape hatch explosive bolt	1	—	
EA3.10.392	• •	ARM, steady, R.H. for escape hatch explosive bolt	1	—	
EA3.10.561	• •	ARM, steady, for escape hatch explosive bolt	24	—	
A61/2C	• •	Attaching parts for EA3.10.391, EA3.10.392 or EA3.10.561:			
AGS2001C3	• •	Bolt, 2BA	2	—	
EA3.10.651	• •	Nut, 2BA	2	—	
	• •	Shim	QR	—	
EA3.10.2551	• •	ARM, steady, L.H. for escape hatch explosive bolt	1	L72	KB5/47
EA3.10.2552	• •	ARM, steady, R.H. for escape hatch explosive bolt	1	L72	KB5/48
	• •	Attaching parts for EA3.10.2551 or EA3.10.2552:			
A61/3C	• •	Bolt, 2BA	2	—	
AGS2001C3	• •	Nut, 2BA	2	—	
EA3.10.2549	• •	Shim	4	—	
EA3.10.2583	• •	ARM, steady, for escape hatch explosive bolt	3	—	
EA3.10.2584	• •	ARM, steady, for escape hatch explosive bolt	3	—	
	• •	Attaching parts for EA3.10.2583 or EA3.10.2584:			
A61/3C	• •	Bolt, 2BA	2	—	
AGS2001C3	• •	Nut, 2BA	2	—	
EA3.10.651	• •	Shim	QR	—	
EA1.10.1029	• •	BOLT, special, explosive, navigator's escape hatch	34	—	KB5/49
EA3.10.6477	• •	BOLT, special, securing navigator's escape hatch (Alt. R60/44 — Mod.5097)	66	—	
EA3.10.6165	• •	BRACKET, BUTT-CONNECTOR INSTALLATION (MOD.3706 — S.O.O.)	—	—	
		Spares for:			
EA3.10.6177	• •	BRACKET (Pre. Alt. R60/44)	1	L72	
EA3.10.6131	• •	STRIP, sealing (Make from 30B/9611220) (Pre. Alt. R60/44)	1	L72	
EA3.10.2581	• •	BRACKET, hinge, port	1	—	KB6/9A
EA3.10.2582	• •	BRACKET, hinge, starboard	1	—	KB6/10A
	• •	Attaching parts for EA3.10.2581 or EA3.10.2582:			
AS1242/4C	• •	Bolt, 2BA	2	—	KB6/9B
AS1242/5C	• •	Bolt, 2BA (Alternative to AS1242/4C)	2	—	
AS1242/6C	• •	Bolt, 2BA	2	—	KB6/9C
AS1242/7C	• •	Bolt, 2BA (Alternative to AS1242/6C)	2	—	
AGS2001C1/66	• •	Nut, 2BA	4	—	KB6/9D
SP13C	• •	Washer	4	—	KB6/9E
EA1.20.1033	• •	Washer, special	4	—	KB6/9F

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.983	. . .	BUSH, rubber, for canopy bolt	16	—	KB11/16
EA1.10.1163	. . .	BUSH, navigator's escape hatch explosive bolt	21	L40	KB5/50
EA1.10.1165	. . .	BUSH, navigator's escape hatch explosive bolt forward corners only	13	L40	KB5/51
EA3.10.3021	. . .	CAP, sealing, for escape hatch pivot	2	L40	KB5/52
EA3.10.3019	. . .	COLLAR, sealing, for escape hatch pivot	2	L65	KB5/53
EA1.10.501	. . .	DOOR, ACCESS, EQUIPMENT, ASSEMBLY (Supplied to Part No.EA3.00.113 for spares purposes) For Alterations and modifications to door and equipment see Sect. RA (SRIM.1785) (Mod.4937 — S.O.O.) Spares for:	1	—	KB2/1
EA1.10.511	. . .	LINK, connecting	2	—	KB2/2
AS2866P	. . .	LOCK, L.H. FLUSH TYPE, ASSEMBLY Spares for:	1	—	KB2/3
AS5382		BOLT, pivot	1	—	KB2/4
AS2558		BUTTON, pressure, seal	1	—	KB2/5
AS2528		BUTTON, push outer	1	—	KB2/5A
AS2552		HANDLE, single handle lock	1	—	KB2/6
FGS50		KEY	1	—	
or					
FFE4					
AS2532		PLATE, catch	1	—	KB2/7
AS2530		PLATE, centre, push button	1	—	KB2/6A
AS2559		SEAL, handle	1	—	KB2/8
AS5381		SEAL, push button	1	—	KB2/9
AS2534		SPRING, for catch	1	—	KB2/10
AS2556		STUD, spring	1	—	KB2/11
		Attaching parts for AS2866P:			
A33812	. . .	Screw, 4BA	11	—	KB2/13
EA1.10.2423	. . .	PANEL, removable	1	—	KB2/14
EA1.10.2421	. . .	RING, packing	1	L72	KB2/12
EA1.10.549	. . .	ROD, door lock	2	L64	KB2/15
EA1.10.2425	. . .	STRIP, sealing, ½" wide (Make from EEAS141/1 Ref.12713)			
EA1.10.1189	. . .	DOOR, access, hydraulic reservoir	1	L72	KB11/19

R

R

R

FUSELAGE
FRONT FUSELAGE

AP101B-0402-3A

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.00.117	.	.	.	DOOR, main entrance (For A/C WD. 929-931, 933-938, 941-942 and WP.514, supplied with trim allowance) (For non-interchangeable A/C only)			1	—	
EA3.10.1401	.	.	.	DOOR, MAIN ENTRANCE, ASSEMBLY Spares for:			1	—	KB3/1
EA1.10.1145	.	.	.	BOLT, assembly, door, aft			1	—	KB3/2
EA1.10.1143	.	.	.	BOLT, assembly, door forward			1	—	KB3/3
SP4Y/B6	.	.	.	Attaching parts for EA1.10.1145 and EA1.10.1143: Pin			1	—	KB3/4
EA3.10.2313	.	.	.	FAIRING, handle, internal Attaching parts for EA3.10.2313:			1	—	KB3/5
AS1248/2C	.	.	.	Bolt, 2BA			13	—	KB3/6
EA1.10.1785	.	.	.	HANDLE, door, internal Attaching parts for EA1.10.1785:			1	—	KB3/7
AS1248/2C	.	.	.	Bolt, 2BA			1	—	KB3/8
SP47C	.	.	.	Washer			1	—	KB3/9
SP13C	.	.	.	Washer			1	—	KB3/10
EA3.10.1407	.	.	.	HINGE, ENTRANCE DOOR, ASSEMBLY Spares for:			2	—	KB3/1A
SKEFCO CBS3	.	.	.	BEARING			2	—	KB3/1B
EA3.10.1403	.	.	.	HINGE			1	—	KB3/1C
EA3.10.1405	.	.	.	PIN			1	—	KB3/1D
EA1.10.1733	.	.	.	HOUSING, door, bolt aft Attaching parts for EA1.10.1733:			1	—	KB3/11
A25/2B	.	.	.	Bolt, 4BA			16	—	KB3/12
A27BP	.	.	.	Nut, 4BA			16	—	KB3/13
SP47B	.	.	.	Washer			16	—	KB3/14
EA1.10.1735	.	.	.	HOUSING, door, bolt forward Attaching parts for EA1.10.1735:			1	—	KB3/15
A25/1B	.	.	.	Bolt, 4BA			10	—	KB3/16
A25/2B	.	.	.	Bolt, 4BA			14	—	KB3/17
A27BP	.	.	.	Nut, 4BA			14	—	KB3/18
SP47B	.	.	.	Washer			24	—	KB3/19
EA1.10.1337	.	.	.	LEVER, cranked, aft			1	—	KB3/20
EA1.10.813	.	.	.	LEVER, cranked, forward Attaching parts for EA1.10.1337 and EA1.10.813:			1	—	KB3/21
A25/6C	.	.	.	Bolt, 2BA			1	—	KB3/22
EA1.10.1149	.	.	.	Tube, distance			1	—	KB3/23
EA1.10.821	.	.	.	LINK, coupling, crank lever to door handle Attaching parts for EA1.10.821:			1	—	KB3/24
SP4Y/B4	.	.	.	Pin			2	—	KB3/25
SP13C	.	.	.	Washer			2	—	KB3/26

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Page KB.5

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
AS2864P	LOCK, FLUSH FITTING DOOR, ASSEMBLY Spares for:	1	—	KB3/27
AS5382	BOLT, pivot	1	—	KB3/28
AS2558	BUTTON, pressure seal	1	—	KB3/29
AS2528	BUTTON, push inner	1	—	KB3/29A
AS2549	HANDLE, outer, double handle lock	1	—	KB3/30
FGS50	KEY	1	—	
or				
FFE4				
AS2532	PLATE, catch	1	—	KB3/31
AS2530	PLATE, centre, push button	1	—	KB3/31A
AS2559	SEAL, handle	1	—	KB3/32
AS5381	SEAL, push button	1	—	KB3/33
AS2534	SPRING, for catch	1	—	KB3/34
AS2556	STUD, spring	1	—	KB3/35
	Attaching parts for AS2864P:			
AS1248/1B	Bolt, 4BA	4	—	KB3/36
A33B20	Screw, 4BA	11	—	KB3/37
EA1.10.1995	PANEL, access	1	L72	KB3/38
	Attaching parts for EA1.10.1995:			
AS1242/2C	Bolt, 2BA	14	—	KB3/39
AS1248/2C	Bolt, 2BA	30	—	KB3/40
EA3.10.1447	PANEL, dished back	1	—	KB3/41
	Attaching parts for EA3.10.1447:			
AS1248/2C	Bolt, 2BA	1	—	KB3/42
EA1.10.2657	Gasket	1	—	KB3/43
EA1.10.1319	PLATE (bracket), swivel door stop	1	L72	KB3/44
	Attaching parts for EA1.10.1319:			
A27EP	Nut, 1/4" BSF	1	—	KB3/45
SP13E	Washer	1	—	KB3/46
EA1.10.1651	SEAL, door, outer (Make from 32C/652)	1	—	KB3/47
EA3.10.2813	STRAP, support strut, stowage	1	—	KB3/48
EA3.10.1459	TUBE, stay, door prop	1	—	KB3/49
EA1.10.939	DOOR, NOSE, UNDERCARRIAGE, PORT, ASSEMBLY (Supplied to Part No.EA3.00.149 for spares purposes)	1	—	KB4/1
	Spares for:			
EA1.10.957	BLOCK, catch	2	—	KB4/2
	Attaching parts for EA1.10.957:			
EA1.10.961	Bolt, special	4	—	KB4/3
EA1.10.963	Shim	1	—	KB4/4
SP47C	Washer	4	—	KB4/5
EA1.10.1367	BRACKET, door, pick-up	1	—	KB4/6
	Attaching parts for EA1.10.1367:			
EA1.10.2707	Bolt, special (Make from A25/3C)	8	—	KB4/7
EA1.10.1369	Shim	1	—	KB4/8

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.10.1271	. . . HINGE (Make from AS1880, Ref.28N/9486785)	1	—	KB4/9
EA1.10.1413	. . . HINGE, assembly	1	—	KB4/10
EA1.10.955	. . . PAD	1	Rubber	KB4/11
EA1.10.2467	. . . Attaching parts for EA1.10.955:			
or	. . . Angle	1	—	KB4/12
EA3.10.6377	. . . Angle	1	L72	
EA3.10.3485	. . . Packing	1	—	KB4/13
or				
EA3.10.6383	. . . Packing	1	L72	
A33C32	. . . Screw, 2BA	2	—	KB4/14
EA1.10.949	. . . Shim	1	Light alloy	KB4/15
or				
EA3.10.6381	. . . Shim	1	BACM64	
EEAS6C	. . . Washer	2	—	KB4/16
EA1.10.2655	. . . PAD, stop	1	—	KB4/17
EA1.10.2065	. . . SPUR	1	—	KB4/18
R EA3.10.2811	. . . STRIP, sealing (Make from Ref.4756) (Pre Mod.5282)	1	Synthetic Rubber	KB4/19
R EA3.10.6583	. . . STRIP, sealing (Make from EEAS844) (26FZ/6147755) (Mod.5282)	1		
	. . . Attaching parts for EA3.10.2811 and EA3.10.6583			
AGS2001A1	. . . Nut, 6BA	16	—	KB4/20
A33A12	. . . Screw, 6BA	16	—	KB4/21
EA1.10.2513	. . . Strip, securing	1	—	KB4/22
EA1.10.2515	. . . Strip, securing	1	—	KB4/23
EA1.10.940	. . . DOOR, NOSE UNDERCARRIAGE, STARBOARD, ASSEMBLY (Supplied to Part No.EA3.00.150 for spares purposes) Spares for:	1	—	KB4/24
EA3.10.3129	. . . BLOCK, door catch	2	—	KB4/25
	. . . Attaching parts for EA3.10.3129:			
EA1.10.983	. . . Bolt, special	4	—	KB4/26
SP47C	. . . Washer, spring	4	—	KB4/27
EA1.10.1367	. . . BRACKET, door, pick-up	1	—	KB4/28
	. . . Attaching parts for EA1.10.1367:			
EA1.10.2707	. . . Bolt, special (Make from A25/3C)	8	—	KB4/29
EA1.10.1369	. . . Shim	1	—	KB4/30
EA1.10.2071	. . . BRACKET, roller	1	—	KB4/31
	. . . Attaching parts for EA1.10.2071:			
A25/3C	. . . Bolt, 2BA	2	—	KB4/32
A27CP	. . . Nut, 2BA	2	—	KB4/33
EA1.10.2077	. . . Washer, special	2	—	KB4/34
EA3.10.3085	. . . BRACKET, spring seating	1	L65	KB4/35
	. . . Attaching parts for EA3.10.3085:			
A25/3C	. . . Bolt, 2BA	2	—	KB4/36
AGS2002C1/66	. . . Nut, 2BA	2	—	KB4/37
SP16C	. . . Washer	2	—	KB4/38
EA1.10.1272	. . . HINGE (Make from AS1880, Ref.28N/9486785)	1	—	KB4/39
EA1.10.1414	. . . HINGE, assembly	1	—	KB4/40

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Page KB.7

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.3193	. . .	HOOK, door latch, forward Attaching parts for EA3.10.3193:	1	—	KB4/41
EA1.10.971	. . .	Pin, pivot	1	—	KB4/42
EA1.45.989	. . .	Shim	1	—	KB4/43
EEAS28/23CU	. . .	Washer	2	—	KB4/44
EA3.10.3239	. . .	HOOK, door latch aft (Mod.1465) Attaching parts for EA3.10.3239:	1	S11	KB4/45
EA3.10.3375	. . .	Packing (Mod.1465)	5	L72	KB4/46
EA1.10.971	. . .	Pin, pivot	1	—	KB4/47
SP15G	. . .	Washer	1	—	KB4/48
EA1.10.955	. . .	PAD Attaching parts for EA1.10.955:	1	Rubber	KB4/49
EA1.10.2467	. . .	Angle	1	—	KB4/50
or					
EA3.10.6378	. . .	Angle	1	L72	
EA3.10.3485	. . .	Packing	2	—	KB4/51
or					
EA3.10.6383	. . .	Packing	1	L72	
A33C32	. . .	Screw, 2BA	2	—	KB4/52
EA1.10.949	. . .	Shim	1	Light alloy	KB4/53
or					
EA3.10.6381	. . .	Shim	1	BACM64	
EEAS6C	. . .	Washer	2	—	KB4/54
EA1.10.1725	. . .	PLATE, cover Attaching parts for EA1.10.1725:	1	—	KB4/55
A33B12	. . .	Screw, 4BA	2	—	KB4/56
EA3.10.3211	. . .	ROD, CONNECTING NOSE UNDERCARRIAGE DOOR HOOKS, ASSEMBLY Spares for:	1	—	KB4/57
EA3.10.3083	. . .	COLLAR, spring, adjusting	1	L65	KB4/58
EA3.10.3207	. . .	FORK-END	1	S96	KB4/59
EA3.10.3213	. . .	FORK-END	1	S96	KB4/60
A27CP	. . .	NUT, 2BA	2	—	KB4/61
A27CPL	. . .	NUT, 2BA	1	—	KB4/62
EA3.10.3209	. . .	ROD	1	S96	KB4/63
EA3.20.2271	. . .	SPRING	1	DTD239A	KB4/64
AGS899/1	. . .	Attaching parts for EA3.10.3211: Collar	2	—	KB4/65
SP4Y/A7	. . .	Pin, shackle	2	—	KB4/66
SP90C4	. . .	Pin, split	2	—	KB4/67
EA1.10.2075	. . .	ROLLER Attaching parts for EA1.10.2075:	1	—	KB4/68
EA1.10.2073	. . .	Pin	1	—	KB4/69
EA3.10.2811	. . .	STRIP, sealing (Make from Ref.4756) (Pre Mod.5282)	1	Synthetic Rubber	KB4/70
EA3.10.6583	. . .	STRIP, sealing (Make from EEAS844) (26FZ/6147755) (Mod.5282) Attaching parts for EA3.10.2811 and EA3.10.6583:			
AGS2001A1	. . .	Nut, 6BA	16	—	KB4/71
A33A12	. . .	Screw, 6BA	16	—	KB4/72
EA1.10.2145	. . .	Strip, securing	1	—	KB4/73
EA1.10.2515	. . .	Strip, securing	1	—	KB4/74

FUSELAGE
FRONT FUSELAGE

AP101B-0402-3A

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.10.1229	. . . GUARD, block, pressure cabin door seal	1	—	KB3/53
EA1.10.1153	. . . HANDLE, main door jettison	1	L72	KB3/50
EA3.00.5325	. . . HATCH, ESCAPE, NAVIGATOR'S (MOD.4094) (EA3.10.6301) (Pre-Mod 5344) (Supplied for spares purposes with trim allowance) Spares for:	1	—	KB5/1
SIS1564	. . . BLOCK, terminal, 2 way, type B Attaching parts for SIS1564:	1	—	KB5/2
A33A20	. . . Screw, 6BA	2	—	KB5/3
EA3.81.5849	. . . CABLE, ASSEMBLY, N417 Attaching parts for EA3.81.5849:	1	—	KB5/4
A33B6	. . . Screw, 4BA	4	—	KB5/4A
EA3.10.6109	. . . CHANNEL, butt connector Attaching parts for EA3.10.6109:	1	—	KB5/5
A25/2C	. . . Bolt, 2BA	4	—	KB5/6
AGS2001C1/66	. . . Nut, 2BA	4	—	KB5/7
SP16C	. . . Washer	4	—	KB5/8
MARTIN BAKER MBEU320EE	. . . CLIP, stowage, safety harness Attaching parts for MBEU320EE:	4	—	KB5/9
A25/5B	. . . Bolt, 4BA	4	—	KB5/10
AGS2001B1	. . . Nut, 4BA	4	—	KB5/11
EA3.10.2277	. . . Packing	1	—	KB5/12
EA3.10.2281	. . . Packing	2	—	KB5/13
SP15B	. . . Washer	4	—	KB5/14
MARTIN BAKER MBEU321EE	. . . CLIP, stowage, parachute harness Attaching parts for MBEU321EE:	4	—	KB5/15
A25/5B	. . . Bolt, 4BA	4	—	KB5/16
AGS2001B1	. . . Nut, 4BA	4	—	KB5/17
EA3.10.6135	. . . Packing	QR	—	KB5/18
EA3.10.2275	. . . Packing	QR	—	KB5/19
EA3.10.2279	. . . Packing	QR	—	KB5/20
SP15B	. . . Washer	4	—	KB5/21
EA6.10.2683	. . . CURTAIN	1	—	KB5/22
EA3.80.6659	. . . EYE-BOLT, starboard side (Mod.5093)	1	S94	KB5/23
EB7.10.5093	. . . FORK-END, port side Attaching parts for EA3.80.6659 or EB7.10.5093:	1	—	KB5/23A
AGS2001C1/66	. . . Nut, 2BA	1	—	KB5/24
SP15C	. . . Washer	1	—	KB5/25

AP101B-0402-3A

Page KB.9

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.10.6111	.	.	.	.	.	HOLDER, spigot	1	—	KB5/26
A25/4E	.	.	.	.	.	Attaching parts for EA3.10.6111:—	2	—	KB5/27
SP16E	.	.	.	.	.	Bolt, 1/4" BSF	2	—	KB5/28
	.	.	.	.	.	Washer			
R EA3.10.6315	.	.	.	.	.	MEMBER, forward, escape hatch, assembly	1	—	KB17/1
	.	.	.	.	.	Spares for:—			
R EA3.10.129	.	.	.	.	.	ANGLE	1	—	KB17/2
R EA6.10.1517	.	.	.	.	.	ANGLE	1	—	KB17/3
R EA6.10.1518	.	.	.	.	.	ANGLE	1	—	KB17/4
R EA3.10.123	.	.	.	.	.	BRACKET, stringer (AS4766)	5	—	KB17/5
R EA3.10.124	.	.	.	.	.	BRACKET, stringer (AS4766)	3	—	KB17/6
R EA3.10.127	.	.	.	.	.	BRACKET, stringer	4	—	KB17/7
R EA3.10.6181	.	.	.	.	.	BRACKET, stringer	1	—	KB17/8
R EA3.10.6182	.	.	.	.	.	BRACKET, stringer	1	—	KB17/9
R EA3.10.6317	.	.	.	.	.	FRAME, hatch	1	—	KB17/10
EA3.10.3765	.	.	.	.	.	PLATE, blanking	1	—	KB5/29
EA3.10.6275	.	.	.	.	.	PLATE, window securing	2	L72	KB5/30
	.	.	.	.	.	Attaching parts for EA3.10.6275:—			
EEAS1/1C	.	.	.	.	.	Bolt, 2BA	46	—	KB5/31
EEAS1/2C	.	.	.	.	.	Bolt, 2BA	2	—	KB5/32
AGS2001C1/66	.	.	.	.	.	Nut, 2BA	48	—	KB5/33
SP15C	.	.	.	.	.	Washer	48	—	KB5/34
EA3.10.6137	.	.	.	.	.	RING, packing	1	—	KB5/35
EA3.10.6121	.	.	.	.	.	RING, packing	1	—	KB5/36
EA3.10.6247	.	.	.	.	.	RING, packing	1	—	KB5/36A
EA3.20.311	.	.	.	.	.	SEAL, aft	1	S/H35	KB5/37
EA3.10.313	.	.	.	.	.	SEAL, forward	1	S/H35	KB5/38
EA3.10.309	.	.	.	.	.	SEAL, side	2	S/H35	KB5/39
EA3.10.6099	.	.	.	.	.	SPIGOT, screwed	2	—	KB5/40
	.	.	.	.	.	Attaching parts for EA3.10.6099:—			
A27/JT	.	.	.	.	.	Nut, 3/8" BSF	1	—	KB5/41
EA3.10.305	.	.	.	.	.	WINDOW, perspex	2	—	KB5/42
	.	.	.	.	.	Attaching parts for EA3.10.305:—			
EEAS1/6C	.	.	.	.	.	Bolt, 2BA	20	—	KB5/43
AGS2001C1/66	.	.	.	.	.	Nut, 2BA	20	—	KB5/44
EA3.10.307	.	.	.	.	.	Seal, rubber	2	—	KB5/45
SP15C	.	.	.	.	.	Washer	40	—	KB5/46
EA3.10.3481	.	.	.	.	.	HOOD COUPE TO FUSELAGE, ASSEMBLY (MOD.519)	—	—	KB6/1
	.	.	.	.	.	Spares for:—			
EA3.10.2221	.	.	.	.	.	BOLT, special, explosive hood fixing	30	L65	KB6/2
EA3.10.2085	.	.	.	.	.	BOLT, special, explosive hood fixing	2	L65	KB6/3
EA1.10.1035	.	.	.	.	.	BUSH, coaming tube explosive bolt	31	L40	KB6/4
EA1.10.1167	.	.	.	.	.	BUSH, coaming, explosive bolt entry	2	L40	KB6/5
EA1.10.1169	.	.	.	.	.	BUSH, coaming, tube explosive bolt entry	30	L40	KB6/6
EA1.10.1435	.	.	.	.	.	BUSH, coaming, tube explosive bolt	1	L40	KB6/7
—	.	.	.	.	.	COAMING TUBE REPAIR FOR EXPLOSIVE BOLTS	—	—	
	.	.	.	.	.	(EA3.03.35, ASD.319.RS and ASD.617.RS)			
	.	.	.	.	.	Spares for (per set):—			
EA3.03.47	.	.	.	.	.	BUSH (First Repair)	2	—	
EA3.03.129	.	.	.	.	.	BUSH (Second Repair)	2	—	
EA3.03.297	.	.	.	.	.	BUSH (Third Repair)	2	—	
EA3.03.45	.	.	.	.	.	BUSH, locking (First Repair)	30	—	
EA3.03.127	.	.	.	.	.	BUSH, locking (Second Repair)	30	—	
EA3.03.295	.	.	.	.	.	BUSH, locking (Third Repair)	30	—	
EA3.03.41	.	.	.	.	.	BUSH, tapped (First Repair)	31	—	
EA3.03.125	.	.	.	.	.	BUSH, tapped (Second Repair)	31	—	
EA3.03.291	.	.	.	.	.	BUSH, tapped (Third Repair)	31	—	
EA3.03.43	.	.	.	.	.	BUSH, tapped (First Repair)	1	—	
EA3.03.201	.	.	.	.	.	BUSH, tapped (Second Repair)	1	—	
EA3.03.293	.	.	.	.	.	BUSH, tapped (Third Repair)	1	—	
EA3.03.37	.	.	.	.	.	TUBE, distance	31	—	
EA3.03.39	.	.	.	.	.	TUBE, distance	1	—	

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
R —	. . . HATCH, NAVIGATOR'S ASSEMBLY Comprising:—	—	—	
R EA3.00.5713	. . . HATCH, NAVIGATOR'S (Spares for EA3.10.6301 modified to EA3.10.6461 (Alt. R60/44) (Mod 5344)	1	—	KB16/1
R EA3.00.5793	. . . KIT, LOOSE EQUIPMENT FOR NAVIGATOR'S HATCH (LOOSE EQUIPMENT KIT IS ESSENTIAL REQUIREMENT WITH HATCH) (Mod 5344) Comprising:—			
R TYPE B No. 1	 BLOCK, terminal	1	—	KB16/2
R EEAS1/1C	 BOLT	10	—	KB16/3
R AS1246/1B	 BOLT	6	—	KB16/4
R A25/1B	 BOLT	3	—	KB16/5
R EA3.10.6477	 BOLT, special	68	—	KB16/6
R EA3.81.5849	 CABLE, assembly	1	—	KB16/7
R AS3180/4B	 CLIP, 'P'	3	—	KB16/8
R EA6.10.2683	 CURTAIN	2	—	KB16/9
R EA6.10.2589	 FAIRING, canopy	1	—	KB16/10
R EB7.10.5093	 FORK-END	1	—	KB16/11
R AGS2007C1	 NUT, anchor	10	—	KB16/12
R AGS2001C1	 NUT, stiff	2	—	KB16/13
R AGS2001B1	 NUT, stiff	6	—	KB16/14
R EA3.80.1787	 PLATE	2	L72 x 20 SWG	KB16/15
R AS2230-303	 RIVET	20	—	KB16/16
R	 SCREW, hook	8	—	KB16/17
R A33A20	 SCREW	2	—	KB16/18
R EEAS1/2E	 SCREW	2	—	KB16/19
R A33B6	 SCREW	4	—	KB16/20
R EA3.10.309	 SEAL, rubber (Make from 26FZ/208-EEAS74)	2	—	KB16/21
R EA3.10.311	 SEAL, rubber (Make from 26FZ/208-EEAS74)	1	—	KB16/22
R EA3.10.313	 SEAL, rubber (Make from 26FZ/208-EEAS74)	1	—	KB16/23
R SP15C	 WASHER	2	—	KB16/24
R SP15B	 WASHER	3	—	KB16/25
R	 WIRE, 8" long (For installation details of the above refer to drawings EA3.10.6301 and EA3.10.6461)	4	—	KB16/26

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			

FUSELAGE

FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.00.507		HOOD, COUPE, C/W EDGE MEMBER, ASSEMBLY (MOD.519) (For A/C WD.929, 931, 933-938 and WP.514, supplied undrilled, fitment by C.W.P.) (For non-interchangeable A/C only)	1	—	
EA3.00.509		HOOD, COUPE, C/W EDGE MEMBER, ASSEMBLY (EA3.15.125) (MOD.519) Spares for:	1	—	KB6/8
EA3.10.3479		BRACKET, hinge	1	—	KB6/9
EA3.10.3480		BRACKET, hinge	1	—	KB6/10
EA6.10.2587		FAIRING, canopy, forward section	1	—	KB6/11
EA3.15.115		HOOD, ASSEMBLY Spares for:	1	—	KB6/12
EA1.15.9		BRACKET, fastener	1	L40	KB6/13
EA1.15.13		BRACKET, hinge	1	L40	KB6/14
EA3.15.109		BUSH, rubber	24	—	KB6/15
EA3.15.95		BUSH, rubber for attachment screws	148	—	KB6/16
EA1.81.689/1		CABLE, ASSEMBLY, N57A, heated windscreen to coupe break	1	—	KB6/17
R TYPE R No. 3		PLUG, 2 WAY FLAT TYPE R	1	—	KB6/18
R TYPE R No. 2		SOCKET 2 WAY FLAT TYPE R	1	—	KB6/19
EA1.15.19		EYE-BOLT, 2BA	1	DTD126A	KB6/20
EA3.15.129		LANDING, door, 12 SWG	1	L72	KB6/21
EA1.15.17		NUT, knurled, 2BA	1	L40	KB6/22
EA3.15.133		RING, sealing	1	L72	KB6/23
EA3.15.107		RING, packing	1	DTD838	KB6/24
EA3.15.135		SEALING, rubber, 1/32" thick	1	S/H30	KB6/25
EA3.15.87		SEALING, rubber, between edge member and hood, 1/16" x 1 1/4" x 216" long (Make from Ref.32C/4382898)	1	Natural	KB6/26
EA1.15.23		SPRING, 20 SWG	1	Spring Steel	KB6/27
EA3.15.131		WASHER, sealing, moulded rubber	1	S/H30	KB6/28

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.15.105	 WINDOW, DIRECT VISION, ASSEMBLY (MOD.519) (PRE MOD.4333)	1	—	
EA3.15.139	 WINDOW, DIRECT VISION, ASSEMBLY (MOD.4333) Spares for:	1	—	KB6/29
EA1.15.161	 BRACKET, fastener	1	L40	KB6/30
EA1.15.163	 BRACKET, hinge, c/w bushes	1	L40	KB6/31
EA1.15.173	 PACKING, bracket, fastener	1	—	KB6/32
EA1.15.175	 PACKING, bracket, hinge	1	—	KB6/33
EA3.15.69	 PANEL, c/w elements (Pre Mod.4333)	1	Toughened Glass	
EA3.15.137	 PANEL, c/w elements (Mod.4333)	1	—	KB6/34
EA1.15.151	 PLATE, 16 SWG	1	L73	KB6/35
EA1.15.145	 RING, rubber, insulator	1	S/H40	KB6/36
EA1.15.147	 RING, rubber, sealing	1	S/H40	KB6/37
EA3.15.127	 RING	1	LFS26	KB6/38
EA1.15.155	 RING, sealing	1	Rubber	KB6/39
AH018822/15	 RING, sealing	1	—	
EA1.15.157	 RING, clamping, 20 SWG	1	L72	KB6/40
EA3.15.111	 TERMINAL	4	BSS369	KB6/41
EA3.10.2223	 MEMBER, edge, coupe loud	1	—	KB6/42
EA3.10.3451	 PLATE, attachment, port	1	L72	KB6/43
EA3.10.3453	 PLATE, attachment, starboard	1	L72	KB6/44
EA3.10.3455	 PLATE, attachment, rear	1	L72	KB6/45
EA3.10.3457	 PLATE, attachment, front	1	—	KB6/46
EA3.10.3061	 SHIM, hinge bracket	4	—	KB6/47
EA3.10.3063	 SHIM, hinge bracket	4	—	KB6/48
EA6.10.2679	 STRIP, rubber, for canopy, forward fairing (Make from Ref.32C/4382968)	QR	Linatex	KB6/49
EA3.10.2249	 SEAL, rubber strip, coaming tube to canopy 1/8" x 1 1/4" (Make from Ref.32C/4382961)	QR	Linatex	KB6/50
EA3.10.2251	 SEAL, rubber strip coaming tube to canopy 1/16" x 1 1/4" (Make from Ref.32C/4282898)	QR	Linatex	KB6/51
EA3.10.2245	 TUBE, COAMING, COUPE, ASSEMBLY Spares for:	1	—	KB6/52
EA3.16.5025	 BRACKET, TOP ATTACHMENT GUIDE RAIL, ASSEMBLY (MOD.4151) Spares for:	2	—	KB6/53
EA3.16.5027	 EYE-BOLT Attaching parts for EA3.16.5027:	1	S96	KB6/54
A27EP	 Nut, 1/4" BSF	1	—	KB6/55
EA1.10.847	 Washer, saddle	1	—	KB6/56
EA1.10.849	 Washer, saddle	1	—	KB6/57
EA1.10.1657	 CLIP, special, top half air drier mounting	4	DTD214	KB6/58
EA1.10.1659	 CLIP, special, bottom half air drier mounting	4	DTD214	KB6/59
EA1.10.1501	 CROSS-TUBE, canopy coaming	1	—	KB6/60
EA1.10.1663	 NUT, special, knurled finger	8	L40	KB6/61
EA3.10.2773	 PLATE, blast	1	L72	KB6/62
EA1.10.847	 WASHER, saddle, special, pilot's seat, rear fixing	2	L40	KB6/63

FUSELAGE

AP101B-0402-3A

FRONT FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.00.285	.	.	.	KEEL UNIT, ASSEMBLY (REPAIR) (EA3.10.17)			—	—	KB7/1
	.	.	.	Spares for:					
EA3.11.655	.	.	.	BOLT, special (Make from A25/4E)			4	—	KB7/2
EA3.00.947	.	.	.	BRACKET, support (EA3.10.79) (Alt. R60/314)			1	—	
EA3.00.948	.	.	.	BRACKET, support (EA3.10.80) (Alt. R60/314)			1	—	
EA3.10.885	.	.	.	DOOR, probe, access			1	—	KB7/3
	.	.	.	Attaching parts for EA3.10.885:					
AS1248/1C	.	.	.	Bolt, 2BA			12	—	KB7/4
—	.	.	.	SKINNING, PRESSURE CABIN KEEL UNIT ASSEMBLY (EA3.10.11)			—	—	KB7/5
	.	.	.	Spares for:					
R —	.	.	.	DELETION OF K AERIAL (EA3.10.6615) (MOD.5223)			—	—	
	.	.	.	Spares for:					
R EA3.10.6535	.	.	.	CLEAT			1	L73 x 18 SWG	
R EA3.10.6519	.	.	.	PANEL, skin, starboard			1	L72 x 20 SWG	
R EA3.10.6521	.	.	.	PANEL, skin, port			1	L72 x 20 SWG	
R EA3.10.6533	.	.	.	STRAP, butt, 10.5" approx.			1	L73 x 18 SWG	
R EA3.10.6527	.	.	.	STRINGER, port, outboard (Make from EEDX68, Ref.26FZ/4475, 19" long approx.)			1	EEDX68	
R EA3.10.6525	.	.	.	STRINGER, port, inboard, (Make from EEDX68, Ref.26FZ/4475, 28" long approx.)			1	EEDX68	
R EA3.10.6523	.	.	.	STRINGER, centre (Make from EEDX68, Ref.26FZ/4475, 28" long approx.)			1	EEDX68	
R EA3.10.6531	.	.	.	STRINGER, starboard, outboard, (Make from EEDX68, Ref.26FZ/4475, 19" long approx.)			1	EEDX68	
R EA3.10.6529	.	.	.	STRINGER, starboard, inboard, (Make from EEDX68, Ref.26FZ/4475, 28" long approx.)			1	EEDX68	
R EA3.10.2373	.	.	.	PANEL, skin, starboard (Pre Mod.5223)			1	—	
R EA3.10.2371	.	.	.	PANEL, skin, port (Pre Mod.5223)			1	—	
R EA1.10.829	.	.	.	PLUG, drain, assembly			1	—	KB7/6
	.	.	.	Consisting of:					
EA1.10.827	.	.	.	HOUSING			1	L40	KB7/7
SP90E6	.	.	.	PIN, split (Pre Alt. R60/48)			1	—	KB7/8
ANGUS	.	.	.						
OR.12	.	.	.	RING, sealing			1	—	KB7/9
EA1.10.825	.	.	.	SCREW, special			1	L40	KB7/10

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Page KB.13

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.10.9	.	.	.	.	STRUCTURE, MAIN FLOOR PRESSURE CABIN KEEL UNIT, ASSEMBLY		—	—	KB7/11
EA3.10.2383	.	.	.	.	Spares for: BOLT, special, bracket mounting		4	S11	KB7/12
EA1.10.217 or EA1.10.219 EA1.10.218 or EA1.10.220 EA1.10.2685	.	.	.	.	BRACKET MOUNTING, NOSEWHEEL PIVOT SHAFT, ASSEMBLY, L.H.		1	—	KB7/13
	.	.	.	.	BRACKET MOUNTING, NOSEWHEEL PIVOT SHAFT, ASSEMBLY, R.H.		1	—	KB7/24
	.	.	.	.	Spares for: CAP		1	—	KB7/14
	.	.	.	.	Attaching parts for EA1.10.2685:				
A26/15J	.	.	.	.	Bolt		2	—	KB7/15
A27JS	.	.	.	.	Nut		2	—	KB7/16
SP90C7	.	.	.	.	Pin, split		2	—	KB7/17
EA3.10.2793	.	.	.	.	Washer		2	L65	KB7/18
SP21	.	.	.	.	NIPPLE		1	—	KB7/19
EA1.10.217A	.	.	.	.	SPIGOT		1	S96	KB7/20
	.	.	.	.	Attaching parts for EA1.10.217 or EA1.10.218:				
A25/4E	.	.	.	.	Bolt, 1/4" BSF		10	—	KB7/21
A25/6E	.	.	.	.	Bolt, 1/4" BSF		2	—	KB7/22
EA3.10.2383	.	.	.	.	Bolt, special		2	S11	KB7/23
EA3.10.37	.	.	.	.	BULKHEAD, PRESSURE, ASSEMBLY		—	—	KB7/25
	.	.	.	.	Spares for:				
EA9.10.5091	.	.	.	.	BRACKET, FORWARD LATCH ASSEMBLY (MOD.2183)		1	—	KB7/26
	.	.	.	.	Spares for:				
EA3.10.1739	.	.	.	.	BLOCK		1	—	KB7/27
	.	.	.	.	Attaching parts for EA3.10.1739:				
A25/25E	.	.	.	.	Bolt, 1/4" BSF		2	—	KB7/28
A27ET	.	.	.	.	Nut, 1/4" BSF		2	—	KB7/29
AS2811/6/135	.	.	.	.	Tube, distance		2	L62	KB7/30
EA1.10.1429	.	.	.	.	PLATE		1	—	KB7/31
	.	.	.	.	Attaching parts for EA1.10.1429:				
A45C16	.	.	.	.	Screw, 2BA		2	—	KB7/32
EA1.10.1431	.	.	.	.	Shim		QR	—	KB7/33
EA9.10.5093	.	.	.	.	PLATE, side		1	—	KB7/26A
EA9.10.5095	.	.	.	.	PLATE, side		1	—	KB7/26B
EB6.80.5949	.	.	.	.	BRACKET, TRIP ROD, BOMB AIMER'S SEAT, INSTALLATION (MOD.4058)		—	—	
EB6.80.5947	.	.	.	.	BRACKET, TRIP ROD, NAVIGATOR'S SEAT (MOD.4058)		—	—	
	.	.	.	.	Spares for:				
EB6.80.5951	.	.	.	.	BRACKET		1	L65	
EB6.80.5955	.	.	.	.	BRACKET		3	L65	
EA3.10.6335	.	.	.	.	BRACKET, torque switch (Mod.3960)		1	—	
NORMALAIR 504600	.	.	.	.	CONNECTOR, ground pressurising (Mod.632)		1	—	KB7/34
EEAS69/2	.	.	.	.	GASKET, sealing		2	—	KB7/34B
EA1.81.943	.	.	.	.	STUD, mounting, assembly		8	—	KB7/35
EA3.81.1165	.	.	.	.	STUD, mounting, assembly		2	—	KB7/36
EA1.10.231	.	.	.	.	BUSH		1	DTD127	KB7/37

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.10.621	.	.	.	.	.	STRINGER, port (Pre Mod.5223)	1	—	
EA1.10.619	.	.	.	.	.	STRINGER, port, inboard (Pre Mod.5223)	1	—	
EA1.10.617	.	.	.	.	.	STRINGER, centre (Pre Mod.5223)	1	—	
EA1.10.622	.	.	.	.	.	STRINGER, starboard, outboard (Pre Mod.5223)	1	—	
EA1.10.620	.	.	.	.	.	STRINGER, starboard, inboard (Pre Mod.5223)	1	—	
EA3.10.2381	.	.	.	.	.	WINDOW, aerial (Pre Mod.5223)	1	—	
EA3.10.2901	.	.	.	.	.	NOSE, PERSPEX, ASSEMBLY (Mod.262)	1	—	KB10/1
						Consisting of:			
AS1242/9C	.	.	.	.	.	BOLT, 2BA	128	—	KB10/2
AS1242/10C	.	.	.	.	.	BOLT, 2BA	7	—	KB10/3
EA2.10.1501	.	.	.	.	.	BUSH, nose fixing, bolt	34	Natural Rubber	KB10/4
EA2.10.659	.	.	.	.	.	BUSH, nose fixing, bolt (Make from Ref.4166)	64	Natural Rubber	KB10/5
EA3.10.2899	.	.	.	.	.	NOSE, perspex	1	—	KB10/6
AGS2001C1/66	.	.	.	.	.	NUT, 2BA	135	—	KB10/7
EA2.10.653	.	.	.	.	.	RING, half, retaining, window, inner seal	1	L72	KB10/8
EA2.10.655	.	.	.	.	.	RING, half, retaining, window, inner seal	1	L72	KB10/9
EA2.10.1601	.	.	.	.	.	RING, half, retaining, window, seal	1	L72	KB10/10
EA2.10.1603	.	.	.	.	.	RING, half, retaining, window, seal	1	L72	KB10/11
EA2.10.685	.	.	.	.	.	RING, rubber, inner seal	1	HRC	KB10/12
EA2.10.1503	.	.	.	.	.	RING, rubber, window seal	1	HRC	KB10/13
EA2.10.665	.	.	.	.	.	STRAP, joint, assembly	4	—	KB10/14
EA2.10.657	.	.	.	.	.	STRIP, sealing	1	Natural Rubber	KB10/15
EA2.10.661	.	.	.	.	.	STRIP, inner, retaining, ring seal	1	Natural Rubber	KB10/16
EA2.10.687	.	.	.	.	.	WINDOW, observation, bomb aimer's	1	Triplex	KB10/17

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.10.1131	. . . PIECE, distance	21	T4	KB5/55
EA1.10.1133	. . . PIECE, distance	13	T4	KB5/56
EA3.10.1509	. . . PLATE, backing, door seal, forward, upper	1	—	
EA3.10.1510	. . . PLATE, backing, door seal, aft, upper	1	—	
EA3.10.1511	. . . PLATE, backing, door seal, forward, lower	1	—	
EA3.10.1512	. . . PLATE, backing, door seal, aft, lower	1	—	
EA3.10.3007	. . . PLATE, nut for navigator's lamp, mounting bracket (Pre Mod.3423)	1	—	
EA3.10.3821	. . . PLATE, nut (Mod.3423)	1	—	
EA3.10.3247	. . . PLATE, pressure hinge assembly	1	—	
EA3.10.3817	. . . SCREW, special (Make from EEAS1/4½E)	2	—	
EA3.10.2917	. . . SCREW, special, securing navigator's hatch (Pre Mod.5097)	68	—	KB5/57
EA3.10.153	. . . SEAL, inner, rubber, navigator's window	1	Natural Rubber	KB11/17
EA3.10.155	. . . SEAL, outer, rubber, navigator's window	1	Natural Rubber	KB11/18
EA3.10.549	. . . SEAL, pressure, navigator's escape hatch	1	BTR8853	KB5/58
EA1.10.1171	. . . SEAL, door, pressure cabin entrance	1	BTR8853	KB3/51

R

FUSELAGE

FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.5		SKINNING, STRUCTURE, PRESSURE CABIN, ASSEMBLY Spares for:	—	—	
EA3.10.7		STRUCTURE, PRESSURE CABIN, ASSEMBLY Spares for:	—	—	
EA1.10.887		BEARER, hinge, main entrance door	2	S96	
EA1.10.889		BEARER, hinge, main entrance door	2	S96	
EA1.10.43		FRAME NO.4, PORT, ASSEMBLY Spares for:	1	—	
EA1.10.383		BRACKET, attachment, coupe	1	—	
EA3.10.27		FRAME NO.8, port	1	—	
EA1.10.45		FRAME NO.4, starboard, assembly	1	—	
EA1.10.384		BRACKET, attachment, coupe	1	—	
R EA3.10.279		FRAME, 7A, port assembly (Alt R60/88 RI)	1	—	
R EA3.10.281		FRAME, 8A, port assembly (Alt R60/88 RI)	1	—	
R EA3.10.282		FRAME, 8A, starboard assembly (Alt R60/88 RI)	1	—	
R EA3.10.283		FRAME, 9A, port assembly (Alt R60/88 RI)	1	—	
R EA3.10.284		FRAME, 9A, starboard assembly (Alt R60/88 RI)	1	—	
EA3.10.2931		HINGE, CASTING, ASSEMBLY, AFT, MAIN ENTRANCE DOOR (PRE MOD.5028)	1	—	
EA3.10.1815		HINGE, CASTING, ASSEMBLY, AFT, MAIN ENTRANCE DOOR (MOD.5028) Spares for:	1	—	
SKEFCO CBS3		BEARING, ballrace	4	—	
EA1.10.1441		BOLT, guide	1	—	
EA3.10.2925		CAP, end, sealing	1	—	
A27CT		NUT, lock, 2BA	1	—	
EA3.10.2927		TUBE, distance	2	—	
EA1.10.1439		HINGE, CASTING, ASSEMBLY, FORWARD, MAIN ENTRANCE DOOR (PRE MOD.5028)	1	—	
EA3.10.1813		HINGE, CASTING, ASSEMBLY, FORWARD, MAIN ENTRANCE DOOR (MOD.5028) Spares for:	1	—	
SKEFCO CBS3		BEARING, ballrace	4	—	
EA1.10.1441		BOLT, guide	1	—	
EA3.10.2925		CAP, end, sealing	1	—	
A27CT		NUT, lock, 2BA	1	—	
EA3.10.2927		TUBE, distance	2	—	
EA1.10.1155		HINGE, RELEASE, MECHANISM, ASSEMBLY, MAIN ENTRANCE DOOR Spares for:	1	—	
EA1.10.869		BRACKET	1	—	
EA1.10.881		COLLAR, aft	1	—	
EA1.10.1437		COLLAR, forward	1	—	
EA1.10.871		SHAFT	1	—	
EA1.10.877		SLEEVE, locating	1	—	
EA3.10.2827		SPINDLE, worm (Mod.603)	1	—	
EA1.10.875		WHEEL, worm	—	—	

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.10.13	. . . SKINNING, STRUCTURE, PRESSURE BULKHEAD TO FRAME 12, ASSEMBLY	—	—	KB8/1
EA1.10.187	 DOOR, ACCESS, VHF MAIN ELECTRICAL PANEL AND GROUND/FLIGHT SWITCH, ASSEMBLY (Supplied to Pt. No. EA3.00.151 for spares purposes) Spares for:	2	—	KB8/2
EA1.10.177	 GUIDE, rod	3	—	KB8/4A
AS2850	 LOCK, L.H. FLUSH TYPE, ASSEMBLY Spares for:	1	—	KB8/3
AS5382	 BOLT, pivot	1	—	KB8/4B
AS2558	 BUTTON, pressure, seal	1	—	KB8/5
AS2528	 BUTTON, push outer	1	—	KB8/5A
AS2552	 HANDLE, single handle lock	1	—	KB8/6
R FGS50	 KEY	1	—	
or				
R FFE4				
AS2532	 PLATE, catch	1	—	KB8/7
AS2530	 PLATE, centre push button	1	—	KB8/7A
AS2559	 SEAL, handle	1	—	KB8/8
AS5381	 SEAL, push button	1	—	KB8/9
AS2534	 SPRING, for catch	1	—	KB8/10
AS2556	 STUD, spring	1	—	KB8/11
A33B12	 Attaching parts for AS2850: Screw, 4BA	11	—	KB8/13
EA1.10.2503	 RING, packing	1	—	KB8/12
EA1.10.185	 ROD, lock, lower, assembly	1	—	
EA1.10.183	 ROD, lock, upper, assembly	1	—	KB8/4
EA1.10.181	 ROD, lock, vertical, assembly	1	—	
EA1.10.1815	 STAY, door	1	—	KB8/14
EA3.10.2805	 STOWAGE, SUPPORT STRUT, VHF DOORS ASSEMBLY Spares for:	1	—	KB8/15
EA3.10.2809	 PLATE, stiffening Attaching parts for EA3.10.2809:	1	L73	KB8/16
AGS2001B1	 Nut, 4BA	1	—	KB8/17
A33B16	 Screw, csk. head, 4BA	1	—	KB8/18
EA3.10.2807	 STRAP	1	—	KB8/19
EA1.10.1033	 PLUG, forward jacking, point housing	1	—	KB8/20
EEAS1/3C	 SCREW, 2BA	24	—	KB8/21

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.15	. . .	STRUCTURE, PRESSURE BULKHEAD TO FRAME 12, ASSEMBLY	—	—	KB8/22
EB6.10.279		Spares for: BRACKET, angle	2	—	KB8/22A
A25/1E		Attaching parts for EB6.10.279: Bolt, ½" BSF	2	—	KB8/22B
EA1.10.55		FRAME 12A, ASSEMBLY	—	—	KB8/23
EA9.10.4545		Spares for: BEAM, CENTRE, VERTICAL, PORT (MOD.1740)	1	—	
EA1.10.70		BEAM, CENTRE, VERTICAL, STARBOARD (PRE MOD.856)	1	—	
EA3.10.3206		BEAM, CENTRE, VERTICAL, STARBOARD (MOD.856)	1	—	
ASD292RS1		Spares for: (Repair) ANGLE, inner joint (Make from EEJ270, Ref.7109)	1	—	
ASD292RS5P		INSERTION, channel, port (Make from EA3.10.3197, Ref.22325)	1	—	
ASD292RS5S		INSERTION, channel, starboard (Make from EA3.10.3199, Ref.22326)	1	—	
ASD292RS6P		INSERTION, plate, reinforcing, port (Make from EA9.10.4439) (Mod.1740)	1	L73	
ASD292RS6S		INSERTION, plate, reinforcing, starboard (Make from EA3.10.3203, Ref.22328 or 30B/9611240)	1	L73	
ASD292RS4S		STRAP, joint, forward, outer, starboard (Pre Mod.856)	1	—	
ASD292RS4P		STRAP, joint, forward, outer, port (Mod.1740)	1	—	
ASD292RS4S		STRAP, joint, forward, outer, starboard (Mod.856)	1	—	
ASD292RS3		STRAP, joint, forward, leveller 14 SWG (Make from Ref.30B/9611242)	1	L73	
ASD292RS2		STRAP, joint, aft, 14 SWG	1	S514	
EA3.71.389		BEAM, mounting, oxygen cylinders	2	—	KB8/24
A25/3C		Attaching parts for EA3.71.389: Bolt, 2BA (upper beam)	8	—	KB8/25
A25/3C		Bolt, 2BA (lower beam)	6	—	KB8/26
A25/10C		Bolt, 2BA (lower beam)	2	—	KB8/27
SP13C		Washer	4	—	KB8/28

AP101B-0402-3A

Page KB.19

FUSELAGE

FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.10.557		BRACKET, strut, pick-up	1	—	KB8/72
EB6.75.699		BRACKET, support, pipe	1	—	KB8/63
EA1.10.1621		BRACKET, door lock, port	1	—	
EA1.10.909		BRACKET, door lock, starboard (Supplied to Part No.EA3.00.596 for spares purposes)	1	—	
EA6.10.775		BRACKET, oxygen cylinder cradle	2	—	
EA3.10.3151		BRACKET, LOCK LEVER, ASSEMBLY, STARBOARD (PRE MOD.1465)	1	—	
		Spares for:			
EA3.10.3133		LEVER, lock, assembly	1	—	
EA3.10.3333		BRACKET, LOCK LEVER, ASSEMBLY, STARBOARD (MOD.1465)	1	—	KB8/29
or					
EK5.10.805		BRACKET, LOCK LEVER, ASSEMBLY, STARBOARD (ALT. R60/15 — MOD.5097)	1	—	
		Spares for:			
EA3.10.3150		BRACKET	1	—	KB8/30
or					
EK5.10.808		BRACKET (Alt. R60/15 — Mod.5097)	1	—	
EA3.10.3335		LEVER, LOCK ASSEMBLY	1	—	KB8/31
		Spares for:			
EA3.10.3349		FORK-END	1	—	KB8/32
EA3.10.3337		LEVER	1	—	KB8/33
SP21		NIPPLE, grease	1	—	KB8/34
EA3.10.3099		NUT, special	1	—	KB8/35
A27ES		NUT, 1/4" BSF	1	—	KB8/36
EA3.10.3351		PIN	1	—	KB8/37
SP90C7		PIN, split	1	—	KB8/38
EA3.10.3347		ROLLER	1	—	KB8/39
EA3.10.3339		SHIM	2	—	KB8/40
SP15E		WASHER	1	—	KB8/41
		Attaching parts for EA3.10.3335:			
EA3.10.3219		Bolt, special	1	—	KB8/42
A27GS		Nut, 5/16" BSF	1	—	KB8/43
SP90C7		Pin, split	1	—	KB8/44
EA1.10.1407		Washer, spacing	1	—	KB8/45
SP15G		Washer	1	—	KB8/46
EA3.71.403		BRACKET, oxygen mounting beam	7	—	KB8/47
		Attaching parts for EA3.71.403:			
A25/3C		Bolt, 2BA (As required)	4	—	KB8/48
A25/9C		Bolt, 2BA (As required)	4	—	KB8/49
A25/11C		Bolt, 2BA (As required)	4	—	KB8/50
AGS2001C1/66		Nut, 2BA	4	—	KB8/51
AS2811/5/07		Tube, distance (As required)	4	L62	KB8/52
SP16C		Washer (As required)	4	—	KB8/53
EA3.10.6571		BRACKET (PRE MOD.5097) (Still used on aircraft with front fuselage married up)	1	—	
EA1.10.1179		BRACKET (Alt. R60/301, Mod.5097) (Used on aircraft with front fuselage de-married)	1	—	

R

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.10.2447	.	.	.	.	.	GUARD, assembly	1	—	KB8/54
EA3.10.3353	.	.	.	.	.	GUARD, lock lever, assembly	1	—	KB8/55
A32C16	.	.	.	.	.	Attaching parts for EA3.10.2447 and EA3.10.3353: Screw, 2BA	4	—	KB8/56
EA3.00.873	.	.	.	.	.	GUIDE, roller, port	1	—	KB8/57
EA3.00.874	.	.	.	.	.	GUIDE, roller, starboard	1	—	KB8/58
A25/2C	.	.	.	.	.	Attaching parts for EA3.00.873 and EA3.00.874: Bolt, 2BA	19	—	KB8/59
AGS2001C1/66	.	.	.	.	.	Nut, 2BA	19	—	KB8/60
SP13C	.	.	.	.	.	Washer	19	—	KB8/61
R —	.	.	.	.	.	INSTALLATION OF ATTACHMENT LUG BOLTS (EA3.10.6573)	—	—	
	.	.	.	.	.	Spares for:			
R EA3.10.1177	.	.	.	.	.	PLATE, tie (Pre Mod.5097)	1	—	
R EA3.10.6575	.	.	.	.	.	PLATE, tie (Mod.5097) (Alt. R60/301)	1	—	
R EA3.10.2455	.	.	.	.	.	PLATE, reinforcing (Pre Mod.5097)	1	—	
R EA3.10.6577	.	.	.	.	.	PLATE, reinforcing (Mod.5097, Alt. R60/301)	1	—	
R EA6.10.1815	.	.	.	.	.	PLATE, reinforcing (Pre Mod.5097)	1	—	
R EA3.10.6579	.	.	.	.	.	PLATE, nut (Mod.5097 = Alt. R60/301)	1	—	
	.	.	.	.	.	Attaching parts:			
R AS1242/2C	.	.	.	.	.	Bolt, 2BA	3	—	
R AGS2019C1	.	.	.	.	.	Nut	3	—	
EA3.10.3161	.	.	.	.	.	LEVER, LOCK, NOSE UNDERCARRIAGE PORT, ASSEMBLY	1	—	KB8/62
or EK5.10.803	.	.	.	.	.	LEVER, LOCK, NOSE UNDERCARRIAGE PORT, ASSEMBLY (ALT. R60/15 — MOD.5097)	1	—	
	.	.	.	.	.	Spares for:			
R EA3.10.3149	.	.	.	.	.	BRACKET	1	—	KB8/63
or EK5.10.807	.	.	.	.	.	BRACKET (Alt. R60/15 — Mod.5097)	1	—	
EA3.10.3159	.	.	.	.	.	LEVER, assembly	1	—	KB8/64
	.	.	.	.	.	Attaching parts for EA3.10.3159:			
EA3.10.3219	.	.	.	.	.	Bolt, shouldered	1	—	KB8/65
A27GS	.	.	.	.	.	Nut, 5/16" BSF	1	—	KB8/66
SP90C7	.	.	.	.	.	Pin, split	1	—	KB8/67
EA1.10.1407	.	.	.	.	.	Washer, spacing	1	—	KB8/68
SP15G	.	.	.	.	.	Washer	1	—	KB8/69
R EA1.10.61	.	.	.	.	.	LUG, attachment (Pre Alt. R60/301)	6	—	
EA3.10.6539	.	.	.	.	.	LUG, attachment (Alt. R60/301)	6	—	
EA6.10.1091	.	.	.	.	.	PLATE, joint, bottom half joint ring	1	—	
EA1.10.1697	.	.	.	.	.	PLATE, joint, boundary angle to diaphragm, port	1	—	KA8/70
EA1.10.1698	.	.	.	.	.	PLATE, joint, boundary angle to diaphragm, starboard	1	—	KA8/71
EA1.10.771	.	.	.	.	.	HOUSING, spigot	1	—	KB8/74
	.	.	.	.	.	Attaching parts for EA1.10.771:			
A25/3E	.	.	.	.	.	Bolt, 1/4" BSF	8	—	KB8/75
EA3.10.3223	.	.	.	.	.	STRUT, bracing	2	—	KB8/72A
	.	.	.	.	.	Attaching parts for EA3.10.3223:			
A25/6E	.	.	.	.	.	Bolt, 1/4" BSF	2	—	KB8/72B
A27EP	.	.	.	.	.	Nut, 1/4" BSF	2	—	KB8/72C
SP15E	.	.	.	.	.	Washer	1	—	KB8/72D
SP16E	.	.	.	.	.	Washer	1	—	KB8/72E

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Page KB.21

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.10.1345	. . . SOCKET, front, frame, entrance door bolt	1	—	
EA1.10.1347	. . . SOCKET, rear, frame, entrance door bolt	1	—	
	Attaching parts for EA1.10.1345 and EA1.10.1347:			
AS1242/4C	. . . Bolt, 2BA	2	—	
AS1242/5C	. . . Bolt, 2BA	2	—	
AGS2001C1/66	. . . Nut, 2BA	4	—	
DZUS S4/250	. . . SPRING, fastener, hydraulic reservoir access door	6	—	KB11/20
EA3.10.3255	. . . STRAP, main door jettison handle stowage	1	—	KB3/52
EA3.10.1091	. . . STRUCTURE, NOSE, FORWARD OF FRAME 1, ASSEMBLY	1	—	KB11/1
EA3.04.13865	. . . STRUCTURE, NOSE, FORWARD OF FRAME 1, ASSEMBLY (MOD.4013 — S.O.O.)	1	—	
	Spares for:			
EA3.10.983	. . . BUSH, rubber, window fixing screw	20	—	KB11/2
EA2.10.477	. . . FRAME, seal retaining	1	—	KB11/3
EA3.10.1583	. . . PANEL, access to air drier tube	1	—	KB11/5
EA3.10.6507	. . . PLUG, drain, at frame 1, installation (Alt. R60/43)	—	—	
	Spares for:			
EA1.10.829	. . . PLUG, drain, assembly	1	—	KB11/30
	Spares for:			
EA1.10.827	. . . HOUSING	1	—	KB11/31
ANGUS				
O/R.12	. . . RING, sealing	1	—	KB11/32
EA1.10.825	. . . SCREW, special	1	—	KB11/33
EA2.10.473	. . . SEAL, rubber	1	—	KB11/6
EA2.10.475	. . . SEAL, rubber	1	—	KB11/7
9/4376	. . . STOWAGE, plug electrical	1	—	KB11/8
9/3573	. . . STOWAGE, air pressure	1	—	KB11/9
9/3564	. . . STOWAGE, computer input	2	—	KB11/10
9/3572	. . . STOWAGE, flexible drive	4	—	KB11/4
9/4372	. . . STOWAGE, gyro (Pre Mod.4013)	2	—	KB11/4A
EC1.81.667	. . . STOWAGE, plug (Make from Ref. 10H/0970054) (Mod.4013) (Pre Mod.5081)	1	—	KB11/11
EC1.81.669	. . . STOWAGE, plug (Make from Ref. 10H/0970053) (Mod.4013) (Pre Mod.5081)	1	—	KB11/12
9/3563	. . . STOWAGE, pitot and static	2	—	KB11/13
EA2.10.471	. . . WINDOW, bomb aimer's	1	—	KB11/14
EA1.20.1033	. . . WASHER, special	16	—	KB6/64
EA3.10.3023	. . . WASHER, sealing, for escape hatch pivot	2	—	KB5/59
EA3.10.361	. . . WINDOW, navigator's c/w valve	1	—	KB11/15

R

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.45.749	.	.	.	.	.	GEAR, EMERGENCY RELEASE MECHANISM BOMB DOOR AND UNDERCARRIAGE	—	—	KB9/1
EA1.45.815	.	.	.	.	.	Spares for: BRACKET AND HANDLE AT FRAMES 1 AND 2, ASSEMBLY	—	—	KB9/2
EA1.45.1041	.	.	.	.	.	Spares for: BRACKET, bottom, frame 1	1	—	KB9/3
EA2.45.201	.	.	.	.	.	BRACKET, top, frame 1	1	—	KB9/4
EA1.45.831	.	.	.	.	.	BRACKET, bottom, frame 2	1	—	KB9/5
EA1.45.829	.	.	.	.	.	BRACKET, top, frame 2	1	—	KB9/6
	.	.	.	.	.	Attaching parts for EA1.45.1041, EA2.45.201, EA1.45.831 and EA1.45.829:			
A25/1C	.	.	.	.	.	Bolt, 2BA	3	—	KB9/7
AGS2001C1/66	.	.	.	.	.	Nut, 2BA	3	—	KB9/8
SP15C	.	.	.	.	.	Washer	3	—	KB9/9
EA3.45.633	.	.	.	.	.	HANDLE, operating (Mod.5220)	1	—	KB9/10
	.	.	.	.	.	Attaching parts for EA3.45.633:			
A25/1C	.	.	.	.	.	Bolt, 2BA	4	—	KB9/11
SP15C	.	.	.	.	.	Washer	4	—	KB9/12
AS1151	.	.	.	.	.	PULLEY, shrouded	2	—	KB9/13
or	.	.	.	.	.				
AS107	.	.	.	.	.	PULLEY, shrouded	2	—	
	.	.	.	.	.	Attaching parts for AS107 or AS1151:			
A25/8E	.	.	.	.	.	Bolt, 1/4" BSF	1	—	KB9/14
AGS2001E1/66	.	.	.	.	.	Nut, 1/4" BSF	1	—	KB9/15
SP16E	.	.	.	.	.	Washer	1	—	KB9/16
EA1.45.813	.	.	.	.	.	BRACKET AND LEVER AT FRAME 4, ASSEMBLY	—	—	KB9/17
	.	.	.	.	.	Spares for:			
EA1.45.875	.	.	.	.	.	BRACKET, bottom, inboard	1	—	KB9/18
EA1.45.877	.	.	.	.	.	BRACKET, bottom, outboard	1	—	KB9/19
EA1.45.871	.	.	.	.	.	BRACKET, top, inboard	1	—	KB9/20
EA1.45.873	.	.	.	.	.	BRACKET, top, outboard	1	—	KB9/21
	.	.	.	.	.	Attaching parts for EA1.45.875, EA1.45.877, EA1.45.871 and EA1.45.873:			
AS1242/1C	.	.	.	.	.	Bolt, 2BA (As required)	1	—	KB9/22
A25/1C	.	.	.	.	.	Bolt, 2BA (As required)	11	—	KB9/23
AGS2001C1/66	.	.	.	.	.	Nut, 2BA (As required)	12	—	KB9/24
SP15C	.	.	.	.	.	Washer (As required)	12	—	KB9/25

R

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.45.883	. . . FAIRLEAD	1	—	KB9/26
	Attaching parts for EA1.45.883:			
A25/6C	. . . Bolt, 2BA	2	—	KB9/27
AGS2001C1/66	. . . Nut, 2BA	2	—	KB9/28
EA3.45.295	. . . LEVER, assembly (Mod.306)	1	—	KB9/29
	Attaching parts for EA3.45.295:			
A25/3E	. . . Bolt, 1/4" BSF	1	—	KB9/30
AGS2001E1/66	. . . Nut, 1/4" BSF	1	—	KB9/31
SP16E	. . . Washer	1	—	KB9/32
EEAS15/75/150ER	. . . PLATE, link, lower	2	—	KB9/33
	Attaching parts, link to cable:			
AGS899/1	. . . Collar	1	—	KB9/33A
SP4Y/A14	. . . Pin, shackle	1	—	KB9/33B
SP90C4	. . . Pin, split	1	—	KB9/33C
AS2811/5/025	. . . Tube, distance, 17 SWG	2	L62	KB9/33D
EA1.45.909	. . . PLATE, link, upper	2	—	KB9/34
	Attaching parts for EA1.45.909:			
AGS899/2	. . . Collar	1	—	KB9/35
SP4Y/B14	. . . Pin	1	—	KB9/36
SP90C4	. . . Pin, split	1	—	KB9/36A
EA1.45.1317	. . . Tube, distance	2	—	KB9/37
AS107	. . . PULLEY, shrouded	2	—	KB9/38
or				
AS1151	. . . PULLEY, shrouded	2	—	
	Attaching parts for AS107 or AS1151:			
A25/8E	. . . Bolt, 1/4" BSF (As required)	1	—	KB9/39
A25/9E	. . . Bolt, 1/4" BSF (As required)	1	—	KB9/40
AGS2001E1/66	. . . Nut, 1/4" BSF	1	—	KB9/41
SP16E	. . . Washer	1	—	KB9/42
EA1.45.1055	. . . SECTOR, locking, quadrant	1	—	

R

FUSELAGE

AP101B-0402-3A

FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.45.275	. . .	CABLES BOMB DOOR AND UNDERCARRIAGE, ASSEMBLY (MOD.306) Spares for:	1	—	KB9/43
EA2.45.413	. . .	BARREL, pressure seal	1	—	KB9/44
AGS.2030/147	. . .	CIRCLIP, 47/64" bore, internal	1	—	KB9/45
EA1.45.1129	. . .	ROLLER, aft end bomb door	1	—	KB9/46
SP8Y13	. . .	ROLLER	3	—	KB9/47
EA1.45.889	. . .	WASHER, felt, pressure seal	7	—	KB9/48
EA1.45.891	. . .	WASHER, retaining, pressure seal	1	—	KB9/49
EA3.45.275A	. . .	WIRE, flexible, steel, bomb door	1	6W2/4	KB9/50
EA3.45.275B	. . .	WIRE, flexible, steel, undercarriage	1	6W2/4	KB9/51
EA1.45.883	. . .	FAIRLEAD, frame 3	1	—	KB9/52
EA1.45.881	. . .	FAIRLEAD, frame 5 to 11	7	—	KB9/53
A25/6C	. . .	Attaching parts for EA1.45.883 or EA1.45.881: Bolt, 2BA	2	—	KB9/53A
AGS2001C1/66	. . .	Nut, 2BA	2	—	KB9/53B
R EA1.45.1121	. . .	FAIRLEAD, frame 12A Attaching parts for EA1.45.1121:	1	—	KB9/54
AS1242/5B	. . .	Bolt, 4BA	2	—	KB9/55
AGS2001B1	. . .	Nut, 4BA	2	—	KB9/56
A33B24	. . .	Screw, 4BA	2	—	KB9/57
SP15B	. . .	Washer	2	—	KB9/58
EA2.45.415	. . .	WASHER, wedge, pressure bulkhead Attaching parts for EA2.45.415:	2	—	KB9/59
A25/10C	. . .	Bolt, 2BA	2	—	KB9/60
AGS2001C1/66	. . .	Nut, 2BA	2	—	KB9/61

AP101B-0402-3A

FUSELAGE

Page KB.25

FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.73.205	.	.	.	.	.	HYDRAULIC EQUIPMENT IN FRONT FUSELAGE (See Chapter SH)	—	—	
R EA3.17.5245	.	.	.	.	.	INSULATION, PRESSURE CABIN (Alt. R60/109R1) Spares for:	—	—	KB12/1
R EA3.17.5247	.	.	.	.	.	BLANKET	1	—	KB12/2
R EA3.17.5249	.	.	.	.	.	BLANKET	1	—	KB12/3
R EA3.17.5251	.	.	.	.	.	BLANKET	1	—	KB12/4
R EA3.17.5259	.	.	.	.	.	BLANKET	1	—	KB12/5
R EA3.17.5261	.	.	.	.	.	BLANKET	1	—	KB12/6
R EA3.17.5263	.	.	.	.	.	BLANKET	1	—	KB12/7
R EA3.17.5253	.	.	.	.	.	BLANKET	1	—	KB12/8
R EA3.17.5255	.	.	.	.	.	BLANKET	1	—	KB12/9
R EA3.17.5265	.	.	.	.	.	BLANKET	1	—	KB12/10
R EA3.17.5267	.	.	.	.	.	BLANKET	1	—	KB12/11
R EA3.17.5271	.	.	.	.	.	BLANKET	1	—	KB12/12
R EA3.17.5269	.	.	.	.	.	BLANKET	1	—	KB12/13
R EA3.17.5331	.	.	.	.	.	BLANKET	1	—	KB12/14
R EA3.17.5273	.	.	.	.	.	BLANKET	1	—	KB12/15
R EA3.17.5275	.	.	.	.	.	BLANKET	1	—	KB12/16
R EA3.17.5277	.	.	.	.	.	BLANKET	1	—	KB12/17
R EA3.17.5279	.	.	.	.	.	BLANKET	1	—	KB12/18
R EA3.17.5281	.	.	.	.	.	BLANKET	1	—	KB12/19
R EA3.17.5283	.	.	.	.	.	BLANKET	1	—	KB12/20
R EA3.17.5285	.	.	.	.	.	BLANKET	1	—	KB12/21
R EA3.17.5287	.	.	.	.	.	BLANKET	1	—	KB12/22
R EA3.17.5289	.	.	.	.	.	BLANKET	1	—	KB12/23
R EA3.17.5291	.	.	.	.	.	BLANKET	1	—	KB12/24
R EA3.17.5293	.	.	.	.	.	BLANKET	1	—	KB12/25
R EA3.17.5295	.	.	.	.	.	BLANKET	1	—	KB12/26
R EA3.17.5297	.	.	.	.	.	BLANKET	1	—	KB12/27
R EA3.17.5299	.	.	.	.	.	BLANKET	1	—	KB12/28
R EA3.17.5257	.	.	.	.	.	BLANKET	1	—	KB12/29
R EA3.17.5301	.	.	.	.	.	BLANKET	1	—	KB12/30
R EA3.17.5303	.	.	.	.	.	BLANKET	1	—	KB12/31
R EA3.17.5305	.	.	.	.	.	BLANKET	1	—	KB12/32
R EA3.17.5307	.	.	.	.	.	BLANKET	1	—	KB12/33
R EA3.17.5309	.	.	.	.	.	BLANKET	1	—	KB12/34
R EA3.17.5311	.	.	.	.	.	BLANKET	1	—	KB12/35
R EA3.17.5313	.	.	.	.	.	BLANKET	1	—	KB12/36
R EA3.17.5315	.	.	.	.	.	BLANKET	1	—	KB12/37
R EA3.17.5317	.	.	.	.	.	BLANKET	1	—	KB12/38
R EA3.17.5319	.	.	.	.	.	BLANKET	1	—	KB12/39
R EA3.17.5321	.	.	.	.	.	BLANKET	1	—	KB12/40
R EA3.17.5323	.	.	.	.	.	BLANKET	1	—	KB12/41
R EA3.17.5325	.	.	.	.	.	BLANKET	1	—	KB12/42
R EA3.17.5327	.	.	.	.	.	BLANKET	1	—	KB12/43
R EA3.17.5329	.	.	.	.	.	BLANKET	1	—	KB12/44
R EA3.17.5401	.	.	.	.	.	BLANKET (MOD.5246)	1	—	
EA1.17.35	.	.	.	.	.	BRACKET, angle	487	—	KB12/45
EA1.17.39	.	.	.	.	.	CLIP	760	—	KB12/46

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.17.5227	.	INSULATION, NAVIGATOR'S ESCAPE HATCH (MOD.4094) Spares for:	—	—	
EA3.17.5229	.	BLANKET	1	—	KB13/1
EA3.17.5231	.	BLANKET	1	—	KB13/2
EA3.17.5233	.	BLANKET	1	—	KB13/3
EA3.17.5235	.	BLANKET	1	—	KB13/4
EA3.17.5237	.	BLANKET	1	—	KB13/5
EA3.17.5239	.	BLANKET	1	—	KB13/6
EG7.17.273	.	BLANKET	2	—	KB13/7
EG7.17.275	.	BLANKET	1	—	KB13/8
EG7.17.277	.	BLANKET	1	—	KB13/9
EG7.17.279	.	BLANKET	1	—	KB13/10
EA1.17.35	.	BRACKET, angle	12	—	KB13/11
EA1.17.39	.	CLIP	140	—	KB13/12
EA1.17.37	.	SPRING	112	—	KB13/13
EA3.17.5335	.	PAD	1	—	KB13/14
EA3.17.5333	.	PAD	1	—	KB13/15
EA3.17.5347	.	PAD	1	—	KB13/16
EA3.17.5337	.	PAD	3	—	KB13/17
EA3.17.5341	.	PAD	1	—	KB13/18
EA3.17.5349	.	PAD	1	—	KB13/19
EA3.17.5345	.	PAD	1	—	KB13/20
EA3.17.5343	.	PAD	1	—	KB13/21
EA3.17.5339	.	PAD	1	—	KB13/22
EB7.17.35	.	PAD	1	—	KB13/23
EB7.17.37	.	PAD	1	—	KB13/24
EA3.17.5385	.	PAD	1	—	KB13/25
EA3.17.5387	.	PAD	1	—	KB13/26
EA1.17.37	.	SPRING	620	—	KB12/48

AP101B-0402-3A

FUSELAGE
FRONT FUSELAGE

Page KB.25B

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA9.40.1	.	NOSEWHEEL (MOD.1740) (See Chapter WC)					—	—	
EA3.71.519	.	OXYGEN SYSTEM (MOD.1413 (See Chapter SJ)					—	—	
EA3.71.513	.	OXYGEN SYSTEM (MOD.441) (See Chapter SJ)					—	—	
EA3.80.2411	.	PITOT AND STATIC SYSTEM (MOD.76) (See Chapter SK)					—	—	
EA3.04.15763	.	PITOT AND STATIC SYSTEM (MOD.4013 — S.O.O.)					—	—	
		(PRE MOD.5081) (See Chapter SK)							
EA3.80.2007	.	PRESSURE CABIN EQUIPMENT (MOD.76) (See Chapter GA)					—	—	
EA3.82.1	.	RADIO AND INTER-COMM (See Chapter R)					—	—	
EA3.10.2845	.	TUNNEL, BOMB AIMER'S ASSEMBLY					—	—	KB11/21
		Spares for:							
EA3.10.2847	.	PLATFORM, BOMB AIMER'S CHEST AND CUSHION					—	—	KB11/22
		ASSEMBLY							
		Spares for:							
EA3.10.2853	.	CUSHION					1	—	KB11/23
EA3.10.2851	.	PLATFORM, BOMB AIMER'S ASSEMBLY					1	—	KB11/24
		Spares for:							
EA3.71.307	.	BRACKET, OXYGEN BOTTLE SUPPORT, ASSEMBLY					1	—	KB11/25
		Spares for:							
EA3.71.313	.	BAND, wire, 16 SWG					1	—	KB11/26
EA3.71.315	.	BAND, wire, 16SWG, c/w clip					—	—	KB11/27
TERRY 80/0	.	CLIP					2	—	KB11/28
TERRY 80/00	.	CLIP					1	—	KB11/29
		Attaching parts for EA3.10.2851:							
A25/1C	.	Bolt, 2BA					3	—	KB11/24A

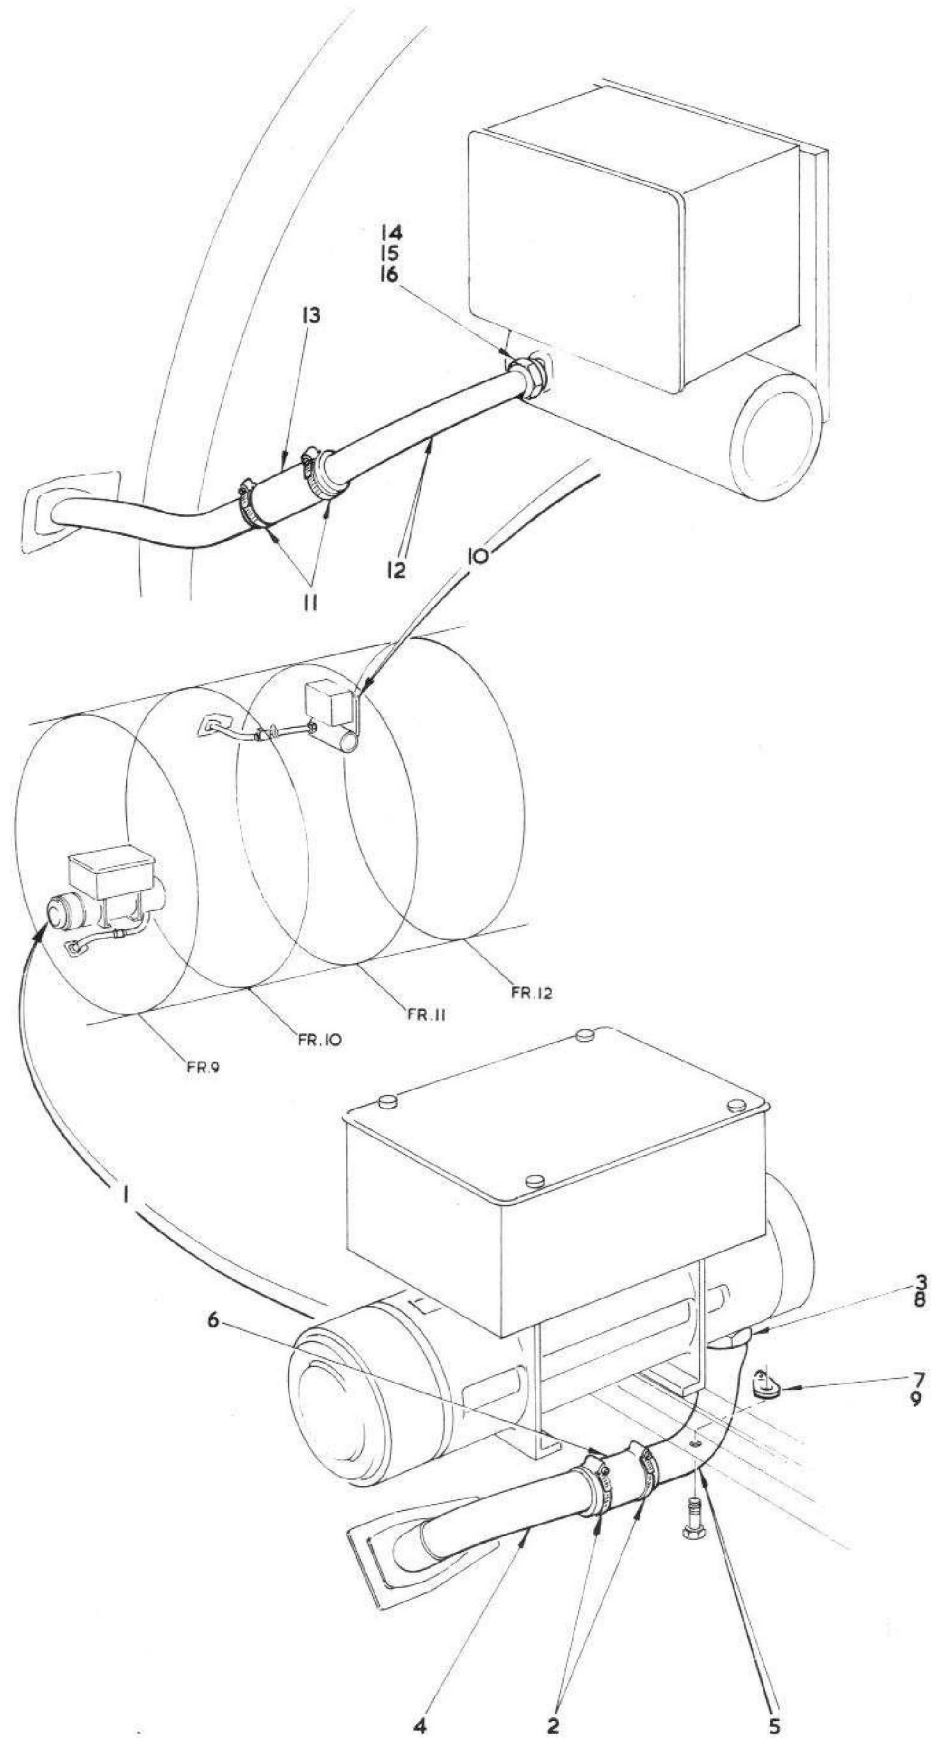
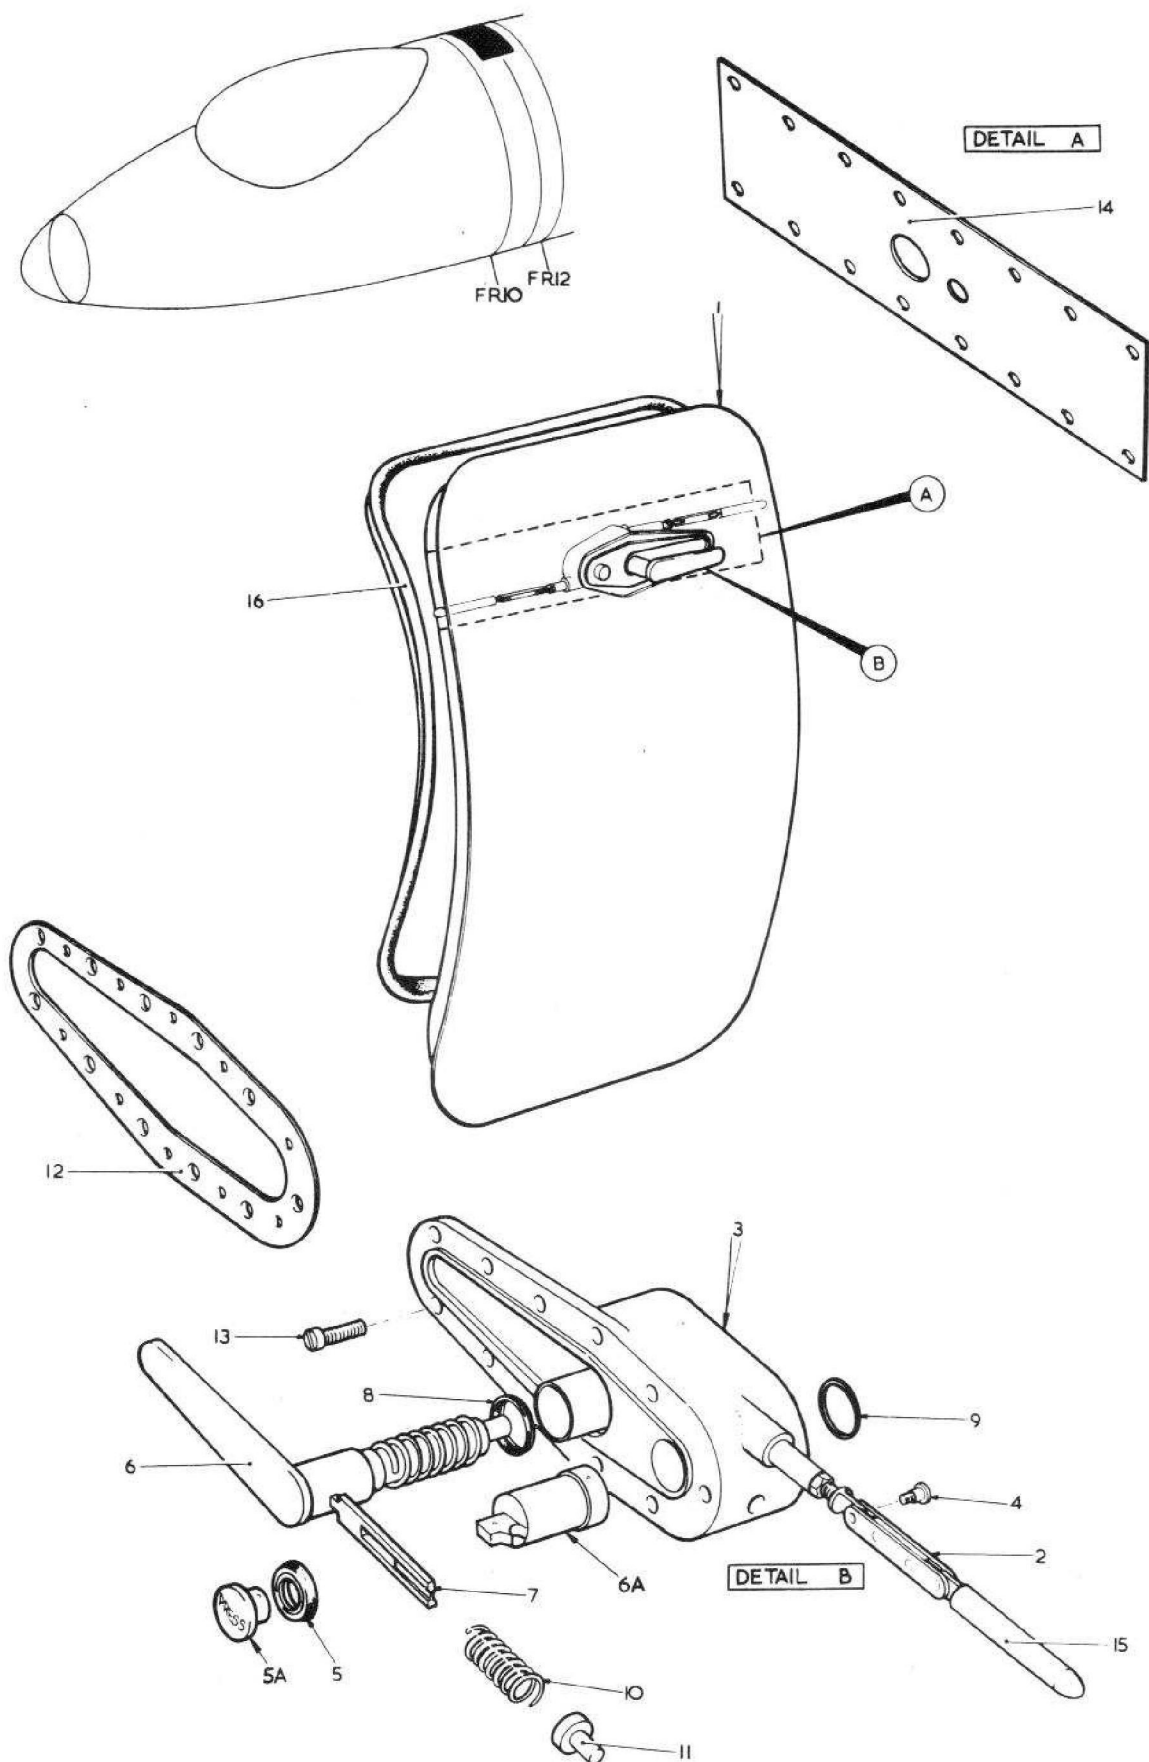


FIG.1 FUSELAGE, FRONT FUSELAGE



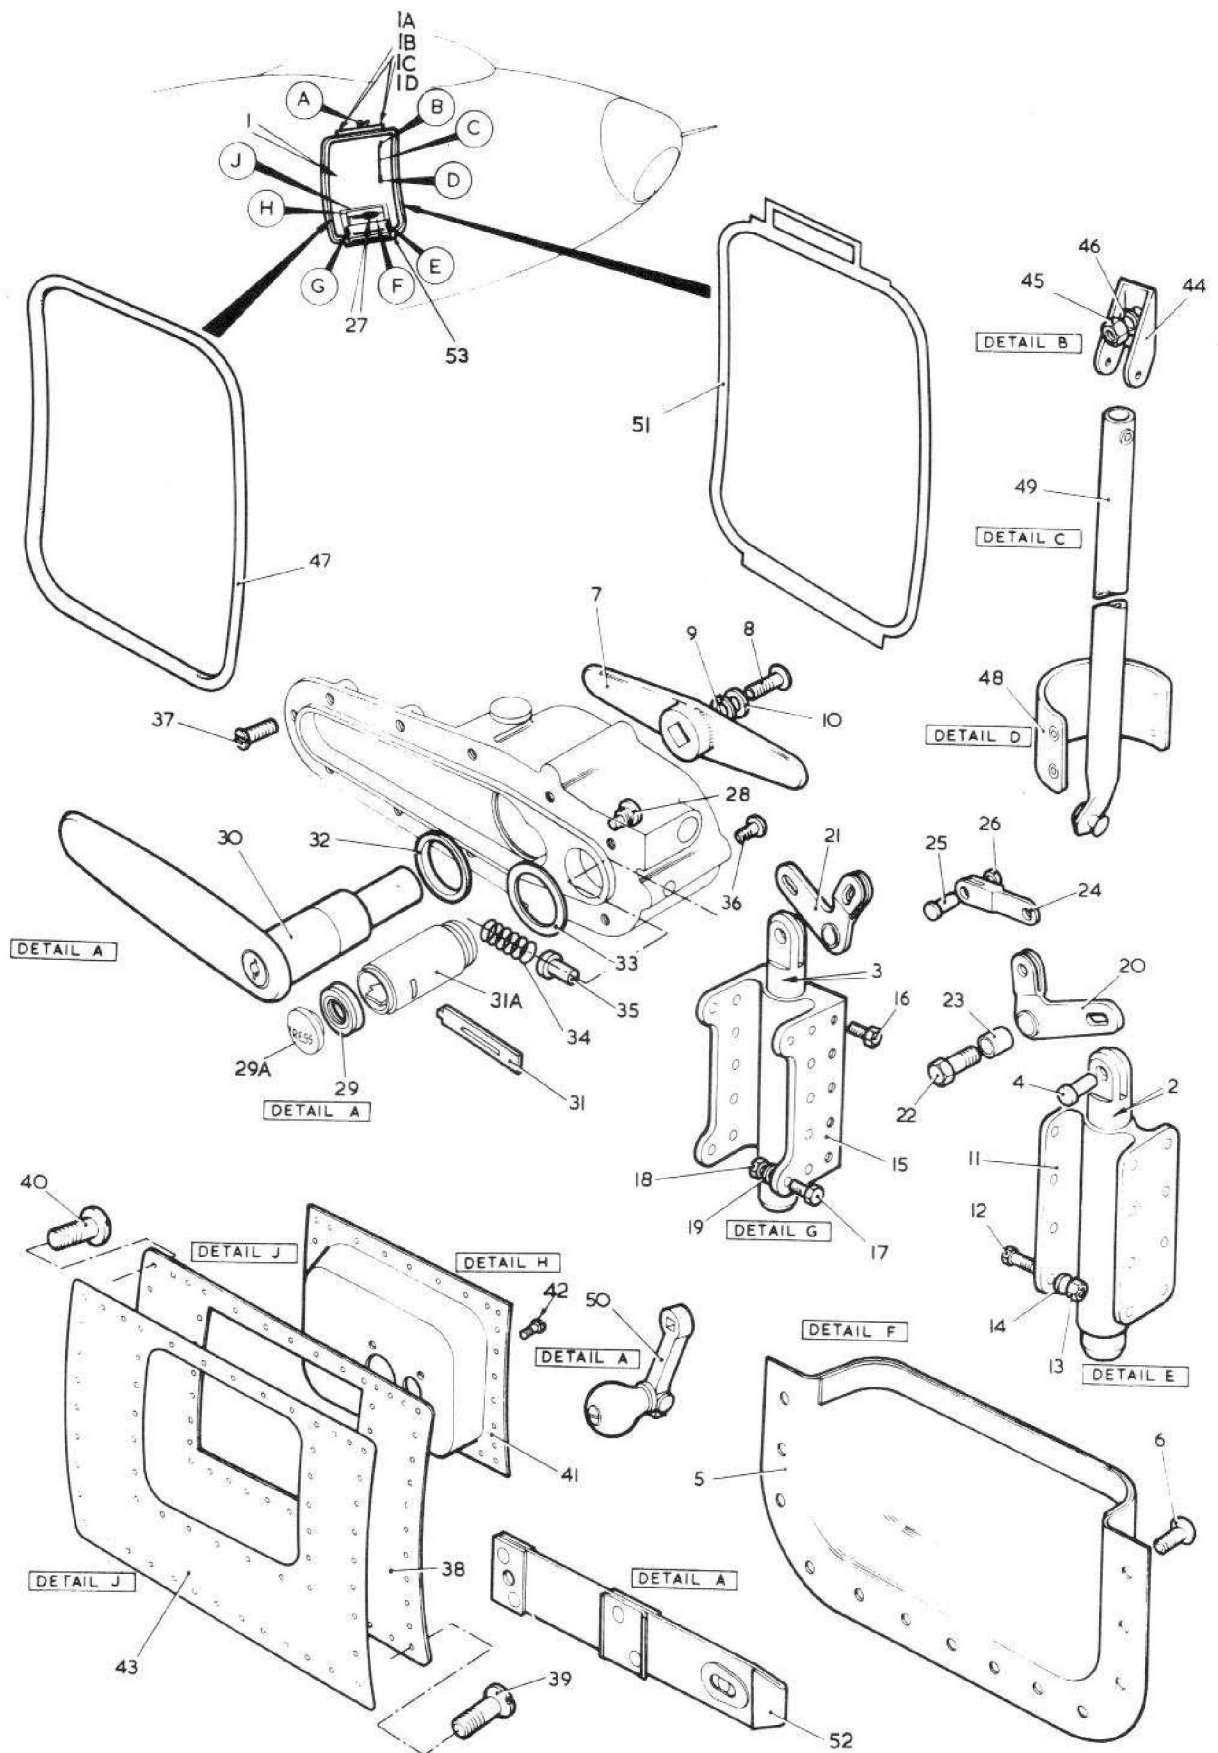


FIG.3. MAIN ENTRANCE DOOR ASSEMBLY

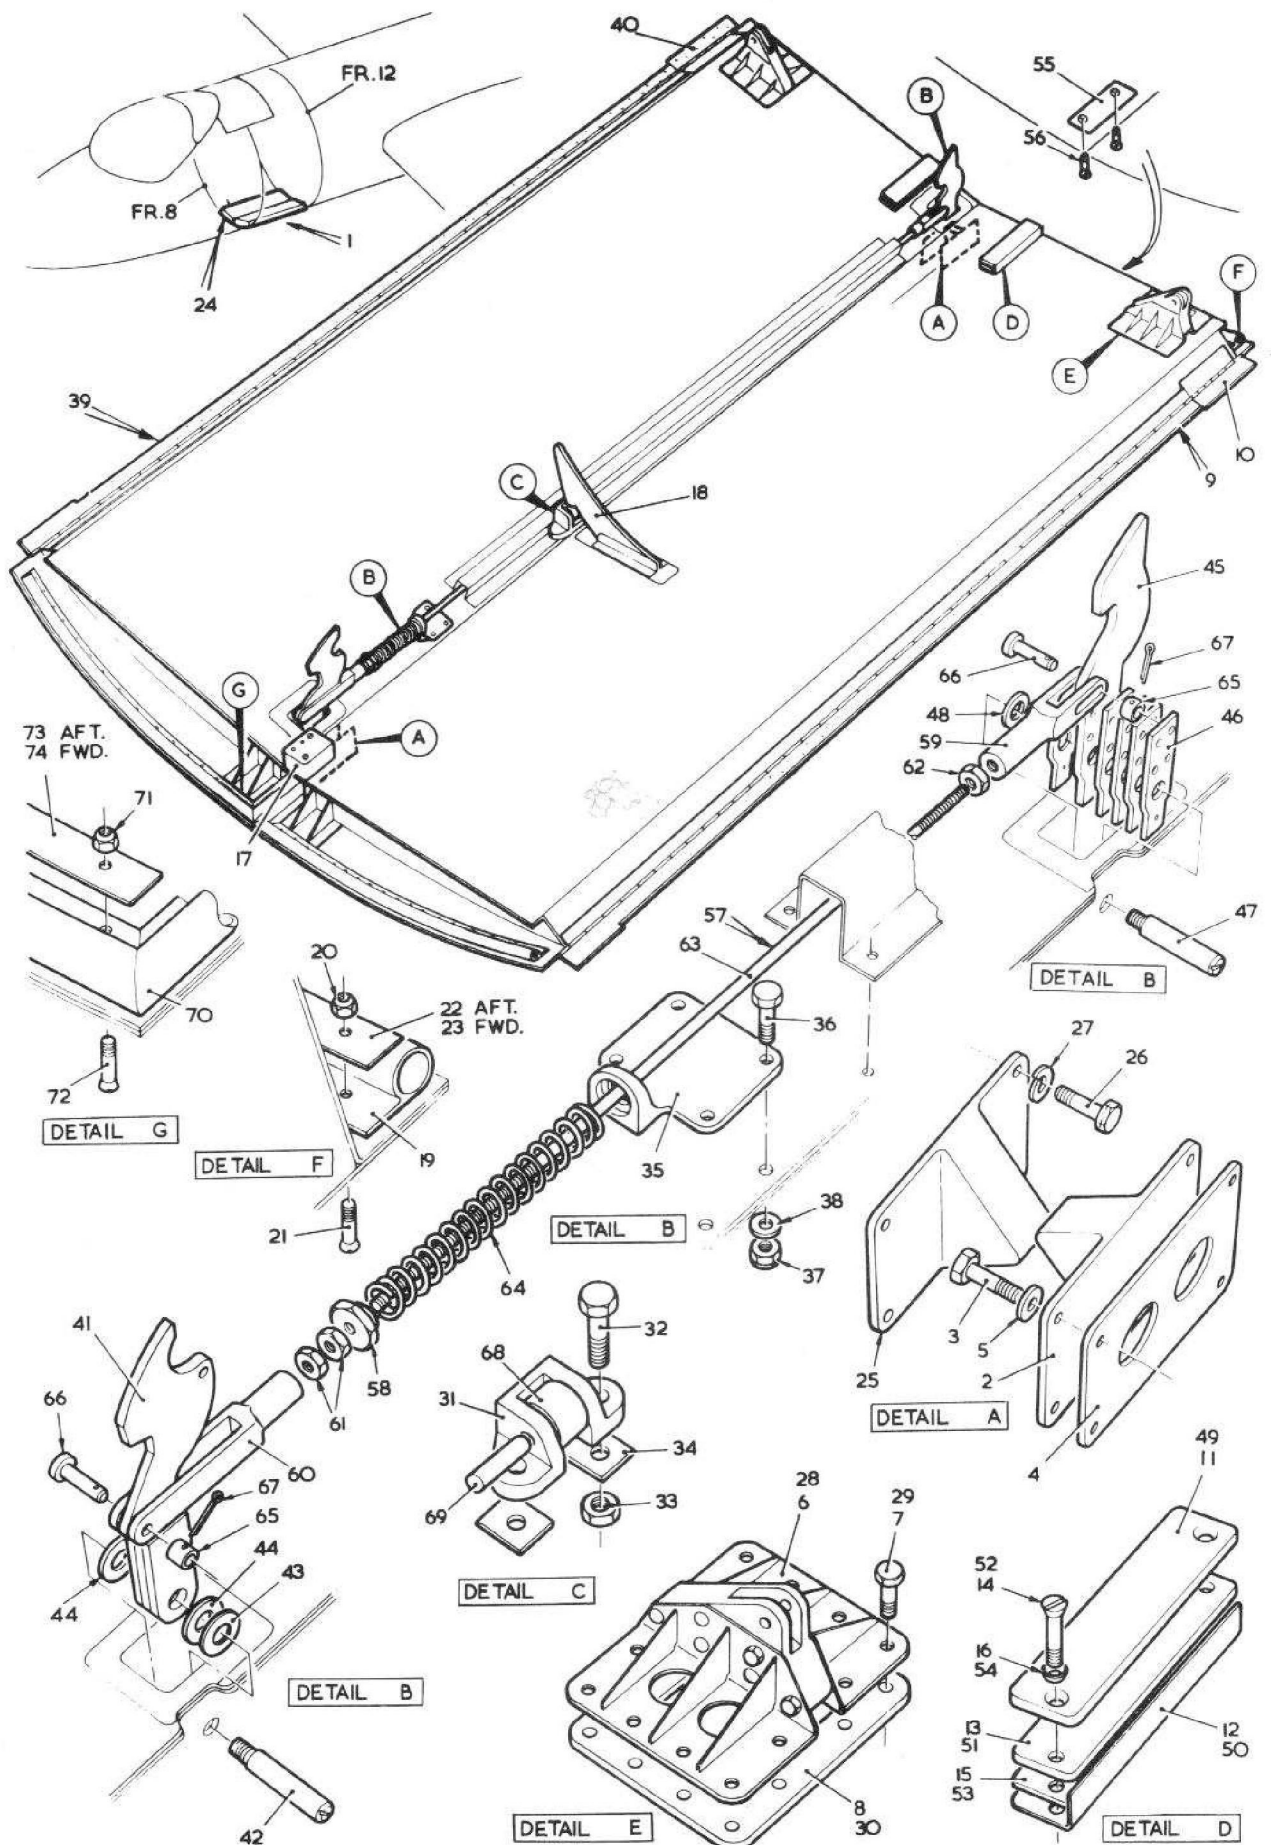


FIG. 4 NOSE UNDERCARRIAGE DOOR ASSEMBLY PORT & STBD.

CODE RSTZ

SECT KB

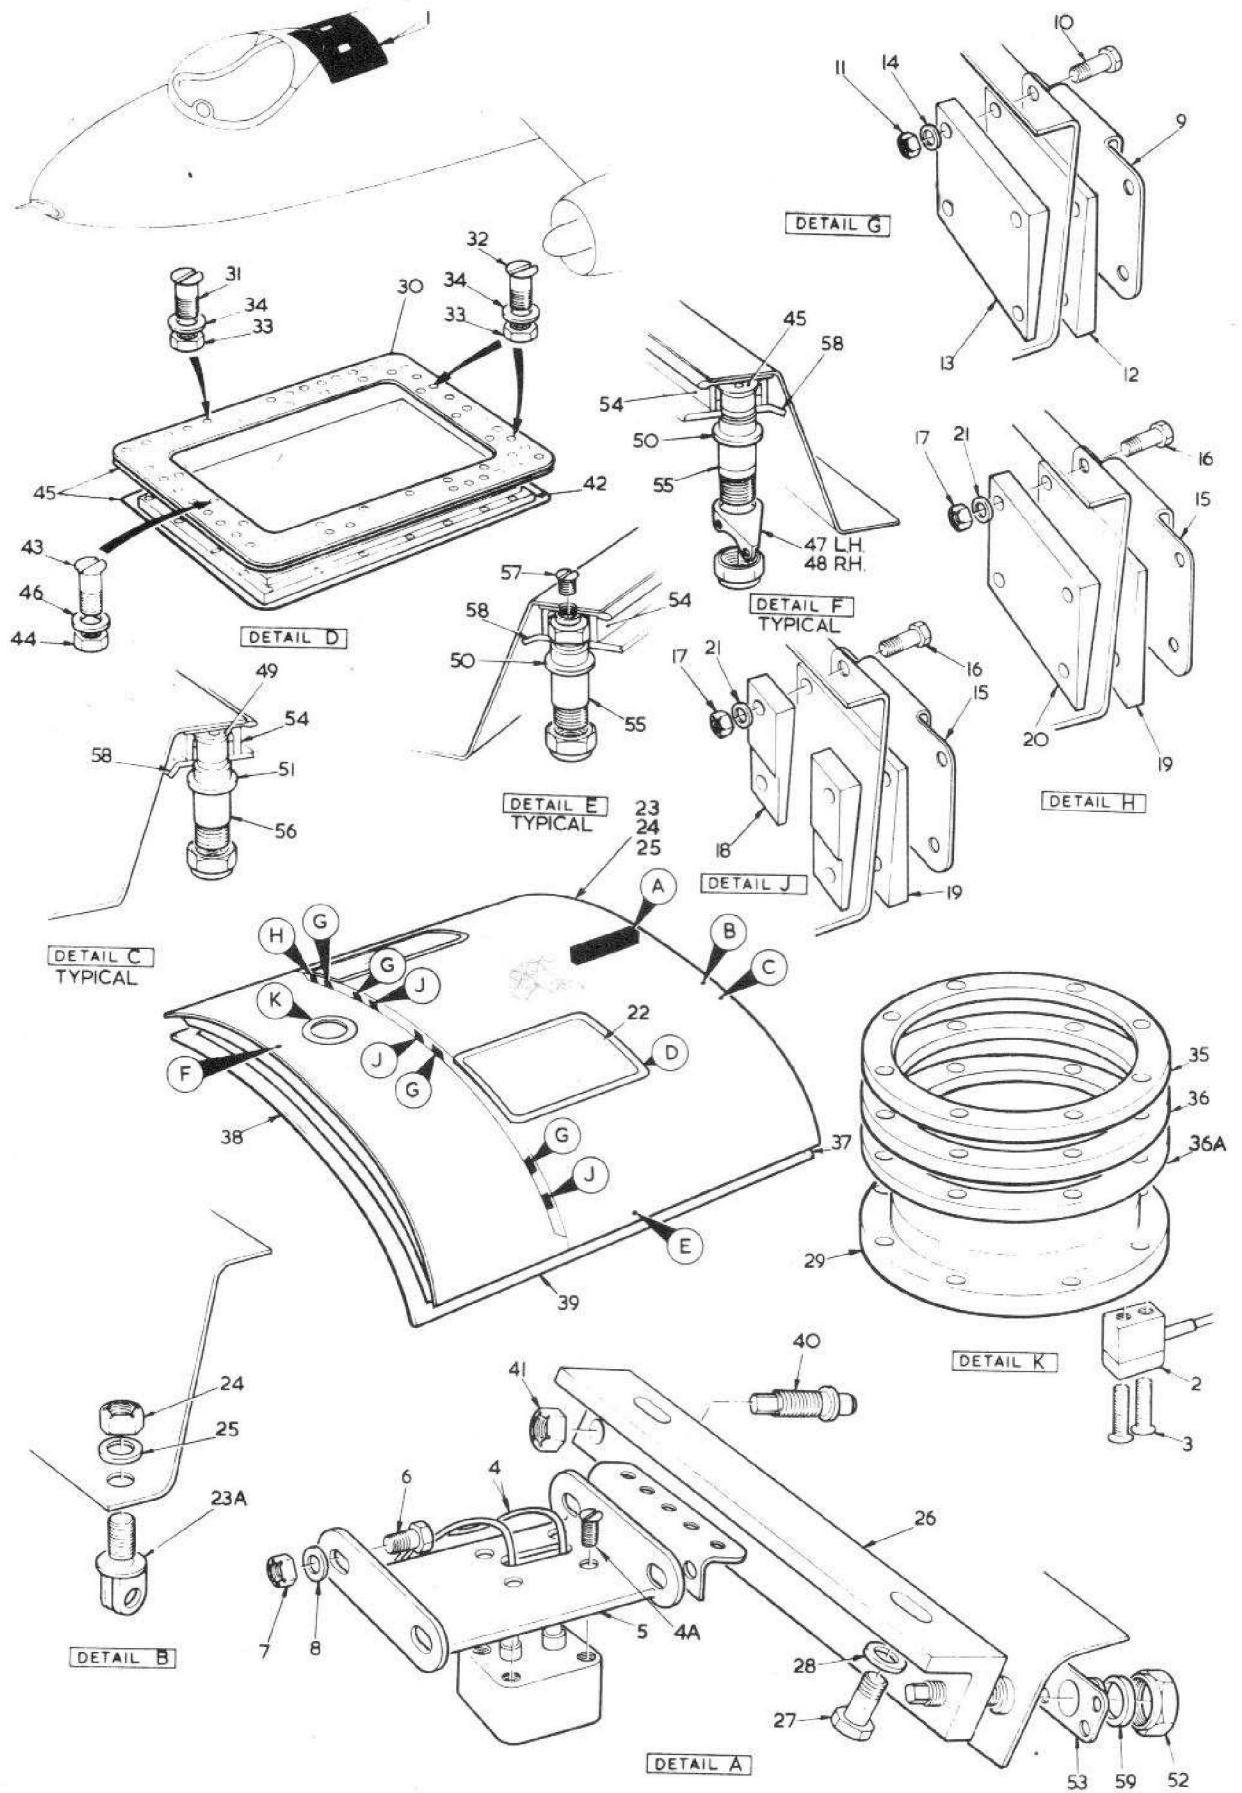


FIG. 5 NAVIGATORS ESCAPE HATCH

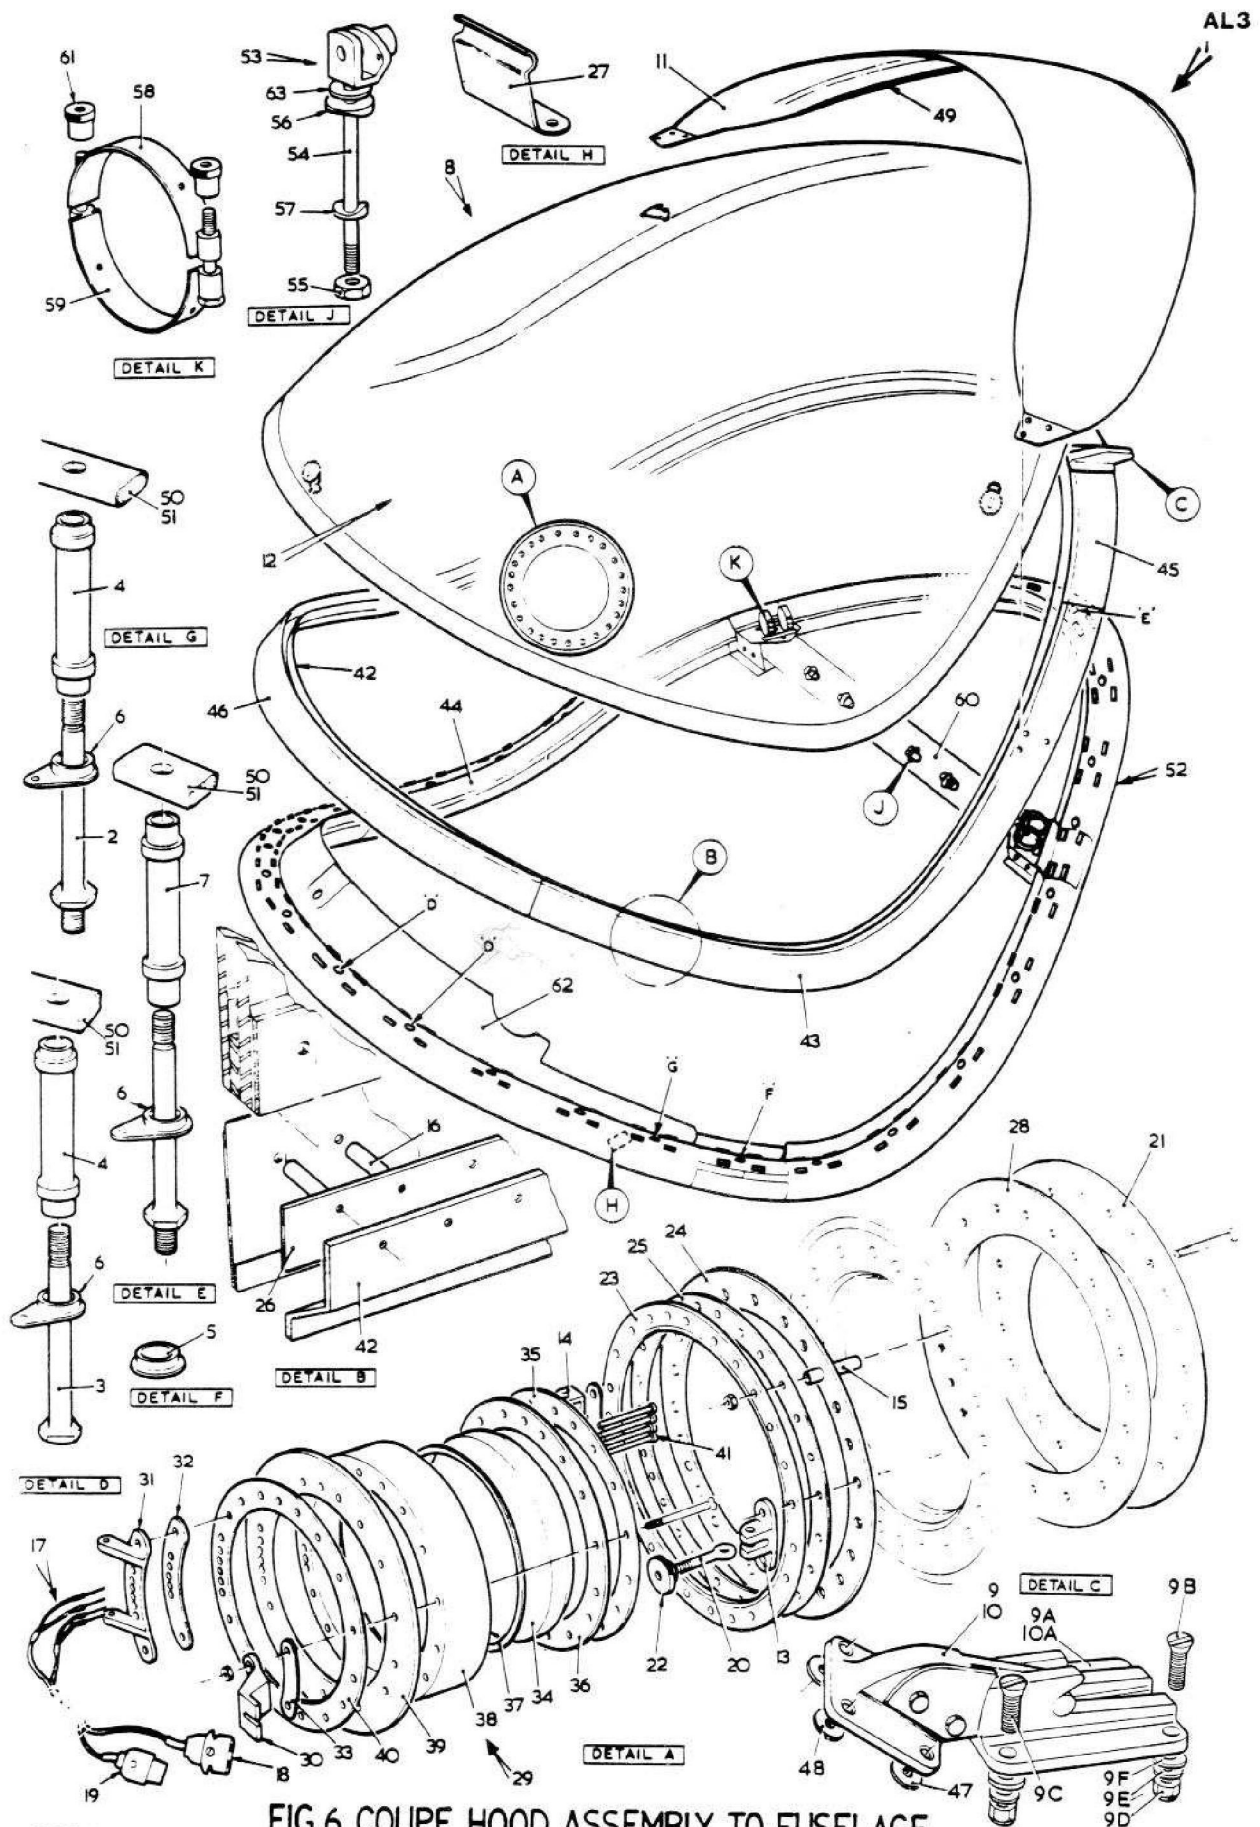


FIG.6. COUPE HOOD ASSEMBLY TO FUSELAGE

CODE R

SECT. KB

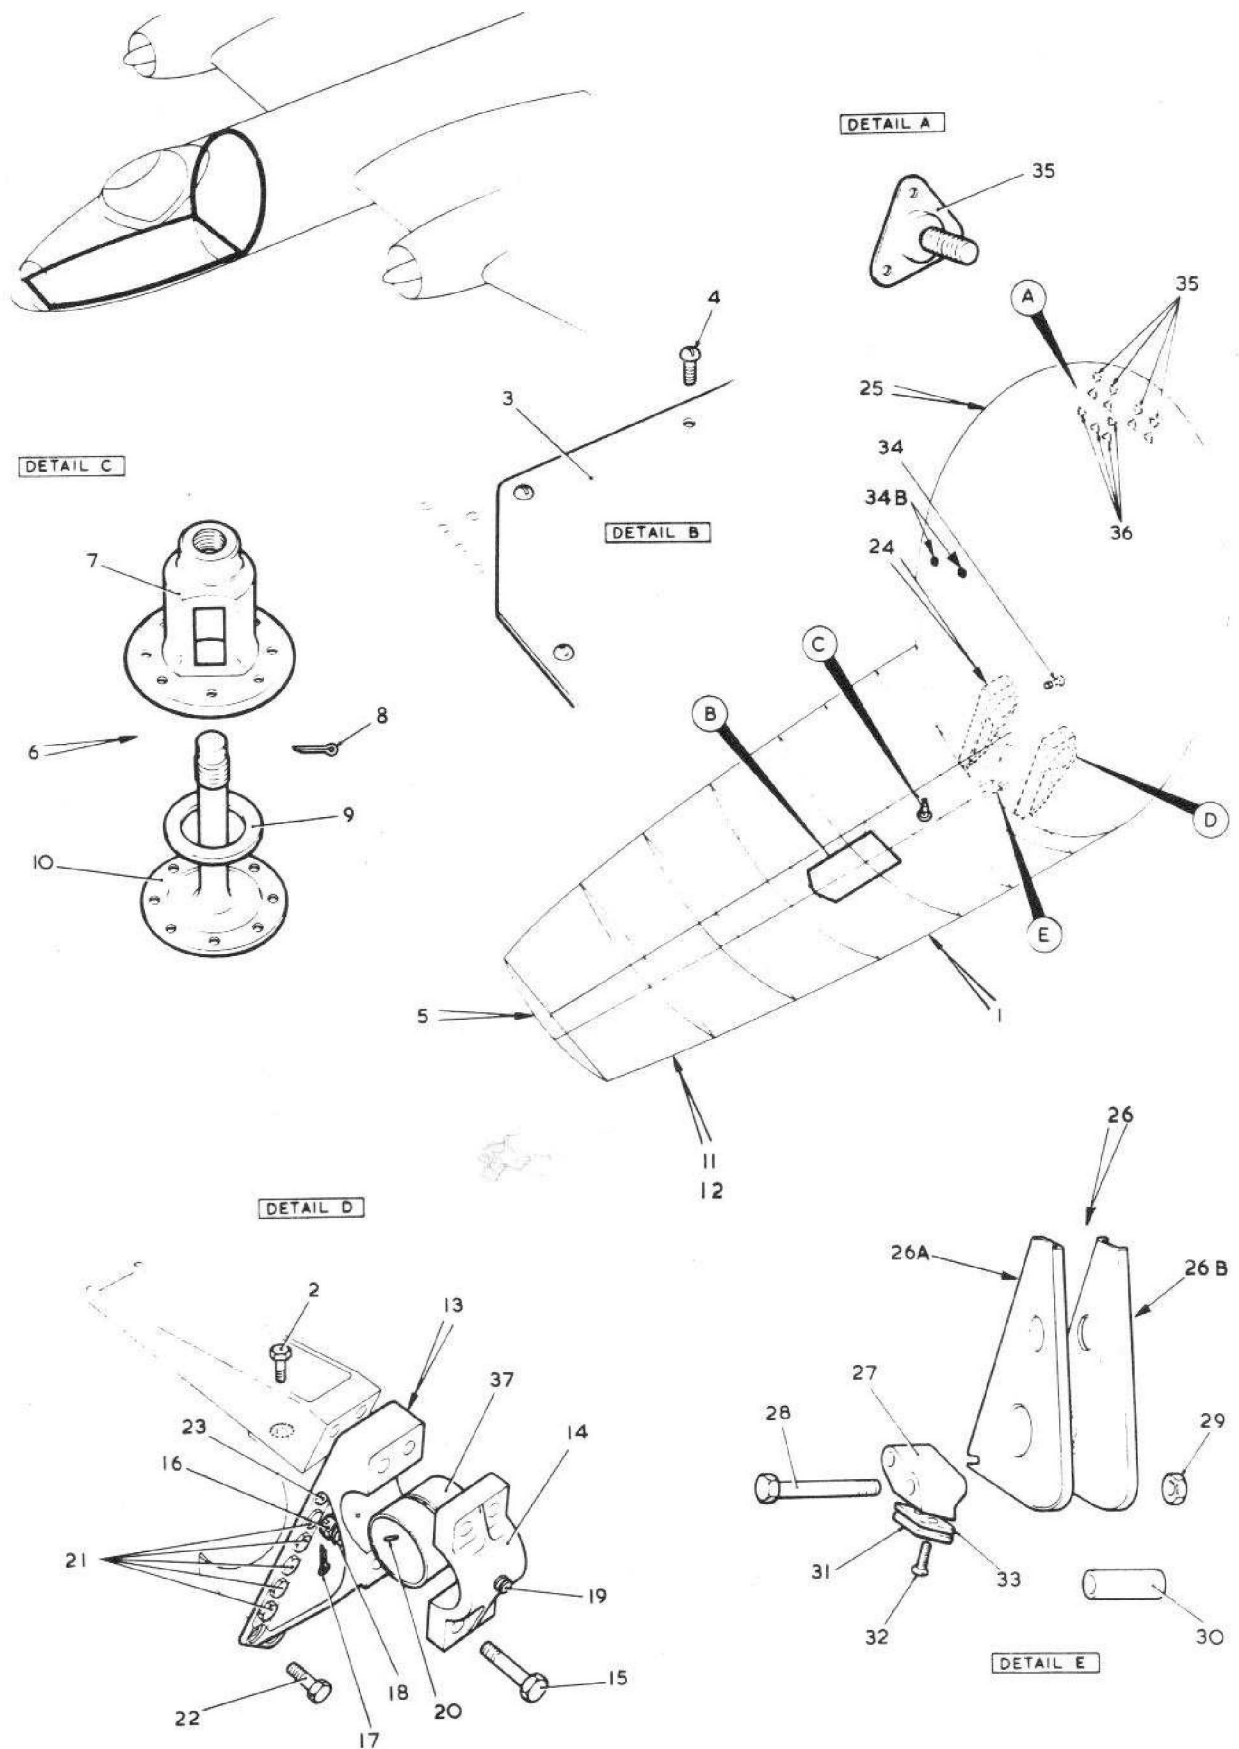


FIG.7. KEEL UNIT, COMPLETE ASSEMBLY

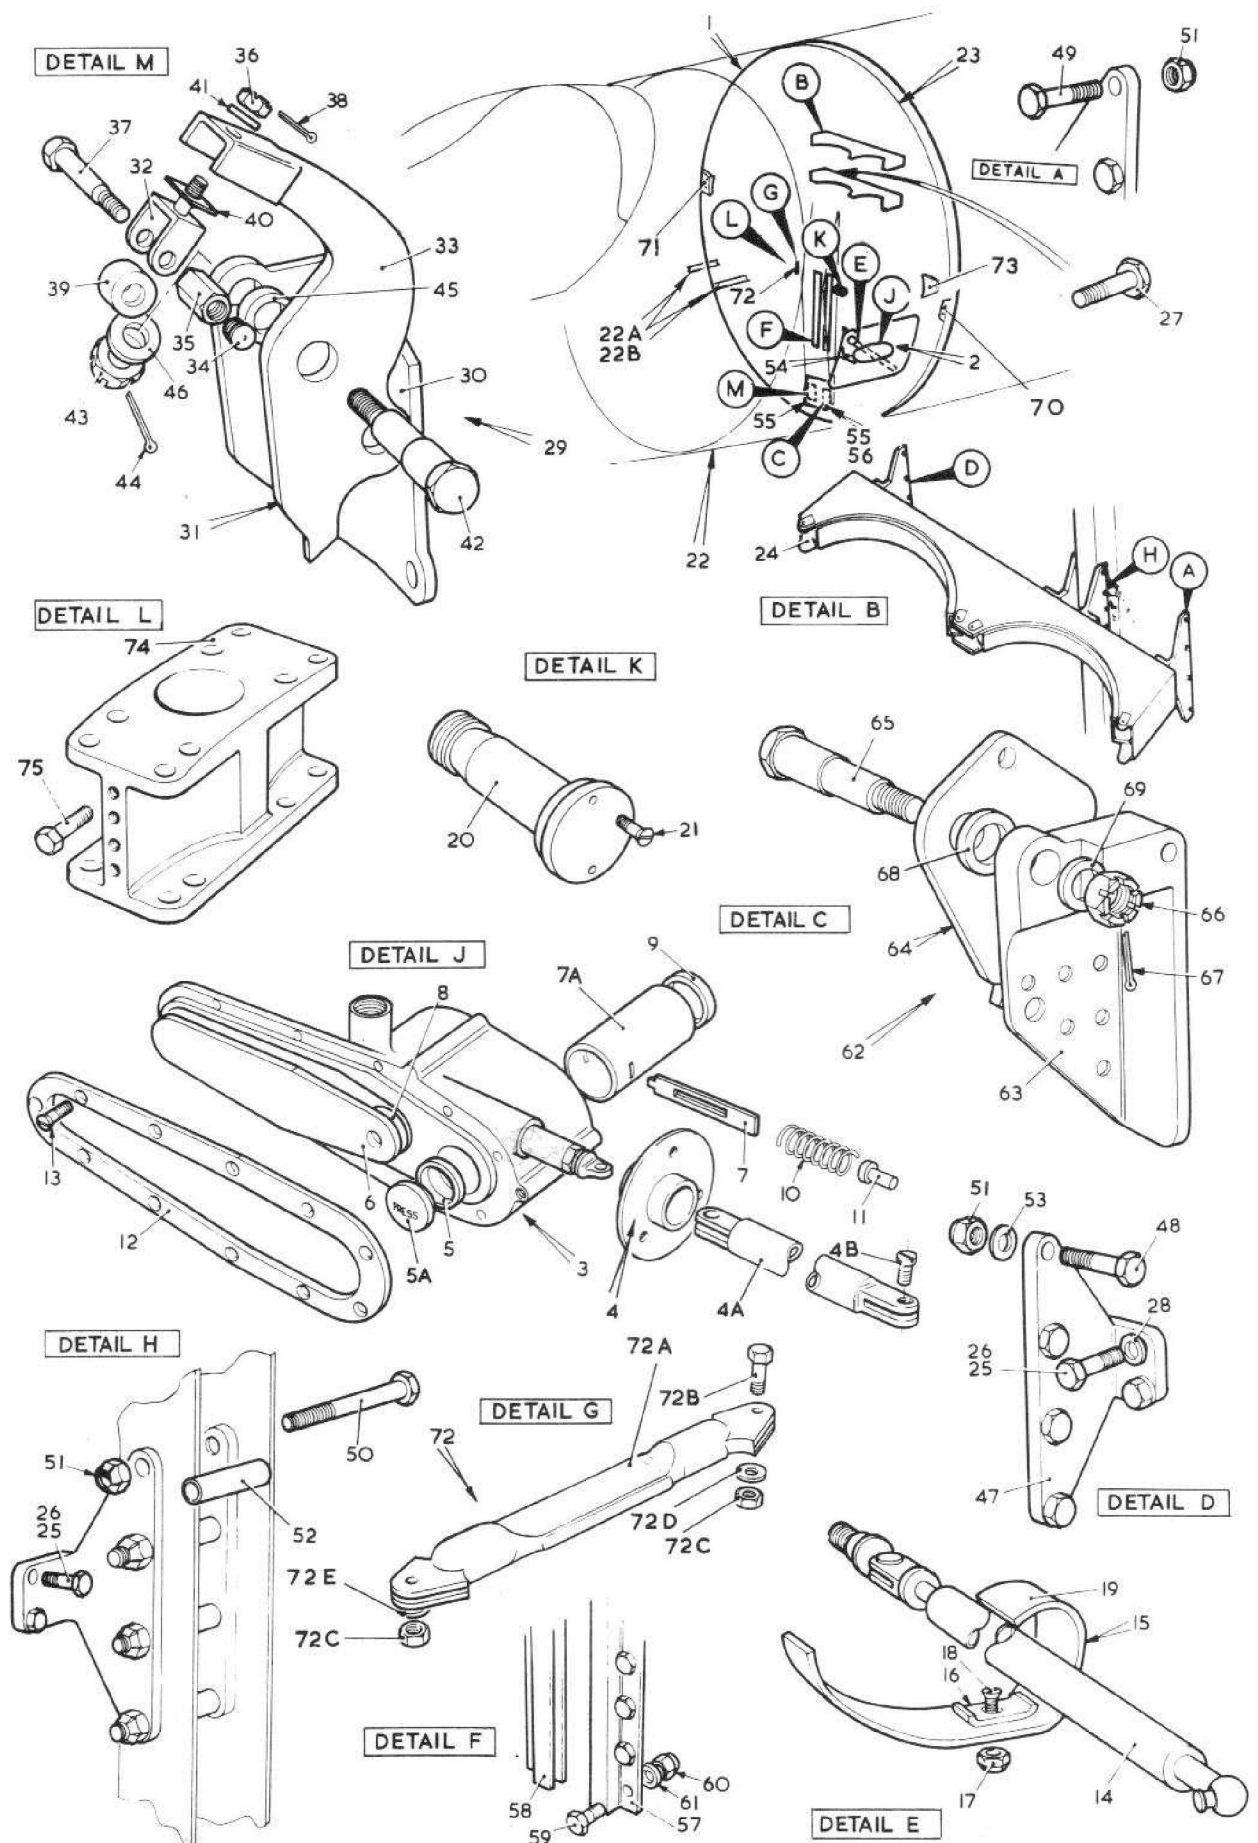


FIG. 8. SKINNING STRUCTURE PRESSURE BULKHEAD TO FRAME 12

CODE RSZ.

SECT. KB

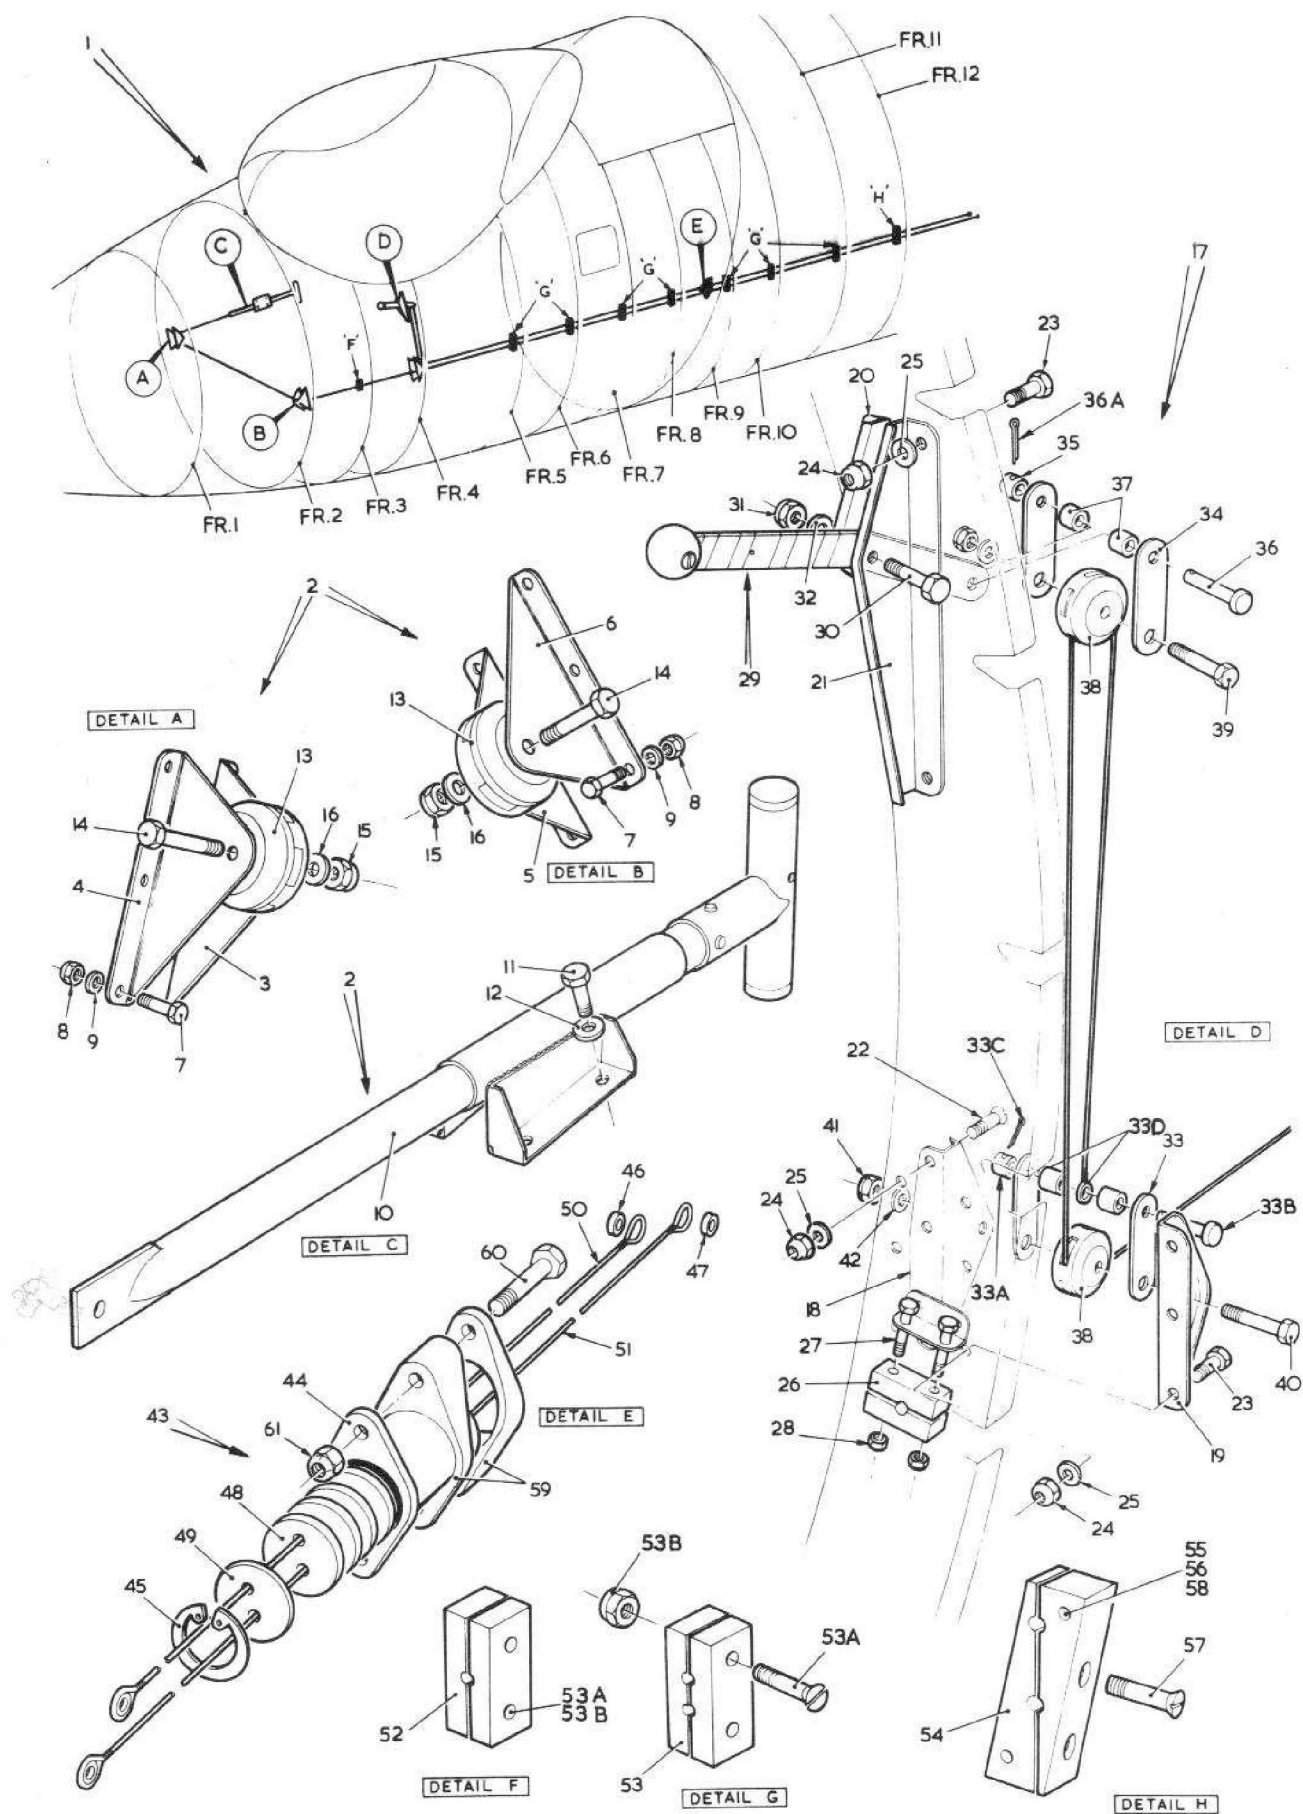


FIG.9 EMERGENCY RELEASE MECHANISM BOMB DOOR & UNDERCARRIAGE

CODE RZ

SECT KB

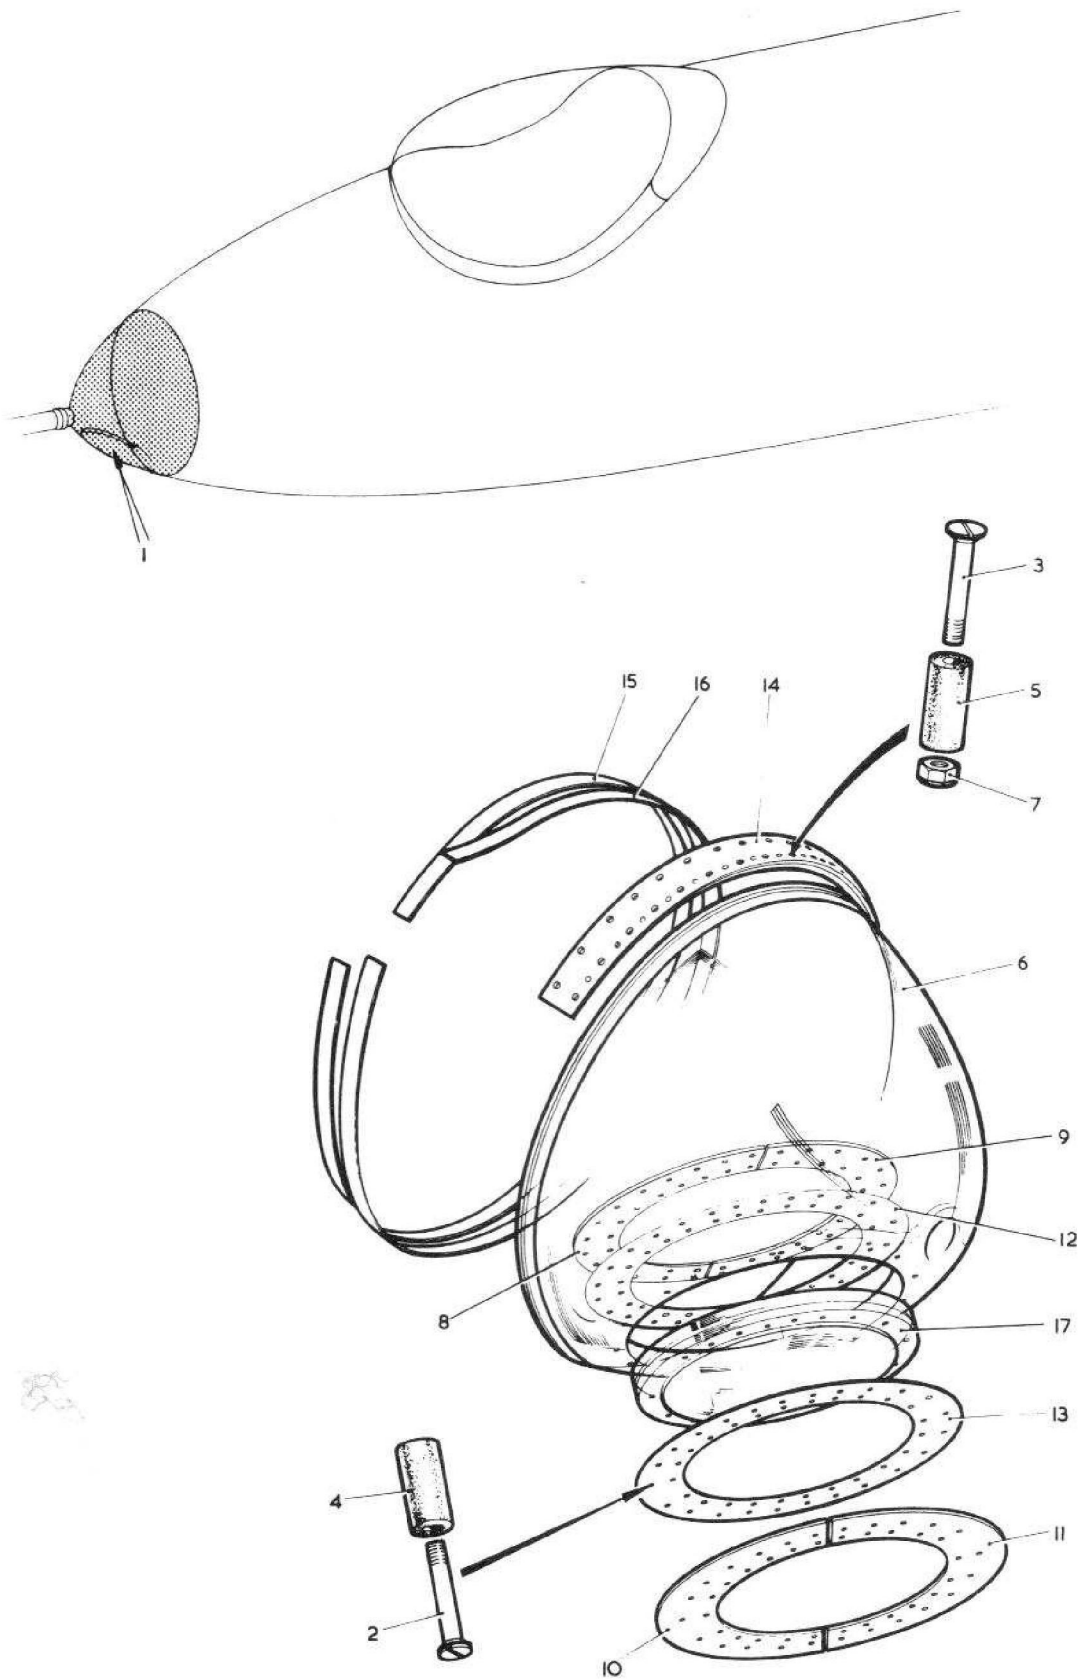


FIG.10. PERSPEX NOSE ASSEMBLY

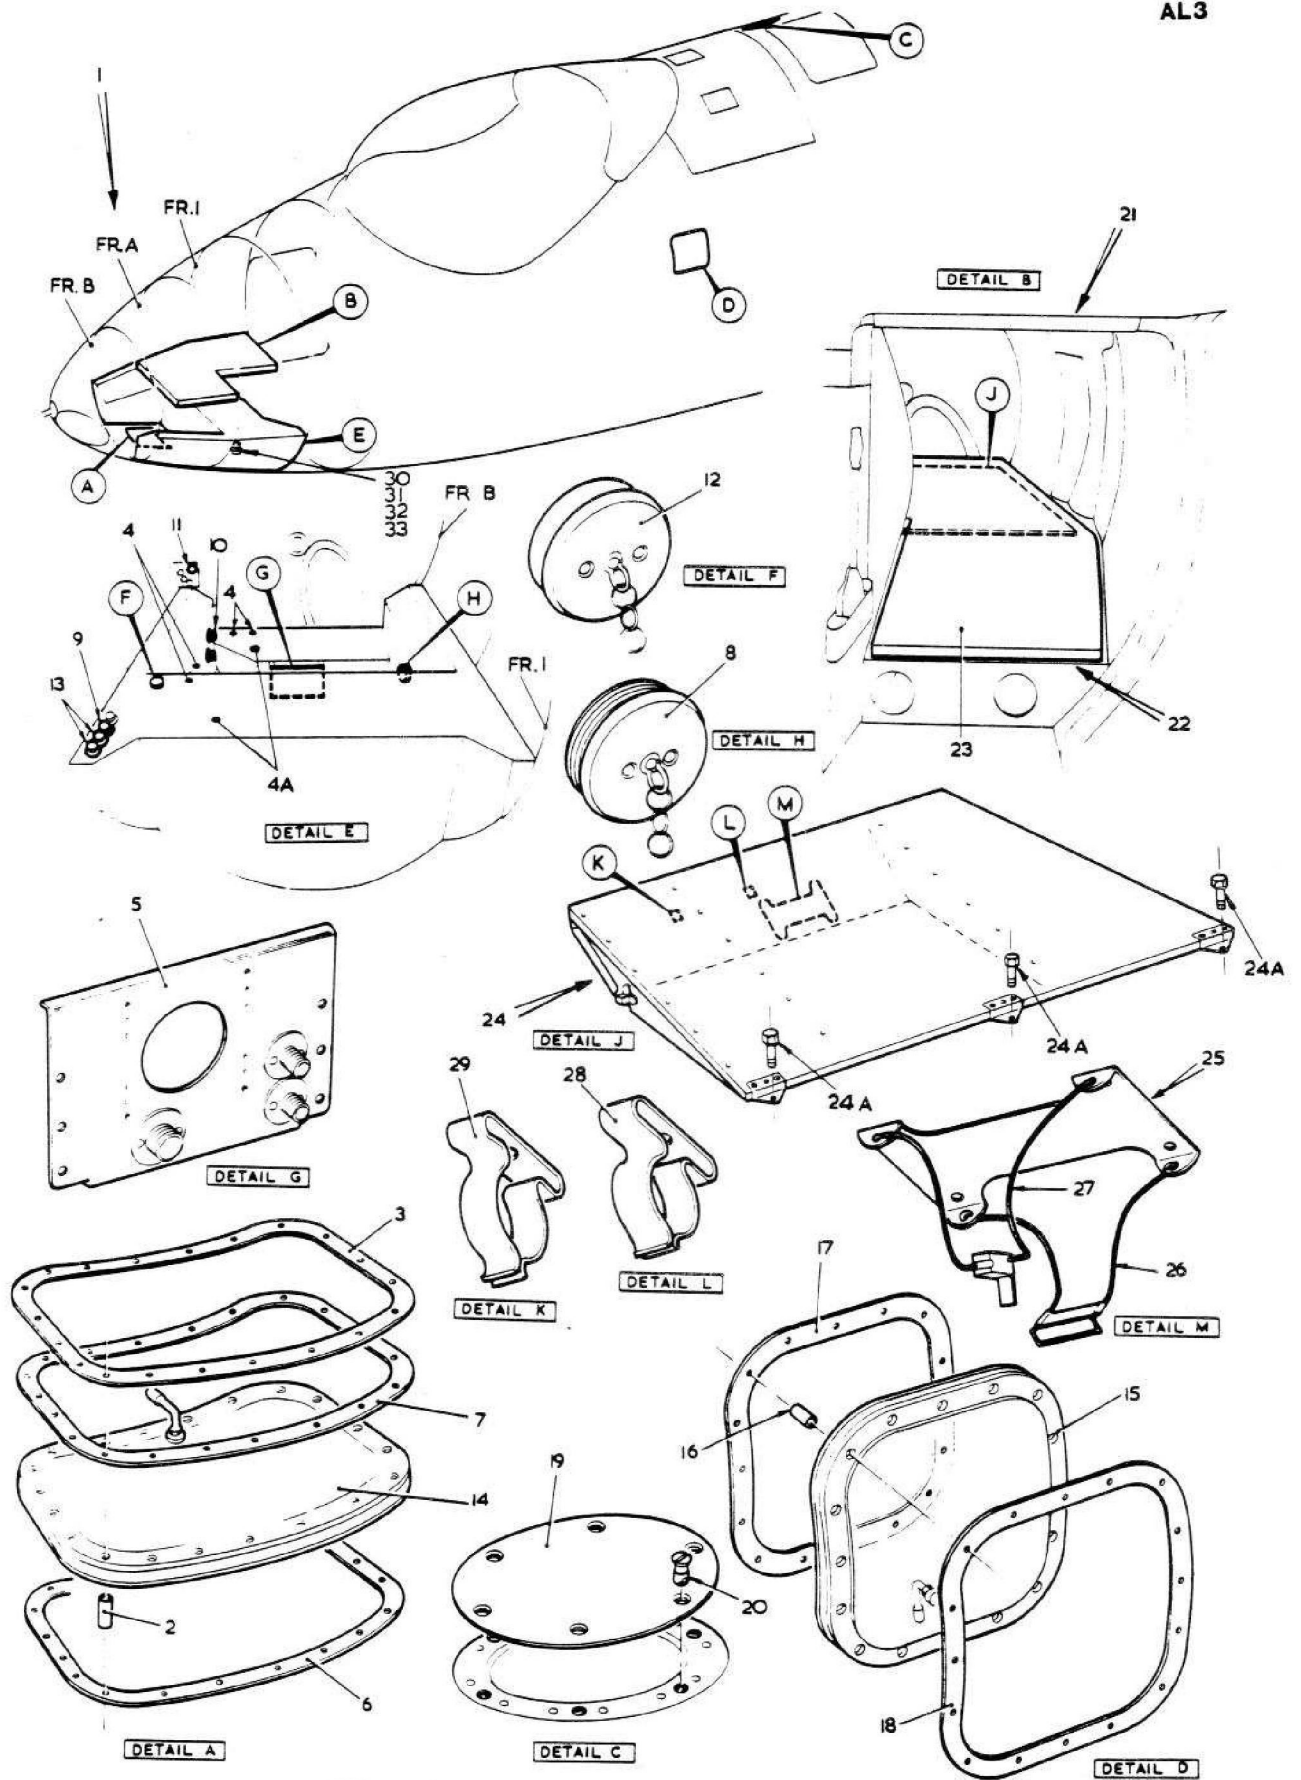


FIG. II. FRONT FUSELAGE STRUCTURE

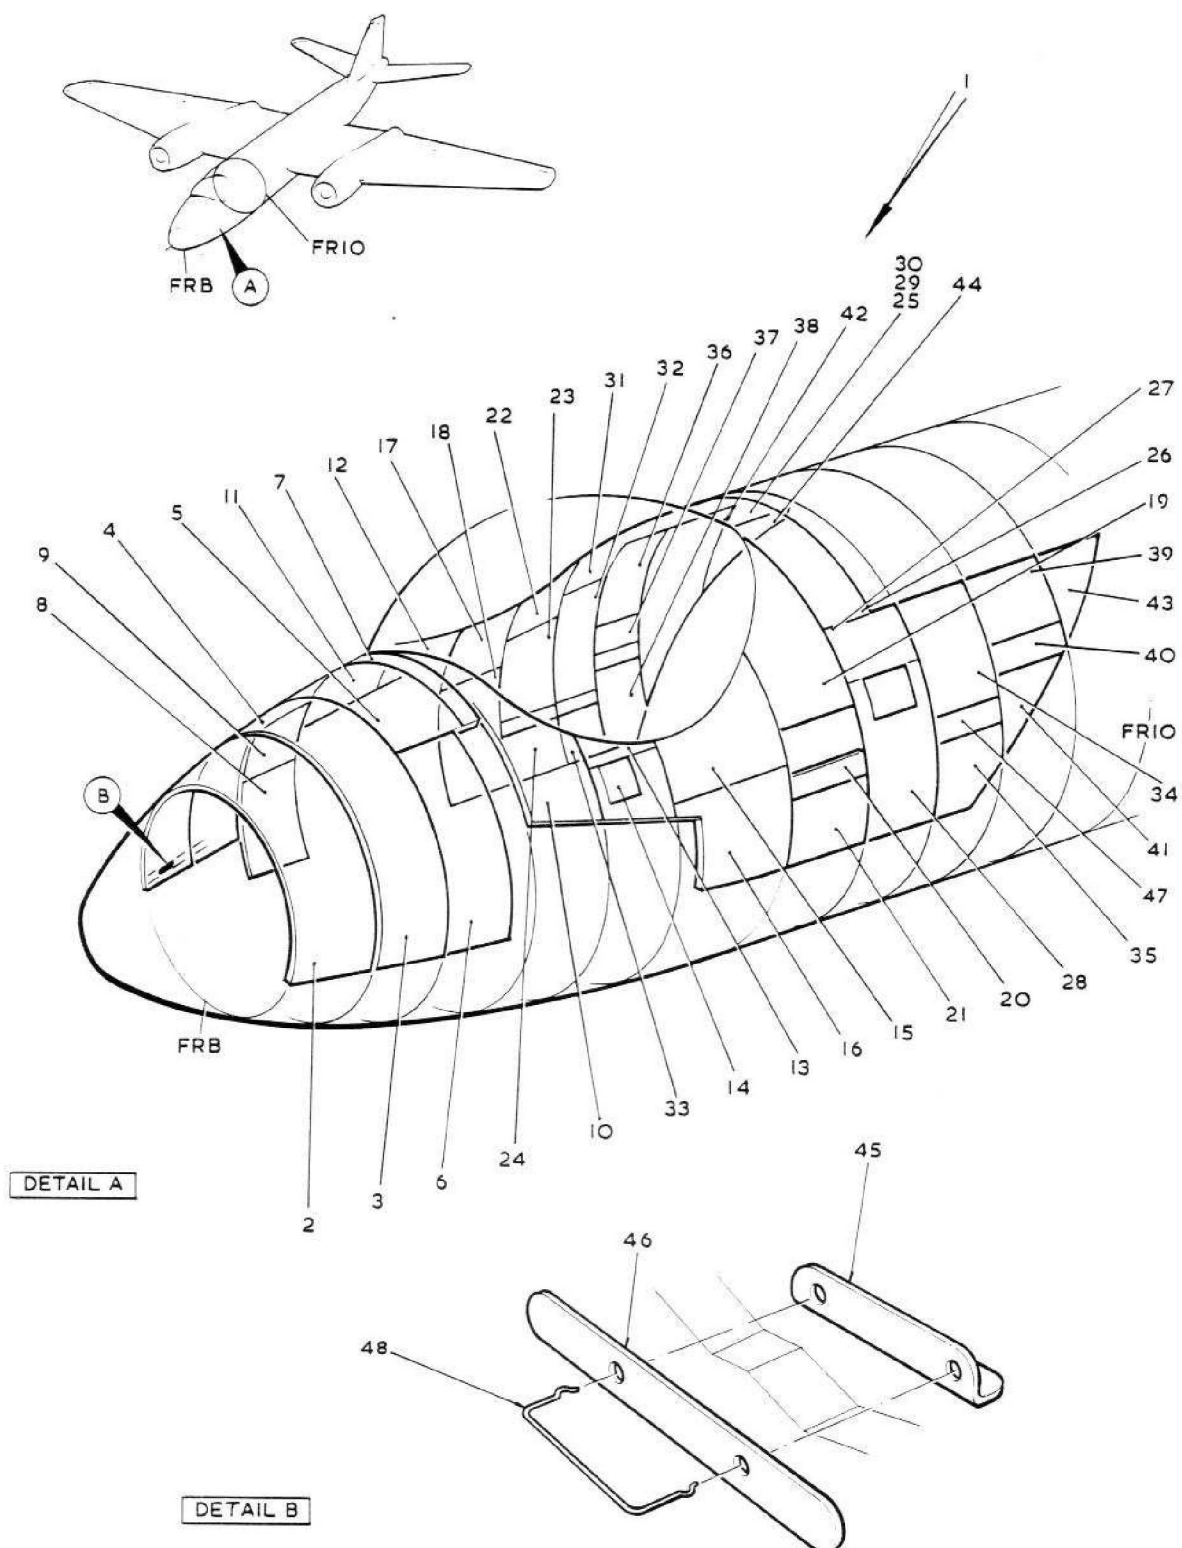


FIG 12 INSULATION PRESSURE CABIN

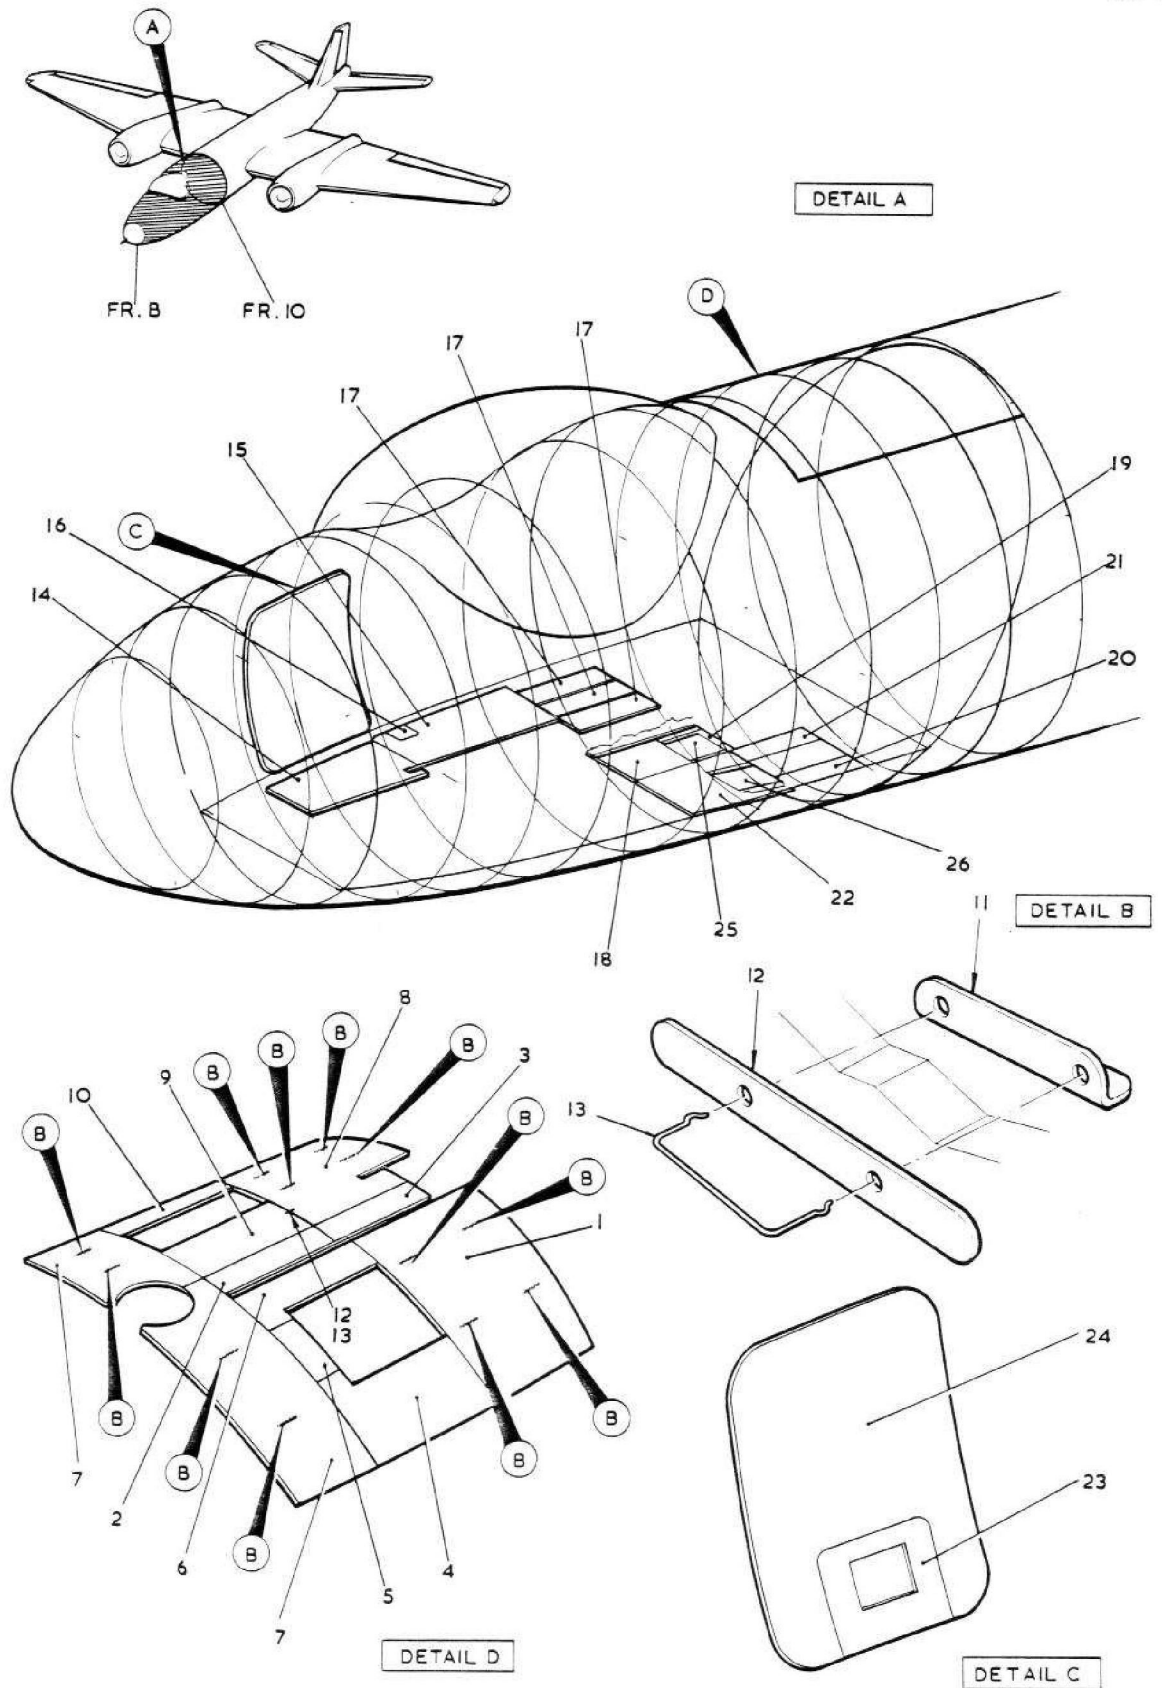


FIG 13 INSULATION FLOOR AND NAVIGATORS ESCAPE HATCH