

AP101B-0407-3A

Page DB. 1

CONTROLS
FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA2.45.529	CONTROLS, FLYING, IN CENTRE FUSELAGE ASSEMBLY Spares for:—	—	—	DB2/3
EA2.45.11	. LEVERS, AILERON AND MOUNTING AT FRAME 21B (PRE—MOD 5094) (For Aircraft Not Embodying Mod 5099)	1	—	DB2/1
R EK5.45.91	. LEVERS, AILERON AND MOUNTING AT FRAME 21B (MOD 5094) (For Aircraft Embodying Mod 5099) Spares for:—	1	—	
HOFFMANN T17	. . BEARING, ballrace	2	—	DB2/4
EA2.45.91	. . BRACKET, mounting (Pre—Mod 5094)	1	DTD390	DB2/23
EK5.45.107	. . BRACKET, mounting (Mod 5094)	1	L72	
EA2.45.83	. . HOUSING, upper (Pre—Mod 5094)	1	L40	DB2/2
EK5.45.111	. . HOUSING, upper (Mod 5094) Attaching parts for EK5.45.111:—	1	L65	
AS1242/4C	. . Bolt, 2BA	4	—	
AGS2009C1	. . Nut, anchor, 2BA	4	—	
EK5.45.123	. . Packing, taper	4	L72	
EK5.45.113	. . Ring, clamp	1	L65	
EK5.45.193	. . Shim, laminated	1	LA	
EK5.45.205	. . Shim, 18SWG (if required)	1	L72	
EA1.45.251	. . HOUSING, lower (Pre—MOD 5094)	1	L40	DB2/22
EA3.45.5205	. . HOUSING, lower (Mod 5094) Attaching parts for EA3.45.5205:—	1	L65	
A25/2C	. . Bolt, 2BA	8	—	
AGS2001C1-66	. . Nut, 2BA	8	—	
SP13C	. . Washer	QR	—	
EA2.45.575	. . LEVERS, ASSEMBLY (PRE—MOD 5094)	1	—	DB2/14
EK5.45.195	. . LEVERS, ASSEMBLY (MOD 5094) Spares for:—	1	—	
EA2.45.71	. . . LEVER, AILERON, ASSEMBLY (PRE—MOD 5094)	1	—	DB2/20
EK5.45.197	. . . LEVER, AILERON, ASSEMBLY (MOD 5094) Spares for:—	1	—	
SKEFKO CBA2	 BEARING, ballrace	2	—	DB2/17
EEAS3D	 HOUSING	2	—	DB2/18
EA2.45.69	 LEVER (Pre—Mod 5094)	1	—	DB2/15
EK5.45.199	 LEVER (Mod 5094)	1	L93	
EEAS4/20C	 WASHER, packing Attaching parts for EK5.45.197:—	4	—	DB2/19
AS1242/4E	. . . Bolt, 1/4" BSF	6	—	
A27ES	. . . Nut, 1/4" BSF	6	—	
SP90C6	. . . Pin, split	6	—	
SP13E	. . . Washer	6	—	

CONTROLS

AP101B-0407-3A

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA2.45.75	. . .	LEVER, AILERON, ASSEMBLY (PRE-MOD 5094)	1	L40	DB2/10
EK5.45.201	. . .	LEVER, AILERON, ASSEMBLY (MOD 5094) Spares for:—	1	—	
SKEFKO					
CBA2		BEARING, ballrace	2	—	DB2/6
EEAS3D		HOUSING	2	L40	DB2/7
EA2.45.73		LEVER (Pre-Mod 5094)	1	DTD610	DB2/8
EK5.45.203		LEVER (Mod 5094)	1	L93	
EEAS4/20C		WASHER, packing	4	DTD390	DB2/5
		Attaching parts for EK5.45.201:—			
AS1242/4E	. . .	Bolt, 1/4" BSF	6	—	
A27ES	. . .	Nut, 1/4" BSF	6	—	
SP90C6	. . .	Pin, split	6	—	
SP13E	. . .	Washer	6	—	
EEAS37/2A	. . .	NIPPLE, 4BA	8	S11	DB2/11
EA2.45.77	. . .	SOCKET, upper (Pre-Mod 5094)	1	DTD683	DB2/9
EK5.45.191	. . .	SOCKET, upper (Mod 5094)	1	L65	
EA2.45.79	. . .	SOCKET, lower (Pre-Mod 5094)	1	DTD683	DB2/16
EK5.45.103	. . .	SOCKET, lower (Mod 5094)	1	L65	
		Attaching parts for EK.45.191 or EK5.45.103:—			
EEAS.95./21E	. . .	Bolt, 1/4" BSF	2	—	
A27ES	. . .	Nut, 1/4" BSF	2	—	
SP90C6	. . .	Pin, split	2	—	
AS1903E16	. . .	Washer, saddle	4	—	
SP13E	. . .	Washer	2	—	
EEAS38/2A	. . .	SPOKE (Pre-Mod 5094)	QR	S11	DB2/12
EA2.45.229	. . .	TUBE, torque (Pre-Mod 5094)	1	T45	DB2/13
EK5.45.105	. . .	TUBE, torque (Mod 5094)	1	T45	
EA2.45.105	. . .	WASHER, profile	6	DTD390	DB2/21
EA2.45.12	. . .	LEVER, AILERON, IDLE MOUNTING ASSEMBLY (PRE-MOD 5094) (For Aircraft Not Embodying Mod 5099)	1	—	DB1/1
R EK5.45.125	. . .	LEVER, AILERON, IDLE MOUNTING ASSEMBLY (MOD 5094) (For Aircraft Embodying Mod 5099) Spares for:—	1	—	
HOFFMANN					
T17	. .	BEARING, ballrace	2	—	DB1/17
EA2.45.81	. .	HOUSING, lower	1	L40	DB1/25
EA2.45.83	. .	HOUSING, upper (Pre-Mod 5094)	1	L40	DB1/14
EK5.45.111	. .	HOUSING, upper (Mod 5094)	1	L65	
		Attaching parts for EK5.45.111:—			
AS1242/4C	. .	Bolt, 2BA	4	—	
AGS2009C1	. .	Nut, anchor 2BA	4	—	
EK5.45.123	. .	Packing, taper	4	L72	
EK5.45.113	. .	Ring, clamp	1	L65	

AP101B-0407-3A

Page DB.3

CONTROLS

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA2.45.577	. . LEVER, AILERON, IDLE, ASSEMBLY (PRE-MOD 5094)	1	—	DB1/18
EK5.45.127	. . LEVER, AILERON, IDLE, ASSEMBLY (MOD 5094) Spares for:—	1	—	
EA2.45.99	. . . LEVER, ASSEMBLY (PRE-MOD 5094)	1	—	DB1/21
EK5.45.129	. . . LEVER, ASSEMBLY (MOD 5094) Spares for:—	1	—	
SKEFKO				
CBA2	 BEARING, ballrace	2	—	DB1/22
EEAS3D	 HOUSING	2	L40	DB1/23
EA2.45.107	 LEVER (Pre-Mod 5094)	1	—	DB1/23A
EK5.45.131	 LEVER (Mod 5094)	1	L93	
EEAS4/20C	 WASHER, packing Attaching parts for EK5.45.129:—	4	DTD390	DB1/24
AS1242/5E	. . . Bolt, 1/4" BSF	4	—	
A27ES	. . . Nut, 1/4" BSF	4	—	
SP90C6	. . . Pin, split	4	—	
SP15E	. . . Washer	4	—	
EA2.45.93	. . . SHAFT (Pre-Mod 5094)	1	—	DB1/24A
EK5.45.89	. . . SHAFT (Mod 5094)	1	L65	
EK5.45.147	. . PLATE, lower, assembly, 18 SWG (Mod 5094) Attaching parts for EK5.45.5147:—	1	L72	
A25/2B	. . Bolt, 4BA	2	—	
A25/1C	. . Bolt, 2BA	4	—	
A25/2C	. . Bolt, 2BA	7	—	
AGS2018B1	. . Nut, anchor, 4BA	2	—	
AGS2001C1/66	. . Nut, 2BA	4	—	
AGS2018C1	. . Nut, anchor, 2BA	6	—	
AGS2007C1	. . Nut, anchor, 2BA	1	—	
SP13B	. . Washer	2	—	
SP13C	. . Washer	11	—	
EK5.45.143	. . TRAY, support, lower plate, 18 SWG (Mod 5094)	1	L72	
—	. SUPPORT, CONTROL TUBE FRAME No. 14 (EA2.45.17) Spares for:—	—	—	
FAIREY AVIATION FS515	. . BEARING, roller	3	—	
—	. SUPPORT, CONTROL TUBE, FRAME No. 19 (EA2.45.15) Spares for:—	—	—	
FAIREY AVIATION FS515	. . BEARING, roller	2	—	
—	. SUPPORT, CONTROL TUBE FRAME No. 22 (EA2.11.69)	—	—	

CONTROLS
FLYING CONTROLS IN CENTRE FUSELAGE


Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
FS515		Spares for:— BEARING, roller	2	—	
—		SUPPORT, CONTROL TUBE, FRAME No. 25 (EA2.11.75)	—	—	
FS515		Spares for:— BEARING, roller	2	—	
—		SUPPORT, CONTROL TUBE, FRAME No. 27 (EA2.11.79)	—	—	
FS515		Spares for:— BEARING, roller	2	—	
EA2.45.513		TUBE, CONTROL, ELEVATOR, BETWEEN FRAMES 22 AND 25 ASSEMBLY (PRE MOD 4930)	2	—	DB1/4
R EA2.45.857		TUBE, CONTROL, ELEVATOR, BETWEEN FRAMES 22 AND 25 ASSEMBLY (MOD 4930) (PRE MOD 5473)	2	—	
R EA2.45.883		TUBE, CONTROL, ELEVATOR, ASSEMBLY (MOD 5473)	2	—	
R EEAS130		Spares for:— END-FITTING, c/w ballrace (PRE MOD 5473)	1	DTD683	DB1/3
R EA3.45.767		END-FITTING (MOD 5473)	1	—	
EA2.45.509		TUBE, CONTROL, BETWEEN FRAME 19 AND AILERON LEVER, ASSEMBLY (PRE MOD 4930)	1	—	DB1/19
R EA2.45.855		TUBE, CONTROL, BETWEEN FRAME 19 AND AILERON LEVER, ASSEMBLY (MOD 4930) (PRE MOD 5473)	1	—	
R EA2.45.881		TUBE, CONTROL, ASSEMBLY (MOD 5473)	1	—	
EEAS47/2		Spares for:— FORK-END, adjusting	1	DTD683	DB1/20
EEAS37/13A		Attaching parts for EEAS47/2:— Nipple	4	—	DB1/20A
EEAS38/1A		Spoke, 6BA	4	—	DB1/20B
EA2.45.505		TUBE, CONTROL, ELEVATOR, BETWEEN FRAMES 25 AND 28, ASSEMBLY (PRE MOD 4930)	2	—	DB1/10
R EA2.45.853		TUBE, CONTROL, ELEVATOR, BETWEEN FRAMES 25 AND 28, ASSEMBLY (MOD 4930) (PRE MOD 5473)	2	—	
R EA2.45.879		TUBE, CONTROL, ELEVATOR, ASSEMBLY (MOD 5473)	2	—	
R EEAS130		Spares for:— END-FITTING, c/w ballrace (PRE MOD 5473)	1	DTD683	DB1/3
EA3.45.767		END-FITTING (MOD 5473)	1	—	
EA2.45.521		TUBE, CONTROL, ELEVATOR, FROM FRAME 27 TO TRANSPORT JOINT ASSEMBLY (PRE MOD 4930)	2	—	DB1/5
R EA2.45.861		TUBE, CONTROL, ELEVATOR, FROM FRAME 27 TO TRANSPORT JOINT ASSEMBLY (MOD 4930) (PRE MOD 5473)	2	—	
R EA2.45.887		TUBE, CONTROL, ELEVATOR, ASSEMBLY (MOD 5473)	2	—	

AP101B-0407-3A

CONTROLS

FLYING CONTROLS IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
R EEAS130	Spares for:—	1	DTD683	DB1/3
R EA3.45.767	. . END-FITTING, c/w ballrace (PRE MOD 5473)	1	—	
EA2.45.517	. . END-FITTING (MOD 5473)	2	—	DB1/9
R EA2.45.859	. TUBE, CONTROL, ELEVATOR, BETWEEN FRAMES 18 AND 23, ASSEMBLY (PRE MOD 4930)	2	—	
R EA2.45.885	. TUBE, CONTROL, ELEVATOR, ASSEMBLY (MOD 5473)	2	—	
R EEAS130	Spares for:—	1	DTD683	DB1/3
R EA3.45.767	. . END-FITTING, c/w ballrace (PRE MOD 5473)	1	—	
EA2.45.525	. . END-FITTING (MOD 5473)	1	—	DB1/6
R EA2.45.863	. TUBE, CONTROL, AILERON, BETWEEN FRAMES 14 AND 19, ASSEMBLY (MOD 4930) (PRE MOD 5473)	1	—	
R EA2.45.889	. TUBE, CONTROL, AILERON, ASSEMBLY (MOD 5473)	1	—	
EA3.45.363	. TUBE, CONTROL, COUPLING AT FRAME 21, BETWEEN AILERON LEVER AND IDLE LEVER, ASSEMBLY (PRE MOD 4930)	1	—	DB1/2
R EA3.45.675	. TUBE, CONTROL, COUPLING, AT FRAME 21, BETWEEN AILERON LEVER AND IDLE LEVER, ASSEMBLY (MOD 4930) (PRE MOD 5473)	1	—	
R EA3.45.745	. TUBE, CONTROL, ASSEMBLY (MOD 5473)	1	—	
EA3.45.359	. TUBE, CONTROL, ELEVATOR, BETWEEN FRAMES 14 AND 19, ASSEMBLY (PRE MOD 4930)	2	—	DB1/8
R EA3.45.673	. TUBE, CONTROL, ELEVATOR, BETWEEN, FRAMES 14 AND 19, ASSEMBLY (MOD 4930) (PRE MOD 5473)	2	—	
R EA3.45.743	. TUBE, CONTROL, ELEVATOR, ASSEMBLY (MOD 5473)	2	—	
R EEAS130	Spares for:—	1	DTD683	DB1/3
R EA3.45.767	. . END-FITTING, c/w ballrace (PRE MOD 5473)	1	—	
EA2.45.1	CONTROLS, FLYING ASSEMBLY	—	—	
EA3.45.359	. TUBE, CONTROL, ELEVATOR, BETWEEN, FRAMES 11 AND 15, ASSEMBLY (PRE MOD 4930)	3	—	DB1/7
EA3.45.673	. TUBE, CONTROL, ELEVATOR, BETWEEN FRAMES 11 AND 15, ASSEMBLY (MOD 4930)	3	—	
EEAS130	Spares for:—	1	DTD683	DB1/3
EEAS13/1	Attaching parts for control tubes:—			
EEAS14	. Bolt, special	2	S11	DB1/11
EEAS63E	. Bush	2	S11	DB1/13
EEAS127	. Nut	2	S96	DB1/15
SP90C7	. Piece, distance	2	S96	DB1/12
	. Pin, cotter, split	2	—	DB1/16

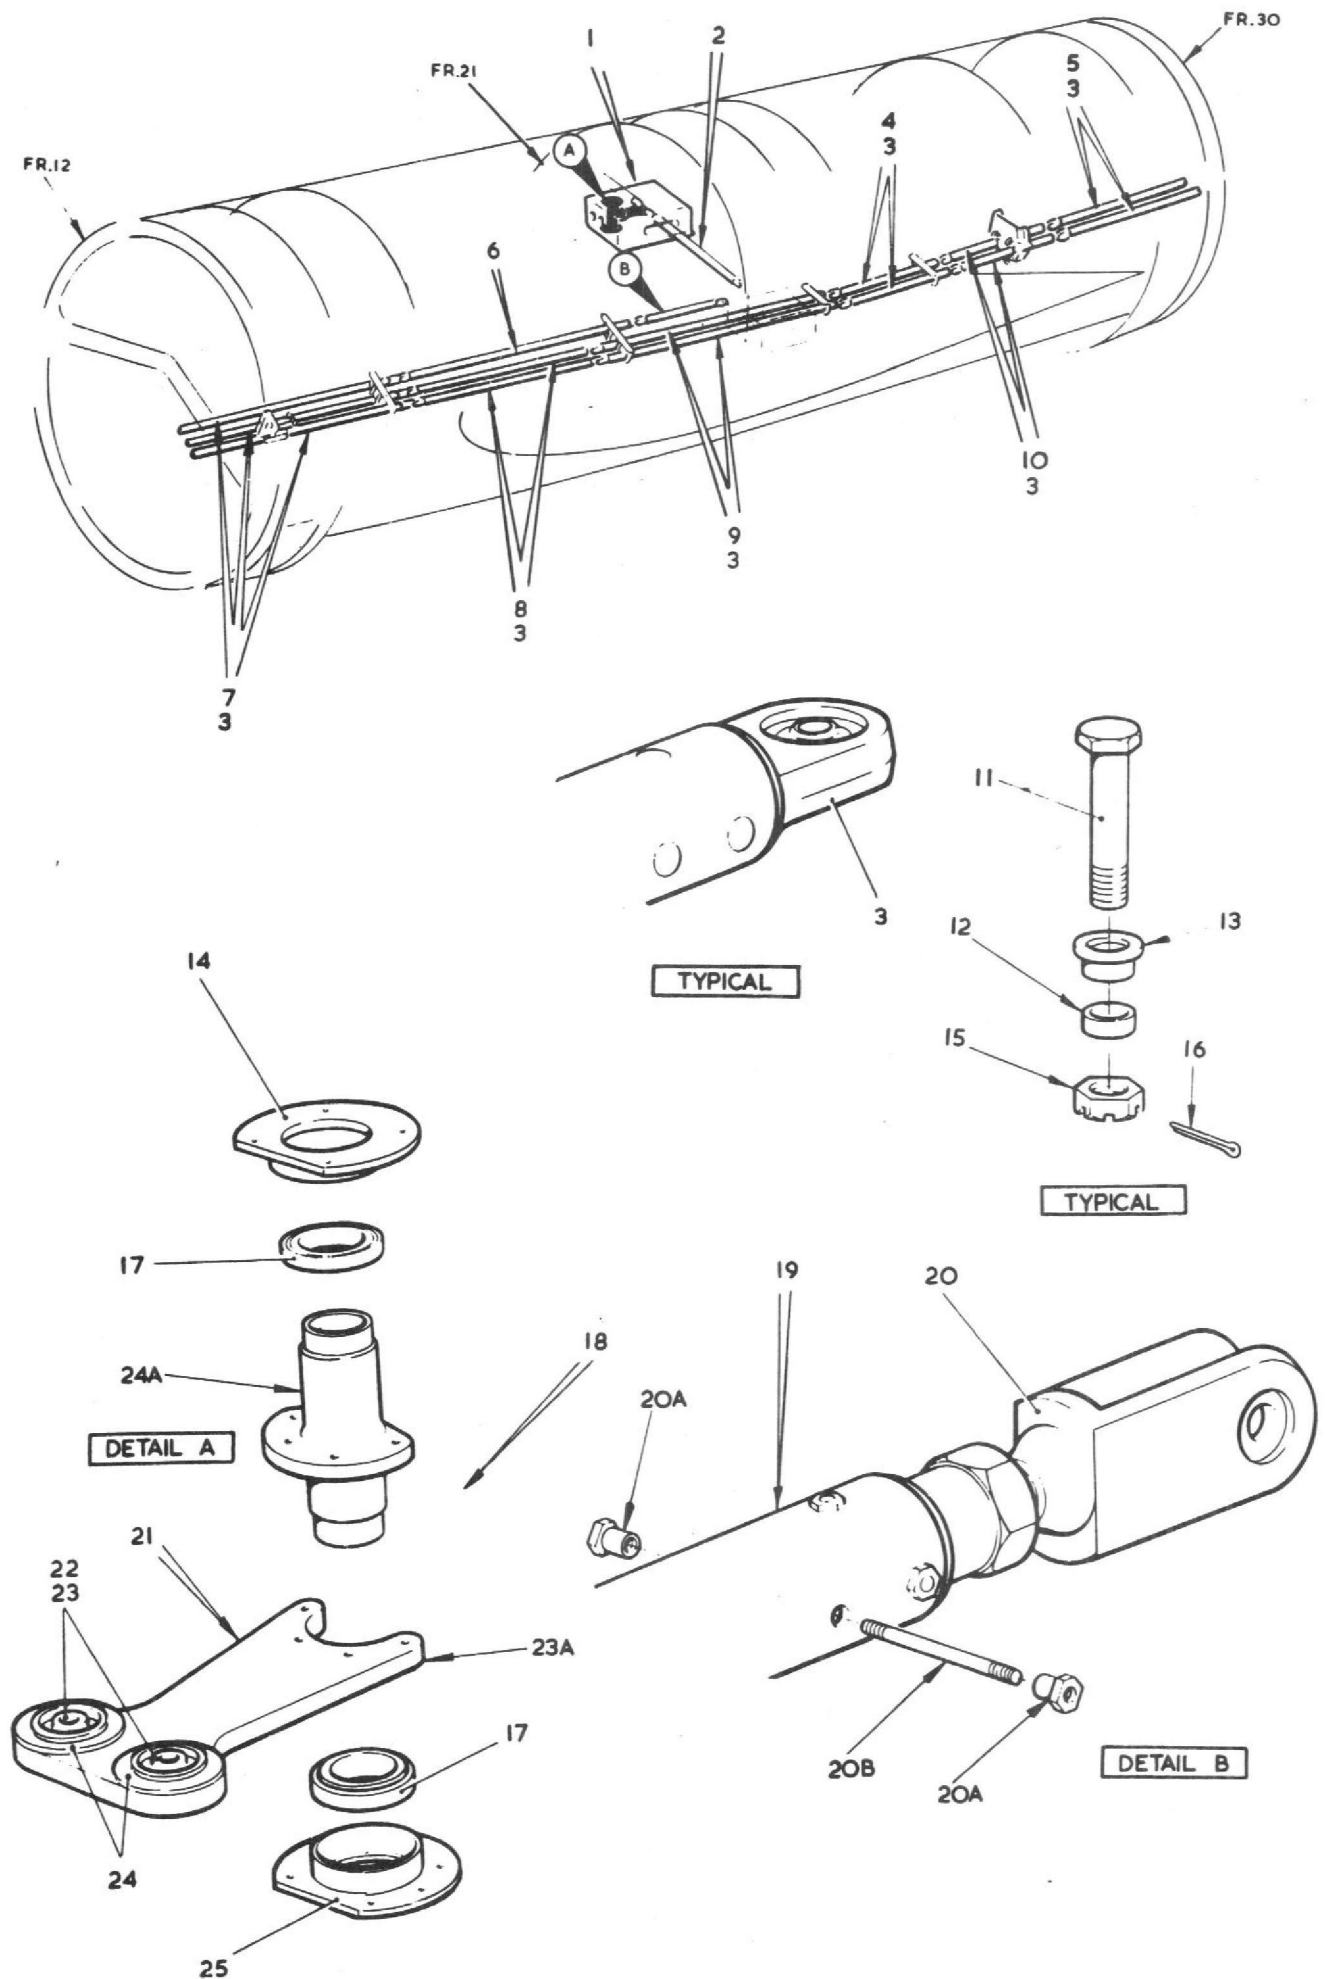

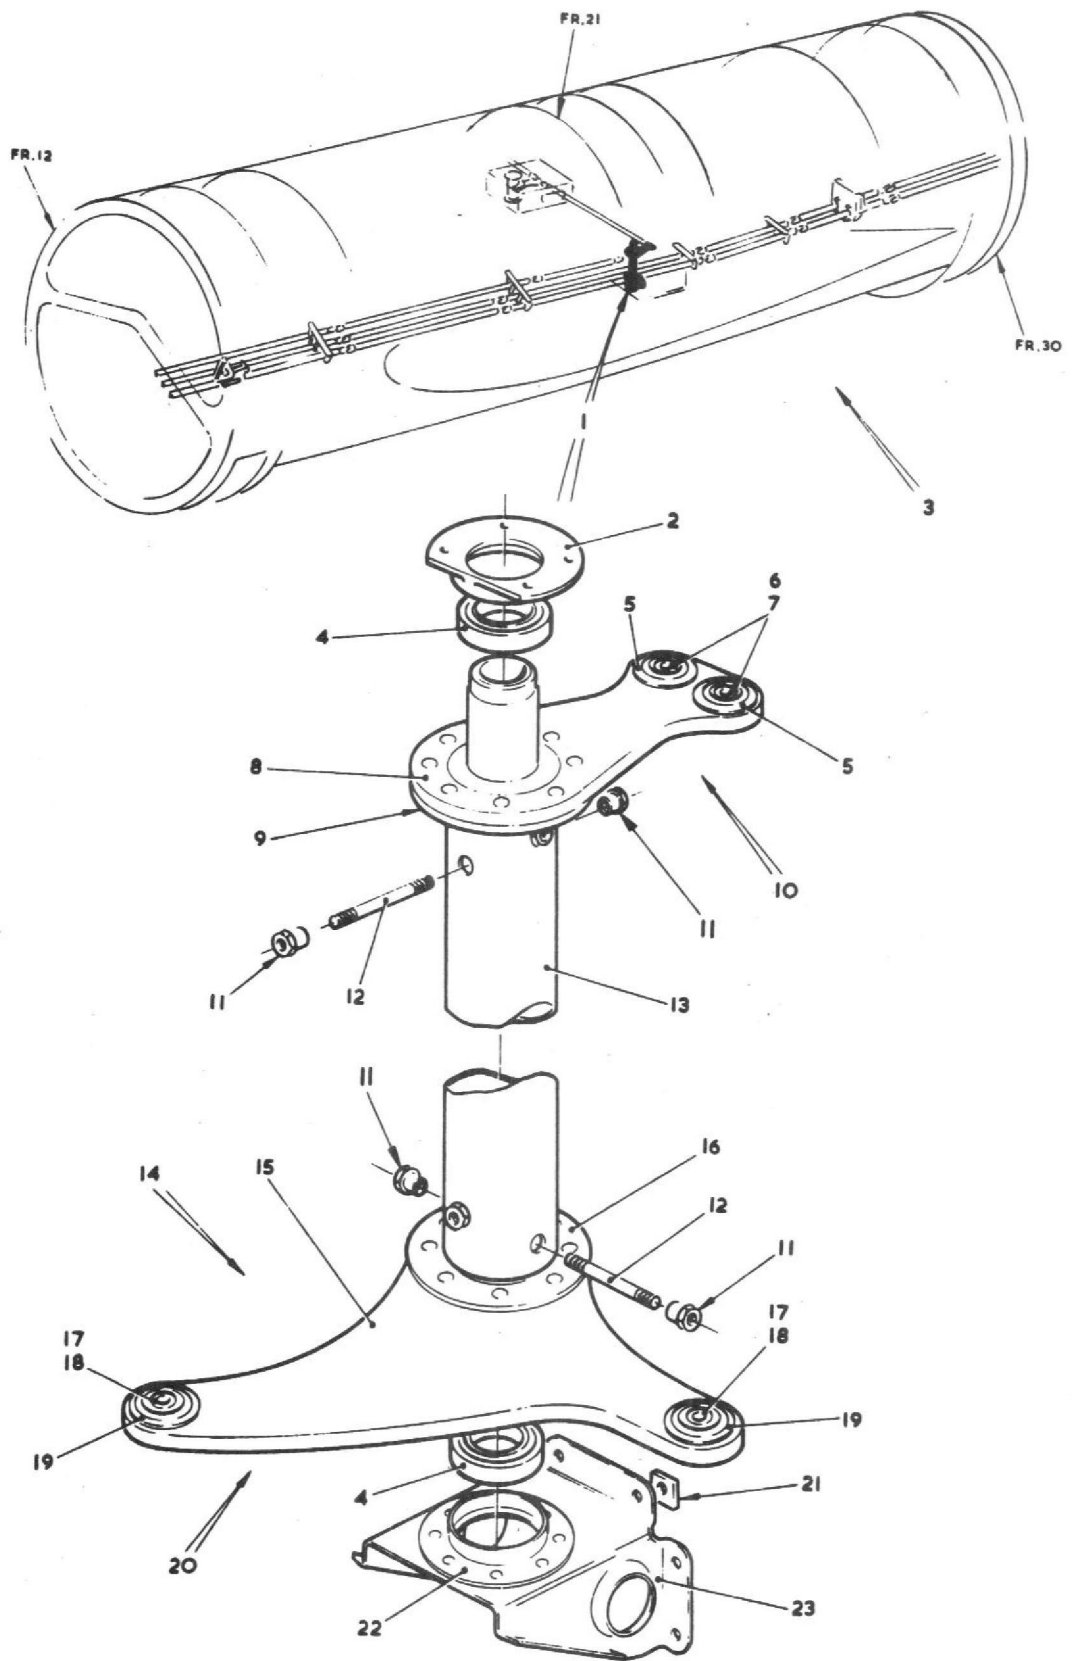


FIG 2 FLYING CONTROLS IN CENTRE FUSELAGE

CODE T

SECT.D8