

ELECTRICAL INSTALLATIONS
FORWARD AND NOSE FUSELAGE

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
-	ELECTRICAL INSTALLATION NOSE FUSELAGE (EB8.81.4961)	-	-	-	
	Spares for:				
5CZ/1053794	BLOCK, terminal, type B 2-way	1	-	C	DA1/1
	Attachment of terminal block to stringer A				
AGS2001/A1	Nut, stiff, 6BA	2	-	C	DA1/2
A33/A20	Screw, 6BA	2	-	C	DA1/3
5CZ/1031243	INDICATOR, electro-magnetic	5	-	C	DA1/4
Thorns					
80/10/1200	LAMP, cockpit utility (Mod 5007)	1	-	P	DA1/5
-	MOUNTING, Navigator's Table Lamp (EB8.81.5157)	-	-	-	DA1/6
	Spares for:				
EB8.81.5159	BRACKET, Mounting Table Lamp	1	-	C	DA1/7
	Spares for:				
Oddie 212	CLIP, midget	2	-	C	DA1/8
Oddie 213/2	STUD, midget	2	-	C	DA1/9
Oddie 214	WASHER, midget	2	-	C	DA1/10
	Attachment of mounting bracket to bottom shelf, navigator's rack				
AS1246/1B	Bolt, 4BA	4	-	C	DA1/11
AS1246/1C	Bolt, 2BA	2	-	C	DA1/12
5L/9952254	FILAMENT, 28v. 6w	2	-	C	DA1/13
G.E.C					
S2992	HOLDER, lamp, pendant type	2	-	C	DA1/14
EB8.83.2387	MOUNTING, Strap and Label	1	-	-	DA1/15
	Spares for:				
EB8.83.2385	LABEL	1	L72	C	DA1/16
EEAS132/6	STRAP	1	-	C	DA1/17
-	ELECTRICAL INSTALLATION, FORWARD FUSELAGE (Pre Mod 5478/S) (EB8.81.5127)	-	-	-	
	ELECTRICAL INSTALLATION, FORWARD FUSELAGE (Mod 5478/S Satisfied by CM/CAN/0487/NEAF) (EB8.81.5127x35)	-	-	-	
	Spares for:				
EB8.81.3067	BOX, Fuse No 1 less E/L items	1	-	L	DA2/1

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
	Spares for:				
Plessey CZ62879	BLOCK, fuse, 4-way	18	-	C	DA2/2
	Attachment of fuse block to No 1 fuse box				
A31/B6 EB8.81.3019	Screw, 4BA	2	-	C	DA2/3
	BLOCK, terminal group	3	-	C	DA2/4
	Attachment of terminal block to No 1 fuse box				
AS160/416 5X/1002695	Rivet, 1/8 in. dia.	6	-	C	DA2/5
	BLOCK, terminal, 20 way	2	-	C	DA2/6
	Attachment of terminal block to No 1 fuse box				
A27/BP A31/B24 AGS2035/B EB8.81.3073 Silent Bloc Ltd VF/0503 10H/1043043 10H/1043043 10H/1047920 10H/1047920 EB8.81.3071	Nut, 4BA	4	-	C	DA2/7
	Screw, 4BA	4	-	C	DA2/8
	Washer, shakeproof, 4BA	4	-	C	DA2/9
	BRACKET	2	Fibreglass	C	DA2/10
	FASTENER, vibrex	8	-	C	DA2/11
	FUSE, 2.5 amp (Pre Mod 5481)	35	-	C	-
	FUSE, 2.5 amp (Mod 5481)	34	-	C	-
	FUSE, dummy (Pre Mod 5481)	2	-	C	-
	FUSE, dummy (Mod 5481)	3	-	C	-
	LID, Hinged Fuse Panel No 1 Assembly (Pre Mod 4024)	1	-	L	DA2/12
	Spares for:				
EB8.81.3327	LID, upper	1	DTD797A	C	DA2/13
EB8.81.3329	LID, lower	1	DTD797A	C	DA2/14
EB8.81.6131	LID, Hinged Fuse Panel No 1 Assembly (Mod 4024)	1	-	L	DA2/15
	Spares for:				
EB8.81.6143	LID, upper	1	DTD797A	C	DA2/16
EB8.81.6141	LID, lower	1	DTD797A	C	DA2/17
6A/1062526	RESISTANCE, unit	2	-	L	DA2/18
	Attachment of resistance unit to No 1 fuse box				
AGS2001/B1 A31/B20 SP13/B	Nut, stiff, 4BA	4	-	C	DA2/19
	Screw, 4BA	4	-	C	DA2/20
	Washer, 4BA	4	-	C	DA2/21
- Silent Bloc Ltd 30151 -	SEAL (Make from Ref. 30135)	AR	-	LM	DA2/22
	WASHER, cushion 1/16 in. thick	8	-	C	DA2/23
	BOX, Fuse No 2 (EB8.81.3037)	-	-	-	DA2/24
	Spares for:				
Plessey CZ62879	BLOCK, fuse 4 way	8	-	C	DA2/25

R
R
R

R

ELECTRICAL INSTALLATIONS
FORWARD AND NOSE FUSELAGE

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
	Attachment of fuse block to No 2 fuse box				
A32/B8	Screw, 4BA	16	-	C	DA2/26
SP13/B	Washer, 4BA	16	-	C	DA2/27
SP47/B	Washer, spring, 4BA	16	-	C	DA2/28
EB8.81.3019	BLOCK, terminal group	2	-	C	DA2/29
	Attachment of terminal block to No. 2 fuse block				
SP58/C	Burr, 1/8 in. dia.	4	-	C	DA2/30
AS160/416	Rivet, 1/8 in. dia.	4	-	C	DA2/31
EB8.81.3025	COVER, terminal	1	DTD797A	C	DA2/32
EB8.81.3011	LID, No. 2 Fuse Box	1	-	C	DA2/33
	Spares for:				
EEAS117/2	SCREW, cover	6	-	C	DA2/34
EEAS28/2CU	WASHER	12	DTD124A	C	DA2/35
EEAS42	WASHER, leather	6	-	C	DA2/36
-	SEAL, (Make from Ref. 30135)	AR	-	LM	DA2/37
-	BOX, Fuse No. 3 (EB8.81.3425)	-	-	-	DA2/38
	Spares for:				
CZ62879	BLOCK, fuse 4 way	6	-	C	DA3/39
	Attachment of fuse block to No. 3 fuse box				
A31/B6	Screw, 4BA	12	-	C	DA3/40
AGS2035/B	Washer, shakeproof 4BA	12	-	C	DA3/41
EB8.81.3429	COVER, No. 3 Fuse Box	1	-	C	DA3/42
	Spares for:				
Silent Bloc Ltd V2/0602	FASTENER, vibrex	4	-	C	DA3/43
Silent Bloc Ltd 30151	WASHER, cushion 1/16 in. thick	4	-	C	DA3/44
	SEAL (Make from Ref. 30135)	AR	-	LM	DA3/45
	BOX, Fuse No. 4 (EB8.81.5961)	-	-	-	DA2/46
	Spares for:				
5X/3271	BLOCK, fuse 4-way	10	-	C	DA3/47
	Attachment of fuse block to No 4 fuse box				
AS1246/1B	Bolt, 4BA	20	-	C	DA3/48
EB8.81.3019	BLOCK, terminal group	1	-	C	DA3/49
	Attachment of terminal block to No. 4 fuse box				
AS2229/408	Rivet, 1/8 in. dia.	2	-	C	DA3/50
5X/1002695	BLOCK, terminal, 20-way	1	-	C	DA3/51
	Attachment of terminal block to No. 4 fuse box				
A32/B28	Screw, 4BA	2	-	C	DA3/52
EB8.81.6651	LABEL, fuse 308-311	1	-	C	DA3/53
EB8.81.6653	LABEL, fuse 312-315	1	-	-	DA3/54
EB8.81.5997	LID, No. 4 fuse box	1	-	L	DA3/55

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Canberra P R Mk 9

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	WIRING, FUSE BOX No.4 (Mod 5482) (EB8.81.5999)	-	-	-	-	R
	Spares for:					R
Z60218	BAR, commoning	2	-	C	-	R
44A0811-12-9White	CABLE, size 12	AR	-	C	-	R
5CZ/5215	FUSE, 5 amp	3	-	C	-	R
703-2-00252	LINK, commoning	6	-	C	-	R
320569	LUG, 1/4 in.	2	-	C	-	R
	SLEEVE, yellow, 3/4 in. long	6	-	C	-	R
150056-1	TAG	4	-	C	-	R
	BOX, Junction No 15 (EB8.81.3095)	-	-	-	DA2/56	R
	Spares for:					
5X/1004088	BLOCK, terminal, 10-way	1	-	-	DA3/57	R
5X/1002695	BLOCK, terminal 20-way	3	-	-	DA3/58	
	Attachment of terminal block to JB.15					
A31/B28	Screw, 4BA	8	-	C	DA3/59	
EB8.81.3091	COVER, junction box	1	-	C	DA3/60	
Silent Bloc Ltd V2/0602	FASTENER, vibrex	4	-	LM	DA3/61	
Silent Bloc Ltd 30151	SEAL, (Make from Ref. 30135)	AR	-	LM	DA3/62	R
	WASHER, cushion 1/16 in. thick	4	-	C	DA3/63	
	CABLE, Looms, (Pre Mod 5478/S) (EB8.81.4327)	-	-	-	-	R
	CABLE, Looms (Mod 5478/S Satisfied by CM/CAN/0487/NEAF. MOD 5482) (EB8.81.4327x69)	-	-	-	-	R
	Spares for:					
EB8.81.6309	CABLE, assembly 'N109' (Pre Mod 5478/S)	1	-	C	-	R
EB8.81.6309x3	CABLE, assembly "N109" (Mod 5478/S Satisfied by CM/CAN/0487/NEAF)	1	-	C	-	R
EB8.81.6313	CABLE, assembly 'N110' (Pre Mod 5478/S)	1	-	C	-	R
EB8.81.6313x3	CABLE, assembly 'N110' (Mod 5478/S Satisfied by CM/CAN/0487/NEAF)	1	-	C	-	R
EB8.81.4643x4a	CABLE, assembly "N69" (Mod 5294 Satisfied by SEM/CAN 091 and 093)	1	-	C	-	R
EB8.82.2585	CABLE, assembly 'R144' (Mod 5482) (See Cable Chart)	1	-	LM	-	R
	CONSOLE, Camera Control (EB8.81.4981)	-	-	-	DA2/69	R
	Spares for:					
EB8.81.5791	BLOCK assembly fuse	-	-	-	DA2/70	R
	Spares for:					
AS2736	BLOCK, assy, 6-way	6	-	-	DA3/71	R
AS2754	COVER, assy, 6-way	1	-	-	DA3/72	R
EB8.81.5793	LABEL	1	-	-	DA3/73	R
AS2747	SOCKET, terminal	6	-	-	DA3/74	R

ELECTRICAL INSTALLATIONS
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	Attachment of fuse block to aft diaphragm				
AGS2001/B1	Nut, stiff 4BA	2	-	C	DA2/75
A31/B24	Screw, 4BA	2	-	C	DA2/76
CZ23212-1	BLOCK, terminal 20-way	3	-	L	DA2/77
	Attachment of terminal block to 'Z' member				
AGS2008/B1	Nut, anchor	3	-	C	DA2/78
AGS2019/B1	Nut, anchor	3	-	C	DA2/79
A31/B28	Screw, 4BA	6	-	C	DA2/80
SP15/B	Washer	6	-	C	DA2/81
CZ 24285	BLOCK, terminal 10-way	2	-	-	DA2/82
	Attachment of terminal block to console				
AGS2001/B1	Nut, stiff 4BA	4	-	C	DA2/83
A31/B28	Screw, 4BA	4	-	C	DA2/84
SP15/B	Washer	4	-	C	DA2/85
EB8.81.4991	BLOCK, terminal assembly	1	-	-	DA2/86
	Attachment of terminal block to console				
AS1242/2B	Bolt, 4BA	2	-	C	DA2/87
EB8.81.5211	BLOCK, Resistor	1	-	-	DA2/88
	Spares for:				
AGS2001/B1	NUT, 4BA	14	-	C	DA2/89
SP15/B	WASHER	14	-	C	DA2/90
AGS2037/B	WASHER	14	-	C	DA2/91
	Attachment of resistor block to console				
A31/B20	Screw, 4BA	4	-	C	DA2/92
SP15/B	Washer	4	-	C	DA2/93
Plessey					
CZ50207	BLOCK, terminal 5-way	1	-	-	DA2/94
	Attachment of terminal block to console				
A31/B28	Screw, 4BA	2	-	C	DA2/95
SP15/B	Washer	2	-	C	DA2/96
SP40/A16	GROMMET	1	-	C	DA2/97
	GUARD, Fuse (EB8.81.6067)	1	-	C	DA2/98
	Spares for:				
EB8.81.6067/A	COVER	2	L72x16SWG	C	DA2/99
EB8.81.6809	LABEL, fuse (Mod 5131)	1	-	C	DA2/100
EB8.81.6067/G	SPRING, 12 in. long x 1/4 in. o/d (Made from Terry No 761 20 swg)	2	-	C	DA2/101

R

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
EB8.81.5857	HOLDER, fuse label	1	-	-	DA2/102
EB8.81.5019/A	LUG	1	-	-	DA2/103
	Attachment of lug to console				
AGS2001/B1	Nut, stiff 4BA	1	-	C	DA2/104
A31/B12	Screw, 4BA	1	-	C	DA2/105
SP15/B	Washer	1	-	C	DA2/106
B.T.H. GJ3M	RECTIFIER	1	-	L	DA2/107
	Attachment of rectifier to console				
EB8.81.5567	Clip	1	-	C	DA2/108
AGS2002/B3	Nut, stiff, 4BA	1	-	C	DA2/109
A39/B8	Screw, 4BA	1	-	C	DA2/110
SP15/B	Washer	1	-	C	DA2/111
D5900	SWITCH magnetic relay type 20B No 3	11	-		
	Attachment of relay switch to console				
A31/B36	Screw, 4BA	44	-	C	DA2/112
SP15/B	Washer	44	-	C	DA2/113
	PANEL, camera control console (EB8.81.5059) (See Section ED)	-	-	-	DA2/114
	SEAL (Make from Ref 30135)	AR		LM	DA2/115
	CRATE, Instrument (EB8.81.4953)	-	-	-	DA2/116
	Spares for:				
10U/16596	AMPLIFIER, type A1961	1	-	P	DA4/117
	Attachment of amplifier to instrument crate				
A25/16B	Bolt, 4BA	4	-	C	DA4/118
AS2807/4/09	Tube, distance	4	T45x20SWG	LM	DA4/119
SP15/B	Washer, 4BA	4	-	C	DA4/120
-	BOX, Junction, No. 16 (EB8.81.4887)	-	-	-	DA4/121
	Spares for:				
5X/1004088	BLOCK, terminal, 10 way	1	-	C	DA4/122
5X/1002695	BLOCK, terminal, 20 way	2	-	C	DA4/123
	Attachment of terminal block to JB16				
A31/B28	Screw, 4BA	6	-	C	DA4/124
Plessey CE51102	CAPACITOR	1	-	L	DA4/125

R

R

ELECTRICAL INSTALLATIONS
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
B.T.H. GJ3M 10D/0751502	RECTIFIER RECTIFIER, metal	5 1	- -	L L	DA4/126 DA4/127	
5CW/5529	SEAL (Make from Ref. 30135) SWITCH, magnetic relay, type S5	AR 3	- -	LM L	DA4/128 DA4/129	R
A27/BT S.T.C. 4184GD	Attachment of magnetic relay switch to JB16 Locknut, 4BA RELAY	12 1	- -	C L	DA4/130 DA4/131	
AGS2001/A1 A31/A12 6A/4337885 6A/4338332	Attachment of relay switch to JB16 Nut, stiff, 6BA Screw, 6BA BOX, junction, type C (Pre Mod 5162) BOX, junction (Mod 5162)	2 2 1 1	- - - -	C C P P	DA4/132 DA4/133 DA4/134 DA4/135	
A25/1C 6A/5946 6A/3122 10AJ/121 6A/3359 6A/3124	Attachment of junction box to instrument crate Bolt, 2BA COMPUTER, type 1.264/M.S2 COMPUTER, flight MOUNTING, type 936 PLATE, back, c/w Socket RACK, mounting	2 1 1 1 1 1	- - - - - -	C P P L P P	DA4/136 DA4/137 DA4/138 DA4/139 DA4/140 DA4/141	
AGS2001/B1 SP15/B 6A/5950 EB8.81.4633 EB8.81.4635 EB8.81.4637 EB8.81.4661 EB8.81.4665 EB8.81.4667 EB8.81.4687 EB8.81.4695 EB8.81.4697	Attachment of mounting rack to instrument crate Nut, stiff, 4BA Washer, 4BA TRAY, mounting DUCT, cable DUCT, cable DUCT, cable DUCT, cable DUCT, cable DUCT, cable DUCT, cable DUCT, cable DUCT, cable DUCT, cable DUCT, cable	4 4 1 1 1 1 1 1 1 1 1 1 1	- - - - - - - - - - - - -	C C L C C C C C C C C C	DA4/142 DA4/143 DA4/144 DA2/145 DA2/146 DA2/147 DA2/148 DA2/149 DA2/150 DA2/151 DA2/152 DA2/153	
EB8.81.3945 EB8.81.5153 EB8.81.3961	DUCTS, Cable Forward Fuselage (EB8.81.3953) Spares for: BRACKET, cable BRACKET, cable DUCT, cable	- - 1 2 1	- - Glasscloth Glasscloth -	- - C C C	DA2/154 DA2/155 DA2/156 DA2/157	R
	EQUIPMENT, Pressure Bulkhead to Frame 12 (EB8.81.4923)	-	-	-	DA2/158	R

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	Spares for:					
	EQUIPMENT, Upper Bay, Frame 9-12 (EB8.81.3599)	-	-	-	DA2/159	R
	Spares for:					
Graviner C508	BASE, relay unit	1	-	L	DA6/160	
	Attachment of base to equipment bay floor					
A25/9C	Bolt, 2BA	3	-	C	DA6/161	
SP10/C	Washer, 2BA	3	-	C	DA6/162	
SP47/C	Washer, spring, 2BA	3	-	C	DA6/163	
5X/1002694	BLOCK, terminal, 5-way	1	-	C	DA6/164	
	Attachment of 5-way terminal block to bracket on frame 12A					
A31/B28	Screw, 4BA	2	-	C	DA6/165	
SP10/B	Washer, 4BA	2	-	C	DA6/166	
	BOX, Distribution No. 1 (EB8.81.3601)	-	-	-	DA6/167	R
	Spares for:					
5X/6480	BAR, commoning, 4-way	13	-	C	DA5/168	
CZ62879	BLOCK, fuse, 4-way	15	-	C	DA5/169	R
	Attachment of fuse block to channel in distribution box					
A31/B8	Screw, 4BA	2	-	C	DA5/170	
AGS2035/B	Washer, shakeproof, 4BA	2	-	C	DA5/171	
5X/1004088	BLOCK, terminal, 10-way	1	-	C	DA5/172	
5X/1002695	BLOCK, terminal, 20-way	5	-	C	DA5/173	
	Attachment of terminal block to distribution box					
A31/B8	Screw, 4BA	12	-	C	DA5/174	
EB8.81.3019	BLOCK, terminal, group	1	-	C	-	R
	Attachment of terminal block to distribution box					
AS2229/407	Rivet, 1/8 in. dia.	2	-	C	-	R
SP10/B	Washer, 4BA	2	-	C	-	R
EB8.81.4711	BRACKET, adaptor, relay	2	S84	C	DA5/178	
	Attachment of adaptor bracket to box					
A31/B8	Screw, 4BA	4	-	C	DA5/179	
10C/0115567	CAPACITOR, 0.5 mf 250V	3	-	C	DA5/180	
EB8.81.3841	COVER, transparent, 10-way (Make from Ref. 5X/3275)	1	-	LM	DA5/181	

ELECTRICAL INSTALLATIONS
FORWARD AND NOSE FUSELAGE

Part No.	Description						No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1	2	3	4	5	6					
EB8.81.3843						COVER, transparent, 20-way (Make from Plessey Part CZ25111-Ref: 5X/3275)	1	-	LM	DA5/182	
Silent Bloc Ltd V2/0602						FASTENER, vibrex	6	-	C	DA5/183	
10H/9718191						FUSE, 10 amp (Pre Mod 5481)	1	-	C	-	R
10H/9718191						FUSE, 10 amp (Mod 5481)	2	-	C	-	R
10H/1047920						FUSE, dummy (Pre Mod 5481)	11	-	C	-	R
10H/1047920						FUSE, dummy (Mod 5481)	10	-	C	-	R
SP40/B32						GROMMET	1	-	C	DA5/184	
SP93/A20						GROMMET	1	-	C	DA5/185	
5X/9450403						PILLAR, fixing	1	-	C	DA5/186	R
B.T.H. GJ3M						RECTIFIER	1	-	L	DA5/187	R
						RECTIFIER	1	-	L	DA5/188	R
						SEAL (Make from Ref. 30135)	AR	-	LM	DA5/189	R
5CW/6252						SWITCH, magnetic relay, type 10B No 8	2	-	L	DA5/190	
D5900						SWITCH, magnetic relay, type 20B No 3 (Mod 4995)	15	-	L	DA5/191	R
						Attachment of relay switch to mounting plate					
A31/B36						Screw, 4BA	68	-	C	DA5/192	
5CW/6595						SWITCH, magnetic relay type D3822B	1	-	L	DA5/193	
						Attachment of magnetic switch to distribution box					
A31/B28						Screw, 4BA	2	-	C	DA5/194	
5CW/5105						SWITCH, torque	1	-	P	DA5/195	
						Attachment of torque switch to distribution box					
AGS2001/B1						Nut, stiff 4BA	4	-	C	DA5/196	
A31/B16						Screw, 4BA	4	-	C	DA5/197	
AGS2035/B						Washer, shakeproof 4BA	4	-	C	DA5/198	
5X/9400089						TERMINATION, lug, crimping	1	-	C	DA5/199	R
						Attachment of termination lug to terminal on distribution box					
AGS2001/E4						Nut, stiff, 1/4 in. BSF	1	-	C	DA5/200	
EB7.81.1035						Washer	1	Copper	C	DA5/201	
Silent Bloc Ltd 30151						WASHER, cushion	6	-	C	DA5/202	
EB8.74.125						COWL, inverter cooling	1	-	C	DA6/203	
						Attachment of cowl to skin between frames 10 and 11					
EEAS1/2C						Screw, csk, 2BA	10	S96	C	DA6/204	R
EB8.74.123						DUCT, inverter cooling	1	L16	C	DA6/205	
						Attachment of duct to inverter and cowl inlet					
King A/C Ltd C4596/2-7/16/E						Clip, coronation	4	-	C	DA6/206	R

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Canberra P R Mk 9

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
Dunlop DAS393/36/2-1/2 SUB/4938 SUB/5953	Hose, coupling INVERTER, type 100A INVERTER, type 108 Attachment of inverter type 108 to equipment bay floor	2 2 1	- - -	C P P	DA6/207 DA6/208 DA6/209
A102/40E SUC/4939	Bolt, 1/4 in. UNF PANEL, Control, type 12 Attachment of control panel to equipment bay floor	4 2	- -	C P	DA6/210 DA6/211
A104/1E SP15/E SUC/6030	Bolt, 1/4 in. UNF Washer, 1/4 in. PANEL, control, type 26 (with mod Elec, B416) Attachment of control panel to frame 12A	4 4 1	- - -	C C P	DA6/212 DA6/213 DA6/214
A25/5E SUC/6042	Bolt, 1/4 in. BSF REGULATOR, electronic, type 2B, Attachment of regulator to equipment bay floor	4 1	- -	C P	DA6/215 DA6/216
EA3.81.1787 Graviner C509 SCY/4316	Bolt RELAY UNIT SUPPRESSOR, radio interference type G. No. 2 Attachment of suppressor to equipment bay floor	4 1 2	S92 - -	C P P	DA6/217 DA6/219
A31/B24 SP10/B 6T/1665 6T/1666 6T/1667	Screw, 4BA Washer, 4BA SWITCH, acceleration, type A SWITCH, acceleration, type B SWITCH, altitude Attachment of switch to bracket on frame 12A	2 2 1 1 2	- - - - -	C C L L L	DA6/220 DA6/221 DA6/222 DA6/223 DA6/224
AGS2001/C1 A32/C16	Nut, stiff 2BA Screw, 2BA TRAY, Mounting for Control Panel Voltage and Frequency Type 26 (Mod 3125) (EB8.81.5583) Spares for:	8 8 -	- - -	C C -	DA6/225 DA6/226 DA6/227
EB8.81.5583/I EB8.81.5583/J EB8.81.5583/L	CATCH, securing CIRCLIP DOWEL	2 2 2	L1 - DTD423	C C C	DA6/228 DA6/229 DA6/230

R

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
EB8.81.5583/H	NUT, 1/4 in. BSF	2	S1	C	DA6/231	
EB8.81.5583/K	PILLAR	2	DTD423A	C	DA6/232	
EB8.81.5583/G	SCREW, securing	2	SI	C	DA6/233	
EB8.81.5583/M	WASHER, thin	2	-	C	DA6/234	
EB8.81.6051	GUARD, switch (Mod 3894)	1	-	C	DA6/235	
	INVERTER BAY (EB8.81.1307)	-	-	-	DA2/236	R
	Spares for:					
EB8.74.101	DUCT, inverter cooling	1	-	C	DA6/237	
	Attachment of duct to inverter and inlet cowl					
King A/C Ltd C4596/2-1/2/E	Clip, coronation	4	-	C	DA6/238	R
King A/C Ltd C4596/2-11/16/B	Clip, coronation (Pre Mod 5477)	2	-	C	DA6/239	R
Hymatic C14087-2 11/16P	Clamp (Mod 5477)	2	-	C	DA6/240	
EB8.81.1385	Hose	2	-	C	DA6/241	
Dunlop DAS393/40/2 3/8	Hose, coupling	1	-	C	DA6/242	
SUB/6731	INVERTER, type 103/A	2	-	P	DA6/243	
	Attachment of inverter to mounting between frames 9 and 10					
A25/5G	Bolt, 5/16 in. BSF	8	-	C	DA6/244	
A27/GP	Nut, 5/16 in. BSF	8	-	C	DA6/245	
SP47/G	Washer, spring 5/16 in.	8	-	C	DA6/246	
5CW/4620	SWITCH magnetic, relay, type T, No 1	3	-	P	DA6/247	
	Attachment of switch to mounting channel					
A25/2C	Bolt, 2BA	6	-	C	DA6/248	
5CW/5016	SWITCH magnetic, starting, type A No. 5	3	-	P	DA6/249	
	Attachment of starting switch to quick release tray					
A25/1C	Bolt, 2BA	12	-	C	DA6/250	
A27/CP	Nut, 2BA	12	-	C	DA6/251	
SP47/C	Washer, spring, 2BA	12	-	C	DA6/252	
EB8.81.1311	TRAY, Quick Release, Group	1	-	C	DA6/253	
	Spares for:					
EB8.81.1329	NUT, knurled, 1/4 in. BSF	1	S1	C	DA6/254	
EB8.81.1327	PEG, locating	2	S96	C	DA6/255	
	Attachment of locating peg to tray					
A27/CP	Nut, 2BA	2	-	C	DA6/256	

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Canberra P R Mk 9

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
SP13/C EB8.81.1331	Washer, 2BA PEG	2 1	- DTD683	C C	DA6/257 DA6/258	
AS2229/404	Attachment of peg to tray Rivet, 1/8 in. dia.	2	-	C	DA6/259	
A25/1C A27/CP SP47/C	Attachment of quick release tray to wheel well wall angle and angle on frame 9 Bolt, 2BA Nut, 2BA Washer, spring, 2BA	4 4 4	- - -	C C C	DA6/260 DA6/261 DA6/262	
	MOUNTING, of Inverter Type 201 and Voltabloc Battery (Mod 5477) (EB8.81.4517)	-	-	-	DA6/263	R
	Spares for:					
EB8.82.4523	ANGLE, retaining	2	L65	C	DA7/264	
AS164/405 5J/3364 EB8.81.4521	Attachment of retaining angle to retaining flap Rivet, 1/8 in. dia. BATTERY, secondary, alkaline BRACKET, retaining	4 1 2	- - L65	C P C	DA7/265 DA7/266 DA7/267	
AS156/406 EB8.81.4629	Attachment of retaining bracket to cross channel Rivet, 1/8 in. dia. COVER, battery	10 1	- -	C C	DA7/268 DA7/269	
AGS3413/J EB8.74.109 EB8.74.119	Attachment of battery cover to retaining tie rod Nut, wing 3/8 in. UNF COVER, end type 201 inverter DUCT, type 201 inverter	2 1 1	- - -	C C C	DA7/270 DA7/271 DA7/272	
King A/C Ltd C4596/2-11/16/B Hymatic C14087-2 11/16P Dunlop DAS393/40/2 3/8 EB8.81.4653 5UB/6475	Attachment of duct to inverter end cover and inlet cowl Clip, coronation (Pre Mod 5477) Clamp (Mod 5477) Hose, coupling FLAP, retaining INVERTER, type 201B	4 4 2 1 1	- - - - -	C C C C P	DA7/273 DA7/274 DA7/275 DA7/276 DA7/277	R R
AS1242/5E	Attachment of inverter to base plate and angle bracket Bolt, 1/4 in. BSF	2	-	C	DA7/278	

ELECTRICAL INSTALLATIONS
FORWARD AND NOSE FUSELAGE

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	1 2 3 4 5 6				
AS1242/6E A27/EP SP55/E EB8.81.4529	Bolt, 1/4 in. BSF Nut, 1/4 in. BSF Washer, spring, 1/4 in. LATCH, retaining	2 4 4 2	- - - -	C C C C	DA7/279 DA7/280 DA7/281 DA7/282
	Attachment of retaining latch to battery tray				
AS164/406 AGS3413/E EB8.81.4527	Rivet, 1/8 in. dia. NUT, wing, 1/4 in. UNF ROD-TIE, retaining	6 2 2	- - S93	C C C	DA7/284 DA7/285
	Attachment of tie rod to retaining bracket				
EB8.81.4525 EB8.81.4519	Bolt, retaining SPIGOT, retaining	2 4	S96 S1	C C	DA7/286 DA7/287
	Attachment of retaining spigot to inverter bracket				
A27/EP SP13/E EB8.81.4655	Nut, 1/4 in. BSF Washer, 1/4 in. TRAY, battery	4 4 1	- - -	C C C	DA7/288 DA7/289 DA7/290
	PANELS, Main Electrical (EB8.81.2001) (See Section ED)	-	-	-	DA2/291 R
5J/3375 EEAS132/9 EEAS132/12 27N/93	PLUG, battery, quick disconnect STRAP, cable, c/w buckle STRAP, cable c/w buckle SWITCH, inertia	1 10 10 4	- - - -	L C C P	DA2/292 DA7/293 DA7/294 DA2/295
	Attachment of inertia switch to frame 12A				
A25/4C A31/C24 AGS2035/C SP13/C	Bolt, 2BA, starboard side Screw, 2BA, port side Washer, 2BA, port side Washer, 2BA, starboard side	8 8 8 8	- - - -	C C C C	DA2/296 DA2/297 DA2/298 DA2/299
	WIRING, Nose Undercarriage (EA3.81.295)	-	-	-	DA2/300 R
	Spares for:				
5CZ/868 Dowty DN1322Z Mk.2 OR Dowty DN1322Z Mk.3	BLOCK, terminal, type, B No. 1 SWITCH, micro (Mod 4826) SWITCH, micro	1 1 1	- - -	L L L	DA7/301 DA2/302 R DA2/302 R
	Attachment of micro switch to floor channel member				
A27/AP	Nut, 6BA	2	-	C	DA7/303

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
A33/A20 SP47/A	Screw, 6BA	2	-	C	DA7/304	R
	Washer, spring 6BA	2	-	C	DA7/305	
	MOUNTING, Amplifier and Flashing Unit (Pre Mod 5478/S) (EB8.81.4267)	-	-	-	DA2/306	
	MOUNTING, Amplifier and Flashing Unit (Mod 5478/S Satisfied by CM/CAN/0487/NEAF) (EB8.81.4267x4)	-	-	-	DA2/307	
6A/4834	Spares for:					
	AMPLIFIER (Pre Mod 4404)	1	-	P	DA7/308	
A25/6B SP13/B 5CZ/5448	Attachment of amplifier to structure between frames 5 and 6, starboard					
	Bolt, 4BA (Pre Mod 4404)	4	-	C	DA7/309	
	Washer, 4BA (Pre Mod 4404)	4	-	C	DA7/310	
	FLASHER UNIT, type A (Pre Mod 5478/S)	1	-	P	DA7/311	
	Attachment of flasher unit to structure between frames 5 and 6, starboard					
A25/1C SP13/C	Bolt, 2BA (Pre Mod 5478/S)	4	-	C	DA7/312	R
	Washer, 2BA (Pre Mod 5478/S)	4	-	C	DA7/313	
	MOUNTING, Auto-Stabiliser Switch (EB8.81.3489)	-	-	-	DA2/314	
	Spares for:					
6S/70 6S/53	PLATE, switch, type A	1	-	P	DA8/315	
	SWITCH, auto-stabiliser	1	-	L	DA8/316	
	Attachment of switch and plate to bracket on side panel					
AGS2001/A1 A33/A12 SP10/A	Nut, 6BA	2	-	C	DA8/317	R
	Screw, 6BA	2	-	C	DA8/318	
	Washer, 6BA	2	-	C	DA8/319	
	MOUNTING, Auto-Stabiliser Units, between frame 5 and pressure bulkhead (EB8.81.4893)				DA2/320	
	Spares for:					
6S/537 6S/1	AMPLIFIER UNIT, Type J. (Mod. 3861)	1	-	P	DA8/321	
	GYRO UNIT, Type A.	1	-	P	DA8/322	
	Attachment of gyro unit to bracket on pressure bulkhead					
A31/B20 SP47/B	Screw, 4BA	3	-	C	DA8/323	
	Washer, spring, 4BA	3	-	C	DA8/324	

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt. M.R. or L.M.	Plate	
6S/89	MONITOR UNIT, type F	1	-	P	DA8/325	R
	Attachment of monitor unit to mounting bracket					
A31/B20	Screw, 4BA	12	-	C	DA8/326	R
SP47/B	Washer, spring, 4BA	12	-	C	DA8/327	R
6S/43	MOUNTING, amplifier unit	1	-	L	DA8/328	R
	Attachment of amplifier unit mounting to bracket between frames 6 and 7					
A31/C20	Screw, 2BA	4	-	C	DA8/329	R
SP47/C	Washer, spring, 2BA	4	-	C	DA8/330	R
6S/41	MOUNTING, phase advance unit	1	-	C	DA8/331	R
	Attachment of phase advance unit mounting to bracket between frames 5 and 6					
A31/C20	Screw, 2BA	4	-	C	DA8/332	R
SP47/C	Washer, spring, 2BA	4	-	C	DA8/333	R
EB8.83.2389	MOUNTING, Strap, and Label	1	-	-	DA2/334	R
	Spares for:					
EB8.83.2383	LABEL	1	L72	C	DA2/335	R
EEAS132/6	STRAP	1	-	C	DA2/336	R
-	MOUNTING, Canopy Lock Switch and Cover (EB8.81.3499)	-	-	-	DA2/337	R
	Spares for:					
EB8.81.5713	COVER, switch, D/P	1	-	C	DA8/338	R
EB8.81.2345	FLAP, spring, group	1	-	C	DA8/339	R
5CW/6580	SWITCH, tumbler	1	-	C	DA8/340	R
-	MOUNTING, Cockpit Lamp, Navigators Hatch Coaming (EB8.81.5135)	-	-	-	DA2/341	R
	Spares for:					
5L/9953271	FILAMENT, 28 volt, clear	1	-	L	DA2/342	R
5CX/446	LAMP, cockpit type 1A	1	-	L	DA2/343	R
-	MOUNTING, Emergency Accumulator and Time Delay Unit, Navigators Seat (EB8.81.3527)	-	-	-	DA2/344	R
	Spares for:					
5J/9001514	BATTERY, secondary, lead acid 24V, Type J. (Pre Mod 5158)	1	-	P	DA8/345	R

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description	No. off	Material Specification	Class of Eqpt. M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	Attachment of secondary battery to mounting structure					
AS1242/1B	Bolt, 4BA (Pre Mod 5158)	4	-	C	DA8/346	R
A25/4C	Bolt, 2BA (Pre Mod 5158)	2	-	C	DA8/347	R
A27/BP	Nut, 4BA (Pre Mod 5158)	4	-	C	DA8/348	R
A27/CS	Nut, slotted, 2BA (Pre Mod 5158)	2	-	C	DA8/349	R
AGS113/C	Nut, wing, 2BA (Pre Mod 5158)	2	-	C	DA8/350	R
SP90/C8	Pin, split, 1/16 in. dia. (Pre Mod 5158)	2	-	C	DA8/351	R
EB8.81.3543	Plate, battery retaining (Pre Mod 5158)	1	L72	C	DA8/352	R
EB8.81.3541	Rod, battery retaining (Pre Mod 5158)	2	S1	C	DA8/353	R
SP13/B	Washer, 4BA (Pre Mod 5158)	4	-	C	DA8/354	R
SP13/C	Washer, 2BA (Pre Mod 5158)	2	-	C	DA8/355	R
SP55/C	Washer, spring, 2BA (Pre Mod 5158)	2	-	C	DA8/356	R
Saft 20V03KHC	BATTERY, secondary, nickel cadmium 24V (Mod 5158, satisfied by SEM/CAN/074/STC)	1		P	DA8/357	R
	Attachment of secondary battery to mounting structure					
	Block, spacer (Make from fabric sheet SF/9400955) (Mod 5158)	2	BS2572 Type 2	LM	DA8/358	R
AS1242/1B	Bolt, 4BA (Mod 5158)	4		C	DA8/359	R
A25/4C	Bolt, 2BA (Mod 5158)	2		C	DA8/360	R
5J	Cover, battery (salvaged from old battery) (Mod 5158)	1		C	DA8/361	R
30180	Cover, securing (Mod 5158)	1		C	DA8/362	R
AGS2001/B2	Nut, 4BA (Mod 5158)	4		C	DA8/363	R
AGS2001/C2	Nut, 2BA (Mod 5158)	4		C	DA8/364	R
AGS113/C	Nut, wing, 2BA (Mod 5158)	2		C	DA8/365	R
SP90/C5	Pin, split, 1/16 in. dia. (Mod 5158)	2		C	DA8/366	R
	Rod, retaining (Make from Steel Rod 30A/9610222 and Steel Bar 30A/9610225) (Mod 5158)	2	BS7-1-D Group A	LM	DA8/367	R
EEAS1/4C	Screw, 2BA (Mod 5158)	4		C	DA8/368	R
SP13/B	Washer, 4BA (Mod 5158)	4		C	DA8/369	R
SP13/C	Washer, 2BA (Mod 5158)	4		C	DA8/370	R
-	MOUNTING, Emergency Lighting and High Intensity Lamp, Pilot's Lamp, Coaming Panel (EB8.81.4719)	-	-	-	DA2/371	R
	Spares for:					
EB8.81.4719/A	BRACKET, mounting, floodlight	1	DTD797A	C	DA9/372	R
EB8.81.4719/B	BRACKET, mounting, floodlight	1	DTD797A	C	DA9/373	R
EB8.81.4719/C	BRACKET, mounting, floodlight	3	DTD797A	C	DA9/374	R
	Attachment of mounting bracket to structure forward of frame 6					
AS2227/405	Rivet, 1/8 in. dia.	18	-	C		
5L/9951271	FILAMENT, 28V 3.5W	3	-	C	DA9/376	R
5L/9951282	FILAMENT, 28V 12W	2	-	C	DA9/377	R
5CX/4330201	LAMP, cockpit, high intensity	2	-	C	DA9/378	R

Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
	Attachment of cockpit lamp to mounting bracket on roof					
A25/1/2B	Bolt, 4BA	4	-	C	DA9/379	R
AGS2001/B1	Nut, stiff, 4BA	4	-	C	DA9/380	
SP10/B	Washer, 4BA	4	-	C	DA9/381	
5CX/4330206	LAMP, cockpit, type D, yellow	3	-	C	DA9/382	
	Attachment of cockpit lamp to mounting brackets on roof and limit switch panel					
A25/1/2B	Bolt, 4BA	6	-	C	DA9/383	R
AGS2001/B1	Nut, stiff, 4BA	6	-	C	DA9/384	
SP10/B	Washer, 4BA	2	-	C	DA9/385	
	MOUNTING, Floodlight, Control Panel (Mod 2758) (EB8.81.5807)	-	-	-	DA2/386	R
	Spares for:					
EB8.81.5807/A	BRACKET, mounting	1	DTD787A	C	DA9/387	
	Attachment of bracket to diaphragm at frame 2 port					
SP80/304	Rivet, 1/4 in. dia.	2	-	C	DA9/388	
SP13/B	Washer, 4BA	2	-	C	DA9/389	
5L/9951271	FILAMENT, 28V, 3.5 W.	1	-	C	DA9/390	
5CX/1041518	LAMP, cockpit type D. red	1	-	C	DA9/391	
	Attachment of cockpit lamp to mounting bracket					
A25/1B	Bolt, 4BA	2	-	C	DA9/392	R
AGS2001/B1	Nut, 4BA	2	-	C	DA9/393	
SP13/B	Washer, 4BA	2	-	C	DA9/394	
	MOUNTING, Floodlight, Navigator, Aft (EB8.81.3863)	-	-	-	DA2/395	
	Spares for:					
5CX/4330002	LAMP, cockpit, type 1A	1	-	C	DA9/396	
	Attachment of cockpit lamp to bracket on support beam, pilot's dash.					
AS1246/2B	Bolt, 4BA	3	-	C	DA9/397	R
SP15/B	Washer, 4BA	3	-	C	DA9/398	
	MOUNTING, Floodlight, Undercarriage Panel (EB8.81.4671)	-	-	-	DA2/399	
	Spares for:					
EB8.81.4671/A	BRACKET, mounting, floodlight	1	DTD797A	C	DA9/400	

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	Attachment of mounting bracket to inner skin panel between frame 7 and 8					
AGS2048/423B5	Rivet, 1/8 in. dia.	6	-	C	DA9/401	R
SP10/B	Washer, 4BA	6	-	C	DA9/402	
5L/9951271	FILAMENT, 28V.3.5 W	1	-	C	DA9/403	
5CX/1041518	LAMP, cockpit, type D, red	1	-	C	DA9/404	
	Attachment of cockpit lamp to mounting bracket					
AS1246/1B	Bolt, 4BA	2	-	C	DA9/405	
	MOUNTING, Night Lighting, Rudder Feel Simulator Gauges (Mod 3336) (EB8.81.5875)	-	-	-	DA2/406	R
	Spares for:					
5X/1002694	BLOCK, terminal, 5-way	1	-	C	DA9/407	
5X/9149641	COVER, terminal, block	1	-	C	DA9/408	
5L/9959118	FILAMENT, miniature	4	-	C	DA9/409	
5CX/1143215	LAMPHOLDER, bridge	2	-	C	DA9/410	
5X/9450403	PILLAR, fixing	2	-	C	DA9/411	
EEAS146/C	SLEEVE, 3/8 in. long "Yellow"	3	-	C	DA9/412	
	MOUNTING, pillar Light, Undercarriage Panel (EB8.81.4575)	-	-	-	DA2/413	R
	Spares for:					
5L/9959118	FILAMENT, miniature	3	-	C	DA9/414	
5CX/5313	LAMPHOLDER, miniature	3	-	C	DA9/415	
	MOUNTING, Suppressor Unit for Demisting Blower Unit (EB8.81.4771)				DA2/416	
	Spares for:					
5CY/4376472	SUPPRESSOR, unit	1	-	L	DA9/417	
	Attachment of suppressor to frame 5					
AS1246/1/2B	Bolt, 4BA	4	-	C	DA9/418	R
	MOUNTING, Terminal Blocks, Control Column (beneath Pilot's Floor) (EB8.81.4355)	-	-	-	DA2/419	
	Spares for:					
5X/5276	BLOCK, terminal, 2-way	4	-	C	DA10/420	
5X/1004088	BLOCK, terminal, 10-way	1	-	C	DA10/421	

ELECTRICAL INSTALLATIONS
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
	Attachment of terminal block to pilot's floor structure				
AGS2001/B1	Nut, stiff, 4BA	10	-	C	DA10/422
A32/B32	Screw, 4BA	10	-	C	DA10/423
SP15/B	Washer, 4BA	10	-	C	DA10/424
Texas Inst. 10CV/7046	DIODE	1	-	C	DA10/425
Hendrey D4040	RELAY	1	-	C	DA10/426
EB8.81.5621	UNIT, spark suppression (Mod 3176)	1	-	L	DA10/427
	MOUNTING, Terminal Block, Height Encoding Frame D - Frame C starboard (Mod 4404) (EB8.81.6571)	-	-	-	DA2/428
	Spares for:				
5X/1004088	BLOCK, terminal, 10-way (Mod 4404)	1	-	C	DA10/429
10H/9462765	COVER, clear (Mod 4404)	1	-	C	DA10/430
5X/9450403	PILLAR, fixing (Mod 4404)	2	-	C	DA10/431
	Attachment of terminal block to plate				
AGS2001/B1	Nut, stiff, 4BA (Mod 4404)	2	-	C	DA10/432
SP15/B	Washer, (Mod 4404)	2	-	C	DA10/433
	MOUNTING, Terminal Blocks, Lighting (EB8.81.4827)	-	-	-	DA2/434 R
	Spares for:				
5X/1002694	BLOCK, terminal, 5-way	1	-	C	DA10/435
5X/1004088	BLOCK, terminal, 10-way	2	-	C	DA10/436
	Attachment of terminal block to port console and frame 8				
AGS2001/B1	Nut, stiff, 4BA	6	-	C	DA10/437
A31/B14	Screw, 4BA.	6	-	C	DA10/438
SP10/B	Washer, 4BA.	6	-	C	DA10/439
	MOUNTING, Terminal Block, Navigator's Starboard Console (EB8.81.5143)	-	-	-	DA2/440 R
	Spares for:				
5X/1002695	BLOCK, terminal, 20-way	1	-	C	DA10/441
5X/9149643	COVER, terminal block	1	-	C	DA10/442
5X/9450403	PILLAR, fixing	2	-	C	DA10/443
	MOUNTING, Pilot's Coaming Panel (EB8.81.3039)	-	-	-	DA2/444
	Spares for:				
EA9.81.2603	BRACKET, mounting, dive brake switch	1	-	C	DA11/445

ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE


Part No.	Description	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	1 2 3 4 5 6					
A25/1/2B AGS2001/B1 SP15/B 5L/9959182 Thorn PPL120	Attachment of bracket to structure					
	Bolt, 4BA.	4	-	C	DA11/446	R
	Nut, stiff, 4BA.	4	-	C	DA11/447	
	Washer, 4BA.	4	-	C	DA11/448	
	FILAMENT, miniature 28V 0.04 Amp.	1	-	C	DA11/449	
	LAMPHOLDER, type A, No. 2, dive brake switch	1	-	C	DA11/450	R
	PANEL, pilot's coaming (EB8.81.3463) (See Section ED)	-	-	-	DA2/451	R
	PANEL, "Translite", dive brake switch	1	-	-	DA11/452	
	STOP, switch overshoot, group	1	-	C	DA11/453	
	SWITCH, 3-way, dive brakes	1	-	L	DA11/454	
Thorns P781X1 EA9.81.2545 Rotax D10001	Attachment of switch to mounting					
	Bolt, 4BA.	1	-	C	DA11/455	
	Screw, 4BA.	2	-	C	DA11/456	
	Washer, 4BA. "Shakeproof"	2	-	C	DA11/457	
	TERMINAL, earth	1	-	C	DA11/458	R
	MOUNTING, Altitude Switch (EB8.80.3815)				DA2/459	
	Spares for:					
	SWITCH, altitude	1	-	P	DA11/460	
	Attachment of switch to structure under pilots floor					
	Bolt, 2BA.	2	-	C	DA11/461	
A26/3C SP10/C	Washer, 2BA.	2	-	C	DA11/462	
	PLUG SOCKETS, Through Pressure Bulkhead (EB8.81.4347)	-	-	-	DA2/463	R
	Spares for:					
	ADAPTOR, bulkhead Plug	2	-	L	DA11/464	
	CONNECTOR (Mod 5731)	1	-	C	DA11/465	
	HOUSING, pressure bung	1	-	L	DA11/466	
	Attachment of housing to pressure bulkhead					
	Screw, 4BA	8	-	C	DA11/467	
	Nut, stiff, 4BA	8	-	C	DA11/468	
	Washer, 4BA	8	-	C	DA11/469	
10H/9560042 6027-16-23SR Hellerman HV4652	PLUG/SOCKET, type 11	2	-	L	DA11/470	
	PLUG/SOCKET, type 17	1	-	C	DA11/471	
	PLUG/SOCKET, type 23	2	-	C	DA11/472	
	PLUG/SOCKET, type 41	3	-	C	DA11/473	
	PLUG/SOCKET, type 47	6	-	L	DA11/474	
	PLUG/SOCKET, type 48	4	-	L	DA11/475	
	PLUG/SOCKET, type 49 (Pre Mod 5131)	2	-	L	DA11/476	
A31/B6 AGS2001/B1 SP10/B 10H/19445 10H/19451 10H/19457 10H/19475 10H/19481 10H/19482 10H/19483	PLUG/SOCKET, type 11	2	-	L	DA11/470	
	PLUG/SOCKET, type 17	1	-	C	DA11/471	
	PLUG/SOCKET, type 23	2	-	C	DA11/472	
	PLUG/SOCKET, type 41	3	-	C	DA11/473	
	PLUG/SOCKET, type 47	6	-	L	DA11/474	
	PLUG/SOCKET, type 48	4	-	L	DA11/475	
	PLUG/SOCKET, type 49 (Pre Mod 5131)	2	-	L	DA11/476	


ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate
10H/19484	PLUG/SOCKET, type 50	2	-	L	DA11/477
10H/19487	PLUG/SOCKET, type 53	1	-	L	DA11/478
10H/19488	PLUG/SOCKET, type 54	1	-	C	DA11/479
10H/19489	PLUG/SOCKET, type 55	1	-	C	DA11/480
10H/19490	PLUG/SOCKET, type 56	1	-	C	DA11/481
10H/19496	PLUG/SOCKET, type 62	1	-	C	DA11/482
10H/19610	PLUG/SOCKET	4	-	L	DA11/483
	RESISTANCE, High Intensity Lamp Mounting (EB8.81.4795)	-	-	-	DA2/484
	Spares for:				
5CZ/4335750	RESISTOR UNIT, 30 Ohms, 30 watts	1	-	L	DA12/485
	Attachment of resistor unit to structure				
A25/4C	Bolt, 2BA	2	-	C	DA12/486
	SELECTOR, Ratio Assembly (EB8.81.2157)	1	-	-	DA2/487
	Spares for:				
T.C.C.	CONDENSER	1	-	C	DA12/488
CP.47S	COVER, assembly	1	-	C	DA12/489
EB8.81.2163	PANEL, front	1	L72	C	DA12/490
EB8.81.2159	PANEL, base	1	-	C	DA12/491
EB8.81.2161	PLUG, fixed	1	-	L	DA12/492
CZ49061	RESISTOR, fixed type RWV5-J	1	-	C	DA12/493
10W/0117905	SWITCH, magnetic relay, type S5	1	-	L	DA12/494
5CW/5529	SWITCH, unit, "Ledex"	1	-	L	DA12/495
N.S.F.	SUPPORT, Cables, Installation, in area of Frame 5 (Mod 5166) (EB8.81.6799)	-	-	-	DA2/496
LX/S/11488/DM7	Spares for:				
A25/3C	BOLT, 2BA (Mod 5166)	4	-	C	DA12/497
EB8.81.6799A	BRACKET, strap (Mod 5166)	1	-	C	DA12/498
AGS2002/C1	NUT, stiff, 2BA (Mod 5166)	4	-	C	DA12/499
EEAS132/18	STRAP, clamp (Mod 5166)	AR	-	C	DA12/500
Hellerman	STRAP, "Helvin" (Mod 5166)	AR	-	C	DA12/501
HY3341	STUD, "Helvin" (Mod 5166)	AR	-	C	DA12/502
Hellerman	SWITCH, Dump Valve (Mod 3720)	1	-	-	DA2/503
NY3342	Spares for:				
EB8.81.6047	SWITCH, Lock	1	-	C	DA12/504
EB8.80.4087	FLAP, guard	1	L59	C	DA12/505
EB8.80.4097	TERMINAL, Earth Assembly	4	-	C	DA2/506
EB8.81.1853					


ELECTRICAL INSTALLATION
FORWARD AND NOSE FUSELAGE

Part No.	Description 1 2 3 4 5 6	No. off	Material Specification	Class of Eqpt M.R. or L.M.	Plate	
	Spares for:					
AGS2001/C3	NUT, 2BA	8		C	DA12/507	
EB8.81.1855	STUD, terminal	4	L65	C	DA12/508	
EB8.81.2177	WASHER	8	L72	C	DA12/509	
EB8.81.1857	WASHER	4	L72	C	DA12/510	
	ROLL DAMPER Installation (Mod 3359) (EB8.81.5751)	-	-	-	DA2/511	
	Spares for:					
600/2EAP	DETECTOR AND AMPLIFIER UNIT	1	-	P	DA2/512	
6TB/1705	MOUNTING, detector and amplifier	1	-	P	DA2/513	
	Attachment of mounting to structure					
A25/9C	Bolt, 2BA	4	-	C	DA2/514	
605/1EAP	PAD, gearing type F	1	-	P	DA2/515	
10H/19494	PLUG/SOCKET, type 60	1	-	L	DA2/516	
6TB/1708	SWITCH unit, pilots	1	-	P	DA2/517	
	PANEL, Relay, Installation (EB8.84.1059)	-	-	-	DA13/1	R
	Spares For:					
Hendrey D4600	RELAY	1	-	C	DA13/2	R
Hendrey D5900	RELAY	1	-	C	DA13/3	R
	Attachment of relays to mounting plate					
A25/7B	Bolt, 4BA	6	-	C	DA13/4	R
AGS2001/B1	Nut, 4BA	6	-	C	DA13/5	R
SP13/B	Washer, 4BA	6	-	C	DA13/6	R
EB8.84.1059/B	MEMBER, Z (Make from 30B/9611218)	2	L72	C	DA13/7	R
EB8.84.1059/A	PLATE, mounting (Make from 30B/9611216)	1	L72	C	DA13/8	R
	Attachment of mounting plate to structure					
AS1248/2C	Bolt, 2BA	3	-	C	DA13/9	R
SP13/C	Washer, 2BA	3	-	C	DA13/10	R
AGS2007/C1	Nut, Anchor, 2BA	3	-	C	DA13/11	R
EB8.84.1059/C	Packing (Make from 30B/9611213)	3	L72	C	DA13/12	R
EB8.84.1059/D	Packing (Make from 30B/9611213)	3	L72	C	DA13/13	R
	MOUNTING, Pressure Bung (EB8.84.1141)	-	-	-	DA13/14	R
	Spares For:					
EB8.84.1141/A	DOUBLER (Make from 30B/9611243)	1	L73	C	DA13/15	R
Hellermann CD30330KC	HOUSING, pressure bung	1	-	L	DA13/16	R
	Attachment of housing to pressure bulkhead					
A25/2B	Bolt, 4BA	8	-	C	DA13/17	R
AGS2001/B1	Nut, 4BA	8	-	C	DA13/18	R
SP15/B	Washer, 4BA	8	-	C	DA13/19	R

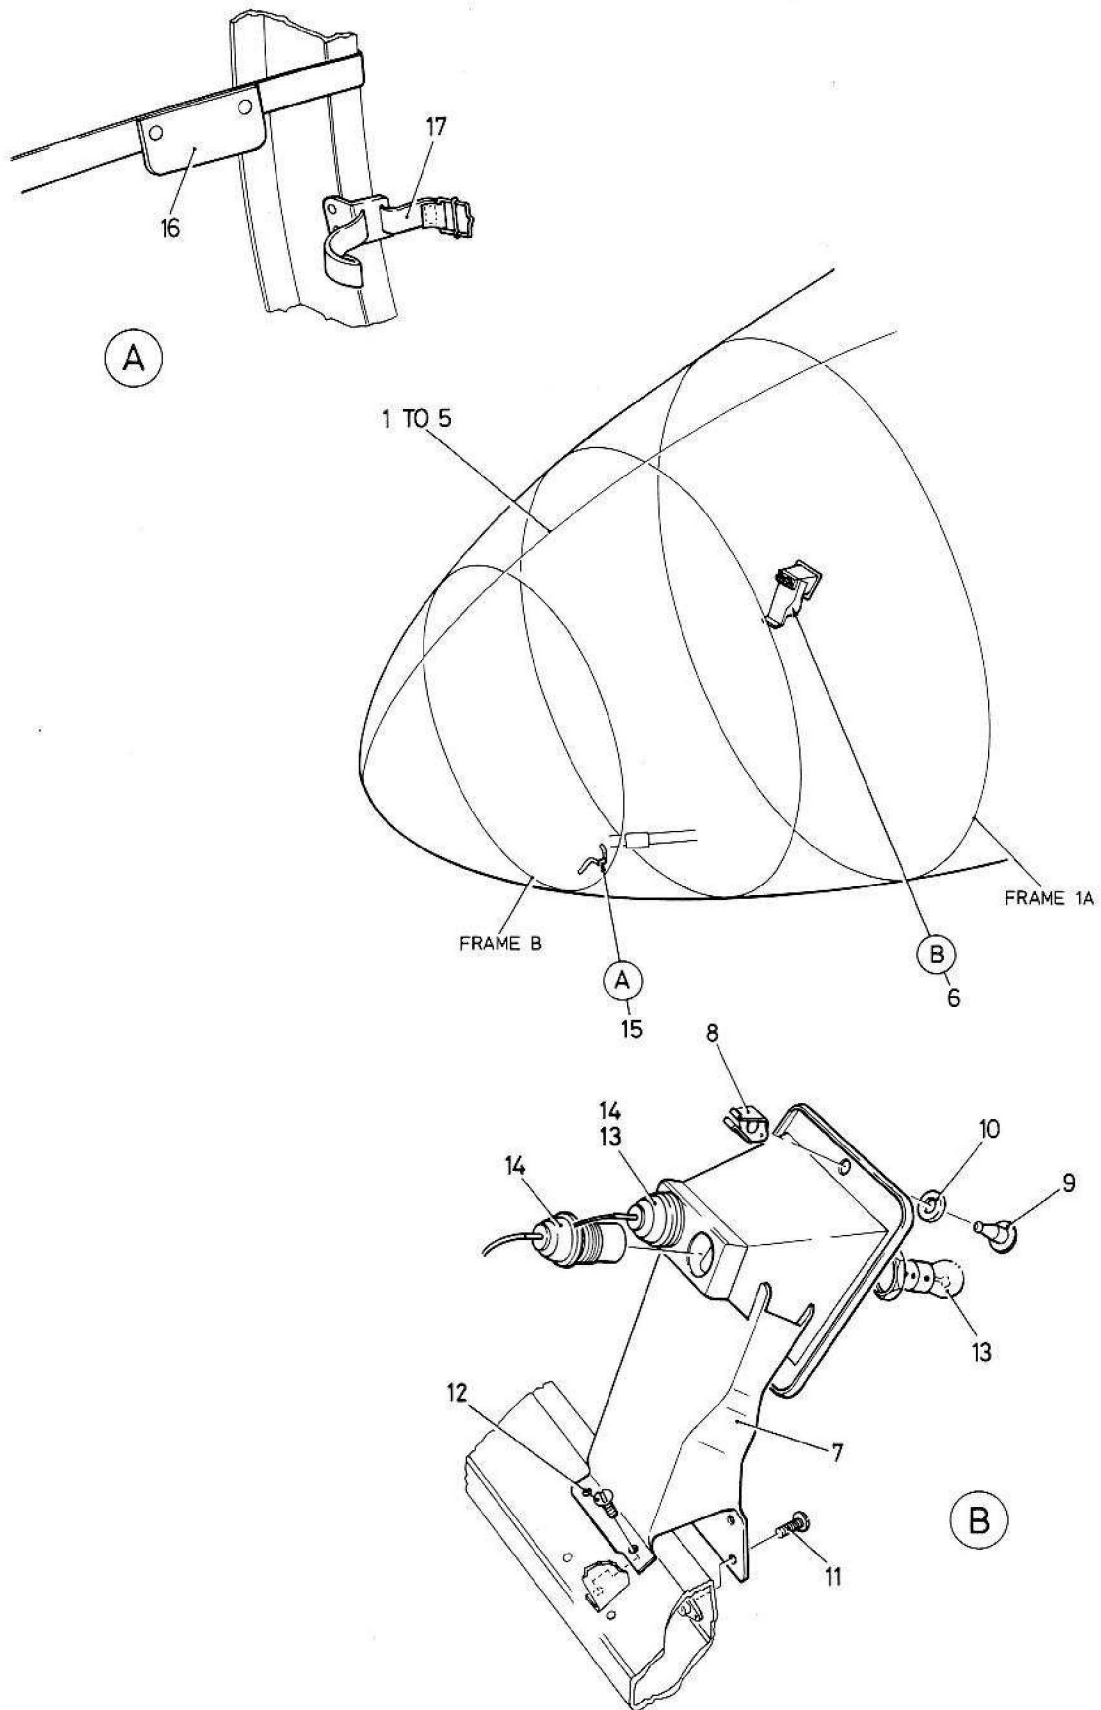


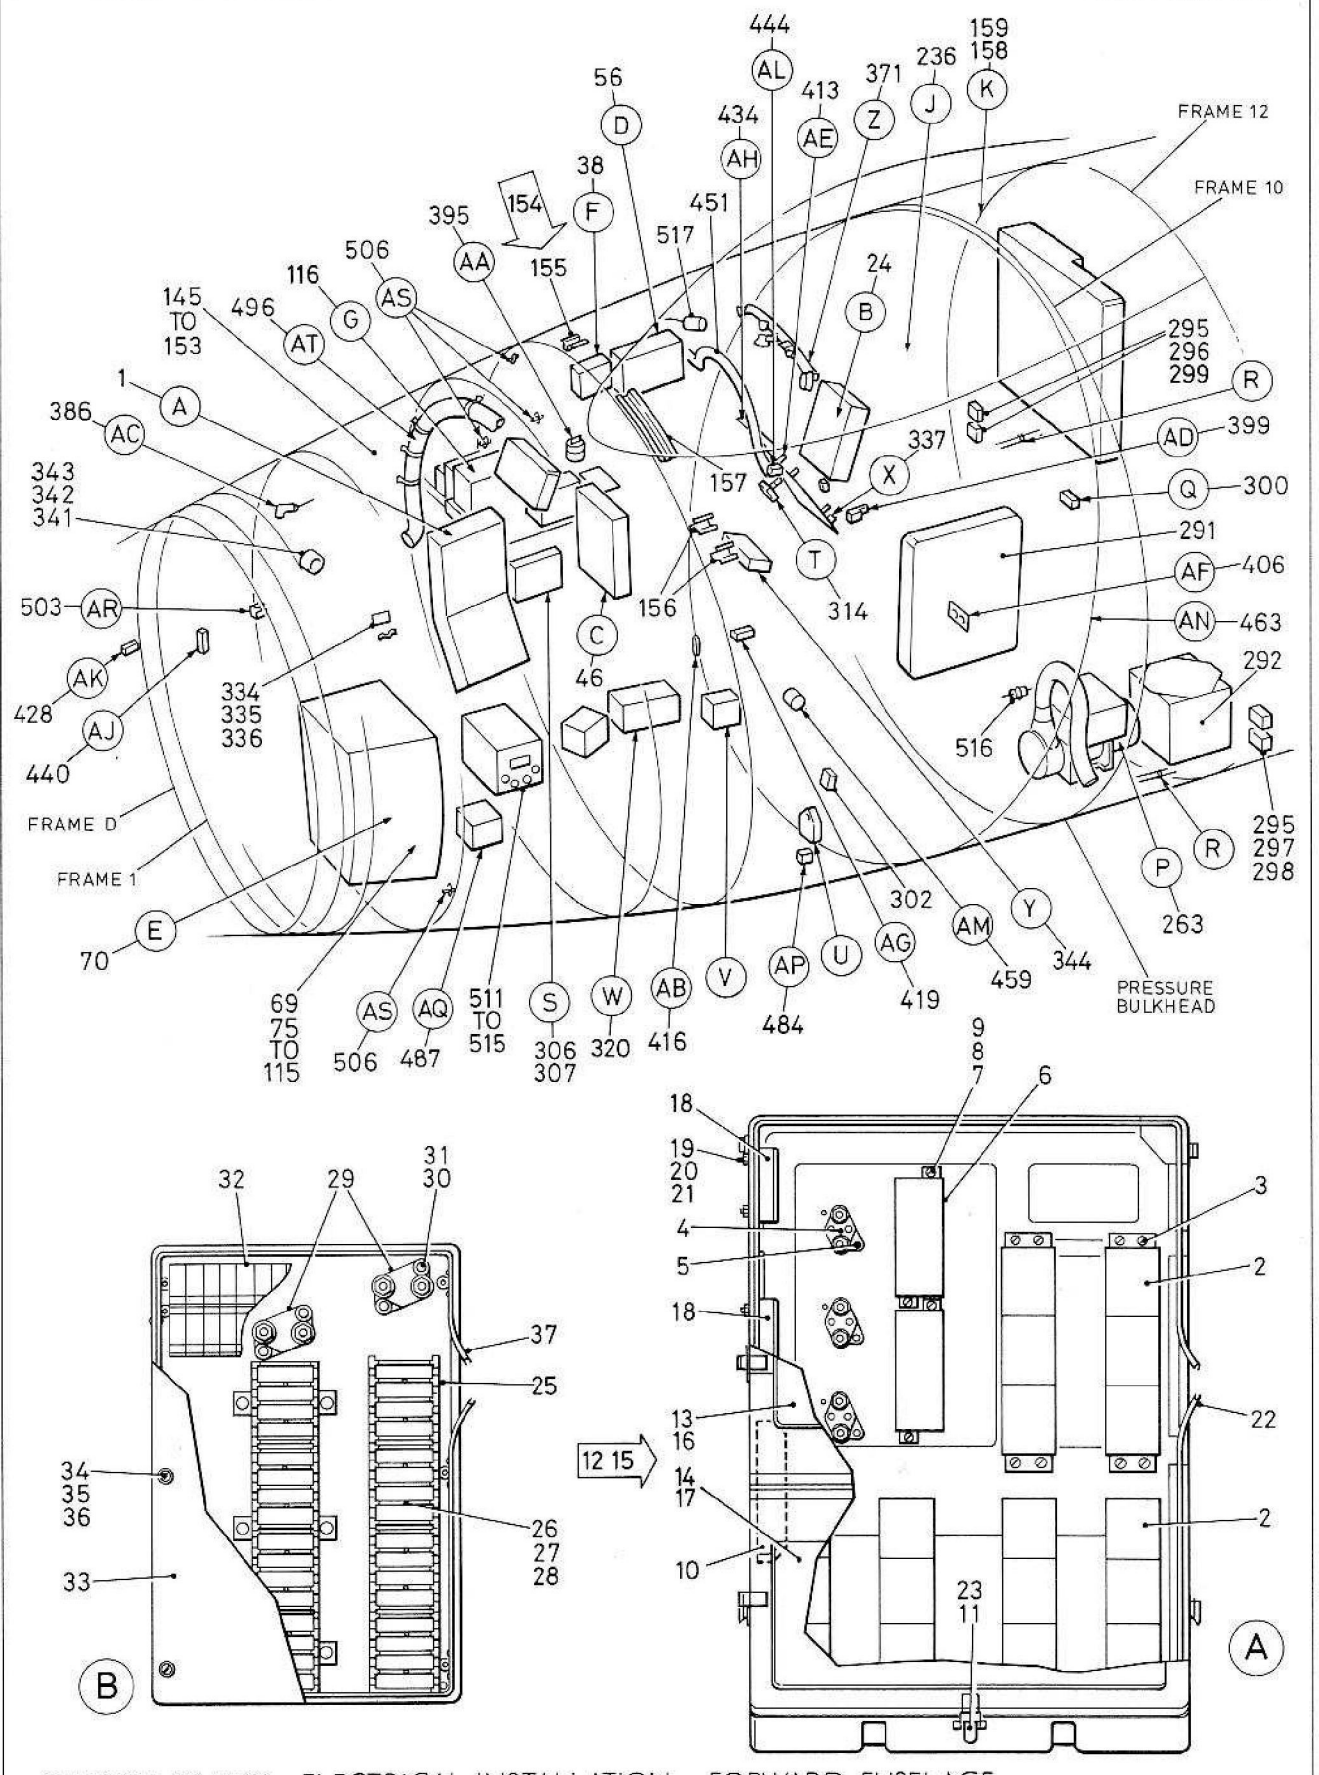


CANBERRA P.R. MK.9 — ELECTRICAL INSTALLATION — FORWARD FUSELAGE

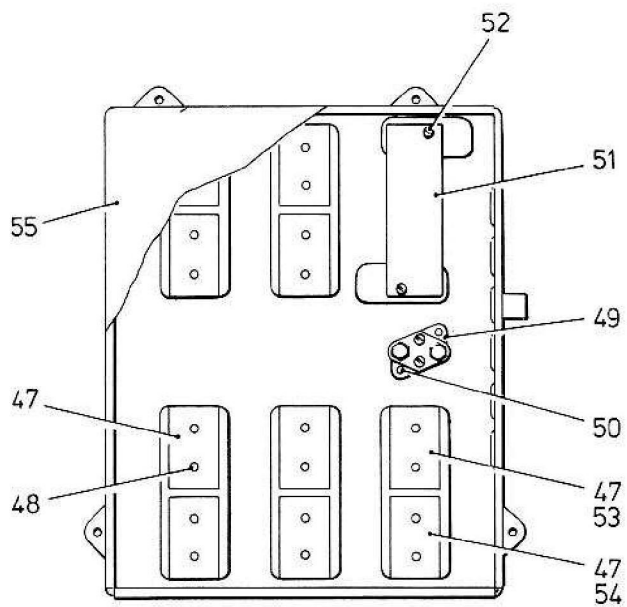


(C)

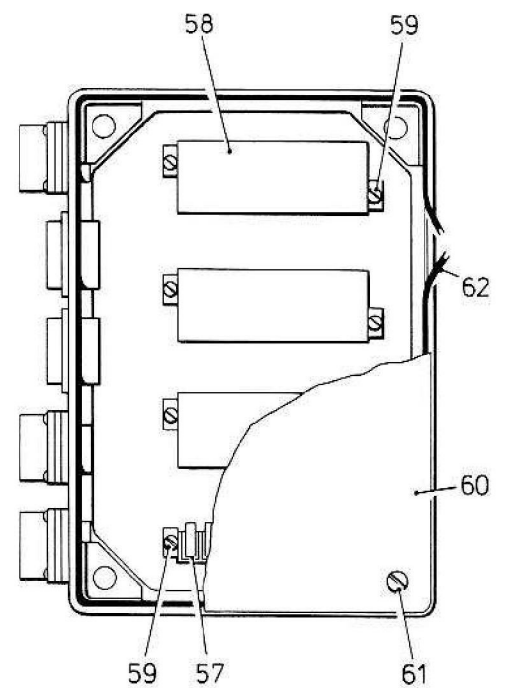


(D)

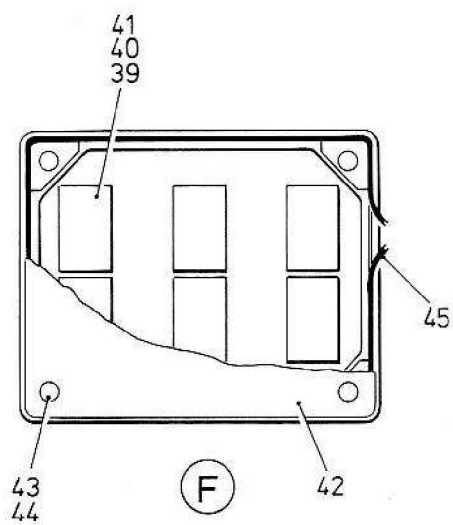


(F)

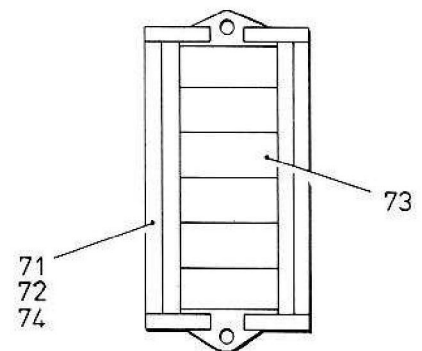


(E)

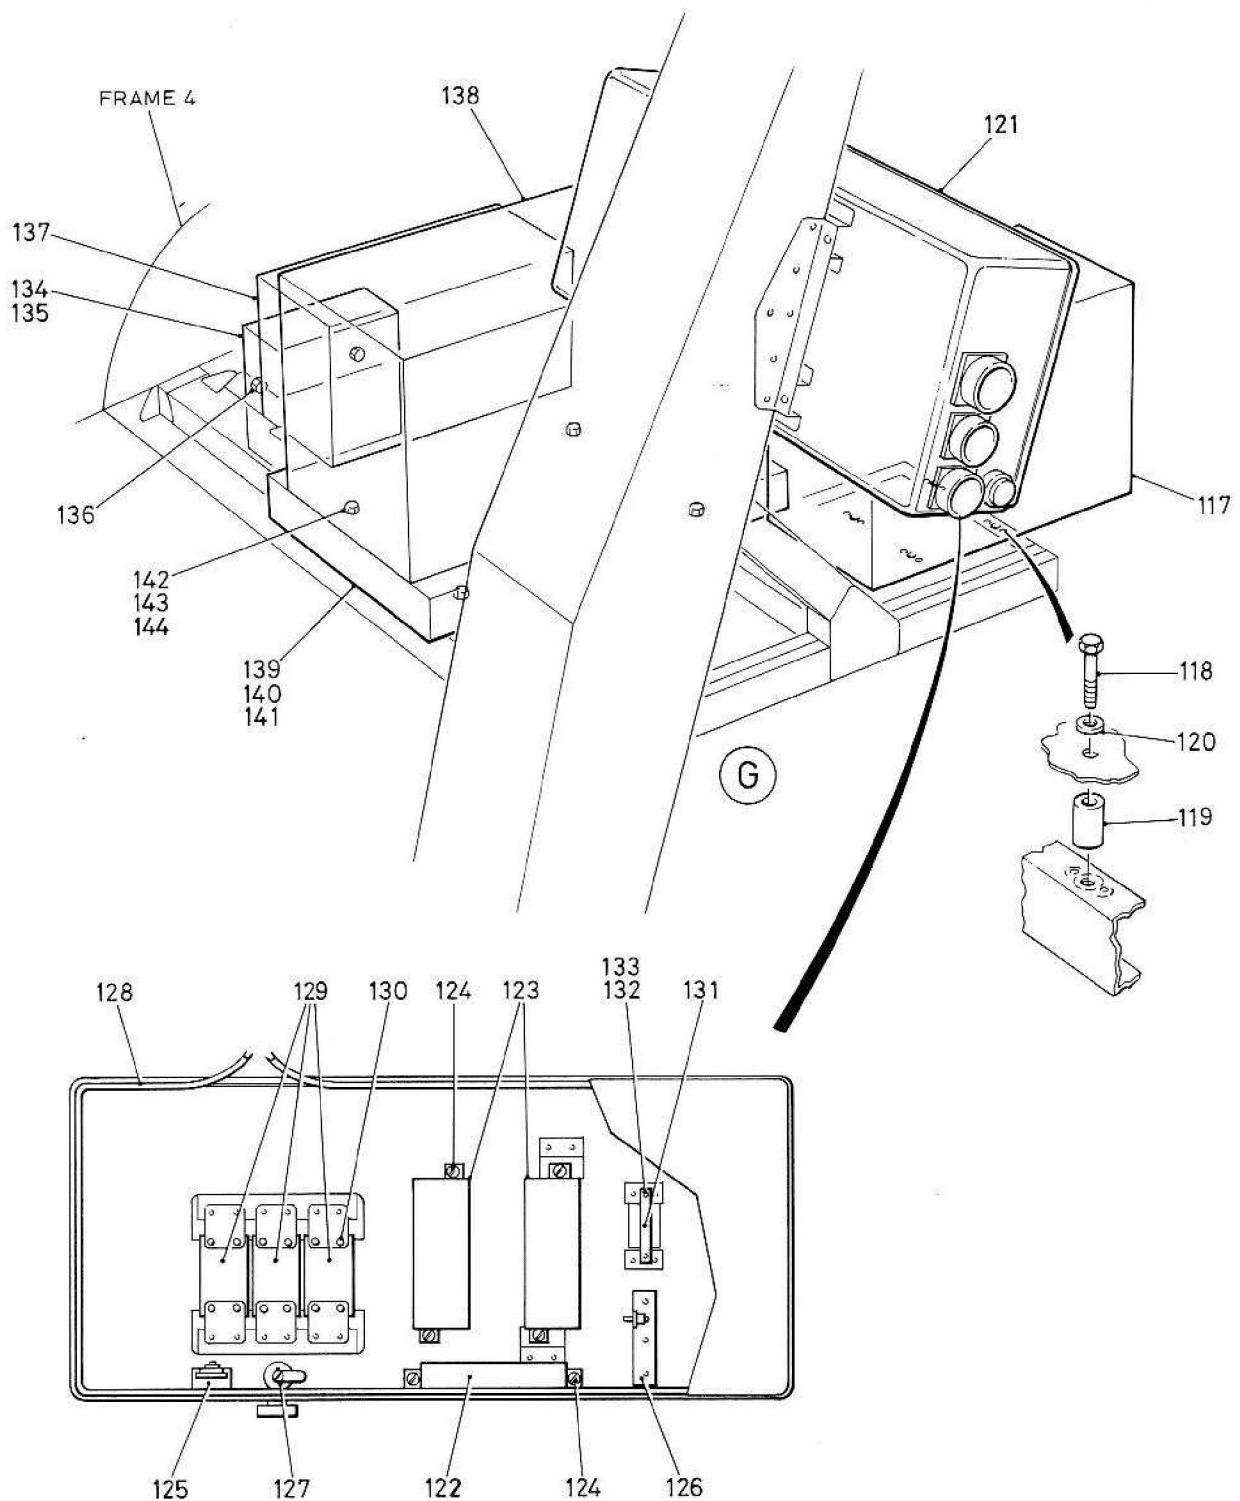


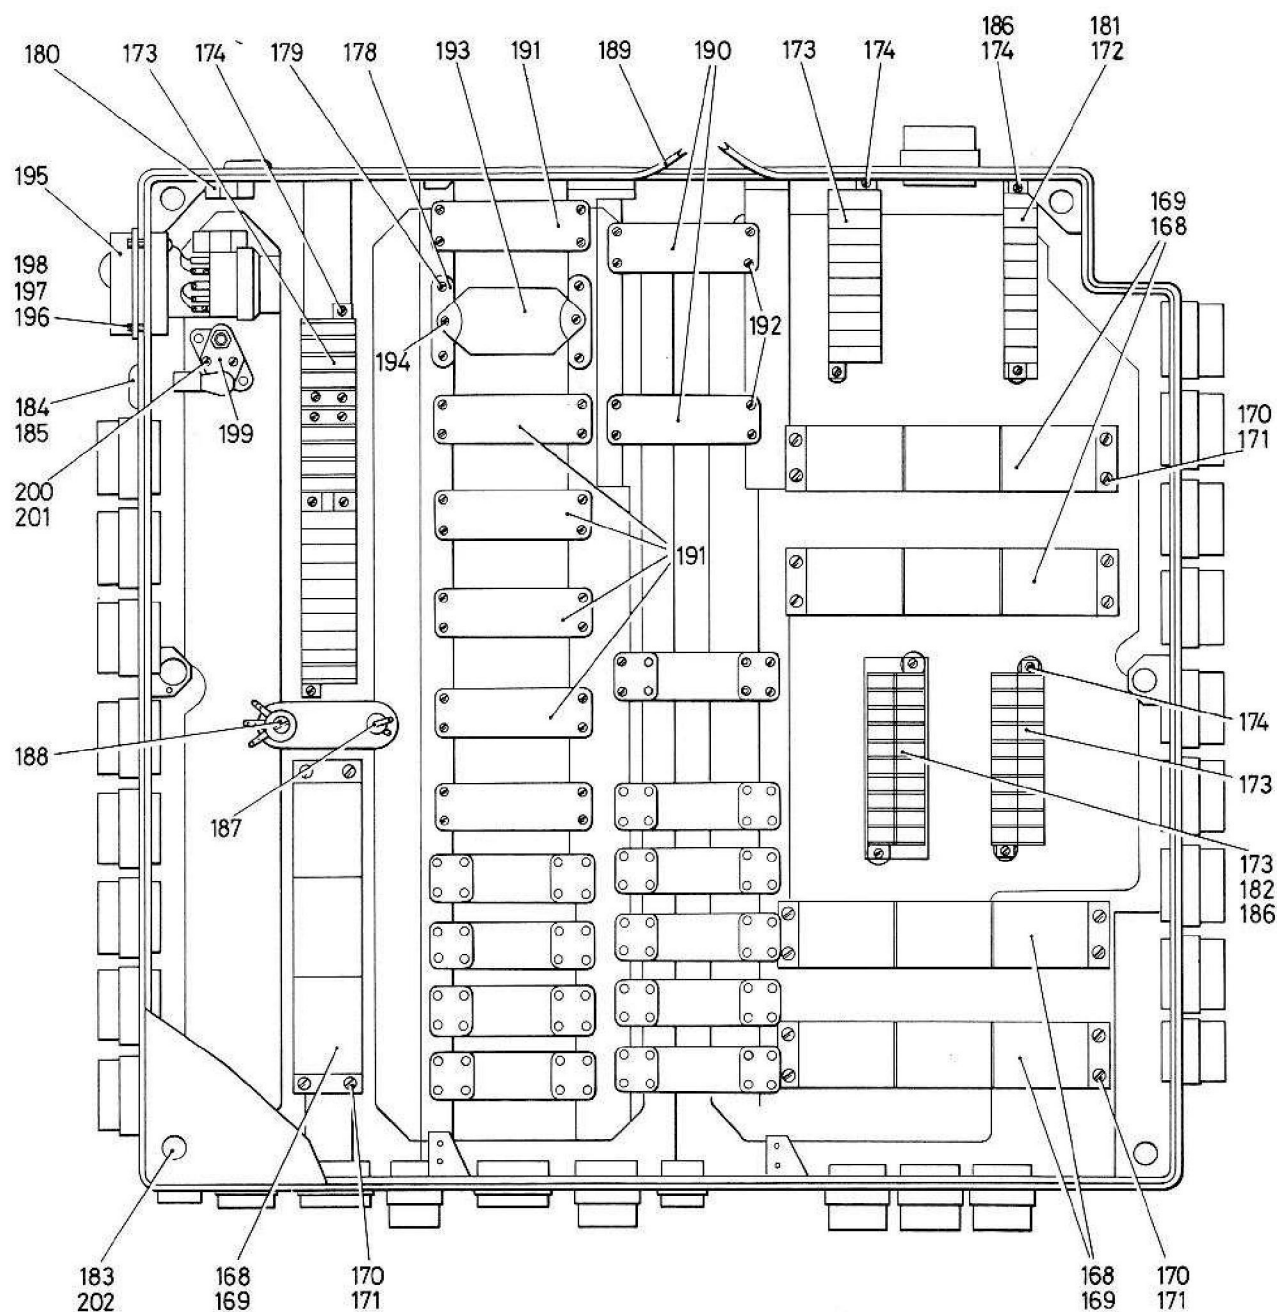



(H)





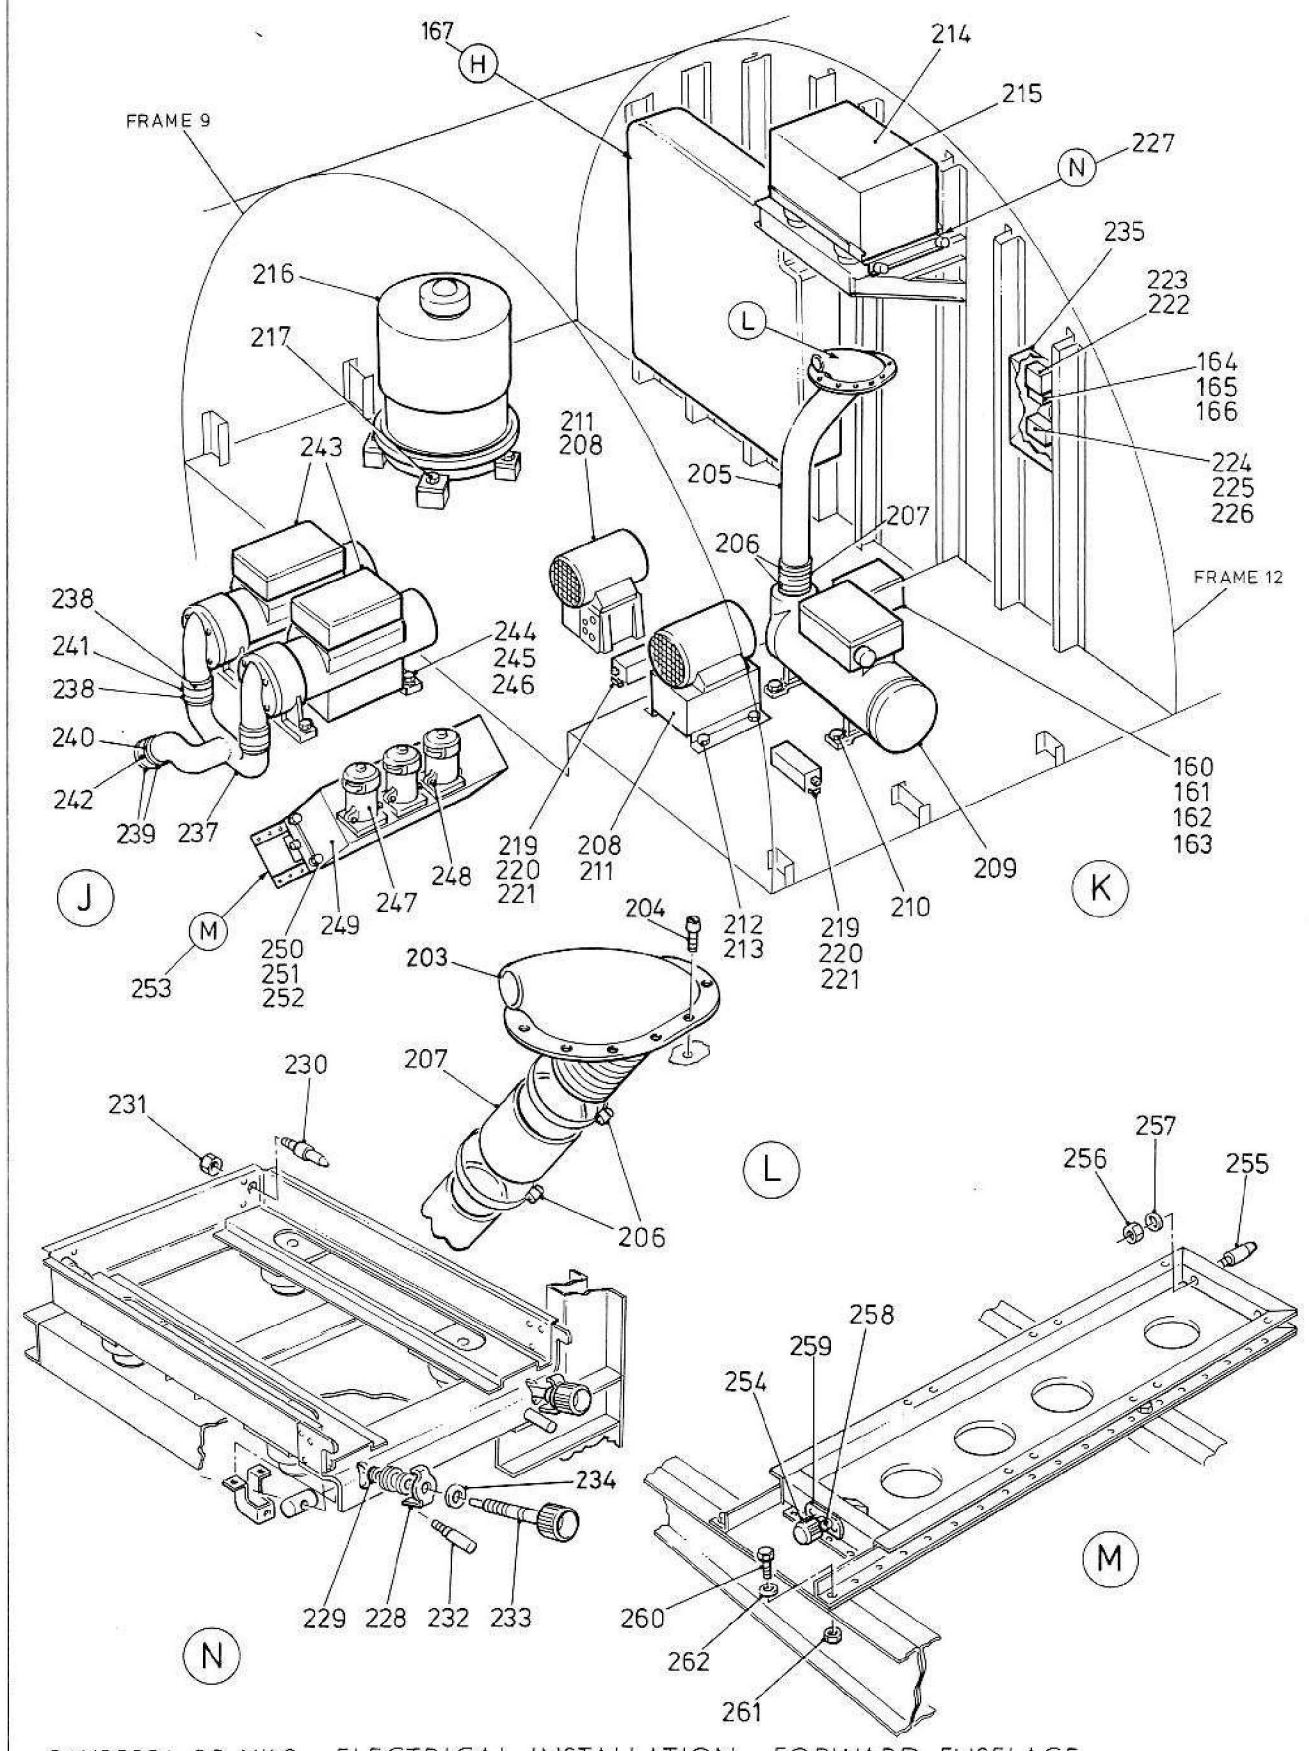


CANBERRA P.R. MK.9—ELECTRICAL INSTALLATION—FORWARD FUSELAGE

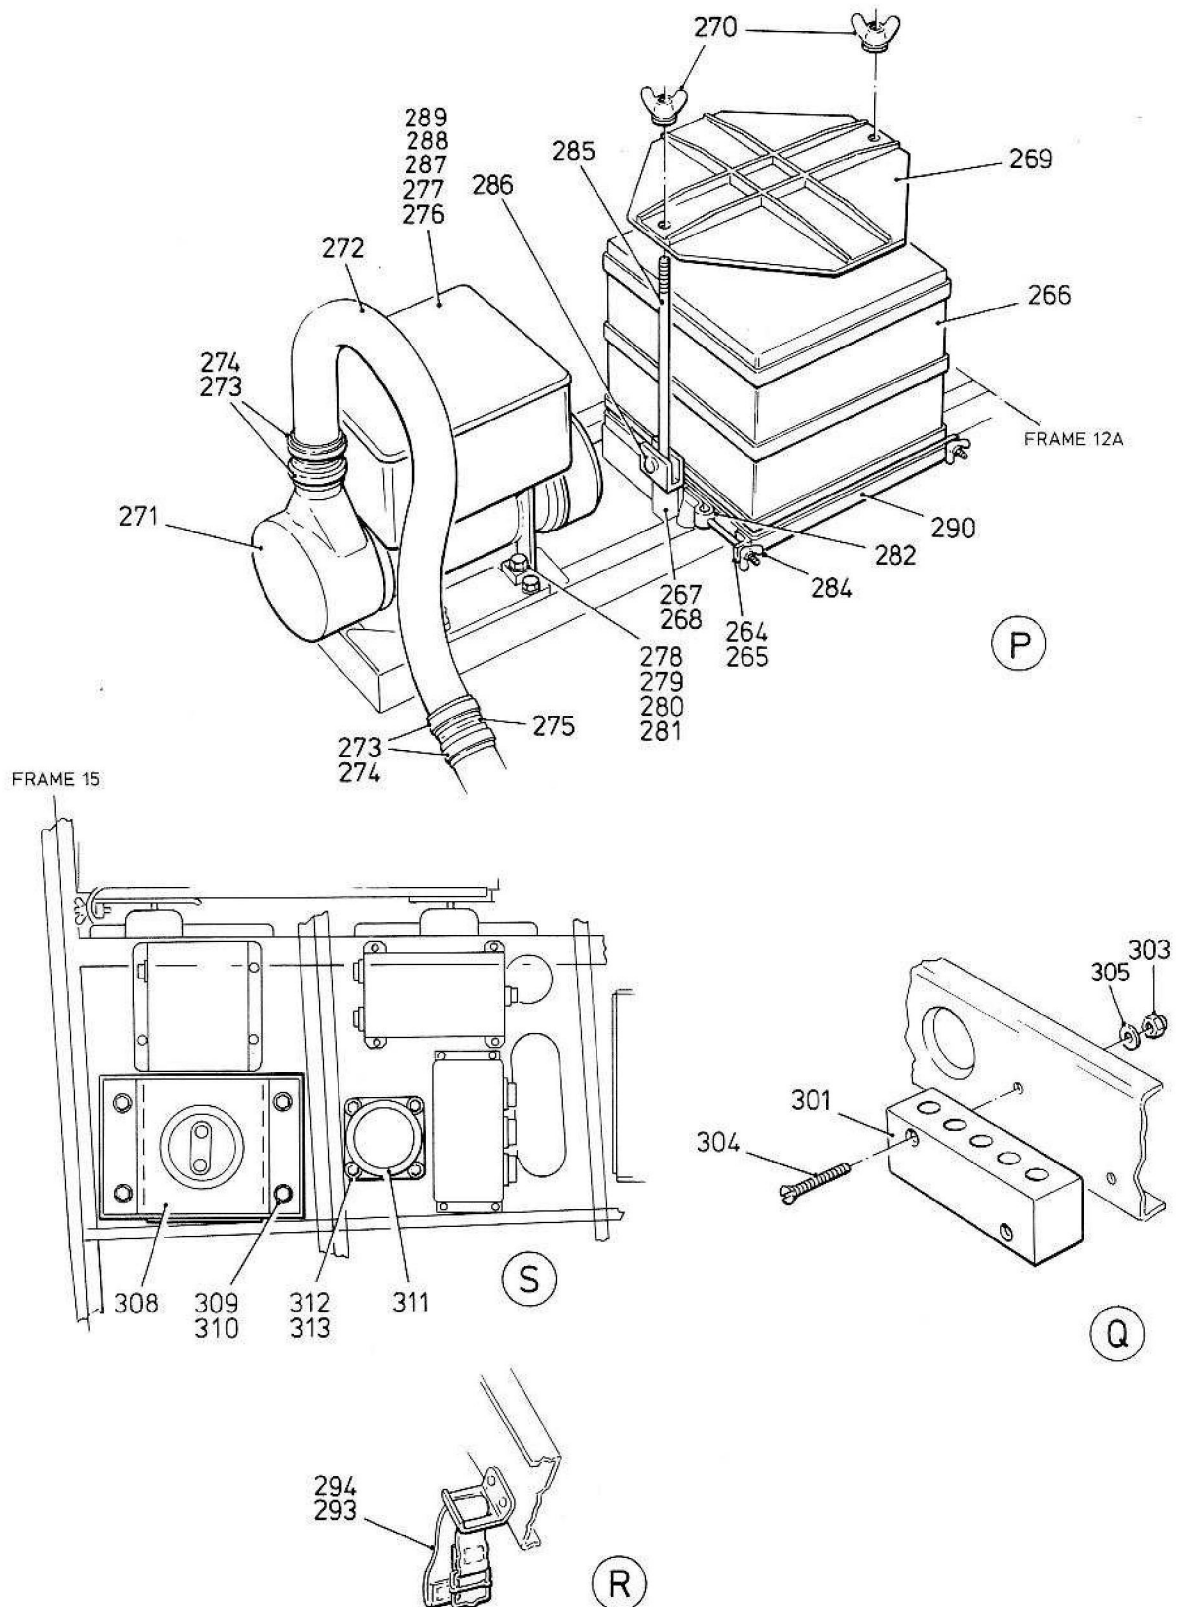

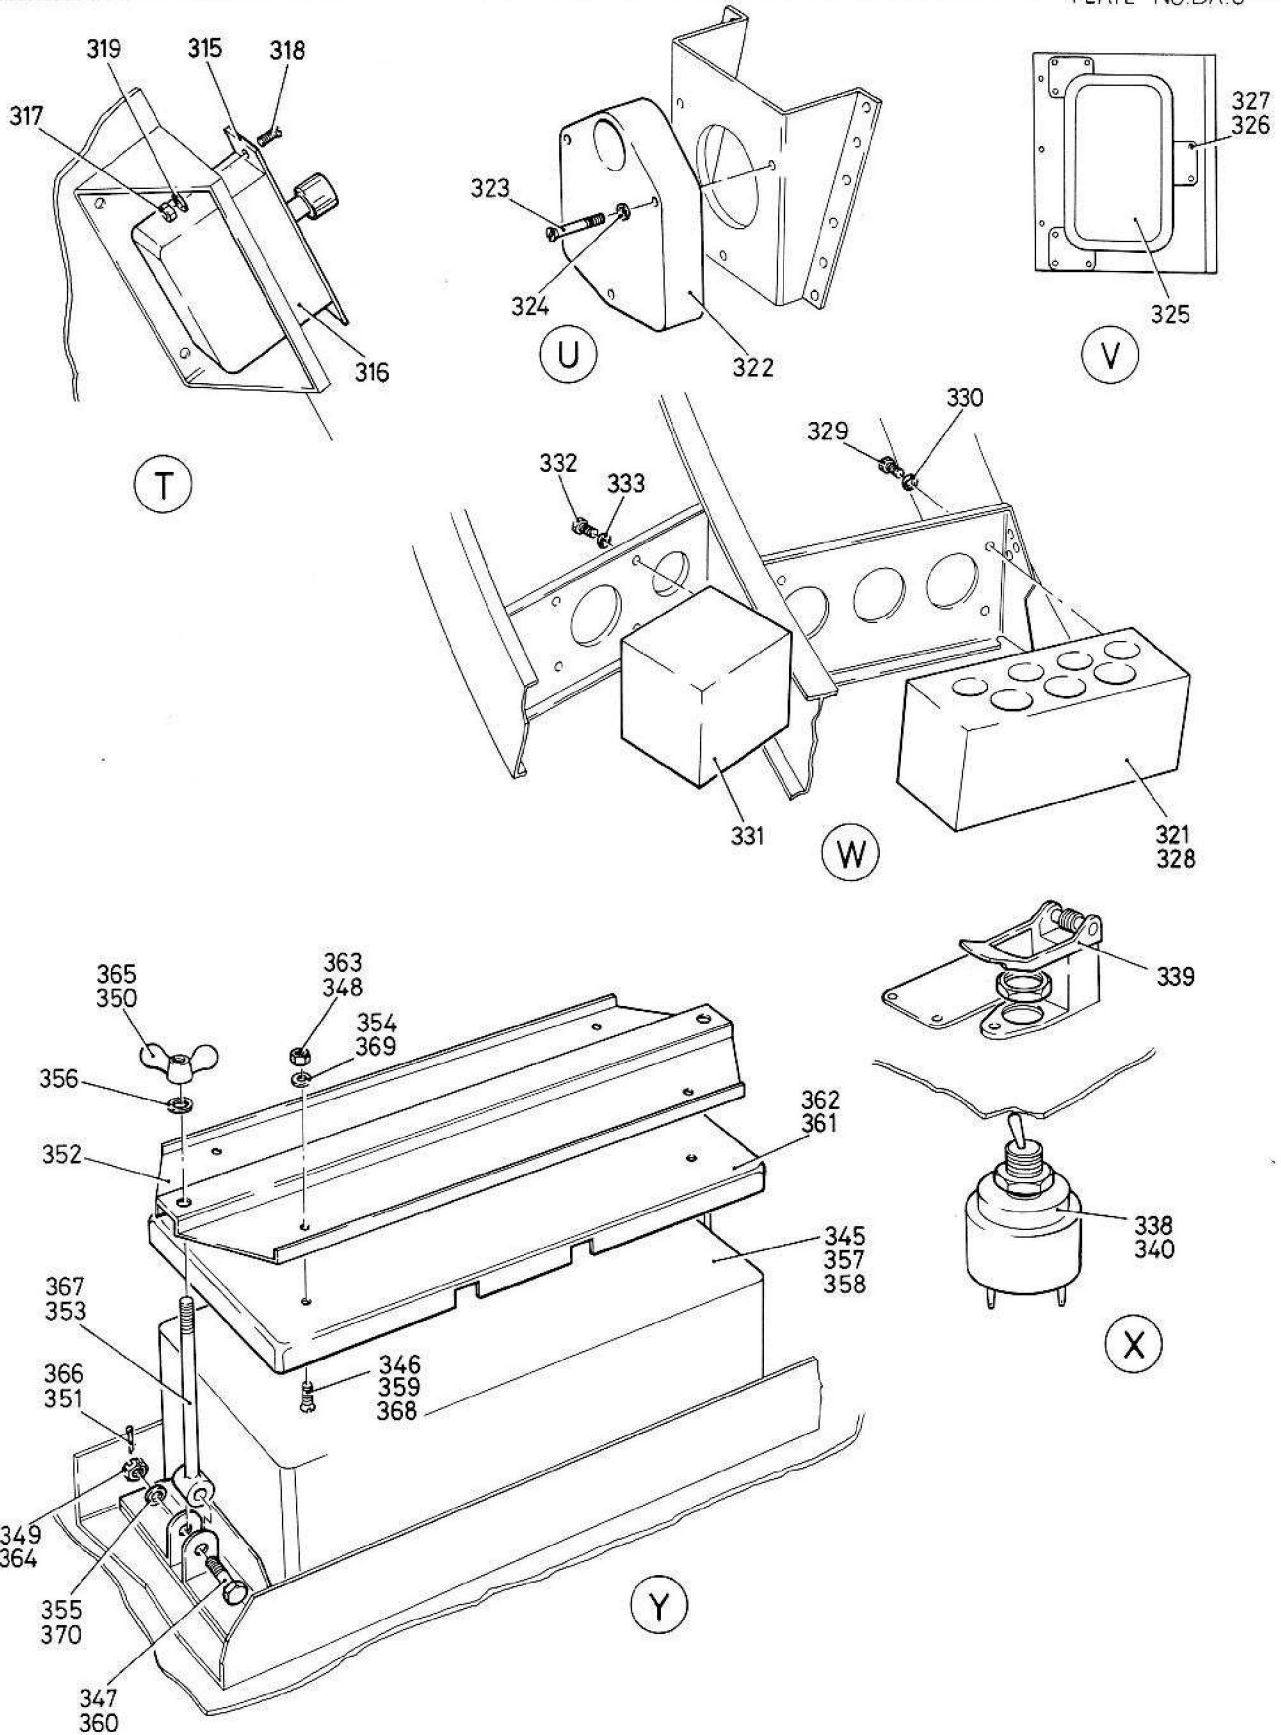

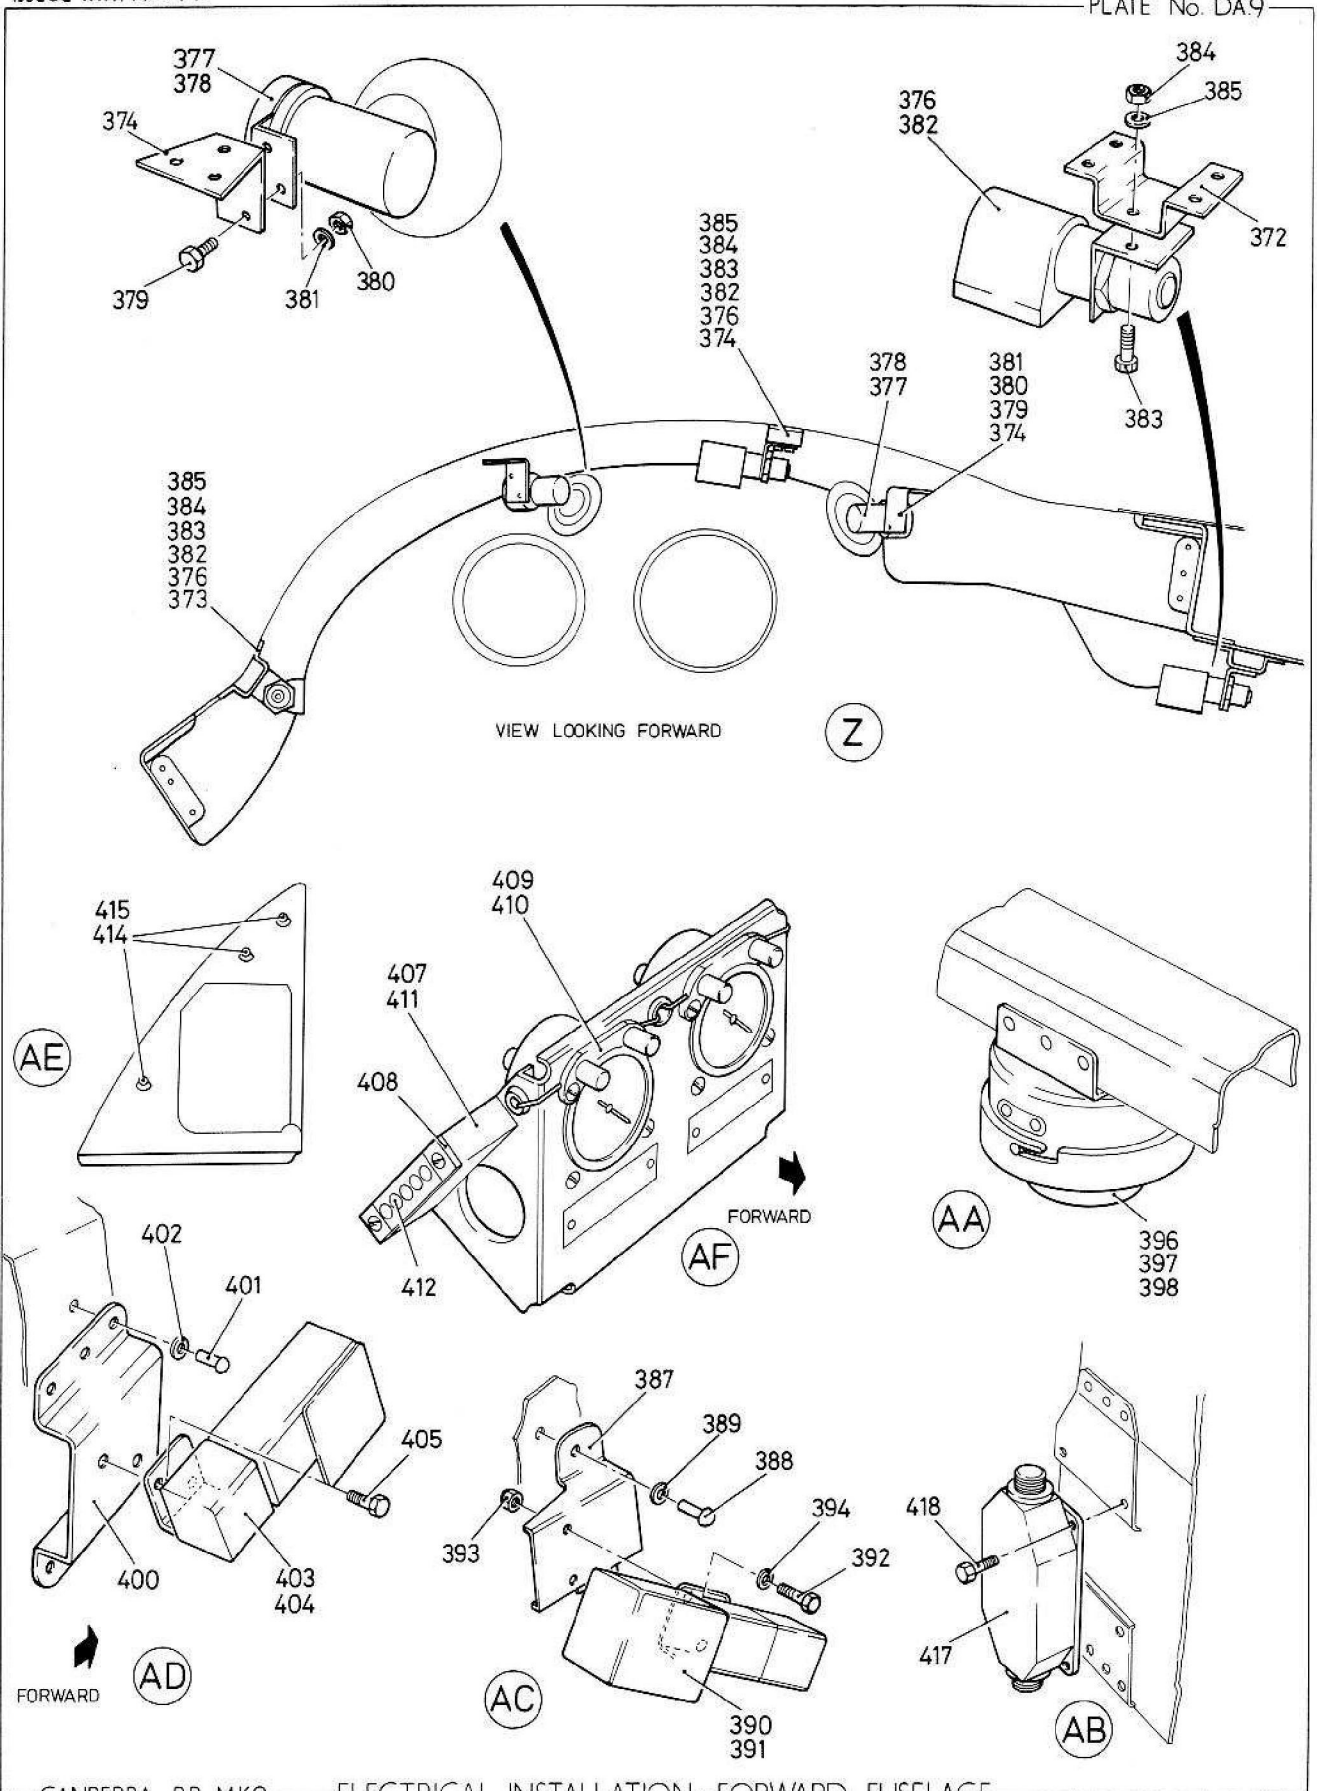

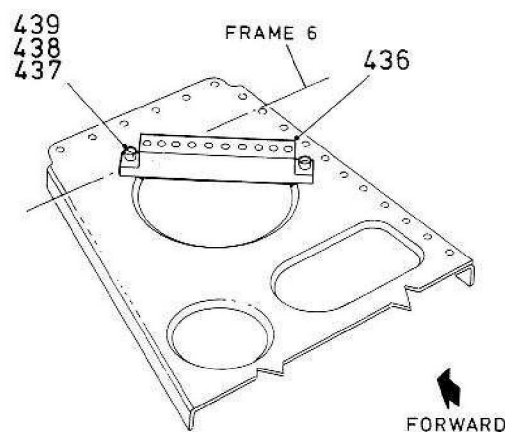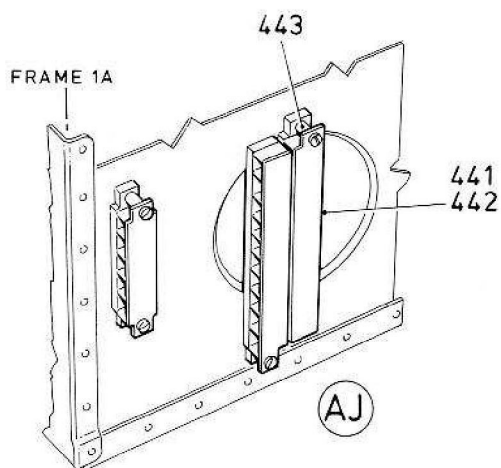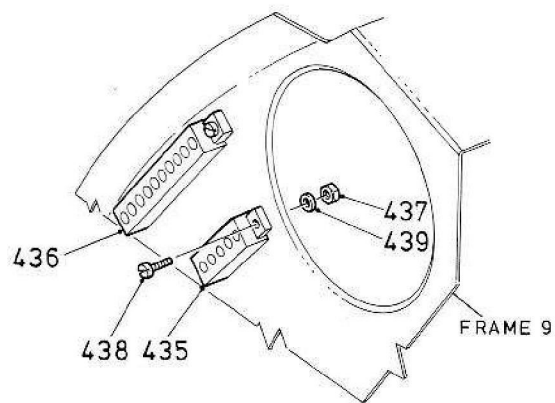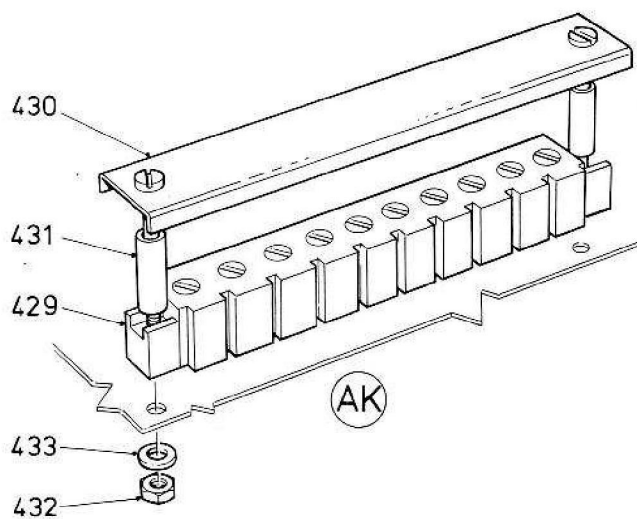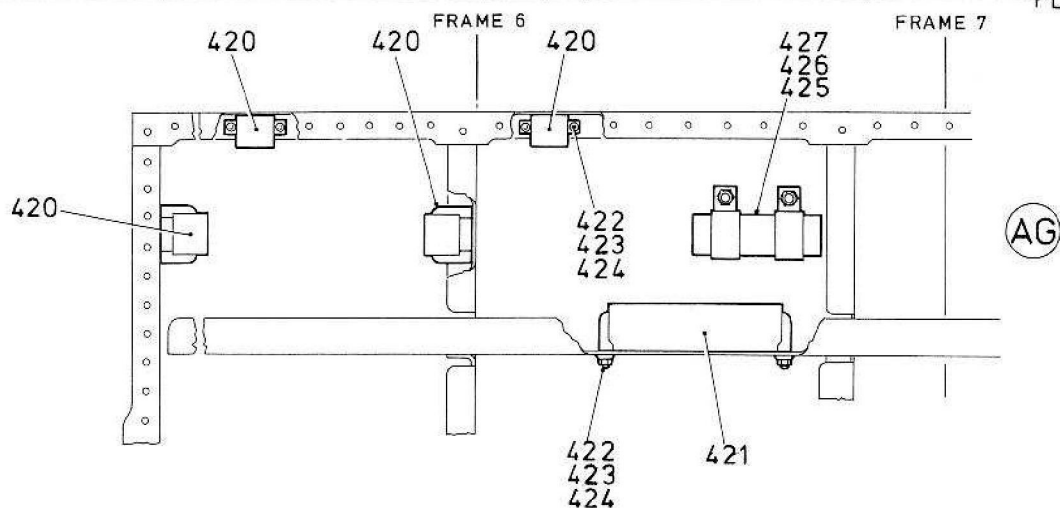

FORWARD

