

FLYING CONTROLS IN COCKPIT

Part Number	Description	No.	Matl. Spec.	Plate No.
		Off		
EG4.45.103	FLYING CONTROLS IN COCKPIT, ASSEMBLY (MOD 4799) Spares for:—	—	—	DA1/27
L3/5578GF116	. CHARGE, H.E. emergency	1	—	DA1/3
EG4.45.107	. CONTROLS ON PILOT'S FLOOR AND FLOOR FIXING, ASSEMBLY (MOD 4799) Spares for:—	—	—	DA1/28
EA3.45.247	. . AILERON BIAS, ASSEMBLY Spares for:—	1	—	DA4/34
E.E.Co. LTD BRADFORD 5W/4520730	. . . ACTUATOR, linear, Type 259 Attaching parts for Ref 5W/4520730:—	1	—	DA4/33
EA6.45.345	. . . Bolt, shouldered, at angle end	1	S92	DA4/18
A25/3E	. . . Bolt, 1/4" BSF at lever end	1	—	DA4/16
A27ES	. . . Nut, slotted, 1/4" BSF	2	—	DA4/27
SP90C7	. . . Pin, split, 1/16" dia	2	—	DA4/30
EA6.45.337	. . . ANGLE	1	L72	DA4/17
EA6.45.338	. . . ANGLE Attaching parts for EA6.45.337 and EA6.45.338:—	1	L72	DA4/32
A25/2C	. . . Bolt, 2BA	2	—	DA4/31
A25/1C	. . . Bolt, 2BA	4	—	DA4/26
AGS2001C1/66	. . . Nut, stiff, 2BA	6	—	DA4/20
SP13C	. . . Washer	4	—	DA4/21
AGS899/4	. . . COLLAR	1	—	DA4/22
SP4Y/D5	. . . PIN, 1/4" dia	1	—	DA4/23
SP90C5	. . . PIN, split, 1/16" dia	1	—	DA4/24
SP8Y16	. . . ROLLER	1	—	DA4/25
EA6.45.335	. . . TUBE, torque and levers, assembly Attaching parts for EA6.45.335:—	1	—	DA4/14
EA6.45.343	. . . Bolt, shouldered	1	S92	DA4/13
EA6.45.341	. . . Bush, oilite	2	—	DA4/19
A27ES	. . . Nut, slotted, 1/4" BSF	1	—	DA4/28
SP90C7	. . . Pin, split, 1/16" dia	1	—	DA4/29
SP42G	. . . Washer, tab	1	—	DA4/15
EG4.45.105	. . COLUMN, CONTROL PILOT'S ASSEMBLY (MOD 4799) (PRE—MOD 4956) (For Aircraft Not Embodying Mod 5100) (Make from Part No. EG4.45.5 Ref 34327) (Supplied to drg EA3.00.5158 for spares purposes)	1	—	DA2/1
EG4.45.109	. . COLUMN, CONTROL, PILOT'S ASSEMBLY (MOD 4956) (For Aircraft Embodying Mod 5100)	1	—	

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
		Spares for:—			
HOFFMANN T17	. . .	BEARING, ballrace, aileron control	1	—	DA3/53
HOFFMANN T25	. . .	BEARING, ballrace, pilot's hand grip	1	—	DA3/39
EA6.45.291	. . .	BLOCK, brake cable, adjusting	1	DTD683	DA2/3
		Attaching parts for EA6.45.291:—			
AS1242/8C	. . .	Bolt, csk. head 2BA	1	—	DA2/2
A27CS	. . .	Nut, slotted, 2BA	1	—	DA2/14
SP90C7	. . .	Pin, split, $\frac{1}{16}$ " dia	1	—	DA2/13
A33C24	. . .	Screw, csk. head 2BA	2	—	DA2/22
SP15C	. . .	Washer	1	—	DA2/17
703-2-00244	. . .	BLOCK, terminal	1	—	
		Attaching parts for 703-2-00244:—			
AGS2001B1	. . .	Nut, 4BA	2	—	
Z28426	. . .	Pillar, fixing	2	—	
SP13B	. . .	Washer	2	—	
AS1248/ $\frac{1}{2}$ G	. . .	BOLT, mush. head, $\frac{5}{16}$ " BSF	2	—	DA3/39A
EB6.81.877	. . .	BRACKET, clip	1	—	DA3/16
EB6.81.2253	. . .	BRACKET, switch	1	—	DA3/21
		Attaching parts for EB6.81.2253:—			
AGS2001B1	. . .	Nut, stiff, 4BA	2	—	DA3/21A
A31B14	. . .	Screw, cheese head, 4BA	2	—	DA3/66
A31B12	. . .	Screw, cheese head, 4BA	1	—	DA3/65
SP13B	. . .	Washer	2	—	DA3/65A
SP10B	. . .	Washer	1	—	DA3/65B
SP47B	. . .	Washer, spring	1	—	DA3/65C
EA1.45.107	. . .	BUSH, main bearing attached to bottom casting	1	L65	DA2/4
EB7.81.1165	. . .	CABLE, assembly N69B	1	—	
EA3.45.473	. . .	CABLE, brake	1	—	DA3/26
		Attaching parts for EA3.45.473:—			
AGS899/2	. . .	Collar	1	—	DA3/19
SP4Y/B9	. . .	Pin, shackle, $\frac{3}{16}$ " dia	1	—	DA3/31
SP90C5	. . .	Pin, split, $\frac{1}{16}$ " dia	1	—	DA3/17
AS3180/5B	. . .	CLIP	1	—	DA3/67
		Attaching parts for AS3180/5B:—			
AGS2001B4	. . .	Nut, stiff, 4BA	1	—	DA3/67A
A40B12	. . .	Screw, 4BA	1	—	DA3/67B
EB7.45.71	. . .	COLUMN, CONTROL, SUB-ASSEMBLY	1	—	DA3/50
		Spares for:—			
EA6.45.247	. . .	CASTING, top	1	—	DA3/50A
EB7.45.73	. . .	DUCT, cable	1	—	DA3/50B
EA1.45.1021	. . .	TUBE	1	—	DA3/50C
EA1.45.91	. . .	YOKE	1	—	DA3/50D

R
R

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.45.125	.	.	.	.	CONTROL, ELEVATOR, SUB-ASSEMBLY (PRE-MOD 4496)		1	—	
EA3.45.539	.	.	.	.	CONTROL, ELEVATOR, SUB-ASSEMBLY (S.O.O.—MOD 4496)		1	—	DA2/35
HOFFMANN					Spares for:—				
T33	.	.	.	.	BEARING, ballrace		1	—	DA2/31
EA1.45.177	.	.	.	.	DIAPHRAGM, ballrace housing mounting		1	—	DA2/33
EA1.45.175	.	.	.	.	HOUSING, ballrace		1	L45	DA2/21
					Attaching parts for EA1.45.175:—				
AS1242/3C	.	.	.	.	Bolt, 2BA		8	—	DA2/21A
A27CS	.	.	.	.	Nut, slotted, 2BA		8	—	DA2/21B
SP90C5	.	.	.	.	Pin, split, 1/16" dia 1		8	—	DA2/21C
SP15C	.	.	.	.	Washer		8	—	DA2/21D
EA1.45.133	.	.	.	.	LEVER, OPERATING, ELEVATOR, GROUP (PRE-MOD 4496)		1	—	
EA3.45.523	.	.	.	.	LEVER, OPERATING, ELEVATOR, GROUP (S.O.O.—MOD 4496)		1	—	DA2/10
					Consisting of:—				
SKEFKO									
CBA2	.	.	.	.	BALLRACE		1	—	DA2/8
EEAS3D	.	.	.	.	HOUSING, ballrace		1	L65	DA2/9
EA1.45.603	.	.	.	.	LEVER (Pre-Mod 4496)		—	—	
EA1.45.519	.	.	.	.	LEVER (S.O.O.—Mod 4496)		—	L65	DA2/24
EEAS4/20C	.	.	.	.	WASHER, packing		2	L72	DA2/7
					Attaching parts for EA3.45.523 and EA1.45.133:—				
AS1242/5E	.	.	.	.	Bolt, psk. head, 1/4" BSF		8	—	DA2/7A
A27ES	.	.	.	.	Nut, 1/4" BSF		8	—	DA2/7B
SP90C5	.	.	.	.	Pin, split, 1/16" dia		8	—	DA2/7C
SP16E	.	.	.	.	Washer		8	—	DA2/7D
EEAS37/14A	.	.	.	.	NIPPLE, 2BA (Pre-Mod 4496)		12	S96	
EA3.45.515	.	.	.	.	RING, clamp (S.O.O.—Mod 4496)		1	—	DA2/12A
EA3.45.517	.	.	.	.	RING, clamp (S.O.O.—Mod 4496)		1	—	DA2/12B
EA1.45.173	.	.	.	.	SLEEVE, lever mounting		1	L65	DA2/32
EA1.45.105	.	.	.	.	SOCKET, mounting, elevator control to control column		1	L65	DA2/11
EEAS38/2A	.	.	.	.	SPOKE, 4BA (Pre-Mod 4496)		6	S96	
EA1.45.171	.	.	.	.	TUBE, torque, connecting socket and lever, 2" o/d x 14 SWG		1	T4	DA2/12
					Attaching parts for EA1.45.171:—				
A59/22G	.	.	.	.	Bolt, 7/16" BSF		6	—	DA2/19
A27GS	.	.	.	.	Nut, slotted, 7/16" BSF		6	—	DA2/20
SP90C7	.	.	.	.	Pin, split, 1/16" dia		6	—	DA2/20A
SP16G	.	.	.	.	Washer		6	—	DA2/20B
AS1903G16	.	.	.	.	Washer		6	—	DA2/20C
					Attaching parts for EA3.45.539 and EA1.45.125:—				
EA1.45.1153	.	.	.	.	Bolt		1	—	DA2/16
A27JS	.	.	.	.	Nut, slotted, 3/8" BSF		1	—	DA2/18
SP90C7	.	.	.	.	Pin, split, 1/16" dia		1	—	DA2/15

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
703-1-00265	.	.	.	COVER, terminal block			1	—	
Z11384	.	.	.	FERRULE, cut			2	—	
EA1.45.1025	.	.	.	FORK-END			1	S96	DA3/63
EEAS37/1A	.	.	.	Attaching parts for EA1.45.1025:—					
EEAS38/1A	.	.	.	Nipple			4	S96	DA3/60
	.	.	.	Spoke			2	S96	DA3/61
EA6.45.267	.	.	.	GEAR, bevel (Supplied with tube EA1.45.971)			1	—	DA3/46
SP40A4	.	.	.	GROMMET			3	—	DA3/46A
EA6.45.265	.	.	.	HOUSING, control column			1	S95	DA3/36
	.	.	.	Attaching parts for EA6.45.265:—					
AS1242/8C	.	.	.	Bolt, mush. head 2BA			3	—	DA3/44
AGS2002C1	.	.	.	Nut, stiff, 2BA			3	—	DA3/24
EA1.45.1059	.	.	.	LABEL, quadrant to mesh centrally with control unit			1	—	DA3/38
EB6.45.37	.	.	.	LABEL			1	—	DA3/38A
	.	.	.	Attaching parts for EB6.45.37:—					
A31B12	.	.	.	Screw, cheese head, 4BA			3	—	DA3/33B
SP47B	.	.	.	Washer, spring			3	—	DA3/38C
EB6.45.61	.	.	.	LEVER, brake			1	Mag-Alloy	DA3/1
	.	.	.	Attaching parts for EB6.45.61:—					
AGS899/2	.	.	.	Collar, $\frac{3}{16}$ " dia			2	—	DA3/9
SP4Y/B14	.	.	.	Pin, shackle, $\frac{3}{16}$ " dia			1	—	DA3/3
SP4YB15	.	.	.	Pin, shackle, $\frac{3}{16}$ " dia			1	—	DA3/11
SP90C5	.	.	.	Pin, split, $\frac{1}{16}$ " dia			2	—	DA3/2
SP15C	.	.	.	Washer			1	—	DA3/10
EA6.45.215	.	.	.	LEVER, BRAKE CABLE OPERATING ASSEMBLY			1	—	DA3/25
	.	.	.	Consisting of:—					
EA6.45.217	.	.	.	CAP, for collar			1	DTD126	DA3/30
EA6.45.219	.	.	.	COLLAR, fulcrum pin retaining			1	DTD683	DA3/32
EA6.45.221	.	.	.	LEVER			1	—	DA3/32A
EA6.45.222	.	.	.	LEVER			1	—	DA3/32B
EA6.45.223	.	.	.	PIECE, distance			1	—	DA3/32C
SP90B3	.	.	.	PIN, split, $\frac{3}{64}$ " dia			2	—	DA3/32D
SP90B5	.	.	.	PIN, split, $\frac{3}{64}$ " dia			1	—	DA3/32E
SP15C	.	.	.	WASHER			2	—	DA3/32F
	.	.	.	Attaching parts for EA6.45.215:—					
AGS899/2	.	.	.	Collar, $\frac{3}{16}$ " dia			1	—	DA3/27
SP4Y/B9	.	.	.	Pin, shackle, $\frac{3}{16}$ " dia			1	—	DA3/29
SP90C5	.	.	.	Pin, split, $\frac{1}{16}$ " dia			1	—	DA3/29
EA3.45.257	.	.	.	LUG, brake lever			1	DTD683	DA3/4
	.	.	.	Attaching parts for EA3.45.257:—					
EEAS1/1C	.	.	.	Screw, csk. head, 2BA			2	—	DA3/4A
EA6.45.249	.	.	.	MECHANISM, BRAKE OPERATING, ASSEMBLY			1	—	DA3/45
	.	.	.	Consisting of:—					
EA6.45.285	.	.	.	PIN, fulcrum			1	S92	DA3/52
EA6.45.255	.	.	.	PLUG, screwed, spring retaining			1	DTD683	DA3/64
EA6.45.253	.	.	.	PLUNGER			1	L65	DA3/59
EA6.45.251	.	.	.	SHAFT			1	S96	DA3/49
EA1.45.679	.	.	.	SPRING			1	DTD215	DA3/62

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA6.45.269	.	.	.	NUT, clamp, ballrace retaining			1	DTD215	DA3/40
EA6.45.271	.	.	.	NUT, clamp, ballrace retaining			1	DTD683	DA3/37
EA6.45.263	.	.	.	NUT, clamp, ballrace retaining bevel gear			1	DTD683	DA3/41
A27NT	.	.	.	NUT, thin, 1/2" BSF			1	—	DA3/41A
EA1.45.153	.	.	.	PLATE, cover at bottom casting			2	L72	DA2/29
				Attaching parts for EA1.45.153:—					
A31B12	.	.	.	Screw, cheese head, 4BA			2	—	DA2/27
SP47B	.	.	.	Washer, spring			2	—	DA2/26
EA6.45.273	.	.	.	PLATE, cover, brake mechanism			1	DTD683	DA/43
				Attaching parts for EA6.45.273:—					
A33C16	.	.	.	Screw, csk, hd, 2 BA			4	—	DA3/43A
EB6.45.33	.	.	.	PLATE, cover top, assembly			1	—	DA3/23
EA3.45.259	.	.	.	PLATE, lock brake			1	L72	DA3/20
EA3.45.261	.	.	.	PLATE, ring brake mechanism retaining			1	L72	DA3/15
				Attaching parts for EA3.45.261:—					
EEAS1/1C	.	.	.	Screw, csk. head, 2 BA			2	—	DA3/5
EB6.81.3115	.	.	.	PLATE, switch, F.95 camera (Mod 3143)			1	L72	DA3/68
				Attaching parts for EB6.81.3115:—					
A31B12	.	.	.	Screw, cheese head, 4BA			3	—	DA3/69
SP47B	.	.	.	Washer			3	—	DA3/70
SP10B	.	.	.	Washer			3	—	DA3/70A
EA6.45.287	.	.	.	PLUNGER, brake mechanism, operating			1	L65	DA3/12
EA3.45.265	.	.	.	RING, locking, brake mechanism			1	DTD683	DA3/18
2C3.16S970	.	.	.	SCREW, conduit clamping			2	—	DA3/18A
EEAS27/8/4B	.	.	.	SHIM			4	—	DA3/42
EA1.45.123	.	.	.	SOCKET, conduit			1	L65	DA3/55
EA1.45.1029	.	.	.	SPHERE, control column, locking			1	DTD265	DA2/5
EA3.45.263	.	.	.	SPRING, locking plate, compression			1	DTD215	DA3/22
EB6.81.859	.	.	.	STOP, AIRBRAKE SWITCH OVERSHOOT, ASSEMBLY			1	—	DA3/8
				Spares for:—					
EB6.81.863	.	.	.	BASE			1	—	DA3/8A
EB6.81.865	.	.	.	PIECE, packing			1	—	DA3/8B
EB6.81.873	.	.	.	RAIL, guide			2	—	DA3/8C
EB6.81.861	.	.	.	SLIDE			1	—	DA3/8D
EB6.81.871	.	.	.	SPRING			1	—	DA3/8E
EB6.81.869	.	.	.	SPRING, guide			1	—	DA3/8F
EB6.81.867	.	.	.	STUD			1	—	DA3/8G
				Attaching parts for EB6.81.859:—					
A33B12	.	.	.	Screw, csk. head, 4BA			2	—	DA3/8H
AGS2036B	.	.	.	Washer, locking			2	—	DA3/8J
HELLERMANN HV3341	.	.	.	STRAP			QR	—	DA3/8K
HELLERMANN NV3342	.	.	.	STUD			1	—	DA3/8L
EA1.45.87	.	.	.	SUPPORT, CONTROL COLUMN, CASTING ASSEMBLY (PRE MOD 5028 AND 4956)			1	—	DA2/46
EA3.45.695	.	.	.	SUPPORT, CONTROL COLUMN, CASTING ASSEMBLY (MOD 5028) (PRE MOD 4956)			1	—	
EA3.45.5095	.	.	.	SUPPORT, CONTROL COLUMN, CASTING ASSEMBLY (MOD 4956) (PRE MOD 5028)			1	—	
EA3.45.5097	.	.	.	SUPPORT, CONTROL COLUMN, CASTING ASSEMBLY (MOD 4956 AND 5028)			1	—	

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
		Spares for:—			
HOFFMANN T17		BEARING, ballrace, main control column	2	—	DA2/28
HOFFMANN T25		BEARING, ballrace, between sleeve and support casting	2	—	DA2/23
EA1.45.93		CASTING, control column support (Pre Mod 5028)	1	DTD289	DA2/25
EA3.45.711		CASTING, control column support (Mod 5028)	1	—	
EA1.45.1027		FORK-END	1	S96	DA2/6
EA1.45.961		LEVER, AILERON, OPERATING ASSEMBLY	1	—	DA2/50
		Spares for:—			
SKEFKO CBA2		BEARING, ballrace	1	—	DA2/43
AGS798E		EYE-BOLT	1	—	DA2/53
		Attaching parts for AGS798E:—			
EA1.45.483		Collar	1	L64	DA2/52
A27EP		Nut, 1/4" BSF	1	—	DA2/47
EEAS3D		HOUSING, ballrace	1	L65	DA2/44
EA3.45.959		LEVER, operating	1	DTD683	DA2/51
EEAS4/20C		WASHER, packing	2	L72	DA2/41
		Attaching parts for EA1.45.961:—			
EA1.45.1033		Bolt, special	3	S96	DA2/36
AS1242/4C		Bolt, 2BA	1	—	DA2/49
A27CP		Nut, 2BA	4	—	DA2/40
SP15C		Washer	1	—	DA2/42
EEAS37/1A		NIPPLE, 3/16" dia (Pre Mod 4956)	4	S96	DA2/38
A27CT		NUT, thin 2BA	2	—	DA2/30
EA1.45.103		SLEEVE, sprocket mounting (Pre Mod 4956)	1	L65	DA2/45
EA3.45.5099		SLEEVE (Mod 4956)	1	L65	
		Attaching parts for EA3.45.5099:—			
EA3.45.5103		Bolt, 2BA	2	S97	
A27CS		Nut, 2BA	2	—	
SP90C5		Pin, split	2	—	
EA3.45.5101		Washer, saddle	4	L65	
SP13C		Washer	2	—	
EEAS38/1A		SPOKE (Pre Mod 4956)	2	S96	DA2/48
EA1.45.619		SPROCKET	1	L65	DA2/39
EA1.45.165		STUD, mounting	2	DTD126A	DA2/37
EA1.45.993		TUBE, distance, between sprocket and casting	1	T4	DA2/34
D10001		SWITCH, 3-way	1	—	DA3/7
		Attaching parts for D10001:—			
A4088		Screw, round head, 4BA	2	—	DA3/7A
AGS2035B		Washer, shakeproof	2	—	DA3/7B
XD791		SWITCH, SP, No. 3	1	—	DA3/13
		Attaching parts for XD791:—			
A32B8		Screw, round head, 4BA	2	—	DA3/14
SP10B		Washer	2	—	DA3/14A
SP47B		Washer, spring	2	—	DA3/14B

FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.45.971	. . .	TUBE, INNER, AILERON OPERATING				ASSEMBLY	1	—	DA3/57
EA9.00.159	. . .	TUBE, INNER, AILERON OPERATING				ASSEMBLY (Supplied with bevel gear EA6.45.267 Spares for:—	1	—	
HOFFMAN									
T29		BEARING, ballrace					1	—	DA3/33
EEAS37/13A		NIPPLE, 3/16" dia					4	S96	DA3/48
EA1.45.101		QUADRANT					1	—	DA3/48A
EEAS38/1A		SPOKE					2	S96	DA3/47
EA1.45.1023		TUBE, operating					1	T45	DA3/58
EA3.45.413		WASHER, special					1	Alumn	DA3/35
EA6.45.261		WASHER, special					1	DTD683	DA3/34
SP47G		WASHER					2	—	DA3/24A
DUNLOP									
AC14294	. . .	WHEEL, control, assembly				(for spares see AP4515C, Vol 3 Part 1, Sect, Chap 37)	1	—	DA3/54
EA3.45.109	. .	COVER, sealing, pilot's control column					1	—	DA8/14
EA3.45.7	. .	PEDALS, PILOT'S RUDDER CONTROL				ASSEMBLY (PRE-MOD 4956) (For Aircraft Not Embodying Mod 5100)	1	—	DA6/49
EA3.45.5227	. .	PEDESTAL, PILOT'S RUDDER CONTROL,				ASSEMBLY (MOD 4956) (For Aircraft Embodying Mod 5100) Consisting of:—	1	—	
EA3.45.57	. . .	BEARING, c/w ballrace and housing				Pre-Mod 4956)	1	—	DA6/48
EA3.45.5085	. . .	BEARING, c/w ballrace and housing				(Mod 4956) Attaching parts for EA3.45.5085:—	1	—	
AS1242/3C	. . .	Bolt, 2BA					8	—	
A27CS	. . .	Nut, 2BA					8	—	
SP90C8	. . .	Pin, split					8	—	
EA3.45.5089	. . .	Ring, clamp					1	L65	
SP13C	. . .	Washer					8	—	
A25/4E	. . .	BOLT, 1/4" BSF					8	MS	DA6/48A
EA3.45.457	. . .	CABLE, HYDRAULIC BRAKE CONTROL				ASSEMBLY Spares for:—	1	—	DA5/20
EA3.45.461		BLOCK, pulley support				Attaching parts for EA3.45.461:—	1	DTD683	DA5/3
EA3.45.465		Block tapped					1	S92	DA5/17
EA3.45.467		Block tapped					1	S92	DA5/4
A25/1C		Bolt 2BA					4	—	DA5/1
A25/1/8B		BOLT, 4BA					1	—	DA5/6
EA3.45.171		BRACKET, lower pulley and cable guard				Attaching parts for EA3.45.171:—	1	—	DA5/21
A25/1C		Bolt, 2BA					2	—	DA5/16
A27CP		Nut, 2BA					2	—	DA5/13
EA3.45.173		BRACKET, upper pulley				Attaching parts for EA3.45.173:—	1	L72	DA5/8
A25/1C		Bolt, 2BA					2	—	DA5/12
A27CP		Nut, 2BA					2	—	DA5/7

CONTROLS

AP101B-0415-3A

FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.45.463	.	.	.	.	GUIDE, cable		1	S92	DA5/14
A25/4B	.	.	.	.	Attaching parts for EA3.45.463:—		1	—	DA5/11
SP13B	.	.	.	.	Bolt, 4BA		1	—	DA5/10
	.	.	.	.	Washer				
EA3.45.459	.	.	.	.	PULLEY, assembly, at control column		1	—	DA5/18
A25/7E	.	.	.	.	Attaching parts for EA3.45.459:—		1	—	DA5/2
EA3.45.469	.	.	.	.	Bolt, 1/4" BSF		2	DTD683	DA5/5
	.	.	.	.	Washer				
AS111	.	.	.	.	PULLEY, at brake control valve		1	—	DA5/15
A25/5E	.	.	.	.	Attaching parts for AS111:—		1	—	DA5/9
A27ES	.	.	.	.	Bolt, 1/4" BSF		1	—	DA5/22
SP90C7	.	.	.	.	Nut, slotted, 1/4" BSF		1	—	DA5/23
SP13E	.	.	.	.	Pin, split, 1/16" dia		1	—	DA5/19
	.	.	.	.	Washer				
SP13B	.	.	.	.	WASHER		1	—	DA5/19A
EA3.45.63	.	.	.	.	LEVER AND SPROCKET ASSEMBLY		1	—	DA6/52
	.	.	.	.	(PRE-MOD 4956)				
EA3.45.5073	.	.	.	.	LEVER AND SPROCKET ASSEMBLY		1	—	
or	.	.	.	.					
EA3.45.5075	.	.	.	.	LEVER AND BOSS ASSEMBLY (MOD 4956)		1	—	
	.	.	.	.	(Alternative to EA3.45.5073)				
	.	.	.	.	Spares for:—				
SKEFCO	.	.	.	.					
CBA2	.	.	.	.	BALLRACE (PRE-MOD 4956)		1	—	DA6/52A
EEAS3D	.	.	.	.	HOUSING, ballrace (PRE-MOD 4956)		1	—	DA6/52B
EA1.45.307	.	.	.	.	LEVER (PRE-MOD 4956)		1	—	DA6/52C
EA3.45.5217	.	.	.	.	LEVER ASSEMBLY (MOD 4956)		1	—	DA6/53
	.	.	.	.	Spares for:—				
SKEFCO	.	.	.	.					
CBA2	.	.	.	.	BALLRACE		1	—	DA6/52A
EEAS3D	.	.	.	.	HOUSING, ballrace		1	—	DA6/52B
EA3.45.5077	.	.	.	.	LEVER		1	—	DA6/54
EEAS4/20C	.	.	.	.	WASHER, packing		2	—	DA6/52E
EA3.45.5083	.	.	.	.	RING, clamping (MOD 4956)		1	—	DA6/55
EA3.45.59	.	.	.	.	SPROCKET (PRE-MOD 4956)		1	—	DA6/52D
EA3.45.5079	.	.	.	.	SPROCKET (MOD 4956)		1	—	DA6/56
or	.	.	.	.					
EA3.45.5081	.	.	.	.	BOSS (MOD 4956) (Alternative to EA3.45.5079)		1	—	DA6/57
	.	.	.	.	Attaching parts for EA3.45.5079 or EA3.45.5081:—				
AS1242/10C	.	.	.	.	Bolt, 2BA		10	—	DA6/58
A27CS	.	.	.	.	Nut, slotted, 2BA		10	—	DA6/59
SP90C5	.	.	.	.	Pin, split		10	—	DA6/60
SP13C	.	.	.	.	Washer		10	—	DA6/61
EEAS4/20C	.	.	.	.	WASHER, packing (PRE-MOD 4956)		2	—	DA6/52E
EEAS37/8A	.	.	.	.	Attaching parts for EA3.45.63:—				
EEAS38/2A	.	.	.	.	Nipple, 4BA (PRE-MOD 4956)		4	S96	DA6/50
	.	.	.	.	Spoke, 4BA (PRE-MOD 4956)		2	S11	DA6/51
EEAS95/16G	.	.	.	.	Attaching parts for EA3.45.5073 or EA3.45.5075:—				
A27GS	.	.	.	.	Bolt, 7/16" BSF (MOD 4956)		2	—	DA6/62
SP90C8	.	.	.	.	Nut, 7/16" BSF (MOD 4956)		2	—	DA6/63
EA3.45.5091	.	.	.	.	Pin, split (MOD 4956)		2	—	DA6/64
SP13G	.	.	.	.	Washer, saddle (MOD 4956)		4	—	DA6/45
	.	.	.	.	Washer (MOD 4956)		2	—	DA6/66

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
R EA3.45.253						PEDALS, PILOT'S RUDDER CONTROL ASSEMBLY Spares for:—	1	—	DA6/47
R AS2183						ARM, rudder bar assembly Spares for:—	2	—	DA6/4
R AS2187						EYE-BOLT Attaching parts for AS2187:—	1	—	DA6/21
R A24JS						Nut, slotted, 7/8" BSF	1	—	DA6/19
R SP90C7						Pin, split Attaching parts for AS2183:—	1	—	DA6/30
R AS2180						Bush, upper	1	—	DA6/15
R AS2226						Bush, lower	1	—	DA6/35
R AS2224						Cap, nut	1	—	DA6/3
R SP90E10						Pin, split, 3/32" dia	1	—	DA6/5
R AS2181						Shim	1	—	DA6/13
HOFFMAN T21						BEARING, ballrace	1	—	DA6/42
AS2175						CAP, worm adjusting	2	—	DA6/25
AS2178						COLLAR, worm adjusting Attaching parts for AS2178:—	1	—	DA6/26
SP29H10						Pin, taper	1	—	DA6/27
AS2231						LINK, adjusting Attaching parts for AS2231 (per pair):—	4	—	DA6/20
AS2196						Bolt, special	2	—	DA6/14
AS2197						Nut, special	2	—	DA6/23
SP90C5						Pin, split, 1/16" dia	2	—	DA6/28
AS2206						LINK-BAR, assembly Attaching parts for AS2206 (per pair):—	2	—	DA6/16
AS2202						Bolt, pivot	1	—	DA6/29
AS2203						Bolt, pivot	2	—	DA6/45
A24CS						Nut, slotted, 2BA	3	—	DA6/18
A24EP						Nut, 1/4" BSF	3	—	DA6/41
SP90C5						Pin, split, 1/16" dia	3	—	DA6/17
SP14C						Washer	3	—	DA6/22
SP15E						Washer	3	—	DA6/39
AS2198						PEDAL ASSEMBLY (PRE-MOD 5100)	1	—	DA6/44.
AS46745						PEDAL ASSEMBLY (ALT. R60/49—MOD 5100) Spares for:—	1	—	
AS2213						PEDAL	1	—	DA6/44B
AS2219						PLATE, foot	1	—	DA6/44A
AS4568						STIRRUP (Pre-Mod 5100)	1	—	DA6/34
AS46744						STIRRUP (Alt. R60/49—Mod 5100) Attaching parts for plate and stirrup:—	1	—	
AS4565/2C						Bolt, round head, 2BA	4	—	DA6/34A
A29CP						Nut, 2BA	4	—	DA6/34B
AS2199						PEDAL ASSEMBLY (PRE-MOD 5100)	1	—	DA6/1
AS46746						PEDAL ASSEMBLY (ALT. R60/49—MOD 5100) Spares for:—	1	—	
AS2215						PEDAL	1	—	DA6/18
AS2219						PLATE, foot	1	—	DA6/1A
AS4568						STIRRUP (Pre-Mod 5100)	1	—	DA6/2
AS46744						STIRRUP (Alt. R60/49—Mod 5100) Attaching parts for plate and stirrup:—	1	—	
AS4565/2C						Bolt, round head, 2BA	4	—	DA6/2A
A29/CP						Nut, 2BA	4	—	DA6/2B
AS2209						Attaching parts for pedal assembly:— Bolt, pivot	1	—	DA6/38
A24JS						Nut, slotted, 3/8" BSF	1	—	DA6/32
AS2210						Piece, distance	2	—	DA6/33
SP90C7						Pin, split, 1/16" dia	1	—	DA6/31

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
AS2191	.	.	.	.	PEDESTAL		1	—	DA6/46
AS2189	.	.	.	.	PLATE, support		1	—	DA6/40
A25/1C	.	.	.	.	Attaching parts for AS2189:—				
AS2242	.	.	.	.	Bolt, 2BA		4	—	DA6/36
	.	.	.	.	Washer, tab		1	—	DA6/37
AS2179	.	.	.	.	PLATE, wheel adjustment		1	—	DA6/11
AS2412	.	.	.	.	SLEEVE, screwed		1	—	DA6/8
AS2411	.	.	.	.	WORM, adjusting (supplied in pairs)		1	—	DA6/9
	.	.	.	.	Attaching parts for AS2412 and AS2411:—				
AS3399	.	.	.	.	Bolt, taper		2	—	DA6/24
A24ES	.	.	.	.	Nut, slotted, 1/4" BSF		2	—	DA6/12
SP90C7	.	.	.	.	Pin, split 1/16" dia		2	—	DA6/6
AS3398	.	.	.	.	Washer		2	—	DA6/7
AS2188	.	.	.	.	SPINDLE		1	—	DA6/43
AS2177	.	.	.	.	WHEEL, adjusting		1	—	DA6/10
EA3.45.249	.	.	.	.	UNIT, BRAKE CONTROL ASSEMBLY		1	—	DA5/24
	.	.	.	.	Spares for:—				
A25/1C	.	.	.	.	BOLT, 2BA		4	—	DA5/24A
EA3.45.251	.	.	.	.	BRACKET, support		1	L72	DA5/45
	.	.	.	.	Attaching parts for EA3.45.251:—				
A25/1C	.	.	.	.	Bolt, 2BA		6	—	DA5/44
EA3.45.189	.	.	.	.	CAM, plate guide		1	DTD683	DA5/43
	.	.	.	.	Attaching parts for EA3.45.189:—				
A25/4C	.	.	.	.	Bolt, 2BA		2	—	DA5/36
AS1242/4C	.	.	.	.	Bolt, csk. hd, 2BA		1	—	DA5/38
SP47C	.	.	.	.	Washer, spring		2	—	DA5/40
EA3.45.191	.	.	.	.	LEVER, brake valve operating		1	S96	DA5/33
	.	.	.	.	Attaching parts for EA3.45.191:—				
A25/6C	.	.	.	.	Bolt, 2BA		1	—	DA5/35
A27/CS	.	.	.	.	Nut, slotted 2BA		1	—	DA5/25
SP90C7	.	.	.	.	Pin, split, 1/16" dia		1	—	DA5/30
EA3.45.193	.	.	.	.	LINK, TIE, BETWEEN VALVE		1	—	DA5/42
	.	.	.	.	OPERATING LEVER AND RUDDER				
	.	.	.	.	CONTROL LEVER, ASSEMBLY				
	.	.	.	.	Spares for:—				
EA3.45.187	.	.	.	.	FORK-END		1	—	DA5/27
SP3Y413L	.	.	.	.	FORK-END		1	—	DA5/34
A27/CT	.	.	.	.	NUT, thin 2BA		1	—	DA5/28
A27/CTL	.	.	.	.	NUT, thin, L.H., thread, 2BA		1	—	DA5/29
EA3.45.193A	.	.	.	.	ROD		1	—	DA5/41
	.	.	.	.	Attaching parts for EA3.45.193:—				
AGS899/2	.	.	.	.	Collar		2	—	DA5/26
EA3.45.195	.	.	.	.	Pin, special		1	S96	DA5/37
SP4Y/B11	.	.	.	.	Pin, shackle		1	—	DA5/32
SP90C7	.	.	.	.	Pin, split, 1/16" dia		2	—	DA5/31
SP15C	.	.	.	.	Washer		1	—	DA5/39

CONTROLS

FLYING CONTROLS IN COCKPIT

Ref. No.	Part No.	Description	No. off	Mtl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
28W/9416643 96	SP47C EA1.45.477 EA3.45.477	 WASHER, spring . . . SPRING, tension, between aileron control and tension lever . . . COVER, PRESSURE BOX, ASSEMBLY Spares for:—	4 1 1	— DTD215 —	C C —	DA5/39A DA4/35 DA7/38
21349 21348	EA3.45.479 EA3.45.475 EA3.45.21	. . . COVER, access . . . PANEL . . . MOUNTING, AILERON, ELEVATOR AND RUDDER LEVERS AT PRESSURE BULKHEAD, ASSEMBLY Spares for:—	1 1 1	— — —	B B —	DA7/28 DA7/34 DA7/15
8195 8196	EA3.45.121 EA3.45.123	. . . BAR, stop, top . . . BAR, stop, bottom Attaching parts for EA3.45.121 and EA3.45.123:—	1 1	DTD300 DTD300	C C	DA7/24 DA7/35
28D/9140644 28M/1012015 28W/9419404	A25/9C AGS2001C1/66 SP16C	. . . Bolt, 2BA . . . Nut, stiff, 2BA . . . Washer	4 4 4	— — —	C C C	DA7/20 DA7/31 DA7/29
1535 1534 8197 8198	EA3.45.27 EA1.45.1207 EA3.45.125 EA3.45.255	. . . BOLT, stop, control, levers . . . BOLT, stop, elevator, at pressure bulkhead . . . BRACKET, stop bar . . . BRACKET, stop bar Attaching parts for EA3.45.125 and EA3.45.255:—	5 1 6 2	— S96 — —	C C C C	DA7/32 DA7/33 DA7/27 DA7/21
28D/9133011 28D/9438920 28D/1214091 28M/1012015 28W/9419404	A25/2C A25/1C AS1242/2C AGS2001C1/66 SP16C	. . . Bolt, 2BA . . . Bolt, 2BA . . . Bolt, csk. hd, 2BA . . . Nut, stiff, 2BA . . . Washer	2 2 2 2 2	— — — — —	C C C C C	DA7/25 DA7/25A DA7/26 DA7/22 DA7/23
3878 109	EA3.45.23 EA1.45.343	. . . CASING, lever control . . . LEVER, CONTROL, ASSEMBLY (PRE—MOD 4489)	1 1	— —	B B	DA7/37
1439156	EA3.45.537	. . . LEVER, CONTROL, ASSEMBLY (MOD 4489 - S.O.O.) Spares for:—	1	—	B	DA7/1
111 33007	EA1.45.367 EA1.45.361	. . . DOWEL . . . END-PIECE, control lever mounting Attaching parts for EA1.45.361:—	3 2	S1 L65	C C	DA7/12 DA7/13
28D/9133011 28D/9133011 28D/1007976 28M/1012015 28W/9457834 28W/5086394 28W/9419475	A25/2C A25/2C AS1242/4C AGS2001C1/66 SP124D SP125D SP15/C	. . . Bolt, 2BA (Pre—Mod 4489) . . . Bolt, 2BA (Mod 4489) . . . Bolt, csk. hd, 2BA (Mod 4489) . . . Nut, stiff, 2BA . . . Washer (Mod 4489) . . . Washer (Mod 4489) . . . Washer (Pre—Mod 4489)	5 2 3 5 2 3 5	— — — — — — —	C C C C C C C	DA7/9 DA7/9A DA7/11 DA7/10 DA7/10A
24754 112	EA1.45.349 EA1.45.345	. . . HOUSING . . . LEVER, c/w ballrace Attaching parts for EA1.45.345:—	1 6	DTD289 —	C C	DA7/14 DA7/2
2739 28D/1215686 28M/9480017 28W/9419487 28W/9471273	EEAS13/2 A59/7E AGS2001E1/66 SP16E SP124E	. . . Bolt (Pre—Mod 4489) . . . Bolt, 1/4" BSF (Mod 4489) . . . Nut, stiff, 1/4" BSF . . . Washer (Pre—Mod 4489) . . . Washer (Mod 4489)	2 2 2 2 2	S96 — — — —	C C C C C	DA7/5 DA7/3 DA7/4

CONTROLS
FLYING CONTROLS IN COCKPIT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
1439241	EA3.45.535	 PIECE, packing (Mod 4489)	2	—	—	DA7/4A
1948	EA1.45.351	 RING, sealing, outboard	1	L45	C	DA7/17
1949	EA1.45.353	 RING, sealing, centre	1	L45	C	DA7/18
1950	EA1.45.355	 RING, sealing, inboard	1	L45	C	DA7/16
		Attaching parts for EA1.45.343 or EA3.45.537:—				
28D/1200119	A25/4C	. . . Bolt, 2BA	12	—	C	DA7/6
28D/9133012	A25/3C	. . . Bolt, 2BA	4	—	C	DA7/8
28M/1012015	AGS2001C1/66	. . . Nut, stiff, 2BA	16	—	C	DA7/7
28M/1007404	A27JT	. . . NUT, thin, 3/8" BSF locking stop bolt	6	—	C	DA7/30
113	EA3.45.25	. . . SEAL, rubber between control lever casing and pressure bulkhead	1	—	C	DA7/36
15013	EB6.45.11	. MOUNTING, ELEVATOR CONTROL LEVER ASSEMBLY (PRE—MOD 4496)	1	—	B/MR	DA1/23
1439280	EB6.45.187	. MOUNTING, ELEVATOR CONTROL LEVER, ASSEMBLY (MOD 4496—S.O.O.)	1	—	B/MR	
		Spares for:—				
	EA3.45.509	. . . ANGLE, reinforcing, 16G (Mod 4496—S.O.O.)	1	L73	LM	
2A/9500419	HOFFMANN					
42472	T17	. . . BEARING, ballrace	2	—	B	DA1/5
	EA3.45.103	. . . BOBBIN, lever mounting	1	DTD683	—	DA1/11
		Attaching parts for EA3.45.103:—				
1095	EEAS37/14A	. . . Nipple	4	S96	C	DA1/2
1571	EEAS38/2A	. . . Spoke	2	S96	C	DA1/9
	EA3.45.101	. . . DIAPHRAGM (Mod 4496—S.O.O.)	1	L72	LM	
	EA3.45.287	. . . DIAPHRAGM (Mod 4496—S.O.O.)	1	L72	LM	
	EA3.45.547	. . . DIAPHRAGM (Mod 4496—S.O.O.)	1	L72	LM	
	EA3.90.201	. . . GUIDE, tube	1	T4	LM	
20692	EA1.45.267	. . . HOUSING, ballrace, inboard control shaft	1	L65	C	DA1/7
1541	EA1.45.269	. . . HOUSING, ballrace, outboard control shaft	1	L65	C	DA1/22
33897	EA2.45.583	. . . LEVER, ELEVATOR, OPERATING, ASSEMBLY (PRE—MOD 4496)	1	—	B	DA1/21
44461	EB6.45.181	. . . LEVER, ELEVATOR, OPERATING ASSEMBLY (MOD 4496—S.O.O.) (EA2.45.583 Modified) Consisting of:—	1	—	—	
	SKEFKO					
2A/9500463	CBA2	 BEARING, ballrace	1	—	B	DA1/1
75	EEAS3/D	 HOUSING, ballrace bearing	1	L65	C	DA1/4
	EA2.45.581	 LEVER (Pre—Mod 4496)	1	L65	—	DA1/13
	EB6.45.183	 LEVER (Mod 4496—S.O.O.) (EA2.45.58 Modified)	1	L65	—	
92	EEAS4/20C	 WASHER, packing Attaching parts for EA2.45.583 and EB6.45.181:—	2	L72	C	DA1/6
28D/1212825	AS1242/4E	. . . Bolt, 1/4" BSF (Mod 4496—S.O.O.)	3	—	C	
12203	EA2.45.659	. . . Bolt (Pre—Mod 4496)	3	S94	C	DA1/6A
28M/1011467	A27ES	. . . Nut, slotted (Mod 4496—S.O.O.)	3	—	C	
12202	EA2.45.661	. . . Nut, (Pre—Mod 4496)	3	S94	C	DA1/6B
28P/9486478	SP90C5	. . . Pin, split	3	—	C	
12204	EA2.45.663	. . . Washer (Pre—Mod 4496)	3	L72	C	DA1/6C
28W/9419487	SP16E	. . . Washer (Mod 4496—S.O.O.)	3	—	C	

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
EA2.45.587	. . LEVER, UPPER ARM ELEVATOR OPERATING ASSEMBLY (PRE-MOD 4496)	1	—	DA1/45
EB6.45.177	. . LEVER, UPPER ARM ELEVATOR OPERATING ASSEMBLY (MOD 4496-S.O.O.) (EA2.45.587 Modified) Consisting of :-	1	—	
SKEFKO				
CBA2	. . . BEARING, ballrace	1	—	DA1/46
EEAS3D	. . . HOUSING, ballrace bearing	1	L65	DA1/47
EA2.45.585	. . . LEVER (Pre-Mod 4496)	1	—	DA1/48
EB6.45.179	. . . LEVER, (Mod 4496-S.O.O.) (EA2.45.585 Modified)	1	—	
EEAS4/20C	. . . WASHER, packing	2	L72	DA1/49
AS1242/5E	Attaching parts for EA2.45.587 and EB6.45.177 :-			
EA2.45.659	. . Bolt, 1/2" BSF (Mod 4496-S.O.O.)	3	—	
A27ES	. . Bolt (Pre-Mod 4496)	3	S94	DA1/49A
EA2.45.661	. . Nut, slotted (Mod 4496-S.O.O.)	3	—	
SP90C5	. . Nut, (Pre-Mod 4496)	3	S94	DA1/49B
EA2.45.663	. . Pin, split (Mod 4496-S.O.O.)	3	—	
SP16E	. . Washer (Pre-Mod 4496)	3	L72	DA1/49C
	. . Washer (Mod 4496-S.O.O.)	3	—	
EEAS.37.16A	. . NIPPLE, 2BA (Mod 4496-S.O.O.)	1	S96	
EB6.45.185	. . PLATE, clamp 10G (Mod 4496-S.O.O.)	1	L72	
EA3.45.511	. . PLATE, stiffening, 14G (Mod 4496-S.O.O.)	1	L73	
EA3.45.513	. . RING, clamp (Mod 4496-S.O.O.)	1	—	
EA1.45.271	. . SHAFT, control mounting	1	L65	DA1/8
EEAS38/3A	. . SPOKE, 2BA (Make from 28R/4663555) (Mod 4496-S.O.O.)	1	S96	
EA3.45.309	. TUBE, CONTROL, INTERMEDIATE FROM CONTROL COLUMN TO ELEVATOR AT REAR OF PRESSURE BULKHEAD ASSEMBLY (PRE-MOD 4930)	1	—	DA1/26
EA3.45.651	. TUBE, CONTROL, INTERMEDIATE FROM CONTROL COLUMN TO ELEVATOR AT REAR OF PRESSURE BULKHEAD ASSEMBLY (MOD 4930) (PRE-MOD 5473)	1	—	
EA3.45.727	. TUBE, CONTROL, ASSEMBLY (MOD 5473) Spares for:-	1	—	
EEAS47/2	. . FORK-END, adjusting	1	—	DA1/16
A29NP	. . NUT, lock	1	—	DA1/51
EA3.45.339	. TUBE, CONTROL, FROM CONTROL COLUMN TO AILERON CONTROL LEVER AT REAR OF PRESSURE BULKHEAD, ASSEMBLY (PRE-MOD 4930)	1	—	DA1/41
EA3.45.661	. TUBE, CONTROL, FROM CONTROL COLUMN TO AILERON CONTROL LEVER AT REAR OF PRESSURE BULKHEAD, ASSEMBLY (MOD 4930) (PRE-MOD 5473)	1	—	

CONTROLS
FLYING CONTROLS IN COCKPIT

Part Number	1 2 3 4 5 6	Description	No. Off	Mat'l. Spec.	Plate No.
R EA3.45.733		. TUBE, CONTROL (MOD 5473) Consisting of:—	1	—	
EA3.45.329		. . TUBE, FORWARD PORTION, ASSEMBLY (PRE-MOD 4930)	1	—	DA1/35
EA3.45.657		. . TUBE, FORWARD PORTION, ASSEMBLY (MOD 4930) (PRE-MOD 5473)	1	—	
R EA3.45.823		. . TUBE, FORWARD, ASSEMBLY (MOD 5473)	1	—	
R EA3.45.335		. . TUBE, AFT PORTION, ASSEMBLY (PRE-MOD 4930)	1	—	DA1/39
R EA3.45.659		. . TUBE, AFT PORTION, ASSEMBLY (PRE-MOD 5473)	1	—	
R EA3.45.825		. . TUBE, AFT ASSEMBLY (MOD 5473) Spares for:—	1	—	
EEAS47/2		. . . FORK-END, adjusting	1	DTD683	DA1/37
A29NP		. . . NUT, lock, 1/2" BSF	1	—	DA1/50
		Attaching parts for EA3.45.329, EA3.45.335, EA3.45.657, EA3.45.659, EA3.45.823 and EA3.45.825:—			
A25/22C		. . Bolt, 2BA	2	—	DA1/43
AS484JA		. . Bush	4	—	DA1/33
A27CS		. . Nut, slotted, 2BA	2	—	DA1/31
SP90C7		. . Pin, split, 1/16" dia	2	—	DA1/29
EA3.45.347		. TUBE, CONTROL, FROM CONTROL COLUMN LEVER TO ELEVATOR LEVER, ASSEMBLY (PRE-MOD 4930)	1	—	DA1/25
EA3.45.667		. TUBE, CONTROL, FROM CONTROL COLUMN LEVER TO ELEVATOR LEVER ASSEMBLY (MOD 4930) (PRE-MOD 5473)	1	—	
R EA3.45.737		. TUBE, CONTROL, ASSEMBLY (MOD 5473) Spares for:—	1	—	
EEAS47/2		. . FORK-END, adjusting	1	DTD683	DA1/17
A29NP		. . NUT, lock, 1/2" BSF	1	—	DA1/52
EA3.45.345		. TUBE, CONTROL, FROM PILOT'S RUDDER BAR, TO RUDDER LEVER AT REAR OF PRESSURE BULKHEAD, ASSEMBLY (PRE-MOD 4930)	1	—	DA1/42
EA3.45.665		. TUBE, CONTROL, FROM PILOT'S RUDDER BAR, TO RUDDER LEVER AT REAR OF PRESSURE BULKHEAD ASSEMBLY (MOD 4930) (PRE-MOD 5473)	1	—	
R EA3.45.735		. TUBE, CONTROL, ASSEMBLY (MOD 5473) Spares for:—	1	—	
EA3.45.329		. . TUBE, FORWARD PORTION, ASSEMBLY (PRE-MOD 4930)	1	—	DA1/36
EA3.45.657		. . TUBE, FORWARD PORTION, ASSEMBLY (MOD 4930) (PRE-MOD 5473)	1	—	
R EA3.45.823		. . TUBE, FORWARD, ASSEMBLY (MOD 5473)	1	—	
R EA3.45.341		. . TUBE, AFT PORTION, ASSEMBLY (PRE-MOD 4930)	1	—	DA1/40
EA3.45.663		. . TUBE, AFT PORTION, ASSEMBLY (MOD 4930) (PRE-MOD 5473)	1	—	
R EA3.45.827		. . TUBE, AFT ASSEMBLY (MOD 5473) Spares for:—	1	—	
EEAS47/2		. . . FORK-END, adjusting	1	DTD683	DA1/38
A27NT		. . . NUT, lock, thin, 1-2" BSF	1	—	DA1/53
		Attaching parts for EA3.45.329, EA3.45.351, EA3.45.657, EA3.45.663, EA3.45.823 and EA3.45.827:—			
R A25/22C		. . Bolt, 2BA	1	—	DA1/44
R AS484JA		. . Bush	2	—	DA1/34
R A27CS		. . Nut, slotted, 2BA	1	—	DA1/32
R SP90C7		. . Pin, split, 1/16" dia	1	—	DA1/30

CONTROLS

FLYING CONTROLS IN COCKPIT

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.45.351	.	TUBE, CONTROL, AILERON, ELEVATOR					3	—	DA1/24
		AND RUDDER AT REAR OF							
		PRESSURE BULKHEAD,							
		ASSEMBLY (PRE-MOD 4930)							
R EA3.45.669	.	TUBE, CONTROL, AILERON, ELEVATOR					3	—	
		AND RUDDER AT REAR OF							
		PRESSURE BULKHEAD, ASSEMBLY							
		(MOD 4930) (PRE-MOD 5473)							
R EA3.45.739	.	TUBE, CONTROL, AILERON, ELEVATOR					3	—	
		AND RUDDER AT REAR OF							
		PRESSURE BULKHEAD, ASSEMBLY							
		(MOD 5473)							
		Spares for:—							
EEAS47/2	.	FORK-END, adjusting					1	DTD683	DA1/18
A29NP	.	NUT, lock, 1/2" BSF					1	—	DA1/54
		Attaching parts for control tubes:—							
EEAS13/1	.	Bolt					2	S96	DA1/14
EEAS.14	.	Bush					2	S96	DA1/15
EEAS63/E	.	Nut					2	S96	DA1/20
EEAS127	.	Piece, distance					2	S96	DA1/19
SP90C7	.	Pin, split, 1/16" dia					2	—	DA1/19A
EA3.45.545	.	UNIT SNATCH, ELEVATOR, CONTROL					1	—	DA4/1
		INSTALLATION (MOD 4435)							
		Spares for:—							
EA1.45.609	.	BRACKET					1	—	DA4/2
EA3.45.437	.	BUSH					1	—	DA4/3
or									
MBEU/1806/EE	.	BUSH					1	—	
AGS2002E1	.	NUT, thin, 1/4" BSF					2	—	DA4/7
SP90C5	.	PIN, split, 1/16" dia					1	—	DA4/4
EA1.45.747	.	PLATE, packing					2	—	DA4/5
EA1.45.613	.	STUD					1	L65	DA4/6
or									
MBEU/1805/EE	.	STUD					1	—	
EA1.45.611	.	SUPPORT					1	—	DA4/9
		Attaching parts for EA1.45.611:—							
A25/4C	.	Bolt, 2BA					4	—	DA4/10
AGS2001/C1-66	.	Nut, 2BA					4	—	DA4/11
HELLERMAN-									
INSULOID									
LKOX-HS-B	.	TIE, cable, insulox block					QR	—	
MARTIN BAKER									
MBCJ/2106	.	UNIT, snatch					1	—	DA4/12
SP15E	.	WASHER					2	—	DA4/8

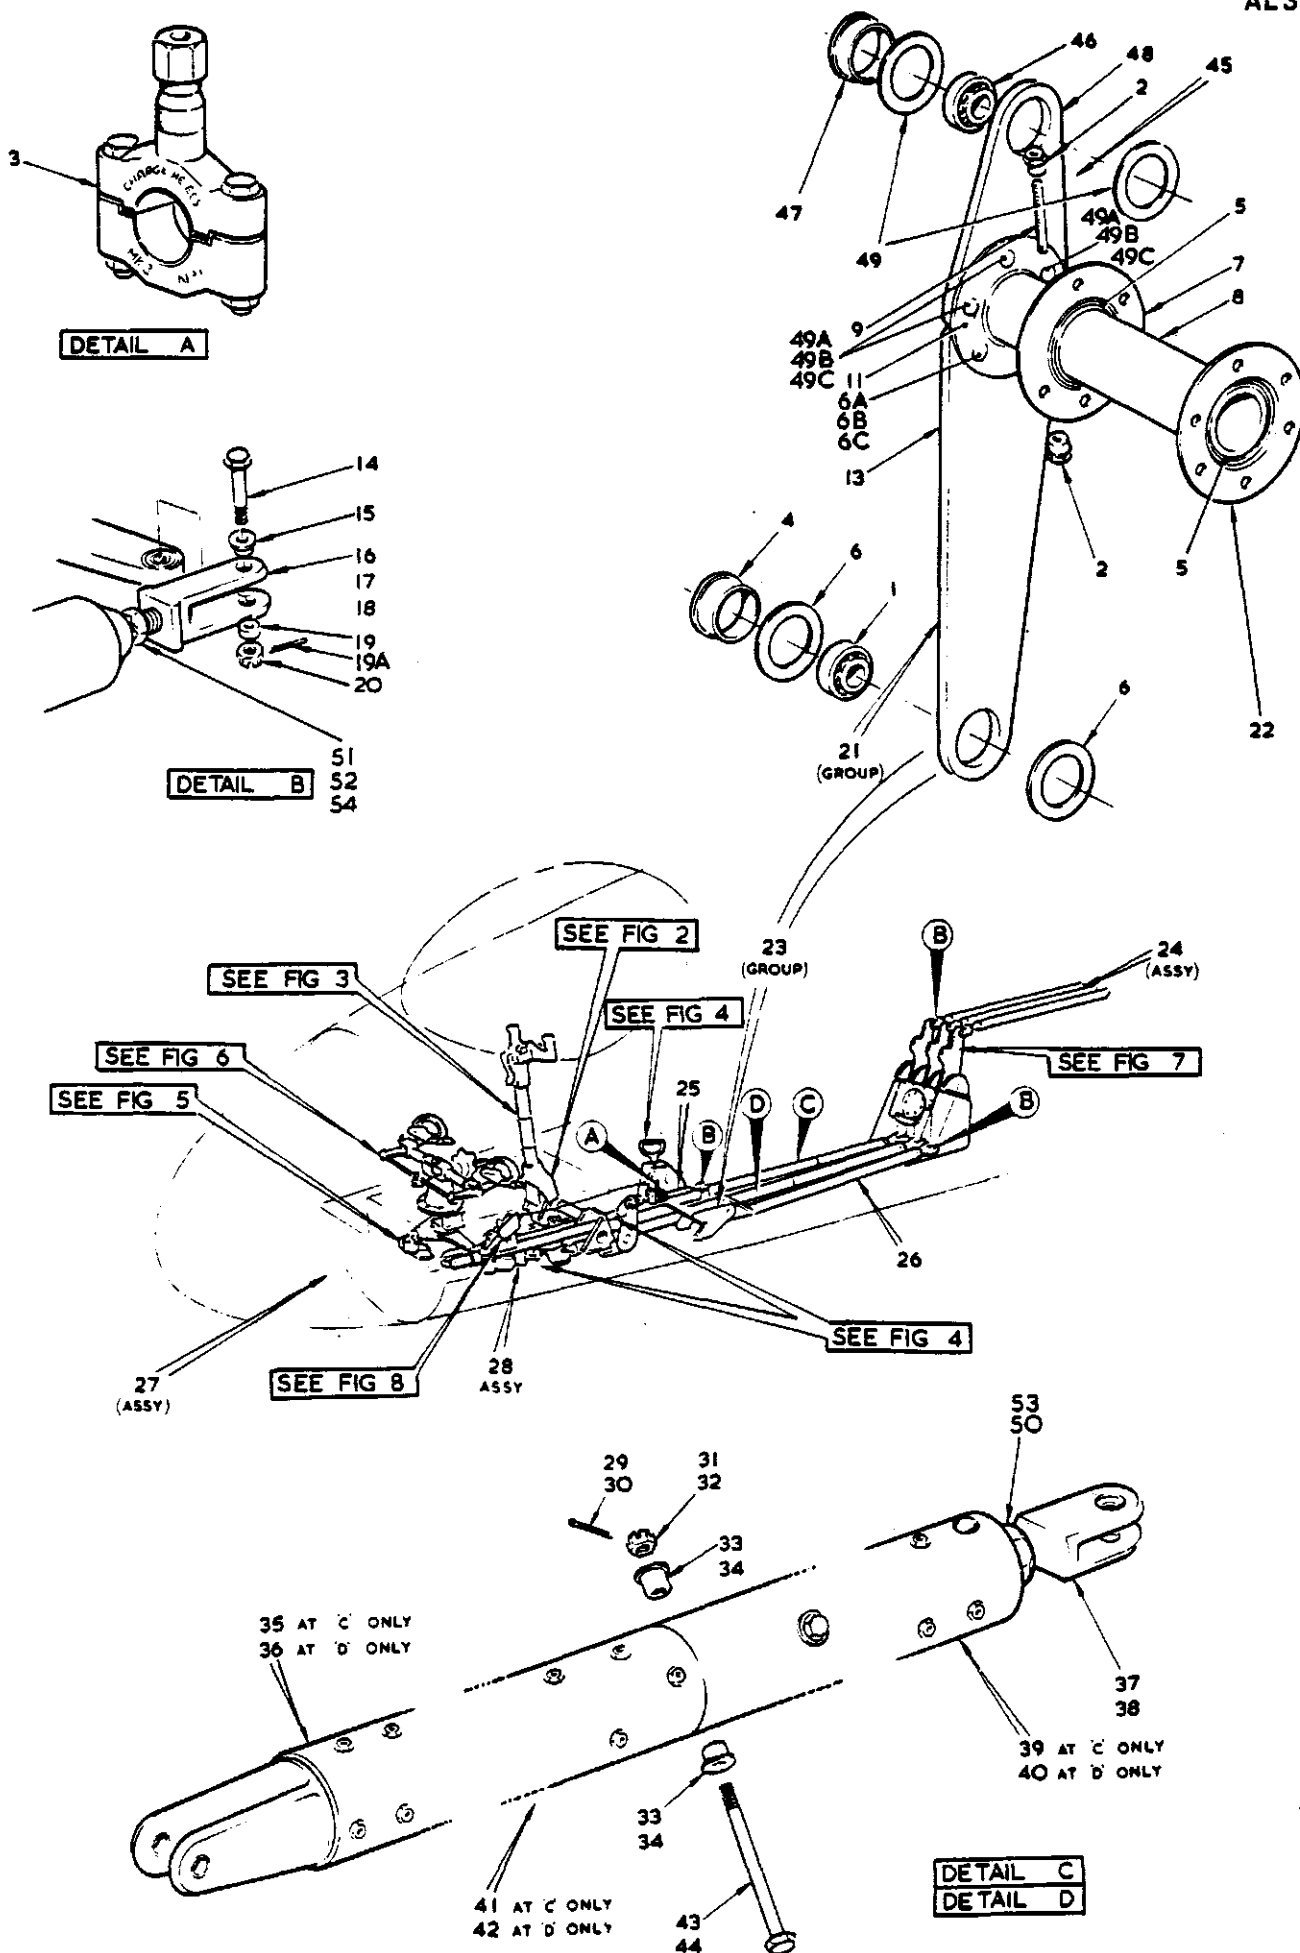


FIG. I FLYING CONTROLS IN COCKPIT

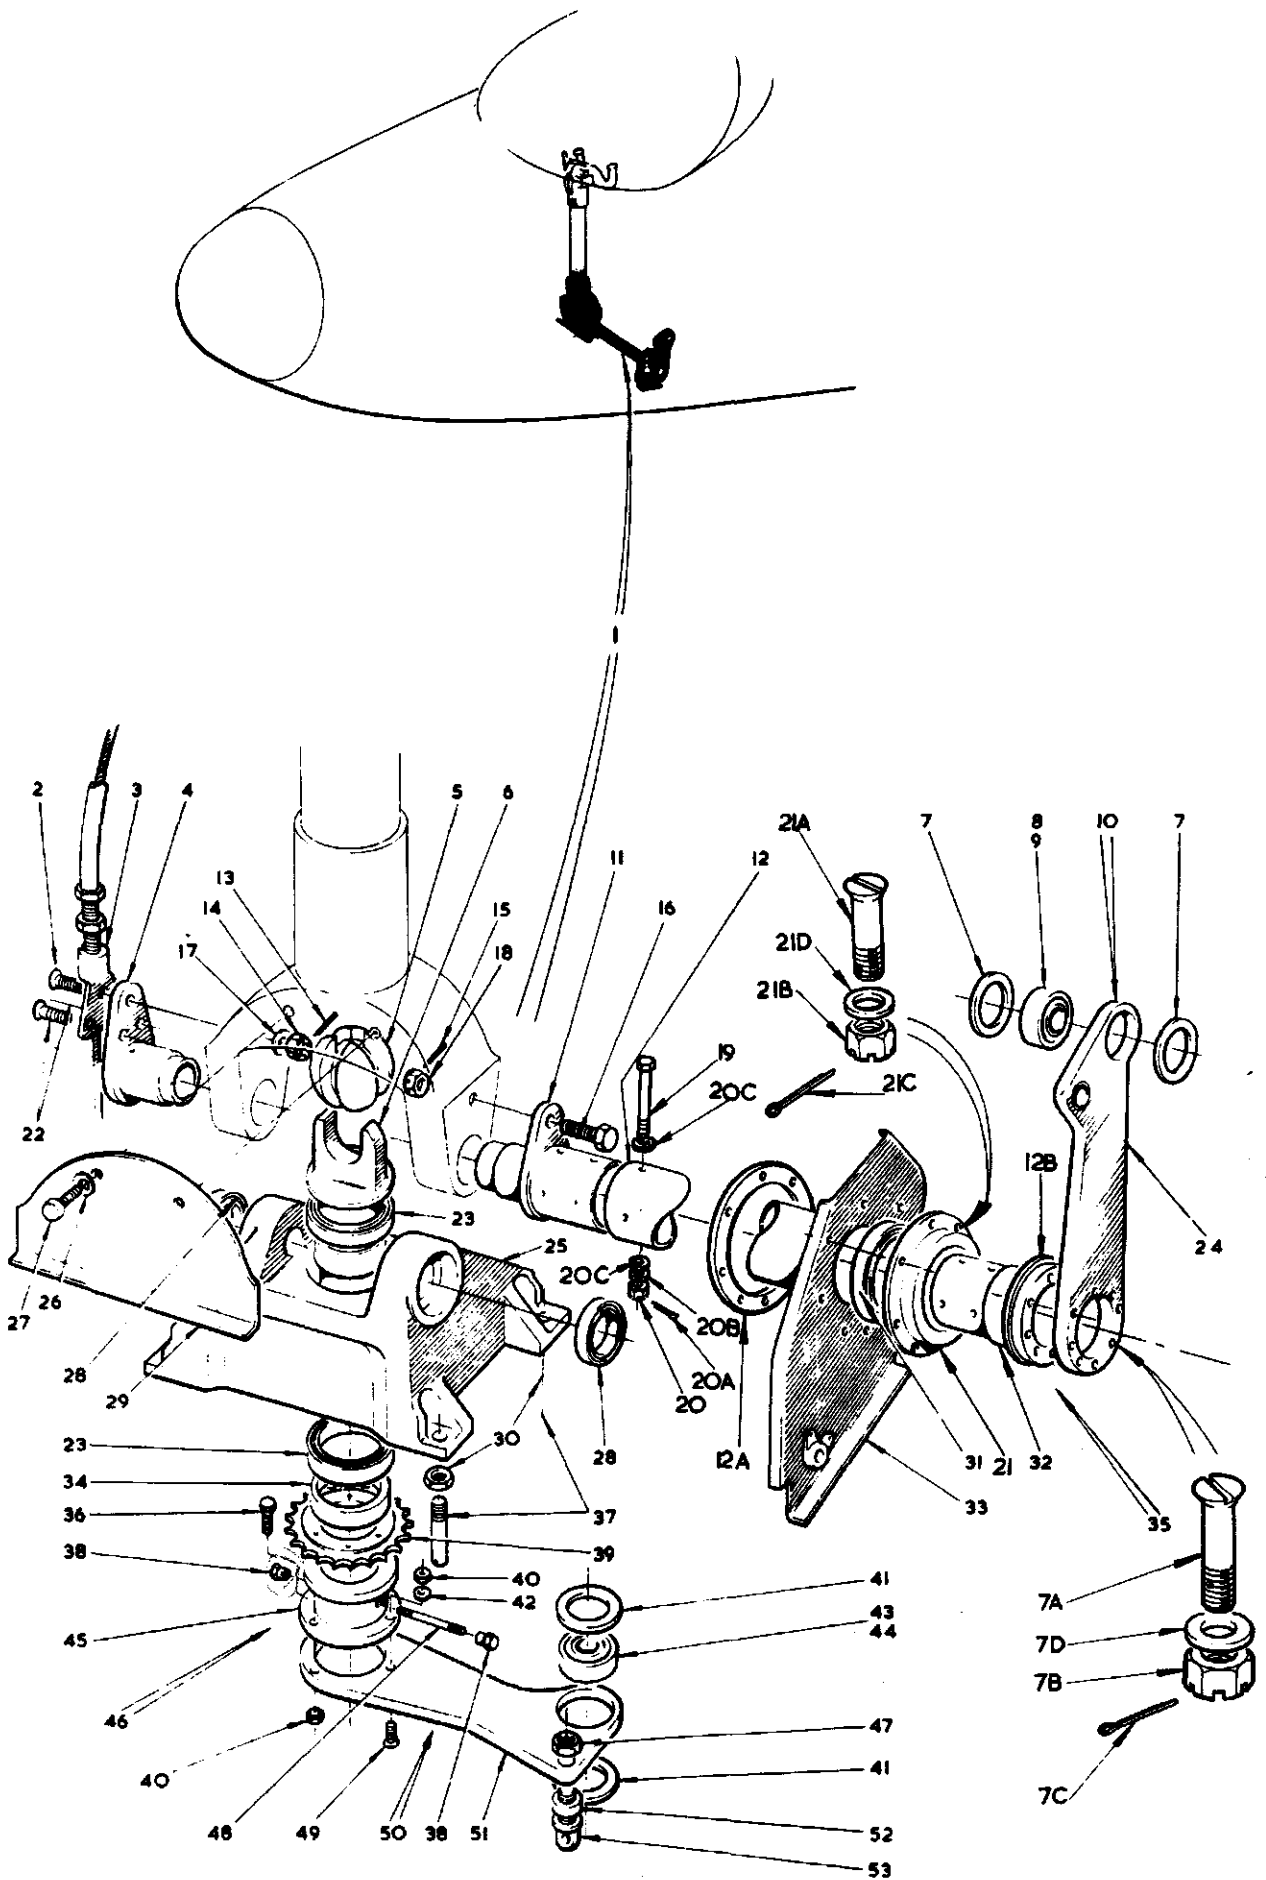


FIG. 2 FLYING CONTROLS IN COCKPIT

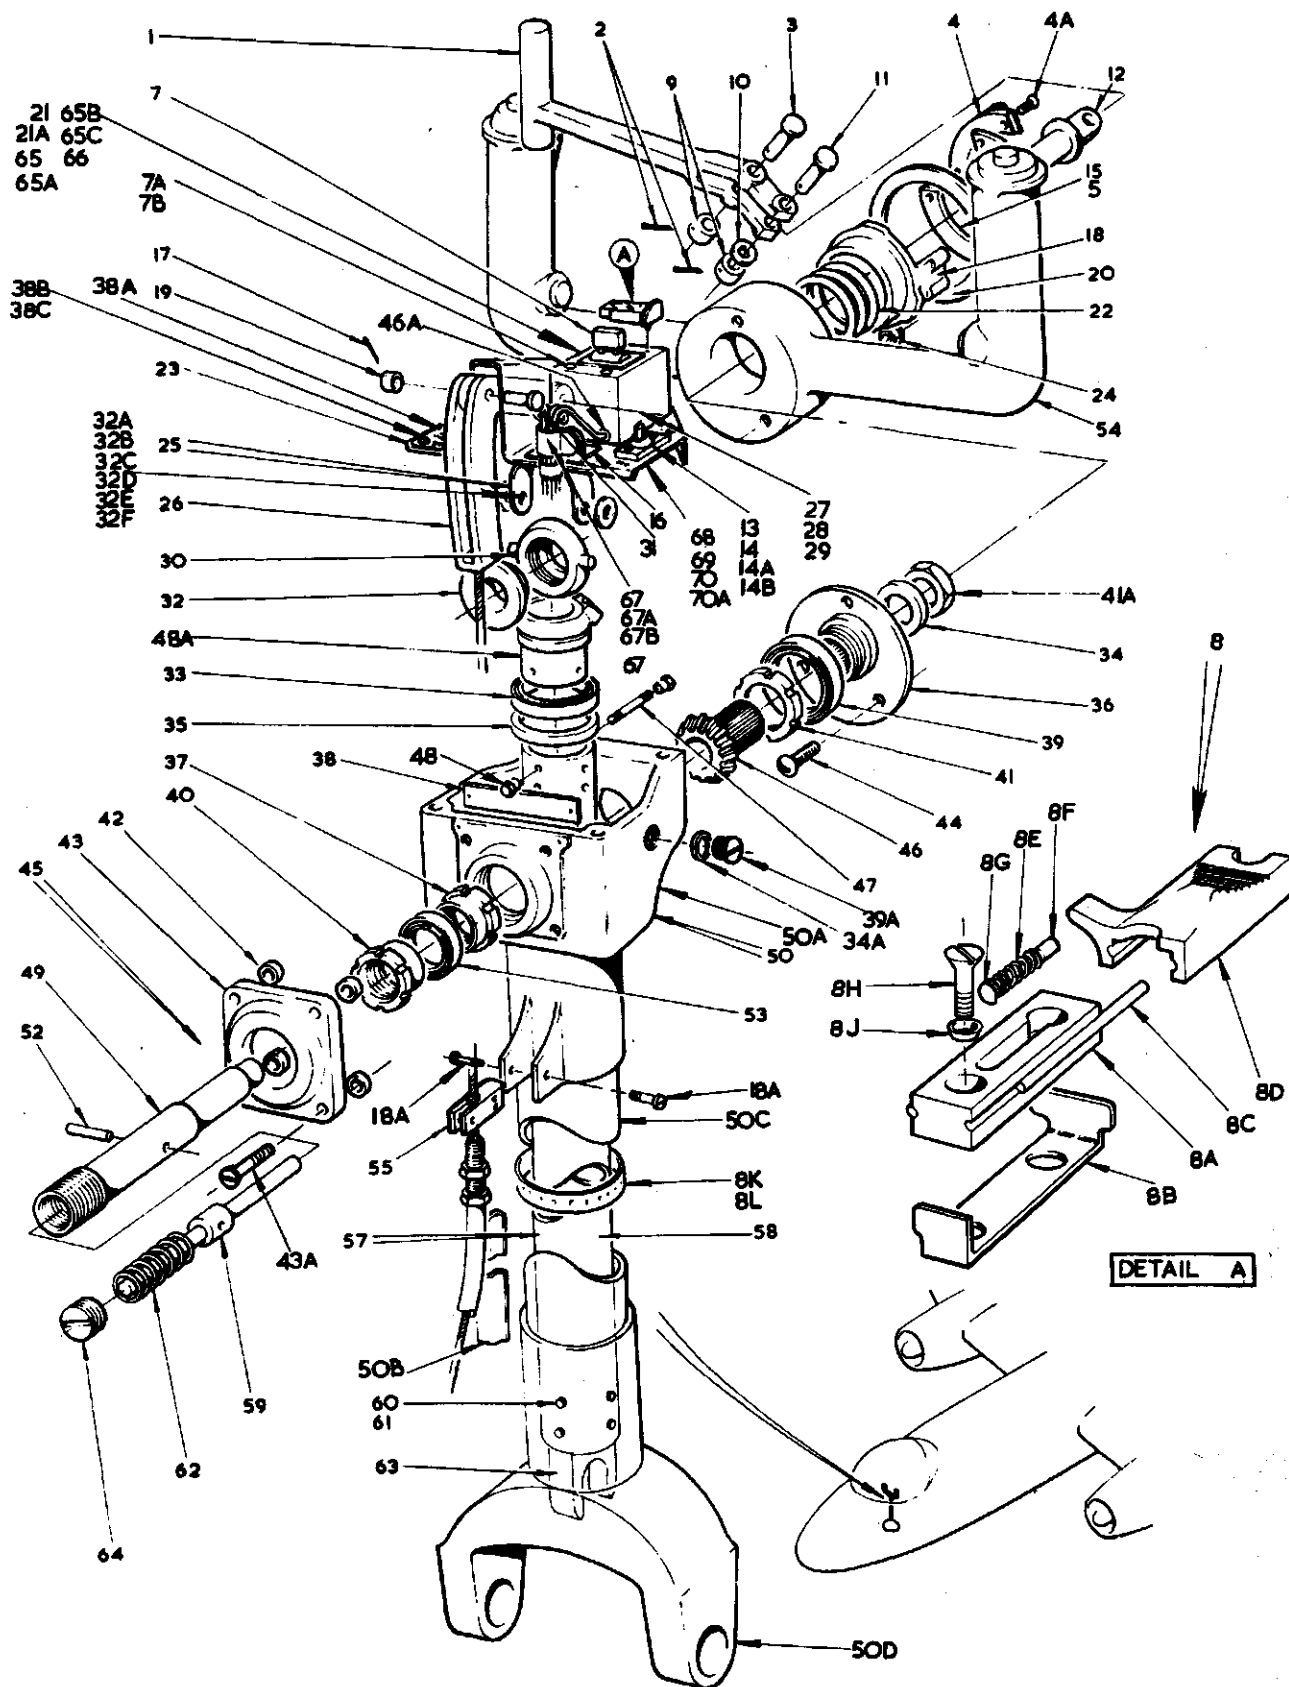


FIG. 3 FLYING CONTROLS IN COCKPIT

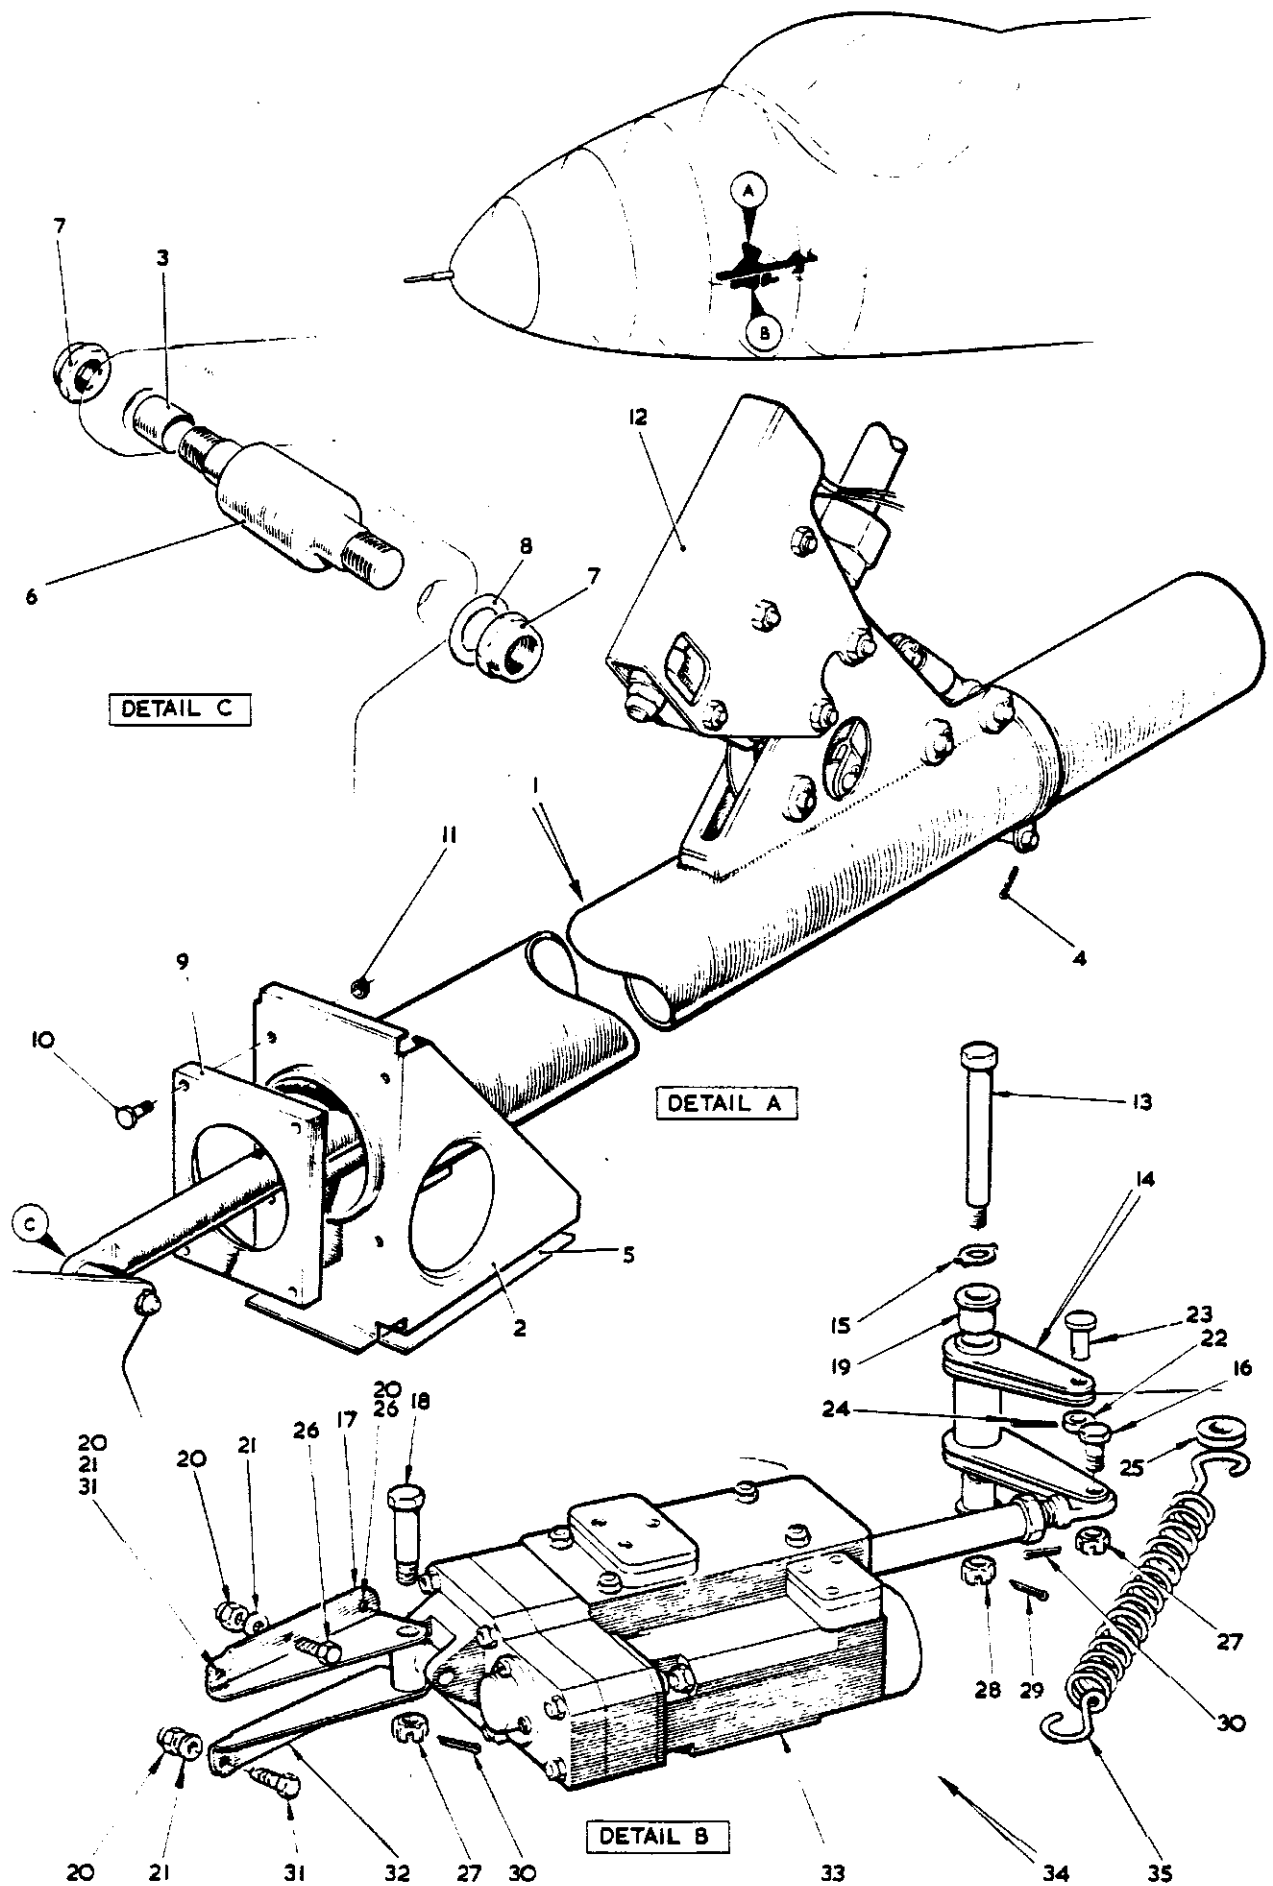


FIG. 4 FLYING CONTROLS IN COCKPIT

CODE Z

SECT. DA

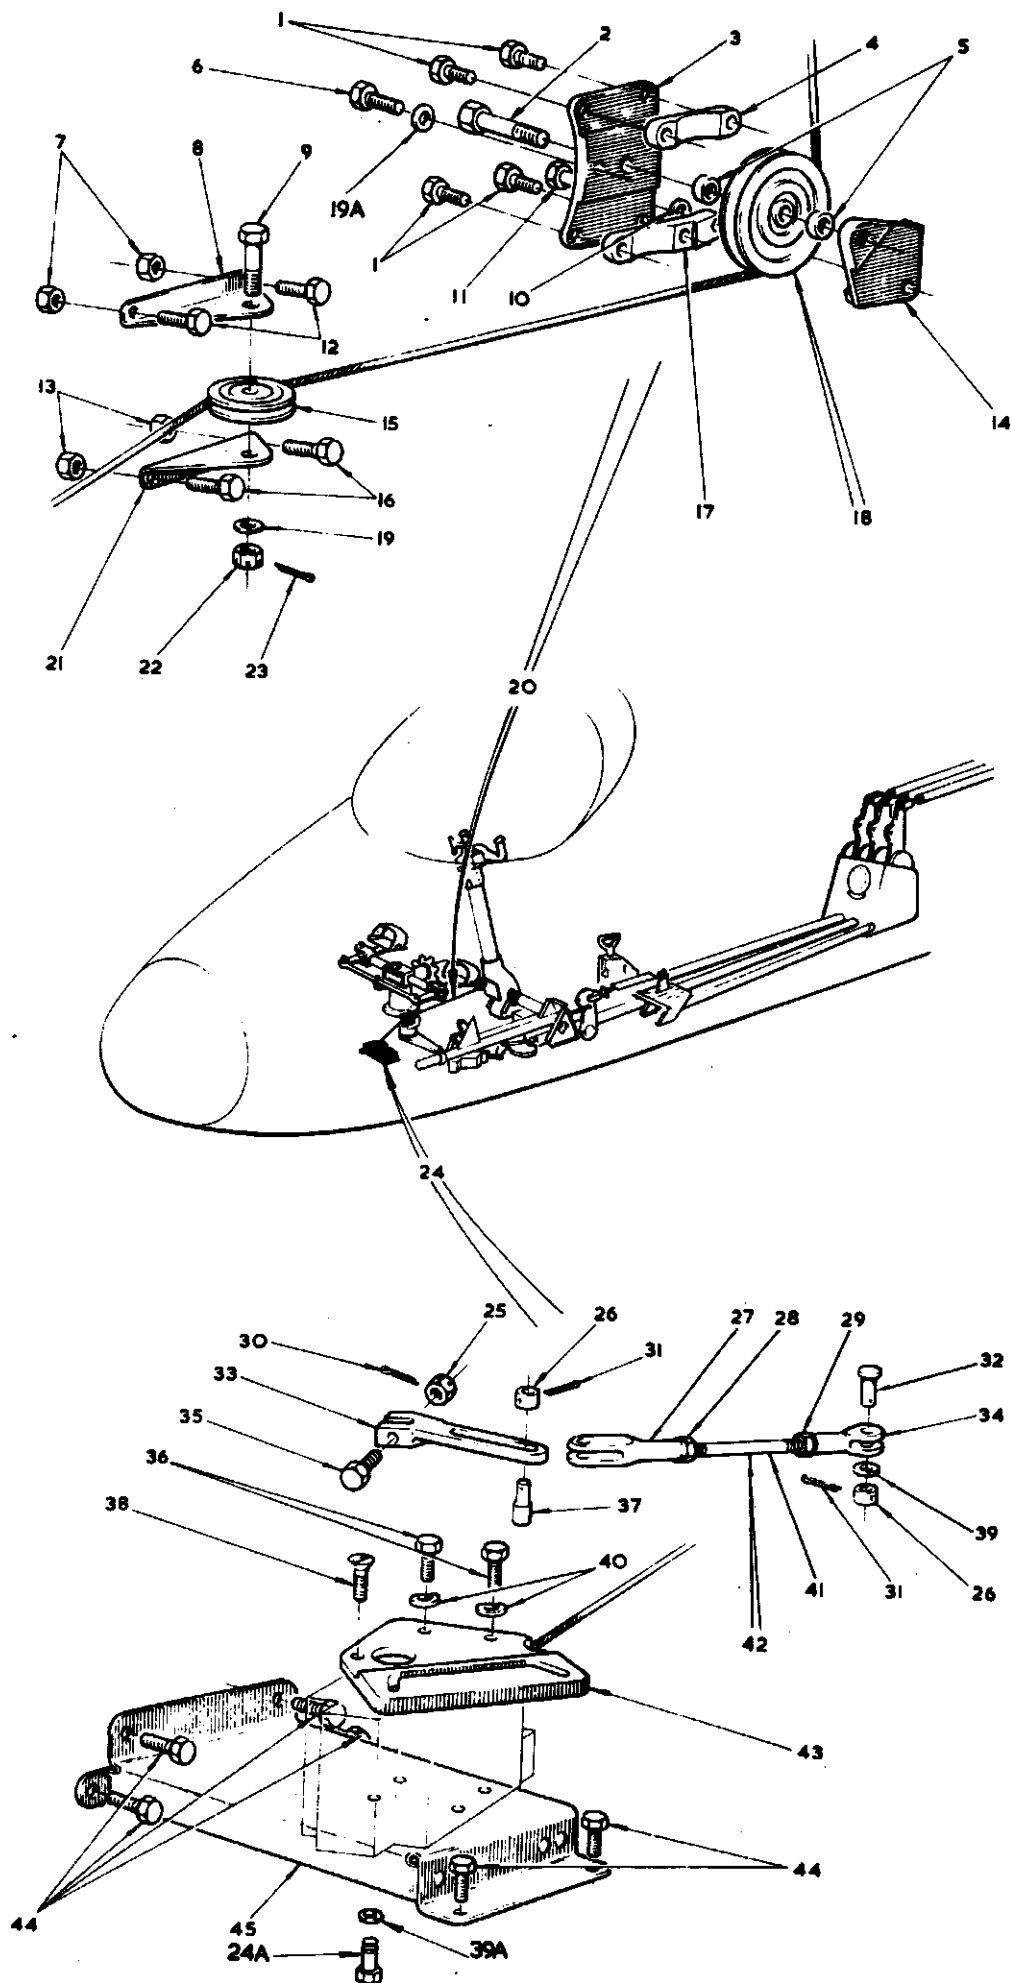


FIG. 5 FLYING CONTROLS IN COCKPIT

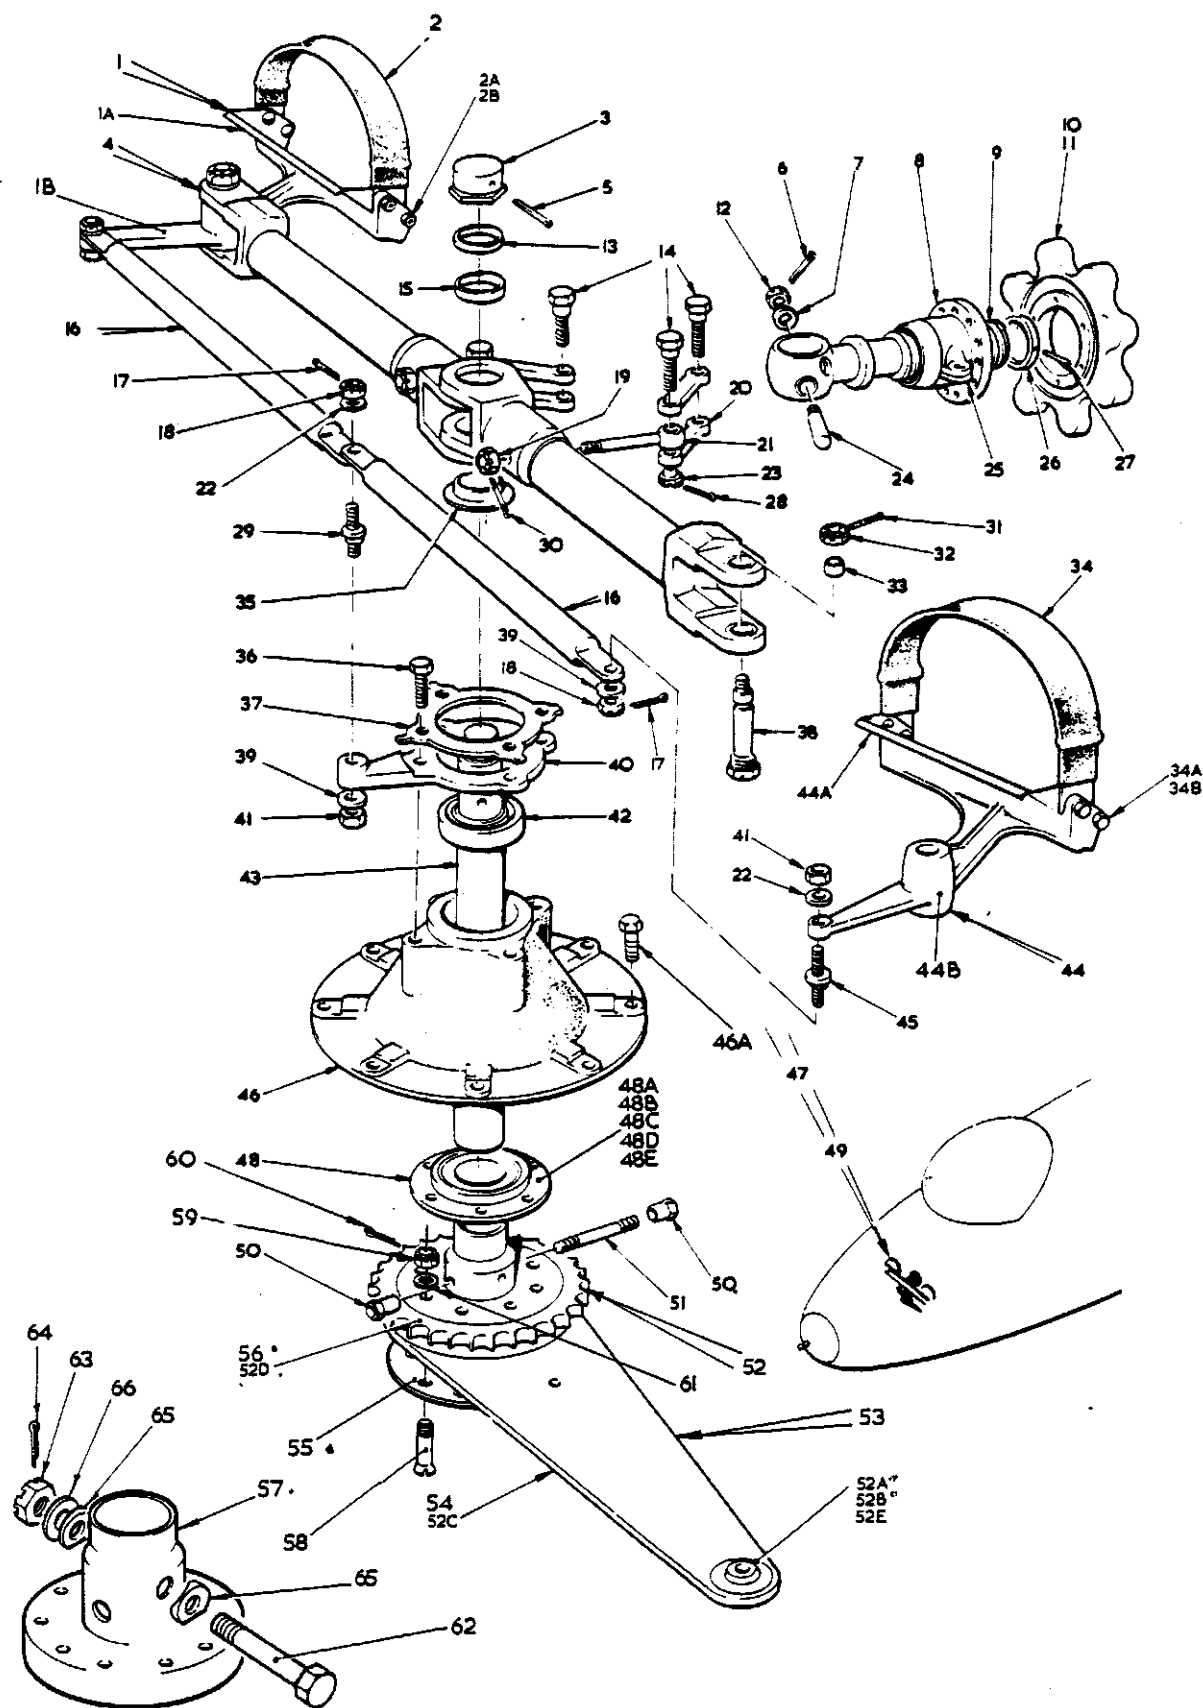


FIG. 6 FLYING CONTROLS IN COCKPIT

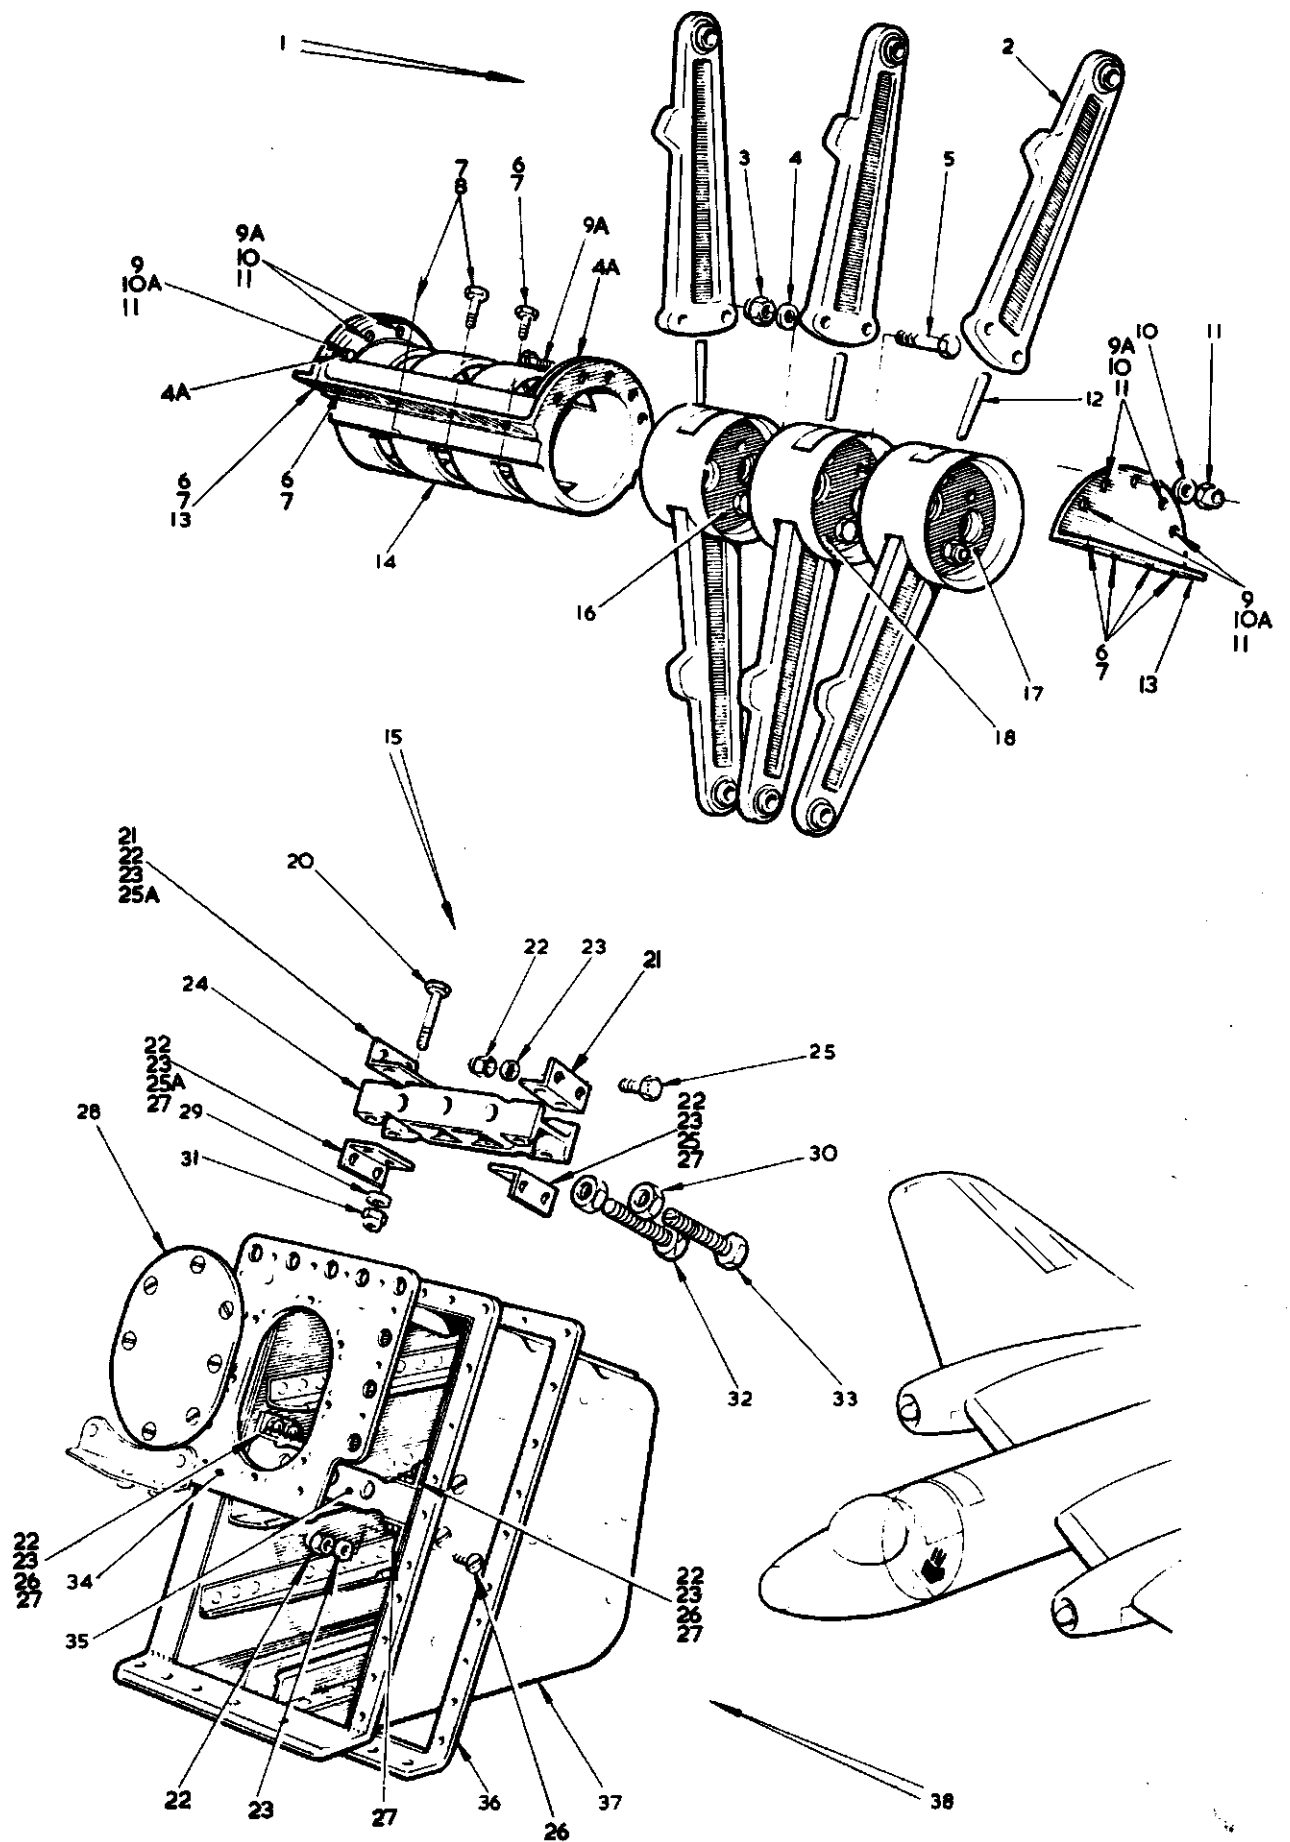


FIG.7 FLYING CONTROLS IN COCKPIT