

CONTROLS

FLAP OPERATING MECHANISM, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.20.701	FLAP OPERATING MECHANISM, PORT, ASSEMBLY	—	—	DF1/17
EA1.20.711	Spares for:— BRACKET, flap operating, jack unit support	2	L65	DF1/25
A25/10G	Attaching parts for EA1.20.711:—	2	—	DF1/20
SP15G	Bolt, 5/16" BSF	2	—	DF1/19
EA1.20.885	Washer	4	DTD683	DF1/23
EA3.20.3991	BRACKET, mounting, flap operating jack unit (Pre—Mod 4781)	4	S97	
A25/8G	BRACKET, mounting, flap operating jack unit (Mod 4781)	1	—	DF1/24
EA1.20.3129	Attaching parts for EA1.20.885 & EA3.20.3991:—	1	L72	DF2/17
A25/1B	Bolt, 4BA	6	—	DF2/15
AS1900B	CLIP, cable	1	—	DF2/15A
EA3.20.1011	LINK, CONNECTING, FLAP TO OPERATING MECHANISM, ASSEMBLY	4	—	DF1/1
EA3.20.1009	Spares for:— BEARING	2	—	DF1/1A
EA3.20.1007	BUSH	2	—	DF1/18
EA3.20.1013	HOUSING, bearing	1	—	DF1/1C
EA3.20.1015	HOUSING, bearing	1	—	DF1/1D
EA1.20.797	PLATE, locking	1	L72	DF1/10
A25/9B	Attaching parts for EA1.20.797:—	2	—	DF1/9
AGS2001B1	Bolt, 4BA	2	—	DF1/8
SP15B	Nut, stiff, 4BA	2	—	DF1/7
EA1.20.795	Washer	2	—	
EA1.20.791	SCREW, adjusting	1	S11	DF1/6
SP21	WASHER	2	L65 or L72	DF1/11
EA1.20.683	NIPPLE, lubricating	4	—	DF1/22A
EA3.20.2289	PLATE, cover, at rib 3A, for assembly of flap jack unit (Pre—Mod 738)	1	DTD320	DF2/22A
A61/1C	PLATE, cover, at rib 3A, for assembly of flap jack unit (Mod 738)	1	L72	DF2/22
AGS2001C3	Attaching parts for EA1.20.683 or EA3.20.2289:—	6	—	DF2/20
SP15C	Bolt, 2BA	6	—	DF2/23
EA1.20.10777	Nut, stiff, 2BA	6	—	DF2/21
A61/1C	Washer	6	—	
AGS2001C3	PLATE, cover at rib 3A, for assembly of flap jack unit	1	L72	DF2/13
SP15C	Attaching parts for EA1.20.10777:—	6	—	DF2/7
EA1.20.10778	Bolt, 2BA	6	—	DF2/9
A61/1C	Nut, stiff, 2BA	6	—	DF2/8
AGS2001C3	Washer	6	—	
SP15C	PLATE, cover at rib 3A, for assembly of flap jack unit	1	L72	DF2/31
EA1.20.10778	Attaching parts for EA1.20.10778:—	6	—	DF2/29
A61/1C	Bolt, 2BA	6	—	DF2/32
AGS2001C3	Nut, stiff, 2BA	6	—	DF2/30
SP15C	Washer	6	—	

CONTROLS
FLAP OPERATING MECHANISM, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.20.10779	. PLATE, cover at ribs 3, 4 & 5, for assembly of flap jacks unit	2	L72	DF1/5
A61/1C	Attaching parts for EA1.20.10779:-			
AGS20001C3	. Bolt, 2BA	7	-	DF1/2
SP15C	. Nut, stiff, 2BA	7	-	DF1/4
	. Washer	7	-	DF1/3
EA1.20.10780	. PLATE, cover at ribs 3, 4 & 5, for assembly of flap Jack unit	1	L72	DF1/18
A61/1C	Attaching parts for EA1.20.10780:-			
AGS2001C3	. Bolt, 2BA	7	-	DF1/14
SP15C	. Nut, stiff, 2BA	7	-	DF1/16
	. Washer	7	-	DF1/15
EA1.20.813	. ROD, PUSH, OUTBOARD FLAP CONTROL, BETWEEN HINGE AND OPERATING JACK, ASSEMBLY	1	-	DF2/28
	Spares for:-			
EA1.20.839	. . BUSH	1	DTD197	DF2/25
EA1.20.827	. . EYE-END	1	L65	DF2/24
EA1.20.825	. . FORK-END	1	L65	DF2/36
EEAS37/15A	Attaching parts for EA1.20.827 and EA1.20.825:-			
EEAS38/2A	. . Nipple	6	S96	DF2/35
SP21	. . Spoke	3	S96	DF2/34
EA1.20.805	. . NIPPLE, lubricating	1	-	DF2/39
SP90G6	. . PIN, special	1	S11	DF2/37
EA1.20.807	. . PIN, split 1/8" dia	1	-	DF2/37A
	. . PLATE, locking	1	L72	DF2/33
A33B8	Attaching parts for EA1.20.807:-			
	. . Screw, 4BA	2	-	DF2/33A
EA1.20.833	. . TUBE	1	-	DF2/33B
EEAS5	. . WASHER, red fibre, for lubricating nipple	1	BSS216	DF2/38
EA1.20.803	Attaching parts for EA1.20.813:-			
SP90G6	. Pin, special	1	S11	DF1/22
	. Pin, split, 1/8" dia	1	-	DF1/21
EA1.20.815	. ROD, PUSH, INBOARD AND OUTBOARD FLAP CONTROL, BETWEEN HINGE & OPERATING JACK, ASSEMBLY	2	-	DF1/12
	Spares for:-			
EA1.20.839	. . BUSH	1	DTD197	DF1/12A
EA1.20.827	. . EYE-END	1	L65	DF1/12B
EA1.20.825	. . FORK-END	1	L65	DF1/12C
EEAS37/15A	Attaching parts for EA1.20.827 and EA1.20.825:-			
EEAS38/2A	. . Nipple	6	S96	DF1/12D
SP21	. . Spoke	3	S96	DF1/12E
EA1.20.805	. . NIPPLE, lubricating	1	-	DF1/12F
SP90G6	. . Pin, special	1	S11	DF1/12G
EA1.20.807	. . PIN, split, 1/8" dia	1	-	DF1/12H
	. . PLATE, locking	1	L72	DF1/12J
A33B8	Attaching parts for EA1.20.807:-			
	. . Screw, 4BA	2	-	DF1/12K
EA1.20.835	. . TUBE	1	-	DF1/12L
EEAS5	. . WASHER, red fibre, for lubricating nipple	1	BSS216	DF1/12M
EA1.20.803	Attaching parts for EA1.20.815:-			
SP90G6	. Pin, special	1	S11	DF1/22
	. Pin, split, 1/8" dia	1	-	DF1/21

CONTROLS

FLAP OPERATING MECHANISM, PORT

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.20.819	.	.	.	.	.	ROD, PUSH, INBOARD FLAP CONTROL BETWEEN HINGE AND OPERATING JACK CONNECTING ARM, ASSEMBLY Spares for:—	1	—	DF1/13
EA1.20.839	.	.	.	.	.	BUSH	1	DTD197	DF1/13A
EA1.20.827	.	.	.	.	.	EYE-END	1	L65	DF1/13B
EA1.20.825	.	.	.	.	.	FORK-END	1	L65	DF1/13C
	.	.	.	.	.	Attaching parts for EA1.20.827 & EA1.20.825:—			
EEAS37/15A	.	.	.	.	.	Nipple	6	S96	DF1/13D
EEAS38/2A	.	.	.	.	.	Spoke	3	S96	DF1/13E
SP21	.	.	.	.	.	NIPPLE, lubricating	1	—	DF1/13F
EA1.20.805	.	.	.	.	.	PIN, special	1	S11	DF1/13G
SP90G6	.	.	.	.	.	PIN, split, $\frac{1}{8}$ " dia	1	—	DF1/13H
EA1.20.807	.	.	.	.	.	PLATE, locking	1	L72	DF1/13J
	.	.	.	.	.	Attaching parts for EA1.20.807:—			
A33B8	.	.	.	.	.	Screw, 4BA	2	—	DF1/13K
EA1.20.893	.	.	.	.	.	TUBE	1	—	DF1/13L
EEAS5	.	.	.	.	.	WASHER, red fibre, for lubricating nipple	1	BSS216	DF1/13M
	.	.	.	.	.	Attaching parts for EA1.20.819:—			
EA1.20.803	.	.	.	.	.	Pin, special	1	S11	DF1/22
SP90G6	.	.	.	.	.	Pin, split, $\frac{1}{8}$ " dia	1	—	DF1/21
EA1.20.3133	.	.	.	.	.	ROD, CONNECTING, FLAP INDICATOR MECHANISM, ASSEMBLY Consisting of:—	1	—	DF2/1
AGS899/2	.	.	.	.	.	Collar	2	—	DF2/4
EA1.20.881	.	.	.	.	.	FORK-END	1	L1	DF2/3
EA1.20.883	.	.	.	.	.	FORK-END, L.H. thread	1	L1	DF2/11
A27CT	.	.	.	.	.	NUT, thin, 2BA	1	—	DF2/2
A27CTL	.	.	.	.	.	NUT, thin, 2BA	1	—	DF2/12
SP4Y/B4	.	.	.	.	.	PIN, shackle	2	—	DF2/6
SP90C7	.	.	.	.	.	PIN, split, $\frac{1}{16}$ " dia	2	—	DF2/5
EA1.20.3157	.	.	.	.	.	ROD, adjusting	1	DTD683	DF2/10
6A/2134	.	.	.	.	.	TRANSMITTER, desynn	1	—	DF2/14
	.	.	.	.	.	Attaching parts for 6A/2134:—			
A61/2C	.	.	.	.	.	Bolt, 2BA	4	—	DF2/16
AGS2001C3	.	.	.	.	.	Nut, stiff, 2BA	4	—	DF2/19
SP15C	.	.	.	.	.	Washer	4	—	DF2/18
EEAS5	.	.	.	.	.	WASHER, red fibre, for lubricating nipple	4	—	DF1/22B

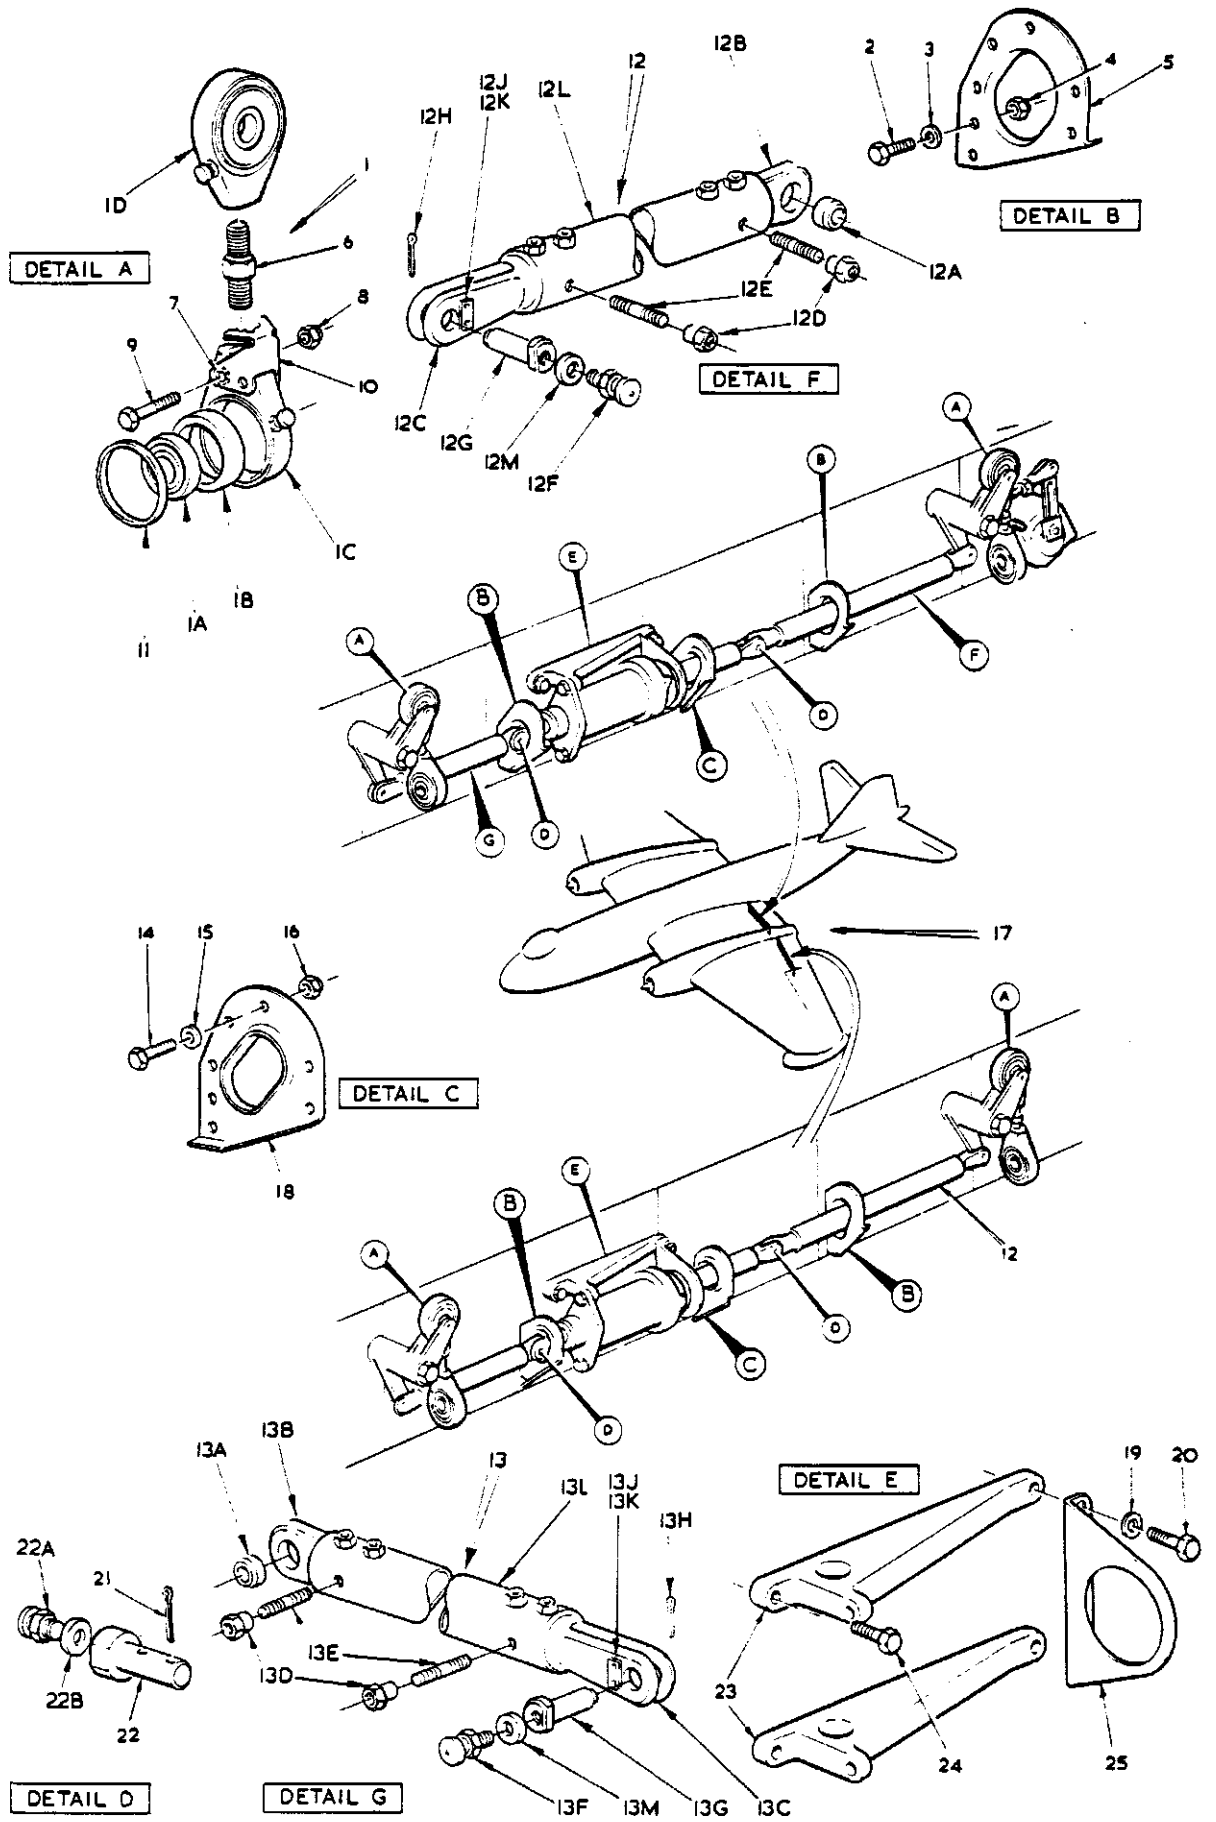


FIG.1 FLAP OPERATING MECHANISM, PORT

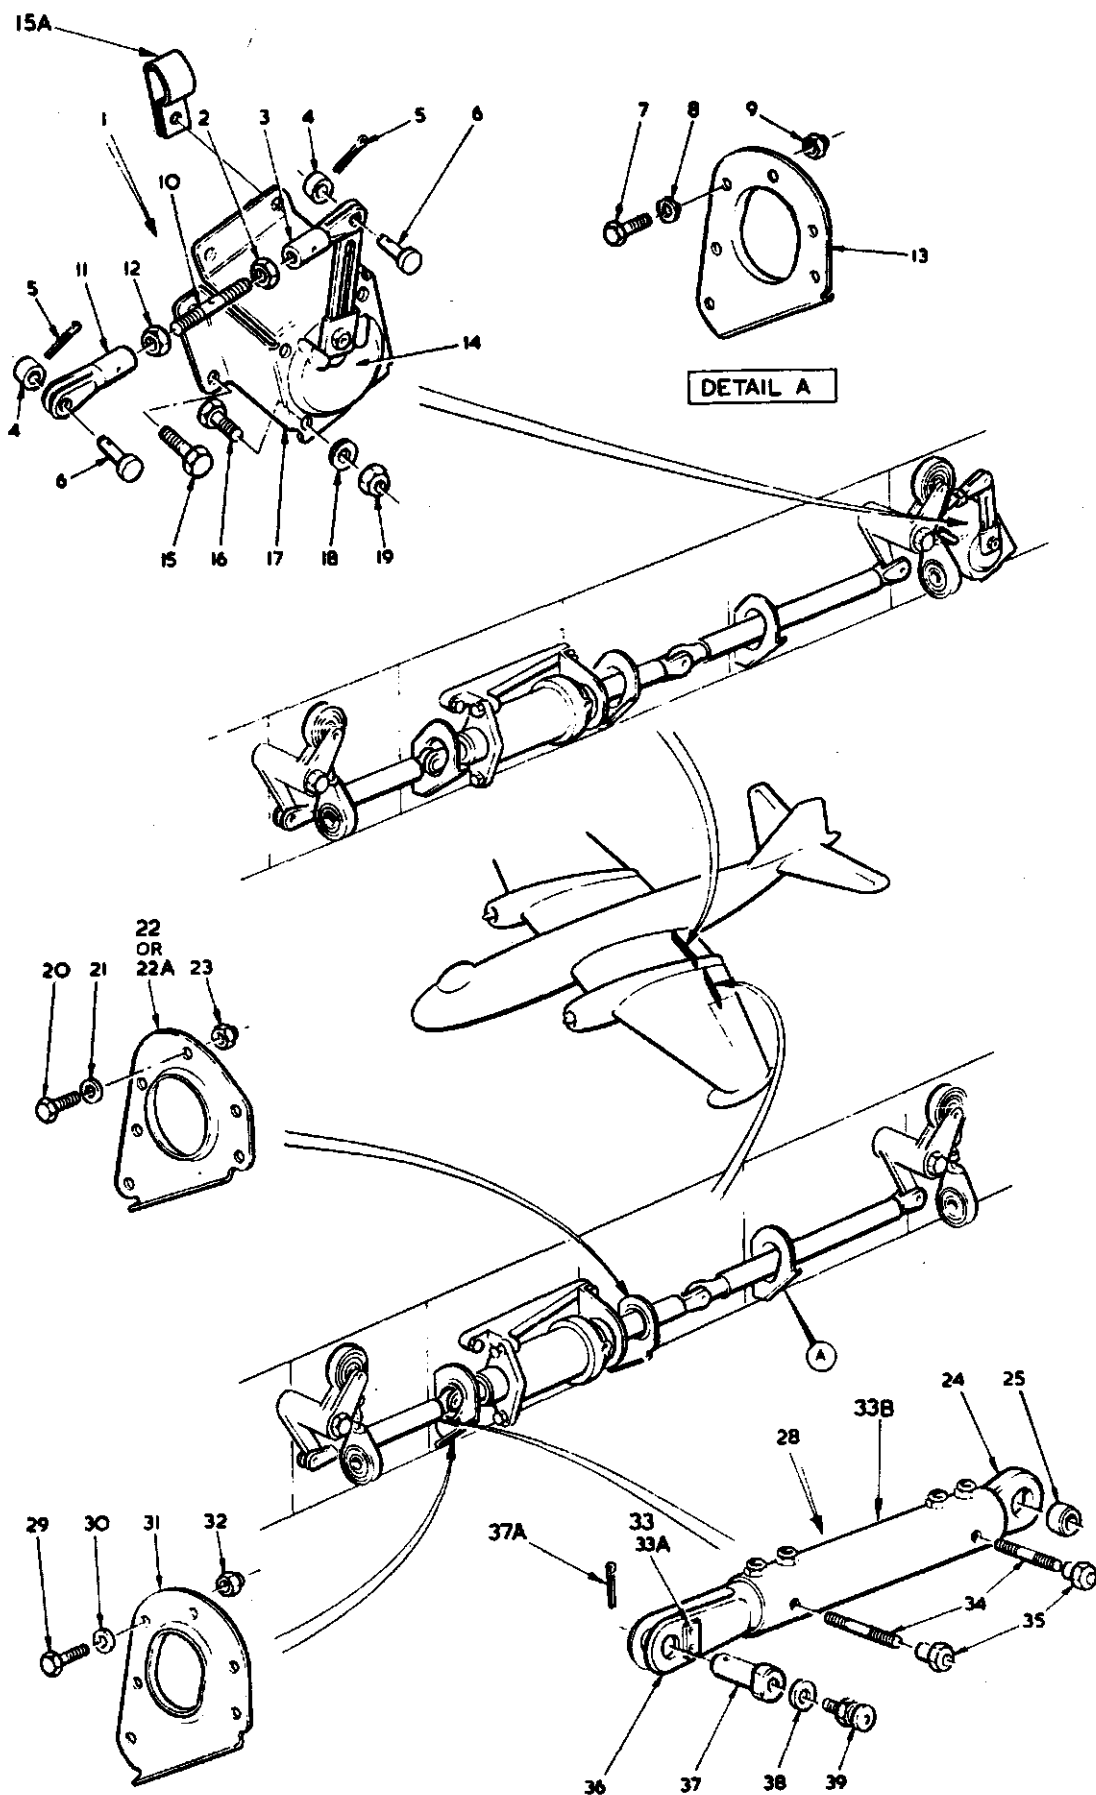


FIG.2 FLAP OPERATING MECHANISM PORT