

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.07.41	NOSE, FUSELAGE, ASSEMBLY (Supplied to Dwg. EG4.00.505 for spares purposes) (PRE-MOD 5347)						—	—	
EG4.00.639	NOSE, FUSELAGE, ASSEMBLY (Spares condition based on EG4.00.505 to LTF standard) (MOD 5347) Spares for:—						1	—	
EG4.75.405	. AIR VENTILATED SUIT FRONT FUSELAGE, INSTALLATION (See chapter S)						—	—	
—	. BLAST, COOLING FOR INVERTER TYPE 103A (See Drg. No. EB6.81.5275 in chapter EB)						—	—	
EA3.74.105	. BLAST, COOLING FOR INVERTER TYPE 200 Spares for:—						—	—	KB1/1
EA3.74.103	. . PIPE, assembly						1	—	KB1/2
EA3.74.107	. . SLEEVE, pipe, connecting						1	BSF67	KB1/3
EEAS20/2DU	. . TAB, locking						1	Type 1	KB1/4
EA3.74.99	. . WASHER, between inverter and pipe						1	L72	KB1/5
EG4.75.403	. CABIN PRESSURE SYSTEM (See chapter SB)						—	Felt	
EA3.74.21	. COLD AIR SUPPLY (See chapter SB)						1	—	
EG4.47.103	. CONTROLS, ENGINE (See chapter CB)						—	—	
EG4.45.103	. CONTROLS, FLYING IN COCKPIT (See chapter DA)						—	—	
EG4.76.101	. DE-MISTING SYSTEM (See chapter SD)						—	—	
EG4.81.2805	. ELECTRICAL EQUIPMENT IN FRONT FUSELAGE (See chapter EB)						—	—	

R
R
R
R

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EG4.10.701	.	FRONT FUSELAGE ASSEMBLY	1	—	
EA3.10.6387	.	Spares for:— ALTERATIONS TO NAVIGATOR'S HATCH LONGERONS AND FORWARD AND AFT MEMBERS (Aft. R60/88)	—	—	
	.	Spares for:—			
EA3.10.6417	.	ANGLE, LH	1	—	KB14/1
EA3.10.6418	.	ANGLE, RH	1	—	KB14/2
EA3.10.6419	.	ANGLE, LH	1	—	KB14/3
EA3.10.6420	.	ANGLE, RH	1	—	KB14/4
EA3.10.6421	.	ANGLE, LH	1	—	KB14/5
EA3.10.6422	.	ANGLE, RH	1	—	KB14/6
EA3.10.6427	.	ANGLE, LH	3	—	KB14/7
EA3.10.6428	.	ANGLE, RH	3	—	KB14/8
EA3.10.6429	.	ANGLE, LH	1	—	KB14/9
EA3.10.6430	.	ANGLE, RH	1	—	KB14/10
EA3.10.65	.	ANGLE, LH	1	—	KB14/11
EA3.10.66	.	ANGLE, RH	1	—	KB14/12
EA3.10.6395	.	ARCH, forward member (PRE—MOD 5347)	1	—	
EA3.00.5737	.	ARCH, forward member (Spares for EA3.10.6395) (MOD 5347)	1	—	KB14/13
EA3.10.6399	.	ARCH, aft member (PRE—MOD 5347)	1	—	
EA3.00.5735	.	ARCH, aft member (Spares for EA3.10.6399) (MOD 5347)	1	—	KB14/14
EA3.10.561	.	ARM, steady	23	—	KB14/15
EA3.10.173	.	CLEAT	2	—	KB14/16
EA3.10.171	.	CLEAT	2	—	KB14/17
EA3.10.6415	.	DIAPHRAGM, LH	1	—	KB14/18
EA3.10.6416	.	DIAPHRAGM, RH	1	—	KB14/19
EA3.10.6501	.	DIAPHRAGM, LH	1	—	KB14/20
EA3.10.6502	.	DIAPHRAGM, RH	1	—	KB14/21
EA3.10.6503	.	DIAPHRAGM, LH	1	—	KB14/22
EA3.10.6504	.	DIAPHRAGM, RH	1	—	KB14/23
EA3.10.6505	.	DOUBLING, LH	1	—	KB14/24
EA3.10.6506	.	DOUBLING, RH	1	—	KB14/25
EA3.10.6389	.	FRAME, bolt assembly (PRE—MOD 5347)	1	—	
EA3.00.5783	.	FRAME, bolt assembly (Spares for EA3.10.6389) (MOD 5347)	1	—	KB14/26
	.	Spares for:—			
EA3.10.6391	.	BLOCK, corner	2	—	KB14/27
EA3.10.6393	.	BLOCK, corner	2	—	KB14/28
EA3.10.1981	.	BLOCK	30	—	KB14/29
EA3.10.161	.	FRAME, bolt, forward	1	—	KB14/30
EA3.10.163	.	FRAME, bolt, aft	1	—	KB14/31
EA3.10.165	.	FRAME, bolt, LH	1	—	KB14/32
EA3.10.166	.	FRAME, bolt, RH	1	—	KB14/33
AGS2008/E/1	.	NUT, anchor, 1/4" BSF	68	—	KB14/34
	.	Attaching parts for EA3.10.6389:—			
EA1.10.1029	.	Bolt, explosive	34	—	KB14/35
EA3.10.6407	.	Bush	21	—	KB14/36
EA3.10.6511	.	Bush	2	—	KB14/37
A27LT	.	Nut, thin, 7/16" BSF	34	—	KB14/38
EA3.10.6411	.	Tube, distance	2	—	KB14/39
EA3.10.6413	.	Tube, distance	21	—	KB14/40
AGS2035L	.	Washer, shakeproof, 2/16" BSF	34	—	KB14/38A

AP101B-0415-3A

Page KB.2A

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.10.6401	. . . FITTING, forward, LH	1	-	KB15/1
EA3.10.6403	. . . FITTING, aft, LH	1	-	KB15/2
	Attaching parts for EA3.10.6401 and EA3.10.6403:-			
A59/7E	. . . Bolt, 1/4" BSF	3	-	KB15/3
A59/5E	. . . Bolt, 1/4" BSF	4	-	KB15/4
A59/3E	. . . Bolt, 1/4" BSF	4	-	KB15/5
A25/3C	. . . Bolt, 2BA	5	-	KB15/6
A27/CP	. . . Nut, 2BA, plain	5	-	KB15/7
A27/EP	. . . Nut, 1/4" BSF plain	11	-	KB15/8
SP124/E	. . . Washer, thin	4	-	KB15/9
SP125/E	. . . Washer, thick	4	-	KB15/10
SP125/C	. . . Washer, thick	5	-	KB15/11
EA3.10.6402	. . . FITTING, forward, RH	1	-	KB15/12
EA3.10.6404	. . . FITTING, aft, RH	1	-	KB15/13
	Attaching parts for EA3.10.6402 and EA3.10.6404:-			
A59/7E	. . . Bolt, 1/4" BSF	3	-	KB15/14
A59/5E	. . . Bolt, 1/4" BSF	4	-	KB15/15
A59/3E	. . . Bolt, 1/4" BSF	4	-	KB15/16
A25/3C	. . . Bolt, 2BA	5	-	KB15/17
A27/CP	. . . Nut, 2BA plain	5	-	KB15/18
A27/EP	. . . Nut, 1/4" BSF plain	11	-	KB15/19
SP124/E	. . . Washer, thin	4	-	KB15/20
SP125/E	. . . Washer, thick	4	-	KB15/21
SP125/C	. . . Washer, thick	5	-	KB15/22
EA3.10.6513	. . . GUSSET, LH	1	-	KB15/23
EA3.10.6514	. . . GUSSET, RH	1	-	KB15/24
EA3.10.6433	. . . LONGERON, escape hatch, LH	1	-	KB15/25
EA3.10.6435	. . . LONGERON, escape hatch, RH	1	-	KB15/26
EA3.10.45	. . . LONGERON, member, LH	1	-	KB15/27
EA3.10.46	. . . LONGERON, member, RH	1	-	KB15/28
EA3.10.6497	. . . PACKING	1	-	KB15/29
EA3.10.6499	. . . PACKING	1	-	KB15/30
EA3.10.6481	. . . PANEL, skin, LH	1	-	KB15/31
EA3.10.6482	. . . PANEL, skin, RH	1	-	KB15/32
EA3.10.515	. . . PANEL, skin	1	-	KB15/33
EA3.10.1097	. . . PANEL, skin	1	-	KB15/34
EA3.10.503	. . . PANEL, skin	1	-	KB15/35
EA3.10.1099	. . . PANEL, skin	1	-	KB15/36
EA3.10.519	. . . PANEL, skin	1	-	KB15/37
EA3.10.6431	. . . PLATE, tie	1	-	KB15/38
EA3.10.6432	. . . PLATE, tie	1	-	KB15/39
EA3.10.6515	. . . REINFORCING, LH	1	-	KB15/40
EA3.10.6516	. . . REINFORCING, RH	1	-	KB15/41
EA3.10.549	. . . SEAL, pressure	1	-	KB15/42
EA3.10.6489	. . . SHIM	2	-	KB15/43
EA3.10.6491	. . . SHIM	2	-	KB15/44
EA3.10.6493	. . . SHIM	2	-	KB15/45
EA3.10.6495	. . . SHIM	2	-	KB15/46
EA3.10.6397	. . . STIFFENER, hatch frame	1	-	KB15/47
EA3.10.6483	. . . STRAP, butt	2	-	KB15/48
EA3.10.6485	. . . STRAP, butt	2	-	KB15/49
EA3.10.6487	. . . STRAP, butt	2	-	KB15/50
EA3.10.471	. . . WEDGE, packing	10	-	KB15/51

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.391	. .	ARM, steady, L.H. for escape hatch explosive bolt	1	—	
EA3.10.392	. .	ARM, steady, R.H. for escape hatch explosive bolt	1	—	
EA3.10.561	. .	ARM, steady, for escape hatch explosive bolt (Pre-Mod 5100)	24	—	
EA3.10.561	. .	ARM, steady, for escape hatch explosive bolt (Mod 5100)	23	—	
		Attaching parts for EA3.10.391, EA3.10.392 or EA3.10.561:—			
A61/2C	. .	Bolt, 2BA	2	—	
AGS2001C3	. .	Nut, 2BA	2	—	
EA3.10.651	. .	Shim	QR	—	
EA3.10.2551	. .	ARM, steady, L.H. for escape hatch explosive bolt	1	L72	KB5/47
EA3.10.2552	. .	ARM, steady, R.H. for escape hatch explosive bolt	1	L72	KB5/48
		Attaching parts for EA3.10.2551 or EA3.10.2552:—			
A61/3C	. .	Bolt, 2BA	2	—	
AGS2001C3	. .	Nut, 2BA	2	—	
EA3.10.2549	. .	Shim	4	—	
EA3.10.2583	. .	ARM, steady, for escape hatch explosive bolt	3	—	
EA3.10.2584	. .	ARM, steady, for escape hatch explosive bolt	3	—	
		Attaching parts for EA3.10.2583 or EA3.10.2584:—			
A61/3C	. .	Bolt, 2BA	2	—	
AGS2001C3	. .	Nut, 2BA	2	—	
EA3.10.651	. .	Shim	QR	—	
EA1.10.1029	. .	BOLT, special, explosive, navigator's escape hatch	34	—	KB5/49
EA3.10.6477	. .	BOLT, special, 1/4" BSF navigator's (Alt. R60/44—Mod 5100)	68	—	
EA3.10.2581	. .	BRACKET, hinge, port	1	—	KB6/9A
EA3.10.2582	. .	BRACKET, hinge, starboard	1	—	KB6/10A
		Attaching parts for EA3.10.2581 or EA3.10.2582:—			
AS1242/4C	. .	Bolt, 2BA	2	—	KB6/9B
AS1242/5C	. .	Bolt, 2BA (Alternative to AS1242/4C)	2	—	
AS1242/6C	. .	Bolt, 2BA	2	—	KB6/9C
AS1242/7C	. .	Bolt, 2BA (Alternative to AS1242/6C)	2	—	
AGS2001C1/66	. .	Nut, 2BA	4	—	KB6/9D
SP13C	. .	Washer	4	—	KB6/9E
EA1.20.1033	. .	Washer, special	4	—	KB6/9F

AP101B-0415-3A

Page KB.3

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.10.983	. . BUSH, rubber for canopy bolt	16	—	KB11/16
EA1.10.1163	. . BUSH, navigator's escape hatch explosive bolt (Pre-Mod 5100)	21	L40	KB5/50
EA1.10.1165	. . BUSH, navigator's escape hatch explosive bolt forward corners only (Pre-Mod 5100)	13	L40	KB5/51
EA1.10.1165	. . BUSH, navigator's escape hatch explosive bolts (Mod 5100)	11	L40	
EA3.10.6407	. . BUSH, navigator's escape hatch explosive bolts (Alt. R60/88-Mod 5100)	21	L40	
EA3.10.6511	. . BUSH, navigator's escape hatch explosive bolts (Alt. R60/88-Mod 5100)	2	L40	
EA3.10.3021	. . CAP, sealing, for escape hatch pivot	2	L40	KB5/52
EA3.10.3019	. . COLLAR, sealing, for escape hatch pivot	2	DTD683	KB5/53
EA1.10.501	. . DOOR, ACCESS, EQUIPMENT, ASSEMBLY (Supplied to Part No. EA3.00.113 for spares purposes with trim allowance) Spares for :-	1	—	KB2/1
EA1.10.511	. . . LINK, connecting	2	—	KB2/2
AS2866P	. . . LOCK, L.H., FLUSH TYPE, ASSEMBLY Spares for :-	1	—	KB2/3
AS5382	 BOLT, pivot	1	—	KB2/4
AS2558	 BUTTON, pressure seal	1	—	KB2/5
AS2528	 BUTTON, push, outer	1	—	KB2/5A
AS2552	 HANDLE, single handle lock	1	—	KB2/6
FGS 50	 KEY	1	—	
or FFE 4				
AS2532	 PLATE, catch	1	—	KB2/7
AS2530	 PLATE, centre, push button	1	—	KB2/6A
AS2559	 SEAL, handle	1	—	KB2/8
AS5381	 SEAL, push button	1	—	KB2/9
AS2534	 SPRING, for catch	1	—	KB2/10
AS2556	 STUD, spring	1	—	KB2/11
A33B12	Attaching parts for AS2866P :- . . . Screw, 4BA	11	—	KB2/13
EA1.10.2423	. . . PANEL, removable	1	—	KB2/14
EA1.10.2421	. . . RING, packing	1	—	KB2/12
EA1.10.549	. . . ROD, door lock	2	L64	KB2/15
EA1.10.2425	. . . STRIP, sealing, ½" wide (Make from EEAS141/1, Ref. 12713)	1	—	KB2/16

R
R

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.1401	. . .	DOOR, MAIN ENTRANCE, ASSEMBLY Spares for :-	1	—	KB3/1
EA1.10.1145	. . .	BOLT, assembly, door, aft	1	—	KB3/2
EA1.10.1143	. . .	BOLT, assembly, door, forward	1	—	KB3/3
SP4Y/B6	. . .	Attaching parts for EA1.10.1145 and EA1.10.1143 :- Pin	1	—	KB3/4
EA3.10.2313	. . .	FAIRING, handle, internal	1	—	KB3/5
AS1248/2C	. . .	Attaching parts for EA3.10.2313 :- Bolt, 2BA	13	—	KB3/6
EA1.10.1785	. . .	HANDLE, door, internal	1	—	KB3/7
AS1248/2C	. . .	Attaching parts for EA1.10.1785 :- Bolt, 2BA	1	—	KB3/8
SP47C	. . .	Washer	1	—	KB3/9
SP13C	. . .	Washer	1	—	KB3/10
EA3.10.1407	. . .	HINGE, ENTRANCE DOOR, ASSEMBLY Spares for :-	2	—	KB3/1A
SKEFKO CBS3	. . .	BEARING, ballrace	2	—	KB3/1B
EA3.10.1403	. . .	HINGE	1	—	KB3/1C
EA3.10.1405	. . .	PIN	1	—	KB3/1D
EA1.10.1733	. . .	HOUSING, door, bolt aft	1	—	KB3/11
A25/2B	. . .	Attaching parts for EA1.10.1733 :- Bolt, 4BA	16	—	KB3/12
A27BP	. . .	Nut, 4BA	16	—	KB3/13
SP47B	. . .	Washer	16	—	KB3/14
EA1.10.1735	. . .	HOUSING, door, bolt forward	1	—	KB3/15
A25/1B	. . .	Attaching parts for EA1.10.1735 :- Bolt, 4BA	10	—	KB3/16
A25/2B	. . .	Bolt, 4BA	14	—	KB3/17
A27BP	. . .	Nut, 4BA	14	—	KB3/18
SP47B	. . .	Washer	24	—	KB3/19
EA1.10.1337	. . .	LEVER, cranked, aft	1	—	KB3/20
EA1.10.813	. . .	LEVER, cranked, forward	1	—	KB3/21
A25/6C	. . .	Attaching parts for EA1.10.1337 and EA1.10.813 :- Bolt, 2BA	1	—	KB3/22
EA1.10.1149	. . .	Tube, distance	1	—	KB3/23
EA1.10.821	. . .	LINK, coupling, crank lever to door handle	1	—	KB3/24
SP4Y/B4	. . .	Attaching parts for EA1.10.821 :- Pin	2	—	KB3/25
SP13C	. . .	Washer	2	—	KB3/26

AP101B-0415-3A

FUSELAGE

Page KB.5

FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
AS2864P	. . .	LOCK, FLUSH FITTING DOOR, ASSEMBLY	1	—	KB3/27
		Spares for :—			
AS5382	. . .	BOLT, pivot	1	—	KB3/28
AS2558	. . .	BUTTON, pressure seal	1	—	KB3/29
AS2528	. . .	BUTTON, push inner	1	—	KB3/29A
AS2549	. . .	HANDLE, outer, double handle lock	1	—	KB3/30
FGS 50	. . .	KEY	1	—	
or					
FFE 4					
AS2532	. . .	PLATE, catch	1	—	KB3/31
AS2530	. . .	PLATE, centre, push button	1	—	KB3/31A
AS2559	. . .	SEAL, handle	1	—	KB3/32
AS5381	. . .	SEAL, push button	1	—	KB3/33
AS2534	. . .	SPRING, for catch	1	—	KB3/34
AS2556	. . .	STUD, spring	1	—	KB3/35
		Attaching parts for AS2864P :—			
AS1248/1B	. . .	Bolt, 4BA	4	—	KB3/36
A33820	. . .	Screw, 4BA	11	—	KB3/37
EA1.10.1995	. . .	PANEL, access	1	L72	KB3/38
		Attaching parts for EA1.10.1995 :—			
AS1242/2C	. . .	Bolt, 2BA	14	—	KB3/39
AS1248/2C	. . .	Bolt, 2BA	30	—	KB3/40
EA3.10.1447	. . .	PANEL, dished back	1	—	KB3/41
		Attaching parts for EA3.10.1447 :—			
AS1248/2C	. . .	Bolt, 2BA	1	—	KB3/42
EA1.10.2657	. . .	Gasket	1	—	KB3/43
EA1.10.1319	. . .	PLATE (bracket), swivel door stop	1	L72	KB3/44
		Attaching parts for EA1.10.1319 :—			
A27EP	. . .	Nut, 1/4" BSF	1	—	KB3/45
SP13E	. . .	Washer	1	—	KB3/46
CM015/FIG. 3	. . .	PLATE, backing	1	—	
CM015/FIG. 2	. . .	PLATE, stowage mounting	1	—	
CM015/FIG. 4	. . .	POCKET and flap	2	—	
EA1.10.1651	. . .	SEAL, door, outer (Make from 32C/652)	1	—	KB3/47
EA3.10.2813	. . .	STRAP, support strut, stowage	1	—	KB3/48
EA3.10.1459	. . .	TUBE, stay, door prop	1	—	KB3/49
EA1.10.939	. . .	DOOR, NOSE, UNDERCARRIAGE, PORT, ASSEMBLY	1	—	KB4/1
		(Supplied to Part No. EA3.00.149 for spares purposes)			
		Spares for :—			
EA1.10.957	. . .	BLOCK, catch	2	—	KB4/2
		Attaching parts for EA1.10.957 :—			
EA1.10.961	. . .	Bolt, special	4	—	KB4/3
EA1.10.963	. . .	Shim	1	—	KB4/4
SP47C	. . .	Washer	4	—	KB4/5
EA1.10.1367	. . .	BRACKET, door, pick-up	1	—	KB4/6
		Attaching parts for EA1.10.1367 :—			
EA1.10.2707	. . .	Bolt, special (Make from A25/3C)	8	—	KB4/7
EA1.10.1369	. . .	Shim	1	—	KB4/8

FUSELAGE

AP101B-0415-3A

FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.10.1271	. . .	HINGE (Make from AS1880, Ref. 28N/9486785)	1	—	KB4/9
EA1.10.1413	. . .	HINGE, assembly	1	—	KB4/10
EA1.10.955	. . .	PAD	1	Rubber	KB4/11
EA1.10.2467	. . .	Attaching parts for EA1.10.955 :—			
or	. . .	Angle	1	—	KB4/12
EA3.10.6377	. . .	Angle	1	L72	
EA3.10.3485	. . .	Packing	1	—	KB4/13
or	. . .	Packing	1	L72	
EA3.10.6383	. . .	Screw, 2BA	2	—	KB4/14
A33C32	. . .	Shim	1	Light Alloy	KB4/15
EA1.10.949	. . .	Shim	1	BACM64	
or	. . .	Washer	2	—	KB4/16
EA3.10.6381	. . .	Washer	2	—	KB4/16
EA1.10.2655	. . .	PAD, stop	1	—	KB4/17
EA1.10.2065	. . .	SPUR	1	—	KB4/18
EA3.10.2811	. . .	STRIP, sealing (Make from Ref. 4756) (Pre-Mod 5282)	1	Synthetic Rubber	KB4/19
EA3.10.6583	. . .	STRIP, sealing (Mod 5282) (Make from EEAS 844, 26FZ/6147755)	1	Neoprene DTD 5514	
AGS2001A1	. . .	Attaching parts for EA3.10.2811 and EA3.10.6583 :—			
A33A12	. . .	Nut, 6BA	16	—	KB4/20
EA1.10.2513	. . .	Screw, 6BA	16	—	KB4/21
EA1.10.2515	. . .	Strip, securing	1	—	KB4/22
EA1.10.2515	. . .	Strip, securing	1	—	KB4/23
EA1.10.940	. . .	DOOR, NOSE, UNDERCARRIAGE, STARBOARD, ASSEMBLY (Supplied to Part No. EA3.00.150 for spares purposes) Spares for :—	1	—	KB4/24
EA3.10.3129	. . .	BLOCK, door catch Attaching parts for EA3.10.3129 :—	2	—	KB4/25
EA1.10.983	. . .	Bolt, special	4	—	KB4/26
SP47C	. . .	Washer, spring	4	—	KB4/27
EA1.10.1367	. . .	BRACKET, door, pick-up Attaching parts for EA1.10.1367 :—	1	—	KB4/28
EA1.10.2707	. . .	Bolt, special (Make from A25/3C)	8	—	KB4/29
EA1.10.1369	. . .	Shim	1	—	KB4/30
EA1.10.2071	. . .	BRACKET, roller Attaching parts for EA1.10.2071 :—	1	—	KB4/31
A25/3C	. . .	Bolt, 2BA	2	—	KB4/32
A27CP	. . .	Nut, 2BA	2	—	KB4/33
EA1.10.2077	. . .	Washer, special	2	—	KB4/34
EA3.10.3085	. . .	BRACKET, spring seating Attaching parts for EA3.10.3085 :—	1	L65	KB4/35
A25/3C	. . .	Bolt, 2BA	2	—	KB4/36
AGS2002C1/66	. . .	Nut, 2BA	2	—	KB4/37
SP16C	. . .	Washer	2	—	KB4/38
EA1.10.1272	. . .	HINGE (Make from AS1880, Ref. 28N/9486785)	1	—	KB4/39
EA1.10.1414	. . .	HINGE, assembly	1	—	KB4/40

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.3193	. . .	HOOK, door latch, forward	1	—	KB4/41
EA1.10.971	. . .	Attaching parts for EA3.10.3193 :—	1	—	KB4/42
EA1.45.989	. . .	Pin, pivot	1	—	KB4/43
EEAS28/23CU	. . .	Shim	1	—	KB4/44
	. . .	Washer	2	—	KB4/44
EA3.10.3239	. . .	HOOK, door latch aft (Mod 1465)	1	S11	KB4/45
EA3.10.3375	. . .	Attaching parts for EA3.10.3239 :—	5	L72	KB4/46
EA1.10.971	. . .	Packing (Mod 1465)	1	—	KB4/47
SP15G	. . .	Pin, pivot	1	—	KB4/48
	. . .	Washer	1	—	KB4/48
EA1.10.955	. . .	PAD	1	Rubber	KB4/49
EA1.10.2467	. . .	Attaching parts for EA1.10.955 :—	1	—	KB4/50
or	. . .	Angle	1	—	KB4/50
EA3.10.6378	. . .	Angle	1	L72	KB4/51
EA3.10.3485	. . .	Packing	2	—	KB4/51
or	. . .	Packing	1	L72	KB4/52
EA3.10.6383	. . .	Screw, 2BA	2	—	KB4/52
A33C32	. . .	Shim	1	Light Alloy	KB4/53
EA1.10.949	. . .	Shim	1	—	KB4/54
or	. . .	Washer	2	BACM64	KB4/54
EA3.10.6381	. . .	Shim	1	—	KB4/55
EEAS6C	. . .	Washer	2	—	KB4/55
EA1.10.1725	. . .	PLATE, cover	1	—	KB4/56
A33B12	. . .	Attaching parts for EA1.10.1725 :—	2	—	KB4/56
	. . .	Screw, 4BA	2	—	KB4/56
EA3.10.3211	. . .	ROD, CONNECTING NOSE UNDERCARRIAGE	1	—	KB4/57
	. . .	DOOR HOOKS, ASSEMBLY	1	—	KB4/57
	. . .	Spares for :—	1	—	KB4/58
EA3.10.3083		COLLAR, spring, adjusting	1	L65	KB4/58
EA3.10.3207		FORK-END	1	S96	KB4/59
EA3.10.3213		FORK-END	1	S96	KB4/60
A27CP		NUT, 2BA	2	—	KB4/61
A27CPL		NUT, 2BA	1	—	KB4/62
EA3.10.3209		ROD	1	S96	KB4/63
EA3.20.2271		SPRING	1	DTD239A	KB4/64
		Attaching parts for EA3.10.3211 :—	1	—	KB4/65
AGS899/1		Collar	2	—	KB4/65
SP4Y/A7		Pin, shackle	2	—	KB4/66
SP90C4		Pin, split	2	—	KB4/67
EA1.10.2075	. . .	ROLLER	1	—	KB4/68
EA1.10.2073	. . .	Attaching parts for EA1.10.2075 :—	1	—	KB4/69
	. . .	Pin	1	—	KB4/69
EA3.10.2811	. . .	STRIP, sealing (Make from Ref. 4756) (Pre-Mod 5282)	1	Synthetic Rubber	KB4/70
EA3.10.6583	. . .	STRIP, sealing (Mod 5282)	1	Neoprene	KB4/71
	. . .	(Make from EEAS 844, 26FZ/6147755)	1	DTD 5514	KB4/71
	. . .	Attaching parts for EA3.10.2811 and EA3.10.6583 :—	16	—	KB4/72
AGS2001A1		Nut, 6BA	16	—	KB4/72
A33A12		Screw, 6BA	1	—	KB4/73
EA1.10.2145		Strip, securing	1	—	KB4/73
EA1.10.2515		Strip, securing	1	—	KB4/74

FUSELAGE
FRONT FUSELAGE

AP101B-0415-3A

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.10.1229	. . .	GUARD, block, pressure cabin door seal	1	—	KB3/53
EA1.10.1153	. . .	HANDLE, main door jettison	1	L72	KB3/50
EA3.00.5325	. . .	HATCH, ESCAPE, NAVIGATOR'S (MOD 4094) (EA3.10.6301); (Supplied for spares purposes with trim allowance) (Pre-Mod 5347) Spare for :—	1	—	KB5/1
SIS1564	. . .	BLOCK, terminal, 2-way, type B Attaching parts for SIS1564 :—	1	—	KB5/2
A33A20	. . .	Screw, 6BA	2	—	KB5/3
EA3.81.5849	. . .	CABLE, assembly, N417 Attaching parts for EA3.81.5849 :—	1	—	KB5/4
A33B6	. . .	Screw, 4BA, countersunk	4	—	KB5/4A
EA3.10.6109	. . .	CHANNEL, butt connector Attaching parts for EA3.10.6109 :—	1	—	KB5/5
A25/2C	. . .	Bolt, 2BA	4	—	KB5/6
AGS2001C1-66	. . .	Nut, 2BA	4	—	KB5/7
SP16C	. . .	Washer	4	—	KB5/8
MARTIN BAKER MBEU320EE	. . .	CLIP, stowage, safety harness Attaching parts for MBEU320EE :—	4	—	KB5/9
A25/5B	. . .	Bolt, 4BA	4	—	KB5/10
AGS2001B1	. . .	Nut, 4BA	4	—	KB5/11
EA3.10.2277	. . .	Packing	1	—	KB5/12
EA3.10.2281	. . .	Packing	2	—	KB5/13
SP15B	. . .	Washer	4	—	KB5/14
MARTIN BAKER MBEU321EE	. . .	CLIP, stowage, parachute harness Attaching parts for MBEU321EE :—	4	—	KB5/15
A25/5B	. . .	Bolt, 4BA	4	—	KB5/16
AGS2001B1	. . .	Nut, 4BA	4	—	KB5/17
EA3.10.6135	. . .	Packing	QR	—	KB5/18
EA3.10.2275	. . .	Packing	QR	—	KB5/19
EA3.10.2279	. . .	Packing	QR	—	KB5/20
SP15B	. . .	Washer	4	—	KB5/21

AP101B-0415-3A

Page KB.9

FUSELAGE
FRONT FUSELAGE

Part Number						Description	No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA6.10.2683	.	.	.	.	.	CURTAIN	1	—	KB5/22
EA3.80.6659	.	.	.	.	.	EYE BOLT, starboard side (Mod 5093)	1	—	KB5/23
EB7.10.5093	.	.	.	.	.	FORK-END, port side	2	—	KB5/23A
AGS2001C1/66	.	.	.	.	.	Attaching parts for EA3.80.6659 or EB7.10.5093 :—	1	—	KB5/24
SP15C	.	.	.	.	.	Nut, 2BA	1	—	KB5/25
EA3.10.6111	.	.	.	.	.	Washer	1	—	KB5/26
EA3.10.6111	.	.	.	.	.	HOLDER, spigot	1	—	KB5/26
A25/4E	.	.	.	.	.	Attaching parts for EA3.10.6111 :—	2	—	KB5/27
SP16E	.	.	.	.	.	Bolt, 1/4" BSF	2	—	KB5/28
EA3.10.3765	.	.	.	.	.	Washer	2	—	KB5/28
EA3.10.3765	.	.	.	.	.	PLATE, blanking	1	—	KB5/29
EA3.10.6275	.	.	.	.	.	PLATE, window securing	2	L72	KB5/30
EEAS1/1C	.	.	.	.	.	Attaching parts for EA3.10.6275 :—	46	—	KB5/31
EEAS1/2C	.	.	.	.	.	Bolt, 2BA	2	—	KB5/32
AGS2001C1/66	.	.	.	.	.	Bolt, 2BA	48	—	KB5/33
SP15C	.	.	.	.	.	Nut, 2BA	48	—	KB5/34
EA3.10.6137	.	.	.	.	.	Washer	48	—	KB5/34
EA3.10.6137	.	.	.	.	.	RING, packing	1	—	KB5/35
EA3.10.6121	.	.	.	.	.	RING, packing	1	—	KB5/36
EA3.10.6247	.	.	.	.	.	RING, packing	1	—	KB5/36A
EA3.10.311	.	.	.	.	.	SEAL, aft	1	S/H35	KB5/37
EA3.10.313	.	.	.	.	.	SEAL, forward	1	S/H35	KB5/38
EA3.10.309	.	.	.	.	.	SEAL, side	2	S/H35	KB5/39
EA3.10.6099	.	.	.	.	.	SPIGOT, screwed	2	—	KB5/40
A27JT	.	.	.	.	.	Attaching parts for EA3.10.6099 :—	1	—	KB5/41
EA3.10.305	.	.	.	.	.	Nut, 3/8" BSF	2	—	KB5/42
EA3.10.305	.	.	.	.	.	WINDOW, perspex	2	—	KB5/42
EEAS1/6C	.	.	.	.	.	Attaching parts for EA3.10.305 :—	20	—	KB5/43
AGS2001C1/66	.	.	.	.	.	Bolt, 2BA	20	—	KB5/44
EA3.10.307	.	.	.	.	.	Nut, 2BA	2	—	KB5/45
SP15C	.	.	.	.	.	Seal, rubber	40	—	KB5/46
SP15C	.	.	.	.	.	Washer	40	—	KB5/46

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
R -		HATCH, NAVIGATOR'S ASSEMBLY	-	-	
R EA3.00.5713		Comprising:- HATCH, NAVIGATOR'S (Spares for EA3.10.6301 modified to EA3.10.6461 Alt. R60/44) (MOD 5347)	1	-	KB16/1
R EA3.00.5793		KIT, LOOSE EQUIPMENT FOR NAVIGATOR'S HATCH (LOOSE EQUIPMENT KIT IS ESSENTIAL REQUIREMENT WITH HATCH) (MOD 5347) Comprising:-	1	-	
R TYPE B No. 1		BLOCK, terminal	1	-	KB16/2
R EEAS1/1C		BOLT	10	-	KB16/3
R AS1246/1B		BOLT	6	-	KB16/4
R A25/1B		BOLT	3	-	KB16/5
R EA3.10.6477		BOLT, special	68	-	KB16/6
R EA3.81.5849		CABLE, assembly	1	-	KB16/7
R AS3180/4B		CLIP, 'P'	3	-	KB16/8
R EA6.10.2683		CURTAIN	2	-	KB16/9
R EA6.10.2589		FAIRING, canopy	1	-	KB16/10
R EB7.10.5093		FORK-END	1	-	KB16/11
R AGS2007C1		NUT, anchor	10	-	KB16/12
R AGS2001C1		NUT, stiff	2	-	KB16/13
R AGS2001B1		NUT, stiff	6	-	KB16/14
R EA3.80.1787		PLATE	2	L72 x 20 SWG	KB16/15
R AS2230-303		RIVET	20	-	KB16/16
R ND		SCREW, hook	8	-	KB16/17
R A33A20		SCREW	2	-	KB16/18
R EEAS1/2E		SCREW	2	-	KB16/19
R A33B6		SCREW	4	-	KB16/20
R EA3.10.309		SEAL, rubber (Make from 26FZ/208-EEAS74)	2	-	KB16/21
R EA3.10.311		SEAL, rubber (Make from 26FZ/208-EEAS74)	1	-	KB16/22
R EA3.10.313		SEAL, rubber (Make from 26FZ/208-EEAS74)	1	-	KB16/23
R SP15C		WASHER	2	-	KB16/24
R SP15B		WASHER	3	-	KB16/25
R ND		WIRE, 8" long (For installation details of the above refer to drawings EA3.10.6301 and EA3.10.6461)	4	-	KB16/26

FUSELAGE
FRONT FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.10.3481		HOOD COUPE TO FUSELAGE, ASSEMBLY	—	—	KB6/1
		Spares for:—			
EA3.10.2221		BOLT, special, explosive hood fixing	30	L65	KB6/2
EA3.10.2085		BOLT, special, explosive hood fixing	2	L65	KB6/3
EA1.10.1035		BUSH, coaming, tube explosive bolt	31	L40	KB6/4
EA1.10.1167		BUSH, coaming, explosive bolt entry	2	L40	KB6/5
EA1.10.1169		BUSH, coaming, tube explosive bolt entry	30	L40	KB6/6
EA1.10.1435		BUSH, coaming, tube explosive bolt	1	L40	KB6/7
—		COAMING TUBE, REPAIR FOR EXPLOSIVE BOLTS (EA3.03.35, ASD319RS) AND ASD617RS)	—	—	
		Spares for (Per Set):—			
EA3.03.47		BUSH, (First repair)	2	—	
EA3.03.129		BUSH, (Second repair)	2	—	
EA3.03.297		BUSH, (Third repair)	2	—	
EA3.03.45		BUSH, locking (First repair)	30	—	
EA3.03.127		BUSH, locking (Second repair)	30	—	
EA3.03.295		BUSH, locking (Third repair)	30	—	
EA3.03.41		BUSH, tapped (First repair)	31	—	
EA3.03.125		BUSH, tapped (Second repair)	31	—	
EA3.03.291		BUSH, tapped (Third repair)	31	—	
EA3.03.43		BUSH, tapped (First repair)	1	—	
EA3.03.201		BUSH, tapped (Second repair)	1	—	
EA3.03.293		BUSH, tapped (Third repair)	1	—	
EA3.03.37		TUBE, distance	31	—	
EA3.03.39		TUBE, distance	1	—	
EA3.00.509		HOOD, COUPE, C/W EDGE MEMBER, ASSEMBLY (EA3.15.125)	1	—	KB6/8
		Spares for:—			
EA3.10.3479		BRACKET, hinge	1	—	KB6/9
EA3.10.3480		BRACKET, hinge	1	—	KB6/10
EA6.10.2587		FAIRING, canopy, forward section	1	—	KB6/11
EA3.15.115		HOOD, ASSEMBLY	1	—	KB6/12
		Spares for:—			
EA1.15.9		BRACKET, fastener	1	L40	KB6/13
EA1.15.13		BRACKET, hinge	1	L40	KB6/14
EA3.15.109		BUSH, rubber	24	—	KB6/15
EA3.15.95		BUSH, rubber for attachment screws	148	—	KB6/16
EA1.81.689/1		CABLE ASSEMBLY, N57A, HEATED WINDSCREEN TO COUPE BREAK	1	—	KB6/17
		Spares for:—			
SIS1657		PLUG, 2 way, flat type R	1	—	KB6/18
SIS1658		SOCKET, 2 way, flat type R	1	—	KB6/19
EA1.15.19		EYE-BOLT, 2BA	1	DTD126A	KB6/20
EA3.15.129		LANDING, door, 12 SWG	1	L72	KB6/21
EA1.15.17		NUT, knurled, 2BA	1	L40	KB6/22
EA3.15.133		RING, sealing	1	L72	KB6/23
EA3.15.107		RING, packing	1	DTD838	KB6/24
EA3.15.135		SEALING, rubber, 1/32" thick	1	S/H30	KB6/25
EA3.15.87		SEALING, rubber, between edge member and hood	1	Natural Rubber	KB6/26
EA1.15.23		SPRING, 20 SWG	1	Spring Steel	KB6/27
EA3.15.131		WASHER, sealing, moulded rubber	1	S/H30	KB6/28

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA3.15.105		WINDOW, DIRECT VISION, ASSEMBLY (MOD 519) (PRE-MOD 4333)	1	—	
EA3.15.139		WINDOW, DIRECT VISION, ASSEMBLY (MOD 4333)	1	—	KB6/29
R No. 1410		Spares for :— ADHESIVE, Bostic (Com Mod 0169)	QR	—	
EA1.15.161		BRACKET, fastener	1	L40	KB6/30
EA1.15.163		BRACKET, hinge c/w bushes	1	L40	KB6/31
EA1.15.173		PACKING, bracket, fastener	1	—	KB6/32
EA1.15.175		PACKING, bracket, hinge	1	—	KB6/33
EA3.15.69		PANEL, c/w elements (Pre-Mod 4333)	1	Toughened Glass	
EA3.15.137		PANEL, c/w elements (Mod 4333)	1	—	KB6/34
EA1.15.151		PLATE, 16 SWG	1	L73	KB6/35
EA1.15.145		RING, rubber insulator	1	S/H40	KB6/36
EA1.15.147		RING, rubber, sealing	1	S/H40	KB6/37
EA3.15.127		RING	1	LFS26	KB6/38
EA1.15.155		RING, sealing	1	Rubber	KB6/39
EA1.15.157		RING, clamping, 20 SWG	1	L72	KB6/40
R AHO.18822/15		RING, sealing (Com Mod 0619)	1	—	
EA3.15.111		TERMINAL	4	BSS369	KB6/41
R EA3.10.2223		MEMBER, edge, coupe hood	1	—	KB6/42
EA3.10.3451		PLATE, attachment, port	1	L72	KB6/43
EA3.10.3453		PLATE, attachment, starboard	1	L72	KB6/44
EA3.10.3455		PLATE, attachment, rear	1	L72	KB6/45
EA3.10.3457		PLATE, attachment, front	1	—	KB6/46
EA3.10.3061		SHIM, hinge bracket	4	—	KB6/47
EA3.10.3063		SHIM, hinge bracket	4	—	KB6/48
EA6.10.2679		STRIP, rubber for canopy, forward fairing (Make from Ref. 32C/4382968)	QR	Linatex	KB6/49
EA3.10.2249		SEAL, rubber strip, coaming tube to canopy 1/8" x 1 1/4" (Make from Ref. 32C/4382961)	QR	Linatex	KB6/50
EA3.10.2251		SEAL, rubber strip coaming tube to canopy 1/16" x 1 1/4" (Make from Ref. 32C/4382968)	QR	Linatex	KB6/51
EA3.10.2245		TUBE, COAMING, COUPE, ASSEMBLY	1	—	KB6/52
EA3.16.5025		Spares for :— BRACKET, TOP ATTACHMENT GUIDE RAIL, ASSEMBLY (MOD 4151)	2	—	KB6/53
EA3.16.5027		Spares for :— EYE-BOLT	1	S96	KB6/54
A27EP		Attaching parts for EA3.16.5027 :— Nut, 1/4" BSF	1	—	KB6/55
EA1.10.847		Washer, saddle	1	—	KB6/56
EA1.10.849		Washer, saddle	1	—	KB6/57
EA1.10.1657		CLIP, special, top half air drier mounting	4	DTD214	KB6/58
EA1.10.1659		CLIP, special, bottom half air drier mounting	4	DTD214	KB6/59
EA1.10.1501		CROSS-TUBE, canopy coaming	1	—	KB6/50
EA1.10.1663		NUT, special, knurled finger	8	L40	KB6/61
EA3.10.2773		PLATE, blast	1	L72	KB6/62
EA1.10.847		WASHER, saddle, special, pilot's seat, rear fixing	2	L40	KB6/63

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG4.10.709	KEEL UNIT, COMPLETE, ASSEMBLY	1	—	KB7/1
EA3.11.655	Spares for :—	4	—	KB7/2
EA3.10.885	BOLT, special (Make from A25/4E)	1	—	KB7/3
AS 1248/1C	DOOR, probe, access	12	—	KB7/4
EB6.80.1047	Attaching parts for EA3.10.885 :—	—	—	
	Bolt, 2BA	—	—	
	FLOOR, NAVIGATOR'S SECTION	—	—	
	Spares for :—	—	—	
EB6.80.7321	PLATE, assembly (Mod 5259)	1	—	
EB6.80.7323	Spares for :—	1	—	
EB6.80.1097	INSULATION (Make from Fiberfax DS21 type GH 0.25" or 6mm thick)	1	L72 x 22 SWG	
	PLATE	1	—	
EG4.10.711	SKINNING PRESSURE CABIN KEEL UNIT, ASSEMBLY (MOD 4799)	—	—	KB7/5
—	Spares for :—	—	—	
	DELETION OF K AERIAL (EA3.10.6615) (Mod 5223)	—	—	
	Spares for :—	—	—	
EA3.10.6535	CLEAT	1	L73 x 18 SWG	
EA3.10.6519	PANEL, skin, starboard	1	L72 x 20 SWG	
EA3.10.6521	PANEL, skin, port	1	L72 x 20 SWG	
EA3.10.6533	STRAP, butt, 10.5" approx	1	L73 x 18 SWG	
EA3.10.6527	STRINGER, port, outboard	1	—	
	(Make from EEDX68, Ref. 26FZ/4475, 19" long)	—	—	
EA3.10.6525	STRINGER, port, inboard	1	—	
	(Make from EEDX68, Ref. 26FZ/4475, 28" long)	—	—	
EA3.10.6523	STRINGER, centre	1	—	
	(Make from EEDX68, Ref. 26FZ/4475, 28" long)	—	—	
EA3.10.6531	STRINGER, starboard, outboard	1	—	
	(Make from EEDX68, Ref. 26FZ/4475, 19" long)	—	—	
EA3.10.6529	STRINGER, starboard, inboard	1	—	
	(Make from EEDX68, Ref. 26FZ/4475, 28" long)	—	—	
EA1.10.829	PLUG, DRAIN, ASSEMBLY	1	—	KB7/6
	Consisting of :—	—	—	
EA1.10.827	HOUSING	1	L40	KB7/7
SP90E6	PIN, split (Pre-Mod 5100) (Alt. R60/48)	1	—	KB7/8
ANGUS.OR.12	RING, sealing	1	—	KB7/9
EA1.10.825	SCREW, special	1	L40	KB7/10

AP101B-0415-3A

Page KB.12A

FUSELAGE
FRONT FUSELAGE

Part Number	Description					No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5 6			
R EG4.10.717	.	.	.	.	STRUCTURE, MAIN FLOOR PRESSURE CABIN KEEL UNIT, ASSEMBLY Spares for :-	-	-	KB7/11
R EA3.10.2383	.	.	.	.	BOLT, special	4	S11	KB7/12
R EA1.10.217	.	.	.	.	BRACKET, mounting, nosewheel pivot shaft, assembly, L.H.	1	-	KB7/13
R EA1.10.219	.	.	.	.	BRACKET, mounting, nosewheel pivot shaft, assembly, L.H. (long term fleet aircraft fit)	1	-	
R EA1.10.218	.	.	.	.	BRACKET, mounting, nosewheel pivot shaft, assembly, R.H.	1	-	KB7/24
R EA1.10.220	.	.	.	.	BRACKET, mounting, nosewheel pivot shaft, assembly, R.H. (long term fleet aircraft fit) Spares for :-	1	-	
R EA1.10.2685	.	.	.	.	CAP Attaching parts for EA1.10.2685 :-	1	-	KB7/14
R A26/15J	.	.	.	.	Bolt	2	-	KB7/15
R A27JS	.	.	.	.	Nut	2	-	KB7/16
R SP9C8	.	.	.	.	Pin, split	2	-	KB7/17
R EA3.10.2793	.	.	.	.	Washer	2	L65	KB7/18
R SP21	.	.	.	.	NIPPLE	1	-	KB7/19
R EA1.10.217A	.	.	.	.	SPIGOT Attaching parts for EA1.10.217, EA1.10.219, EA1.10.218 or EA1.10.220 :-	1	S96	KB7/20
R A25/4E	.	.	.	.	Bolt, 1/4" BSF	10	-	KB7/21
R A25/6E	.	.	.	.	Bolt, 1/4" BSF	2	-	KB7/22
R EA3.10.2383	.	.	.	.	Bolt, special	2	S11	KB7/23

FUSELAGE
FRONT FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Mati. Spec.	Plate No.

AP1018-0415-3A

Page KB.13

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EG4.10.737		BULKHEAD, PRESSURE, ASSEMBLY	—	—	KB7/25
EA9.10.5091		Spares for :— BRACKET, FORWARD LATCH, ASSEMBLY	1	—	KB7/26
EA3.10.1739		Spares for :— BLOCK	1	—	KB7/27
A25/25E		Attaching parts for EA3.10.1739 :— Bolt, 1/4" BSF	2	—	KB7/28
A27ET		Nut, 1/4" BSF	2	—	KB7/29
AS2811/6/135		Tube, distance	2	L62	KB7/30
EA1.10.1429		PLATE	1	—	KB7/31
A45C16		Attaching parts for EA1.10.1429 :— Screw, 2BA	2	—	KB7/32
EA1.10.1431		Shim	QR	—	KB7/33
EA9.10.5093		PLATE, side	1	—	KB7/26A
EA9.10.5095		PLATE, side	1	—	KB7/26B
NORMALAIR 504600		CONNECTOR, ground pressurising	1	—	KB7/34
EC2.10.3157		PACKER (Make from 30B/9611244)	1	L73 x 18 SWG	
EA4.81.6465		PLATE, blanking (Make from 30B/9611325)	1	L72 x 16 SWG	
EC2.10.3159		PLATE, blanking (Make from 30B/9611243)	1	L73 x 16 SWG	
EA1.81.943		STUD, mounting, assembly	8	—	KB7/35
EA3.81.1165		STUD, mounting, assembly	2	—	KB7/36
EA1.10.231		BUSH	1	DTD127	KB7/37
SCD78996		PANEL, removable, navigator's floor	1	L72	
SCD78997		PANEL, removable, navigator's floor	1	L72	
A32B16		18 SWG Attaching parts for SCD78996 or SCD78997 :— Screw, 4BA	QR	—	
SCB79040		STUD, machined, for attachments of navigator's vertical wall	1	L65	
A25/5C		Attaching parts for SCB79040 :— Bolt, 2BA	8	—	
A27CP		Nut, 2BA	8	—	
SP15C		Washer	8	—	
EA1.10.621		STRINGER, port outboard (Pre-Mod 5223)	1	—	
EA1.10.619		STRINGER, port inboard (Pre-Mod 5223)	1	—	
EA1.10.617		STRINGER, centre (Pre-Mod 5223)	1	—	
EA1.10.622		STRINGER, starboard, outboard (Pre-Mod 5223)	1	—	
EA1.10.620		STRINGER, starboard, inboard (Pre-Mod 5223)	1	—	
EA3.10.2381		WINDOW, aerial (Pre-Mod 5223)	1	—	

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.10.2901	. . . NOSE, PERSPEX, ASSEMBLY Consisting of :-	1	—	KB10/1
AS1242/9C	. . . BOLT, 2BA	128	—	KB10/2
AS1242/10C	. . . BOLT, 2BA	7	—	KB10/3
EA2.10.1501	. . . BUSH, nose fixing, bolt	34	Natural Rubber	KB10/4
EA2.10.659	. . . BUSH, nose fixing, bolt (Make from Ref. 4166)	64	Natural Rubber	KB10/5
EA3.10.2899	. . . NOSE, perspex	1	—	KB10/6
AGS2001C1/66	. . . NUT, 2BA	135	—	KB10/7
EA2.10.653	. . . RING, half retaining, window, inner seal	1	L72	KB10/8
EA2.10.655	. . . RING, half retaining, window, inner seal	1	L72	KB10/9
EA2.10.1601	. . . RING, half, retaining, window seal	1	L72	KB10/10
EA2.10.1603	. . . RING, half, retaining, window seal	1	L72	KB10/11
EA2.10.685	. . . RING, rubber, inner seal	1	HRC	KB10/12
EA2.10.1503	. . . RING, rubber, window seal	1	HRC	KB10/13
EA2.10.665	. . . STRAP, joint, assembly	4	—	KB10/14
EA2.10.657	. . . STRIP, sealing	1	Natural Rubber	KB10/15
EA2.10.661	. . . STRIP, inner, retaining, ring seal	1	Natural Rubber	KB10/16
EA2.10.687	. . . WINDOW, observation, bomb aimer's	1	Triplex	KB10/17
EA1.10.1131	. . . PIECE, distance (Pre-Mod 5100)	21	T4	KB5/55
EA1.10.1133	. . . PIECE, distance (Pre-Mod 5100)	13	T4	KB5/56
EA1.10.1133	. . . PIECE, distance (Mod 5100)	11	L62	
EA3.10.6411	. . . PIECE, distance (Alt. R60/88-Mod 5100)	2	L105	
EA3.10.6413	. . . PIECE, distance (Alt. R60/88-Mod 5100)	21	L105	
EA3.10.1509	. . . PLATE, backing, door seal, forward, upper	1	—	
EA3.10.1510	. . . PLATE, backing, door seal, aft, upper	1	—	
EA3.10.1511	. . . PLATE, backing, door seal, forward, lower	1	—	
EA3.10.1512	. . . PLATE, backing, door seal, aft, lower	1	—	
EA3.10.3007	. . . PLATE, nut for navigator's lamp, mounting bracket (Pre-Mod 3423)	1	—	
EA3.10.3821	. . . PLATE, nut (Mod 3423)	1	—	
EA3.10.3247	. . . PLATE, pressure hinge, assembly	1	—	
EA3.10.3817	. . . SCREW, special (Make from EEAS1/4½E)	2	—	
EA3.10.2917	. . . SCREW, ¼" BSF, securing navigator's penetrable hatch (Pre-Mod 5100)	68	—	KB5/65
EA3.10.153	. . . SEAL, inner, navigator's window	1	Natural Rubber	KB11/17
EA3.10.155	. . . SEAL, outer, rubber, navigator's window	1	Natural Rubber	KB11/18
EA3.10.549	. . . SEAL, pressure, navigator's escape hatch	1	BTR8853	KB5/58
EA1.10.1171	. . . SEAL, door, pressure cabin entrance	1	BTR8853	KB3/51

AP101B-0415-3A

Page KB.15

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.10.705	.	.	.	.	.	SKINNING, STRUCTURE, PRESSURE CABIN, ASSEMBLY	—	—	
EG4.10.707	.	.	.	.	.	STRUCTURE, PRESSURE CABIN	—	—	
EA1.10.887	.	.	.	.	.	BEARER, hinge, main entrance door	2	S96	
EA1.10.889	.	.	.	.	.	BEARER, hinge, main entrance door	2	S96	
EA1.10.43	.	.	.	.	.	FRAME No. 4, PORT, ASSEMBLY	1	—	
EA1.10.383	.	.	.	.	.	BRACKET, attachment coupe	1	—	
EA1.10.45	.	.	.	.	.	FRAME, No. 4, STARBOARD, ASSEMBLY	1	—	
EA1.10.384	.	.	.	.	.	BRACKET, attachment, coupe	1	—	
EA3.10.279	.	.	.	.	.	FRAME, 7A port assembly (Alt. R60/88 RI)	1	—	
EA3.10.282	.	.	.	.	.	FRAME, 8A, starboard assembly (Alt. R60/88 RI)	1	—	
EA3.10.283	.	.	.	.	.	FRAME, 9A, port assembly (Alt. R60/88 RI)	1	—	
EA3.10.284	.	.	.	.	.	FRAME, 9A, starboard assembly (Alt. R60/88 RI)	1	—	
EA3.10.2931	.	.	.	.	.	HINGE, CASTING, ASSEMBLY, AFT, MAIN ENTRANCE DOOR (PRE-MOD 5028)	1	—	
EA3.10.1815	.	.	.	.	.	HINGE, CASTING, ASSEMBLY, AFT, MAIN ENTRANCE DOOR (MOD 5028)	1	—	
SKEFKO	.	.	.	.	.	BEARING, ballrace	4	—	
CBS3	.	.	.	.	.	BOLT, guide	1	—	
EA1.10.1441	.	.	.	.	.	CAP, end sealing	1	—	
EA3.10.2925	.	.	.	.	.	NUT, lock, 2BA	1	—	
A27CT	.	.	.	.	.	TUBE, distance	2	—	
EA3.10.2927	.	.	.	.	.	HINGE, CASTING, ASSEMBLY, FORWARD, MAIN ENTRANCE DOOR (PRE-MOD 5028)	1	—	
EA1.10.1439	.	.	.	.	.	HINGE, CASTING, ASSEMBLY, FORWARD, MAIN ENTRANCE DOOR (MOD 5028)	1	—	
EA3.10.1813	.	.	.	.	.	HINGE, CASTING, ASSEMBLY, FORWARD, MAIN ENTRANCE DOOR (MOD 5028)	1	—	
SKEFKO	.	.	.	.	.	BEARING, ballrace	4	—	
CBS3	.	.	.	.	.	BOLT, guide	1	—	
EA1.10.1441	.	.	.	.	.	CAP, end sealing	1	—	
EA3.10.2925	.	.	.	.	.	NUT, lock, 2BA	1	—	
A27CT	.	.	.	.	.	TUBE, distance	2	—	
EA3.10.2927	.	.	.	.	.	HINGE, RELEASE MECHANISM, ASSEMBLY MAIN ENTRANCE DOOR	1	—	
EA1.10.1155	.	.	.	.	.	BRACKET	1	—	
EA1.10.869	.	.	.	.	.	COLLAR, aft	1	—	
EA1.10.881	.	.	.	.	.	COLAR, forward	1	—	
EA1.10.1437	.	.	.	.	.	SHAFT	1	—	
EA1.10.871	.	.	.	.	.	SLEEVE, locating	1	—	
EA1.10.877	.	.	.	.	.	SPINDLE, worm (Pre-Mod 603)	1	—	
EA1.10.873	.	.	.	.	.	SPINDLE, worm (Mod 603)	1	—	
EA3.10.2827	.	.	.	.	.	WHEEL, worm	1	—	
EA1.10.875	.	.	.	.	.	SUPPORT, AERIAL ASSEMBLY (Alt. R60/88 RI)	—	—	
EB6.10.395	.	.	.	.	.	CHANNEL, support, frame 8A	1	—	
EB6.10.399	.	.	.	.	.	CHANNEL, support, frame 8A	1	—	
EB6.10.401	.	.	.	.	.	CLEAT, frame 8A	1	—	
EB6.10.411	.	.	.	.	.	CLEAT, frame 8A	1	—	
EB6.10.415	.	.	.	.	.	CLEAT, frame 8A	1	—	
EB6.10.419	.	.	.	.	.	CLEAT, frame 8A	1	—	
EB6.10.403	.	.	.	.	.	DIAPHRAGM, frame 8A	1	—	

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.10.713	.	.	.	.	.	SKINNING, STRUCTURE, PRESSURE BULKHEAD TO FRAME 12 ASSEMBLY	-	-	KB8/1
EA1.10.187	.	.	.	.	.	Spares for :- DOOR, ACCESS, V.H.F. MAIN ELECTRICAL PANEL AND GROUND/FLIGHT SWITCH, ASSEMBLY (Supplied to Pt. No. EA3.00.151 for spares purposes) Spares for :-	2	-	KB8/2
EA1.10.177	.	.	.	.	.	GUIDE, rod	3	-	KB8/4A
R AS2850P	.	.	.	.	.	LOCK, L.H. FLUSH TYPE, ASSEMBLY Spares for :-	1	-	KB8/3
AS5382	.	.	.	.	.	BOLT, pivot	1	-	KB8/4B
AS2558	.	.	.	.	.	BUTTON, pressure seal	1	-	KB8/5
AS2552	.	.	.	.	.	HANDLE, single handle lock	1	-	KB8/6
R FGS.50	.	.	.	.	.	KEY	1	-	
R or FFE 4	.	.	.	.	.				
AS2532	.	.	.	.	.	PLATE, catch	1	-	KB8/7
AS2559	.	.	.	.	.	SEAL, handle	1	-	KB8/8
AS5381	.	.	.	.	.	SEAL, push button	1	-	KB8/9
AS2534	.	.	.	.	.	SPRING, for catch	1	-	KB8/10
AS2566	.	.	.	.	.	STUD, spring	1	-	KB8/11
A33/B12	.	.	.	.	.	Attaching parts for AS2850 :- Screw, 4BA	11	-	KB8/13
EA1.10.2503	.	.	.	.	.	RING, packing	1	-	KB8/12
EA1.10.185	.	.	.	.	.	ROD, lock, lower, assembly	1	-	
EA1.10.183	.	.	.	.	.	ROD, lock, upper, assembly	1	-	KB8/4
EA1.10.181	.	.	.	.	.	ROD, lock, vertical, assembly	1	-	
EA1.10.1815	.	.	.	.	.	STAY, door	1	-	KB8/14
EA3.10.2805	.	.	.	.	.	STOWAGE, SUPPORT STRUT, V.H.F. DOORS, ASSEMBLY Spares for :-	1	-	KB8/15
EA3.10.2809	.	.	.	.	.	PLATE, stiffening Attaching parts for EA3.10.2809 :-	1	L73	KB8/16
AGS2001B1	.	.	.	.	.	Nut, 4BA	1	-	KB8/17
A33B16	.	.	.	.	.	Screw, csk. head, 4BA	1	-	KB8/18
EA3.10.2807	.	.	.	.	.	STRAP	1	-	KB8/19
EG5.10.167	.	.	.	.	.	MOUNTING, FRONT SPIGOT BETWEEN FRAMES 11 AND 12, INSTALLATION (MOD 3998) Spares for :-	-	-	
EG5.10.169	.	.	.	.	.	MOUNTING, spigot, assembly	1	L65	
EG5.10.173	.	.	.	.	.	PLUG, blanking	1	S80	
EEAS28/30ER	.	.	.	.	.	WASHER, for blanking plug	1	L72	
EA1.10.1033	.	.	.	.	.	PLUG, forward jacking point housing	1	-	KB8620
EA3.10.2289	.	.	.	.	.	SCOOP, air cooling inverter, type 200	1	-	KB1/6
EEAS1/3C	.	.	.	.	.	SCREW, 2BA	24	-	KB8/21
EA3.10.2567	.	.	.	.	.	SPOUT, assembly, air cooling inverter, type 200	1	-	KB1/7

AP101B-0415-3A

FUSELAGE

Page KB.17

FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.10.715	.	.	.	.	STRUCTURE, PRESSURE BULKHEAD TO FRAME 12 ASSEMBLY		—	—	KB8/22
EB6.10.279	.	.	.	.	Spares for :— BRACKET, angle		2	—	KB8/22A
A25/1E	.	.	.	.	Attaching parts for EB6.10.279 :— Bolt, ½" BSF		2	—	KB8/22B
EB6.10.265	.	.	.	.	CHANNEL, mounting, assembly		1	—	KB8/23
EG4.10.119	.	.	.	.	FRAME, 12A ASSEMBLY		—	—	
EA9.10.4545	.	.	.	.	Spares for :— BEAM, CENTRE, VERTICAL, PORT (MOD 1740)		1	—	KB8/23
EA1.10.70	.	.	.	.	BEAM, CENTRE, VERTICAL, STARBOARD (PRE-MOD 856)		1	—	
EA3.10.3206	.	.	.	.	BEAM, CENTRE, VERTICAL, STARBOARD (MOD 856)		1	—	KB8/23
ASD292RS1	.	.	.	.	Spares for :— (Repair) ANGLE, inner joint (Make from EEJ270, Ref. 7109)		1	—	
ASD292RS5P	.	.	.	.	INSERTION, channel, port (Make from EA3.10.3197, Ref. 22325)		1	—	KB8/23
ASD292RS5S	.	.	.	.	INSERTION, channel, starboard (Make from Ref. 22326)		1	—	
ASD292RS6P	.	.	.	.	INSERTION, plate, reinforcing, port (Make from EA9.10.4439) (Mod 1740)		1	L73	KB8/23
R ASD292RS6S	.	.	.	.	INSERTION, plate, reinforcing, starboard (Make from EA3.10.3203, Ref. 22328 or 30B/9611240)		1	L73	
R ASD292RS4S	.	.	.	.	STRAP, joint, forward, outer, starboard (Pre-Mod 856)		1	—	KB8/23
R ASD292RS4P	.	.	.	.	STRAP, joint, forward, outer, port (Mod 1740)		1	—	
ASD292RS4S	.	.	.	.	STRAP, joint, forward, outer, starboard (Mod 856)		1	—	KB8/23
ASD292RS3	.	.	.	.	STRAP, joint, forward leveller, 14 SWG (Make from Ref. 30B/9611242)		1	L73	
ASD292RS2	.	.	.	.	STRAP, joint, aft, 14 SWG		1	S514	KB8/23
EA3.71.389	.	.	.	.	BEAM, mounting, oxygen cylinders Attaching parts for EA3.71.389 :—		2	—	
A25/3C	.	.	.	.	Bolt, 2BA (Upper beam)		8	—	KB8/25
A25/3C	.	.	.	.	Bolt, 2BA (Lower beam)		6	—	KB8/26
A25/10C	.	.	.	.	Bolt, 2BA (Lower beam)		2	—	KB8/27
SP13C	.	.	.	.	Washer		4	—	KB8/28

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.10.557		BRACKET, strut, pick-up	1	—	KB8/72
EB6.75.699		BRACKET, support, pipe	1	—	KB8/73
EA1.10.1621		BRACKET, door lock, port	1	—	
EA1.10.909		BRACKET, door lock, starboard (Supplied to Part No. EA3.00.596 for spares purposes)	1	—	
EA6.10.775		BRACKET, oxygen cylinder, cradle	2	—	
EA1.10.1383		BRACKET, nosewheel up latch spring (Pre-Mod 4449)	1	L72	
EA3.10.3333		BRACKET, LOCK LEVER ASSEMBLY STARBOARD	1	—	KB6/29
or EK5.10.805		BRACKET, LOCK LEVER ASSEMBLY STARBOARD (ALT. R60/15— MOD 5100)	1	—	
EA3.10.3150		Spares for :— BRACKET	1	—	KB8/30
or EK5.10.808		BRACKET (Alt. R60/15—Mod 5100)	1	—	
EA3.10.3335		LEVER, LOCK, ASSEMBLY Spares for :—	1	—	KB8/31
EA3.10.3349		FORK-END	1	—	KB8/32
EA3.10.3337		LEVER	1	—	KB8/33
SP21		NIPPLE, grease	1	—	KB8/34
EA3.10.3099		NUT, special	1	—	KB8/35
A27ES		NUT, 1/2" BSF	1	—	KB8/36
EA3.10.3351		PIN	1	—	KB8/37
SP90C7		PIN, split	1	—	KB8/38
EA3.10.3347		ROLLER	1	—	KB8/39
EA3.10.3339		SHIM	2	—	KB8/40
SP15E		WASHER	1	—	KB8/41
EA3.10.3219		Attaching parts for EA3.10.3335 :— Bolt, special	1	—	KB8/42
A27GS		Nut, 5/16" BSF	1	—	KB8/43
SP90C7		Pin, split	1	—	KB8/44
EA1.10.1407		Washer, spacing	1	—	KB8/45
SP15G		Washer	1	—	KB8/46
EA3.71.403		BRACKET, oxygen, mounting beam Attaching parts for EA3.71.403 :—	7	—	KB8/47
A25/3C		Bolt, 2BA (As required)	4	—	KB8/48
A25/9C		Bolt, 2BA (As required)	4	—	KB8/49
A25/11C		Bolt, 2BA (As required)	4	—	KB8/50
AGS2001C1/66		Nut, 2BA	4	—	KB8/51
AS2811/5/07		Tube, distance (As required)	4	L62	KB8/52
SP16C		Washer (As required)	4	—	KB8/53
EA3.10.6571		BRACKET (Pre-Mod 5100) (Still used on aircraft with front fuselage married up)	1	—	
EA1.10.1179		BRACKET (Alt. R60/301—Mod 5100) (Used on aircraft with front fuselage de-married)	1	—	
EA3.10.6375		CLEAT, nosewheel up latch spring (S.O.O.—Mod 4449)	1	L72	

AP101B-0415-3A

Page KB.19

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.10.2447	.	.	.	.	.	GUARD, assembly	1	—	KB8/54
EA3.10.3353	.	.	.	.	.	GUARD, lock lever, assembly	1	—	KB8/55
	.	.	.	.	.	Attaching parts for EA3.10.2447 and EA3.10.3353 :—			
A32C16	.	.	.	.	.	Screw, 2BA	4	—	KB8/56
EA3.00.873	.	.	.	.	.	GUIDE, roller port	1	—	KB8/57
EA3.00.874	.	.	.	.	.	GUIDE, roller starboard	1	—	KB8/58
	.	.	.	.	.	Attaching parts for EA3.00.873 and EA3.00.874 :—			
A25/2C	.	.	.	.	.	Bolt, 2BA	19	—	KB8/59
AGS2001C1/66	.	.	.	.	.	Nut, 2BA	19	—	KB8/60
SP13C	.	.	.	.	.	Washer	19	—	KB8/61
R —	.	.	.	.	.	INSTALLATION OF ATTACHMENT LUG BOLTS (EA3.10.6573)	—	—	
	.	.	.	.	.	Spares for :—			
R EA1.10.1177	.	.	.	.	.	PLATE, tie (Pre-Mod 5100)	1	—	
R EA3.10.6575	.	.	.	.	.	PLATE, tie (Alt. R60/301-Mod 5100)	1	—	
R EA3.10.2455	.	.	.	.	.	PLATE, reinforcing (Pre-Mod 5100)	1	—	
R EA3.10.6577	.	.	.	.	.	PLATE, reinforcing (Alt. R60/301-Mod 5100)	1	—	
R EA6.10.1815	.	.	.	.	.	PLATE, reinforcing (Pre-Mod 5100)	1	—	
R EA3.10.6579	.	.	.	.	.	PLATE, nut (Alt. R60/301-Mod 5100)	1	—	
	.	.	.	.	.	Attaching parts for EA3.10.6579 :—			
R AS1242/2C	.	.	.	.	.	Bolt, 2BA	3	—	
R AGS2019C1	.	.	.	.	.	Nut, anchor	3	—	
EA3.10.3161	.	.	.	.	.	LEVER, LOCK, NOSE UNDERCARRIAGE PORT, ASSEMBLY	1	—	KB8/62
or EK5.10.803	.	.	.	.	.	LEVER, LOCK, NOSE UNDERCARRIAGE PORT, ASSEMBLY (ALT. R60/15-MOD 5100)	1	—	
	.	.	.	.	.	Spares for :—			
EA3.10.3149	.	.	.	.	.	BRACKET	1	—	KB8/63
or EK5.10.807	.	.	.	.	.	BRACKET (Alt. R60/15-Mod 5100)	1	—	
EA3.10.3159	.	.	.	.	.	LEVER, assembly	1	—	KB8/64
	.	.	.	.	.	Attaching parts for EA3.10.3159 :—			
EA3.10.3219	.	.	.	.	.	Bolt, shouldered	1	—	KB8/65
A27GS	.	.	.	.	.	Nut, 5/16" BSF	1	—	KB8/66
SP90C7	.	.	.	.	.	Pin, split	1	—	KB8/67
EA1.10.1407	.	.	.	.	.	Washer, spacing	1	—	KB8/68
SP15G	.	.	.	.	.	Washer	1	—	KB8/69
EA3.10.6539	.	.	.	.	.	LUG, attachment, fuselage pick-up on vertical top hat stiffeners (Alt. R60/301-Mod 5100)	6	L65	
EA6.10.1091	.	.	.	.	.	PLATE, joint, bottom half joint rings	1	—	
EA1.10.1697	.	.	.	.	.	PLATE, joint, boundary angle to diaphragm, port	1	—	KB8/70
EA1.10.1698	.	.	.	.	.	PLATE, joint, boundary angle to diaphragm, starboard	1	—	KB8/71
EA1.10.771	.	.	.	.	.	HOUSING, spigot, port	1	—	KB8/74
	.	.	.	.	.	Attaching parts for EA1.10.771 :—			
A25/3E	.	.	.	.	.	Bolt, 1/4" BSF	8	—	KB8/75
EA3.10.3223	.	.	.	.	.	STRUT, bracing	2	—	KB8/72A
	.	.	.	.	.	Attaching parts for EA3.10.3223 :—			
A25/6E	.	.	.	.	.	Bolt, 1/4" BSF	2	—	KB8/72B
A27EP	.	.	.	.	.	Nut, 1/4" BSF	2	—	KB8/72C
SP15E	.	.	.	.	.	Washer	1	—	KB8/72D
SP16E	.	.	.	.	.	Washer	1	—	KB8/72E

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.10.1345	. . .	SOCKET, front, frame, entrance door bolt	1	—	
EA1.10.1347	. . .	SOCKET, rear, frame, entrance door bolt	1	—	
	. . .	Attaching parts for EA1.10.1345 and EA1.10.1347 :—			
AS1242/4C	. . .	Bolt, 2BA	2	—	
AS1242/5C	. . .	Bolt, 2BA	2	—	
AGS2001C1/66	. . .	Nut, 2BA	4	—	
DZUS	. . .	SPRING, fastener, hydraulic reservoir access door	6	—	KB11/20
S4/250	. . .	STRAP, main door jettison handle stowage	1	—	KB3/52
EA3.10.3255	. . .	STRUCTURE, NOSE, FORWARD OF FRAME 1	—	—	KB11/1
EG4.10.719	. . .	ASSEMBLY			
EB6.10.295	. . .	BRACKET, spigot (Pre—Mod 3958)	2	S10 or S91	
	. . .	Attaching parts for EB6.10.295 :—			
AS1242/2B	. . .	Bolt, 4BA	4	—	
AGS2001B1	. . .	Nut, 4BA	4	—	
SP13B	. . .	Washer	4	—	
EG4.10.293	. . .	BRACKET, spigot (Mod 3958—S.O.O.)	1	—	
	. . .	Attaching parts for EG4.10.293 :—			
AS1242/4C	. . .	Bolt, 2BA	2	—	
AS1242/3B	. . .	Bolt, 4BA	4	—	
AGS2001B1	. . .	Nut, 4BA	4	—	
AGS2001C1/66	. . .	Nut, 2BA	2	—	
EG4.10.429	. . .	BRACKET, spigot (Mod 3958—S.O.O.)	1	—	
	. . .	Attaching parts for EG4.10.429 :—			
AS1242/4C	. . .	Bolt, 2BA	2	—	
AS1242/3B	. . .	Bolt, 4BA	1	—	
AS1242/13B	. . .	Bolt, 4BA	2	—	
AGS2001C1/66	. . .	Nut, 2BA	2	—	
AGS2001B1	. . .	Nut, 4BA	3	—	
SP16C	. . .	Washer	2	—	
SP16B	. . .	Washer	3	—	
EA3.10.983	. . .	BUSH, rubber, window fixing screw	20	—	KB11/2
EA2.10.477	. . .	FRAME, seal retaining	1	—	KB11/3

FUSELAGE
FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.10.479	.	.	.	PANEL, access to air dryer tube (Make from Part No. EA3.10.1583, Ref. 15785)			1	L72	KB11/4
A25/1C	.	.	.	Attaching parts for EG4.10.479 :-			2	-	KB11/4A
AS1248/1/2C	.	.	.	Bolt, 2BA			4	-	KB11/4B
SP15C	.	.	.	Bolt, 2BA			2	-	KB11/4C
SCB79320/1	.	.	.	Washer					
SCB79320/1	.	.	.	PLATE, blanking			1	-	
A32C20	.	.	.	Attaching parts for SCB79320/1 :-					
EA3.10.6507	.	.	.	Screw, 2BA			5	-	
EA3.10.6507	.	.	.	PLUG, DRAIN, INSTALLATION AT FRAME 1 (ALT. R60/43-MOD 5100)			-	-	
EA1.10.829	.	.	.	Spares for :-			1	-	
EA1.10.827	.	.	.	PLUG, DRAIN, ASSEMBLY					
ANGUS OR. 12	.	.	.	Consisting of :-					
EA1.10.825	.	.	.	HOUSING			1	L65	
EA2.10.473	.	.	.	RING, sealing			1	-	
EA2.10.475	.	.	.	SCREW, special			1	L65	
EC1.81.669	.	.	.	SEAL, rubber			1	-	KB11/5
9/3572	.	.	.	SEAL, rubber			1	-	KB11/6
EG4.10.323	.	.	.	STOWAGE, plug			1	-	KB11/7
EA2.10.471	.	.	.	STOWAGE, flexible drive			2	-	KB11/8
EA1.20.1033	.	.	.	STRAP, reinforcing from "A"			1	-	
EA3.10.3023	.	.	.	(Mod 3958-S.O.O.)					
EA3.10.361	.	.	.	WINDOW, bomb aimer's			1	-	KB11/9
	.	.	.	WASHER, special			16	-	KB6/64
	.	.	.	WASHER, sealing, for escape hatch pivot			2	-	KB5/59
	.	.	.	WINDOW, navigator's c/w valve			1	-	KB11/10

R

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EB6.45.29	.	GEAR, EMERGENCY RELEASE MECHANISM BOMB DOOR AND UNDERCARRIAGE	—	—	KB9/1
EA1.45.815	.	BRACKET AND HANDLE AT FRAMES 1 AND 2 ASSEMBLY	—	—	KB9/2
EA1.45.1041	.	BRACKET, bottom, frame 1	1	—	KB9/3
EA2.42.201	.	BRACKET, top, frame 1	1	—	KB9/4
EA1.45.831	.	BRACKET, bottom, frame 2	1	—	KB9/5
EA1.45.829	.	BRACKET, top, frame 2	1	—	KB9/6
	.	Attaching parts for EA1.45.1041, EA2.45.201, EA1.45.831 and EA1.45.829 :—			
A25/1C	.	Bolt, 2BA	3	—	KB9/7
AGS2001C1/66	.	Nut, 2BA	3	—	KB9/8
SP15C	.	Washer	3	—	KB9/9
EA3.45.633	.	HANDLE, operating (Mod 5220)	1	—	KB9/10
	.	Attaching parts for EA3.45.291 :—			
A25/1C	.	Bolt, 2BA	4	—	KB9/11
SP15C	.	Washer	4	—	KB9/12
AS107	.	PULLEY, shrouded	2	—	KB9/13
or AS1151	.	PULLEY, shrouded	2	—	
	.	Attaching parts for AS107 or AS1151 :—			
A25/8E	.	Bolt, 1/4" BSF	1	—	KB9/14
AGS2001E1/66	.	Nut, 1/4" BSF	1	—	KB9/15
SP16E	.	Washer	1	—	KB9/16
5E5253563	.	WIRE, copper, enamelled	QR	—	
EA1.45.813	.	BRACKET AND LEVER AT FRAME 4, ASSEMBLY	—	—	KB9/17
	.	Spares for :—			
EA1.45.875	.	BRACKET, bottom inboard	1	—	KB9/18
EA1.45.877	.	BRACKET, bottom outboard	1	—	KB9/19
EA1.45.871	.	BRACKET, top, inboard	1	—	KB9/20
EA1.45.873	.	BRACKET, top, outboard	1	—	KB9/21
	.	Attaching parts for EA1.45.875, EA1.45.877, EA1.45.871 and EA1.45.873 :—			
AS1242/1C	.	Bolt, 2BA (As required)	1	—	KB9/22
A25/1C	.	Bolt, 2BA (As required)	11	—	KB9/23
AGS2001C1/66	.	Nut, 2BA (As required)	12	—	KB9/24
SP15C	.	Washer (As required)	12	—	KB9/25

AP101B-0415-3A

Page KB.23

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.45.883	. . .	FAIRLEAD Attaching parts for EA1.45.883 :-	1	—	KB9/26
A25/6C	. . .	Bolt, 2BA	2	—	KB9/27
AGS2001C1/66	. . .	Nut, 2BA	2	—	KB9/28
EA3.45.295	. . .	LEVER, assembly (Mod 306) Attaching parts for EA3.45.295 :-	1	—	KB9/29
A25/3E	. . .	Bolt, 1/4" BSF	1	—	KB9/30
AGS2001E1/66	. . .	Nut, 1/4" BSF	1	—	KB9/31
SP16E	. . .	Washer	1	—	KB9/32
EEAS15/75/ 150ER	. . .	PLATE, link, lower Attaching parts, link to cable :-	2	—	KB9/33
AGS899/1	. . .	Collar	1	—	KB9/33A
SP4Y/A14	. . .	Pin, shackle	1	—	KB9/33B
SP90C4	. . .	Pin, split	1	—	KB9/33C
AS2811/5/025	. . .	Tube, distance, 17 SWG	2	L62	KB9/33D
EA1.45.909	. . .	PLATE, link, upper Attaching parts for EA1.45.909 :-	2	—	KB9/34
AGS899/2	. . .	Collar	1	—	KB9/35
SP4Y/B14	. . .	Pin	1	—	KB9/36
SP90C4	. . .	Pin, split	1	—	KB9/36A
EA1.45.1317	. . .	Tube, distance	2	—	KB9/37
R AS107 or AS1151	. . .	PULLEY, shrouded Attaching parts for AS107 or AS1151 :-	2	—	KB9/38
A25/8E	. . .	Bolt, 1/4" BSF (As required)	1	—	KB9/39
A25/9E	. . .	Bolt, 1/4" BSF (As required)	1	—	KB9/40
AGS2001E1/66	. . .	Nut, 1/4" BSF	1	—	KB9/41
SP16E	. . .	Washer	1	—	KB9/42
EA1.45.1055	. . .	SECTOR, locking, quadrant	1	—	
R 5E5253563	. . .	WIRE, copper, enamelled	QR	—	

FUSELAGE
FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.45.893	. .	CABLES BOMB DOOR AND UNDERCARRIAGE, ASSEMBLY (PRE-MOD 306)	1	—	—
EA3.45.275	. .	CABLES BOMB DOOR AND UNDERCARRIAGE, ASSEMBLY (MOD 306)	1	—	KB9/43
EA2.45.413	. . .	BARREL, pressure seal	1	—	KB9/44
AGS.2030/147	. . .	CIRCLIP, 47/64" bore, internal	1	—	KB9/45
EA1.45.1129	. . .	ROLLER, aft end bomb door	1	—	KB9/46
SP8Y13	. . .	ROLLER	3	—	KB9/47
EA1.45.889	. . .	WASHER, felt, pressure seal	7	—	KB9/48
EA1.45.891	. . .	WASHER, retaining, pressure seal	1	—	KB9/49
EA3.45.275A	. . .	WIRE, flexible, steel, bomb door	1	6W2/4	KB9/50
EA3.45.275B	. . .	WIRE, flexible, steel, undercarriage	1	6W2/4	KB9/51
EA1.45.883	. .	FAIRLEAD, frame 3	1	—	KB9/52
EA1.45.881	. .	FAIRLEAD, frame 5 to 11	7	—	KB9/53
A25/6C	. .	Bolt, 2BA	2	—	KB9/53A
AGS2001C1/66	. .	Nut, 2BA	2	—	KB9/53B
EA1.45.1121	. .	FAIRLEAD, frame 12A (Trim on assembly)	1	—	KB9/54
AS1242/5B	. .	Bolt, 4BA	2	—	KB9/55
AGS2001B1	. .	Nut, 4BA	2	—	KB9/56
A33B24	. .	Screw, 4BA	2	—	KB9/57
SP15B	. .	Washer	2	—	KB9/58
EA2.45.415	. .	WASHER, wedge, pressure bulkhead	2	—	KB9/59
A25/10C	. .	Bolt, 2BA	2	—	KB9/60
AGS2001C1/66	. .	Nut, 2BA	2	—	KB9/61

FUSELAGE
FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG4.73.103	HYDRAULIC EQUIPMENT IN FRONT FUSELAGE (See chapter SH)	—	—	
EA3.17.5245	INSULATION, PRESSURE CABIN (Alt. R60/109) Spares for:—	—	—	KB12/1
EA3.17.5247	. . BLANKET	1	—	KB12/2
EA3.17.5249	. . BLANKET	1	—	KB12/3
EA3.17.5251	. . BLANKET	1	—	KB12/4
EA3.17.5259	. . BLANKET	1	—	KB12/5
EA3.17.5261	. . BLANKET	1	—	KB12/6
EA3.17.5263	. . BLANKET	1	—	KB12/7
EA3.17.5253	. . BLANKET	1	—	KB12/8
EA3.17.5255	. . BLANKET	1	—	KB12/9
EA3.17.5265	. . BLANKET	1	—	KB12/10
EA3.17.5267	. . BLANKET	1	—	KB12/11
EA3.17.5271	. . BLANKET	1	—	KB12/12
EA3.17.5269	. . BLANKET	1	—	KB12/13
EA3.17.5331	. . BLANKET	1	—	KB12/14
EA3.17.5273	. . BLANKET	1	—	KB12/15
EA3.17.5275	. . BLANKET	1	—	KB12/16
EA3.17.5277	. . BLANKET	1	—	KB12/17
EA3.17.5279	. . BLANKET	1	—	KB12/18
EA3.17.5281	. . BLANKET	1	—	KB12/19
EA3.17.5283	. . BLANKET	1	—	KB12/20
EA3.17.5285	. . BLANKET	1	—	KB12/21
EA3.17.5287	. . BLANKET	1	—	KB12/22
EA3.17.5289	. . BLANKET	1	—	KB12/23
EA3.17.5291	. . BLANKET	1	—	KB12/24
EA3.17.5293	. . BLANKET	1	—	KB12/25
EA3.17.5295	. . BLANKET	1	—	KB12/26
EA3.17.5297	. . BLANKET	1	—	KB12/27
EA3.17.5299	. . BLANKET	1	—	KB12/28
EA3.17.5257	. . BLANKET	1	—	KB12/29
EA3.17.5301	. . BLANKET	1	—	KB12/30
EA3.17.5303	. . BLANKET	1	—	KB12/31
EA3.17.5305	. . BLANKET	1	—	KB12/32
EA3.17.5307	. . BLANKET	1	—	KB12/33
EA3.17.5309	. . BLANKET	1	—	KB12/34
EA3.17.5311	. . BLANKET	1	—	KB12/35
EA3.17.5313	. . BLANKET	1	—	KB12/36
EA3.17.5315	. . BLANKET	1	—	KB12/37
EA3.17.5317	. . BLANKET	1	—	KB12/38
EA3.17.5319	. . BLANKET	1	—	KB12/39
EA3.17.5321	. . BLANKET	1	—	KB12/40
EA3.17.5323	. . BLANKET	1	—	KB12/41
EA3.17.5325	. . BLANKET	1	—	KB12/42
EA3.17.5327	. . BLANKET	1	—	KB12/43
EA3.17.5329	. . BLANKET	1	—	KB12/44
EA3.17.5401	. . BLANKET (Mod 5246)	1	—	KB12/47
EA1.17.35	. . BRACKET, angle	487	—	KB12/45
EA1.17.39	. . CLIP	760	—	KB12/46

FUSELAGE

AP101B-0415-3A

FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.17.5227	. . INSULATION, NAVIGATOR'S ESCAPE HATCH (MOD 4094) Spares for:—	—	—	
EA3.17.5229	. . . BLANKET	1	—	KB13/1
EA3.17.5231	. . . BLANKET	1	—	KB13/2
EA3.17.5233	. . . BLANKET	1	—	KB13/3
EA3.17.5235	. . . BLANKET	1	—	KB13/4
EA3.17.5237	. . . BLANKET	1	—	KB13/5
EA3.17.5239	. . . BLANKET	1	—	KB13/6
EG7.17.273	. . . BLANKET	2	—	KB13/7
EG7.17.275	. . . BLANKET	1	—	KB13/8
EG7.17.277	. . . BLANKET	1	—	KB13/9
EG7.17.279	. . . BLANKET	1	—	KB13/10
EA1.17.35	. . . BRACKET, angle	12	—	KB13/11
EA1.17.39	. . . CLIP	140	—	KB13/12
EA1.17.37	. . . SPRING	112	—	KB13/13
EA3.17.5335	. . . PAD	1	—	KB13/14
EA3.17.5333	. . . PAD	1	—	KB13/15
EA3.17.5347	. . . PAD	1	—	KB13/16
EA3.17.5337	. . . PAD	3	—	KB13/17
EA3.17.5341	. . . PAD	1	—	KB13/18
EA3.17.5349	. . . PAD	1	—	KB13/19
EA3.17.5345	. . . PAD	1	—	KB13/20
EA3.17.5343	. . . PAD	1	—	KB13/21
EA3.17.5339	. . . PAD	1	—	KB13/22
EB7.17.35	. . . PAD (Pre-Mod 5513)	1	—	KB13/23
EB7.17.37	. . . PAD	1	—	KB13/24
EA3.17.5385	. . . PAD	1	—	KB13/25
EA3.17.5387	. . . PAD	1	—	KB13/26
EA1.17.37	. . . SPRING	620	—	KB12/48

FUSELAGE

FRONT FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EG4.71.157	. MOUNTING, EMERGENCY OXYGEN BOTTLE BETWEEN FRAMES 1 AND A, INSTALLATION	—	—	KB11/11
R	EA3.71.307	. . BRACKET, MOUNTING AND CLIP QUICK RELEASE ASSEMBLY Spares for :—	1	—	KB11/12
R	EA3.71.313	. . . WIRE-BAND	1	—	KB11/13
R	EA3.71.315	. . . WIRE-BAND Attaching parts for EA3.71.307 :—	1	—	KB11/14
R	A25/1B	. . Bolt, 4BA	4	—	KB11/15
R	SP13B	. . Washer	4	—	KB11/15A
R	EA9.40.1	. NOSEWHEEL (See chapter WC)	—	—	
R	EG4.71.327	. OXYGEN SYSTEM, PILOT'S (See chapter SJ)	—	—	
R	EG4.71.309	. OXYGEN SYSTEM, FIRST NAVIGATOR (See chapter SJ)	—	—	
R	EG4.71.315	. OXYGEN SYSTEM, SECOND NAVIGATOR (See chapter SJ)	—	—	
R	EG4.71.101	. OXYGEN SYSTEM, PRESSURE BULKHEAD TO FRAME 12 (See chapter SJ)	—	—	
R	EG4.80.1317	. PITOT AND STATIC SYSTEM (See chapter SK)	—	—	
R	EG4.80.1301	. PRESSURE CABIN EQUIPMENT (See chapter GA)	—	—	

FUSELAGE
FRONT FUSELAGE

AP101B-0415-3A

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG4.10.799	. TUNNEL, BOMB AIMER'S, ASSEMBLY Spares for :-	-	-	KB11/21
EG4.10.807	. . BALLAST, PLATFORM AND CUSHION, INSTALLATION Spares for :-	-	-	KB11/22
EG4.10.805	. . . CUSHION, ASSEMBLY (Made from Part No. EG4.10.555, Ref. 34628 or Part No. EA3.10.2853, Ref. 8831)	1	-	KB11/23
EG4.83.197	. . . PLATFORM, CHEST, ASSEMBLY Spares for :-	1	-	KB11/24
EB6.10.319	 SPIGOT	1	-	KB11/25
EB6.10.320	 SPIGOT	1	-	KB11/26
A25/6C	 Attaching parts for EB6.10.319 or EB6.10.320 :- Bolt, 2BA	2	-	KB11/26A
A25/11C	 Bolt, 2BA	1	-	KB11/26B
AGS2001C1/66	 Nut, 2BA	3	-	KB11/26C
SP15C	 Washer	3	-	KB11/26D
EG4.83.105	. . . TRAY, BALLAST, ASSEMBLY Spares for :-	1	-	
EB6.10.319	 SPIGOT	1	-	
EB6.10.320	 SPIGOT	1	-	
AS1242/3C	 Attaching parts for EB6.10.319 or EB6.10.320 :- Bolt, 2BA	2	-	
AS1242/7C	 Bolt, 2BA	1	-	
AGS2002C1	 Nut, 2BA	3	-	
EG4.83.107	 Packing	1	-	
EG4.83.167	 Packing	1	-	
EG4.83.133	. . . WEIGHT, ballast	1	-	
EG4.83.137	. . . WEIGHT, ballast	1	-	
EG4.83.119	. . . WEIGHT, ballast	1	-	
EG4.83.127	. . . WEIGHT, ballast	1	-	
EA3.10.2311	. . COVER, hand pump	1	-	KB11/27
EG4.10.809	. . PADDING, protective, assembly	1	-	KB11/28
EG4.10.801	. . RAMP, assembly	1	-	
EG4.10.803	. . TUNNEL, ACCESSORIES, GROUP Spares for :-	-	-	KB11/29
EA3.10.2347	. . . COVER, aerial, R.X.	1	-	
EA3.10.2297	. . . COVER, inner	1	-	
EA3.10.2303	. . . GUARD, pedal	1	-	

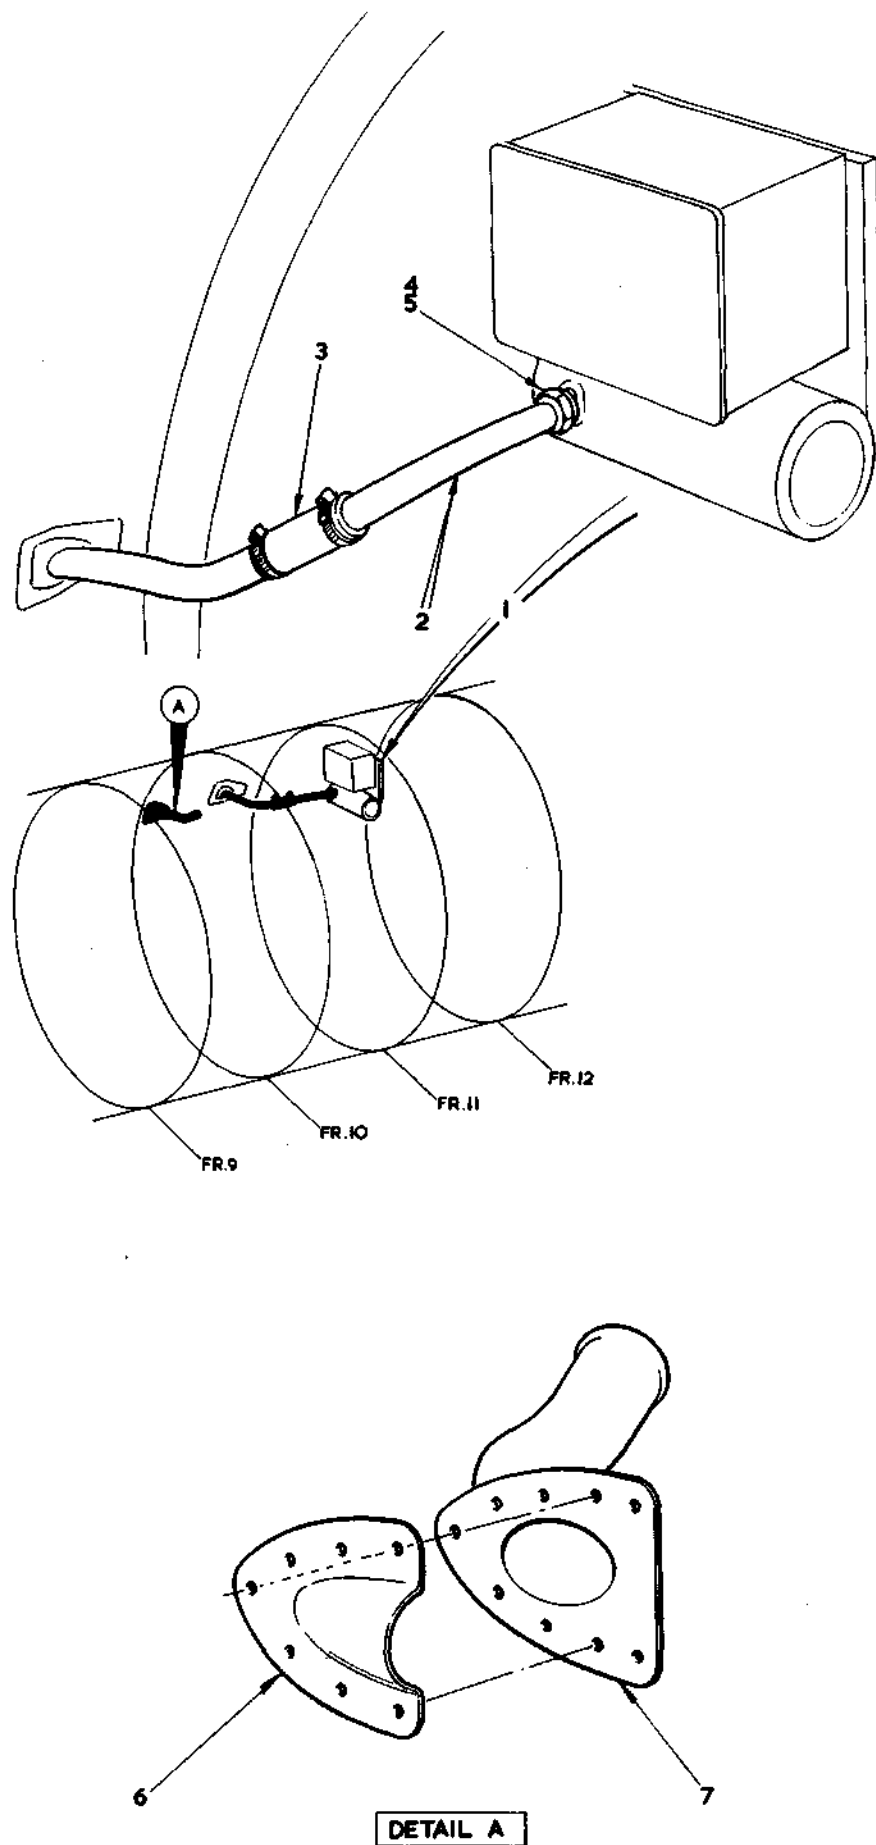


FIG.1 FUSELAGE, FRONT FUSELAGE

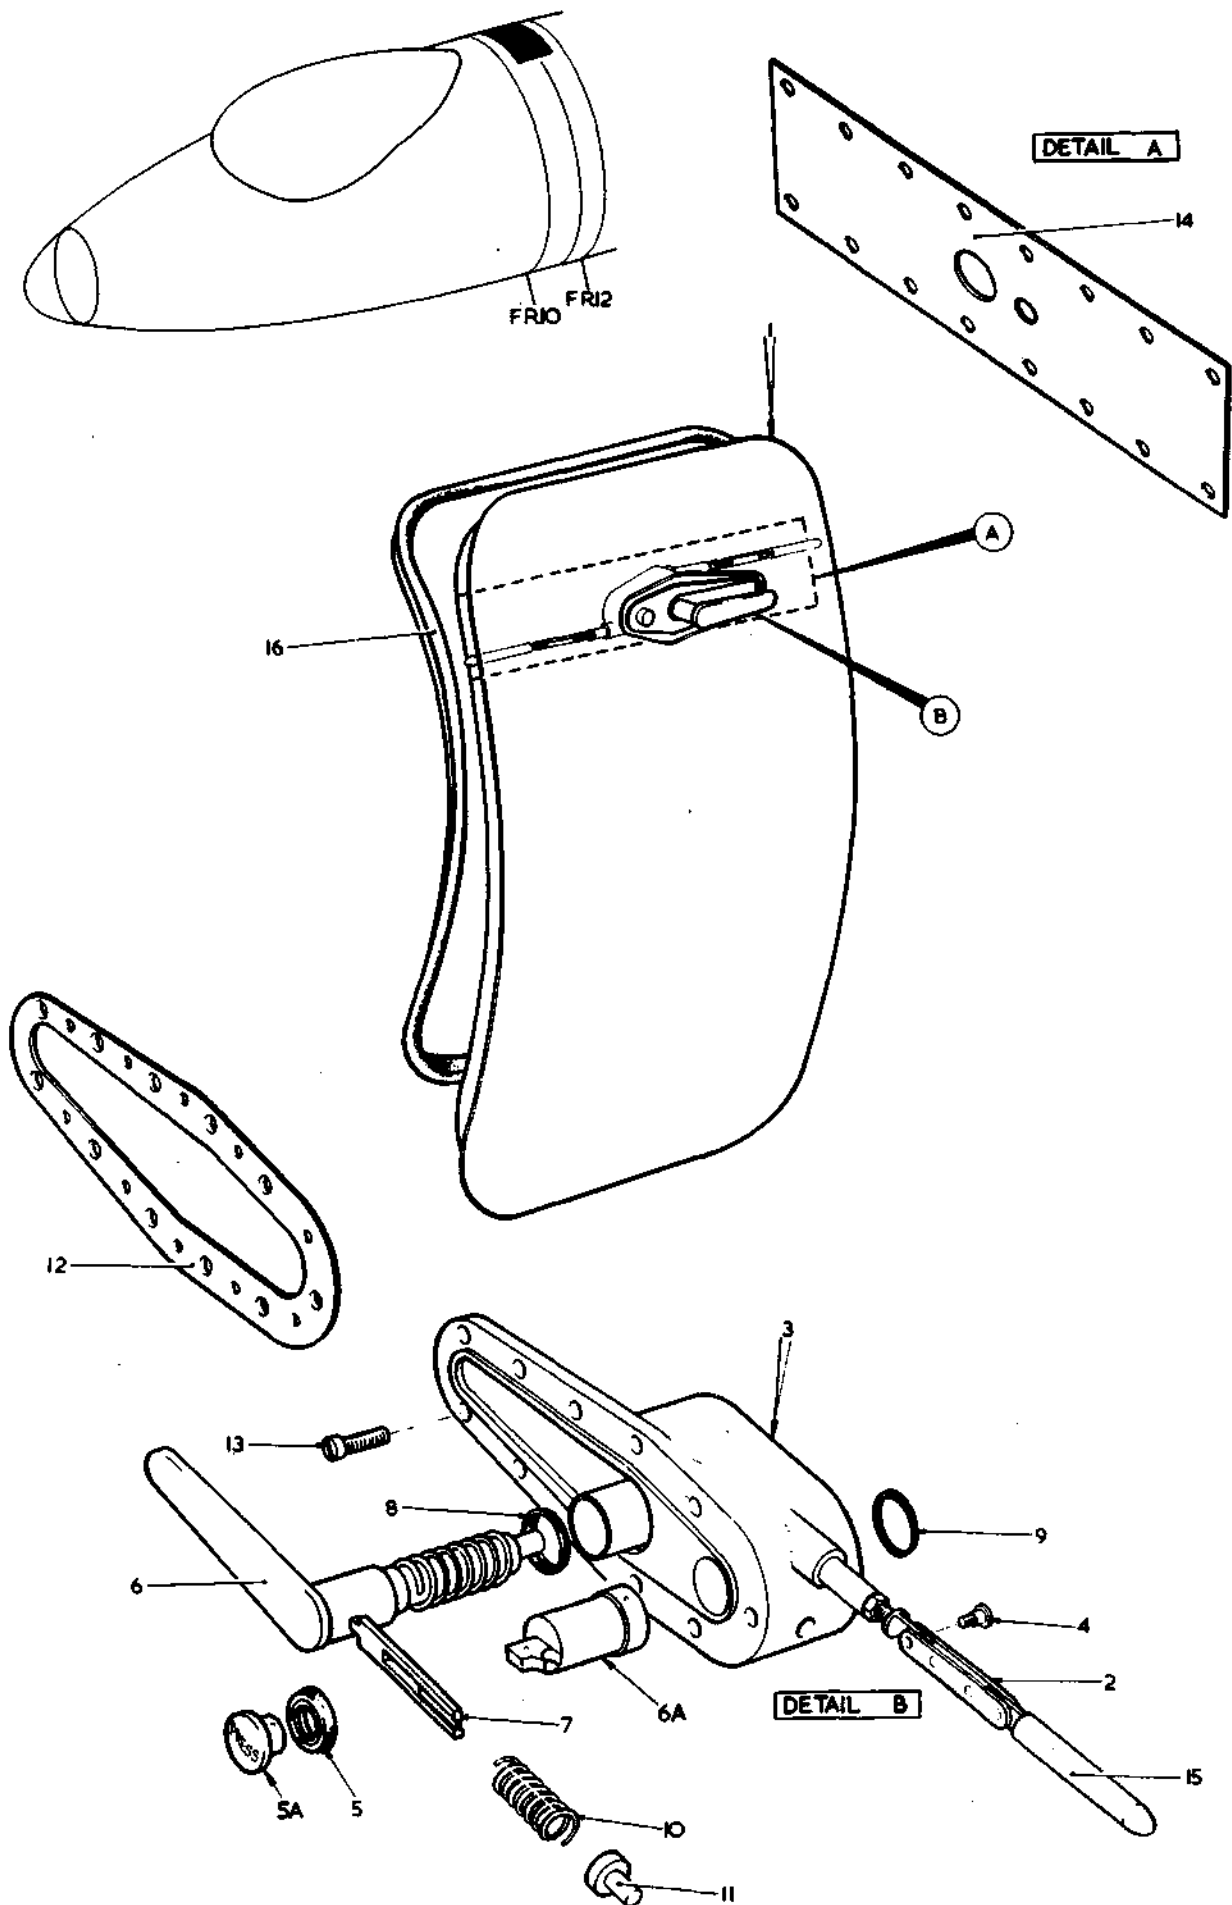


FIG. 2 EQUIPMENT ACCESS DOOR

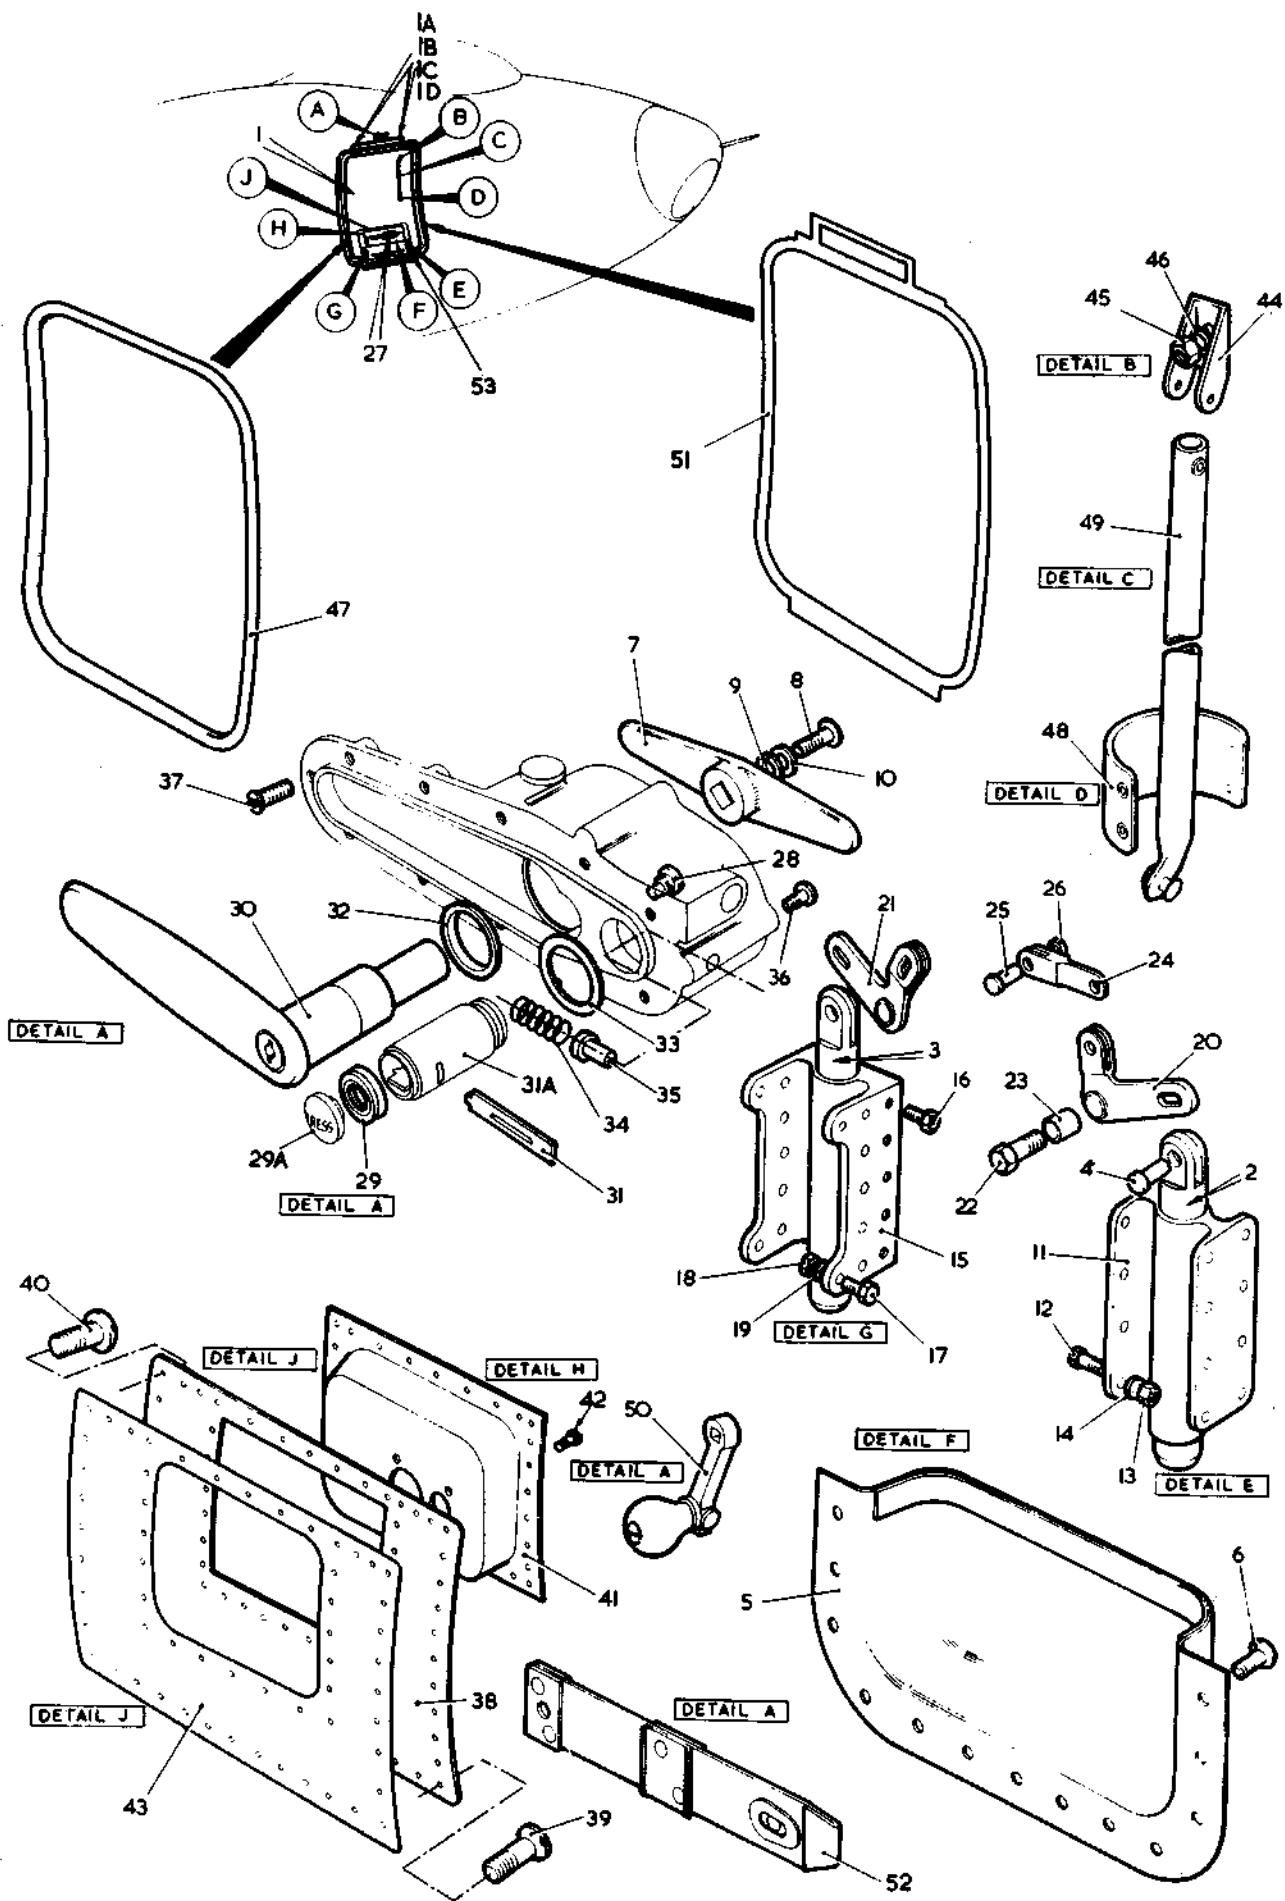


FIG.3. MAIN ENTRANCE DOOR ASSEMBLY

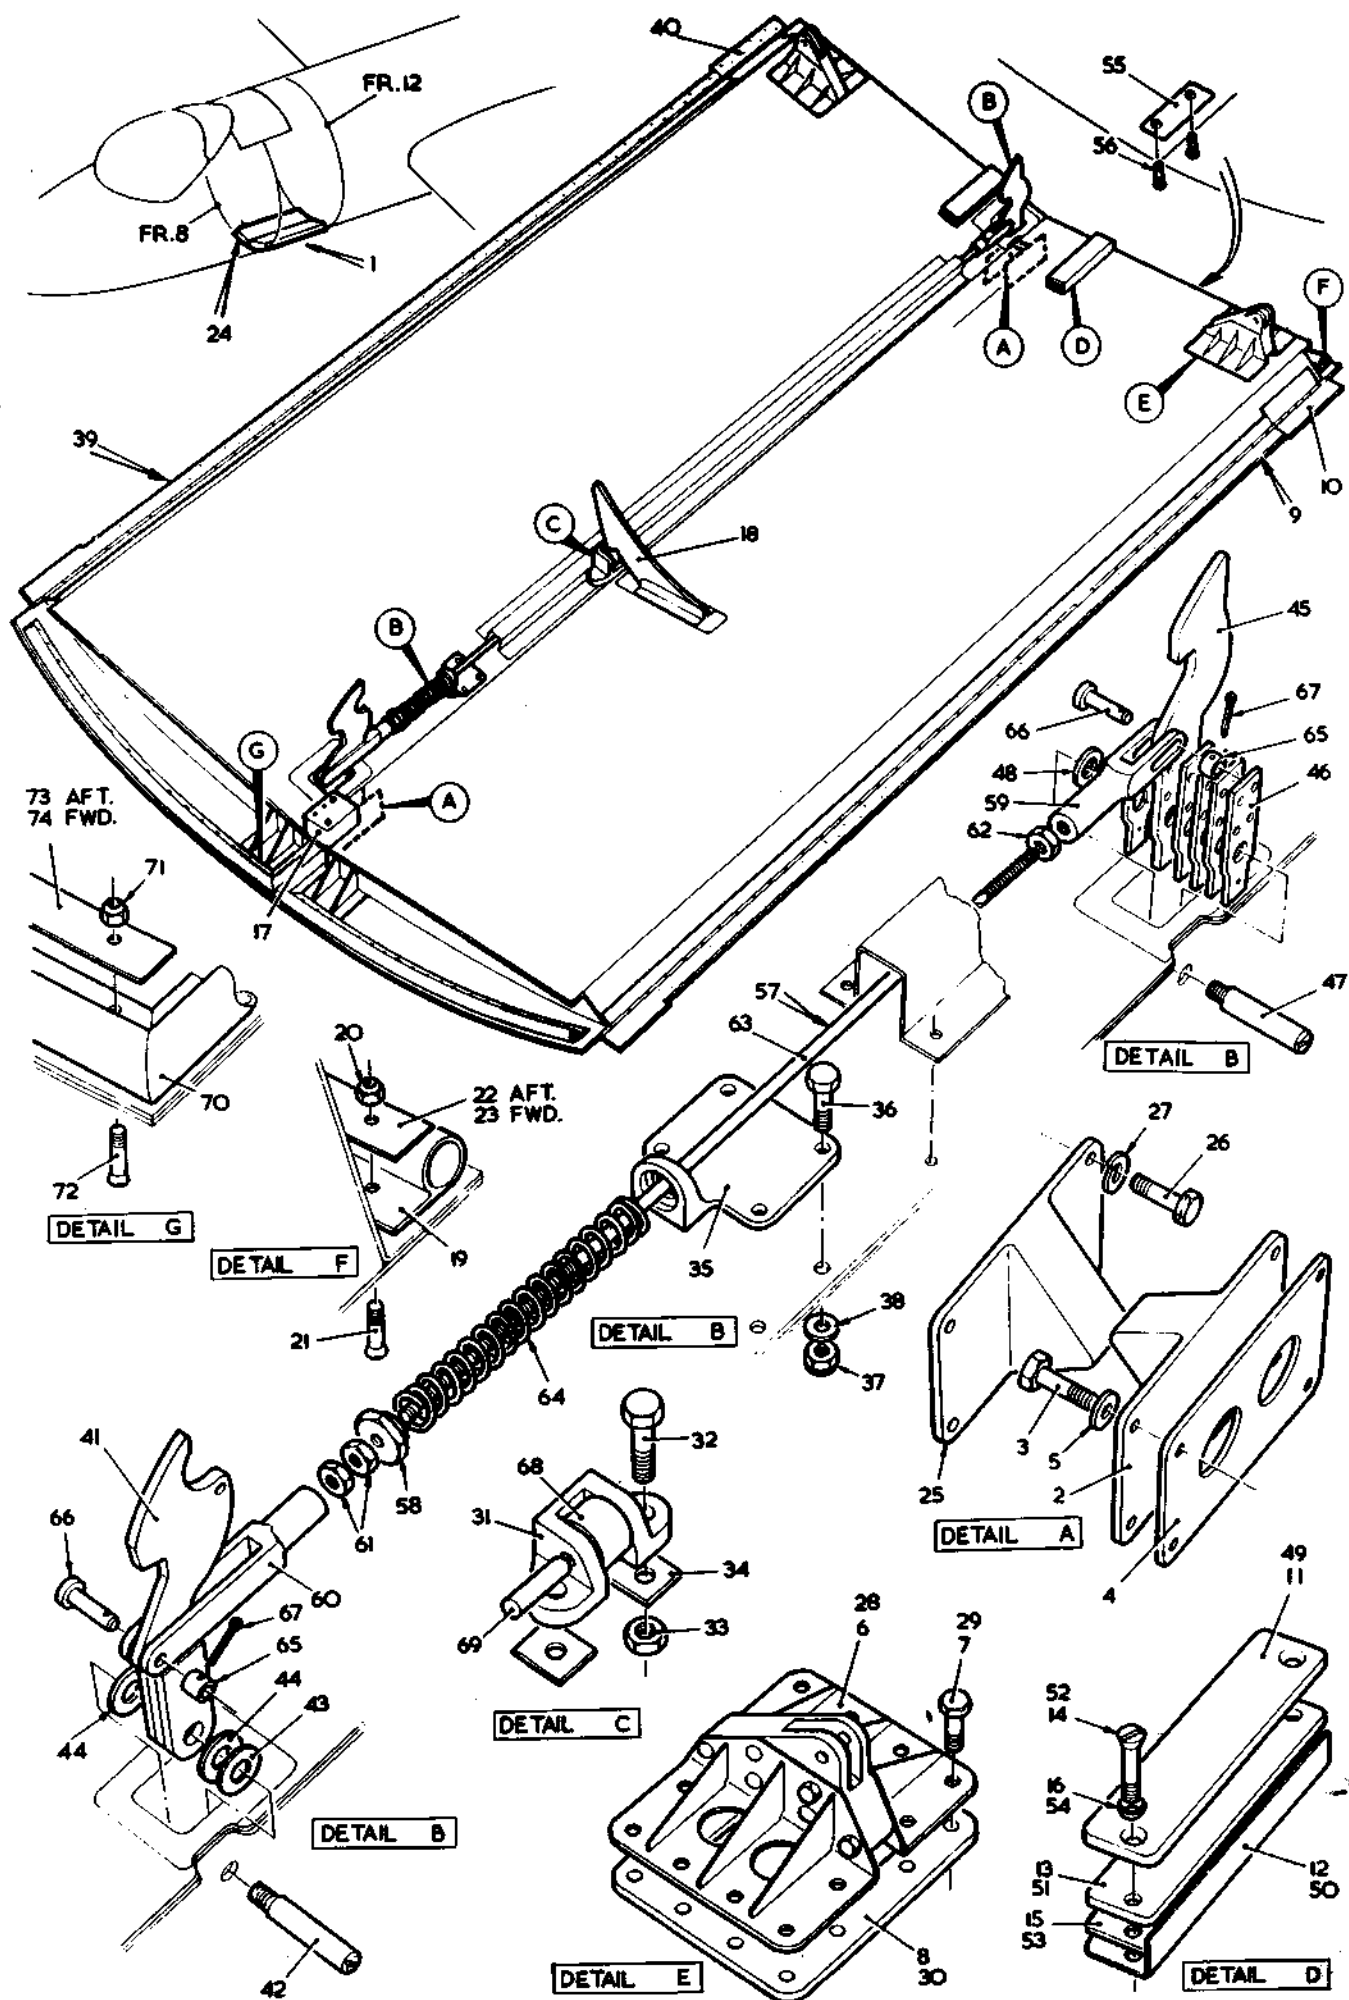


FIG. 4 NOSE UNDERCARRIAGE DOOR ASSEMBLY PORT & STBD.

CODE RSTZ

SECT KB

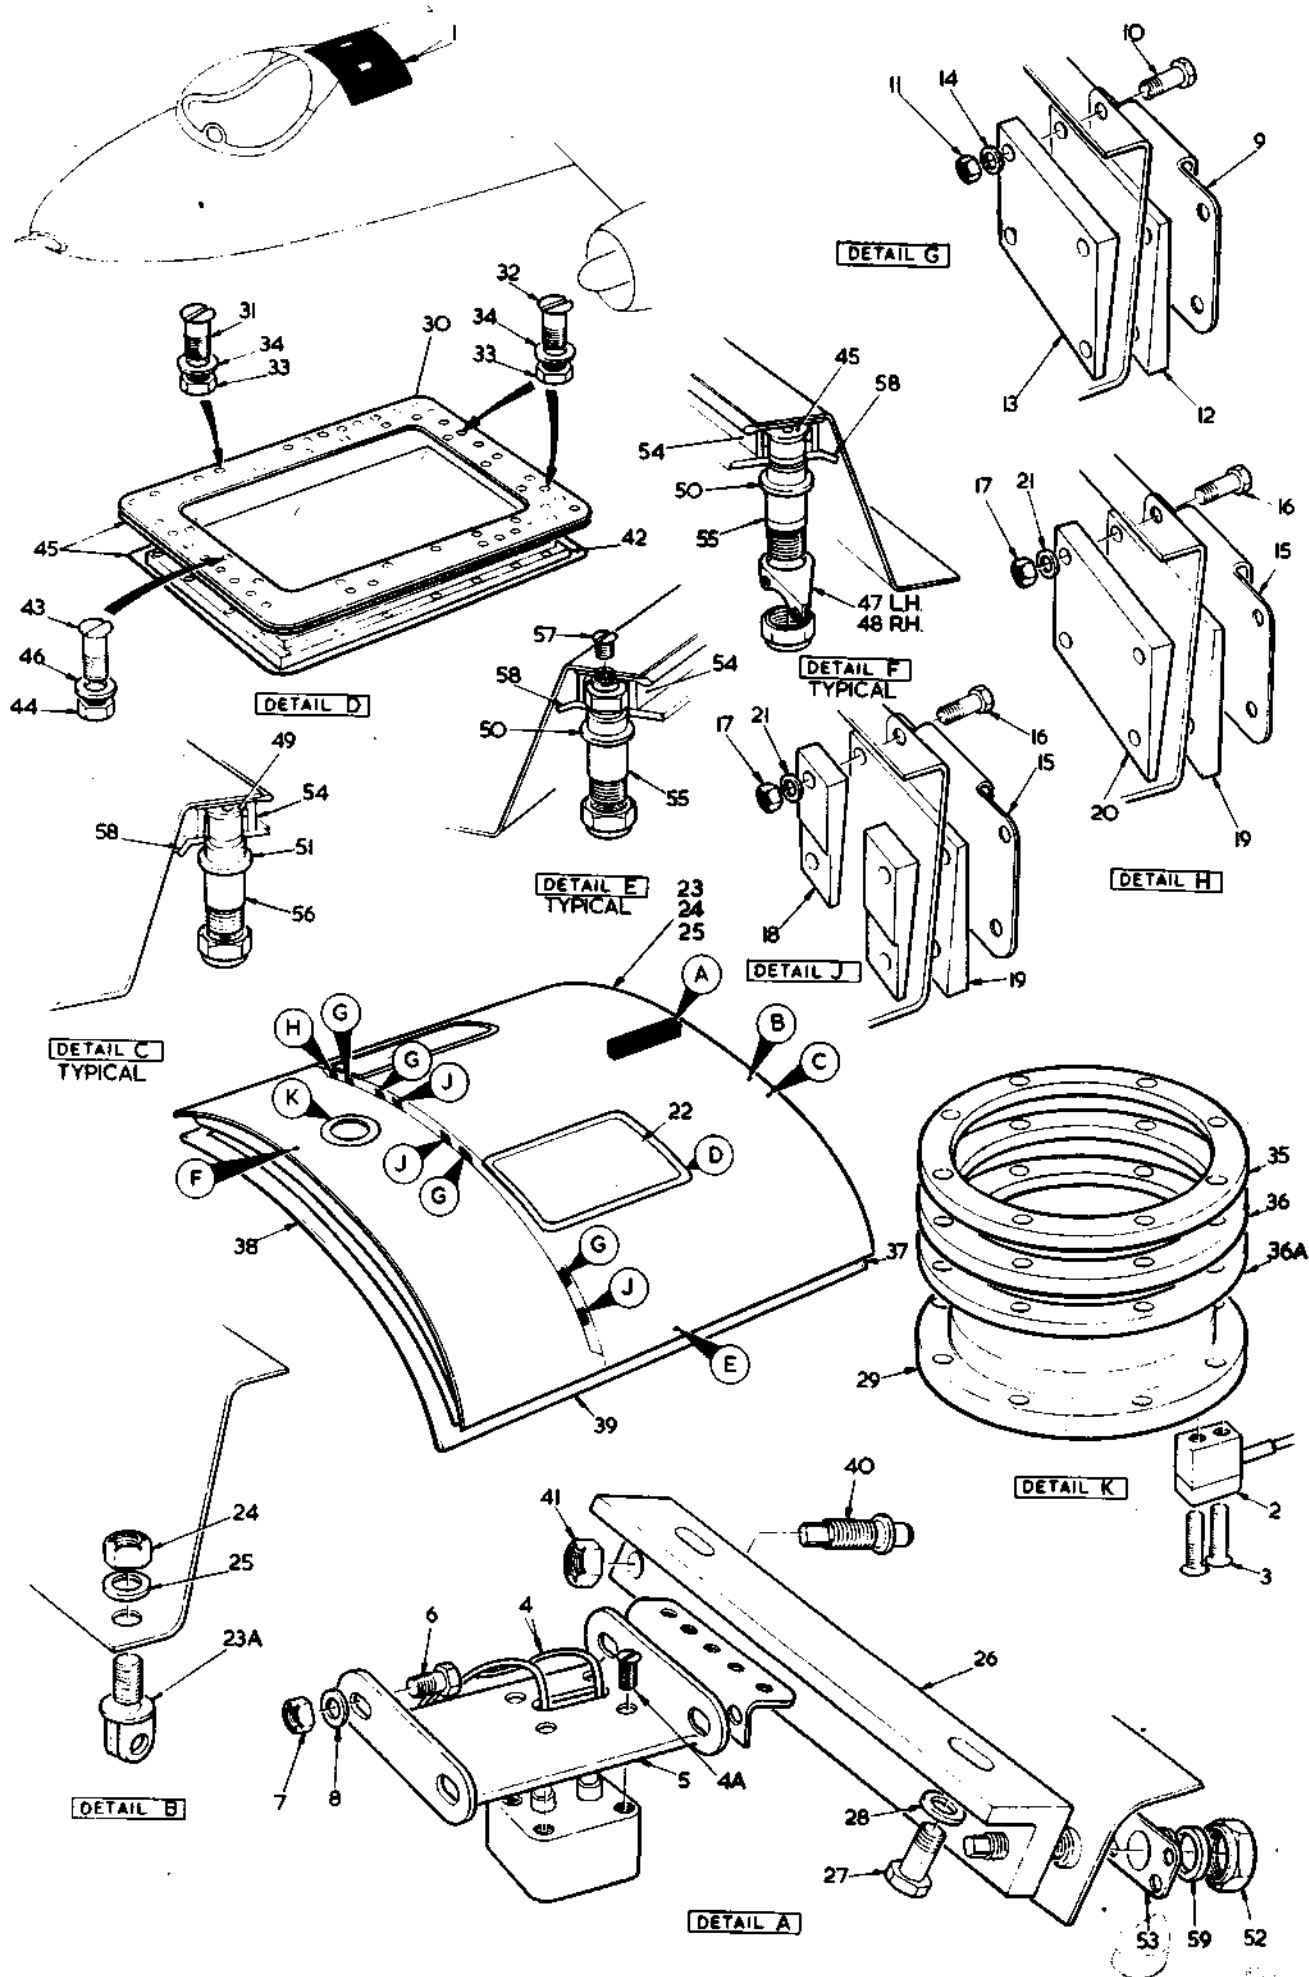


FIG. 5 NAVIGATORS ESCAPE HATCH

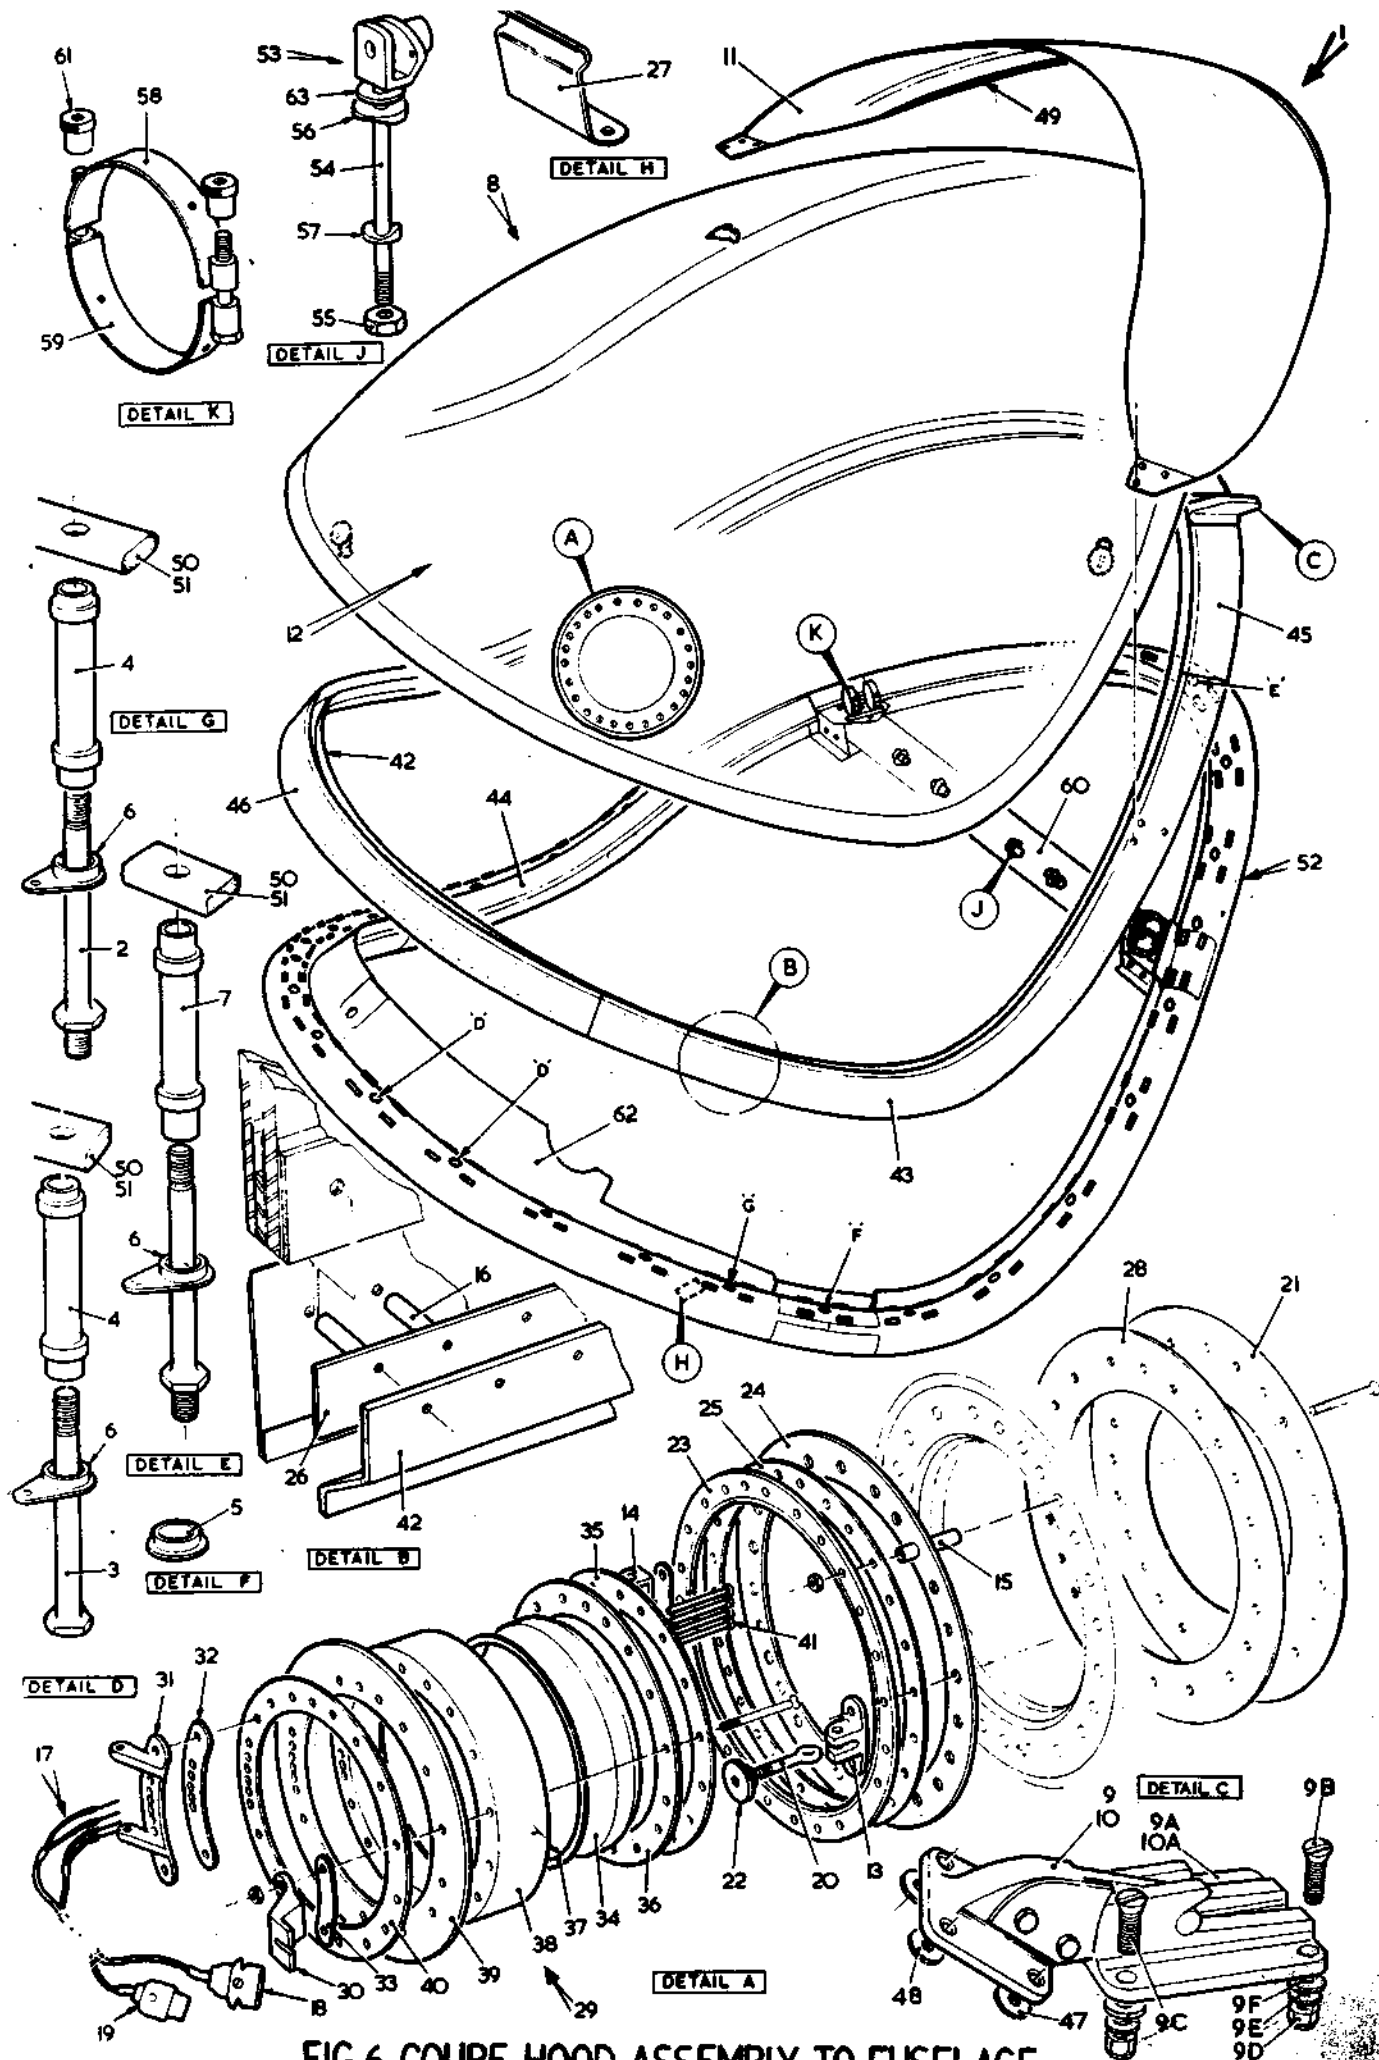


FIG.6. COUPE HOOD ASSEMBLY TO FUSELAGE

CODE RTZ

SECT. KB

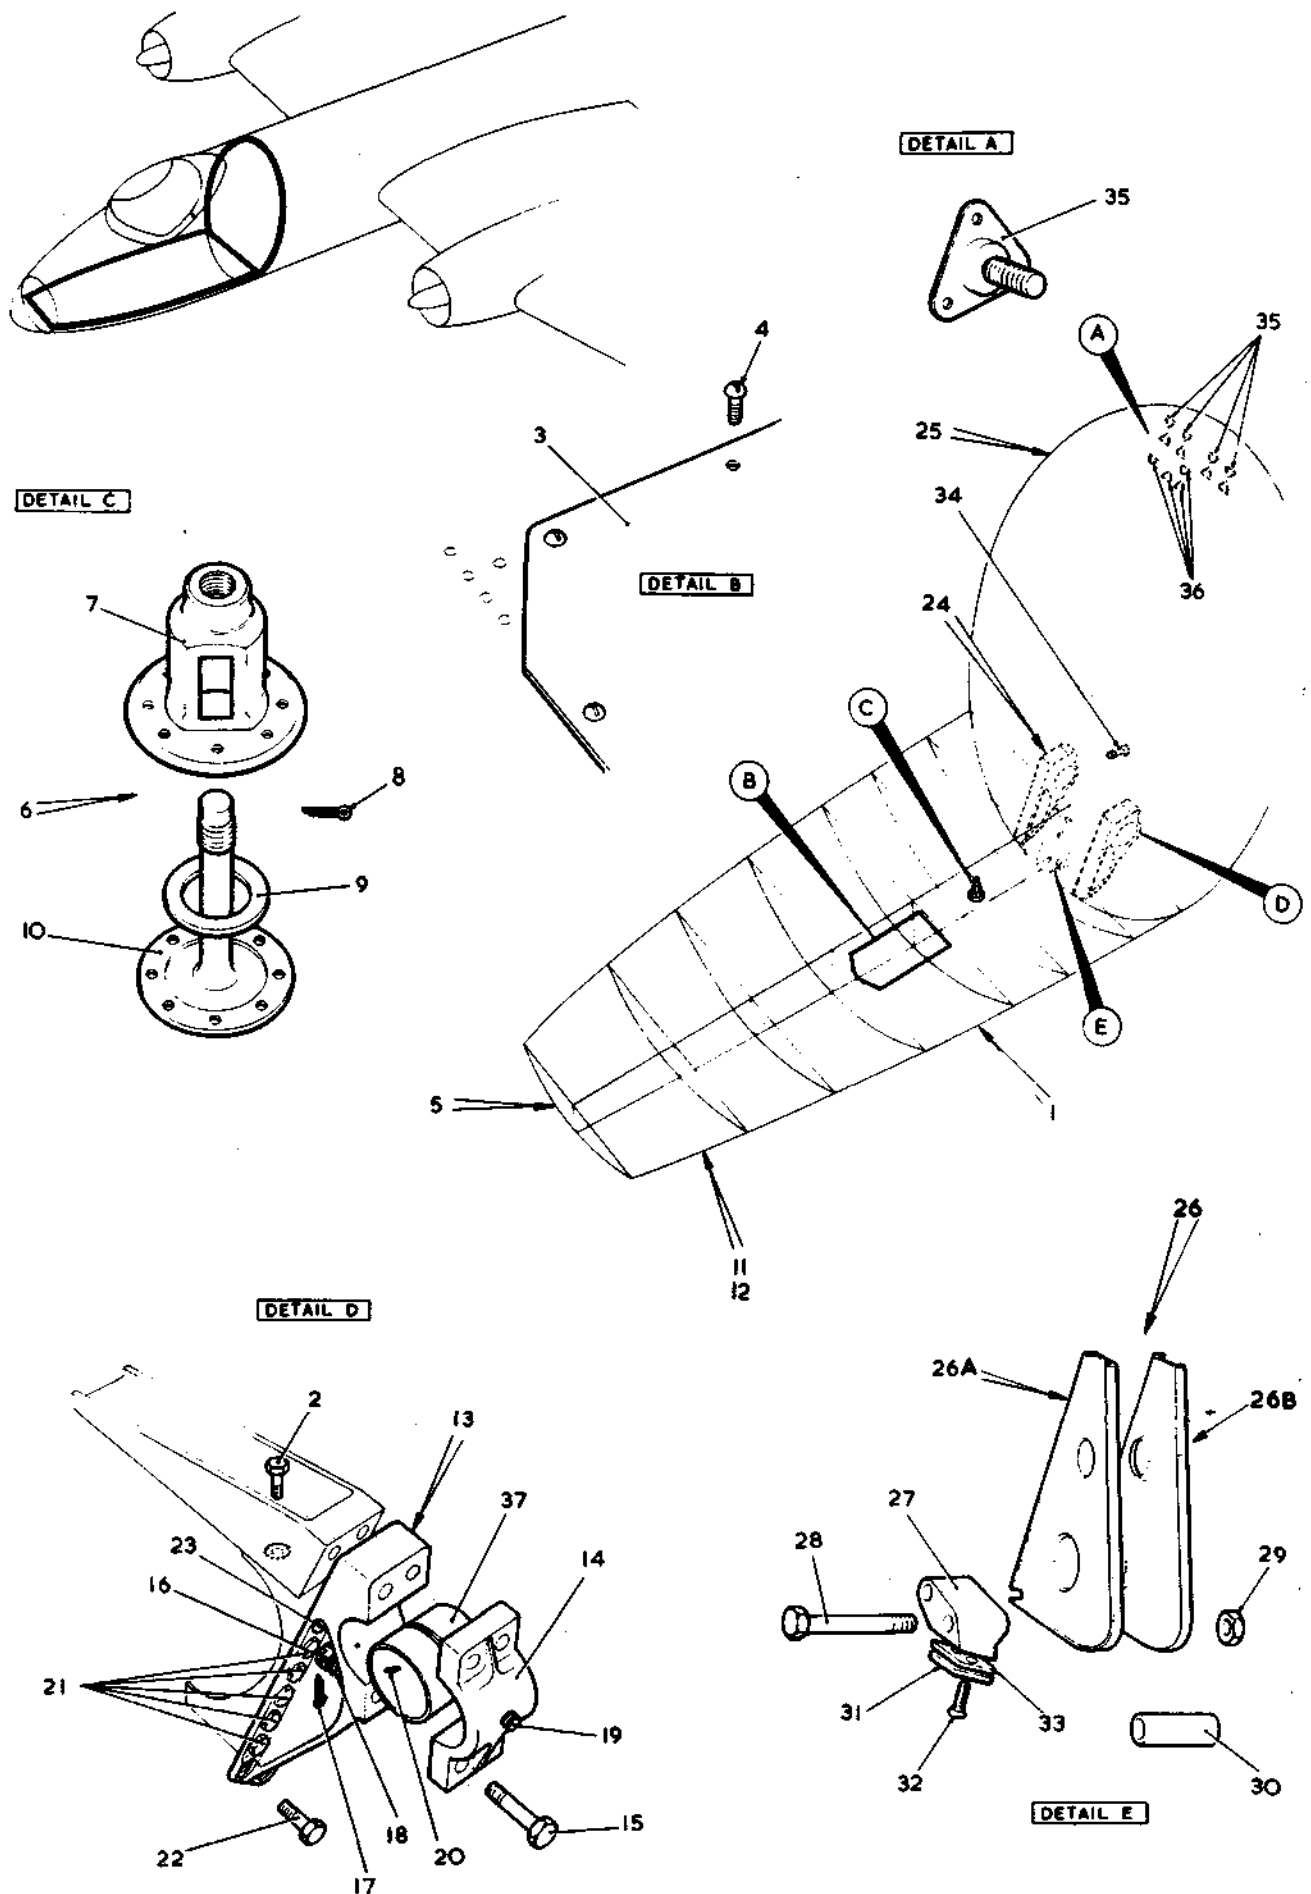


FIG. 7. KEEL UNIT, COMPLETE ASSEMBLY



SECT. K

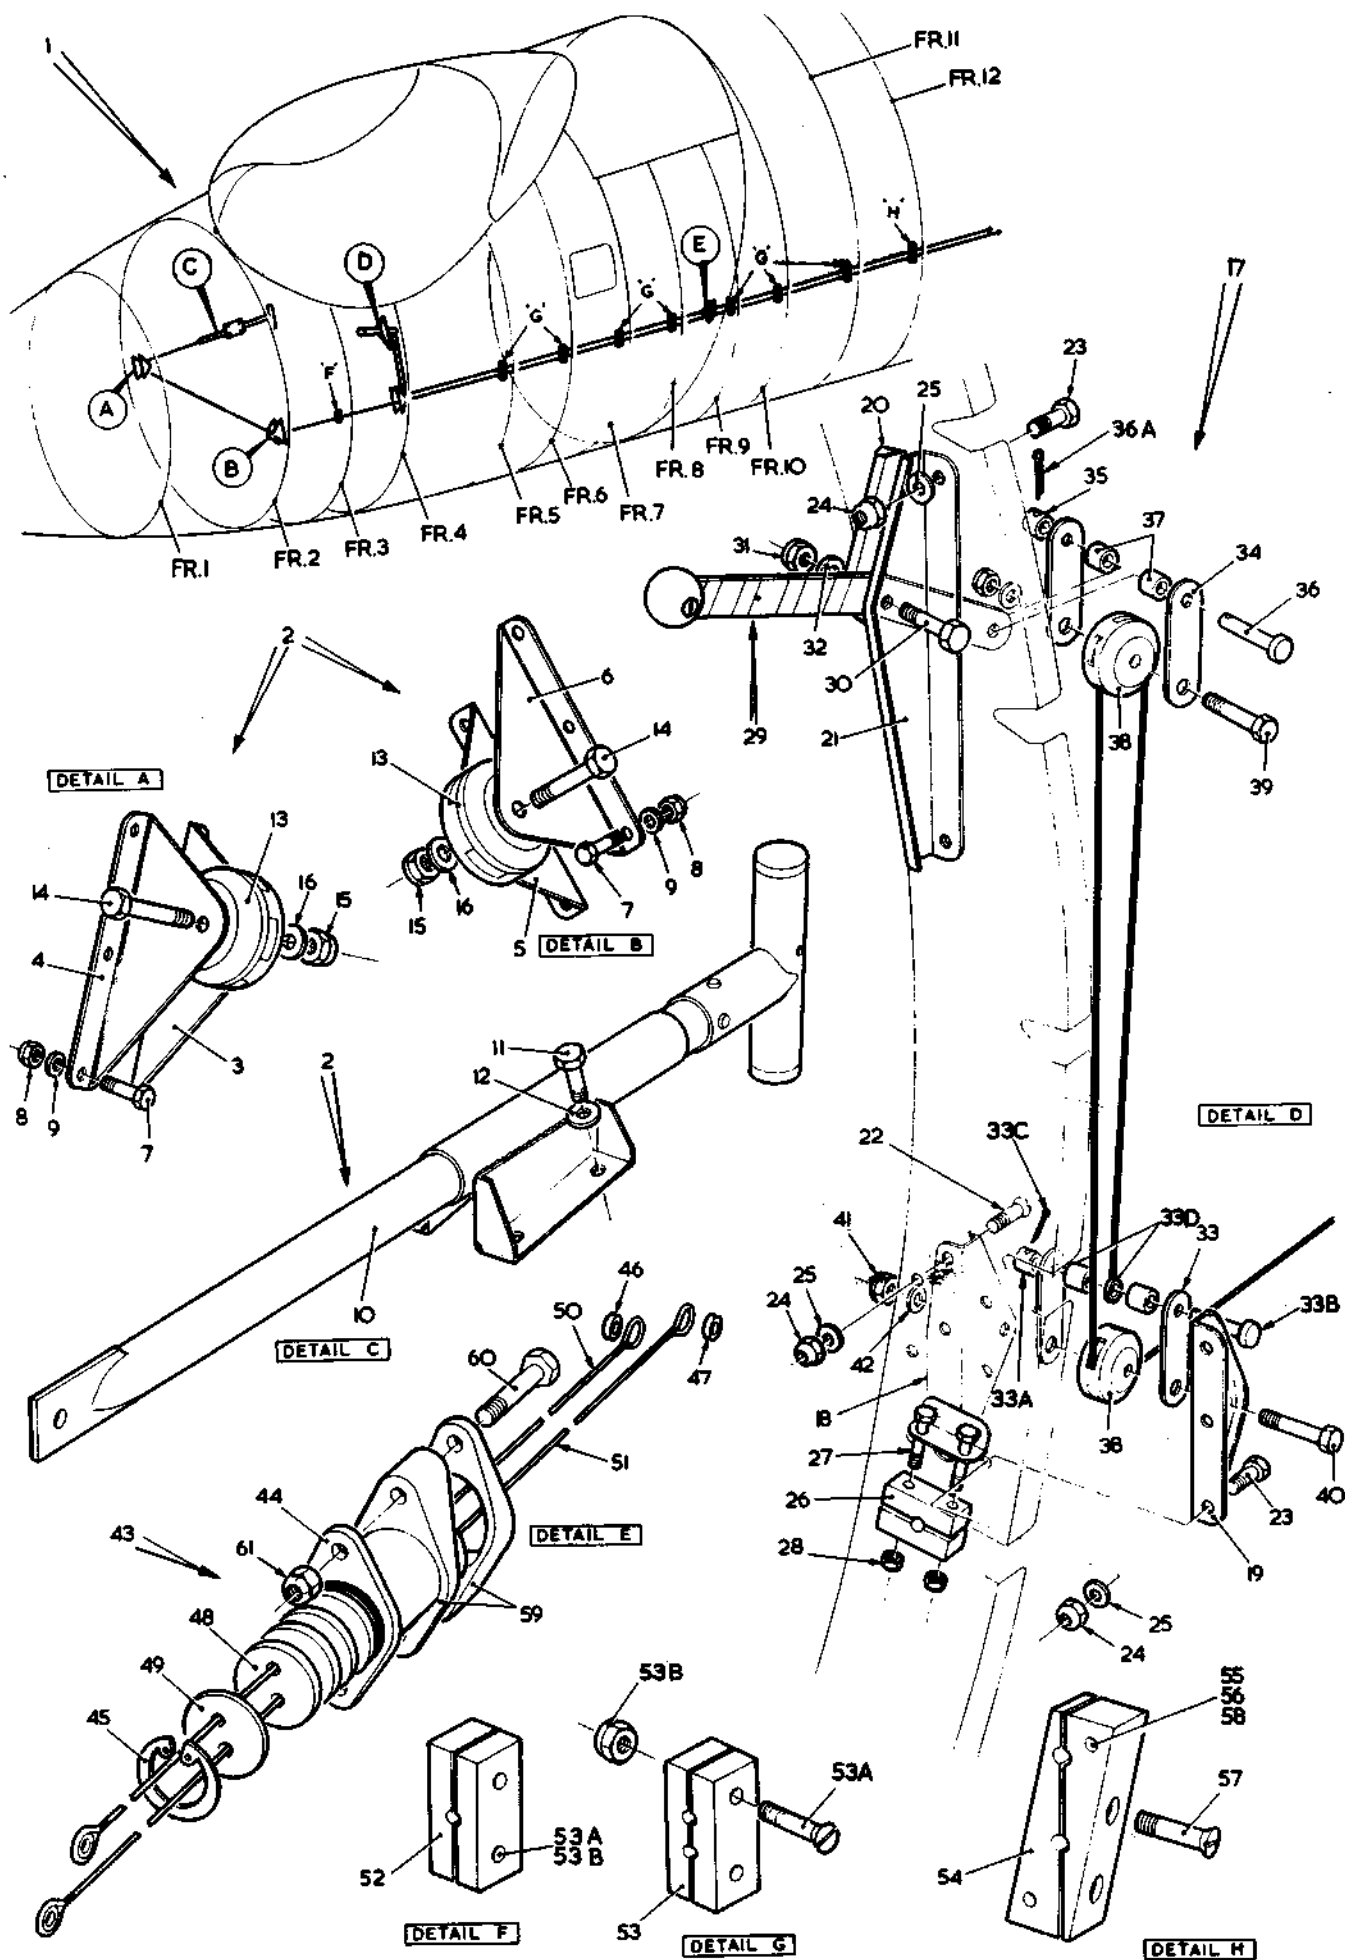


FIG.9 EMERGENCY RELEASE MECHANISM BOMB DOOR & UNDERCARRIAGE

CODE RZ

SECT KB

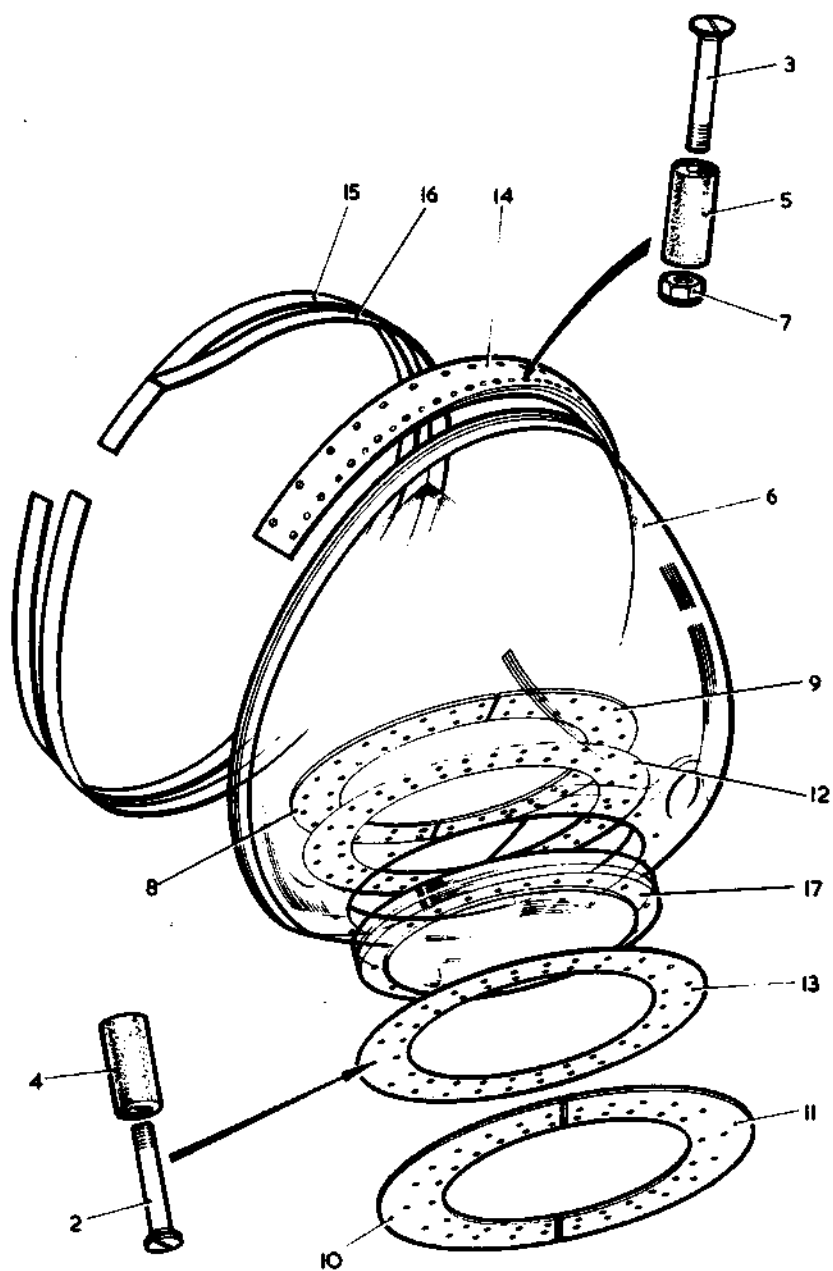
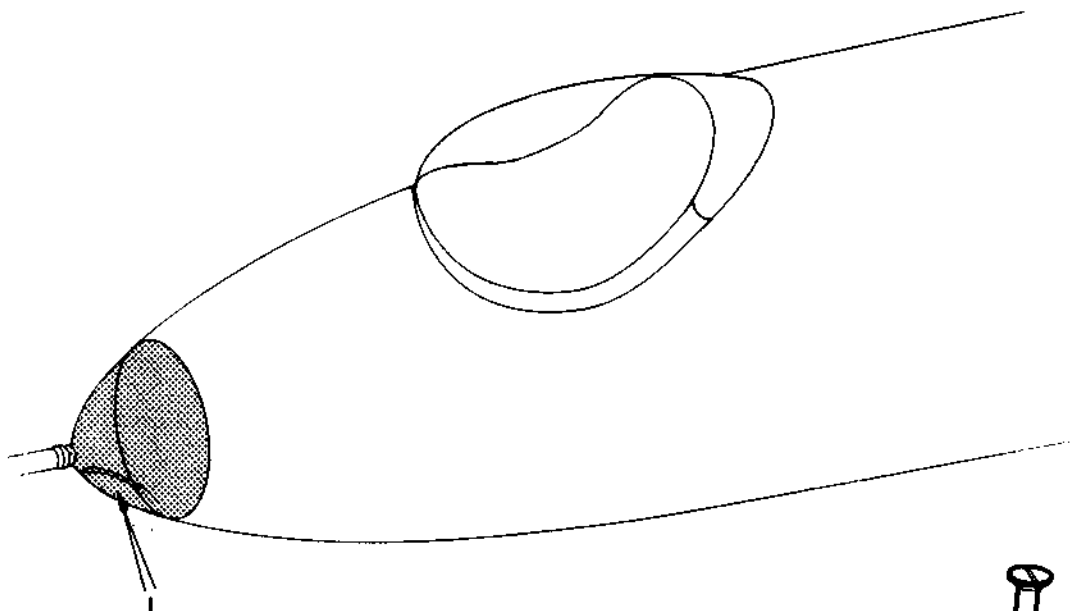


FIG.10. PERSPEX NOSE ASSEMBLY

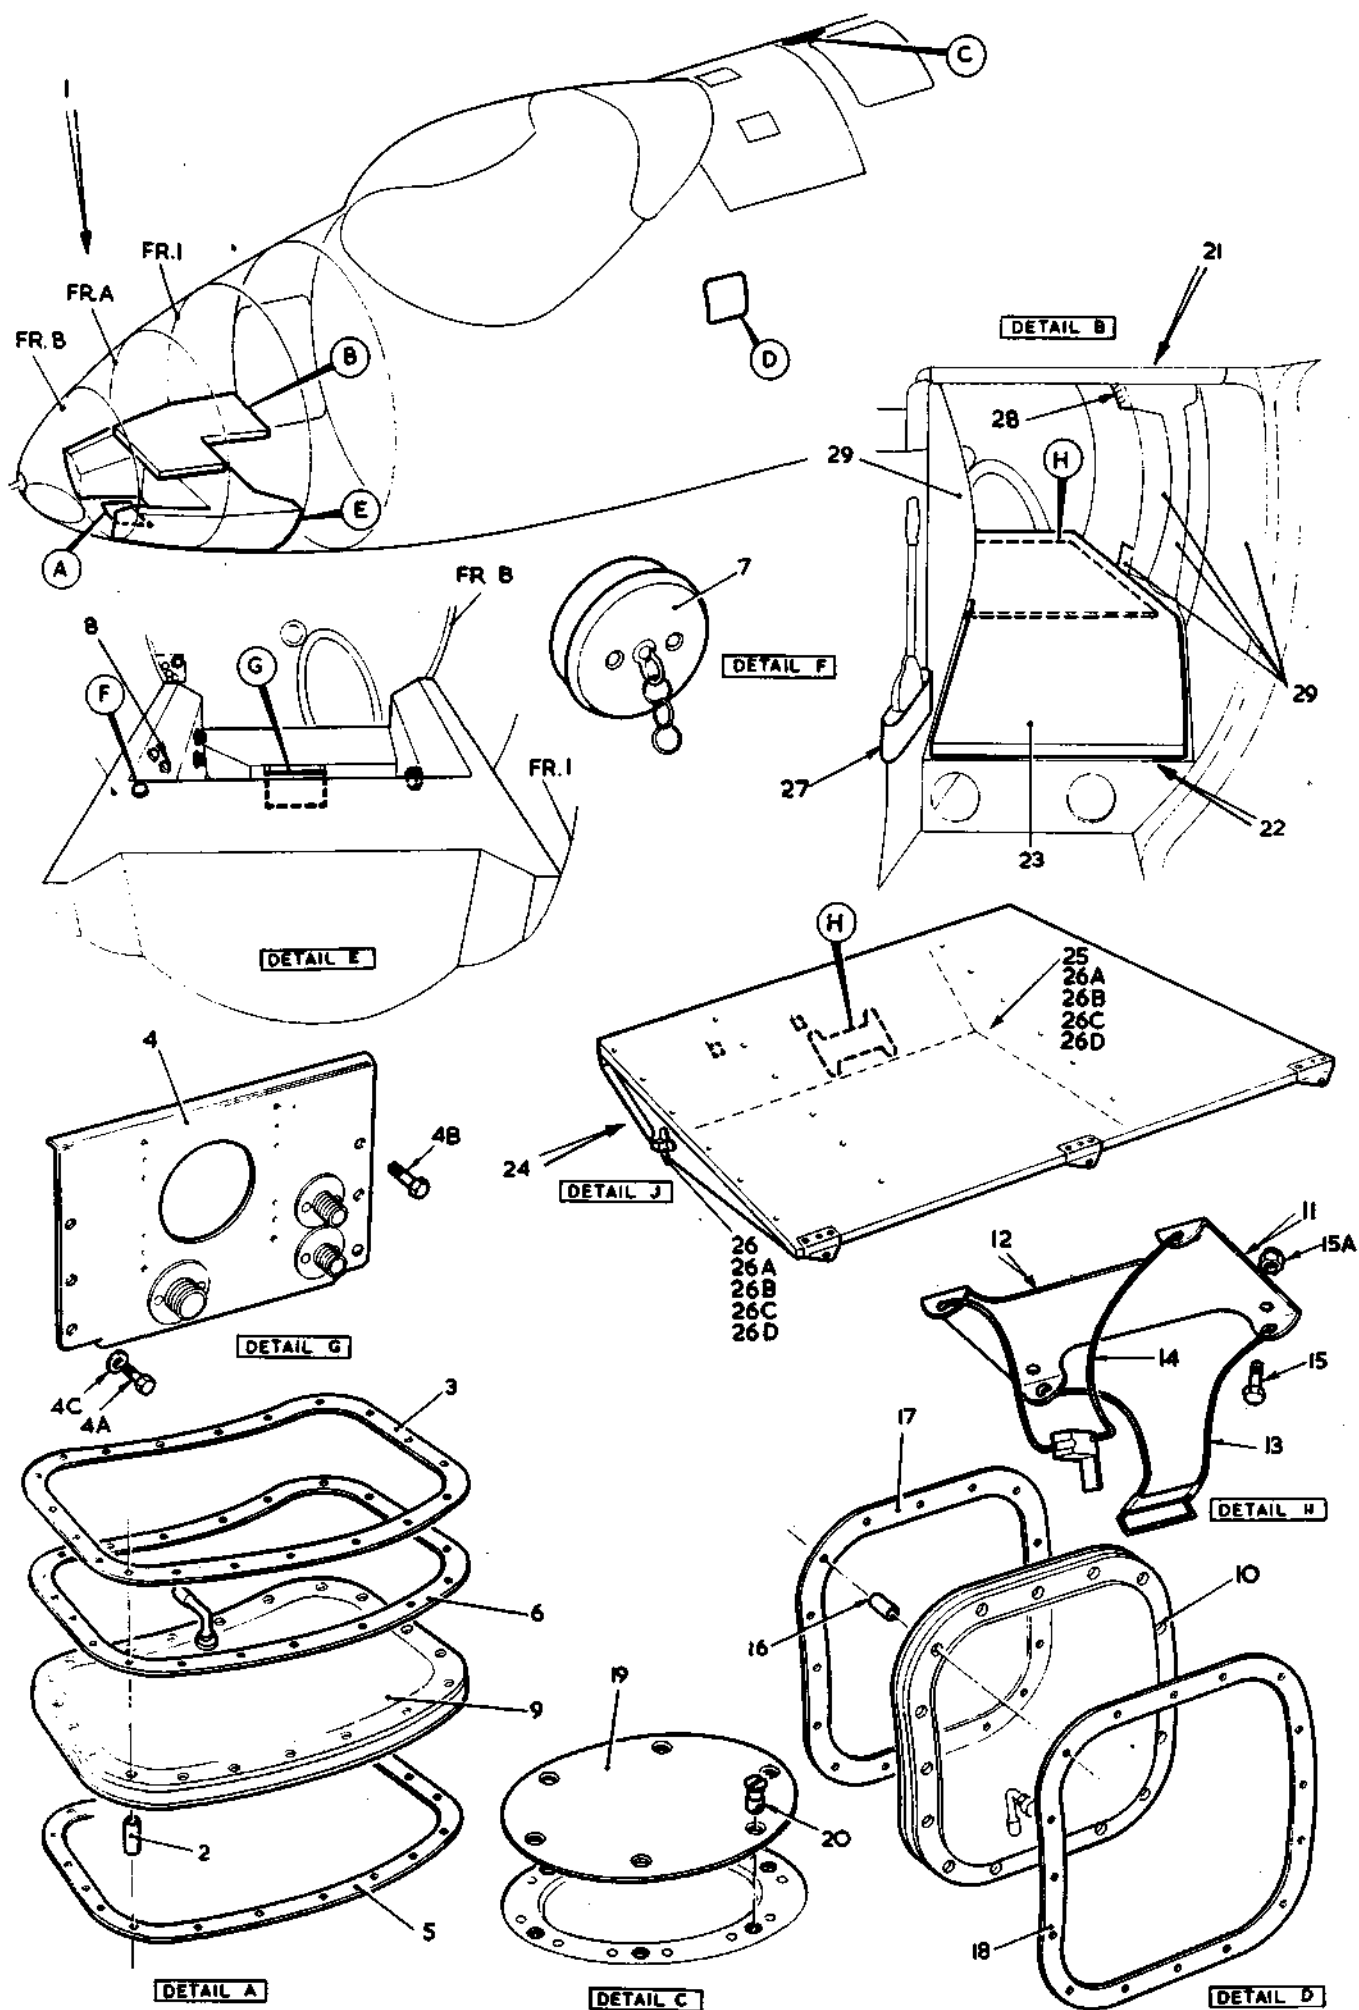


FIG.II.FRONT FUSELAGE STRUCTURE

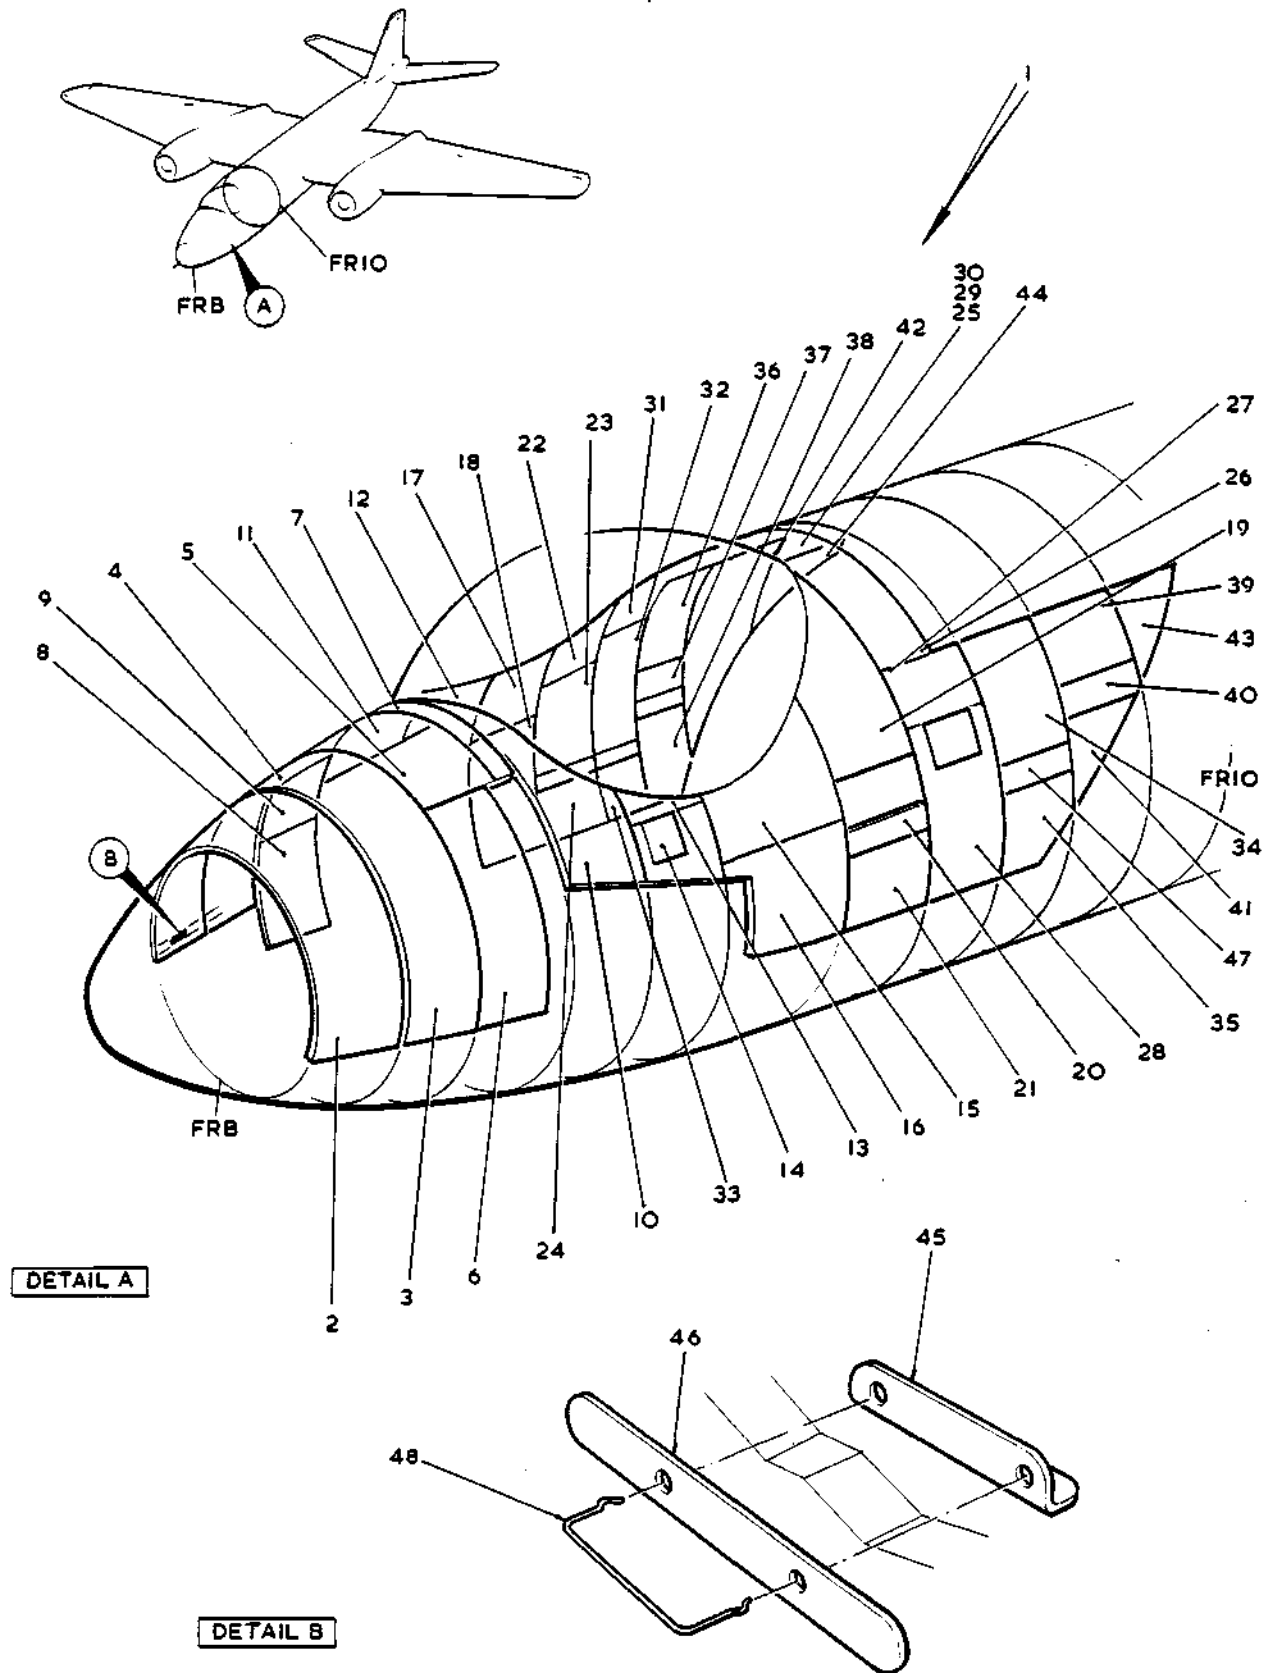


FIG 12 INSULATION PRESSURE CABIN

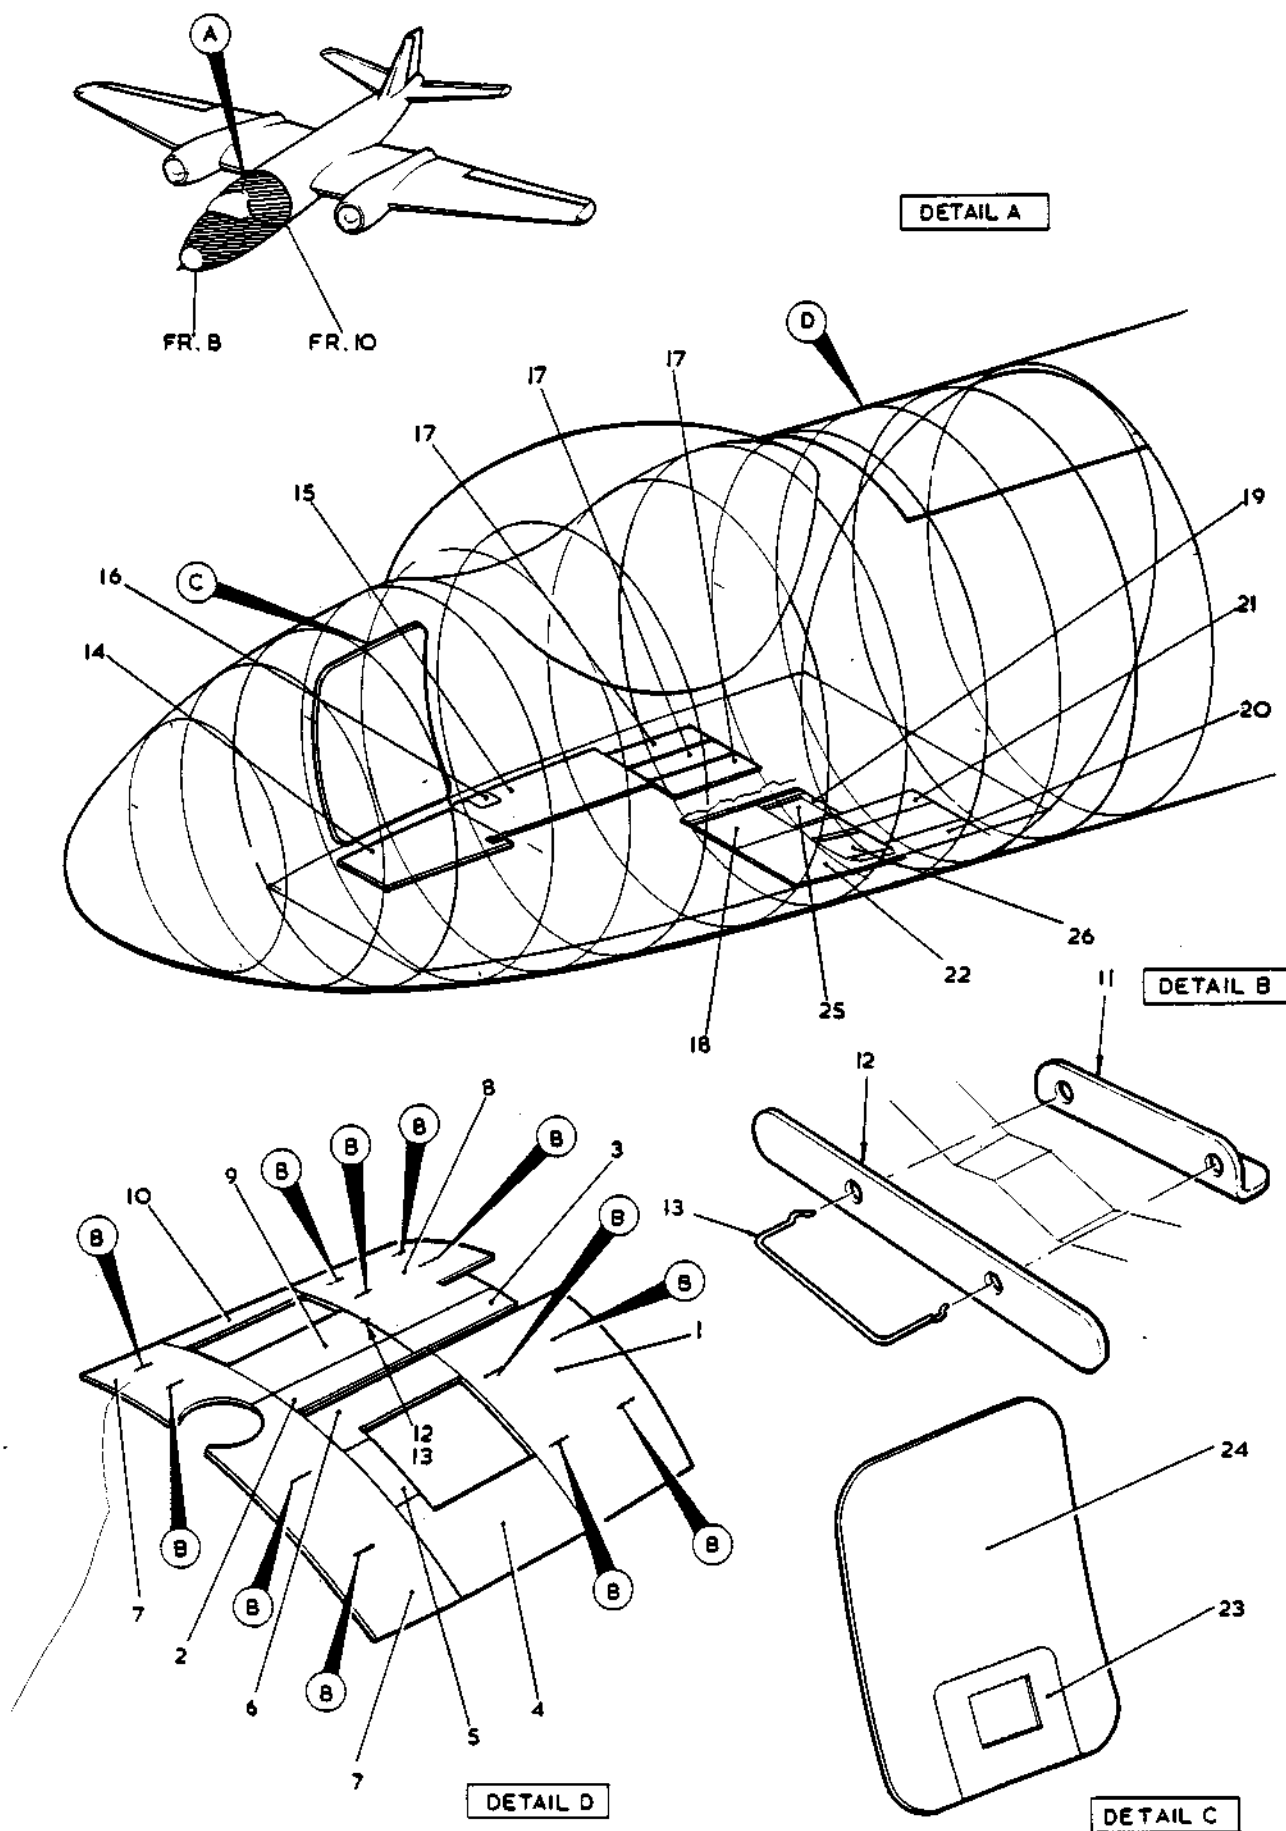


FIG 13 INSULATION FLOOR AND NAVIGATORS ESCAPE HATCH

CODE RZ

SECT KB

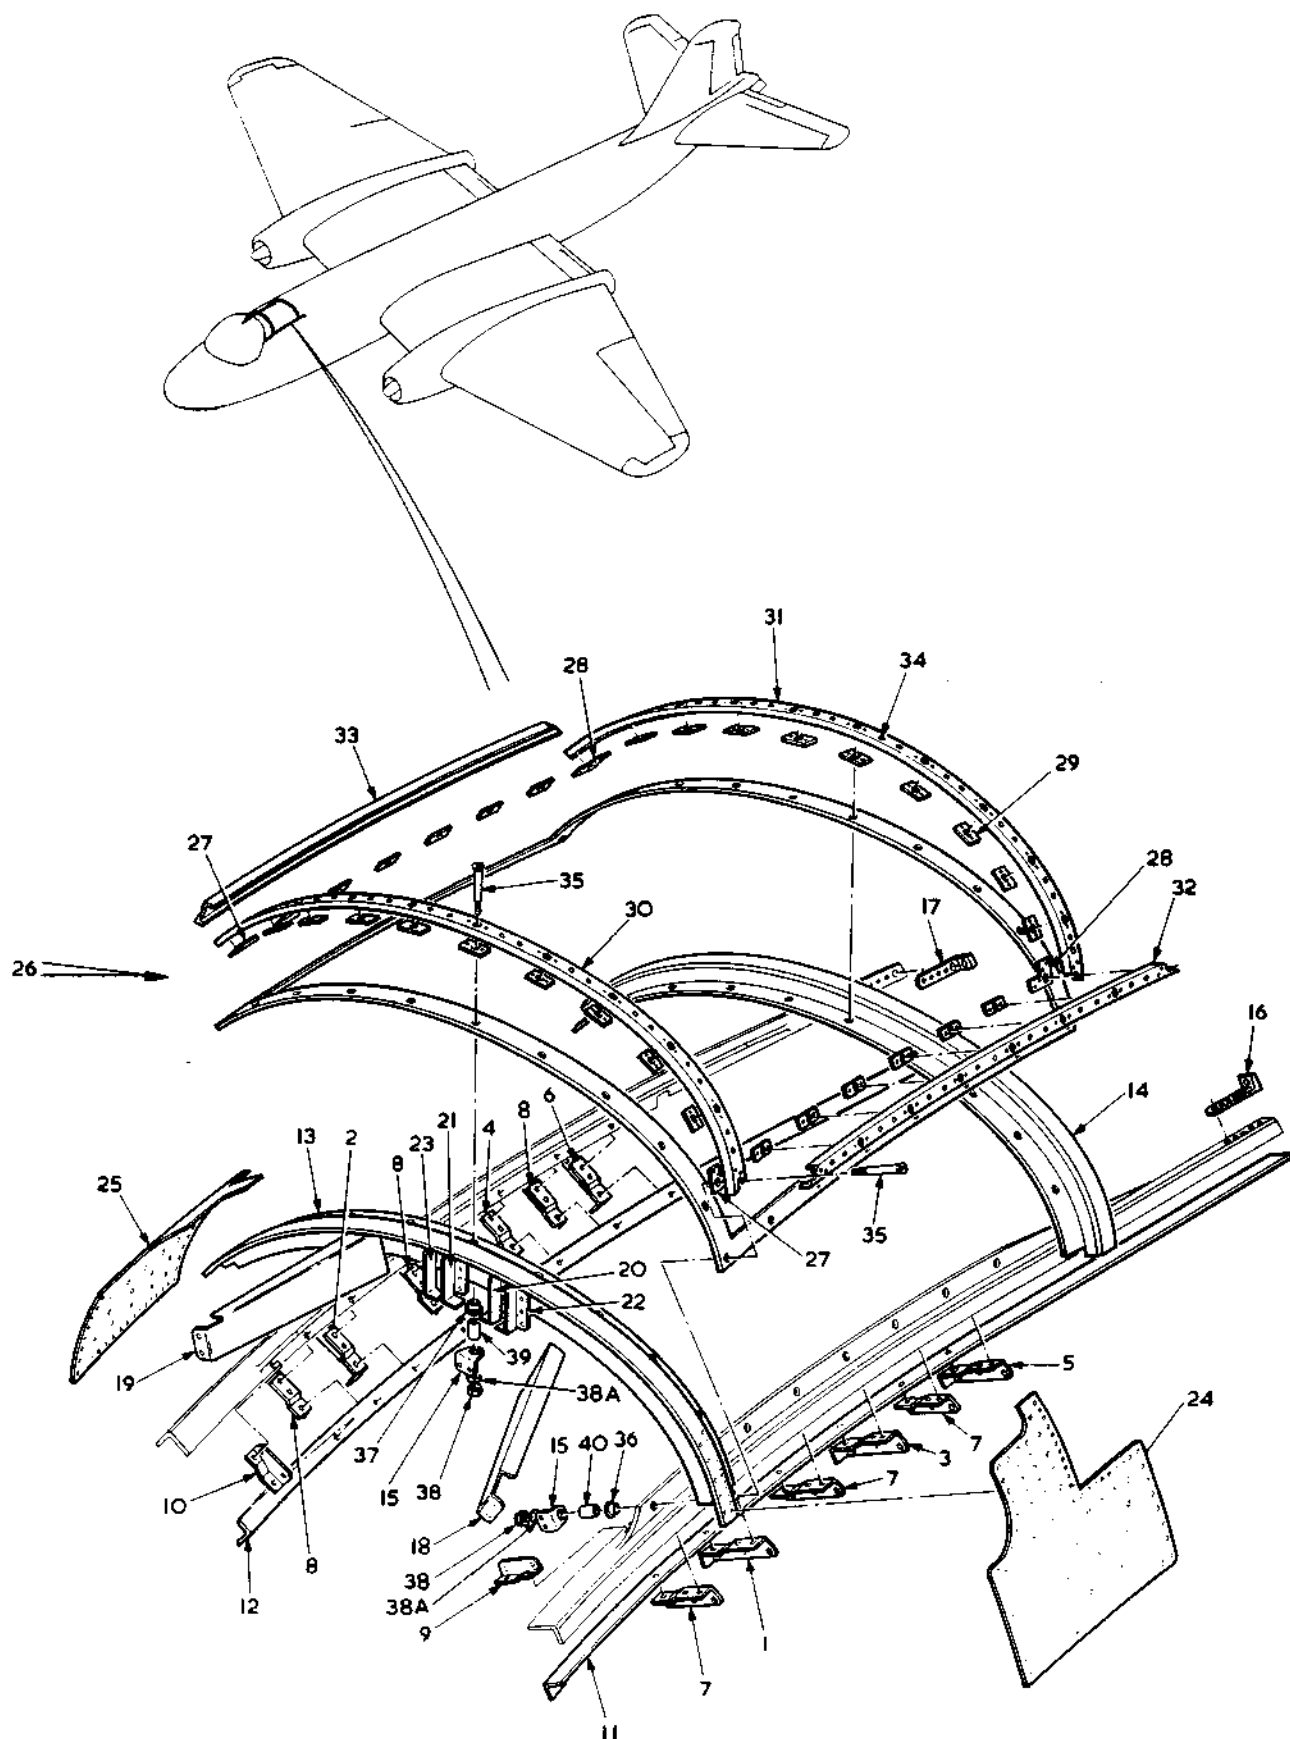


FIG 14. FRONT FUSELAGE STRUCTURE

CODE RSZ

SECT. KB


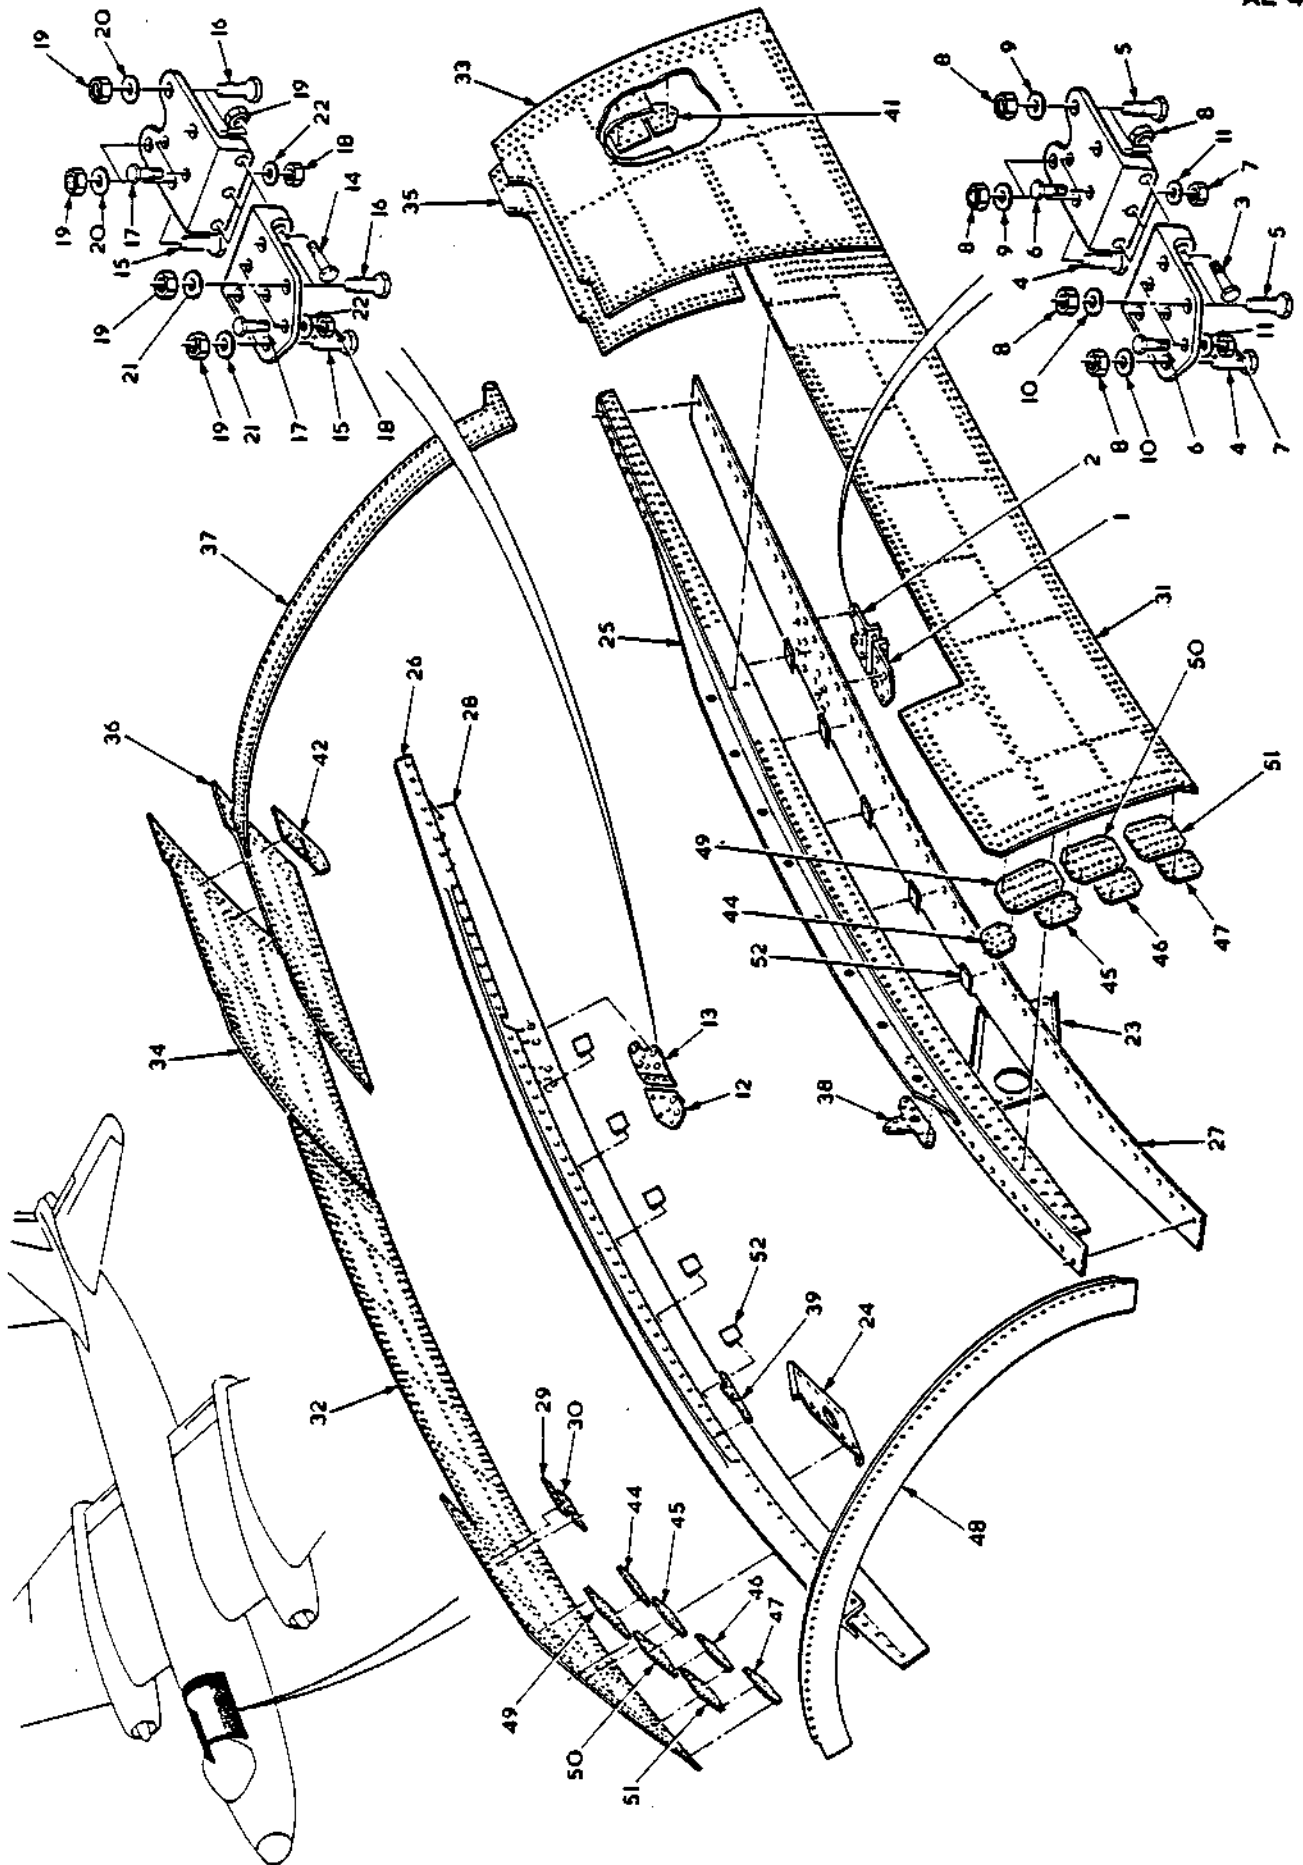



FIG. 15. FRONT FUSELAGE STRUCTURE

CODE RSTZ


SECT. KB

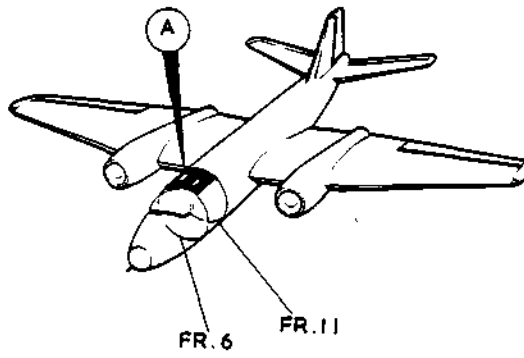

DETAIL A

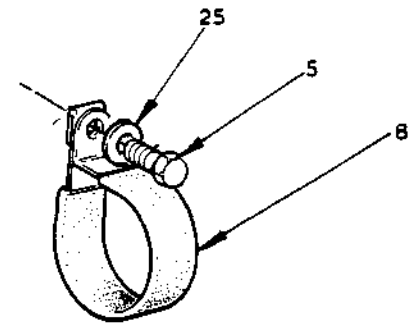

DETAIL B

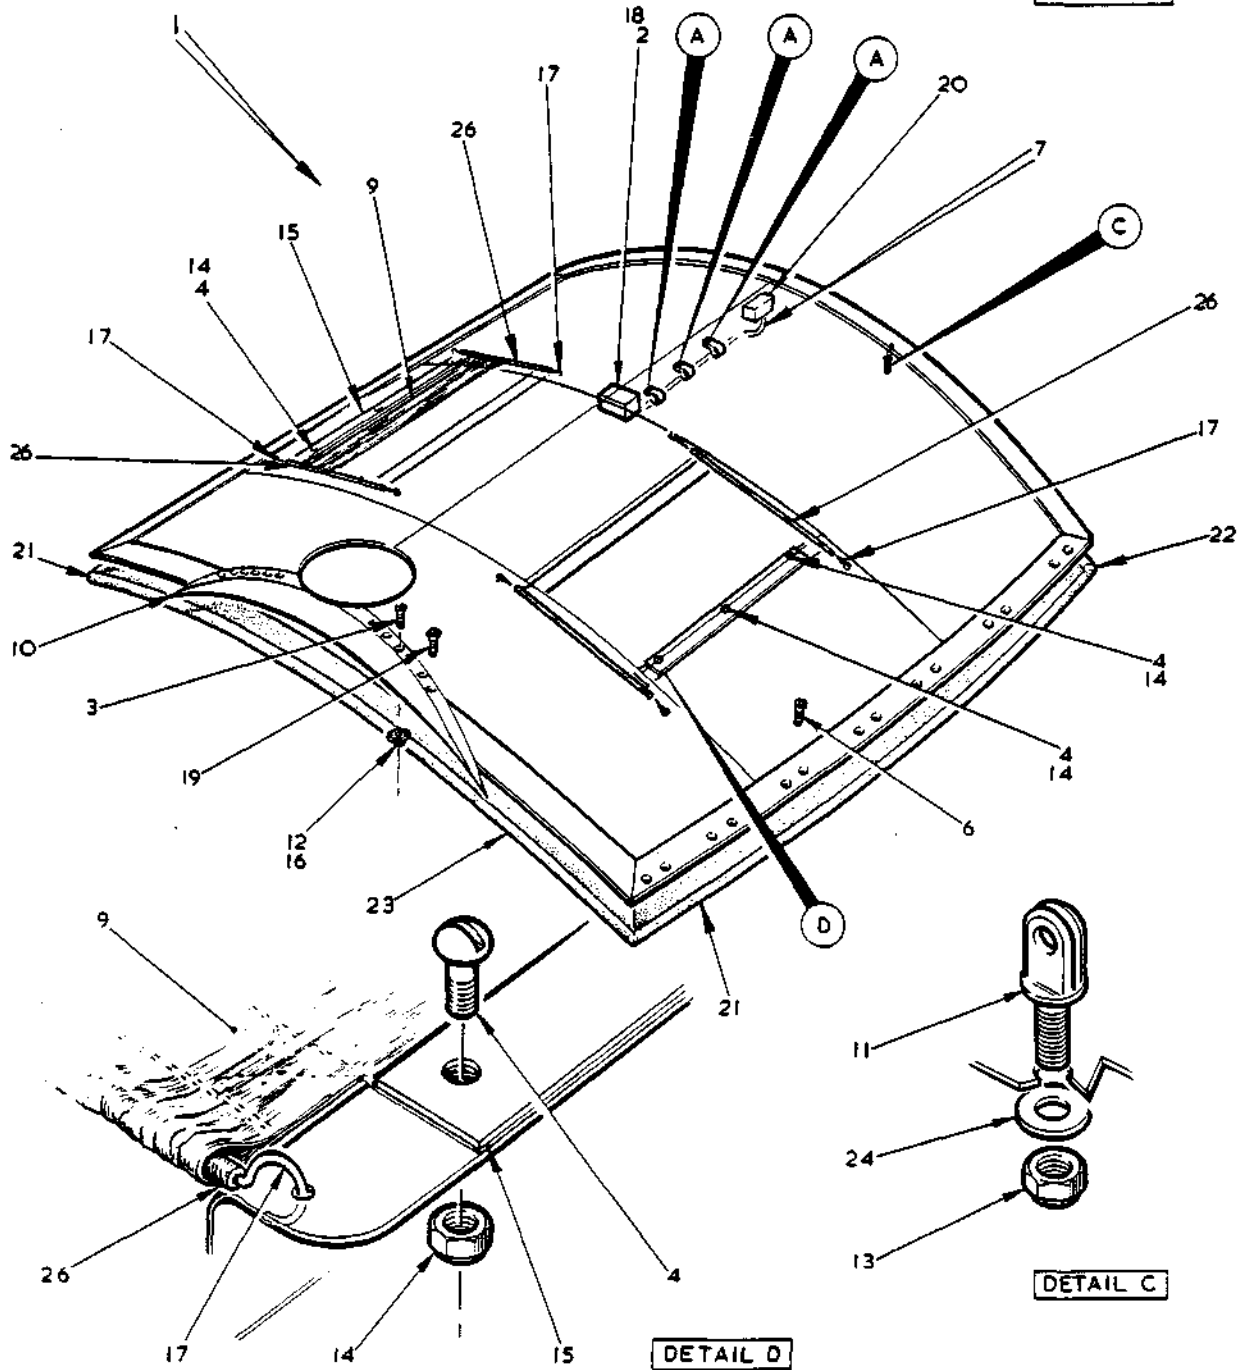

DETAIL C

DETAIL D

16 FRONT FUSELAGE STRUCTURE