

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5 6			
EG4.75.403	CABIN PRESSURE SYSTEM IN FRONT FUSELAGE, ASSEMBLY Spares for:—					—	—	
EA3.75.83	. ADAPTOR, non-return valve mounting Attaching parts for EA3.75.83:—					1	—	SB1/1
A25/1C	. Bolt, 2BA					1	—	SB1/2
A25/5C	. Bolt, 2BA					5	—	SB1/3
AGS2001C1/66	. Nut, 2BA					5	—	SB1/4
EA3.75.95	. Washer, sealing					2	—	SB1/5
EA3.75.139	. Washer, retaining, forward of pressure bulkhead					1	—	SB1/6
SP47C	. Washer					1	—	SB1/7
GODFREY 22688	. ADAPTOR, water extractor, drain					1	—	SB1/8
EA3.75.177	. BRACKET, pipe support, clip					4	—	SB2/1
EA3.75.283	. BRACKET Attaching parts for EA3.75.283:—					1	—	SB2/2
A25/2C	. Bolt, 2BA					3	—	SB2/3
AGS2001C1/66	. Nut, 2BA					3	—	SB2/4
SP15C	. Washer					3	—	SB2/5
EA3.75.547	. BRACKET					1	—	SB2/6
EEAS136	. BRACKET, pipe support, clip					1	—	SB2/7
EB6.75.369	. BRACKET, assembly, support forward water extractor					1	—	SB1/9
EB6.75.591	. BRACKET, assembly, support aft, water extractor Attaching parts for EB6.75.369 and EB6.75.591:—					1	—	SB1/10
A25/11C	. Bolt, 2BA					4	—	SB1/11
AGS2001C1/66	. Nut, 2BA					4	—	SB1/12
AS2811/5/093	. Piece, distance					4	—	SB1/13
SP15C	. Washer					4	—	SB1/14
EB6.75.621	. BRACKET, assembly Attaching parts for EB6.75.621:—					1	—	SB2/8
AS1246/1/2B	. Bolt, 4BA					2	—	SB2/9
AGS2001B2	. Nut, 4BA					2	—	SB2/10
EB6.75.697	. BRACKET, pipe support, frame 12A Attaching parts for EB6.75.697:—					1	—	SB1/15
A25/1C	. Bolt, 2BA					2	—	SB1/16
AGS2001C1/66	. Nut, 2BA					2	—	SB1/17
SP15C	. Washer					2	—	SB1/18
EA1.75.105	. CLIP, pipe, at frames 2 and 6					2	—	SB2/11
EA2.75.37	. CLIP, pipe Attaching parts for EA1.75.105 and EA2.75.37:—					5	—	SB2/12
A25/1C	. Bolt, 2BA					2	—	SB2/13
AGS2001C1/66	. Nut, 2BA					2	—	SB2/14
SP15C	. Washer					2	—	SB2/15
EB7.75.507	. CLIP, lagging, between frames A and I Attaching parts for EB7.75.507:—					3	Glass cloth	SB2/16
A61/2B	. Bolt, 4BA					1	—	SB2/17
AGS2001B3	. Nut, 4BA					1	—	SB2/18
SP15B	. Washer					1	—	SB2/19

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EB6.75.623	. CLIP, pipe Attaching parts for EB6.75.623:—	1	—	SB2/20
AS1246/1/2B	. Bolt, 4BA	2	—	SB2/21
AGS2001B2	. Nut, 4BA	2	—	SB2/22
AS4525/3	. CLIP	5	—	SB1/19
AS4525/16	. CLIP Attaching parts for AS4525/3 and AS4525/16:—	1	—	SB1/20
A25/1C	. Bolt	1	—	SB1/21
AGS2001C1/66	. Nut	1	—	SB1/22
EEAS237/3A	. Washer, 'D'	1	—	SB1/23
AGS1104A	. CONE, adaptor Attaching parts for AGS1104A:—	2	—	SB1/24
AGS567A	. Washer, jointing	1	Fibre	SB1/25
AGS1159	. CONE, cap	1	—	SB1/26
EA3.75.145	. CONNECTION, rubber Attaching parts for EA3.75.145:—	5	Silastic	SB2/23
SP91J	. Clip, hose	2	—	SB2/24
EA3.75.147 or DUNLOP	. CONNECTION, rubber 2.5" I/D x 3.0" LONG	5	Silastic	SB1/27
DAS582/40/3.0	. CONNECTOR, tubing Attachments for EA3.75.147 or DAS582/40/3.0:—	QR	—	
SP91L	. Clip, hose	2	—	SB1/28
SP91P	. Clip, hose	2	—	SB1/29
EB7.75.415A	. Lagging	2	—	SB1/30
EEAS66/14	. Ring, clamping	2	—	SB1/31
EB7.75.125	. CONNECTOR, flanged, for main pipe at frame 3, LH	1	Glass cloth	SB4/1
EB7.75.126	. CONNECTOR, flanged, for main pipe at frame 4, RH	1	Glass cloth	SB4/2
EB7.75.127	. CONNECTOR, flanged, for main pipe at frame 5 Attaching parts for EB7.75.125, EB7.75.126 and EB7.75.127:—	1	—	SB4/3
A25/2B	. Bolt, 4BA	6	—	SB4/4
SP91L	. Clip	6	—	SB4/5
AGS2001B1	. Nut, 4BA	6	—	SB4/6
EB7.75.129	. Ring, half, bolt at frames 3 and 4	2	L59	SB4/7
EB7.75.131	. Ring, half, bolt at frame 5	2	L59	SB4/8
SP15B	. Washer	6	—	SB4/9
EB6.75.379	. COUPLING, water extractor, drain pipe outlet aft of frame 10	1	DTD423	SB1/32
EB7.75.23	. DIFFUSER, assembly, navigator	1	—	SB4/10
EB7.75.63	. DIFFUSER, PILOT'S, ASSEMBLY Spares for:—	—	—	SB4/11
EB7.75.29	. BRACKET, diffuser mounting Attaching parts for EB7.75.29:—	1	L59	SB4/12
AS1246/1B	. Bolt, 4BA	2	—	SB4/13
AGS2001B1	. Nut, stiff, 4BA	2	—	SB4/14
SP13B	. Washer	2	—	SB4/15

AP 101B-0415-3A

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB7.75.23	.	.	DIFFUSER, assembly				1	—	SB4/16
			Attaching parts for EB7.75.23:—						
A25/10C	.	.	Bolt, 2BA				1	—	SB4/17
EB7.75.31	.	.	Clip				1	L59	SB4/18
AGS2001C1/66	.	.	Nut, stiff, 2BA				1	—	SB4/19
AS2811/5/095	.	.	Tube, distance				1	—	SB4/20
SP13C	.	.	Washer				1	—	SB4/21
GODFREY 22697/B	.	.	EXTRACTOR, water, Type W.E. Mk. 2B				1	—	SB1/33
			Attaching parts for 22697/B:—						
EB6.75.397A	.	.	Lagging				1	—	SB1/34
EB6.75.399A	.	.	Lagging				1	—	SB1/35
AGS2001C1/66	.	.	Nut, 2BA				2	—	SB1/36
AS2811/5/093	.	.	Piece, distance				2	L62	SB1/37
EB6.75.381	.	.	Rod, tension				2	S92	SB1/38
EB6.75.377	.	.	Strap, securing				2	L72	SB1/39
EB6.75.383	.	.	Trunnion				2	S92	SB1/40
SP15C	.	.	Washer				2	—	SB1/41
EG4.75.23	.	.	FISHTAIL, navigator's diffuser				1	—	SB4/22
			Attaching parts for EG4.75.23:—						
A25/3C	.	.	Bolt, 2BA				—	—	SB4/23
AGS2001C1/66	.	.	Nut, stiff, 2BA				—	—	SB4/24
SP13C	.	.	Washer				—	—	SB4/25
EB7.75.59	.	.	FISHTAIL, PILOT'S, ASSEMBLY				—	—	SB2/25
			Spares for:—						
EB7.75.21	.	.	FISHTAIL, pilot's diffuser				1	—	SB2/26
			Attaching parts for EB7.75.21:—						
A25/1B	.	.	Bolt, 4BA				4	—	SB2/27
AS3360C6C	.	.	LEAD, bonding				2	—	SB4/26
			Attaching parts for AS3360C6C:—						
A25/1C	.	.	Bolt, 2BA				3	—	SB4/27
AS4525/16	.	.	Clip				2	—	SB4/28
AS4525/12	.	.	Clip				1	—	SB4/29
AGS2001C1/66	.	.	Nut, stiff, 2BA				3	—	SB4/30
EEAS237/4A	.	.	Washer, 'D'				3	—	SB4/31
THERMO TANKS DAR2	.	.	LOUVRE, punkah, navigator's				1	—	SB4/32
			Attaching parts for DAR2:—						
AS1246/4B	.	.	Bolt, 4BA				3	—	SB4/33
AGS2001B1	.	.	Nut, 4BA				3	—	SB4/34
SP13B	.	.	Washer				3	—	SB4/35
EB7.75.61	.	.	LOUVRE, PILOT'S (PEDAL GUARD), ASSEMBLY				—	—	SB5/1
			Spares for:—						
EB7.75.41	.	.	BRACKET, punkah louvre mounting				1	L72	SB5/2
			Attaching parts for EB7.75.41:—						
AS1246/1C	.	.	Bolt, 2BA				3	—	SB5/3
AGS2001C1/66	.	.	Nut, 2BA				3	—	SB5/4

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
THERMO TANK K1259/43	. . LOUVRE, punkah, type DAR2 Attaching parts for K1259/43:—	1	—	SB5/5
AS2922/4B	. . Bolt, 4BA	3	—	SB5/6
AGS2001B1	. . Nut, 4BA	3	—	SB5/7
SP14B	. . Washer	3	—	SB5/8
EG4.75.315	. LOUVRE, PILOT'S (STARBOARD SIDE), ASSEMBLY (MOD 3564) Spares for:—	—	—	SB5/9
EG4.75.311	. . BOX, louvre, assembly Attaching parts for EG4.75.311:—	1	—	SB5/10
A25/6C	. . Bolt, 2BA	2	—	SB5/11
AGS2001C1/66	. . Nut, 2BA	2	—	SB5/12
AS2811/5/046	. . Piece, distance	2	—	SB5/13
EB7.75.35	. . BRACKET, punkah louvre mounting	1	—	SB5/14
EB7.75.37	. . BRACKET, punkah louvre mounting Attaching parts for EB7.75.35 and EB7.75.37:—	1	—	SB5/15
4101/10R3/8	. . Screw, P.K.	1	—	SB5/16
EB7.75.523	. . BRACKET, demand, oxygen hose clip attachments Attaching parts for EB7.75.523:—	1	—	SB5/17
A25/1B	. . Bolt, 4BA	2	—	SB5/18
AGS2001B1	. . Nut, 4BA	2	—	SB5/19
SP13B	. . Washer	2	—	SB5/20
EB7.75.55	. . LOUVRE, punkah, type DAR2 Attaching parts for EB7.75.55:—	1	—	SB5/21
AS2922/3B	. . Bolt, 4BA	3	—	SB5/22
SP14B	. . Washer	3	—	SB5/23
AGS1142B	. NIPPLE, adapter	2	—	SB1/42
EA3.75.167	. NOZZLE, hot air, bomb aimer's window	1	—	SB2/28
EA3.75.279	. PIPE, bend, between nose frames A and B	1	L54	SB2/29
EA3.75.281	. PIPE, bend, at nose frame B	1	L54	SB2/30
EB6.75.367	. PIPE, assembly, water extractor drain	1	L56	SB1/43
EB6.75.687	. PIPE, bend, between Normalair non-return valve and hose coupling at frame 9 Attaching parts for EB6.75.687:—	1	Glass cloth	SB1/44
SP91N	. Clip	2	—	SB1/45
EB6.75.385	. Lagging	1	—	SB1/46
EB6.75.387	. Lagging	1	—	SB1/47
SP90C3	. PIN, split	1	—	SB1/48
EB6.75.689	. PIPE, bend, from water extractor forward coupling to hose coupling at frame 9 Attachments for EB6.75.689:—	1	Glass cloth	SB1/49
SP91P	. Clip	—	—	SB1/50
EB6.75.389	. Lagging	1	—	SB1/51
EB6.75.391	. Lagging	1	—	SB1/52

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.75.691	PIPE, bend, from hose coupling between frames 11 and 12A, to coupling aft of frame 12A	1	Glass cloth	SB1/53
32B1250460	Attachments for EB6.75.691 :-	QR	-	SB1/54
32B2203354	Lagging, fibre glass blanket	QR	-	SB1/55
EB6.75.693	PIPE, from water extractor aft coupling to coupling between frames 11 and 12A	1	Glass cloth	SB1/56
SP91N	Attachments for EB6.75.693 :-	2	-	SB1/57
EB6.75.393	Clip	1	-	SB1/58
EB6.75.395	Lagging	1	-	SB1/59
EB6.75.695	PIPE, main continuation between frames 3 and 4	1	Glass cloth	SB4/36
A61/2B	Attachments for EB6.75.695 :-	2	-	SB4/37
EB7.75.505	Bolt, 4BA	2	-	SB4/38
EB7.75.203A	Clip	2	-	SB4/39
AGS2001B3	Lagging	2	-	SB4/40
SP15B	Nut, 4BA	2	-	SB4/41
EB7.75.69	PIPE, branch, assembly, for pilot's louvre, navigator's diffuser and canopy demisting	1	L54	SB2/31
SP91L	Attachments for EB7.75.69 :-	6	-	SB2/32
EB7.75.209A	Clip	1	-	SB2/33
EB7.75.211A	Lagging	1	-	SB2/34
EB7.75.213A	Lagging	1	-	SB2/35
EB7.75.215A	Lagging	1	-	SB2/36
EB7.75.597A	Lagging	2	-	SB2/27
EB7.75.71	PIPE, branch, for pilot's louvre (pedal guard)	1	L54	SB2/38
EB7.75.79	PIPE, flanged, canopy demisting at frame 2	1	L54	SB2/39
SP91J	Attachments for EB7.75.79 :-	3	-	SB2/40
EB7.75.219A	Clip	1	-	SB2/41
EB7.75.805A	Lagging	1	-	SB2/42
EB7.75.89	PIPE, branch, main, between frames 1 and 2, for diffusers and canopy demisting	1	L54	SB2/43
SP91L	Attachments for EB7.75.89 :-	2	-	SB2/44
SP91N	Clip	3	-	SB2/45
EB7.75.205A	Clip	2	-	SB2/46
EB7.75.511A	Lagging	1	-	SB2/47
EB7.75.513A	Lagging	1	-	SB2/48
EG4.75.309	PIPE, flexible, from branch pipe to pilot's louvre (Pre-Mod 5236)	1	-	SB2/49
EG4.75.409	PIPE, flexible from branch pipe to pilot's louvre (Mod 5236)	-	-	
SP144/028	Attaching parts for EG4.75.309 and EG4.75.409 :-	2	-	SB2/50
	Clip			

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG4.74.313	PIPE, assembly	1	—	SB4/42
AS3181/128	Attaching parts for EG4.74.313 :—	1	—	SB4/43
SP144/028	Clip, 'P'	1	—	SB4/44
4104/6/¼	Clip	1	—	SB4/45
EB6.75.1059	Screw, N.P.K.	1	—	SB4/46
EB6.75.1059	PIPE, branch, pilot's diffuser, navigator's louvre and fishtail	1	—	SB4/46
EB7.75.233	PIPE, flexible, from branch pipe to pilot's louvre (Pre—Mod 5236)	1	—	SB2/51
EA3.75.677	PIPE, flexible, from branch pipe to pilot's louvre (Mod 5236)	1	—	SB2/51
SP144/028	Attaching parts for EB7.75.233 and EA3.75.677 :—	2	—	SB2/52
EB6.75.1105	Clip	1	—	SB4/47
EA3.75.701	PIPE, flexible, to navigator's louvre (Pre—Mod 5236)	1	—	SB4/47
SP144/028	PIPE, flexible, to navigator's louvre (Mod 5236)	2	—	SB4/48
EB6.75.1103	Attaching parts for EB6.75.1105 and EA3.75.701 :—	1	—	SB4/49
EG4.75.407	Clip	1	—	SB4/49
SP144/028	PIPE, flexible, to pilot's diffuser (Pre—Mod 5236)	2	—	SB4/50
EB6.75.1053	PIPE, flexible, to pilot's diffuser (Mod 5236)	1	—	SB4/50
A25/1C	Attaching parts for EB7.75.1103 and EG4.75.407 :—	2	—	SB4/51
A25/9C	Clip	1	L54	SB4/51
AS4625/16	PIPE, branch, to pilot's diffuser and navigator's louvre	1	—	SB4/52
AGS2001C1/66	Attaching parts for EB6.75.1053 :—	1	—	SB4/52
AS2810/5/08	Bolt, 2BA (as required)	1	—	SB4/53
EEAS237/4A	Bolt, 2BA (as required)	1	—	SB4/53
SCC79989	Clip	2	—	SB4/54
SP144/028	Nut, stiff, 2BA (as required)	1	—	SB4/55
SP91C	Tube, distance (as required)	1	—	SB4/56
EB7.75.223	Washer, 'D' (as required)	1	—	SB4/57
EA3.75.685	PIPE, from branch pipe to navigator's fishtail (SRIM 3533) (Mod 4799) ¾" o/d x 22 SWG	1	L56	SB4/58
SP144/028	Attaching parts for SCC79989 :—	1	—	SB4/59
EB7.75.223	Clip	1	—	SB4/60
EA3.75.685	Clip	1	—	SB4/60
SP144/028	PIPE, flexible, for pilot's fishtail (Pre—Mod 5236)	1	Bells Asbestos	SB2/53
EB7.75.239	PIPE, flexible, from pilot's fishtail (Mod 5236)	1	—	SB2/54
EA3.75.681	Attaching parts for EB7.75.223 and EA3.75.685 :—	2	—	SB2/54
SP144/028	Clip	1	—	SB4/61
AS3181/20C	PIPE, flexible, from branch pipe to navigator's diffuser (Pre—Mod 5236)	1	—	SB4/61
8R x 5/16"	PIPE, flexible, from branch pipe to navigator's diffuser (Mod 5236)	—	—	SB4/62
	Attaching parts for EB7.75.239 and EA3.75.681 :—	2	—	SB4/62
	Clip	2	—	SB4/63
	Clip	2	—	SB4/64
	Screw	2	—	SB4/64

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.75.1445	. PIPE, flexible, from main branch at frame 2 (Pre-Mod 5236) (Make from Ref. 13016)	1	—	SB2/56
EA3.75.711	. PIPE, flexible, from main branch at frame 2 (Mod 5236) Attaching parts for EB6.75.1445 and EA3.75.711:—	—	—	
A25/1C	. Bolt (as required)	1	—	SB2/56
SP144/028	. Clip	2	—	SB2/57
AS3181/18C	. Clip	1	—	SB2/58
AS3181/24C	. Clip	1	—	SB2/59
AGS2001C1/66	. Nut (as required)	1	—	SB2/60
EB7.75.781	. PIPE, main, continuation, between frames 5 and 6 Attachments for EB7.75.781:—	1	Glass cloth	SB4/65
SP91N	. Clip	3	—	SB4/66
EB7.75.195A	. Lagging	1	—	SB4/67
EB7.75.197A	. Lagging	1	—	SB4/68
EB7.75.199A	. Lagging	2	—	SB4/69
EB7.75.783	. PIPE, flanged, main, at forward face of pressure bulkhead Attachments for EB7.75.783:—	1	Glass cloth	SB1/60
SP91N	. Clip	2	—	SB1/61
SP91R	. Clip	1	—	SB1/62
EB7.75.155A	. Lagging	1	—	SB1/63
EB7.75.157A	. Lagging	1	—	SB1/64
EB7.75.159A	. Lagging	1	—	SB1/65
EB7.75.525A	. Lagging	1	—	SB1/66
EB7.75.509A	. Lagging	1	—	SB1/67
EB7.75.697A	. Lagging	1	—	SB1/68
EB7.75.791	. PIPE, branch, pilot's fishtail Attachments for EB7.75.791:—	1	Glass cloth	SB2/61
32B/1250460	. Lagging, fibre glass blanket	QR	—	SB2/62
EB7.75.793	. PIPE, main, continuation, between frames 4 and 5 Attachments for EB7.75.793:—	1	Glass cloth	SB4/70
A61/2B	. Bolt, 4BA	2	—	SB4/71
EB7.75.505	. Clip	2	—	SB4/72
EB7.75.201A	. Lagging	2	—	SB4/73
AGS2001B3	. Nut, 4BA	2	—	SB4/74
SP15B	. Washer	4	—	SB4/75
EB6.75.1049	. PIPE, assembly, from pressure control valve	1	L54	SB1/69
EB6.75.1047	. PIPE, assembly, intermediate, between pressure control valve and master unit	1	L54	SB1/70
EB6.75.1045	. PIPE, assembly, connecting master unit to pressure control valve line	1	L54	SB1/71
EB6.75.1063	. PIPE, bend, from branch pipe to coupling aft of frame 3	—	—	SB4/76
EB7.75.613	. SEAL, canopy demister pipe flange at frame 2 Attaching parts for EB7.75.613:—	2	Asbestos	SB4/77
A25/3C	. Bolt, 2BA	6	—	SB4/78
AGS2001C1/66	. Nut, 2BA	6	—	SB4/79
SP15C	. Washer	6	—	SB4/80

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
AGS904A	.	SLEEVE, outer	1	—	SB1/72
EB6.75.1107	.	SLEEVE, pipe connecting	3	Silastic	SB4/81
EB6.75.1109	.	SLEEVE, pipe	1	Asbestos	SB4/82
EEAS20/2DR	.	TAB, locking	1	Silastic	SB1/73
AGS1102A	.	UNION, body	2	Asbestos	SB1/74
NORMALAIR 500326	.	UNIT, master	1	—	SB1/75
		Attaching parts for 500326:—			
A25/2E	.	Bolt, 1/4" BSF	2	—	SB1/76
AGS2001E1/66	.	Nut, 1/4" BSF	2	—	SB1/77
SP15E	.	Washer	2	—	SB1/78
NORMALAIR 500457	.	VALVE, non-return	1	—	SB1/79
		Attaching parts for 500457:—			
A25/3C	.	Bolt, 2BA	2	—	SB1/80
A25/5C	.	Bolt, 2BA	10	—	SB1/81
AGS2001C1/66	.	Nut, 2BA	10	—	SB1/82
EB7.75.133	.	Ring, half bolt	2	L59	SB1/83
EA1.75.131	.	Washer, jointing	2	Langite	SB1/84
SP15C	.	Washer	12	—	SB1/85
SP47C	.	Washer	2	—	SB1/86
NORMALAIR 493020	.	VALVE, pressure control (Pre-Mod 3955)	1	—	
NORMALAIR 527060	.	VALVE, pressure control (Mod 3955)	1	—	SB1/87
		Attaching parts for 527060 and 493020:—			
A25/2E	.	Bolt, 1/4" BSF	7	—	SB1/88
A27ET	.	Nut, 1/4" BSF	1	—	SB1/89
EA3.75.573	.	Stud	1	S92	SB1/90
SP15E	.	Washer	11	—	SB1/91
SP47E	.	Washer	11	—	SB1/92

SERVICES

CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.75.5	CABIN, PRESSURE SYSTEM IN CENTRE FUSELAGE, ASSEMBLY						—	—	
	Spares for :—								
EB6.75.639	. BRACKET, for starboard cabin pressure wing to fuselage pipe between frames 16 and 17						1	L59	SB6/1
	Attaching parts for EB6.75.639 :—								
A25/5C	. Bolt, 2BA						2	—	SB6/2
AGS2001C1/66	. Nut, stiff, 2BA						2	—	SB6/3
SP15C	. Washer						2	—	SB6/4
EA1.75.121	. BRACKET						4	—	SB6/5
EB6.11.1533	. BRACKET						1	—	SB6/6
EA1.75.106	. CLIP, pipe, between frames 12 to 17						4	L72	SB6/7
	Attaching parts for EA1.75.106 :—								
A25/1C	. Bolt						2	—	SB6/8
AGS2001C1/66	. Nut						2	—	SB6/9
SP15C	. Washer						2	—	SB6/10
EA2.75.37	. CLIP, pipe, for port and starboard elbows and transverse pipe at frame 16						4	L72	SB6/11
	Attaching parts for EA2.75.37 :—								
A25/2C	. Bolt, 2BA (as required)						2	—	SB6/12
A25/3C	. Bolt, 2BA (as required)						2	—	SB6/13
A25/4C	. Bolt, 2BA (as required)						2	—	SB6/14
AGS2001C1/66	. Nut, 2BA						2	—	SB6/15
SP15C	. Washer						2	—	SB6/16
EB6.75.181	. CLIP, pipe, for transverse pipe at frame 16						4	L72	SB6/17
	Attaching parts for EB6.75.181 :—								
A25/2C	. Bolt, 2BA (as required)						2	—	SB6/18
AGS2001C1/66	. Nut, stiff, 2BA						2	—	SB6/19
SP15C	. Washer						2	—	SP6/20
EB6.75.183	. CLIP, special, for lagging on transverse pipe on frame 16						6	—	SB6/21
AGS1661M	. CLIP, bonding						3	—	SB6/22
AGS952J	. COLLAR, pipe						1	—	SB6/23
AGS1104/B	. CONE, adaptor						1	—	SB6/24
EA3.75.147	. CONNECTION, rubber, 2.5 i/d x 3/32" x 3.0" long						7	Silastic 150	SB6/25
or									
DUNLOP									
DAS582/40/ 3.0	. CONNECTOR, tubing						QF.	—	
	Attaching parts for EA3.75.147 and DAS582/40/ 3.0 :—								
SP91L	. Clip						2		SB6/26
EA4.75.321	. CONNECTOR, straight (Mod 5257)						1	—	†
EA9.75.567	. FAIRLEAD, for port cabin pressure wing to fuselage pipe, between frames 16 and 17						1	LFS21	SB6/27
	Attaching parts for EA9.75.567 :—								
A25/5C	. Bolt, 2BA						6	—	SB6/28
AGS2001C1/66	. Nut, stiff, 2BA						6	—	SB6/29
SP15/C	. Washer						6	—	SB6/30

CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	AS336084B	. LEAD, bonding	1	—	SB6/31
	A25/4B	. Attaching parts for AS336084B :—	1	—	SB6/32
	A278P	. Bolt	1	—	SB6/33
	EB6.75.643	. Nut	1	—	SB6/34
	AGS1170K	. NIPPLE, special (Make from AGS1142/1)	1	—	SB6/35
		. NIPPLE	1	—	SB6/36
R	SP91L	. Attachments for AGS1170K :—	2	—	SB6/37
	EB6.75.179A	. Clip	2	—	SB6/38
		. Lagging	2	—	SB6/39
	AGS1142K	. NIPPLE, adaptor	4	—	SB6/40
	AGS1140B	. NIPPLE, plug (Pre—Mod 5257)	1	—	SB6/41
	EB6.75.595	. PACKING	2	—	SB6/42
	EB6.75.157	. PIECE, four-way, bombsight and cabin pressure air supply at frame 16 (Pre—Mod 5257)	1	DTD683	SB6/43
	SP90C5	. PIN, split (Pre—Mod 5257)	1	—	SB6/44
	EA3.75.55	. PIPE, from rubber joint at frame 13 to rubber joint at frame 12, 2 1/2" o/d x 20 SWG	1	L54	SB6/45
		. Attachments for EA3.75.55 :—	2	—	SB6/46
R	SP91N	. Clip	1	—	SB6/47
	EB6.75.129A	. Lagging	1	—	SB6/48
	EB6.75.131A	. Lagging	1	—	SB6/49
	EA3.75.57	. PIPE, from rubber joint at frame 13 to rubber joint at frame 14 and frame 14 to frame 15	2	L54	SB6/50
		. Attachments for Pipe, EA3.75.57 :—	8	—	SB6/51
R	SP91N	. Clip	2	—	SB6/52
	EB6.75.133A	. Lagging	2	—	SB6/53
	EB6.75.135	. Lagging	2	—	SB6/54
	EB6.75.137A	. Lagging	1	—	SB6/55
	EB6.75.139A	. Lagging	1	—	SB6/56
	EB6.75.141A	. Lagging	1	—	SB6/57
	EB6.75.143A	. Lagging	1	—	SB6/58
	EA3.75.59	. Pipe, from rubber joint at frame 15 to rubber joint at frame 16	1	L54	SB6/59
		. Attachments for Pipe, EA3.75.59 :—	2	—	SB6/60
R	SP91N	. Clip	1	—	SB6/61
	EB6.75.707A	. Lagging	1	—	SB6/62
	EB6.75.709A	. Lagging	1	—	SB6/63
	EA3.75.61	. PIPE, from rubber joint at frame 16 to rubber joint at elbow	1	L54	SB6/64
	32B1250460	. Attachments for Pipe, EA3.75.61 :—	QR	—	SB6/65
		. Lagging, fibre glass blanket	1	L56	SB6/66
	EB6.75.151	. PIPE, assembly, from coupling forward of frame 16 to rear camera bay tee-piece	1	L56	SB6/67
	32B1250460	. Attachments for Pipe, EB6.75.151 :—	QR	—	SB6/68
		. Lagging, fibre glass blanket	1	—	SB6/69

AP101B-0415-3A

Page SB.11

SERVICES

CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.75.153	PIPE, assembly, transverse from special 4-way union to joint forward of frame 16	1	L54	SB6/63
SP91L	Attachments for Pipe, EB6.75.153 :-	2	—	SB6/64
EB6.75.167A	Clip	2	—	SB6/65
EB6.75.169A	Lagging	2	—	SB6/66
EB6.75.175A	Lagging	2	—	SB6/67
EB6.75.177A	Lagging	1	—	SB6/68
EB6.75.813A	Lagging	1	—	SB6/69
32B1250460	Lagging, fibre glass blanket	QR	—	SB6/70
EB6.75.503	PIPE, assembly, from port wing connection to special 4-way piece	1	L56	SB6/71
32B1250460	Attachments for Pipe, EB6.75.503 :-	QR	—	SB6/72
EB6.75.777	Lagging, fibre glass blanket	1	—	SB6/73
EB6.75.779	Lagging	1	—	SB6/74
EB6.75.505	PIPE, assembly, from starboard wing connection to rear camera bay tee-piece	1	L56	SB6/75
SP91L	Attachments for Pipe, EB6.75.505 :-	3	—	SB6/76
SP91J	Clip	1	—	SB6/77
EB6.75.163A	Clip	1	—	SB6/78
EB6.75.165A	Lagging	1	—	SB6/79
EB6.75.541A	Lagging	1	—	SB6/80
EB6.75.543A	Lagging	1	—	SB6/81
EB6.75.507	PIPE, elbow joint between port wing and fuselage	1	L59	SB6/82
32B1250460	Attachments for Pipe, EB6.75.507 :-	QR	—	SB6/83
AGS904B	Lagging, fibre glass blanket	1	—	SB6/84
AGS1533G	SLEEVE, outer (Pre-Mod 5257)	1	—	SB6/85
EB6.75.823	STRIP, bonding	1	—	SB6/86
AGS1121/4	UNION, reducing, special, aft of frame 16 for rear camera bay air supply	1	DTD683	SB6/87
AGS1105B	UNION, tee, special	1	—	SB6/88
AGS1186B	UNION, adaptor (Pre-Mod 5257)	1	—	SB6/89
	WASHER, jointing (Pre-Mod 5257)	1	—	SB6/89

[illegible]

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			

SERVICES

STATIC PIPE RUN IN CABIN PRESSURE SYSTEM

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1	2	3	4	5
EG4.75.421	. CABIN PRESSURE, STATIC LINE, ASSEMBLY (MOD 4799) Spares for:—	—	—	SB3/1
AS4525/5	. . CLIP, pipe Attaching parts for AS4525/5:—	16	—	SB3/2
A25/2C	. . Bolt, 2BA	1	—	SB3/3
A25/3C	. . Bolt,	1	—	SB3/4
AGS2001C1/66	. . Nut, 2BA	1	—	SB3/5
4104/8 ¹ / ₄ "	. . Screw (Cad. plated)	1	—	SB3/6
SP13C	. . Washer	1	—	SB3/7
SP16C	. . Washer	1	—	SB3/8
AGS838/13	. . NUT, union assembly	20	—	SB3/9
AGS838/12	. . Bush	20	—	SB3/9A
EA3.80.1649	. . PIPE, drain tap	2	L54	SB3/10
EB6.80.171	. . PIPE, from tee aft of frame A to coupling aft of frame 2	1	L54	SB3/11
EB6.80.173	. . PIPE, from coupling aft of frame 2, to coupling aft of frame 4	1	L54	SB3/12
EB6.80.3617	. . PIPE, from coupling aft of frame 4, to coupling aft of frame 6	1	L54	DB3/13
EB6.80.3619	. . PIPE, from coupling aft of frame 6, to tee coupling at pressure bulkhead	1	L54	DB3/14
EG4.80.417	. . PIPE, from coupling at frame A, to port connection at side of fuselage	1	L54	SB3/15
EG4.80.409	. . PIPE, continuation, on frame A, from tee-piece starboard side to coupling	1	L54	SB3/16
EB6.80.5479	. . PIPE, from drain tap tee, to tee aft of frame A,	1	L54	SB3/17
EB6.80.5481	. . PIPE, from nose tee-piece at frame A, to starboard connection at side of fuselage (Pre—Mod 5197)	1	L54	SB3/18
EG4.80.1503	. . PIPE, from nose tee-piece at frame A, to starboard connection at side of fuselage (Mod 5197)	1	L54	SB3/19
EA3.80.1965	. . PIPE, static assembly	1	—	SB3/23
AGS838/3	. . UNION, elbow	2	—	SB3/20
AGS838/1	. . UNION, straight	4	—	SB3/21
AGS838/2	. . UNION, tee	3	—	SB3/22

STATIC PIPE RUN IN CABIN PRESSURE SYSTEM

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.75.825	CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING, ASSEMBLY						—	—	
	Spares for :—								
EB6.75.501 GODFREY G43B	. ADAPTOR, oil vapour breather pipe (Pre-Mod 2316)						1	—	SB7/1
or EB6.75.1557	. CLAMP, half						16	—	
	. CLAMP, assembly (Replacement spare)						8	—	SB7/2
A25/15E	Attaching parts for 50002 or EB6.75.1557 :—								
AGS2001E2/66	. Bolt, 1/4" BSF						2	—	SB7/3
SP13E	. Nut, stiff, 1/4" BSF						2	—	SB7/4
	. Washer						2	—	SB7/5
GODFREY G45B	. CLAMP, pipe jointing (segmental) at Marston cooler						4	—	SB7/6
AS4525/4	. CLIP, pipe, single						1	L72	SB7/7
EB6.75.833	. COLLECTOR, WASTE OIL, ASSEMBLY (MOD 2316)						1	—	SB7/8
	Consisting of :—								
EB6.75.849	. BRACKET, mounting						1	—	SB7/9
	Attaching parts for EB6.75.849 :—								
A25/2C	. Bolt, 2BA						2	—	SB7/10
AGS2002C1/66	. Nut, 2BA						2	—	SB7/11
SP15C	. Washer						2	—	SB7/12
EB6.75.843	. COLLECTOR, top, assembly						1	—	SB7/13
EB6.75.847	. CONTAINER, waste oil						1	DTD339	SB7/14
EB6.75.845	. WIRE, retaining, assembly						1	—	SB7/15
	Attaching parts for EB6.75.833 :—								
AGS1148B	. Nut, 1/4" BSP						2	—	SB7/16
AGS1149/2	. Washer, plate						1	—	SB7/17
AGS1111B	. CONE, union body, flanged bulkhead (Mod 2316)						1	—	SB7/18
EB6.75.461	. CONNECTION, duct, tapered, from cold air unit junction pipe						1	L59	SB7/19
	Attachments for connection EB6.75.461 :—								
EB6.75.523	. Lagging						2	—	SB7/20
EA3.75.145	. CONNECTION, rubber						2	Glass Fabric	SB7/21
EB6.75.315	. DUCTS AND AIR COOLER, ASSEMBLY						—	—	SB8/1
	Spares for :—								
EB6.75.323	. DUCT, air inlet, assembly (Pre-Mod 4793)						1	—	SB8/2
EB6.75.1553	. DUCT, air inlet, assembly (Mod 4793)						1	—	
	Attaching parts for EB6.75.323 or EB6.75.1553 :—								
EEAS1/1C	. Screw, 2BA						17	S96	SB8/3
EB6.75.735	. DUCT, air outlet, assembly						1	—	SB8/4
	Attaching parts for EB6.75.735 :—								
EEAS1/1C	. Screw, 2BA						2	S96	SB8/5
EB6.75.341	. FAIRING, outlet (Supplied undrilled)						1	—	SB8/6

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EB6.75.317		INSTALLATION OF MARSTON COOLER (SECONDARY)	-	-	SB8/7
EB6.75.343		Spares for :- BRACKET, bottom support, assembly	2	-	SB8/8
A25/16C		Attaching parts for EB6.75.343 :- Bolt, 2BA	2	-	SB8/9
AGS2001C1/66		Nut, stiff, 2BA	2	-	SB8/10
AS2809/4/139		Piece, distance	2	L62	SB8/11
SP15C		Washer	2	-	SB8/12
EB6.75.345		BRACKET, top, attachment, assembly	1	-	SB8/13
A25/16C		Attaching parts for EB6.75.345 :- Bolt, 2BA	3	-	SB8/14
AGS2001C1/66		Nut, stiff, 2BA	3	-	SB8/15
AS2809/4/139		Piece, distance	3	L62	SB8/16
SP15C		Washer	2	-	SB8/17
MARSTON D106/6A		COOLER, air (EB6.75.321)	1	-	SB8/18
A25/5E		Attaching parts for D106/6A :- Bolt, 1/4" BSF	1	-	SB8/19
EB6.75.351		Washer, felt on support brackets	2	-	SB8/20
SP15E		Washer	1	-	SB8/21
EB6.75.335		STRAP, JOINT, FOR ATTACHMENT OF AIR DUCTS TO MARSTON COOLER	2	-	SB8/22
A25/8C		Consisting of :- BOLT, 2BA	2	-	SB8/23
AGS2001C1/66		NUT, 2BA	2	-	SB8/24
EB6.75.337		STRAP, jointing	1	-	SB8/25
EB6.75.339		STRAP, clamping	1	-	SB8/26
AGS1142B		NIPPLE, adaptor	3	-	SB7/22
AGS1142K		NIPPLE, adaptor	2	-	SB7/23
AGS1170K		NIPPLE	3	-	SB7/24
EA9.75.133		PIPE, assembly, breather, oil vapour outlet (Pre-Mod 2316)	1	L56	†
EB6.75.835		PIPE, assembly, from coupling to waste oil collector adjacent to rib 1 (Mod 2316)	1	L56	SB7/25
EB6.75.837		PIPE, assembly, from cold air unit to coupling adjacent to rib 1 (Mod 2316)	1	L56	SB7/26
EA9.75.447		PIPE, assembly, continuation, from non-return valve and mixing valve tee-piece through rib 2	1	L56	SB7/27
EA9.75.455		PIPE, assembly, intermediate, from cold air unit pipe to mixing valve pipe	1	T26	SB7/28
SP91L		Attachments for EA9.75.455 :- Clip	2	-	SB7/29
EA9.75.457A		Lagging	1	-	SB7/30
EA9.75.459A		Lagging	1	-	SB7/31
EB6.75.509A		Lagging	1	-	SB9/35
EB6.75.511A		Lagging	1	-	SB9/36
EB6.75.457		PIPE, assembly, continuation, from non-return valve and mixing valve tee-piece through rib 1	1	L56	SB7/32
SP91L		Attachments for Pipe, EB6.75.457 :- Clip	2	-	SB7/33
EB6.75.625A		Lagging	1	-	SB7/34
EB6.75.627A		Lagging	1	-	EB7/35
EA9.75.705A		Lagging	1	-	SB7/36
EA9.75.707A		Lagging	1	-	SB7/37

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.75.459	PIPE, assembly, junction, from cold air unit Attachments for Pipe, EB6.75.459 :-	1	L54	SB7/38
SP91L	Clip	2	-	SB7/39
EB6.75.519A	Lagging	1	-	SB7/40
EB6.75.521A	Lagging	1	-	SB7/41
EB6.75.467	PIPE, assembly, from cold air unit compressor connection to rib 1	1	L54	SB7/42
EB6.75.469	PIPE, assembly, from cold air unit turbine connection to rib 1	1	L54	SB7/43
EB6.75.471	PIPE, assembly, from Marston cooler to connection at rib 1	1	L54	SB7/44
EB6.75.475	PIPE, assembly, from non-return valve and mixing valve tee-piece to connection between ribs 2 and 3 Attachments for Pipe, EB6.75.475 :-	1	L54	SB7/45
SP91L	Clip	2	-	SB7/46
EA9.75.451A	Lagging	1	-	SB7/47
EA9.75.453A	Lagging	1	-	SB7/48
EA9.75.783	PIPE, assembly, from cold air unit compressor connection, to pipe joint at rib 2 Attachments for Pipe, EA9.75.783 :-	1	L54	SB7/49
SP91L	Clip	2	-	SB7/50
EA9.75.471A	Lagging	1	-	SB7/51
EA9.75.473A	Lagging	1	-	SB7/52
EB6.75.19	PIPE, RUN IN PORT WHEEL WELL BAY, ASSEMBLY Spares for :-	-	-	SB9/1
EB6.75.207	ADAPTOR, bulkhead, mixing valve pipe connection Attaching parts for EB6.75.207 :-	1	DTD683	SB9/2
A25/2C	Bolt, 2BA	6	-	SB9/3
AGS2001C1/66	Nut, stiff, 2BA	6	-	SB9/4
AGS1115/13	Washer, plate	1	-	SB9/5
AS3181/20B	CLIP Attaching parts for AS3181/20B :-	4	-	SB9/6
A25/3C	Bolt, 2BA (as required)	2	-	SB9/7
A25/8C	Bolt, 2BA (as required)	1	-	SB9/8
A25/16C	Bolt, 2BA (as required)	1	-	SB9/9
AGS2001C1	Nut, 2BA	4	-	SB9/10
AS2811/5/049	Piece, distance (as required)	1	-	SB9/11
AS2808/5/150	Piece, distance (as required)	1	-	SB9/12
SP13C	Washer (as required)	1	-	SB9/13
AGS1142J	NIPPLE, adaptor	2	-	SB9/14
AGS2120J	NIPPLE	2	-	SB9/15
EB6.75.201	PIPE, assembly, from fuselage bulkhead adaptor to pipe joint in wheel well	1	L56	SB9/16
EB6.75.203	PIPE, assembly, between ribs A and E	1	L56	SB9/17
EB6.75.205	PIPE, assembly, from mixing valve bulkhead adaptor to pipe joint on rib E	1	L56	SB9/18
EEAS20/1DR	TAB, locking	2	L72	SB9/19
EEAS66/1	RING, clamping (Pre-Mod 2316)	1	L72	SB7/53
BELLS				
ASBESTOS				
AS5402	RING, sealing, type A, between pipe flanges	10	-	SB7/54
EEAS20/1CR	TAB, locking	1	-	SB7/55
EEAS20/2CR	TAB, locking	2	-	SB7/56

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.75.187	.	.	.	.	.	UNIT, COLD AIR, INSTALLATION	—	—	SB7/57
EB6.75.199	.	.	.	.	.	Spares for :— UNIT, COLD AIR ASSEMBLY Consisting of :—	1	—	SB7/58
GODFREY 23421/HX	.	.	.	.	.	DIPSTICK and filter, oil level	1	—	SB7/59
27UA4612829	.	.	.	.	.	UNIT, cold air, A.C.R.E.9, Mk. 10EX Attaching parts for EB6.75.199 :—	1	—	SB7/60
A25/1C	.	.	.	.	.	Bolt, 2BA	16	—	SB7/61
SP55C	.	.	.	.	.	Washer, 2BA	16	—	SB7/62
SP16C	.	.	.	.	.	Washer	16	—	SB7/63
EA9.75.469	.	.	.	.	.	VALVE, CONSTANT FLOW, INSTALLATION	—	—	SB9/20
EB6.75.487	.	.	.	.	.	Spares for :— BRACKET, support at rib 2	1	—	SB9/21
28E9708192	.	.	.	.	.	CLIP, hose	2	—	SB9/22
AGS1142K	.	.	.	.	.	NIPPLE, adaptor	1	—	SB9/23
EB6.75.481	.	.	.	.	.	VALVE, CONSTANT FLOW, ASSEMBLY Spares for :—	1	—	SB9/24
EB6.75.579	.	.	.	.	.	ADAPTOR, special Attaching parts for EB6.75.579 :—	1	OTD683	SB9/25
AGS1186H	.	.	.	.	.	Washer, jointing	1	—	SB9/26
EB6.75.491	.	.	.	.	.	PIPE, assembly, flanged Attaching parts for EB6.75.491 :—	1	—	SB9/27
A25/2C	.	.	.	.	.	Bolt, 2BA	12	—	SB9/28
SP91L	.	.	.	.	.	CLIP, hose	2	—	SB9/29
EB6.75.517A	.	.	.	.	.	Lagging	1	—	SB9/30
EB6.75.629A	.	.	.	.	.	Lagging	1	—	SB9/31
SP13C	.	.	.	.	.	Washer	12	—	SB9/32
NORMALAIR 497776	.	.	.	.	.	Washer, sealing	1	—	SB9/33
NORMALAIR 502090	.	.	.	.	.	VALVE, constant flow	1	—	SB9/34
EB6.75.727	.	.	.	.	.	VALVE, RELIEF AND PIPES, COLD AIR UNIT, IN PORT WING, INSTALLATION	—	—	SB9/37
EB6.75.733	.	.	.	.	.	Spares for :— BRACKET, assembly, pipe support on cooler Attaching parts for EB6.75.733 :—	1	—	SB9/38
A25/6C	.	.	.	.	.	Bolt, 2BA	4	—	SB9/39
A25/1E	.	.	.	.	.	Bolt, 1/4" BSF	2	—	SB9/40
AGS2001C1/66	.	.	.	.	.	Nut, stiff, 2BA	4	—	SB9/41
SP13E	.	.	.	.	.	Washer	2	—	SB9/42
SP13C	.	.	.	.	.	Washer	4	—	SB9/43
GODFREY G43B	.	.	.	.	.	CLAMP, half	6	—	—
or EB6.75.1557	.	.	.	.	.	CLAMP, assembly (Replacement spare) Attaching parts for G43B or EB6.75.1557 :—	3	—	SB9/44
A25/15E	.	.	.	.	.	Bolt, 1/4" BSF	2	—	SB9/45
AGS2001E1/66	.	.	.	.	.	Nut, stiff, 1/4" BSF	2	—	SB9/46
SP13E	.	.	.	.	.	Washer	2	—	SB9/47

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.75.731	. .	. .	COVER, valve, assembly				1	—	SB9/48
SP91L	. .	. .	Attaching parts for EB6.75.731 :— Clip				2	—	SB9/49
EB6.75.737	. .	. .	PIPE, assembly, bend, relief valve pipe joint				1	L59	SB9/50
EB6.75.739	. .	. .	PIPE, assembly, from relief valve pipe joint to inlet tee-piece				1	L54	SB9/51
EB6.75.741	. .	. .	PIPE, assembly, inlet tee-piece from pipe joint at rib 1 to Marston cooler				1	L54	SB9/52
BELLS ASBESTOS AS5402	. .	. .	RING, sealing, between pipe flanges				3	—	SB9/53
EB6.75.729	. .	. .	VALVE, relief				1	—	SB9/54
EB6.75.827	. .	. .	VALVES AND PIPING, INSTALLATION Spares for :—				—	—	SB10/1
EB6.75.257 GODFREY G43B	. .	. .	BRACKET, support for non-return valve				1	—	SB10/2
or EB6.75.1557	. .	. .	CLAMP, half				10	—	
A25/15E AGS2001E1/66 SP13E	. .	. .	CLAMP, assembly (Replacement spare) Attaching parts for G43B or EB6.75.1557 :— Bolt, 1/4" BSF				5	—	SB10/3
	. .	. .	Nut, stiff, 1/4" BSF				2	—	SB10/4
	. .	. .	Washer				2	—	SB10/5
GODFREY 50270	. .	. .	CLAMP, segmental				3	—	SB10/7
EB6.75.261	. .	. .	CONNECTOR, flanged, non-return valve end fitting Attaching parts for EB6.75.261 :— Bolt, 2BA				1	OTD683	SB10/8
A25/1C	. .	. .	Bolt, 2BA				3	—	SB10/9
A25/3C	. .	. .	Bolt, 2BA				3	—	SB10/10
AGS2001C1/66 SP13C	. .	. .	Nut, stiff, 2BA				3	—	SB10/11
	. .	. .	Washer				6	—	SB10/12
EB6.75.255	. .	. .	ELBOW, from engine connection to non-return valve Attachments for Elbow, EB6.75.255 :— Bolt, 2BA				1	—	SB10/13
A25/1C	. .	. .	Bolt, 2BA				3	—	SB10/14
A25/2C	. .	. .	Bolt, 2BA				6	—	SB10/15
A25/3C	. .	. .	Bolt, 2BA				3	—	SB10/16
SP91L	. .	. .	Clip				2	—	SB16/17
EB6.75.447A	. .	. .	Lagging				1	—	SB10/18
EB6.75.449A	. .	. .	Lagging				1	—	SB10/19
AGS2001C1/66 SP13C	. .	. .	Nut, stiff, 2BA				9	—	SB10/20
	. .	. .	Washer				12	—	SB10/21
EB7.50.25	. .	. .	FITTING, end, for pipe connection to hot air valve				1	DTD683	SB10/22
EB6.75.669	. .	. .	GASKET, non-return valve joint				2	Aero Permanite	SB10/23
EB6.75.675	. .	. .	GASKET, hot air valve joint				3	Aero Permanite	SB10/24
EB6.75.231	. .	. .	PIPE, assembly, from non-return valve on inboard engine rib to tee-piece at rib 3 Attachments for Pipe, EB6.75.231 :— Clip				1	T26	SB10/25
SP91L	. .	. .	Clip				2	—	SB10/26
EB6.75.275A	. .	. .	Lagging				1	—	SB10/27
EB6.75.277A	. .	. .	Lagging				1	—	SB10/28

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EB6.75.233	. . PIPE, assembly, from mixing valve to constant flow valve	1	T26	SB10/29
SP91L	. . Attachments for Pipe, EB6.75.233 :-	2	-	SB10/30
EB6.75.279A	. . Clip	1	-	SB10/31
EB6.75.281A	. . Lagging	1	-	SB10/32
EB6.75.237	. . PIPE, assembly, from mixing valve to tee-piece at rib 3	1	T26	SB10/33
SP91L	. . Attachments for Pipe, EB6.75.237 :-	3	-	SB10/34
EB6.75.287A	. . Clip	1	-	SB10/35
EB6.75.289A	. . Lagging	1	-	SB10/36
EB6.75.239	. . PIPE, assembly, from mixing valve to wheel well bay connection	1	T26	SB10/37
SP91L	. . Attachments for Pipe, EB6.75.239 :-	4	-	SB10/38
EB6.75.295A	. . Clip	1	-	SB10/39
EB6.75.297A	. . Lagging	1	-	SB10/40
EB6.75.631A	. . Lagging	1	-	SB10/41
EB6.75.633A	. . Lagging	1	-	SB10/42
EA9.75.461	. . PIPE, assembly, from mixing valve to connection at rib 3	1	T28	SB10/43
SP91L	. . Attachments for Pipe, EA9.75.461 :-	2	-	SB10/44
EA9.75.463A	. . Clip	1	-	SB10/45
EA9.75.465A	. . Lagging	1	-	SB10/46
BELLS				
ASBESTOS				
AS5402	. . RING, sealing, type 'A', between pipe flanges	8	-	SB10/47
EB6.75.259	. . TEE-PIECE, mixing valve and hot air valve at rib 3	1	-	SB10/48
A25/2C	. . Attaching parts for EB6.75.259 :-	3	-	SB10/49
AGS2001C1/66	. . Bolt	3	-	SB10/50
SP13C	. . Nut	3	-	SB10/51
EB7.50.31	. . WASHER	3	-	SB10/51
E.E. CO. LTD.	. . VALVE, HOT AIR, ASSEMBLY	1	-	SB10/52
BRADFORD	. . Consisting of :-			
TYPE 234	. . ACTUATOR	1	-	SB10/53
TEDDINGTON	. . VALVE	1	-	SB10/54
FKHA16	. . Attachments for Valve, EB7.50.31 :-			
EB6.75.443A	. . Lagging	1	-	SB10/55
EB6.75.445A	. . Lagging	1	-	SB10/56
AGS2001E1/66	. . Nut, stiff, 1/4" BSF	8	-	SB10/57
SP13E	. . Washer	8	-	SB10/58
NORMALAIR				
501670	. . VALVE, non-return	1	-	SB10/59
EB6.75.243	. . VALVE, 2-WAY MIXING, INSTALLATION	-	-	SB10/60
EB6.75.245	. . Spares for :-			
EB6.75.246	. . BRACKET, valve support, outboard	1	L72	SB10/61
EB6.75.247	. . BRACKET, valve support, inboard	1	L72	SB10/62
	. . BRACKET, Desynn transmitter mounting	1	L72	SB10/63

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.75.781	CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING, ASSEMBLY						—	—	
	Spares for :—								
EB6.75.258	. BRACKET, support, non-return valve						1	L72	SB11/1
EB6.75.789	. BRACKET						1	—	SB11/2
GODFREY G43B	. CLAMP, half						2	—	SB11/3
or EB6.75.1557	. CLAMP, assembly (Replacement spare)						1	—	
A25/15E	Attaching parts for G43B or EB6.75.1557 :—								
AGS2001E1/66	. Bolt, 1/2" BSF						2	—	SB11/4
SP13E	. Nut, stiff, 1/2" BSF						2	—	SB11/5
	. Washer						2	—	SB11/6
GODFREY G45B	. CLAMP, pipe, jointing (segmental) at Marston cooler						2	—	SB11/7
EA2.75.37	. CLIP, pipe, at rib 3						1	L72	SB11/8
EB6.75.791	. CLIP, pipe, at rib 2						1	L72	SB11/9
	Attaching parts for EA2.75.37 or EB6.75.791 :—								
A25/1C	. Bolt, 2BA						2	—	SB11/10
AGS2001C1/66	. Nut, 2BA						2	—	SB11/11
SP13C	. Washer						2	—	SB11/12
EB6.75.261	. CONNECTOR, flanged, non-return valve end fitting						1	DTD5044	SB11/13
	Attaching parts for EB6.75.261 :—								
A25/1C	. Bolt, 2BA						3	—	SB11/14
A25/4C	. Bolt, 2BA						3	—	SB11/15
AGS2001C1/66	. Nut, 2BA						3	—	SB11/16
SP13C	. Washer						3	—	SB11/17
SP47C	. Washer						3	—	SB11/18
EB6.75.316	. DUCTS AND AIR COOLER, ASSEMBLY						—	—	SB11/19
	Spares for :—								
EB6.75.324	. . DUCT, air inlet, assembly (Pre-Mod 4793)						1	—	SB11/20
EB6.75.1554	. . DUCT, air inlet, assembly (Mod 4793)						1	—	
	Attaching parts for EB6.75.324 or EB6.75.1554 :—								
EEAS1/1C	. . Screw, 2BA						17	S96	SB11/21
EB6.75.329	. . DUCT, air outlet, assembly						1	—	SB11/22
	Attaching parts for EB6.75.329 :—								
EEAS1/1C	. . Screw, 2BA						2	S96	SB11/23
EB6.75.342	. . FAIRING (Supplied undrilled)						1	—	SB11/24
EB6.75.318	. . INSTALLATION OF MARSTON COOLER (PRIMARY)						—	—	SB11/25
	Spares for :—								
EB6.75.344	. . . BRACKET, bottom support, assembly						2	—	SB11/26
	Attaching parts for EB6.75.344 :—								
A25/16C	. . . Bolt, 2BA						2	—	SB11/27
AGS2001C1/66	. . . Nut, stiff, 2BA						2	—	SB11/28
AS2809/4/139	. . . Piece, distance						2	L62	SB11/29
SP15C	. . . Washer						2	—	SB11/30
EB6.75.346	. . . BRACKET, top, attachment, assembly						1	—	SB11/31
	Attaching parts for EB6.75.346 :—								
A25/16C	. . . Bolt, 2BA						3	—	SB11/32
AGS2001C1/66	. . . Nut, stiff, 2BA						3	—	SB11/33
AS2809/4/139	. . . Piece, distance						3	L62	SB11/34
SP15C	. . . Washer						3	—	SB11/35

SERVICES

AP101B-0415-3A

CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
MARSTON D106/8A		COOLER, air (EB6.75.319)	1	—	SB11/36
A25/5E		Attaching parts for D106/8A:—	1	—	SB11/37
EB6.75.351		Bolt, 1/4" BSF	2	DTD590	SB11/38
SP15E		Washer, felt, on support brackets	1	—	SB11/39
EB6.75.335		Washer	2	—	SB11/40
EB6.75.337		STRAP, JOINT, FOR ATTACHMENT OF AIR DUCTS TO MARSTON COOLER	1	—	SB11/41
EB6.75.339		Consisting of:—	1	—	SB11/42
A25/8C		STRAP, joint	2	—	SB11/43
AGS2001C1/66		STRAP, clamping	2	—	SB11/44
EB6.75.255		Attaching parts for EB6.75.339 and EB6.75.337:—	1	—	SB11/45
A25/1C		Bolt, 2BA	2	—	SB11/46
A25/2C		Bolt, 2BA	7	—	SB11/47
A25/4C		Bolt, 2BA	3	—	SB11/48
SP91L		Clip	2	—	SB11/49
EB6.75.447A		Lagging	1	—	SB11/50
EB6.75.449A		Lagging	1	—	SB11/51
AGS2001C1/66		Nut, stiff, 2BA	9	—	SB11/52
SP13C		Washer	9	—	SB11/53
SP47C		Washer	3	—	SB11/54
EA2.75.345		FAIRLEAD, pipe support at rib 1	2	BS2572	SB11/55
A25/3C		Attaching parts for EA2.75.345:—	2	—	SB11/56
AGS2001C1/66		Bolt, 2BA	2	—	SB11/57
SP13C		Nut, stiff, 2BA	2	—	SB11/58
EB7.50.25		Washer	1	—	SB11/59
EB6.75.669		FITTING, end, for pipe connection to hot air valve	2	DTD683	SB11/60
EB6.75.675		GASKET, non-return valve joint	2	Aero	SB11/61
AGS1142K		GASKET, hot air valve joint	4	Permanite	SB11/62
EB6.75.403		NIPPLE, adaptor	1	T26	SB11/63
SP91L		PIPE, assembly, from Marston air cooler to engine and fuselage pipe tee-piece	3	—	SB11/64
EB6.75.427A		Attachments for pipe, EB6.75.403:—	1	—	SB11/65
EB6.75.429A		Clip	1	—	SB11/66
EB6.75.405		Lagging	1	—	SB11/67
EB6.75.785		PIPE, assembly, from wheel well bulkhead fitting to Marston air cooler	1	T26	SB11/68
EB6.75.1565		PIPE, flexible, from connection between ribs 2 and 3 to pipe coupling between ribs 1 and 2 (Pre-Mod 5448)	1	Metallic Hose	SB11/69
SP91L		PIPE, flexible (Mod 5448)	4	—	SB11/70
SP91N		Attachments for pipe, EB6.75.785 or EB6.75.1565:—	2	—	SB11/71
EB6.75.803A		Clip	1	—	SB11/72
EB6.75.805A		Lagging	1	—	SB11/73
EB6.75.807A		Lagging	1	—	SB11/74
EB6.75.809A		Lagging	1	—	SB11/74

CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.75.817	. PIPE, assembly, from connection between ribs 1 and 2, to tee-piece	1	T26	SB11/75
EB6.75.819	. PIPE, assembly, from hot air valve to connection between ribs 2 and 3	1	T26	SB11/76
SP91L	Attachments for Pipe, EB6.75.819 :-	3	-	SB11/77
EB6.75.793A	. Clip	1	-	SB11/78
EB6.75.795A	. Lagging	1	-	SB11/79
EB6.75.801A	. Lagging	2	-	SB11/80
EB6.75.20	. PIPE, RUN IN STARBOARD WHEEL WELL BAY, ASSEMBLY	-	-	SB12/1
EB6.75.401	. ADAPTOR, bulkhead, Marston air cooler (Pre-Mod 3156)	1	DTD5044	SB12/2
EB6.75.1203	. ADAPTOR, bulkhead, Marston air cooler (Mod 3156) (Make from Ref. 6768)	1	-	-
A25/4C	Attaching parts for EB6.75.401 or EB6.75.1203 :-	6	-	SB12/3
AGS2001C1/66	. Bolt, 2BA	6	-	SB12/4
EB6.75.647	. Nut, 2BA	1	Laminated Aluminium	SB12/5
EB6.75.1205	. Shim (Pre-Mod 3156)	1	Laminated Aluminium	-
EEAS20/1DR	. Tab, locking	2	-	SB12/6
AGS1115/13	. Washer, plate	1	-	SB12/7
EB6.75.211	. BRACKET	2	-	SB12/8
EB6.75.213	. CLIP, pipe, in wheel well	2	L72	SB12/9
A25/2C	Attaching parts for EB6.75.213 :-	2	-	SB12/10
AGS2001C1/66	. Bolt, 2BA	2	-	SB12/11
SP15C	. Nut, stiff, 2BA	2	-	SB12/12
AGS2120J	. Washer	2	-	-
AGS1142J	. NIPPLE	1	-	SB12/13
EB6.75.209	. NIPPLE, adaptor	2	-	SB12/14
EB6.75.615	. PIPE, assembly, from Marston cooler, bulkhead elbow connection to pipe joint in wheel well bay	1	L56	SB12/15
EB6.75.1559	. PIPE, assembly, from pipe joint in wheel well bay to fuselage bulkhead connection	1	L56	SB12/16
SP90C7	. UNION, elbow, assembly	1	-	SB12/17
AS5402	. PIN, split, 1/16" dia	1	-	SB11/81
BELLS	. PLUG, nipple	1	-	SB11/82
ASBESTOS	-	-	-	-
AS5402	. RING, sealing, type 'A', between pipe flanges	3	-	SB11/83
AGS954D	. SLEEVE, outer	1	-	SB11/84
AGS1119K	. UNION, tee, at Marston cooler	1	-	SB11/85
SP91N	Attachments for Union, AGS1119K :-	2	-	SB11/86
EB6.75.435A	. Clip	1	-	SB11/87
EB6.75.437A	. Lagging	1	-	SB11/88
EB7.50.31	. VALVE, HOT AIR, ASSEMBLY	1	-	SB11/89
E.E. CO. LTD. BRADFORD TYPE 234	Consisting of :-	-	-	-
	. ACTUATOR	1	-	SB11/90

CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
TEDDINGTON FKH/A/16	. . VALVE	1	—	SB11/91
	Attachments for Valve, EB7.50.31 :—			
EB6.75.443A	. Lagging	1	—	SB11/92
EB6.75.445A	. Lagging	1	—	SB11/93
AGS2001E1/66	. Nut, stiff, 1/4" BSF	8	—	SB11/94
SP13E	. Washer	8	—	SB11/95
NORMALAIR 501670	. VALVE, non-return	1	—	SB11/96
	Attachments for Valve, 501670 :—			
SP91L	. Clip	2	—	SB11/97
EB6.75.439A	. Lagging	1	—	SB11/98
EB6.75.441A	. Lagging	1	—	SB11/99

CABIN PRESSURE SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
	EG4.75.17	C.A.U. SYSTEM ACROSS BOMB BAY, AT FRAME 21, INSTALLATION	—	—	—	
33834	EB6.75.1347	Spares for:— • CLIP, pipe, special	4	L72	C	SB13/1
28D/9133011	A25/2C	Attaching parts for EB6.75.1347 and				
28M/1012015	AGS2001C1/66	• Bolt, 2BA	2	—	C	SB13/2
28W/9419475	SP15C	• Nut, 2BA	2	—	C	SB13/3
		• Washer	2	—	C	SB13/4
5K/2231768	AS4525/20	• CLIP, handing	3	—	C	SB13/5
28D/9133011	A25/2C	Attaching parts for AS4525/20:—				
28M/1012015	AGS2001C1/66	• Bolt, 2BA	1	—	C	SB13/6
	EEAS237/7A	• Nut, 2BA	1	—	C	SB13/7
28W/9419475	SP15C	• Washer, 'D'	1	—	C	SB13/8
		• Washer	1	—	C	SB13/9
5K/1037444	AS3360C4C	• LEAD, bonding	3	—	C	SB13/10
28F/4051887	AGS1170J	• NIPPLE	1	—	C	SB13/11
28F/9486111	AGS1142H	• NIPPLE, adapter	1	—	C	SB13/12
28F/9513420	AGS1142J	• NIPPLE, adapter	3	—	C	SB13/13
15183	EB6.75.219	• PIPE, assembly, from port wing union to coupling on frame 21	1	L56	C	SB13/14
33367	EB6.75.1009	• PIPE, assembly, continuation across frame 21 to tee-piece	1	T26	C	SB13/15
33368	EB6.75.1011	• PIPE, assembly, from tee-piece to starboard wing union	1	L56	C	SB13/16
980	EEAS20/1DR	• TAB, locking	4	L72	C	SB13/17
28F/9517916	AGS1112J	• UNION, bulkhead, flanged	2	—	C	SB13/18
		Attaching parts for AGS1112J:—				
28D/9133012	A25/3C	• Bolt, 2BA	6	—	C	SB13/19
28M/1012015	AGS2001C1/66	• Nut, 2BA	6	—	C	SB13/20
28475	EB6.75.597	• Shim (If required)	1	Laminated Aluminium	—	SB13/21
28F/4051810	AGS1115/12	• Washer, plate	1	—	C	SB13/22
28F/4051879	AGS1121/3	• UNION, tee	1	—	C	SB13/23

SERVICES

COLD AIR SUPPLY TO PILOT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	EA3.74.21	COLD AIR SUPPLY TO PILOT, ASSEMBLY	—	—	—	
		Spares for:—				
7240	EA3.74.45	. BRACKET, non-return valve mounting	1	L72	C	SB14/1
7725	EEAS133	. BRACKET	1	—	C	SB14/2
		Attaching parts for EEAS133:—				
28D/1212964	A61/1B	. Bolt, 4BA	1	—	C	SB14/3
28M/9129524	A29BP	. Nut, 4BA	1	—	C	SB14/4
28W/9416642	SP47B	. Washer	1	—	C	SB14/5
5K/1037287	AS4525/3	. CLIP, pipe, 3/16" o/d	5	L16	C	SB14/6
5K/2231767	AS4525/16	. CLIP, pipe, 1" o/d	6	L16	C	SB14/7
		Attaching parts for AS4525/3 and AS4525/16:—				
28D/1212964	A61/1B	. Bolt, 4BA	1	—	C	SB14/8
28M/9129524	A29BP	. Nut, 4BA	1	—	C	SB14/9
28W/9416642	SP47B	. Washer	1	—	C	SB14/10
8995	EA3.74.47	. CLIP, for non-return valve mounting	2	L54	C/MR	SB14/11
		Attaching parts for EA3.74.47:—				
28D/1013250	A61/15C	. Bolt, 2BA	2	—	C	SB14/12
28W/9419475	SP15C	. Washer	2	—	C	SB14/13
8990	EA3.74.53	. COUPLING, drain pipe outlet	1	DTD423	C/MR	SB14/14
8992	EA3.74.63	. HOSE, connection, between air pipe sections (Make from 32C/376)	5	DTD625	LM	SB14/15
		Attaching parts for EA3.74.63:—				
28E/8211233	SP144/028	. Clip	2	—	C	SB14/16
8993	EA3.74.67	. HOSE, connection, from water trap to drain pipe	1	DTD625	LM	SB14/17
		Attaching parts for EA3.74.67:—				
28E/8211228	SP144/013	. Clip	2	—	C	SB14/18
	THERMOTANK					
5042	K1259/43	. LOUVRE, 'punkah', air, type DAR.2	1	—	B	SB14/19
12990	EA2.74.33	. PIPE, cold air, from non-return valve to hose connection on frame 1	1	T9	C	SB14/20
5633	EA3.74.111	. PIPE, cold air, continuation from hose connection on frame 1 to hose connection between frames 1 and 2	1	T9	C	SB14/21
5634	EA3.74.113	. PIPE, cold air, from hose connection between frames 1 and 2 to louver	1	T9	C	SB14/22
5635	EA3.74.115	. PIPE, assembly, drain	1	T9	C	SB14/23
8991	EA3.74.51	. RING, louver mounting	1	DTD36	C/MR	SB14/24
3681	EA3.74.49	. SCOOP, cold air	1	L59	C	SB14/25
981	EEAS20/2DR	. TAB, locking, for water drain pipe	1	L72	C	SB14/26
20814	EA3.74.43	. TRAP, water	1	—	B	SB14/27
		Attaching parts for EA3.74.43:—				
28M/1086175	AGS2001A3	. Nut, stiff, 6BA	10	—	C	SB14/28
28S/1200060	A33A16	. Screw, 6BA	10	—	C	SB14/29
28W/9419473	SP15A	. Washer	10	—	C	SB14/30
5638	EA3.74.23	. VALVE, NON-RETURN, ASSEMBLY	1	—	A	SB14/31
		Consisting of:—				
	EA3.74.39	. ADAPTOR	2	DTD683	—	SB14/32
	EA3.74.41	. BODY, non-return valve	1	DTD683	—	SB14/33
5639	EA3.74.25	. PLUNGER, VALVE SEAL, ASSEMBLY	1	—	C	SB14/34
		Spares for:—				
28D/1213253	AS4565/1B	. BOLT, rd. hd., 4BA	1	—	C	SB14/35
28M/1956039	AGS2001B3	. NUT, stiff, 4BA	1	—	C	SB14/36

SERVICES

COLD AIR SUPPLY TO PILOT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
5640	EA3.74.29	. . . SEAL	1	Hallprene 21	C	SB14/37
5060	EA3.74.27	. . . WASHER, seal retaining	1	DTD683	—	SB14/38
	EA3.74.35	. . SHIM, laminated	1	Laminated Alum.	C	SB14/39
5059	EA3.74.37	. . SPRING, compression	1	DTD215	C	SB14/40
5043	EA3.74.33	. . WASHER, sealing	1	DTD378A	C	SB14/41

SERVICES

AIR VENTILATED SUIT SYSTEM

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EG4.75.425	AIR VENTILATED SUIT SYSTEM (MOD 4799)						—	—	
EG4.75.405	SUIT, VENTILATED, FRONT FUSELAGE, INSTALLATION (MOD 4799)						—	—	SB15/1
EB6.75.877	BULKHEAD, PRESSURE PIPE CONNECTION, ASSEMBLY						—	—	SB15/2
AGS1142H	NIPPLE, adaptor						2	—	SB15/3
EEAS20/3DU	TAB, locking						2	—	SB15/4
AGS1112H	UNION, body, flanged bulkhead						1	—	SB15/5
A25/4C	Bolt, 2BA						6	—	SB15/6
AGS2001C1/66	Nut, 2BA						6	—	SB15/7
SP13C	Washer						6	—	SB15/8
AGS1115/10	Washer, plate						1	—	SB15/9
EA4.75.253	Washer, sealing						1	—	SB15/10
EB6.75.1041	BULKHEAD, PRESSURE, 4-WAY PIECE ASSEMBLY						—	—	SB15/11
EB6.75.1033	ADAPTOR, pilot's supply line						1	L85	SB15/12
AGS904H	Sleeve, outer						1	—	SB15/13
EB6.75.1043	CLIP, bridge, for 4-way union						2	—	SB15/14
A25/16C	Bolt, 2BA						2	—	SB15/16
SP13C	Washer						2	—	SB15/16
EB6.75.1039	PLATE, mounting, assembly						1	L72	SB15/17
A25/1C	Bolt, 2BA						4	—	SB15/18
SP13C	Washer						4	—	SB15/19
AGS1126/3	UNION, piece, 4-way						1	—	SB15/20
EEAS.21/2ER	WASHER, 'D'						1	L72	SB15/21
AS3181/16C	CLIP						1	—	SB15/22A
A25/3C	Bolt						1	—	SB15/23A
AGS2001C1/66	Nut						1	—	SB15/24A
SP15C	Washer						1	—	SB15/25A
EB6.75.879	INSTALLATION AT FRAME 12						—	—	SB15/22
EB6.75.881	BODY, union						1	—	SB15/23
A25/3C	Bolt, 2BA						6	—	SB15/24
AGS20001C1/66	Nut, 2BA						6	—	SB15/25
SP13C	Washer						6	—	SB15/26
EB6.75.883	Washer						1	S510	SB15/27
AGS1142H	NIPPLE, adaptor						2	—	SB15/28
EEAS20/3DU	TAB, locking						2	—	SB15/29
AGS2120H	NIPPLE						4	—	SB15/30
AGS1142E	NIPPLE, adaptor						4	—	SB15/31

R

R

R

R

AIR VENTILATED SUIT SYSTEM

Part Number	Description					No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5 6			
AGS1142H EB6.75.917	. . .	NIPPLE, adaptor				2	—	SB15/32
	. . .	PIPE, INSTALLATION, FOR BOMB AIMER'S VENTILATED SUIT				—	—	SB15/33
		Spares for :—						
AS3180/12E	. . .	CLIP				1	—	SB15/34
		Attaching parts for AS3180/12E :—						
AGS2001E1/66 SP13E	. . .	Nut				1	—	SB15/35
	. . .	Washer				1	—	SB15/36
EB6.75.975	. . .	PIPE, assembly, flexible, for bomb aimer's suit connection				1	—	SB15/37
MBEU/1664 or O/MBEU/1748/C EB6.75.919	. . .	PLATE, base, for pipe clip				1	—	SB15/38
	. . .	PLATE, base, for pipe clip				1	—	
	. . .	PIPE, INSTALLATION, FOR PILOT'S AND NAVIGATOR'S VENTILATED SUIT				—	—	SB15/39
		Spares for :—						
AS3180/12E	. . .	CLIP				2	—	SB15/40
		Attaching parts for AS3180/12E :—						
AGS2001E1/66 SP13E	. . .	Nut				1	—	SB15/41
	. . .	Washer				1	—	SB15/42
EB6.75.975	. . .	PIPE, assembly, flexible, pilot's and navigator's suit connection (Mod 2685)				2	—	SB15/43
EG4.75.303	. . .	PIPE, assembly, from 4-way piece on pressure bulkhead to pipe connection on pressure bulkhead (Mod 4799)				1	L54	SB15/44
EG4.75.305	. . .	PIPE, assembly, continuation on pressure bulkhead to pipe connection on starboard side of pressure bulkhead (Mod 4799)				1	L54	SB15/45
EB6.75.873	. . .	PIPE, assembly, from starboard side of pressure bulkhead to pressure bulkhead connection				1	L54	SB15/46
SCD.79437/1	. . .	PIPE, assembly, from pressure bulkhead connection to coupling aft of frame 10 (SRIM.3533) (Mod 4799)				1	L54	SB15/47
EB6.75.925	. . .	PIPE, assembly, continuation, between couplings, frames 10 and 12 Modify as required (SRIM.3533) (Mod 4799)				1	L54	SB15/48
EB6.75.927	. . .	PIPE, assembly, from 4-way piece on pressure bulkhead to bomb aimer's valve				1	L54	SB15/49
EB6.75.929	. . .	PIPE, assembly, from 4-way piece on pressure bulkhead, to navigator's valve				1	L54	SB15/50
EB6.75.1037	. . .	PIPE, 'flexflyte', from adaptor on 4-way piece on pressure bulkhead, to pilot's valve				1	—	SB15/51
AGS1105H EB6.75.885	. . .	UNION, adaptor (SRIM.3533) (Mod 4799)				1	—	SB15/52
	. . .	VALVES, BOMB AIMER AND NAVIGATOR, INSTALLATION				—	—	SB15/53
		Spares for :—						
EB6.75.1091	. . .	PLATE, mounting, assembly				1	L72	SB15/54
		Attaching parts for EB6.75.1091 :—						
A25/1C	. . .	Bolt, 2BA				5	—	SB15/55
EB6.75.871	. . .	PACKING, for navigator's valve, 10 SWG				1	L72	SB15/56

SERVICES

AIR VENTILATED SUIT SYSTEM

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EC4.75.19	.	.	.	.	VALVE, COMPLETE, ASSEMBLY		2	-	SB15/57
	.	.	.	.	Spares for :-				
DUNLOP	.	.	.	.	SOCKET, quick release		1	-	SB15/58
ACO23654	.	.	.	.					
NORMALAIR	.	.	.	.	VALVE, control, manual		1	-	SB15/59
513390	.	.	.	.					
R. TRIST & Co.	.	.	.	.	WASHER, sealing, for quick release socket		1	-	SB15/60
R.T.S.Q.S13	.	.	.	.	Attaching parts for EC4.75.19 :-				
A25/2C	.	.	.	.	Bolt, 2BA, for bomb aimer's valve		2	-	SB15/61
A25/3C	.	.	.	.	Bolt, 2BA, for navigator's valve		2	-	SB15/62
EB6.75.867	.	.	.	.	VALVE, PILOT'S CONTROL, INSTALLATION		-	-	SB15/63
	.	.	.	.	Spares for :-				
AS3180/13C	.	.	.	.	CLIP		3	-	SB15/64
AS3181/14C	.	.	.	.	CLIP		1	-	SB15/65
	.	.	.	.	Attaching parts for AS3180/13C and				
	.	.	.	.	AS3181/14C :-				
A25/1C	.	.	.	.	Bolt		1	-	SB15/66
AGS2001C1/66	.	.	.	.	Nut		1	-	SB15/67
SP13C	.	.	.	.	Washer		1	-	SB15/68
EB6.75.1099	.	.	.	.	PIPE, taper, assembly, for connecting pipe 'flexflyte' to		1	L54	SB15/69
	.	.	.	.	control valve (3/4" x 5/8" o/d)				
AGS1142E	.	.	.	.	NIPPLE, adaptor		1	-	SB15/70
EC4.75.19	.	.	.	.	VALVE, COMPLETE, ASSEMBLY		1	-	SB15/71
	.	.	.	.	Spares for :-				
DUNLOP	.	.	.	.	SOCKET, quick release		1	-	SB15/72
ACO.23654	.	.	.	.					
NORMALAIR	.	.	.	.	VALVE, control, manual		1	-	SB15/73
513390	.	.	.	.					
R. TRIST & Co.	.	.	.	.	WASHER, sealing, for quick release socket		1	-	SB15/74
RT.SQ.S.13	.	.	.	.	Attaching parts for EC4.75.19 :-				
A25/2C	.	.	.	.	Bolt, 2BA		2	-	SB15/75
SP13C	.	.	.	.	Washer		2	-	SB15/76
R EB6.75.933	.	.	.	.	SUIT, VENTILATED, CENTRE FUSELAGE, INSTALLATION		-	-	SB16A/1
	.	.	.	.	Spares for :-				
R EA3.75.643	.	.	.	.	BRACKET, for pipe clips on frame 28		2	-	SB16A/2
R EEAS136	.	.	.	.	BRACKET		1	-	SB16A/3
R AS3181/16B	.	.	.	.	CLIP		3	-	SB16A/4
R AS3181/18B	.	.	.	.	CLIP		1	-	SB16A/5
R AS3181/18C	.	.	.	.	CLIP		3	-	SB16A/6
R AS4525/12	.	.	.	.	CLIP, bonding		2	-	SB16A/7

SERVICES

AP101B-0415-3A

AIR VENTILATED SUIT SYSTEM

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
R AS4525/16	.	.	.	.	.	CLIP, bonding Attaching parts for AS3181/16B, AS3181/18B, AS3181/18C, AS4525/12 and AS4525/16 :-	8	-	SB16A/8
R A25/9B	.	.	.	.	.	Bolt (as required)	1	-	SB16A/9
R A25/12B	.	.	.	.	.	Bolt (as required)	1	-	SB16A/10
R A25/1C	.	.	.	.	.	Bolt (as required)	1	-	SB16A/11
R A25/3C	.	.	.	.	.	Bolt (as required)	1	-	SB16A/12
R A25/4C	.	.	.	.	.	Bolt (as required)	1	-	SB16A/13
R A25/9C	.	.	.	.	.	Bolt (as required)	1	-	SB16A/14
R A25/10C	.	.	.	.	.	Bolt (as required)	1	-	SB16A/15
R AGS2002B1	.	.	.	.	.	Nut (as required)	1	-	SB16A/16
R AGS2002C1	.	.	.	.	.	Nut (as required)	1	-	SB16A/17
R AS2809/4/050	.	.	.	.	.	Tube, distance (as required)	1	-	SB16A/18
R EEAS21/2ER	.	.	.	.	.	Washer, 'D' (as required)	1	-	SB16A/19
R EEAS237/7A	.	.	.	.	.	Washer, 'D' (as required)	1	-	SB16A/20
R SP13C	.	.	.	.	.	Washer (as required)	1	-	SB16A/21
R EB6.75.903	.	.	.	.	.	CONNECTION, GROUND SUPPLY, VALVE, REDUCING AND PRESSURE RELIEF VALVE, GROUP Spares for :-	-	-	SB16B/22
R EB6.75.955	.	.	.	.	.	BLOCK, three way adaptor for pressure relief valve Attaching parts for EB6.75.955 :-	1	L64	SB16B/23
R A25/20C	.	.	.	.	.	Bolt, 2BA	2	-	SB16B/24
R SP13C	.	.	.	.	.	Washer	2	-	SB16B/25
R AS4525/12	.	.	.	.	.	CLIP	3	-	SB16B/26
R AS4525/16	.	.	.	.	.	CLIP Attaching parts for AS4525/12 and AS4525/16 :-	1	-	SB16B/27
R A25/1C	.	.	.	.	.	Bolt (as required)	1	-	SB16B/28
R A27/7C	.	.	.	.	.	Bolt (as required)	1	-	SB16B/30
R AGS2001C1/66	.	.	.	.	.	Nut (as required)	1	-	SB16B/29
R 8R x 1/4"	.	.	.	.	.	Screw (as required)	1	-	SB16B/31
R AS2802/4/050	.	.	.	.	.	Tube, distance (as required)	1	-	SB16B/32
R EEAS237/7A	.	.	.	.	.	Washer, 'D' (as required)	1	-	SB16B/33
R SP13C	.	.	.	.	.	Washer (as required)	1	-	SB16B/34
R NORMALAIR 512070	.	.	.	.	.	CONNECTION, charging break-away	1	-	SB16B/35
R EB6.75.1429	.	.	.	.	.	FAIRLEAD, ASSEMBLY, FOR PRESSURE REDUCING VALVE Consisting of :-	1	-	SB16B/36
EB6.75.951	.	.	.	.	.	FAIRLEAD, half (top)	1	BS2572	
EB6.75.953	.	.	.	.	.	FAIRLEAD, half (bottom)	1	BS2572	
R A25/25C	.	.	.	.	.	Attaching parts for EB6.75.1429 :- Bolt, 2BA	2	-	SB16B/37
R AGS2001C1/66	.	.	.	.	.	Nut, stiff, 2BA	2	-	SB16B/38
R SP13C	.	.	.	.	.	Washer	2	-	SB16B/39
R AGS1170F	.	.	.	.	.	NIPPLE	2	-	SB16B/40
R AGS1142F	.	.	.	.	.	NIPPLE, adaptor	2	-	SB16B/41
R AGS1142H	.	.	.	.	.	NIPPLE, adaptor	9	-	SB16B/42

SERVICES

AIR VENTILATED SUIT SYSTEM

	Part Number	Description						No. Off	Matl. Spec.	Plate No.
		1	2	3	4	5	6			
R	EB6.75.939	. . .	PIPE, assembly, from aft connection frame 12, to non-					1	L54	SB16B/43
			return valve							
R	EB6.75.941	. . .	PIPE, assembly, from non-return valve adjacent to					1	L54	SB16B/44
			frame 12 and stringer 31, to breakaway							
			charging valve tee-union							
R	EB6.75.943	. . .	PIPE, taper assembly, from break-away charging					1	L54	SB16B/45
			valve tee-union							
R	EB6.75.945	. . .	PIPE, assembly, from break-away charging valve					1	L54	SB16B/46
			tee-union, to non-return valve at longeron							
			datum, frame 13							
R	EB6.75.947	. . .	PIPE, assembly, from non-return valve at longeron					1	L54	SB16B/47
			datum frame 13, to pressure relief valve							
			mounting block							
R	EB6.75.949	. . .	PIPE, assembly, from pressure relief valve mounting					1	L54	SB16B/48
			block, to pressure reducing valve							
R	EB6.75.959	. . .	PIPE, assembly, from pressure reducing valve to					1	L54	SB16B/49
			connection at frame 13, centre of fuselage							
R	EB6.75.961	. . .	PIPE, assembly, from centre of fuselage frame 13 to					1	L54	SB16B/50
			connection on port side							
R	EB6.75.963	. . .	PIPE, assembly, from connection forward of frame 13					1	L54	SB16B/51
			to connection aft of frame 13							
R	EB6.75.1361	. . .	PLATE, mounting assembly, for pressure relief valve					1	L72	SB16B/52
			valve mounting block							
R	AGS904C	. . .	SLEEVE, outer					1	-	SB16B/53
R	AGS1121/2	. . .	UNION, tee					1	-	SB16B/54
	HYMATIC									
R	PAS. 148-074	. . .	VALVE, reducing (to E.E.Spec. EA4.S1)					1	-	SB16B/55
	HYMATIC									
R	RAV.158/002	. . .	VALVE, pressure relief (to E.E.Spec. EA4.S1)					1	-	SB16B/56
	FLIGHT									
	REFUELLING									
R	9811125/H	. . .	VALVE, non-return					2	-	SB16B/57
R	EB6.75.931	. . .	CUT IN, SUIT VENTILATED, AT FRAME 12 GROUP					-	-	
			Spares for :-							
R	EB6.75.1347	. . .	CLIP, pipe, special					4	L72	
			Attaching parts for EB6.75.1347 :-							
R	A25/2C	. . .	Bolt, 2BA					2	-	
R	AGS2001C1/86	. . .	Nut, stiff, 2BA					2	-	
R	SP15C	. . .	Washer					2	-	
R	AS4525/20	. . .	CLIP, pipe, bonding					3	-	
			Attaching parts for AS4525/20 :-							
R	A25/2C	. . .	Bolt, 2BA					1	-	
R	AGS2001C1/66	. . .	Nut, stiff, 2BA					1	-	
R	EEAS237/7A	. . .	Washer, 'D'					1	L72	
R	SP15C	. . .	Washer					1	-	
R	AGS2120J	. . .	NIPPLE					1	-	
R	AGS1142H	. . .	NIPPLE, adaptor					1	-	
R	AGS1142J	. . .	NIPPLE, adaptor					3	-	
R	EB6.75.219	. . .	PIPE, assembly, from port wing connection to					1	L56	
			connection on frame 21							
R	EB6.75.1009	. . .	PIPE, assembly, continuation across frame 21 to					1	T26	
			tee joint							
R	EB6.75.1011	. . .	PIPE, assembly, from tee joint to starboard wing					1	L56	
			connection							

SERVICES

AP101B-0415-3A

AIR VENTILATED SUIT SYSTEM

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
R AGS1121/3	.	.	.	.	UNION, tee		1	—	
R AGS1170/F	.	.	.	.	NIPPLE		2	—	SB16A/58
R AGS2120/H	.	.	.	.	NIPPLE		8	—	SB16A/59
R EB6.75.1003	.	.	.	.	PIPE, assembly, from connection aft of frame 13 to connection between frames 17 and 18 port side of fuselage		1	L54	SB16A/60
R EB6.75.1005	.	.	.	.	PIPE, assembly, from connection between frames 17 and 18 to forward connection of water separator		1	L54	SB16A/61
R EB6.75.1007	.	.	.	.	PIPE, taper, assembly, aft connection of water separator		1	—	SB16A/62
R EB6.75.1013	.	.	.	.	PIPE, assembly, from connection forward of frame 20 to connection between frames 22 and 23, port side of fuselage		1	L54	SB16A/63
R EB6.75.1015	.	.	.	.	PIPE, assembly, from connection between frames 22 and 23, to connection between frames 24 and 25, port side of fuselage		1	L54	SB16A/64
R EB6.75.1017	.	.	.	.	PIPE, assembly, from connection between frames 24 and 25 to connection between frames 27 and 28, port side of fuselage		1	L54	SB16A/65
R EB6.75.1019	.	.	.	.	PIPE, assembly, from connection between frames 27 and 28 to connection, centre of fuselage between frames 28 and 29		1	L54	SB16A/66
R EB6.75.1021	.	.	.	.	PIPE, assembly, continuation from centre fuselage connection to connection, starboard side of fuselage, frames 28 and 29		1	L54	SB16A/67
R EB6.75.1023	.	.	.	.	PIPE, assembly, from connection between frames 28 and 29 to connection between frames 24 and 25, starboard side of fuselage		1	L54	SB16A/68
R EB6.75.1025	.	.	.	.	PIPE, assembly, from connection between frames 24 and 25 to connection between frames 21 and 22, starboard side of fuselage		1	L54	SB16A/69
R EB6.75.1027	.	.	.	.	PIPE, assembly, from connection between frames 21 and 22 to tee joint forward of frame 21, starboard side of fuselage		1	L54	SB16A/70
R EB6.75.977	.	.	.	.	SEPARATOR, WATER, INSTALLATION		—	—	SB16B/71
R EB6.75.979.	.	.	.	.	Spares for :—		1	L72	SB16B/72
R EB6.75.995	.	.	.	.	BRACKET, assembly, for water separator		1	—	SB16B/73
R A25/2C	.	.	.	.	CLIP, attachment for water separator		2	—	SB16B/74
R SP13C	.	.	.	.	Attaching parts for EB6.75.995 :—		2	—	SB16B/75
R AGS1104/A	.	.	.	.	Bolt, 2BA		1	—	SB16B/76
R EB6.75.993	.	.	.	.	Washer		1	—	SB16B/77
R AGS1142F	.	.	.	.	CONE, adaptor, for water vent pipe connection to separator		1	L85	SB16B/78
R EB6.75.997	.	.	.	.	CONNECTOR, water vent pipe to fuselage		2	—	SB16B/79
R EB6.75.999	.	.	.	.	NIPPLE, adaptor		2	—	SB16B/80
R EB6.75.991	.	.	.	.	PACKING		1	DTD590	SB16B/81
R EB6.75.989	.	.	.	.	PAD, felt, for clip attachment to water separator		2	L72	SB16B/82
R GODFREY	.	.	.	.	PAD, stress, for clip attachment bolts		1	L54	SB16B/83
R 119013	.	.	.	.	PIPE, assembly, water vent		1	—	SB16B/84
R EEAS20/2DR	.	.	.	.	SEPARATOR, water WE.5, Mk. 4		1	L72	SB16B/85
R AGS164E	.	.	.	.	TAB, locking, for water vent pipe		1	Fibre	
	.	.	.	.	WASHER, jointing, for water vent pipe adaptor		1		

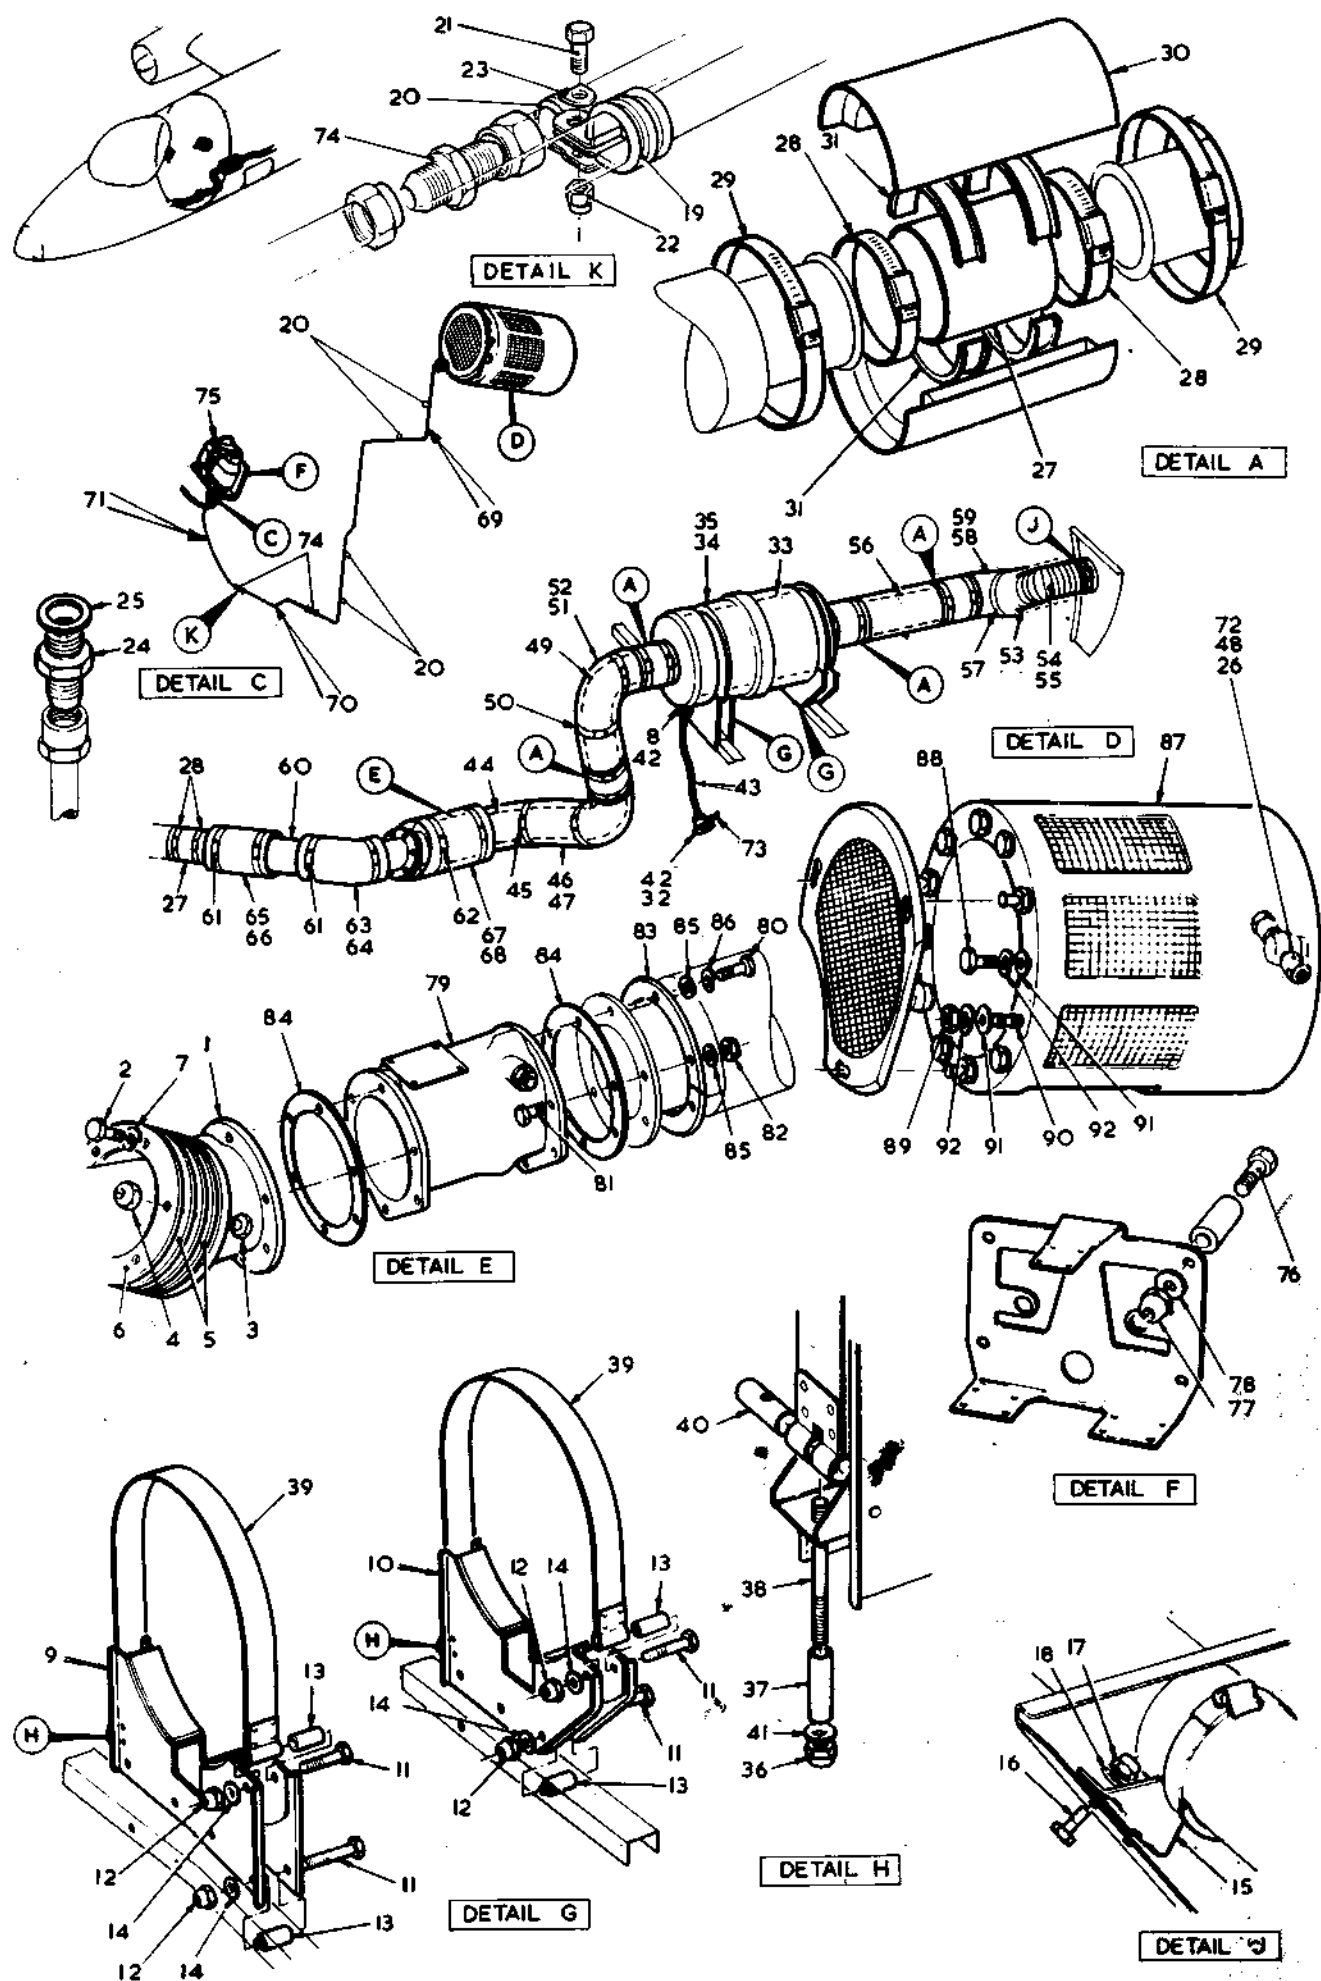
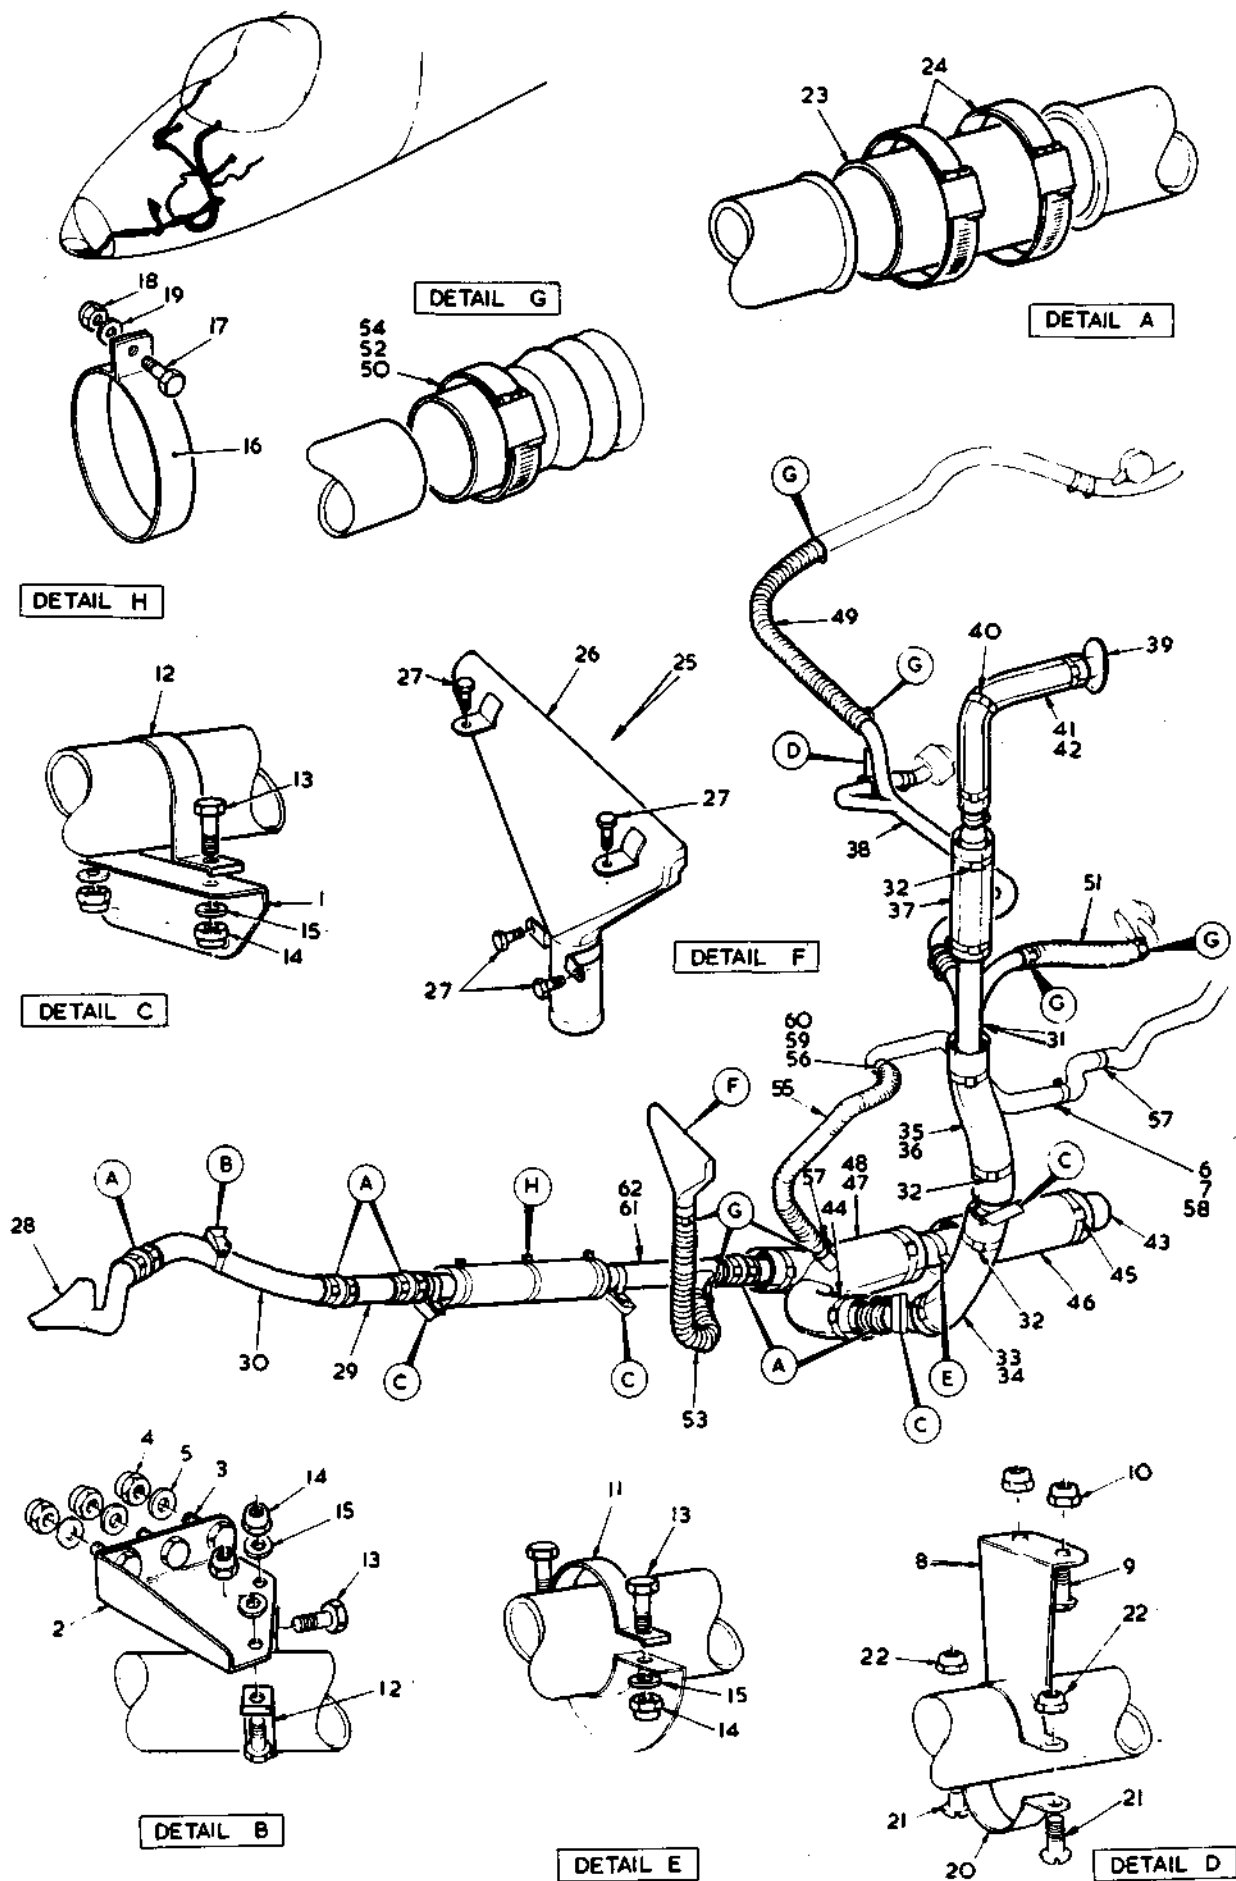


FIG. I. CABIN PRESSURE SYSTEM FRONT FUSELAGE



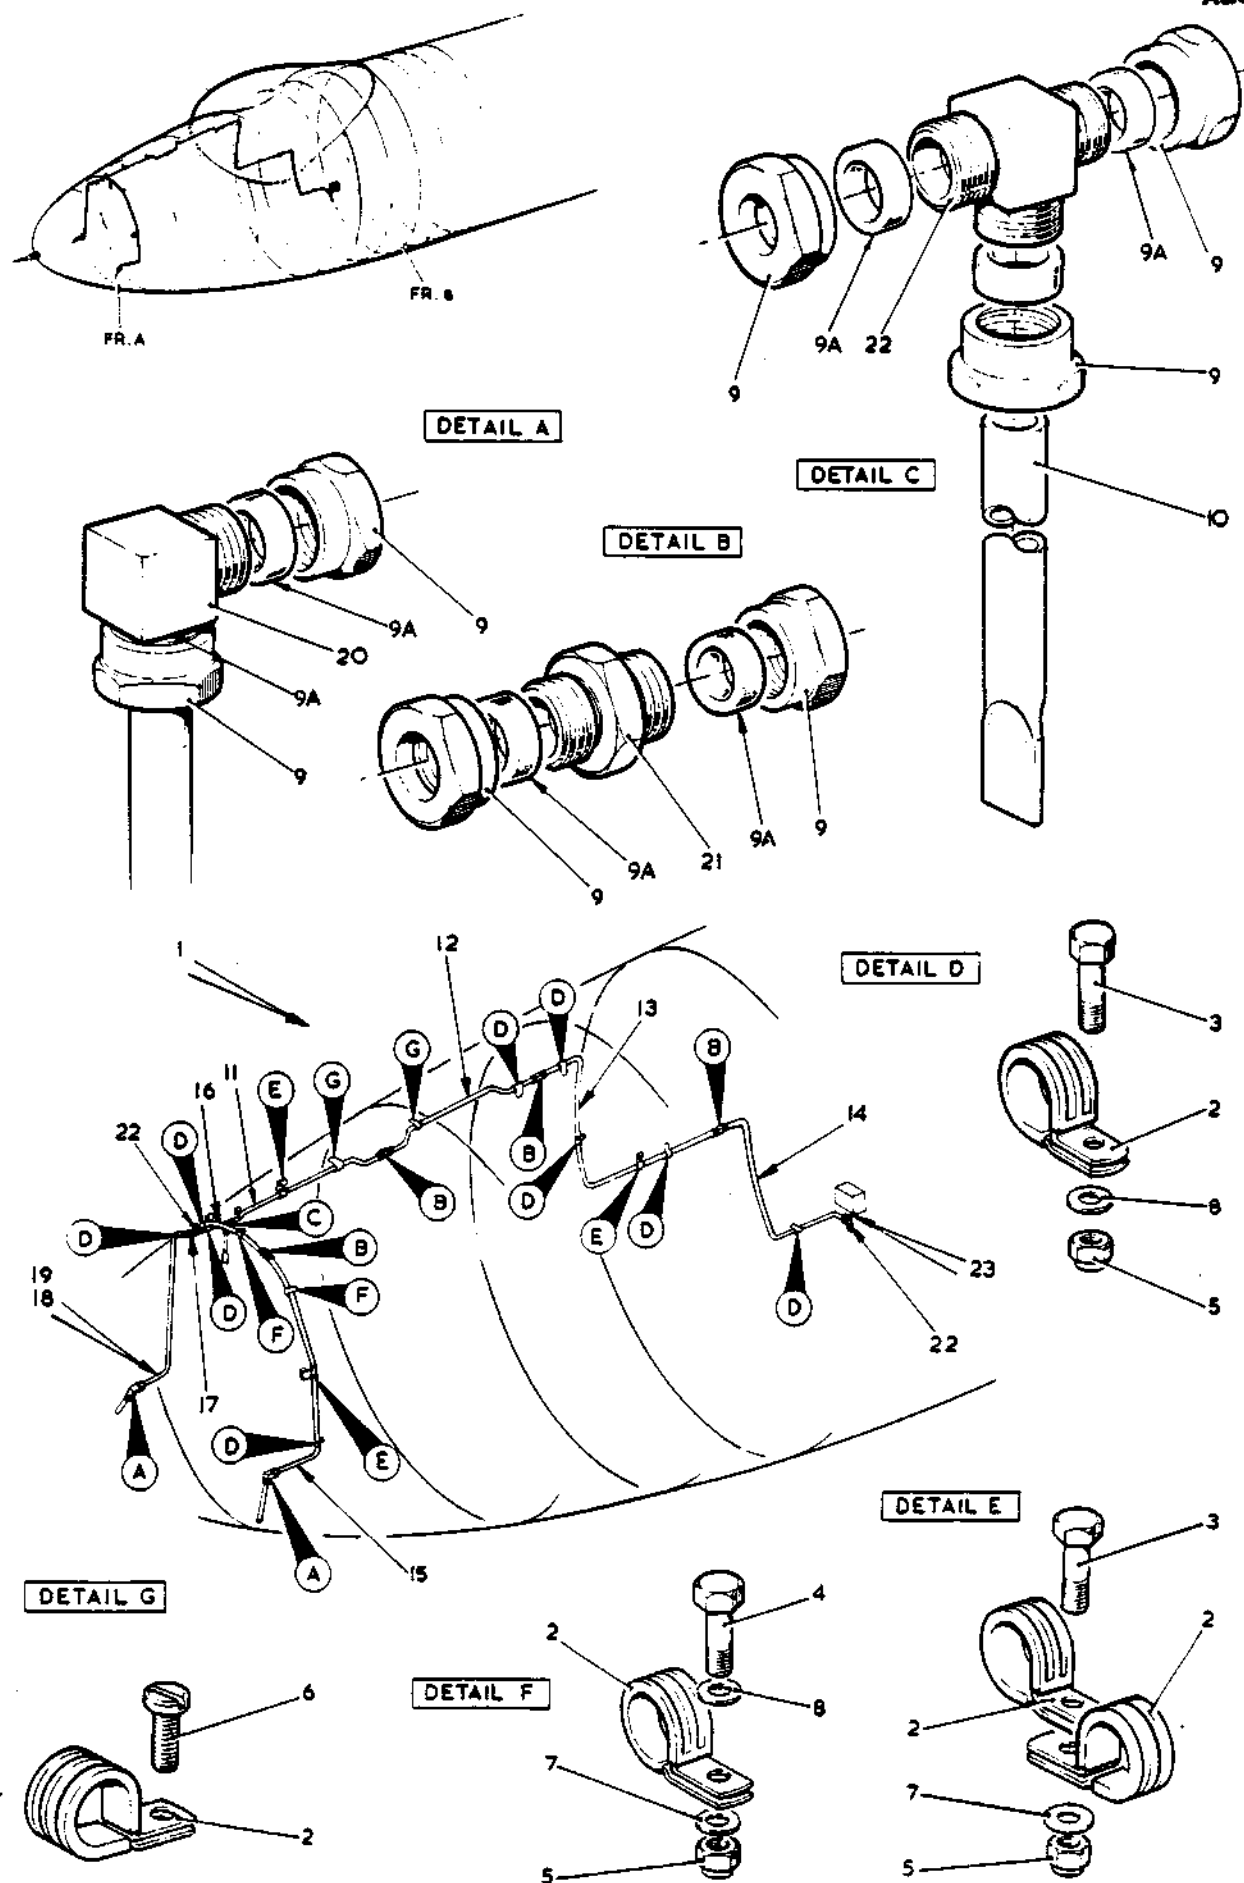


FIG. 3. CABIN PRESSURE STATIC LINE ASSEMBLY

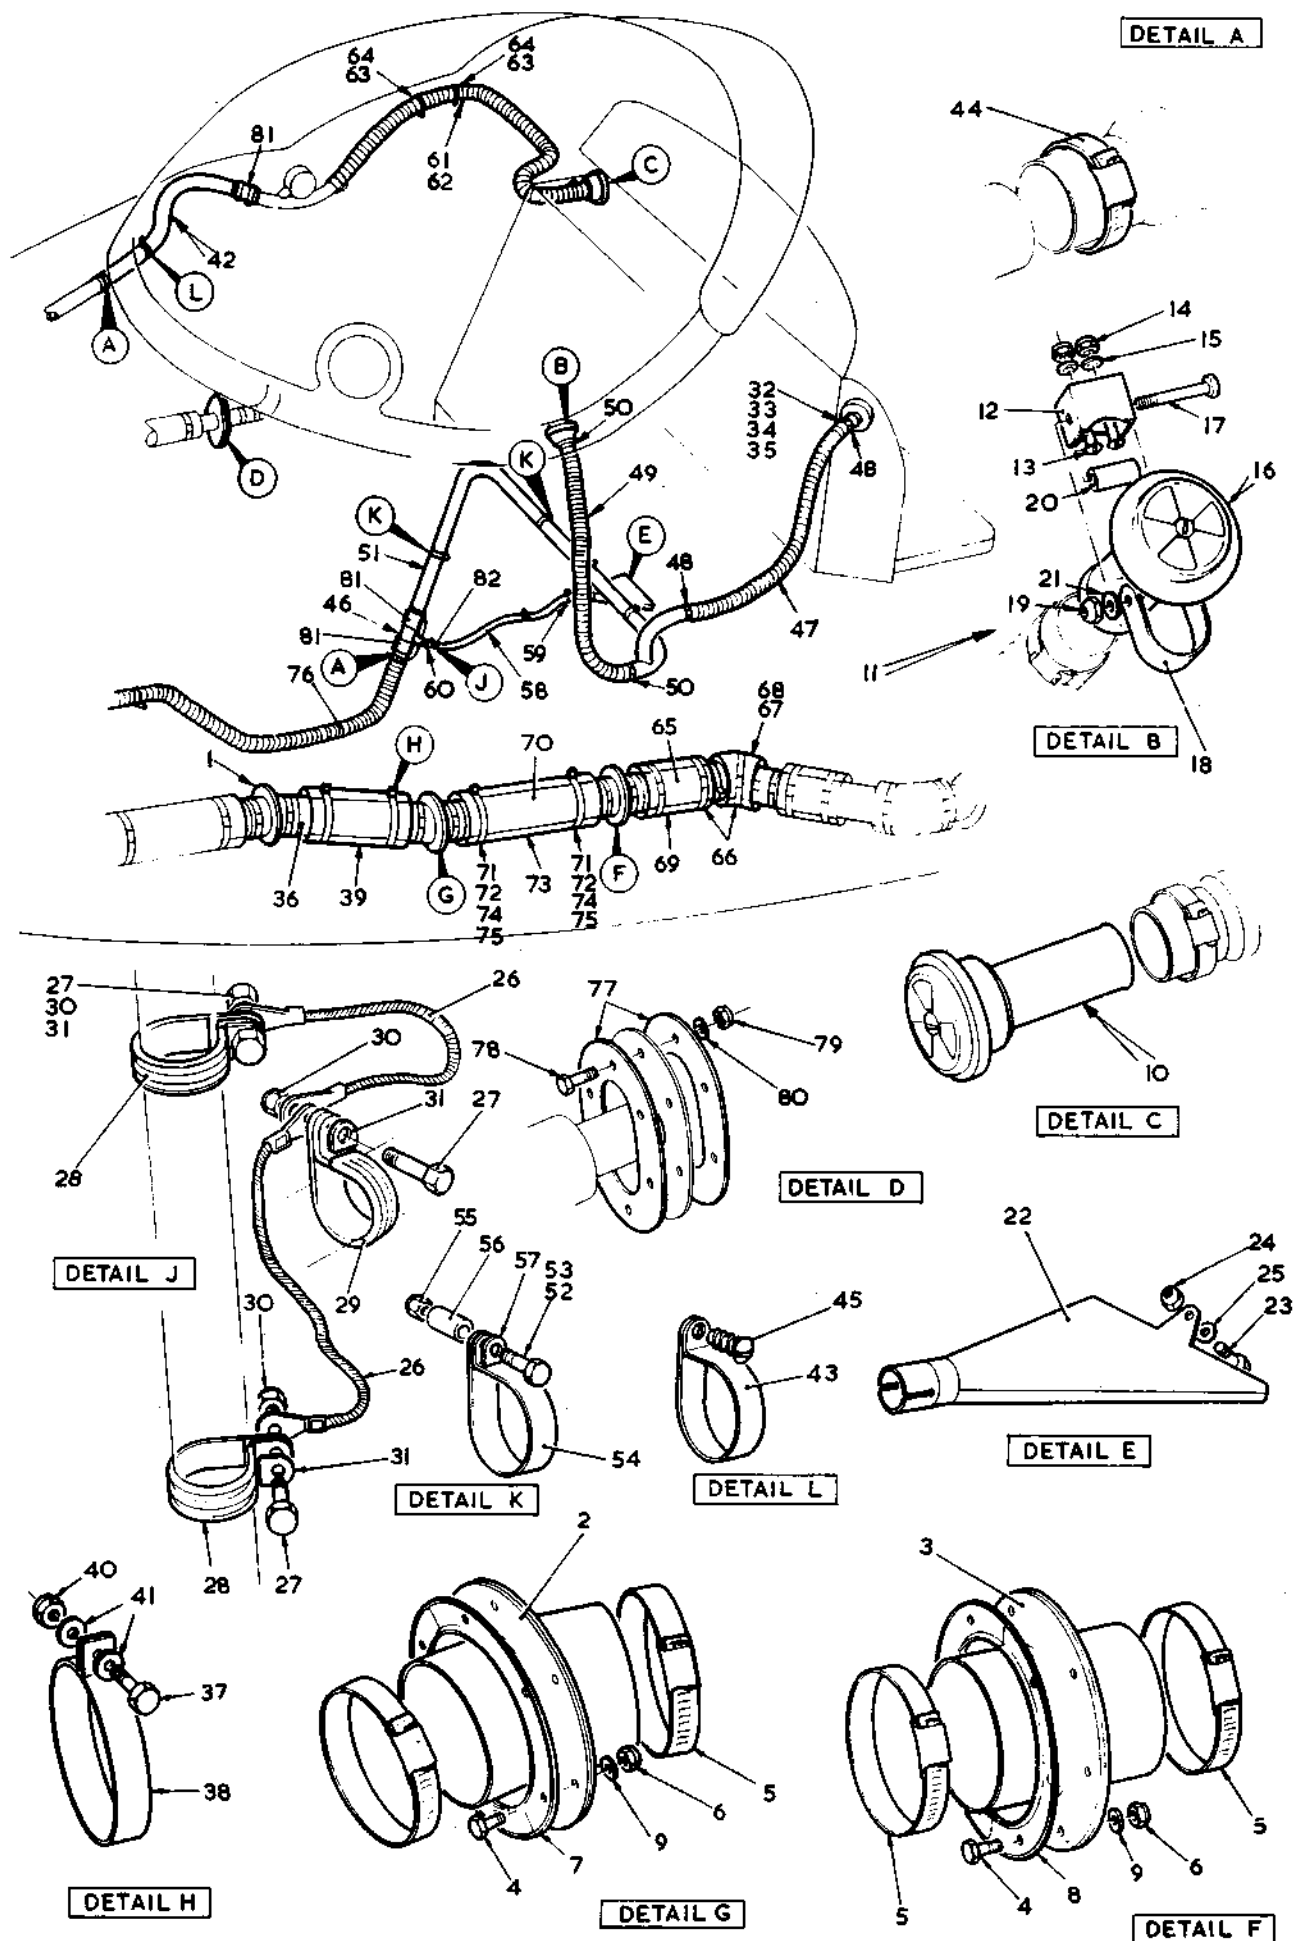


FIG. 4. CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

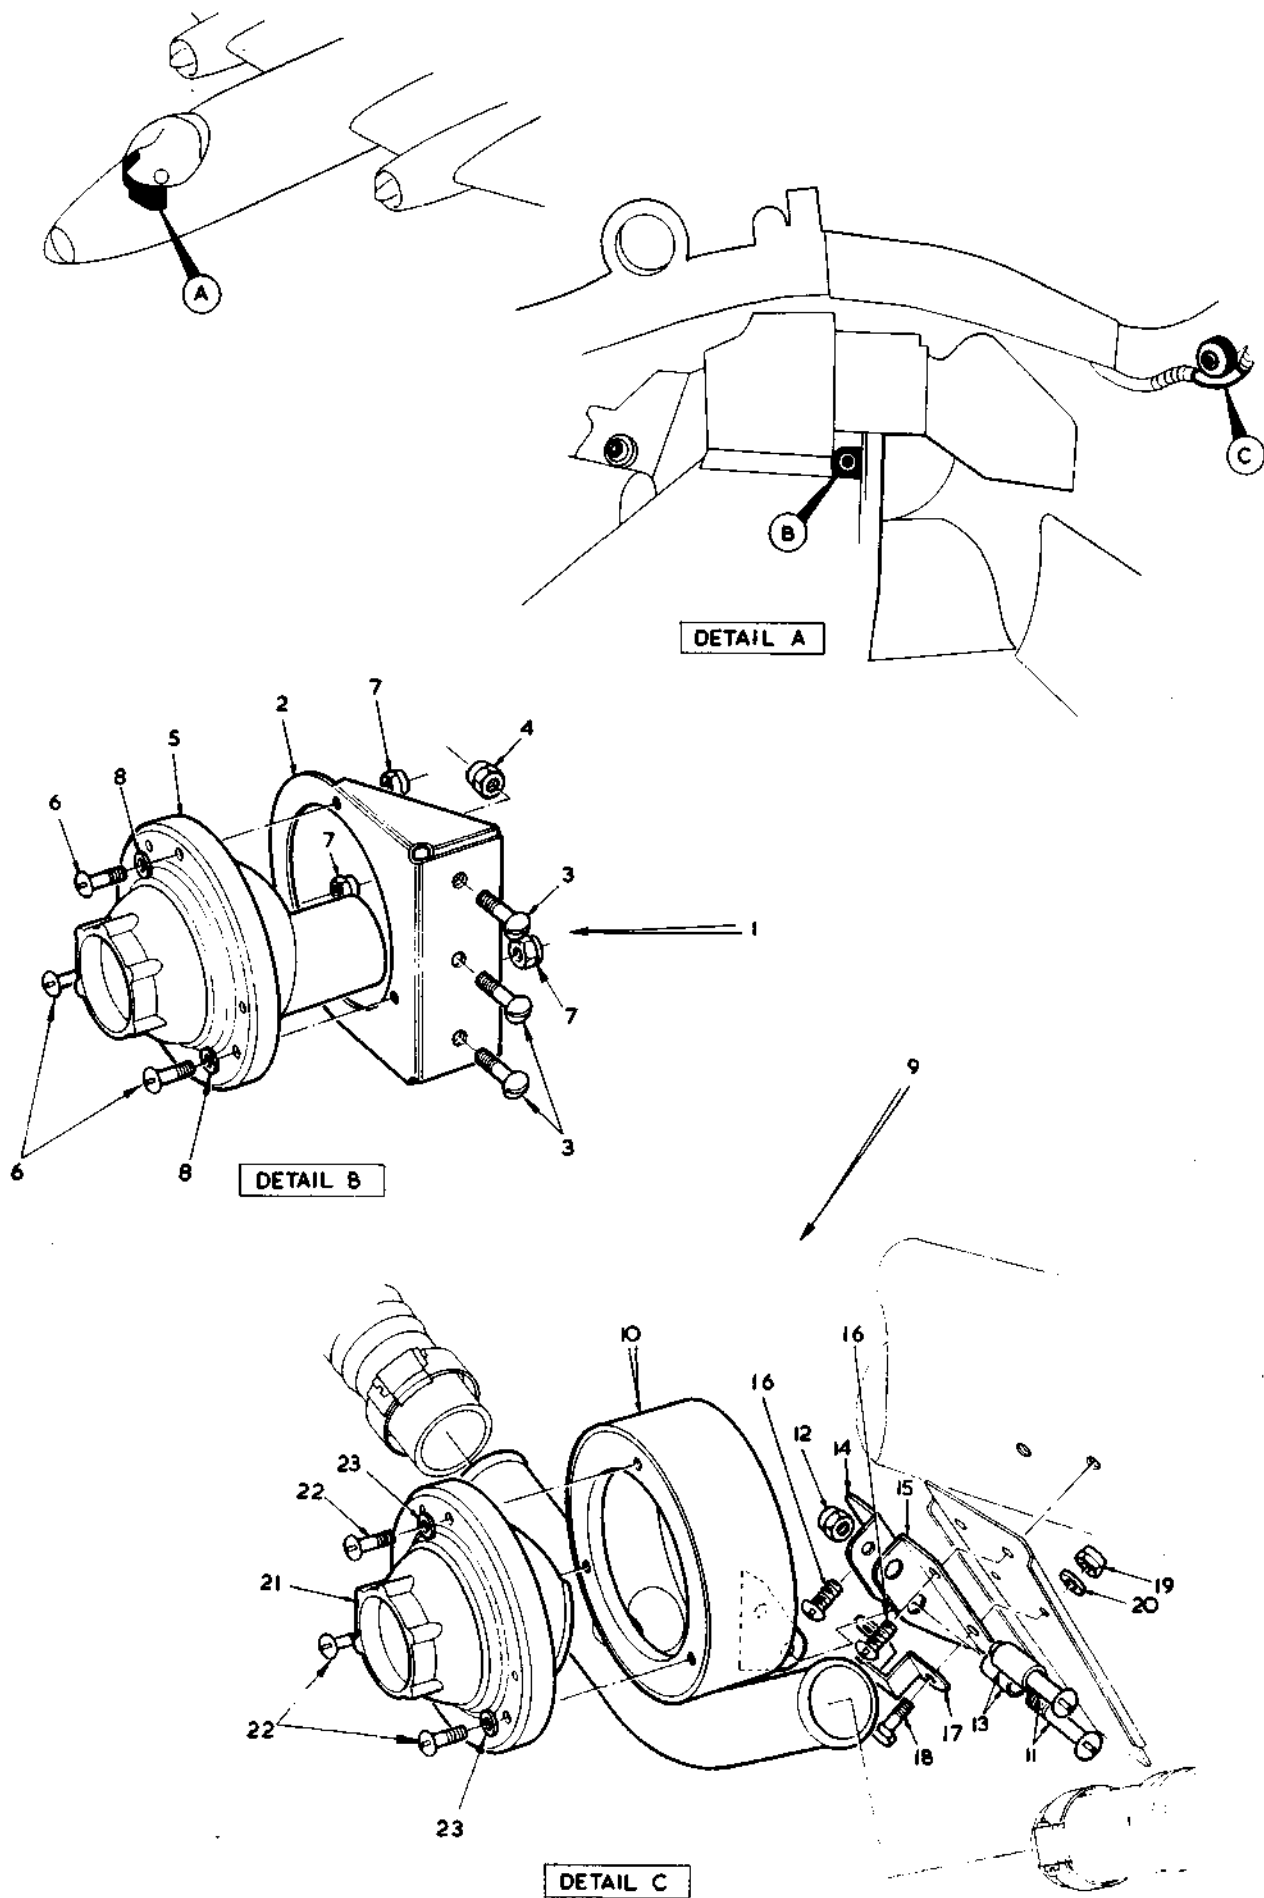


FIG. 5. CABIN PRESSURE SYSTEM FRONT FUSELAGE

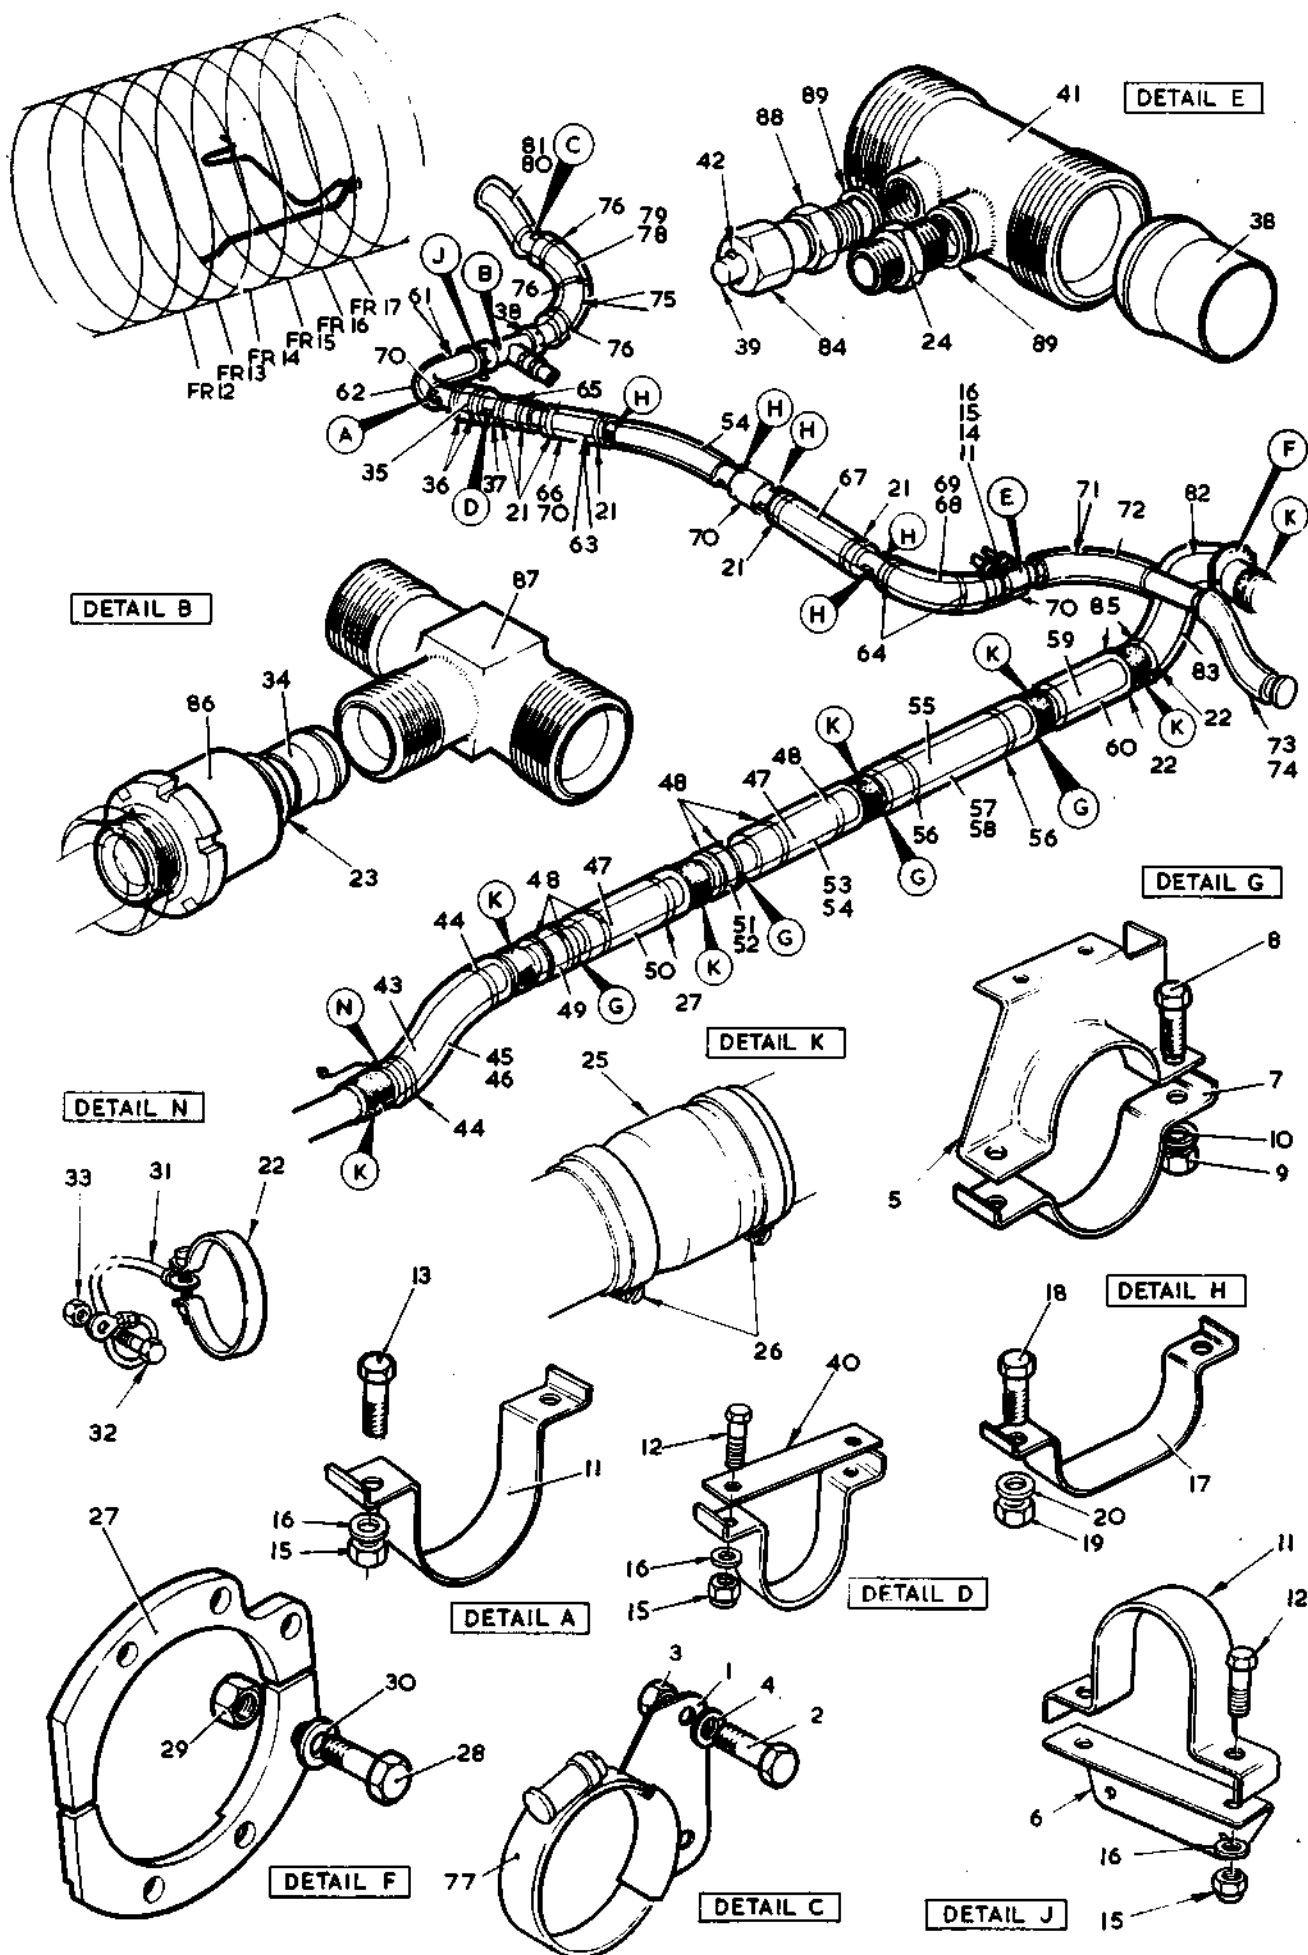


FIG. 6 CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

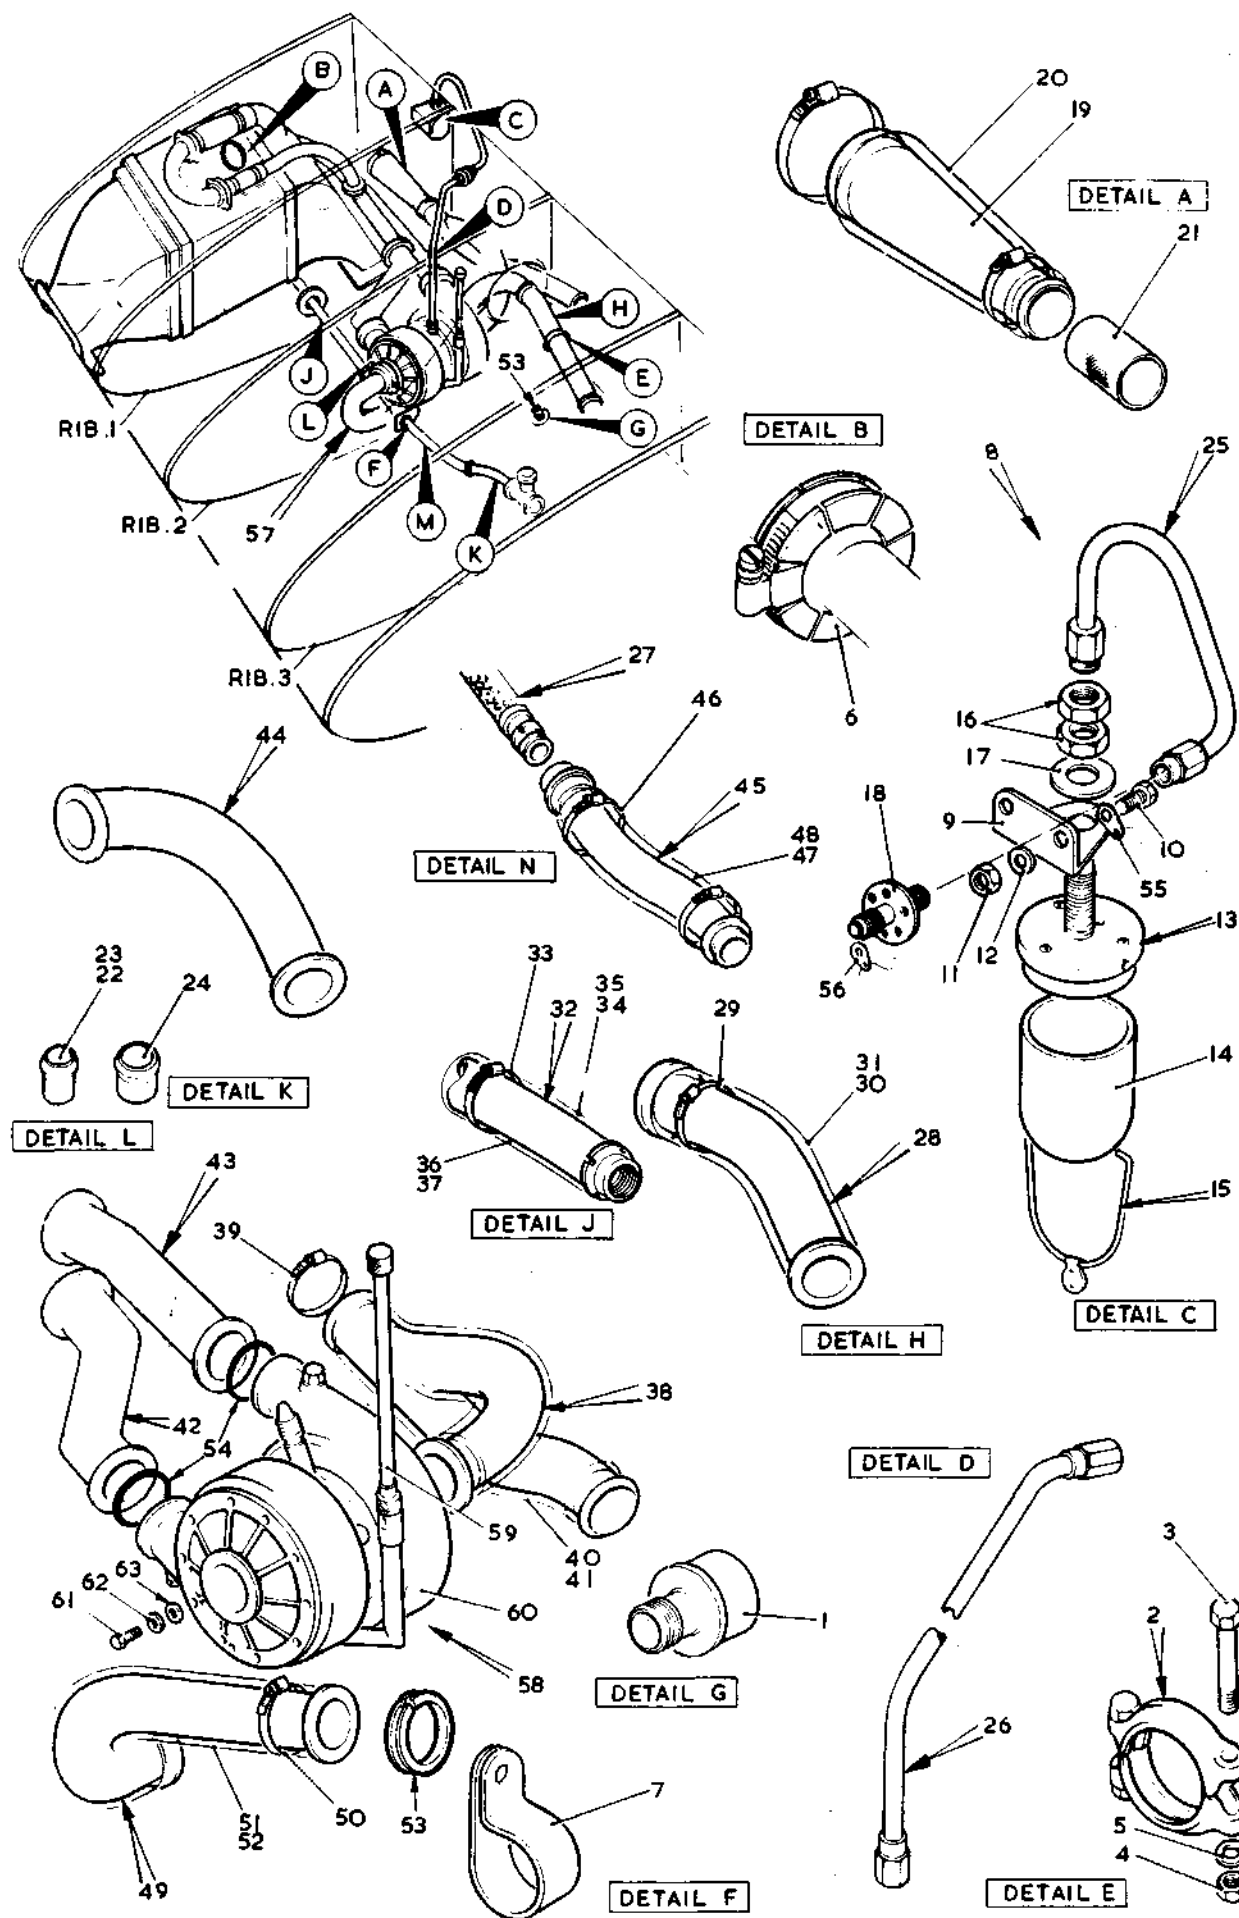


FIG. 7. CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

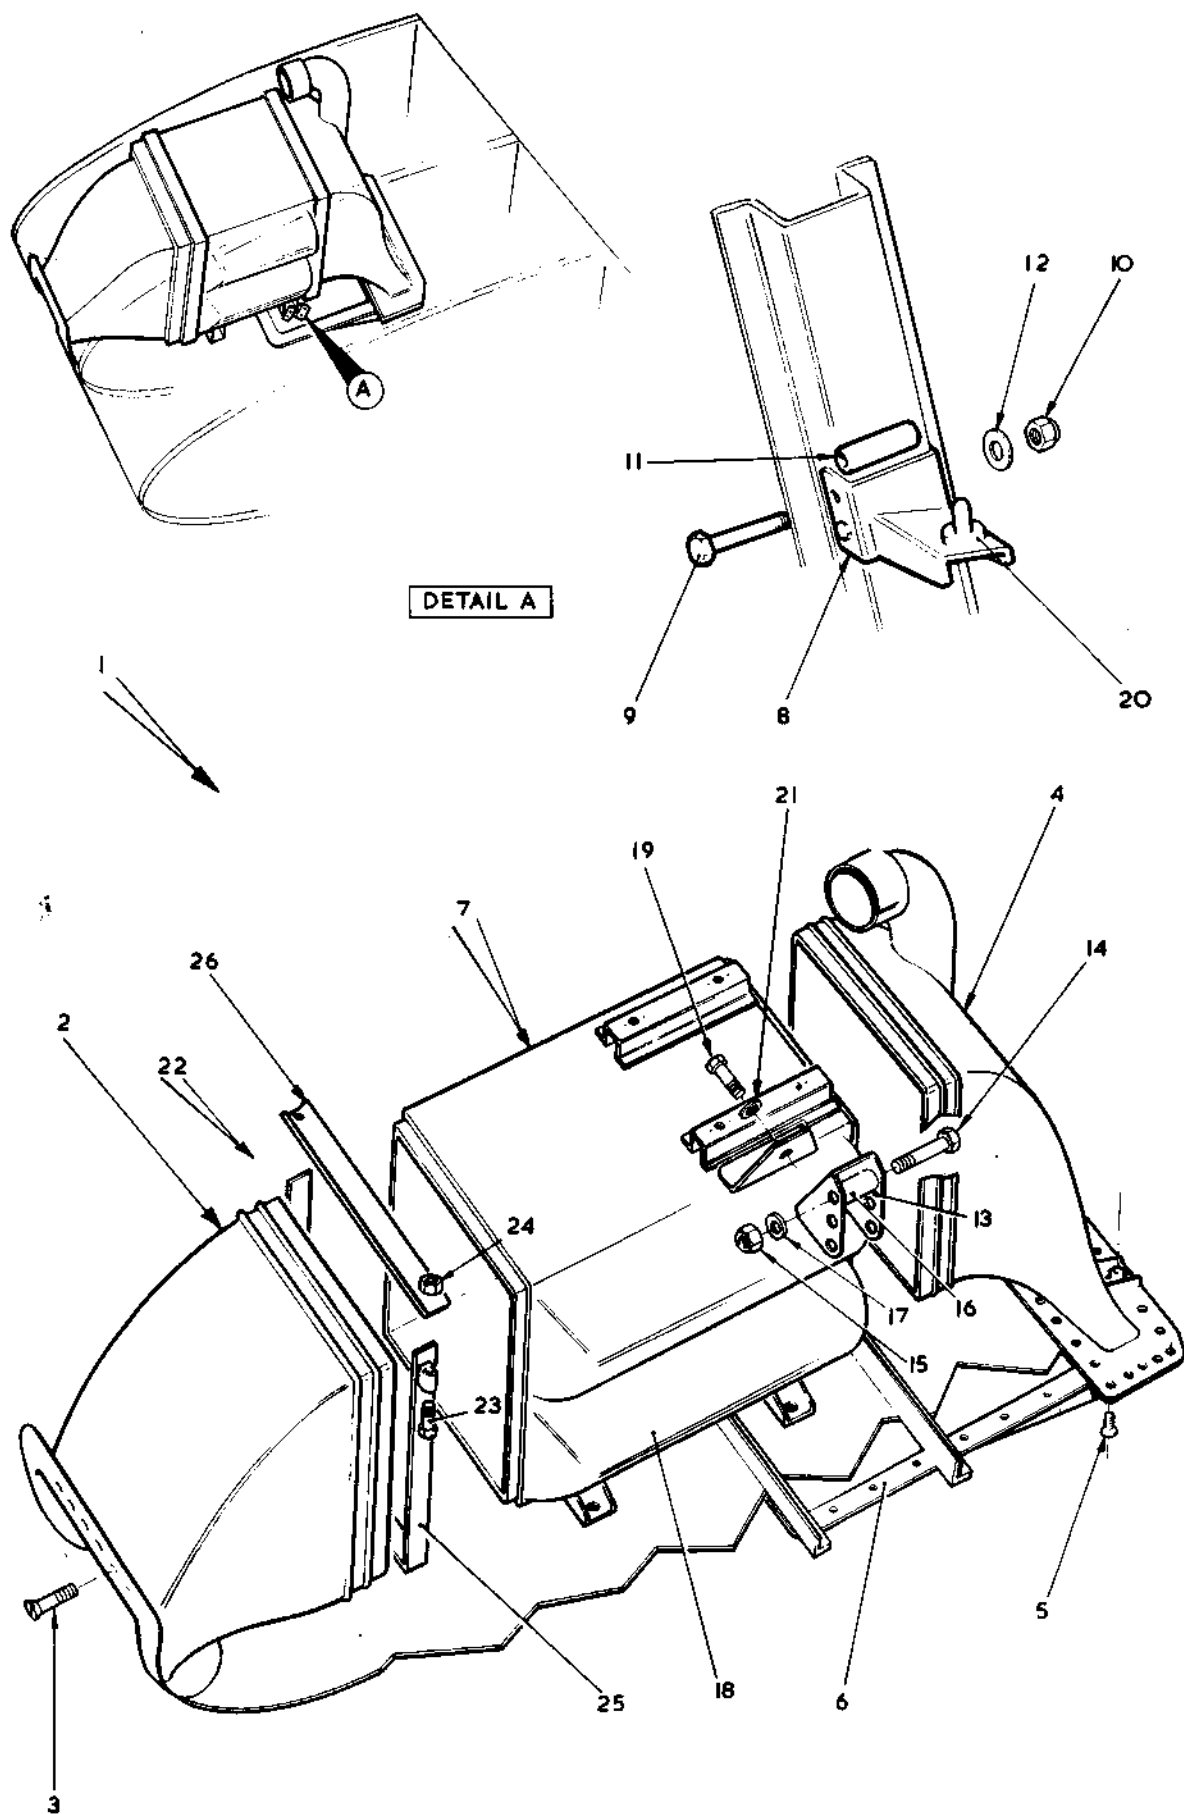


FIG. 8. CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

CODE RSTZ

SECT 58

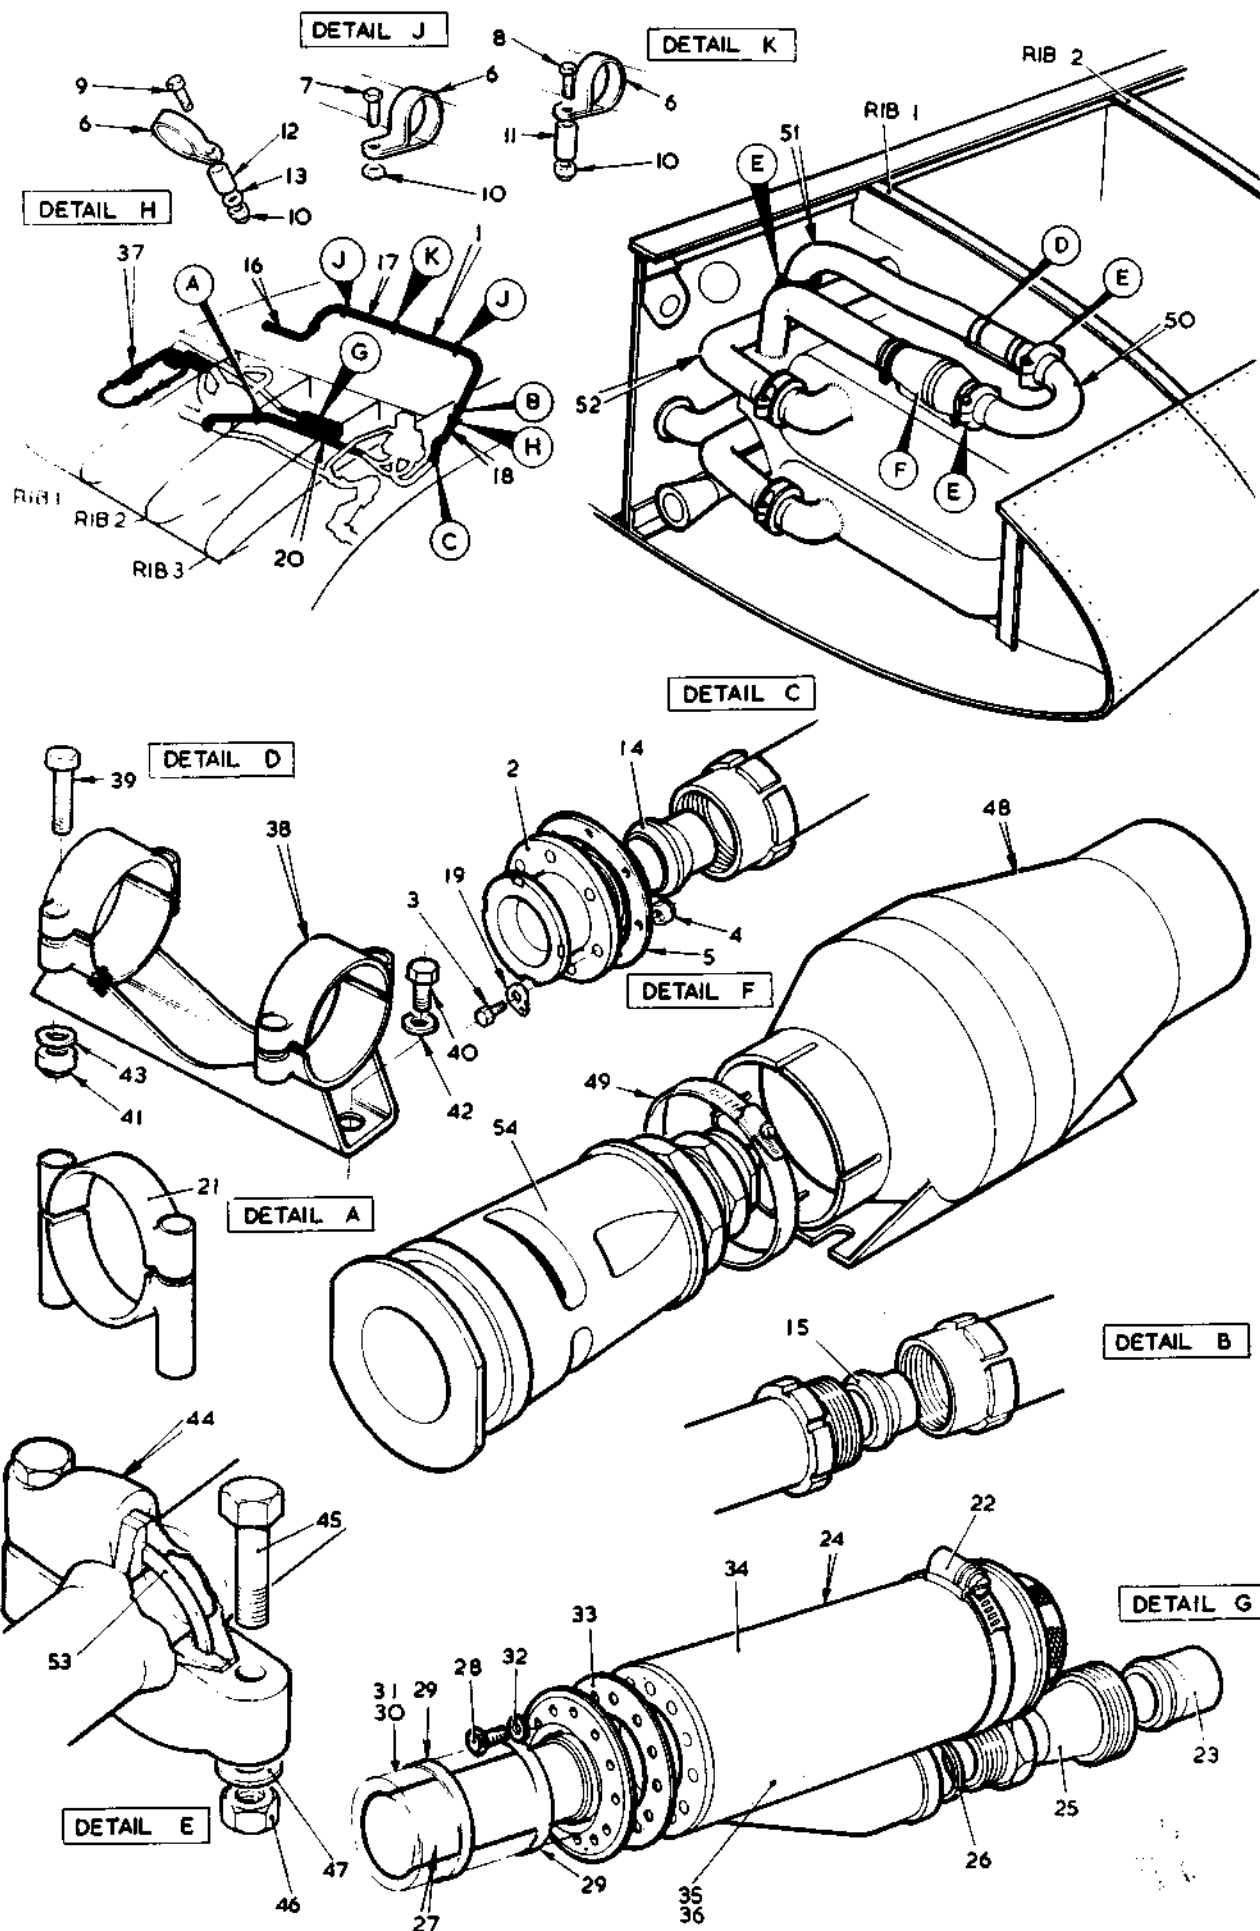


FIG. 9. CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

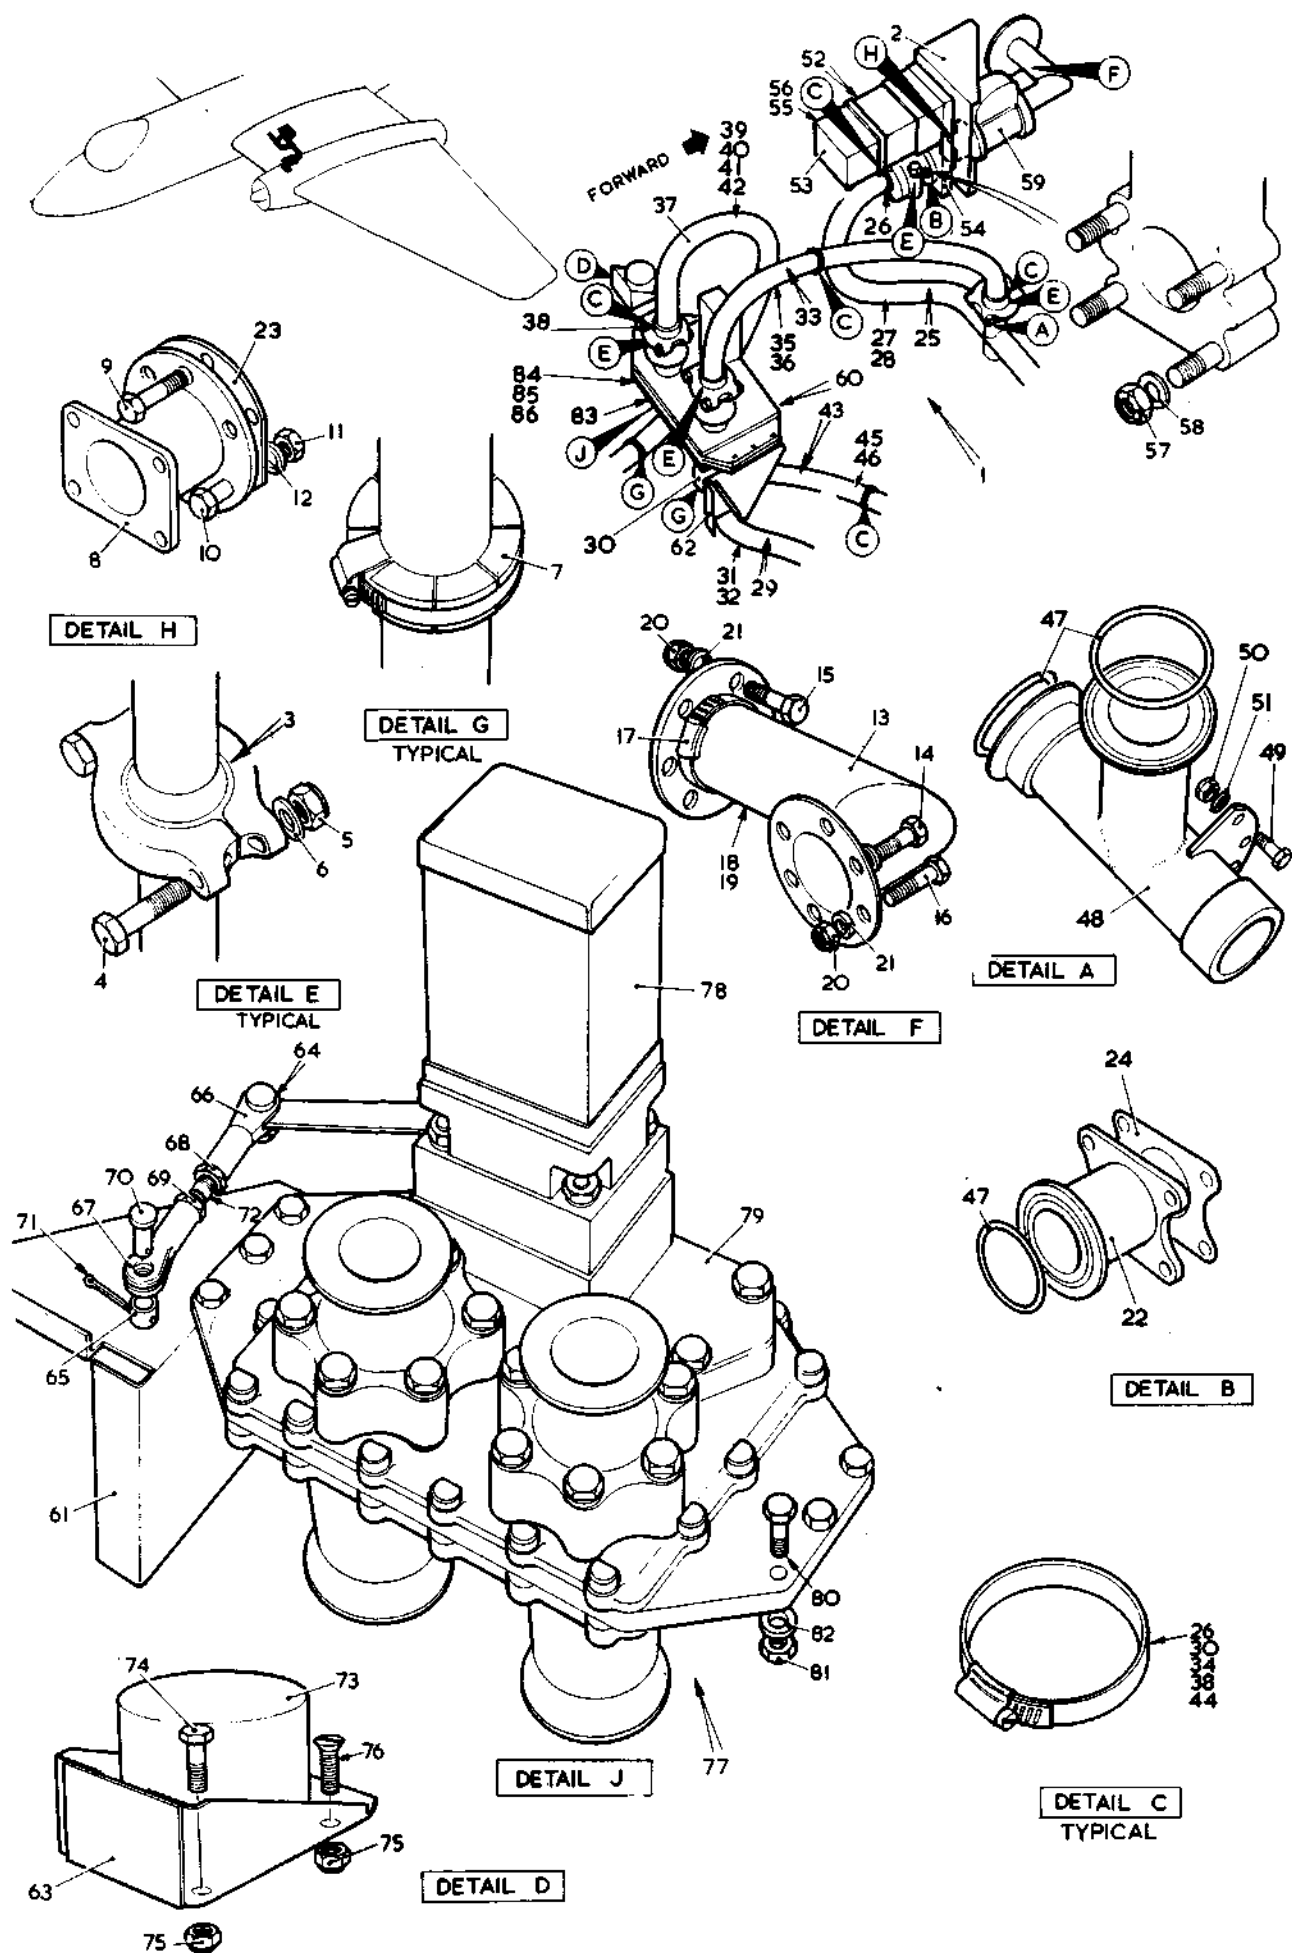


FIG. 10 CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EB6.75.649	. . .	ROD, ADJUSTING, MIXING VALVE AND DESYNN TRANSMITTER, GROUP Consisting of:—	1	—	SB10/64
AGS899/2		COLLAR	2	—	SB10/65
EB6.75.653		FORK, R.H.	1	—	SB10/66
EB6.75.655		FORK, L.H.	1	—	SB10/67
A27CT		NUT, 2BA	1	—	SB10/68
A27CTL		NUT, 2BA	1	—	SB10/69
SP4Y/B4		PIN, shackle	2	—	SB10/70
SP90C7		PIN, split	2	—	SB10/71
EB6.75.651		ROD, screwed, 2BA	1	—	SB10/72
132FL	. . .	TRANSMITTER, Desynn Attaching parts for 132FL:—	1	—	SB10/73
A25/1C	. . .	Bolt, 2BA	2	—	SB10/74
AGS2001C1/66	. . .	Nut, stiff, 2BA	4	—	SB10/75
EEAS1/1C	. . .	Screw, 2BA	2	S96	SB10/76
EB7.75.103	. . .	VALVE, DOUBLE, HOT AIR AND ACTUATOR, ASSEMBLY Consisting of:—	1	—	SB10/77
E. E. CO. LTD. BRADFORD TYPE 233 TEDDINGTON FKH/A15		ACTUATOR	1	—	SB10/78
		VALVE Attaching parts for EB7.75.103:—	1	—	SB10/79
A25/4C	. . .	Bolt, 2BA	6	—	SB10/80
AGS2001C1/66	. . .	Nut, stiff, 2BA	6	—	SB10/81
SP15C	. . .	Washer	6	—	SB10/82
		Attachments for Valve, EB6.75.243:—			
EB6.75.299A	. . .	Lagging	1	—	SB10/83
EB6.75.301A	. . .	Lagging	1	—	SB10/84
EB6.75.635A	. . .	Lagging	1	—	SB10/85
EB6.75.637A	. . .	Lagging	1	—	SB10/86

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

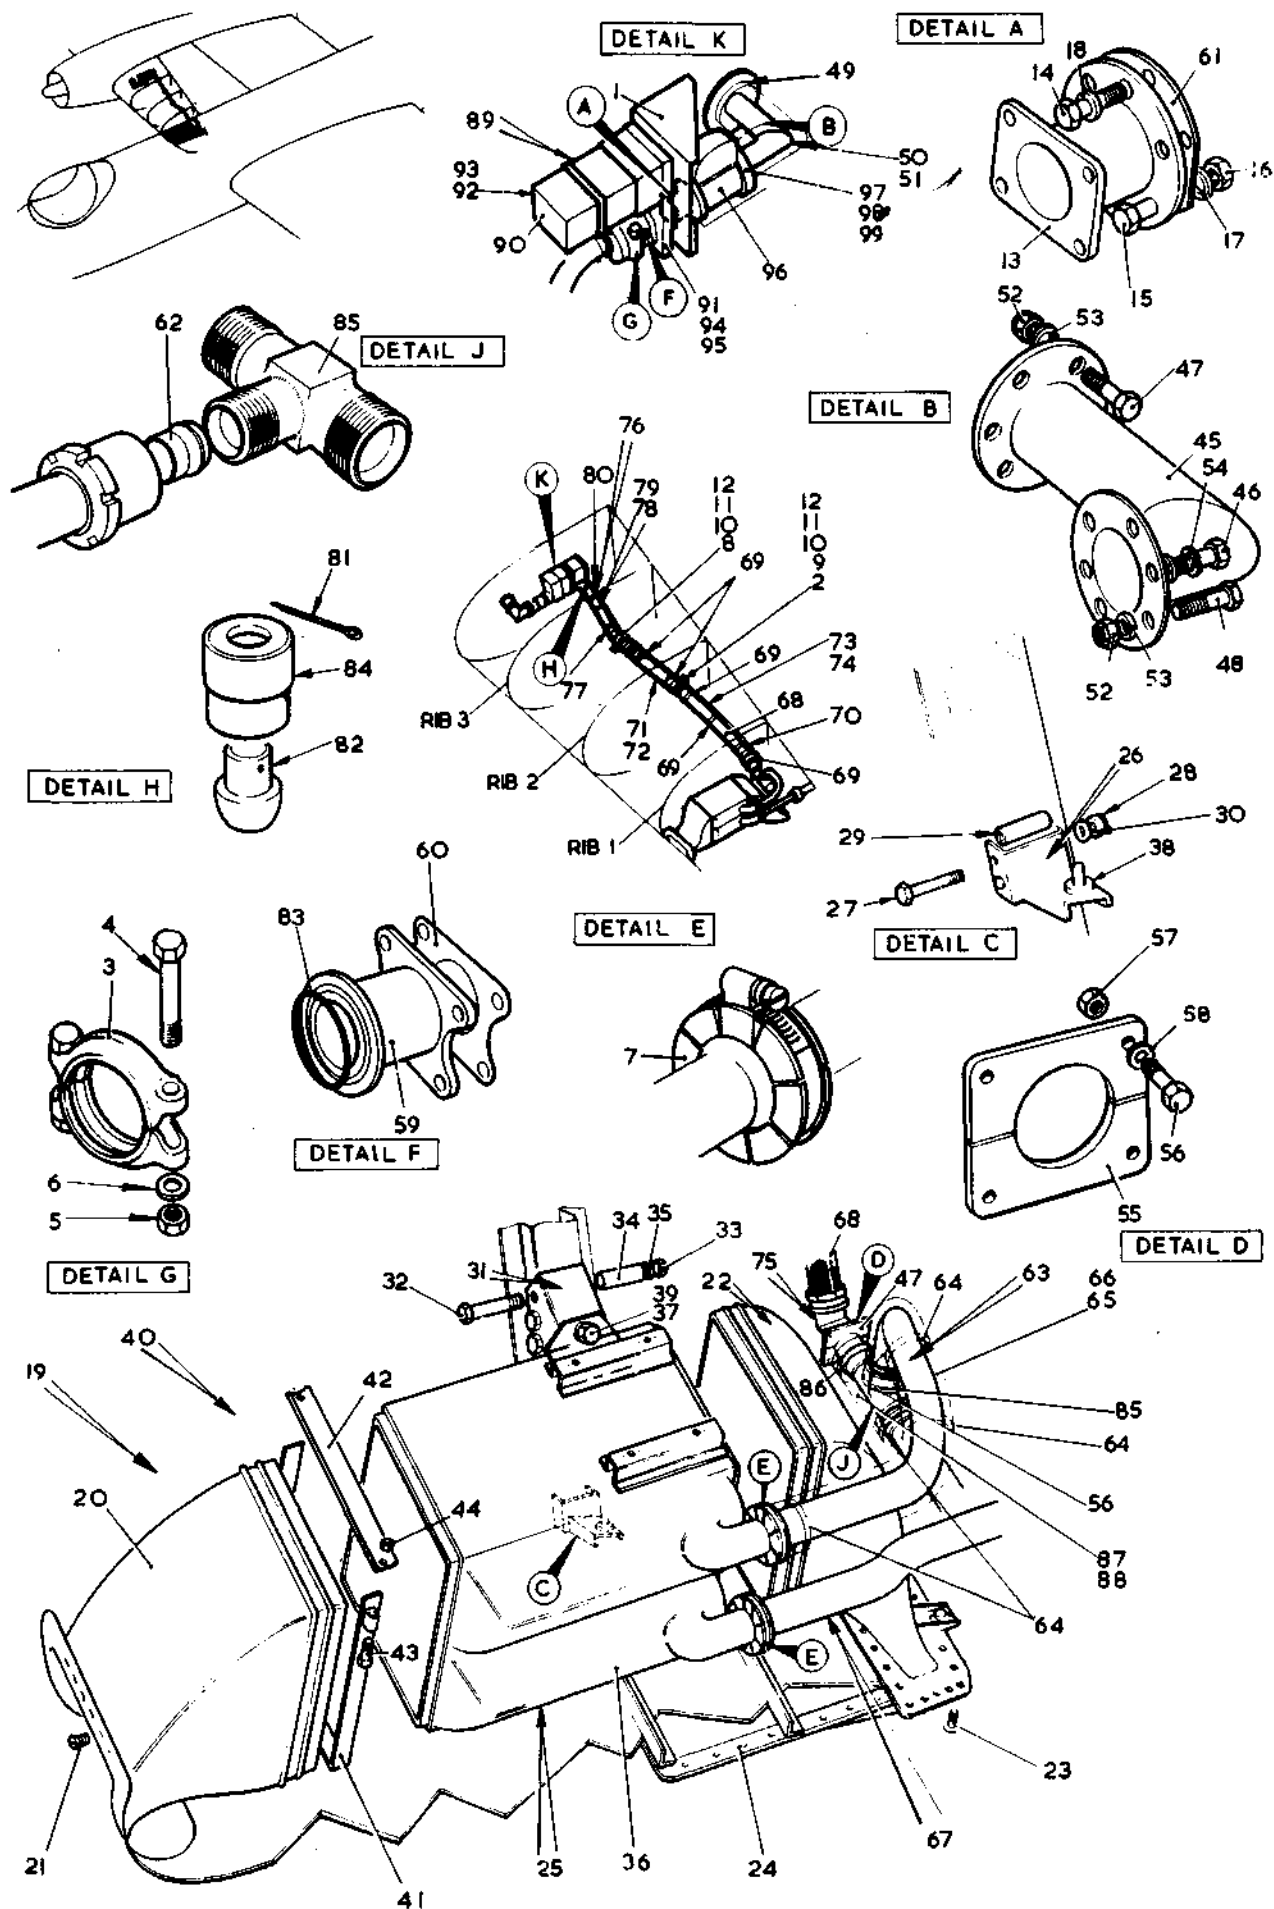


FIG. 11. CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

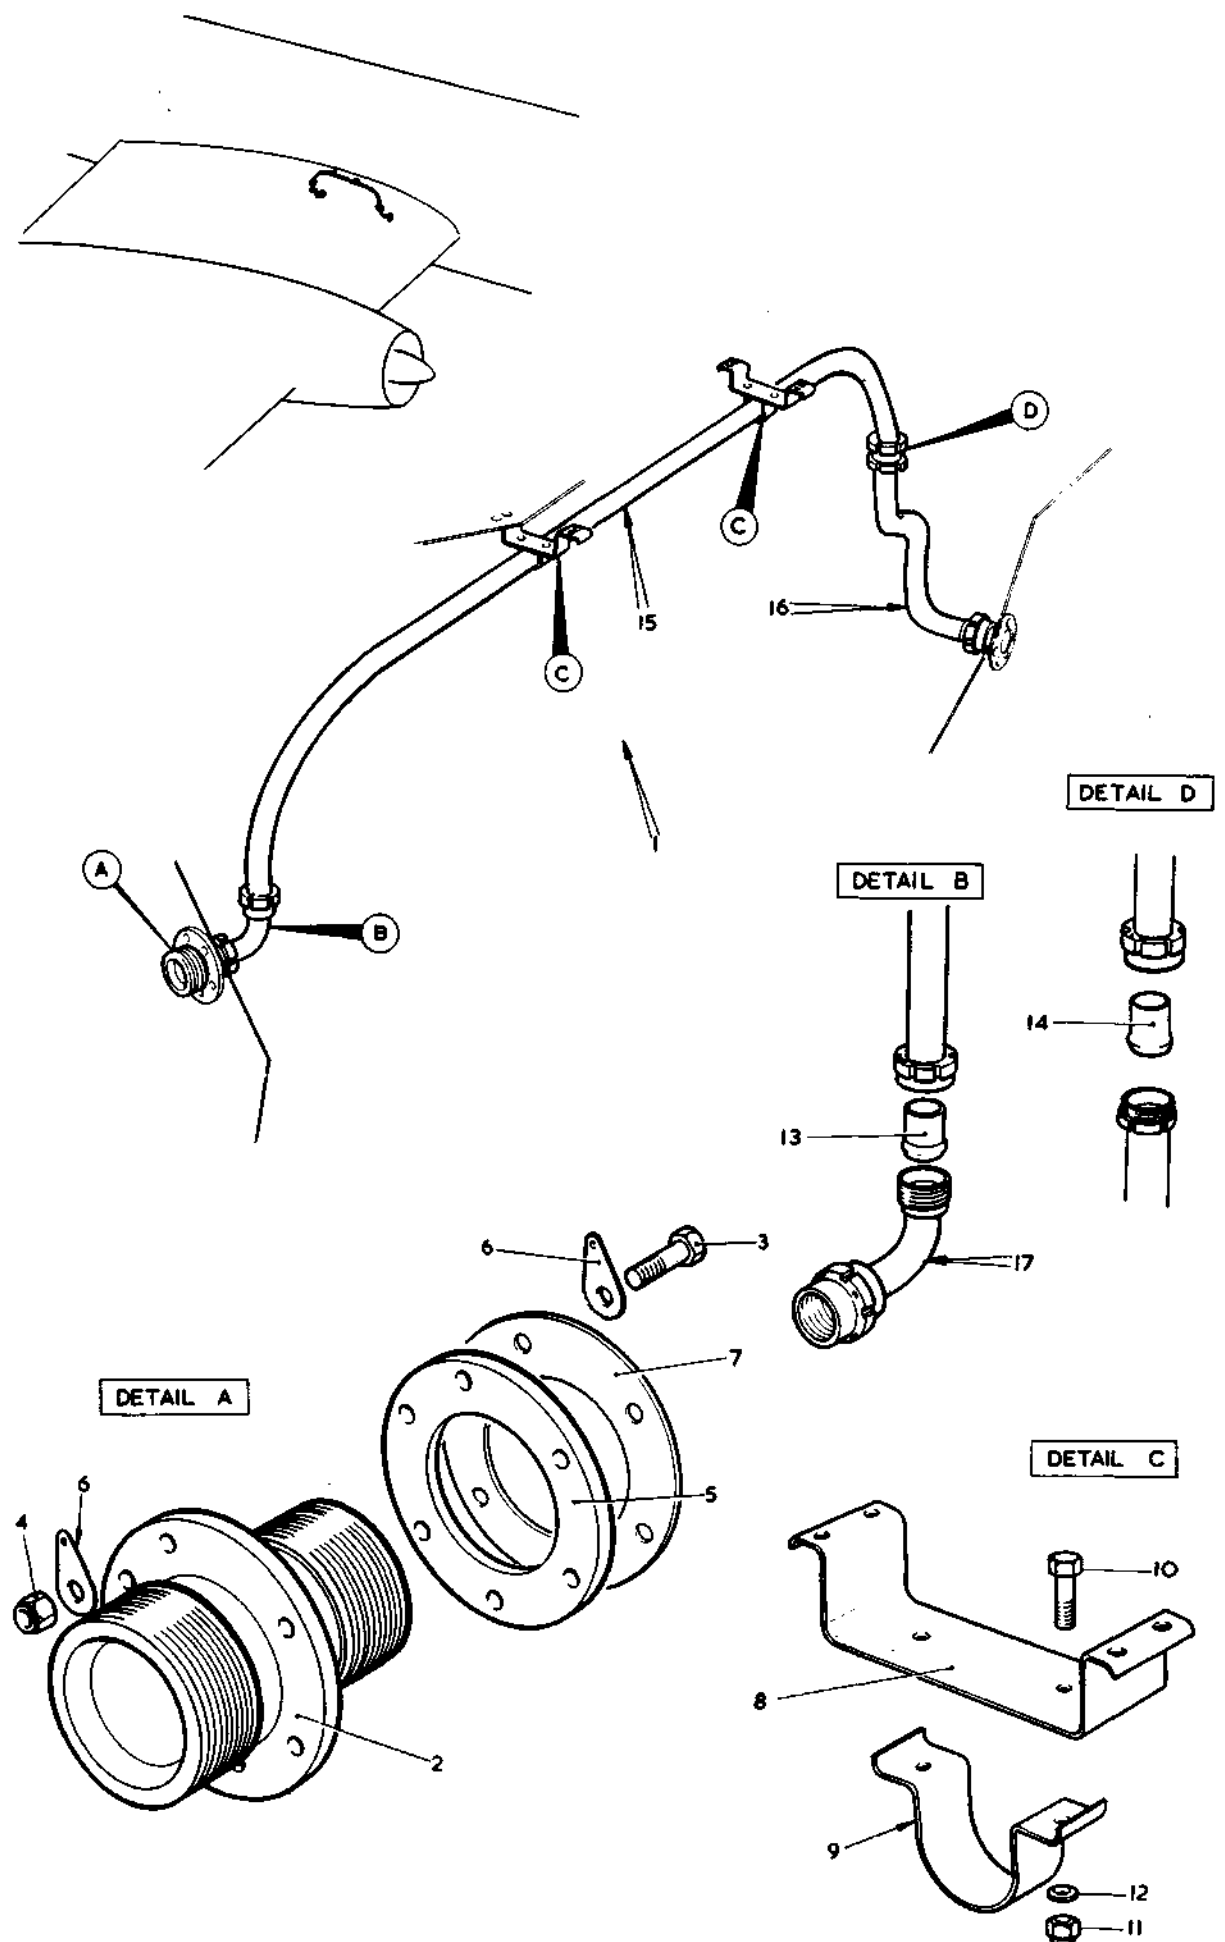


FIG. 12. PIPE RUN IN WHEEL BAY ASSEMBLY

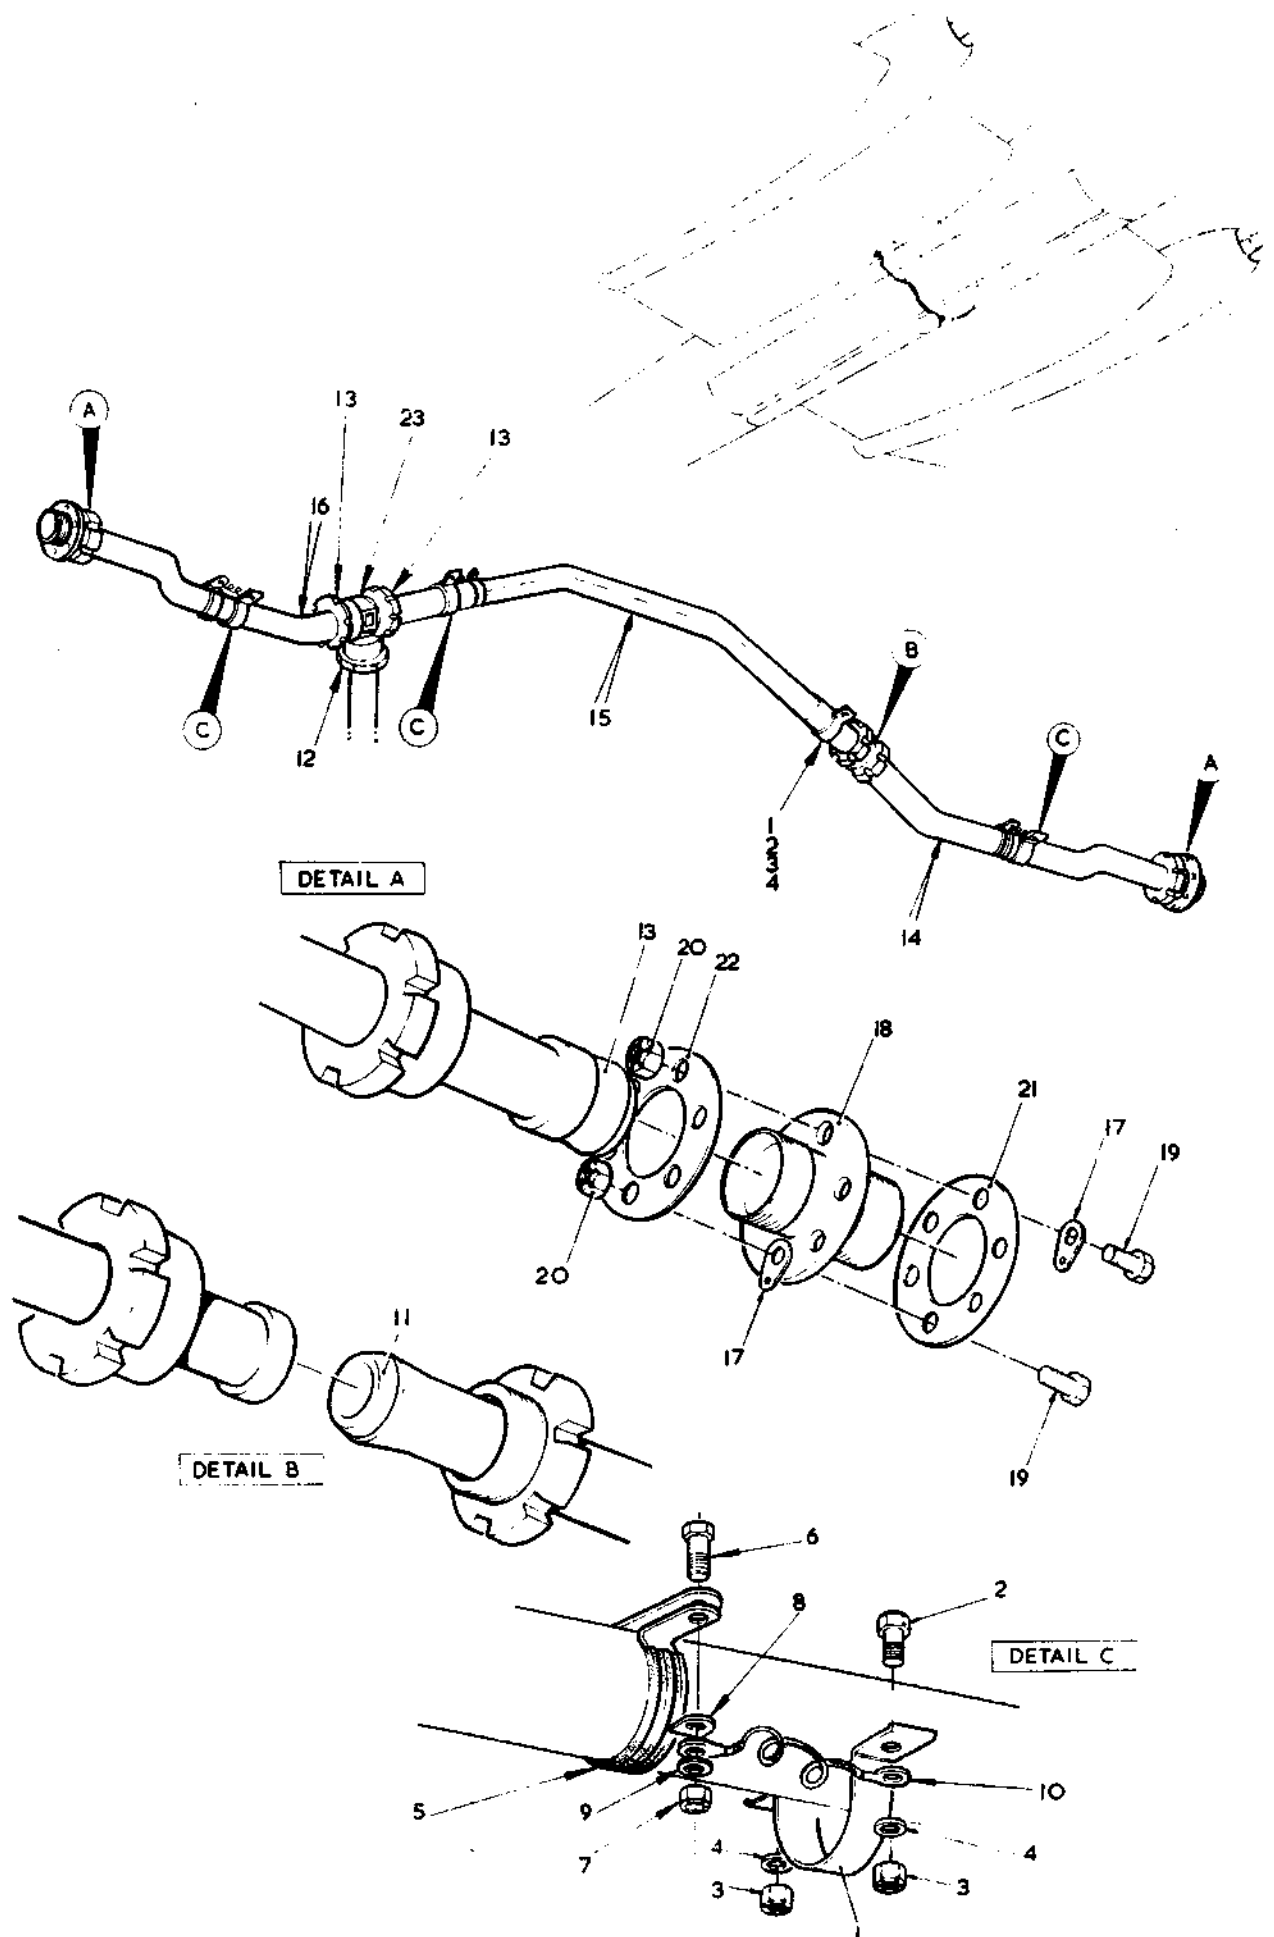


FIG. 13 CAU SYSTEM IN BOMB BAY ASSEMBLY

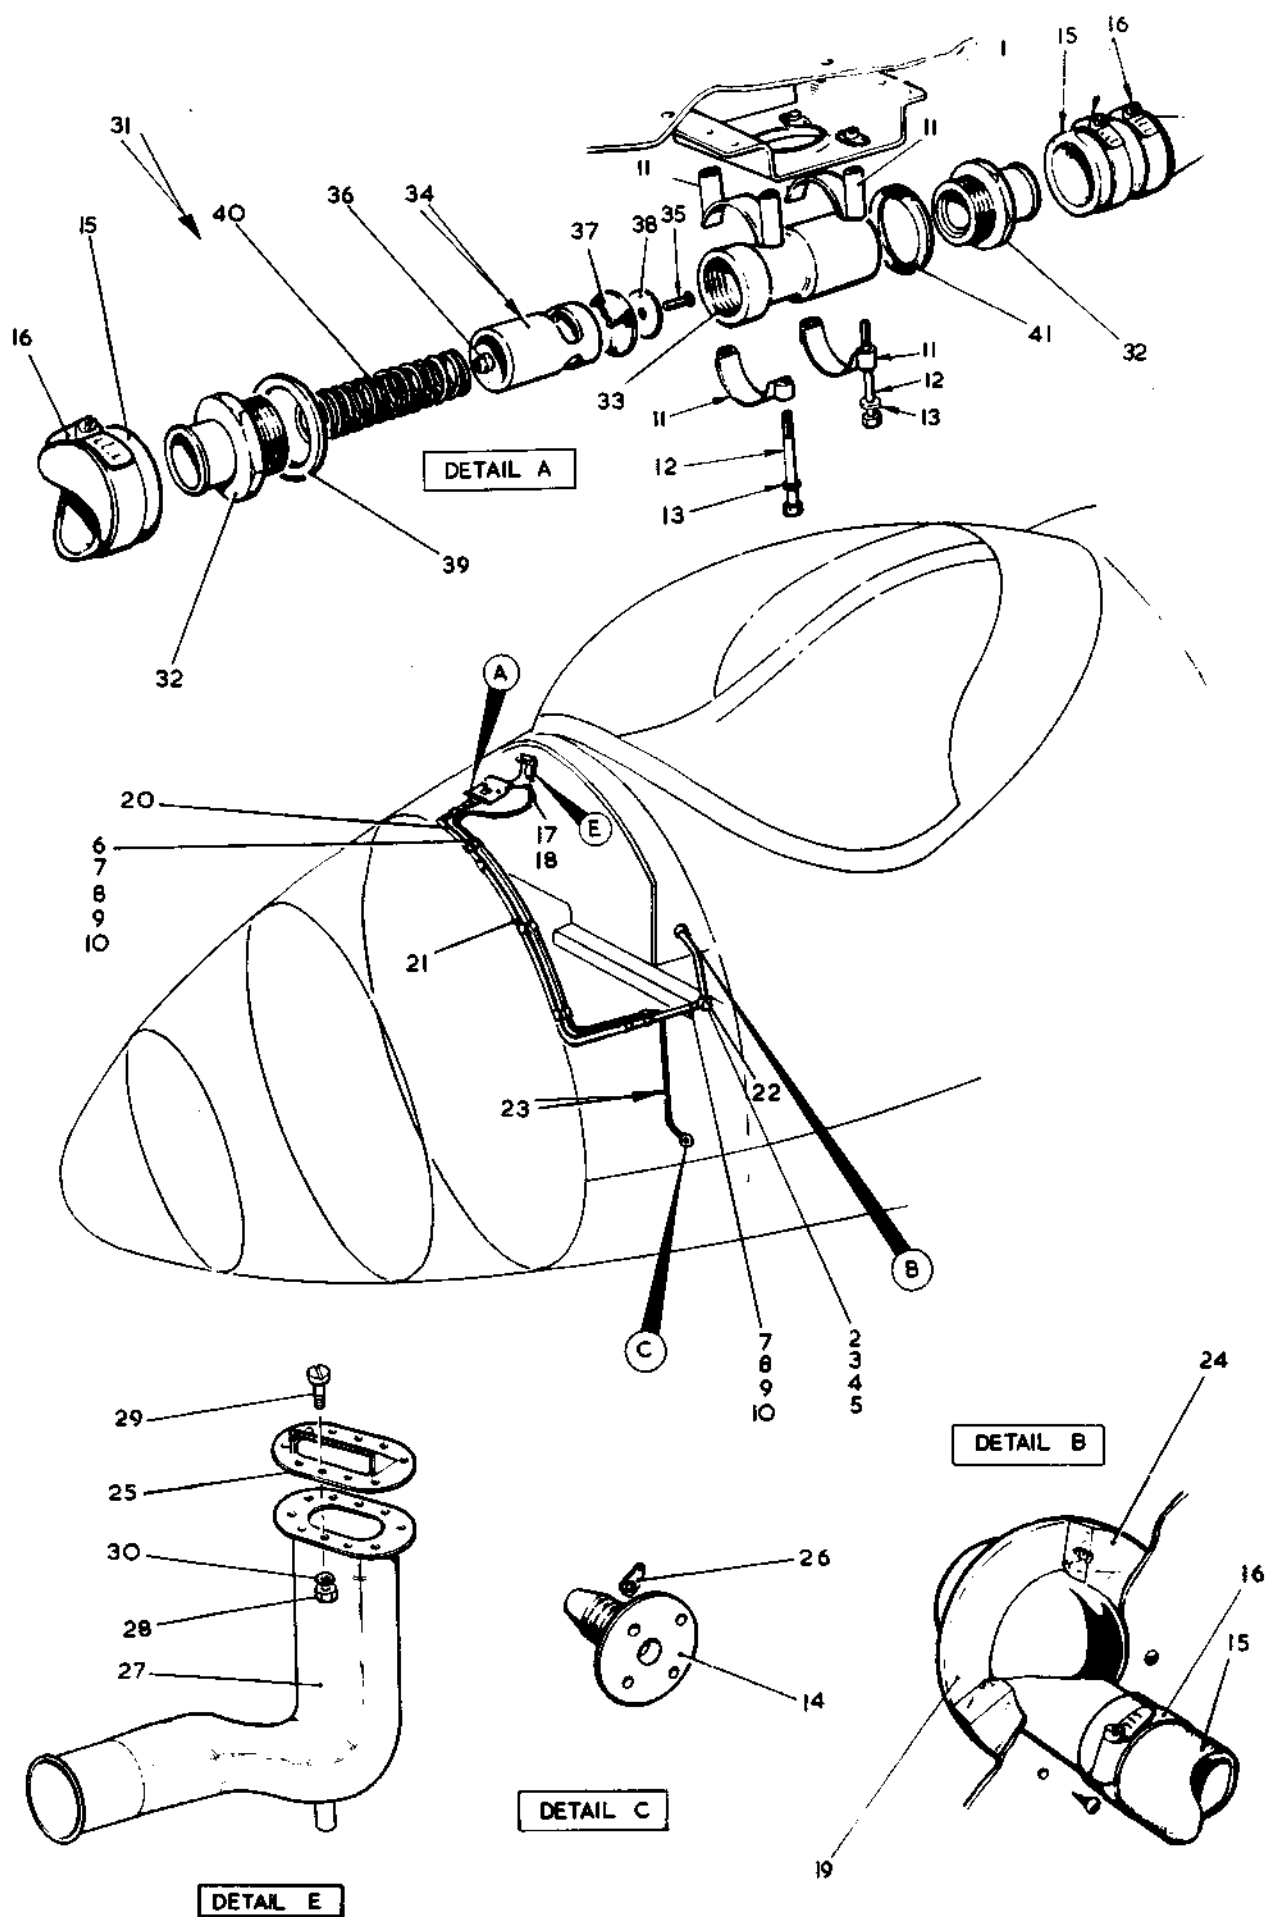


FIG. 14. COLD AIR SUPPLY TO PILOT

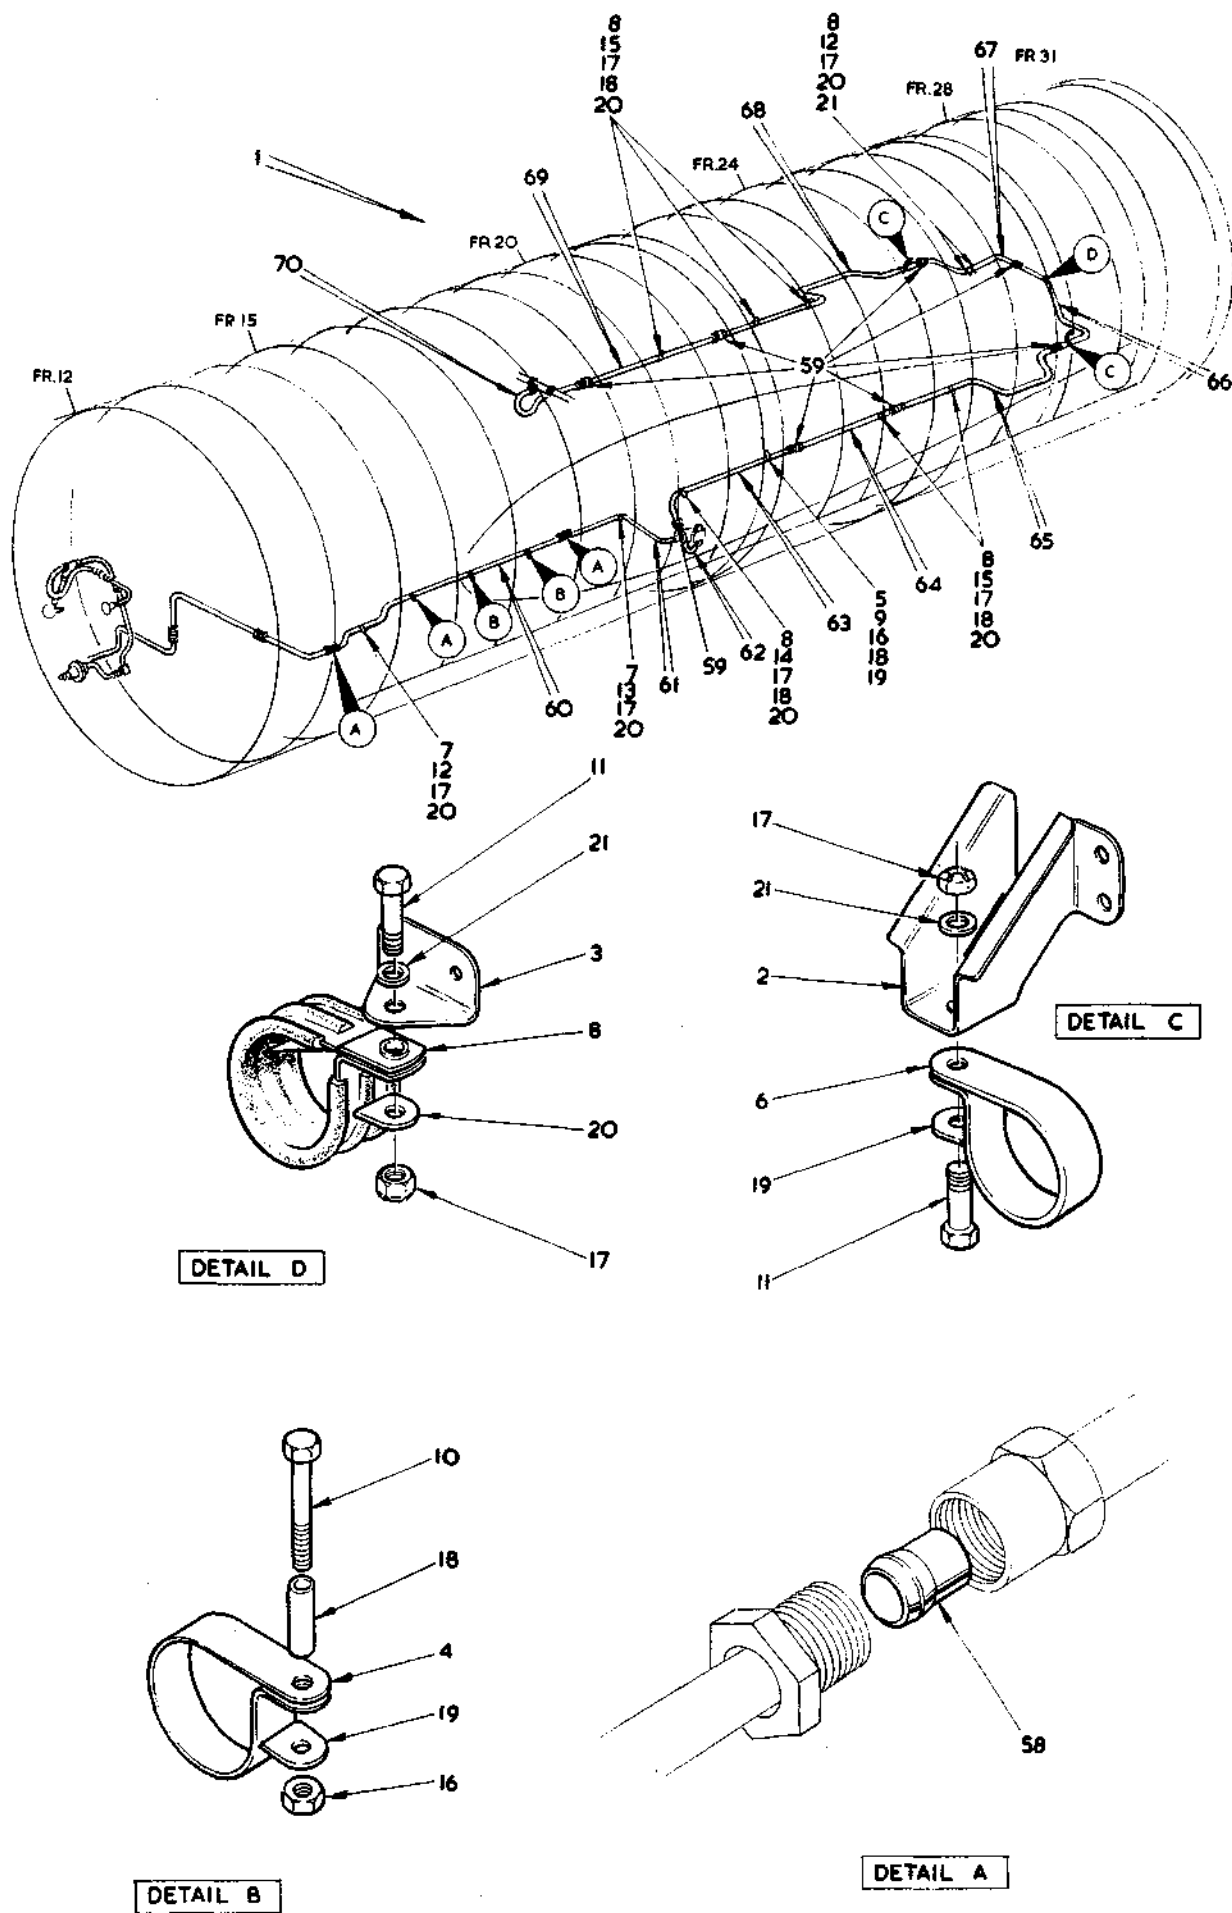


FIG.16A AIR VENTILATED SUIT SYSTEM CENTRE FUSELAGE

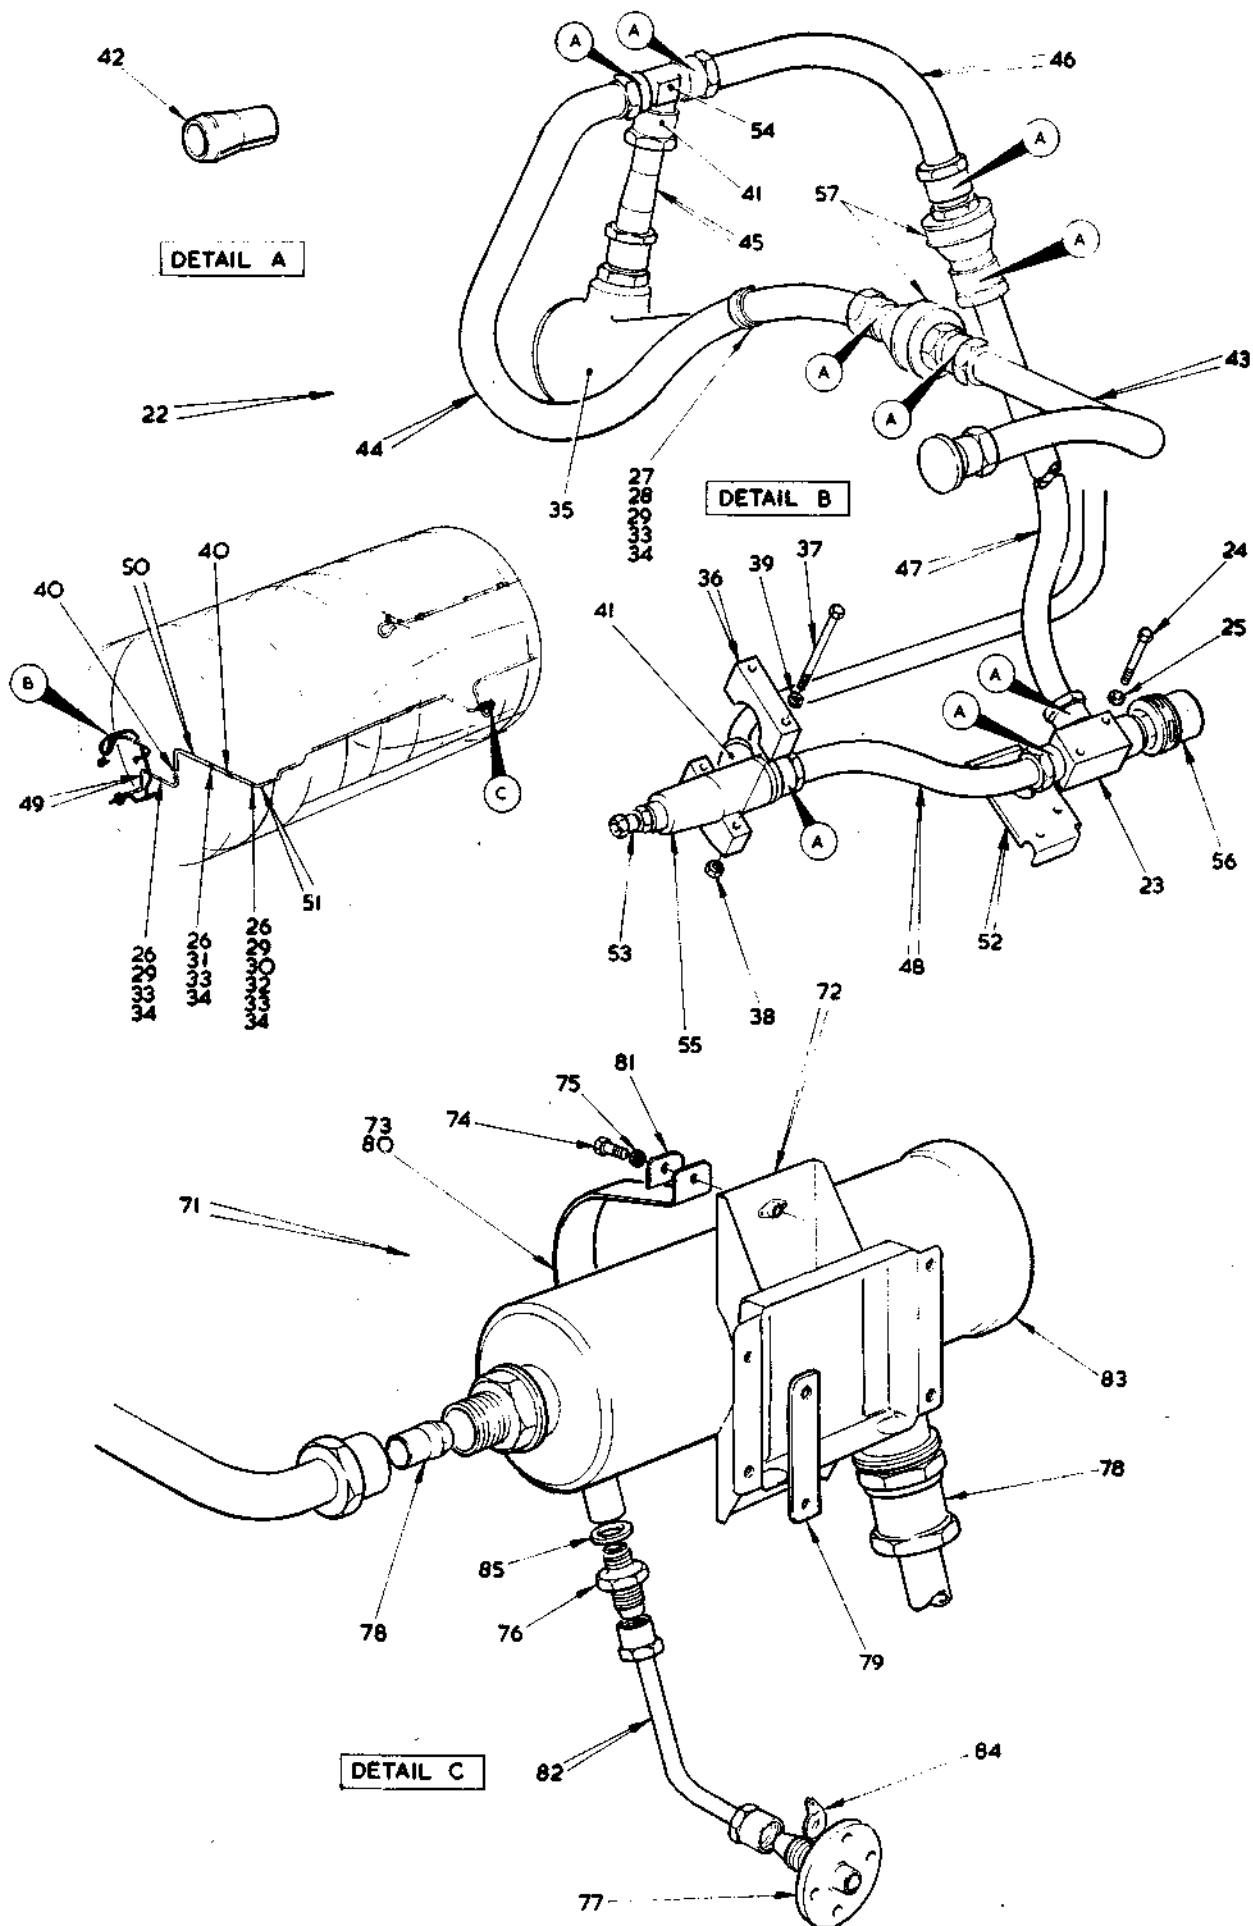


FIG.16B AIR VENTILATED SUIT SYSTEM CENTRE FUSELAGE