

EQUIPMENT IN INNER WING, LEADING EDGE, PORT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
	EB6.00.363	EQUIPMENT, IN INNER WING, LEADING EDGE, PORT	—	—	—	
	EB6.20.959	Spares for:— AIR INTAKE, FOR ZONE 2 COOLING IN INNER WING LEADING EDGE, PORT (See Chapter PC)	—	—	—	
	EB6.61.1	BOX, GEAR, ASSEMBLY	1	—	A	
399	EA1.50.595	Spares for:— ADAPTOR, for hydraulic pump drain pipe	1	DTD126	C	SE1/1
28F/1202394	AGS1138A	Attaching parts for EA1.50.595:— Washer	1	—	C	SE1/1A
37L/4521647	ROTOL LTD. PTG3/25	BOX, gear and adaptor	1	—	A	SE1/2
28W/9416646	EB7.61.115A SP47J	Attaching parts for PTG3/25:— Nut, special (Make from 28M/1011473)	4	—	LM	SE1/3
14707	EA9.61.67	Washer	4	—	C	SE1/3A
28D/1010658	A25.1B	BRACKET, support	1	—	C	SE1/3B
28M/1278189	AGS2001B1	Attaching parts for EA9.61.67:— Bolt, 4BA	1	—	C	SE1/3C
28W/9419474	SP15B	Nut, stiff, 4BA	1	—	C	SE1/3D
28E/9488798	AS3181/6B	Washer	1	—	C	SE1/3E
28D/1010658	A25.1B	CLIP	1	—	C	SE1/3F
28M/1278189	AGS2001B1	Attaching parts for AS3181/6B:— Bolt, 4BA	1	—	C	SE1/3G
28W/9419474	SP15B	Nut, stiff, 4BA	1	—	C	SE1/3H
28E/4710971	SP91N	Washer	1	—	C	SE1/3J
28E/8211233	SP144/028	CLIP, jubilee	4	—	C	SE1/4
5K/4329594	AS1901B	CLIP, jubilee	1	—	C	SE1/4A
28D/1010658	A25.1B	CLIP, pipe, double, for drain pipes	2	L72	C	SE1/5
28M/1278189	AGS2001B1	Attaching parts for AS1901B:— Bolt, 4BA	1	—	C	SE1/6
28W/9419474	SP15B	Nut, stiff, 4BA	1	—	C	SE1/6A
13177	EA9.61.63	Washer	1	—	C	SE1/6B
13198	EA9.61.27	CONNECTION, induction pipe outlet elbow, to generator	1	—	C	SE1/7
1025	EEAS1/1C	DUCT, air, leading edge entry	1	—	—	SE1/8
12376	EA9.61.32	Attaching parts for EA9.61.27:— Screw, special, 2BA	15	S96	C	SE1/9
1025	EEAS1/1C	DUCT, air generator exhaust	1	—	C	SE1/10
5UA/4957530	E.E. CO. LTD.	Attaching parts for EA9.61.32:— Screw, special, 2BA	8	S96	C	SE1/11
28F/1013599	AGS1142A	GENERATOR, type 519	1	—	A	SE1/12
28F/9486111	AGS1142H	NIPPLE, adaptor	1	—	C	
28F/1036552	AGS2120H	NIPPLE, adaptor	1	—	C	
13178	EA9.61.35	NIPPLE	2	—	C	
13196	EA9.61.37	PIPE, assembly, engine induction air outlet, continuation through rib 3	1	T26	C	SE1/13
409	EA1.61.41	PIPE, assembly, engine induction air outlet from connection at engine rib	1	T26	C	SE1/14
13200	EA9.61.65	PIPE, assembly, hydraulic pump drain	1	L56	C	SE1/15
37L/357	ROTOL LTD. GD9/49	PIPE, assembly, gear box drain	1	—	C	SE1/16
12373	EA9.61.41	SHAFT, drive	1	—	B	SE1/17
12374	EA9.61.43	SLEEVE, connecting, air inlet	1	Silastic	C	SE1/18
28F/9996122	AGS1112H	SLEEVE, connecting, air exhaust	1	Asbestos Silastic Asbestos	C	SE1/19
28D/9133011	A25/2C	UNION, body flanged bulkhead	1	—	C	SE1/20
28M/1012015	AGS2001C1/66	Attaching parts for AGS1112H:— Bolt, 2BA	3	—	C	SE1/20A
28W/9419475	SP15C	Nut, stiff, 2 BA	3	—	C	SE1/20B
		Washer	3	—	C	SE1/20C

SERVICES

EQUIPMENT IN INNER WING, LEADING EDGE, PORT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip	Plate No.
					M.R. L.M.	
	EB6.75.825	. CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING (See Section SB)	—	—	—	
	EB6.47.293	. CONTROLS, ENGINE, IN PORT WING (See Section CC)	—	—	—	
	EB6.57.71	. FUEL DELIVERY SYSTEM IN PORT WING (See Section SG)	—	—	—	
	EB6.73.395	. HYDRAULICS IN PORT WING INNER LEADING EDGE (See Section SH)	—	—	—	

EQUIPMENT IN INNER WING LEADING EDGE, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.
	EG4.00.513	EQUIPMENT IN INNER WING LEADING EDGE, STARBOARD (MOD 4799)	--	--	--	
	EB6.20.960	Spares for:— AIR INTAKE FOR ZONE 2 COOLING IN INNER WING LEADING EDGE, STARBOARD (See Chapter PD)	—	—	—	
	EB6.61.2	BOX, GEAR, ASSEMBLY Spares for:—	1	—	A	
399	EA1.50.595	ADAPTOR, for hydraulic pump drain pipe Attaching parts for EA1.50.595:—	1	DTD126	C	SE1/21
28F/1202394	AGS1138A	Washer	1	—	C	SE1/21A
37L/4521648	ROTOL LTD. PTG3/26	BOX, gear and adaptor Attaching parts for PTG3/26:—	1	—	A	SE1/22
28W/9416646	EB7.61.115A SP47J	Nut, special (Make from 28M/1011473) Washer	4 4	— —	LM C	SE1/23 SE1/23A
14707	EA9.61.67	BRACKET, support Attaching parts for EA9.61.67:—	1	—	C	SE1/23B
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	SE1/23C
28M/1278189	AGS2001B1	Nut, stiff, 4BA	1	—	C	SE1/23D
28W/9419474	SP15B	Washer	1	—	C	SE1/23E
28E/9488798	AS3181/6B	CLIP Attaching parts for AS3181/6B:—	1	—	C	SE1/23F
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	SE1/23G
28M/1278189	AGS2001B1	Nut, stiff, 4BA	1	—	C	SE1/23H
28W/9419474	SP15B	Washer	1	—	C	SE1/23J
28E/4710971	SP91N	CLIP, jubilee	4	—	C	SE1/24
28E/8211233	SP144-028	CLIP, jubilee	1	—	C	SE1/24A
5K/4329594	AS1901B	CLIP, pipe, double, for drain pipes Attaching parts for AS1901B:—	2	L72	C	SE1/25
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	SE1/26
28M/1278189	AGS2001B1	Nut, 4BA	1	—	C	SE1/26A
28W/9419474	SP15B	Washer	1	—	C	SE1/26B
13197	EA9.61.64	CONNECTION, induction pipe outlet elbow to generator	1	—	C	SE1/27
13199	EA9.61.28	DUCT, air, leading edge entry Attaching parts for EA9.61.28:—	1	—	B	SE1/28
28M/1012015	AGS2001C1-66	Nut, stiff, 2BA	4	—	C	SE1/28A
1025	EEAS1/1C	Screw, 2BA	11	S96	C	SE1/29
1026	EEAS1/1½C	Screw, 2BA	3	S96	C	SE1/29A
1468	EEAS1/2C	Screw, 2BA	1	S96	C	SE1/29B
28W/9419475	SP15C	Washer	4	—	C	SE1/29C
12376	EA9.61.32	DUCT, air, generator exhaust Attaching parts for EA9.61.32:—	1	—	C	SE1/30
1025	EEAS1/1C	Screw, 2BA	8	S96	C	SE1/31
5UA/4357530	E.E. CO. LTD.	GENERATOR, type 519	1	—	A	SE1/32
28F/1013599	AGS1142A	NIPPLE, adaptor	1	—	C	
28F/9486111	AGS1142H	NIPPLE, adaptor	1	—	C	
28F/1036552	AGS2120H	NIPPLE	2	—	C	
13187	EA9.61.36	PIPE, assembly, engine induction air outlet continuation through rib 3	1	T26	C	SE1/33
13188	EA9.61.38	PIPE, assembly, engine induction air outlet from connection at engine rib	1	T26	C	SE1/34
410	EA1.61.42	PIPE, assembly, hydraulic pump drain	1	L56	C	SE1/35
13200	EA9.61.65	PIPE, assembly, gear box drain	1	—	C	SE1/36
37L/356	ROTOL LTD. GD9/50	SHAFT, drive	1	IC	B	SE1/37
12373	EA9.61.41	SLEEVE, connecting air inlet	1	Silastic Asbestos	C	SE1/38
12374	EA9.61.43	SLEEVE, connecting air exhaust	1	Silastic Asbestos	C	SE1/39

SERVICES

EQUIPMENT IN INNER WING LEADING EDGE, STARBOARD

Ref. No.	Part No.	Description	No. off						Matl. Spec.	Cl. of Equip M.R. L.M.	Plate No.	
			1	2	3	4	5	6				
28F/9996122	AGS1112H	UNION, body, flanged bulkhead Attaching parts for AGS1112H:—							1	—	C	SE1/40
28D/9133011	A25/2C	Bolt, 2BA							3	—	C	SE1/40A
28M/1012015	AGS2001C1-66	Nut, stiff, 2BA							3	—	C	SE1/40B
28W/9419475	SP15C	Washer							3	—	C	SE1/40C
	EB6.75.781	CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING (See Section SB)							—	—	—	
	EG4.83.317	CAMERA G90, INSTALLATION (MOD 4799) (See Section SC)							—	—	—	
	EB6.47.295	CONTROLS, ENGINE IN STARBOARD WING (See Section CD)							—	—	—	
	EB6.57.151	FUEL, DELIVERY SYSTEM I/W STARBOARD LEADING EDGE (See Section SG)							—	—	—	
	EB6.73.397	HYDRAULICS IN STARBOARD WING LEADING EDGE (See Section SH)							—	—	—	

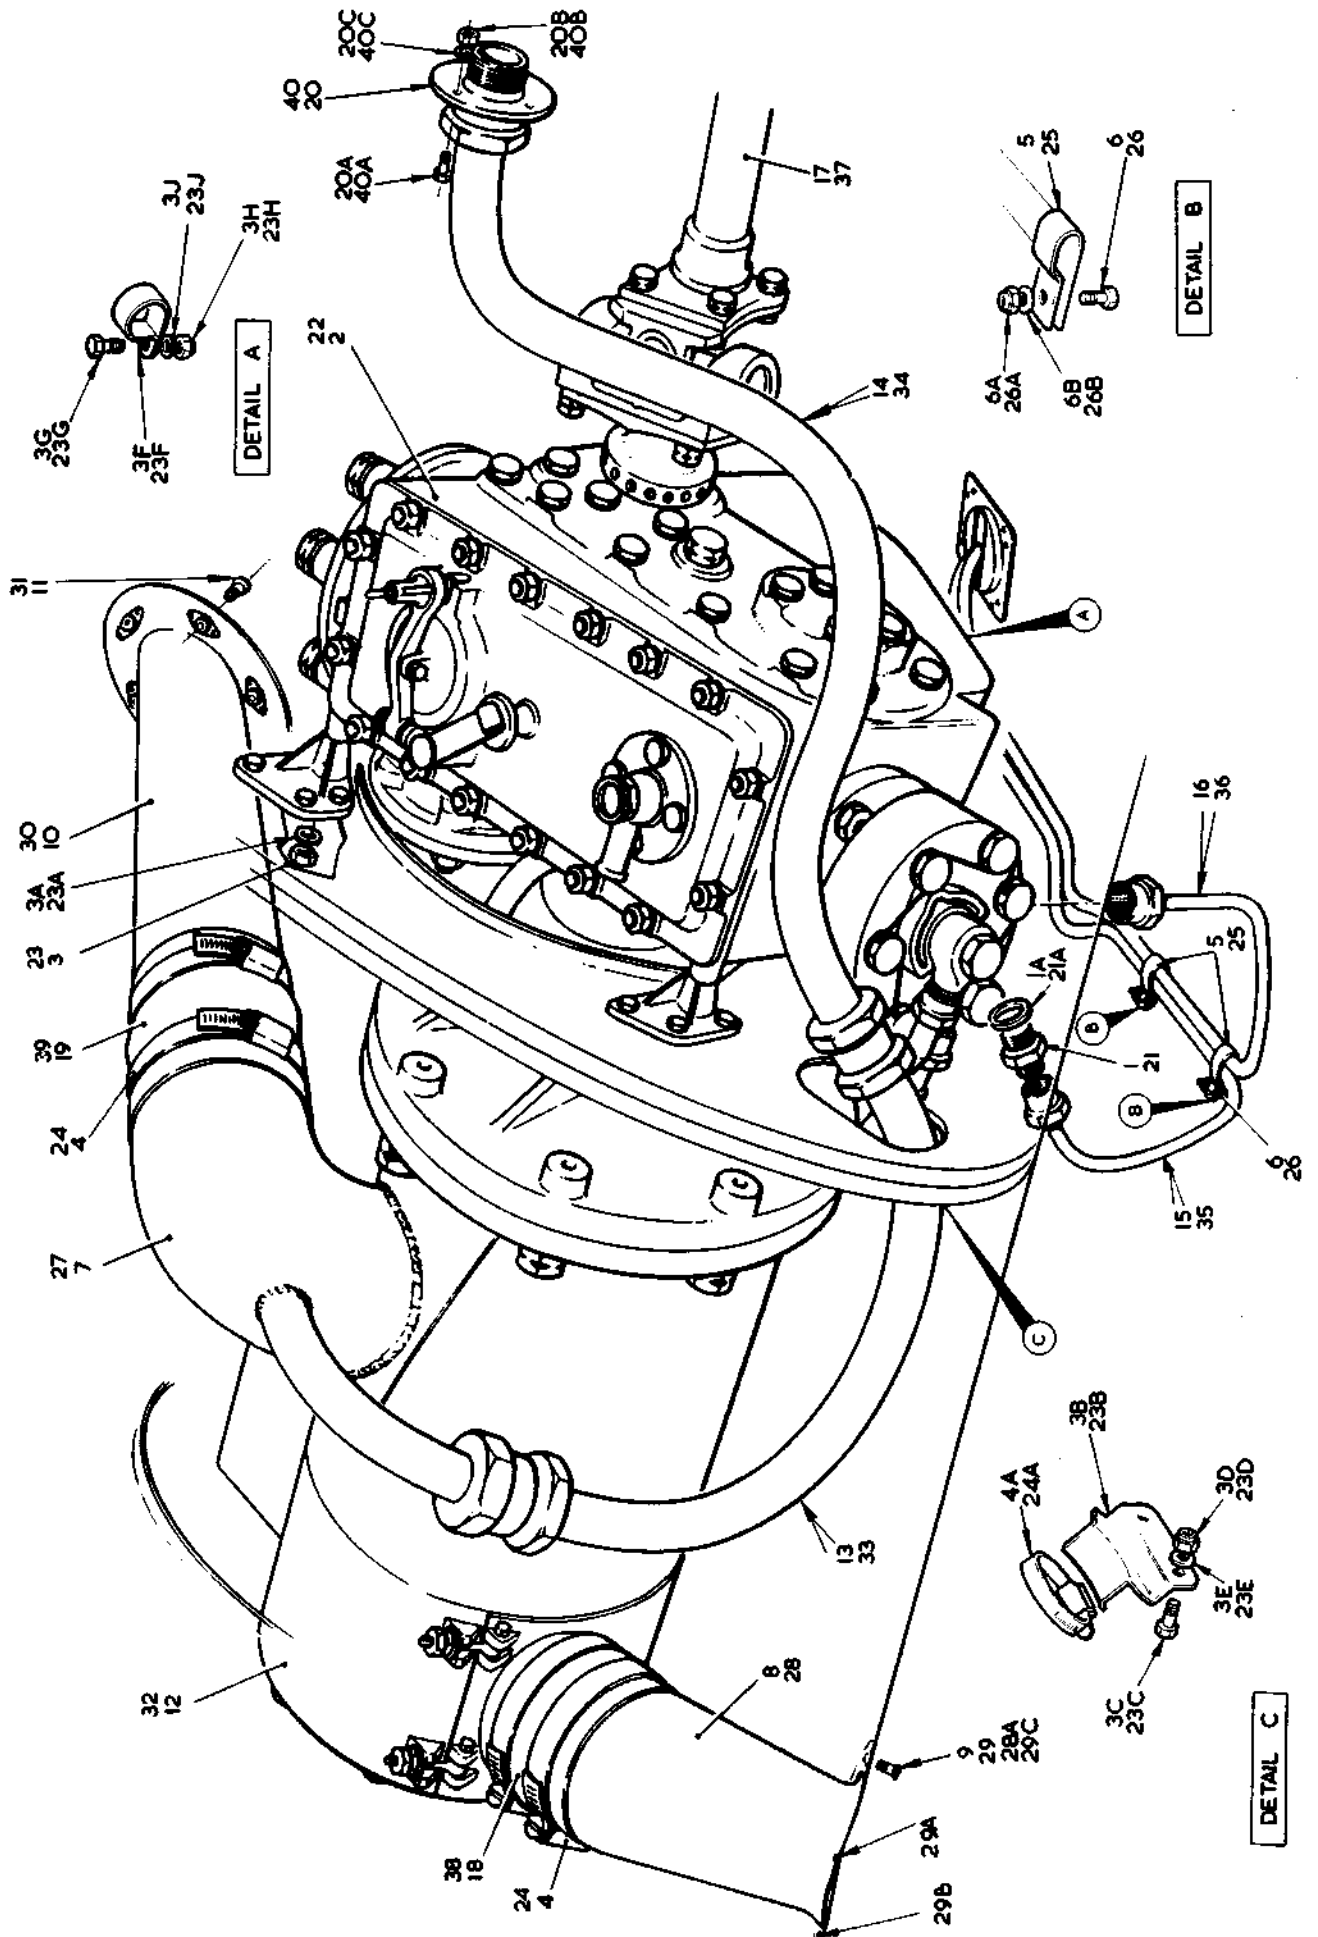


FIG. 1 GEARBOX ASSEMBLY MAINPLANE PORT & STB.D

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

