

TANKS
VENTRAL TANK

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.56.453	TANK, VENTRAL, FUEL, CENTRE FUSELAGE, AFT POSITION INSTALLATION (MOD 432-S.O.O.) Spares for:—	—	—	
EA3.56.221	. TANK, FUEL, 300 GALLON, INSTALLATION Spares for:—	—	—	UB1/1
EA3.56.261	. . BRACKET AND STRAP, ASSEMBLY Spares for:—	4	—	UB1/2
EA3.56.361	. . . BRACKET, sub-assembly	1	—	UB1/3
EA3.56.363	. . . STRAP, tank Attaching parts for EA3.56.361 & EA3.56.363:—	1	—	UB1/4
A25/47N	. . . Bolt, 1/2" BSF (Make from A25/48N)	1	—	UB1/5
EA3.56.465	. . . Bush	2	—	UB1/6
EA3.56.467	. . . Link-plate	2	—	UB1/7
A27NS	. . . Nut, slotted, 1/2" BSF	1	—	UB1/8
EA3.56.463	. . . Tube, distance	1	—	UB1/9
SP13N	. . . Washer	2	—	UB1/10
	Attaching parts for EA3.56.261:—			
A25/38 1/2 J	. . Bolt, 3/8" BSF (Make from A25/39J)	1	—	UB1/11
A25/38 1/2 L	. . Bolt, 1/16" BSF (Make from A25/39L)	1	—	UB1/12
A27JS	. . Nut, slotted, 3/8" BSF	1	—	UB1/13
A27LS	. . Nut, slotted, 1/16" BSF	1	—	UB1/14
SP90C7	. . Pin, split	1	—	UB1/15A
SP90E8	. . Pin, split	2	—	UB1/16A
SP13J	. . Washer	2	—	UB1/15
SP13L	. . Washer	2	—	UB1/16
AGS1661/E or AS4525/16 AGS605/1 EEAS164/16/25	. . CLIP, bonding . . CLIP, hose . . HOSE, rubber, 1" i/d x 2.5" long, vent pipe . . MESH, brass gauge, 40 x 30 SWG, cadmium plated	4 4 2 QR	— — DTD625 —	UB2/26 UB2/1A UB2/1 UB2/27
EA3.56.245	. . PIPE, assembly, fuel, from non-return to fuel cock, starboard side	1	L54 or L56	UB2/2
EA3.56.247	. . PIPE, assembly, fuel, from non-return valve to fuel cock, port side	1	L54 or L56	UB2/3
EA3.56.249	. . PIPE, assembly, venting, from pipe elbow joint to No. 3 fuel tank junction pipe	1	L56	UB2/4
EA3.56.251	. . PIPE, elbow, venting, 1" o/d x 20 SWG	1	L56	UB2/5
EEAS66/3	. . RING, clamping	4	L56	UB2/6
EA3.56.45	. . SCREW, trunnion	2	S95	UB1/17
—	. . STRIP, bonding, 1/4" wide x 22 SWG	QR	Copper	UB2/28
EA3.56.243	. . TANK, ASSEMBLY Spares for:—	1	—	UB2/7
EA3.81.2689/2	. . . CABLE, ASSEMBLY, CS.3 from aft fuel pump to suppressor	1	—	UB2/8
EA3.81.2691/2	. . . CABLE, ASSEMBLY, CS.4, from forward fuel pump to suppressor	1	—	UB2/9
EA3.81.2527/2	. . . CABLE ASSEMBLY, CS.2A, from suppressor to plug bracket	1	—	UB2/10

TANKS
VENTRAL TANK

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
AS2398	. . .	CAP, filler assembly	1	—	UB1/18
AGS2001/C/1/66	. . .	Attaching parts for AS2398:—	12	—	UB1/19
EA3.56.291	. . .	Nut, stiff, 2 BA	1	—	UB1/20
SP15/C	. . .	Ring, sealing	12	—	UB1/21
EA3.56.119	. . .	Washer, 2 BA	1	—	UB1/22
EA3.56.107	. . .	CARTRIDGE, moisture absorber	2	L72	UB2/11
A25/2C	. . .	CLIP, fuel pipe	2	—	UB2/12
SP13C	. . .	Attaching parts for EA3.56.107:—	2	—	UB2/13
AGS1104/B	. . .	Bolt, 2 BA	2	—	UB2/14
EA3.56.171	. . .	Washer, 2 BA	1	L59	UB1/23
A25/3C	. . .	CONE, adaptor, for drain pipes	10	—	UB1/24
EA3.56.117	. . .	CONTAINER, cartridge	2	Neo-K-Tex	UB1/25
DOWTY	. . .	Attaching parts for EA3.56.171:—	10	—	UB1/26
SP815/2	. . .	Bolt, 2 BA	2	—	UB1/27
EA3.56.81	. . .	Ring, sealing	2	L72	UB1/28
AGS2001/C/1/66	. . .	COVER, access, tank end	14	—	UB1/29
EA3.56.83	. . .	Attaching parts for EA3.56.81:—	2	Neo-K-Tex	UB1/30
SP15C	. . .	Nut, stiff, 2 BA	14	—	UB2/15
AGS1142J	. . .	Ring, sealing	1	L56	UB2/16
EA3.56.283	. . .	Washer, 2 BA	1	L56	UB2/17
EA3.56.285	. . .	NIPPLE, adaptor	2	L56	UB2/18
EA3.56.433	. . .	PIPE, assembly, from port non-return valve to aft fuel pump	2	—	UB2/19
SELF PRIMING ENG.	. . .	PIPE, assembly, from starboard non-return valve to forward fuel pump	1	—	UB2/20
SPE1003Mk.4	. . .	PIPE, drain	14	Neo-K-Tex	UB2/21
AGS2001/C/1/66	. . .	PUMP, fuel	1	—	UB2/22
EA3.56.83	. . .	Attaching parts for SPE1003Mk.4:—	14	—	UB1/31
SP15C	. . .	Nut, stiff, 2 BA	1	—	UB1/32
EA3.56.477	. . .	Ring, sealing	34	—	UB1/33
A25/4C	. . .	Washer	1	Neo-K-Tex	UB1/34
DOWTY	. . .	SUMP, tank, assembly	34	—	UB1/35
SP815/2	. . .	Attaching parts for EA3.56.477:—	1	—	
EA3.56.479	. . .	Bolt, 2 BA	34	—	
SP15C	. . .	Seal	1	—	
	. . .	Seal, tank, sump	34	—	
	. . .	Washer	34	—	

TANKS

VENTRAL TANK

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
TYPE 'O' No.2	. . . SUPPRESSOR, type O, No. 2	2	—	UB2/23
A39B20	. . . Attaching parts for Type 'O' No 2:— . . . Screw, 4BA	4	—	UB2/24
AGS1105J	. . . UNION	2	—	UB2/19B
AS2573	. . . VALVE, drain, assembly . . . Attaching parts for AS2573:—	1	—	UB1/36
AGS2001/C/1/66	. . . Nut, stiff, 2BA	8	—	UB1/37
SP15C	. . . Washer	8	—	UB1/38
AS410	. . . Washer, sealing	1	Neo-K-Tex	UB1/39
K.A.C. LTD.				
C3191	. . . VALVE, drain, water sediment	1	—	UB1/40
AGS568J	. . . WASHER, jointing	2	—	UB2/19A
EA3.56.47	. . . TRUNNION, strap, R.H.	2	S95	UB1/41
EA3.56.49	. . . TRUNNION, strap, L.H.	2	S95	UB1/42
SELF PRIMING ENG.				
SPE1706	. . VALVE, non-return, type P24A, Mk. 2	2	—	UB2/25

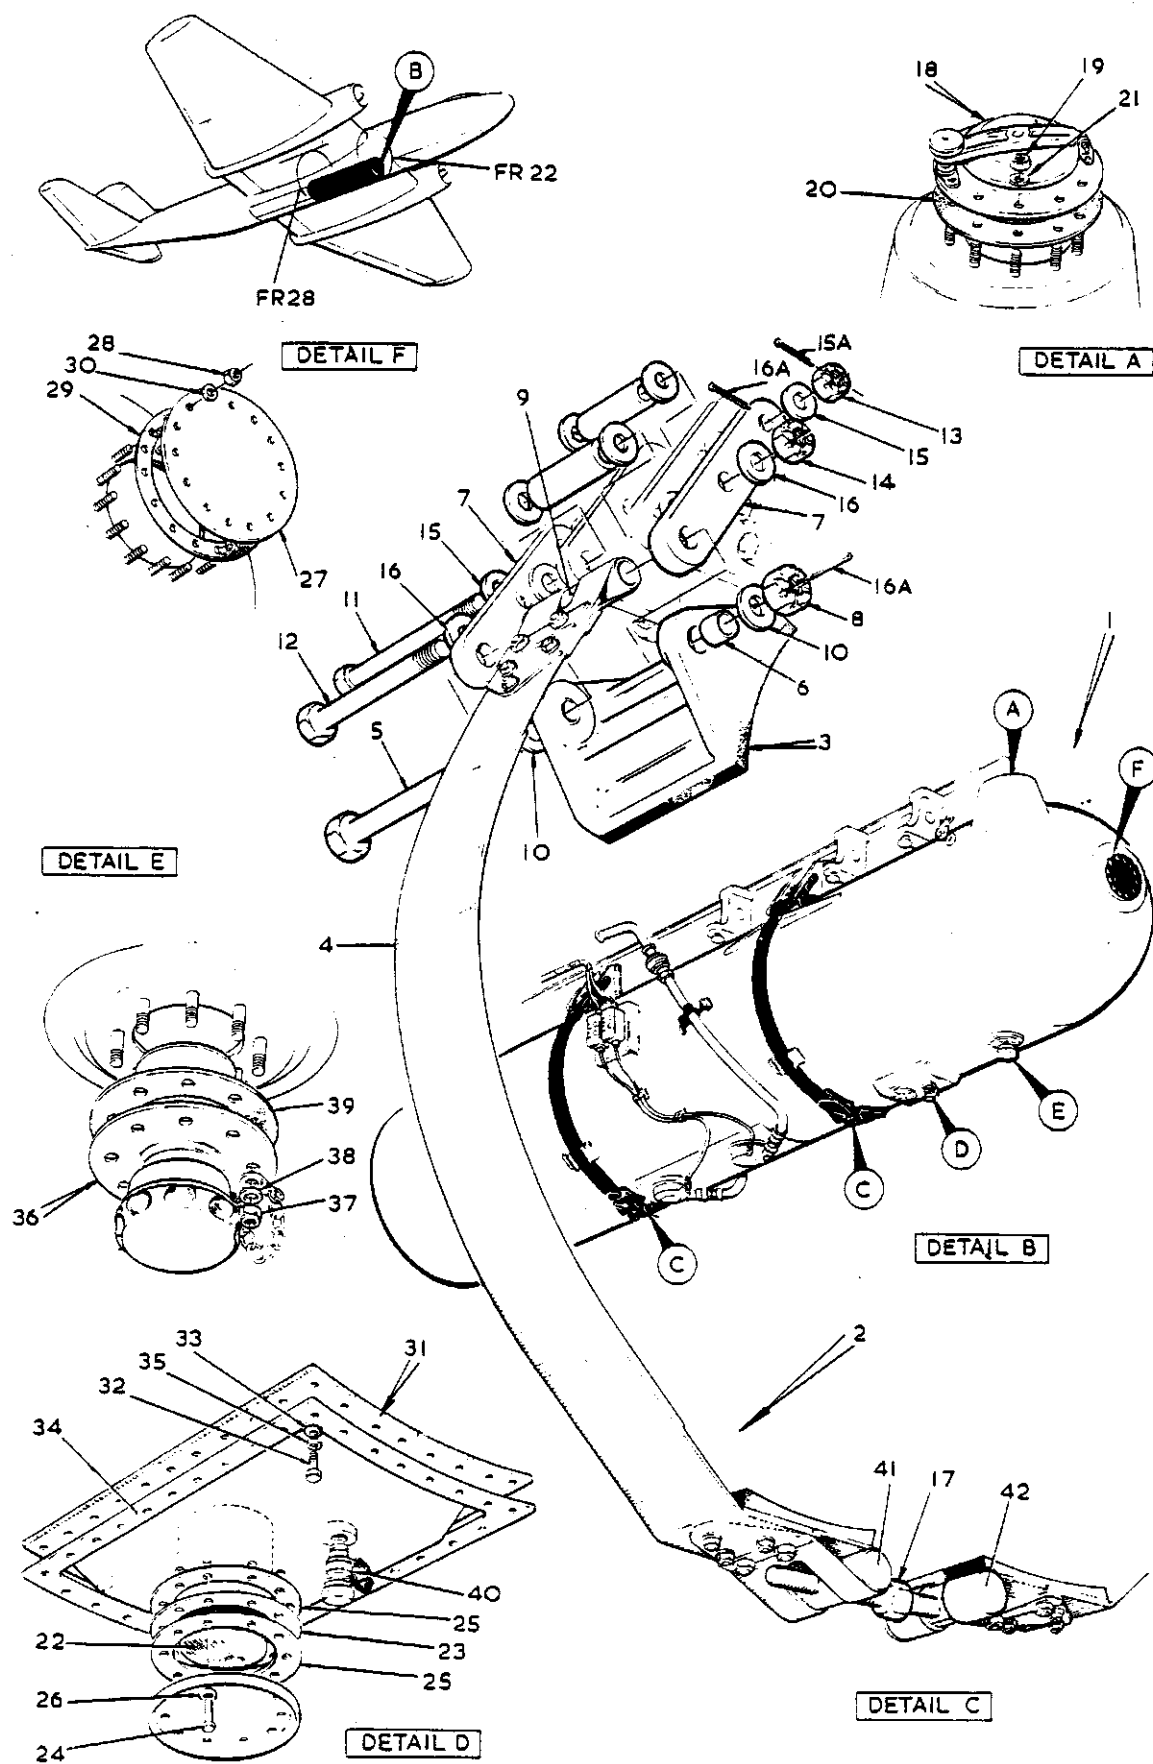


FIG 1 VENTRAL TANK TO FUSELAGE

CODE Z

SECT UB

