

CANBERRA E Mk. 15

Page WA.1

UNDERCARRIAGE **MAIN UNDERCARRIAGE, PORT**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A1.40.727	MAIN UNDERCARRIAGE, PORT, ASSEMBLY ...	1	—	—	
	E.A1.40.729	Consisting of:— LEG, OLEO (LESS WHEEL, BRAKE UNIT AND FIXED FAIRINGS), ASSEMBLY	1	—	—	W.1
		Consisting of:—				
27G/4085	DUNLOP AS.9780	BRAKE unit (For spares see A.P.4515C, Vol. 3, Pt. 1, Sect. 2)	1	—	A	W.1
		Attaching parts for AS.9780:—				
2168	E.A6.40.35	Bolt, securing ...	10	S.97	C	W.1
28M/13259	A27/NS	Nut, 1/2" BSF ...	10	—	C	
2169	E.A3.40.43	Washer, special ...	10	DTD.124A	C	W.1
6848	E.B6.20.729	FAIRING, FIXED, ASSEMBLY ...	1	—	B	W.1
		(Supplied with trim allowance)				
		Spares for:—				
17735	E.A6.73.277	BRACKET , bottom ...	1	L.72	C	W.1
		Attaching parts for E.A6.73.277:—				
28D/9133012	A25/3C	Bolt, 2 BA ...	2	—	C	
5970	E.A6.73.93	Washer ...	2	L.72	C	W.1
3060	E.A3.20.853	FAIRING, FIXED, SUB-ASSEMBLY ...	1	—	B	
		Spares for:—				
21164	E.A3.20.2869	PANEL, HINGE, ASSEMBLY ...	1	—	B	
		Spares for:—				
	E.A1.20.1679	HINGE (Make from 28N/9486785) ...	1	—	LM	
3025	E.A1.20.1675	PANEL , hinge, 16 SWG ...	1	L.72	C	
520	E.A1.40.435	SPRING ...	2	Spring Steel	C	
1413	E.A1.20.6817	PANEL , access, picket point ...	1	—	C	W.1
	E.A3.20.1627	SEAL , 3/4" dia. x 90" long (Make from Ref. 4432)	1	Syn. Rub.	LM	W.1
		Attaching parts for E.B6.20.729:—				
4174	E.A1.40.519	Bolt, securing fixed fairing mounting brackets to leg (Made from A25/5G)	8	H.T.S.	C	
28W/1086617	AGS.162/E	Washer, spring ...	8	—	C	
32314	E.A9.40.23	LEG, SLIDING, AND OLEO HEAD, ASSEMBLY (PRE-MOD. 4270)	1	—	A	
34712	E.A9.40.59	LEG, SLIDING, AND OLEO HEAD, ASSEMBLY (MOD. 4270)	1	—	A	
		Spares for:—				
	E.A6.40.3	HEAD, OLEO, ASSEMBLY (PRE-MOD. 4270)	1	—	—	
	E.A9.40.57	HEAD, OLEO, ASSEMBLY (MOD. 4270) ...	1	—	—	
		Spares for:—				
663	E.A1.40.89	BEARING , spherical seated, ball joint side stay	1	S.96	C	W.2
		Attaching parts for E.A1.40.89:—				
664	E.A1.40.101	Bush, bearing ...	1	DTD.412	C	W.2
674	E.A1.40.95	Ring, lower, retaining, ball joint ...	1	DTD.124	C	W.2
676	E.A1.40.97	Ring, upper, retaining, ball joint ...	1	DTD.124	C	W.2
680	E.A1.40.99	Stud, for retaining rings at ball joint ...	12	S.96	C	W.2
665	E.A1.40.109	BUSH , pivot (Pre-Mod. 4270) ...	2	—	C	W.2
1438501	E.A9.40.63	BUSH , pivot (Mod. 4270) ...	2	DTD.412	MR	
666	E.A1.40.111	BUSH , torque link lug ...	2	DTD.412	C	W.2
		Attaching parts for E.A1.40.111:—				
673	E.A1.40.679	Plug, pivot bearing bush, retaining ...	2	L.65	C	W.2
667	E.A1.40.133	DISC , sealing piston dowel plug ...	2	L.65	C	W.2
		Attaching parts for E.A1.40.133:—				
679	E.A1.40.625	Screw, retaining, plug, dowel seal ...	2	L.65	C	W.2

CANBERRA E Mk. 15

Page WA.3

UNDERCARRIAGE **MAIN UNDERCARRIAGE, PORT**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
14701	E.A3.40.203	PLUG, sealing (Mod. 2361) ...	...	...	...	...	...	1	DTD.683	C	W.2
14705	E.A3.40.215	RING, backing (Mod. 2361) ...	...	...	...	...	...	2	Fabric CX.18	C	W.2
14700	E.A3.40.207	RING, distance, between sealing and backing rings (Mod. 2361)						1	L.64	C	W.2
697	E.A1.40.57	RING, piston ...	...	...	...	...	...	1	—	C	W.2
12915	E.A1.40.45	RING, retaining, felt washer, 12 SWG						1	M.S.	C	W.2
28D/1007285	AS.1242/1B	Attaching parts for E.A1.40.45:—						8	—	C	
14703	E.A3.40.213	Bolt, 4 BA ...	...	...	...	...	...	2	Synthetic Rubber	C	W.2
14702	E.A3.40.205	RING, sealing, seal housing (Mod. 2361) ...	...	...	...	...	...	1	Synthetic Rubber	C	W.2
14704	E.A3.40.211	RING, sealing, seal housing (Mod. 2361) ...	...	...	...	...	...	1	Soft Rubber	C	W.2
21354	E.A1.40.659	RING, shock absorber, stop ...	...	...	...	...	...	1	DTD.683	C	W.2
12913	E.A1.40.657	RING, spacer, between sealing rings ...	...	...	...	...	...	1	DTD.683	C	W.2
700	E.A1.40.167	SCREW, grub, stop nut locking ...	...	...	...	...	...	1	S.1	C	
701	E.A1.40.39	WASHER, fibre, between retaining ring and stop nut						1	BS.216	C	W.2
702	E.A1.40.43	WASHER, packing, 3/8" thick ...	...	...	...	...	...	1	Hard Felt	C	W.2
3631	E.A1.40.27	LINK, torque, top ...	...	...	...	...	...	1	DTD.683	C	W.2
661	E.A1.40.153	Attaching parts for E.A1.40.27:—						2	DTD.412	C	W.2
28M/4095931	A27/SS	Bush, bearing ...	...	...	...	...	...	1	—	C	
704	E.A1.40.69	Nut, 1" BSF ...	...	...	...	...	...	1	S.11	C	W.2
1500	E.A3.40.27	Pin, bearing, top torque link ...	...	...	...	...	...	1	S.97	C	W.2
708	E.A1.40.139	Pin, bearing, torque link joint ...	...	...	...	...	...	1	S.97	C	W.2
707	E.A1.40.77	Screw, grub, locking, top bearing pin ...	...	...	...	...	...	1	M.S.	C	W.2
709	E.A1.40.619	Screw, retaining, bearing pin ...	...	...	...	...	...	1	S.11	C	W.2
711	E.A1.40.73	Shim, bearing, pin sleeve ...	...	...	...	...	...	1	L.A.	C	W.2
718	E.A1.40.147	Sleeve, bearing, for torque link ...	...	...	...	...	...	1	DTD.412	C	W.2
713	E.A1.40.75	Washer, bearing, thrust ...	...	...	...	...	...	1	DTD.412	C	W.2
714	E.A1.40.79	Washer, bearing, thrust ...	...	...	...	...	...	1	M.S.	C	W.2
715	E.A1.40.83	Washer, locking, bearing pin retaining screw, 16 SWG						1	S.11	C	W.2
1514	E.A3.40.29	Washer, spacing, at torque link joint, between link bearings						1	S.11	C	W.2
1515	E.A3.40.31	Washer, at torque link joint ...	...	...	...	...	...	1	S.96	C	W.2
3632	E.A1.40.28	Washer, at torque link joint ...	...	...	...	...	...	1	S.96	C	W.2
661	E.A1.40.153	LINK, torque, bottom ...	...	...	...	...	...	1	DTD.683	C	W.2
28M/4095931	A27/SS	Attaching parts for E.A1.40.28:—						2	DTD.412	C	W.2
703	E.A1.40.67	Bush, bearing ...	...	...	...	...	...	1	—	C	
1500	E.A3.40.27	Nut, 1" BSF ...	...	...	...	...	...	1	S.11	C	W.2
708	E.A1.40.139	Pin, bearing, bottom torque link ...	...	...	...	...	...	1	S.11	C	W.2
707	E.A1.40.77	Pin, bearing, torque link joint ...	...	...	...	...	...	1	S.97	C	W.2
		Screw, grub, locking, bottom bearing pin ...	...	...	...	...	...	1	M.S.	C	W.2
		Screw, retaining, bearing pin ...	...	...	...	...	...	1	S.11	C	W.2

Continued

Page WA.4

CANBERRA E Mk. 15

UNDERCARRIAGE **MAIN UNDERCARRIAGE, PORT**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
709	E.A1.40.619	Shim, bearing, pin, sleeve ...	...	...	...	...	...	1	LA.	C	W.2
710	E.A1.40.71	Sleeve, bearing, for torque link ...	...	...	...	...	...	1	S.11	C	W.2
713	E.A1.40.75	Washer, bearing, thrust ...	...	...	...	...	...	1	DTD.412	C	W.2
718	E.A1.40.147	Washer, bearing, thrust ...	...	...	...	...	...	1	DTD.412	C	W.2
714	E.A1.40.79	Washer, locking, bearing pin retaining screw, 16 SWG	...	...	...	...	...	1	MS.	C	W.2
715	E.A1.40.83	Washer, spacing, at torque link joint, between link bearings	...	...	...	...	...	1	S.11	C	W.2
1514	E.A3.40.29	Washer, at torque link joint ...	...	...	...	...	...	1	S.96	C	W.2
1515	E.A3.40.31	Washer, at torque link joint ...	...	...	...	...	...	1	S.96	C	W.2
28N/9156370	SP.21	NIPPLE , lubricating, 1/2" BSF ...	...	...	...	...	...	5	L.A.	C	
712	E.A1.40.137	TAB , locking, 16 SWG ...	...	...	...	...	...	1	MS.	C	W.2
		Attaching parts for E.A1.40.137:—									
28S/1200034	A31/B16	Screw, 4 BA ...	...	...	...	...	...	1	—	C	
28W/1010155	AGS.162/B	Washer, spring ...	...	...	...	...	...	1	—	C	
521	E.A1.40.467	LEVER, COWL DOOR MECHANISM, ASSEMBLY Spares for:—	...	...	...	...	...	1	—	C	W.2
522	E.A1.40.465	BUSH , bearing ...	...	...	...	...	...	2	L.40	C	W.2
		Attaching parts for E.A1.40.465:—									
28D/9453970	A25/15C	Bolt, 2 BA ...	...	...	...	...	...	1	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ...	...	...	...	...	...	1	—	C	
	E.A1.40.529	LEVER , operating ...	...	...	...	...	...	1	—	—	W.2
		Attaching parts for E.A1.40.467:—									
4173	E.A1.40.517	Bolt, securing cowl door mechanism to leg (Made from A25/5E)	...	...	...	...	...	4	HTS.	C	W.2
27G/6566	DUNLOP AHM.5651	PIPE , feed, for maxaret unit ...	...	...	...	...	...	1	—	B	
27G/6567	DUNLOP AHM.5653	PIPE , feed, for maxaret unit ...	...	...	...	...	...	1	—	B	
27A/1450834	DUNLOP DT.1609	TUBE , 43" x 12"5 x 21" ...	...	...	...	...	...	1	—	A	W.1
27A/3152	DUNLOP DT.1621	TYRE , 43" x 12"5 x 21" ...	...	...	...	...	...	1	—	A	W.1
	or FIRESTONE										
27A/3152	ZA.101	TYRE , 43" x 12"5 x 21" ...	...	...	...	...	...	1	—	A	
	or DUNLOP										
27A/4655	DR.1623	TYRE , 43" x 12"5 x 21" ...	...	...	...	...	...	1	—	A	
	or GOODYEAR										
27A/4655	GA.1266	TYRE , 43" x 12"5 x 21" ...	...	...	...	...	...	1	—	A	
	or FIRESTONE										
27A/4655	ZA.303	TYRE , 43" x 12"5 x 21" ...	...	...	...	...	...	1	—	A	
27G/2382	DUNLOP AC.11516	UNIT , maxaret, automatic brake control ...	...	...	...	...	...	1	—	A	W.1
27A/4217	DUNLOP AH.51337	WHEEL , undercarriage (For spares see A.P.1086, Part II) (Pre-Mod. 4481)	...	...	...	...	...	1	—	A	W.1
27A/1450713	AH.52692	WHEEL , undercarriage (Mod. 4481) ...	...	...	...	...	...	1	—	A	

Restricted

CANBERRA E Mk. 15

Page WA.5

UNDERCARRIAGE **MAIN UNDERCARRIAGE, PORT**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
523	E.A1.40.29	STAY, SIDE, UNDERCARRIAGE, ASSEMBLY (PRE-MOD. 3585)						1	—	A	W.1
34172	E.A9.40.43	STAY, SIDE, UNDERCARRIAGE, ASSEMBLY (MOD. 3585) (PRE-MOD. 5051)						1	—	A	
6119299	E.A9.40.73	STAY, SIDE, UNDERCARRIAGE, ASSEMBLY (MOD. 5051)						1	—	A	
		Spares for:—									
528	E.A1.40.221	BOLT, connecting, undercarriage operating jack						1	S.65 or S.81	C	W.3
529	E.A1.40.239	BOLT, stop link stay						1	S.65 or S.81	C	W.3
		Attaching parts for E.A1.40.239:—									
537	E.A1.40.353	Nut, lock						1	S.96	C	W.3
530	E.A1.40.405	BOLT, sequence valve operating						1	S.96	C	W.3
7112	E.A1.40.229	BRACKET, stop bolt						1	S.96	C	W.3
		Attaching parts for E.A1.40.229:—									
28D/1212690	A25/15L	Bolt, 7/8" BSF						1	HTS.	C	
28D/1011310	A25/8L	Bolt, 7/8" BSF						2	HTS.	C	
28M/9129449	A27/LS	Nut, 7/8" BSF						3	—	C	
28P/9560929	SP.90/E8	Pin, split						1	—	C	
7114	E.A1.40.403	BRACKET, sequence valve operating stud ...						1	L.65	C	W.3
		Attaching parts for E.A1.40.403:—									
28D/1212688	A25/18L	Bolt, 7/8" BSF						1	HTS.	C	
28D/9133011	A25/2C	Bolt, 2 BA						1	—	C	
28M/9129449	A27/LS	Nut, 7/8" BSF						1	—	C	
28P/9560929	SP.90/E8	Pin, split						1	—	C	
29C/1006946	AGS.2035/C	Washer, shakeproof						1	—	C	
531	E.A1.40.199	LEVER, UNDERCARRIAGE LOCK, ASSEMBLY						1	—	C	W.3
		Consisting of:—									
532	E.A1.40.213	BUSH						1	DTD.197	C	W.3
	E.A1.40.201	LEVER						1	S.96	—	
533	E.A1.40.200	LEVER, UNDERCARRIAGE LOCK, ASSEMBLY						1	—	C	W.3
		Consisting of:—									
532	E.A1.40.213	BUSH						1	DTD.197	C	W.3
	E.A1.40.202	LEVER						1	S.96	—	
		Attaching parts for E.A1.40.199 and E.A1.40.200:—									
525	E.A1.40.195	Bolt, hook catch						1	S.65 or S.81	C	W.3
22176	E.A1.40.351	Nut, slotted, for hook catch pin bolt (Make from A27/QS)						1	MS.	LM	W.3
28P/19157	SP.90/G10	Pin, split						1	—	C	
543	E.A1.40.219	Tube, distance, for undercarriage "down" switch operating bracket						1	L.65	C	W.3
28W/9419481	SP.15/Q	Washer, 1/2"						1	—	C	
544	E.A1.40.291	Washer, tab at undercarriage hook catch bolt, 20 SWG						1	S.3	C	W.3
547	E.A1.40.417	Washer, under tab and connecting bolts, 24 SWG						1	L.72	C	W.3
13168	E.A3.40.191	LEVER, UNDERCARRIAGE "DOWN" MICRO SWITCH, ASSEMBLY						1	—	C	W.3
		Spares for:—									
179	E.A1.40.569	SCREW, tappet						1	S.96	C	W.3

UNDERCARRIAGE **MAIN UNDERCARRIAGE, PORT**

Ref. No.	Part No.							No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
6472	E.A1.40.225							1	—	B/MR	W.3
536	E.A1.40.227							2	DTD.197	C	W.3
526	E.A1.20.197							1	S.65 or S.81	C	W.3
12916	E.A1.40.347							1	MS.	C	W.3
28P/19245	SP.90/K17							1	—	C	
538	E.A1.40.223							1	L.65	C	W.3
546	E.A1.40.357							1	S.3	C	W.3
	or										
	E.A1.40.765										
28N/9156370	SP.21							3	LA.	C	
28M/1011470	A27/GT							1	—	C	
26667	E.A3.40.193							1	—	C	W.3
13184	E.A3.40.199							1	DTD.124	C	W.3
539	E.A1.40.205							1	—	C	W.3
527	E.A1.40.203							1	S.96	C	W.3
	E.A1.40.349							1	MS.	LM	W.3
28P/9527619	SP.90/C7							1	—	C	
7113	E.A1.40.233							1	DTD.197	C	W.3
540	E.A1.40.237							1	Spring Steel	C	W.3
38706	E.A1.40.31							1	DTD.683	MR	W.3
40650	E.A9.40.39							1	—	MR	
6119308	E.A9.40.79							1	—	MR	
541	E.A1.40.235							1	S.96	C	W.3
542	E.A1.40.217							1	L.65	C	W.3
545	E.A1.40.355							1	L.72	C	W.3

UNDERCARRIAGE **MAIN UNDERCARRIAGE, STARBOARD**

Ref. No.	Part No.						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5:6				
	E.A1.40.728	MAIN UNDERCARRIAGE, STARBOARD, ASSEMBLY					1	—	—	
	E.A1.40.730	Consisting of:— LEG, OLEO (LESS WHEEL, BRAKE UNIT AND FIXED FAIRINGS), ASSEMBLY					1	—	—	
		Consisting of:—								
27G/4086	DUNLOP AH.9781	BRAKE unit (For spares see A.P.4515C, Vol. 3, Pt. 1, Sect. 2)					1	—	A	W.1
		Attaching parts for AH.9781:—								
2168	E.A6.40.35	Bolt, securing					10	S.97	C	W.1
28M/13259	A27/NS	Nut, 1/2" BSF					10	—	C	
2169	E.A3.40.43	Washer, special					10	DTD.124A	C	W.1
6849	E.B6.20.730	FAIRING, FIXED, ASSEMBLY					1	—	B	W.1
		(Supplied with trim allowance)								
		Spares for:—								
17736	E.A6.73.278	BRACKET , bottom					1	L.72	C	W.1
		Attaching parts for E.A6.73.278:—								
5970	E.A6.73.93	Bolt, 2 BA					2	—	C	
28D/9133012	A25/3C	Washer					2	L.72	C	W.1
3061	E.A3.20.854	FAIRING, FIXED, SUB-ASSEMBLY					1	—	LM	
		Spares for:—								
21721	E.A3.20.2870	PANEL, HINGE, ASSEMBLY					1	—	B	
		Spares for:—								
	E.A1.20.1679	HINGE (Make from 28N/9486785)					1	—	LM	
3026	E.A1.20.1676	PANEL , hinge, 16 SWG					1	L.72	C	
1887	E.A1.40.436	SPRING					2	Spring Steel	C	
1413	E.A1.20.6817	PANEL , access, picket point					1	—	C	W.1
	E.A3.20.1627	SEAL , 1/2" dia. x 90" long (Make from Ref. 4432)					1	Syn. Rub.	LM	W.1
		Attaching parts for E.B6.20.730:—								
4174	E.A1.40.519	Bolt, securing fixed fairing mounting brackets to leg (Made from A25/5G)					8	H.T.S.	C	
28W/1086617	AG5.162/E	Washer, spring					8	—	C	
32315	E.A9.40.24	LEG, SLIDING, AND OLEO HEAD, ASSEMBLY (PRE-MOD. 4270)					1	—	A	
34713	E.A9.40.60	LEG, SLIDING, AND OLEO HEAD, ASSEMBLY (MOD. 4270)					1	—	A	
		Spares for:—								
660	E.A1.40.639	BRACKET , angle, micro-switch mounting, 20 SWG					1	L.72	C	W.1
		Attaching parts for E.A1.40.639:—								
28D/9140638	A25/4B	Bolt, 4 BA					4	—	C	
28M/9403519	A27/BP	Nut, 4 BA					4	—	C	
706	E.A1.40.335	Plate, packing					1	L.A.	C	W.1
28W/1010155	AG5.162/B	Washer, spring					4	—	C	
662	E.A1.40.671	FINGER , operating, micro-switch					1	—	C	W.2
		Attaching parts for E.A1.40.671:—								
28S/9435713	A31/C20	Screw, 2 BA					2	—	C	
28W/1007983	AG5.162/C	Washer, spring					2	—	C	
	E.A6.40.4	HEAD, OLEO, ASSEMBLY (PRE-MOD. 4270)					1	—	—	
	E.A9.40.58	HEAD, OLEO, ASSEMBLY (MOD. 4270) ...					1	—	—	
		Spares for:—								
663	E.A1.40.89	BEARING , spherical seated, ball joint side stay					1	S.96	C	W.2

Page WB.2

CANBERRA E Mk. 15

UNDERCARRIAGE **MAIN UNDERCARRIAGE, STARBOARD**

Ref. No.	Part No.	Description					No. off	Matl Spec.	Cl. of Equip. M.R. L M	Plate No.
		1	2	3	4	5, 6				
		Attaching parts for E.A1.40.89:—								
664	E.A1.40.101	Bush, bearing	...	...	...	...	1	DTD.412	C	W.2
675	E.A1.40.96	Ring, lower, retaining, ball joint	...	...	...	...	1	DTD.412	C	W.2
677	E.A1.40.98	Ring, upper, retaining, ball joint	...	...	...	...	1	DTD.412	C	W.2
680	E.A1.40.99	Stud, for retaining rings at ball joint	...	...	...	...	12	S.96	C	W.2
665	E.A1.40.109	BUSH, pivot (Pre-Mod. 4270)	...	...	...	...	2	—	C	W.2
1438501	E.A9.40.63	BUSH, pivot (Mod. 4270)	...	...	...	...	2	DTD.412	MR	
666	E.A1.40.111	BUSH, torque link lug	...	...	...	...	2	DTD.412	C	W.2
		Attaching parts for E.A1.40.111:—								
673	E.A1.40.679	Plug, pivot bearing bush, retaining	...	...	...	...	2	L.65	C	W.2
667	E.A1.40.133	DISC, sealing, piston dowel plug	...	...	...	...	2	L.65	C	W.2
		Attaching parts for E.A1.40.133:—								
679	E.A1.40.625	Screw, retaining, plug, dowel seal	...	...	...	...	2	L.65	C	W.2
668	E.A1.40.131	DOWEL, piston	...	...	...	...	2	S.96	C	W.2
21482	E.A1.40.20	HEAD, oleo, forging (Pre-Mod. 4270)	...	...	...	...	1	DTD.683	A/MR	W.2
42059	E.A9.40.56	HEAD, oleo, forging (Mod. 4270)	...	...	...	...	1	DTD.5094	B/MR	
		Supplied to Drg. E.A9.07.36 for spares purposes								
669	E.A1.40.103	HOOK, "S" shaped, 16 SWG	...	...	...	...	2	M.S. Wire	C	W.2
20656	E.A1.40.127	PIPE, stack, assembly	...	...	...	...	1	—	B/MR	W.2
		Attaching parts for E.A1.40.127:—								
28F/9428453	AGS.1186/B	Seal, bonded	...	...	...	...	1	—	C	
	E.A6.40.6	PISTON, OPERATING, ASSEMBLY	...	...	...	...	1	—	—	W.2
		Consisting of:—								
1099	EEAS.37/22A	NIPPLE, 2 BA	...	...	...	...	2	S.96	C	
670	E.A1.40.647	PISTON	...	...	...	...	1	DTD.197	C	W.2
22528	E.A6.40.33	PLATE, orifice enclosure, control	...	...	...	...	1	S.96	C	W.2
		Attaching parts for E.A6.40.33:—								
683	E.A1.40.61	Bolt, attachment, enclosure orifice plate	...	...	...	...	3	S.96	C	W.2
672	E.A1.40.651	RING, piston	...	...	...	...	1	—	C	W.2
	EEAS.38/3A	SPOKE, 2 BA (Make from 28R/6328)	...	...	...	...	1	S.96	—	
12914	E.A1.40.118	STRUT, piston, main	...	...	...	...	1	L.62	C	W.2
678	E.A1.40.155	RING, sealing, at dowel	...	...	...	...	2	Syn. Rub.	C	W.2
681	E.A1.40.105	TUBE, distance, packing, for locking washer	...	...	...	...	1	L.65	C	W.2
	H. P. COMP.									
28Y/9701165	GYP.A58	VALVE, charging	...	...	...	...	1	—	C	W.2
		Attaching parts for GYP.A58:—								
28F/9428453	AGS.1138/B	Seal, bonded	...	...	...	...	1	—	C	
682	E.A1.40.149	Washer, locking, 14 SWG	...	...	...	...	1	DTD.124	C	W.2
	E.A3.40.226	LEG, SLIDING, COMPRESSION, ASSEMBLY (PRE-MOD. 4270)	...	...	...	...	1	—	—	W.2
	E.A9.40.62	LEG, SLIDING, COMPRESSION, ASSEMBLY (MOD. 4270)	...	...	...	...	1	—	—	
		Spares for:—								
26640	E.A3.40.201	BOLT, clamp, locking	...	...	...	...	1	S.95 or S.96	C	
684	E.A1.40.161	BUSH, bearing, in lug	...	...	...	...	2	DTD.124	C	W.2
2467	E.A3.40.45	BUSH, bearing	...	...	...	...	1	—	C	W.2
	E.A3.40.217	CLAMP, AXLE, ASSEMBLY	...	...	...	...	1	—	—	
		Spares for:—								
21355	E.A3.40.23	BUSH	...	...	...	...	1	L.16	C	
13024	E.A3.40.183	CLAMP, axle body	...	...	...	...	1	—	C	W.2
1753	E.A3.40.19	LINK, towing	...	...	...	...	1	—	C	W.2

CANBERRA E Mk. 15

Page WB.3

UNDERCARRIAGE **MAIN UNDERCARRIAGE, STARBOARD**

Ref. No.	Part No.							No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
21537	E.A3.40.21							1	—	C	W.2
14706	E.A3.40.209							1	L.56	C	
1463	E.A3.40.10							1	—	A	W.2
691	E.A1.40.41							1	S.11	C	W.2
32210	E.A3.40.221							3	S.97	C	
	E.A3.40.219							1	DTD.197	C	
693	E.A1.40.175							1	S.65	C	W.2
683	E.A1.40.61							6	S.11	C	
695	E.A1.40.677							2	L.40	C	W.2
14701	E.A3.40.203							1	DTD.683	C	W.2
14705	E.A3.40.215							2	—	C	W.2
14700	E.A3.40.207							1	L.64	C	W.2
697	E.A1.40.57							1	—	C	W.2
12915	E.A1.40.45							1	MS.	C	W.2
28D/1007285	AS.1242/1B							8	—	C	
14703	E.A3.40.213							2	Soft Rubber	C	W.2
14702	E.A3.40.205							1	Soft Rubber	C	W.2
14704	E.A3.40.211							1	Soft Rubber	C	W.2
21354	E.A1.40.659							1	DTD.683	C	W.2
12913	E.A1.40.657							1	DTD.683	C	W.2
700	E.A1.40.167							1	S.1	C	
701	E.A1.40.39							1	BS.216	C	W.2
702	E.A1.40.43							1	Hard Felt	C	W.2
3632	E.A1.40.28							1	DTD.683	C	W.2
661	E.A1.40.153							2	DTD.412	C	W.2
28M/4095931	A27/SS							1	—	C	
704	E.A1.40.69							1	S.11	C	W.2
1500	E.A3.40.27							1	S.97	C	W.2
708	E.A1.40.139							1	MS.	C	W.2
707	E.A1.40.77							1	S.11	C	W.2
709	E.A1.40.619							1	LA.	C	W.2
711	E.A1.40.73							1	S.11	C	W.2
718	E.A1.40.147							1	DTD.412	C	W.2
713	E.A1.40.75							1	DTD.412	C	W.2
714	E.A1.40.79							1	MS.	C	W.2
715	E.A1.40.83							1	S.11	C	W.2
1514	E.A3.40.29							1	S.96	C	W.2
1515	E.A3.40.31							1	S.96	C	W.2

UNDERCARRIAGE MAIN UNDERCARRIAGE, STARBOARD

Ref. No.	Part No.						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5				
3631	E.A1.40.27						1	DTD.683	C	W.2
661	E.A1.40.153						2	DTD.412	C	W.2
28M/4095931	A27/SS						1	—	C	
703	E.A1.40.67						1	S.11	C	W.2
1500	E.A3.40.27						1	S.97	C	W.2
708	E.A1.40.139						1	MS.	C	W.2
707	E.A1.40.77						1	S.11	C	W.2
709	E.A1.40.619						1	LA.	C	W.2
710	E.A1.40.71						1	S.11	C	W.2
713	E.A1.40.75						1	DTD.412	C	W.2
718	E.A1.40.147						1	DTD.412	C	W.2
714	E.A1.40.79						1	MS.	C	W.2
715	E.A1.40.83						1	S.11	C	W.2
1514	E.A3.40.29						1	S.96	C	W.2
1515	E.A3.40.31						1	S.96	C	W.2
28N/9156370	SP.21						5	LA.	C	
712	E.A1.40.137						1	MS.	C	W.2
28S/1200034	A31/B16						1	—	C	
28W/1010155	AGS.162/B						1	—	C	
521	E.A1.40.467						1	—	C	W.2
522	E.A1.40.465						2	L.40	C	W.2
28D/9453970	A25/15C						1	—	C	
28M/1278190	AGS.2001/C/1						1	—	C	
	E.A1.40.529						1	—	—	W.2
4173	E.A1.40.517						4	HTS.	C	W.2
27G/2487	DUNLOP AHM.2576						1	—	B	
	DUNLOP									
27G/2488	AHM.2578						1	—	B	
	DUNLOP									
27A/1450834	DT.1609						1	—	A	W.1
	DUNLOP									
27A/3152	DF.1621						1	—	A	W.1
	or									
27A/3152	FIRESTONE ZA.101						1	—	A	
	or									
27A/4655	DUNLOP DR.1623						1	—	A	
	or									
27A/4655	GOODYEAR GA.1266						1	—	A	

CANBERRA E Mk. 15

Page WB.5

UNDERCARRIAGE **MAIN UNDERCARRIAGE, STARBOARD**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	or FIRESTONE										
27A/4655	ZA.303	TYRE, 43" x 12-5 x 21"	...	...	...	...	...	1	—	A	
	DUNLOP										
27G/2381	AC.11514	UNIT, maxaret automatic brake control	...	...	...	...	...	1	—	A	W.1
	DUNLOP										
27A/4217	AH.51337	WHEEL, undercarriage (For spares see A.P.1086, Part II) (Pre-Mod. 4481)	...	...	...	...	...	1	—	A	W.1
27A/1450713	AH.52692	WHEEL, undercarriage (Mod. 4481)	...	...	...	...	...	1	—	A	W.1
524	E.A1.40.30	STAY, SIDE, UNDERCARRIAGE, ASSEMBLY (PRE-MOD. 3585)	...	...	...	...	...	1	—	A	W.1
34173	E.A9.40.44	STAY, SIDE, UNDERCARRIAGE, ASSEMBLY (MOD. 3585) (PRE-MOD. 5051)	...	...	...	...	...	1	—	A	
6119300	E.A9.40.74	STAY, SIDE, UNDERCARRIAGE, ASSEMBLY (MOD. 5051)	...	...	...	...	...	1	—	A	
		Spares for:—									
528	E.A1.40.221	BOLT, connecting, undercarriage operating jack	...	...	...	...	...	1	S.65 or S.81	C	W.3
529	E.A1.40.239	BOLT, stop link stay	...	...	...	...	...	1	S.65 or S.81	C	W.3
		Attaching parts for E.A1.40.239:—									
537	E.A1.40.353	Nut, lock	...	...	...	...	...	1	S.96	C	W.3
530	E.A1.40.405	BOLT, sequence valve operating	...	...	...	...	...	1	S.96	C	W.3
7112	E.A1.40.229	BRACKET, stop bolt	...	...	...	...	...	1	S.96	C	W.3
		Attaching parts for E.A1.40.229:—									
28D/1212690	A25/15L	Bolt, 1/2" BSF	...	...	...	...	...	1	HTS.	C	
28D/1011310	A25/8L	Bolt, 1/2" BSF	...	...	...	...	...	2	HTS.	C	
28M/9129449	A27/LS	Nut, 1/2" BSF	...	...	...	...	...	3	—	C	
28P/9560929	SP.90/E8	Pin, split	...	...	...	...	...	3	—	C	
32721	E.A1.40.404	BRACKET, sequence valve operating stud	...	...	...	...	...	1	L.65	C	W.3
		Attaching parts for E.A1.40.404:—									
28D/1212688	A25/18L	Bolt, 1/2" BSF	...	...	...	...	...	1	HTS.	C	
28D/9133011	A25/2C	Bolt, 2 BA	...	...	...	...	...	1	—	C	
28M/9129449	A27/LS	Nut, 1/2" BSF	...	...	...	...	...	1	—	C	
28P/9560929	SP.90/E8	Pin, split	...	...	...	...	...	1	—	C	
28W/1006946	AGS.2035/C	Washer, shakeproof	...	...	...	...	...	1	—	C	
531	E.A1.40.199	LEVER, UNDERCARRIAGE LOCK, ASSEMBLY	...	...	...	...	...	1	—	C	W.3
		Consisting of:—									
532	E.A1.40.213	BUSH	...	...	...	...	...	1	DTD.197	C	W.3
	E.A1.40.201	LEVER	...	...	...	...	...	1	S.96	—	
533	E.A1.40.200	LEVER, UNDERCARRIAGE LOCK, ASSEMBLY	...	...	...	...	...	1	—	C	W.3
		Consisting of:—									
532	E.A1.40.213	BUSH	...	...	...	...	...	1	DTD.197	C	W.3
	E.A1.40.202	LEVER	...	...	...	...	...	1	S.96	—	
		Attaching parts for E.A1.40.199 and E.A1.40.200:—									
525	E.A1.40.195	Bolt, hook catch	...	...	...	...	...	1	S.65 or S.81	C	W.3
22176	E.A1.40.351	Nut, slotted, for hook catch pin bolt (Make from A27/QS)	...	...	...	...	...	1	MS.	LM	W.3
28P/19157	SP.90/G10	Pin, split	...	...	...	...	...	1	—	C	
543	E.A1.40.219	Tube, distance, for undercarriage "Down" switch operating bracket	...	...	...	...	...	1	L.65	C	W.3
28W/9419481	SP.15/Q	Washer	...	...	...	...	...	1	—	C	
544	E.A1.40.291	Washer, tab at undercarriage hook catch bolt, 20 SWG	...	...	...	...	...	1	S.3	C	W.3
547	E.A1.40.417	Washer, under tab and connecting bolts, 24 SWG	...	...	...	...	...	1	L.72	C	W.3

UNDERCARRIAGE **MAIN UNDERCARRIAGE, STARBOARD**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
13169	E.A3.40.192	LEVER, UNDERCARRIAGE "DOWN" MICRO SWITCH, ASSEMBLY						1	—	C	W.3
		Spares for:—									
179	E.A1.40.569	SCREW, tappet						1	S.96	C	W.3
6472	E.A1.40.225	LINK, SIDE STAY, ASSEMBLY						1	—	B/MR	W.3
		Spares for:—									
536	E.A1.40.227	BUSH, bearing						2	DTD.197	C	W.3
		Attaching parts for E.A1.40.225:—									
526	E.A1.40.197	Bolt, connecting stay and link						1	S.65 or S.81	C	W.3
12916	E.A1.40.347	Nut, slotted (Make from A27/WS)						1	MS.	C	W.3
28P/19245	SP.90/K17	Pin, split						1	—	C	
538	E.A1.40.223	Plug, adaptor						1	L.65	C	W.3
546	E.A1.40.357	Washer, link and link stay connecting bolt, 18 SWG						1	S.3	C	W.3
	or E.A1.40.765										
28N/9156370	SP.21	NIPPLE, lubricating, 1/2" BSF						3	LA.	C	
28M/1011470	A27/GT	NUT, 5/8" BSF, sequence, valve operating bolt ...						1	—	C	
26667	E.A3.40.193	NUT, slotted, for undercarriage operating jack bolt (Make from A27/J5)						1	—	C	W.3
13184	E.A3.40.199	PLATE						1	DTD.124	C	W.3
539	E.A1.40.205	ROLLER, stop lever, assembly						1	—	C	W.3
		Attaching parts for E.A1.40.205:—									
527	E.A1.40.203	Bolt						1	S.96	C	W.3
	E.A1.40.349	Nut, slotted (Make from A27/J5)						1	MS.	—	W.3
28P/9527619	SP.90/C7	Pin, split						1	—	C	
7113	E.A1.40.233	SLEEVE, operating spring, for undercarriage lock stop						1	DTD.197	C	W.3
540	E.A1.40.237	SPRING, compression at lock stop						1	Spring Steel	C	W.3
38707	E.A1.40.32	STAY, side (Pre-Mod. 3585)						1	DTD.683	MR	W.3
40651	E.A9.40.40	STAY, side (Mod. 3585) (Pre-Mod. 5051)						1	—	MR	
6119309	E.A9.40.80	STAY, side (Mod. 5051)						1	—	MR	
541	E.A1.40.235	STOP, undercarriage lock						1	S.96	C	W.3
542	E.A1.40.217	TUBE, distance, undercarriage jack bolt under-carriage "Down" switch						1	L.65	C	W.3
545	E.A1.40.355	WASHER, link and link stay connecting bolt ...						1	L.72	C	W.3

CANBERRA E Mk. 15

Page WC.1

UNDERCARRIAGE NOSEWHEEL

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	E.A9.40.1	NOSEWHEEL, ASSEMBLY						—	—	—	
		Spares for:—									
22055	E.A9.40.15	BLOCK , flexible hose support						2	BS.2572	C	W.6
		Attaching parts for E.A9.40.15:—									
28D/9133011	A25/2C	Bolt, 2 BA						1	—	C	
22057	E.A9.40.13	Clip						1	L.72	C	W.6
28M/1278190	AGS.2001/C/1	Nut, 2 BA						1	—	C	
22329	E.A9.40.17	Washer, corner						1	L.72	C	W.6
3753	E.A1.40.617	BOLT , adjusting, undercarriage door crosshead stop (made from Ref. 28D/1008145)						2	H.T.S.	C	W.6
22373	E.A9.40.19	BOLT , connecting operating jack to undercarriage locking lever (Pre-Mod. 2704)						1	S.96	C	
32172	E.A9.40.21	BOLT , connecting operating jack to undercarriage locking lever (Mod. 2704)						1	S.96	C	
169	E.A1.40.605	BOLT , hydraulic jack anchor						1	S.97	C	W.6
4507	E.A3.40.139	BOLT , jack attachment to crosshead						1	S.96	C	W.6
163	E.A1.40.491	BOLT , nosewheel door "Up" latch forward						1	S.96	C	W.4
164	E.A1.40.493	BOLT , nosewheel door "Up" latch aft						1	S.96	C	W.6
22056	E.A9.40.11	BOLT , nose undercarriage jack hinge						1	S.96	C	W.6
12023	E.A3.40.159	BRACKET, UNDERCARRIAGE "UP" HOOK, ASSEMBLY (PRE-MOD. 4449)						1	—	B	
1439142	E.A3.40.251	BRACKET, UNDERCARRIAGE "UP" HOOK, ASSEMBLY (MOD. 4449—S.O.O.) Consisting of:—						1	—	B	
	E.A1.40.385	BEAM, BRACKET, LOCKING HOOK, ASSEMBLY (PRE-MOD. 5100)						1	—	—	W.4
	E.A3.40.265	BEAM, BRACKET, LOCKING HOOK, ASSEMBLY (ALT. R60/304—MOD. 5100)						1	—	—	
		Spares for:—									
20845	E.A1.40.369	LUG (Pre-Mod. 5100)						1	L.65	C/MR	W.4
	E.A3.40.263	LUG (Alt. R60/304—Mod. 5100)						1	L.65	—	
		Attaching parts for E.A3.40.263:—									
28D/9133012	A25/3C	Bolt, 2 BA						2	—	C	
28M/9433473	AGS.2002/C/1	Nut, 2 BA						2	—	C	
28V/9457834	SP.124/D	Washer						4	—	C	
25628	E.A1.40.377	PLATE , locking						1	L.72	C	W.4
		Attaching parts for E.A1.40.385:—									
28D/1012995	A25/22C	Bolt, 2 BA						8	—	C	
28M/9403520	A27/CP	Nut, 2 BA						8	—	C	
	E.A1.40.381	Tube, distance						8	L.62	LM	W.4
28W/1007483	AGS.162/C	Washer						8	—	C	
28V/9416443	SP.47/C	Washer, spring (Mod. 4449—S.O.O.)						8	—	C	
12024	E.A3.40.151	BOLT , stop, for buffer, assembly						2	—	C	W.4
		Attaching parts for E.A3.40.151:—									
28M/4095808	AGS.2001/J/1	Nut, $\frac{3}{8}$ " BSF						1	M.S.	C	
174	E.A1.40.399	Washer, laminum						1	L.A.	C	W.4
22251	E.A1.40.373	BRACKET , hook suspension						1	S.96	C	W.4
		Attaching parts for E.A1.40.373:—									
28M/4095808	AGS.2001/J/1	Nut, $\frac{3}{8}$ " BSF						1	M.S.	C	
28W/9419489	SP.16/J	Washer						1	—	C	
174	E.A1.40.399	Washer, laminum						1	L.A.	C	W.4

UNDERCARRIAGE NOSEWHEEL

Ref. No.	Part No.	1	2	3	4	5	6	Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
12025	E.A3.40.143							HOOK, UNDERCARRIAGE "UP" LATCH, ASSEMBLY (PRE-MOD. 4449)	1	—	B	W.4
1439143	E.A3.40.249							HOOK, UNDERCARRIAGE "UP" LATCH, ASSEMBLY (MOD. 4449—S.O.O.)	1	—	B	W.4
								Consisting of:—				
13109	E.A3.40.147							BOLT , special	1	DTD.126A	C	W.4
	E.A1.40.393							BUSH	1	DTD.197	—	W.4
	E.A3.40.145							HOOK , "UP" latch (Pre-Mod. 4449)	1	H.T.S.	—	W.4
	E.A3.40.243							HOOK , "UP" latch (Mod. 4449—S.O.O.)	1	H.T.S.	—	W.4
28M/9403520	A27/CP							NUT , 2 BA	1	—	C	
28W/1007983	AGS.162/C							WASHER , spring	1	—	C	
								Attaching parts for E.A3.40.143 or E.A3.20.249:—				
171	E.A1.40.371							Bolt , pivot for hook	1	S.96	C	W.4
28M/1011407	A27/ES							Nut , 1/2" BSF	1	—	C	
28P/9527619	SP.90/C7							Pin , split	1	—	C	
20846	E.A1.40.389							SCREW , adjusting, hook stop	1	S.96	C/MR	W.4
								Attaching parts for E.A1.40.389:—				
28M/1011475	A27/EP							Nut , adjusting, 1/2" BSF	1	—	C	
4694	E.A3.40.93							CROSSHEAD, NOSEWHEEL DOORS, C/W VALVE TRIP, ASSEMBLY	1	—	B/MR	
								Spares for:—				
5514	E.A3.40.97							PIN , roller top	1	S.96	C	W.6
12926	E.A3.40.181							PIN , roller, bottom	1	S.96	C	W.6
178	E.A1.40.553							ROLLER , guide	2	DTD.683	C	W.6
5515	E.A1.40.561							VALVE , trip	1	—	C	W.6
								Attaching parts for E.A1.40.561:—				
28S/1011504	A33/C32							Screw , 2 BA, 1" long	1	—	C	
								YOKE , crosshead	1	—	—	W.6
39181	E.A3.40.95							LEVER , micro-switch operating, undercarriage door front latch	1	—	C	W.4
								Attaching parts for E.A9.40.35:—				
28D/9140647	A25/14C							Bolt , 2 BA	1	H.T.S.	1	
28M/1278190	AGS.2001/C/1							Nut , 2 BA	1	M.S.	1	
3755	E.A1.40.731							Piece , distance	1	—	C	
4141	E.A1.45.989							Shim	2	—	C	W.4
	AS.2811-7-023							Spacer	2	L.62	LM	
3751	E.A1.40.567							LEVER, UNDERCARRIAGE SEQUENCE VALVE, ASSEMBLY	1	—	B/MR	W.6
								Spares for:—				
179	E.A1.40.569							TAPPET , valve screw	1	S.96	C	W.4
								Attaching parts for E.A1.40.569:—				
28M/1007403	A27/ET							Nut , 1/2" BSF, adjusting	1	—	C	
								Attaching parts for E.A1.40.567:—				
166	E.A1.40.581							Bolt , fulcrum, undercarriage door actuating sequence valve	1	S.96	C	W.6
28M/1006939	A27/GP							Nut , 1/2" BSF	1	—	C	
1078	EEAS.28/35FU							Washer , packing, 0"33 dia.	1	DTD.124	C	

CANBERRA E Mk. 15

Page WC.2A/B

UNDERCARRIAGE NOSEWHEEL

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
3754	E.A1.40.703	LEVER, BRACKET, UNDERCARRIAGE SEQUENCE VALVE, ASSEMBLY						1	—	B/MR	W.4
		Spares for:—									
	E.A1.40.707	BRACKET , valve, sequence, front						1	—	—	W.4
	E.A1.40.705	BRACKET , valve, sequence, rear						1	—	—	
		Attaching parts for E.A1.40.707 and E.A1.40.705:—									
28D/9133012	A25/3C	Bolt, 2 BA						2	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA						2	—	C	
1438863	E.A1.40.573	LEVER , sequence valve operating						1	DTD.683	C	W.4
		Attaching parts for E.A1.40.573:—									
13182	E.A1.40.709	Bolt, operating lever fulcrum						1	S.96	C	W.4
28M/5808573	A27/CS	Nut, 2 BA						1	—	C	
28W/9419475	SP.15/C	Washer, 2 BA						1	—	C	
	E.A1.40.711	Washer, fulcrum bolt						2	S.96	—	W.4
179	E.A1.40.569	TAPPET , valve screw						1	S.96	C	W.6
		Attaching parts for E.A1.40.569:—									
28M/1007403	A27/ET	Nut, adjusting						1	—	C	

Restricted

Ref. No.	Part No.							Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6				M.R. L.M.	

CANBERRA B, MK. 15

Page WC.3

UNDERCARRIAGE NOSEWHEEL

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
180	E.A1.40.531	LINK DOOR, OPERATING, ASSEMBLY	2	—	C	W.6
		Spares for:—				
4778	E.A1.40.535	BOLT , eye, assembly	2	—	C	W.6
		Attaching parts for E.A1.40.535:—				
33793	E.A1.40.541	Nut (Make from Ref. 14533)	2	MS.	C	W.6
	E.A1.40.533	TUBE , assembly	1	—	—	W.6
		Attaching parts for E.A1.40.533:—				
168	E.A1.40.595	Bolt , link to crosshead	1	—	C	W.6
167	E.A1.40.593	Bolt , link to door	1	—	C	W.6
28M/1011467	A27/ES	Nut , 1/2" BSF	2	—	C	
8987	E.A3.40.169	MUDGUARD, NOSEWHEEL, ASSEMBLY	1	—	B	W.4
		Consisting of:—				
5503	E.A3.40.133	FLAP , rubber, nosewheel mudguard	1	Shore 40	C	W.4
5504	E.A3.40.127	MUDGUARD , nosewheel	1	L.72	C	W.4
		Attaching parts for E.A3.40.127:—				
28D/1013177	AS.1242/2E	Bolt , 1/2" BSF	9	HTS.	C	
5505	E.A3.40.131	Nut , 1/2" BSF	3	S.95	C	
28M/1007403	A27/ET	Nut , 1/2" BSF	6	MS.	C	
6948	E.A3.40.165	STAY , mudguard, assembly	1	—	C	W.4
6949	E.A3.40.167	STAY , end, mudguard, attachment	3	DTD.683	C	W.4
		Attaching parts for E.A3.40.167:—				
28D/9133012	A25/3C	Bolt , 2 BA	12	HTS.	C	
28M/1006473	A27/CT	Nut , 2 BA	12	MS.	C	
28W/9419475	SP.15/C	Washer	12	—	C	
20930	E.A3.40.135	STRIP , backing	1	L.72	C/MR	W.4
		Attaching parts for E.A3.40.135:—				
28D/1007974	AS.1242/1/2C	Bolt , 2 BA	3	HTS.	C	
5506	E.A3.40.137	Nut , 2 BA	3	S.95	C	
		Attaching parts for E.A3.40.169:—				
28D/1011300	A25/7J	Bolt , 1/2" BSF	3	HTS.	C	
28W/9419477	SP.15/J	Washer , 1/2" BSF	3	LA.	C	
8988	E.A3.40.170	MUDGUARD, NOSEWHEEL, ASSEMBLY	1	—	B	W.4
		Spares for this assembly are identical with those for Part No. E.A3.40.169				
28N/9156370	SP.21	NIPPLE , lubricating	1	—	C	
3688	E.A6.40.37	ROD, RADIUS, ASSEMBLY	1	—	A	
		Consisting of:—				
5126	E.A3.40.77	BRACKET , micro switch	1	L.72	C	W.5
		Attaching parts for E.A3.40.77:—				
28D/9436920	A25/1C	Bolt , 2 BA	3	—	C	
28W/9416643	SP.47/C	Washer , spring	3	—	C	
3656	E.A3.40.65	BUSH , spring, plunger	1	DTD.197	C	W.5
186	E.A1.40.621	DOWEL	2	S.11	C	W.5
1893	E.A6.40.21	END, PLUG, RADIUS ROD, ASSEMBLY	1	—	B	W.5
		Spares for:—				
187	E.A1.40.363	BUSH , bearing	2	DTD.197	C	W.5
28N/9156370	SP.21	NIPPLE , lubricating	1	—	C	

UNDERCARRIAGE NOSEWHEEL

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Place No.
					M.R. L.M.	
		1 2 3 4 5 6				
4937	E.A1.40.311	FINGER, operating, undercarriage "up" micro switch	1	L.40	C	W.5
		Attaching parts for E.A1.40.311:—				
4447	E.A1.40.321	Bolt, bearing, for micro switch operating finger ...	1	DTD.126A	C	W.5
28M/9436836	AGS.2001/C/2	Nut, 2 BA ...	1	—	C	
28W/9419402	SP.13/C	Washer ...	1	—	C	
1894	E.A6.40.29	FORK, strut end ...	1	DTD.683	C	W.5
3655	E.A3.40.73	HOUSING, spring locking plunger ...	1	L.40	C	W.5
		Attaching parts for E.A3.40.73:—				
28D/1011240	A25/5E	Bolt, 1/2" BSF ...	4	—	C	
28W/9416644	SP.47/E	Washer, 1/2" BSF ...	4	—	C	
41255	E.A9.40.49	LEVER, LOCKING, NOSEWHEEL UNDER-CARRIAGE, ASSEMBLY	1	—	B	W.5
		Spares for:—				
190	E.A1.40.337	BUSH, bearing ...	2	DTD.197	C	W.5
28N/9156370	SP.21	NIPPLE, lubricating ...	1	—	C	
192	E.A1.40.339	ROLLER, assembly ...	1	—	C	W.5
		Attaching parts for E.A1.40.339:—				
188	E.A1.40.343	Bolt ...	1	S.11	C	W.5
28M/1011467	A27/ES	Nut, 1/2" BSF ...	1	—	C	
28P/1007741	SP.9/C8	Pin, split ...	1	—	C	
28W/9419405	SP.15/E	Washer ...	1	—	C	
191	E.A1.40.341	ROLLER, assembly ...	1	—	C	W.5
		Attaching parts for E.A1.40.341:—				
189	E.A1.40.345	Bolt ...	1	S.11	C	W.5
28M/1011467	A27/ES	Nut, 1/2" BSF ...	1	—	C	
28P/1007741	SP.9/C8	Pin, split ...	1	—	C	
28W/9419405	SP.15/E	Washer ...	1	—	C	
		Attaching parts for E.A9.40.49:—				
34309	E.A9.40.47	Bolt, operating lever bearing ...	1	S.96	C	W.5
28M/1011476	A27/JS	Nut, 1/2" BSF ...	1	—	C	
203	E.A1.40.327	Washer, at operating lever bearing ...	1	DTD.126A	C	W.5
1889	E.A6.40.23	LINK, STAY, NOSEWHEEL UNDERCARRIAGE AT RADIUS ROD, ASSEMBLY	1	—	C	W.5
		Spares for:—				
194	E.A1.40.359	BUSH, bearing ...	2	DTD.197	C	W.5
195	E.A1.40.361	BUSH, bearing ...	2	DTD.197	C	W.5
28N/9156370	SP.21	NIPPLE, lubricating ...	2	—	C	
		Attaching parts for E.A6.40.23:—				
184	E.A1.40.681	Bolt, connecting radius rod and stay link ...	1	S.11	C	W.5
170	E.A1.40.683	Bolt, connecting stay link and undercarriage leg ...	1	S.11	C	W.4
28M/9129449	A27/LS	Nut, 1/2" BSF ...	2	—	C	
28S/9146378	A35/C8	Screw, 2 BA ...	1	—	C	
202	E.A1.40.325	Washer, cap ...	2	DTD.126A	C	W.5
28W/9416643	SP.47/C	Washer, spring ...	1	—	C	
28N/9156370	SP.21	NIPPLE, lubricating ...	1	—	C	
1100	EEAS.37/24A	NIPPLE, 1/2" ...	24	—	C	W.5

CANBERRA E Mk. 15

Page WC.5


UNDERCARRIAGE NOSEWHEEL

Ref. No.	Part No.	Description						No. Off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
6187	E.A1.40.415	PAD , switch, undercarriage "Down" micro switch						1	L.40	C	W.5
28D/9133012	A25/3C	Attaching parts for E.A1.40.415:—						3	—	C	
28W/9416643	SP.47/C	Bolt, 2 BA						3	—	C	
		Washer, spring									
3659	E.A3.40.75	PIN , latch						1	S.96	C	W.5
197	E.A1.40.277	PLATE , stop stay link						1	S.96	C	W.5
		Attaching parts for E.A1.40.277:—									
28D/1011240	A25/5E	Bolt, 1/2" BSF						2	—	C	
28W/9416644	SP.47/E	Washer						2	—	C	
3657	E.A3.40.67	SCREW , cap retaining, undercarriage locking						1	L.40	C	W.5
		plunger									
3660	E.A3.40.71	SCREW , grub, latch pin and bush, retaining ...						1	S.97	C	W.5
199	E.A1.40.431	SPINDLE , hook latch, nosewheel undercarriage stay						1	S.96	C	W.5
		Attaching parts for E.A1.40.431:—									
28N/2001540	AGS.2031/4	Circlip, "Seegar" external, 3/8" dia.						2	—	C	
	E.A1.40.309	Tube, distance						1	—	—	W.5
	EEAS.38/4A	SPOKE , 1/4" BSF (Make from 28R/6330)						12	S.96	LM	W.5
3658	E.A3.40.69	SPRING , compression, operating locking plunger,						1	Spring Wire	C	W.5
		14 SWG									
201	E.A1.40.313	SPRING , leaf, for micro switch operating finger						1	Spring Steel	C	W.5
5CW/9438275	BURGESS BZ.38H	SWITCH , sensitive, undercarriage "up" lock, type						1	—	B	
		1A (Pre-Mod. 4080)									
5CW/1085884	HONEYWELL 1H.Y1	SWITCH , limit, undercarriage "up" lock (Mod.						1	—	B	
		4080)									
		Attaching parts for switches:—									
28D/1011011	A25/8B	Bolt, 4 BA						2	—	C	
29M/1278189	AGS.2001/B/1	Nut, 4 BA						2	—	C	
28W/9419474	SP.15/B	Washer						2	—	C	
5CW/9994686	BURGESS	SWITCH , micro, type 4A, undercarriage "down"						1	—	C	
		lock (Pre-Mod. 4080)									
5CW/1085884	HONEYWELL 1H.Y1	SWITCH , limit, undercarriage "down" lock (Mod.						1	—	B	
		4080)									
		Attaching parts for switches:—									
28D/1214303	AS.1242/10B	Bolt, 4 BA						2	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA						2	—	C	
28W/1278189	SP.15/B	Washer						2	—	C	
1895	E.A6.40.27	TUBE , strut, nose, undercarriage						1	T.60	C	W.5
		Attaching parts for E.A6.40.27:—									
161	E.A1.40.451	Bolt, c/w spoke and nut, radius rod strut bearing						1	—	C	W.6
28M/9129449	A27/LS	Nut, 3/8" BSF						1	—	C	
181	E.A1.40.449	Pin, strut, pivot radius rod bearing						1	S.65	C	W.6
202	E.A1.40.325	Washer						2	DTD.226A	C	W.6
1439144	E.A3.40.261	ROD, RADIUS, ASSEMBLY (S.O.O.) (MOD. 4449) ...						1	—	A	
		Spares for this assembly are identical with									
		those for assembly Part No. E.A6.40.37,									
		Page WC.3, except for the following									
		deletions and additions									
		Delete:—									
5126	E.A3.40.77	BRACKET , micro switch						1	L.72	C	W.5
6187	E.A1.40.415	PAD , switch, undercarriage "Down" micro switch						1	L.65	C	W.5

UNDERCARRIAGE NOSEWHEEL

Ref. No.	Part No.	Description						No. Off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
		Delete:— (continued)									
201	E.A1.40.313	SPRING, leaf, for micro switch operating finger						1	S.S	B	W.5
5CW/1085884	HONEYWELL	SWITCH, limit, undercarriage "up" and "down"						2	—	B	
	1H.Y1	lock (Mod. 4080)									
		Add:—									
1439148	E.A3.40.255	BRACKET, micro switch						1	L.72	C	W.5
1439145	E.A3.40.241	PAD, switch, undercarriage "down" micro switch						1	L.65	C	W.5
1439146	E.A3.40.259	SPRING, leaf, for micro switch operating finger						1	S.513	C	W.5
	DOWTY										
5CW/12444	DN.1322Z Mk. 2	SWITCH, limit, undercarriage "up" and "down"						2	—	B	
		lock (Mod. 4449—S.O.O.) (Pre-Mod. 4959)									
5CW/13598	DN.1322Z Mk. 3	SWITCH, limit, undercarriage "up" and "down"						2	—	B	
		lock (Mod. 4959)									
3748	E.A1.40.455	SCREW, grub, 2 BA, strut bearing retaining ...						1	S.96	C/MR	W.6
343	E.A1.31.277	SHIM						2	—	C	
	or										
	EEAS.27/8/4										
4141	E.A1.45.989	SHIM						2	—	C	
204	E.A1.40.599	SPRING, return, undercarriage hook, 14 SWG ...						1	Spring Steel	C	W.4
1439147	E.A3.40.245	SPRING, return, u/c hook (S.O.O.) (Mod. 4449) ...						1	S-201	C	
205	E.A1.40.601	SPRING, tension, undercarriage sequence valve ...						1	Spring Steel	C	W.6
1587	E.A1.40.719	SPRING, forward door latch						1	Spring Steel	C	W.4
4693	E.A3.40.157	STOP, door jack extension						2	S.96	C/MR	W.6
		Attaching parts for E.A3.40.157:—									
28M/1011467	A27/ES	Nut, 3/4" BSF						1	—	C	
992	E.A1.40.701	STOP, sequence valve lifter						1	S.96	C	W.6
		Attaching parts for E.A1.40.701:—									
28W/9419475	SP.15/C	Washer						1	—	C	
39182	E.A9.40.37	TAPPET, front latch lever						1	—	C	W.4
		Attaching parts for E.A9.40.37:—									
28M/1006473	A27/CT	Nut, 2 BA						1	—	C	
3755	E.A1.40.731	TUBE, distance						1	M.S.	C	
	DUNLOP										
27A/2655	KK.2	TUBE						2	—	A	
	DUNLOP										
27A/4683	DR.2565	TYRE, 26" x 6"5 x 14"						2	—	A	
	or										
	DUNLOP										
27A/2654	KKEN.14N	TYRE, 26" x 6"5 x 14"						2	—	A	
	or										
	GOODYEAR										
27A/4683	GA.1202	TYRE, 26" x 6"5 x 14"						2	—	A	
	or										
	FIRESTONE										
27A/4683	ZA.297	TYRE, 26" x 6"5 x 14"						2	—	A	
	DOWTY										
27QM/	2'0039.6040	UNIT, undercarriage (For spares see AP.4515B, Vol. 3, Pt. 1) (Mod. 4855)						1	—	A	
3752	E.A1.40.587	WASHER, special packing, undercarriage sequence valve, mounting bolt						2	DTD.5044	C	W.4
1877	EEAS.28/30.EU	WASHER, special, 18 SWG						1	DTD.124	C	
	DUNLOP										
27A/2814	AH.9590	WHEEL, landing						2	—	A	


Plate W.I.

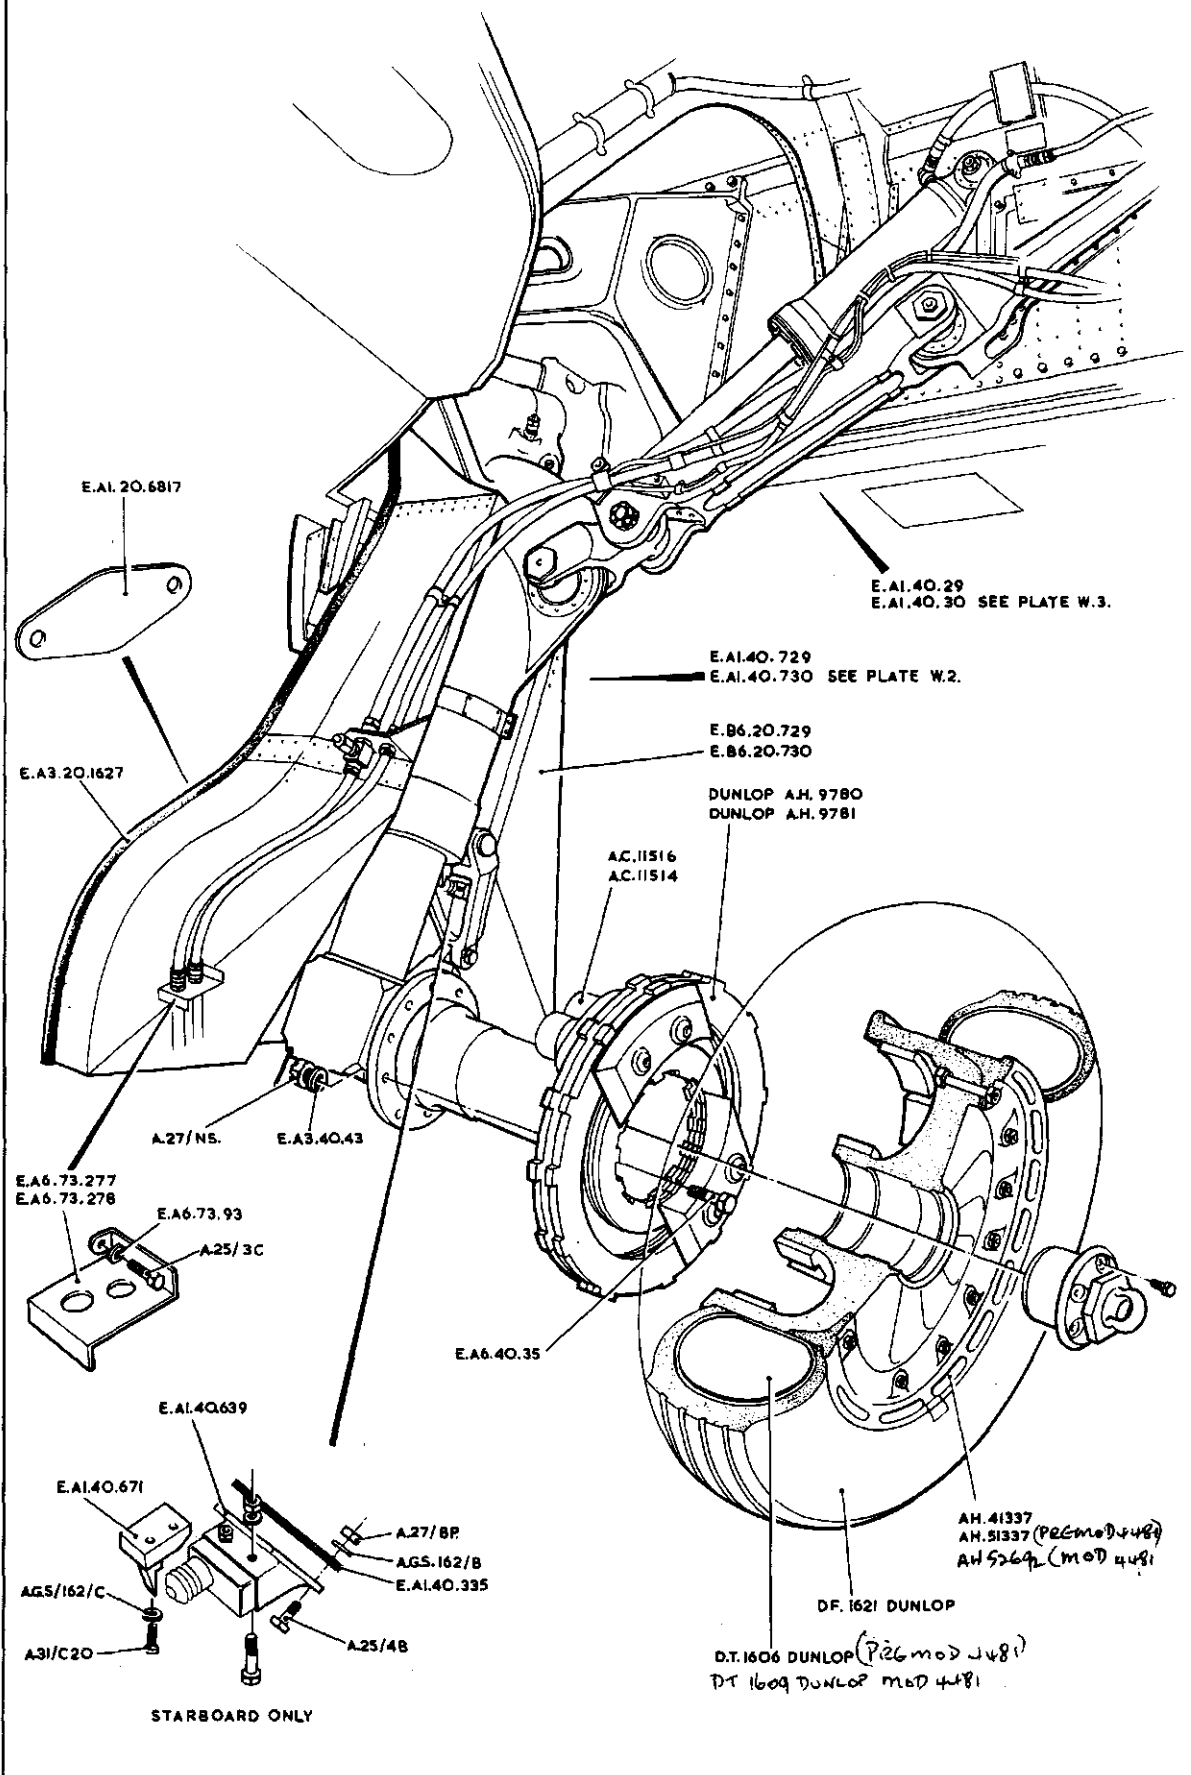

MAIN UNDERCARRIAGE

RESTRICTED


Plate W.3.

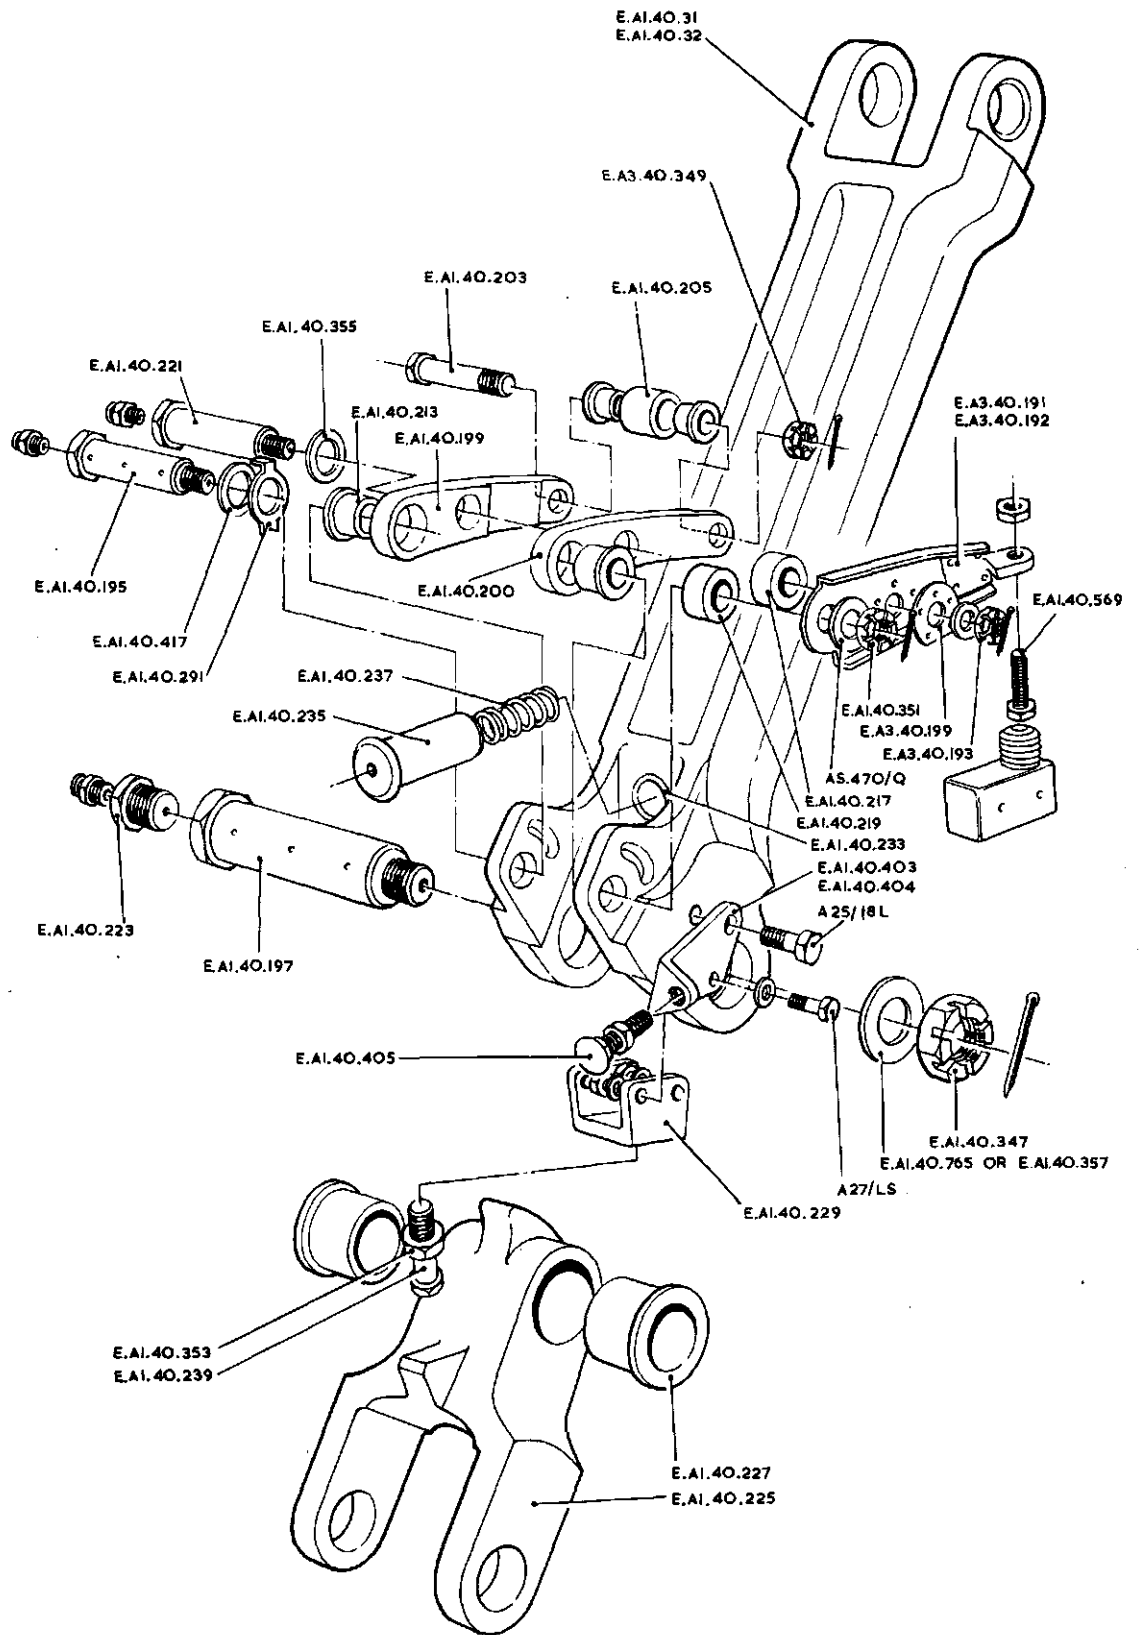

MAIN UNDERCARRIAGE SIDE STAY

RESTRICTED


Plate W4

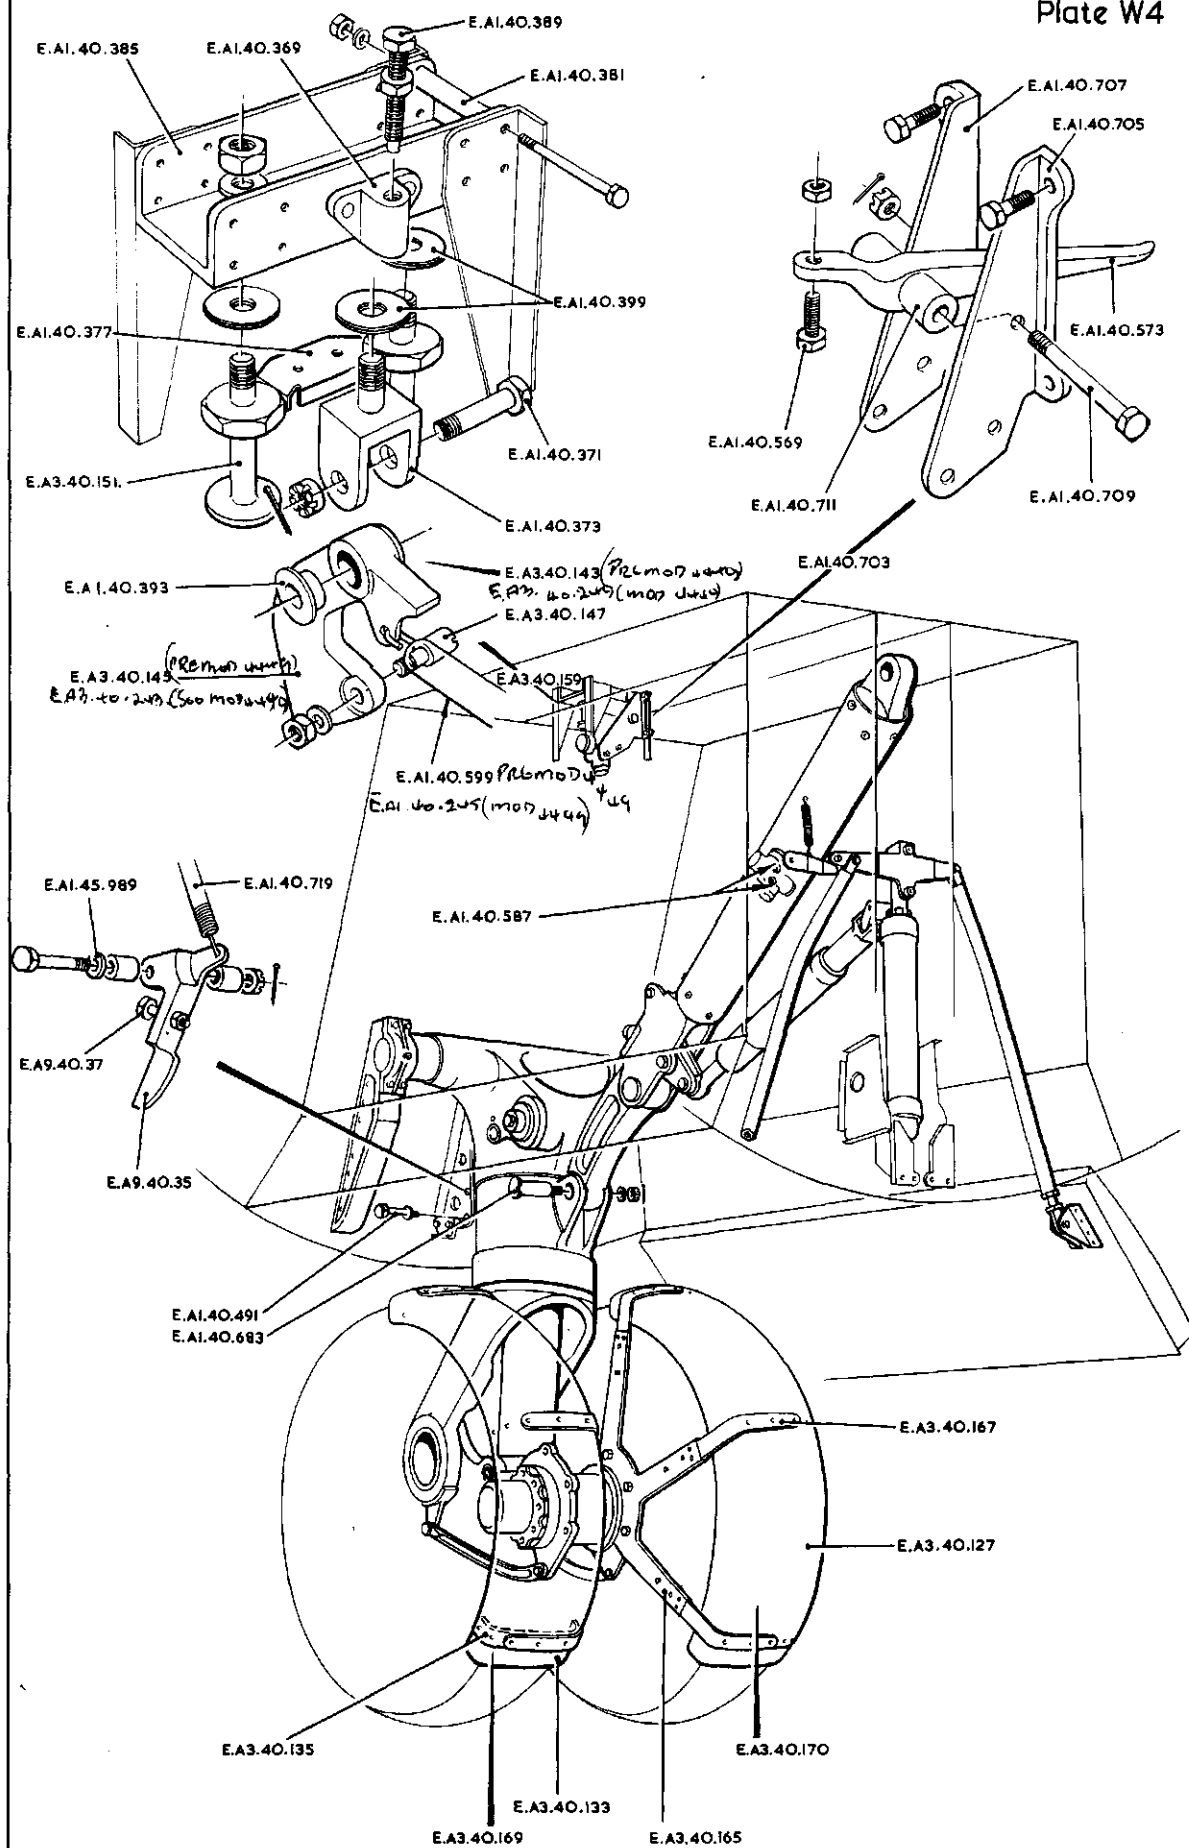

NOSE UNDERCARRIAGE


RESTRICTED

Plate W5

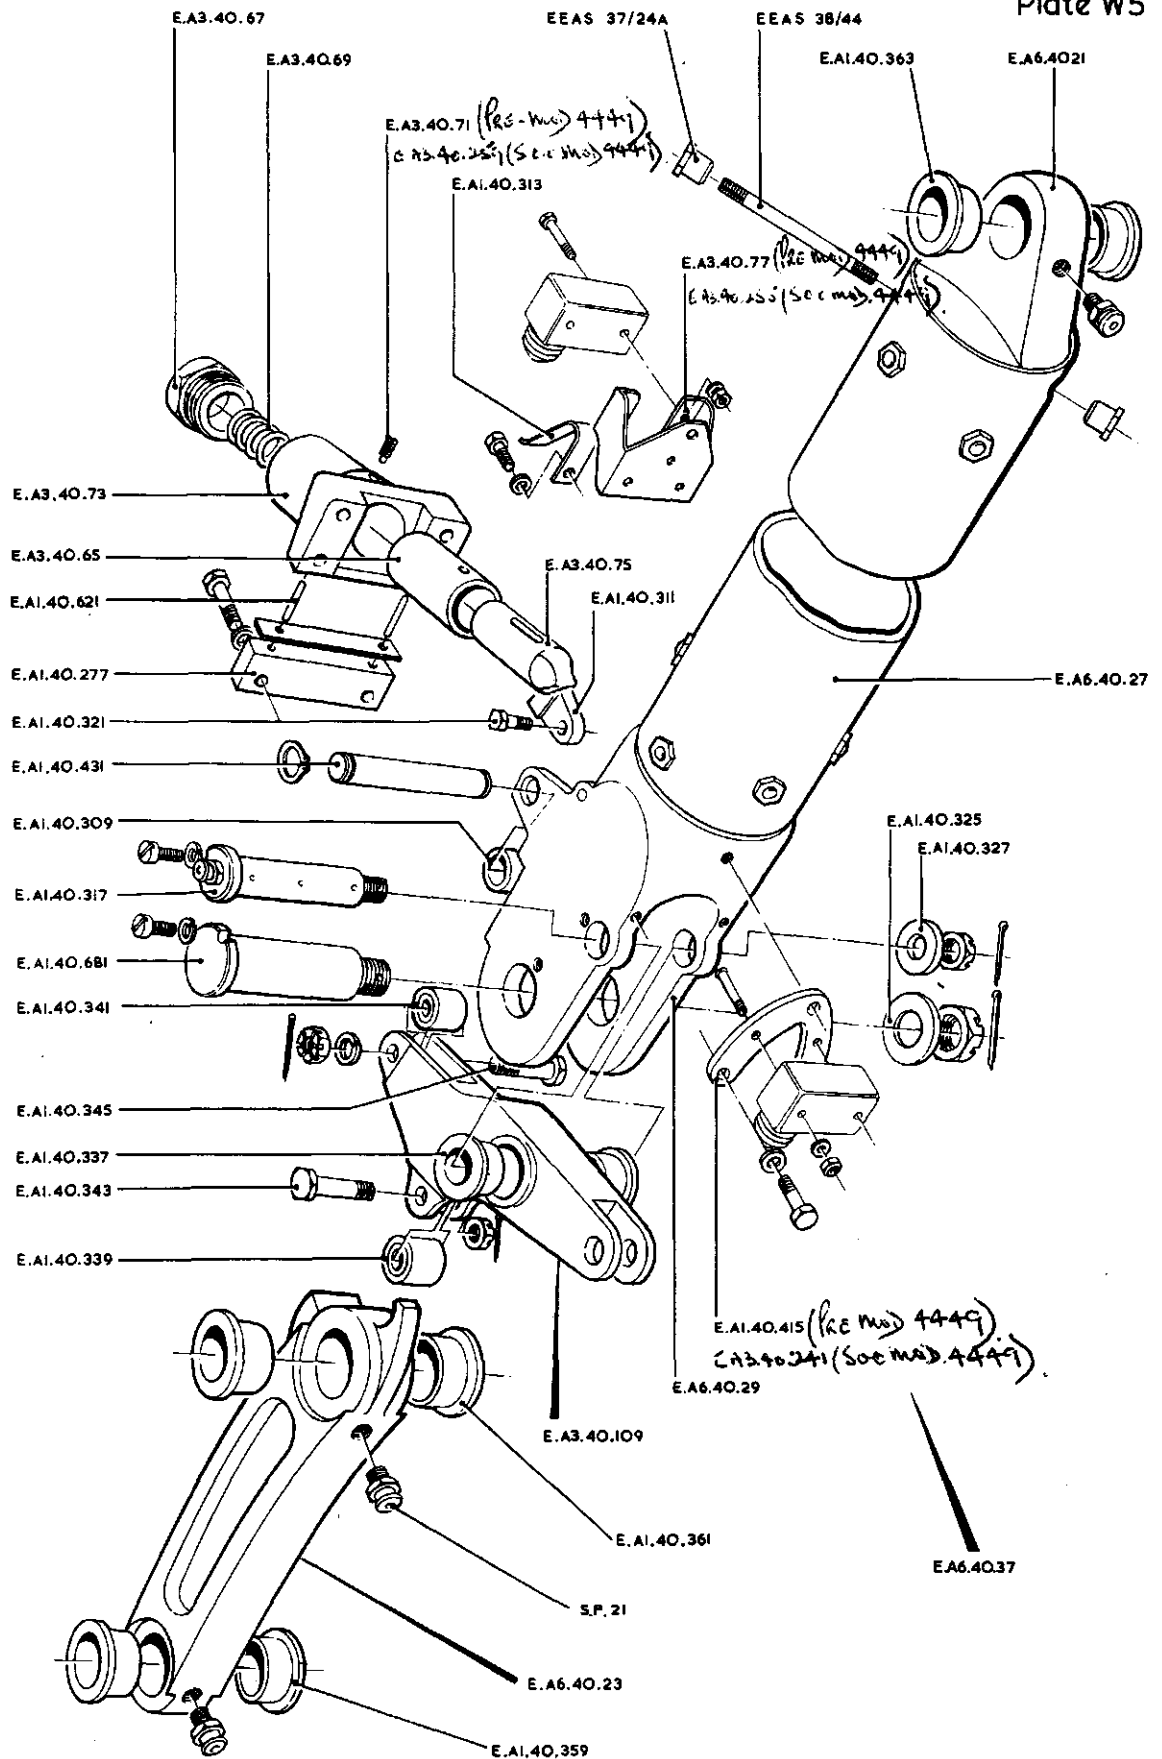

NOSEWHEEL RADIUS ROD

RESTRICTED

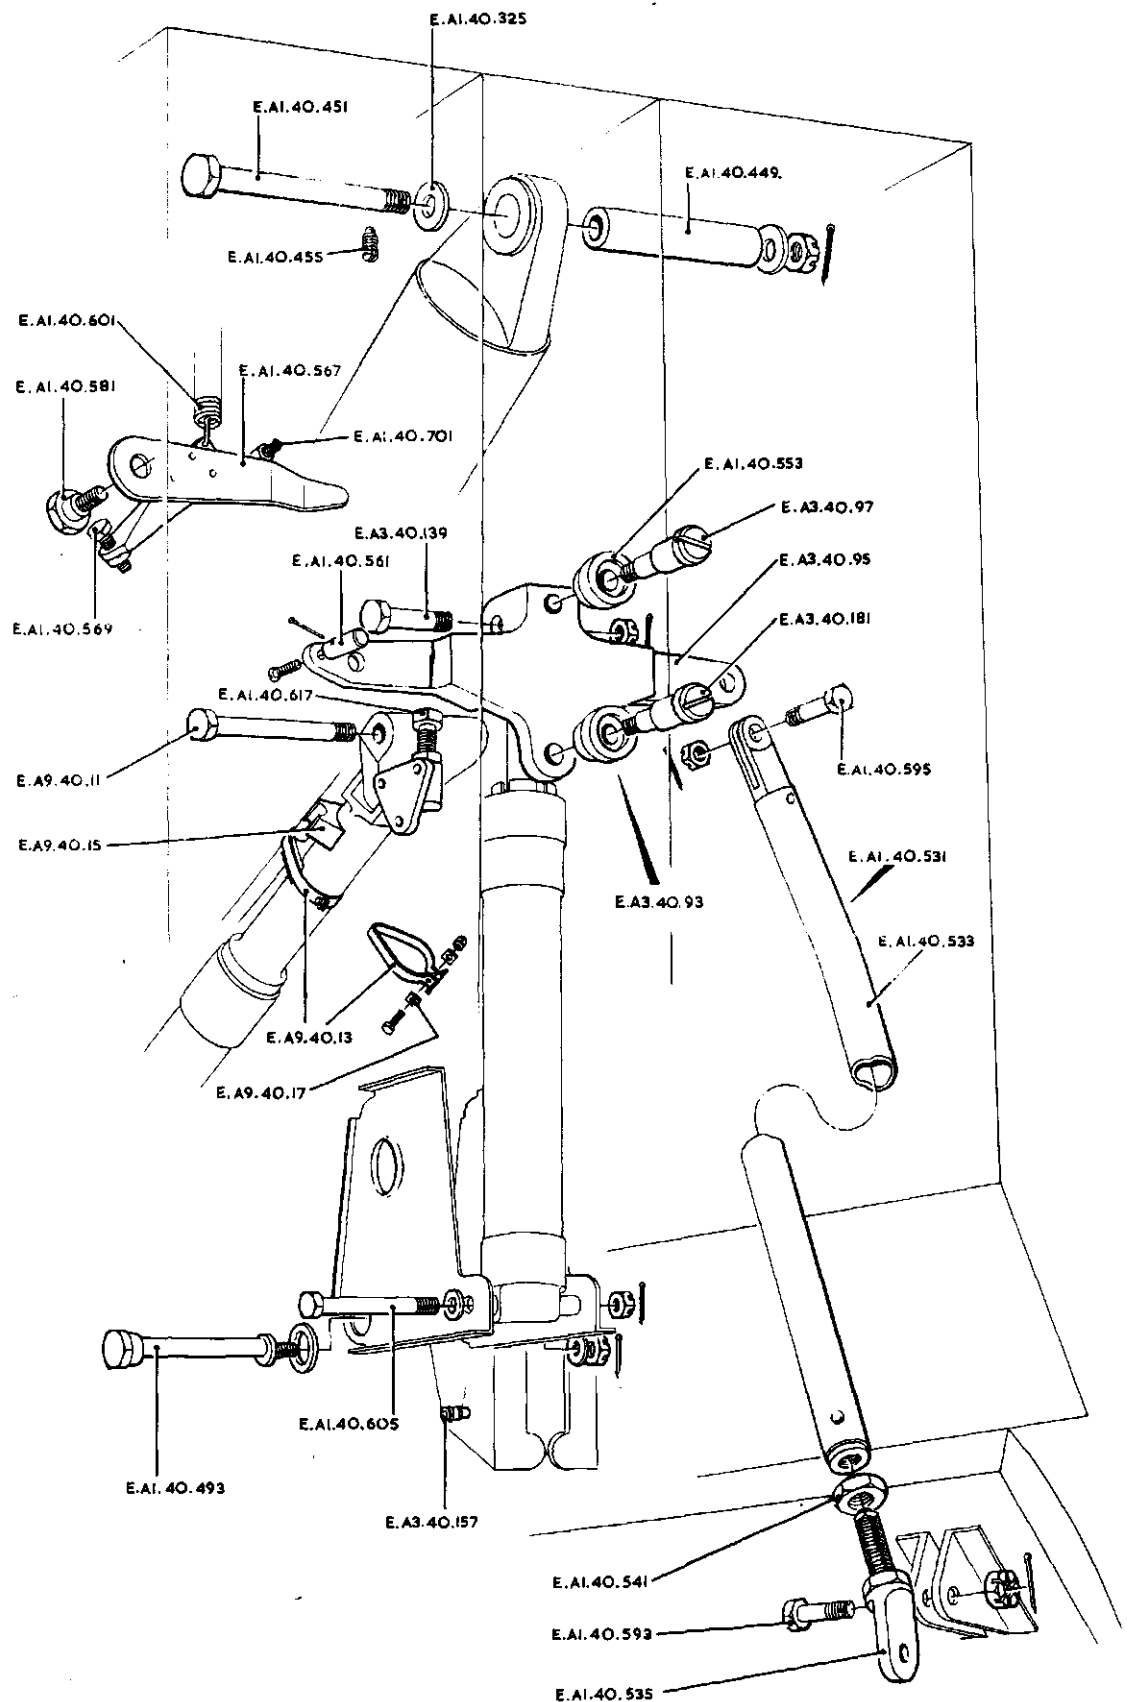

NOSEWHEEL DOOR MECHANISM

RESTRICTED