

SERVICES

AIR CONNECTIONS TO ENGINE COMPRESSOR IN PORT WING

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	AIR CONNECTIONS TO ENGINE COMPRESSOR IN PORT WING, ASSEMBLY (E.G7.50.21)						—	—	—	1/13
	34853	ADAPTOR, bulkhead						1	S80	C	1/17
	19854	BRACKET AND CLIP FOR ENGINE BREATHING PIPE, ASSEMBLY						1	—	C	1/28
	32813	CLIP, half						1	—	C	1/23
	28D/9140644	Attaching parts for E.A4.61.113:—						2	—	C	1/26
	28M/1278790	Bolt, 2 BA hex. head						2	—	C	1/29
	26DK/11917	Nut, stiff, 2 BA						1	—	C	1/15
	34854	CLAMP, pipe						1	—	C	1/4
	34855	CLAMP, pipe						2	—	C	1/1
	34856	CLIP, pipe						1	S521	C	1/24
	28D/9133012	Attaching parts for E.G7.50.43:—						1	—	C	1/27
	28M/1278190	Bolt, 2 BA hex. head						1	—	C	1/19
	26DK/9340	Nut, stiff, 2 BA						1	—	C	1/20
	28E/9713018	Washer, D						1	L72	C	1/21
	34857	CLIP, pipe						2	—	C	1/18
	42651	GASKET, bulkhead sealing, 1/32" thick						1	DTD416	B	1/32
		MANIFOLD, TURBINE AND CABIN AIR SUPPLY, GROUP						—	—	—	—
		Consisting of:—						2	30/158	—	1/30
	E.G7.50.33	FITTING, grooved end						2	30/158	—	1/31
	E.G7.50.35	LOCK-NUT						1	S521	—	1/33
	E.G7.50.7	MANIFOLD, assembly						1	S521 or 30/158	—	1/34
	E.G7.50.19	PIECE, tee						1	S521 or 30/158	—	1/36
	E.G7.50.49	PIECE, tee						1	S521 or 30/158	—	1/35
	E.G7.50.31	RING, piston						7	DTD719	—	1/25
	34858	PIPE, flexible, turbo alternator supply						1	—	A	1/8
	19836	PIPE, WHEEL CASE BREATHING, ASSEMBLY						1	L54	C	1/9
	1445	Spares for:—						2	L72	C	1/9
		RING, clamping						—	—	—	—

SERVICES

AIR CONNECTIONS TO ENGINE COMPRESSOR IN PORT WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index	
		1	2	3	4	5	6	7					
	5850	E.A3.50.9	SLEEVE, connecting							1	Silastic	C	1/10
	34859	E.G7.50.51	PIPE, flexible, cabin air supply							1	—	B	1/22
R	28F/4169558	AS.5402	RING, sealing							1	—	C	1/16
R	28F/4051829	AS.5406	RING, sealing							1	—	C	1/5
R	28F/4051855	AS.5407	RING, sealing							2	—	C	1/2
	34860	E.G7.50.41	SHIM, laminated, manifold outlet adaptors,							3	Lam. Shim	C	1/6
			.05 thick x .002 lam.										
R	34B/2245076	DALTON & CO.	SILKOLENE, grade 762							QR	DTD900 4344	C	1/7
	34861	E.G7.50.69	TEE, cable air supply and branch to 2 speed							1	30/178	C	1/12
			generator injector pipe										

A.P.101B-0417-3A

Page NA1

SERVICES

AIR CONNECTIONS TO ENGINE COMPRESSOR IN STARBOARD WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	AIR CONNECTIONS TO ENGINE COMPRESSOR IN STARBOARD WING, ASSEMBLY (E.G7.50.23)							—	—	—	1/14
		Spares for:—										
34853	E.G7.50.57	ADAPTOR, bulkhead							1	S80	C	1/17
19854	E.A4.61.107	BRACKET AND CLIP FOR ENGINE BREATHER PIPE, ASSEMBLY							1	—	C	1/18
		Spares for:—										
32813	E.A4.61.113	CLIP, half							1	—	C	1/23
		Attachments:—										
28D/9140644	A.25/9C	Bolt, 2 BA hex. head							2	—	C	1/26
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							2	—	C	1/29
26DK/11917	H. K. PORTER C.6045/18B	CLAMP, pipe							1	—	C	1/15
34854	H. K. PORTER C.6045/30B	CLAMP, pipe							1	—	C	1/4
34855	H. K. PORTER C.6045/34B	CLAMP, pipe							2	—	C	1/1
34857	E.G7.50.71	GASKET, bulkhead sealing, 1/32" thick							2	DTD.416	C	1/18
42651	E.G7.50.5	MANIFOLD, TURBINE AND CABIN AIR SUPPLY, GROUP							1	—	B	1/32
		Consisting of:—										
	E.G7.50.33	FITTING, grooved end							2	S521	—	1/30
	E.G7.50.35	LOCK NUT							2	S521	—	1/31
	E.G7.50.7	MANIFOLD, assembly							1	S521	—	1/33
	E.G7.50.19	PIECE, tee							1	S521	—	1/34
	E.G7.50.49	PIECE, tee							1	S521	—	1/36
	E.G7.50.31	RING, piston							7	DTD.719	—	1/35
34862	E.G7.50.11	PIPE, flexible, turbo alternator supply							1	—	A	1/3
19836	E.A3.50.11	PIPE, WHEEL CASE BREATHER, ASSEMBLY							1	L54	C	1/8
		Spares for:—										
1445	EEAS.66/4	RING, clamping							2	L72	C	1/9
5850	E.A3.50.9	SLEEVE, connecting							1	Silastic	C	1/10
34863	E.G7.50.53	PIPE, flexible, cabin air supply							1	—	B	1/11
28F/17675	AS.5402	RING, sealing							1	—	C	1/16
28F/4051829	AS.5406	RING, sealing							1	—	C	1/5
28F/4051855	AS.5407	RING, sealing							2	—	C	1/2
34860	E.G7.50.41	SHIM, laminated, manifold outlet adaptors, ".05 thick x .002 laminated							3	Lam. Shim	C	1/6
34861	E.G7.50.69	TEE, cabin air supply and branch to 2 speed generator cooling injector pipe							1	T55	C	1/12

AIR CONNECTIONS TO ENGINE COMPRESSOR IN STARBOARD WING

[illegible]

SERVICES
AIR TURBINE PIPES IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	AIR TURBINE PIPES IN PORT WING ASSEMBLY (EG7.75.9) Spares for:	—	—	2/3
H. K. PORTER C5642/1-3/4-2B	. CLAMP, pipe	1	—	3/13
H. K. PORTER C5642/2-3/4B	. CLAMP, pipe	1	—	3/18
H. K. PORTER C5642/3B	. CLAMP, pipe	2	—	2/8
H. K. PORTER C5642/3-3/4-4B	. CLAMP, pipe	1	—	2/14
H. K. PORTER C5642/6B	. CLAMP, pipe	1	—	3/15
H. K. PORTER C6045/30B	. CLAMP, pipe	5	—	2/18
EG7.75.113	. CLIP, bonding, joint sleeve	1	L73	3/6
EB2.55.109	. CLIP, bonding, joint sleeve	2	L72	3/3
BELLS MINOX S3	. CLIP, worm drive, joint sleeve securing	2	—	3/4
BELLS MINOX S4	. CLIP, worm drive, joint sleeve securing	2	—	3/1
BELLS MINOX S5	. CLIP, worm drive, half rings clamping	1	—	2/39
EG7.75.121	. FAIRLEAD, half, rib 2B, assembly	1	Ferobestos	3/20
	Attaching parts for EG7.75.121:			
EEAS299/50/50C	. Bolt, 2 BA 120° c'sk head	3	S80	3/24
EG7.75.123	. FAIRLEAD, half, rib 2B, assembly	1	Ferobestos	3/26
	Attaching parts for EG7.75.123:			
EEAS299/50/50C	. Bolt, 2 BA 120° c'sk head	3	S80	3/28
EG7.75.195	. FAIRLEAD, half, rib 2, and diaphragm between rib 2 and 2B	4	Ferobestos	2/30
	Attaching parts EG7.75.195:			
A25/5C	. Bolt, 2 BA hex. head	12	—	2/34
AGS2001/C/1	. Nut, stiff, 2 BA	12	—	2/31
SP15/C	. Washer, 2 BA plain	24	—	2/35
AVICA CE7019	. JOINT, bellows and gymbal, between leading edge ribs 1 and 2A	1	—	2/19
EG7.75.15	. PIPE, assembly, from clamp connection rib 2 to bellows joint clamp outboard of rib 2A	1	30/178	2/17
EG7.75.25	. PIPE, assembly, bend, c/w avica joint, from butterfly valve to clamp connection to air turbine, rib 3-3A	1	30/178	2/12
EG7.75.27	. PIPE, assembly, from clamp connection at diaphragm between rib 2 and 2B to butterfly valve con- nection	1	30/178	2/6

SERVICES

AIR TURBINE PIPES IN PORT WING

Part Number	Description	No. Off	Mtl. Spec.	Plate No.
	1 2 3 4 5 6			
EG7.75.29	PIPE, assembly, c/w double avica joint, from connection at diaphragm between rib 2 and 2B to clamp connection at rib 2	1	30/178	2/13
EG7.75.57	PIPE, assembly, from sleeve joint to air turbine inboard of rib 2	1	L54	3/12
EG7.75.59	PIPE, assembly, 2-way, from sleeve joint and turbine cooling air outlet to connection, rib 3A	1	—	3/11
EG7.75.67	PIPE, assembly, flanged end, from gimbal joint to flange connection at leading edge rib 1A	1	30/178	2/20
EG7.75.65	PIPE, assembly, 3-way, between sleeve joints and branch to air turbine clamp connection	1	L54	3/10
—	PIPE, GEAR BOX BREATHER, PORT, ASSEMBLY (EG7.75.143)	—	—	3/17
EG7.75.177	BRACKET, pipe clip	1	L73	3/25
BELLS	CLIP, worm drive, for pipe ends	2	—	3/23
BAS243/S.O	CLIP, pipe support	1	—	3/27
AS5418/20	Attaching parts for AS5418/20:			
A25/2C	Bolt, 2 BA hex. head	1	—	3/30
SP15/C	Washer, 2 BA plain	1	—	3/29
EG7.75.173	PIPE, flexible, 1" .0 bore x 26" .0 long	1	BAS37/M	3/21
BELLS	TAPE, bedding, 7/16" 'F' x 3/16" 'D'	QR	—	3/22
BAS23/2/J26	PLATE, fairlead mounting, rib 2	2	L73	2/27
EG7.75.197	Attaching parts for EG7.75.197:			
A25/6C	Bolt, 2 BA hex. head	6	—	2/32
EG7.75.189	Piece, distance	6	L65	2/23
EG7.75.193	Washer, retaining	6	L65	2/29
EG7.75.199	PLATE, fairlead mounting, at diaphragm between rib 2 and rib 2B	2	L73	2/25
	Attaching parts for EG7.75.199:			
A25/4C	Bolt, 2 BA hex. head	6	—	2/26
EG7.75.191	Piece, distance	6	L65	2/33
EG7.75.193	Washer, retaining	6	L65	2/28
EG7.75.79	RING, insulating, air pipe flange leading edge rib 1A	1	Tufnol 6G91	2/21
EG7.75.115	RING, half, pipe at gaiter seal, leading edge rib 1	2	Tufnol 6G91	2/38
AS5403	RING, sealing, pipe clamp connection	1	—	3/14
AS5405	RING, sealing, pipe clamp connection	1	—	3/19
AS5406	RING, sealing, pipe clamp connection	7	—	2/7
AS5408	RING, sealing, pipe clamp connection	1	—	2/15
AS5413	RING, sealing, pipe clamp connection	1	—	3/16

R

A.P.101B-0417-3A

Page NB3

SERVICES
AIR TURBINE PIPES IN PORT WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
34993	E.G7.75.81	SEAL, alternator inlet, at air turbine							1	Rubber	C	2/5
28D/9140644	A.25/9C	Attaching parts for E.G7.75.81:—							2	—	C	2/1
28D/9535710	A.25/11C	Bolt, 2 BA hex. head							2	—	C	2/2
34994	E.G7.75.131	Shim, packing							1	LA3	C	2/16
28W/9419475	SP.15C	Washer, 2 BA plain							4	—	C	2/4
34995	BELLS BA.1252	SEAL, gatter, pipe at leading edge rib 1							1	—	C	2/36
28D/9133011	A.25/2C	Attaching parts for BA.1252:—							11	—	C	2/42
28M/1278190	AGS.2001/C/1	Bolt, 2 BA hex. head							11	—	C	2/40
34996	E.G7.75.105	Nut, stiff, 2 BA							1	L73	C	2/37
28W/9419475	SP.15/C	Plate, backing							11	—	C	2/41
	BELLS Asbestos Ltd.	Washer, 2 BA plain										
R 34997	BAS.16/2/F/40/2.5 or	SLEEVE, type A, ST.L							1	—	C	3/5
R 6119468	BAS.160/1/2/ 2-1/2/2-1/2 BELLS Asbestos Ltd.											
R 34998	BAS.16/2/F/52/3 or	SLEEVE, type A, ST.L							1	—	C	
R 6119469	BAS.160/1/2/ 3-1/4/3-1/4 BELLS											
32B/	BAS.23/2/J26	TAPE, bedding, 7/16" dia. x 3/16" bead							QR	—	—	3/2
41995	AS.2808/5/055	TUBE, distance, bonding clips							3	—	C	3/9
27V/	TEDDINGTON FMP/A/5179	VALVE, butterfly, assembly							1	—		2/9
		Consisting of:—										
R 5W/7098	FJC/A/946	ACTUATOR							1	—	A	2/10
27V/5593	FMP/A/42	VALVE							1	—	A	2/11
28DK/2691	E.B2.65.113	WASHER, 'D', pipe bonding clips							6	L72	C	3/8
	EEAS.27/30/4A	WASHER, shim, fairlead plates, between rib 2 and 2B							QR	L72	—	2/22
	EEAS.27/46/4A	WASHER, shim, failead plates, rib 2							QR	L72	—	2/24

AIR TURBINE PIPES IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	AIR TURBINE PIPE IN STARBOARD WING, ASSEMBLY (EG7.75.11) Spares for:	-	-	4/8
H. K. PORTER C5642/1-3/4-2B	. CLAMP, pipe	1	-	5/14
H. K. PORTER C5642/2-3/4B	. CLAMP, pipe	1	-	5/10
H. K. PORTER C5642/3B	. CLAMP, pipe	2	-	4/12
H. K. PORTER C5642/3-3/4-4B	. CLAMP, pipe	1	-	4/6
H. K. PORTER C5642/6B	. CLAMP, pipe	1	-	5/17
H. K. PORTER C6045/30B	. CLAMP, pipe	3	-	4/16
EG7.75.113	. CLIP, bonding, joint sleeve	1	L73	5/3
EB2.55.109	. CLIP, bonding, joint sleeve	2	L72	5/4
BELLS MINOX S3	. CLIP, worm drive, joint sleeve securing	2	-	5/5
BELLS MINOX S4	. CLIP, worm drive, joint sleeve securing	2	-	5/2
BELLS MINOX S5	. CLIP, worm drive, half rings clamping	1	-	4/24
EG7.75.121	. FAIRLEAD, half, inboard rib 3, assembly Attaching parts for EG7.75.121:	1	Ferobestos	5/30
R EEAS299/50/50C	. Bolt, 2 BA 120° c'sk head	3	BAC.M37	5/31
EG7.75.123	. FAIRLEAD, half, inboard rib 3, assembly Attaching parts for EG7.75.123:	1	Ferobestos	5/20
R EEAS299/50/50C	. Bolt, 2 BA 120° c'sk head	3	BAC.M37	5/21
EG7.75.195	. FAIRLEAD, half, rib 2 Attaching parts for EG7.75.195:	2	Ferobestos	4/35
A25/5C	. Bolt, 2 BA hex. head	6	-	4/33
AGS2001/C/1	. Nut, stiff, 2 BA	6	-	4/36
SP15/C	. Washer, 2 BA plain	12	-	4/34
AVICA CE7019	. JOINT, bellows and gimbal, between rib 1 and 2A	1	-	4/18
EG7.75.13	. PIPE, assembly, bend, c/w avica joint, from butterfly valve to air turbine inlet clamp connection	1	30/170	4/9
EG7.75.15	. PIPE, assembly, from clamp connection rib 2 to avica joint clamp connection outboard of rib 2A	1	30/178	4/17
EG7.75.17	. PIPE, assembly, c/w avica joint, from clamp connection to butterfly valve clamp between ribs 2 and 2B	1	30/170	4/15
EG7.75.57	. PIPE, assembly, from sleeve joint to air turbine cooling air outlet between rib 3 and 3A	1	L54	5/12
EG7.75.59	. PIPE, assembly, 3-way, from sleeve joint and turbine cooling air outlet to connection, rib 3	1	-	5/16

SERVICES

AIR TURBINE PIPES IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.75.91	PIPE, assembly, from connection at rib 1A to avica joint connection between rib 1 and 2	1	30/178	4/19
—	PIPE, GEAR BOX BREATHER OUTLET, ASSEMBLY (EG7.75.133)	—	—	5/19
EG7.75.171	Spares for:			
BELLS	BRACKET, pipe clip	1	L73	5/28
BAS243/S.O.	CLIP, worm drive, minox	1	—	5/23
AS5418/20	CLIP, 'P'	1	—	5/27
A25/2C	Attaching parts for AS5418/20:			
AGS2001/C/1	Bolt, 2BA hex. head	1	—	5/29
SP16/C	Nut, stiff, 2 BA	1	—	5/25
	Washer, 2 BA, plain	1	—	5/26
EG7.75.173	PIPE, flexible, 1" .0 bore x 26" .0 long	1	BAS.37/M	5/24
BELLS	TAPE, bedding, 7/16" 'F' x 3/16" 'D'	QR	—	5/22
BAS23/2/J26	PIPE, assembly, 3-way, between sleeve joint and branch to air turbine, cooling air outlet line, between rib 3 and 3A	1	L54	5/13
EG7.75.65				
EG7.75.197	PLATE, fairlead mounting, rib 2	2	L73	4/22
A25/6C	Attaching parts for EG7.75.197:			
EG7.75.189	Bolt, 2BA hex. head	6	—	4/21
EG7.75.193	Piece, distance	6	L65	4/25
	Washer, retaining	6	L65	4/23
R EG7.75.79	RING, installation air pipe flange to leading edge rib 1A	1	Tufnol 6G91	4/20
EG7.75.115	RING, half, pipe at gaiter seal, leading edge rib 1	2	Tufnol 6G91	4/29
AS5403	RING, sealing, pipe clamp connection	1	—	5/15
AS5405	RING, sealing, pipe clamp connection	1	—	5/11
AS5406	RING, sealing, pipe clamp connection	5	—	4/13
AS5408	RING, sealing, pipe clamp connection	1	—	4/7
AS5413	RING, sealing, pipe clamp connection	1	—	5/18
EG7.75.81	SEAL, alternator inlet, at air turbine	1	Rubber	4/4
	Attaching parts for EG7.75.81:			
A25/5C	Bolt, 2BA hex. head	2	—	4/1
A25/8C	Bolt, 2BA hex. head	2	—	4/2
EG7.75.131	Shim, packing	1	LA3	4/5
SP15/C	Washer, 2BA plain	4	—	4/3
BELLS				
BA1252	SEAL, gaiter, pipe at leading edge rib 1	1	—	4/31
	Attaching parts for BA1252:			
A25/2C	Bolt, 2BA, hex. head	11	—	4/27
AGS2001/C/1	Nut, stiff, 2BA	11	—	4/32
EG7.75.106	Plate, backing	1	L73	4/30
SP15/C	Washer, 2BA plain	11	—	4/28

A.P.101B-0417-3A

Page NC3

SERVICES

AIR TURBINE PIPES IN STARBOARD WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
BELLS Asbestos Ltd. BAS16/2/F/40/2.5 or BAS160/1/2/ 2-1/2/2-1/2 BELLS Asbestos Ltd. BAS16/2/F/52/3 or BAS160/1/2/ 3-1/4/3-1/4 BELLS BAS23/2/J26 AS2808/5/055 TEDDINGTON FMP/A/5179	.	SLEEVE, type A,ST.L					1	—	
	.	SLEEVE, type A,ST.L					1	—	5/8
	.	TAPE, bedding, 7/16" 'F' dia. x 3/16" bead					QR	—	5/1
	.	TUBE, distance, bonding clips					3	—	5/9
	.	VALVE, butterfly, assembly Consisting of:—					1	—	4/14
FJC/A/946	.	ACTUATOR					1	—	4/10
FMP/A/42	.	VALVE					1	—	4/11
EB2.55.113	.	WASHER, 'D', pipe bonding clips					6	L72	5/6
EEAS27/30/4A	.	WASHER, shim, fairlead plates rib 2					QR	L72	4/26

R

SERVICES

AIR TURBINE PIPES IN STARBOARD WING

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

SERVICES

AIR VENTILATED SUIT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6 7	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
	—	AIR VENTILATED SUIT SYSTEM IN CENTRE FUSELAGE, ASSEMBLY (E.G7.75.229) (Pre and Post Mod. 5216 Parts A and B) Spares for:—	—	—	—	6/17
	—	AIR VENTILATED SUIT SYSTEM, REAR FUSELAGE, FRAMES 13 TO 21, ASSEMBLY (E.G7.75.205) Spares for:—	—	—	—	6/23
R	28D/9436920	A25/1C	BOLT, 2 BA (Mod. 5216 Part B)	3	—	C
R	28D/9133011	A25/2C	BOLT, 2 BA (Mod. 5216 Part B)	1	—	C
R		E.G7.75.221	BRACKET, (Pre Mod. 5216 Part A)	1	—	—
		Attaching parts:—				
R	28D/1008149	A25/2B	Bolt, 4 BA	2	—	C
R	28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	2	—	C
R	28W/9419465	SP13/ B	Washer	2	—	C
R	28E/14201	AS.3181/18/C	CLIP, "P" (Pre-Mod. 5216 Part A)	6	—	C
R	26DK/11971	EEAS.143/15H	CLIP, pipe, 1" o/d bonding (Pre-Alt. R60/91)	3	L72	C
		(Mod. 5101) (Pre-Mod. 5216 Part A)				6/22
R	5K/2231767	or AS.4525/16	CLIP, pipe (Alt. R60/91) (Mod. 5101)	3	—	C
R	6879	EEAS.143/28H	CLIP, pipe, 1-1/4" o/d bonding (Pre-Alt. R60/91) (Mod. 5101)	3	L72	C
		or				
R	5K/2231768	AS.4525/20	CLIP, pipe (Alt. R60/91) (Mod. 5101)	3	—	C
	15181	E.B6.75.213	CLIP, pipe saddle, aft of frame 20	3	L72	C
		Attaching parts for E.B6.75.213:—				6/14
	28D/9133011	A25/2C	Bolt, 2 BA hex. head (at 2 positions)	2	—	C
	28D/9133012	A25/3C	Bolt, 2 BA hex. head (at 2 positions)	2	—	C
	28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	2	—	C
	28W/9419475	SP15/C	Washer, 2 BA plain	2	—	C
						6/7 6/8 6/16 6/15
R	5K/7000206	AS.3360/B/4/B	LEAD, bonding (Pre-Mod. 5216 Part A)	5	—	C
R	5K/7000206	AS.3360/B/4B	LEAD, bonding (Mod. 5216 Part A)	4	—	C
R	5995-99- 1037444	AS.3360/C/4/C	LEAD, bonding (Pre-Mod. 5216 Part A)	3	—	C
R	5995-99- 1037444	AS.3360/C/4/C	LEAD, bonding (Mod. 5216 Part A)	1	—	C
R	28F/9486111	AGS.1142/H	NIPPLE (Pre-Mod. 5216 Part A)	1	—	C
R		AGS.2120/H	NIPPLE (Pre-Mod. 5216 Part A)	4	—	C
	28474	E.B6.75.593	PACKING, fibre	1	LFS21	C
R	28P/9719567	SP90/C4	PIN, split (Mod. 5216 Part B)	1	—	C
R		E.G7.75.207	PIPE, assembly, from coupling forward of frame 13 to coupling forward of frame 14, port, 1" o/d x 20 SWG (Pre-Mod. 5216 Part A)	1	L56	—
R		E.G7.75.209	PIPE, assembly, from coupling forward of frame 14 to coupling forward of frame 17, port 1" o/d x 20 SWG (Pre-Mod. 5216 Part A)	1	L56	—
R		E.G7.75.211	PIPE, assembly, from coupling forward of frame 17 to coupling aft of frame 19, port, 1" o/d x 20 SWG (Pre Mod. 5216 Part A)	1	L56	—
R		E.G7.75.533	PIPE, assembly, from coupling aft of frame 19 to tee joint aft of frame 20, 1" o/d x 20 SWG (Pre-Mod. 5216 Part A)	1	L56	—
						6/9 6/33 6/34 6/35 6/36

SERVICES

AIR VENTILATED SUIT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
R 6101456	E.G7.75.213	PIPE, assembly	1	L56	C	6/25
R 1439273	E.G7.75.215	PIPE, assembly	1	L56	C	6/20
R 12185	E.A9.75.429	PIPE, assembly	1	T26	C	6/19
R 1439275	E.G7.75.219	PIPE, assembly	1	L56	C	6/18
R 28F/1011818	AGS.1140/H	PLUG, nipple (Mod. 5216 Part B)	1	—	C	
R 28F/8011823	AGS.904/H	SLEEVE, outer (Mod. 5216 Part B)	1	—	C	
R 12030	EEAS.21/2/ER	WASHER, 'D'	4	L72	C	6/6
R 12929	EEAS.21/9/ER	WASHER, 'D'	6	L72	C	6/24
R —	—	AIR VENTILATED SUIT SYSTEM, FRAMES 12 TO 13, INSTALLATION (E.G7.75.231) Spares for:—	—	—	—	7/28
R E.G7.75.357	E.G7.75.357	BLOCK, mounting (Pre-Mod. 5216 Part A)	1	L64	—	7/2
R 28D/9140648	A25/19C	Attaching parts for E.G7.75.357:—				
R 28M/1278190	AGS.2001/C/1	Bolt, 2 BA hex. head	2	—	C	7/13
R 28W/9419475	SP15/C	Nut, stiff, 2 BA	2	—	C	7/5
R	E.G7.75.341	Washer, 2 BA plain	2	—	C	7/6
R	E.G7.75.341	BRACKET	1	L72	—	7/15
R 28D/9133013	A25/5C	Attaching parts for E.G7.75.341:—				
R 28M/1278190	AGS.2001/C/1	Bolt, 2 BA hex. head	2	—	C	7/14
R	AS.2810/5/043	Nut, stiff 2 BA	2	—	C	7/18
R 28W/9419475	SP15/C	Tube, distance	2	L62	—	7/16
		Washer, 2 BA plain	2	—	C	7/17

A.P.1018-0417-3A

SERVICES

Page ND1B

AIR VENTILATED SUIT IN CENTRE FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

SERVICES

AIR VENTILATED SUIT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.75.353	. . BRACKET, angle, for pipe clip (Pre Mod 5216, Part A)	1	S510	7/37
EG7.75.699	. . BRACKET, relief valve support, forward of frame 13, starboard, assembly (Pre Mod 5216, Part A)	1	L72	7/3
	Attaching parts for EG7.75.699:—			
A25/3C	. . Bolt, 2 BA, hex. head	2	—	7/12
AGS2001/C/1	. . Nut, stiff, 2 BA	2	—	7/10
SP15/C	. . Washer, 2 BA plain	2	—	7/11
KING A/C				
C5642/1-1/4-1-1/2B	. . CLAMP, pipe, for water extractor connecting pipes (Pre Mod 5216, Part A)	2	—	6/1
EB7.75.5073	. . CLIP, pipe saddle, forward of frame 13, starboard (Pre Mod 5216, Part A)	1	L72	7/26
	Attaching parts for EB7.75.5073:—			
A25/13C	. . Bolt, 2 BA, hex. head	2	—	7/21
AGS2001/C/1	. . Nut, stiff, 2 BA	2	—	7/24
EB7.75.5069	. . Packing	1	LFS21	7/22
SP15/C	. . Washer, 2 BA plain	2	—	7/23
AGS1236/A	. . CONE, cap (Mod 5216, Part B)	1	—	—
EC3.75.75	. . CONNECTOR, water extractor vent pipe	1	DTD423	6/30
—	. . CONNECTION, GROUND CHARGING AND BREAKAWAY FORWARD OF FRAME 13, STARBOARD, INSTALLATION (EG7.75.233)	—	—	7/4
	Spares for:—			
NORMALAIR 512070	. . . CONNECTION, breakaway, ground charging	1	—	7/19
	Attaching parts for 512070:—			
AS1242/2C	. . . Bolt, 2 BA c'sk head	4	—	7/20
EB6.75.957	. . . Packing	1	—	—
—	. . CONNECTION, GROUND CHARGING AND BREAKAWAY (REPAIR) (EG7.75.233, SHT 2) (Mod 5216, Part B)	—	—	—
GODFREY 119173	. . EXTRACTOR, water, WE5, Mk.9 (Pre Mod 5216, Part A)	1	—	6/5
	Attaching parts for 119173:—			
AGS605/5	. . Clip, hose (Pre-Alt. R60/91) (Mod 5101)	2	—	6/12
or				
SP91/P	. . Clip, hose (Alt. R60/91) (Mod 5101)	2	—	—
SP91/R	. . Clip, hose	1	—	6/4
SP91/K	. . Clip, hose	2	—	6/10
EG7.75.385A	. . Lagging, hard, top	1	L44	8/3
EG7.75.386A	. . Lagging, hard, bottom	1	L44	6/11
EA4.75.293	. . FILTER, at reducing valve, assembly (Pre Mod 5216, Part A)	1	—	7/27
AGS2120/H	. . NIPPLE, coupling, aft of frame 12 (Pre Mod 5216, Part A)	1	—	7/48
	Attaching parts for AGS2120/H:—			
SP91/K	. . Clip, hose	2	—	7/49
EG7.75.399A	. . Cover, outer	2	L44	7/50
SP90/C5	. . PIN, split (Mod 5216, Part B)	1	—	—

SERVICES

AIR VENTILATED SUIT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.75.359	. . . PIPE, assembly, water extractor drain forward of frame 13, 3/16" o/d x 20 SWG (Pre Mod 5216, Part A)	1	L56	6/29
EG7.75.361	. . . PIPE, assembly, from heat exchanger coupling aft of frame 11 to coupling aft of frame 12, 1" o/d x 20 SWG (Pre Mod 5216, Part A)	1	L56	7/60
	Attaching parts for EG7.75.361:-			
SP91/K	. . . Clip, hose	4	-	7/47
EG7.75.381A	. . . Cover, outer	1	-	7/56
EG7.75.382A	. . . Cover, outer	1	-	7/57
EG7.75.467A	. . . Cover, outer	1	-	7/61
EG7.75.469A	. . . Cover, outer	1	-	7/62
EG7.75.485A	. . . Cover, outer	2	-	7/46
EG7.75.363	. . . PIPE, assembly, from heat exchanger aft of frame 11 to coupling forward of frame 13, 1" o/d x 22 SWG (Pre Mod 5216, Part A)	1	L56	7/55
	Attaching parts for EG7.75.363:-			
SP91/K	. . . Clip, hose	5	-	7/54
EG7.75.379A	. . . Cover, outer	1	-	7/59
EG7.75.380A	. . . Cover, outer	1	-	7/59
EG7.75.449A	. . . Cover, outer	1	-	7/38
EG7.75.451A	. . . Cover, outer	1	-	7/39
EG7.75.463A	. . . Cover, outer	1	-	7/43
EG7.75.465A	. . . Cover, outer	1	-	7/44
EG7.75.485A	. . . Cover, outer	2	-	7/55
EG7.75.365	. . . PIPE, assembly, from coupling aft of frame 12 to water extractor inlet connection (Pre Mod 5216, Part A)	1	L54	7/45
	Attaching parts for EG7.75.365:-			
SP91/K	. . . Clip, hose	5	-	7/40
EG7.75.383A	. . . Cover, outer	1	-	7/41
EG7.75.384A	. . . Cover, outer	1	-	7/42
EG7.75.453A	. . . Cover, outer	1	-	7/35
EG7.75.455A	. . . Cover, outer	1	-	7/36
EG7.75.367	. . . PIPE, assembly, from water extractor outlet connection to reducing valve coupling forward of frame 13 (Pre Mod 5216, Part A)	1	L54	7/34
	Attaching parts for EG7.75.367:-			
SP91/K	. . . Clip, hose	4	-	7/29
EG7.75.387A	. . . Cover, outer	1	-	7/32
EG7.75.388A	. . . Cover, outer	1	-	7/33
EG7.75.445A	. . . Cover, outer	1	-	7/30
EG7.75.447A	. . . Cover, outer	1	-	7/31
EG7.75.369	. . . PIPE, assembly, from reducing valve to junction block forward of frame 13, 1" o/d x 20 SWG (Pre Mod 5216, Part A)	1	L56	7/9
	Attaching parts for EG7.75.369:-			
SP91/K	. . . Clip, hose	2	-	7/7
EG7.75.389A	. . . Cover, outer	2	L44	7/8
EG7.75.703	. . . PIPE, assembly, from junction block to non-return valve forward of frame 13, starboard, 1" o/d x 20 SWG (Pre Mod 5216, Part A)	1	L54	7/68
EG7.75.373	. . . PIPE, assembly, from non-return valve to tee piece forward of frame 13, starboard, 1" o/d x 20 SWG (Pre Mod 5216, Part A)	1	L56	7/75
EG7.75.371	. . . PIPE, assembly (Aircraft WJ977 only) (Pre Mod 5216, Part A)	1	-	

SERVICES

AIR VENTILATED SUIT IN CENTRE FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EG7.75.375	. . PIPE, assembly, from ground charging connection to non-return valve forward of frame 13, starboard (Pre Mod 5216, Part A) Attaching parts for EG7.75.375:—	1	L54	6/21
	SP91/K	. . Clip, hose	1	—	6/28
	EG7.75.395A	. . Cover, outer	1	L44	6/26
	EG7.75.396A	. . Cover, outer	1	L44	6/27
R	EG7.75.377	. . PIPE, assembly, from non-return valve to tee piece forward of frame 13, starboard 1" o/d x 20 SWG (Pre Mod 5216, Part A) Attaching parts for EG7.75.377:—	1	L54	7/65
	SP91/K	. . Clip, hose	1	—	7/66
	EG7.75.397A	. . Cover, outer	1	L44	7/63
	EG7.75.398A	. . Cover, outer	1	L44	7/64
R	AS2227/604	. . RIVET (Mod 5216, Part B)	1	—	
R	EB7.75.5265	. . SEAL, at water extractor clamp connections (Pre Mod 5216, Part A)	2	Silastic	6/2
R	AGS904/A	. . SLEEVE, outer (Mod 5216, Part B)	1	—	
	—	. . STRUCTURE, WATER EXTRACTOR SUPPORT, ASSEMBLY (EG7.75.325) Spares for:—	—	—	6/38
R	EG7.75.323	. . BRACKET, assembly (Pre Mod 5216, Part A) Attaching parts for EG7.75.323:—	2	L72	6/37
	A25/3C	. . Bolt, 2 BA, hex. head	3	—	6/39
	AGS2002/C/1	. . Nut, stiff, 2 BA	3	—	6/41
	4101/10/1/4	. . Screw, self tapper, round head	1	—	6/32
	SP15/C	. . Washer, 2 BA plain	3	—	6/40
R	AS2228/606	. . RIVET (Mod 5216, Part B)	4	—	
	EEAS20/2/DR	. . TAB, locking, water extractor drain pipe coupling	1	L72	6/31
R	AGS1119/H	. . UNION, tee coupling, (Pre Mod 5216, Part A) Attaching parts for AGS1119/H:—	1	—	7/69
	SP91/K	. . Clip, hose	2	—	7/70
	EG7.75.481A	. . Cover, outer	1	L44	7/71
	EG7.75.483A	. . COVER, outer	1	L44	7/72
R	F.R. LTD				
	9811125/H	. . VALVE, non-return (Pre Mod 5216, Part A) Attaching parts for 9811125/H:—	2	—	7/67
	SP91/K	. . Clip, hose	6	—	7/51
	EG7.75.393	. . Cover, outer	2	L44	7/52
	EG7.75.479A	. . Cover, outer	1	L44	7/73
	EG7.75.489A	. . Cover, outer	1	L44	7/74
R	HYMATIC				
	RAV158-002	. . VALVE, relief (Pre Mod 5216, Part A)	1	—	7/1
R	HYMATIC				
	PAS148-094	. . VALVE, reducing (Pre Mod 5216, Part A)	1	—	7/25

A.P.101B-0417-3A

Page NE1

SERVICES

AIR VENTILATED SUIT IN FRONT FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Ct. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	AIR VENTILATED SUIT SYSTEM IN FRONT FUSELAGE ASSEMBLY (E.G7.75.333)						—	—	—	8/1
	—	Spares for:—						—	—	—	—
R	6734	EEAS.136	BRACKET, clip, frame 8 (Pre-Mod. 5216 Part A)					1	L72	C	9/1
	34B/9437518	↑	COMPOUND, anti-seize					QR	—	C	9/26
	—	—	COUPLING, PIPE, AT PRESSURE BULKHEAD, ASSEMBLY (E.G7.75.347)					—	—	—	9/38
	—	—	Consisting of:—					—	—	—	—
R	28F/9996122	AGS.1112/H	BODY, union, flanged, bulkhead (Pre-Mod. 5216 Part A)					1	—	C	9/35
	28D/1200119	A.25/4C	Attaching parts for AGS.1112/H:—					6	—	C	9/34
	28M/9433473	AGS.2002/C/1	Bolt, 2 BA hex. head					6	—	C	9/32
	26DK/5946	EEAS.20/3/EU	Nut, stiff, 2 BA					2	S515	C	9/30
	28F/14657	AGS.1115/10	Tab, locking					1	—	C	9/37
	37856	E.A4.75.253	Washer, plate					1	—	C	9/36
	28W/9419402	SP.13/C	Washer, sealing					5	—	C	9/31
	—	—	Washer, 2 BA plain					—	—	—	—
R	28D/9436920	A25/1C	BOLT, 2 BA (Mod. 5216 Part B)					6	—	C	—
R	—	E.G7.75.735	PLATE, blanking (Mod. 5216 Part B)					1	L72	LM	—
R	28W/9419475	SP15/C	WASHER, 2 BA (Mod. 5216 Part B)					6	18 SWG	C	—
R	33350	E.B6.75.1037	DUCTING, 'flexflyte', from pilot's control valve tapered pipe to 4-way piece at pressure bulkhead (Pre-Mod. 5216 Part A)					1	—	C	8/8
	—	—	PIECE, 4-WAY, AT PRESSURE BULKHEAD, INSTALLATION (E.G7.75.319)					—	—	—	8/29
	—	—	Spares for:—					—	—	—	—
R	33354	E.B6.75.1033	ADAPTOR, pipe, pilot's supply line (Pre-Mod. 5216 Part A)					1	L65	C	8/31
R	33355	E.B6.75.1043	CLIP, bridge, 4-way piece support (Pre Mod. 5216 Part A)					2	L54	C	8/28
	—	—	Attaching parts for E.B6.75.1043:—					—	—	—	—
	28D/1011021	A.25/16C	Bolt, 2 BA hex. head					2	—	C	8/26
	28W/9419402	SP.13/C	Washer, 2 BA plain					2	—	C	8/24
R	28E/9429463	AGS.605/0 or	CLIP, hose (Pre-Alt. R60/91) (Mod. 5101) (Pre-Mod. 5216 Part A)					1	—	C	8/30
	28E/9712163	SP.91/C	CLIP, hose (Alt. R60/91) (Mod. 5101)					1	—	C	—
R	28E/1006260	AS.3180/13B	CLIP, 'P' (Pre-Mod. 5216 Part A)					1	—	C	8/27
	—	—	Attaching parts for AS.3180/13B:—					—	—	—	—
	28D/1010658	A.25/1B	Bolt, 4 BA hex. head					1	—	C	8/32
	—	EEAS.21/2/BR	Washer, 'D'					1	L72	—	8/33
R	—	E.G7.75.459	PLATE, mounting, assembly (Pre-Mod. 5216 Part A)					1	L72	—	8/18
	—	—	Attaching parts for E.G7.75.459:—					—	—	—	—
R	28D/9436920	A.25/1C	Bolt, 2 BA hex. head ("4 off" Mod. 5216 Part B)					2	—	C	8/17
R	28D/7002428	A.25/6C	Bolt, 2 BA hex. head					2	—	C	8/25
	—	AS.2811/5/050	Tube, distance					2	L62	—	8/19
	28W/9419402	SP.13/C	Washer, 2 BA plain					4	—	C	8/23
R	28F/8011823	AGS.904/H	SLEEVE, outer, 1" pipe (Pre-Mod. 5216 Part A)					1	—	C	8/16
R	28F/4663954	AGS.1126/3	UNION, 4-way piece, unequal, 1" x 5/8" o/d (Pre-Mod. 5216 Part A)					1	—	C	8/22
R	6101400	E.G7.75.335	PIPE, assembly, transverse from 4-way union to coupling aft of frame 8, starboard, 1" o/d x 20 SWG (Pre-Mod 5216 Part A)					1	L54	B	9/16
	—	—	Attaching parts for E.G7.75.335:—					—	—	—	—
	28E/6250283	SP.91/J	Clip, hose					4	—	C	9/17
	6101381	E.G7.75.429A	Cover, outer					1	L44	C	9/14
	6101382	E.G7.75.430A	Cover, outer					1	L44	C	9/15

SERVICES
AIR VENTILATED SUIT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Fig. and Index
					M.R. L.M.	
		1 2 3 4 5 6 7				
6101399	E.G7.75.337	PIPE, assembly, from 4-way union to navigator's valve connections at pressure bulkhead, 5/8" o/d x 22 SWG (Pre-Mod. 5216 Part A)	1	L56	—	8/5
	E.G7.75.339	PIPE, assembly, from 4-way union to A.E.O.'s valve connection at pressure bulkhead, 5/8" o/d x 22 SWG (Pre-Mod. 5216 Part A)	1	L56	B	8/2
	E.G7.75.349	PIPE, assembly, from coupling aft of frame 8 to connection at pressure bulkhead, starboard, 1" o/d x 20 SWG (Pre-Mod. 5216 Part A)	1	L54	—	9/2
28E/6250283	SP.91/J	Attaching parts for E.G7.75.349:—	2	—	C	9/3
	E.G7.75.495A	Clip, hose	1	L44	—	9/4
	E.G7.75.497A	Cover, outer	1	L44	—	9/5
28E/6250283	E.G7.75.351	PIPE, assembly, from coupling at pressure bulkhead to tee union aft of frame 12A, starboard, 1" o/d x 20 SWG (Pre-Mod. 5216 Part A)	1	L56	—	9/8
	SP.91/J	Attaching parts for E.G7.75.351:—	8	—	C	9/11
	E.G7.75.423A	Clip, hose	1	L44	—	9/9
6101379	E.G7.75.424A	Cover, outer	1	L44	—	9/10
	E.G7.75.425A	Cover, outer	1	L44	—	9/12
	E.G7.75.426A	Cover, outer	1	L44	—	9/13
6101380	E.G7.75.427A	Cover, outer	1	L44	C	9/16
	E.G7.75.428A	Cover, outer	1	L44	C	9/7
33351	E.B6.75.975	PIPE, flexible, assembly, navigator's and A.E.O.'s air vent suit connection (Pre-Mod. 5216 Part A)	2	Rubber	C	8/3
34437	E.G5.75.29	PIPE, flexible, pilot's air vent connection (Pre-Mod. 5216 Part A)	1	Rubber	C	8/4
28Q/9450595	AS.2227/403	RIVET (Mod. 5216 Part B)	2	—	C	
	AS.2810/5/070	TUBE, distance, for clipping aft of frame 10 (Pre-Mod. 5216 Part A)	1	L62	—	9/22
	AS.2810/5/050	TUBE, distance, for clipping aft of frame 10 (Pre-Mod. 5216 Part A)	1	L62	—	9/24
	—	VALVE, NAVIGATOR'S AND A.E.O.'s, INSTALLATION (E.G7.75.321)	—	—	—	9/39
28D/9436920	E.B6.75.1095	Spares for:—	1	L72	—	9/20
	E.G7.75.709	MEMBER, 'Z', assembly	1	L72	—	9/28
	E.G7.75.711	PACKING, for navigator's valve (Pre-Mod. 5216 Part A)	1	L72	—	9/33
28D/9436920	A.25/1C	PLATE, mounting assembly	1	L72	—	9/19
	E.C4.75.19	Attaching parts for E.G7.75.711:—	5	—	C	9/25
		Bolt, 2 BA hex. head	2	—	—	9/25
27VA/4625397	DUNLOP	VALVE, CONTROL ASSEMBLY (Pre-Mod. 5216 Part A)	1	—	—	9/18
27DK/4631315	A.C.O.23654	Consisting of:—	1	—	C	9/18
	NORMALAIR	SOCKET, quick release	1	—	A	9/27
	513390	VALVE, manual control	1	—	—	9/21
30A/9146066	DUNLOP	WASHER, sealing	1	—	—	9/21
28M/9433473	A.C.O.24094	WIRE, locking, 18 SWG	QR	DTD.189	C	9/23
	†	Attaching parts for E.C4.75.19:—	4	—	C	9/29
	AGS.2002/C/1	Nut, stiff, 2 BA	4	—	C	9/29

A.P.101B-0417-3A

Page NE3

SERVICES
AIR VENTILATED SUIT IN FRONT FUSELAGE

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	VALVE, PILOT'S CONTROL, INSTALLATION							—	—	—	8/20
		(E.G7.75.521)										
		Spares for:—										
R	33339	E.B6.75.1099	PIPE, taper, assembly, for connecting flexflyte pipe						1	L54	C	8/21
			to control valve, 3/4" x 5/8" o/d									
			(Pre-Mod. 5216 Part A)									
R	28Q/	AS.2228/604	RIVET (Mod. 5216 Part B)						1	—	—	
R		E.C4.75.19	VALVE, CONTROL, ASSEMBLY						1	—	—	8/13
			(Pre-Mod. 5216 Part A)									
			Consisting of:—									
R	27VA/4625397	DUNLOP	SOCKET, quick release (Pre-Mod. 5216 Part A)						1	—	C	8/6
		ACO.23654										
R	27KD/4631315	NORMALAIR	VALVE, manual control (Pre-Mod. 5216 Part A)						1	—	A	8/14
		513390										
R		DUNLOP	WASHER, sealing (Pre-Mod. 5216 Part A)						1	—		8/10
		ACO.24094										
	30A/9146066	†	WIRE, locking, 18 SWG						QR	DTD.189	C	8/9
			Attaching parts for E.C4.75.19:—									
	28D/9133011	A.25/2C	Bolt, 2 BA hex. head						2	—	C	8/11
	28W/9419402	SP.13/C	Washer, 2 BA plain						2	—	C	8/12
R	18852	EEAS.21/2/DR	WASHER, 'D' clip attachment (Pre-Mod. 5216 Part A)						3	L72	C	8/15
R	18852	EEAS.21/2/DR	WASHER, 'D', clip attachment (Pre-Mod. 5216 Part A)						4	L72	C	8/7

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	CABIN PRESSURE SYSTEM IN FRONT FUSELAGE ASSEMBLY (EG7.75.3) (Pre Mod 5466)	-	-	10/7
-	CABIN PRESSURE SYSTEM IN FRONT FUSELAGE ASSEMBLY (EG7.75.5003) (Mod 5466)	-	-	10A/1
	Spares for:-			
EA3.75.83	. ADAPTER, non-return valve mounting	1	L122	14/18
EA3.75.5061	. ADAPTER, flexible pipe to main air pipe aft of frame 1	1	L54	17/1
GODFREY 22688	. ADAPTER, water extractor drain	1	-	17/11
EG7.75.255	. ANGLE, mounting, air pipe aft of frame 12 Attaching parts for EG7.75.255:-	1	L73	12/7
A25/1C	. Bolt, 2 BA hex. head	2	-	12/6
AGS2001/C/1	. Nut, stiff, 2 BA	2	-	12/9
SP15/C	. Washer, 2 BA plain	2	-	12/8
EG4.75.311	. BOX, 'punkah' louver assembly Attaching parts for EG4.75.311:-	1	L54	10/28
A25/5C	. Bolt, 2 BA hex. head	2	-	10/27
AGS2001/C/1	. Nut, stiff, 2 BA	2	-	10/33
AS2810/25/041	. Tube, distance	2	L62	10/25
SP15/C	. Washer, 2 BA plain	2	-	10/34
EB7.75.35	. BRACKET, 'punkah' louver mounting Attaching parts for EB7.75.35:-	1	L72	10/35
A25/1B	. Bolt, 4 BA hex. head	1	-	10/36
AGS2001/B/1	. Nut, stiff, 4 BA	1	-	10/31
4101/10/3/8	. Screw, self tapping, round head	1	-	10/37
SP15/B	. Washer, 4 BA plain	1	-	10/32
EB7.75.37	. BRACKET, 'punkah' louver mounting Attaching parts for EB7.75.37:-	1	L72	10/26
A25/1B	. Bolt, 4 BA hex. head	1	-	10/38
AGS2001/B/1	. Nut, stiff, 4 BA	1	-	10/29
4101/10/3/8	. Screw, self tapping, round head	1	-	10/39
SP15/B	. Washer, 4 BA plain	1	-	10/30
EA3.75.177	. BRACKET, pipe support clip	2	L72	16/6
EB6.75.369	. BRACKET, water extractor forward support, assembly Attaching parts for EB6.75.369:-	1	-	17/13
A25/11C	. Bolt, 2 BA hex. head	4	-	17/18
AGS2001/C/1	. Nut, stiff, 2 BA	4	-	17/14
AS2811/5/093	. Tube, distance	4	L62	17/16
SP15/C	. Washer, 2 BA plain	4	-	17/15
EG7.75.471	. BRACKET, mounting and strap guide, assembly	3	L72	15/1
EA3.75.483	. BRACKET, mounting (Pre Mod 5466) Attaching parts for EA3.75.483:-	1	L59	10/20
A25/1C	. Bolt, 2 BA hex. head	2	-	10/21
AGS2001/C/1	. Nut, stiff, 2 BA	2	-	10/24
EG7.80.1967	. Packing, 16 SWG	1	L72	10/22
SP15/C	. Washer, 2 BA plain	2	-	10/23
EA3.75.547	. BRACKET, PIPE SUPPORT CLIP	1	L72	14/1
EB6.75.591	. BRACKET Attaching parts for EB6.75.591:-	1	-	17/20
A25/11C	. Bolt, 2 BA hex. head	4	-	17/19
AGS2001/C/1	. Nut, stiff, 2 BA	4	-	17/23
AS2811/5/093	. Tube, distance	4	L62	17/21
SP15/C	. Washer, 2 BA plain	4	-	17/22

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EEAS136	. BRACKET, pipe clip support	2	L72	15/15
EG7.75.241	. CHANNEL, MOUNTING, HEAT EXCHANGER ASSEMBLY (Pre-Mod.5216, Part A) Spares for:—	1	—	15/4
EG7.75.243	. . CHANNEL, mounting	1	L72	15/14
EG7.75.245	. . CHANNEL, assembly Attaching parts for EG7.75.245:—	2	L72	15/13
A25/1C	. . Bolt, 2BA hex. head	8	—	15/10
AGS2001/C/1	. . Nut, stiff, 2BA	8	—	15/12
SP15/C	. . Washer, 2BA plain	8	—	15/11
EG7.75.253	. . STAY Attaching parts for EG7.75.241:—	1	L72	15/3
A25/1C	. Bolt, 2BA hex. head	2	—	15/2
A25/2C	. Bolt, 2BA hex. head	4	—	15/5
AGS2001/C/1	. Nut, stiff, 2BA	6	—	15/8
SP15/C	. Washer, 2BA plain	6	—	15/6
EEAS237/2A	. Washer, 'D'	4	L72	15/7
EG7.75.457	. CLEAT, pipe support clip	1	L72	15/9
EA2.75.37	. CLIP, pipe, aft of frame 1, port Attaching parts for EA2.75.37:—	2	L72	16/9
A25/1C	. Bolt, 2BA hex. head	4	—	16/5
AGS2001/C/1	. Nut, stiff, 2BA	4	—	16/8
SP15/C	. Washer, 2BA plain	4	—	16/7
EA1.75.105	. CLIP, pipe, at frame 2 and 6 Attaching parts for EA1.75.105:—	2	L72	10/3
A25/1C	. Bolt, 2BA hex. head	4	—	10/4
AGS2001/C/1	. Nut, stiff, 2BA	4	—	10/9
SP15/C	. Washer, 2BA plain	4	—	10/8
AS5418-18	. CLIP, hose (Mod.5466) Attaching parts for AS5418-18	1	—	10A/2
A25/1C	. Bolt, 2BA	1	—	10A/3
AGS2001/C/1-66	. Nut, stiff, 2BA	1	—	10A/4
SP124/D	. Washer	1	—	10A/5
AS5418-18	. CLIP, hose (Mod.5466) Attaching parts for AS5418-18:—	1	—	10A/6
EEAS552/1	. Bobbin	1	—	10A/7
A25/4C	. Bolt, 2BA	1	—	10A/8
AGS2001/C/1-66	. Nut, stiff, 2BA	1	—	10A/9
SP124/D	. Washer	1	—	10A/10
EG7.75.309	. CONNECTION, hose, 2.5" i/d x 3" long, at frames 6 and 9 Attaching parts for EG7.75.309:—	2	Asbestos or L44	12/60
AGS605/3	. Clip, hose (Pre-Alt. R60/91) (Mod.5101)	2	—	12/59
or				
SP91/L	. Clip, hose (Alt. R60/91) (Mod.5101)	2	—	
AGS605/5	. Clip, hose (Pre-Alt. R60/91) (Mod.5101)	2	—	12/58
or				
SP91/P	. Clip, hose (Alt. R60/91) (Mod.5101)	2	—	
EG7.75.315A	. Cover, outer, at frame 9	2	L44	12/61
EG7.75.419	. CONNECTION, hose, 2.5" i/d x 2.0" long	6	Asbestos or L44	16/3

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB7.75.125	CONNECTOR, flanged, main pipe, frame 3 Attaching parts for EB7.75.125:—	1	L44	16/12
A25/2B	Bolt, 4 BA hex. head	6	—	16/14
AGS2001/B/1	Nut, stiff, 4 BA	6	—	16/10
EB7.75.129	Ring, half bolt	2	L59	16/13
SP15/B	Washer, 2 BA plain	6	—	16/11
EB7.75.126	Connector, flanged, main pipe, frame 4 Attaching parts for EB7.75.126:—	1	L44	16/19
A25/2B	Bolt, 4 BA hex. head	6	—	16/18
AGS2001/B/1	Nut, stiff, 4 BA	6	—	16/15
EB7.75.129	Ring, half bolt	2	L59	16/17
SP15/B	Washer, 4 BA plain	6	—	16/16
EB7.75.127	CONNECTOR, flanged, main pipe, frame 5 Attaching parts for EB7.75.127:—	1	L44	13/1
A25/2B	Bolt, 4 BA hex. head	6	—	13/5
AGS2001/B/1	Nut, stiff, 4 BA	6	—	13/4
EB7.75.131	Ring, half bolt	2	L59	13/2
SP15/B	Washer, 4 BA plain	6	—	13/3
EB6.75.379	COUPLING, water extractor drain pipe, frame 11	1	L65	17/25
EB7.75.63	DIFFUSER, PILOT'S ASSEMBLY Spares for:—	1	—	13/13
EB7.75.29	BRACKET, diffuser mounting Attaching parts for EB7.75.29:—	1	L59	13/25
AS1246/1B	Bolt, 4 BA round head	2	—	13/34
AGS2001/B/1	Nut, stiff, 4 BA	2	—	13/27
SP13/B	Washer, 4 BA plain	2	—	13/26
EB7.75.31	CLIP, diffuser, retaining Attaching parts for EB7.75.31:—	1	L59	13/32
A25/10C	Bolt, 2 BA hex. head	1	—	13/35
AGS2001/C/1	Nut, stiff, 2 BA	1	—	13/23
AS2811/5/095	Tube, distance	1	L62	13/33
SP13/C	Washer, 2 BA plain	1	—	13/24
EB7.75.23	DIFFUSER	1	—	13/22
EG7.75.251	DUCT, pilot's floor, forward of frame 1	1	L54	14/12
MARSTON	EXCHANGER, heat, air/air, aft of frame 11 (Pre Mod 5216, Part A)	1	—	15/18
D555/4A	Attaching parts for D555/4A:—			
A25/1E	Bolt, 1/4" BSF, hex. head	4	—	15/17
AGS605/6	Clip, hose (Pre-Alt. R60/90) (Mod 5101)	2	—	12/22
or				
SP91/R	Clip, hose (Alt. R60/91) (Mod 5101)	2	—	
EG7.75.311A	Lagging, hard shell	1	L44	12/52
EG7.75.312A	Lagging, hard shell	1	L44	12/53
SP15/E	Washer, 1/4" BSF plain	4	—	15/16
GODFREY				
22697/B	EXTRACTOR, water, type WE30, Mk. 2 B Attaching parts for 22697/B:—	1	—	17/4
EB6.75.397A	Cover, outer	1	L44	12/19
EB6.75.399A	Cover, outer	1	L44	12/20
EG7.75.249	FISHTAIL, navigator's frame 5	1	L59	15/19
EA3.75.711	HOSE, flexible (Mod 5466)	1	—	10A/11

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
EB7.75.55	. LOUVRE, 'pukah', type DAR2 Attaching parts for EB7.75.55:—	1	—	10/41
AS2922/3B	. Bolt, 4 BA round head	2	—	10/42
SP14/B	. Washer, 4 BA plain	2	—	10/40
THERMO TANKS				
K1259/43	. LOUVRE, 'pukah', type DAR2 Attaching parts for K1259/43:—	3	—	10/2
AS2922/4B	. Bolt, 4 BA round head	3	—	10/6
AGS2001/B/1	. Nut, stiff, 4 BA	3	—	10/1
SP14/B	. Washer, 4 BA plain	3	—	10/5
EB7.75.79	. PIPE, flanged, canopy demisting, aft of frame 2	1	L54	13/7
EB7.75.89	. PIPE, branch, main, between frames 1 and 2 Attaching parts for EB7.75.89:—	1	L54	10/10
AGS605/4	. Clip, hose (Pre-Alt. R60/91) (Mod 5101)	3	—	12/12
or				
SP91/N	. Clip, hose (Alt. R60/91) (Mod 5101)	—	—	
EB7.75.205A	. Cover, outer	2	L44	12/13
EB7.75.511A	. Cover, outer	1	L44	12/10
EB7.75.513A	. Cover, outer	1	L44	12/11
EB7.75.233	. PIPE, flexible (Pre Mod 5236)	1	—	13/15
EA3.75.677	. PIPE, flexible (Mod 5236)	1	—	
EG7.75.257	. PIPE, assembly, from heat exchanger, frame 12 to frame 13 Attaching parts for EG7.75.257:—	1	L54 or L59	10/19
A25/1C	. Bolt, 2 BA hex. head	6	—	12/4
AGS605/4	. Clip, hose (Pre-Alt. R60/91) (Mod 5101)	4	—	12/23
or				
SP91/N	. Clip, hose (Alt. R60/91) (Mod 5101)	—	—	
EG7.75.475	. Clip, lagging	1	L44	12/5
EG7.75.477	. Clip, lagging	1	L44	12/1
EG7.75.265A	. Cover, outer	1	L44	12/24
EG7.75.267A	. Cover, outer	1	L44	12/25
EG7.75.403A	. Cover, outer	1	L44	12/54
EG7.75.405A	. Cover, outer	1	L44	12/55
EG7.75.411A	. Cover, outer	1	L44	12/56
EG7.75.413A	. Cover, outer	1	L44	12/57
AGS2001/C/1	. Nut, stiff, 2 BA	6	—	12/2
SP15/C	. Washer, 2 BA plain	6	—	12/3
EG7.75.259	. PIPE, flanged, assembly, from non-return valve aft of pressure bulkhead to frame 9 Attaching parts for EG7.75.259:—	1	L59	10/16
AGS605/4	. Clip, hose (Pre-Alt. R60/91) (Mod 5101)	1	—	12/16
or				
SP91/N	. Clip, hose (Alt. R60/91) (Mod 5101)	—	—	
AGS605/5	. Clip, hose (Pre-Alt. R60/91) (Mod 5101)	1	—	12/15
SP91/P	. Clip, hose (Alt. R60/91) (Mod 5101)	—	—	
EG7.75.305A	. Cover, outer	1	L44	12/44
EG7.75.307A	. Cover, outer	1	L44	12/45
EG7.75.407A	. Cover, outer	1	L44	12/46
EG7.75.409A	. Cover, outer	1	L44	12/47
EG7.75.261	. PIPE, between water extractor and heat exchanger, frame 11 Attaching parts for EG7.75.261:—	1	L54	10/18
AGS605/5	. Clip, hose (Pre-Alt. R60/91) (Mod 5101)	2	—	12/21
or				
SP91/P	. Clip, hose (Alt. R60/91) (Mod 5101)	—	—	
EG7.75.269	. Cover, outer	1	L44	12/50
EG7.75.271	. Cover, outer	1	L44	12/51

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.75.263	. PIPE, connection to water extractor, frame 9	1	L59	10/17
	Attaching parts for EG7.75.263:—			
AGS605/4 or	. Clip, hose (Pre-Alt. R60/91) (Mod 5101)	1	—	12/17
SP91/N	. Clip, hose (Alt. R60/91) (Mod 5101)	1	—	
AGS605/5 or	. Clip, hose (Pre-Alt. R60/91) (Mod 5101)	1	—	12/18
SP91/P	. Clip, hose (Alt. R60/91) (Mod 5101)	1	—	
EG7.75.273A	. Cover, outer	1	L44	12/48
EG7.75.275A	. Cover, outer	1	L44	12/49
EG7.75.279	. PIPE, branch, assembly, for pilot's louvres forward of frame 2	1	L54	13/6
EG7.75.281	. PIPE, branch, assembly, run to pilot's diffuser and navigator's fishtail, frame 4	1	L54	13/17
EG7.75.283	. PIPE, connecting navigator's fishtail, frame 5	1	L54	13/18
EG7.75.285	. PIPE, flexible, 72" long (Pre Mod 5236) (Make from Ref 34324)	1	—	13/16
EG7.75.537	. PIPE, flexible (Mod 5236)	1	—	
EG7.75.287	. PIPE, flexible, 17" long (Pre Mod 5236) (Make from Ref 34324)	1	—	13/14
EG7.75.293	. PIPE, flexible, 17" long (Pre Mod 5236) (Make from Ref 34324)	1	—	13/11
EG7.75.539	. PIPE, flexible (Mod 5236)	2	—	
EG7.75.289	. PIPE, flexible, 30" long (Pre Mod 5236) (Make from Ref 34324)	1	—	13/8
EA3.75.683	. PIPE, flexible (Mod 5236)	1	—	
EG7.75.291	. PIPE, flexible, 15" long (Pre Mod 5236) (Make from Ref 34324)	1	—	13/12
EA3.75.673	. PIPE, flexible (Mod 5236)	1	—	
EG7.75.295	. PIPE, flexible, 18" long (Pre Mod 5236) (Make from Ref 34324)	1	—	13/21
EG7.75.297	. PIPE, flexible, 18" long (Pre Mod 5236) (Make from Ref 34324)	1	—	13/19
EG7.75.541	. PIPE, flexible (Mod 5236)	1	—	
—	. PIPE, flexible, 26" long (Make from Ref 34324)	1	—	
	BAS 21TH (Mod 4869) (Pre Mod 5236)			
EA3.75.701	. PIPE, flexible (1" bore x 25.5" min length) (Mod 5236) (Pre Mod 5466)	1	—	
EG7.75.299	. PIPE, branch, assembly, run to navigator's louvre and pilot's diffuser, frame 4 port	1	L54	13/20
EG7.75.301	. PIPE, assembly, aft of frame 3, starboard	1	L54	13/9
—	. PIPES, CABIN PRESSURE STATIC LINE, INSTALLATION (EG7.75.317) (Pre Mod 5466)	—	—	11/15
—	. PIPES, CABIN PRESSURE STATIC LINE, INSTALLATION (EG7.75.5005) (Mod 5466)	—	—	10A/12
	Spares for:—			
AGS838/1	. . BODY, union, straight	4	—	11/21
AGS838/2	. . BODY, tee union	2	—	11/18
EEAS136	. . BRACKET, pipe clip, aft of frames 5 and 7	2	L72	11/3
EEAS143/3	. . CLIP, 'P', pipe support (Pre-Alt. R60/91) (Mod 5101)	15	L72	11/1
or	(2 off N R on embodiment Mod 5466)			
AS4525/5	. . CLIP, 'P', pipe support (Alt. R60/91) (Mod 5101)	15	—	

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	AS4525/5	. . CLIP, 'P' (Mod 5466) Attaching parts:—	1	—	10A/13
R	A25/11C	. . Bolt, 2 BA	1	—	10A/14
R	AGS2001/C/1-66	. . Nut, stiff, 2 BA	1	—	10A/15
R	SP124/D	. . Washer	1	—	10A/16
R	AS4525/5	. . CLIP, 'P' (Mod 5466) Attaching parts:—	1	—	10A/17
R	A25/8C	. . Bolt, 2 BA	1	—	10A/18
R	AGS2001/C/1-66	. . Nut, stiff, 2 BA	1	—	10A/19
R	SP124/D	. . Washer	1	—	10A/20
R	AS4525/5	. . CLIP, 'P' (Mod 5466)	1	—	10A/21
R	AS3180/9C	. . CLIP, 'P' (Mod 5466) (Secure both clips together) Attaching parts:—	1	—	10A/22
R	A25/9C	. . Bolt, 2 BA	1	—	10A/23
R	AGS2001/C/1-66	. . Nut, stiff, 2 BA	1	—	10A/24
R	SP124/D	. . Washer	1	—	10A/25
R	AS4525/5	. . CLIP, 'P' (Mod 5466) attached by bottom forward bolt of box EG7.80.5095.	1	—	10A/26
	AGS838/13	. . NUT, union and bush, assembly	15	—	11/17
	EG7.80.1523	. . PACKING, pipe clip at pressure bulkhead	1	Tufnol	11/2
R	EG7.80.1971	. . PIPE, static, assembly	1	L54	11/14
R	EG7.80.1973	. . PIPE, static, assembly (Pre Mod 5466)	1	L54	11/6
R	EG7.80.5327	. . PIPE, static, assembly (Mod 5466)	1	—	10A/27
R	EG7.80.1363	. . PIPE, static, assembly	1	L54	11/7
R	EG7.80.1365	. . PIPE, static, assembly	1	L54	11/5
	EG7.75.401	. . PIPE, assembly, static, from master unit to drain trap tee, pressure bulkhead	1	OTD323	11/16
	EG7.80.1367	. . PIPE, static, assembly, from tee, frame 5, to union aft of frame 7, starboard, 5/16" o/d x 22 SWG	1	L54	11/4
	AGS838/6	. . TRAP, drain, at pressure bulkhead	1	—	11/19
	EA3.75.5101	. . VENT, static, aft of frame 4, port and starboard Attaching parts for EA3.75.5101:—	2	BSS265	11/26
	EG7.80.1373	. . Bolt, special, 2 BA	4	DTD319 or BSS249	11/27
	AGS2001/C/1	. . Nut, stiff, 2 BA	4	—	11/22
	EA3.75.5103	. . Packer	1	Langite	11/25
	EA3.75.5119	. . Plate, clamping	1	L72	11/24
	SP15/C	. . Washer, 2 BA plain	4	—	11/23
	AGS838/9	. . WASHER, at drain trap	1	—	11/20
	EG7.75.331	. . PIPE, branch, assembly, from main branch pipe to louvres and canopy demisting run, forward of frame 2, port Attaching parts for EG7.75.331:—	1	L54	10/11
	AGS605/3	. . Clip, hose (Pre-Ait. R60/91 — Mod 5101)	2	—	12/26
	or				
	SP91/L	. . Clip, hose (Alt.R60/91 — Mod 5101)	2	—	
	EB7.75.209A	. . Cover, outer	1	L44	12/27
	EB7.75.211A	. . Cover, outer	1	L44	12/28
	EB6.75.367	. . PIPE, assembly, water extractor, drain, forward of frame 10	1	—	17/17

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

	Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
R	—	. PIPE, PRESSURE SYSTEM ON PRESSURE BULKHEAD, ASSEMBLY (EG7.75.509) Spares for:—	—	—	11/13
R	EEAS143/5H or	. . CLIP, pipe 3/16" o/d, bonding (Pre-Alt. R60/91 — Mod 5101)	5	L72	11/8
R	AS4525/3	. . CLIP, pipe 3/16" o/d, bonding (Alt. R60/91 — Mod 5101) Attaching parts for EEAS143/5H or AS4525/3:—	5	—	
R	A25/1B	. . Bolt, 4 BA, hex. head	1	—	11/9
R	AGS2001/B/1	. . Nut, stiff, 4 BA	1	—	11/10
R	EEAS21/2/DR	. . Washer, "D"	1	L72	11/11
R	EG7.75.487	. . PIPE, assembly	1	DTD323	11/12
R	EB6.75.695	. PIPE Attaching parts for EB6.75.695:—	1	L44	10/12
R	AGS605/4 or	. Clip, hose (Pre-Alt. R60/91 — Mod 5101)	2	—	12/29
R	SP91/N	. Clip, hose (Alt. R60/91 — Mod 5101)	2	—	
R	EB7.75.203A	. Cover, outer	2	L44	12/30
R	EB7.75.781	. PIPE Attaching parts for EB7.75.781:—	1	—	10/14
R	AGS605/4 or	. Clip, hose (Pre-Alt. R60/91 — Mod 5101)	3	—	12/33
R	SP91/N	. Clip, hose (Alt. R60/91 — Mod 5101)	3	—	
R	EB7.75.195A	. Cover, outer	1	L44	12/35
R	EB7.75.197A	. Cover, outer	1	L44	12/36
R	EB7.75.199A	. Cover, outer	2	L44	12/34
	EB7.75.783	. PIPE, flanged, main at forward face of pressure bulkhead Attaching parts for EB7.75.783:—	1	—	10/15
	AGS605/4 or	. Clip, hose (Pre-Alt. R60/91 — Mod 5101)	2	—	12/37
	SP91/N	. Clip, hose (Alt. R60/91 — Mod 5101)			
	EB7.75.155A	. Cover, outer	1	L44	12/40
	EB7.75.157A	. Cover, outer	1	L44	12/41
	EB7.75.159A	. Cover, outer	1	L44	12/38
	EB7.75.525A	. Cover, outer	1	L44	12/39
	EB7.75.793	. PIPE, main continuation, between frames 4 and 5 Attaching parts for EB7.75.793:—	1	—	10/13
	AGS605/4 or	. Clip, hose (Pre-Alt. R60/91 — Mod 5101)	2	—	12/31
	SP91/N	. Clip, hose (Alt. R60/91 — Mod 5101)			
	EB7.75.201A	. Cover, outer	2	L44	12/32
	EB7.75.613	. SEAL, canopy demisting pipe flange, at frame 2	2	Asbestos	16/4
	EA3.75.145 or	. SLEEVE, pipe connecting, 1.5" i/d x 2.5" long	2	Silastic	17/2
	DUNLOP DAS582'24'2.5 EB6.75.1107	. SLEEVE, pipe connecting	3	Silastic	16/2

SERVICES

CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EB6.75.377	. STRAP, water extractor, securing Attaching parts for EB6.75.377:—	2	L72	17/3
R	A25/11C	. Bolt, 2 BA hex. head	2	—	17/12
R	AGS2001/C/1	. Nut, stiff, 2 BA	4	—	17/10
R	SP90/C5	. Pin, split	2	—	17/6
R	EG7.75.277	. Rod, screwed, 2 BA	2	S92	17/7
R	AS2811/5/093	. Tube, distance	2	L62	17/8
R	EB6.75.383	. Trunnion	2	S92	17/5
R	SP15/C	. Washer, 2 BA, plain	4	—	17/9
R	EEAS20/5/BR	. TAB, locking	1	L72	17/24
R	500326	. UNIT, master valve Attaching parts for 500326:—	1	—	14/5
R	A25/2E	. Bolt, 1/4" BSF, hex. head	3	—	14/2
R	AGS2001/E/1	. Nut, stiff, BSF	3	—	14/4
R	SP15/E	. Washer, 1/4" BSF plain	3	—	14/3
R	527060	. VALVE, pressure control Attaching parts for 527060:—	1	—	14/9
R	A25/2E	. Bolt, 1/4" BSF, hex. head	7	—	14/6
R	A27/ET	. Nut, 1/4" BSF, thin	1	—	14/10
R	EA3.75.573	. Stud	1	S92	14/11
R	SP15C	. Washer, 1/4" BSF, plain	11	—	14/7
R	SP47/E	. Washer, 1/4" BSF, spring	11	—	14/8
	NORMALAIR 500457	. VALVE, non-return Attaching parts for 500457:—	1	—	14/21
	A25/3C	. Bolt, 2 BA hex. head	2	—	14/15
	A25/5C	. Bolt, 2 BA hex. head	10	—	14/20
	AGS605/6	. Clip, hose (Pre-Alt. R60/91 — Mod 5101)	2	—	12/14
	or SP91/R	. Cover, hose (Alt. R60/91 — Mod 5101)	2	—	
	EB7.75.509A	. Cover, outer	1	L44	12/42
	EB7.75.697A	. Cover, outer	1	L44	12/43
	AGS2001/C/1	. Nut, stiff, 2 BA	10	—	14/22
	EB7.75.133	. Ring, half bolt	2	L59	14/23
	EA1.75.131	. Washer, jointing	2	Langite	14/19
	SP15/C	. Washer, 2 BA plain	12	—	14/16
	SP47/C	. Washer, 2 BA spring	2	—	14/17
	EA3.75.95	. WASHER, sealing, main air line at pressure bulkhead	2	Langite	14/14
	EA3.75.139	. WASHER, special, air pipe flange, forward pressure bulkhead	1	L72	14/13
	EEAS237/4A	. WASHER, "D", clipping attachment	6	L72	16/1

SERVICES

CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE, ASSEMBLY (EG7.75.5)	—	—	18/36
	Spares for:—			
EB6.75.639	. BRACKET, for starboard cabin pressure wing to fuselage pipe between frames 16 and 17	1	L59	18/1
	Attaching parts for EB6.75.639:—			
A25/5C	. Bolt, 2 BA hex. head	2	—	18/7
AGS2001/C/1	. Nut, stiff, 2 BA	2	—	18/5
SP15/C	. Washer, 2 BA plain	2	—	18/6
EA2.75.37	. Clip, pipe saddle, for port and starboard elbows and transverse pipe, frame 16	3	L72	18/8
	Attaching parts for EA2.75.37:—			
A25/2C	. Bolt, 2 BA hex. head	2	—	18/13
A25/3C	. Bolt, 2 BA hex. head (at packing)	2	—	18/10
AGS2001/C/1	. Nut, stiff, 2 BA	2	—	18/12
EB6.75.595	. Packing (at position 1)	1	LFS21	18/9
SP15/C	. Washer, 2 BA plain	2	—	18/11
EA1.75.105	. CLIP, pipe, between frame 12 and 17	4	L72	19/7
	Attaching parts for EA1.75.105:—			
A25/1C	. Bolt, 2 BA hex. head	2	—	19/6
AGS2001/C/1	. Nut, stiff, 2 BA	2	—	19/9
SP15/C	. Washer, 2 BA plain	2	—	19/8
EB6.75.181	. CLIP, for transverse pipe at frame 16	4	L72	18/3
	Attaching parts for EB6.75.181:—			
A25/2C	. Bolt, 2 BA hex. head	2	—	18/4
AGS2001/C/1	. Nut, stiff, 2 BA	2	—	18/15
SP15/C	. Washer, 2 BA plain	2	—	18/14
SEM/CAN/D162/STC1	. CONNECTOR, straight (Mod 5548)	1	—	18/40
EA4.75.321	. CONNECTOR, straight (Mod. 5257)	1	—	—
EB6.75.641	. FAIRLEAD, for port cabin pressure wing to fuselage pipe between frames 16 and 17	1	LFS21	19/3
	Attaching parts for EB6.75.641:—			
A25/4C	. Bolt, 2 BA hex. head	6	—	19/4
AGS2001/C/1	. Nut, stiff, 2 BA	6	—	19/1
SP15/C	. Washer, 2 BA plain	6	—	19/2
AGS1140/B	. NIPPLE, plug (Pre—Mod. 5257)	1	—	—
AGS1170/K	. NIPPLE, 1-1/2" o/d pipe	1	—	18/17
	Attaching parts for AGS1170/K:—			
AGS605/3	. Clip, hose (Pre—Alt. R60/91—Mod. 5101)	2	—	18/37
or				
SP91/L	. Clip, hose (Alt. R60/91—Mod. 5101)	2	—	—
EB6.75.179A	. Cover, outer	2	L44	18/24
EB6.75.157	. PIECE, 4-way (Pre—Mod. 5257)	1	L40	18/17
AGS166/4	. PIN, split	1	—	18/41
EA3.75.55	. PIPE, from rubber connection at frame 12 to rubber connection at frame 13, 2-1/2" o/d x 20 SWG	1	L54	19/14
	Attaching parts for EA3.75.55:—			
AGS605/4	. Clip, hose (Pre—Alt. R60/91—Mod. 5101)	2	—	19/17
or				
SP91/N	. Cover, hose (Alt. R60/91—Mod. 5101)	2	—	—
EB6.75.129A	. Cover, outer	1	L44	19/28
EB6.75.131A	. Cover, outer	1	—	19/29

SERVICES

CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.75.57	. PIPE, between rubber connections, frame 13 to frame 14 and frame 14 to frame 15, 2-1/2" o/d x 20 SWG Attaching parts for EA3.75.57:—	2	L54	19/13
AGS605/4 or SP91/N	. Clip, hose (Pre—Alt. R60/91—Mod. 5101)	4	—	19/16
EB6.75.133A	. Clip, hose (Alt. R60/91—Mod. 5101)	—	—	—
EB6.75.135A	. Cover, outer, aft of frame 13	2	L44	19/27
EB6.75.137A	. Cover, outer, forward of frame 14	2	L44	19/26
EB6.75.139A	. Cover, outer, aft of frame 14	1	L44	19/24
EB6.75.141A	. Cover, outer, aft of frame 14	1	L44	19/25
EB6.75.143A	. Cover, outer	1	L44	19/22
EA3.75.59	. Cover, outer	1	L44	19/23
	. PIPE, from rubber connection at frame 15 to rubber connection at frame 16 2-1/2" o/d x 20 SWG Attaching parts for EA3.75.59:—	1	L54	19/12
AGS605/4 or SP91/N	. Clip, hose (Pre—Alt. R60/91—Mod. 5101)	2	—	19/15
EB6.75.707A	. Clip, hose (Alt. R60/91—Mod. 5101)	—	—	—
EB6.75.709A	. Cover, outer	1	L44	19/20
EA3.75.61	. Cover, outer	1	L44	19/21
	. PIPE, from rubber connection, frame 16 to rubber connection at elbow pipe, forward of frame 17, 2-1/2" o/d x 20 SWG Attaching parts for EA3.75.61:—	1	L54	19/11
R DTD900-6005	. Lagging, fibre glass blanket	QR	—	19/19
EB6.75.151	. PIPE, bend, assembly, from coupling to reducing tee union at frame 16, starboard, 1-1/2" o/d x 20 SWG Attaching parts for EB6.75.151:—	1	L54	18/22
R DTD900-6005	. Lagging, fibre glass blanket	QR	—	18/23
EB6.75.153	. PIPE, assembly, transverse, from coupling at frame 16 starboard to 4-way piece aft of frame 16, port Attaching parts for EB6.75.153:—	1	L54	18/28
EB6.75.183	. Clip	6	—	18/38
AGS605/3 or SP91/L	. Clip, hose (Pre—Alt. R60/91—Mod. 5101)	2	—	18/31
EB6.75.167A	. Clip hose (Alt. R60/91—Mod. 5101)	—	—	—
EB6.75.169A	. Cover, outer	2	L44	18/25
EB6.75.175A	. Cover, outer	2	L44	18/26
EB6.75.177A	. Cover, outer	2	L44	18/30
EB6.75.613A	. Cover, outer	1	L44	18/32
R DTD900-6005	. Cover, outer	1	L44	18/33
EB6.75.503	. Lagging fibre glass blanket	QR	—	18/39
	. PIPE, assembly, from port wing connection to special 4-way piece between frames 16 and 17, 1-1/2" o/d x 20 SWG Attaching parts for EB6.75.503:—	1	L54	18/16
R DTD900-6005	. Lagging, fibre glass blanket	QR	—	19/29

SERVICES

CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.75.505	.	PIPE, assembly, from starboard wing connection					1	L54	18/20
		to tee union between frames 16 and							
		17, 1-1/2" o/d x 20 SWG							
		Attaching parts for EB6.75.505:-							
SP91J	.	Clip, hose (Pre-Alt. R60/91-Mod. 5101)					1	-	18/2
or									
SP91/L	.	Clip hose (Alt. R60/91-Mod. 5101)					1	-	
AGS605/2	.	Clip, hose (Pre-Alt. R60/91-Mod. 5101)					3	-	18/21
or									
SP91/L	.	Clip, hose (Alt. R61/91-Mod. 5101)					3	-	
EB6.75.163A	.	Cover, outer					1	L44	18/34
EB6.75.165A	.	Cover, outer					1	L44	18/35
EB6.75.541A	.	Cover, outer					1	L44	18/18
EB6.75.543A	.	Cover, outer					1	L44	18/9
EB6.75.507	.	PIPE, elbow, between port wing and fuselage					1	L59	19/10
		connections forward of frame 17							
		Attaching parts for EB6.75.507:-							
DTD900-6005	.	Lagging, fibre glass blanket					QR	-	19/18
AGS904H	.	SLEEVE, outer					1	-	18/42
EA3.75.147	.	SLEEVE PIPE CONNECTING 2.5"i/d x 3.0" long					7	Silastic	19/5
or									
DUNLOP									
DAS582/40/3.0	.								
AGS904/B	.	SLEEVE, outer (Pre-Mod. 5257)					1	-	
AGS1105/B	.	UNION, adaptor (Pre-Mod. 5257)					1	-	
AGS1121/4	.	UNION, tee (Pre Mod.5548)					1	-	18/43
AGS1138/B	.	WASHER, jointing (Pre-Mod. 5257)					1	-	

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
—	CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING ASSEMBLY (EA3.04.9547)	—	—	—
	Spares for:			
EB6.75.501	. ADAPTOR, oil vapour breather pipe	1	L85	86/39
EB6.75.1557	. CLAMP, assembly	7	—	85/6
A25/15E	Attaching parts for EB6.75.1557:			
AGS2001/E2	. Bolt, 1/4" BSF hex. head	2	—	85/2
AGS160/D	. Nut, stiff, 1/4" BSF	2	—	85/17
	. Washer, 1/4" BSF	2	—	85/16
GODFREY 50270	. CLAMP, pipe, jointing, segmental, at Marston cooler	4	—	85/32
R AS4525/4	. CLIP, (Alt.R60/91—Mod.5101)	1	—	86/41
EB6.75.461	. CONNECTOR, tapered duct, from cold air unit junction pipe	1	L59	86/23
R EB6.75.523A	Attaching parts for EB6.75.461:			
	. Lagging	2	L44	86/22
R —	. DUCTS AND AIR COOLER, ASSEMBLY (EA3.75.5157) (Mod.4858)	—	—	85/34
	Spares for:			
CM0183 FIG 1/2	. BRACKET, flanged	4	—	—
EA3.75.5155	. DUCT, air inlet, assembly (Mod.4858)	1	—	85/42
R EEAS1/1C	Attaching parts for EA3.75.55:			
	. Screw, 2BA 120° c'sk head	16	S96	85/43
EB6.75.735	. DUCT, air outlet, assembly	1	L59	85/29
EEAS1/1C	Attaching parts for EB6.75.735:			
	. Screw, 2BA 120° c'sk head	2	S96	85/28
—	. MARSTON COOLER, INSTALLATION (EB6.75.317)	—	—	85/39
	Spares for:			
EB6.75.343	. BRACKET, bottom support, assembly	2	DTD124	85/50
	Attaching parts for EB6.75.343:			
A25/16C	. Bolt, 2BA hex. head	2	—	85/57
AGS2001/C/1	. Nut, stiff, 2BA	2	—	85/49
AS2809/4/139	. Piece, distance	2	L62	85/45
SP15/C	. Washer, 2BA plain	2	—	85/52
EB6.75.345	. BRACKET, top support, assembly	1	L72	85/53
	Attaching parts for EB6.75.345:			
A25/16C	. Bolt, 2BA hex. head	3	—	85/51
AGS2001/C/1	. Nut, stiff, 2BA	3	—	85/47
AS2809/4/139	. Piece, distance	3	L62	85/44
SP15/C	. Washer, 2BA plain	3	—	85/48
MARSTON D106/6A	. COOLER, air, secondary (EB6.75.321)	1	—	85/31
	Attaching parts for D106/6A:			
A25/5E	. Bolt, 1/4" BSF hex. head	1	—	85/56
SP15/E	. Washer, 1/4" BSF plain	1	—	85/55
EB6.75.351	. Washer, felt, on support bracket	1	DTD590	85/54

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
EB6.75.335	.	.	STRAP, JOINT, FOR ATTACHMENT OF AIR DUCTS TO MARSTON COOLER, ASSEMBLY				2	—	85/40
			Consisting of:						
A25/8C	.	.	BOLT, 2BA hex. head				2	—	85/46
AGS2001/C/1	.	.	NUT, stiff, 2BA				2	—	85/35
EB6.75.339	.	.	STRAP, clamping				1	L59	85/36
EB6.75.337	.	.	STRAP, joint				1	L59	85/38
CM0183 FIG 1/1	.	.	STRIP, packing				2	—	
EA3.04.10957	.		FAIRLEAD, rib 1				1	—	85/13
			Attaching parts for EA3.04.10957:						
A25/4C	.		Bolt, 2BA hex. head				4	—	85/21
AGS2001/C/1	.		Nut, stiff, 2BA				4	—	85/20
SP15/C	.		Washer, 2BA plain				4	—	85/22
EB6.75.673	.		NIPPLE, special				1	—	85/30
EB6.75.455	.		PIPE, assembly, continuation, from non-return valve and mixing valve tee piece through rib 2				1	T26	86/35
			Attaching parts for EB6.75.455:						
R SP91/L	.		Clip, hose (Alt R60/91—Mod.5101)				2	—	86/1
EA3.75.651A	.		Cover, outer				1	L44	86/33
EA3.75.653A	.		Cover, outer				1	L44	86/34
EB6.75.457	.		PIPE, assembly, continuation, from non-return valve and mixing valve tee piece through rib 1				1	L56	86/28
			Attaching parts for EB6.75.457:						
R SP91/L	.		Clip, hose (Alt.R60/91—Mod.5101)				2	—	86/1
R EB6.75.533A	.		Lagging				1	L44	86/29
R EB6.75.535A	.		Lagging				1	L44	86/30
R EB6.75.625A	.		Lagging				1	L44	86/31
R EB6.75.627A	.		Lagging				1	L44	86/32
EB6.75.459	.		PIPE, assembly, junction, from cold air unit				1	L54	86/19
			Attaching parts for EB6.75.459:						
R SP91/L	.		Clip, hose (Alt.R60/91—Mod.5101)				2	—	86/1
R EB6.75.519A	.		Lagging				1	L44	86/26
EB6.75.521A	.		Lagging				1	L44	86/27
EB6.75.463	.		PIPE, assembly, breather oil vapour outlet				1	L56	86/15
EB6.75.467	.		PIPE, assembly, from cold air unit compressor connection at rib 1				1	L54	85/15
EB6.75.469	.		PIPE, assembly, from cold air unit turbine connection at rib 1				1	L54	85/14
EB6.75.471	.		PIPE, assembly, from Marston cooler to connection at rib 1				1	L54	85/19
EB6.75.775	.		PIPE, assembly, from cold air unit compressor connection to pipe joint at rib 2				1	L54	85/23
			Attaching parts for EB6.75.775:						
R SP91/L	.		Clip, hose (Alt.R60/91—Mod.5101)				2	—	85/37
R EB6.75.513A	.		Lagging				1	L44	85/24
R EB6.75.515A	.		Lagging				1	L44	85/25

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.04.9549	. PIPE, assembly, from non-return valve and mixing valve tee pieces to connection between ribs 2 and 3	1	L54	86/36
AGS605/3	Attaching parts for EA3.04.9549:—			
or	. Clip, hose (Pre-Alt. R60/91—Mod. 5101)	2	—	86/1
SP91/L	. Clip, hose (Alt. R60/91—Mod. 5101)	—	—	
EA3.04.10959	. Lagging	1	L40	86/37
EA3.04.10961	. Lagging	1	L40	86/38
—	. PIPE, RUN IN PORT WHEEL BAY, ASSEMBLY (EB6.75.19)	—	—	86/5
	Spares for:—			
EB6.75.207	. . ADAPTOR, bulkhead	1	L40	86/12
	Attaching parts for EB6.75.207:—			
A27/2C	. . Bolt, 2 BA hex.head	6	—	86/20
AGS2001/C/1	. . Nut, stiff, 2 BA	6	—	86/13
EEAS201/1/DR	. . Tab, locking	2	L72	86/18
AGS1115/13	. . Washer, plate	1	—	86/9
EB6.75.201	. . PIPE, assembly, from fuselage bulkhead adaptor to pipe joint in wheel well bay	1	L56	86/11
EB6.75.203	. . PIPE, assembly, between rib A and E	1	L56	86/7
EB6.75.205	. . PIPE, assembly, from mixing valve bulkhead adaptor to pipe joint on rib E	1	L56	86/14
EEAS86/1	. RING, clamping	1	L72	86/40
AS5402	. RING, sealing, type A, between pipe flanges	9	—	86/7
EA3.75.145	. SLEEVE, pipe connecting 1.5" i/d x 2.5" long	2	Silastic	86/25
or				
DUNLOP				
DAS582/24/2.5				
EA3.75.147	. SLEEVE, pipe connecting 2.5" i/d x 3.0" long	1	Silastic	86/24
or				
DUNLOP				
DAS582/40/3.0				
EB6.75.725	. STRIP, bonding	1	BS265	86/21
—	. UNIT, COLD AIR, INSTALLATION (EA3.04.10927)	—	—	86/2
	Spares for:—			
EB6.75.199	. . UNIT, COLD AIR, ASSEMBLY	1	—	86/4
	Spares for:—			
GODFREY	. . . DIPSTICK, and filler, oil level	1	—	86/3
23421.HX				
GODFREY	. . . UNIT, cold air, A.C.R.E.9, MK.10.EX	1	—	86/6
120434				
	Attaching parts for EB6.75.199:—			
A25/1C	. . Bolt, 2 BA hex. head	16	—	86/10
AGS586/C	. . Washer, 2 BA spring	32	—	86/8
—	. VALVE, CONSTANT FLOW, INSTALLATION (EB6.75.479)	—	—	86/55
	Spares for:—			
EB6.75.481	. . VALVE, CONSTANT FLOW, ASSEMBLY	1	—	86/43
	Spares for:—			
EB6.75.579	. . . ADAPTOR, special	1	L40	86/53
EB6.75.491	. . . PIPE, assembly, flanged	1	L56	86/54
	Attaching parts for EB6.75.491:—			
A25/2C	. . . Bolt, 2 BA hex. head	12	—	86/48
SP13/C	. . . Washer, 2 BA plain	12	—	86/49

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

R
R

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
NORMALAIR 497776	WASHER, sealing	1	—	86/52
NORMALAIR 502090	VALVE, constant flow	1	—	86/44
AGS605/3	Attaching parts for EB6.75.479:—	2	—	86/45
or SP91/L	Clip, hose (Pre—Alt. R60/91—Mod. 5101)	—	—	—
EB6.75.517A	Clip, hose (Alt. R60/91—Mod. 5101)	1	L40	86/46
EB6.75.629A	Lagging	1	L40	86/47
—	Lagging	—	—	—
—	VALVE, RELIEF, AND PIPES, COLD AIR UNIT, INSTALLATION (EB6.75.727)	—	—	85/27
—	Spares for:—	—	—	—
A25/6C	BOLT, 2 BA hex. head bracket clip clamping	4	—	85/3
EB6.75.733	BRACKET, pipe support on cooler, assembly	1	DTD124	85/12
—	Attaching parts for EB6.75.733:—	—	—	—
A25/1E	Bolt, 1/4" BSF hex. head	2	—	85/8
SP13/E	Washer, 1/4" BSF plain	2	—	85/10
EB6.75.1557	CLAMP, assembly	3	—	85/6
—	Attaching parts for EB6.75.1557:—	—	—	—
A25/15E	Bolt, 1/4" BSF hex. head	2	—	85/2
AGS2001/E2	Nut, stiff, 1/4" BSF	2	—	85/16
AGS160/D	Washer, 1/4" BSF	2	—	85/17
EB6.75.731	COVER, valve case, assembly	1	L54	85/1
—	Attaching parts for EB6.75.731:—	—	—	—
A25/1E	Bolt, 1/4" BSF hex. head	2	—	85/5
AGS2001/C/1	NUT, stiff, 2 BA bracket clamp bolt attachment	4	—	85/11
EB6.75.737	PIPE, assembly, bend, relief valve pipe joint	1	L59	85/33
EB6.75.739	PIPE, assembly, from relief valve pipe joint to inlet tee piece	1	L54	85/26
EB6.75.741	PIPE, assembly, inlet tee piece, from pipe joint at rib 1 to Marston cooler	1	L54	85/18
AS5402	RING, sealing, between pipe flanges	3	—	85/7
EB6.75.729	VALVE, relief, assembly	1	—	85/4
SP13/C	WASHER, 2 BA plain, bracket clamp bolt attachment	4	—	85/9
—	VALVES AND PIPING, INSTALLATION (EA3.04.10937)	—	—	87/44
—	Spares for:—	—	—	—
EB6.75.257	BRACKET, support, for non-return valve	1	—	87/75
EB6.75.1557	CLAMP, assembly	5	—	87/15
—	Attaching parts for EB6.75.1557:—	—	—	—
A25/15E	Bolt, 1/4" BSF hex. head	2	—	87/10
AGS2001/E2	Nut, 1/4" BSF	2	—	87/32
AGS160/D	Washer, 1/4" BSF	2	—	87/26
GODFREY 50270	CLAMP, segmental	3	—	87/40

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
6990	E.B6.75.261	CONNECTOR, flanged, non-return valve and fitting	1	L40	C	87/77
5991	E.A4.75.183	ELBOW, from engine connection to non-return valve	1	—	C	87/61
28D/9133011	A25/2C	Attaching parts for E.A4.75.183:—	6	—	C	87/58
12714	E.B6.75.447A	Bolt, 2 BA hex. head	1	L44	C	87/62
12369	E.B6.75.449A	Cover, outer	1	L44	C	87/63
28M/1278190	AGS.2001/C/1	Cover, outer	6	—	C	87/57
28W/9419402	SP13/C	Nut, stiff, 2 BA	6	—	C	87/58
16448	E.B7.50.25	Washer, 2 BA plain	1	L40	C	87/72
12078	E.B6.75.669	FITTING, end, for pipe connection to hot air valve	3	Aero	C	87/69
12079	E.B6.75.675	GASKET, non-return valve joint	3	Permanite Aero	C	87/73
16556	E.B6.75.233	GASKET, hot air valve joint	1	Permanite	C	87/46
R 28E/9129562	AGS.605/3 or	PIPE, assembly, from mixing valve to constant flow valve	2	—	C	87/49
R 28E/2027591	SP91/L	Attaching parts for E.B6.75.233:—	1	—	C	87/49
26628	E.B6.75.279A	Clip, hose (Pre-Alt. R60/91—Mod. 5101)	1	L44	C	87/50
26629	E.B6.75.281A	Clip, hose (Alt. R60/91—Mod. 5101)	1	L44	C	87/51
13026	E.B6.75.235	Cover, outer	1	T26	C	87/43
R 28E/9129562	AGS.605/3 or	Cover, outer	1	—	C	87/43
R 28E/2027591	SP91/L	PIPE, assembly, from mixing valve to connection at rib 2	2	—	C	87/49
26630	E.B6.75.283A	Attaching parts for E.B6.75.235:—	1	—	C	87/49
26631	E.B6.75.285A	Clip, hose (Pre-Alt. R60/91—Mod. 5101)	1	L44	C	87/38
16557	E.B6.75.237	Clip, hose (Alt. R60/91—Mod. 5101)	1	L44	C	87/39
R 28E/9129562	AGS.605/3 or	Cover, outer	1	T26	C	87/59
R 28E/2027591	SP91/L	PIPE, assembly, from mixing valve to tee piece at rib 3	2	—	C	87/49
26632	E.B6.75.287A	Attaching parts for E.B6.75.237:—	1	—	C	87/49
26633	E.B6.75.289A	Clip, hose (Pre-Alt. R60/91—Mod. 5101)	1	L44	C	87/47
16558	E.B6.75.239	Clip, hose (Alt. R60/91—Mod. 5101)	1	L44	C	87/48
R 28E/9129562	AGS.605/3 or	Cover, outer	1	T26	C	87/21
R 28E/2027591	SP91/L	PIPE, assembly, from mixing valve to wheel well bay connection	4	—	C	87/49
26634	E.B6.75.295A	Attaching parts for E.B6.75.239:—	1	—	C	87/49
26635	E.B6.75.297A	Clip, hose (Pre-Alt. R60/91—Mod. 5101)	1	L44	C	87/22
16597	E.B6.75.631	Clip, hose (Alt. R60/91—Mod. 5101)	1	L44	C	87/23
19598	E.B6.75.633	Cover, outer	1	—	C	87/24
13025	E.B6.75.231	Legging, assembly	1	—	C	87/25
R 28E/9129562	AGS.605/3 or	Legging, assembly	1	T26	C	87/60
R 28E/2027591	SP91/L	PIPE, assembly, from non-return valve on inboard engine rib to tee piece at rib 3	3	—	C	87/49
26367	E.B6.75.275A	Attaching parts for E.B6.75.231:—	1	—	C	87/49
26366	E.B6.75.277A	Clip, hose (Pre-Alt. R60/91—Mod. 5101)	1	L44	C	87/54
28F/8011895	AGS.1140/D	Clip, hose (Alt. R60/91—Mod. 5101)	1	L44	C	87/55
28F/4169558	AS.5402	Cover, outer	1	—	C	87/52
28F/9439535	AGS.954/D	RING, sealing, pipe flanges	8	—	C	87/13
16560	E.B6.75.259	SLEEVE, outer	1	—	C	87/53
28D/9133011	A25/2C	TEE-PIECE, mixing valve and hot air valve at rib 3	1	—	C	86/42
28M/1278190	AGS.2001/C/1	Attaching parts for E.B6.75.259:—	3	—	C	86/56
28W/9419402	SP13/C	Bolt, 2 BA hex. head	3	—	C	86/50
		Nut, stiff, 2 BA	3	—	C	86/51
		Washer, 2 BA plain	3	—	C	86/51

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	E.B7.50.31	VALVE, HOT AIR, ASSEMBLY						1	—	—	87/45
		Consisting of:—									
R 5W/4511908	E.E. CO. B'FORD Type 234	ACTUATOR						1	—	A	87/71
R 27V/4604668	TEDDINGTON FKH/A/16	VALVE, hot air						1	—	A	87/74
	12125 E.B6.75.433A	Attaching parts for E.B7.50.3:—									
	12076 E.B6.75.445A	Cover, outer						1	—	C	87/41
	28M/9480017 AGS.2001/E/1	Cover, outer						1	—	C	87/42
	28M/9418921 SP13/E	Nut, stiff, 1/4" BSF						8	—	C	87/68
	28M/9416644 SP47/E	Washer, 1/4" BSF plain						8	—	C	87/68
		Washer, 1/4" BSF spring						8	—	C	87/67
R 27KD/ 4631324	NORMALAIR 501670	VALVE, non-return						1	—	A	87/70
		Attaching parts for 501670:—									
	28D/9436920 A25/1C	Bolt, 2 BA hex. head						4	—	C	87/64
	28D/9133011 A25/2C	Bolt, 2 BA hex. head						2	—	C	87/76
	28D/1200119 A25/4C	Bolt, 2 BA hex. head						6	—	C	87/80
	28M/1278190 AGS.2001/C/1	Nut, stiff, 2 BA						6	—	C	87/79
	28W/9419402 SP13/C	Washer, 2 BA plain						6	—	C	87/78
	28W/9416643 SP47/C	Washer, 2 BA spring						6	—	C	87/65
	—	VALVE, 2-WAY MIXING, INSTALLATION						—	—	—	87/3
		(E.A3.04.10939)									
		Spares for:—									
	E.B6.75.245	BRACKET, valve support, outboard						1	L72	—	87/14
	E.B6.75.246	BRACKET, valve support, inboard						1	L72	—	87/7
	E.B6.75.247	BRACKET, desynn transmitter						1	L72	—	87/1
16602	E.B6.75.649	ROD, ADJUSTING, 2-WAY MIXING VALVE						1	—	B	87/20
		DESYNN TRANSMITTER, ASSEMBLY									
		Consisting of:—									
	28N/1045680 AGS.899/2	COLLAR, shackle pin						2	—	C	87/19
	E.B6.75.653	FORK-END						1	L65	—	87/18
	E.B6.75.655	FORK-END						1	L65	—	87/17
R 28M/1006473	A27/CT	NUT, 2 BA thin						1	—	C	87/37
R 28M/4095891	A27/CTL	NUT, 2 BA thin L.H.						1	—	C	87/33
	28P/1207864 SP4Y/B4	PIN, shackle						2	—	C	87/16
	28P/9527619 SP90/C7	PIN, split						2	—	C	87/27
	E.B6.75.651	ROD, screwed						1	L65	—	87/34
R 6A/7002023	†	TRANSMITTER, desynn, type C						1	—	C	87/2
		Attaching parts for 6A/7002023:—									
	28D/9436920 A25/1C	Bolt, 2 BA hex. head						2	—	C	87/9
	28M/1278190 AGS.2001/C/1	Nut, stiff, 2 BA						4	—	C	87/5
	1025 EEAS.1/1C	Screw, 2 BA 120° c'sk head						2	S96	C	87/11

AP101B-0417-3A

Page NH7

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EB7.75.103	.	.	.	.	VALVE, DOUBLE HOT AIR, ASSEMBLY		1	—	87/4
	.	.	.	.	Consisting of:—				
E.E.CO. B'FORD Type 233 TEDDINGTON FKH/A/16	.	.	.	.	ACTUATOR		1	—	87/6
	.	.	.	.	VALVE, hot air, 2"		1	—	87/8
	.	.	.	.	Attaching parts for EB7.75.103:—				
A25/4C	.	.	.	.	Bolt, 2 BA, hex. head		6	—	87/12
AGS2001/C/1	.	.	.	.	Nut, stiff, 2 BA		6	—	87/36
SP15/C	.	.	.	.	Washer, 2 BA plain		6	—	87/35
	.	.	.	.	Attaching parts for EA3.04.10939:—				
EB6.75.299A	.	.	.	.	Cover, outer		1	L44	87/28
EB6.75.301A	.	.	.	.	Cover, outer		1	L44	87/29
EB6.75.635	.	.	.	.	Lagging, assembly		1	L44	87/30
EB6.75.637	.	.	.	.	Lagging, assembly		1	L44	87/31
	.	.	.	.	Attaching parts for EB6.75.235 on EA3.04.10937:—				
EB6.75.509A	.	.	.	.	Lagging, assembly		1	L44	86/16
EB6.75.511A	.	.	.	.	Lagging, assembly		1	L44	86/17

R
R

Page NH8 .									
Part Number	Description						No. off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
—	CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING, ASSEMBLY (EA3.04.10941)						—	—	
	Spares for:								
EB6.75.258	. BRACKET, support, non-return valve						1	L72	89/2
EB6.75.1557	. CLAMP, assembly						1	—	89/34
	Attaching parts for EB6.75.1557:								
A25/15E	. Bolt, 1/4" BSF hex. head						2	—	89/20
AGS2001/E2	. Nut, stiff, 1/4" BSF						2	—	89/27
AGS160/D	. Washer, 1/4" BSF						2	—	89/28
GODFREY 50270	. CLAMP, pipe jointing (segmental) at Marston cooler						2	—	89/35
EA2.75.37	. CLIP, pipe saddle at ribs 2 and 3						2	L72	89/36
	Attaching parts for EA2.75.37:								
A25/1C	. Bolt, 2BA hex. head						2	—	89/31
AGS2001/C/1	. Nut, stiff, 2BA						2	—	89/33
SP13/C	. Washer, 2BA plain						2	—	89/32
EB6.75.261	. CONNECTOR, flanged, non-return valve and fitting						1	L40	89/17
—	. DUCTS AND AIR COOLER ASSEMBLY (EA3.75.5158) (Mod.4858)						—	—	89/32
	Spares for:								
CM0183 FIG 1/2	. . BRACKET, flanged						4	—	
EA3.75.5156	. . DUCT, air inlet, assembly (Mod.4858)						1	—	88/35
	Attaching parts for EA3.75.5156								
EEAS1/1C	. . Screw, 2BA 120° c'sk head						16	S96	88/37
EB6.75.329	. . DUCT, air outlet, assembly						1	L59	88/31
	Attaching parts for EB6.75.329:								
EEAS1/1C	. . Screw, 2BA 120° c'sk head						2	S96	88/36
—	. . MARSTON COOLER, INSTALLATION (EB6.75.318)						—	—	88/33
	Spares for:								
EB6.75.344	. . . BRACKET, bottom support, assembly						2	DTD124	88/53
	Attaching parts for EB6.75.344:								
A25/16C	. . . Bolt, 2BA hex. head						2	—	88/52
AGS.2001/C/1	. . . Nut, stiff, 2BA						2	—	88/47
AS2809/4/139	. . . Piece, distance						2	L62	88/45
SP15/C	. . . Washer, 2BA plain						2	—	88/46
EB6.75.346	. . . BRACKET, top support, assembly						1	L72	88/55
	Attaching parts for EB6.75.346:								
A25/16C	. . . Bolt, 2BA hex. head						3	—	88/54
AGS2001/C/1	. . . Nut, stiff, 2BA						3	—	84/43
AS2809/4/139	. . . Piece, distance						3	L62	88/41
SP15/C	. . . Washer, 2BA plain						3	—	88/42
MARSTON D106/8A	. . . COOLER, air, primary (EB6.75.319)						1	—	88/38
	Attaching parts for D106/8A:								
A25/5E	. . . Bolt, 1/4" BSF hex. head						1	—	88/57
SP15/E	. . . Washer, 1/4" BSF plain						1	—	88/56
EB6.75.351	. . . Washer, felt						1	DTD590	88/58

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EB6.75.335	. . STRAP, JOINT, FOR ATTACHMENT OF AIR DUCTS TO MARSTON, COOLER, ASSEMBLY Consisting of:	2	—	88/40
A25/8C	. . . BOLT, 2BA hex. head	2	—	88/51
AGS2001/C/1	. . . NUT, stiff, 2BA	2	—	88/44
EB6.75.339	. . . STRAP, clamping	1	L59	88/49
EB6.75.337	. . . STRAP, joint	1	L59	88/48
CM0183 FIG 1/1	. . STRIP, packing	2	—	
EA2.75.345	. FAIRLEAD, half, pipe support, rib 1 Attaching parts for EA2.75.345:	2	LFS21	88/8
A25/3C	. Bolt, 2BA hex. head	2	—	88/3
AGS2001/C/1	. Nut, stiff, 2BA	2	—	88/1
SP13/C	. Washer, 2BA plain	2	—	88/2
EB7.50.25	. FITTING, end, for pipe connection to hot air valve	1	L40	89/12
EB6.75.669	. GASKET, non-return valve joint	2	Aero Permanite	89/11
EB6.75.675	. GASKET, hot air valve joint	3	Aero Permanite	89/13
EB6.75.403	. PIPE, assembly, from Marston cooler to engine and fuselage pipe tee piece Attaching parts for EB6.75.403:	1	T26	89/21
R SP91/L	. Clip, hose (Alt.R60/91—Mod.5101)	2	—	88/39
EB6.75.427A	. Cover, outer	1	L44	88/23
EB6.75.429A	. Cover, outer	1	L44	88/24
EB6.75.405	. PIPE, assembly, from wheel well bulkhead fitting to Marston air cooler	1	T26	89/22
EB6.75.407	. PIPE, assembly, from hot air valve end fitting to connection between ribs 2 and 3 Attaching parts for EB6.75.407:	1	T26	89/23
R SP91/L	. Clip, hose (Alt.R60/91—Mod.5701)	4	—	88/39
EB6.75.411A	. Lagging, assembly	1	L44	88/27
EB6.75.413A	. Lagging, assembly	1	L44	88/28
EB6.75.415A	. Lagging, assembly	1	L44	88/29
EB6.75.417A	. Lagging, assembly	1	L44	88/30
EB6.75.409	. PIPE, assembly, from connection between ribs 2 and 3 to tee piece Attaching parts for EB6.75.409:	1	T26	89/18
R SP91/L	. Clip, hose (Alt.R60/91—Mod.5101)	5	—	88/39
R EB6.75.189A	. Cover, outer	2	L44	88/17
R EB6.75.419A	. Lagging, assembly	1	L44	88/19
R EB6.75.421A	. Lagging, assembly	1	L44	88/20
R EB6.75.423A	. Lagging, assembly	1	L44	88/21
R EB6.75.425A	. Lagging, assembly	1	L44	88/22

CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	PIPE RUN IN STARBOARD WHEEL BAY, ASSEMBLY (E.B6.75.20)						—	—	—	88/18
		Spares for:—									
6768	E.B6.75.401	ADAPTOR, bulkhead						1	L40	C	88/4
		Attaching parts for E.B6.75.401:—									
28D/9133011	A25/2C	Bolt, 2 BA hex. head						6	—	C	88/9
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						6	—	C	88/5
16601	E.B6.75.647	Shim						1	Lam. Alum	C	88/11
980	EEAS.20/1/DR	Tab, locking						2	L72	C	88/10
28F/14892	AGS.1115/13	Washer, plate						1	—	C	88/12
15181	E.B6.75.213	CLIP, pipe saddle, in wheel bay						2	L72	C	88/6
		Attaching parts for E.B6.75.213:—									
28D/9133011	A25/2C	Bolt, 2 BA hex. head						2	—	C	88/7
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						2	—	C	88/14
28W/9419475	SP15/C	Washer, 2 BA plain						2	—	C	88/13
6769	E.B6.75.209	PIPE, assembly, from Marston cooler bulkhead elbow connection to pipe joint in wheel well bay						1	L56	C	88/15
16591	E.B6.75.615	PIPE, assembly, from pipe joint in wheel well bay to fuselage bulkhead connection						1	L56	C	88/16
28F/17675	AS.5402	RING, sealing, type A						3	—	C	89/29
28F/4051715	AGS.1119/K	UNION, tee						1	—	C	89/26
		Attaching parts for AGS.1119/K:—									
26395	E.B6.75.435A	Cover, outer						1	L44	C	89/24
26396	E.B6.75.437A	Cover, outer						1	L44	C	89/25
	E.B7.50.31	VALVE, HOT AIR, ASSEMBLY						1	—	—	89/1
		Consisting of:—									
R 5W/4511908	E.E. CO. B'FORD Type 234	ACTUATOR						1	—	A	89/4
R 27V/4604668	TEDDINGTON FKH/A/16	VALVE, hot air						1	—	A	89/3
		Attaching parts for E.B7.50.31:—									
12125	E.B6.75.443A	Cover, outer						1	L44	C	89/19
12076	E.B6.75.445A	Cover, outer						1	L44	C	89/20
28M/1011475	A27/EP SP47/E	Nut, 1/4" BSF plain						8	—	C	89/10
		Washer, 1/4" BSF spring						8	—	C	89/9
R 27KD/4631324	NORMALAIR 501670	VALVE, non-return						1	—	A	89/6
		Attaching parts for 501670:—									
28D/9436920	A25/1C	Bolt, 2 BA hex. head						4	—	C	89/8
28D/9133011	A25/2C	Bolt, 2 BA hex. head						2	—	C	89/15
28D/1200119	A25/4C	Bolt, 2 BA hex. head						6	—	C	89/14
12074	E.B6.75.439A	Cover, outer						1	L44	C	89/24
12075	E.B6.75.441A	Cover, outer						1	L44	C	89/25
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						6	—	C	89/16
28W/9419402	SP13/C	Washer, 2 BA plain						6	—	C	89/7
28W/9416643	SP47/C	Washer, 2 BA spring						6	—	C	89/5

SERVICES

COLD AIR SUPPLY TO PILOT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	COLD AIR SYSTEM TO PILOT, ASSEMBLY (EG7.74.1) Spares for:—	—	—	20/9
EA3.74.45	. BRACKET, non-return valve mounting	1	L72	20/16
EEAS143/5 or AS4523/3	. CLIP, pipe, 3/16" o/d (Pre-Ait. R60/91 — Mod 5101)	5	L72	20/12
EEAS143/15	. CLIP, pipe (Alt. R60/91 — Mod 5101)	5	—	—
EEAS143/5H or AS4525/3	. CLIP, pipe, 1" o/d	6	L72	20/8
EA3.74.47	. CLIP, pipe, 3/16" o/d bonding	2	L72	20/2
EA3.74.47	. CLIP, pipe (Alt. R60/91 — Mod 5101)	—	—	—
EA3.74.47	. CLIP, for non-return valve mounting	2	L54	20/17
A61/15C	Attachments:—	—	—	—
SP15/C	. Bolt, 2 BA hex, head	4	—	20/27
	. Washer, 2 BA plain	4	—	20/26
EA3.74.53	. COUPLING, drain pipe outlet	1	DTD423	20/14
EA3.74.63	. HOSE, connection, 1" i/d x 3" long, between air pipe section (Make from 32C376)	5	DTD625	20/18
EA3.74.67	. HOSE, connection, 3/16" i/d x 1-1/4" long from water trap to drain pipe (Make from 32C/488)	1	DTD625	20/15
THERMOTANKS				
K1259/43	. LOUVRE, 'punkah', air, type D.A.R.2	1	—	20/5
EG7.74.5	. PIPE, cold air, from hose connection to louvre forward of frame 2	1	L54	20/6
EA3.74.55	. PIPE, cold air, from hose connection, frame 1 to non-return valve	1	L54	20/1
EA3.74.111	. PIPE, cold air, from hose connection, frame 1 to hose connection between frames 1 and 2	1	L54	20/7
EA3.74.115	. PIPE, water drain, aft of frame 1	1	L54	20/3
EG7.81.1511	. RING, louvre mounting	1	Plywood	20/4
EA3.74.49	. SCOOP, cold air	1	DTD213	20/10
EEAS20/2/DR	. TAB, locking, drain pipe coupling	1	L72	20/13
EA3.74.109	. TRAP, water	1	L54	20/11
EA3.74.23	. VALVE, NON-RETURN, GROUP Consisting of:—	1	—	20/29
EA3.74.39	. . . ADAPTER	2	L40	20/19
EA3.74.41	. . . BODY, non-return valve	1	L40	20/23
EA3.74.25	. . . PLUNGER, valve seal, assembly	1	—	20/20
EA3.74.29	Spares for:— . . . SEAT, valve	1	Hallprene 21	20/21
EA3.74.27	. . . WASHER, valve seat	1	L40	20/22
EA3.74.35	. . . SHIM, laminated	1	Lam.Alum.	20/24
EA3.74.37	. . . SPRING, compression	1	DTD215	20/25
EA3.74.33	. . . WASHER, sealing	1	DTD378A	20/28

A.P.101B-0417-3A

Page NL1

SERVICES
DE-MISTING SYSTEM

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	DE-MISTING SYSTEM, ASSEMBLY (E.G7.76.1)						—	—	—	21/14
		Spares for:—									
	5UD/3310	†	BLOWER, air, type 1, forward of frame 5					1	—	A	21/31
	6734	EEAS.136	BRACKET, pipe clip support					3	L72	C	21/11
R	28E/2103541	AGS.3924/1	CLIP (Mod. 5238)					2	—	C	
R	28E/2103542	AGS.3924/2	CLIP (Mod. 5238)					11	—	C	
	—		DEMISTER, INTER-CANOPY, ASSEMBLY (E.G7.76.3)					—	—	—	21/13
			Spares for:—								
	5183	EEAS.143/25	CLIP, pipe					1	L72	C	21/5
			Attaching parts for EEAS.143/25:—								
	28S/	4111/10/5/16	Screw, self tapping, round head					1	—	C	21/4
	4612	E.A3.76.241	FLANGE, assembly					1	L54	C	21/6
	34910	E.G7.76.35	PIPE, assembly, demister					1	L54	B	21/3
			Attaching parts for E.G7.76.35:—								
	28D/1212964	A.61/1B	Bolt, 4 BA hex. head					5	—	C	21/1
	28W/9419474	SP.15/B	Washer, 4 BA plain					1	—	C	21/2
		E.G7.76.53	VALVE, BUTTERFLY, ASSEMBLY					1	—	—	21/7
			Consisting of:—								
	4614	E.A3.76.223	VALVE, butterfly, assembly					1	—	B	21/8
	1815	E.A3.76.47	FILTER, GROUP					1	—	B	22/30
			Consisting of:—								
	1816	E.A3.76.69	BOLT, special					3	S95	C	22/21
	1817	E.A3.76.51	CAP, end					1	—	C	22/24
		E.A3.76.49	CASE, outer, assembly					1	—	—	22/29
	1892	†	ELEMENT, filter (Purolator MFA.36A)					1	—	C	22/22
	28M/1013165	AGS.113/B	NUT, wing, 4 BA					3	—	C	22/26
	8978	E.A3.76.67	PLUG, sealing					1	L40	C	22/28
	1818	E.A3.76.75	SPRING					1	DTD.215	C	22/27
	1819	E.A3.76.71	WASHER, sealing, rubber					2	Rubber S/H 30	C	22/23
	1820	E.A3.76.73	WASHER, sealing, rubber					1	Rubber S/H 30	C	22/31
	28W/1031013	AGS.163/B	WASHER, spring					3	—	C	22/25
R		E.A3.76.23	HOSE, connecting, 3/8" o/d x 1/4" i/d x 60" long					1	—	LM	21/18
			(Make from 32C/533) (Pre-Mod. 5238)								
R		E.A3.76.27	HOSE, connecting, 9/16" o/d x 7/16" i/d x 4" long					1	—	LM	21/16
			(Make from 32C/534) (Pre-Mod. 5238)								
R		E.A3.76.29	HOSE, connecting, 9/16" o/d x 7/16" i/d x 6" long					1	—	LM	21/15
			(Make from 32C/534) (Pre-Mod. 5238)								
R		E.A3.76.31	HOSE, connecting, 9/16" o/d x 7/16" i/d x 2" long					1	—	LM	21/19
			(Make from 32C/534) (Pre-Mod. 5238)								
R		E.A3.76.33	HOSE, connecting, 9/16" o/d x 7/16" i/d x 1.5" long					10	—	LM	21/9
			(Make from 32C/534) (Pre-Mod. 5238)								
R		E.A3.76.175	HOSE, connecting, 9/16" o/d x 7/16" i/d x 20" long					1	—	LM	21/12
			(Make from 32C/534) (Pre-Mod. 5238)								

SERVICES
DE-MISTING SYSTEM

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	MOUNTING, BLOWER, FORWARD OF FRAME 5, INSTALLATION (E.G7.76.5)							—	—	—	21/24
	E.G7.76.9	Spares for:— MOUNTING, BLOWER, ASSEMBLY							1	—	—	21/28
		Spares for:—										
34911	E.G7.76.41	CHANNEL, base, assembly							1	L72	C	21/42
9044	E.A3.76.81	CLIP, blower mounting							1	DTD.124	C	21/43
		Attaching parts for E.A3.76.81:—										
28D/9140648	A.25/19C	Bolt, 2 BA hex. head							4	—	C	21/33
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							4	—	C	21/40
28W/9419475	SP.15/C	Washer, 2 BA plain							4	—	C	21/41
		CONNECTION, blower inlet							1	—	C	21/29
	E.A3.76.95	Attaching parts for E.A3.76.95:—										
28D/1212403	A.25/33C	Bolt, 2 BA hex. head							2	—	C	21/36
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							2	—	C	21/34
5049	E.A3.76.161	Washer, joint							1	—	C	21/30
28W/9419475	SP.15/C	Washer, 2 BA plain							2	—	C	21/35
		CONNECTION, blower outlet							1	—	C	21/32
	E.A3.76.131	Attaching parts for E.A3.76.131:—										
28S/9992524	A.32/A8	Screw, 6 BA round head							4	—	C	21/44
28W/9416641	SP.47/A	Washer, 6 BA spring							4	—	C	21/45
		Attaching parts for E.G7.76.9:—										
28D/1010030	A.25/7C	Bolt, 2 BA hex. head							4	—	C	21/37
5070	E.A3.76.91	Washer, rubber							12	—	C	21/39
28W/9419475	SP.15/C	Washer, 2 BA plain							4	—	C	21/38
	—	MOUNTING, FILTER, INSTALLATION (E.G7.76.7)							—	—	—	22/15
		Spares for:—										
28D/9436920	A.25/1C	Bolt, 2 BA hex. head							4	—	C	22/18
	E.G7.76.17	BRACKET, MOUNTING, L.H., C/W STRAP,							1	—	—	22/20
		ASSEMBLY										
		Spares for:—										
42334	E.A1.10.1671	EYE-BOLT							1	L40	C	22/12
1004	E.A1.10.1663	NUT, knurled finger							1	L40	C	22/14
	E.A3.76.259	PIN, 5/32" dia.							1	L40	—	22/11
28W/1009699	SP.55/C	WASHER, spring							1	—	C	22/13
	E.G7.76.18	BRACKET, MOUNTING, R.H., C/W STRAP,							1	—	—	22/19
		ASSEMBLY										
		Spares for:—										
42334	E.A1.10.1671	EYE-BOLT							1	L40	C	22/12
1004	E.A1.10.1663	NUT, knurled finger							1	L40	C	22/14
	E.A3.76.259	PIN, 5/32" dia.							1	L40	—	22/11
28W/1009699	SP.55/C	WASHER, spring							1	—	C	22/13
28M/1278190	AGS.2001/C/1	NUT, stiff, 2 BA							4	—	C	22/16

SERVICES

DE-MISTING SYSTEM

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
SP15/C	.	.	WASHER, 2 BA plain				4	-	22/17
EA3.76.5	.	.	PIECE, tee, at drier tube, frame 5				1	L54	21/17
EG7.76.23	.	.	PIPE, assembly, from hose connection frame 4 to air drier connection frame 5, 1/2" o/d x 22 SWG				1	L54	21/20
EG7.76.25	.	.	PIPE, assembly, from hose connection to blower unit forward of frame 5, 1/2" o/d x 22 SWG				1	L56	21/21
EG7.76.27	.	.	PIPE, assembly, from hose connection frame 4 to blower unit hose connection forward of frame 5, 1/2" o/d x 22 SWG				1	L56	21/25
EG7.76.29	.	.	PIPE, assembly, from hose connection to air filter at frame 1A, 1/2" o/d x 22 SWG				1	L56	21/27
EG7.76.31	.	.	PIPE, assembly, from air filter forward of frame 1A to demisting hose connection forward of frame 2, 1/2" o/d x 22 SWG				1	L56	21/10
EG7.76.49	.	.	PIPE, assembly, from hose connection forward of frame 4 to hose connection aft of frame 4, 1/2" o/d x 22 SWG				1	L56	21/22
EG7.76.51	.	.	PIPE, assembly, from hose connection frame 1 to hose connection aft of frame 1, 1/2" o/d x 22 SWG				1	L56	21/26
EA3.76.165	.	.	PIPE, assembly, from hose connection aft of frame 1 to hose connection forward of frame 4				1	DTD310	21/23
EA3.76.101	.	.	TUBE, AIR DRIER, FRAME 5, STARBOARD GROUP Spares for:-				1	-	22/38
EA3.76.159	.	.	ADAPTOR				1	-	22/39
EA3.76.103	.	.	CONTAINER, body				1	-	22/37
VOKES	.	.	FILTER				2	-	22/36
A12681	.	.							
EA3.76.105	.	.	HOSE, connecting, 3-1/8" o/d x 3" i/d x 2" long				1	Rubber	22/35
EA3.76.107	.	.	VALVE, GROUP Spares for:-				1	-	22/34
EA3.76.147	.	.	SEAL				1	Rubber	22/33
EA3.76.149	.	.	SPRING				2	Spring Steel	22/32
EA3.76.201	.	.	TUBE, AIR DRIER, FRAME 5, PORT, GROUP Consisting of:-				1	-	22/10
EA3.76.187	.	.	BOLT, special				3	S95	22/7
EA3.76.207	.	.	CAP, container				1	L54	22/3
EA3.76.199	.	.	CONTAINER, body				1	-	22/8
EA3.76.79	.	.	FILTER, GROUP Spares for:-				1	-	22/5
EA3.76.77	.	.	FILTER, pad, complete, 40 mesh, 34 SWG				1	-	22/9
EA1.76.21	.	.	PLATE, retaining				1	L72	22/6
AGS113/B	.	.	NUT, wing, 4BA				3	-	22/1
EA1.76.25	.	.	WASHER, rubber sealing, container and caps				2	S/H 40-45	22/4
AGS163/B	.	.	WASHER, spring				3	-	22/2
EA3.76.301	.	.	TUBE, 0.25" i/d x 0.37" o/d x 60" long (Mod. 5238)				1	DTD818.L3 Black	21/18
EA3.76.305	.	.	TUBE, 0.5" i/d x 0.62" o/d x 4" long (Mod. 5238)				1	DTD818.L3 Black	21/16
EA1.76.307	.	.	TUBE, 0.5" i/d x 0.62" o/d x 6" long (Mod. 5238)				1	DTD818.L3 Black	21/15
EA3.76.309	.	.	TUBE, 0.5" i/d x 0.62" o/d x 2" long (Mod. 5238)				1	DTD818.L3 Black	21/19
EG3.76.311	.	.	TUBE, 0.5" i/d x 0.62" o/d x 1.5" long (Mod. 5238)				10	DTD818.L3 Black	21/9
EA3.76.313	.	.	TUBE, 0.5" i/d x 0.62" o/d x 20" long (Mod. 5238)				1	DTD818.L3 Black	21/12

EQUIPMENT IN INNER WING, LEADING EDGE, PORT

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	EQUIPMENT IN INNER WING LEADING EDGE, PORT, ASSEMBLY (E.A3.00.67)						—	—	—	
		Spares for:—									
	E.B7.61.1	BOX, GEAR, ASSEMBLY						—	—	—	90/62
		Spares for:—									
399	E.A1.50.595	ADAPTOR, for hydraulic pump drain pipe						1	DTD126	C	90/68
16482	E.B7.61.39	BLOCK, generator steady, aft						1	EEDX16	C	90/10
		Attaching parts for E.B7.61.39:—									
28D/1008149	A25/2B	Bolt, 4 BA hex. head						1	—	C	90/14
28D/9015170	A25/16B	Bolt, 4 BA hex. head						1	—	C	90/6
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						2	—	C	90/9
28W/9419465	SP13/B	Washer, 4 BA plain						1	—	C	90/4
28W/9419474	SP15/B	Washer, 4 BA plain						1	—	C	90/16
16484	E.B7.61.41	BLOCK, generator steady, forward						1	EEDX16	C	90/17
		Attaching parts for E.B7.61.41:—									
28D/1008149	A25/2B	Bolt, 4 BA hex. head						1	—	C	90/19
28D/9015170	A25/16B	Bolt, 4 BA hex. head						1	—	C	90/3
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						2	—	C	90/8
28W/9419474	SP15/B	Washer, 4 BA plain						2	—	C	90/1
	DOWTY ROTOL PTG.3/1 or 37L/160 DOWTY ROTOL PTG.3/3	BOX, gear, auxiliary						1	—	—	90/38
		BDX, gear, auxiliary						1	—	A	90/39
		Attaching parts for PTG.3/1 or PTG.3/3:—									
	E.B7.61.1A	Nut, special, 3/8" BSF (Make from 28M/1011473)						4	—	LM	90/54
28W/9146646	SP47/J	Washer, 3/8" BSF spring						4	—	C	90/55
	BUCK & HICKMAN	CHAIN, pip pin safety, single link, 3" long						2	—	—	90/49
5664	E.B7.61.43	CLAMP, half, generator steady, upper						1	L72	C	90/50
5665	E.B7.61.45	CLAMP, half, generator steady, lower						1	L72	C	90/53
		Attaching parts for E.B7.61.43 and E.B7.61.45:—									
28D/9133012	A25/3C	Bolt, 2 BA hex. head						4	—	C	90/51
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						4	—	C	90/52
5666	E.B7.61.37	CONNECTION, elbow, stage 12 engine tapping						1	S92	C	90/58
5670	E.B7.61.23	COVER, half, for 2 speed generator drive						1	L59	C	90/37
13019	E.B7.61.111	COVER, inlet, half, for 2 speed generator drive						1	L59	C	90/35
37L/15000	—	DRIVE, 2 speed generator (E.B7.61.59)						1	—	A	90/34
6876	E.B7.61.25	DUCT, outlet, air, 2 speed drive and generator cooling						1	L59	C	90/45
6877	E.B7.61.53	DUCT, air, leading edge entry						1	L59	C	90/47
R 5UA/4360453	†	GENERATOR, 24v type P.3						1	—	A	90/31
5673	E.B7.61.87	HOSE, air outlet pipe connecting, 2.5" i/d x 4" x 8 long						1	Asbestos	C	90/42
28FP/9485292	A405	PIN, "pip", type A, generator steady locating						2	—	C	90/43
408	E.A1.61.8	PIPE, drain, gear box						1	L56	C	90/66
409	E.A1.61.41	PIPE, drain, hydraulic pump						1	L56	C	90/64

SERVICES

EQUIPMENT IN INNER WING, LEADING EDGE, PORT

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
1593	EEAS.66/1							RING, clamping	2	L72	C	90/44
1443	EEAS.66/7							RING, clamping	1	L72	C	90/23
6812	EEAS.66/14							RING, clamping	2	L72	C	90/30
5680	E.B7.61.55							RING, inlet air duct attachment	1	L59	C	90/27
5681	E.B7.61.57							RING, inlet air duct attachment	1	L72	C	90/25
1025	EEAS.1/1C							SCREW, 2 BA 120° c'sk head	8	S96	C	90/57
1468	EEAS.1/2C							SCREW, 2 BA 120° c'sk head	6	S96	C	90/56
37L/360	GD9/47							SHAFT, drive	1	—	B	90/60
5682	E.B7.61.35							STRAP, generator, air inlet and 2 speed generator	4	—	C	90/26
								drive cover securing				
5672	E.B7.61.95							TURN-BUCKLE, GENERATOR STEADY,	2	—	B	90/15
								ASSEMBLY				
								Consisting of:—				
16486	E.B7.61.47							FORK-END, R.H.	1	—	C	90/28
16487	E.B7.61.49							FORK-END, L.H.	1	—	C	90/7
28M/1007403	A27/ET							NUT, 1/4" BSF thin	1	—	C	90/24
28M/13454	A27/ETL							NUT, 1/4" BSF thin, L.H.	1	—	C	90/12
16488	E.B7.61.51							TRUNNION	1	—	C	90/13
	—							CABIN PRESSURE SYSTEM IN PORT WING	—	—	—	
								(E.A3.04.9547) (See page NH1)				
	—							ENGINE CONTROLS (E.A3.47.21) (See page DC1)	—	—	—	
	—							FUEL SYSTEM IN PORT INNER WING	—	—	—	
								(E.B6.57.71) (See page NY1)				
	—							HYDRAULIC PIPES IN PORT WING	—	—	—	
								(E.A3.04.10911) (See page NAF1)				
	E.A3.20.2337							PANEL, ACCESS, 2-SPEED GENERATOR	1	—	—	90/21
								DRIVE, RIB 2 AND 3, TOP SKIN,				
								ASSEMBLY				
								Spares for:—				
12339	E.B7.20.103							COVER, access	1	L72	C	90/29
28FP/9539080	F4/30							FASTENER, dzus	4	—	C	90/20
28FP/9483371	GF4/150							GRÖMMET, dzus	4	—	C	90/32
28FP/9455495	S4/250							SPRING, dzus	4	—	C	90/33

EQUIPMENT IN INNER WING, LEADING EDGE, STARBOARD

Ref. No.	Part No.	Description						No. off	Mtl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	EQUIPMENT IN INNER WING, LEADING EDGE, STARBOARD, ASSEMBLY (E.A3.00.68)						—	—	—	
		Spares for:—									
	E.B7.61.2	BOX, GEAR, ASSEMBLY						—	—	—	90/63
		Spares for:—									
399	E.A1.50.595	ADAPTOR, for hydraulic pump drain pipe						1	DTD126	C	90/68
16483	E.B7.61.40	BLOCK, generator steady, aft						1	EEDX16	C	90/11
		Attaching parts for E.B7.61.40:—									
28D/1008149	A25/2B	Bolt, 4 BA hex. head						1	—	C	90/14
28D/9105170	A25/16B	Bolt, 4 BA hex. head						1	—	C	90/6
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						2	—	C	90/9
25588	AS.2810/4/146	Tube, distance						1	L6 2	C	90/5
28W/9419465	SP13/B	Washer, 4 BA plain						1	—	C	90/4
28W/9419474	SP15/B	Washer, 4 BA plain						1	—	C	90/16
		BLOCK, generator steady, forward						1	EEDX16	C	90/18
		Attaching parts for E.B7.61.42:—									
28D/1008149	A25/2B	Bolt, 4 BA hex. head						1	—	C	90/19
28D/9015170	A25/16B	Bolt, 4 BA hex. head						1	—	C	90/3
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						2	—	C	90/8
25588	AS.2810/4/146	Tube, distance						1	—	C	90/2
28W/9419474	SP15/B	Washer, 4 BA plain						2	—	C	90/1
37L/	DOWTY ROTOL PTG.3/2	BOX, gear, auxiliary						1	—	—	90/40
	or										
37L/161	DOWTY ROTOL PTG.3/4	BOX, gear, auxiliary						1	—	A	90/41
		Attaching parts for PTG.3/2 or PTG.3/4:—									
	E.B7.61.1A	Nut, special, 3/8" BSF						4	—	LM	90/54
		(Make from A27/JP Ref. 28M/1011473)									
28W/9146646	SP47/J	Washer, 3/8" BSF spring						4	—	C	90/55
	BUCK & HICKMAN	CHAIN, pin pin safety, single link, 3" long						2	—	—	90/49
5664	E.B7.61.43	CLAMP, half, generator steady, upper						1	L72	C	90/50
		Attaching parts for E.B7.61.43:—									
28D/9133012	A25/3C	Bolt, 2 BA hex. head						2	—	C	90/51
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						2	—	C	90/52
		CLAMP, half, generator steady, lower						1	L72	C	90/53
		Attaching parts for E.B7.61.45:—									
28D/9133012	A25/3C	Bolt, 2 BA hex. head						2	—	C	90/51
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						2	—	C	90/52
5667	E.B7.61.38	CONNECTION, elbow, stage 12 engine tapping						1	S92	C	90/59
5670	E.B7.61.23	COVER, half, for 2 speed generator drive						1	L59	C	90/37
13020	E.B7.61.112	COVER, inlet, half, for 2 speed generator drive						1	L59	C	90/36
37L/15000	—	DRIVE, 2 speed generator (E.B7.61.59)						1	—	A	90/34
6882	E.B7.61.26	DUCT, outlet, air, 2 speed drive and generator cooling						1	L59	C	90/46
6883	E.B7.61.54	DUCT, air, leading edge entry						1	L59	C	90/48
R 5UA/4360453	†	GENERATOR, 24v type P3						1	—	A	90/31

SERVICES

EQUIPMENT IN INNER WING, LEADING EDGE, STARBOARD

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
5673	E.B7.61.87	HOSE, air outlet pipe connecting, 2" 5 i/d x 5" 8 long						1	Asbestos	C	90/42
28FP/9485292	A405	PIN, "pip", type A, generator steady locating						2	—	C	90/43
407	E.A1.61.7	PIPE, drain, gear box						1	L56	C	90/67
410	E.A1.61.42	PIPE, drain, hydraulic pump						1	L56	C	90/65
1593	EEAS.66/1	RING, clamping						2	L72	C	90/44
1443	EEAS.66/7	RING, clamping						1	L72	C	90/23
6812	EEAS.66/14	RING, clamping						2	L72	C	90/30
5680	E.B7.61.55	RING, inlet air duct attachment						1	L59	C	90/27
5681	E.B7.61.57	RING, inlet air duct attachment						1	L72	C	90/25
1025	EEAS.1/1C	SCREW, 2 BA 120° c'sk head						8	S96	C	90/57
1468	EEAS.1/2C	SCREW, 2 BA 120° c'sk head						6	S96	C	90/56
37L/359	GD.9/48	SHAFT, drive						1	—	B	90/61
5682	E.B7.61.35	STRAP, generator, air inlet and 2 speed generator drive cover securing						4	DTD124	C	90/26
5672	E.B7.61.95	TURN-BUCKLE, GENERATOR STEADY, ASSEMBLY						2	—	B	90/15
		Consisting of:—									
16486	E.B7.61.47	FORK-END, R.H.						1	—	C	90/28
16487	E.B7.61.49	FORK-END, L.H.						1	—	C	90/7
28M/1007403	A27/ET	NUT, 1/4" BSF thin						1	—	C	90/24
28M/13454	A27/ETL	NUT, 1/4" BSF thin, L.H.						1	—	C	90/12
16488	E.B7.61.51	TRUNNION						1	—	C	90/13
	—	CABIN PRESSURE SYSTEM IN STARBOARD WING (E.A3.04.10941) (See page NJ1)						—	—	—	
	—	ENGINE CONTROLS (E.A3.47.22) (See page DE1)						—	—	—	
	—	FUEL SYSTEM IN STARBOARD INNER WING (E.A1.57.756) (See page NZ1)						—	—	—	
	—	HYDRAULIC PIPES IN INNER WING LEADING EDGE (E.A3.04.10907) (See page NAE1)						—	—	—	
	E.A3.20.2338	PANEL, ACCESS, 2-SPEED GENERATOR DRIVE, RIB 2 AND 3, TOP SKIN, ASSEMBLY						1	—	—	90/22
		Spares for:—									
12339	E.B7.20.103	COVER, access						1	L72	C	90/29
28FP/9539060	F.4/30	FASTENER, dzus						4	—	C	90/20
28FP/9483371	GF.4/150	GRIMMET, dzus						4	—	C	90/32
28FP/9455495	S.4/250	SPRING, dzus						4	—	C	90/33

SERVICES

FIRE PROTECTION SYSTEM IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	FIRE PROTECTION SYSTEM IN PORT WING ASSEMBLY (EG7.60.15) Spares for:-	-	-	23/23
EA1.60.121	. BOLT, special, mounting strap attachment	1	S92	23/9
EA1.60.41	. BRACKET, support, fire extinguisher	1	-	23/10
EA1.60.47	. EXTINGUISHER, FIRE, ASSEMBLY Consisting of:-	1	-	23/5
R A716-3	. . CARTRIDGE, 2 pin, No. 1, Mk.3	1	-	23/11
R 27N4526468 or	. . EXTINGUISHER, fire, methyl bromide dual head	1	-	23/13
R 27N4684644	. . EXTINGUISHER, fire, methyl bromide	1	-	23/14
EA1.60.53	. PIPE, assembly, from fire extinguisher to inboard engine rib connection	1	-	23/17
EA1.60.33	. STRAP, mounting, fire extinguisher Attaching parts for EA1.60.33:-	1	-	23/7
R A25/1B	. Bolt, 4 BA hex. head	6	-	23/1
AGS2001/B/1	. Nut, stiff, 4 BA	6	-	23/3
EEAS28/2/EU	. Washer	6	S515	23/2
EA1.60.21	. TRUNNION, fire extinguisher strap	1	DTD126A	23/8
EA1.60.23	. TRUNNION, fire extinguisher strap	1	DTD126A	23/6
EA1.60.55	. UNION, bulkhead, inboard engine rib (Make from 28F/9157486) Attaching parts for EA1.60.55:-	1	-	23/22
A25/2C	. Bolt, 2 BA hex. head	3	-	23/18
AGS2001/C/1	. Nut, stiff, 2 BA	3	-	23/21
EA1.60.13	. Plate, locking tab	2	L72	23/19
SP13/C	. Washer, 2 BA plain	3	-	23/20
EEAS28/2/EU	. WASHER	4	S515	23/15



A.P.1018-0417-3A		SERVICES					Page NQ1			
FIRE PROTECTION SYSTEM IN STARBOARD WING										
Ref. No.	Part No.	Description					No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7		
	-	FIRE PROTECTION SYSTEM IN STARBOARD WING, ASSEMBLY (E.G7.60.16)					-	-	-	23/24
		Spares for:-								
3410	E.A1.60.121	BOLT, special, mounting strap attachment					1	S92	C	23/9
3624	E.A1.60.41	BRACKET, support, fire extinguisher					1	-	C	23/10
	E.A1.60.48	EXTINGUISHER, FIRE, ASSEMBLY					1	-	-	23/4
		Consisting of:-								
12K/9635263	†	CARTRIDGE, 2 pin, No. 1, Mk. 3					1	-	A	23/11
27N/4526468	†	EXTINGUISHER, fire, methyl bromide, dual head					1	-	A	23/13
	or									
27N/4684644	†	EXTINGUISHER, fire, methyl bromide					1	-	A	23/14
1412	E.A1.60.54	PIPE, assembly, from fire extinguisher to inboard engine rib connection					1	-	C	23/16
1703	E.A1.60.33	STRAP, mounting, fire extinguisher					1	-	C	23/7
		Attaching parts for E.A1.60.33:-								
28D/1010658	A.25/1B	Bolt, 4 BA hex. head					6	-	C	23/1
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA					6	-	C	23/3
3411	EEAS.28/2/EU	Washer					6	S515	C	23/2
1704	E.A1.60.21	TRUNNION, fire extinguisher strap					1	DTD.126A	C	23/8
1705	E.A1.60.23	TRUNNION, fire extinguisher strap					1	DTD.126A	C	23/6
	E.A1.60.55	UNION, bulkhead, inboard engine rib					1	-	LM	23/22
		(Make from 28F/9157486)								
		Attaching parts for E.A1.60.55:-								
28D/9133011	A.25/2C	Bolt, 2 BA hex. head					3	-	C	23/18
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA					3	-	C	23/21
7779	E.A1.60.13	Plate, locking tab					2	L72	C	23/19
28W/9419402	SP.13/C	Washer, 2 BA plain					3	-	C	23/20
3411	EEAS.28/2/EU	WASHER					4	S515	C	23/15



SERVICES

FIRE PROTECTION SYSTEM IN FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	FIRE PROTECTION SYSTEM IN FUSELAGE ASSEMBLY (EG7.60.1) Spares for:—	—	—	25/14
R A716-3	. CARTRIDGE, electric, No. 1, Mk. 3	1	—	25/13
AGS1116/C	. CONE, elbow	1	—	25/21
AGS1120/10	. CONE, tee	1	—	25/17
AGS1111/C	. CONE, union, flanged	2	—	25/2
GRAVINER	. EXTINGUISHER, fire	1	—	25/5
	Attaching parts for 27N/4526467:—			
A25/15B	. Bolt, 4 BA hex. head	4	—	25/6
AGS2001/B/1	. Nut, stiff, 4 BA	4	—	25/10
A31/C48	. Screw, 2 BA cheese head	2	—	25/12
EA2.60.25	. Strap, front	4	—	25/9
EA2.60.27	. Strap, rear	4	—	25/7
EA2.60.11	. Trunnion	2	DTD126A	25/11
EA2.60.13	. Trunnion	2	DTD126A	25/8
—	. FIRE EXTINGUISHER BOTTLES, AND SPRAY PIPE, IN BOMB BAY AREA, ASSEMBLY (EG7.60.7) Spares for:—	—	—	26/10
A716-3	. . CARTRIDGE, electric	2	—	26/13
EA1.60.39	. . ELBOW, connection at fire extinguisher	2	T45	26/17
GRAVINER	. . EXTINGUISHER, fire, type 60A	2	—	26/7
GRAVINER Type A594	. . INDICATOR, pressure relief	2	—	26/1
EG7.60.9	. . PIPE, assembly, transverse, from special tee at centre line to fire extinguisher aft of frame 13	1	L56	26/14
EG7.60.23	. . PIPE, assembly, from special tee aft of frame 13 to 4-way piece aft of frame 17	1	L56	26/16
EG7.60.25	. . PIPE, assembly, from coupling frame 12 to special tee aft of frame 13	1	L56	26/21
EG7.60.27	. . PIPE, assembly, from coupling at centre line, forward of frame 29 to tee piece aft of frame 27	1	L56	26/19
EG7.60.11	. . PIPE, assembly, from coupling at centre line to fire extinguisher coupling, frame 29	1	L56	26/11
EG7.60.17	. . PIPE, assembly, from fire extinguisher to pressure relief indicator, frame 29	1	L56	26/18
EG7.60.19	. . PIPE, assembly, from fire extinguisher to pressure relief indicator, frame 13	1	L56	26/20
—	. . STRUCTURE, FIRE BOTTLE MOUNTING, AT BULKHEAD 13, ASSEMBLY (EG7.11.1395) Spares for:—	—	—	26/3
A31/C48	. . . SCREW, 2 BA cheese head	2	—	26/9

SERVICES

FIRE PROTECTION SYSTEM IN FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.11.1407	. . . STRAP, fire bottle Attaching parts for EG7.11.1407:—	4	L72	26/12
A25/20B	. . . Bolt, 4 BA hex. head	1	—	26/5
AGS2002/B/1	. . . Nut, stiff, 4 BA	1	—	26/6
EA1.60.21	. . . TRUNNION	2	DTD126A	26/2
EA1.60.23	. . . TRUNNION	2	DTD126A	26/8
—	. . . STRUCTURE, FIRE BOTTLE MOUNTING AT BULKHEAD 29, ASSEMBLY (EG7.11.1423) Spares for:—	—	—	26/23
A31/C48	. . . SCREW, 2 BA cheese head	2	—	26/28
EG7.11.1407	. . . STRAP, fire bottle Attaching parts for EG7.11.1407:—	4	L72	26/27
A25/20B	. . . Bolt, 4 BA hex. head	1	—	26/26
AGS2002/B/1	. . . Nut, stiff, 4 BA	1	—	26/25
EA1.60.21	. . . TRUNNION	2	DTD126A	26/24
EA1.60.23	. . . TRUNNION	2	DTD126A	26/22
EEAS20/8/CR	. . . TAB, locking	2	L72	26/4
EB2.73.1331	. . . TEE, special cone, unequal	1	L65	26/15
—	. . . FIREWIRE, IN CENTRE FUSELAGE, INSTALLATION (EG7.60.3) (Pre Mod 5466)	—	—	24/8
—	. . . FIREWIRE, IN CENTRE FUSELAGE, INSTALLATION (EG7.60.5003) (Mod 5466) Spares for:—	—	—	
GRAVINER D3170	. . . ADAPTER, fitting, termination Attaching parts for D3170:—	2	—	24/24
A25/1C	. . . Bolt, 2 BA hex. head	2	—	24/26
AGS2001/C/1	. . . Nut, stiff, 2 BA	2	—	24/22
EEAS20/3/DR	. . . Tab, locking	1	L72	24/25
SP13/C	. . . Washer, 2 BA plain	2	—	24/23
EEAS552/4	. . . BOBBIN, distance (Pre Mod 5466)	6	L65	24/3
EEAS552/4	. . . BOBBIN, distance (Mod 5466)	7	L65	
A25/5B	. . . BOLT, 4 BA (Mod 5466)	1	—	
A25/5C	. . . BOLT, 2 BA (Mod 5466)	2	—	
A25/6C	. . . BOLT, 2 BA (Mod 5466)	2	—	
EB2.60.73	. . . CLIP, securing, 'graviner' connector Attaching parts for EB2.60.73:—	5	L72	24/6
A25/3B	. . . Bolt, 4 BA hex. head	1	—	24/5
AGS2001/B/1	. . . Nut, stiff, 4 BA	1	—	24/14
SP13/B	. . . Washer, 4 BA plain	1	—	24/13
SP16/B	. . . Washer, 4 BA plain	2	—	24/12
D3004	. . . CLIP (Pre Mod 5466)	132	—	24/10
D3004	. . . CLIP (Mod 5466)	129	—	
GRAVINER D2475	. . . CONNECTOR, hexagonal	6	—	24/7
GRAVINER D3131	. . . COUPLING, flanged Attaching parts for D3131:—	4	—	24/20
A25/1B	. . . Bolt, 4 BA hex. head	3	—	24/21
AGS2001/B/1	. . . Nut, stiff, 4 BA	3	—	24/14
EEAS20/2/DR	. . . Tab, locking	2	L72	24/19
SP13/B	. . . Washer, 4 BA plain	3	—	24/13

SERVICES
FIRE PROTECTION SYSTEM IN FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.
R	DETECTOR, OVERHEAT SYSTEM (EG7.60.5005) (Mod.5541) Spares for:—	—	—	24A/1
R	EG7.60.5007 . . . CHANNEL, Mounting assembly Spares for:—	1	—	24A/2
R	AGS2009C1 NUT, anchor	4	—	24A/3
R	10.10001 . . . CLAMP Attaching parts:—	58	—	24A/4
R	EEAS552.4 . . . Bobbin (at 3 positions)	1	—	24A/5
R	A25/3C . . . Bolt, 2BA (at 1 position)	1	—	24A/6
R	A25/6C . . . Bolt, 2BA (at 3 positions)	1	—	24A/7
R	A25/1C . . . Bolt, 2BA	1	—	24A/8
R	AGS2001C1.66 . . . Nut, stiff, 2BA	1	—	24A/9
R	SP124D . . . Washer	1	—	
R	3001.173/537/80C -12M . . . DETECTOR, Responder unit	1	—	24A/10
	Attaching parts:—			
R	A25/3C . . . Bolt, 2BA	4	—	24A/11
R	10-20070 . . . Clamp, saddle	2	—	24A/12
R	SP125D . . . Packing	4	—	24A/13
R	SP124D . . . Washer	4	—	24A/14
R	3106 . . . LINER	58	—	24A/15
	D2370/60 . . . ELEMENT, sensing, 5 ft	2	—	24/2
	D2370/89 . . . ELEMENT, sensing, 7 ft 5 ins	1	—	24/4
	D2370/120 . . . ELEMENT, sensing, 10 ft	7	—	24/1
	D2370/120 . . . ELEMENT, sensing, 1 ft 8 ins	1	—	
	D3893 . . . SLEEVE, bushing (Pre Mod.5466)	132	—	24/11
	D3893 . . . SLEEVE, bushing (Mod.5466)	135	—	
	SP16/C . . . WASHER, thick (Mod.5466)	6	—	
	AGS1142/F . . . NIPPLE, adapter	2	—	25/16
	— . . . MOUNTING, FUSE HOLDERS, FIRE EXTINGUISHER SYSTEM, BOMB BAY, ASSEMBLY (EG7.11.1441) Spares for:—	—	—	24/9
	A984 . . . FUSE, indicator	1	—	24/16
	A381 . . . HOLDER, fuse	1	—	24/15
	EG7.11.1447 . . . PANEL, perspex, assembly	1	—	24/17
	Attaching parts for EG7.11.1447:—			
	EEAS1/1C . . . Screw, 2BA, 120° c'sk head	4	S96	24/18
	EA1.60.137 . . . PIPE, assembly, on bulkhead, at frame 12 in centre fuselage	1	L56	25/1
	EA1.60.143 . . . PIPE, assembly, from 4-way junction piece at frame 18 to tee pieces at frame 27	1	L56	25/4
	EA1.60.165 . . . PIPE, assembly, from elbow at frame 27A to cone tee	1	L56	25/19
	EA1.60.167 . . . PIPE, assembly, spray, from cone tee of frame 27A	1	L56	25/22
	EB7.60.15 . . . PIPE, assembly, from cone tee to reducing union connection	1	L56	25/15
	EB7.60.17 . . . PIPE, assembly, from fire extinguisher bottle to reducing union at frame 27A	1	L56	25/18
	AGS1125/10 . . . UNION, piece, 4-way	1	—	25/3
	AGS1108/C . . . UNION, reducing	1	—	25/20

SERVICES

FIRE PROTECTION SYSTEM IN FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	FUEL SYSTEM IN CENTRE FUSELAGE, ASSEMBLY (EG7.57.5)	—	—	27/1
—	Spares for:	—	—	27/2
—	FUEL, INSTALLATION, ASSEMBLY (EG7.57.9)	—	—	27/2
—	Spares for:	—	—	27/2
EA1.57.121	CAP, FILLER, No.1 AND No.2 FUEL TANK, GROUP (Pre Mod.648)	2	—	27/4
R EA3.57.435	CAP, FILLER, No.1 AND No.2 FUEL TANK, ASSEMBLY (Mod.648)	2	—	27/3
—	Spares for:	—	—	27/3
EA1.57.133	ADAPTOR, filler cap drain	1	L40 or L64	27/11
AS2590	CAP, FILLER, GROUP	1	—	27/6
—	Consisting of:	—	—	27/6
AS2591	BASE	1	—	27/14
AS2592	CAP	1	—	27/8
AS5364	RING, sealing	1	—	27/7
—	Attaching parts for AS2590:	—	—	27/7
A25/2C	Bolt, 2BA hex. head	10	—	27/17
AGS2001/C/1	Nut, stiff, 2BA	10	—	27/10
EA1.57.131	Ring, sealing	1	Neo-K-Tex	27/15
EA2.56.71	Screw, 2BA	15	S11	27/5
SP16/C	Washer, 2BA plain	10	—	27/12
R GMA2070	CHAIN, brass link (SEM047) (SAS4745)	QR	—	27/13
EEAS164/4/35	HOSE, rubber, 1/4" i/d x 1/2" o/d x 3-1/2" long (Make from 32C/1275030)	1	BSF67 Type 1	27/13
EA1.57.125	RING, filler cap attachment	1	L59	27/19
—	Attaching parts for EA1.57.125:	—	—	27/19
AGS2001/C/1	Nut, stiff, 2BA	16	—	27/16
EA1.57.129	Ring, sealing	1	Neo-K-Tex	27/20
SP16/C	Washer, 2BA plain	16	—	27/18
R CSP71-08	RING, split (Pre SAS4745)	1	—	27/18
R TERRY	RING, split (SEM047) (SAS4745)	2	—	27/18
R 169-5/8"	RING, split (SEM047) (SAS4745)	2	—	27/18
HELLERMANN	TAG, ring tongue (Pre SAS4745)	1	—	27/9
HC312	WASHER, jointing, adaptor drain	1	—	27/9
AGS164/F	CAP, FILLER, No.3 FUEL TANK, GROUP (Pre Mod.648)	1	—	28/5
EA1.57.123	CAP, FILLER, No.3 FUEL TANK ASSEMBLY (Mod.648)	1	—	28/4
R EA3.57.437	CAP, FILLER, No.3 FUEL TANK ASSEMBLY (Mod.648)	1	—	28/4
—	Spares for:	—	—	28/4
EA1.57.133	ADAPTOR, filler cap drain	1	L40 or L64	28/14
AS2590	CAP, FILLER, GROUP	1	—	28/6
—	Consisting of:	—	—	28/6
AS2591	BASE	1	—	28/11
AS2592	CAP	1	—	28/7

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5 6			
AS5364	.	.	.	.	RING, sealing	1	—	28/12
A25/2C	.	.	.	.	Attaching parts for AS2590:	10	—	28/20
AGS2001/C/1	.	.	.	.	Bolt, 2BA hex. head	10	—	28/9
EA1.57.131	.	.	.	.	Nut, stiff, 2BA	1	Neo-K-Tex	28/16
EA2.66.71	.	.	.	.	Ring, sealing	15	S11	28/8
SP16/C	.	.	.	.	Screw, 2BA	10	—	28/10
GMA2070	.	.	.	.	Washer, 2BA plain	QR	—	
EEAS164/4/35	.	.	.	.	CHAIN, brass link (SEM047) (SAS4745)	1	BSF67	28/15
EA1.57.127	.	.	.	.	HOSE, rubber, 1/4" i/d x 1/2" o/d x 3-1/2" long (Make from 32C/1275030)	1	Type 1 L59	28/17
AGS2001/C/1	.	.	.	.	RING, filler cap attachment	16	—	28/18
EA1.57.129	.	.	.	.	Attaching parts for EA1.57.127:	1	Neo-K-Tex	28/21
SP16/C	.	.	.	.	Nut, stiff, 2BA	16	—	28/19
CSP71-08	.	.	.	.	Ring, sealing	1	—	
TERRY	.	.	.	.	Washer, 2BA plain	1	—	
169-5/8"	.	.	.	.	RING, split (Pre SAS4745)	2	—	
HELLERMANN	.	.	.	.	RING, split (SEM047) (SAS4745)	1	—	
HC312	.	.	.	.	TAG, ring tongue (Pre SAS4745)	1	—	
AGS164/F	.	.	.	.	WASHER, jointing, adaptor drain	1	—	28/13
EA3.57.115	.	.	.	.	CLIP, venting pipe (Mod.648)	2	—	29/16
A25/1C	.	.	.	.	Attaching parts for EA3.57.115:	4	—	29/15
A25/4C	.	.	.	.	Bolt, 2BA hex. head	1	—	29/13
AGS2001/C/1	.	.	.	.	Bolt, 2BA hex. head	1	—	29/17
EA3.57.421	.	.	.	.	Nut, stiff, 2BA	2	L72	29/14
EA3.57.401	.	.	.	.	Washer, packing	1	—	29/4
EA3.57.407	.	.	.	.	CLIP, VENT PIPE, ASSEMBLY, AT FRAME 21A (MOD. 648)	1	—	29/5
EA3.57.409	.	.	.	.	Spares for:—	1	—	29/6
A25/3C	.	.	.	.	CLIP	2	—	29/7
EA3.57.253	.	.	.	.	Attaching parts for EA3.57.407 and EA3.57.409:—	1	—	29/8
EA3.57.255	.	.	.	.	Bolt, 2BA hex. head	1	—	29/10
EA3.57.427	.	.	.	.	DUCT, venting, No. 1 tank (Mod. 648)	1	—	29/11
EA3.57.103	.	.	.	.	DUCT, venting, No. 2 tank (Mod. 648)	1	—	30/1
AGS2001/C/1	.	.	.	.	DUCT, venting, No. 2 tank (Mod. 648)	1	L52	30/4
EA1.57.59	.	.	.	.	ELBOW, venting, No. 1 fuel tank	8	—	30/5
	.	.	.	.	Attaching parts for EA3.57.103:—	1	Neo-K-Tex	
	.	.	.	.	Nut, stiff, 2 BA			
	.	.	.	.	Washer, joint			

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
—	. . . FELTING, PROTECTION, No.3 FUEL TANK ASSEMBLY (EA3.57.521)						—	—	28/1
	Spares for:								
EA1.57.373	. . . PAD, 3/16" thick x 4-1/2" dia.						24	—	28/3
EA1.57.829	. . . PAD, 1/4" thick x 4" dia. (Make from 32B/953)						1	—	28/2
—	. . . FUEL, DELIVERY SYSTEM, ASSEMBLY (EA1.57.827)						—	—	32/34
	Spares for:								
EA3.57.361	. . . BOX, FUEL, 3-WAY JUNCTION, GROUP						2	—	32/38
	Spares for:								
BROWN BROS. 487	 COMPOUND, jointing (Hermeticoll)						QR	—	32/51
SPE1237	 GASKET						3	—	32/52
	Attaching parts for EA3.57.361:								
AGS2001/C/1	. . . Nut, stiff, 2BA						4	—	32/49
SP15/C	. . . Washer, 2BA plain						4	—	32/50
EA1.57.201	. . . CLIP, louvre, fuel pipe at floor girder 16, port						1	L59	32/23
	Attaching parts for EA1.57.201:								
A25/1B	. . . Bolt, 4BA hex. head						2	—	32/24
AGS2001/B/1	. . . Nut, stiff, 4BA						2	—	32/21
SP15/B	. . . Washer, 4BA plain						2	—	32/22
EA1.57.202	. . . CLIP, louvre, fuel pipe at floor girder 16 starboard						1	L59	32/17
	Attaching parts for EA1.57.202:								
A25/1B	. . . Bolt, 4BA hex. head						2	—	32/20
AGS2001/B/1	. . . Nut, stiff, 4BA						2	—	32/18
SP15/B	. . . Washer, 4BA plain						2	—	32/19
EA1.57.203	. . . CLIP, half, fuel pipe support at floor girders, 17 19, and 20						6	L59	32/15
	Attaching parts for EA1.57.203:								
A25/1B	. . . Bolt, 4BA hex. head						2	—	32/16
AGS2001/B/1	. . . Nut, stiff, 4BA						2	—	32/13
SP15/B	. . . Washer, 4BA						2	—	32/14
EA1.57.205	. . . CLIP, half, fuel pipe support at bomb door track, frame 21, port						1	L59	32/11
	Attaching parts for EA1.57.205:								
A25/2B	. . . Bolt, 4BA hex. head						2	—	32/12
AGS2001/B/1	. . . Nut, stiff, 4BA						2	—	32/9
SP15/B	. . . Washer, 4BA plain						2	—	32/10
EA1.57.206	. . . CLIP, half, fuel pipe support at bomb door track, frame 21, starboard						1	L59	32/5
	Attaching parts for EA1.57.206:								
A25/2B	. . . Bolt, 4BA hex. head						2	—	32/6
AGS2001/B/1	. . . Nut, stiff, 4BA						2	—	32/8
SP15/B	. . . Washer, 4BA						2	—	32/7
EA1.57.207	. . . CLIP, half, fuel pipe support at bomb door track, frame 22, port						1	L59	32/46
	Attaching parts for EA1.57.207:								
A25/1B	. . . Bolt, 4BA hex. head						2	—	32/47
AGS2001/B/1	. . . Nut, stiff, 4BA						2	—	32/44
SP15/B	. . . Washer, 4BA plain						2	—	32/45

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.57.208	CLIP, half, fuel pipe support at bomb door track, frame 22, starboard	1	L59	32/42
	Attaching parts for EA1.57.208:			
A25/1B	Bolt, 4BA hex. head	2	—	32/43
AGS2001/B/1	Nut, stiff, 4BA	2	—	32/40
SP15/B	Washer, 4BA plain	2	—	32/41
EA1.57.1317	CLIP, top, fuel pipes	12	L59	32/2
	Attaching parts for EA1.57.1317:			
A25/2B	Bolt, 4BA hex. head	2	—	32/1
AGS2001/B/1	Nut, stiff, 4BA	2	—	32/3
SP15/B	Washer, 4BA plain	2	—	32/4
EEAS164/20/30	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long (Make from 32C/377)	8	DTD625	32/28
AGS1142/J	NIPPLE, adaptor	10	—	32/25
EA1.57.105	PIPE, assembly, from hose joint aft of frame 16 to fuel junction box, port and starboard	2	L54	32/32
EA1.57.107	PIPE, assembly, from hose joint aft of frame 17 to fuel junction box, port and starboard	2	L56	32/30
EA1.57.109	PIPE, from hose joint aft of frame 19 to hose joint forward of frame 22, port	1	L56	32/36
EA1.57.110	PIPE, from hose joint aft of frame 19 to hose joint forward of frame 22, starboard	1	L56	32/29
EA3.57.117	PIPE, assembly, from fuel tank No.1 pump to junction box hose coupling aft of frame 16, port	1	L56	32/39
EA3.57.119	PIPE, assembly, from fuel tank No.1 pump to junction box hose coupling aft of frame 16, starboard	1	L56	32/33
EA1.57.715	PIPE, assembly, from fuel tank No.3 pump to hose joint forward of frame 22, port	1	L56	32/35
EA1.57.717	PIPE, assembly, from fuel tank No.3 pump to hose joint forward of frame 22, starboard	1	L56	32/26
EA1.57.1269	PIPE, assembly, from fuel tank No.2 pump to junction box, port	1	L56	32/37
EA1.57.1267	PIPE, assembly, from fuel tank No.2 pump to junction box, starboard	1	L56	32/31
AGS565/B	PLUG, 1/4" BSP, fuel junction box	2	—	32/54
AGS1140/C	PLUG, nipple, fuel junction box	2	—	32/56
—	PUMP, FUEL, No.1, PORT, ASSEMBLY (EA3.57.207)	—	—	33/7
	Spares for:			
E.E. CO. LTD. Type 201 Mk.8	ACTUATOR AND FUEL COCK, ASSEMBLY consisting of:	1	—	33/38
AED200152 5W/4489229	ACTUATOR, type 200, Mk.1	1	—	33/23
	ADAPTOR, c/w label	1	—	33/39

A.P.101B-0417-3A

SERVICES

Page NS5

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
SAUNDERS				
E.42.F10	 COCK, fuel	1	—	33/37
AGS.2001/C/1	 NUT, stiff, 2BA	2	—	33/40
↑	 WIRE, locking, 22 SWG	QR	—	33/41
	Attaching parts for type 201, Mk.8:—			
A25/1C	 Bolt, 2BA hex. head	2	—	33/16
AGS.162/C	 Washer, 2BA	2	—	33/17
SP15/C	 Washer, 2BA plain	2	—	33/18
EA1.57.191	 ADAPTOR, fuel pump cock	1	L40	33/43
EA1.57.617	 ADAPTOR, fuel pump mounting	1	—	33/15
	Attaching parts for EA1.57.617:—			
A27/CP	 Nut, 2BA plain	16	—	33/31
AGS.162/C	 Washer, 2BA	16	—	33/32
EA1.57.601	 BRACKET, plate, fuel pump mounting	1	L65	33/33
	Attaching parts for EA1.57.601:—			
EA1.57.606	 Bolt, 1/4" BSF	4	DTD126	33/29
A27/CP	 Nut, 2BA plain	16	—	—
AGS.2001/E/1	 Nut, stiff, 1/4" BSF	4	—	33/36
AGS.162/C	 Washer, 2BA	16	—	—
SP15/E	 Washer, 1/4" BSF plain	4	—	33/27
EA1.57.621	 BRACKET, channel, fuel pump mounting	1	L72	33/28
	Attaching parts for EA1.57.621:—			
A25/1C	 Bolt, 2BA hex. head	14	—	33/26
A25/2C	 Bolt, 2BA hex. head	1	—	33/35
AGS.2001/C/1	 Nut, stiff, 2BA	5	—	33/24
SP15/C	 Washer, 2BA plain	15	—	33/25
EA1.57.1315	 BRACKET, actuator support	1	L72	33/21
	Attaching parts for EA1.57.1315:—			
EA1.57.561	 Bolt	2	—	33/19
AGS.162/C	 Washer, 2BA	2	—	33/20
SP15/C	 Washer, 2BA plain	2	—	33/22
EEAS.143/6	 CLIP, pipe, single	1	L72	33/11
	Attaching parts for EEAS.143/6:—			
A25/2B	 Bolt, 4BA hex. head	1	—	33/13
AGS.2001/B/1	 Nut, stiff, 4BA	1	—	33/5
SP13/B	 Washer, 4BA plain	1	—	33/9
AGS.952/B	 COLLAR	1	—	33/1
EEAS.164/4/15	 HOSE, rubber, 1/4" i/d x 1/2" o/d x 1-1/2" long (Make from 32C/407)	1	DTD625	33/6
AGS.1142/B	 NIPPLE, adaptor	1	—	33/8
EA1.57.627	 PIPE, drain, 1/4" o/d x 22 SWG	1	L56	33/12
SPE21455	 PUMP, fuel, type PUL.1003 Mk.5 (AS4771)	1	—	33/30
or				
SPE21442	 PUMP, fuel, type SPE.1003 Mk.4 (AS4771)			
	Attaching parts for pump:—			
AGS.2002/C/1	 Nut, stiff, 2BA	4	—	33/46
EEAS.28/4BU	 Washer	2	S515	33/45
SP15/C	 Washer, 2BA plain	12	—	33/47
AGS.2111	 SLEEVE, outer	1	—	33/10

R
R
R

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
AGS.1132/B	 UNION, banjo body Attaching parts for AGS.1132/B:—	1	—	33/2
AGS.1135/B	 Bolt, banjo	1	—	33/4
AGS.164/F	 Washer	2	—	33/3
EA1.57.31	 WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	33/14
EA1.57.29	 WASHER, between fuel pumps and mounting adaptor	1	Neo-K-Tex	33/34
EA3.57.527	 WASHER, between fuel pump and fuel cock adaptor	1	L17	33/44
EA3.57.529	 WASHER, between fuel cock and adaptor	1	L17	33/42
—	 PUMP, FUEL, No.1, STARBOARD, ASSEMBLY (EA3.57.209) Spares for:—	—	—	34/9
E.E. CO. LTD. Type 201 Mk.8	 ACTUATOR, AND FUEL COCK, ASSEMBLY Consisting of:—	1	—	34/40
A.E.D.200152	 ACTUATOR, type 200, Mk.1	1	—	34/24
†	 ADAPTOR, c/w label	1	—	34/41
SAUNDERS E.42.F.10	 COCK, fuel	1	—	34/39
AGS.2001/C/1	 NUT, stiff, 2BA	2	—	34/42
†	 WIRE, locking, 22 SWG Attaching parts for Type 201, Mk.8:—	QR	—	34/43
A25/1C	 Bolt, 2BA hex. head	2	—	34/20
AGS.162/C	 Washer, 2BA	2	—	34/21
SP15/C	 Washer, 2BA plain	2	—	34/22
EA1.57.191	 ADAPTOR, fuel pump cock	1	L40	34/45
EA1.57.617	 ADAPTOR, fuel pump mounting Attaching parts for EA1.57.617:—	1	—	34/7
A27/CP	 Nut, 2BA plain	16	—	34/29
AGS.162/C	 Washer, 2BA	16	—	34/30
EA1.57.601	 BRACKET, plate, fuel pump mounting Attaching parts for EA1.57.601:—	1	L65	34/28
EA1.57.605	 Bolt, 1/4" BSF	4	DTD126	34/16
A27/CP	 Nut, 2BA plain	16	—	—
AGS.2001/E/1	 Nut, stiff, 1/4" BSF	4	—	34/34
AGS.162/C	 Washer, 2BA	16	—	—
SP15/E	 Washer, 1/4" BSF plain	4	—	34/33
EA1.57.603	 BRACKET, channel, fuel pump mounting Attaching parts for EA1.57.603:—	1	L72	34/25
A25/1C	 Bolt, 2BA hex. head	5	—	34/32
A25/2C	 Bolt, 2BA hex. head	10	—	34/27
AGS.2001/C/1	 Nut, stiff, 2BA	10	—	34/31
SP15/C	 Washer, 2BA plain	20	—	34/26

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.57.607	.	.	.	.	BRACKET, actuator support		1	L72	34/23
	.	.	.	.	Attaching parts for EA1.57.607:—				
A25/2C	.	.	.	.	Bolt, 2BA hex. head		1	—	34/17
AGS.2001/C/1	.	.	.	.	Nut, stiff, 2BA		1	—	34/19
SP15/C	.	.	.	.	Washer, 2BA plain		1	—	34/18
EEAS.143/6	.	.	.	.	CLIP, pipe, single		1	L72	34/13
	.	.	.	.	Attaching parts for EEAS.143/6:—				
A25/1B	.	.	.	.	Bolt, 4BA hex. head		1	—	34/12
AGS.2001/B/1	.	.	.	.	Nut, stiff, 4BA		1	—	34/15
SP13/B	.	.	.	.	Washer, 4BA plain		1	—	34/14
AGS.952/B	.	.	.	.	COLLAR		1	—	34/1
EEAS.164/4/15	.	.	.	.	HOSE, rubber, 1/4" i/d x 1/2" o/d x 1-1/2" long (Make from 32C/407)		1	DTD625	34/6
AGS.1142/B	.	.	.	.	NIPPLE, adaptor		1	—	34/3
EA1.57.625	.	.	.	.	PIPE, drain, 1/4" o/d x 22 SWG x 24" long		1	L56	34/5
SPE21455	.	.	.	.	PUMP, fuel, type PUL.1003 Mk.5 (AS4771)		1	—	34/36
or									
SPE21442	.	.	.	.	PUMP, fuel, type SPE.1003 Mk.4 (AS4771)				
	.	.	.	.	Attaching parts for pump:—				
AGS.2002/C/1	.	.	.	.	Nut, stiff, 2BA		14	—	34/38
EEAS.28/4BU	.	.	.	.	Washer		2	S515	34/47
SP15/C	.	.	.	.	Washer, 2BA plain		12	—	34/37
AGS.2111	.	.	.	.	SLEEVE, outer		1	—	34/4
AGS.1132/B	.	.	.	.	UNION, banjo body		1	—	34/2
	.	.	.	.	Attaching parts for AGS.1132/B:—				
AGS.1135/B	.	.	.	.	Bolt, banjo		1	—	34/11
AGS.164/F	.	.	.	.	Washer		2	—	34/10
EA1.57.31	.	.	.	.	WASHER, under fuel pump mounting adaptor		1	Neo-K-Tex	34/8
EA1.57.29	.	.	.	.	WASHER, between fuel pump and mounting adaptor		1	Neo-K-Tex	34/35
EA3.57.527	.	.	.	.	WASHER, between fuel pump and fuel adaptor		1	L17	34/46
EA3.57.529	.	.	.	.	WASHER, between fuel cock and adaptor		1	L17	34/44
—	.	.	.	.	PUMP, FUEL, No.2, PORT, ASSEMBLY (EA3.57.211)		—	—	35/1
	.	.	.	.	Spares for:—				
E.E. CO. LTD. Type 201, Mk.8	.	.	.	.	ACTUATOR AND FUEL COCK, ASSEMBLY Consisting of:—		1	—	35/43
A.E.D.200152	.	.	.	.	ACTUATOR, type 200, Mk.1		1	—	35/42
†	.	.	.	.	ADAPTOR, c/w label		1	—	35/44
SAUNDERS E.42.F10	.	.	.	.	COCK, fuel		1	—	35/32
AGS.2001/C/1	.	.	.	.	NUT, stiff, 2BA		2	—	35/45
†	.	.	.	.	WIRE, locking, 22 SWG		QR	—	35/46
	.	.	.	.	Attaching parts for Type 201, Mk.8:—				
A25/1C	.	.	.	.	Bolt, 2BA hex. head		2	—	35/38
AGS.162/C	.	.	.	.	Washer, 2BA		2	—	35/37
SP15/C	.	.	.	.	Washer, 2BA plain		2	—	35/36

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.57.191	.	.	.	.	ADAPTOR, fuel pump cock		1	L40	35/30
EA1.57.571	.	.	.	.	ADAPTOR, fuel pump mounting		1	—	35/3
	.	.	.	.	Attaching parts for EA1.57.571:—				
A27/CP	.	.	.	.	Nut, 2BA plain		16	—	35/18
AGS.162/C	.	.	.	.	Washer, 2BA		16	—	35/19
EA1.57.576	.	.	.	.	BRACKET, channel assembly, fuel pump mounting		1	—	35/23
	.	.	.	.	Attaching parts for EA1.57.576:—				
A25/1C	.	.	.	.	Bolt, 2BA hex. head		12	—	35/28
AGS.2001/C/1	.	.	.	.	Nut, stiff, 2BA		12	—	35/34
SP15/C	.	.	.	.	Washer, 2BA plain		12	—	35/33
EA1.57.589	.	.	.	.	BRACKET, plate, angle, fuel pump mounting		1	L65	35/17
	.	.	.	.	Attaching parts for EA1.57.589:—				
EA1.57.605	.	.	.	.	Bolt, 1/4" BSF		4	DTD126	35/16
AS.1242/1C	.	.	.	.	Bolt, 2BA c'sk head		3	—	
A27/CP	.	.	.	.	Nut, 2BA plain		16	—	
AGS.2001/C/1	.	.	.	.	Nut, stiff, 2BA		3	—	
AGS.2001/E/1	.	.	.	.	Nut, stiff, 1/4" BSF		4	—	35/25
AGS.162/C	.	.	.	.	Washer, 2BA		16	—	
SP15/C	.	.	.	.	Washer, 2BA plain		3	—	
SP15/E	.	.	.	.	Washer, 1/4" BSF plain		4	—	35/24
EA1.57.709	.	.	.	.	BRACKET, actuator support		1	—	35/35
	.	.	.	.	Attaching parts for EA1.57.709:—				
AS.1242/1C	.	.	.	.	Bolt, 2BA c'sk head		3	—	35/20
AGS.2001/C/1	.	.	.	.	Nut, stiff, 2BA		3	—	35/22
SP15/C	.	.	.	.	Washer, 2BA plain		3	—	35/21
EEAS.143/6	.	.	.	.	CLIP, pipe, single		1	L72	35/10
	.	.	.	.	Attaching parts for EEAS.143/6:—				
AS.1242/1B	.	.	.	.	Bolt, 4BA c'sk head		1	—	35/11
AGS.2001/B/1	.	.	.	.	Nut, stiff, 4BA		1	—	35/14
SP13/B	.	.	.	.	Washer, 4BA plain		1	—	35/9
AGS.952/B	.	.	.	.	COLLAR		1	—	35/12
EEAS.164/4/15	.	.	.	.	HOSE, rubber, 1/4" i/d x 1/2" o/d x 1-1/2" long (Make from 32C/407)		1	DTD625	35/15
AGS.1142/B	.	.	.	.	NIPPLE, adaptor		1	—	35/13
EA1.57.629	.	.	.	.	PIPE, drain, 1/4" o/d x 20 SWG		1	L56	35/8
SPE21455	.	.	.	.	PUMP, fuel, type PUL.1003, Mk.5 (AS4771)		1	—	35/27
or									
SPE21442	.	.	.	.	PUMP, fuel, type SPE.1003, Mk.4 (AS4771)				
	.	.	.	.	Attaching parts for pump:—				
AGS.2002/C/1	.	.	.	.	Nut, stiff, 2BA		14	—	35/39
EEAS.28/48U	.	.	.	.	Washer		2	S515	35/41
SP15/C	.	.	.	.	Washer, 2BA plain		12	—	35/40
AGS.2111	.	.	.	.	SLEEVE, outer		1	—	35/7
AGS.1132/B	.	.	.	.	UNION, banjo body		1	—	35/6
	.	.	.	.	Attaching parts for AGS.1132/B:—				
AGS.1135/B	.	.	.	.	Bolt, banjo		1	—	35/4
AGS.164/F	.	.	.	.	Washer, 1/4" BSF		2	—	35/5

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.57.31	WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	35/2
EA1.57.29	WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	35/26
EA3.57.527	WASHER, between fuel pump and fuel cock adaptor	1	L17	35/29
EA3.57.529	WASHER, between fuel cock and adaptor	1	L17	35/31
-	PUMP, FUEL, No.2, STARBOARD, ASSEMBLY (EA3.57.213) Spares for:-	-	-	36/1
E.E. CO. LTD. Type 201, Mk.8	ACTUATOR AND FUEL COCK, ASSEMBLY Consisting of:-	1	-	36/25
A.E.D.200152	ACTUATOR, type 200, Mk.1	1	-	36/30
†	ADAPTOR, c/w label	1	-	36/26
SAUNDERS E42.F10	COCK, fuel	1	-	36/31
AGS.2001/C/1	NUT, stiff, 2BA	2	-	36/27
†	WIRE, locking, 22 SWG	QR	-	36/28
	Attaching parts for Type 201, Mk.8:-			
A25/1C	Bolt, 2BA hex. head	2	-	36/41
AGS.162/C	Washer, 2BA	2	-	36/38
SP15/C	Washer, 2BA plain	2	-	36/37
EA1.57.191	ADAPTOR, fuel pump cock	1	L40	36/6
EA1.57.571	ADAPTOR, fuel pump mounting Attaching parts for EA1.57.571:-	1	-	36/4
A27/CP	Nut, 2BA plain	16	-	36/3
AGS.162/C	Washer, 2BA	16	-	36/22
EA1.57.575	BRACKET, channel assembly, fuel pump mounting Attaching parts for EA1.57.575:-	1	-	
A25/1C	Bolt, 2BA hex. head	12	-	36/23
AGS.2001/C/1	Nut, stiff, 2BA	12	-	36/20
SP15/C	Washer, 2BA plain	12	-	36/21
EA1.57.591	BRACKET, actuator support Attaching parts for EA1.57.591:-	1	-	36/24
A25/1C	Bolt, 2BA hex. head	1	-	36/33
AGS.2001/C/1	Nut, stiff, 2BA	1	-	36/43
SP15/C	Washer, 2BA plain	1	-	36/42
EA1.57.649	BRACKET, plate, fuel pump mounting Attaching parts for EA1.57.649:-	1	-	36/5
EA1.57.605	Bolt, 1/4" BSF	4	DTD126	36/2
A27/CP	Nut, 2BA plain	16	-	
AGS.2001/E/1	Nut, stiff, 1/4" BSF	4	-	36/35
AGS.162/C	Washer, 2BA	16	-	
SP15/E	Washer, 1/4" BSF plain	4	-	36/34

R
R
R

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.57.599		CHANNEL, joggled, fuel cock bracket mounting Attaching parts for EA1.57.599:—	1	L72	36/29
A25/3C		Bolt, 2BA hex. head	2	—	36/32
AGS.2001/C/1		Nut, stiff, 2BA	2	—	36/40
SP15/C		Washer, 2BA plain	2	—	36/39
EEAS.143/6		CLIP, pipe, single Attaching parts for EEAS.143/6:—	1	L72	36/18
AS.1242/1B		Bolt, 4BA c/sk head	1	—	36/19
AGS.2001/B/1		Nut, stiff, 4BA	1	—	36/9
SP13/B		Washer, 4BA plain	1	—	36/17
AGS.952/B		COLLAR	1	—	36/14
EEAS.164/4/15		HOSE, rubber, 1/4" i/d x 1/2" x 1-1/2" long (Make from 32C/407)	1	DTD625	36/8
AGS.1142/B		NIPPLE, adaptor	1	—	36/15
EA1.57.631		PIPE, drain, 1/4" o/d x 20 SWG	1	L56	36/10
SPE21455 or SPE21442		PUMP, fuel, type PUL.1003 Mk.5 (AS4771) PUMP, fuel, type SPE.1003 Mk.4 (AS4771) Attaching parts for pump:—	1	—	36/47
AGS.2002/C/1		Nut, stiff, 2BA	14	—	36/45
EEAS.28/48U		Washer	2	S515	36/46
SP15/C		Washer, 2BA plain	12	—	36/44
AGS.2111		SLEEVE, outer	1	—	36/16
AGS.1132/B		UNION, banjo body Attaching parts for AGS.1132/B:—	1	—	36/13
AGS.1135/B		Bolt, banjo	1	—	36/11
AGS.164/F		Washer	2	—	36/12
EA1.57.31		WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	36/7
EA1.57.29		WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	36/36
EA3.57.527		WASHER, between fuel pump and fuel cock adaptor	1	L17	36/48
EA3.57.529		WASHER, between fuel cock and adaptor	1	L17	36/50
—		PUMP, FUEL, No.3, PORT, ASSEMBLY (EA3.57.215) Spares for:—	—	—	37/1
E.E. CO. LTD. Type 201, Mk.8		ACTUATOR, AND FUEL COCK, ASSEMBLY Consisting of:—	1	—	37/35
A.E.D.200152		ACTUATOR, type 200, Mk.1	1	—	37/30
↑		ADAPTOR, c/w label	1	—	37/36
SAUNDERS					
E42.F10		COCK, fuel	1	—	37/31
AGS.2001/C/1		NUT, stiff, 2BA	2	—	37/37

A.P.1018-0417-3A

SERVICES

Page NS11

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
†	WIRE, locking, 22 SWG Attaching parts for type 201, Mk.8:—	QR	—	37/38
A25/1C	Bolt, 2BA hex. head	1	—	37/40
AGS.162/C	Washer, 2BA	1	—	37/39
EA1.57.191	ADAPTOR, fuel pump cock	1	L40	37/28
EA1.57.571	ADAPTOR, fuel pump mounting Attaching parts for EA1.57.571:—	1	—	37/8
A27/CP	Nut, 2BA plain	16	—	37/22
AGS.162/C	Washer, 2BA	16	—	37/21
EA1.57.39	BRACKET, fuel pump mounting Attaching parts for EA1.57.39:—	1	L72	37/24
A25/1C	Bolt, 2BA hex. head	12	—	37/20
AGS.2001/C/1	Nut, stiff, 2BA	12	—	37/18
SP15/C	Washer, 2BA plain	12	—	37/19
EEAS.143/6	CLIP, pipe, single Attaching parts for EEAS.143/6:—	1	L72	37/15
A25/1B	Bolt, 4BA hex. head	1	—	37/16
AGS.2001/B/1	Nut, stiff, 4BA	1	—	37/11
SP15/B	Washer, 4BA plain	1	—	37/12
AGS.952/B	COLLAR	1	—	37/6
EEAS.164/4/15	HOSE, rubber, 1/4" i/d x 1/2" o/d x 1-1/2" long (Make from 32C/407)	1	DTD625	37/17
AGS.1142/B	NIPPLE, adaptor	1	—	37/9
EA3.57.53	PIPE, drain, 1/4" o/d x 22 SWG	1	L56	37/13
SPE21455 or	PUMP, fuel, type PUL.1003 Mk.5 (AS4771)	1	—	37/26
SPE21442	PUMP, fuel, type SPE.1003 Mk.4 (AS4771) Attaching parts for pump:—			
AGS.2001/C/1	Nut, stiff, 2BA	14	—	37/33
EEAS.28/4BU	Washer	2	S615	37/34
SP15/C	Washer, 2BA plain	12	—	37/32
AGS.2111	SLEEVE, outer	1	—	37/10
AGS.1132/B	UNION, banjo body Attaching parts for AGS.1132/B	1	—	37/5
AGS.1135/B	Bolt, banjo	1	—	37/3
AGS.164/F	Washer	2	—	37/4
EA1.57.31	WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	37/7
EA1.57.29	WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	37/23
EA3.57.527	WASHER, between fuel pump and fuel cock adaptor	1	L17	37/27
EA3.57.529	WASHER, between fuel cock and adaptor	1	L17	37/29
—	PUMP, FUEL, No.3, STARBOARD, ASSEMBLY (EA3.57.217) Spares for:—	—	—	37/2
E.E. CO. LTD. Type 201, Mk.8	ACTUATOR, AND FUEL COCK, ASSEMBLY Consisting of:—	1	—	37/35
A.E.D.200152	ACTUATOR, type 200, Mk.1	1	—	37/30

R
R
R

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
† SAUNDERS E.42.F10 AGS.2001/C/1 †		ADAPTOR, c/w label	1	—	37/36
		COCK, fuel	1	—	37/31
		NUT, stiff, 2BA	2	—	37/37
		WIRE, locking, 22 SWG	QR	—	37/38
		Attaching parts for type 201, Mk.8:—			
A25/1C		Bolt, 2BA hex. head	1	—	37/40
AGS.162/C		Washer, 2BA	1	—	37/39
EA1.57.191		ADAPTOR, fuel pump cock	1	L40	37/28
EA1.57.571		ADAPTOR, fuel pump mounting	1	—	37/8
		Attaching parts for EA1.57.571:—			
A27/CP		Nut, 2BA plain	16	—	37/22
AGS.162/C		Washer, 2BA	16	—	37/21
EA1.57.41		BRACKET, fuel pump mounting	1	L72	37/25
		Attaching parts for EA1.57.41:—			
A25/1C		Bolt, 2BA hex. head	12	—	37/20
AGS.2001/C/1		Nut, stiff, 2BA	12	—	37/18
SP15/C		Washer, 2BA plain	12	—	37/19
EEAS.143/6		CLIP, pipe, single	1	L72	37/15
		Attaching parts for EEAS.143/6:—			
A25/1B		Bolt, 4BA hex. head	1	—	37/16
AGS.2001/B/1		Nut, stiff, 4BA	1	—	37/11
SP13/B		Washer, 4BA plain	1	—	37/12
AGS.952/B		COLLAR	1	—	37/6
EEAS.164/4/15		HOSE, rubber, 1/4" i/d x 1/2" o/d x 1-1/2" long (Make from 32C/407)	1	DT0625	37/17
AGS.1142/B		NIPPLE, adaptor	1	—	37/9
EA1.57.647		PIPE, drain, 1/4" o/d x 20 SWG	1	L56	37/14
SPE21455		PUMP, fuel, type PUL.1003 Mk.5 (AS4771)	1	—	37/26
or					
SPE21442		PUMP, fuel, type SPE.1003 Mk.4 (AS4771)			
		Attaching parts for pump:—			
AGS.2002/C/1		Nut, stiff, 2BA	14	—	37/33
EEAS.28/4BU		Washer	2	S515	37/34
SP15/C		Washer, 2BA plain	12	—	37/22
AGS.2111		SLEEVE, outer	1	—	37/10
AGS.1132/B		UNION, banjo body	1	—	37/5
		Attaching parts for AGS.1132/B:—			
AGS.1135/B		Bolt, banjo	1	—	37/3
AGS.164/F		Washer	2	—	37/4
EA1.57.31		WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	37/7
EA1.57.29		WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	37/23
EA3.57.527		WASHER, between fuel pump and fuel cock adaptor	1	L17	37/27
EA3.57.529		WASHER, between fuel cock and adaptor	1	L17	37/29
EEAS.66/5		RING, clamping, for hose clips	16	L72	32/27

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
AGS904/C	. . . SLEEVE, outer	2	—	32/55
EEAS20/1DR	. . . TAB, locking	8	L72	32/48
AGS164/F	. . . WASHER	2	—	32/53
EEAS164/24/30	. . . HOSE, rubber, 1-1/2" i/d x 1-7/8" o/d x 3" long (Make from 32C/446)	3	DTD625	30/3
EA3.57.185	. . . HOSE, rubber, venting pipe joint (Mod. 648)	1	Silastic	29/24
EA3.11.141	. . . PANEL, detachable, No. 1 fuel tank Attaching parts for EA3.11.141:—	1	—	30/8
EEAS1/1-1/2C	. . . Screw, 2 BA 120° c'sk head	56	S96	30/7
EEAS1/3C	. . . Screw, 2 BA 120° c'sk head	2	S96	30/6
EA3.11.233	. . . PANEL, detachable, No. 2 fuel tank Attaching parts for EA3.11.233:—	1	—	31/1
EEAS1/1-1/2C	. . . Screw, 2 BA 120° c'sk head	38	S96	31/2
EA3.57.83	. . . PANEL, detachable, No. 3 fuel tank Attaching parts for EA3.57.83:—	1	—	31/11
EEAS1/2C	. . . Screw, 2 BA 120° c'sk head	18	S96	31/12
—	. . . PIPES, FUEL TRANSFER, ASSEMBLY (EA3.57.439) Spares for:—	—	—	38/11
EA1.57.267	. . . BRACKET, assembly, float valve Attaching parts for EA1.57.267:—	1	—	38/16
A61/1C	. . . Bolt, 2 BA hex. head	3	—	38/33
A28/6C	. . . Bolt, 2 BA hex. head	3	—	38/19
AGS2001/C/3	. . . Nut, stiff, 2 BA	6	—	38/28
AS2809/4/060	. . . Piece, distance	3	L62	38/20
SP13/C	. . . Washer, 2 BA plain	6	—	38/27
EA1.57.317	. . . CLIP, pipe, fuel Attaching parts for EA1.57.317:—	8	L72	38/3
A28/1B	. . . Bolt, 4 BA hex. head	2	—	38/4
AGS2001/B/3	. . . Nut, stiff, 4 BA	2	—	38/6
SP13/B	. . . Washer, 4 BA plain	2	—	38/5
EA3.57.481	. . . FAIRLEAD, frame 27 Attaching parts for EA3.57.481:—	2	LFS21	38/18
A25/3B	. . . Bolt, 4 BA hex. head	4	—	38/23
AGS2001/B/1	. . . Nut, stiff, 4 BA	4	—	38/25
SP13/B	. . . Washer, 4 BA plain	4	—	38/24
EA3.57.491	. . . FILTER, float valve	1	—	38/32
EEAS164/20/30	. . . HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long (Make from 32C/377)	7	DTD625	38/2
AGS1142/J	. . . NIPPLE, adaptor	5	—	38/26
EA1.57.271	. . . PIPE, assembly, fuel, from rubber hose connection at frame 27 to connection at No.3 fuel tank	1	L54	38/7

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.57.1127	. . . PIPE, assembly, from port and starboard non-return valve to flexible coupling	2	L56	38/8
EA3.57.31	. . . PIPE, assembly, fuel, branch, frame 27 for No. 3 fuel tank	1	T26	38/13
EA3.57.441	. . . PIPE, fuel, continuation, between hose coupling at centre of frame 27 and branch pipe hose coupling, port	1	L54	38/14
EA3.57.443	. . . PIPE, assembly, fuel, continuation between hose coupling at centre of frame 27 and non-return valve, starboard	1	L54	38/9
EA3.57.445	. . . PIPE, fuel, continuation, between hose coupling at centre of frame 27	1	L54	38/15
EA3.57.451	. . . PIPE, fuel, between hose coupling, branch pipe and No. 3 fuel tank pipe	1	L54	38/12
EEAS66/5	. . . RING, clamping, 1-5/8" dia. for hose clips	14	L72	38/1
EEAS20/1DU	. . . TAG, locking	5	S515	38/21
AGS1103/J	. . . UNION, body, float valve	1	—	38/29
SELF-PRIMING SPE2706	. . . VALVE, non-return, type P24A, Mk. 3	2	—	38/10
SELF-PRIMING FV1250S Mk. 8	. . . VALVE, float, 1-1/4" BSF	1	—	38/17
	Attaching parts for FV1250S Mk. 8:—			
AGS2001/C/3	. . . Nut, stiff, 2 BA	12	—	38/30
EA3.57.455	. . . Ring, sealing	2	Neo-K-Tex	38/22
SP13/C	. . . Washer, 2 BA plain	12	—	38/31
—	. . . PIPES, AIR AND BLOW-OFF VALVE, FORWARD OF FRAME 22, ASSEMBLY (EA1.57.249) Spares for:—	—	—	39/1
EEAS143/10	. . . CLIP, pipe, single (Pre—Alt. R60/91—Mod. 5101)	4	L72	39/6
or AS4525/8	. . . CLIP, pipe (Alt. R60/91—Mod. 5101) Attaching parts for EEAS143/10:—			
AS1246/1B	. . . Bolt, 4BA round head	1	—	39/7
AGS2001/B/1	. . . Nut, stiff, 4 BA	1	—	39/5
EA1.57.1179	. . . FAIRLEAD Attaching parts for EA1.57.1179:—	4	LFS21	39/12
A25/8C	. . . Bolt, 2 BA hex. head	1	—	39/13
AGS2001/C/1	. . . Nut, stiff, 2 BA	1	—	39/10
SP15/C	. . . Washer, 2 BA plain	1	—	39/11
EEAS164/8/20	. . . HOSE, rubber, 1/2" i/d x 3/4" o/d x 2" long (Make from 32C/408)	8	DTD625	39/2
EA1.57.1147	. . . PIPE, air, from connection at starboard side to blow-off valve side forward connection	1	L56	39/3
EA1.57.1149	. . . PIPE, air, from connection at starboard side to blow-off valve side aft connection	1	L56	39/4

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description					No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5 6			
EA1.57.1151	. . .	PIPE, air, from connection at port side			to blow-off valve side aft connection	1	L56	39/8
EA1.57.1153	. . .	PIPE, air, from connection at port side			to blow-off valve side forward connection	1	L56	39/9
R EA1.57.1131	. . .	VALVE, BLOW-OFF, ASSEMBLY			Consisting of:—	1	—	39/14
EA1.57.1171		BODY, valve				1	—	39/26
EA1.57.1073		VALVE, AIR RELIEF, ASSEMBLY			Consisting of:—	3	—	39/23
EA1.57.1071		BODY, relief valve				1	—	39/24
EA1.57.1143		BOLT, relief valve spring mounting				1	L40	39/27
AGS2001/C/3		NUT, stiff, 2 BA				2	—	39/19
EA1.57.1039		SPRING, relief valve operating				1	DTD215	39/21
EA1.57.1027		WASHER, spring retaining				1	L72	39/20
EA1.57.1029		WASHER, rubber seal seating				1	L72	39/28
EA1.57.1031		WASHER, rubber seating				1	—	39/29
EA1.57.1033		WASHER, rubber seal seating				1	L72	39/30
SP15/C		WASHER, 2 BA plain				2	—	39/25
R EA1.57.1173		WASHER, sealing, valve body				3	Petrolite	39/18
30A/9140209		WIRE, locking				QR	—	39/22
		Attaching parts for EA1.57.1131:—						
A25/1C	. . .	Bolt, 2 BA hex. head				4	—	39/15
AGS2001/C/1	. . .	Nut, stiff, 2 BA				4	—	39/17
SP13/C	. . .	Washer, 2 BA plain				4	—	39/16
EA3.57.227	. .	RING, sealing, for No. 3 fuel tank joint (Mod. 648)				2	DTD560	29/3
EA3.57.231	. .	RING, half joint, for No. 3 fuel tank connection (Mod. 648)				2	L40	29/1
EA3.57.233	. .	RING, half joint, for No. 3 fuel tank connection (Mod. 648)				2	L40	29/2
EEAS66/3	. .	RING, clamping, purging pipe connection				2	L72	30/2
EEAS66/7	. .	RING, clamping, vent pipe connection				6	L72	
EEAS66/11	. .	RING, clamping, vent pipe connection				2	L72	29/23
R EA1.56.247	. .	TANK, FUEL, No. 1, ASSEMBLY				1	—	40/1
		Spares for:—						
R SMITH	. . .	BOX, terminal				1	—	40/2
WAYMOUTH								
JCB/1a								
R SMITH	. . .	UNIT, tank				1	—	40/3
WAYMOUTH								
TB/44a								
R SMITH	. . .	UNIT, tank				1	—	40/4
WAYMOUTH								
TB/45a								

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

	Part Number	Description	No. Off	Mati. Spec.	Plate No.
		1 2 3 4 5 6			
R	SMITH WAYMOUTH TB/46a	. . . UNIT, tank	1	—	40/5
R	SMITH WAYMOUTH TB/47a EA1.56.243	. . . UNIT, tank . . . TANK, FUEL, No. 2, ASSEMBLY Spares for:—	1 1	— —	40/6 40/7
R	SMITH WAYMOUTH JCB/1a	. . . BOX, terminal	1	—	40/8
R	SMITH WAYMOUTH TB/48a	. . . UNIT, tank	1	—	40/9
R	SMITH WAYMOUTH TB/49a	. . . UNIT, tank	1	—	40/10
R	SMITH WAYMOUTH TB/50a	. . . UNIT, tank	1	—	40/11
R	SMITH WAYMOUTH TB/51a EA1.56.483	. . . UNIT, tank . . . TANK, FUEL, No. 3, ASSEMBLY (Supplied to Pt. No. EA1.00.241 less capacitor units for spares purposes) (Pre—Mod. 648) Spares for:—	1 1	— —	40/12
R	SMITH WAYMOUTH JCB/1a	. . . BOX, terminal	1	—	
R	SMITH WAYMOUTH PR/30	. . . CABLE, assembly	1	—	
R	SMITH WAYMOUTH PS54	. . . CABLE, assembly	2	—	
R	SMITH WAYMOUTH PS/73	. . . CABLE, assembly	2	—	
R	SMITH WAYMOUTH TC/17	. . . UNIT, tank	2	—	
R	SMITH WAYMOUTH TC/18	. . . UNIT, tank	2	—	

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EA3.56.695	. . . TANK, FUEL No. 3, ASSEMBLY (Supplied to Pt. No. EA3.00.1055, less capacitor units for spares purposes) (Mod. 648) Spares for:—	1	—	40/13
R	SMITH WAYMOUTH JCB/1a	. . . BOX, terminal	1	—	40/14
R	SMITH WAYMOUTH PR/30	. . . CABLE, assembly	1	—	40/15
R	SMITH WAYMOUTH PS/54	. . . CABLE, assembly	2	—	40/16
R	SMITH WAYMOUTH PS/73	. . . CABLE, assembly	2	—	40/17
R	SP144/028	. . . CLIP, hose	1	—	40/17A
R	EA1.57.257	. . . PLATE, attachment Attaching parts for EA1.57.257:—	1	—	40/18A
R	AGS2001/C1/66	. . . Nut, stiff, 2 BA	4	—	40/18B
R	SP15C	. . . Washer, 2 BA	4	—	40/18C
R	EB7.57.361	. . . PLATE, blanking (30A/9610468) (Mod. 5339) Attaching parts for EB7.57.361:—	1	14 SWG S515	40/27
R	AGS2001/C1/66	. . . Nut, stiff, 2 BA	4	—	40/28
R	SP15C	. . . Washer, 2 BA	4	—	40/29
R	EA3.57.467	. . . PIPE, vent	2	—	40/18
R	EA3.57.463	. . . RING, rubber, for vent pipe clip	2	—	40/19
R	SMITH WAYMOUTH TC/17	. . . UNIT, tank	2	—	40/20
R	SMITH TC/18	. . . UNIT, tank	2	—	40/21
R	EA1.56.255	. . . WASHER, sealing	1	—	40/19A
	EA3.57.101	. . TEE, vent, No. 2 fuel tank	1	L52	43/16
	—	. . MODIFICATIONS, TO FUEL VENTING BETWEEN BULKHEAD FRAME 27A AND FRAME 30, ASSEMBLY (EC1.57.601) Spares for:—	—	—	41/7
	EC1.57.621	. . . BLOCK, vent pipe	1	LFS21	41/27
	EC1.57.619	. . . CLIP, vent pipe Attaching parts for EC1.57.621 and EC1.57.619:—	1	L72	41/34
	A25/11C	. . . Bolt, 2 BA hex. head	2	—	41/35
	AGS2001/C/1	. . . Nut, stiff, 2 BA	2	—	41/23
	EC1.57.623	. . . Piece, packing	2	L65	41/26
	SP15/C	. . . Washer, 2 BA plain	2	—	41/24

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EB7.57.315	. . . BRACKET, vent pipe at frames 28 and 29	2	L59	41/30
EB7.57.317	. . . CLIP, vent pipe at frames 28 and 29	2	L59	41/31
	Attaching parts for EB7.57.315 and EB7.57.317:—			
A25/3C	. . . Bolt, 2 BA hex. head	2	—	41/33
AGS2001/C/1	. . . Nut, stiff, 2 BA	2	—	41/28
EB7.57.319	. . . Washer, corner	2	L72	41/32
SP13/C	. . . Washer, 2 BA plain	2	—	41/29
EB7.57.203	. . . FERRULE, fuel bleed line, frame 17	1	—	41/1
EEAS164/16/25	. . . HOSE, rubber, 1" i/d x 1-3/8" o/d x 2-1/2" long (Make from 32C/376)	2	DTD625	41/8
EEAS164/32/26	. . . HOSE, rubber, 2" i/d x 2-1/2" o/d x 2-5/8" long (Make from 32C/378)	2	DTD625	41/6
EEAS164/40/45	. . . HOSE, rubber 2-1/2" i/d x 3" o/d x 4-1/2" long (Make from 32C/380)	2	DTD625	41/11
EB6.57.147	. . . PIPE, assembly, vent, from frame 27A to hose coupling between frames 28 and 29	1	—	41/10
EB7.57.339	. . . PIPE, vent, from hose couplings forward of frame 29 to aft of frame 30	1	L56	41/12
EC1.57.603	. . . PIPE, assembly, vent, at frame 27A	1	—	41/4
EEAS66/3	. . . RING, clamping, 1-3/8" dia.	4	L72	41/9
EEAS66/12	. . . RING, clamping, 2-1/2" dia.	4	L72	41/5
—	. . . VENT PIPES AND TROUGH FOR No. 3 FUEL TANK, ASSEMBLY (EA3.57.69) (Mod. 648)	—	—	
	Spares for:—			
EA3.57.143	. . . BLOCK, packing, venting	1	LFS21	41/25
EA3.57.197	. . . BRACKET, lacing	1	—	41/14
EA3.57.201	. . . BRACKET, lacing	1	—	41/19
	Attaching parts for EA3.57.201:—			
A25/1C	. . . Bolt, 2 BA hex. head	1	—	41/16
AGS2001/C1	. . . Nut, stiff, 2 BA	1	—	41/20
EA3.57.189	. . . CLIP, pipe, venting	4	L72	41/22
	Attaching parts for EA3.57.189:—			
A25/1C	. . . Bolt, 2 BA hex. head	2	—	41/18
EA3.57.525	. . . DUCT, venting, No. 3 fuel tank, between main spar and frame 27	1	—	41/2
EA3.11.129	. . . WASHER, fuel contents gauge terminal box	3	L72	

A.P.101B-0417-3A

Page NS19

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
—	. . WIRES SUPPORT, FUEL TANK No.3, ASSEMBLY (EA3.57.161) Spares for:	—	—	
R EA1.57.377	. . . GROMMET, tank support, nylon cord	24	—	40/22
R EA1.57.371	. . . PLATE, spreader, fuel tank	124	L72	40/23
R TERRY				40/24
R 169/ 3/4"	. . . RING, split	22	—	40/25
R EA1.57.1175	. . . SUPPORT, end, nylon, cord	4	—	40/26
R EA1.57.1177	. . . SUPPORT, intermediate, nylon cord	20	—	
—	. VENTING AND GALLERIES, ASSEMBLY (EG7.57.1) (For A/C not embodying Mod.648) Spares for:	—	—	42/1
EA1.57.79	. . BRACKET, No.3 fuel tank purging tube Attaching parts for EA1.57.79:	5	L59	43/14
A25/1C	. . Bolt, 2BA hex. head	2	—	43/16
EA3.57.115	. . CLIP, pipe, venting, at frames 15 and 19 Attaching parts for EA3.57.115:—	2	—	43/21
A25/4C	. . Bolt, 2BA hex. head	1	—	43/22
AGS2001/C/1	. . Nut, stiff, 2BA	1	—	43/19
EA3.57.421	. . Washer, packing	2	L72	43/20
EA1.57.67	. . DUCT, venting, fuel tank No. 1	1	—	43/9
EG7.57.3	. . DUCT, venting, fuel tank No. 2	1	L54	43/6
EA1.57.77	. . DUCT, venting, fuel tank No. 3	1	—	43/1
EA3.57.103	. . ELBOW, venting, No. 1 fuel tank Attaching parts for EA3.57.103:—	1	L52	43/27
AGS2001/C/1	. . Nut, stiff, 2BA	8	—	43/28
EA1.57.59	. . Washer, joint	1	Langite	43/30

SERVICES

FUEL SYSTEM IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EEAS164/24/30	. . HOSE, rubber, 1-1/2" i/d x 1-7/8" o/d x 3" long (Make from 32C/446)	3	DTD.625	43/3
EEAS164/32/26	. . HOSE, rubber, 2" i/d x 2-1/2" o/d x 2-3/8" long (Make from 32C/378)	1	DTD.625	41/6
EA3.11.141	. . PANEL, detachable, No.1 fuel tank Attaching parts for EA3.57.141:	1	—	42/12 43/10
EEAS1/1C	. . Screw, 2BA 120° c'sk head	4	S96	43/12
EEAS1/1-1/2C	. . Screw, 2BA 120° c'sk head	58	S96	43/11
EA3.11.233	. . PANEL, detachable, No.2 fuel tank Attaching parts for EA3.11.233:	1	—	43/4
EEAS1/1-1/2C	. . Screw, 2BA 120° c'sk head	38	S96	43/5
EEAS66/1	. . RING, clamping, 1-1/8" dia., for hose clip	2	L72	
EEAS66/7	. . RING, clamping, 1-7/8" dia., for hose clip	6	L72	43/7
EEAS66/12	. . RING, clamping, 2-1/2" dia., for hose clip	2	L72	43/2
EA1.57.85	. . STRAP, vent duct support, No.3 fuel tank Attaching parts for EA1.57.85:	5	L72	43/17
A25/1B	. . Bolt, 4BA hex. head	1	—	43/24
A25/2C	. . Bolt, 2BA hex. head	1	—	43/25
AGS2002/B/3	. . Nut, stiff, 4BA	1	—	43/15
EA3.57.101	. . TEE, vent, No. 2 fuel tank Attaching parts for EA3.57.101:—	1	L52	43/26
AGS2001/C/1	. . Nut, stiff, 2BA	8	—	43/29
EA1.57.59	. . Washer, joint	1	Langite	43/31

A.P.101B-0417-3A

SERVICES

Page NT1

FUEL SYSTEM IN REAR FUSELAGE

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	VENTING, FUEL TANK OUTLET, REAR							—	—	—	91/7
		FUSELAGE, ASSEMBLY (E.B7.57.293)										
		Spares for:—										
25546	E.B7.57.315	BRACKET, vent pipe clip							9	L59	C	91/5
25547	E.B7.57.317	CLIP, vent pipe							9	L59	C	91/6
		Attaching parts for E.B7.57.317:—										
28D/9133012	A25/3C	Bolt, 2 BA hex. head							2	—	C	91/4
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							2	—	C	91/1
	E.B7.57.319	Washer, corner (Make from 26DK/2809)							2	—	LM	91/3
28W/9419475	SP15/C	Washer, 2 BA plain							2	—	C	91/2
22228	EEAS.164/40/45	HOSE, rubber, 2-1/2" i/d x 3" o/d x 4-1/2" long							4	DTD625 Type 1	LM	91/8
		(Make from 32C/380)										
	—	OUTLET FUEL TANK VENT, AFT OF FRAME 40, . . .							—	—	—	91/14
		ASSEMBLY (E.B7.57.295)										
		Spares for:—										
43117	E.G7.57.11	OUTLET, mast, fuel tank vent							1	S511	C	91/10
		Attaching parts for E.G7.57.11:—										
25541	E.B7.57.303	Gasket, 1/32" thick							1	Neo-K-Tex	C	91/15
1468	EEAS.1/2C	Screw, 2 BA 120° c'sk head							6	S96	C	91/16
25542	E.B7.57.305	PIPE, vent, between hose couplings, frames 30 and 33 . . .							1	L56	C	91/13
25543	E.B7.57.307	PIPE, vent, between hose couplings, frames 33 and 36 . . .							1	L56	C	91/12
25544	E.B7.57.309	PIPE, vent, between hose couplings, frames 36 and 38 . . .							1	L56	C	91/11
25545	E.B7.57.311	PIPE, vent, from hose coupling forward of frame 38 to . .							1	L56	C	91/9
		hose coupling at outlet mast, frame 40										

SERVICES

FUEL SYSTEM IN REAR FUSELAGE

[illegible]

SERVICES

FUEL SYSTEM IN PORT WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
-	FUEL SYSTEM IN PORT WING, ASSEMBLY (EA1.57.727)						-	-	
-	Spares for:						-	-	92/37
-	PIPES, AIR, IN ENGINE NACELLE, ASSEMBLY (EA1.57.867)						-	-	
-	Spares for:						-	-	
EEAS143/8	CLIP, 'P', pipe support						1	L72	92/41
AGS2001/B/1	Attaching parts for EEAS143/8:						1	-	92/45
A40/B16	Nut, stiff, 4BA						1	-	92/42
EA1.57.861	Screw, 4BA round head						1	-	
LOCKHEED	COUPLING, pipe						1	DTD126	92/43
MPA30068/4	FILTER, PUROLATOR, ASSEMBLY						1	-	92/34
LOCKHEED	Spares for:						-	-	
MPA30110	ELEMENT, complete						1	-	92/35
LOCKHEED	GASKET						1	-	92/36
MPA29540	PIPE, assembly, air, from pipe coupling						1	T26	92/39
EA3.57.47	at bracket to adaptor nipple at						-	-	
EA3.57.49	purolator filter						-	-	
EA3.57.471	PIPE, assembly, air, from purolator						1	T26	92/30
EA1.57.351	connection to restrictor nipple						-	-	
EA1.57.859	adaptor						-	-	
-	PIPE, assembly, air from restrictor						1	T26	92/32
-	connection to non-return						-	-	
-	valve connection						-	-	
-	RESTRICTOR, drip tank air system						1	L40	92/29
-	WASHER, sealing						1	LFS21	92/44
-	PIPES, FUEL AND AIR, IN INNER WING,						-	-	92/20
-	ASSEMBLY (EA1.57.247)						-	-	
-	Spares for:						-	-	
EEAS143/10	CLIP, pipe, single						4	L72	92/3
or	(Pre Alt.R60/91-Mod.5101)						-	-	
AS4525/8	CLIP, pipe (Alt.R60/91-Mod.5101)						-	-	
EA1.57.317	CLIP, pipe saddle, rib 2 and rib 6						2	DTD310	92/2
A25/2B	Attaching parts for EA1.57.317:						-	-	
AGS2001/B/1	Bolt, 4BA hex. head						2	-	92/1
SP13/B	Nut, stiff, 4BA						2	-	92/7
EEAS77/23	Washer, 4BA plain						2	-	92/5
EEAS77/81	HOSE, rubber, 1/2" i/d x 3/4" o/d x 2"						2	DTD625	92/24
EA6.57.103	long, type 1 (Make from 32C/408)						-	-	
EA6.57.105	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d						1	DTD625	92/27
EA6.57.107	x 3" long, type 1						-	-	
EEAS66/5	(Make from 32C/377)						-	-	
EA6.57.103	PIPE, fuel, 1-1/4" o/d x 20 SWG						1	L56	92/25
EA6.57.105	PIPE, air, 1/2" o/d x 20 SWG						1	L56	92/18
EA6.57.107	PIPE, air, 1/2" o/d x 20 SWG						1	L56	92/12
EEAS66/5	RING, clamping						2	L72	92/28

SERVICES
FUEL SYSTEM IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	PIPES, FUEL AND AIR, IN ENGINE NACELLE, ASSEMBLY (EA1.57.251) Spares for:	-	-	93/21
EA1.57.259	CLIP, pipe saddle	3	L72	93/2
EA3.57.417	CLIP, pipe	1	L72	93/3
EEAS143/21	CLIP, 'P' type	3	L72	93/34
EEAS77/81	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long, type 1 (Make from 32C/377)	1	DTD625	93/29
R EA3.57.35	PIPE, assembly, air, from non-return valve to nipple adaptor	1	T26	93/6
R EA3.57.37	PIPE, assembly, fuel, from coupling in inner wing to coupling in engine nacelle	1	T26	93/11
EA3.57.39	PIPE, assembly, fuel, from coupling in engine nacelle to coupling in outer wing	1	T25	93/23
EA3.57.41	PIPE, assembly, air, from coupling in inner wing to coupling in engine nacelle	1	T26	93/19
EA3.57.43	PIPE, assembly, air, from coupling in engine nacelle to coupling in outer wing	1	T26	93/9
EA3.57.45	PIPE, assembly, air, from coupling in inner wing to coupling in engine nacelle	1	T26	93/4
EA1.57.251C	PIPE, assembly, fuel, between couplings in outer wing	1	L56	93/25
EEAS66/5	RING, clamping	2	L72	93/30
AS2811/5/065	TUBE, distance, for pipe clips	1	L62	93/35
VICKERS	VALVE, non-return	1	-	93/8
AS287/C	PIPES, FUEL AND AIR, IN OUTER WING, ASSEMBLY (EA1.57.255) Spares for:	-	-	93/31
EA1.57.317	CLIP, pipe saddle	5	L72	93/1
EEAS77/33	HOSE, rubber, 1/2" i/d x 3/4" o/d x 2" long, type 1 (Make from 32C/408)	2	DTD625	93/13
EEAS77/81	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long, type 1 (Make from 32C/377)	1	DTD625	93/29
EA6.57.93	PIPE, fuel, 1-1/4" o/d x 20 SWG	1	L56	93/27
or				
EA9.57.43	PIPE, fuel, 1-1/4" o/d x 20 SWG	1	L56	93/28
EA6.57.95	PIPE, fuel, 1-1/4" o/d x 20 SWG	1	L56	93/33
EA6.57.97	PIPE, air, 1/2" o/d x 20 SWG	1	L56	93/16
EA6.57.99	PIPE, air, 1/2" o/d x 20 SWG	1	L56	93/17
EEAS66/5	RING, clamping	2	L72	93/30

A.P.101B-0417-3A

SERVICES

Page NU3

FUEL SYSTEM IN PORT WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
R	1729	EEAS.20/1/DU							2	S515	C	93/15
	27F/4526771	SELF PRIMING SPE.2706							1	—	B	93/14
	—	—							—	—	—	92/10
	1255	E.A1.57.259							5	L72	C	92/4
	28D/9436920	A25/1C							2	—	C	92/9
	28M/1278190	AGS.2001/C/1							2	—	C	92/8
	28W/9419475	SP15/C							2	—	C	92/6
		EEAS.77/81							2	DTD625	LM	92/22
	2725	E.A1.57.1257							1	L56	C	92/14
	2723	E.A1.57.1259							1	L56	C	92/16
	1446	EEAS.66/5							4	L72	C	92/23

SERVICES

FUEL SYSTEM IN STARBOARD WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
-	FUEL SYSTEM IN STARBOARD WING, ASSEMBLY (EA1.57.728)						-	-	
-	Spares for:						-	-	92/38
-	PIPE, AIR, IN ENGINE NACELLE, ASSEMBLY (EA1.57.868)						-	-	
EEAS143/8	CLIP, 'P', pipe support						1	L72	92/41
AGS2001/B/1	Attaching parts for EEAS143/8:						1	-	92/45
A40/B16	Nut, stiff, 4BA						1	-	92/42
EA1.57.861	Screw, 4BA round head						1	-	
LOCKHEED	COUPLING, pipe						1	DTD126	92/43
MPA30068/4	FILTER, PUROLATOR, ASSEMBLY						1	-	92/34
LOCKHEED	Spares for:						-	-	
MPA30110	ELEMENT, complete						1	-	92/35
LOCKHEED	GASKET						1	-	92/36
MPA29540	PIPE, assembly, air, from pipe coupling at bracket						1	T26	92/40
EA3.57.48	to adaptor nipple at purolator filter						1	-	
EA3.57.50	PIPE, assembly, air, from purolator filter connection						1	T26	92/31
EA3.57.472	to restrictor nipple adaptor						1	-	
EA1.57.351	PIPE, assembly, from restrictor connection to						1	T26	92/33
EA1.57.859	non-return valve connection						1	L40	92/29
-	RESTRICTOR, drop tank air system						1	LFS21	92/44
-	WASHER, sealing						1	-	92/21
-	PIPES, FUEL AND AIR, IN INNER WING, ASSEMBLY (EA1.57.248)						-	-	
-	Spares for:						-	-	
EEAS143/10	CLIP, pipe, single (Pre Alt.R60/91) (Mod.5101)						4	L72	92/3
or							-	-	
AS4525/8	CLIP, pipe (Alt.R60/91) (Mod.5101)						4	-	
EA1.57.317	CLIP, pipe, saddle, rib 2 and rib 6						2	DTD310	92/2
A25/2B	Attaching parts for EA1.57.317:						-	-	
AGS2001/B/1	Bolt, 4BA hex. head						2	-	92/1
SP13/B	Nut, stiff, 4BA						2	-	92/7
EEAS77/33	Washer, 4BA plain						2	-	92/5
EEAS77/81	HOSE, rubber, 1/2" i/d x 3/4" o/d x 2" long						2	DTD625	92/24
EA6.57.104	(Make from 32C/408)						1	Type 1	
EA6.57.106	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long						1	DTD625	92/27
EA6.57.108	(Make from 32C/377)						1	Type 1	
EEAS66/5	PIPE, fuel, 1-1/4" o/d x 20 SWG						1	L56	92/26
-	PIPE, air, 1/2" o/d x 20 SWG						1	L56	92/19
-	PIPE, air, 1/2" o/d x 20 SWG						1	L56	92/13
-	RING, clamping						2	L72	92/28

R

SERVICES
FUEL SYSTEM IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	PIPES, FUEL AND AIR, IN ENGINE NACELLE, ASSEMBLY (EA1.57.252) Spares for:	—	—	93/22
EA1.57.259	CLIP, pipe saddle	3	L72	93/2
EA3.57.417	CLIP, pipe	1	L72	93/3
EEAS143/21	CLIP, 'P', type	3	L72	93/34
EEAS77/81	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long (Make from 32C/377)	1	DTD625 Type 1	93/29
EA3.57.36	PIPE, assembly, air, from non-return valve to nipple adaptor	1	T26	93/7
EA3.57.38	PIPE, assembly, fuel, from coupling in inner wing to coupling in engine nacelle	1	T26	93/12
EA3.57.40	PIPE, assembly, fuel, from coupling in engine nacelle to coupling in outer wing	1	T26	93/24
EA3.57.42	PIPE, assembly, air, from coupling in inner wing to coupling in engine nacelle	1	T26	93/20
EA3.57.44	PIPE, assembly, air, from coupling in engine nacelle to coupling in outer wing	1	T26	93/10
EA3.57.46	PIPE, assembly, air, from coupling in inner wing to coupling in engine nacelle	1	T26	93/5
EA1.57.252C	PIPE, assembly, fuel, between coupling in outer wing	1	L56	93/26
EEAS66/5	RING, clamping	2	L72	93/30
AS2811/5/065	TUBE, distance, for pipe clips	1	L62	93/35
VICKERS	VALVE, non-return	1	—	93/8
A5287/C	PIPES, FUEL AND AIR, IN OUTER WING, ASSEMBLY (EA1.57.256) Spares for:	—	—	93/32
EA1.57.317	CLIP, pipe saddle	5	L72	93/1
EEAS77/33	HOSE, rubber, 1/2" i/d x 3/4" o/d x 2" long	2	DTD625 Type 1	93/13
EEAS77.81	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long (Make from 32C/377)	1	DTD625 Type 1	93/29
EA6.57.93	PIPE, fuel, 1-1/4" o/d x 20 SWG	1	L56	93/27
or				
EA9.57.43	PIPE, fuel, 1-1/4" o/d x 20 SWG	1	L56	93/28
EA6.57.95	PIPE, fuel, 1-1/4" o/d x 20 SWG	1	L56	93/33
EA6.57.97	PIPE, air, 1/2" o/d x 20 SWG	1	L56	93/16
EA6.57.100	PIPE, air, 1/2" o/d x 20 SWG	1	L56	93/18
EEAS66/5	RING, clamping	2	L72	93/30
EEAS20/1/DU	TAB, locking	2	S515	93/15
SELF PRIMING SPE2706	VALVE, non-return, type P24A, Mk.3	1	—	93/14

A.P.101B-0417-3A

SERVICES

Page NV3

FUEL SYSTEM IN STARBOARD WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	PIPES, FUEL TRANSFER ON RIB 1, INNER							—	—	—	92/11
		WING, ASSEMBLY (E.A1.57.246)										
		Spares for:—										
1255	E.A1.57.259	CLIP, pipe saddle							5	L72	C	92/4
		Attaching parts for E.A1.57.259:—										
28D/9436920	A25/1C	Bolt, 2 BA hex. head							2	—	C	92/9
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							2	—	C	92/8
28W/9419475	SP15/C	Washer, 2 BA plain							2	—	C	92/6
	EEAS.77/81	HOSE, rubber, 1-1/4" i/d x 1-5/8" o/d x 3" long,							2	DTD625	LM	92/22
		type 1 (Make from 32C/377)										
2724	E.A1.57.1258	PIPE, fuel, 1-1/4" o/d x 20 SWG							1	L56	C	92/15
2722	E.A1.57.1260	PIPE, fuel, 1-1/4" o/d x 20 SWG							1	L56	C	92/17
1446	EEAS.68/5	RING, clamping							4	L72	C	92/23

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				

A.P.101B-0417-3A

SERVICES

Page NW1

FUEL AND AIR PIPES IN PORT WING TIP

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	FUEL AND AIR PIPES IN PORT WING TIP, ASSEMBLY (E.A1.57.257)							—	—	—	94/3
		Spares for:—										
1145	E.A1.57.317	CLIP, pipe saddle							1	L72	C	94/23
		Attaching parts for E.A1.57.317:—										
28D/1008149	A25/2B	Bolt, 4 BA hex. head							2	—	C	94/16
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA							2	—	C	94/18
28W/9419474	SP15/B	Washer, 4 BA plain							2	—	C	94/17
1399	E.A1.57.343	CLIP, pipe saddle							1	L72	C	94/5
		Attaching parts for E.A1.57.343:—										
28D/1212941	A61/3C	Bolt, 2 BA hex. head							2	—	C	94/6
5011	E.A1.57.347	Piece, packing							1	—	—	94/11
1400	E.A1.57.345	CLIP, pipe							1	L72	C	94/19
		Attaching parts for E.A1.57.345:—										
28D/9434862	A61/6C	Bolt, 2 BA hex. head							1	—	C	94/20
19840	E.A1.57.257G	Bush, 1/4" o/d x 1.0528 long							1	DTD310	C	94/24
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							1	—	C	94/22
28W/9419475	SP15/C	Washer, 2 BA plain							1	—	C	94/21
1401	E.A1.57.265	ELBOW, fuel pipe							1	DTD625	C	94/10
2112	E.A1.57.1243	ELBOW, air pipe							1	DTD625	C	94/14
	EEAS.77/33	HOSE, rubber, 1/4" i/d x 3/4" o/d x 2" long, type 1 (Make from 32C/408)							2	DTD625	LM	94/7
	EEAS.77/81	HOSE, rubber, 1-1/2" i/d x 1-5/8" o/d x 2" long, type 1 (Make from 32C/377)							2	DTD625	LM	94/2
1403	E.A1.57.257A	PIPE, fuel delivery, from drop tank to wing tip joint							1	L56	C	94/13
1404	E.A1.57.257B	PIPE, fuel delivery, from wing tip joint to main plane							1	L56	C	94/8
1405	E.A1.57.257C	PIPE, air delivery, from drop tank to wing tip joint							1	L56	C	94/12
1406	E.A1.57.257D	PIPE, air delivery, from wing tip joint to main plane							1	L56	C	94/9
1446	EEAS.66/5	RING, clamping							6	L72	C	94/1
2170	E.A1.57.1245	RING, clamping							1	L72	C	94/15

FUEL AND AIR PIPES IN PORT WING TIP

Restricted

A.P.101B-0417-3A

SERVICES

Page NX1

FUEL AND AIR PIPES IN STARBOARD WING TIP

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	FUEL AND AIR PIPES IN STARBOARD WING TIP, ASSEMBLY (E.A1.57.258)							—	—	—	94/4
		Spares for:—										
1145	E.A1.57.317	CLIP, pipe saddle							1	L72	C	94/23
		Attaching parts for E.A1.57.317:—										
28D/1008149	A25/2B	Bolt, 4 BA hex. head							2	—	C	94/16
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA							2	—	C	94/18
28W/9419474	SP15/B	Washer, 4 BA plain							2	—	C	94/17
1399	E.A1.57.343	CLIP, pipe saddle							1	L72	C	94/5
		Attaching parts for E.A1.57.343:—										
28D/1212941	A61/3C	Bolt, 2 BA hex. head							2	—	C	94/6
5011	E.A1.57.347	Piece, packing							1	—	—	94/11
1400	E.A1.57.345	CLIP, pipe							1	L72	C	94/19
		Attaching parts for E.A1.57.345:—										
28D/9434862	A61/6C	Bolt, 2 BA hex. head							1	—	C	94/20
19840	E.A1.57.257G	BUSH, 1/4" o/d x 0" 528 long							1	DTD310	C	94/24
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							1	—	C	94/22
28W/9419475	SP15/C	Washer, 2 BA plain							1	—	C	94/21
1401	E.A1.57.265	ELBOW, fuel pipe							1	DTD625	C	94/10
2112	E.A1.57.1243	ELBOW, air pipe							1	DTD625	C	94/14
	EEAS.77/33	HOSE, rubber, 1/4" i/d x 3/4" o/d x 2" long							2	DTD625	LM	94/7
		(Make from 32C/408)								Type 1		
	EEAS.77/81	HOSE, rubber, 1-1/2" i/d x 1-5/8" o/d x 3" long							2	DTD625	LM	94/2
		(Make from 32C/377)								Type 1		
1404	E.A1.57.257B	PIPE, fuel delivery, from wing tip joint to main plane							1	L56	C	94/8
1405	E.A1.57.257C	PIPE, air delivery, from drop tank to wing tip joint							1	L56	C	94/12
1406	E.A1.57.257D	PIPE, air delivery, from wing tip joint to main plane							1	L56	C	94/9
1407	E.A1.57.258A	PIPE, fuel delivery, from drop tank to wing tip joint							1	L56	C	94/13
1446	EEAS.66/5	RING, clamping							6	L72	C	94/1
2170	E.A1.57.1245	RING, clamping							1	L72	C	94/15

A.P.101B-0417-3A

Page NY1

SERVICES

FUEL SYSTEM IN PORT INNER WING

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	FUEL DELIVERY SYSTEM IN PORT WING,						—	—	—	95/17
		ASSEMBLY (E.B6.57.71)									
		Spares for:—									
1255	E.A1.57.259	CLIP, pipe, at ribs 1, 2 and 3						3	L72	C	95/12
		Attaching parts for E.A1.57.259:—									
28D/9133011	A25/2C	Bolt, 2 BA hex. head						2	—	C	95/10
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						2	—	C	95/14
28W/9419402	SP13/C	Washer, 2 BA plain						2	—	C	95/13
6879	EEAS.143/21H	CLIP, pipe bonding (Pre-Alt. R60/91) (Mod. 5101) ..						2	L72	C	95/19
	or										
5K/2231768	AS.4525/20	CLIP, pipe (Alt. R60/91) (Mod. 5101)									
		Attaching parts for EEAS.143/28H:—									
28D/9133011	A25/2C	Bolt, 2 BA hex. head						1	—	C	95/24
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						1	—	C	95/23
5259	EEAS.21/2ER/H	Washer, 1D'						2	L72	C	95/21
28W/9419402	SP13/C	Washer, 2 BA plain						1	—	C	95/22
R 6119489	E.A3.57.535	ELBOW, connection, on engine rib (Mod. 5237)						1	DTD304A	C	95/5
		Attaching parts for E.A3.57.535:—									
28D/9133012	A25/3C	Bolt, 2 BA hex. head						4	—	C	95/7
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						4	—	C	95/8
28W/9419402	SP13/C	Washer, 2 BA plain						4	—	C	95/9
6682	EEAS.164/20/53	HOSE, rubber connecting, 1-1/4" i/d x 1-5/8" o/d x						2	DTD625	LM	95/33
		5-1/4" long, type 1 (Make from 32C/377)							Type 1		
28F/9513420	AGS.1142/J	NIPPLE, adaptor						2	—	C	95/1
6881	E.B6.57.67	PIPE, assembly, fuel, from fuselage feed pipe con-						1	L56	C	95/15
		nection to hose joint at rib 1									
6880	E.B6.57.77	PIPE, assembly, fuel continuation between hose						1	L56	C	95/16
		joints									
5684	E.B7.57.131	PIPE, assembly, fuel, from hose joint between ribs 2						1	L56	C	95/18
		and 3 to elbow connection at engine rib									
1446	EEAS.66/5	RING, clamping, for hose clips						8	L72	C	95/29
16479	E.B6.57.75	SUPPORT, fuel pipe, at clip, rib 3						1	—	C	95/25
		Attaching parts for E.B6.57.75:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head						2	—	C	95/20
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						2	—	C	95/28
28W/9419474	SP15/B	Washer, 5 BA plain						2	—	C	95/27
28486	E.B7.57.137	SUPPORT, fuel pipe, clip, at rib 2						1	—	C	95/32
		Attaching parts for E.B7.57.137:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head						2	—	C	95/26
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						2	—	C	95/31
28W/9419474	SP15/C	Washer, 4 BA plain						2	—	C	95/30
1304	E.A1.57.209	SUPPORT, fuel pipe at diaphragm, inboard of rib 1						2	Mill-Board	C	95/6
		Attaching parts for E.A1.57.209:—									
28D/9419452	A25/3B	Bolt, 4 BA hex. head						6	—	C	95/4
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						6	—	C	95/2
6384	E.A1.57.199	Plate, locking						2	L72	C	95/11
28W/9419465	SP13/B	Washer, 4 BA plain						2	—	C	95/3

SERVICES

Fig.
and
Index

SERVICES

FUEL SYSTEM IN STARBOARD INNER WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	FUEL DELIVERY SYSTEM, IN STARBOARD INNER WING, ASSEMBLY (EA1.57.756) Spares for:—	—	—	96/6
EA1.57.183	CLIP, support, half, inner wing ribs 2 and 3 Attaching parts for EA1.57.183:—	2	L59	96/11
A25/1B	Bolt, 4 BA hex. head	2	—	96/15
AGS2001/B/1	Nut, stiff, 4 BA	2	—	96/10
SP13/B	Washer, 4 BA plain	2	—	96/14
EA1.57.185	CLIP, top half, inner wing ribs 2 and 3 Attaching parts for EA1.57.185:—	2	L72	96/9
A25/2C	Bolt, 2 BA hex. head	2	—	96/7
AGS2001/C/1	Nut, stiff, 2 BA	2	—	96/13
SP13/C	Washer, 2 BA plain	2	—	96/8
EA3.57.536	ELBOW, connection, on engine rib (Mod 5237) Attaching parts for EA3.57.536:—	1	DTD304A	96/23
A15Y/3C	Bolt, 2 BA hex. head	4	—	96/22
AGS2001/C/1	Nut, stiff, 2 BA	4	—	96/20
EEAS20/3/DR	Tab, locking	1	L72	96/21
EEAS164/20/53	HOSE, rubber, 1-1/4" x 1-5/8" x 5-1/4" long, type 1 (Make from 32C/377)	2	DTD625 Type 1	96/2
EA1.57.554	PIPE, assembly, fuel, engine feed, from hose joint between ribs 2 and 3 to elbow connection on engine rib	1	L56	96/1
EA1.57.556	PIPE, assembly, fuel, engine feed, from fuselage connection to hose joint outboard of rib 1	1	L54	96/5
EA1.57.1255	PIPE, assembly, fuel, engine feed, between hose joints ribs 1 to 3	1	L56	96/4
EEAS66/5	RING, clamping	8	L72	96/3
EA1.57.209	SUPPORT, pipe, at diaphragm, and rib 1 Attaching parts for EA1.57.209:—	4	Mill-board	96/16
A25/2B	Bolt, 4 BA hex. head	6	—	96/19
AGS2001/B/1	Nut, stiff, 4 BA	6	—	96/12
EA1.57.199	Plate, locking	2	L72	96/17
SP13/B	Washer, 4 BA plain	2	—	96/18

SERVICES

FUEL SYSTEM IN STARBOARD INNER WING

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5			
—	HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE ASSEMBLY (EG7.73.5)					—	—	44/1
	Spares for:							
	HYDRAULIC EQUIPMENT CIRCUIT, ASSEMBLY (EA3.73.5007)					—	—	44/2
	Spares for:							
DOWTY ROTOL 8076/52	DIVIDER, flow					2	—	44/7
VOKES E30L/1"/7915 or VOKES E30L/1" 22537	FILTER, oil					1	—	44/11
10069 N & Z	FILTER, oil					1	—	44/12
or	GAUGE, pressure					1	—	44/14
SIS3592	GAUGE, pressure, Mk.14LL					1	—	
ELECTRO HYD'S 7391	RELAY, HYDRAULIC PRESSURE GAUGE, ASSEMBLY					1	—	44/16
	Consisting of:							
9913	ADAPTOR, outlet to gauge					1	—	44/15
9938	ADAPTOR, hydraulic supply inlet					1	—	44/19
73082	BODY					1	DTD130B	44/21
30M/36 x 4	CIRCLIP, nut to body					1	—	44/29
73081	CYLINDER					1	—	44/26
73039	NUT, cylinder to body					1	—	44/28
73083	PISTON					1	—	44/25
40044	PLUG, bleed					1	—	44/20
7379	RESTRICTOR					1	—	44/18
739112	RING, piston					1	—	44/24
739113	RING, piston					1	—	44/23
739114	RING, sealing, cylinder to body					1	—	44/22
2M/14 x 10	WASHER, at adaptors and restrictors					3	—	44/17
30A/9437135	WIRE, locking					QR	—	44/27
DOWTY ROTOL 408Y/MK.BN	SELECTOR, and non-return valve for flap and air brake isolation					1	—	44/3
DOWTY ROTOL 408Y/MK.BQ	VALVE, rotary control, undercarriage (For spares see AP.4515B, Vol.3)					1	—	44/9
DOWTY ROTOL 1034/Y/MK.Q	VALVE, pressure relief, flaps 'down' (For spares see AP.4515B, Vol.3)					1	—	44/6
DOWTY ROTOL 01183Y/MK.B02	VALVE, rotary control, nosewheel (For spares see AP.4515B, Vol.3)					1	—	44/10
DOWTY ROTOL 657Y	VALVE, restrictor (For spares see AP.4515B, Vol.3)					1	—	44/5
DOWTY ROTOL 4603Y/MK.E	VALVE, thermal relief					7	—	44/4
H.P. COMP'S A58	VALVE, inflation					1	—	44/13

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
DOWTY ROTOL 5240Y	. . VALVE, non-return, flap and air brake isolation	1	—	44/8
—	. . JACK, SHUTTER OPERATING, INSTALLATION (EG7.73.301)	—	—	45/26
	Spares for:			
EG7.73.321	. . BLOCK, assembly	1	L65	45/28
A25/16C	. . Attaching parts for EG7.73.321:			
AGS2001/C/1	. . Bolt, 2BA hex. head	1	—	45/29
	. . Nut, stiff, 2BA	1	—	45/27
EA1.70.61	. . CLAMP, pipe	1	LFS21	45/1
	. . Attaching parts for EA1.70.61:			
A25/6B	. . Bolt, 4BA hex. head	2	—	45/5
SP15/B	. . Washer, 4BA plain	2	—	45/4
EEAS91/1	. . CLIP, pipe, double, 1/4" o/d	2	—	45/8
	. . Attaching parts for EEAS91/1:			
A25/2B	. . Bolt, 4BA hex. head	2	—	45/11
AGS2001/B/1	. . Nut, stiff, 4BA	2	—	45/6
EEAS21A/3ER	. . Washer, 'D'	2	L72	45/10
EG7.73.323	. . CONNECTOR	1	S94	45/22
	. . Attaching parts for EG7.73.323:			
EB1.20.7623	. . Bolt, special	1	S96	45/19
EG7.73.325	. . Spacer	2	L65	45/21
AGS1104/B	. . CONE, adaptor	2	—	45/12
AGS1107/E	. . CONE, union	2	—	45/3
SP7YCL	. . FORK, joint, L.H. thread	1	—	45/30
	. . Attaching parts for SP7YCL			
SP4Y/B3	. . Pin, shackle, 3/16"	1	—	45/23
SP90/C4	. . Pin, split	1	—	45/25
SP13/C	. . Washer, plain	1	—	45/24
DOWTY ROTOL 5243	. . JACK, shutter operating	1	—	45/16
EG7.73.303	. . PIPE, assembly, from coupling at frame 13 to shutter operating jack connection	1	DTD323	45/7
EG7.73.305	. . PIPE, assembly, from coupling at frame 13 to shutter operating jack connection	1	DTD323	45/2
EG7.73.317	. . PLATE	2	L65	45/9
	. . Attaching parts for EG7.73.317:			
A25/3C	. . Bolt, 2BA hex. head	6	—	45/13
AGS2001/C/1	. . Nut, stiff, 2BA	6	—	45/15
SP16/C	. . Washer, 2BA plain	6	—	45/14
EG7.73.319	. . STRAP, assembly	1	L72	45/20
	. . Attaching parts for EG7.73.319:			
A25/4C	. . Bolt, 2BA hex. head	2	—	45/17
AGS2001/C/1	. . Nut, stiff, 2BA	2	—	45/18
SP35/C	. . TIE-ROD	1	—	45/31

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
	—	MOUNTING OF ROTARY CONTROL VALVES AND ACTUATOR FOR UNDER-CARRIAGE AND BOMB DOORS, ASSEMBLY (E.A3.73.357) Spares for:—	—	—	—	46/61
	E.E. C. B'FORD Type 204, Mk. 6	ACTUATOR, UNDERCARRIAGE ROTARY CONTROL VALVE, ASSEMBLY Consisting of:—	1	—	—	46/35
5W/4511895	AED.200152	ACTUATOR, type 200, Mk. 1	1	—	A	46/37
5W/4489230	†	BRACKET, mounting, c/w label	1	—	C	46/26
27Q/779	DOWTY ROTOL C.408YMK.Q	VALVE	1	—	A	46/25
30A/9148334	†	WIRE, locking, 24 SWG	QR	—	C	46/31
28D/1214311	A25/17C	Attaching parts for Type 204, Mk. 6:—				
28M/9403520	A27/CP	Bolt, 2 BA hex. head	2	—	C	46/50
	AS.2811/5/149	Nut, 2 BA plain	2	—	C	46/46
28W/9419475	SP15/C	Tube, distance	2	L72	LM	46/49
28W/9416643	SP47/C	Washer, 2 BA plain	2	—	C	46/48
		Washer, 2 BA spring	2	—	C	46/47
	E.E. CO. B'FORD Type 206, Mk. 6	ACTUATOR, BOMB DOOR ROTARY CONTROL VALVE, ASSEMBLY Consisting of:—	1	—	—	46/23
5W/4511895	AED.200152	ACTUATOR, type 200, Mk. 1	1	—	A	46/24
5W/4489232	†	BRACKET, mounting, c/w label	1	—	C	46/22
27Q/70282	DOWTY ROTOL C.408Y/MK.6R	VALVE	1	—	A	46/21
30A/9148334	†	WIRE, locking, 24 SWG	QR	—	C	46/20
28D/1214311	A25/17C	Attaching parts for Type 206/MK. 6:—				
28M/9403520	A27/CP	Bolt, 2 BA hex. head	2	—	C	46/55
	AS.2811/5/149	Nut, 2 BA plain	2	—	C	46/51
28W/9419475	SP15/C	Tube, distance	2	—	LM	46/54
28W/9416643	SP47/C	Washer, 2 BA plain	2	—	C	46/53
		Washer, 2 BA spring	2	—	C	46/52
5260	EEAS.143/5H or 5K/1037287	CLIP, pipe, single, 3/16" o/d bonding	6	L72	C	46/58
		Attaching parts for EEAS.143/5H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	46/56
28D/9419452	A25/3B	Bolt, 4 BA hex. head	1	—	C	46/57
28M/1278189	AGS.2001/B1	Nut, stiff, 4 BA	2	—	C	46/60
5259	EEAS.21/2ERH or EEAS.237/17CH	Washer, 'D'	2	L72	C	46/59
5258	EEAS.143/6H or 5K/4345976	CLIP, pipe, single, 3/8" o/d bonding	2	L72	C	46/10
		Attaching parts for EEAS.143/6H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	46/9
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	46/12
5259	EEAS.21/2ERH or EEAS.237/17CH	Washer, 'D'	1	L72	C	46/11

SERVICES
HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
5248	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d						7	L72	C	46/43
R 5K/4345977	or AS.4526/6	Attaching parts for EEAS.143/8H:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head						1	—	C	46/42
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						1	—	C	46/45
5259	EEAS.21/2/ERH	Washer, 'D'						1	L72	C	46/44
R	or EEAS.237/17H										
5544	EEAS.143/21H	CLIP, pipe, single, 1/4" o/d bonding						1	L72	C	46/4
R 5K/4345978	or AS.4526/8	Attaching parts for EEAS.143/21H:—									
28D/9133012	A25/3C	Bolt, 2 BA hex. head						1	—	C	46/3
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						1	—	C	46/7
5259	EEAS.21/2ERH	Washer, 'D'						1	L72	C	46/8
R	or EEAS.239/1CH										
5521	EEAS.143/24H	CLIP, pipe, single, 3/4" o/d, bonding						2	L72	C	46/1
R 5K/4345980	or AS.4526/12	Attaching parts for EEAS.143/24H:—									
28D/9133012	A25/3C	Bolt, 2 BA hex. head						1	—	C	46/2
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA						1	—	C	46/6
5259	EEAS.21/2ERH	Washer, 'D'						1	L72	C	46/5
R	or EEAS.239/2CH										
28F/9476124	AGS.1118/C	CONE, tee						2	—	C	46/16
28F/4051566	AGS.1120/3	CONE, tee						2	—	C	46/14
28F/9476127	AGS.1120/5	CONE, tee						1	—	C	46/19
28F/8011883	AGS.1102/B	CONE, union body						1	—	C	46/30
5944	E.B6.73.65	PIPE, assembly, from bomb door selector to tee						1	DTD323	C	46/41
		cone, pressure line									
5945	E.B6.73.67	PIPE, assembly, from undercarriage selector to tee						1	DTD323	C	46/36
		cone, pressure line									
16505	E.B6.73.121	PIPE, assembly, from undercarriage selector to tee						1	DTD323	C	46/34
		cone aft of frame 17, 'up' line									
16506	E.B6.73.123	PIPE, assembly, from undercarriage selector to tee						1	DTD323	C	46/33
		cone aft of frame 19, 'down' line									
12124	E.B6.73.149	PIPE, assembly, from bomb door selector aft tee						1	DTD323	C	46/38
		cone to undercarriage selector tee									
		cone, pressure line									
772	E.A3.73.329 or E.A3.73.1311	PIPE, assembly, from pressure relief valve tee to						1	DTD323	C	46/27
		undercarriage and bomb door selector tee,									
		pressure line									
1699	E.A3.73.333 or E.A3.73.1313	PIPE, assembly, from undercarriage selector to						1	DTD323	C	46/28
		thermal relief valve tee, nosewheel									
		'up' line									
775	E.A3.73.337 or E.A3.73.1315	PIPE, assembly, from undercarriage selector to						1	DTD323	C	46/29
		thermal valve tee, nosewheel									
		'down' line									
776	E.A3.73.339	PIPE, assembly, from bomb door selector to						1	DTD323	C	46/18
		forward bomb door jack thermal valve									
		coupling tee, closed line									
778	E.A3.73.343	PIPE, assembly, from bomb door selector to						1	DTD323	C	46/39
		forward bomb door jack and thermal									
		valve coupling tee, 'open' line									

A.P.101B-0417-3A

Page NAA5

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.73.347	PIPE, assembly, from undercarriage selector to tee coupling for hand pump in suction line	1	DTD323	46/13
EA3.73.349	PIPE, assembly, between undercarriage bomb door selector tee couplings in reservoir return line	1	L56	46/15
EA3.73.351	PIPE, assembly, from bomb door selector to coupling tee at frame 15 in reservoir return line	1	L56	46/17
EA3.73.353	PIPE, assembly, from bomb door selector to tee in reservoir return line	1	L56	46/40
EA3.73.355 or EA3.73.1317	PIPE, assembly, from coupling aft of frame 15 to coupling aft of frame 19, hydraulic port brake	1	DTD323	46/32
—	MOUNTING OF ROTARY CONTROL VALVE AND ACTUATOR FOR WING FLAPS, ASSEMBLY (EA3.73.399) Spares for:	—	—	47/30
E.E. CO. B'FORD Type 205, Mk.6	ACTUATOR AND HYDRAULIC VALVE FOR FLAPS, ASSEMBLY Consisting of:	1	—	47/20
AED200152	ACTUATOR, type 200, Mk.1	1	—	47/19
SW/4489231	BRACKET, mounting, c/w label	1	—	46/16
DOWTY ROTOL C.408Y/MKL	VALVE	1	—	48/14
30A/9148334	WIRE, locking, 24 SWG Attaching parts for Type 205/MK.6:	QR	—	47/15
A25/17C	Bolt, 2BA hex. head	2	—	47/9
A27/CP	Nut, 2BA plain	2	—	47/8
AS2811/5/149	Tube, distance	2	L62	47/2
SP15/C	Washer, 2BA plain	2	—	47/3
SP47/C	Washer, 2BA spring	2	—	47/1
EEAS91/3	CLIP, pipe, double, 3/8" o/d Attaching parts for EEAS91/3:	1	L72	47/5
A25/3B	Bolt, 4BA hex. head	1	—	47/4
AGS2001/B/1	Nut, stiff, 4BA	1	—	47/7
EEAS21/2ERH	Washer, 'D'	1	—	47/6
EEAS143/8H or AS4526/6	CLIP, pipe, single, 3/8" o/d bonding Attaching parts for EEAS143/8H:	20	L72	47/25
A25/1B	Bolt, 4BA hex. head	1	—	47/31
A25/3B	Bolt, 4BA	1	—	47/23
AGS2001/B/1	Nut, stiff, 4BA	1	—	47/27
EEAS21/2/ERH or EEAS237/17CH SP15/B	Washer, 'D'	1	L72	47/26
AGS1118/C	Washer, 4BA plain	1	—	47/24
EA3.73.423	CONE, tee	3	—	47/11
EA3.73.425	PIPE, assembly, from selector to running coupling aft of frame 18, flap 'up' line	1	DTD323	47/18
EA3.73.425	PIPE, assembly, from selector to running coupling aft of frame 18, flap 'down' line	1	DTD323	47/22

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.73.427	. . PIPE, assembly, connecting port and starboard undercarriage door jacks, closed line	1	DTD323	47/29
EA3.73.429	. . PIPE, assembly, from selector tee to flap and air brake tee in reservoir return line	1	DTD323	47/21
EA3.73.431	. . PIPE, assembly, from flap selector tee to joint in reservoir return line	1	L56	47/13
EA3.73.433	. . PIPE, assembly, from flap selector tee to flap and air brake tee in reservoir return line	1	L56	47/12
EA3.73.437	. . PIPE, assembly, from air brake selector tee to flap selector non-return valve	1	DTD323	47/17
EA3.73.439	. . PIPE, assembly, air brake selector, pressure line	1	DTD323	47/28
EA3.73.645	. . PIPE, assembly, from air brake selector tee to air brake and flap selector tee in reservoir return line	1	L56	47/10
—	. PIPES, HYDRAULIC, BETWEEN FRAME 12 AND 13, PORT SIDE, ASSEMBLY (EG7.73.39) Spares for:	—	—	48/22
EA1.70.61	. . CLAMP, pipe, accumulator door frame Attaching parts for EA1.70.61:	1	LFS21	48/47
A25/6B	. . Bolt, 4BA hex. head	2	—	48/46
AGS2001/B/1	. . Nut, stiff, 4BA	2	—	48/49
SP15/B	. . Washer, 4BA plain	2	—	48/48
EA1.73.257	. . CLAMP, pipe, at frame 13 bulkhead Attaching parts for EA1.73.257:	1	LFS21	48/51
A25/10C	. . Bolt, 2BA hex. head	2	—	48/50
AGS2001/C/1	. . Nut, stiff, 2BA	2	—	48/53
SP15/C	. . Washer, 2BA plain	2	—	48/52
EA1.73.325	. . CLAMP, pipe, at frame 13 bulkhead Attaching parts for EA1.73.325:	1	LFS21	48/43
A25/9B	. . Bolt, 4BA hex. head	2	—	48/42
AGS2001/B/1	. . Nut, stiff, 4BA	2	—	48/45
SP15/B	. . Washer, 4BA plain	2	—	48/44
EEAS91/1/H	. . CLIP, pipe, double, 1/4" o/d, bonding	2	L72	48/33
EEAS143/6H	. . CLIP, pipe, single, 1/4" o/d, bonding	4	L72	48/24
or				
AS4526/4				
EEAS143/24H	. . CLIP, pipe, single, 3/4" o/d, bonding	5	L72	48/28
or				
AS4526/12				
	Attaching parts for EEAS91/1H, EEAS143/6H and EEAS143/24H:			
A25/1B	. . Bolt, 4BA hex. head	6	—	48/23
A25/1C	. . Bolt, 2BA hex. head	5	—	48/27
AGS2001/B/1	. . Nut, stiff, 4BA	6	—	48/26
AGS2001/C/1	. . Nut, stiff, 2BA	5	—	48/30
EEAS21/2ERH	. . Washer, 'D'	6	L72	48/25
or				
EEAS237/17H				
EEAS21/4ERH	. . Washer, 'D'	5	L72	48/29
or				
EEAS239/2CH				
AGS1104/B	. . CONE, adaptor	1	—	48/40
AGS1120/1	. . CONE, tee	2	—	48/18
AGS1102/B	. . CONE, union body	7	—	48/6

A.P.101B-0417-3A		SERVICES						Page NAA7			
HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE											
Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7			
	E.G7.73.121	MOUNTING, 'VOKES' FILTER ON FRAME						1	-	-	48/17
		13 BULKHEAD, GROUP									
		Spares for:-									
1498	E.A1.73.377	ADAPTOR, engine suction line pipe to filter						2	L40	C	48/16
3393	E.A1.73.393	CLIP, filter, mounting						1	L72	C	48/21
28F/8011897	AGS.1142/F	NIPPLE, adaptor						4	-	C	48/2
42823	E.G7.73.63 or E.G7.73.361	PIPE, assembly, from selector to running coupling						1	DTD323	C	48/10
		in nosewheel 'up' line									
42824	E.G7.73.65 or E.G7.73.363	PIPE, assembly, from selector to running coupling						1	-	C	48/13
		in nosewheel 'down' line									
42825	E.G7.73.67 or E.G7.73.365	PIPE, assembly, from non-return valve tee to						1	DTD323	C	48/11
		nosewheel selector seal tee, hand pump pressure line									
42826	E.G7.73.69	PIPE, assembly, branch, from tee to nosewheel selector seal, hand pump pressure line						1	DTD323	C	48/12
42827	E.G7.73.71	PIPE, assembly, from tee connection to hydraulic						1	DTD323	C	48/32
		brake air pressure gauge at frame 13									
42828	E.G7.73.73 or E.G7.73.367	PIPE, assembly, from tee connection to compressed						1	DTD323	C	48/31
		air charging valve, hydraulic brake accumulator									
42829	E.G7.73.75	PIPE, assembly, from 'Vokes' filter to connection at						1	L56	C	48/20
		transport joint									
42830	E.G7.73.77	PIPE, assembly, from connection at frame 13 to						1	L56	C	48/19
		'Vokes' filter									
42831	E.G7.73.79 or E.G7.73.369	PIPE, assembly, from coupling at frame 12 to						1	DTD323	C	48/9
		selector, nosewheel 'up' connection									
42832	E.G7.73.81 or E.G7.73.371	PIPE, assembly, from coupling at frame 12 to						1	DTD323	C	48/8
		selector, nosewheel, 'down' connection									
42833	E.G7.73.83 or E.G7.73.373	PIPE, assembly, from nosewheel selector seal tee to						1	DTD323	C	48/7
		coupling at frame 12									
1694	E.A3.73.419 or E.A3.73.1299	PIPE, assembly, from coupling at frame 12B to						1	DTD323	C	48/15
		coupling aft of frame 15, port brake									
1695	E.A3.73.421 or E.A3.73.1301	PIPE, assembly, from coupling aft of frame 12B to						1	DTD323	C	48/14
		coupling aft of frame 19									
	E.G7.73.327 or E.G7.73.375	PIPE, assembly, from coupling at frame 13 to thermal						1	DTD323	-	48/5
		relief valve tee, nosewheel 'up' connection									
	E.G7.73.329 or E.G7.73.377	PIPE, assembly, from coupling at frame 13 to thermal						1	DTD323	-	48/4
		relief valve tee, nosewheel 'down' connection									
	E.G7.73.331 or E.G7.73.379	PIPE, assembly, from coupling at frame 13 to pressure						1	DTD323	-	48/3
		reducing valve									
28F/9128943	AGS.1114/B	SLEEVE, screwed, flanged, bulkhead						1	-	C	48/38
		Attaching parts for AGS.1114/B:-									
28D/1010658	A25/1B	Bolt, 4 BA hex. head						6	-	C	48/39
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						6	-	C	48/34
28F/8014021	AGS.1138/B	Washer, jointing						1	-	C	48/36
28F/4031641	AGS.1115/3	Washer, plate						1	-	C	48/37
28W/9419474	SP15/B	Washer, 4 BA plain						5	-	C	48/41

Page NAA8

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
981 28F/1011798	EEAS.20/2DR AGS.1103/F —	TAB, locking		2	L72	C	48/35				
		UNION, body		1	—	C	48/1				
		PIPES, HYDRAULIC, BETWEEN FRAMES 20 AND 21 FOR AIR BRAKE, ASSEMBLY (E.A3.73.359) & (E.G7.73.5) Spares for:—		—	—	—	49/11				
5260 5K/1037287	EEAS.143/5H or AS.4525/3	CLIP, pipe, single, 3/16" o/d bonding		10	L72	C	49/2				
		Attaching parts for EEAS.143/5H:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head		1	—	C	49/4				
28D/1008149	A25/2B	Bolt, 4 BA hex. head		1	—	C	49/5				
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA		1	—	C	49/1				
5259	EEAS.21/2/ERH	Washer, 'D'		1	L72	C	49/3				
5258 5K/4345976	EEAS.143/6H or AS.4526/4	CLIP, pipe, single, 1/4" o/d, bonding		15	L72	C	49/26				
		Attaching parts for EEAS.143/6H:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head		1	—	C	49/29				
28M/1278189	AGS.2001/B/1	Nut, stiff, 2 BA		1	—	C	49/27				
5259	EEAS.21/2ER/H or EEAS.237/17CH	Washer, 'D'		1	L72	C	49/28				
5348 5K/3042	EEAS.143/8H or AS.4526/5	CLIP, pipe, single, 3/8" o/d bonding		21	L72	C	49/7				
		Attaching parts for EEAS.143/8H:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head		1	—	C	49/9				
28D/1008149	A25/2B	Bolt, 4 BA hex. head		1	—	C	49/10				
28D/1007979	AS.1246/1B	Bolt, 4 BA round head		1	—	C	49/43				
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA		1	—	C	49/6				
28W/9419474	SP15/B	Washer, 4 BA plain		1	—	C	49/42				
5259	EEAS.21/2ER/H	Washer, 'D'		1	L72	C	49/8				
28F/9140971	AGS.1104/C	CONE, adaptor		2	—	C	49/31				
28F/9476124	AGS.1118/C	CONE, tee		3	—	C	49/34				
28F/8011883	AGS.1102/B	CONE, union body		32	—	C	49/17				
28F/9471001	AGS.1102/C	CONE, union body		1	—	C	49/23				
28F/1013401	AGS.1107/A	CONE, union reducing		1	—	C	49/18				
806	E.A1.73.177	COUPLING, pipe tee, for flow divider in air brake 'up' line		2	—	C	49/20				
832	E.A1.73.207	FAIRLEAD, for undercarriage 'down' pipe, port and starboard, between fuselage and wing aft of frame 2		2	LFS21	C	49/39				
		Attaching parts for E.A1.73.207:—									
28D/9133012	A25/3C	Bolt, 2 BA hex. head		8	—	C	49/37				
28M/13324	A29/CP	Nut, 2 BA plain		8	—	C	49/41				
28W/9419474	SP15/B	Washer, 4 BA plain		8	—	C	49/38				
28W/9416643	SP47/C	Washer, 2 BA spring		8	—	C	49/40				
15137	E.B6.73.115	PIPE, assembly, from coupling forward of frame 20 to starboard wing connection, under- carriage 'down' pressure line		1	DTD323	C	49/16				

A.P.101B-0417-3A

Page NAA9

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
15138	E.B6.73.127	PIPE	assembly	from tee forward of frame 20 to	..				1	DTD323	C	49/36
				port wing connection, undercarriage								
				pressure line								
15141	E.B6.73.133	PIPE	assembly	from solenoid cock and thermal	..				1	DTD323	C	49/35
				relief valve tee to flow divider, air brake								
				jack line								
12006	E.B6.73.145 or E.A4.73.5071	PIPE	assembly	from coupling forward of frame 20					1	DTD323	C	49/33
				to port wing coupling, wheel brake return								
				line								
12008	E.B6.73.153	PIPE	assembly	from solenoid cock to non-return					1	DTD323	C	49/19
				valve tee aft of frame 20								
12009	E.B6.73.155	PIPE	assembly	from solenoid cock tee to non-return					1	DTD323	C	49/12
				valve and thermal relief valve tee aft of								
				frame 20								
12010	E.B6.73.157	PIPE	assembly	from solenoid cock tee to non-return					1	DTD323	C	49/21
				valve tee aft of frame 20								
12011	E.B6.73.159	PIPE	assembly	from non-return valve to thermal					1	DTD323	C	49/25
				relief valve tee aft of frame 20								
12012	E.B6.73.161	PIPE	assembly	from solenoid cock to non-return					1	DTD323	C	49/32
				valve and thermal relief valve tee aft of								
				frame 20								
1993	E.A3.73.363	PIPE	assembly	from undercarriage selector tee to					1	DTD323	C	49/13
				running coupling in undercarriage								
				operating jacks connecting pipe,								
				undercarriage 'down' line								
15140	E.B6.73.131 or E.A4.73.5073	PIPE	assembly	from coupling forward of frame 20					1	DTD323	C	49/22
				to coupling in starboard wing wheel, brake								
				line								
12051	E.B6.73.85 or E.A4.73.5075	PIPE	assembly	from coupling at rear of frame 20					1	DTD323	C	49/15
				to coupling in starboard wing wheel,								
				brake line								
4515	E.A3.73.653	PIPE	assembly	from coupling forward of frame 20					1	DTD323	C	49/14
				to starboard wing connection thermal								
				relief valve, return line								
4516	E.A3.73.655	PIPE	assembly	from coupling forward of frame 20					1	DTD323	C	49/30
				to port wing connection thermal relief								
				valve, return line								
26109	E.A9.73.685	PIPE	assembly	thermal relief valve tee forward	..				1	DTD323	C	49/24
				of main spar to air brake flow divider								
				aft of spar, return line								
	—	PIPES, HYDRAULIC, BETWEEN FRAMES 14							—	—	—	50/40
		AND 15, ASSEMBLY (E.A3.73.391)										
		Spares for:—										
829	E.A1.73.181	CLIP	thermal relief valve, mounting						4	—	C	50/3
		Attaching parts for E.A1.73.181:—										
28D/9435710	A25/11C	Bolt	2 BA hex. head						8	—	C	50/2
28M/1006473	A27/CT	Nut	2 BA thin						8	—	C	50/5
28W/1007983	AGS162/C	Washer	spring						8	—	C	50/4
5260	EEAS.143/5H or 5K/1037287	CLIP	pipe, single, 3/16" o/d bonding						2	L72	C	50/35
5258	EEAS.143/6H	CLIP	pipe, single, 1/4" o/d bonding						3	L72	C	50/25
5348	EEAS.143/8H	CLIP	pipe, single, 3/8" o/d bonding						6	L72	C	50/20
5852	EEAS.143/16	CLIP	pipe, single, 3/16" o/d bonding						2	L72	C	50/34
5K/6323922	AS.4526/3	CLIP							2	—	C	
5K/4345976	AS.4526/4	CLIP							3	—	C	
5K/4345977	AS.4526/6	CLIP							4	—	C	
5K/4345978	AS.4526/8	CLIP							1	—	C	
5K/4345980	AS.4526/12	CLIP							1	—	C	
28E/9130610	AS.5419/3	CLIP							1	—	C	

Restricted

Page NAA10

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
5544	EEAS.143/21H	CLIP, pipe, single, 1/2" o/d bonding	1	L72	C	50/39
5521	EEAS.143/24H	CLIP, pipe, single, 3/4" o/d bonding	1	L72	C	50/38
28F/9440881	AGS.1118/A	CONE, tee	2	—	C	50/11
28F/8011811	AGS.1118/B	CONE, tee	1	—	C	50/18
28F/9463543	AGS.1120/1	CONE, tee	2	—	C	50/30
28F/11018	AGS.1159/B or	CONE, cap	2	—	C	50/13
28F/1013959	AGS.1236/B	CONE, union	1	—	C	50/36
28F/9129085	AGS.1102/A	COUPLING, special, pipe tee at forward bomb bay door jack	2	—	C	50/22
806	E.A1.73.177	FAIRLEAD, between frames 14 and 15	1	—	C	50/33
7764	E.A3.73.593	Attaching parts for E.A3.73.593:—	1	—	C	50/31
28D/1010030	A25/7C	Bolt, 2 BA hex. head	1	—	C	50/32
28D/9140645	A25/10C	Bolt, 2 BA hex. head	1	—	C	50/32
R 1987	E.A1.73.339 or E.A3.73.1303	PIPE, assembly, from nosewheel selector seal tee to pressure reducing valve	1	DTD323	C	50/26
R 1988	E.A1.73.343 or E.A3.73.1305	PIPE, assembly, from thermal relief valve tee to selector nosewheel 'up' connection	1	DTD323	C	50/29
R 1989	E.A1.73.345 or E.A3.73.1307	PIPE, assembly, from thermal relief valve tee to selector, nosewheel 'down' connection	1	DTD323	C	50/28
808	E.A1.73.347	PIPE, assembly, from thermal relief valve to selector, nosewheel 'up' supply line	1	DTD323	C	50/19
809	E.A1.73.349	PIPE, assembly, from thermal relief valve to selector, nosewheel 'down' supply line	1	DTD323	C	50/27
1990	E.A1.73.351	PIPE, assembly, from thermal relief valve tee to forward bomb door jack, open position	1	DTD323	C	50/21
1991	E.A1.73.353	PIPE, assembly, from thermal relief valve tee to forward bomb door jack, closed position	1	DTD323	C	50/7
810	E.A1.73.355	PIPE, assembly, from forward bomb door jack 'open' line thermal relief valve to tee piece	1	DTD323	C	50/8
811	E.A1.73.357	PIPE, assembly, from forward bomb door jack closed line thermal relief valve to tee piece	1	DTD323	C	50/9
R 813	E.A1.73.361 or E.A3.73.1309	PIPE, assembly, from 4-way connection to undercarriage selector tee in reservoir return line	1	L56	C	50/15
814	E.A1.73.363	PIPE, assembly, from undercarriage 'down' thermal relief valve to junction tee	1	DTD323	C	50/24
815	E.A1.73.365	PIPE, assembly, from undercarriage 'up' thermal relief valve to junction tee	1	DTD323	C	50/17
816	E.A1.73.367	PIPE, assembly, from undercarriage thermal relief valve tee to 4-way connection	1	DTD323	C	50/16
817	E.A1.73.369	PIPE, assembly, from forward bomb door jack thermal relief valve inter-connection	1	DTD323	C	50/23
818	E.A1.73.371	PIPE, assembly, from forward bomb door jack thermal relief valve connection tee to thermal relief valve, doors 'closed' line	1	DTD323	C	50/10

Restricted

A.P.101B-0417-3A

Page NAA11

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
819	E.A1.73.373	PIPE, assembly, from 4-way connection to forward bomb door jack thermal relief valve tee							1	DTD323	C	50/12
1992	E.A1.73.375	PIPE, assembly, from tee at frame 15 to running coupling at frame 12, reservoir action line							1	L56	C	50/6
5950	E.A3.73.777	PIPE, assembly, from coupling forward of frame 15 to relay gauge							1	DTD323	C	50/37
28F/4051705	AGS.1125/1	UNION, piece, 4-way							1	—	C	50/14
5259	EEAS.21/2ERH	WASHER, 'D'							18	L72	C	50/1
	EEAS.237/17CH	WASHER, 'D'							9	—	C	
	EEAS.239/1CH	WASHER, 'D'							2	—	C	
	EEAS.239/2CH	WASHER, 'D'							1	—	C	
	—	PIPES, HYDRAULIC, BETWEEN FRAMES 15 AND 16 STARBOARD, ASSEMBLY (E.A3.73.393)							—	—	—	51/11
		Spares for:—										
2446	E.A3.73.221	BRACKET, relay valve mounting							1	T45	C	51/4
28D/9140647	A25/14C	Attaching parts for E.A3.73.221:—										
28M/1278190	AGS.2001/C/1	Bolt, 2 BA hex. head							2	—	C	51/3
		Nut, stiff, 2 BA							2	—	C	51/5
5348	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d bonding							1	L72	C	51/13
	or											
5K/4345977	AS.4526/3	Attaching parts for EEAS.143/8H:—										
28D/1010658	A25/1B	Bolt, 4 BA hex. head							1	—	C	51/12
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA							1	—	C	51/15
5259	EEAS.21/2ERH	Washer, 'D'							1	—	C	51/14
5544	EEAS.143/21H	CLIP, pipe, single, 1/2" o/d bonding							3	L72	C	51/10
5521	EEAS.143/24H	CLIP, pipe, single, 3/4" o/d bonding							2	L72	C	51/6
	or											
5K/4345978	AS.4526/8	Attaching parts for EEAS.143/21H and EEAS.143/24H:—										
28D/9436920	A25/2C	Bolt, 2 BA hex. head							1	—	C	51/1
28D/9133012	A25/3C	Bolt, 2 BA hex. head							1	—	C	51/2
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							1	—	C	51/8
5259	EEAS.21/2ERH	Washer, 'D'							1	L72	—	51/7
15145	E.B6.73.139	PIPE, assembly, from tee cone forward of frame 15 to non-return valve between frames 15 and 16, bomb doors return line							1	L56	C	51/9
	EEAS.237/17CH	WASHER, 'D'							9	—	C	
	EEAS.239/1CH	WASHER, 'D'							2	—	C	
	EEAS.239/2CH	WASHER, 'D'							1	—	C	
	—	PIPES, HYDRAULIC, BETWEEN FRAMES 27 AND 28, ASSEMBLY (E.A3.73.395)							—	—	—	51/23
		Spares for:—										
5258	EEAS.143/6H	CLIP, pipe, single, 1/4" o/d bonding							12	L72	C	51/18
	or											
5K/4345976	AS.4526/4	Attaching parts for EEAS.143/6H:—										
28D/1010658	A25/1B	Bolt, 4 BA hex. head							1	—	C	51/16
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA							1	—	C	51/20
28W/9419474	SP15/B	Washer, 4 BA plain							1	—	C	51/17
5259	EEAS.21/2ERH	Washer, 'D'							1	L72	C	51/19
	or											
	EEAS.237/17CH											
28F/9011811	AGS.1118/1B	CONE, tee							2	—	C	51/22
828	E.A1.73.205	FAIRLEAD, at pipe entry to wing forward frame 28, flaps 'up' and 'down', port and starboard							2	LFS21	C	51/26
		Attaching parts for E.A1.73.205:—										
28D/9133012	A25/3C	Bolt, 2 BA hex. head							8	—	C	51/31
28M/13324	A29/CP	Nut, 2 BA plain							8	—	C	51/28
28W/9419475	SP15/C	Washer, 2 BA plain							8	—	C	51/30
28W/1007983	AGS.162/C	Washer, 2 BA spring							8	—	C	51/29

Restricted

Page NAA12

SERVICES
HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
2003	E.A3.73.513 or E.A3.73.1345	PIPE, assembly, from flaps 'down' supply line tee to running coupling between wing ribs 1 and 2, starboard							1	DTD323	C	51/21
2004	E.A3.75.515 or E.A3.73.1347	PIPE, assembly, from flaps 'down' supply line tee to running coupling between wing ribs 1 and 2, port							1	DTD323	C	51/24
2005	E.A3.73.517 or E.A3.73.1349	PIPE, assembly, from flaps 'up' supply line tee to running coupling between wing ribs 1 and 2, starboard							1	DTD323	C	51/27
2006	E.A3.73.519 or E.A3.73.1351	PIPE, assembly, from flaps 'up' supply line tee to running coupling between wing ribs 1 and 2, port							1	DTD323	C	51/25
	—	PIPES, HYDRAULIC, BETWEEN FRAMES 16 AND 17, PORT AND STARBOARD, ASSEMBLY (E.A3.73.397) Spares for:—							—	—	—	52/35
5522	EEAS.91/3H	CLIP, pipe, double, 3/8" o/d bonding							1	L72	C	52/45
28D/9133012	A25/3C	Attaching parts for EEAS.91/3H:—							1	—	C	52/44
28M/1278190	AGS.2001/C/1	Bolt, 2 BA hex. head							1	—	C	52/47
5259	EEAS.21/2ERH or EEAS.237/17CH	Nut, stiff, 2 BA							1	L72	C	52/46
		Washer, 'D'							1	L72	C	52/46
5348	EEAS.143/8H or 5K/4345977	CLIP, pipe, single, 3/8" o/d bonding							10	L72	C	52/37
		Attaching parts for EEAS.143/8H:—							1	—	C	52/36
28D/9419542	A25/3B	Bolt, 4 BA hex. head							1	—	C	52/39
28M/1278190	AGS.2001/B/1	Nut, stiff, 4 BA							1	—	C	52/38
5259	EEAS.21/2ERH or EEAS.239/1CH	Washer, 'D'							1	L72	C	52/41
5543	EEAS.143/10H or 5K/4345978	CLIP, pipe, single, 1/2" o/d, bonding							1	L72	C	52/41
		Attaching parts for EEAS.143/10H:—							1	—	C	52/40
28D/9419452	A25/3B	Bolt, 4 BA hex. head							1	—	C	52/43
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA							1	—	C	52/42
5259	EEAS.21/2ERH or EEAS.239/2CH	Washer, 'D'							1	L72	C	52/49
5523	EEAS.143/23H or 5K/4345979	CLIP, pipe, single, 3/8" o/d bonding							1	L72	C	52/48
		Attaching parts for EEAS.143/23H:—							1	—	C	52/51
28D/9436920	A25/1C	Bolt, 2 BA hex. head							1	—	C	52/50
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							1	L72	C	52/50
5259	EEAS.21/2ERH	Washer, 'D'							1	L72	C	52/50
5259	EEAS.21/2ERH	Washer, 'D' (as required)							1	L72	C	52/11
28F/9476144	AGS.1118/C	CONE, tee							3	—	C	52/24
28F/9489323	AGS.1120/10	CONE, tee							1	—	C	52/29
30965	E.A3.73.915	COUPLING, special							3	S91	C	52/11

Restricted

A.P.101B-0417-3A

SERVICES

Page NAA13

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
789	E.A3.73.53	FAIRLEAD, for suction and pressure pipes at frame 16						1	LFS21	C	52/8
288/9133012	A25/3C	Attaching parts for E.A3.75.53:—						6	—	C	52/7
28M/13324	A29/CP	Bolt, 2 BA hex. head						6	—	C	52/5
28W/1007983	AGS.162/C	Nut, 2 BA plain						6	—	C	52/8
		Washer, 2 BA spring						6	—	C	52/8
795	E.A1.73.255	FAIRLEAD, on fuselage for pipe entry to wing						1	LFS26	C	52/4
288/9133012	A25/3C	Attaching parts for E.A1.73.255:—						6	—	C	52/3
28M/13324	A29/CP	Bolt, 2 BA hex. head						6	—	C	52/1
28W/1007983	AGS.162/C	Nut, 2 BA plain						6	—	C	52/2
		Washer, 2 BA spring						6	—	C	52/2
28F/9439897	AGS.1142/E	NIPPLE, adaptor						8	—	C	52/12
28F/8011897	AGS.1142/F	NIPPLE, adaptor						2	—	C	52/31
5952	E.B6.73.75	PIPE, assembly, from ground/flight selector to						1	—	C	52/27
		bomb door selector, pressure line									
12050	E.B6.73.141	PIPE, assembly, from cut-out valve tee to relay gauge						1	L56	C	52/26
		non-return valve between frames 15 and 16									
		return line									
16508	E.B6.73.143	PIPE, assembly, from ground/flight selector and						1	DTD323	C	52/22
		non-return valve tee to relay gauge tee									
792	E.A3.73.375	PIPE, assembly, between running couplings aft of						1	L56	C	52/18
		frame 16, engine driven pump suction line									
793	E.A3.73.379	PIPE, assembly, from coupling aft of frame 16 to						1	L56	C	52/34
		running coupling in port engine driven									
		pump, suction line									
794	E.A3.73.383	PIPE, assembly, from engine pump suction line tee						1	L56	C	52/33
		to coupling at frame 16									
801	E.A3.73.499	PIPE, assembly, from engine driven pump supply						1	L56	C	52/13
		tee to running joint aft of frame 16,									
		starboard pump suction line									
802	E.A3.73.501	PIPE, assembly, from running coupling aft of frame						1	L56	C	52/20
		16 to running coupling at starboard wing									
		rib 1, engine driven pump suction line									
798	E.A3.73.507	PIPE, assembly, from cut-out valve running coupling						1	L56	C	52/14
		to junction tee in reservoir return line									
21853	E.A9.73.649	PIPE, assembly, from engine driven pump tee						1	L56	C	52/30
		connection in suction line to									
		connection at frame 13									
3661	E.A3.73.703	PIPE, assembly, from junction tee in pressure line						1	DTD323	C	52/32
		to bomb door selector and non-return									
		valve tee									
3663	E.A3.73.705	PIPE, assembly, from bomb door selector tee to						1	DTD323	C	52/28
		selector and non-return valve, pressure									
		line									
5959	E.A3.73.779	PIPE, assembly, from ground/flight switch to relay						1	DTD323	C	52/25
		gauge tee									
5960	E.A3.73.811	PIPE, assembly, from ground/flight switch tee to relay						1	DTD323	C	52/23
		gauge									

Restricted

Page NAA14

SERVICES
HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
25207	E.A3.73.889	PIPE, assembly, between non-return valve and ... junction tee for bomb door and flaps selectors, return line	1	DTD323	C	52/10
30956	E.A3.73.891	PIPE, assembly, from running coupling in port wing to running coupling aft of frame 16, engine driven pump delivery line	1	DTD743	C	52/19
30958	E.A3.73.909	PIPE, assembly, between running coupling aft of frame 16 and coupling at rib 1 in starboard wing leading edge, engine driven pump delivery line	1	DTD743	C	52/9
30957	E.A3.73.911	PIPE, assembly, between running couplings aft of frame 16 in port engine driven pump delivery line	1	DTD374	C	52/16
30955	E.A3.73.913	PIPE, assembly, between running couplings aft of frame 16 in port wing engine driven pump delivery line	1	DTD743	C	52/17
803	E.A1.73.249	TEE, special, pipe, coupling in engine driven pump suction line	1	L40	C	52/15
28F/4051569	AGS.1103/E	UNION, body	3	—	C	52/21
	—	PIPES, HYDRAULIC, BETWEEN FRAMES 17 AND 18, PORT, ASSEMBLY (E.A3.73.403) Spares for:—	—	—	—	53/5
5348	EEAS.143/8H or	CLIP, pipe, single, 3/8" o/d bonding	2	L72	C	53/2
R 5K/4345977	AS.4526/6	Attaching parts for EEAS.143/8H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	2	—	C	53/1
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	2	—	C	53/4
5259	EEAS.21/2ERH or	Washer, 'D'	3	L72	C	53/3
R 28F/9140971	EEAS.237/7CH AGS.1104/C	CONE, adaptor	1	—	C	53/7
804	E.A3.73.479	PIPE, assembly, from undercarriage selector tee to undercarriage door jack flexible hose, door 'up' line	1	DTD323	C	53/6
28F/9707340	AGS.1114/C	SLEEVE, screwed, flanged, bulkhead	1	—	C	53/9
28D/9436920	A25/1C	Attaching parts for AGS.1114/C:—				
28M/9403520	A27/CP	Bolt, 2 BA hex. head	3	—	C	53/8
980	EEAS.20/1DR	Nut, 2 BA plain	3	—	C	53/13
28F/4051652	AGS.1115/5	Tab, locking	1	L72	C	53/11
28W/1007983	AGS.162/C	Washer, plate	1	—	C	53/10
		Washer, 2 BA spring	3	—	C	53/12

Restricted

A.P.101B—0417—3A

Page NAA15

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
	—	PIPES, HYDRAULIC, BETWEEN FRAMES 17 AND 18, STARBOARD ASSEMBLY (E.A3.73.404) Spares for:—	—	—	—	53/21
5526	EEAS.91/3	CLIP, pipe double, 3/8" o/d bonding	2	L72	C	53/17
		Attaching parts for EEAS.91/3:—				
28D/9419452	A25/3B	Bolt, 4 BA hex. head	2	—	C	53/23
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	2	—	C	53/26
28W/9419474	SP15/B	Washer, 4 BA plain	1	—	C	53/24
5259	EEAS.21/2ERH or EEAS.237/17CH	Washer, 'D'	2	L72	C	53/25
5348	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d bonding	4	L72	C	53/16
		Attaching parts for EEAS.143/8H:—				
28D/1008149	A25/2B	Bolt, 4 BA hex. head	4	—	C	53/14
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	4	—	C	53/19
28W/9419474	SP15/B	Washer, 4 BA plain	2	—	C	53/15
5259	EEAS.21/2ERH or EEAS.237/17CH	Washer, 'D'	4	L72	C	53/18
28F/9140971	AGS.1104/C	CONE, adaptor	1	—	C	53/27
28F/4051566	AGS.1120/3	CONE, tee	1	—	C	53/20
35752	E.A9.73.741	PIPE, assembly, between tee pieces forward and aft of frame 17, flaps return line	1	L56	C	53/22
28F/9707349	AGS.1114/C	SLEEVE, screwed, flanged, bulkhead	1	—	C	53/29
		Attaching parts for AGS.1114/C:—				
28D/9436920	A25/1C	Bolt, 2 BA hex. head	3	—	C	53/28
28M/9403520	A27/CP	Nut, 2 BA plain	3	—	C	53/33
980	EEAS.20/1DR	Tab, locking	1	L72	C	53/31
28F/4051652	AGS.1115/5	Washer, plate	1	—	C	53/30
28W/1007983	AGS.162/C	Washer, 2 BA spring	3	—	C	53/32
	—	PIPES, HYDRAULIC, BETWEEN FRAMES 18 AND 19, ASSEMBLY (E.A3.73.405) Spares for:—	—	—	—	54/16
805	E.A1.73.175	CLIP, special, pressure relief valve	2	—	C	54/25
		Attaching parts for E.A1.73.175:—				
28D/9435710	A25/11C	Bolt, 2 BA hex. head	1	—	C	54/23
28D/9419397	A25/12C	Bolt, 2 BA hex. head	1	—	C	54/24
28M/9403520	A27/CP	Nut, 2 BA plain	2	—	C	54/29
28W/1007983	AGS.162/C	Washer, 2 BA spring	2	—	C	54/28
829	E.A1.73.181	CLIP, special, thermal relief valve	1	—	C	54/38
		Attaching parts for E.A1.73.181:—				
28D/9435710	A25/11C	Bolt, 2 BA hex. head	2	—	C	54/37
28M/9403520	A27/CP	Nut, 2 BA plain	2	—	C	54/40
28W/1007983	AGS.162/C	Washer, 2 BA spring	2	—	C	54/39
4965	EEAS.143/5 or 5K/6323922	CLIP, pipe, single, 3/16" o/d bonding	4	L72	C	54/3
		Attaching parts for EEAS.143/5:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	54/4
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	54/7
28W/9419474	SP15/B	Washer, 4 BA plain	1	—	C	54/5
5259	EEAS.21/2ER or EEAS.237/17CH	Washer, 'D'	1	L72	C	54/6

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
5258	EEAS.143/6H or 5K/4345976	CLIP, pipe, single, 1/4" o/d bonding						2	L72	C	54/8
28D/1010658	A25/1B	Attaching parts for EEAS.143/6H:— Bolt, 4 BA hex. head						1	—	C	54/9
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						1	—	C	54/11
5259	EEAS.21/2ER	Washer, 'D'						1	L72	C	54/10
5348	EEAS.143/8H or 5K/4345977	CLIP, pipe, single, 3/8" o/d bonding						6	L72	C	54/17
28D/1010658	A25/1B	Attaching parts for EEAS.143/8H:— Bolt, 4 BA hex. head						1	—	C	54/20
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA						1	—	C	54/22
5259	EEAS.21/2ER	Washer, 'D'						1	L72	C	54/21
28F/8011811	AGS.1118/B	CONE, tee						1	—	C	54/26
28F/9463543	AGS.1120/1	CONE, tee						1	—	C	54/31
28F/9710	AGS.1107/E	CONE, union						2	—	C	54/14
28F/8011885	AGS.1142/B	NIPPLE, adaptor						1	—	C	54/41
820	E.A3.73.443 or E.A3.73.1319	PIPE, assembly, from running coupling aft of frame 18 to restrictor valve, wing flaps 'down' line						1	DTD323	C	54/13
821	E.A3.73.445 or E.A3.73.1321	PIPE, assembly, from restrictor valve to tee at frame 19, wing flaps 'down' line						1	DTD323	C	54/27
1997	E.A3.73.447 or E.A3.73.1323	PIPE, assembly, from restrictor and pressure reducing valve tee at frame 19 to flap operating jack supply tee						1	DTD323	C	54/19
822	E.A3.73.449 or E.A3.73.1325	PIPE, assembly, from pressure relief valve to tee at frame 19, wing flaps 'down' line						1	DTD323	C	54/18
823	E.A3.73.451 or E.A3.73.1327	PIPE, assembly, from running coupling aft of frame 13 to thermal relief valve tee, flaps 'down' line						1	DTD323	C	54/33
1998	E.A3.73.453 or E.A3.73.1329	PIPE, assembly, from thermal relief valve tee to jack connection pipe tee aft of frame 27, wing flaps 'up' line						1	DTD323	C	54/30
824	E.A3.73.455	PIPE, assembly, from connecting tee in wing flaps 'up' line to thermal relief valve						1	DTD323	C	54/32
4518	E.A3.73.657 or E.A3.73.1331	PIPE, assembly, from air brake selector and air brake thermal-relief valve 4-way coupling forward of frame 19 to reducing coupling forward of frame 20, port return line						1	L56	C	54/1
4520	E.A3.73.659 or E.A3.73.1333	PIPE, assembly, from pressure relief valve to thermal relief valve tee, wing flaps 'down' line						1	L56	C	54/12
4521	E.A3.73.661 or E.A3.73.1335	PIPE, assembly, from pressure relief valve and relief valve tee to flap selector tee, reservoir return line						1	L56	C	54/36
4517	E.A3.73.663	PIPE, assembly, from pressure relief valve 4-way coupling to thermal relief valve						1	DTD323	C	54/34
4519	E.A3.73.665	PIPE, assembly, from pressure relief valve 4-way coupling to running coupling forward of frame 20, starboard return line						1	DTD323	C	54/35
28F/4051705	AGS.1125/1	UNION, piece						1	—	C	54/15
28F/9489760	AGS.1125/4	UNION, piece						1	—	C	54/2

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
—	. PIPES, HYDRAULIC AND MOUNTING OF ROTARY CONTROL VALVE AND ACTUATOR, FOR AIR BRAKES ASSEMBLY (EA3.73.409) Spares for:—						—	—	55/39
E.E. CO. B'FORD Type 217, Mk. 1	. . ACTUATOR AND HYDRAULIC VALVE FOR AIR BRAKES, ASSEMBLY Consisting of:—						1	—	55/24
AED200152	. . . ACTUATOR, Type 200, Mk.1						1	—	55/23
5W4489234	. . . BRACKET, mounting, c/w label						1	—	55/27
DOWTY ROTOL C408Y/MKL	. . . VALVE						1	—	55/28
30A9437135	. . . WIRE, locking, 22 SWG Attaching parts for Type 217, Mk.1:—						QR	—	55/29
A25/17C	. . Bolt, 2 BA hex. head						2	—	55/30
A27/CP	. . Nut, 2 BA plain						2	—	55/34
AS2811/5/149	. . Tube, distance						2	L62	55/31
SP15/C	. . Washer, 2 BA plain						2	—	55/32
AGS162/C	. . Washer, 2 BA spring						2	—	55/33
EA1.73.181	. . CLIP, special, for thermal relief valve mounting at frame 19 Attaching parts for EA1.73.181:—						2	—	55/7
A25/11C	. . Bolt, 2 BA hex. head						4	—	55/8
A27/CP	. . Nut, 2 BA plain						4	—	55/5
AGS162/C	. . Washer, 2 BA spring						4	—	55/6
EEAS143/5H or AS4526/3	. . CLIP, pipe, single, 3/16" o/d bonding Attaching parts for EEAS143/5H:—						5	L72	55/19
A25/1B	. . Bolt, 4 BA hex. head						1	—	55/18
AGS2001/B/1	. . Nut, stiff, 4 BA						1	—	55/21
EEAS21/2/ERH or EEAS237/17/CH	. . Washer, 'D'						1	L72	55/20
EEAS143/6H or AS4526/4	. . CLIP, pipe, single 1/4" o/d bonding Attaching parts for EEAS143/6H:—						2	L72	55/2
A25/1B	. . Bolt, 4 BA hex. head						1	—	55/1
AGS2001/B/1	. . Nut, stiff, 4 BA						1	—	55/4
EEAS21/2ERH or EEAS237/17CH	. . Washer, 'D'						1	L72	55/3
EEAS143/8H or AS4526/6	. . CLIP, pipe, single, 3/8" o/d bonding Attaching parts for EEAS143/8H:—						9	L72	55/36
A25/1B	. . Bolt, 4 BA hex. head						1	—	55/35
AGS2001/B/1	. . Nut, stiff, 4 BA						1	—	55/38
EEAS21/2ERH or EEAS237/17CH	. . Washer, 'D'						1	L72	55/37
AGS1120/6	. . CONE, tee						1	—	55/12
AGS1102/A	. . CONE, union						1	—	55/14
AGS1107/A	. . CONE, union						1	—	55/40
EB6.73.147	. . PIPE, assembly, from air brake actuator connection to flow divider and thermal relief valve tee, return line						1	DTD323	55/25

SERVICES

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.73.467	. . PIPE, assembly, from air brake selector to 4-way piece forward of frame 19, return line	1	L56	55/9
EA3.73.469 or EA3.73.1337	. . PIPE, assembly, from air brake thermal relief valve 4-way piece forward of frame 19, return line	1	DTD323	55/10
EA3.73.471	. . PIPE, assembly, from thermal relief valve to junction tee aft of frame, return line	1	DTD323	55/11
EA3.73.473	. . PIPE, assembly, from thermal relief valve to coupling tee in return line	1	DTD323	55/13
EA3.73.475	. . PIPE, assembly, from air brake selector tee to thermal relief valve in reservoir return line	1	DTD323	55/16
EB6.73.117	. . PIPE, assembly, transverse, from coupling at centre line of aircraft to coupling forward of frame 20, starboard, undercarriage 'down' line	1	DTD323	55/15
EB6.73.119	. . PIPE, assembly, transverse, from undercarriage actuator tee to mounting coupling at centre line of aircraft, undercarriage 'down' line	1	DTD323	55/17
EB6.73.135	. . PIPE, assembly, from air brake actuator to solenoid operated valve and non-return valve tee forward of main spar, pressure line	1	DTD323	55/26
EB6.73.137	. . PIPE, assembly, from air brake thermal relief valve to junction tee forward of main spar, return line	1	DTD323	55/22
—	. PIPES, HYDRAULIC, AIR BRAKE, BETWEEN FRAMES 21 AND 23, ASSEMBLY (EA3.73.485) Spares for:—	—	—	56/8
EEAS143/6H or AS4526/4	. . CLIP, pipe, single, 1/4" o/d bonding	17	L72	56/11
	Attaching parts for EEAS143/6H:—			
A25/1B	. . Bolt, 4 BA hex. head	1	—	56/9
AGS2001/B/1	. . Nut, stiff, 4 BA	1	—	56/13
EEAS21/2ERH or EEAS237/17CH	. . Washer, 'D'	1	L72	56/12
EEAS143/8H or AS4526/6	. . CLIP, pipe, single, 3/8" o/d bonding	4	L72	56/18
	Attaching parts for EEAS143/8H			
A25/1B	. . Bolt, 4 BA hex. head	1	—	56/19
A25/2B	. . Bolt, 4 BA hex. head	1	—	56/20
AGS2001/B/1	. . Nut, stiff, 4 BA	1	—	56/23
EEAS21/2ERH or EEAS237/17CH SP15/B	. . Washer, 'D'	1	L72	56/22
	. . Washer, 4 BA plain	1	—	56/21
AGS1104/B	. . CONE, adapter	4	—	56/16
AGS1104/C	. . CONE, adapter	2	—	56/26
AGS1111/B	. . CONE, union body, flanged bulkhead	4	—	56/28
	Attaching parts for AGS1111/B:—			
A25/1B	. . Bolt, 4 BA hex. head	24	—	56/17
A27/BP	. . Nut, 4 BA plain	24	—	56/31
EEAS20/2DR	. . Tab, locking	8	L72	56/27
AGS1115/2	. . Washer, plate	4	—	56/29
AGS162/B	. . Washer, spring	24	—	56/30

A.P.101B-0417-3A

SERVICES

Page NAA19

HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
853	E.A3.73.489 or E.A3.73.1353	PIPE, assembly, from flow divider to first running coupling, air brake 'on' line, port, forward of frame 22	1	DTD323	C	56/24
854	E.A3.73.491 or E.A3.73.1355	PIPE, assembly, from flow divider to first running coupling, air brake 'off' line, port, forward of frame 22	1	DTD323	C	56/25
2001	E.A3.73.493 or E.A3.73.1357	PIPE, assembly, from flow divider to first running coupling, air brake 'on' line, starboard, forward of frame 22	1	DTD323	C	56/14
2002	E.A3.73.495 or E.A3.73.1359	PIPE, assembly, from flow divider to first running coupling, air brake 'off' line, starboard, forward of frame 22	1	DTD323	C	56/15
	E.A1.73.113	SELECTOR, NOSEWHEEL GROUND, ASSEMBLY Spares for:—	—	—	—	56/5
3414	E.A1.73.395	BRACKET, nosewheel selector mounting Attaching parts for E.A1.73.395:—	1	L72	C	56/1
28D/9436920	A25/1C	Bolt, 2 BA hex. head	5	—	C	56/2
28D/9133011	A25/2C	Bolt, 2 BA hex. head	1	—	C	56/6
28M/9403520	A27/CP	Nut, 2 BA plain	7	—	C	56/4
28W/9416643	SP47/C	Washer, 2 BA spring	6	—	C	56/3
3506	E.A1.73.391	LEVER, GROUND SELECTOR, NOSEWHEEL, GROUP Spares for:—	1	—	C	56/10
858	E.A1.73.233	SPRING, tension, 20 SWG	1	—	C	56/7

•

•

•

•

•

•

AP101B-0417-3A

Page NAB1

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	HYDRAULIC EQUIPMENT IN FRONT FUSELAGE ASSEMBLY (EG7.73.37)	-	-	57/24
-	Spares for:	-	-	
-	COMPONENTS, HYDRAULIC EQUIPMENT CIRCUIT, ASSEMBLY (EA3.73.201)	-	-	57/25
-	Spares for:	-	-	
LOCKHEED				
AIR40016	 ACCUMULATOR, hydraulic	1	-	57/18
10069 N & Z	 GAUGE, pressure	2	-	57/16
or				
SIS3592	 GAUGE, pressure, Mk 14LL	2	-	
DOWTY				
0.8214Y/CO.1	 JACK, nosewheel	1	-	59/32
DOWTY ROTOL				
0.8246Y/CO.1	 JACK, nosewheel door	1	-	59/35
R 4/W14/DAS7005/11-2	 PIPE, flexible, nosewheel door 'closed' (Mod 5190) (Pre-Mod 5503)	1	-	59/37
R 4W14-261-8-8-11.2	 PIPE, flexible, nosewheel door 'closed' (Mod 5503)	1	-	
R 4/W14/DAS7006/10	 PIPE, flexible, nosewheel door 'open' (Mod 5190) (Pre-Mod 5503)	1	-	59/36
R 4W14-261-8-9-10.0	 PIPE, flexible, nosewheel door 'open' (Mod 5503)	1	-	
R 4/W14/DAS7006/15.0	 PIPE, flexible, nosewheel 'up' line (Mod 5190) (Pre-Mod 5503)	1	-	59/17
R 4W14-261-8-8-15.0	 PIPE, flexible, nosewheel 'up' line (Mod 5503)	1	-	
R 4/W14/DAS7006/24	 PIPE, flexible, nosewheel 'down' line (Mod 5190) (Pre-Mod 5503)	1	-	59/33
R 4W14-261-8-9-24.0	 PIPE, flexible, nosewheel 'down' line (Mod 5503)	1	-	59/33A
77/C.1275	 PUMP, hand, 'duplex'	1	-	57/23
ELECTRO				
HYD's				
7391	 RELAY, HYDRAULIC PRESSURE GAUGE, ASSEMBLY	1	-	57/20
	Consisting of:			
9913	 ADAPTOR, outlet to gauge	1	-	57/7
9938	 ADAPTOR, hydraulic supply inlet	1	-	57/1
73082	 BODY	1	DTD130B	57/8
30M/36X4	 CIRCLIP, nut to body	1	-	57/12
73081	 CYLINDER	1	S1	57/10
73039	 NUT, cylinder to body	1	-	57/13
73083	 PISTON	1	L64	57/11
40044	 PLUG, bleed	1	-	57/9
7379	 RESTRICTOR	1	-	57/3
739112	 RING, piston	1	-	57/4
739113	 RING, piston	1	-	57/5
739114	 RING, sealing, cylinder to body	1	-	57/6
2M/14X10	 WASHER, at adaptors and restrictor	3	-	57/2
30A/9606751	 WIRE, locking	QR	-	57/14

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Mati. Spec.	Plate No.
	1 2 3 4 5 6			
R DOWTY ROTOL C2254Y	. . UNIT, oil filter	1	—	57/19
R DUNLOP AC61762	. . VALVE, brake control	1	—	57/22
R DOWTY ROTOL 401Y/MK.G	. . VALVE, sequence, nosewheel	1	—	59/25
R DOWTY ROTOL 401Y/MK.H	. . VALVE, sequence, nosewheel door	1	—	59/9
R DOWTY ROTOL D2568Y	. . VALVE, pressure relief, reservoir (For spares breakdown see AP.4515B, Vol.3)	1	—	57/15
R DOWTY ROTOL C4603Y/MK.E	. . VALVE, thermal relief	2	—	59/39
R DOWTY ROTOL 8557	. . VALVE, non-return, pressurisation	1	—	57/17
R LOCKHEED UMC704	. . VALVE, non-return, 1/4" BSP	2	—	57/26
R H.P. COMP'S A58	. . VALVE, inflation	2	—	57/21
—	PIPES, HYDRAULIC RESERVOIR TO FRAME 12 AND PRESSURE BULKHEAD, ASSEMBLY (EG7.73.21) & (EA3.73.47) Spares for:	—	—	58/37
EA2.73.507	. . BOX, oil collector	1	—	58/27
AGS2081/3	. . CLIP, pipe, single, 3/16" o/d	3	—	58/17
EEAS143/5H	. . CLIP, pipe, single, 3/16" o/d bonding	2	L72	58/16
EEAS143/6	. . CLIP, pipe, single, 1/4" o/d	7	L72	58/15
EEAS143/8H	. . CLIP, pipe, single, 3/8" o/d bonding	2	L72	58/4
EEAS143/19H	. . CLIP, pipe, single, 3/8" o/d bonding	2	L72	58/5
EEAS143/21H	. . CLIP, pipe, single, 1/2" o/d bonding	10	L72	58/2
EEAS143/24H	. . CLIP, pipe, 3/4" o/d, bonding	9	L72	58/6
R AS4526/3	. . CLIP	5	—	
AS4526/4	. . CLIP	4	—	
AS4526/6	. . CLIP	3	—	
AS4526/8	. . CLIP	4	—	
AS4526/12	. . CLIP	4	—	
EA3.73.727	. . COUPLING, tee, 1/2" x 1/2" x 3/16" (Alternative to AGS1120/13)	1	—	58/24
EA3.73.313	. . ELBOW, assembly (Mod.3390)	1	—	58/13
EA1.73.225	. . FAIRLEAD, nose bay compartment floor Attaching parts for EA1.73.225:	1	—	58/34
A25/2C	. . Bolt, 2BA hex. head	4	—	58/33
A27/CP	. . Nut, 2BA plain	4	—	58/36
AGS162/C	. . Washer, spring	4	—	58/35
EA1.73.239	. . FILTER, CABIN BLOWER NON-RETURN VALVE, GROUP Consisting of:	1	—	58/7
EA1.73.241	. . . BODY, filter	1	L40	58/10
AGS2030/6	. . . CIRCLIP, internal	1	—	58/8
EA1.73.243	. . . GAUZE, 200 mesh	1	Brass	58/9
EEAS69/2	. . GASKET, sealing, flanged sleeve at filter connection	1	Neo-K-Tex	58/12

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.73.841	. . PACKING, pipe clip attachment	2	-	58/31
EA3.10.3245	. . PACKING, at collector box	1	-	58/32
EG7.73.23	. . PIPE, assembly, from reservoir coupling to elbow pipe coupling forward of frame 12, engine driven pump suction line	1	L56	58/23
EG7.73.25	. . PIPE, assembly, from reservoir coupling to return line tee forward of frame 12, return line	1	L56	58/22
EG7.73.29	. . PIPE, elbow, assembly, 3/4" BSP, between pipe and bulkhead connector forward of frame 12, suction line	1	L56	58/29
EG7.73.31	. . PIPE, elbow, assembly, 1/2" BSP, between return line tee and bulkhead connector forward of frame 12, return line	1	L56	58/30
EA3.73.675 or EA3.73.1271	. . PIPE, assembly, from tee to oil collector box under nose bay compartment floor, overflow line	1	L56	58/26
EA3.73.47C or EA3.73.1071	. . PIPE, assembly, from hydraulic reservoir to first running joint in hand pump suction line	1	L56	58/28
EA3.73.47D or EA3.73.1073 or EA3.73.1273	. . PIPE, assembly, from hydraulic reservoir to tee piece, overflow line	1	L56	58/18
EA3.73.47E or EA3.73.1075 or EA3.73.1275	. . PIPE, assembly, from pressure relief valve to tee piece, overflow line	1	L56	58/19
EA3.73.47F or EA3.73.1077 or EA3.73.1277	. . PIPE, assembly, from hydraulic reservoir to pressure relief valve, overflow line	1	L56	58/20
EA3.73.737	. . PIPE, assembly, from cabin blower non-return valve to hydraulic reservoir	1	DTD323	58/21
EG7.73.35	. . PLATE, attachment, pipe clips	4	L72	58/1
EEAS20/1/DR	. . TAB, locking	6	L72	58/25
EEAS20/2/DR	. . TAB, locking	3	L72	58/11
EEAS21/2/ERH	. . WASHER, 'D' bonding clip attachment	15	L72	58/14
EEAS21/9/ERH	. . WASHER, 'D' bonding clip attachment	17	L72	58/3
EEAS239/1CH	. . WASHER, 'D'	4	-	-
EEAS239/2CH	. . WASHER, 'D'	4	-	-
EEAS239/17CH	. . WASHER, 'D'	11	-	-
-	. PIPES, HYDRAULIC, IN NOSE-WHEEL BAY, ASSEMBLY (EG7.73.33) & (EA1.73.143) Spares for:—	-	-	58/1
A25/1B	. . BOLT, 4BA (As required)	1	-	59/1A
A25/14C	. . BOLT, 2BA (As required)	1	-	59/8A
A25/1C	. . BOLT, 2BA (As required)	1	-	59/8D
EB6.73.249	. . BRACKET, thermal relief valve	1	-	59/6
EA3.73.765	. . BRACKET, TR valve (Pre-Mod 735)	1	-	59/7
EEAS91/1	. . CLIP, pipe, double, 1/4" o/d	2	L72	59/23
EEAS143/1H	. . CLIP, pipe, 3/16" o/d bonding	4	L72	59/22
EEAS143/2H	. . CLIP, pipe, 1/4" o/d bonding	2	L72	59/3
EEAS143/5	. . CLIP, pipe, 3/16" o/d	9	L72	59/40
EEAS143/6H	. . CLIP, pipe, 1/4" o/d bonding	2	L72	59/27
EA3.73.1461	. . CLIP, pipe assembly (Mod 5190) (Pre-Mod 5503)	2	-	59/8
EA3.73.1493	. . CLIP, hose (Mod 5503)	2	-	59/49
	Attaching parts:—			
A25/12C	. . Bolt, 2BA	2	-	59/50
A27CP	. . Nut, 2BA	2	-	59/51
SP47C	. . Washer, spring, 2BA	2	-	59/52
EA1.73.181	. . CLIP, pipe, special, thermal relief valve	1	-	59/38
EA1.73.213	. . CLIP, pipe, special	1	L72	59/34
AS5419/3	. . CLIP	6	-	59/44
AS4526/3	. . CLIP	4	-	59/43
AS4526/4	. . CLIP	4	-	59/42

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
R EA3.73.1459	. . . CLIP, assembly (Mod 5190) (Pre-Mod 5503)	2	-	59/16
R EA3.73.1491	. . . CLIP, hose (Mod 5503)	2	-	59/45
R A25/17C	. . . Attaching parts:—			
R A27CP	. . . Bolt, 2BA	2	-	59/46
R SP47C	. . . Nut, 2BA	2	-	59/47
EB6.73.251	. . . Washer, spring, 2BA	2	-	59/48
EA3.73.773	. . . CLIP, TR valve	1	-	59/14
EA1.71.111	. . . CLIP, pipe, special, double, 1/4" o/d	2	L72	59/12
	. . . FAIRLEAD	1	-	59/4A
	. . . Attaching parts for EA1.71.111			
A25/2B	. . . Bolt, 4BA	4	-	59/4B
AGS2001B1	. . . Nut, 4BA	4	-	59/4C
AGS2001B1	. . . NUT, 4BA (As required)	1	-	59/1B
A27CP	. . . NUT, 2BA (As required)	1	-	59/8B
EG7.73.27	. . . PIPE, assembly, from connection to return line tee forward of frame 12, return line	1	DTD323	59/4
EA3.73.667	. . . PIPE, assembly, from nosewheel jack thermal relief valve to nosewheel door jack thermal relief valve and return line tee	1	DTD323	59/5
EA3.73.671	. . . PIPE, assembly, from nosewheel door jack thermal relief valve to nosewheel jack thermal relief valve and return line tee	1	DTD323	59/41
EA3.73.673	. . . PIPE, assembly, from sequence valve and nosewheel jack supply tee to thermal relief valve, nosewheel 'up' line	1	DTD323	59/15
EA3.73.741 or EA3.73.1209	. . . PIPE, assembly, from wheel wall running coupling to sequence valve and nosewheel undercarriage jack tee piece, 'down' line	1	DTD323	59/19
EA3.73.423	. . . PIPE, assembly, from wheel well running coupling to sequence valve and nosewheel undercarriage jack tee piece, 'up' line	1	DTD323	59/26
EA3.73.1211	. . . PIPE, assembly, from nosewheel 'up' supply line tee to sequence valve	1	DTD323	59/24
EA3.73.745 or EA3.73.1213	. . . PIPE, assembly, from sequence valve to thermal relief valve and nosewheel undercarriage jack tee 'up' line	1	DTD323	59/21
EA3.73.747	. . . PIPE, assembly, from thermal relief valve and sequence valve tee to nosewheel undercarriage jack 'up' line	1	DTD323	59/18
EA3.73.749 or EA3.73.1217	. . . PIPE, assembly, from nosewheel undercarriage jack supply tee to sequence valve, undercarriage 'down' line	1	DTD323	59/11
EA3.73.753 or EA3.73.1219	. . . PIPE, assembly, from sequence valve to nosewheel door jack thermal relief valve tee, doors 'open' line	1	DTD323	59/10
EA3.73.757 or EA3.73.1223	. . . PIPE, assembly, from sequence valve and nosewheel door jack tee to thermal relief, 'open' line	1	DTD323	59/29
EA3.73.761	. . . PIPE, assembly, from supply line and sequence valve tee piece to nosewheel undercarriage jack flexible coupling door 'closed' line	1	DTD323	59/20
EA3.73.769 or EA3.73.1225	. . . PIPE, assembly, from sequence valve and thermal relief valve tee to nosewheel door jack flexible connection, 'open' line	1	DTD323	59/30
EA3.73.771 or EA3.73.1227	. . . PIPE, assembly, from supply tee to nosewheel undercarriage door jack flexible connection 'down' line	1	DTD323	59/2
EA3.73.835 or EA3.73.1221	. . . UNION, Body	4	-	59/2A
AGS1106B	. . . WASHER, (As required)	1	-	59/8C
SP47C				

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
R	981	EEAS.20/2/DR	TAB, locking					4	L72	C	59/28
	5259	EEAS.21/2/ER/H	WASHER, 'D', for bonding clips					18	L72	C	59/13
	5519	EEAS.21/3/ER/H	WASHER, 'D', for bonding clips					12	L72	C	59/31
		or									
		EEAS.237/17CH									
		—	PIPES, HYDRAULIC, ON FRAME 12, ASSEMBLY (E.G.7.73.61) & (E.A.3.73.217)					—	—	—	60/6
			Spares for:—								
R	5258	EEAS.143/6/H or	CLIP, pipe, single, 1/2" o/d, bonding					18	L72	C	60/3
	5K/4345976	AS.4526/4									
	6101361	E.G.7.73.85 or	PIPE, assembly, from accumulator tee coupling to coupling for pipe through frame 12					1	DTD323	C	60/7
		E.G.7.73.357									
	42635	E.G.7.73.87 or	PIPE, assembly, from accumulator to air pressure gauge and charging valve tee					1	DTD323	C	60/5
		E.G.7.73.359									
	1634	E.A.3.73.227 or	PIPE, assembly, from connecting tee on frame 12 to non-return valve, supply line					1	DTD323	C	60/18
		E.A.3.73.1199									
	1608	E.A.3.73.231 or	PIPE, assembly, from non-return valve to accumulator tee coupling					1	DTD323	C	60/20
		E.A.3.73.1203									
	1610	E.A.3.73.235 or	PIPE, assembly, from non-return valve tee to brake accumulator connection					1	DTD323	C	60/12
		E.A.3.73.1207									
	44403	E.G.7.73.101	PLATE, clipping					1	L72	C	60/1
		AS.2810/4/030	TUBE, distance					1	L62	LM	60/2
	5259	EEAS.21/2/ER/H	WASHER, 'D', for bonding clips					22	L72	C	60/4
		or									
		EEAS.237/17CH									
		—	PIPES, HYDRAULIC BRAKE, FRAMES 1 TO 3, ASSEMBLY (E.G.7.73.89) & (E.A.3.73.207)					—	—	—	61/27
			Spares for:—								
	6734	EEAS.136	BRACKET, pipe clip					2	L72	C	61/9
	2446	E.A.3.73.221	BRACKET, relay valve mounting					1	T45	C	61/2
			Attaching parts for E.A.3.73.221:—								
	28D/9140647	A25/14C	Bolt, 2 BA hex. head					2	—	C	61/3
	28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA					2	—	C	61/5
	28W/9419475	SP15/C	Washer, 2 BA plain					2	—	C	61/4
	1611	E.A.3.73.157	CLAMP, pipe, special					1	—	C	61/38
	1727	E.A.3.73.577	CLAMP, pipe, special					1	—	C	61/36
	1880	EEAS.91/1	CLIP, pipe, double					1	L72	C	61/26
	5260	EEAS.143/5/H	CLIP, pipe, single, 3/16" o/d, bonding					28	L72	C	61/7
	5258	EEAS.143/6/H	CLIP, pipe, single, 1/4" o/d, bonding					1	L72	C	61/37
	5348	EEAS.143/8/H	CLIP, pipe, single, 3/8" o/d, bonding					7	L72	C	61/8
	6905	EEAS.143/19/H	CLIP, pipe, single, 3/8" o/d, bonding					1	L72	C	61/18
R	5K/6323922	AS.4526/3	CLIP					6	—	C	
R	5K/4345976	AS.4526/4	CLIP					1	—	C	
R	5K/4345977	AS.4526/6	CLIP					1	—	C	
R	28E/9130610	AS.5419/3	CLIP					9	—	C	
R	28E/9130685	AS.5419/6	CLIP					1	—	C	
	1438523	E.G.7.73.343	PACKING, for charging valve at frame 1					1	BS2572	C	61/1
	42579	E.G.7.73.93	PIPE, assembly, from relay valve to differential unit tee connection					1	DTD323	C	61/20
	1438538	E.G.7.73.345	PIPE, assembly, from hydraulic pressure gauge to tee piece					1	DTD323	C	61/13
	42581	E.G.7.73.97	PIPE, assembly, from hydraulic pressure gauge tee to coupling aft of frame 1					1	DTD323	C	61/19

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description						No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
610357	E.G7.73.347	PIPE	assembly	from hydraulic pressure gauge tee	to charging valve fitting on frame 1			1	DTD323	C	61/21
42582	E.G7.73.123	PIPE	assembly	from coupling aft of frame 1 to	coupling aft of frame 3, pressure line			1	DTD323	C	61/24
1614	E.A3.73.261 or E.A3.73.1157	PIPE	assembly	from coupling at frame 1 to	different unit, suction line			1	DTD323	C	61/28
1615	E.A3.73.263 or E.A3.73.1159	PIPE	assembly	from differential unit to relay valve	tee connection, pressure line			1	DTD323	C	61/23
1616	E.A3.73.265	PIPE	assembly	from coupling at frame 3 to	coupling at frame 1, suction line			1	DTD323	C	61/30
1617	E.A3.73.267 or E.A3.73.1161	PIPE	assembly	from differential unit to coupling	at frame 3, port brake line			1	DTD323	C	61/29
1438539	E.G7.73.349	PIPE	assembly	from cone tee to brake pressure	gauge			1	DTD5019	C	61/12
42584	E.G7.73.339	PIPE	assembly	from cone tee to relay valve				1	DTD5019	C	61/11
6101356	E.G7.73.341	PIPE	assembly	from cone tee to inflation valve on	frame 1			1	DTD5019	C	61/22
1618	E.A3.73.269 or E.A3.73.1163	PIPE	assembly	from differential unit and relay	valve coupling tee to coupling at frame 3, supply line			1	DTD323	C	61/31
1619	E.A3.73.271 or E.A3.73.1165	PIPE	assembly	from differential unit to coupling	at frame 3, starboard brake line			1	DTD323	C	61/32
981	EEAS.20/2/DR	TAB	locking					3	L72	C	61/10
5259	EEAS.21/2/ER/H or EEAS.237/17CH	WASHER	'D', clip attachment					37	L72	C	61/25
22371	EEAS.21/9/ER/H	WASHER	'D', clip attachment					1	L72	C	61/17
	—	PIPES	HYDRAULIC BRAKE, BETWEEN					—	—	—	60/21
			PRESSURE BULKHEAD AND								
			FRAME 12A, ASSEMBLY								
			(E.G7.73.119) & (E.A3.73.213)								
			Spares for:—								
1520	E.A3.73.195	CLAMP	pipe					4	—	C	60/24
1880	EEAS.91/1	CLIP	pipe, double					2	L72	C	60/25
5260	EEAS.143/5/H	CLIP	pipe bonding					4	L72	C	60/27
17527	EEAS.143/12	CLIP	pipe					5	L72	C	60/26
5K/6323922	AS.4526/3	CLIP						4	—	C	
5K/4345976	AS.4526/4	CLIP						2	—	C	
28E/9130611	AS.5419/4	CLIP						1	—	C	
6101358	E.G7.73.117	PIPE	assembly	from tee to reservoir connection at	N.B.C. compartment floor			1	DTD323	C	60/16
42585	E.G7.73.127 or E.G7.73.351	PIPE	assembly	from coupling at frame 12 to	pressure bulkhead coupling, supply line			1	—	C	60/8
6101360	E.G7.73.335 or E.G7.73.355	PIPE	assembly	from pressure bulkhead coupling to	non-return valve forward of frame 11, hand pump pressure line			1	DTD323	C	60/22
732	E.A3.73.239	PIPE	assembly	from filter in hand pump suction	line to coupling at pressure bulkhead			1	L56	C	60/23
1591	E.A3.73.241	PIPE	assembly	from reservoir tee under N.B.C.	compartment floor to filter in hand pump suction line			1	L56	C	60/11

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
734	E.A3.73.243 or E.A3.73.1187	PIPE, assembly, from coupling at nosewheel selector to coupling at wheel well wall, nosewheel jack 'up' line	1	DTD323	C	60/14
735	E.A3.73.245 or E.A3.73.1189	PIPE, assembly, from coupling at nosewheel selector to coupling at wheel well wall, nosewheel jack 'down' line	1	DTD323	C	60/17
1607	E.A3.73.247 or E.A3.73.1191	PIPE, assembly, port brake, from pressure bulkhead to frame 12A	1	DTD323	C	60/15
1631	E.A3.73.251 or E.A3.73.1195	PIPE, assembly, starboard brake, from pressure bulkhead to frame 12A	1	DTD323	C	60/9
1633	E.A3.73.255	PIPE, assembly, from reservoir tee under N.B.C. compartment floor to pressure bulkhead connection	1	L56	C	60/10
	E.G7.73.333 or E.G7.73.353	PIPE, assembly, from non-return valve forward of frame 11 to accumulator and selector tee, hand pump pressure line	1	DTD323	—	60/19
5928	E.A3.73.785	PIPE, assembly, hydraulic gauge, between pressure bulkhead and frame 12A	1	DTD323	C	60/13
5259	EEAS.21/2/ERH or EEAS.239/1CH	WASHER, 'O', pipe clipping	9	L72	C	60/4
	—	PIPES, HYDRAULIC, FRAME 3 TO PRESSURE BULKHEAD, ASSEMBLY (E.A3.73.209) & (E.A3.73.1285) Spares for:—	—	—	—	62/28
8336	E.A3.73.837	BRACKET, fairlead, between frames 4 and 5	1	L72	C	62/25
5542	EEAS.143/6	CLIP, pipe, single, 1/4" o/d	1	L72	C	62/10
20461	EEAS.143/8	CLIP, pipe, single, 3/8" o/d	1	L72	C	62/9
5260	EEAS.143/5H	CLIP, pipe, single, 3/16" o/d bonding	8	L72	C	62/7
5K/6323922	AS.4526/3	CLIP	8	—	C	
28E/9130611	AS.5419/4	CLIP	1	—	C	
28F/9130685	AS.5419/6	CLIP	1	—	C	
8335	E.A3.73.683	FAIRLEAD, for pipes at frames 5, 6 and 7	8	LFS21	C	62/26
8334	E.A3.73.731	FAIRLEAD, for pipes through navigator's floor	1	LFS21	C	62/1
12930	E.A3.73.879	FAIRLEAD, for pipes at frames 3 and 4	2	LFS21	C	62/27
5853	EEAS.69/1	GASKET	1	Neo-K-Tex	C	62/3
1128	EEAS.69/2	GASKET, bulkhead coupling, pressure line	4	Neo-K-Tex	C	62/4
1620	EEAS.69/4	GASKET, bulkhead coupling, suction line	2	Neo-K-Tex	C	62/6
757	E.A3.73.181	PIPE, assembly, from coupling aft of frame 3 to coupling aft of frame 5, hand pump suction line	1	L56	C	62/20
13018	E.A3.73.183 or E.A3.73.1169	PIPE, assembly, from coupling aft of frame 3 to coupling aft of frame 5, hand pump pressure line	1	DTD323	C	62/21
759	E.A3.73.185	PIPE, assembly, from coupling aft of frame 5 to coupling through pressure bulkhead, pressure return line	1	L56	C	62/12
760	E.A3.73.187 or E.A3.73.1171	PIPE, assembly, from coupling aft of frame 5 to coupling at pressure bulkhead, hand pump pressure line	1	DTD323	C	62/11

SERVICES
HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
1621	E.A3.73.283	PIPE	assembly	from coupling aft of frame 3 to	coupling aft of frame 5, brake pressure return line			1	L56	C	62/23
1623	E.A3.73.285	PIPE	assembly	from coupling aft of frame 3 to	coupling aft of frame 5, port brake line			1	DTD323	C	62/24
1624	E.A3.73.1173	PIPE	assembly	from coupling aft of frame 3 to	coupling aft of frame 5, brake supply line			1	DTD323	C	62/18
1625	E.A3.73.287 or E.A3.73.1175	PIPE	assembly	from coupling aft of frame 3 to	coupling aft of frame 5, starboard brake line			1	DTD323	C	62/19
1626	E.A3.73.289 or E.A3.73.1177	PIPE	assembly	from coupling aft of frame 3 to	coupling aft of frame 5, starboard brake line			1	DTD323	C	62/17
1627	E.A3.73.291	PIPE	assembly	from coupling aft of frame 5 to	coupling at pressure bulkhead, brake pressure return line			1	L56	C	62/15
1627	E.A3.73.293 or E.A3.73.1179	PIPE	assembly	from coupling aft of frame 5 to	coupling at pressure bulkhead, hand pump pressure line			1	DTD323	C	62/15
1628	E.A3.73.295 or E.A3.73.1181	PIPE	assembly	from coupling aft of frame 5 to	coupling at pressure bulkhead, brake supply line			1	DTD323	C	62/16
1629	E.A3.73.297 or E.A3.73.1183	PIPE	assembly	from coupling aft of frame 5 to	coupling at pressure bulkhead, starboard brake line			1	L56	C	62/14
5942	E.A3.73.781	PIPE	assembly	hydraulic pressure gauge, from	coupling under navigator's floor at frame 5 to coupling forward of frame 4			1	OTD323	C	62/22
5943	E.A3.73.783	PIPE	assembly	hydraulic pressure gauge, from	coupling under navigator's floor at frame 5 to pressure bulkhead connection			1	DTD323	C	62/13
980	EEAS.20/1/DR	TAB	locking					4	L72	C	62/5
981	EEAS.20/2/DR	TAB	locking					10	L72	C	62/2
5259	EEAS.21/2/ERH	WASHER	'D', for bonding clips					8	L72	C	62/8
	or EEAS.237/17CH										
	or EEAS.239/1CH										
	—	PIPES	HYDRAULIC, FROM HAND PUMP TO	FRA E4, ASSEMBLY (E.A3.73.211)				—	—	—	61/14
			Spare for:—								
5258	EEAS.143/6/H	CLIP	pipe, single, 1/4" o/d bonding					2	L72	C	61/34
5348	EEAS.143/8/H	CLIP	pipe, single, 3/8" o/d bonding					2	L72	C	61/35
R 5K/4345976	AS.4526/4	CLIP						1	—	C	
R 5K/4345977	AS.4526/6	CLIP						1	—	C	
R 28E/9130611	AS.5419/4	CLIP						1	—	C	
R 28E/9130685	AS.5419/6	CLIP						1	—	C	
	761	E.A1.73.289	FITTING	special banjo body				1	—	C	61/6
	762	E.A3.73.299	PIPE	assembly, from hand pump to coupling aft of frame 3, suction line				1	L56	C	61/16
	763	E.A3.73.301 or E.A3.73.1167	PIPE	assembly, from hand pump to coupling aft of frame 3, pressure line				1	DTD323	C	61/15
20778	EEAS.20/2/ER	WASHER	special, 'D'					4	L72	C	61/33
	or EEAS.237/17CH							2	—	C	

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	. RESERVOIR, HYDRAULIC, MOUNTING, ASSEMBLY (EA3.73.37) Spares for:-	-	-	63/1
AGS1109/K	. . COUPLING, reducing (Mod.3390)	1	-	63/15
EA3.73.607	. . EXTENSION, HYDRAULIC RESERVOIR FILLER, GROUP Spares for:-	1	-	63/10
EA3.73.29	. . . EXTENSION, filter	1	-	63/20
EA3.73.605	. . . GUARD, splash Attaching parts for EA3.73.605:-	1	-	63/2
A25/3C	. . . Bolt, 2BA hex. head	1	-	63/5
EA3.73.603	. . . Circlip	1	L72	63/9
AGS2001/C/1	. . . Nut, stiff, 2BA	1	-	63/8
EA3.73.609	. . . Strap, rubber	1	Neoprene	63/4
EEAS.21/2/FR	. . . Washer, 'D' Attaching parts for EA3.73.607:-	2	L72	63/7
A61/1B	. . Bolt, 4BA hex. head	8	-	63/13
EA1.73.41	. . Gasket	1	Neo-K-Tex	63/17
A29/BP	. . Nut, 4BA plain	8	-	63/25
EEAS.20/2/DR	. . Tab, locking	1	L72	63/22
SP47/B	. . Washer, 4BA spring	8	-	63/24
EB6.73.351	. . RESERVOIR, HYDRAULIC, GROUP Spares for:-	1	-	63/26
EB6.73.347	. . . ADAPTOR, filler cap	1	S95 or S96	63/21
EA1.73.381	. . . FILTER, oil reservoir, 45 mesh, 34 SWG	1	-	63/12
EB6.73.349	. . . GASKET, filler neck	1	Neo-K-Tex	63/16
EB6.73.345	. . . SEATING, filler	1	L34	63/23
SP8Y/4	. . ROD, tension	2	-	63/11
EA3.73.611	. . SEAL, rubber	1	Neoprene	63/3
EA1.73.39	. . STRAP, hydraulic reservoir mounting	4	L72	63/6
EA1.70.21	. . TRUNNION	2	MS	63/18
EA1.70.22	. . TRUNNION	2	MS	63/19

SERVICES

HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

HYDRAULIC EQUIPMENT IN PORT WING

Part Number	Description 1 2 3 4 5 6	No. Off	Mati. Spec.	Plate No.
-	HYDRAULIC EQUIPMENT IN PORT WING ASSEMBLY (EA3.73.539) Spares for:-	-	-	
-	EQUIPMENT, HYDRAULIC CIRCUIT ASSEMBLY (EA3.73.201) Spares for:-	-	-	97/28
LOCKHEED AVA50/E	. . COUPLING, AVERY, GROUP Consisting of:-	1	-	97/24
AVA55/E	. . . FLANGE, half	1	-	97/25
AVA62/E	. . . NUT, tube	1	-	97/26
AVA54/E	. . . UNION, half	1	-	97/27
LOCKHEED AVA52/C	. . COUPLING "AVERY", GROUP Consisting of:-	1	-	97/20
AVA58/C	. . . FLANGE, half	1	-	97/21
AVA62/C	. . . NUT, tube	1	-	97/22
AVA57/C	. . . UNION, half	1	-	97/23
DOWTY ROTOL 0.7017Y/C.01	. . JACK, operating, main undercarriage (For spares see AP4515B, Vol 3)	1 1	- -	97/3 97/3
DOWTY ROTOL 0.7016Y/C.01	. . JACK, operating, flap (For spares see AP4515B, Vol 3)	2	-	98/4
DOWTY ROTOL 0.8246Y/C.01	. . JACK, operating, main undercarriage (For spares AP4515B, Vol 3)	1	-	97/15
EA3.73.845	. . JACK, AIR BRAKE, ASSEMBLY Consisting of:-	1	-	97/33
DOWTY ROTOL 1.03036.001	. . . JACK, assembly (Mod.4454) (Mod.5101) (For spares see AP4515A, Vol 3, Pt 1, Section 2)	1	-	97/30
EA3.73.303	. . . NUT, special	1	S96	97/31
EA3.73.305	. . . WASHER, tab	1	DTD171	97/32
4W14/DAS7005/22.4	. . PIPE, flexible, hydraulic brake (Mod.5190) (Pre-Mod.5503)	1	-	97/10
4W14-261-8-8-22.4	. . PIPE, flexible, hydraulic brake (Mod.5503)	1	-	
4W14/DAS7005/63	. . PIPE, flexible, hydraulic brake (Mod.5190) (Pre-Mod.5503)	1	-	97/7
4W14-261-8-8-63.0	. . PIPE, flexible, hydraulic brake (Mod.5503)	1	-	
4W14/DAS7005/14	. . PIPE, flexible, undercarriage door 'open' line (Mod.5190) (Pre-Mod.5503)	1	-	97/14
4W14-261-8-8-14.0	. . PIPE, flexible, undercarriage door 'open' line (Mod.5503)	1	-	
4W14/DAS7005/18	. . PIPE, flexible, undercarriage door 'closed' line (Mod.5190) (Pre-Mod.5503)	1	-	97/19
4W14-261-8-8-18.0	. . PIPE, flexible, undercarriage door 'closed' line (Mod.5503)	1	-	
6W14/DAS7005/18	. . PIPE, flexible, undercarriage, 'up' line (Mod.5190) (Pre-Mod.5503)	1	-	97/9
6W14-261-8-8-18.0	. . PIPE, flexible, undercarriage 'up' line (Mod.5503)	1	-	

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	6/W14/DAS7005/25	PIPE, flexible, undercarriage, 'down' line (Mod 5190) (Pre-Mod 5503)	1	-	97/1
R	6W14-261-8-8-25.0	PIPE, flexible, undercarriage 'down' line (Mod 5503)	1	-	
R	DUNLOP 6/W2/102/8/10/40	PIPE, flexible, engine driven pump, 'delivery' line (Mod 5190)	1	-	97/11
R	10/W2/121/8/10/40	PIPE, flexible, engine driven pump, 'suction' line (Mod 5190)	1	-	97/12
	LOCKHEED AIR68000	PUMP, engine driven (For spares see AP5515B, Vol 3)	1	-	97/13
	A58 LOCKHEED	VALVE, charging	1	-	97/8
	UMG706/4	VALVE, non-return (Mod 5118)	1	-	97/8A
	DOWTY ROTOL 0.6209Y/B.01	VALVE, restrictor, undercarriage door jack	1	-	97/18
	DOWTY ROTOL 0.3371Y/B.0.6	VALVE, restrictor, undercarriage	1	-	97/16
	DOWTY ROTOL 401Y/K	VALVE, sequence, undercarriage (For spares see AP4515B, Vol 3)	1	-	97/4
	DOWTY ROTOL 401Y/L	VALVE, sequence, undercarriage (For spares see AP4515B, Vol 3)	1	-	97/17
	DOWTY ROTOL 4603Y/MK.E	VALVE, thermal relief	2	-	97/5
	DOWTY ROTOL 8687Y/MK.A	VALVE, thermal relief	1	-	97/6
	DOWTY ROTOL 6790Y/MK.A	VALVE, transfer, undercarriage jack	1	-	97/2
	-	PIPE, HYDRAULIC, TO FLAP JACK, ASSEMBLY (EA1.73.91) (Alternative to EK5.73.17) Spares for EA1.73.91:—	-	-	98/17
	EA3.73.773	CLIP, pipe, double, 1/4" o/d Attaching parts for EA3.73.773:—	3	L72	98/44
	A25/1B	Bolt, 4BA hex head	1	-	98/43
	A25/5B	Bolt, 4BA hex head (over engine)	1	-	98/36
	A27/BP	Nut, 4BA plain	1	-	98/40
	AS2807/4/04	Tube, distance (over engine)	1	L62	98/37
	AGS162/B	Washer, spring	1	-	98/39
	EEAS21/2/ER/H or EEAS239/1CH EEAS91/1	Washer, 'D'	1	L72	98/38
	A25/1B	CLIP, pipe, double, 1/4" o/d Attaching parts for EEAS91/1:—	11	L72	98/31
	A27/BP	Bolt, 4BA hex head	1	-	98/29
	AGS162/B	Nut, 4BA plain	1	-	98/33
	EEAS21/2/ER/H or EEAS239/1CH EEAS143/6/H or AS4526/4	Washer, spring	1	-	98/32
	A25/1B	Washer, 'D'	1	L72	98/30
	AGS2001/B/1	CLIP, pipe, single, 1/4" o/d bonding	4	L72	98/35
	SP13/B	Attaching parts for EEAS143/6H:—			
	EEAS21/2/ER/H or EEAS239/1CH EA1.73.93	Bolt, 4BA hex head	1	-	98/34
	A25/13B	Nut, stiff, 4BA	1	-	98/42
	A27/BP	Washer, 4BA plain	1	-	98/45
	AGS162/B	Washer, 'D'	1	L72	98/41
		FAIRLEAD, at inner wing rib 7 Attaching parts for EA1.73.93:—	1	LFS21	98/28
		Bolt, 4BA hex head	2	-	98/25
		Nut, 4BA, plain	2	-	98/26
		Washer, spring	2	-	98/22

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

Part Number	Description						No. Off	Mtl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.73.91A	.	.	PIPE, assembly, from coupling between inner wing				1	DTD323	98/15
			rib 1 and 2 to inboard flap jack tee						
			coupling, 'down' line						
EA1.73.91B	.	.	PIPE, assembly, from coupling between inner wing				1	DTD323	98/24
			rib 1 and 2 to inboard flap jack tee						
			coupling, 'up' line						
EA1.73.91C	.	.	PIPE, assembly, from tee coupling to inboard flap				1	DTD323	98/21
			jack between inner wing ribs 3 and 4,						
			'down' line						
EA1.73.91D	.	.	PIPE, assembly, from tee coupling to inboard				1	DTD323	98/19
			flap jack between inner wing ribs 3						
			and 4, 'up' line						
EA1.73.91E	.	.	PIPE, assembly, from tee coupling between inner				1	DTD323	98/8
			wing ribs 3 and 4 to coupling, inboard						
			of rib 7, 'down' line						
EA1.73.91F	.	.	PIPE, assembly, from tee coupling between inner				1	DTD323	98/13
			wing ribs 3 and 4 to coupling inboard						
			of rib 7, 'up' line						
EA1.73.91G	.	.	PIPE, assembly, from coupling inboard of inner				1	DTD323	98/6
			wing rib 1 and 2A, 'up' line						
EA1.73.91H	.	.	PIPE, assembly, from coupling inboard of inner				1	DTD323	98/4
			wing rib 7 to coupling between outer wing						
			ribs 1 and 2A, 'down' line						
EA1.73.91J	.	.	PIPE, assembly, from coupling between outer wing				1	DTD323	98/2
			ribs 1 and 2A to outboard flap jack						
			between ribs 3 and 3A, 'up' line						
EA1.73.91K	.	.	PIPE, assembly, from coupling between outer wing				1	DTD323	98/11
			rib 1 and 2A to outboard flap jack						
			between ribs 3 and 3A, 'down' line						
R	-		PIPES, HYDRAULIC, TO FLAP JACK,				-	-	106/1
			ASSEMBLY (EK5.73.17)						
			Spares for EK5.73.17:						
R	EA3.20.4003	.	BRACKET				1	-	106/2
R	EA3.20.4004	.	BRACKET				5	-	106/3
R	EA3.20.4005	.	BRACKET				3	-	106/4
R	EA3.20.4007	.	BRACKET				2	-	106/5
R	AS4525/4	.	CLIP				6	-	106/6
R	AGS952/B	.	COLLAR				2	-	106/7
R	EB4.73.713	.	FAIRLEAD, assembly				3	-	106/8
			Attaching parts for EB4.73.713:						
R	A25/7C	.	Bolt, 2BA				1	-	106/9
R	AGS2001/C/1	.	Nut, stiff, 2BA				1	-	106/10
R	EA3.73.1115	.	FAIRLEAD, assembly				2	-	106/11
			Attaching parts for EA3.73.1115:						
R	A25/7	.	Bolt, 2BA				4	-	106/12
R	AGS2001/C/1	.	Nut, stiff, 2BA				4	-	106/13
R	AS2811/5/060	.	Tube, distance				4	-	106/14
R	EEAS28/8/ER	.	Washer				4	-	106/15

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.20.3993	. . FAIRLEAD, assembly	6	—	106/16
EA3.20.3997	. . FAIRLEAD, assembly Attaching parts for EA3.20.3993 and EA3.20.3997:	5	—	106/17
A25/8C	. . Bolt, 2BA	2	—	106/18
AGS2001/C/1	. . Nut, stiff, 2BA	2	—	106/19
SP15/C	. . Washer	2	—	106/20
AGS2097/C/3/C	. . LEAD, bonding	2	—	106/21
AGS2097/C/6/C	. . LEAD, bonding	2	—	106/22
AGS1142/B	. . NIPPLE	4	—	106/23
AGS1170/B	. . NIPPLE	6	—	106/24
EA3.73.1097	. . PIPE, assembly	1	DTD5019	106/25
EA3.73.1099	. . PIPE, assembly	1	DTD5019	106/26
EA3.73.1093	. . PIPE, assembly	1	DTD5019	106/27
EA3.73.1095	. . PIPE, assembly	1	DTD5019	106/28
EA3.73.1089	. . PIPE, assembly	1	DTD5019	106/29
EA3.73.1091	. . PIPE, assembly	1	DTD5019	106/30
EA3.73.1101	. . PIPE, assembly	1	DTD5019	106/31
EA3.73.1103	. . PIPE, assembly	1	DTD5019	106/32
EA3.73.1105	. . PIPE, assembly	1	DTD5019	106/33
EA3.73.1107	. . PIPE, assembly	1	DTD5019	106/34
EA3.73.1109	. . PIPE, assembly	1	DTD5019	106/35
EA3.73.1111	. . PIPE, assembly	1	DTD5019	106/36
EA3.73.1135	. . PIPE, assembly	1	DTD5019	106/37
EA3.73.1139	. . PIPE, assembly	1	DTD5019	106/38
EA3.73.1143	. . PIPE, assembly	1	DTD5019	106/39
EA3.73.1147	. . PIPE, assembly	1	DTD5019	106/40
EA3.73.1113	. . PLATE, doubling	2	—	106/41
AGS1115/2	. . PLATE, doubling	4	—	106/42
AGS954/B	. . SLEEVE, outer	2	—	106/43
AGS1113/B	. . UNION, bulkhead Attaching parts for AGS1113/B:	4	—	106/44
A25/2B	. . Bolt, 4BA	6	—	106/45
A27/BP	. . Nut, 4BA	6	—	106/46
EEAS20/2/ER	. . Tab, locking	1	—	106/47
SP13/A	. . Washer	6	—	106/48
—	. PIPES, HYDRAULIC, FOR AIR BRAKE CENTRE WING, ASSEMBLY (EA1.73.281) Spares for:	—	—	99/31
EEAS143/6/H or AS4526/4	. . CLIP, pipe, single, 1/4" o/d bonding Attaching parts for EEAS143/6/H:	14	L72	99/35
A25/1B	. . Bolt, 4BA hex. head	1	—	99/33
A27/BP	. . Nut, 4BA, plain	1	—	99/36
AGS2001/B/1	. . Nut, stiff, 4BA (at rib 2)	1	—	99/44
AGS162/B	. . Washer, spring	1	—	99/41
EEAS21/2/ER/H or EEAS237/1CH	. . Washer, 'D'	1	L72	99/34
EA1.73.281A or EA3.73.1243	. . PIPE, assembly, from fuselage frame 22 to coupling between inner wing ribs 3 and 4, 'in' line	1	DTD323	99/39

Page NAC3B

HYDRAULIC EQUIPMENT IN PORT WING

[illegible]

Restricted

Restricted

Page NAC4

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

Ref. No.	Part No.	Description						No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
932	E.A1.73.281B or E.A3.73.1245	PIPE, assembly, from fuselage frame 22 to coupling outboard of inner wing rib 3, "out" line						1	DTD323	C	99/42
1636	E.A1.73.281E or E.A3.73.1247	PIPE, assembly, from coupling between inner wing ribs 3 and 4 to coupling inboard of rib 7, "in" line						1	DTD323	C	99/27
1637	E.A1.73.281F or E.A3.73.1249	PIPE, assembly, from coupling outboard of inner wing rib 3 to coupling inboard of rib 7, "out" line						1	DTD323	C	99/37
—	—	PIPES, HYDRAULIC, FOR AIR BRAKE, OUTER WING, ASSEMBLY (E.A1.73.283)						—	—	—	99/21
5258	EEAS.143/6H or 5K/4345976	CLIP, pipe, single, 1/4" o/d bonding						18	L72	C	99/47
28D/1010658	AS.4526/4	Attaching parts for EEAS.143/6H:—						—	—	—	—
28D/1008149	A25/1B	Bolt, 4 BA hex. head						1	—	C	99/50
28M/1278189	A25/2B	Bolt, 4 BA hex. head						1	—	C	99/49
28M/9403519	AGS.2001/B/1	Nut, stiff, 4 BA						1	—	C	99/51
28W/1010155	A27/BP	Nut, 4 BA plain						1	—	C	99/45
5259	AGS.162/B	Washer, spring						1	—	C	99/48
—	EEAS.21/2/ER/H or EEAS.239/1CH	Washer, "D"						1	L72	C	99/46
939	E.A1.73.283C or E.A3.73.1251	PIPE, assembly, from coupling between outer wing rib 1 and 2A to coupling inboard of rib 2B, "in" line						1	DTD323	C	99/14
940	E.A1.73.283D or E.A3.73.1253	PIPE, assembly, from coupling between outer wing rib 1 and 2 to coupling outboard of rib 2, "out" line						1	DTD323	C	99/25
941	E.A1.73.283E or E.A3.73.1255	PIPE, assembly, from coupling inboard of outer wing rib 2B to coupling inboard of rib 3, "in" line						1	DTD323	C	99/9
942	E.A1.73.283F or E.A3.73.1257	PIPE, assembly, from coupling outboard of outer wing rib 2 to coupling rib 3 and 3A, "out" line						1	DTD323	C	99/23
943	E.A1.73.283G or E.A3.73.1259	PIPE, assembly, from coupling between outer wing rib 3 and 3A to coupling at bracket on rib 3, "out" line						1	DTD323	C	99/4
944	E.A1.73.283H or E.A3.73.1261	PIPE, assembly, from coupling inboard of outer wing rib 3 to coupling at bracket on rib 3, "in" line						1	DTD323	C	99/6
1983	E.A1.73.283J or E.A3.73.1263	PIPE, assembly, from coupling inboard of inner wing rib 7 to coupling between outer wing rib 1 and 2A, "out" line						1	DTD323	C	99/29
1984	E.A1.73.283K or E.A3.73.1265	PIPE, assembly, from coupling inboard of inner wing rib 7 to coupling between outer wing rib 1 and 2A, "in" line						1	DTD323	C	99/17
—	—	PIPES, HYDRAULIC, FOR AIR BRAKE ON RIB 3 OUTER WING, ASSEMBLY (E.A1.73.285)						—	—	—	99/1
5258	EEAS.143/6H or 5K/4345976	CLIP, pipe, single, 1/4" o/d bonding						2	L72	C	99/11
28D/1010658	AS.4526/4	Attaching parts for EEAS.143/6H:—						—	—	—	—
28M/1278189	A25/1B	Bolt, 4 BA hex. head						1	—	C	99/3
5259	AGS.2001/B/1	Nut, stiff, 4 BA						1	—	C	99/16
—	EEAS.21/2/ER/H or EEAS.239/1CH	Washer, "D"						1	—	C	99/8

Restricted

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
E.A3.73.831 or E.A3.73.1267 E.A3.73.833 or E.A3.73.1269 —	. . PIPE, coil, assembly, from coupling on bracket at rib 3 to connection on air brake jack, "in" position . . PIPE, coil, assembly, from coupling on bracket at rib 3 to banjo connection on air brake jack, "out" position . PIPES, HYDRAULIC, ON FIXED FAIRING, ASSEMBLY (E.A3.73.311) Spares for:—	1 1 —	DTD477 DTD477 —	99/19 99/12 100/7
E.A3.73.601 E.A3.73.635 EEAS.143/6 or AS.5419/4	. . ADAPTOR, charging valve and test gauge . . BRACKET, special pipe mounting . . CLIP, pipe, single, 1/4" o/d Attaching parts for EEAS.143/6:—	1 1 1 1 1 1	L65 L72 L72 — — —	100/11 100/3 100/5 100/1 100/6 100/2
A25/1B A27/BP AGS.162/B or EEAS.239/2C AS.5419/11	. . Bolt, 4 BA hex. head . . Nut, 4 BA . . Washer . . Clip, pipe, single, 3/4" o/d Attaching parts for AS.5419/11:—	1 1 1 1 1 1	— — — L72 — —	100/1 100/6 100/2 100/14 100/13 100/13
A28/1C EEAS.239/2C	. . Bolt, 2 BA hex. head . . Washer, "D"	1 1	— —	100/13 100/13
E.A3.73.573 or E.A3.73.1237 E.A3.73.599 —	. . PIPE, assembly, from charging valve and test gauge tee-piece to flexible pipe bracket, hydraulic brake "pressure" line . . TEE-PIECE, test gauge and charging valve . PIPES, HYDRAULIC, ON RIB E, WHEEL BAY, ASSEMBLY (EA 3.73.529) Spares for:—	1 1 —	DTD323 L40 —	100/9 100/12 101/11
EEAS.143/6H or AS.4526/4	. . CLIP, pipe, single, 1/4" o/d bonding Attaching parts for EEAS.143/6/H:—	2 1 1 1	L72 — — L72	101/7 101/16 101/8 101/13
A25/1B AGS.2001/B/1 EEAS.21/2/ER/H or EEAS.237/17CH	. . Bolt, 4BA hex. head . . Nut, stiff, 4 BA . . Washer, "D"	1 1 1	— — L72	101/16 101/8 101/13
E.A3.73.535 or E.A3.73.1235 —	. . PIPE, assembly, from undercarriage door jack sequence valve to tee coupling at wheel well diaphragm, "open" line . PIPES, HYDRAULIC, AT WHEEL WELL BAY DIAPHRAGM, ASSEMBLY (E.A3.73.531) Spares for:—	1 —	DTD323 —	101/6 101/7
E.A1.73.181	. . CLIP, thermal relief valve Attaching parts for E.A3.73.181:—	1 2 2 2	T45 — — L62	101/2 10/3 101/1 101/4
A25/13C AGS.2001/C/1 AS.2307/030	. . Bolt, 2 BA hex. head . . Nut, stiff, 2 BA . . Tube, distance	2 2 2	— — L62	10/3 101/1 101/4
EEAS.143/5/H or AS.4526/3	. . CLIP, pipe, single, 3/16" o/d bonding Attaching parts for EEAS.143/5/H:—	3 1 1 1	L72 — — L72	101/20 101/24 101/19 101/21
A25/1B AGS.2001/B/1 EEAS.21/2/ER/H or EEAS.237/17CH	. . Bolt, 4 BA hex. head . . Nut, stiff, 4 BA . . Washer, "D"	1 1 1	— — L72	101/24 101/19 101/21

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EEAS143/6/H or AS4526/4	. . CLIP, pipe, single, 1/4" o/d bonding	6	L72	101/26
A25/1B	Attaching parts for EEAS143/6/H:— . . Bolt, 4BA hex head	1	—	101/28
AGS2001/B/1	. . Nut, stiff, 4BA	1	—	101/25
EEAS21/2/ER/H or EEAS237/17CH	. . Washer, 'D'	1	L72	101/27
EA3.73.561 or EA3.73.1241 EA3.73.647	. . PIPE, assembly, from tee coupling at undercarriage door diaphragm to flexible hose coupling, undercarriage door jack 'down' line	1	DTD323	101/22
EA3.73.649	. . PIPE, assembly, from tee coupling to thermal relief valve 'down' line	1	DTD323	101/14
—	. . PIPE, assembly, from thermal relief valve at wheel bay diaphragm to tee coupling on main spar between rib A and b	1	DTD323	101/9
EA1.73.183	. PIPES, HYDRAULIC, ON FUSELAGE SIDE WHEEL BAY, ASSEMBLY (EA3.73.815) Spares for:— . . BODY, banjo, right angled, 1/4" x 3/8" BSP, for undercarriage door jack and sequence valve connection	—	—	101/29
EA1.73.277	. . BOLT, banjo, cone end, at special fitting	1	S96	101/51
EA3.73.1461 EA3.73.1493	. . CLIP (Mod 5190) (Pre-Mod 5503) . . CLIP, hose (Mod 5503) Attachments:—	1 1	— —	101/43
A25/12C A27/CP SP47C	. . Bolt, 2BA . . Nut, 2BA plain . . Washer, spring	2 2 2	— — —	101/42 101/52 101/49
EEAS91/3 EEAS143/8/H or AS4526/6	. . CLIP, pipe, double, 3/4" o/d . . CLIP, pipe, single, 3/8" o/d bonding	3 5	L72 L72	101/44 101/36
A25/1B	Attachments parts for EAS143/8/H:— . . Bolt, 4BA hex head	1	—	101/53
AGS2001/B/1	. . Nut, stiff, 4BA	1	—	101/54
EA3.73.551	. . PIPE, assembly, from banjo fitting at undercarriage door jack hose to variable flow tee coupling, 'closed' line	1	DTD323	101/34
EA3.73.553	. . PIPE, assembly, from sequence valve to thermal relief valve and transfer valve tee on wing main spar, 'closed' line	1	DTD323	101/38
EA3.73.585	. . PIPE, assembly, from restrictor valve to tee coupling, undercarriage door jack 'closed' line	1	DTD323	101/47
EA3.73.817	. . PIPE, assembly, from sequence valve to 4-way coupling on main spar, undercarriage door jack 'closed' line	1	DTD323	101/45
EA3.73.819	. . PIPE, assembly, from tee coupling to thermal relief valve and transfer valve 4-way coupling 'closed' line	1	DTD323	101/32
EA3.73.855	. . PIPE, assembly, from restrictor valve to undercarriage jack hose connection, 'closed' line	1	DTD323	101/39
AGS1186/C	. . Seal, bonded between banjo fitting and banjo bolt	2	—	101/41

AP101B-0417-3A

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EEAS21/2/ER/H or EEAS237/17CH -	WASHER, 'D', for bonding clips	5	L72	101/35
	PIPES, HYDRAULIC, ON MAIN SPARE, UNDER-CARRIAGE BAY, ASSEMBLY (EA3.73.821) Spares for:—	—	—	102/63
EA1.73.107	BRACKET, for clip, rib C Attaching parts for EA1.73.107:—	1	L72	102/14
A25/1C	Bolt, 2BA hex head	4	—	102/4
A27/CP	Nut, 2BA plain	4	—	102/1
AGS162/C	Washer, spring	4	—	102/2
EA1.70.71	BRACKET, for coupling, rib B Attaching parts for EA1.70.71:—	1	L72	102/52
A25/1C	Bolt, 2BA hex head	4	—	103/54
A27/CP	Nut, 2BA plain	4	—	102/49
AGS162/C	Washer, spring	4	—	102/53
EA3.73.789	BRACKET, for pipe and clip, rib B Attaching parts for EA3.73.789:—	1	L72	102/9
A25/1C	Bolt, 2BA hex head	4	—	102/8
A27/CP	Nut, 2BA plain	4	—	102/3
AGS163/C	Washer, spring	4	—	102/6
EA3.73.793	BRACKET, transfer valve mounting, rib B Attaching parts for EA3.73.793:—	1	L72	102/19
A25/1C	Bolt, 2BA hex head	4	—	102/26
A27/CP	Nut, 2BA plain	4	—	102/17
AGS162/C	Washer, spring	4	—	102/20
R EA1.73.181	CLIP, for thermal relief valve and pipes at ribs A, B, and C (Pre-Mod 5503)	4	T45	102/12
R EA1.73.181	CLIP, for thermal relief valve (Mod 5503)	2	—	102/12
R EA3.73.1489	CLIP, hose (Mod 5503) Attaching parts for EA1.73.181:—	2	—	102/12A
A25/10C	Bolt, 2BA hex head (rib B and C)	2	—	102/13
A25/11C	Bolt, 2BA hex head (rib A)	2	—	102/44
AGS2001/C/1	Nut, stiff, 2BA (rib A)	2	—	102/45
A27/CP	Nut, 2BA plain (rib A)	2	—	102/46
AGS162/C	Washer, spring (rib A)	2	—	102/47
SP13/C	Washer, 2BA plain (rib A)	2	—	102/48
SP15/C	Washer, 2BA plain (rib B and C)	2	—	102/7
EA3.73.797	CLIP, transfer valve, rib B Attaching parts for EA3.73.797:—	1	T45	102/39
A25/14C	Bolt, 2BA hex head	2	—	102/40
AS5419/11	CLIP, pipe, single, 3/4" o/d bonding Attaching parts for AS5419/11:—	3	L72	102/27
A25/2C	Bolt, 2BA hex head	1	—	102/24
AGS2001/C/1	Nut, stiff, 2BA	1	—	102/23
EEAS21/2/ER/H or EEAS237/17CH	Washer, 'D'	1	L72	102/15
EA1.73.177	COUPLING, tee, 3/8" x 3/8" x 3/16" BSP	1	L40	102/56

SERVICES

HYDRAULIC EQUIPMENT IN PORT WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
EA1.73.109	.	.	.	.	.	GUARD, for flexible pipe, rib C	1	L72	102/22
A25/1C	.	.	.	.	.	Attaching parts for EA1.73.109:—	2	—	102/11
A25/2C	.	.	.	.	.	Bolt, 2BA hex head	2	—	102/21
A27/CP	.	.	.	.	.	Nut, 2BA plain	4	—	102/16
EA1.73.297	.	.	.	.	.	Plate, back	1	L72	102/5
AGS162/C	.	.	.	.	.	Washer, spring	4	—	102/18
EA3.73.537	.	.	.	.	.	PIPE, assembly, from sequence valve 4-way piece to flexible coupling, undercarriage jack "down" connection	1	DTD323	102/61
EA3.73.543	.	.	.	.	.	PIPE, assembly, from 4-way piece at main spar to sequence valve on rib 3, wheel bay, undercarriage door "open" line	1	DTD323	102/33
EA3.73.549 or EA3.73.1233	.	.	.	.	.	PIPE, assembly, from coupling inboard of rib A to coupling for flexible pipe at rib B, brake pressure line	1	DTD323	102/50
EA3.73.651	.	.	.	.	.	PIPE, assembly, from upper thermal relief valve at rib A to tee coupling between ribs A and B, "return" line	1	DTD323	102/31
EA3.73.729	.	.	.	.	.	PIPE, assembly, from coupling inboard of rib A to tee coupling between ribs A and B "return" line	1	DTD323	102/57
EA3.73.803	.	.	.	.	.	PIPE, assembly, from 4-way coupling inboard of rib A to transfer valve at rib B, undercarriage jack "up" line	1	DTD323	102/38
EA3.73.807	.	.	.	.	.	PIPE, assembly, from transfer valve at rib B to adaptor for flexible pipe at rib C, undercarriage jack "up" line	1	DTD323	102/35
EA3.73.5133	.	.	.	.	.	PIPE, assembly, from 4-way coupling inboard of rib A to upper thermal relief valve at rib A	1	DTD323	102/36
R EA3.73.1469	.	.	.	.	.	PIPE, assembly from transfer valve to NRV rib A (Mod 5118)	1	—	102/43
R EA3.73.1465	.	.	.	.	.	PIPE, assembly NRV rib A to tee piece (Mod 5118)	1	—	102/43A
EA3.73.5139	.	.	.	.	.	PIPE, assembly, from tee coupling inboard of rib A to lower thermal relief valve at rib B	1	DTD323	102/59
EA3.73.5141	.	.	.	.	.	PIPE, assembly, from 4-way coupling inboard of rib A to outlet side of thermal relief valve at rib A	1	DTD323	102/41
EA1.70.73	.	.	.	.	.	WASHER, special, for clips	2	L72	102/55
EEAS21/2/ERH	.	.	.	.	.	WASHER, 'D', clip attachments	11	L72	102/28

SERVICES

HYDRAULIC EQUIPMENT IN STARBOARD WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
-	HYDRAULIC EQUIPMENT IN STARBOARD WING, ASSEMBLY (EA3.73.540)						-	-	
-	Spares for: EQUIPMENT, HYDRAULIC CIRCUIT, ASSEMBLY (EA3.73.201)						-	-	103/35
-	Spares for:								
LOCKHEED AIR40016	.	.	.	.	.	ACCUMULATOR, hydraulic	1	-	103/28
LOCKHEED AVA50/E	.	.	.	.	.	COUPLING, AVERY, GROUP Consisting of:	1	-	103/15
LOCKHEED AVA55/E	.	.	.	.	.	FLANGE, half	1	-	103/16
LOCKHEED AVA62/E	.	.	.	.	.	NUT, tube	1	-	103/17
LOCKHEED AVA54/E	.	.	.	.	.	UNION, half	1	-	103/18
LOCKHEED AVA52C/C	.	.	.	.	.	COUPLING, AVERY, GROUP Consisting of:	1	-	103/21
AVA58/C	.	.	.	.	.	FLANGE, half	1	-	103/22
AVA62/C	.	.	.	.	.	NUT, tube	1	-	103/23
AVA57/C	.	.	.	.	.	UNION, half	1	-	103/24
10069 N & Z or SIS3592	.	.	.	.	.	GAUGE, pressure	1	-	103/31
DOWTY ROTOL 0.7017Y/C.01	.	.	.	.	.	GAUGE, pressure, Mk.14LL	1	-	
DOWTY ROTOL 0.7016Y/C.01	.	.	.	.	.	JACK, operating, main undercarriage (For spares see AP.4515B, Vol.3)	1	-	103/2
DOWTY ROTOL 0.8246Y/C.01	.	.	.	.	.	JACK, operating, flap (For spares see AP.4515B, Vol.3)	2	-	98/9
EA3.73.639	.	.	.	.	.	JACK, operating, main undercarriage door (For spares see AP.4515B, Vol.3)	1	-	103/19
EA3.20.1195 EA3.20.1189	.	.	.	.	.	JACK, AIR BRAKE, ASSEMBLY Spares for:	1	-	103/43
	.	.	.	.	.	BLOCK, packing	1	Tufnol	103/42
	.	.	.	.	.	BRACKET, micro switch mounting	1	-	103/32
DOWTY ROTOL 1.03036.001	.	.	.	.	.	JACK, assembly (Mod.4454) (Mod.5101) (For spares see AP.4515A, Vol.3, Part 1, Section 2)	1	-	103/40
EA3.73.303 EA3.20.1191	.	.	.	.	.	NUT, special	1	S96	103/38
	.	.	.	.	.	SHOE, micro switch operating	2	-	103/33

SERVICES

HYDRAULIC EQUIPMENT IN STARBOARD WING

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EA3.20.1187 or EB6.20.819	.	.	.	.	SLIDE, OPERATING, ASSEMBLY		1	-	103/41
					Spares for:—				
EA3.20.1199	.	.	.	.	PLATE, rubbing		2	LFS21	103/34
EA3.73.305	.	.	.	.	WASHER, tab		1	DTD171	103/37
R 4W14/DAS7005/22.4	.	.	.	.	PIPE, flexible, hydraulic brake (Mod 5190) (Pre-Mod 5503)		1	-	103/11
R 4W14-261-8-8-22.4	.	.	.	.	PIPE, flexible, hydraulic brake (Mod 5503)		1	-	
R 4W14/DAS7005/63	.	.	.	.	PIPE, flexible, hydraulic brake (Mod 5190) (Pre-Mod 5503)		1	-	103/9
R 4W14-261-8-8-63.0	.	.	.	.	PIPE, flexible hydraulic brake (Mod 5503)		1	-	
R 4W14/DAS7005/14	.	.	.	.	PIPE, flexible, undercarriage door 'open' line (Mod 5190) (Pre-Mod 5503)		1	-	103/29
R 4W14-261-8-8-14.0	.	.	.	.	PIPE, flexible, undercarriage door 'open' line (Mod 5503)		1	-	
R 4W14/DAS7005/18	.	.	.	.	PIPE, flexible, undercarriage door 'closed' line (Mod 5190) (Pre-Mod 5503)		1	-	103/30
R 4W14-261-8-8-18.0	.	.	.	.	PIPE, flexible, undercarriage door 'closed' line (Mod 5503)		1	-	
R 6W14/DAS7005/18	.	.	.	.	PIPE, flexible, undercarriage 'up' line (Mod 5190) (Pre-Mod 5503)		1	-	103/3
R 6W14-261-8-8-18.0	.	.	.	.	PIPE, flexible, undercarriage 'up' line (Mod 5503)		1	-	
R 6W14/DAS7005/25	.	.	.	.	PIPE, flexible, undercarriage 'down' line (Mod 5190) (Pre Mod 5503)		1	-	103/4
R 6W14-261-8-8-25.0	.	.	.	.	PIPE, flexible, undercarriage 'down' line (Mod 5503)		1	-	
6W2/102/8/10/40	.	.	.	.	PIPE, flexible, engine pump 'delivery' (Mod 5190)		1	-	103/5
R 10W2/121/8/10/40	.	.	.	.	PIPE, flexible, engine driven pump 'suction' line (Mod 5190)		1	-	103/6
LOCKHEED AIR68000	.	.	.	.	PUMP, engine driven (For spares see AP4515B, Vol 3)		1	-	103/13
BZ38H	.	.	.	.	SWITCH, sensitive, type A1		2	-	103/36

HYDRAULIC EQUIPMENT IN STARBOARD WING

[illegible]

A.P.101B-0417-3A

Page NAD3

SERVICES

HYDRAULIC EQUIPMENT IN STARBOARD WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
	—	PIPES, HYDRAULIC, TO FLAP JACK, ASSEMBLY (E.A1.73.92) (Alternative to E.K5.73.18) Spares for E.A1.73.92:—	—	—	—	98/16
1242	E.A3.73.773	CLIP, pipe, double, 1/4" o/d	3	L72	C	98/44
		Attaching parts for E.A3.73.773:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	98/48
28D/1011006	A25/5B	Bolt, 4 BA hex. head	1	—	C	98/36
28M/9403519	A27/BP	Nut, 4 BA plain	1	—	C	98/40
21198	AS.2807/4/04	Tube, distance	1	L62	LM	98/37
28W/1010155	AGS.162/B	Washer, spring	1	—	C	98/39
5259	EEAS.21/2ER/H or EEAS.239/1CH	Washer, "D"	1	L72	C	98/38
1880	EEAS.91/1	CLIP, pipe, double, 1/4" o/d	10	L72	C	98/31
		Attaching parts for EEAS.91/1:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	98/29
28M/9403519	A27/BP	Nut, 4 BA plain	1	—	C	98/33
5259	EEAS.21/2/ER/H or EEAS.239/1CH	Washer, "D"	1	L72	C	98/32
28W/1010155	AGS.162/B	Washer, spring	1	—	C	98/30
5258	EEAS.143/6/H or AS.4526/4	CLIP, pipe, single, 1/4" o/d bonding	4	L72	C	98/35
		Attaching parts for EEAS.143/6/H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	98/34
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	98/42
5259	EEAS.21/2ER/H or EEAS.239/1CH	Washer, "D"	1	L72	C	98/41
870	E.A1.73.94	FAIRLEAD, inner wing, rib 7	1	LFS21	C	98/27
		Attaching parts for E.A1.73.94:—				
28D/1011013	A25/13B	Bolt, 4 BA hex. head	2	—	C	98/25
28M/9403519	A27/BP	Nut, 4 BA plain	2	—	C	98/26
28W/1010155	AGS.162/B	Washer, spring	2	—	C	98/22
871	E.A1.73.92A	PIPE, assembly, from coupling between inner wing rib 1 and 2 to inboard flap jack tee coupling, "down" line	1	DTD323	C	98/14
872	E.A1.73.92B	PIPE, assembly, from coupling between inner wing rib 1 and 2 to inboard flap jack tee coupling, "up" line	1	DTD323	C	98/23
873	E.A1.73.92C	PIPE, assembly, from tee coupling to inboard flap jack between inner wing rib 3 and 4, "up" line	1	DTD323	C	98/20
874	E.A1.73.92D	PIPE, assembly, from tee coupling to inboard flap jack between inner wing rib 3 and 4, "down" line	1	DTD323	C	98/18
875	E.A1.73.92E	PIPE, assembly, from tee coupling between inner wing rib 3 and 4 to coupling inboard of rib 7, "down" line	1	DTD323	C	98/7
876	E.A1.73.92F	PIPE, assembly, from tee coupling between inner wing ribs 3 and 4 to coupling inboard of rib 7, "up" line	1	DTD323	C	98/12
877	E.A1.73.92G	PIPE, assembly, from coupling inboard of inner wing rib 7 to coupling between outer wing rib 1 and 2A, "down" line	1	DTD323	C	98/5
878	E.A1.73.92H	PIPE, assembly, from coupling inboard of inner wing rib 7 to coupling between outer wing 1 and 2A, "up" line	1	DTD323	C	98/3
879	E.A1.73.92J	PIPE, assembly	1	DTD323	C	98/1
880	E.A1.73.92K	PIPE, assembly	1	DTD323	C	98/10

SERVICES
HYDRAULIC EQUIPMENT IN STARBOARD WING

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
R	—	PIPES, HYDRAULIC, TO FLAP JACK, ASSEMBLY (E.K5.73.18) Spares for E.K5.73.18:—						—	—	—	106A/1
R	E.A3.20.4003	BRACKET						5	—	C	106A/2
R	E.A3.20.4004	BRACKET						1	—	C	106A/3
R	E.A3.20.4006	BRACKET						3	—	C	106A/4
R	E.A3.20.4008	BRACKET						1	—	C	106A/5
R	AS.4525/4	CLIP						6	—	C	106A/6
R	AGS.952/B	COLLAR						2	—	C	106A/7
R	E.B4.73.713	FAIRLEAD, assembly Attaching parts for E.B4.73.713:—						3	—	C	106A/8
R	A25/7C	Bolt, 2 BA						1	—	C	106A/9
R	AGS.2001/C/1	Nut, stiff, 2 BA						1	—	C	106A/10
R	E.A3.73.1115	FAIRLEAD, assembly Attaching parts for E.A5.73.1115:—						2	—	C	106A/11
R	A25/7	Bolt, 2 BA						4	—	C	106A/12
R	AGS.2001/C/1	Nut, stiff, 2 BA						4	—	C	106A/13
R	AS.2811/5/060	Tube, distance						4	—	C	106A/14
R	EEAS.28/8/ER	Washer						4	—	C	106A/15
R	E.A3.20.3993	FAIRLEAD, assembly						6	—	C	106A/16
R	E.A3.20.3997	FAIRLEAD, assembly Attaching parts for E.A3.20.3993 and E.A3.20.3997:—						4	—	C	106A/17
R	A25/8C	Bolt, 2 BA						2	—	C	106A/18
R	AGS.2001/C/1	Nut, stiff, 2 BA						2	—	C	106A/19
R	SP15/C	Washer						2	—	C	106A/20
R	AGS.2097C/3/C	LEAD, bonding						2	—	C	106A/21
R	AGS.2097C/6/C	LEAD, bonding						2	—	C	106A/22
R	AGS.1142/B	NIPPLE						4	—	C	106A/23
R	AGS.1170/B	NIPPLE						6	—	C	106A/24
R	E.A3.73.1098	PIPE, assembly						1	DTD5019	C	106A/25
R	E.A3.73.1100	PIPE, assembly						1	DTD5019	C	106A/26
R	E.A3.73.1094	PIPE, assembly						1	DTD5019	C	106A/27
R	E.A3.73.1096	PIPE, assembly						1	DTD5019	C	106A/28
R	E.A3.73.1127	PIPE, assembly						1	DTD5019	C	106A/29
R	E.A3.73.1129	PIPE, assembly						1	DTD5019	C	106A/30
R	E.A3.73.1102	PIPE, assembly						1	DTD5019	C	106A/31
R	E.A3.73.1104	PIPE, assembly						1	DTD5019	C	106A/32
R	E.A3.73.1106	PIPE, assembly						1	DTD5019	C	106A/33
R	E.A3.73.1108	PIPE, assembly						1	DTD5019	C	106A/34
R	E.A3.73.1131	PIPE, assembly						1	DTD5019	C	106A/35
R	E.A3.73.1133	PIPE, assembly						1	DTD5019	C	106A/36
R	E.A3.73.1137	PIPE, assembly						1	DTD5019	C	106A/37
R	E.A3.73.1141	PIPE, assembly						1	DTD5019	C	106A/38
R	E.A3.73.1145	PIPE, assembly						1	DTD5019	C	106A/39
R	E.A3.73.1149	PIPE, assembly						1	DTD5019	C	106A/40
R	E.A3.73.1113	PLATE, doubling						2	—	C	106A/41
R	AGS.1115/2	PLATE, washer						4	—	C	106A/42
R	AGS.954/B	SLEEVE, outer						2	—	C	106A/43
R	AGS.1113/B	UNION, bulkhead Attaching parts for AGS.1113/B:—						4	—	C	106A/44
R	A25/2B	Bolt, 4 BA						6	—	C	106A/45
R	A27/BP	Nut, 4 BA						6	—	C	106A/46
R	EEAS.20/2/ER	Tab, locking						1	—	C	106A/47
R	SP.13/B	Washer						6	—	C	106A/48

Page NAD3B

HYDRAULIC EQUIPMENT IN STARBOARD WING

[illegible]

Restricted

Page NAD4

SERVICES
HYDRAULIC EQUIPMENT IN STARBOARD WING

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
	—	PIPES, HYDRAULIC, FOR AIR BRAKE, CENTRE WING, ASSEMBLY (E.A1.73.282)						—	—	—	99/32
		Spares for:—									
5258	EEAS.143/6/H or	CLIP, pipe, single, 1/4" o/d, bonding						14	L72	C	99/35
5K/4345976	AS.4526/4	Attaching parts for EEAS.143/6/H:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head						1	—	C	99/33
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA (at rib 2)						1	—	C	99/36
28M/9403619	A27/BP	Nut, 4 BA plain						1	—	C	99/44
28W/1010155	AGS.162/B	Washer, spring						1	—	C	99/41
5259	EEAS.21/2/ER/H or	Washer, "D"						1	L72	C	99/34
	EEAS.239/1CH										
935	E.A1.73.282A or	PIPE, assembly, from fuselage frame 22 to coupling between inner wing 3 and 4, "in" line						1	DTD323	C	99/40
936	E.A1.73.282B or	PIPE, assembly, from fuselage frame 22 to coupling between inner wing 3 and 4, "out" line						1	DTD323	C	99/43
1638	E.A1.73.282E or	PIPE, assembly, from coupling between inner wing ribs 3 and 4 to coupling inboard of rib 7, "in" line						1	DTD323	C	99/28
1639	E.A1.73.282F or	PIPE, assembly, from coupling between inner wing ribs 3 and 4 to coupling inboard of rib 7, "out" line						1	DTD323	C	99/38
	E.A3.73.1250										
	—	PIPES, HYDRAULIC, FOR AIR BRAKE, OUTER WING, ASSEMBLY (E.A1.73.284)						—	—	—	99/22
		Spares for:—									
5258	EEAS.143/6/H or	CLIP, pipe, single, 1/4" o/d, bonding						18	L72	C	99/47
5K/4345976	AS.4526/4	Attaching parts for EEAS.143/6/H:—									
28D/1010658	A25/1B	Bolt, 4 BA hex. head						1	—	C	99/50
28D/1008149	A25/2B	Bolt, 4 BA hex. head (outer wing rib 1)						1	—	C	99/49
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA (outer wing rib 1)						1	—	C	99/51
28M/9403619	A27/BP	Nut, 4 BA plain						1	—	C	99/45
5259	EEAS.21/2/ER/H or	Washer, "D"						1	L72	C	99/48
	EEAS.239/1CH										
28W/1010155	AGS.162/B	Washer, spring						1	—	C	99/46
945	E.A1.73.284C or	PIPE, assembly, from coupling between outer wing rib 1 and 2A to coupling between ribs 2 and 2B, "in" line						1	DTD323	C	99/15
946	E.A1.73.284D or	PIPE, assembly, from coupling between outer wing ribs 1 and 2A to coupling between ribs 2 and 2B, "out" line						1	DTD323	C	99/26
	E.A3.73.1254										

Restricted

SERVICES
HYDRAULIC EQUIPMENT IN STARBOARD WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
947	E.A1.73.284E or E.A3.73.1256	PIPE, assembly, from coupling between outer wing ribs 2 and 2B to coupling between outer wing ribs 3 and 3A, "in" line							1	DTD323	C	99/10
948	E.A1.73.284F or E.A3.73.1258	PIPE, assembly, from coupling between outer wing ribs 2 and 2B to coupling between outer wing ribs 3 and 3A, "out" line							1	DTD323	C	99/24
949	E.A1.73.284G or E.A3.73.1260	PIPE, assembly, from coupling between outer wing ribs 3 and 3A to coupling at bracket on rib 3, "out" line							1	DTD323	C	99/5
950	E.A1.73.284H or E.A3.73.1262	PIPE, assembly, from coupling between outer wing ribs 3 and 3A to coupling at bracket on rib 3, "in" line							1	DTD323	C	99/7
1985	E.A1.73.284J or E.A3.73.1264	PIPE, assembly, from coupling inboard of inner wing rib 7 to coupling between outer wing ribs 1 and 2A, "out" line							1	DTD323	C	99/30
1986	E.A1.73.284K or E.A3.73.1266	PIPE, assembly, from coupling inboard of inner wing rib 7 to coupling between outer wing ribs 1 and 2A, "in" line							1	DTD323	C	99/18
	—	PIPES, HYDRAULIC, FOR AIR BRAKE ON RIB 3, OUTER WING, ASSEMBLY (E.A1.73.286) Spares for:—							—	—	—	99/2
5258	EEAS.143/6/H or 5K/4345976	CLIP, pipe, single, 1/4" o/d bonding							2	L72	C	99/11
28D/1010658	A25/1B	Attaching parts for EEAS.143/6/H:— Bolt, 4 BA hex. head							1	—	C	99/3
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA							1	—	C	99/16
5259	EEAS.21/2/ER/H or EEAS.239/1CH	Washer, "D"							1	L72	C	99/8
5243	E.A3.73.832 or E.A3.73.1268	PIPE, coil, assembly, from coupling on bracket at rib 3 to connection on air brake jack, "in" position							1	DTD477	C	99/20
5245	E.A3.73.834 or E.A3.73.1270	PIPE, coil, assembly, from coupling on bracket at rib 3 to banjo connection on air brake jack, "out" position							1	DTD477	C	99/13
	—	PIPES, HYDRAULIC, ON FIXED FAIRING, ASSEMBLY (E.A3.73.312) Spares for:—							—	—	—	100/8
1875	E.A3.73.601	ADAPTOR, charging valve and test gauge							1	L65	C	100/11
2458	E.A3.73.636	BRACKET, special, pipes mounting							1	L72	C	100/4
5542	EEAS.143/6 or 28E/9130611	CLIP, pipe, single, 1/4" o/d							1	L72	C	100/5
28D/1010658	A25/1B	Attaching parts for EEAS.143/6:— Bolt, 4 BA hex. head							1	—	C	100/1
28M/9403519	A27/BP	Nut, 4 BA plain							1	—	C	100/6
28W/1010155	AGS.162/B or EEAS.237/17CH	Washer, spring							1	—	C	100/2
28E/9130692	AS.5419/11	CLIP, pipe, single, 3/4" o/d							1	L72	C	100/14
	A28/1C	Attaching parts for AS.5419/11:— Bolt, 2 BA hex. head							1	—	C	100/13
	EEAS.239/2C	Washer, 'D'							1	—	C	

R
R
R

SERVICES

HYDRAULIC EQUIPMENT IN STARBOARD WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
1746	E.A3.73.574 or E.A3.73.1238	PIPE, assembly, from charging valve and test gauge tee piece to flexible pipe bracket hydraulic brake "pressure" line	1	DTD323	C	100/10
1876	E.A3.73.599	TEE-PIECE, test gauge and charging valve	1	L40	C	100/12
	—	PIPES, HYDRAULIC, ON RIB E, WHEEL BAY, ASSEMBLY (E.A3.73.530)	—	—	—	101/12
		Spares for:—				
5258	EEAS.143/6H or 5K/4345976	CLIP, pipe, single, 1/4" o/d, bonding	2	L72	C	101/7
		Attaching parts for EEAS.143/6H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	101/16
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	101/8
5259	EEAS.21/2/ER/H or EEAS.237/17CH	Washer, "D"	1	L72	C	101/13
2008	E.A3.73.536 or E.A3.73.1236	PIPE, assembly, from undercarriage door jack sequence valve to tee coupling at wheel well diaphragm, "open" line	1	DTD323	C	101/5
	—	PIPES, HYDRAULIC, AT WHEEL WELL BAY DIAPHRAGM, ASSEMBLY (E.A3.73.532)	—	—	—	101/18
		Spares for:—				
829	E.A1.73.181	CLIP, thermal relief valve	1	T45	C	101/2
		Attaching parts for E.A1.73.181:—				
28D/9133014	A25/13C	Bolt, 2 BA hex. head	2	—	C	101/3
28M/1278190	AGS.2001/C/1 AS.2307/030	Nut, stiff, 2 BA	2	—	C	101/1
		Tube, distance	2	L62	LM	101/4
5260	EEAS.143/5/H or 5K/6323922	CLIP, pipe, single, 3/16" o/d bonding	3	L72	C	101/20
		Attaching parts for EEAS.143/5/H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	101/24
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	101/19
5259	EEAS.21/2/ER/H or EEAS.237/17CH	Washer, "d"	1	L72	C	101/21
5258	EEAS.143/6H or 5K/4345976	CLIP, pipe, single, 1/4" o/d bonding	6	L72	C	101/26
		Attaching parts for EEAS.143/6H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	101/28
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	101/25
5259	EEAS.21/2/ER/H or EEAS.239/17CH	Washer, "D"	1	L72	C	101/27
908	E.A3.73.562 or E.A3.73.1242	PIPE, assembly, from tee coupling at undercarriage door diaphragm to flexible hose coupling, undercarriage door jack "down" line	1	DTD323	C	101/23
4526	E.A3.73.648	PIPE, assembly, from tee coupling to thermal relief valve, "down" line	1	DTD323	C	101/15
4527	E.A3.73.650	PIPE, assembly, from thermal relief valve at wheel bay diaphragm to tee coupling on main spar between ribs A and B	1	DTD323	C	101/10

AP101B-0417-3A

SERVICES

HYDRAULIC EQUIPMENT IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	PIPES, HYDRAULIC, ON FUSELAGE SIDE, WHEEL BAY, ASSEMBLY (EA3.73.816) Spares for:—	-	-	101/30
EA1.73.183	BODY, banjo, right angled, 1/4" x 3/8" BSP, for undercarriage door jack and sequence valve connections	1	L65	101/50
EA1.73.277	BOLT, banjo, cone end, at special banjo fitting	1	S96	101/51
EA3.73.1461	CLIP (Mod 5190) (Pre-Mod 5503)	1	-	101/43
EA3.73.1493	CLIP, hose (Mod 5503) Attachments:—	1	-	
A25/12C	Bolt, 2BA	2	-	101/42
A27/CP	Nut, 2BA, plain	2	-	101/52
SP47/C	Washer, spring	2	-	101/49
EEAS91/3	CLIP, pipe, double, 3/8" o/d	3	L72	101/44
EEAS143/8/H or AS4526/6	CLIP, pipe, single 3/8" o/d bonding Attachments:—	5	L72	101/36
A25/1B	Bolt, 4BA hex head	1	-	101/53
AGS2001/B/1	Nut, stiff, 4BA	1	-	101/54
EA3.73.552	PIPE, assembly, from banjo fitting at undercarriage door jack hose to variable flow tee coupling 'closed' line	1	DTD323	101/33
EA3.73.554	PIPE, assembly, from sequence valve to thermal relief valve tee at wing main spar, 'closed' line	1	DTD323	101/37
EA3.73.586	PIPE, assembly, from restrictor valve to tee coupling, undercarriage door jack 'closed' line	1	DTD323	101/48
EA3.73.818	PIPE, assembly, from sequence valve to 4-way coupling at main spar, undercarriage door 'closed' line	1	DTD323	101/46
EA3.73.820	PIPE, assembly, from tee coupling to thermal relief valve and transfer valve 4-way coupling, 'closed' line	1	DTD323	101/31
EA3.73.856	PIPE, from restrictor valve to undercarriage jack hose connection, 'closed' line	1	DTD323	101/40
AGS1186/C	SEAL, bonded, between banjo fitting and banjo bolt	2	-	101/41
EEAS21/2/ER/H or EEAS237/17CH	WASHER, 'D', for bonding clips	5	L72	101/35
-	PIPE, HYDRAULIC, ON MAIN SPAR UNDER-CARRIAGE BAY, ASSEMBLY (EA3.73.822) Spares for:—	-	-	102/64
EA1.73.107	BRACKET, for clip, rib C Attaching parts for EA1.73.107:—	1	-	102/14
A25/1C	Bolt, 2BA hex head	4	-	102/4
A27/CP	Nut, 2A plain	4	-	102/1
AGS162/C	Washer, spring	4	-	102/2
EA1.70.71	BRACKET, for coupling, rib B Attaching parts for EA1.70.71:—	1	-	102/52
A25/1C	Bolt, 2BA hex head	4	-	102/54
A27/CP	Nut, 2BA plain	4	-	102/49
AGS162/C	Washer, spring	4	-	102/53

R

R

R

R

SERVICES

HYDRAULIC EQUIPMENT IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA3.73.790	. . BRACKET, for pipe and clip, rib B Attaching parts for EA3.73.790:—	1	L72	102/10
A25/1C	. . Bolt, 2BA hex head	4	—	102/8
A27/CP	. . Nut, 2BA plain	4	—	102/3
AGS162/C	. . Washer, spring	4	—	102/6
EA3.73.793	. . BRACKET, transfer valve mounting, rib B, assembly Attaching parts for EA3.73.793:—	1	L72	102/19
A25/1C	. . Bolt, 2BA hex head	4	—	102/26
A27/CP	. . Nut, 2BA plain	4	—	102/17
AGS162/C	. . Washer, spring	4	—	102/20
EA1.73.181	. . CLIP, for thermal relief valves and pipes, ribs A, B and C (Pre-Mod 5503)	4	145	102/12
EA1.73.181	. . CLIP, for thermal relief valve (Mod 5503)	2	—	102/12
EA3.73.1489	. . CLIP, hose (Mod 5503) Attaching parts for EA1.73.181:—	2	—	102/12A
A25/10C	. . Bolt, 2BA hex head (ribs B and C)	2	—	102/13
A25/11C	. . Bolt, 2BA hex head (rib A)	2	—	102/44
AGS2001/C/1	. . Nut, stiff, 2BA (rib A)	2	—	102/45
A27/CP	. . Nut, 2BA plain (rib A, B)	2	—	102/46
AGS162/C	. . Washer, spring (rib A)	2	—	102/47
SP13/C	. . Washer, 2BA plain (rib A)	2	—	102/48
SP15/C	. . Washer, 2BA plain (ribs B and C)	2	—	102/7
EA3.73.797	. . CLIP, transfer valve, rib B Attaching parts for EA3.73.797:—	1	T45	102/39
A25/14C	. . Bolt, 2BA hex head	2	—	102/40
AS5419/11	. . CLIP, pipe, single, 3/4" o/d, bonding Attaching parts for AS5419/11:—	4	L72	102/27
A25/2C	. . Bolt, 2BA hex head	1	—	102/24
AGS2001/C/1	. . Nut, stiff, 2BA	1	—	102/23
EEAS21/2/ER/H or EEAS239/17CH	. . Washer, "D"	1	L72	102/15
EA1.73.177	. . COUPLING, tee, 3/8" x 3/8" x 3/16" BSP	1	L40	102/56
EA1.73.109	. . GUARD, for flexible pipe, rib C Attaching parts for EA1.73.109:—	1	L72	102/22
A25/1C	. . Bolt, 2BA hex head	2	—	102/11
A25/2C	. . Bolt, 2BA hex head	2	—	102/21
A27/CP	. . Nut, 2BA plain	4	—	102/16
EA1.73.297	. . Plate, back	1	L72	102/5
AGS162/C	. . Washer, spring	4	—	102/18
EA3.73.538	. . PIPE, assembly, from sequence valve 4-way piece to flexible coupling, undercarriage jack "down" connection	1	DTD323	102/62
EA3.73.937	. . PIPE, assembly, from sequence valve 4-way piece at main spar to sequence valve, "down" line	1	DTD323	102/34
EA3.73.550 or EA3.73.1234	. . PIPE, assembly, from coupling inboard of rib A to coupling for flexible pipe at rib B, brake "pressure" line	1	DTD323	102/51
EA3.73.652	. . PIPE, assembly, from upper thermal relief valve at rib A to tee coupling between ribs A and B, "return" line	1	DTD323	102/32

SERVICES

HYDRAULIC EQUIPMENT IN STARBOARD WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
5536	E.A3.73.730							PIPE, assembly, from coupling inboard of rib A to tee coupling between ribs A and B, "return" line	1	DTD323	C	102/58
5538	E.A3.73.805							PIPE, assembly, from thermal relief valve 4-way coupling inboard of rib A to transfer valve at rib B, undercarriage jack "up" line	1	DTD323	C	102/29
6639	E.A3.73.808							PIPE, assembly, from transfer valve at rib B to adaptor for flexible pipe at rib C, undercarriage jack "up" line	1	DTD323	C	102/30
41174	E.A3.73.5134							PIPE, assembly, from 4-way coupling inboard of rib A to upper thermal relief valve at rib A	1	DTD323	C	102/37
R 6119447	EA3.73.1471							PIPE, assembly from transfer valve to N.R.V. rib A (Mod. 5118)	1	—	C	102/25
R 6119448	EA3.73.1467							PIPE, assembly N.R.V. rib A to tee piece (Mod. 5118)	1	—	C	102/25A
41178	E.A3.73.5140							PIPE, assembly, from tee coupling inboard of rib A to lower thermal relief valve at rib A	1	DTD323	C	102/60
41180	E.A3.73.5142							PIPE, assembly, from 4-way coupling inboard of rib A to outlet side of lower thermal relief valve at rib A	1	DTD323	C	102/42
6062	E.A1.70.73							WASHER, special, for clips	2	L72	C	102/55
5259	EEAS.21/2/ER/H							WASHER, 'O', clip attachment	11	L72	C	102/28

[illegible][illegible][illegible]

SERVICES

HYDRAULIC EQUIPMENT IN INNER WING LEADING EDGE, PORT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
	—	HYDRAULIC EQUIPMENT IN INNER WING LEADING EDGE, PORT, ASSEMBLY (E.A3.04.10911) Spares for:—	—	—	—	104/8
886	E.A1.73.189	BODY, banjo, for flexible connection at Lockheed hydraulic pump, "delivery" line	1	L40	C	104/20
37585	E.A1.73.403	BODY, banjo, for flexible connection at Lockheed hydraulic pump, "suction" line	1	DTD423	C	104/29
881	E.A1.73.191	BOLT, banjo, at Lockheed hydraulic pump, "suction" line	1	S95	C	104/27
882	E.A1.73.193	BOLT, banjo, at Lockheed hydraulic pump, "delivery" line	1	S96	C	104/21
5348	EEAS.143/8/H or 5K/4345964 AS.4525/6	CLIP, pipe, single, 3/8" o/d, bonding	1	L72	C	104/15
		Attaching parts for EEAS.143/8/H:—				
28D/1010658	A25/1B	Bolt, 4 BA hex. head	1	—	C	104/16
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	104/17
5259	EEAS.21/2/ER/H or EEAS.237/17CH	Washer, "D"	2	L72	C	104/18
5501	EEAS.143/19 or 5K/4345977 AS.4526/6	CLIP, pipe, single, 3/8" o/d	1	L72	C	104/25
		Attaching parts for EEAS.143/19:—				
28D/1200119	A25/4C	Bolt, 2 BA hex. head	1	—	C	104/19
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	1	—	C	104/31
	AS.2307/025	Plate, distance	1	—	—	104/26
28W/9419475	SP15/C	Washer, 2 BA plain	1	—	C	104/28
5259	EEAS.21/2/ER/H or EEAS.237/17CH	Washer, "D"	1	L72	C	104/23
17529	EEAS.143/23 or 5K/4345979 AS.4526/10	CLIP, pipe, single, 5/8" o/d	1	L72	C	104/10
		Attaching parts for EEAS.143/23:—				
28D/9436920	A25/1C	Bolt, 2 BA hex. head	1	—	C	104/11
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	1	—	C	104/12
28W/9419475	SP15/C	Washer, 2 BA plain	1	—	C	104/13
5523	EEAS.143/23/H or 5K/4345979 AS.4526/10	CLIP, pipe, single, 5/8" o/d, bonding	1	L72	C	104/30
		Attaching parts for EEAS.143/23/H:—				
28D/9436920	A25/1C	Bolt, 2 BA hex. head	1	—	C	104/22
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	1	—	C	104/32
9763	E.A3.73.55 or EEAS.239/2CH	Washer, "D"	2	L72	C	104/24
30965	E.A3.73.915	COUPLING, pipe	1	S91	C	104/6
884	E.A1.73.251	FAIRLEAD, at diaphragm between ribs 2 and 3	2	LFS21	C	104/3
1414	E.A1.73.252	FAIRLEAD, at diaphragm between ribs 2 and 3	2	LFS21	C	104/1
		Attaching parts for E.A1.73.251 and E.A1.73.252:—				
28D/1017157	A25/25C	Bolt, 2 BA hex. head	2	—	C	104/5
28M/4095911	A29/CP	Nut, 2 BA plain	2	—	C	104/2
17508	AS.2810/5/143	Tube, distance	2	L62	LM	104/4
6888	E.B6.73.191	PIPE, assembly, from coupling inboard of rib 1 to coupling at rib 2, "suction" line	1	L56	C	104/7
30978	E.A4.73.283	PIPE, assembly, from coupling inboard of rib 1 to coupling at rib 2, "delivery" line	1	—	C	104/14
981	EEAS.20/2/DR	TAB, locking	4	L72	C	104/9

A.P.101B-0417-3A

SERVICES

Page NAF 1

HYDRAULIC EQUIPMENT IN INNER WING LEADING EDGE, STARBOARD

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	HYDRAULIC EQUIPMENT IN INNER WING LEADING EDGE, STARBOARD, ASSEMBLY (E.A3.04.10907)							—	—	—	105/42
		Spares for:—										
886	E.A1.73.189	BODY, banjo, for flexible connection at Lockheed hydraulic pump, "delivery" line							1	L40	C	105/14
37585	E.A1.73.403	BODY, banjo, for flexible connection at Lockheed hydraulic pump, "suction" line							1	L65	C	105/30
881	E.A1.73.191	BOLT, banjo, at Lockheed hydraulic pump, "suction" line							1	S96	C	105/41
882	E.A1.73.193	BOLT, banjo, at Lockheed hydraulic pump, "delivery" line							1	S96	C	105/15
15210	E.A2.75.413	BRACKET, clamp mounting, at cabin air non-return valve inboard engine rib							1	MS	C	105/10
5157	E.A2.75.415	CLAMP, for Lockheed hydraulic pump flexible pipes at inboard engine rib							2	LFS21	C	105/1
		Attaching parts for E.A2.75.415:—										
28D/1011022	A25/18C	Bolt, 2 BA hex. head							3	—	C	105/6
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							3	—	C	105/4
28W/9419402	SP13/C	Washer, 2 BA plain							3	—	C	105/5
2340	E.A3.73.281	CLIP, half, accumulator mounting							2	L72	C	105/48
		Attaching parts for E.A3.73.281:—										
28D/9133011	A25/2C	Bolt, 2 BA hex. head							4	—	C	105/45
28W/9419402	SP13/C	Washer, 2 BA plain							4	—	C	105/46
30966	E.A3.73.905	CONE, tee, cut out valve junction pipe							1	S91	C	105/19
36815	E.A3.73.919	CONE, tee							1	S91 or S93	C	105/20
30967	E.A3.73.907	COUPLING, flanged bulkhead cone union, rib 1, "delivery" line							1	S91	C	105/24
		Attaching parts for E.A3.73.907:—										
28D/9133011	A25/2C	Bolt, 2 BA hex. head							6	—	C	105/43
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							6	—	C	105/40
28W/9419402	SP13/C	Washer, 2 BA plain							6	—	C	105/37
28F/9128929	AGS.1115/4	Washer, plate							1	—	C	105/31
2364	E.A2.73.111	ELBOW, union, pressure gauge connection, assembly							1	—	C	105/35
891	E.A1.73.199	FAIRLEAD, at rib 1							1	LFS21	C	105/9
		Attaching parts for E.A1.73.199:—										
28D/9133012	A25/3C	Bolt, 2 BA hex. head							6	—	C	105/21
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							6	—	C	105/11
28W/9419402	SP13/C	Washer, 2 BA plain							6	—	C	105/12
5037	E.A1.73.293	FAIRLEAD, clamp, rib 2							1	BSS216	C	105/3
		Attaching parts for E.A1.73.293:—										
28D/9435710	A25/11C	Bolt, 2 BA hex. head							2	—	C	105/2
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA							2	—	C	105/8
28W/9419402	SP13/C	Washer, 2 BA plain							2	—	C	105/7

Page NAF2

SERVICES

HYDRAULIC EQUIPMENT IN INNER WING LEADING EDGE, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
6889	E.A1.73.385	FAIRLEAD, rib 2	1	LFS21	C	105/47
28D/9140644	A25/9C	Attaching parts for E.A1.73.385:—				
28M/1278190	AGS.2001/C/1	Bolt, 2 BA hex. head	2	—	C	105/44
28W/9419402	SP13/C	Nut, stiff, 2 BA	2	—	C	105/50
		Washer, 2 BA plain	2	—	C	105/49
904	E.A1.73.96Q	PIPE, assembly, from Avery coupling to coupling at	1	L56	C	105/22
		rib 1, "suction" line				
6896	E.B7.73.61	PIPE, assembly, from cut-out valve to accumulator	1	DTD323	C	105/17
		and non-return valve tee cone, "pressure" line				
6897	E.B7.73.65	PIPE, assembly, from accumulator to tee cone,	1	DTD323	C	105/36
		"pressure" line				
6898	E.B7.73.69	PIPE, assembly, from pressure gauge cone tee to	1	DTD323	C	105/33
		pressure gauge				
R 6899	E.B7.73.71 or	PIPE, assembly, from pressure gauge cone tee to	1	DTD323	C	105/29
	E.B7.73.5213	charging valve				
R 6900	E.B7.73.73 or	PIPE, assembly, from accumulator to coupling at rib 1 ...	1	DTD323	C	105/23
	E.B7.73.5215					
R 6904	E.B6.73.175 or	PIPE, assembly, from coupling at rib 1 to charging	1	DTD323	C	105/27
	E.B7.73.5217	valve and pressure gauge cone tee				
6903	E.B6.73.181	PIPE, assembly, from coupling inboard of rib 1 to	1	DTD323	C	105/39
		coupling between rib 1 and 2, "return" line				
6895	E.B6.73.183	PIPE, assembly, from coupling between ribs 1 and 2	1	DTD323	C	105/18
		to cut-out valve, "return" line				
6901	E.B6.73.185	PIPE, assembly, from accumulator tee cone inboard	1	DTD323	C	105/36
		of rib 2 to non-return valve inboard of rib 1, "pressure" line				
30960	E.A3.73.895	PIPE, assembly, from Avery coupling to non-return	1	T55	C	105/16
		valve inboard of rib 3, "delivery" line				
30961	E.A3.73.897	PIPE, assembly, from non-return valve to cut-out valve ...	1	T55	C	105/25
		tee between ribs 2 and 3				
30962	E.A3.73.899	PIPE, assembly, from tee to cut-out valve between	1	T55	C	105/32
		ribs 2 and 3				
30963	E.A3.73.901	PIPE, assembly, from cut-out valve tee between ribs 2 ...	1	T55	C	105/28
		and 3 to non-return valve between ribs 1 and 2				
30964	E.A3.73.903	PIPE, assembly, from non-return valve to coupling	1	T55	C	105/34
		at rib 1				
980	EEAS.20/1/DR	TAB, locking	4	L72	C	105/38
981	EEAS.20/2/DR	TAB, locking	7	L72	C	105/13

A.P.101B-0417-3A

Page NAG1

SERVICES
NITROGEN PRESSURISING OF WAVEGUIDES AND CO-AXIAL CABLES
IN FRONT FUSELAGE

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
—		NITROGEN PRESSURISING OF WAVEGUIDES AND CO-AXIAL CABLES IN FRONT FUSELAGE, ASSEMBLY (EG7.79.43)	—	—	64/6
—		Spares for: PANEL, NITROGEN CHARGING, INSTALLATION (EG7.79.5)	—	—	64/7
EG7.79.37		Spares for: BRACKET, mounting, assembly	2	L72	65/29
6D/641		LABEL, 'N.R.V., Mk.1, 6D/427'	2	—	65/32
EG7.79.11		PANEL, NITROGEN CHARGING, ASSEMBLY	1	—	65/13
EG7.79.163		Spares for: CLAMP	1	L72	64/26
A25/13C		Attaching parts for EG7.79.163: Bolt, 2BA hex. head	2	—	64/24
EG7.79.165		Plate, radius	2	L72	64/25
R 6A/1051033		GAUGE, pressure, Mk.14H, 0-200 lb/sq. in. Attaching parts for 6A/1051033:	1	—	65/19
A113/1/2B		Bolt, 6 UNC mushroom head	4	—	65/15
SP47/B		WASHER, 4BA spring	4	—	65/16
R SIS3592		GAUGE, pressure, Mk.14LL	1	—	65/34
or R 10069 N & Z		GAUGE, pressure, Attaching parts for SIS3592 or 10069 N & Z:	1	—	
A113/1/2B		Bolt, 6 UNC mushroom head	4	—	65/24
or AS1246/1/2B		Bolt, 4BA round head	4	—	65/25
SP47/B		Washer, 4BA spring	4	—	65/26
R 6A/4333080		GAUGE, pressure, Mk.14Q, 0-50 lb/sq. in. Attaching parts for 6A/4333080:	2	—	65/4
A113/1/2B		Bolt, 6 UNC, mushroom head	4	—	65/11
SP47/B		Washer, 4BA spring	4	—	65/12
EG7.79.169		PACKING, for valve at clamp, 1/16" thick (Make from 32B/1206530)	1	Langite	64/22
EG7.79.41		PACKER, charging valve adaptors	2	L65 or L72	65/35
EG7.79.13		PANEL, ASSEMBLY	1	—	65/14
EG7.79.161		Spares for: BLOCK, mounting	1	Tufnol	64/23
EG7.79.25		LABEL, 'NITROGEN CHARGING'	1	—	65/20
EG7.79.27		LABEL, 'NITROGEN PRESS'	1	—	65/23
EG7.79.29		LABEL, 'CO-AX PRESS'	1	—	65/30
EG7.79.31		LABEL, 'WAVEGUIDE PRESS'	1	—	65/33
EG7.79.33		LABEL, 'BRAKE ACC. PRESS'	1	—	65/27
EG7.79.35		LABEL, 'BRAKE ACC. CHARGING'	1	—	65/21
EG7.79.171		LABEL, 'CAUTION'	1	L72	64/9

SERVICES
NITROGEN PRESSURISING OF WAVEGUIDES AND CO-AXIAL CABLES
IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.79.177	 LABEL, 'NITROGEN'	1	—	64/14
AS2307-05	 TUBE, distance	1	—	65/1
H.P. COMP'S				
A58	 VALVE, brake accumulator charging	1	—	65/17
H.P. COMP'S				
A190/Mk.2	 VALVE, nitrogen charging	1	—	65/18
ADAMS				
BNA3	 VALVE, nitrogen, 'ON/OFF'	1	—	65/3
	Attaching parts for BNA3:			
A25/2C	 Bolt, 2BA hex. head	2	—	65/2
SP15/C	 Washer, 2BA plain	2	—	65/10
HYMATIC				
RAV-131-015	 VALVE, pressure	1	—	65/8
HYMATIC				
N.PAS220-007	 VALVE, pressure reducing	1	—	65/7
	Attaching parts for N.PAS220-007:			
AGS2002/C/1	 Nut, stiff, 2BA	4	—	65/6
SP15/C	 Washer, 2BA plain	4	—	65/5
EG7.79.181	 VALVE, PRESSURE REDUCING, ASSEMBLY	1	—	64/12
	Consisting of:			
EG7.79.179	 PLATE, adaptor	1	—	64/1
A37/C12	 SCREW, 2BA c'sk head	4	—	64/4
DUNLOP				
ACM24950	 VALVE, reducing	1	—	65/9
	Attaching parts for EG7.79.181:			
A25/2C	 Bolt, 2BA hex. head	4	—	64/2
SP15/C	 Washer, 2BA plain	4	—	64/3
	Attaching parts for EG7.79.11:			
A25/1C	 Bolt, 2BA, hex.head	6	—	65/28
R 1660-99-2243645	 PIECE, connecting, 3-way, Mk.3A	4	—	65/22
EG7.79.63	 PIPE, assembly, 3-way piece to non-return valve	1	T51	64/19
	pressure gauge line, 3/16" o/d x 22 SWG			
EG7.79.65	 PIPE, assembly, 3-way piece to non-return valve,	1	T51	64/20
	pressure gauge line, 3/16" o/d x 22 SWG			
EG7.79.67	 PIPE, assembly, from non-return valve to pressure	1	T51	64/17
	gauge, 3/16" o/d x 22 SWG			
EG7.79.69	 PIPE, assembly, from non-return valve to pressure	1	T51	64/18
	gauge, 3/16" o/d x 22 SWG			
EG7.79.71	 PIPE, assembly, from 3-way piece to pressure	1	T51	64/21
	reducing valve, 3/16" o/d x 22 SWG			
EG7.79.73	 PIPE, assembly, between hymatic valves, 3/16"	1	T51	64/11
	o/d x 22 SWG			
EG7.79.75	 PIPE, assembly, from 'ON/OFF' valve to 3-way	1	Y51	64/15
	piece, main line to nitrogen bottle,			
	3/16" o/d x 22 SWG			

SERVICES
NITROGEN PRESSURISING OF WAVEGUIDES AND CO-AXIAL CABLES
IN FRONT FUSELAGE

Part Number	Description						No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5	6			
EG7.79.77	.	.	PIPE, assembly, from pressure gauge to 3-way				1	T51	64/16
			piece, main line to nitrogen bottle,						
			3/16" o/d x 22 SWG						
EG7.79.79	.	.	PIPE, assembly, between Hymatic valve and				1	T51	64/5
			'ON/OFF' valve, 1/4" o/d x 22 SWG						
EG7.79.201	.	.	PIPE, assembly, from charging valve to nitrogen				1	T51	64/13
			bottle line connection, 3/16" o/d x						
			22 SWG						
EG7.79.183	.	.	PIPE, assembly, from Hymatic valve to test point				1	T51	64/10
			cone tee, 3/16" o/d x 22 SWG						
EG7.79.186	.	.	PIPE, assembly, from pressure reducing valves				1	T51	64/8
			to test point cone tee, 3/16" o/d x						
			22 SWG						
R 6D/427	.	.	VALVE, non-return, Mk 1				2	-	65/31
-	.	.	NITROGEN PRESSURISING SYSTEM,				-	-	66/1
			CO-AXIAL AND WAVE GUIDES						
			IN UPPER EQUIPMENT BAY,						
			ASSEMBLY (EG7.79.3)						
			Spares for:—						
EG7.79.157	.	.	CLIP, pipe, double				1	L72	66/9
			(Make from EEAS91/4, Ref 3413)						
			Attaching parts for EG7.79.157:—						
A25/1C	.	.	Bolt, 2BA hex head				1	-	66/7
SP15/C	.	.	Washer, 2BA plain				1	-	66/8
EEAS91/4	.	.	CLIP, pipe, double				7	L72	66/4
			Attaching parts for EEAS91/4:—						
A25/1B	.	.	Bolt, 4BA hex head				1	-	66/6
AGS2001/B/1	.	.	Nut, stiff, 4BA				1	-	66/2
SP15/B	.	.	Washer, 4BA plain				1	-	66/3
R 6D9429891	.	.	CYLINDER, nitrogen, 750 litre, Mk 5D				2	-	66/14
EG7.79.167	.	.	FAIRLEAD				1	Tufnol	66/31
			Attaching parts for EG7.79.167:—						
A25/3B	.	.	Bolt, 4BA hex head				4	-	66/32
AGS2001/B/1	.	.	Nut, stiff, 4BA				4	-	66/34
SP15/B	.	.	Washer, 4BA plain				4	-	66/33
R 6D574	.	.	FILTER				1	-	66/21
R 6D641	.	.	LABEL, non-return valve				1	-	66/16
EEAS98/4	.	.	LUG, non-return valve clip				1	L72	66/36
EA1.71.61	.	.	PAD, rubber, nitrogen cylinder seating				2	-	66/10
R 1660-99-2243528	.	.	PIECE, connecting, 2-way				4	-	66/20
R 1660-99-2243645	.	.	PIECE, connecting, 3-way				1	-	66/38
EG7.79.131	.	.	PIPE, assembly, between nitrogen cylinders,				2	T51	66/15
			3/16" o/d x 22 SWG						
EG7.79.135	.	.	PIPE, assembly, from 2-way piece to nitrogen				1	T51	66/19
			cylinder, 3/16" o/d x 22 SWG						
EG7.79.137	.	.	PIPE, assembly, from 2-way to 3-way piece,				1	T51	66/24
			relief valve line, 3/16" o/d x 22 SWG						

SERVICES
NITROGEN PRESSURISING OF WAVEGUIDES AND CO-AXIAL CABLES
IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EG7.79.139	PIPE, assembly, from 3-way piece to reducing valve, 3/16" o/d x 22 SWG	1	T51	66/37
EG7.79.141	PIPE, assembly, from 3-way piece to nitrogen cylinder, 3/16" o/d x 22 SWG	1	T51	66/27
EG7.79.143	PIPE, assembly, from charging panel to 2-way piece, 3/16" o/d x 22 SWG	1	T51	66/22
EG7.79.145	PIPE, assembly, between 2-way piece forward of frame 12, 3/16" o/d x 22 SWG	1	T51	66/25
EG7.79.147	PIPE, assembly, from 2-way piece to nitrogen cylinder, 3/16" o/d x 22 SWG	1	T51	66/18
EG7.73.101	PLATE, clipping	3	L72	66/5
EA1.71.63	SCREW, trunnion, straps securing	4	S1	66/11
EA1.71.37	STRAP, cylinder, assembly	4	DTD390	66/12
EA1.71.39	STRAP, cylinder, assembly	4	DTD390	66/13
	Attaching parts for EA1.71.37 and 39:—			
A25/10E	Bolt, 1/4" BSF hex head	1	-	66/30
AGS2001/E/1	Nut, stiff, 1/4" BSF	1	-	66/29
EA1.71.65	Piece, distance	1	L62	66/23
SP15/E	Washer, 1/4" BSF plain	1	-	66/28
R 6D1497	UNION, blanking	2	-	66/26
HYMATIC	VALVE, pressure relief	1	-	66/35
RV18/Mk 8				
R 6D427	VALVE, non-return	1	-	66/17
-	NITROGEN PRESSURISING SYSTEM WAVEGUIDES AND CO-AXIAL CABLES IN LOWER EQUIPMENT BAY, ASSEMBLY (EG7.79.7)	-	-	67/42
	Spares for:—			
EG7.79.157	CLIP, pipe, double (Make from EEAS91/4, Ref 3413)	1	L72	67/20
EEAS91/4	CLIP, pipe, double	1	L72	67/19
	Attaching parts for EEAS91/4:—			
A25/2B	Bolt, 4BA hex head	1	-	67/18
AGS2001/B/1	Nut, stiff, 4BA	1	-	67/23
SP15/B	Washer, 4BA plain	1	-	67/22
EG7.79.149	FAIRLEAD, at floor member, frame 12	1	Tufnol	67/2
EG7.79.151	FAIRLEAD, frame 12, starboard	1	Tufnol	67/39
	Attaching parts for EG7.79.151:—			
A25/8B	Bolt, 4BA hex head	2	-	67/36
A25/9B	Bolt, 4BA hex head	2	-	67/38
AGS2001/B/1	Nut, stiff, 4BA	4	-	67/41
EG7.79.159	Plate, radius	1	L72	67/37
SP15/B	Washer, 4BA plain	4	-	67/40
EG7.79.195	FAIRLEAD, frame 12	1	LFS21	67/3
R 6D641	LABEL, non-return valve	6	-	67/6

A.P.101B-0417-3A

SERVICES

Page NAG5

NITROGEN PRESSURISING OF WAVEGUIDES AND CO-AXIAL CABLES
IN FRONT FUSELAGE

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
6D/575	†	PIECE, connecting, 2-way						1	—	C	67/12
6D/603	†	PIECE, connecting, 3 way						3	—	C	67/9
6D/604	†	PIECE, connecting, 4-way						6	—	C	67/15
	E.G 7.79.83	PIPE, assembly, from non-return valve at charging panel to 3-way piece, 3/16" o/d x 22 SWG						1	T51	—	67/31
	E.G 7.79.85	PIPE, assembly, from non-return valve at charging panel to 4-way piece, 3/16" o/d x 22 SWG						1	T51	—	67/30
	E.G 7.79.87	PIPE, assembly, from 3-way to 4-way piece, frame 12, 3/16" o/d x 22 SWG						1	T51	—	67/35
	E.G 7.79.89	PIPE, assembly, from 4-way to 2-way piece, 3/16" o/d x 22 SWG						1	T51	—	67/33
	E.G 7.79.91	PIPE, assembly, from 4-way piece to non-return valve, 3/16" o/d x 22 SWG						1	T51	—	67/34
	E.G 7.79.93	PIPE, assembly, from 3-way piece at non-return valve to waveguide pressurising connection, 3/16" o/d x 22 SWG						1	T51	—	67/4
1438659	E.G 7.79.97	PIPE, assembly, from 3-way piece at non-return valve to waveguide pressurising connection, 3/16" o/d x 22 SWG						1	T51	C	67/5
	E.G 7.79.99	PIPE, assembly, from 3-way piece to non-return valve, frame 12, 3/16" o/d x 22 SWG						1	T51	—	67/32
	E.G 7.79.199	PIPE, assembly, from 4-way piece to 'M' band co-ax cable connection, 3/16" o/d x 22 SWG						1	T51	—	67/11
	E.G 7.79.103	PIPE, assembly, from 4-way piece to 'M' band connection, 3/16" o/d x 22 SWG						1	T51	—	67/10
R 6051729	E.G 7.79.109	PIPE, assembly, from 4-way piece to 'L' band co-ax aft connection, 3/16" o/d x 22 SWG						1	T51	C	67/26
	E.G 7.79.111	PIPE, assembly, from 4-way piece to 'L' band co-ax forward connection, 3/16" o/d x 22 SWG						1	T51	—	67/28
	E.G 7.79.113	PIPE, assembly, from 4-way piece to non-return valve, 3/16" o/d x 22 SWG						1	T51	—	67/17
	E.G 7.79.115	PIPE, assembly, between 3-way and 4-way piece, frame 12, 3/16" o/d x 22 SWG						1	T51	—	67/14
	E.G 7.79.117	PIPE, assembly, from 4-way piece to non-return valve, frame 12, 3/16" o/d x 22 SWG						1	T51	—	67/16
42667	E.G 7.79.119	PIPE, assembly, from 4-way piece to aft connection 'S' band transmitter, port, 3/16" o/d x 22 SWG						1	T51	C	67/25
42668	E.G 7.79.121	PIPE, assembly, from 4-way piece to forward connection 'S' band aerial, port, 3/16" o/d x 22 SWG						1	T51	C	67/29
	E.G 7.79.125	PIPE, assembly, between 4-way piece and non-return valve, frame 12, 3/16" o/d x 22 SWG						1	T51	—	67/13
42669	E.G 7.79.127	PIPE, assembly, from 4 way piece to aft connection 'S' band transmitter, starboard, 3/16" o/d x 22 SWG						1	T51	C	67/24

SERVICES
NITROGEN PRESSURISING OF WAVEGUIDES AND CO-AXIAL CABLES
IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
42670	E.G.7.79.129	PIPE, assembly, from 4-way piece to forward connection 'S' band aerial, starboard, 3/16" o/d x 22 SWG	1	T51	C	67/27
	E.G.7.79.153	PLATE, radius, for fairlead at floor member	1	L72	—	67/1
	E.G.7.79.155	PLATE, radius, for pipe clips	2	L72	—	67/21
6D/1497	†	UNION, blanking	6	—	C	67/8
6D/427	†	VALVE, non-return	6	—	C	67/7

SERVICES

NITROGEN PRESSURISING OF WAVEGUIDES IN BOMB BAY

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	NITROGEN PRESSURISING OF WAVEGUIDES IN BOMB BAY (EG7.79.9) (Pre Mod 5466) Spares for:-	-	-	68/8
EG7.79.175	. CLEAT	1	L72	68/1
EEAS143/8H	. CLIP, 'P'	13	L72	
6D641	. LABEL, non-return valve	2	-	68/12
OP4450	. PIECE, connecting, 2-way (Pre Mod 5466)	2	-	68/3
OP4460	. PIECE, connecting, 3-way (Pre Mod 5466)	3	-	68/9
EG7.79.45	. PIPE, assembly, from frame 12 to 2-way piece aft of frame 18, 3/16" o/d x 22 SWG	1	T51	68/5
EG7.79.47	. PIPE, assembly, from 2-way piece aft of frame 18 to 2-way piece aft of frame 23, 3/16" o/d x 22 SWG	1	T51	68/4
EG7.79.49	. PIPE, assembly, from 2-way piece aft of frame 23 to 3-way piece at frame 29, 3/16" o/d x 22 SWG	1	T51	68/2
EG7.79.51	. PIPE, assembly, from 3-way piece to non-return valve, frame 29, 3/16" o/d x 22 SWG	1	T51	68/10
EG7.79.53	. PIPE, assembly, from 3-way piece to non-return valve, frame 29, 3/16" o/d x 22 SWG	1	T51	68/6
EG7.79.55	. PIPE, assembly, from 3-way piece to waveguide connection, repeater input line, frame 29, 3/16" o/d x 22 SWG (Pre Mod 5466)	1	T51	68/13
EG7.79.57	. PIPE, assembly, from 3-way piece to waveguide connection, repeater output line, frame 29, 3/16" o/d x 22 SWG (Pre Mod 5466)	1	T51	68/15
AS2307/020	. TUBE, distance, clip attachment (Pre Mod 5466)	1	-	68/14
6D1497	. UNION, blanking	2	-	68/11
6D427	. VALVE, non-return	2	-	68/7
-	NITROGEN PURGING SYSTEM (EQUIPMENT AND WAVEGUIDES) IN PACK BAY (EG7.79.5025) (Mod 5466) Spares for:-	-	-	109/1
EG7.79.5057	. BRACKET, (Make from EEDX327) Attaching parts:-	1	-	109/2
A25/1C	. Bolt, 2 BA	2	-	109/3
AGS2001/C/1-66	. Nut, stiff, 2 BA	2	-	109/4
SP124/D	. Washer	2	-	109/5
AGS2081/3	. CLIP, pipe Attaching parts:-	6	-	109/7
A25/1C	. Bolt, 2 BA	1	-	109/8
AGS2001/C/1-66	. Nut, stiff, 2 BA	1	-	109/9
SP124/D	. Washer	1	-	109/10
AGS2081/3	. CLIP, pipe Attaching parts:-	8	-	109/11
A25/3B	. Bolt, 4 BA	1	-	109/12
AGS2001/B/1	. Nut, stiff, 4 BA	1	-	109/13
SP15/B	. Washer	1	-	109/14

SERVICES

NITROGEN PRESSURISING OF WAVEGUIDES IN BOMB BAY

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
AGS2081/3	. CLIP, pipe	3	—	109/15
	Attaching parts:—			
A25/3C	. Bolt, 2 BA	1	—	109/16
AGS2001/C/1-66	. Nut, stiff, 2 BA	1	—	109/17
SP124/D	. Washer	1	—	109/18
AGS2081/3	. CLIP, pipe	2	—	109/19
	Attaching parts:—			
A25/2B	. Bolt, 4 BA	1	—	109/20
AGS2001/B/1	. Nut, stiff, 4 BA	1	—	109/21
SP15/B	. Washer	1	—	109/22
AGS2081/3	. CLIP, pipe	1	—	109/23
	Attaching parts:—			
A25/1B	. Bolt, 4 BA	1	—	109/24
AGS2001/B/1	. Nut, stiff, 4 BA	1	—	109/25
SP15/B	. Washer	1	—	109/26
R AGS2081/3	. CLIP, pipe	2	—	109/27
	Attaching parts:—			
A25/2C	. Bolt, 2 BA	1	—	109/28
AGS2001/C/1-66	. Nut, stiff, 2 BA	1	—	109/29
SP124/D	. Washer	1	—	109/30
AGS2081/3	. CLIP, pipe	1	—	109/34
	Attaching parts:—			
A25/1C	. Bolt, 2 BA	1	—	109/35
SP47/C	. Washer, spring, 2 BA	1	—	109/36
AGS2081/3	. CLIP, pipe (4.5" aft of frame 21 using existing bolt for attachment)	1	—	109/37
AGS2081/3	. CLIP, pipe (Secure with stack pipe bolt)	1	—	109/38
AGS2081/3	. CLIP, pipe (Secure with hydraulic accumulator bracket bolt)	1	—	109/39
R AGS2081/3	. CLIP, pipe	1	—	109/31
	Attaching parts:—			
R A25/3C	. Bolt, 2 BA	1	—	109/32
R AGS2001/C/1	. Nut, stiff, 2 BA	1	—	109/33
R EA1.73.221	. Packing	1	—	109/33A
R SP124/D	. Washer	1	—	109/33B

SERVICES

NITROGEN PRESSURISING OF WAVEGUIDES IN BOMB BAY

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
OP4450	. CONNECTION, 2-way	1	—	109/41
OP4460	. CONNECTION, 3-way	4	—	109/42
EG7.79.5011	. PIPE, assembly	1	—	109/44
EG7.79.5013	. PIPE, assembly	1	—	109/45
EG7.79.5015	. PIPE, assembly	1	—	109/46
EG7.79.5053	. PIPE, assembly	1	—	109/48
A190MK2	. VALVE, charging	1	—	
	Attaching parts:~			
A25/2C	. Bolt, 2 BA	2	—	109/53
AGS2001/C/1-66	. Nut, stiff, 2 BA	2	—	109/54
SP124/D	. Washer	2	—	109/55

SERVICES
NITROGEN CHARGING

	Part Number	Description	No. Off	Mtl. Spec.	Plate No.
		1 2 3 4 5 6			
R	-	NITROGEN CHARGING GA (EG7.79.5027) (Mod.5466) Spares for:-	-	-	110/1
R	EG7.79.5091	. ADAPTOR	2	-	110/2
R	EG7.79.5087	. BRACKET, hose support Attaching parts:-	1	L165 x 16 SWG	110/3
R	A25-2C	. Bolt, 2 BA, hex hd	1	-	110/4
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	1	-	110/5
R	SP124/D	. Washer, 2 BA	1	-	110/6
R	AS5419-8	. CLAMP, pipe (Secure together with bracket EG7.79.5087 using same attaching parts)	2	-	110/7
R	AGS3924-2	. CLAMP, hose	6	-	110/8
R	AGS2081-3	. CLIP, pipe Attaching parts:-	1	-	110/9
R	A25-3C	. Bolt, 2 BA, hex hd	1	-	110/10
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	1	-	110/11
R	SP124/D	. Washer, 2 BA	1	-	110/12
R	EG7.79.5089	. FAIRLEAD, assembly Spares for:-	1	-	110/13
R	EG7.79.5089A	. FAIRLEAD, lower half	1	-	110/14
R	EG7.79.5089B	. FAIRLEAD, upper half Attaching parts:-	1	-	110/15
R	A25/21C	. Bolt, 2 BA, hex hd	2	-	110/16
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	2	-	110/17
R	SP124/D	. Washer, 2 BA	2	-	110/18
R	EG7.79.5027A	. HOSE, Power Amp.	1	-	110/19
R	EG7.79.5027B	. HOSE, Exciter, Aft	1	-	110/20
R	EG7.79.5027D	. HOSE, Exciter, Fwd	1	-	110/21
R	EG7.79.5093	. LABEL, Power Amp.	1	-	110/22
R	EG7.79.5095	. LABEL, Exciter	1	-	110/23
R	EG7.79.5085	. MANIFOLD, Nitrogen charging Attaching parts:-	1	-	110/24
R	A25-3C	. Bolt, 2 BA, hex hd	2	-	110/25
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	2	-	110/26
R	SP124/D	. Washer, 2 BA	2	-	110/27
R	EEAS247-309-08	. MARKER, Main	2	-	110/28
R	EG7.79.5083	. PIPE, stub, assembly Spares for:-	2	-	110/29
R	AGS952/B	. COLLAR	1	-	110/30
R	EEAS258-4	. MARKER (Part number)	1	-	110/31
R	AGS954/B	. NUT	1	-	110/32
R	EG7.79.5083A	. PIPE, 1/4" dia.	1	T51 x 22 SWG	110/33

SERVICES
NITROGEN CHARGING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
R EG7.79.5077	.	PIPE, assembly					1	—	110/34
		Spares for:—							
R AGS952/A	.	COLLAR					1	—	110/35
R EEAS255-03-03	.	MARKER					1	—	110/36
R EEAS258-3	.	MARKER					1	—	110/37
R EEAS247-309-3	.	MARKER					1	—	110/38
R AN818-4D	.	NUT					1	—	110/39
R EG7.79.5077A	.	PIPE, 3/16" dia.					1	DTD5019- 20 SWG	110/40
R EG7.79.5077B	.	SLEEVE, pipe, 1/4" dia.					1	T51-22 SWG	110/41
R AGS904/A	.	SLEEVE					1	—	110/42
R MS20819-4D	.	SLEEVE, outer					1	—	110/43
R EG7.79.5079	.	PIPE, assembly					1	—	110/44
		Spares for:—							
R EEAS255-03-03	.	MARKER					1	—	110/45
R EEAS258-3	.	MARKER					1	—	110/46
R EEAS247-309-3	.	MARKER					1	—	110/47
R EG7.79.5079A	.	PIPE, 3/16" dia.					1	DTD5019- 22 SWG	110/48
R EG7.79.5079B	.	PIPE, 1/4" dia.					2	DTD5019- 22 SWG	110/49
R EG7.79.5097	.	PIPE, stub, assembly					2	—	110/50
		Spares for:—							
R EEAS258-4	.	MARKER					1	—	110/51
R AN818-4D	.	NUT					1	—	110/52
R EG7.79.5097A	.	PIPE, 1/4" dia.					1	DTD5019- 22 SWG	110/53
R MS20819-4D	.	SLEEVE					1	—	110/54
R CSP488012	.	RING, "O"					2	—	110/55
R EEAS132	.	TIE-WRAP					QR	—	110/56
R 645E6	.	VALVE, Schrader					2	—	110/57



A.P.101B-0417-3A

Page NAJ1

SERVICES

OXYGEN SYSTEM

Part Number	Description					No. Off	Mati. Spec.	Plate No.
	1	2	3	4	5 6			
R —	OXYGEN SYSTEM, ASSEMBLY (EG7.71.1) (Pre Mod 5466)					—	—	70/36
R —	OXYGEN SYSTEM, ASSEMBLY (EG7.71.5001) (Mod 5466)					—	—	
R —	Spares for:—					—	—	70/35
R —	. A.E. OPERATOR'S OXYGEN SYSTEM					—	—	
R —	ARRANGEMENT (EG7.71.9) (Pre Mod 5466)					—	—	
R —	. OXYGEN SYSTEM, E.W.O. ASSEMBLY (EG7.71.5009)					—	—	
	Spares for:—					—	—	
EEAS136	. . BRACKET, pipe clip					5	L72	70/40
AGS2081/14	. . CLIP, pipe support, 7/8" i/d (Pre-Alt. R60/91) (Mod 5101)					15	—	70/38
or								
AS4525/14	. . CLIP, pipe (Alt. R60/91) (Mod 5101)					6	—	70/24
AGS2081/3	. . CLIP, pipe support, 3/16" i/d (Pre-Alt. R60/91) (Mod 5101)					6	—	
or								
AS4525/3	. . CLIP, pipe (Alt. R60/91) (Mod 5101)					6	BSF67	70/41
EB7.71.65	. . HOSE, connecting, 7/8" i/d x 1-1/4" o/d x 3" long (Make from 32C/1275037)					6	Type 1	
EG7.71.21	. . PIPE, assembly, L.P., from A.E.O's regulator to hose coupling, forward of frame 5, 7/8" o/d x 22 SWG					1	T9 or L54	70/21
EG7.71.23	. . PIPE, assembly, L.P., between hose coupling forward of frame 5, 7/8" o/d x 22 SWG					1	T9 or L54	70/27
EG7.71.25	. . PIPE, assembly, L.P., from hose coupling forward of frame 5 to hose coupling forward of frame 6, 7/8" o/d x 22 SWG					1	T9 or L54	70/34
EG7.71.27	. . PIPE, assembly, L.P., from hose coupling forward of frame 6 to hose coupling aft of frame 7, 7/8" o/d x 22 SWG					1	T9 or L54	70/33
EG7.71.29	. . PIPE, assembly, H.P., from oxygen master valve to union at pressure bulkhead					1	T51	70/19
R EG7.71.31	. . PIPE, assembly, H.P., from 3-way connector, frame 6 to oxygen master valve forward of frame 9 (Pre Mod 5466)					1	T51	70/23
R EG7.71.5003	. . PIPE, assembly (Mod 5466)					1	—	
EG7.71.53	. . PIPE, assembly, intermediate pressure, from 3-way coupling to A.E.O's regulator aft of frame 5, 5/16" o/d x 22 SWG					1	L54	70/22
EG7.71.59	. . PIPE, assembly, L.P., between hose coupling aft of frame 7, 7/8" o/d x 22 SWG					1	T9 or L54	70/32
EG7.71.161	. . PIPE, assembly, H.P., between 3-way connectors frame 6					1	T51	70/26
AS2810/4/035	. . TUBE, distance, for pipe clips					3	L62	70/39
—	. . VALVE, H.P., OXYGEN, STARBOARD, ASSEMBLY (EG7.71.173) (Mod 5269)					—	—	70/18
	Spares for:—							
EA3.57.21	. . . BRACKET, mounting, oxygen master valve					1	L72	70/28
EA1.71.91	. . . LABEL					1	L72	70/29
	Attaching parts for EA1.71.91:—							
4101/2/3/16	. . . Screw, self tapping, round head					2	—	70/30
EA3.71.539	. . . PLATE, adapter assembly (Mod 5269)					1	—	70/42
	Spares for:—							
EA3.71.585	 PLATE, adapter					1	L72	70/43
AGS2018/C2	 NUT, anchor					2	—	70/44
	Attaching parts for EA3.71.539:—							
A61/1C	. . . Bolt, 2 BA					4	—	70/45
EEAS21A/4/DR	. . . WASHER, 'D' clip attachments					15	L72	70/37
EEAS21/9/DR	. . . WASHER, 'D' clip attachments					6	L72	70/25
—	. . . COMPONENTS, OXYGEN, ON CIRCUIT DIAGRAM (EG7.71.3)					—	—	69/17
	Spares for:—							
6D/1647	. . . ADAPTER, inlet, straight type, at oxygen regulators					3	—	69/4

SERVICES
OXYGEN SYSTEM

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
6D/9429896		. . . CYLINDER, oxygen, 750 litre, Mk.5D	5	—	69/14
6D/9429900		. . . CYLINDER, oxygen, 2,250 litre, Mk.10A	2	—	69/11
6D/574		. . . FILTER, oxygen, Mk.1	1	—	69/12
—		. . . FITTINGS, OXYGEN, ON SEATS, ASSEMBLY (EG7.71.165)	—	—	69/16
		Spares for:			
6D/2055		. . . CABLE, operating anchor section, Mk.1A	3	—	69/25
SP91/F		. . . CLIP, hose, type J	3	—	69/19
6D/1693		. . . CLIP, aerolex, type D	3	—	69/21
6D/1579		. . . HOSE, low pressure, oxygen, Mk.7, 4ft long	3	—	69/20
R 1660-99-2243028		. . . SET, emergency oxygen, Mk.7J	3	—	69/23
6D/1464		. . . SOCKET, anchor	3	—	69/24
R 1660-99-2243622		. . . SOCKET, quick release, Mk.9	3	—	69/18
6D/2203310		. . . TUBE, assembly, upper oxygen	3	—	69/22
R 1660-99-2242861		. . . FLANGE, L.P., hose connector	3	—	69/15
6D/2237		. . . GAUGE, oxygen pressure, fluorescent, Mk.4, aft of frame 2, starboard	2	—	69/2
R 1660-99-2243528		. . . PIECE, connecting, 2-way, pipe run	8	—	69/9
R 1660-99-2243645		. . . PIECE, connecting, 3-way, pipe run	7	—	69/3
6D/2294		. . . REGULATOR, oxygen demand, Mk.17E	3	—	69/5
or					
6D/2671		. . . REGULATOR, oxygen demand, Mk.17F	3	—	69/8
6D/1497		. . . UNION, blanking, Mk.3, at cylinders	4	—	69/10
6D/2204340		. . . VALVE, check, internal, at 3-way piece to reducing valves	4	—	69/13
R 6D/2244070		. . . VALVE, pressure reducing, oxygen, Mk.1A, aft of frame 1 and frame 5	2	—	69/1
GA3030		. . . VALVE, oxygen charging, type 1 (Mod.5269)	1	—	69/8
		Attaching parts for GA3030			
A25/7C		. . . Bolt	2	—	71/45
R 3063		. . . Spacer	2	—	71/46
GA3070		. . . VALVE, line, type 1 (Mod.5269)	2	—	69/7
		Attaching parts for GA3070			
A25/1C		. . . Bolt, 2BA	2	—	69/26
—		. . . CYLINDERS, OXYGEN, ASSEMBLY (EG7.71.5)	—	—	71/36
		Spares for:			
EEAS91/4		. . . CLIP, pipe, double	3	L72	71/38
		Attaching parts for EEAS91/4:			
A25/2B		. . . Bolt, 4BA hex. head	3	—	71/37
AGS2001/B/1		. . . Nut, stiff, 4BA	3	—	71/40
SP15/B		. . . Washer, 4BA plain	3	—	71/39

SERVICES
OXYGEN SYSTEM

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5			
AGS2081/3	.	.	.	CLIP, pipe (Pre SAS4745)		18	—	71/29
AGS2081/3	.	.	.	CLIP, pipe (SAS4745)		16	—	
or								
AS4525/3	.	.	.	CLIP, pipe				
	.	.	.	Attaching parts for clips:				
A25/1C	.	.	.	Bolt, 2BA		1	—	
AGS2001/C/1	.	.	.	Nut, stiff, 2BA		1	—	
SP15/C	.	.	.	Washer, thick, 2BA		1	—	
EA1.71.111	.	.	.	FAIRLEAD		1	LFS21	71/5
	.	.	.	Attaching parts for EA1.71.111:				
A25/2B	.	.	.	Bolt, 4BA hex. head		3	—	71/2
AGS2001/B/1	.	.	.	Nut, stiff, 4BA		3	—	71/4
SP15/B	.	.	.	Washer, 4BA plain		3	—	71/3
—	.	.	.	FITTINGS, OXYGEN, ON FRAME 12,		—	—	71/1
	.	.	.	ASSEMBLY (EG7.71.175) (Mod.5269)				
	.	.	.	Spares for:				
A25/7C	.	.	.	BOLT, 2BA, hex. head (Mod.5269)		2	—	71/45
EG7.71.129	.	.	.	BRACKET, engraved, 'oxygen charging valve'		1	L72	71/34
	.	.	.	assembly				
	.	.	.	Attaching parts for EG7.71.129:				
A25/1C	.	.	.	Bolt, 2BA hex. head		4	—	71/44
AGS2001/C/1	.	.	.	Nut, stiff, 2BA		4	—	71/42
SP15/C	.	.	.	Washer, 2BA plain		4	—	71/43
AGS2081/3	.	.	.	CLIP, pipe, support, 3/16" i/d (Pre Alt.R60/91)		1	—	71/33
	.	.	.	(Mod.5101)				
or								
AS4525/3	.	.	.	CLIP, pipe (Alt.R60/91) (Mod.5101)				
	.	.	.	Attaching parts for AGS2081/3:				
A25/1C	.	.	.	Bolt, 2BA hex. head		1	—	71/35
AGS2001/C/1	.	.	.	Nut, stiff, 2BA		1	—	71/31
EEAS21/9/DR	.	.	.	Washer, 'D'		1	L72	71/32
3063	.	.	.	SPACER (Mod.5269)		2	—	71/46
EA1.71.61	.	.	.	PAD, mounting, oxygen bottle		2	S/H 40/45	71/21
EA1.71.115	.	.	.	PAD, mounting, oxygen bottle		1	BS.F62	71/23
EA3.71.417	.	.	.	PAD, mounting, oxygen bottle		1	S/H 40/45	71/19
EA1.71.65	.	.	.	PIECE, distance, strap attachment bolt		20	L62	71/6
EG7.71.19	.	.	.	PIPE, assembly, transverse, from bulkhead coupling		1	T51	71/41
	.	.	.	frame 9 starboard to connecting piece				
	.	.	.	aft of frame 9 port				
EB6.71.43	.	.	.	PIPE, assembly, from 2.250 litre oxygen bottle to		1	T51	71/7
	.	.	.	coupling forward of frame 12				
EB6.71.47	.	.	.	PIPE, assembly, from 750 litre oxygen bottle con-		1	T51	71/27
	.	.	.	nection to pressure bulkhead				
EB6.71.49	.	.	.	PIPE, assembly, from coupling aft of frame 9 to		1	T51	71/30
	.	.	.	coupling forward of frame 12 (Pre SAS4745)				
SC95425	.	.	.	PIPE, high pressure, oxygen, assembly		1	—	
	.	.	.	(SAS4745)				
EG7.71.67	.	.	.	PIPE, assembly, from filter connection to master		1	T51	71/28
	.	.	.	valve, frame 12				
EG7.71.153	.	.	.	PIPE, assembly, from filter connection to 3-way		1	T51	71/20
	.	.	.	connection				
EA3.71.169	.	.	.	PIPE, assembly, oxygen bottle inter-connection		2	T51	71/22
EA3.71.177	.	.	.	PIPE, assembly, oxygen bottle inter-connection		1	T51	71/13
EA3.71.179	.	.	.	PIPE, assembly, oxygen bottle inter-connection		2	T51	71/11
EA3.71.181	.	.	.	PIPE, assembly, oxygen bottle inter-connection		1	T51	71/12
EA3.71.419	.	.	.	PIPE, assembly, oxygen bottle inter-connection		1	T51	71/15
EA3.71.421	.	.	.	PIPE, assembly, from 2.250 litre oxygen bottle		1	T51	71/10
	.	.	.	to 3-way connector				

SERVICES
OXYGEN SYSTEM

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA3.71.423	. . PIPE, assembly, oxygen bottle inter-connection	1	T51	71/14
EA3.71.437	. . PIPE, assembly, oxygen bottle inter-connection	2	T51	71/8
EA3.71.439	. . PIPE, assembly, from 3-way connector to 750 litre oxygen bottle	1	T51	71/9
R AS2381	. . ROD, tension, 1/4" BSF for bottle straps	4	—	71/17
EA1.71.63	. . SCREW, trunnion 1/4" BSF for bottle straps	10	S1	71/25
EA1.71.37	. . STRAP, oxygen bottles, 750 litres	10	DTD390	71/26
EA1.71.39	. . STRAP, oxygen bottles, 750 litres	10	DTD390	71/24
EA3.71.391	. . STRAP, oxygen bottles, 2,250 litres	4	L72	71/16
EA1.71.399	. . STRAP, oxygen bottles, 2,250 litres	4	L72	71/18
—	. FITTINGS, OXYGEN, ON PRESSURE BULKHEAD, ASSEMBLY (EG7.71.157) Spares for:	—	—	70/31
EB7.71.21	. . BRACKET, assembly Attaching parts for EB7.71.21:	2	L72	70/16
A25/1C	. . Bolt, 2BA hex. head	8	—	70/14
AGS2001/C/1	. . Nut, stiff, 2BA	8	—	70/13
SP15/C	. . Washer, 2BA plain	8	—	70/12
—	. RELEASE, EMERGENCY OXYGEN, A.E.O.'s, INSTALLATION (EG7.71.149) Spares for:	—	—	70/17
EA3.71.541	. . . RELEASE, EMERGENCY OXYGEN, ASSEMBLY Spares for:	1	—	70/5
EB6.71.591	 CABLE, emergency release, assembly	1	—	70/11
EB6.71.581	 TUBE, assembly	1	—	70/15
—	. . RELEASE, EMERGENCY OXYGEN, NAVIGATOR'S, INSTALLATION (EG7.71.159) Spares for:	—	—	70/20
EB6.71.579	. . . RELEASE, EMERGENCY OXYGEN, ASSEMBLY Spares for:	1	—	70/3
EB6.71.591	 CABLE, emergency release, assembly	1	—	70/7
EB6.71.577	 TUBE, assembly	1	—	70/6
AGS1112/B	. . UNION, body, bulkhead fitting Attaching parts for AGS1112/B:	2	—	70/9
A25/2B	. . Bolt, 4BA hex. head	12	—	70/8
EEAS69/2	. . Gasket	2	Neo-K-Tex	70/10
AGS2001/B/1	. . Nut, stiff, 4BA	12	—	70/1
EEAS20/7/DR	. . Tab, locking	2	L72	70/2
AGS1115/2	. . Washer, plate	2	—	70/4

SERVICES

OXYGEN SYSTEM

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	NAVIGATOR'S OXYGEN SYSTEM ARRANGEMENT (EG7.71.11) Spares for:	—	—	72/22
EEAS136	BRACKET, pipe clip mounting	5	L72	72/1
EB7.71.49	CLAMP, reducing valve mounting Attaching parts for EB7.71.49:	1	T35	72/4
A25/17B	Bolt, 4BA hex. head	2	—	72/3
AGS2002/B/1	Nut, stiff, 4BA	2	—	72/6
SP15/B	Washer, 4BA plain	2	—	72/5
AGS2081/3	CLIP, pipe support, 3/16" i/d (Pre Alt.R60/91—Mod.5101)	7	—	72/7
AS4525/3	CLIP, pipe (Alt.R60/91—Mod.5101)	7	—	—
EB7.71.55	HOSE, connection, 7/8" i/d x 1-1/4" o/d x 3" long (Make from 32C/445)	4	DTD625	72/9
EG7.71.35	PIPE, assembly, H.P., from 2-way to 3-way connector forward of frame 5	1	T51	72/15
EG7.71.49	PIPE, assembly, intermediate pressure, from 3-way connector to reducing valve forward of frame 6, 5/16" o/d x 22 SWG	1	L54	72/11
EG7.71.51	PIPE, assembly, intermediate pressure, from 3-way connector to navigator's regulator, 5/16" o/d x 22 SWG	1	L54	72/12
EG7.71.55	PIPE, assembly, H.P., from oxygen master valve to union at pressure bulkhead	1	T51	72/16
EG7.71.57	PIPE, assembly, H.P., from 3-way connector aft of frame 5 to connector aft of frame 8	1	T51	72/19
EG7.71.61	PIPE, assembly, L.P., from hose coupling aft of frame 4 to hose coupling frame 6, 7/8" o/d x 22 SWG	1	T9 or L54	72/17
EG7.71.65	PIPE, assembly, L.P., from hose coupling aft of frame 4 to navigator's oxygen regulator, 7/8" o/d x 22 SWG	1	T9 or L54	72/10
EG7.71.69	PIPE, assembly, L.P., from hose coupling, frame 6 to hose coupling forward of frame 8, 7/8" o/d x 22 SWG	1	T9 or L54	72/18
EG7.71.73	PIPE, assembly, H.P., from oxygen master valve to 2-way connector aft of frame 8	1	T51	72/20
EG7.71.137	PIPE, assembly, H.P., from 3-way connector at reducing valve to connector aft of frame 5	1	T51	72/14
EG7.71.139	PIPE, assembly, H.P., from 3-way connector to reducing valve	1	T51	72/13
—	VALVE, H.P., OXYGEN, PORT, INSTALLATION (EA3.71.587) (Mod.5269) Spares for:	—	—	72/21
EA3.57.21	BRACKET, mounting, master valve	1	DTD625	72/25
EA3.71.591	LABEL, (0.9 mm L72, Ref.30B/9611220) Attaching parts for EA3.71.591:	1	L72	72/24
A25/1C	BOLT, 2BA	2	—	72/23
EA3.71.539	PLATE, adaptor, assembly Spares for:	1	—	—
EA3.71.585	PLATE, adaptor (1.2 mm L73, Ref.30B/9611244)	1	L73	—
AGS2018/C2	NUT, anchor Attaching parts for EA3.71.539:	2	—	—
A61/1C	Bolt, 2BA	4	—	—
EEAS21A/4/OR	WASHER, 'D', clip attachments	12	L72	72/2
EEAS21/9/DR	WASHER, 'D', clip attachments	10	L72	72/8

SERVICES

OXYGEN SYSTEM

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
—	PILOT'S OXYGEN SYSTEM, ARRANGEMENT (EG7.71.7) Spares for:	—	—	73/24
EEAS136	BRACKET, pipe clip mounting	7	L72	74/12
EB7.71.43	BRACKET, pipe support, frame 3, assembly Attaching parts for EB7.71.43:	1	DTD124	74/6
A25/1B	Bolt, 4BA hex. head	2	—	74/5
AGS2002/B/1	Nut, stiff, 4BA	2	—	74/8
SP15/B	Washer, 4BA plain	2	—	74/7
EB7.71.47	BRACKET, reducing valve mounting aft of frame 1	1	DTD124	73/16
—	BRACKET, 'PULL OFF' CONNECTOR MOUNTING, INSTALLATION (EG7.71.85) Spares for:	—	—	73/31
EB6.71.243	BRACKET, mounting	1	L72	73/30
EB7.71.49	CLAMP, bracket, reducing valve mounting aft of frame 1 Attaching parts for EB7.71.49:	1	T35	73/25
A25/17B	Bolt, 4BA hex. head	2	—	73/26
AGS2002/B/1	Nut, stiff, 4BA	2	—	73/15
AGS2081/5 or AS4525/5	CLIP, pipe support, 5/16" i/d (Pre Alt.R60/91—Mod.5101)	7	—	74/10
AGS2081/14 or AS4525/14	CLIP, pipe (Alt.R60/91—Mod.5101)	7	—	—
AGS2081/3 or AS4525/3	CLIP, pipe support, 7/8" i/d (Pre Alt.R60/91—Mod.5101)	12	—	74/14
EB7.71.169	CLIP, pipe (Alt.R60/91—Mod.5101)	14	—	74/9
A25/1B	CLIP, pipe support, 3/16" i/d (Pre Alt.R60/91—Mod.5101)	14	—	—
AGS2002/B/1	CLIP, half, pipe clamping forward of frame 3 Attaching parts for EB7.71.169:	1	DTD124	74/2
SP15/B	Bolt, 4BA hex. head	2	—	74/1
—	Nut, stiff, 4BA	2	—	74/4
—	Washer, 4BA plain	2	—	74/3
—	GUARD, PIPE, AFT OF FRAME 3, INSTALLATION (EG7.71.141) Consisting of:	—	—	73/34
EG7.71.147	GUARD, pipe, assembly Attaching parts for EG7.71.147:	1	L72	73/35
4101/7/3/8"	Screw, self-tapping, round head	6	—	73/36
EB7.71.55	HOSE, connecting, 7/8" x 1-1/4" o/d x 3" long (Make from 32C/445)	5	DTD625	74/15
—	MOUNTING, PILOT'S DEMAND OXYGEN REGULATOR, ASSEMBLY (EB7.71.51) Spares for:	—	—	73/13
EB6.71.105	BRACKET, mounting, assembly	1	—	73/14
1660-99-2243528	PIECE, connector, 2-way, Mk.3A	3	—	73/12
EG7.71.37	PIPE, assembly, H.P., from connector aft of frame 2 to 3-way connector aft of frame 5, port	1	T51	73/22

A.P.101B-0417-3A

SERVICES

Page NAJ7

OXYGEN SYSTEM

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
1438820	E.G7.71.39	PIPE, assembly, H.P., from connector aft of frame 1	...					1	T51	C	73/18
1438821	E.G7.71.43	PIPE, assembly, H.P., transverse, between connectors	...					1	T51	C	73/10
34956	E.G7.71.87	PIPE, assembly, L.P., from hose coupling to oxygen	...					1	T9 or L54	C	73/23
1438822	E.G7.71.89	PIPE, assembly, L.P., between hose couplings, aft	...					1	T9 or L54	C	73/21
1438823	E.G7.71.93	PIPE, assembly, L.P., from hose coupling frame 3	...					1	T9 or L54	C	73/19
1438824	E.G7.71.95	PIPE, assembly, L.P., between hose couplings forward	...					1	T9 or L54	C	73/11
	E.G7.71.97	PIPE, assembly, H.P., from 3-way connector aft of	...					1	T51		73/5
34957	E.G7.71.101	PIPE, assembly, intermediate pressure, from	...					1	L54	C	73/20
1438825	E.G7.71.103	PIPE, assembly, intermediate pressure, from con-	...					1	L54	C	73/17
1438826	E.G7.71.105	PIPE, assembly, intermediate pressure, transverse,	...					1	L54	C	73/9
R 34958	E.G7.71.107	PIPE, assembly, intermediate pressure, from con-	...					1	L54	C	73/8
1438827	E.G7.71.109	PIPE, assembly, H.P., from connector to 3-way piece	...					1	T51	C	73/3
34959	E.G7.71.111	PIPE, assembly, H.P., from 3-way piece to reducing	...					1	T51	C	73/6
	E.G7.71.113	PIPE, assembly, H.P., from 3-way piece forward of	...					1	T51		73/7
34960	E.G7.71.115	PIPE, assembly, H.P., from 3-way connector to	...					1	T51	C	73/4
1438828	E.G7.71.117	PIPE, assembly, H.P., between 3-way connectors	...					1	T51	C	73/1
34961	E.G7.71.119	PIPE, assembly, H.P., from 3-way connector forward	...					1	T51	C	73/2

SERVICES

OXYGEN SYSTEM

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—								—	—	—	73/27
34962	E.G7.71.79								1	—	B	73/28
34485	E.86.71.591								1	—	C	73/29
	E.G7.71.83								1	L72	—	73/32
	E.G7.71.151								1	—	—	73/33
	EEAS.21A/4/DR								12	L72	—	74/13
26DK/33179	EEAS.21/9/DR								11	L72	C	74/11

SERVICES

PITOT AND STATIC PIPES IN FRONT FUSELAGE

	Part Number	Description 1 2 3 4 5 6	No. Off	Mtl. Spec.	Plate No.
	—	PITOT AND STATIC PIPES IN FRONT FUSELAGE ASSEMBLY (EG7.80.10021) (Mod 4865, Part B) (Pre Mod 5466)	—	—	76/13
R	—	PITOT AND STATIC PIPES IN FRONT FUSELAGE ASSEMBLY (EG7.80.5073) (Mod 5466)	—	—	107/1
	—	ALTERNATIVES TO PITOT STATIC SYSTEM IN FRONT FUSELAGE (EG7.80.2115) (Mod 4865, Part B) Spares for:—	—	—	
	6D/114	. ADAPTER, outlet	2	—	75/5
R	AS8681	. BODY, banjo (Mod 4865, Part B) (Pre Mod 5466)	2	—	
R	AS8681	. BODY, banjo (Mod 5466)	3	—	107/2
	AGS838/3	. BODY, union, elbow (Mod 4865, Part B)	6	—	
R	AGS838/1	. BODY, union, straight (Mod 4865, Part B) (Pre SAS4745) (Pre Mod 5466)	15	—	
R	AGS838/1	. BODY, union, straight (SAS4745) (Mod 5466)	14	—	
R	AGS838/2	. BODY, tee (Mod 4865, Part B) (Pre SAS4745) (Pre Mod 5466)	6	—	
	AGS838/2	. BODY, tee (SAS4745)	7	—	
R	AGS838/2	. BODY, tee (Mod 5466)	9	—	107/3
R	AS8682	. BOLT, banjo (Mod 4865, Part B) (Pre Mod 5466)	1	—	
R	AS8682	. BOLT, banjo (Mod 5466)	2	—	107/4
R	AS8683	. BOLT, banjo (Mod 4865, Part B) (Pre Mod 5466)	2	—	
R	AS8683	. BOLT, banjo (Mod 5466)	3	—	107/5
R	EG7.80.5153	. BRACKET, mounting (Mod 5466) Attaching parts for EG7.80.5153:—	1	—	107/6
R	A25/2B	. Bolt, 4 BA	4	—	107/7
R	SP122/D	. Washer	4	—	107/8
R	EEAS136	. BRACKET (Mod 5466)	1	—	107/9
	EG7.80.1459	. CLAMP, pipe, frame 6, 7 and 8, port, assembly Attaching parts for EG7.80.1459:—	3	BS2572	76/12
	A25/6B	. Bolt, 4 BA hex. head	2	—	76/14
	AGS2001/B/1	. Nut, stiff, 4 BA	2	—	76/16
	SP15/B	. Washer, 4 BA plain	2	—	76/15
	AGS2080/16	. CLIP, 'P' (SAS4745) Attaching parts for AGS2080/16:—	1	—	
	AGS2001/C/1	. Nut, stiff, 2 BA	1	—	
	A32/C24	. Screw, 2 BA round head	1	—	
	SP13/C	. Washer, 2 BA	1	—	
R	AGS3925/1	. CLIP, hose (SEM054/CM0436) (SAS4745) (Pre Mod 5466)	4	—	
R	AGS3925/1	. CLIP, hose (Mod 5466)	7	—	108/1
R	AGS3925/2	. CLIP, hose (Mod 5466)	2	—	108/2
	EEAS143/3	. CLIP, pipe (Mod 4865, Part A) (Pre-Alt. R60/91 — Mod 5101)	1	—	
	or				
	AS4525/5	. CLIP, pipe (Alt. R60/91 — Mod 5101)	1	—	
	AS4525/5	. CLIP, (Mod 4865, Part A)	7	—	
	AGS605-00	. CLIP, hose (Mod 4865, Part A) (Pre-Alt. R60/91 — Mod 5101)	4	—	
	or				
	SP91/A	. CLIP, hose (Alt. R60/91 — Mod 5101)	4	—	
	AGS605-0	. CLIP, hose (Mod 4865, Part B) (Pre-Alt. R60/91 — Mod 5101)	10	—	
	or				
R	SP91/C	. CLIP, hose (Alt. R60/91 — Mod 5101) (Pre Mod 5466)	10	—	
R	SP91/C	. CLIP, hose (Mod 5466)	4	—	108/3
	EEAS91/2	. CLIP, pipe, double, 5/16" o/d pipe (Mod 4865, Part A)	10	L72	76/11
	AS4525/5	. CLIP, (Mod 4865, Part B)	1	—	
	EA1.71.77	. CLIP, pipe, double, frame 8 Attaching parts for EA1.71.77:—	1	L16	76/2
	A25/1B	. Bolt, 4 BA hex. head	1	—	76/1
	AGS2001/B/1	. Nut, stiff, 4 BA	1	—	76/4
	SP15/B	. Washer, 4 BA plain	1	—	76/3

SERVICES

PITOT AND STATIC PIPES IN FRONT FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	AS4525/5	. CLIP, pipe (Mod 5466) Attaching parts for AS4525/5:—	27	—	108/4
R	A25/1C	. Bolt, 2 BA	1	—	108/5
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	1	—	108/6
R	EEAS239/1A	. Washer, "D"	1	—	108/7
R	AS4525/5	. CLIP, pipe (Mod 5466) Attaching parts for AS4525/5:—	1	—	108/8
R	A25/9C	. Bolt, 2 BA	1	—	108/9
R	EEAS552-7	. Bobbin	1	—	108/10
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	1	—	108/11
R	EEAS239/1A	. Washer "D"	1	—	108/12
R	AS4525/5	. CLIP, pipe (Mod 5466) Attaching parts for AS4525/5:—	1	—	108/13
R	A25/9C	. Bolt, 2 BA	1	—	108/14
R	EEAS552/6	. Bobbin	1	—	108/15
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	1	—	108/16
R	EEAS239/1A	. Washer, "D"	1	—	108/17
R	AS4525/5	. CLIP, pipe (Mod 5466) Attaching parts for AS4525/5:—	2	—	108/18
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	1	—	108/19
R	A32/C24	. Screw, 2 BA	1	—	108/20
R	SP122/D	. Washer	1	—	108/21
R	AS4525/5	. CLIP, pipe (Mod 5466) Attaching parts for AS4525/5:—	1	—	108/22
R	A25/1C	. Bolt, 2 BA	1	—	108/23
R	AGS2001/C/1-66	. Nut, stiff, 2 BA	1	—	108/24
R	SP124/D	. Washer	1	—	108/25
R	AS4525/5	. CLIP, pipe (Mod 5466) attached with bolts securing fairlead EG7.80.1371	2	—	108/26
R	AS4525/5	. CLIP, pipe (Mod 5466) attached with bolt securing oxygen pipe clip at frame 8, stringer 10, port side	1	—	108/27
R	AS4525/5	. CLIP, pipe (Mod 5466) Attaching parts for AS4525/5:—	1	—	108/28
R	EEAS239/1A	. Washer, "D" (Secure with existing attachment bolt of fish plate (EG7.81.2551))	1	—	108/29

SERVICES

PITOT AND STATIC PIPES IN FRONT FUSELAGE

	Part Number	Description	No. Off	Matl. Spec.	Plate No.
		1 2 3 4 5 6			
R	EF3.70.1201	. CONNECTION, special	1	L64	75/9
R	EG7.80.1371	. FAIRLEAD, type F3 Attaching parts for EG7.80.1371:~	2	BS2572	76/6
R	A25/6B	. Bolt, 4 BA, hex. head	2	—	76/5
R	AGS2001/B/1	. Nut, stiff, 4 BA	2	—	76/8
R	SP15/B	. Washer, 4 BA, plain	2	—	76/7
R	AGS3099	. GASKET	6	—	76/10
R	32C4696775	. HOSE, Maricon, Type H, approximately 4' 6" per assembly (SEM054/CM0436) (SAS4745)	QR	—	
R	AGS2097C/4C	. LEAD, bonding (Mod 5466)	1	—	107/10
R	AGS2097C/7C	. LEAD, bonding (Mod 5466)	1	—	107/11
R	L84340.00.080	. MODULE, correction	1	—	
R	AGS838/13	. NUT, union, and bush assembly (Mod 4865, Part B) (Pre SAS4745) (Pre Mod 5466)	93	—	
R	AGS838/13	. NUT, union, and bush assembly (SAS4745)	94	—	
R	AGS838/13	. NUT, union, and bush assembly (Mod 5466)	102	—	107/12
R	AS44444	. NUT, union assembly (Mod 5466)	4	—	107/13
R	EB2.70.1037	. PIECE, spacing (Mod 4865, Part A) (3 off N R on embodiment of Part B)	8	—	
R	EG7.80.2071	. PIPE, static assembly (Mod 4865, Part A) (N R on embodiment of Part B)	1	—	

SERVICES

PITOT AND STATIC PIPES IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG7.80.2073	. PIPE, static, flex assembly (Mod.4865, Part A) (N.R. on Embodiment Part B)	1	—	
EG7.80.2105	. PIPE, static, flex assembly (Mod.4865, Part A) (N.R. on Embodiment Part B)	1	—	
R EG7.80.1791	. PIPE, pitot, assembly, from tee piece on hose connection for navigator's panel forward of frame 5, 5/16" o/d x 22 SWG (Pre Mod 5466)	1	L56	75/25
EG7.80.1959	. PIPE, pitot, assembly, from tee piece to hose connection for pilot's panel forward of frame 2, 5/16" o/d x 22 SWG	1	L56	75/30
R EG7.80.1807	. PIPE, static, assembly, from 4-way union to hose connection for navigator's panel forward of frame 5, 5/16" o/d x 22 SWG (Pre Mod 5466)	1	L56	75/26
EG7.80.1813	. PIPE, static, assembly, from 4-way union to hose connection, for pilot's panel forward of frame 2, 5/16" o/d x 22 SWG	1	L56	75/29
EG7.80.1801	. PIPE, pitot drain, from tee-piece aft of pressure bulkhead to drain pipe connection at frame 9, 5/16" o/d x 22 SWG	1	L56	75/27
EG7.80.1829	. PIPE, static drain, from pressure bulkhead to tee piece forward of frame 9, 5/16" o/d x 22 SWG	1	L56	75/36
EA3.80.1649	. PIPE, pitot/static drain (Mod.4865, Part A)	6	L54	75/40
EG7.80.1905	. PIPE, pitot, assembly, from 4-way union forward of frame 5 to adaptor at pressure bulkhead, 5/16" o/d x 22 SWG	1	L56	75/34
EG7.80.1907	. PIPE, pitot, assembly, from 4-way union forward of frame 2 to 4-way union forward of frame 5, 5/16" o/d x 22 SWG	1	L56	75/31
EG7.80.1909	. PIPE, static, assembly, from 4-way union forward of frame 5 to adaptor at pressure bulkhead, 5/16" o/d x 22 SWG	1	L56	75/35
EG7.80.1911	. PIPE, static, assembly, from 4-way union forward of frame 2 to 4-way union forward of frame 5, 5/16" o/d x 22 SWG	1	L56	75/32
EG7.80.1913	. PIPE, static, assembly, from tee piece forward of frame 9 to coupling aft of frame 12, 5/16" o/d x 22 SWG	1	T9	75/38
EG7.80.2107	. PIPE, static, assembly (Mod.4865, Part A) (N.R. on Embodiment Part B)	1	—	
EG4.80.1051	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG7.80.2051	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG4.80.1059	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG4.80.1071	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG4.80.1073	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG4.80.1075	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG7.80.2053	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG4.80.1081	. PIPE, static assembly (Mod.4865, Part A)	1	—	
EG4.80.1083	. PIPE, static assembly (Mod.4865, Part A)	1	—	
R EG7.80.5157	. PIPE, pitot (Mod 5466)	1	—	107/14
R EG7.80.5161	. PIPE, pitot (Mod 5466)	1	—	107/15
R EG7.80.5155	. PIPE, static (Mod 5466)	1	—	107/16
R EG7.80.5159	. PIPE, static (Mod 5466)	1	—	107/17
R EG7.80.5163	. PIPE, static (Mod 5466)	1	—	107/18
R EG7.80.5165	. PIPE, pitot (Mod 5466)	1	—	107/19
R EG7.80.5167	. PIPE, static (Mod 5466)	1	—	107/20
R A135/6	. PIPE (Mod 5466)	QR	Rubber	107/21

SERVICES

PITOT AND STATIC PIPES IN FRONT FUSELAGE

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG7.80.1915	PIPE, pitot, assembly, from tee piece aft of pressure bulkhead to coupling forward of frame 13, 5/16" o/d x 22 SWG	1	T9	75/37
EG7.80.2079	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2081	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2057	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2059	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2061	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2063	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2087	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2089	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2091	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2095	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2097	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG7.80.2099	PIPE, static, assembly (Mod 4865, Part A)	1	—	
R EG7.80.2101	PIPE, static, assembly (Mod 4865, Part A) (Pre SAS4745) (Pre Mod 5466)	1	—	
R EG4.80.1149	PIPE, static, assembly (Mod 4865, Part A)	1	—	
R EG7.80.2103	PIPE, pitot, flex, assembly (Mod 4865, Part A) (Pre SAS4745) (Pre Mod 5466)	1	—	
EG7.80.2093	PIPE, flex, assembly (Mod 4865, Part A)	1	—	
EA3.80.6563	PIPE, static, assembly (Mod 4865, Part A)	1	—	
EG4.80.1057	PIPE, static, assembly (Mod 4865, Part B)	2	—	
EG9.80.1107	PIPE, static, flex, assembly (Mod 4865, Part B)	1	—	
R EG7.80.2083	PIPE, static, assembly (Mod 4865, Part B)	1	—	
R EG7.80.2055	PIPE, static, assembly (Mod 4865, Part B) (Pre Mod 5466)	1	—	
R EG7.80.2065	PIPE, static, assembly (Mod 4865, Part B)	1	—	
R EG7.80.1919	PIPE, spacer, pitot static, aft of pressure bulkhead 5/16" o/d x 22 SWG	2	T9	75/4
R EG7.80.5347	PLATE, reinforcing (Mod 5466)	1	1.25mm-L164	107/22
EF2.70.29	PLUG, drain	2	L64	75/39
R AGS3098	SEAL, "O" ring (Mod 4865, Part B) (Pre Mod 5466)	2	—	
R AGS3098	SEAL, "O" ring (Mod 5466)	4	—	107/23
R AGS3099	SEAL, "O" ring (Mod 4865, Part B) (Pre Mod 5466)	4	—	
R AGS3099	SEAL, "O" ring (Mod 5466)	7	—	107/24
R AGS2097/C/4C	STRIP, bonding (Mod 4865, Part B)	2	—	
R D60071	TRANSMITTER, true airspeed (Mod 5466)	1	—	107/25
R CSP100-3-7W	Attaching parts for 60071:—			
R SP122/D	Screw	4	—	107/26
R	Washer	4	—	107/27
R	Wire, locking	QR	DTD189	107/28
AGS838/6	TRAP, drain (Mod 4865, Part B)	5	—	
AS2810/4/150	TUBE, distance	4	L62	76/10
30B/1054948	TUBING, aluminium, 5/16" dia x 22 SWG, approximately 1-1/2" per assembly (SEM054) (SAS4745)	QR	—	
R AS6712	UNION, elbow (Pre Mod 5466)	1	—	
R AS6712	UNION, elbow (Mod 5466)	2	—	107/29
EF2.70.27	UNION, body, 4-way	7	L64 or L65	75/35
EA1.80.711	UNION, pressure bulkhead	5	DTD683	75/6
A25/2B	Attaching parts for EA1.80.711:—			
AGS2001/B/1	Bolt, 4 BA hex. head	6	—	75/1
EA1.80.713	Nut, stiff, 4 BA	6	—	75/3
SP13/B	Ring, sealing (at pressure bulkhead)	3	Neo-K-Tex	75/7
AGS1115/3	Washer, 4 BA plain	6	—	75/2
EEAS239/1A	Washer, plate (at pressure bulkhead)	1	—	75/8
AGS838/9	WASHER, "D" (Mod 4865, Part B)	32	—	
	WASHER, union (Mod 4865, Part B)	5	—	

SERVICES

PITOT AND STATIC PIPES IN FRONT FUSELAGE

Part Number	Description 1 2 3 4 5 6	No. Off	Matl. Spec.	Plate No.

SERVICES

PITOT AND STATIC PIPES IN PORT WING

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5			
-	PITOT AND STATIC PIPES IN PORT WING, ASSEMBLY (EG7.80.2757 & (EG7.80.151) (MOD. 5041)					-	-	77/1
	Spares for:-							
EA3.80.5735	. BOOM, PITOT, ASSEMBLY (Less pressure head)					1	-	77/35
	Spares for:-							
EA3.80.5747	. . BRACKET, front, assembly					1	-	77/36
EA3.80.6077	. . BRACKET, rear, assembly					1	-	77/31
EA3.80.5755	. . FAIRLEAD					1	LFS21	77/44
6A/4333459	. . HEAD, pressure, Mk. 8T					1	-	77/43
EA3.80.6071	. . PIPE, pitot, 5/16" o/d x 22 SWG					1	L56	77/39
EA3.80.6073	. . PIPE, static, 5/16" o/d x 22 SWG					1	L56	77/38
EA3.80.5767	. . SEAL, at leading edge					1	Rubber	77/37
EA3.80.5741	. . SOCKET, reducing					1	L40	77/41
EA3.80.5745	. . STEADY, for boom					1	DT0372	77/40
EA3.80.5739	. . TUBE, extension					1	T45	77/42
AS4525/5	. CLIP (Mod. 5265)					6	-	
AS3180/9C	. CLIP (Mod. 5265)					2	-	
AGS3924/2	. CLIP (Mod. 5265)					4	-	
EA3.80.5609	. FAIRLEAD, frame 18, 19 and 20					3	LFS21	78/22
	Attaching parts for EA3.80.5609:-							
A25/15C	. Bolt, 2 BA hex. head					1	-	78/19
AGS2001/C/1	. Nut, stiff, 2 BA					1	-	78/30
SP15/C	. Washer, 2 BA plain					1	-	78/27
EA3.80.5611	. FAIRLEAD, frames 21 and 22					2	LFS21	78/12
	Attaching parts for EA3.80.5611:-							
A25/13C	. Bolt, 2 BA hex. head					1	-	78/11
AGS2001/C/1	. Nut, stiff, 2 BA					1	-	78/15
SP15/C	. Washer, 2 BA plain					1	-	78/14
EB2.70.1037	. PIECE, spacing, at drain traps					4	L62	78/2
-	. PIPES PITOT AND STATIC, IN OUTER WING, ASSEMBLY (EG7.80.1729)					-	-	78/7
	Spares for:-							
EG7.80.1947	. . BRACKET, conduit pipe clip					3	L72	78/24
	Attaching parts for EG7.80.1947:-							
A25/2C	. . Bolt, 2 BA hex. head					2	-	78/25
AGS2001/C/1	. . Nut, stiff, 2 BA					2	-	78/30
SP13/C	. . Washer, 2 BA plain					2	-	78/23
EA1.81.109	. . CLIP, pipe, conduit					3	-	78/29
	Attaching parts for EA1.81.109:-							
A25/2C	. . Bolt, 2 BA hex. head					2	-	78/21
AGS2001/C/1	. . Nut, stiff, 2 BA					2	-	78/28
SP13/C	. . Washer, 2 BA plain					2	-	78/26
EB2.70.1037	. . PIECE, spacing, drain traps					2	L62	78/10
EG7.80.1731	. . PIPE, static, from drain trap tee at outer wing rib 2 to union between rib 2 and 3, 5/16" o/d x 22 SWG					1	L56	77/21
EG7.80.1733	. . PIPE, pitot, from drain trap tee at outer wing rib 2 to union between ribs 2 and 3, 5/16" o/d x 22 SWG					1	L56	77/14

SERVICES

PITOT AND STATIC PIPES IN PORT WING

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EG7.80.1735	.	PIPE, static from union between ribs 2 and 3 to tee between ribs 3 and 4, 5/16" o/d x 22 SWG	1	L56	77/23
EG7.80.1737	.	PIPE, pitot, from union between ribs 2 and 3 to tee between ribs 3 and 4, 5/16" o/d x 22 SWG	1	L56	77/15
EG7.80.1739	.	PIPE, static, from tee between ribs 3 and 4 to union outboard of rib 4, 5/16" o/d x 22 SWG	1	L56	77/24
EG7.80.1741	.	PIPE, pitot, from tee between ribs 3 and 4 to union outboard of rib 4, 5/16" o/d x 22 SWG	1	L56	77/20
EG7.80.1743	.	PIPE, static, from union outboard of rib 4 to union inboard of rib 7, 5/16" o/d x 22 SWG	1	L56	77/22
EG7.80.1745	.	PIPE, pitot, from union outboard of rib 4 to union inboard of rib 7, 5/16" o/d x 22 SWG	1	L56	77/26
EG7.80.1747	.	PIPE, static, from union inboard of rib 7 to elbow between rib 8 and 8A outer wing	1	L56	77/25
EG7.80.1749	.	PIPE, pitot, from union inboard of rib 7 to elbow between rib 8 and 8A outer wing, 5/16" o/d x 22 SWG	1	L56	77/27
—	.	PIPES, PITOT AND STATIC, IN INNER WING ASSEMBLY (EG7.80.1773) Spares for:—	—	—	78/1
EG7.80.217	.	ANGLE, support, pipe clip, at rib 2 Attaching parts for EG7.80.217:—	1	L72	77/30
A25/1C	.	Bolt, 2 BA hex. head	2	—	77/34
AGS2001/C/1	.	Nut, stiff, 2 BA	2	—	77/32
SP13/C	.	Washer, 2 BA plain	2	—	77/33
EEAS136	.	BRACKET, for clipping	3	L72	78/4
BELLS BAS243/C2 or	.	CLIP, microflex No. 2	4	—	78/5
BELLS BAS243/N2 or	.	CLIP, minox No. 2	4	—	78/6
SP91/B	.	CLIP, hose	4	—	—
EA3.80.5733	.	FAIRLEAD, aft of frame 22, rib 1 Attaching parts for EA3.80.5733:—	1	LFS21	78/13
A25/1B	.	Bolt, 4 BA hex. head	4	—	78/18
AGS2001/B/1	.	Nut, stiff, 4 BA	4	—	78/16
SP13/B	.	Washer, 4 BA plain	4	—	78/17
EB2.70.1037	.	PIECE, spacing, at drain traps	2	L62	78/9
R EG7.80.1857	.	PIPE, pitot, 1/4" i/d hose, runover engine nacelle, outer wing rib 2 to inner wing rib 6 (Make from 32C/1275031)	1	DHS A135/5 5/16" Bore	77/19
R EG7.80.1859	.	PIPE, static, 1/4" i/d hose, runover engine nacelle, outer wing rib 2 to inner wing rib 6 (Make from 32C/1275031)	1	DHS A135/5 5/16" Bore	77/8
EG7.80.1861	.	PIPE, static, from static hose outer wing rib 2 to static drain tee, 5/16" o/d tube x 22 SWG	1	L56	77/10

SERVICES
PITOT AND STATIC PIPES IN PORT WING

Part Number	Description					No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5			
EG7.80.1863	. . .	PIPE, pitot hose outer wing rib 2 to				1	L56	77/9
EG7.80.1865	. . .	PIPE, static, from union, fuselage frame 22, to				1	L56	77/12
		drain trap tee inboard of rib 5, 5/16"						
		o/d x 22 SWG						
EG7.80.1867	. . .	PIPE, pitot, from union, fuselage frame 22, to				1	L56	77/2
		drain trap tee outboard of rib 3,						
		5/16" o/d x 22 SWG						
EG7.80.1869	. . .	PIPE, static, from union inboard of rib 5 to				1	L56	77/13
		connection outboard of rib 6, 5/16"						
		o/d x 22 SWG						
EG7.80.1871	. . .	PIPE, pitot, from union inboard of rib 5 to				1	L56	77/7
		connection outboard of rib 6, 5/16"						
		o/d x 22 SWG						
EEAS239/1/AH	. . .	WASHER, "D", bonding clip attachment				4	L72	78/8
EG7.80.1763	. . .	PIPE, pitot, from tee at inner wing connection at				1	L56	77/3
		frame 22 to drain trap tee between						
		frame 20 and 21, 5/16" o/d x 22 SWG						
EG7.80.1765	. . .	PIPE, static, from tee at inner wing connection at				1	L56	77/11
		frame 22 to drain trap tee between						
		frame 20 and 21, 5/16" o/d x 22 SWG						
EG7.80.1771	. . .	PIPE, static, from tee aft of frame 17 to static				1	L56	77/17
		connection, centre fuselage, forward of						
		frame 16, 5/16" o/d x 22 SWG						
EG7.80.1769	. . .	PIPE, static, from drain trap tee between frame 20				1	L56	77/18
		and 21 to tee aft of frame 17,						
		5/16" o/d x 22 SWG						
EG7.80.1767	. . .	PIPE, pitot, from drain trap tee between frame 20				1	L56	77/4
		and 21 to pitot connection, centre						
		fuselage, between frame 17 and 18,						
		5/16" o/d x 22 SWG						
EG7.80.2129	. . .	PIPE, pitot, between elbow union connections to				1	L56	77/28
		pitot boom, outer wing, 5/16"						
		o/d x 22 SWG						
EG7.80.2131	. . .	PIPE, static, between elbow union connections to				1	L56	77/29
		pitot boom, outer wing, 5/16"						
		o/d x 22 SWG						
EG7.80.1931	. . .	PIPE, pitot, from drain trap tee aft of frame 15 to				1	L56	77/6
		connection at frame 12, 5/16"						
		o/d x 22 SWG						
EG7.80.1949	. . .	PIPE, pitot, from low pressure union forward of				1	L56	77/5
		frame 17 to drain trap tee aft of frame						
		15, 5/16" o/d x 22 SWG						
EG7.80.1951	. . .	PIPE, static, from connection forward of frame 16				1	L56	77/16
		to connection at frame 12, 5/16" o/d						
		x 22 SWG						

SERVICES
PITOT AND STATIC PIPES IN PORT WING

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EG7.80.2145	. .	PIPE, pitot (Mod.5265) (Mat. Spec. 5/16" o/d, L54 x 22 SWG Ref.30B/1054948)	1	—	
EG7.80.2151	. .	PIPE, static (Mod.5265) (Mat. Spec. 5/16" o/d, L54 x 22 SWG Ref.30B/1054948)	1	—	
EG7.80.2149	. .	PIPE, pitot (Mod.5265) (Mat. Spec. 5/16" o/d, L54 x 22 SWG Ref.30B/1054948)	1	—	
EG7.80.2147	. .	PIPE, static (Mod.5265) (Mat. Spec. 5/16" o/d, L54 x 22 SWG Ref.30B/1054948)	1	—	
EG7.80.2155	. .	PIPE, pitot, flex assembly (Mod.5265) (Mat. Spec. 5/16" i/d x 9/16" o/d x 15 1/2" long, DUNLOP A135)	1	—	
EG7.80.2159	. .	PIPE, static, flex assembly (Mod.5265) (Mat. Spec. 5/16" i/d x 9/16" o/d x 12 1/2" long DUNLOP A135)	1	—	
AGS838/6	. .	TRAP, drain	10	—	
AGS838/1	. .	UNION, straight	5	—	
AGS838/2	. .	UNION, tee	5	—	
AGS838/3	. .	UNION, elbow	4	—	
AGS838/4	. .	UNION, nut	36	—	
AGS838/8	. .	WASHER, sealing	28	—	
AGS838/9	. .	WASHER, sealing	6	—	
EEAS239/1/AH	. .	WASHER, "D"	10	—	78/3

A.P.101B-0417-3A

SERVICES

Page NAM1

TURBO-ALTERNATOR IN PORT WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	—	TURBO-ALTERNATOR, INSTALLATION							—	—	—	80/30
		(E.G.7.61.1)										
		Spares for:—										
42541	E.G.7.61.29	BEARING, spherical							1	S80	C	79/21
42542	E.G.7.61.23	BLOCK, self aligning, gear box mounting							1	Phos. Bronze	C	79/22
42543	E.G.7.61.69	BOLT, special, 3/8" BSF, bearing mounting							1	S114	C	79/19
42544	E.G.7.61.127	BOLT, special, 3/8" BSF, alternator mounting							1	S114	C	79/7
26DK/9189	EEAS.222/2C	BOLT, special, 2 BA, air inlet pipe to turbo alternator							20	H.T.S.	C	80/28
		attachment										
42545	E.G.7.61.13	BRACKET, gear box mounting							1	S521	C	79/13
		Attaching parts for E.G.7.61.13:—										
42546	E.G.7.61.87	Bolt, special, 3/8" BSF							4	H.T.S.	C	79/10
28W/9419489	SP16/J	Washer, 3/8" BSF plain							4	—	C	79/11
42547	E.G.7.61.19	BRACKET, gear box mounting							1	S21	C	79/18
		Attaching parts for E.G.7.61.19:—										
42548	E.G.7.61.89	Bolt, special, 3/8" BSF							4	H.T.S.	C	79/25
1438898	E.G.7.61.141	Shims, laminated							2	LA3	C	
28W/9419489	SP16/J	Washer, 3/8" BSF plain							4	—	C	79/24
	—	MOUNTING, GEAR BOX, PORT, ASSEMBLY							—	—	—	80/14
		(E.G.7.61.5)										
		Spares for:—										
42549	E.G.7.61.21	BRACKET, gear box mounting, port							1	S21	C	80/1
42550	E.G.7.61.33	BRACKET, top, rib 3, port							1	L65	C	80/6
		Attaching parts for E.G.7.61.33:—										
28D/1215660	A59/4C	Bolt, 2 BA hex. head							4	—	C	80/13
28M/9403520	A27/CP	Nut, 2 BA plain							6	—	C	80/8
		Piece, packing							1	L65	—	80/11
1028	EEAS.1/3C	Screw, 2 BA 120° c'sk head							2	S96	C	80/7
42551	E.G.7.61.45	Washer, 'D'							4	L72	C	80/12
	EEAS.28/8/FR	Washer							1	L72	—	80/10
28W/9419402	SP13/C	Washer, 2 BA, plain							6	—	C	80/9
	—	BRACKET, GEAR BOX MOUNTING, PORT,							—	—	—	79/17
		ASSEMBLY (E.G.7.20.149)										
		Spares for:—										
	E.G.7.20.153	BRACKET, channel							1	EEDX.125	—	79/3
		Attaching parts for E.G.7.20.153:—										
28D/1215659	A59/3C	Bolt, 2 BA hex. head							4	—	C	79/4
28M/1006473	A27/CT	Nut, 2 BA thin							4	—	C	79/6
28W/9419402	SP13/C	Washer, 2 BA plain							4	—	C	79/5
	E.G.7.20.651	BRACKET, channel							1	EEDX.125	—	79/1
		Attaching parts for E.G.7.20.651:—										
38D/1215659	A59/3C	Bolt, 2 BA hex. head							4	—	C	79/2
28M/1006473	A27/CT	Nut, 2 BA thin							4	—	C	79/9
28W/9419402	SP13/C	Washer, 2 BA plain							4	—	C	79/8

Page NAM2

SERVICES

TURBO-ALTERNATOR IN PORT WING

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
42555	E.G7.20.161	NUT, anchor, 3/8" BSF						1	S113	C	79/12
42556	E.G7.61.17	FORK:END						1	L65	C	80/5
		Attaching parts for E.G7.61.17:—									
28D/1213605	A59/4G	Bolt, 5/16" BSF hex. head						1	—	C	80/2
28M/1011470	A27/GT	Nut, 5/16" BSF thin						1	—	C	80/4
28W/9419403	SP13/G	Washer, 5/16" BSF plain						1	—	C	80/3
42557	E.G7.61.25	FORK:END						2	L65	C	80/18
		Attaching parts for E.G7.61.25:—									
28D/1215683	A59/4E	Bolt, 1/4" BSF hex. head						2	—	C	80/15
28M/1007403	A27/ET	Nut, 1/4" BSF thin						2	—	C	80/16
28W/9418921	SP13/E	Washer, 1/4" BSF plain						2	—	C	80/17
42558	E.G7.61.37	LUG, strut attachment						1	L65	C	80/53
		Attaching parts for E.G7.61.37:—									
28D/1215661	A59/5C	Bolt, 2 BA hex. head						4	—	C	80/57
28M/9403520	A27/CP	Nut, 2 BA plain						4	—	C	80/51
	E.G7.61.129	Packing, 12 SWG						1	L72	—	80/54
	E.G7.61.51	Piece, packing						1	L65	—	80/55
42551	E.G7.61.45	Washer, 'D'						4	L72	C	80/56
28W/9419402	SP13/C	Washer, 2 BA plain						4	—	C	80/52
42559	E.G7.61.41	LUG, strut attachment						1	L65	C	80/41
		Attaching parts for E.G7.61.41:—									
28D/1215660	A59/4C	Bolt, 2 BA hex. head						2	—	C	80/46
28D/1215661	A59/5C	Bolt, 2 BA hex. head						2	—	C	80/45
28M/9403520	A27/CP	Nut, 2 BA plain						4	—	C	80/39
	E.G7.61.131	Packing, 12 SWG						1	L72	—	80/43
	E.G7.61.49	Piece, packing						1	L65	—	80/42
42551	E.G7.61.45	Washer, 'D'						2	L72	C	80/44
28W/9419402	SP13/C	Washer, 2 BA plain						4	—	C	80/40
	E.G7.61.75	TUBE, ASSEMBLY (Make from Ref. 42560)						1	T45	LM	80/33
		Spares for:—									
42556	E.G7.61.17	FORK:END						1	L65	C	80/48
1096	EEAS.37/15A	NIPPLE, 4 BA						4	S96	C	80/37
1571	EEAS.38/2A	SPOKE, 4 BA (Make from 28R/6124)						2	S96	LM	80/38
	E.G7.61.43	TUBE, 15".72 long						1	T45	—	80/34
		Attaching parts for E.G7.61.75:—									
28D/1213605	A59/4G	Bolt, 5/16" BSF hex. head						1	—	C	80/47
1096	EEAS.37/15A	Nipple, 4 BA						4	S96	C	80/19
28M/1011470	A27/GT	Nut, 5/16" BSF thin						1	—	C	80/50
1571	EEAS.38/2A	Spoke, 4 BA (Make from 28R/6124)						2	—	LM	80/20
28W/9419403	SP13/G	Washer, 5/16" BSF plain						1	—	C	80/49
	E.G7.61.77	TUBE, ASSEMBLY (Make from Ref. 42560)						—	T45	LM	80/31
		Spares for:—									
42556	E.G7.61.17	FORK:END						1	L65	C	80/48
1096	EEAS.37/15A	NIPPLE, 4 BA						4	S96	C	80/37
1571	EEAS.38/2A	SPOKE, 4 BA (Make from 28R/6124)						2	S96	LM	80/38

TURBO-ALTERNATOR IN PORT WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index

A.P.101B-0417-3A

SERVICES

Page NAN1

TURBO-ALTERNATOR IN STARBOARD WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
R	—	TURBO-ALTERNATOR, INSTALLATION	—	—	—	81/14
		(E.G.7.61.3)				
		Spares for:—				
	42541 E.G.7.61.29	BEARING, spherical	1	BAC.M37	C	82/23
	42542 E.G.7.61.23	BLOCK, self aligning, gearbox mounting	1	Phos. Bronze	C	82/22
	42543 E.G.7.61.69	BOLT, special, 3/8" BSF, bearing mounting	1	S114	C	82/25
	42544 E.G.7.61.127	BOLT, special, 3/8" BSF, alternator mounting	1	S114	C	82/1
	26DK/9189 EEAS.222/2C	BOLT, special, 2 BA, air inlet pipe to turbo-alternator ...	20	H.T.S.	C	81/20
		attachment				
	42545 E.G.7.61.13	BRACKET, gear box mounting	1	S521	C	82/10
		Attaching parts for E.G.7.61.13:—				
	42546 E.G.7.61.87	Bolt, special, 3/8" BSF	4	H.T.S.	C	82/12
	28W/9419489 SP16/J	Washer, 3/8" BSF plain	4	—	C	82/11
R	42547 E.G.7.61.19	BRACKET, gear box mounting	1	S21	C	82/20
		Attaching parts for E.G.7.61.19:—				
	42548 E.G.7.61.89	Bolt, special, 3/8" BSF	4	H.T.S.	C	82/18
	1438898 E.G.7.61.141	Shim, laminated	2	LA3	C	82/26
	28W/9419489 SP16/J	Washer, 3/8" BSF plain	4	—	C	82/19
	—	MOUNTING, GEAR BOX, STARBOARD,	—	—	—	81/15
		ASSEMBLY (E.G.7.61.7)				
		Spares for:—				
R	42565 E.G.7.61.53	BRACKET, gear box mounting	1	S21	C	81/21
	42566 E.G.7.61.59	BRACKET, centre, rib 2, starboard	1	L65	C	81/9
		Attaching parts for E.G.7.61.59:—				
	28D/1214526 A59/2C	Bolt, 2 BA hex. head	2	—	C	81/13
	28D/1215659 A59/3C	Bolt, 2 BA hex. head	2	—	C	81/12
	28M/9403520 A27/CP	Nut, 2 BA plain	6	—	C	81/11
	1028 EEAS.1/3C	Screw, 2 BA 120° c'sk head	2	S96	C	81/8
	28W/9419402 SP13/C	Washer, 2 BA plain	6	—	C	81/10
	—	BRACKET, GEAR BOX MOUNTING,	—	—	—	82/14
		STARBOARD, ASSEMBLY				
		(E.G.7.20.757)				
		Spares for:—				
	E.G.7.20.765	BRACKET, channel	1	EEDX125	—	82/5
		Attaching parts for E.G.7.20.765:—				
	28D/1215659 A59/3C	Bolt, 2 BA hex. head	4	—	C	82/2
	28M/1006473 A27/CT	Nut, 2 BA thin	4	—	C	82/3
	28W/9419402 SP13/C	Washer, 2 BA plain	4	—	C	82/4
	E.G.7.20.775	BRACKET, channel	1	EEDX125	—	82/6
		Attaching parts for E.G.7.20.775:—				
	28D/1215659 A59/3C	Bolt, 2 BA hex. head	4	—	C	82/7
	28M/1006473 A27/CT	Nut, 2 BA thin	4	—	C	82/8
	28W/9419402 SP13/C	Washer, 2 BA plain	4	—	C	82/9

Page NAN2

SERVICES

TURBO-ALTERNATOR IN STARBOARD WING

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
42555	E.G7.20.161							NUT, anchor, 3/8" BSF	1	S113	C	82/13
42556	E.G7.61.17							FORK-END	1	L65	C	81/16
								Attaching parts for E.G7.61.17:—				
28D/1213605	A59/4G							Bolt, 5/16" hex. head	1	—	C	81/19
28M/1011470	A27/GT							Nut, 5/16" BSF thin	1	—	C	81/17
28W/9419403	SP13/G							Washer, 5/16" BSF plain	1	—	C	81/18
42557	E.G7.61.25							FORK-END	2	L65	C	81/45
								Attaching parts for E.G7.61.25:—				
28D/1215683	A59/4E							Bolt, 1/4" BSF hex. head	2	—	C	81/44
28M/1007403	A27/ET							Nut, 1/4" BSF thin	2	—	C	81/42
28W/9418921	SP13/E							Washer, 1/4" BSF plain	2	—	C	81/43
42570	E.G7.61.113							LUG, strut attachment	1	L65	C	81/53
								Attaching parts for E.G7.61.113:—				
28D/1215659	A59/3C							Bolt, 2 BA hex. head	4	—	C	81/50
28D/1215660	A59/4C							Bolt, 2 BA hex. head	2	—	C	81/49
28M/9403520	A27/CP							Nut, 2 BA plain	6	—	C	81/55
	E.G7.61.133							Packing	1	L72	—	81/52
42551	E.G7.61.45							Washer, 'D'	3	L72	C	81/51
28W/9419402	SP13/C							Washer, 2 BA plain	6	—	C	81/54
42571	E.G7.61.121							LUG, strut attachment	1	S95	C	81/5
								Attaching parts for E.G7.61.121:—				
28D/1215659	A59/3C							Bolt, 2 BA hex. head	2	—	C	81/1
28D/1215660	A59/4C							Bolt, 2 BA hex. head	2	—	C	81/6
28W/9403520	A27/CP							Nut, 2 BA plain	4	—	C	81/4
	E.G7.61.15							Packing	1	L72	—	81/2
	E.G7.61.135							Packing	1	L72	—	81/7
28W/9419402	SP13/C							Washer, 2 BA plain	4	—	C	81/3
42560	E.G7.61.83							TUBE, ASSEMBLY	1	T45	C	81/22
								Spares for:—				
42556	E.G7.61.17							FORK-END	1	L65	C	81/31
1096	EEAS.37/15A							NIPPLE, 4 BA	4	S96	C	81/29
1571	EEAS.38/2A							SPOKE, 4 BA (Make from 28R/6124)	2	S94	LM	81/30
	E.G7.61.63							TUBE, 15".870 long	1	—	C	81/23
								Attaching parts for E.G7.61.83:—				
28D/1213605	A59/4G							Bolt, 5/16" BSF hex. head	1	—	C	81/34
1096	EEAS.37/15A							Nipple, 4 BA	4	S96	C	81/47
28M/1011470	A27/GT							Nut, 5/16" BSF	1	—	C	81/32
1571	EEAS.38/2A							Spoke, 4 BA (Make from 28R/6124)	2	S94	LM	81/48
28W/9419403	SP13/G							Washer, 5/16" BSF plain	1	—	C	81/33
	E.G7.61.85							TUBE, ASSEMBLY	1	T45	—	81/27
								(cut to suit from Ref. 42560)				
								Spares for:—				
42556	E.G7.61.17							FORK-END	1	L65	C	81/31
1096	EEAS.37/15A							NIPPLE, 4 BA	4	S96	C	81/29
1571	EEAS.38/2A							SPOKE, 4 BA (Make from 28R/6124)	2	S94	LM	81/30

SERVICES

TURBO-ALTERNATOR IN STARBOARD WING

[illegible]

SERVICES

TURBO-ALTERNATOR CONTROL UNITS COOLING IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	TURBO-ALTERNATOR CONTROL UNITS COOLING IN PORT WING, ASSEMBLY (EG7.75.607) Spares for:—	-	-	83/35
KING A/C C6045/22/H	. CLAMP, pipe, fan to branch pipe	1	-	83/41
BELLS BAS243/S.0	. CLIP, minox	1	-	83/34
BELLS BAS243/S.1	. CLIP, minox	6	-	83/9
EG7.75.611	. FAN, BLOWER MOTOR, GROUP Consisting of:—	1	-	83/32
A25/3C	. . BOLT, 2BA hex head	8	-	83/15
PLANNAIR 3/PL/182/271/ Mk 3	. . BLOWER, motor	1	-	83/31
EG7.81.2127	. . CABLE, ASSEMBLY, P473, FROM PORT FAN MOTOR OUTBOARD RIB 3 TO PORT 200 VOLT TERMINAL BLOCK OUTBOARD OF RIB 3A, GROUP Consisting of:—	1	-	83/30
UNINYVIN 22	. . . CABLE, uninyvin 22	QR	-	83/29
HT50-1/2	. . . SLEEVE, Helsyn 150, white, 1/2" long	2	-	83/25
EEAS146/22	. . . SLEEVE, 1/4" long	QR	-	83/22
EEAS146/22	. . . SLEEVE, 3/4" long	QR	-	83/24
EEAS146/6	. . . SLEEVE, 1" long	QR	-	83/26
HC294	. . . TAG, ring tongue	6	-	83/21
EG7.75.615	. . GASKET, 1/16" thick	1	DTD378A	83/14
EG7.75.631	. . MOUNTING, fan, assembly	1	L65	83/20
AGS2001/C/1	. . NUT, stiff, 2BA	8	-	83/12
SP15/C	. . WASHER, 2BA plain	8	-	83/13
	Attaching parts for EG7.75.611:—			
A25/2C	. Bolt, 2BA hex head	6	-	83/16
EEAS21/A/8/GR	. Washer, "D"	6	L72	83/19
EG7.75.617	. PIPE, branch, from blower unit connection to joint sleeves between ribs 3 and 3A	1	L54	83/39
EG7.75.619	. PIPE, outlet, unit cooling between ribs 3 and 3A	1	L54	83/38
EG7.75.621	. PIPE, assembly, between sleeve joints at rib 3A	1	L54	83/27
EG7.75.625	. PIPE, bend, assembly, rib 2B	1	L54	83/33
EG7.75.627	. PIPE, outlet, unit cooling, rib 2B	1	L54	83/37

R
R

SERVICES

TURBO-ALTERNATOR CONTROL UNITS COOLING IN PORT WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG7.75.629	. PLATE, blanking	10	L72	83/5
EG7.75.637	. PLATE, blanking	2	L72	83/6
EG7.75.721	. PLATE, blanking	2	L72	83/7
EG7.81.2113	. PLATE, blanking	1	L72	83/4
EG7.75.633	. PLATE, bolt, blanking plate securing Attaching parts for EG7.75.633:—	14	S510	83/11
EG7.75.635	. Nut, knurled, 2BA	14	S1	83/18
SP55/C	. Washer, 2BA, spring	14	—	83/17
EG7.81.2115	. PLATE, bolt, blanking plate securing Attaching parts for EG7.81.2115:—	1	S510	83/1
EG7.75.635	. Nut, knurled, 2BA	1	S1	83/2
SP55/C	. Washer, 2BA, spring	1	—	83/3
AS5403	. RING, sealing, clamp connection	1	—	83/40
BELLS	. SLEEVE, connecting	2	—	83/36
BAS160/1/3/ 20/10				
BELLS	. SLEEVE, connecting	1	—	83/10
BAS160/1/3/ 24/10				
BAS184/0	. TAPE, dumbell	QR	—	83/8
BELLS	. TAPE, asbestos, 1" 0 wide × 1/16" thick	QR	—	83/28
EEAS237/6/AH	. WASHER, "D", bonding clip attachment	4	L72	83/23

SERVICES

TURBO-ALTERNATOR CONTROL UNITS COOLING IN STARBOARD WING

Part Number	Description						No. Off	Matl. Spec.	Plate No.
	1	2	3	4	5	6			
-	TURBO-ALTERNATOR CONTROL UNITS COOLING IN STARBOARD WING, ASSEMBLY (EG7.75.609) Spares for:—						-	-	84/36
KING A/C C6045/22/H	.	CLAMP, pipe, fan to branch pipe					1	-	84/37
BELLS BAS243/S.0	.	CLIP, minox					1	-	84/40
BELLS BAS243/S.1	.	CLIP, minox					6	-	84/11
EG7.75.653	.	FAN, BLOWER MOTOR, GROUP Consisting of:—					1	-	84/13
A25/3C	.	BOLT, 2BA hex head					8	-	84/19
PLANNAIR 3/PL/182/271/ Mk 3	.	BLOWER, motor					1	-	84/14
EG7.81.2128	.	CABLE, ASSEMBLY, S474, FROM STARBOARD FAN MOTOR OUTBOARD OF RIB 3 TO STARBOARD 200 VOLT TERMINAL BLOCK OUTBOARD OF RIB 2, GROUP Consisting of:—					1	-	84/17
UNINYVIN 22	.	CABLE, uninyvin 22					QR	-	84/18
HT50-1/2	.	SLEEVE, Helsyn 150, white, 1/2" long					2	-	84/23
EEAS146/22	.	SLEEVE, 1/4" long					QR	-	84/25
EEAS146/22	.	SLEEVE, 3/4" long					QR	-	84/24
EEAS146/6	.	SLEEVE, 1" long					QR	-	84/22
HC294	.	TAG, ring tongue					6	-	84/26
EG7.75.615	.	GASKET, 1/16" thick					1	DTD378A	84/15
EG7.75.631	.	MOUNTING, fan, assembly					1	L65	84/16
AGS2001/C/1	.	NUT, stiff, 2BA					8	-	84/21
SP15/C	.	WASHER, 2BA plain					8	-	84/20
A25/2C	.	Attaching parts for EG7.75.653:— Bolt, 2BA hex head					6	-	84/30
EEAS21/A/8/G/R	.	Washer, "D"					6	L72	84/27
EG7.75.618	.	PIPE, branch, from blower unit connection to sleeve joints between ribs 3 and 3A					1	L54	84/39
EG7.75.619	.	PIPE, outlet, unit cooling, between ribs 3 and 3A					1	L54	84/41
EG7.75.621	.	PIPE, assembly, between sleeve joints at rib 3A					1	L54	84/33
EG7.75.625	.	PIPE, bend, assembly, rib 2B					1	L54	84/35
EG7.75.628	.	PIPE, outlet, unit cooling, rib 2B					1	L54	84/42

R
R

SERVICES

TURBO-ALTERNATOR CONTROL UNITS COOLING IN STARBOARD WING

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EG7.75.629	. PLATE, blanking	12	L72	84/1
EG7.75.637	. PLATE, blanking	2	L72	84/2
EG7.81.2113	. PLATE, blanking	1	L72	84/6
EG7.75.633	. PLATE, bolt, blanking plate securing Attaching parts for EG7.75.633:—	14	S510	84/7
EG7.75.635	. Nut, knurled, 2BA	13	S1	84/29
AGS2001/C/1	. Nut, stiff, 2BA (at one position only)	1	—	84/8
SP55/C	. Washer, 2BA spring	13	—	84/28
EEAS27/16/ER	. Washer (at one position only)	1	L72	84/9
EG7.81.2115	. PLATE, bolt, blanking plate securing Attaching parts for EG7.81.2115:—	1	S510	84/3
EG7.75.635	. Nut, knurled, 2BA	1	S1	84/4
SP55/C	. Washer, 2BA spring	1	—	84/5
AS5403	. RING, sealing, clamp connection	1	—	84/38
BELLS	. SLEEVE, connecting	2	—	84/34
BAS160/1/3/ 20/10				
BELLS	. SLEEVE, connecting	1	—	84/12
BAS160/1/3/ 24/10				
BELLS	. TAPE, dumbbell	QR	—	84/10
BAS184/0				
BELLS	. TAPE, asbestos, 1".0 wide x 1/16" thick	QR	—	84/32
EEAS237/6AH	. WASHER, "D", bonding clip attachment	4	L72	84/31

Restricted

AL.2

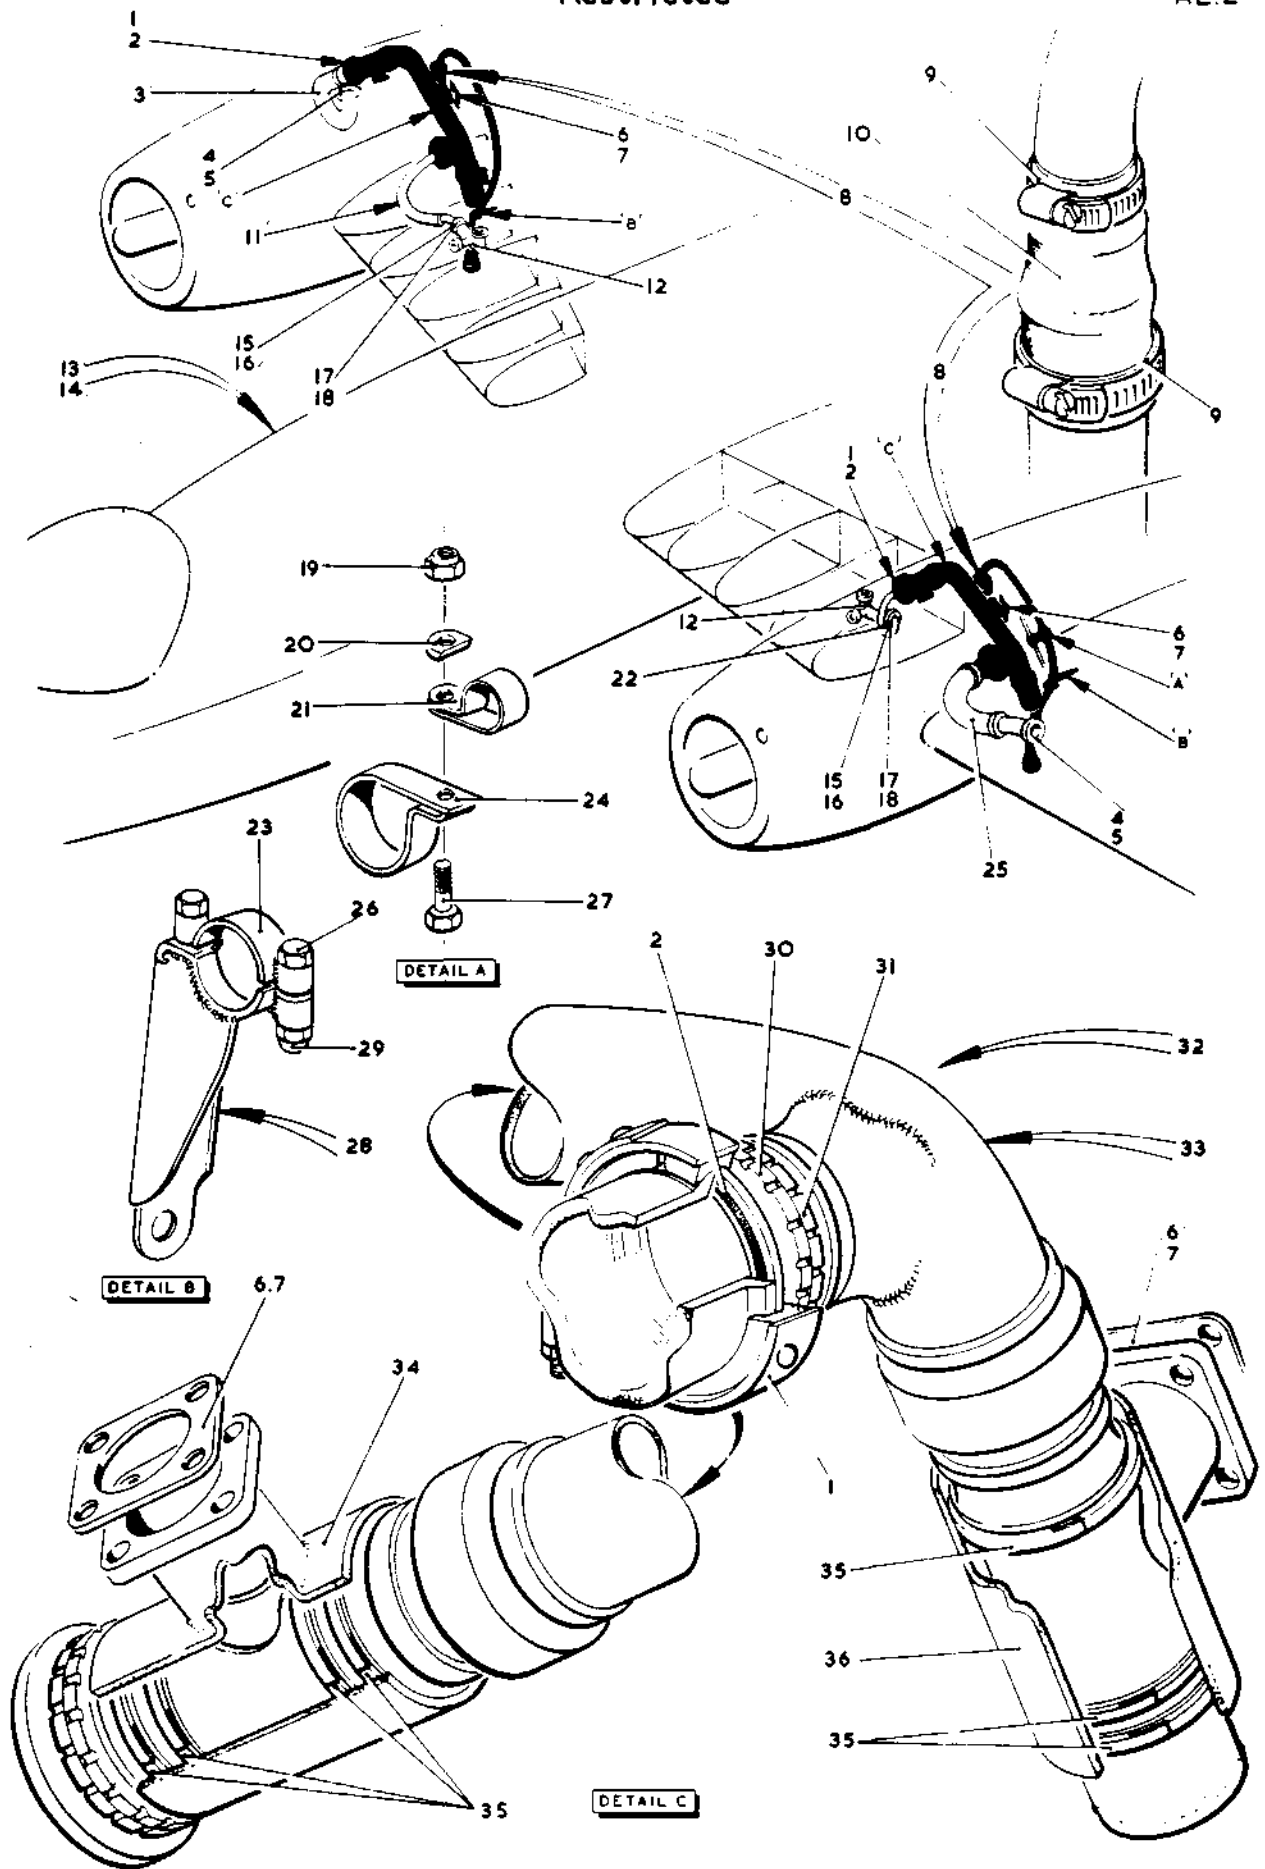


FIG.1 AIR CONNECTIONS TO ENGINE COMPRESSORS IN WINGS
Restricted

T MK 17 SECT N

•

•

•

•

•

•

•

Restricted

11.6

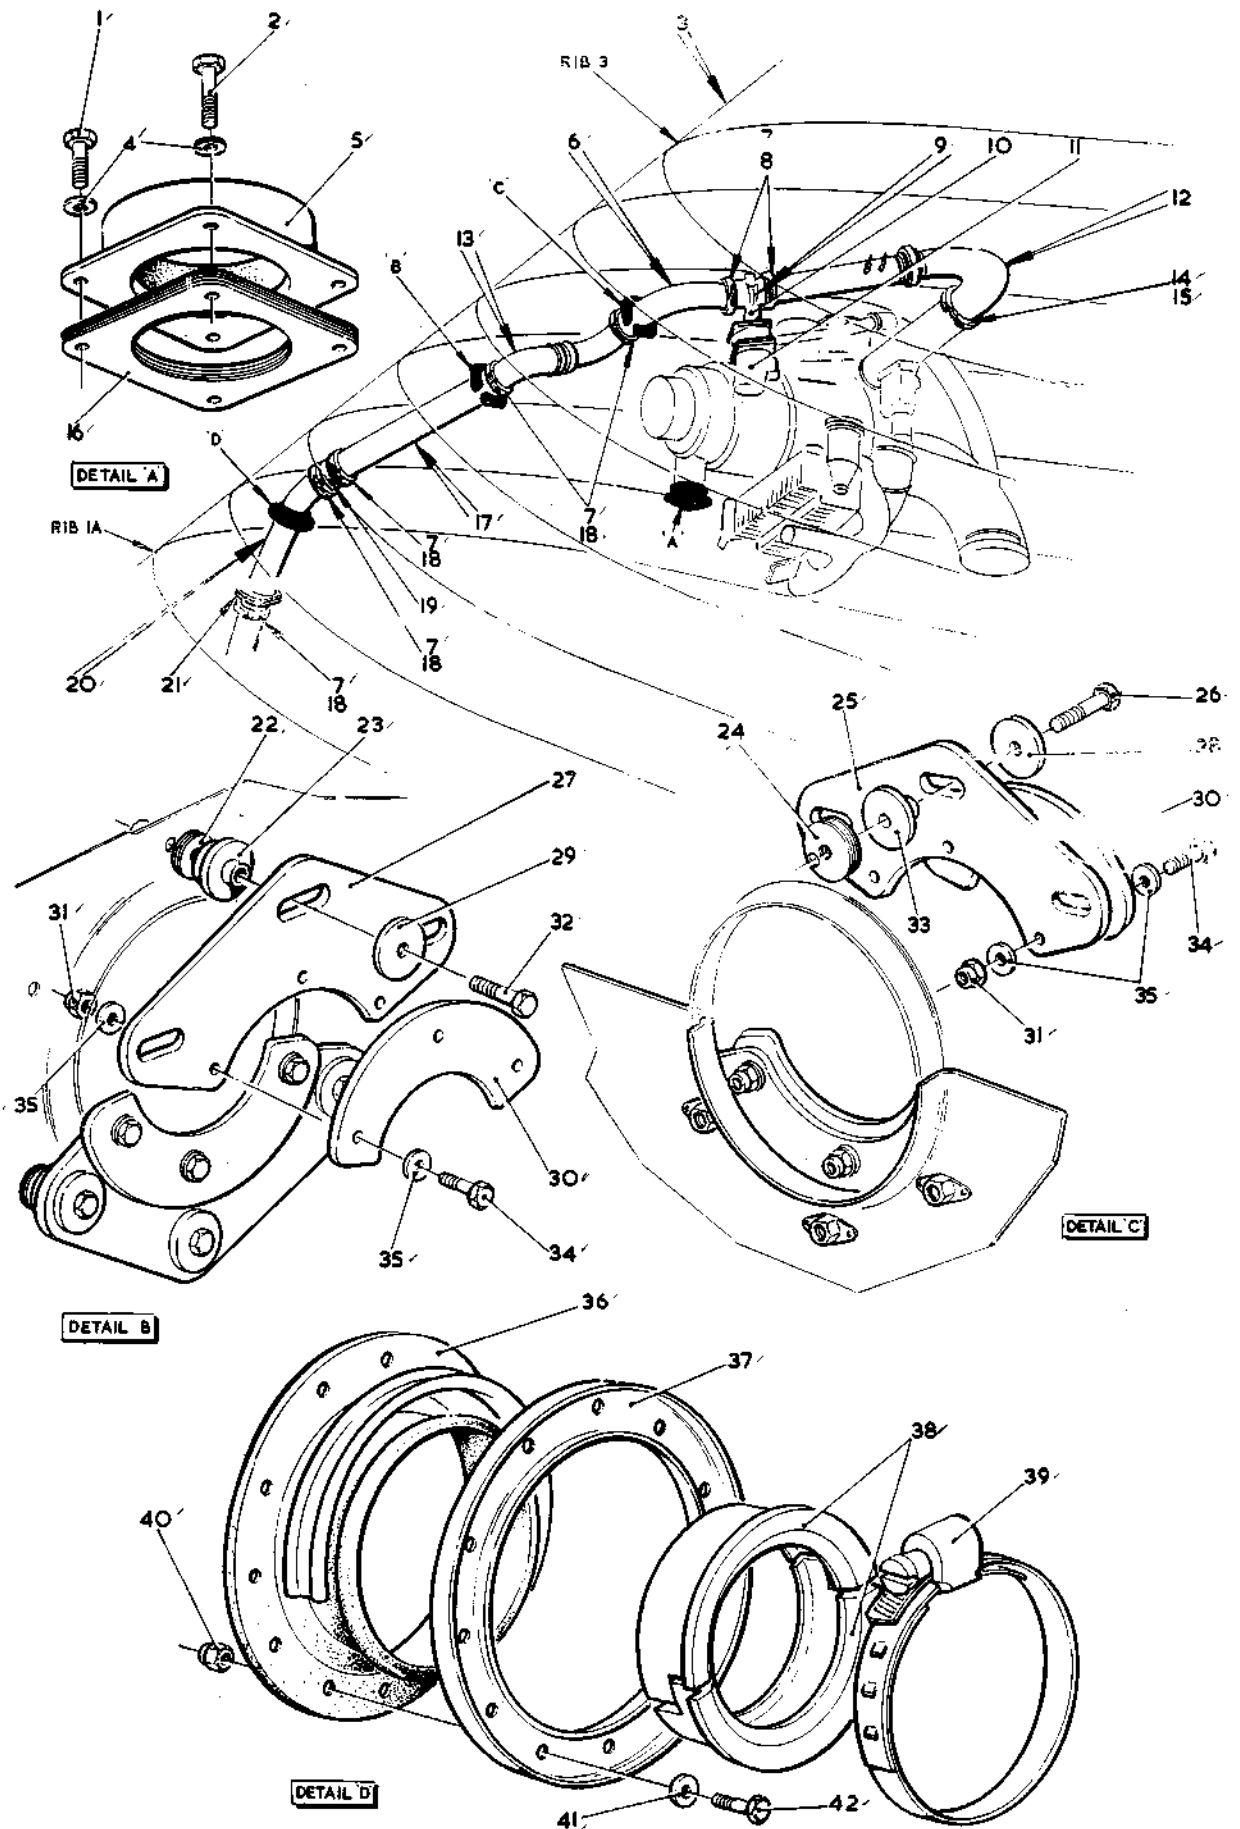


FIG 2 AIR TURBINE PIPES IN PORT WING
Restricted

•

•

•

•

•

•

Restricted

AL2

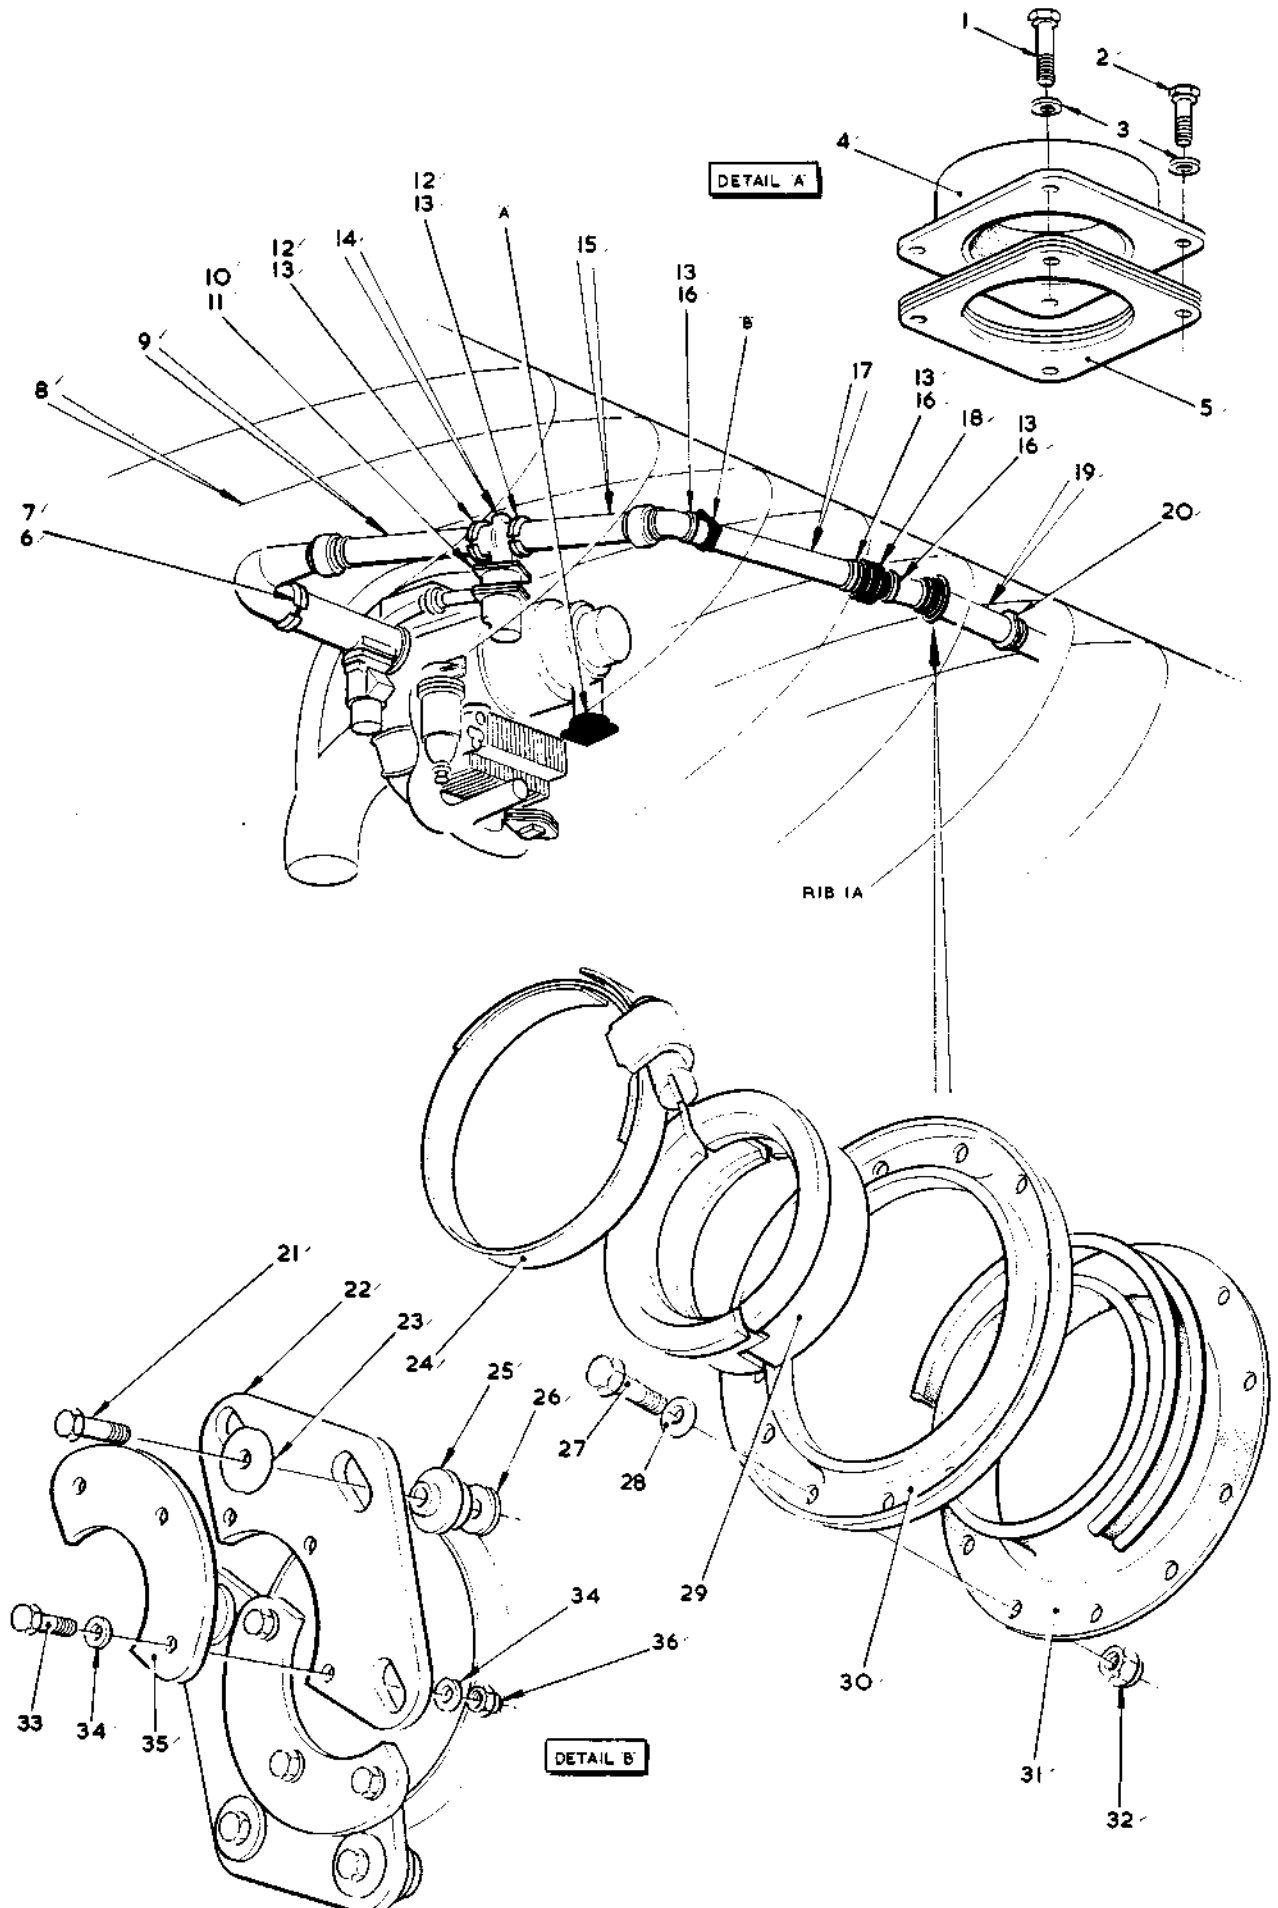


FIG.4 AIR TURBINE PIPES IN STARBOARD WING
Restricted

•

•

•

•

•

•

Restricted

AL 2

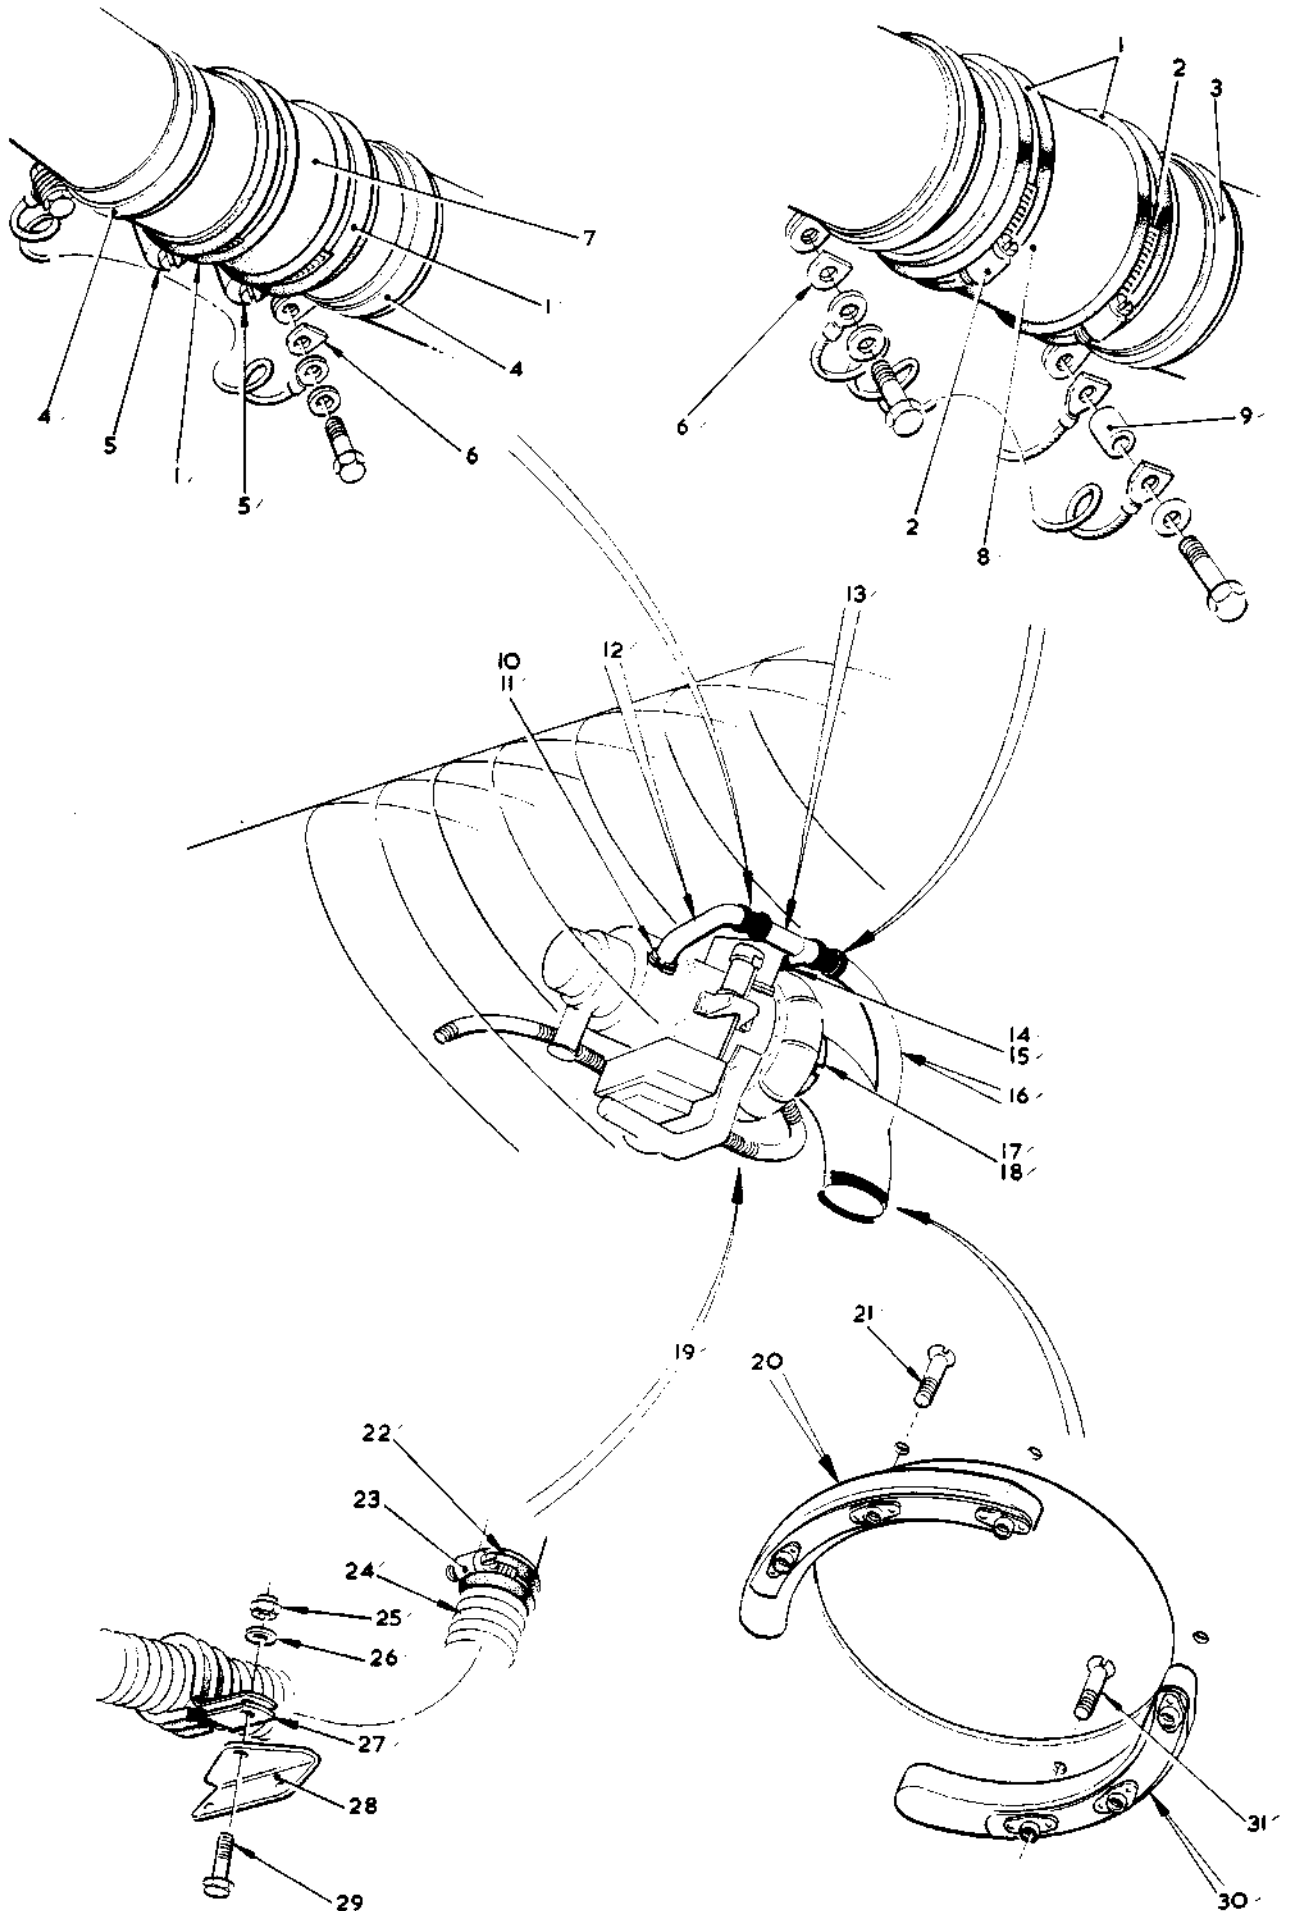


FIG. 5 AIR TURBINE PIPES IN STARBOARD WING
Restricted

•

•

•

•

•

•

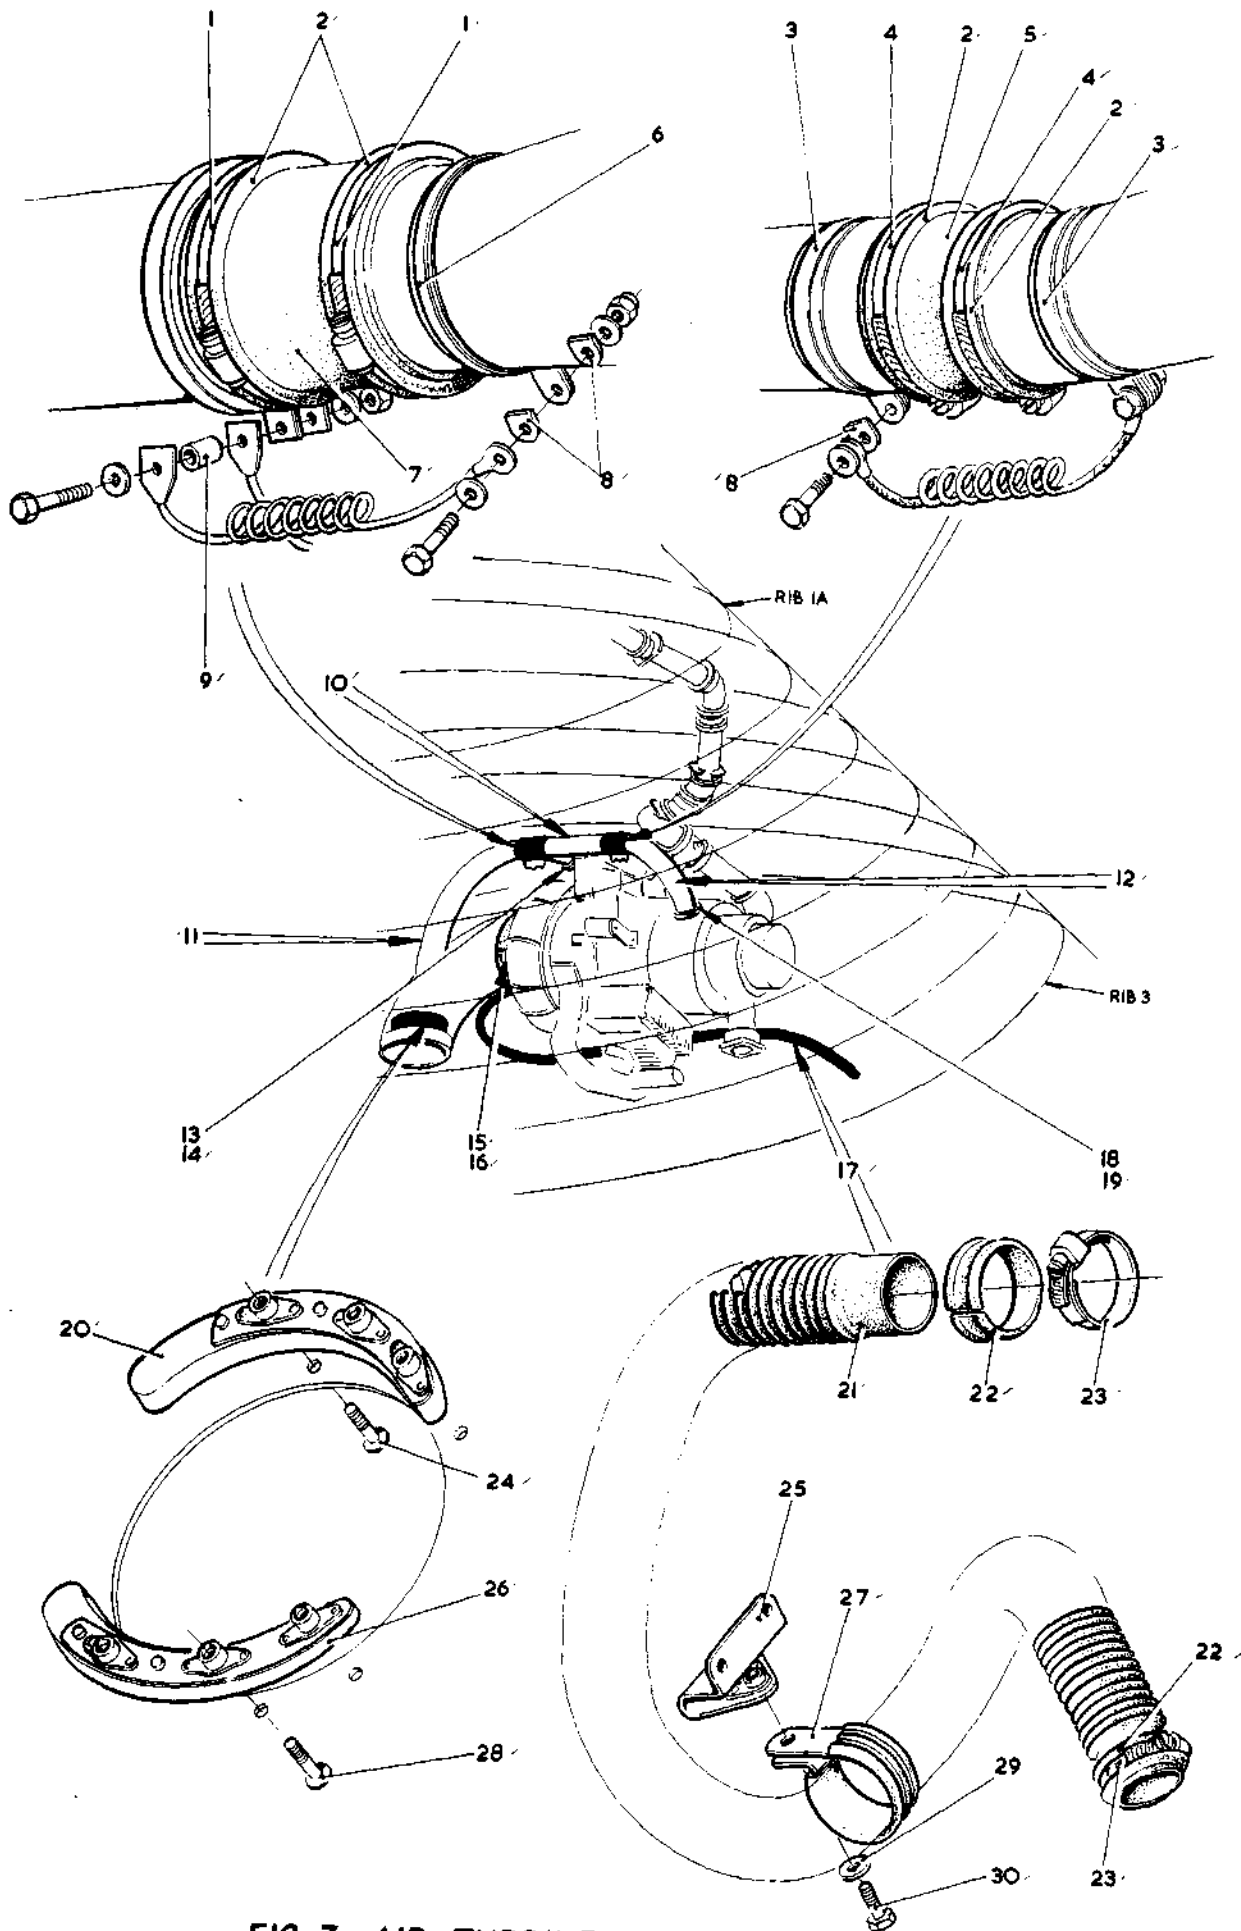


FIG 3 AIR TURBINE PIPES IN PORT WING
Restricted

1

2

3

4

5

6

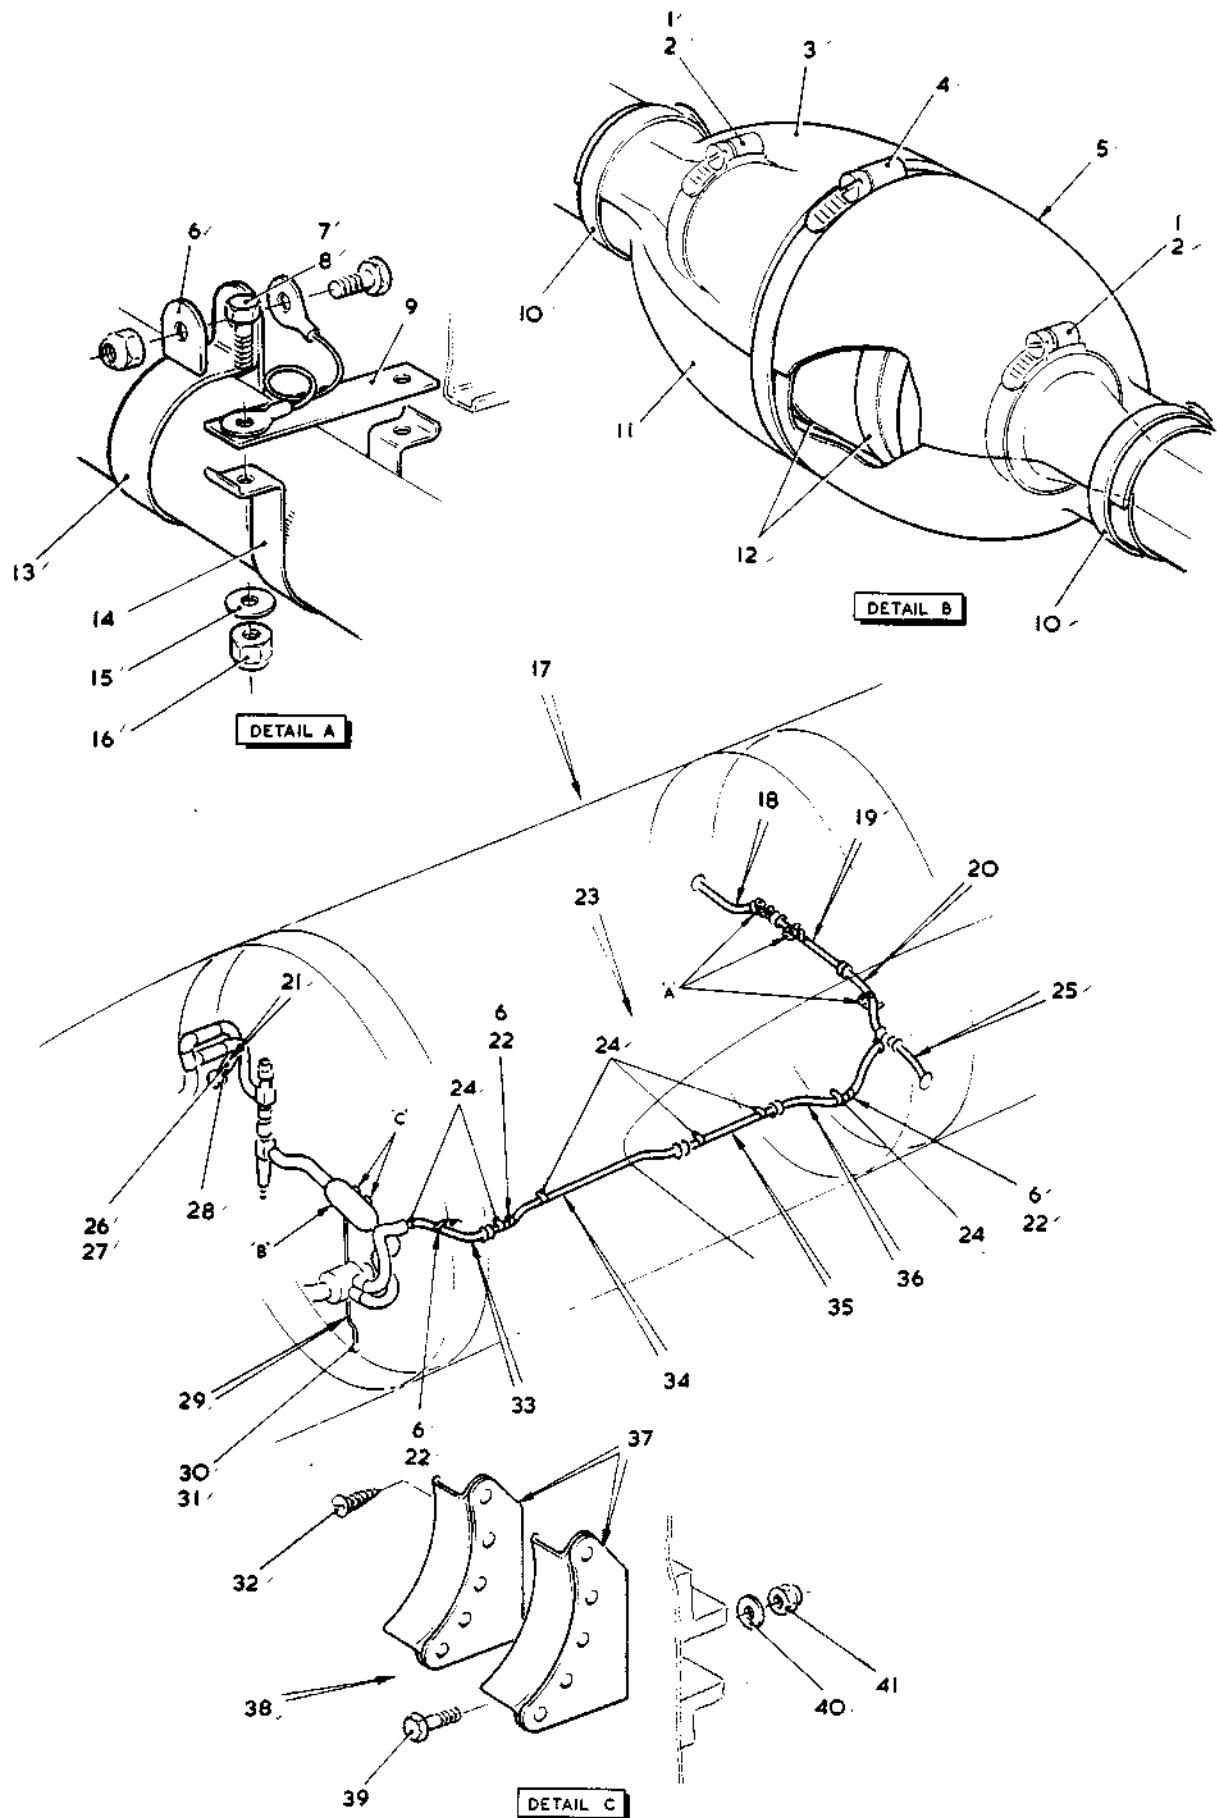


FIG.6 AIR VENTILATED SUIT IN CENTRE FUSELAGE
Restricted

•

•

•

•

•

•

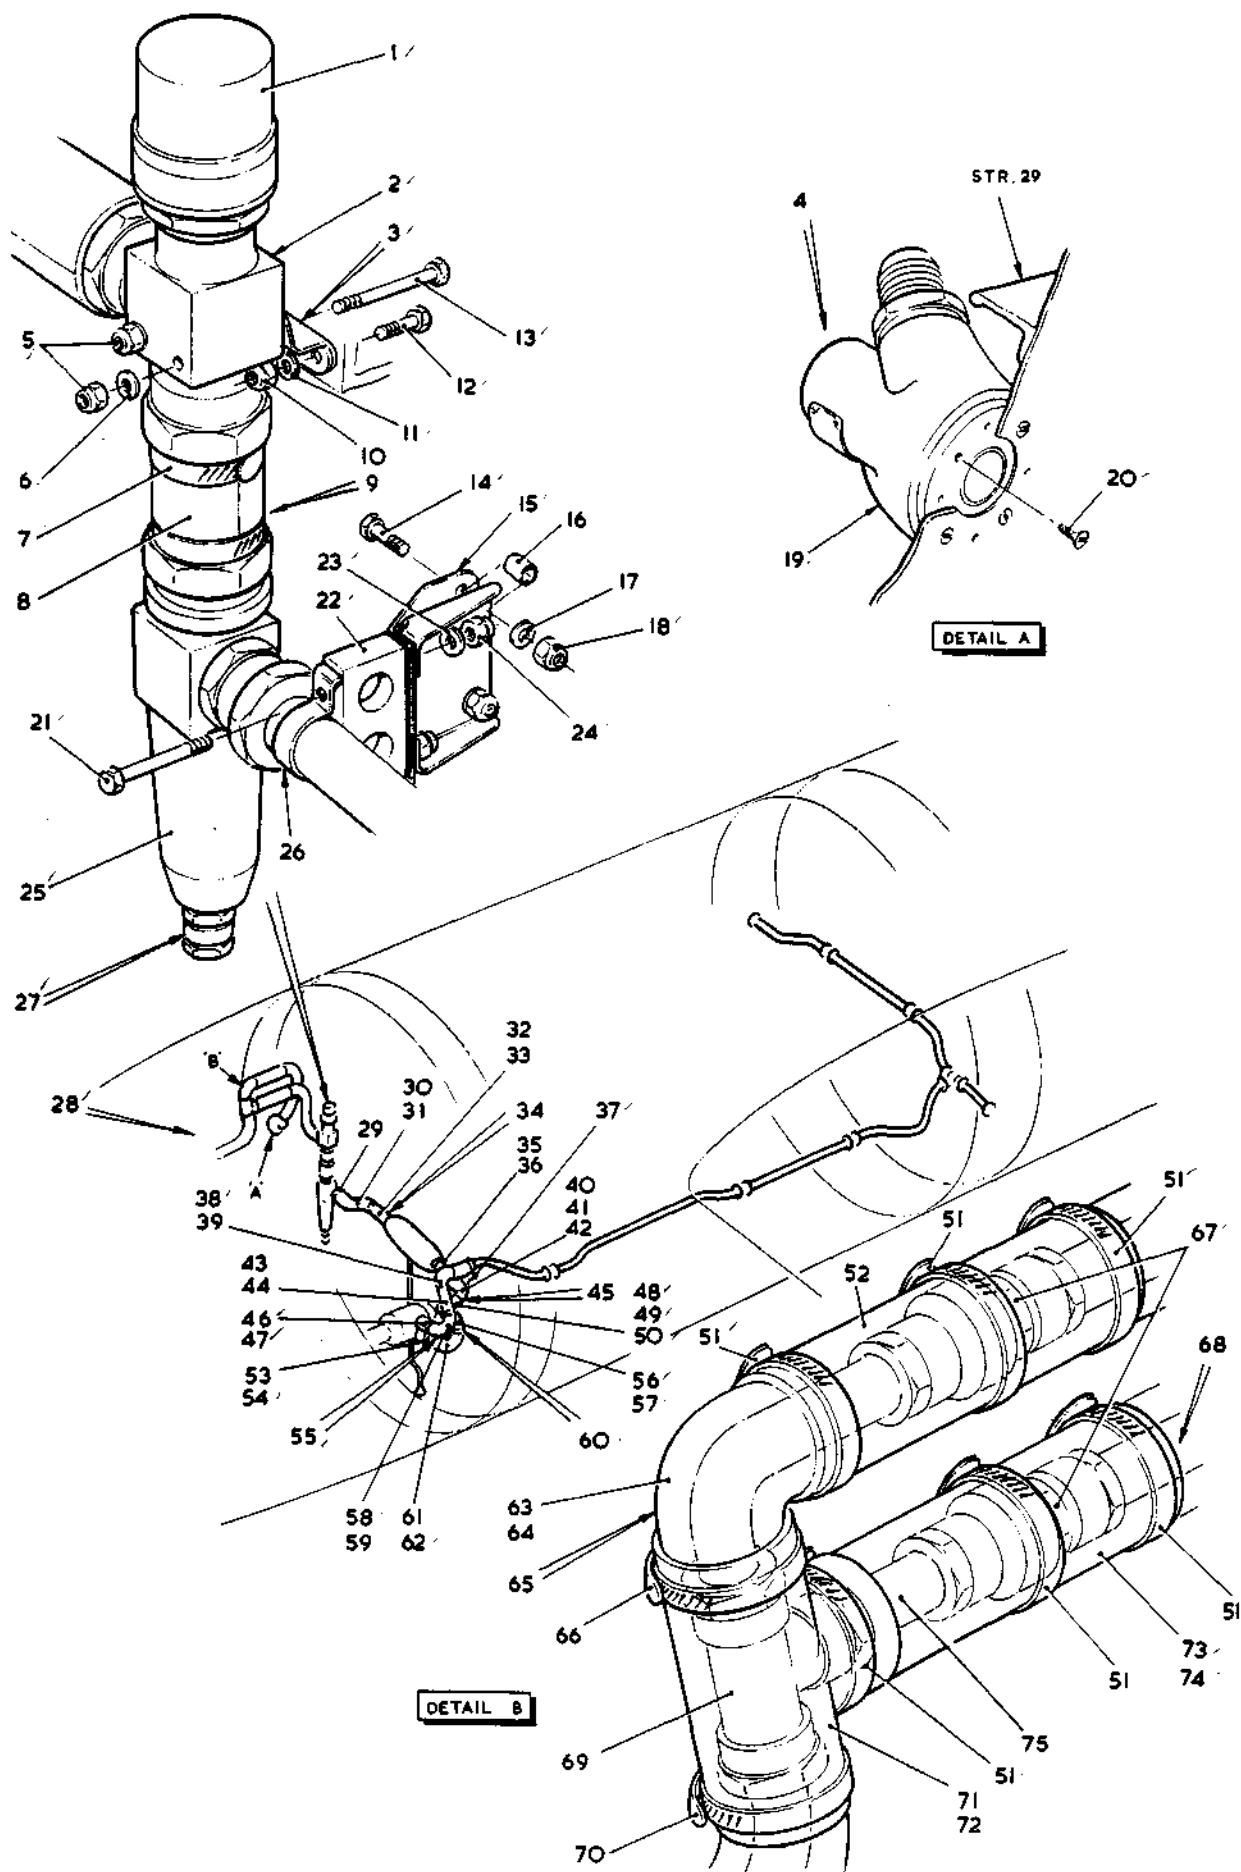


FIG.7 AIR VENTILATED SUIT IN CENTRE FUSELAGE

Restricted

•

•

•

•

•

•

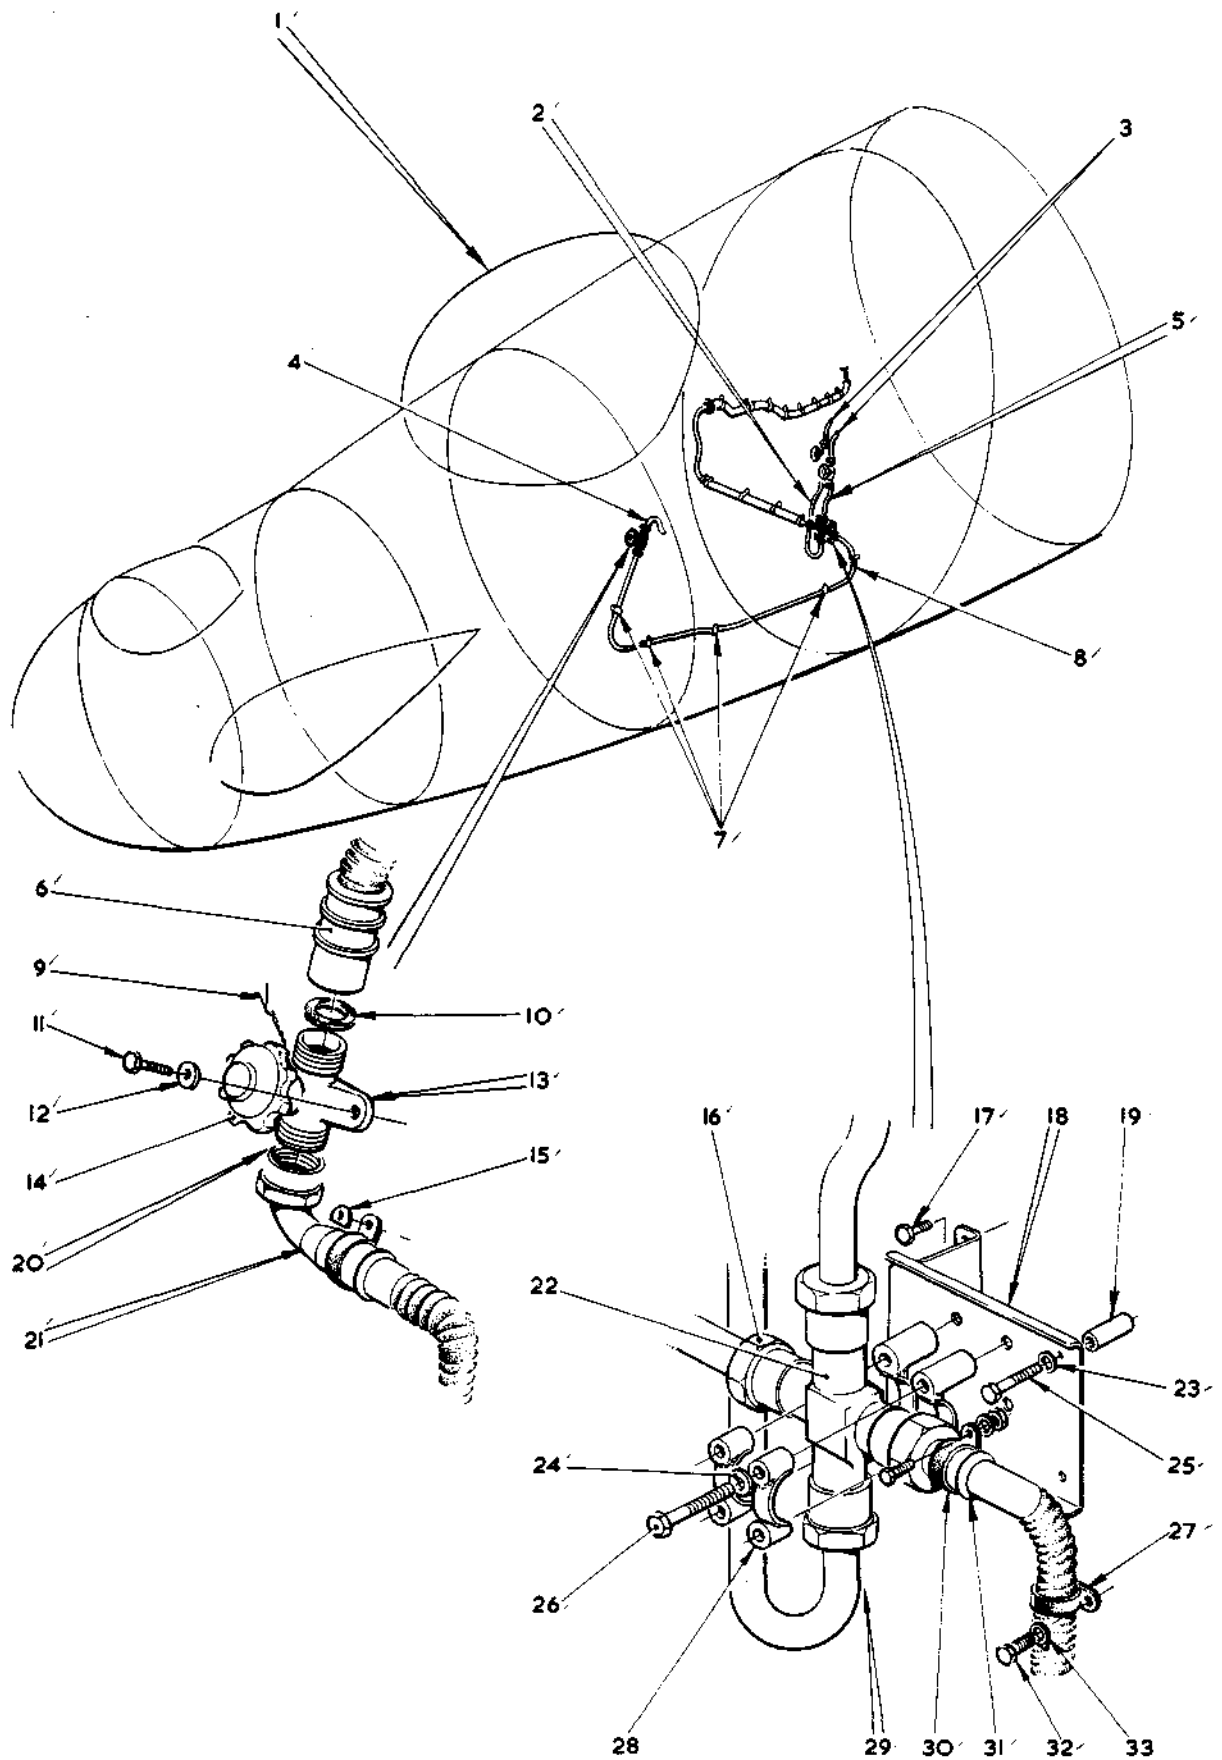


FIG. 8 AIR VENTILATED SUIT IN FRONT FUSELAGE
Restricted

•

•

•

•

•

•

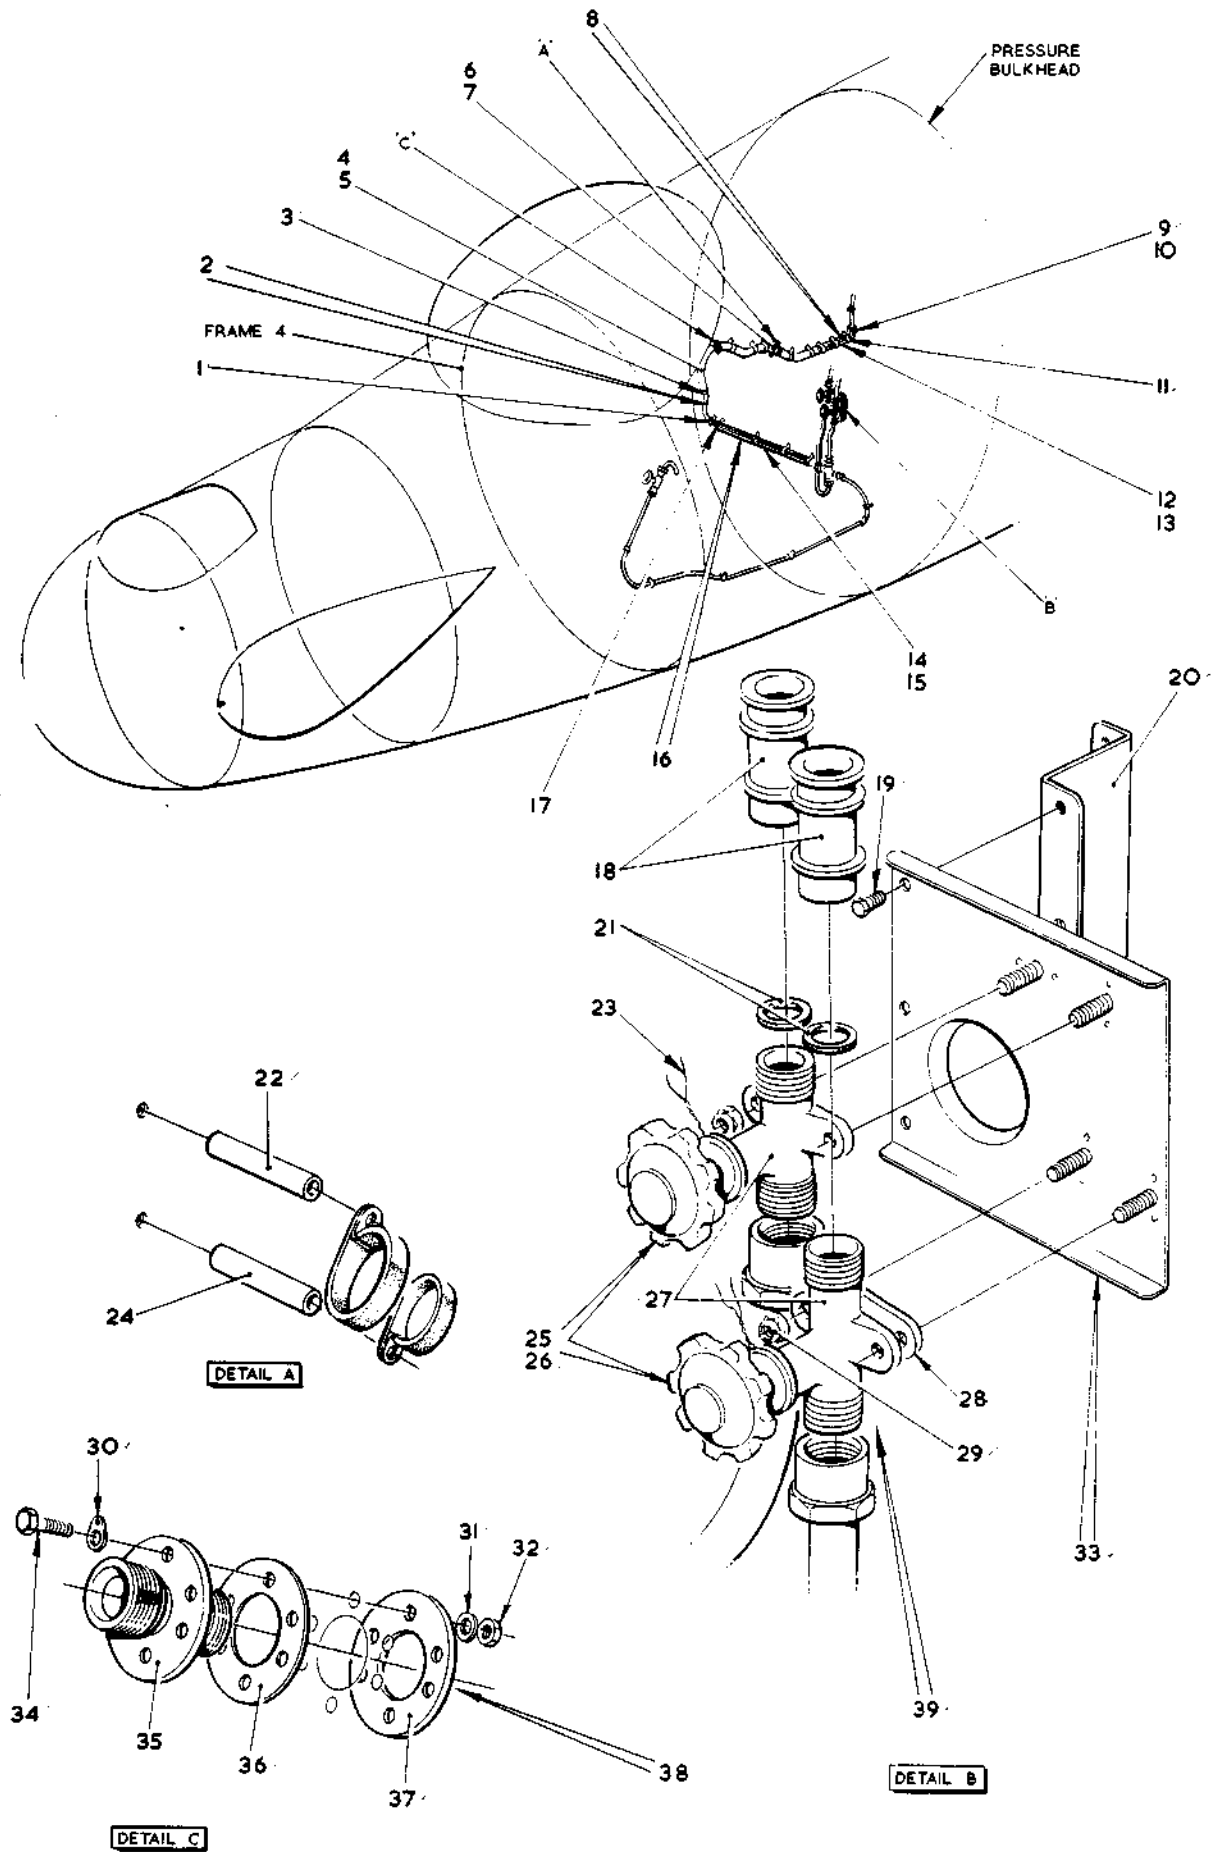


FIG.9 AIR VENTILATED SUIT IN FRONT FUSELAGE
Restricted

•

•

•

•

•

•

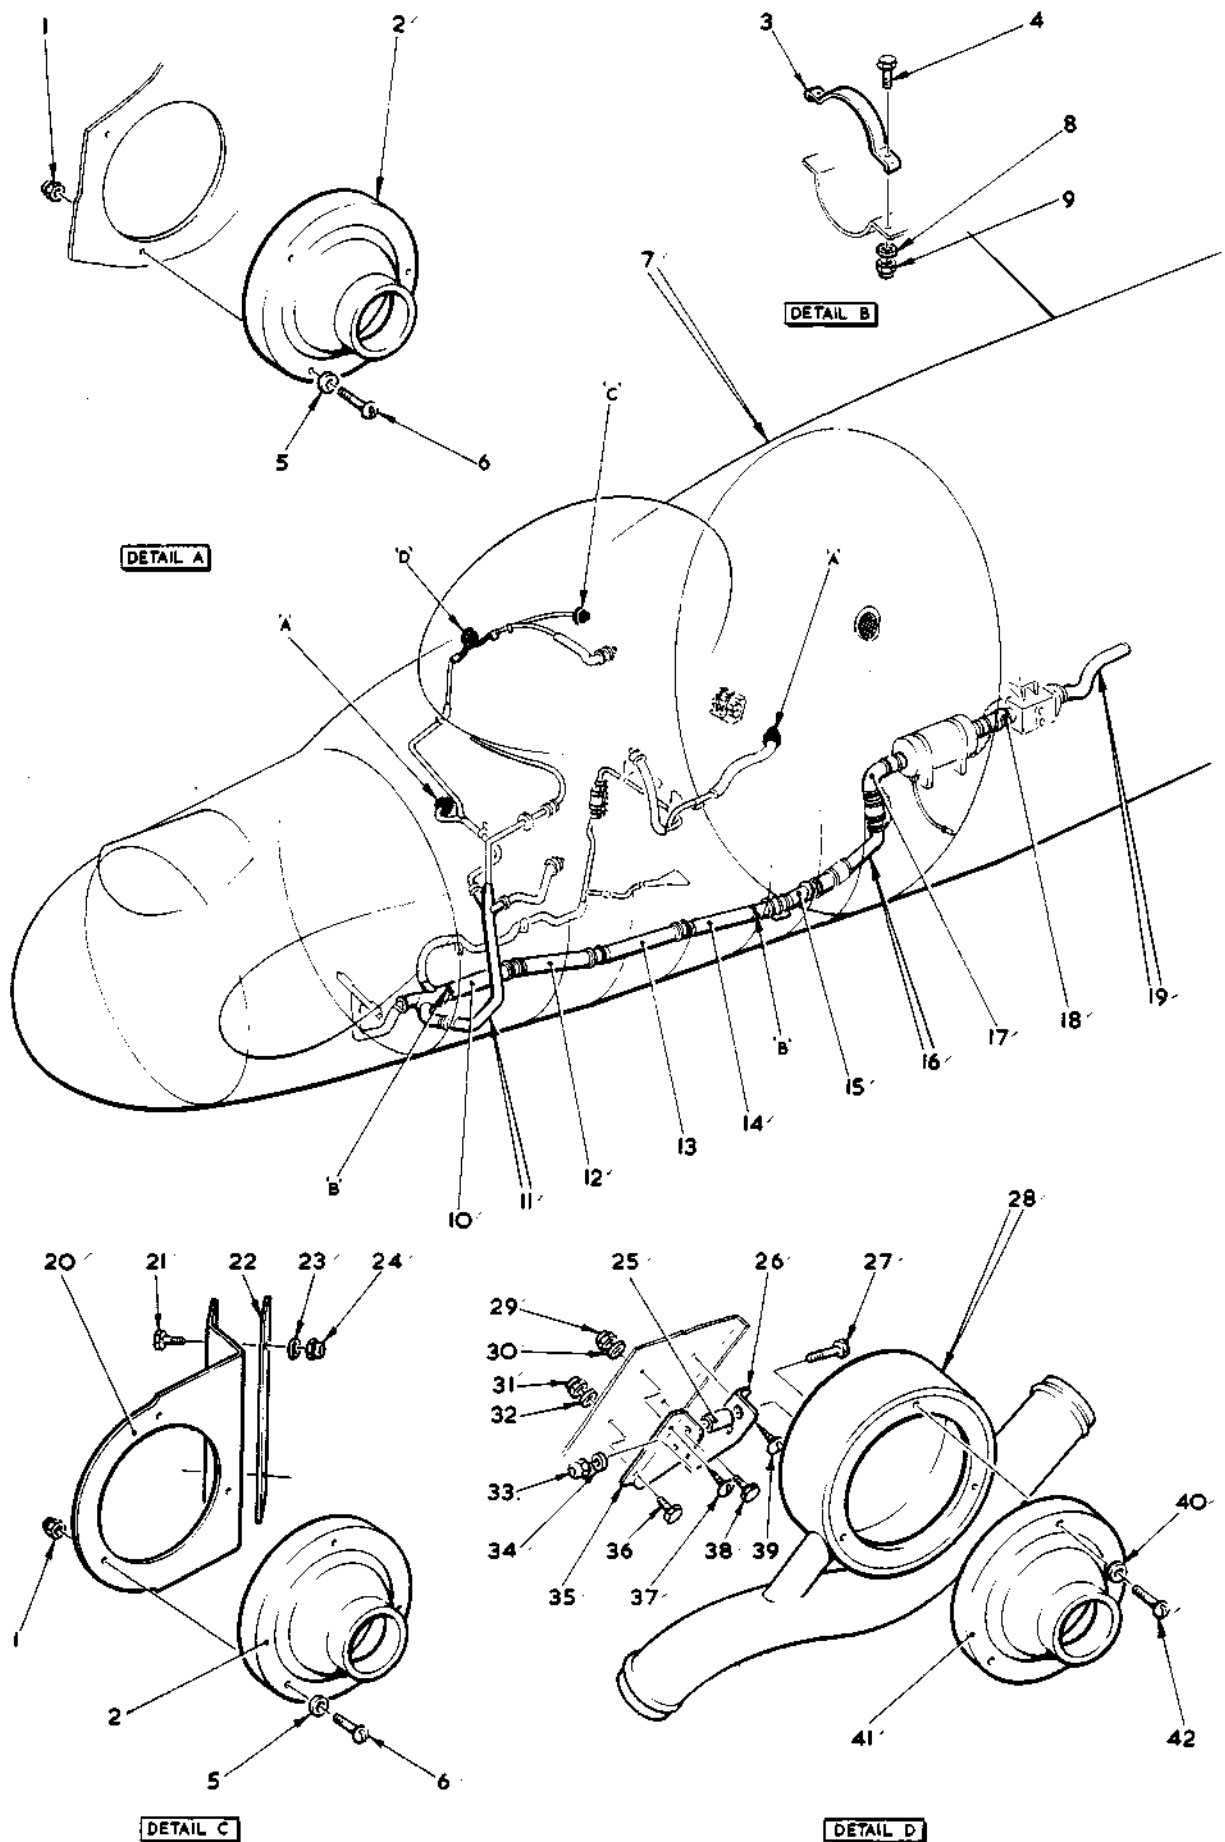


FIG.10 CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Restricted

•


•

•

•

•

•

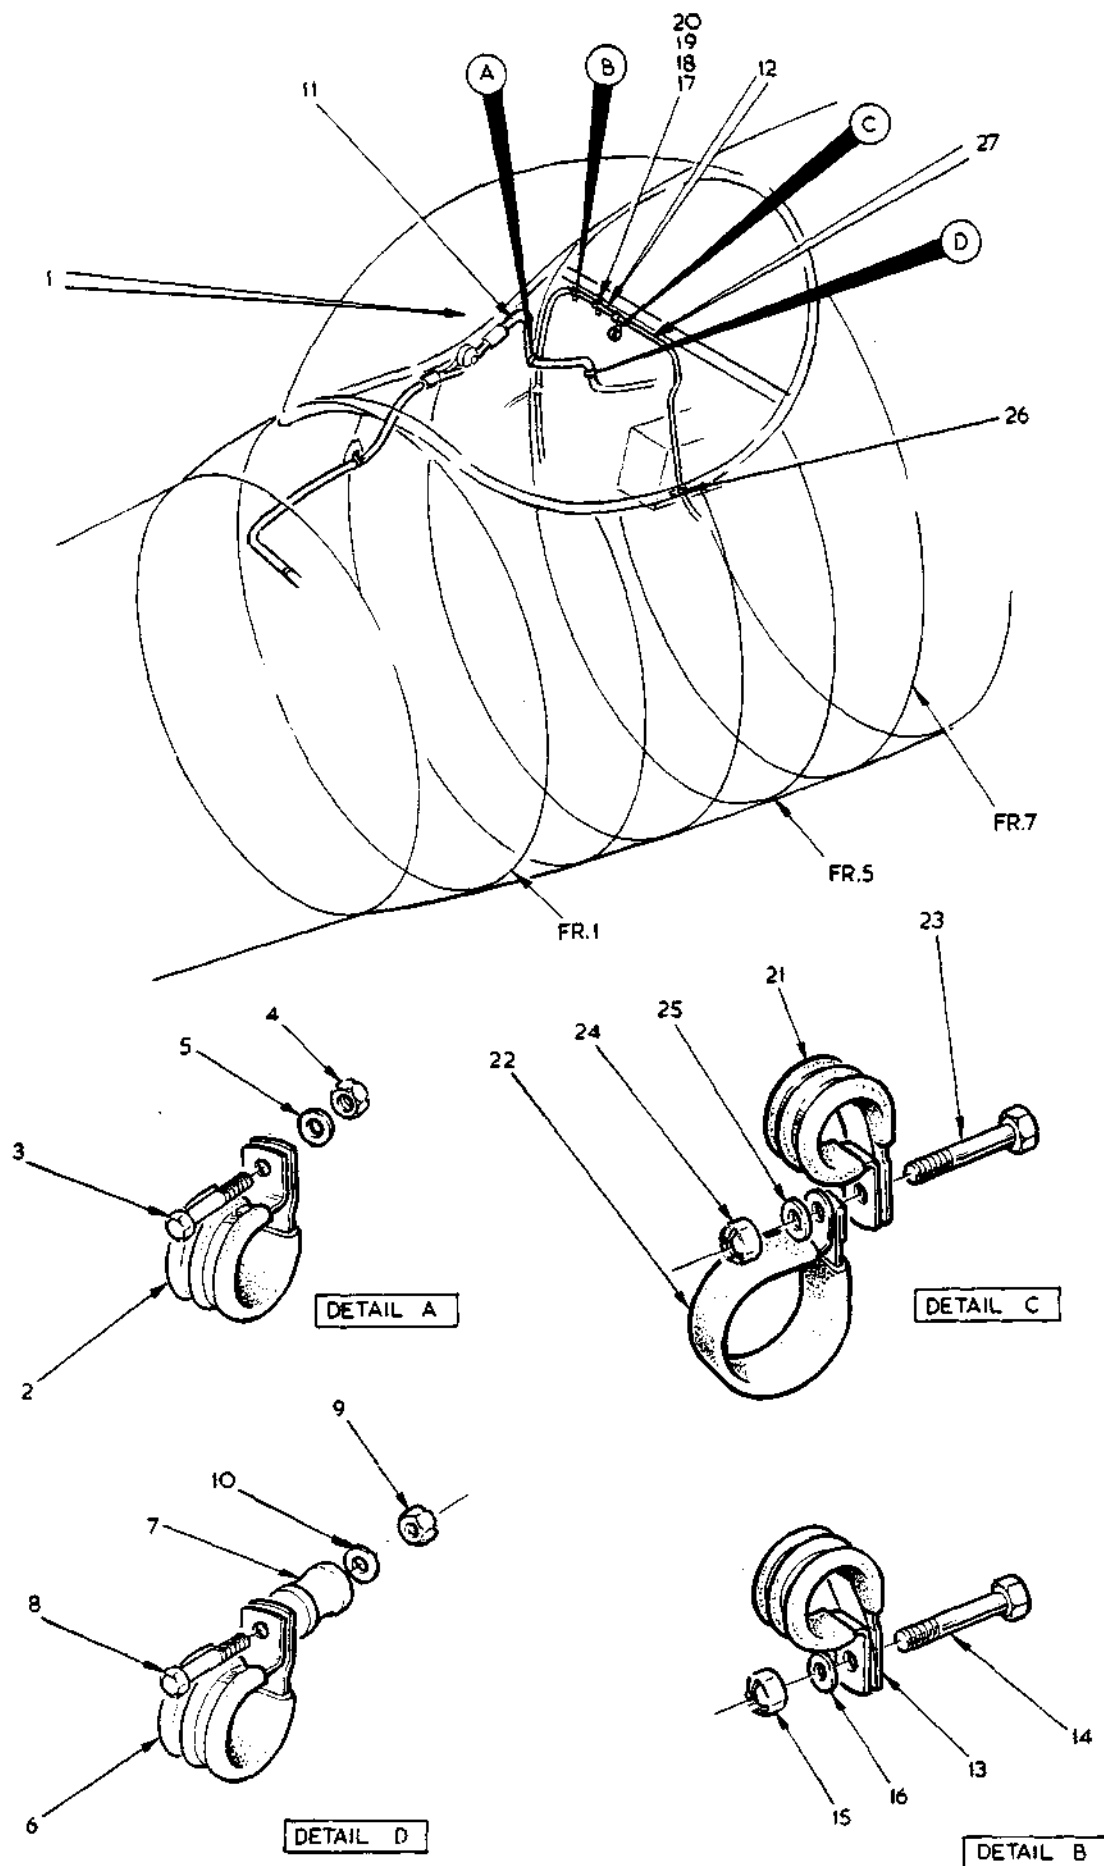**FIG.10A CABIN PRESSURE SYSTEM IN FRONT FUSELAGE**

T.MK.17 SECT. N

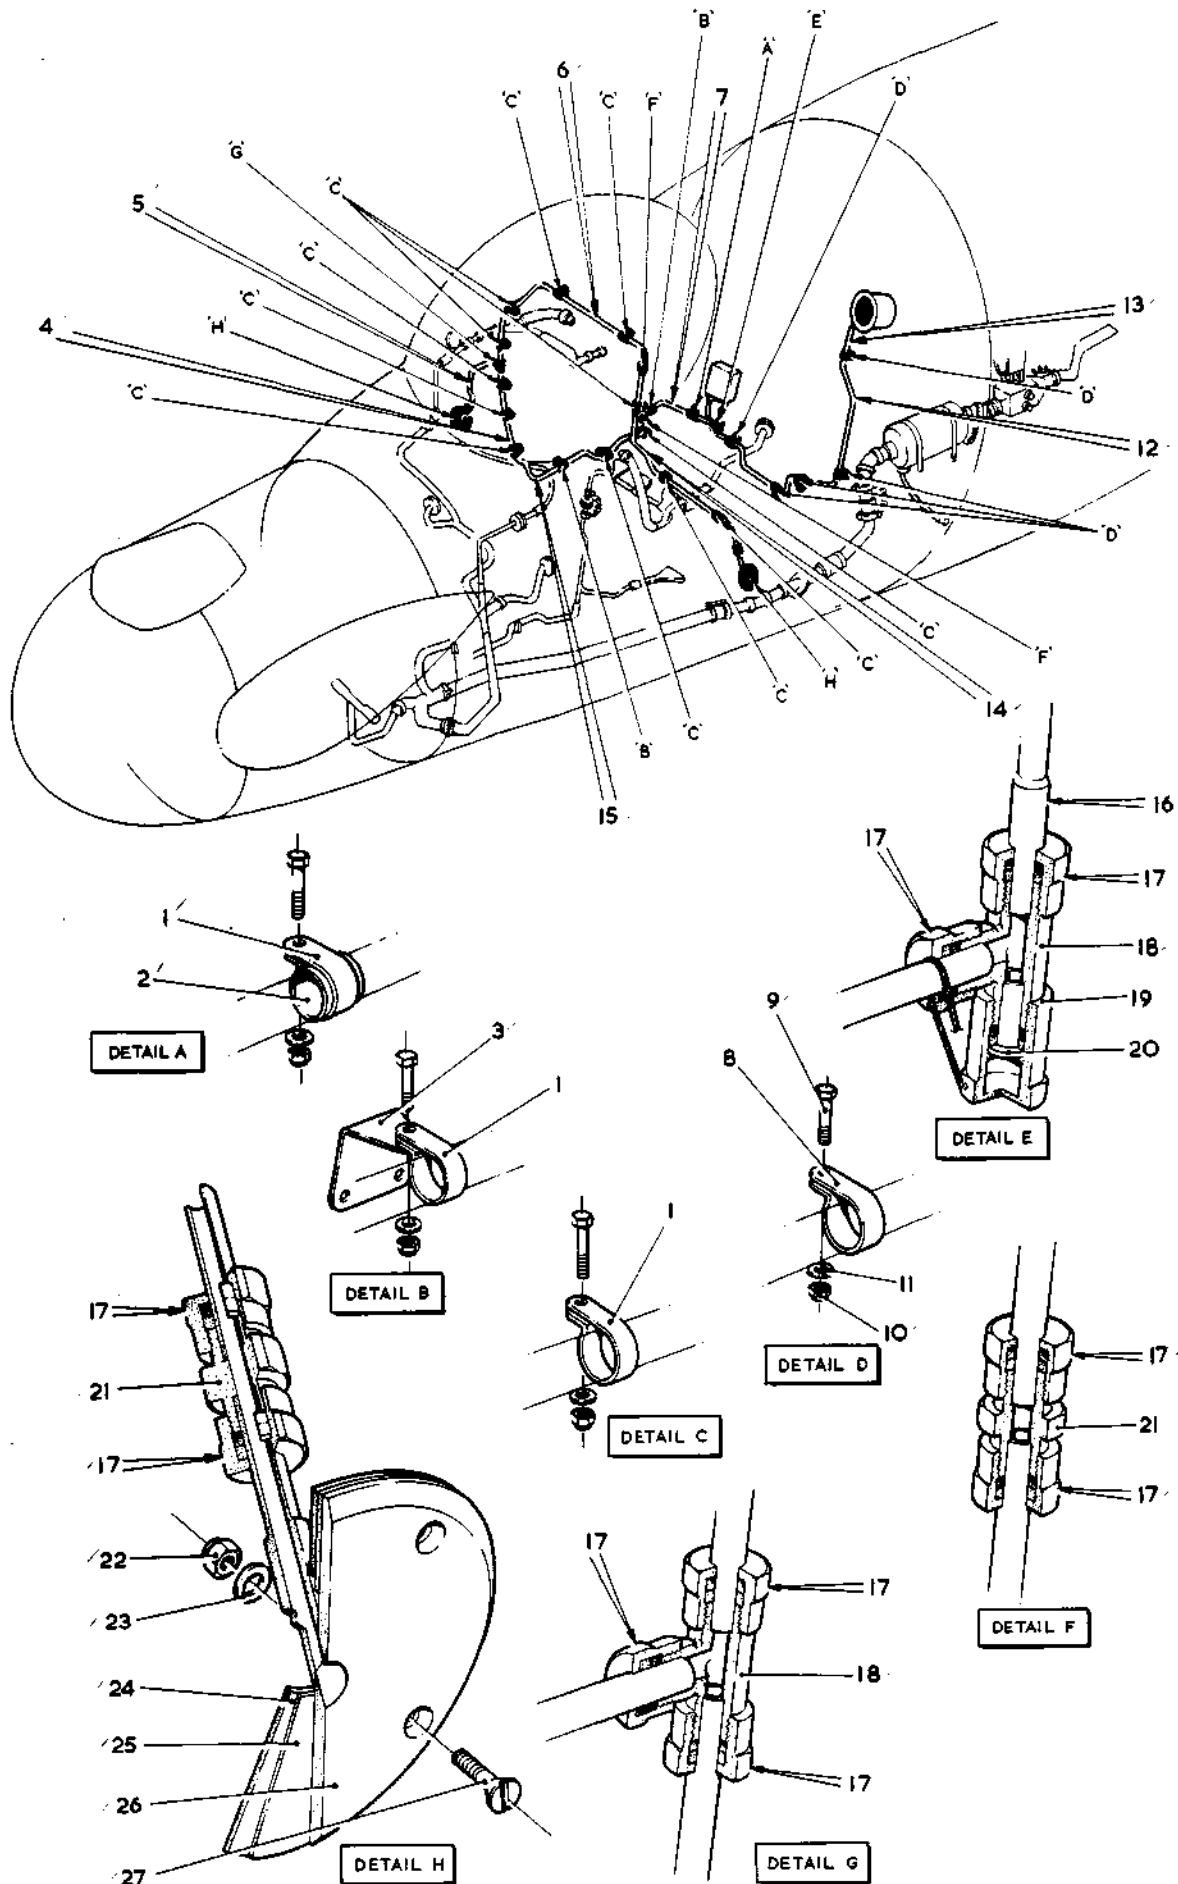


FIG. II CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

•


•

•

•

•

•

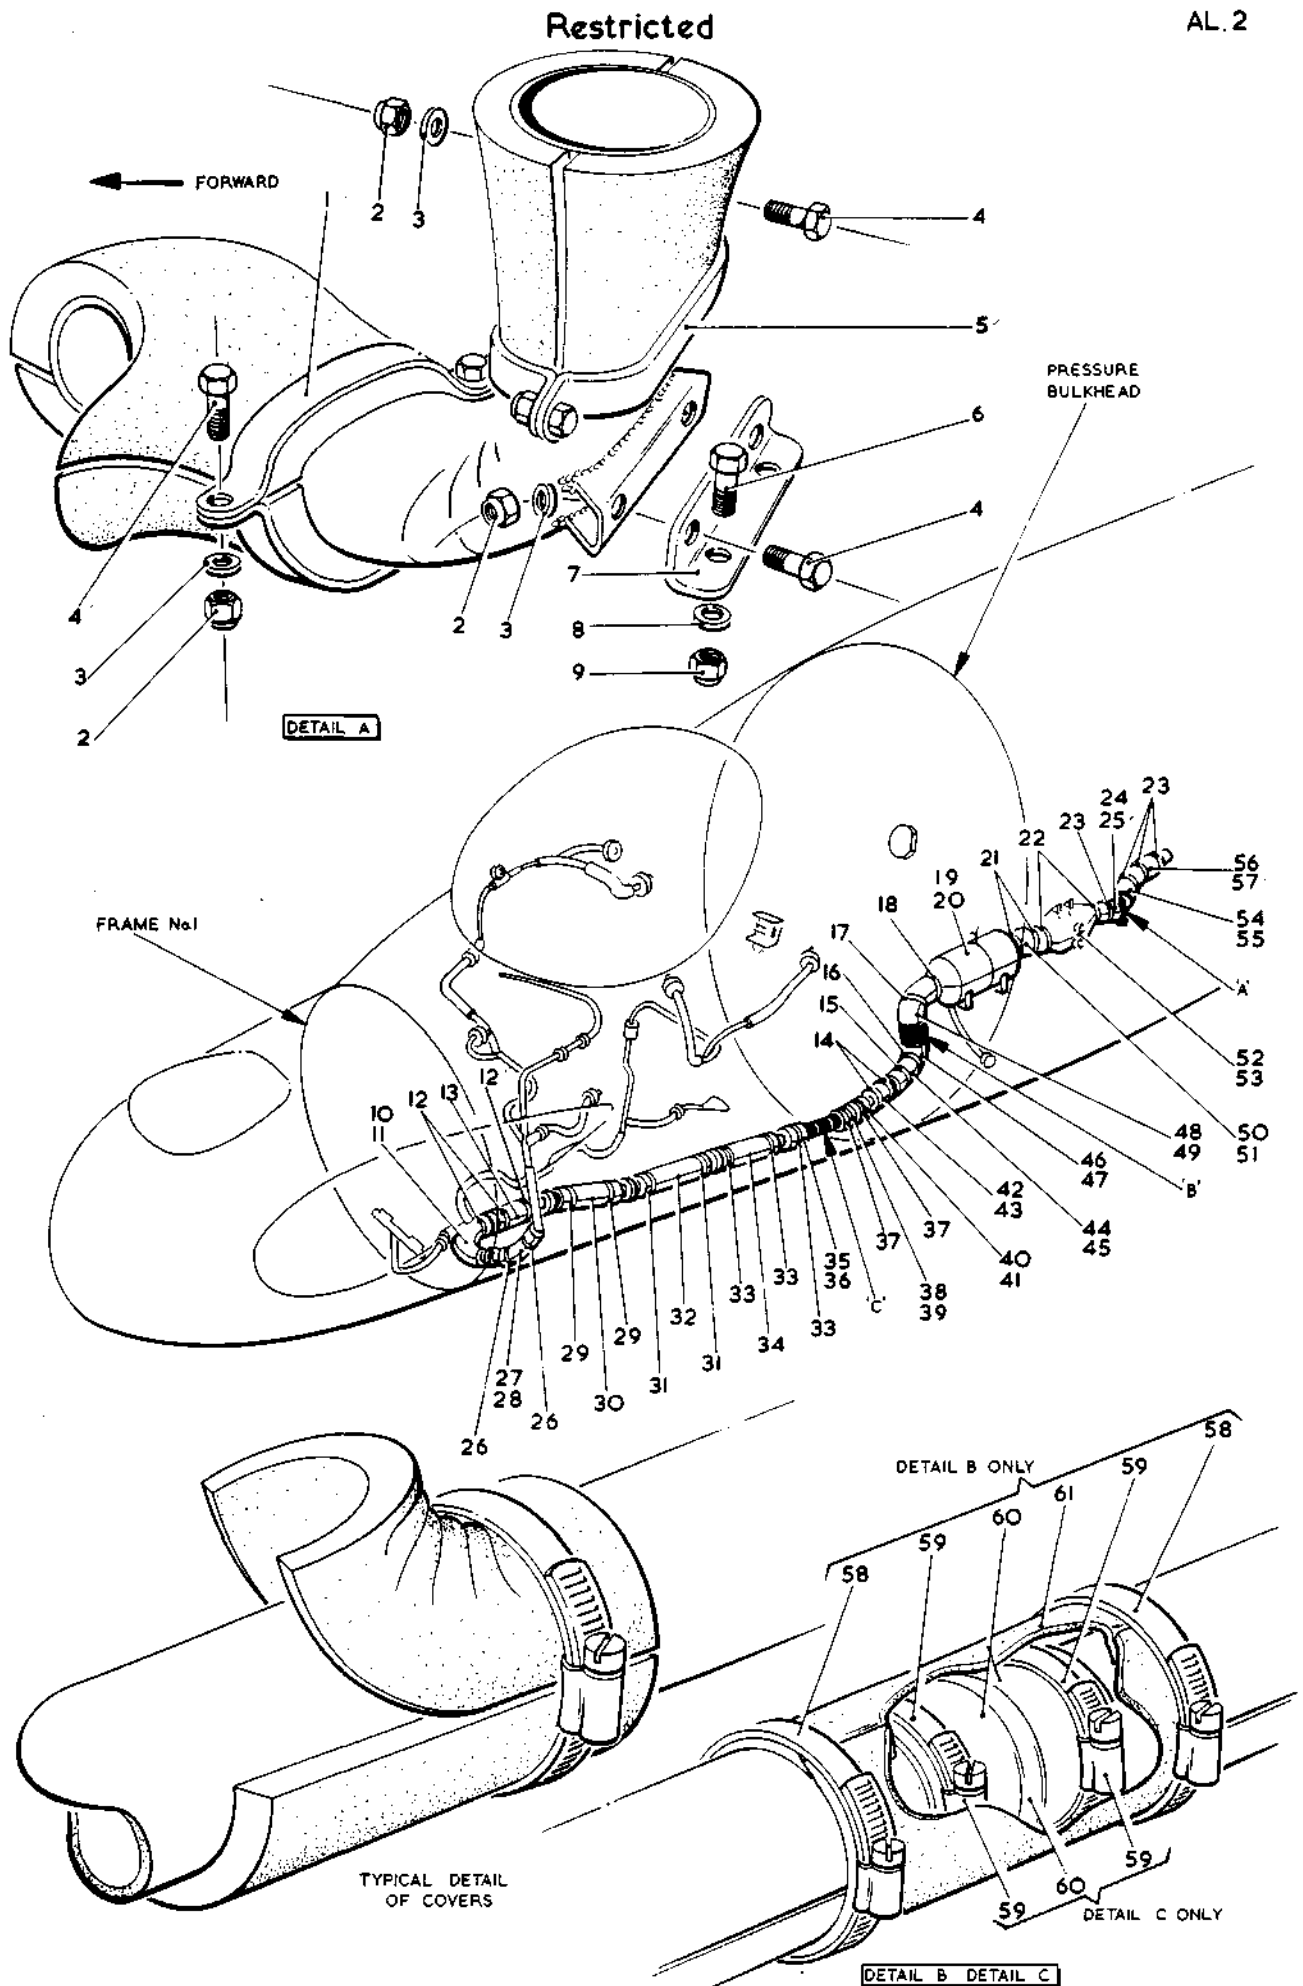

●

●

●

●

●

●

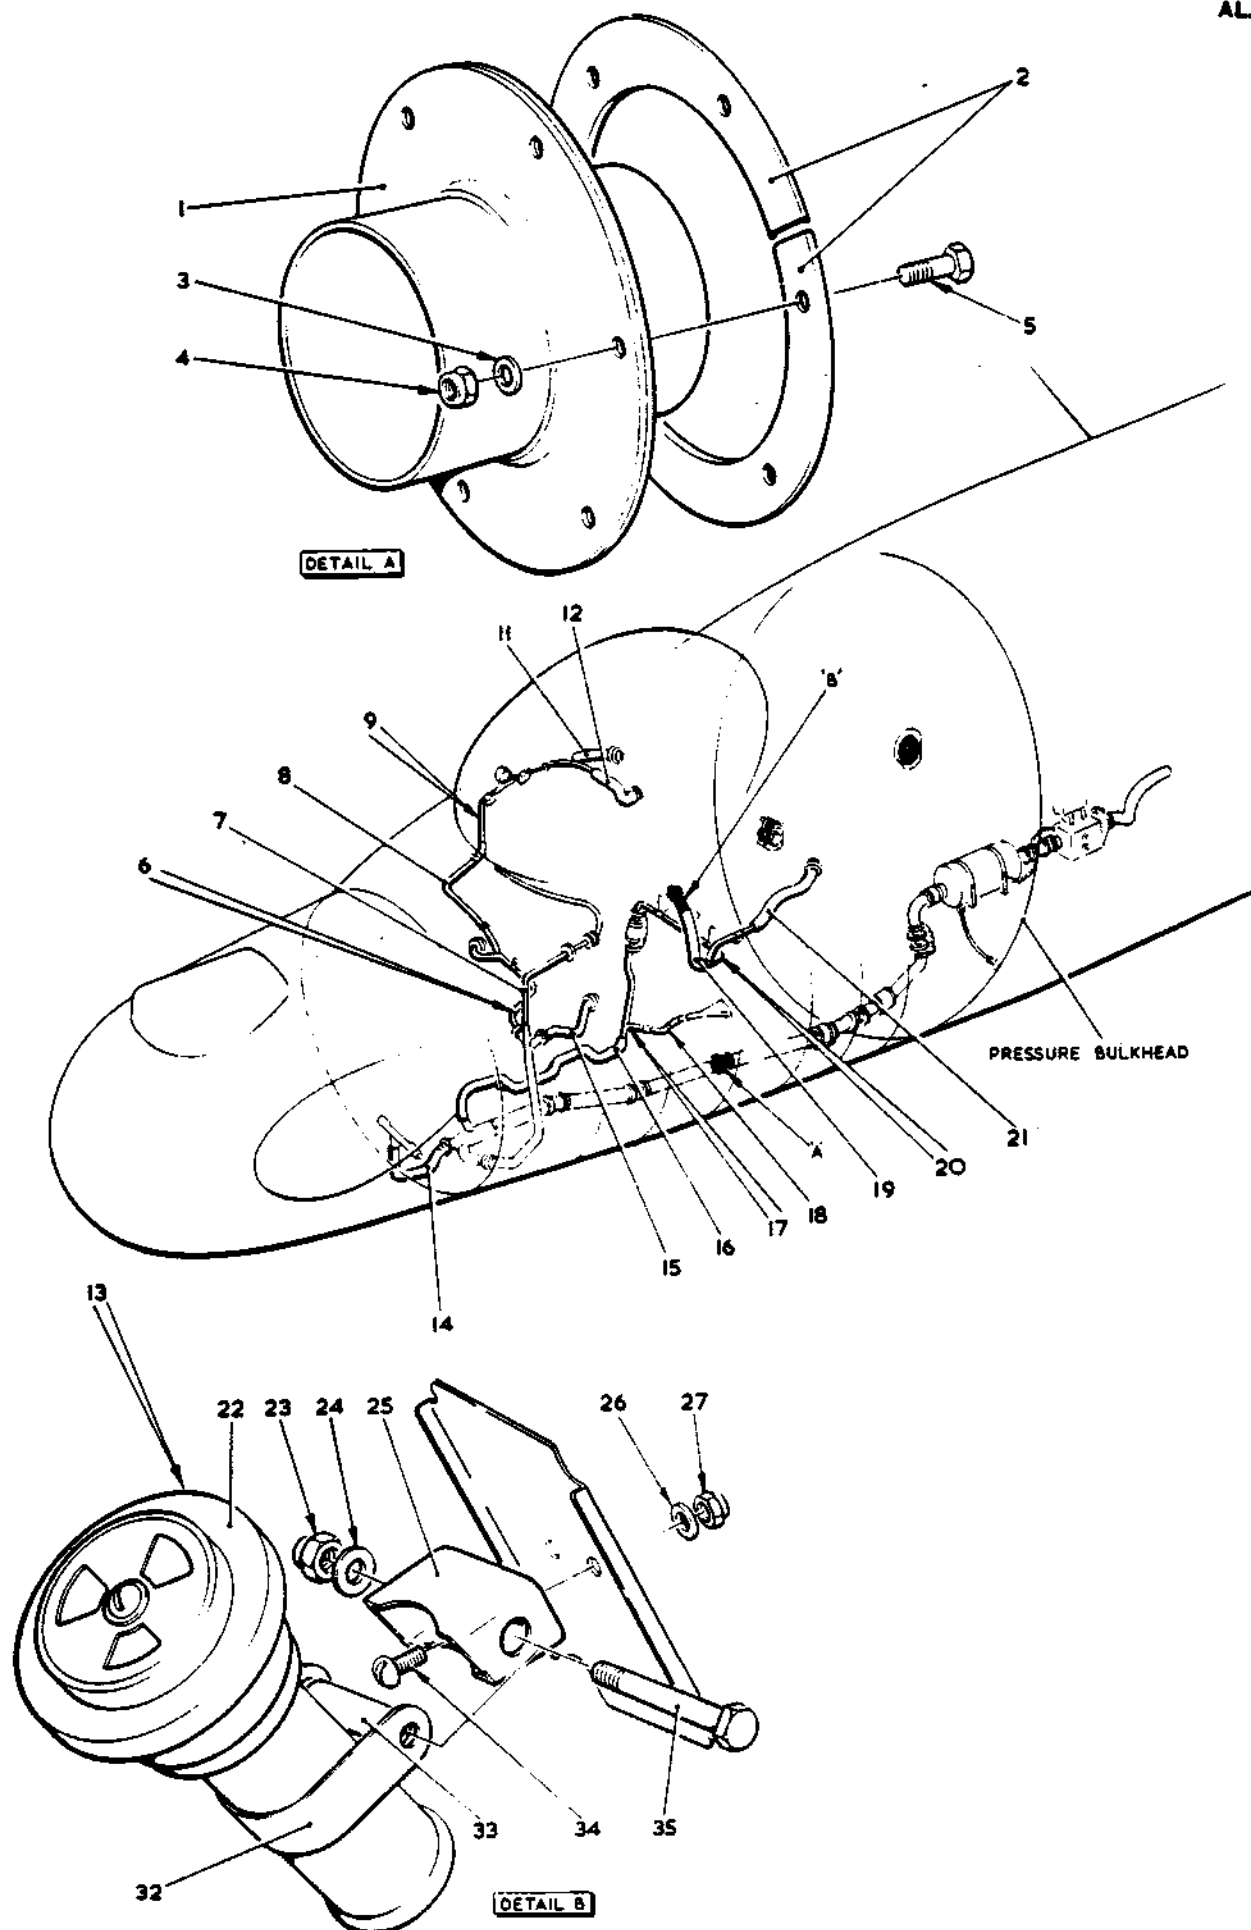


FIG.13 CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

T. MK.17 SECT. N



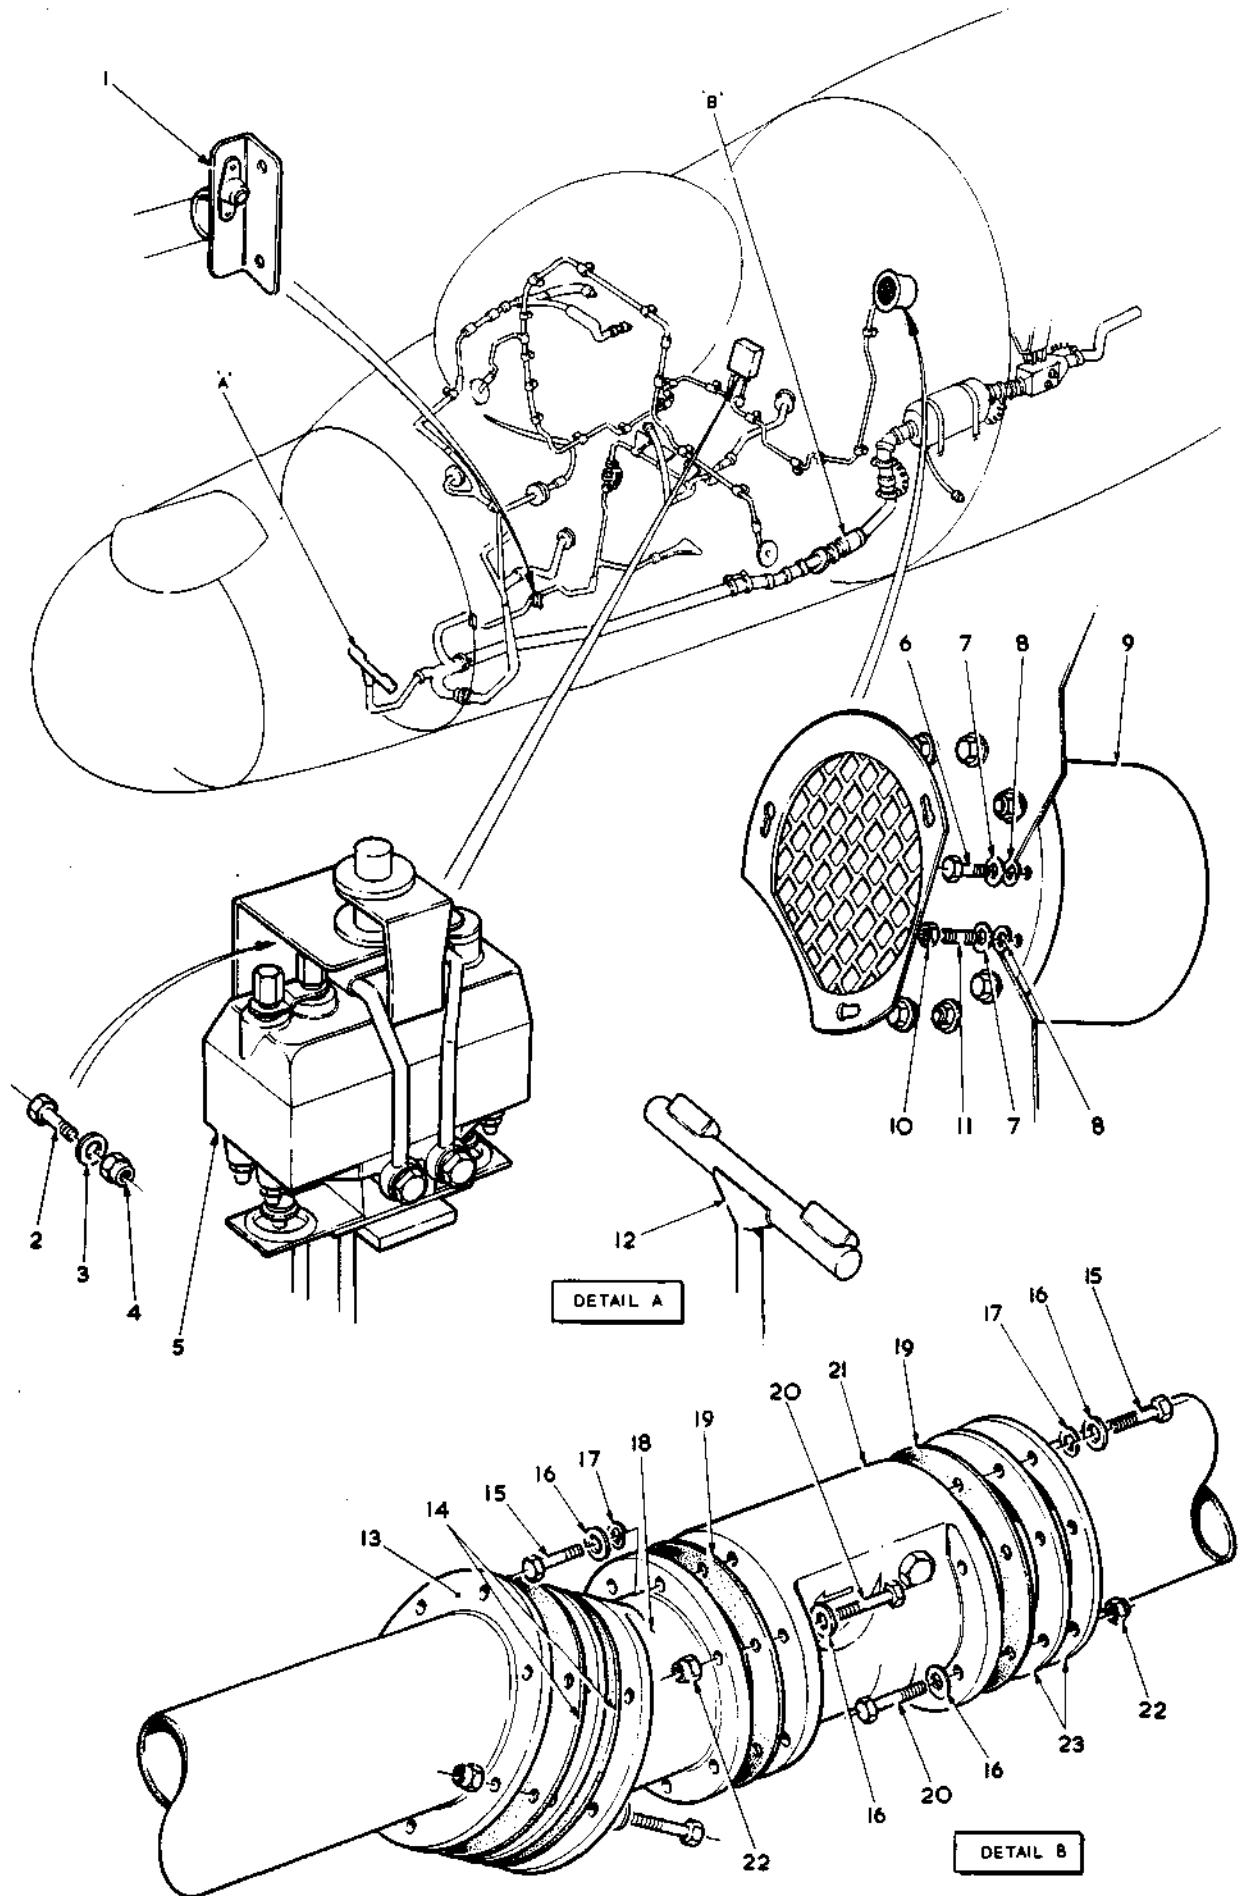


FIG.14 CABIN PRESSURE SYSTEM IN FRONT FUSELAGE

Restricted

•

•

•

•

•

•

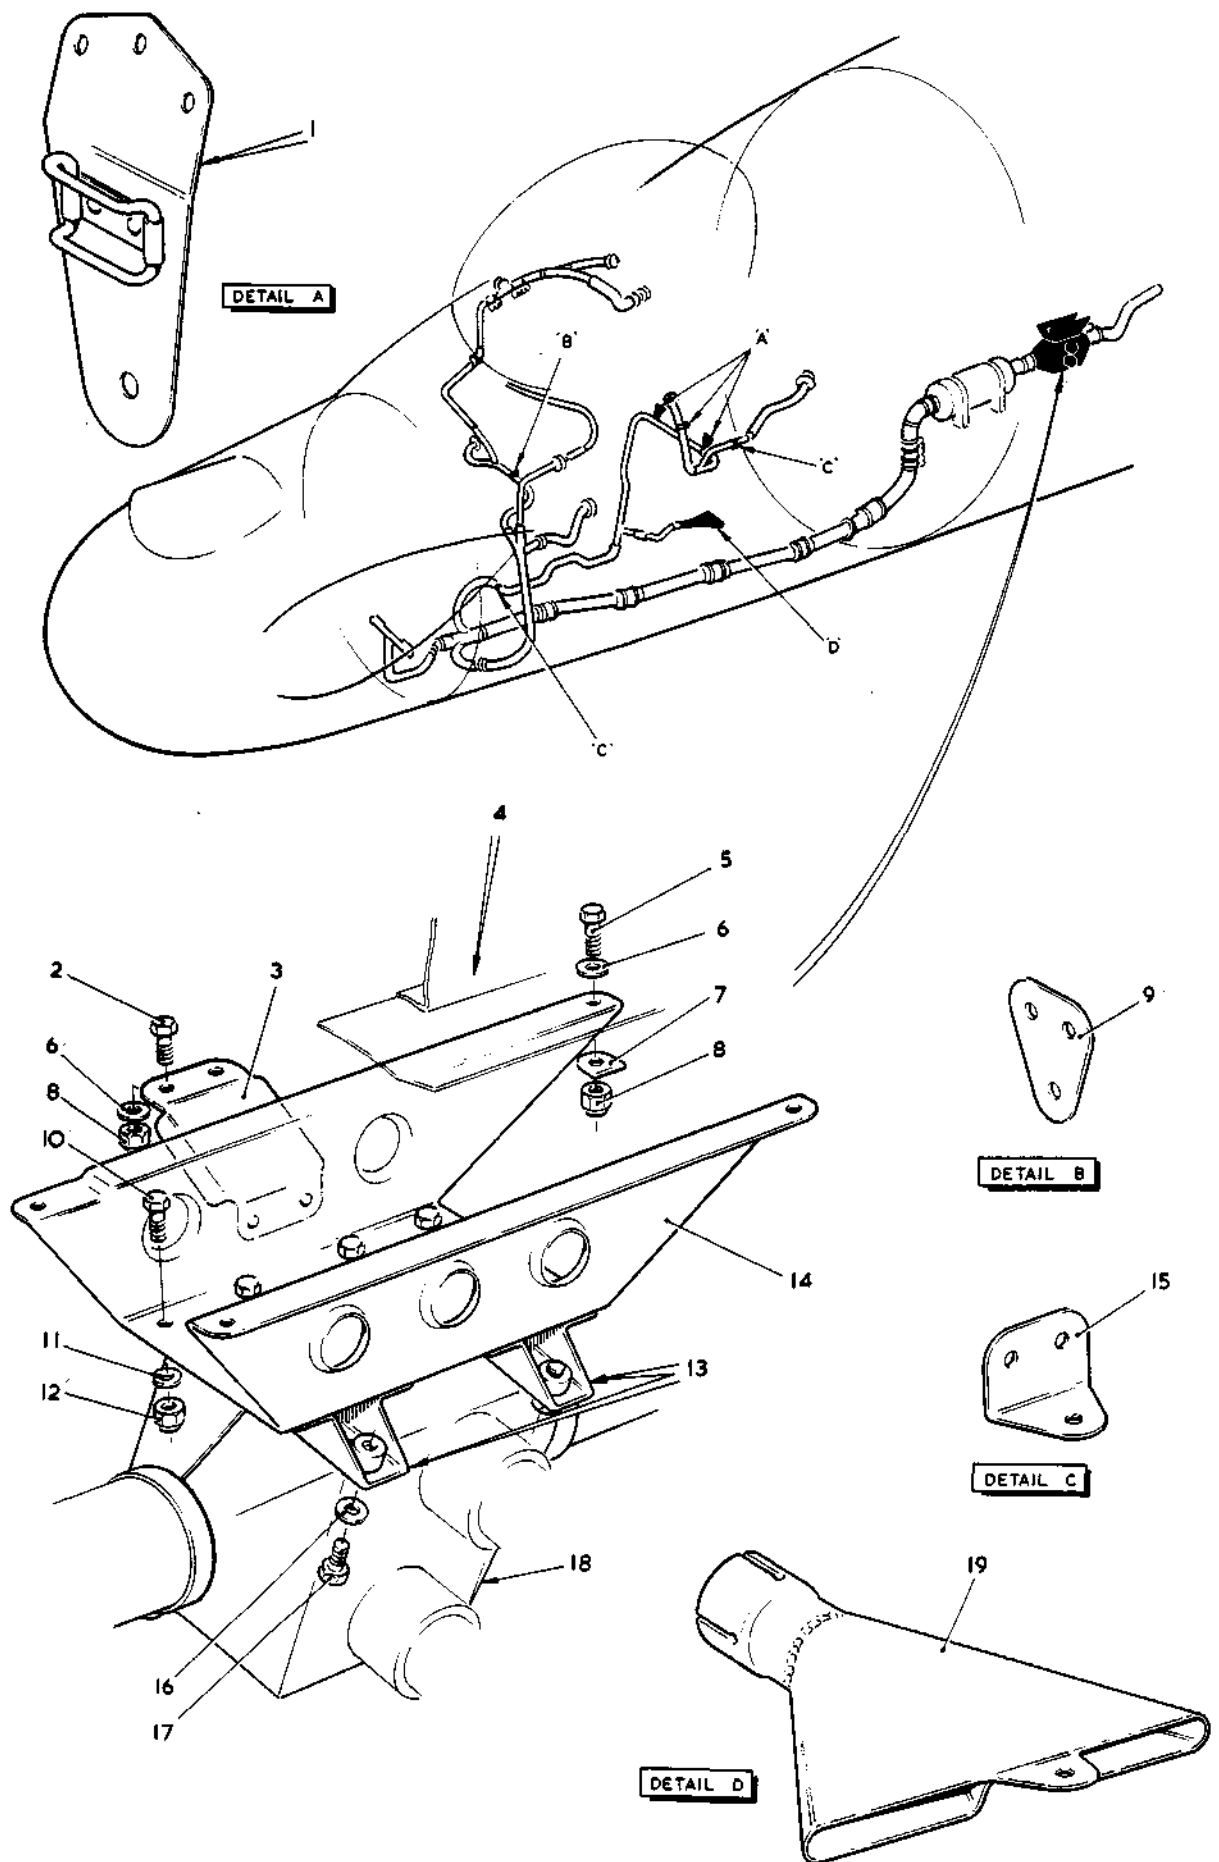


FIG.15 CABIN PRESSURE SYSTEM IN FRONT FUSELAGE
Restricted

•

•

•

•

•

•

•

•

•

•

•

•

Restricted

AL.2

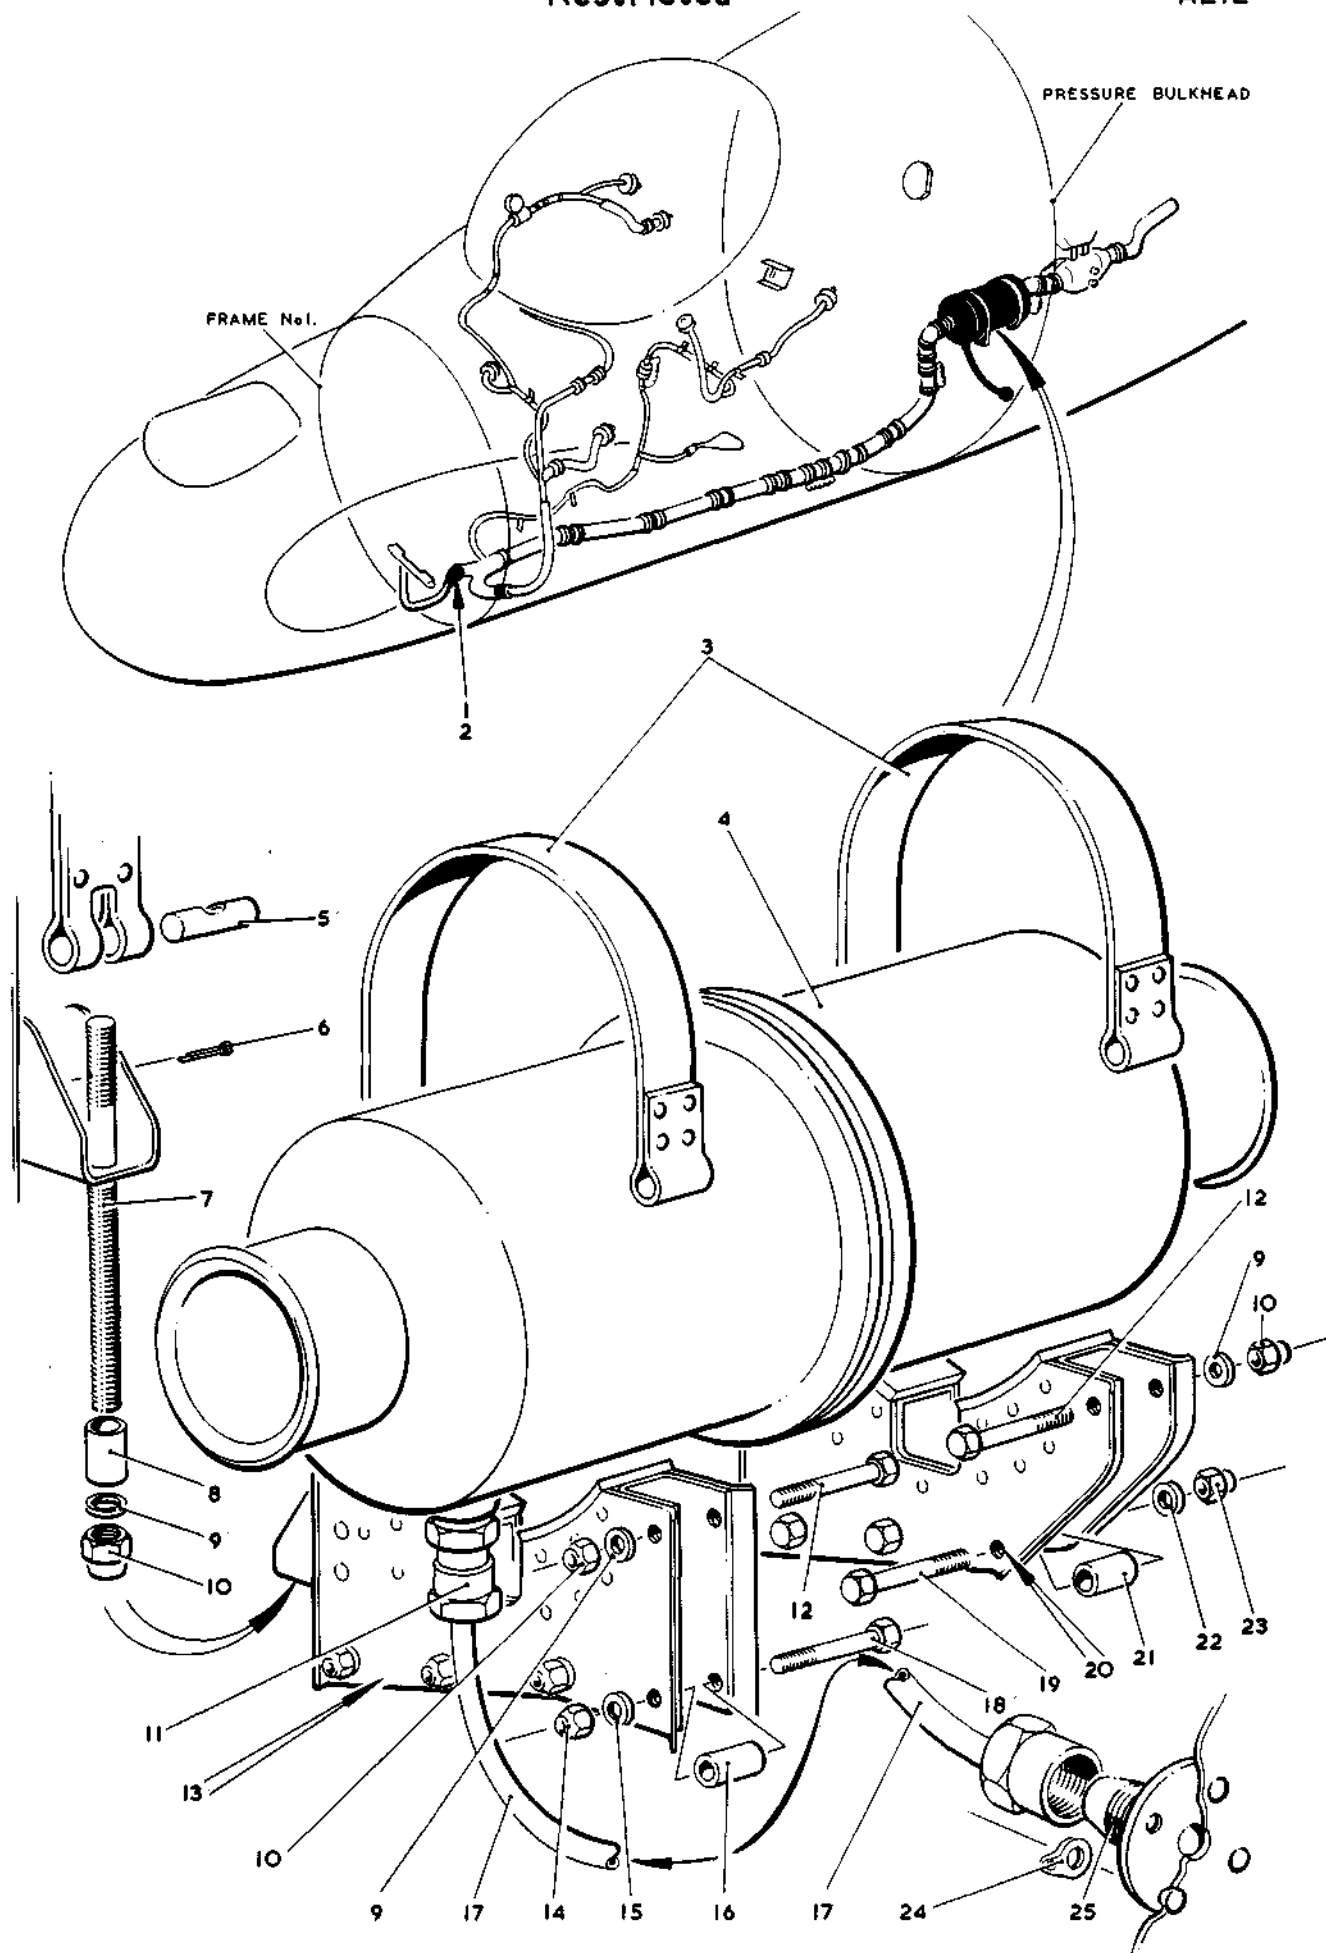


FIG.17 CABIN PRESSURE SYSTEM IN FRONT FUSELAGE
Restricted

T.MK.17 SECT.N

●

●

●

●

●

●

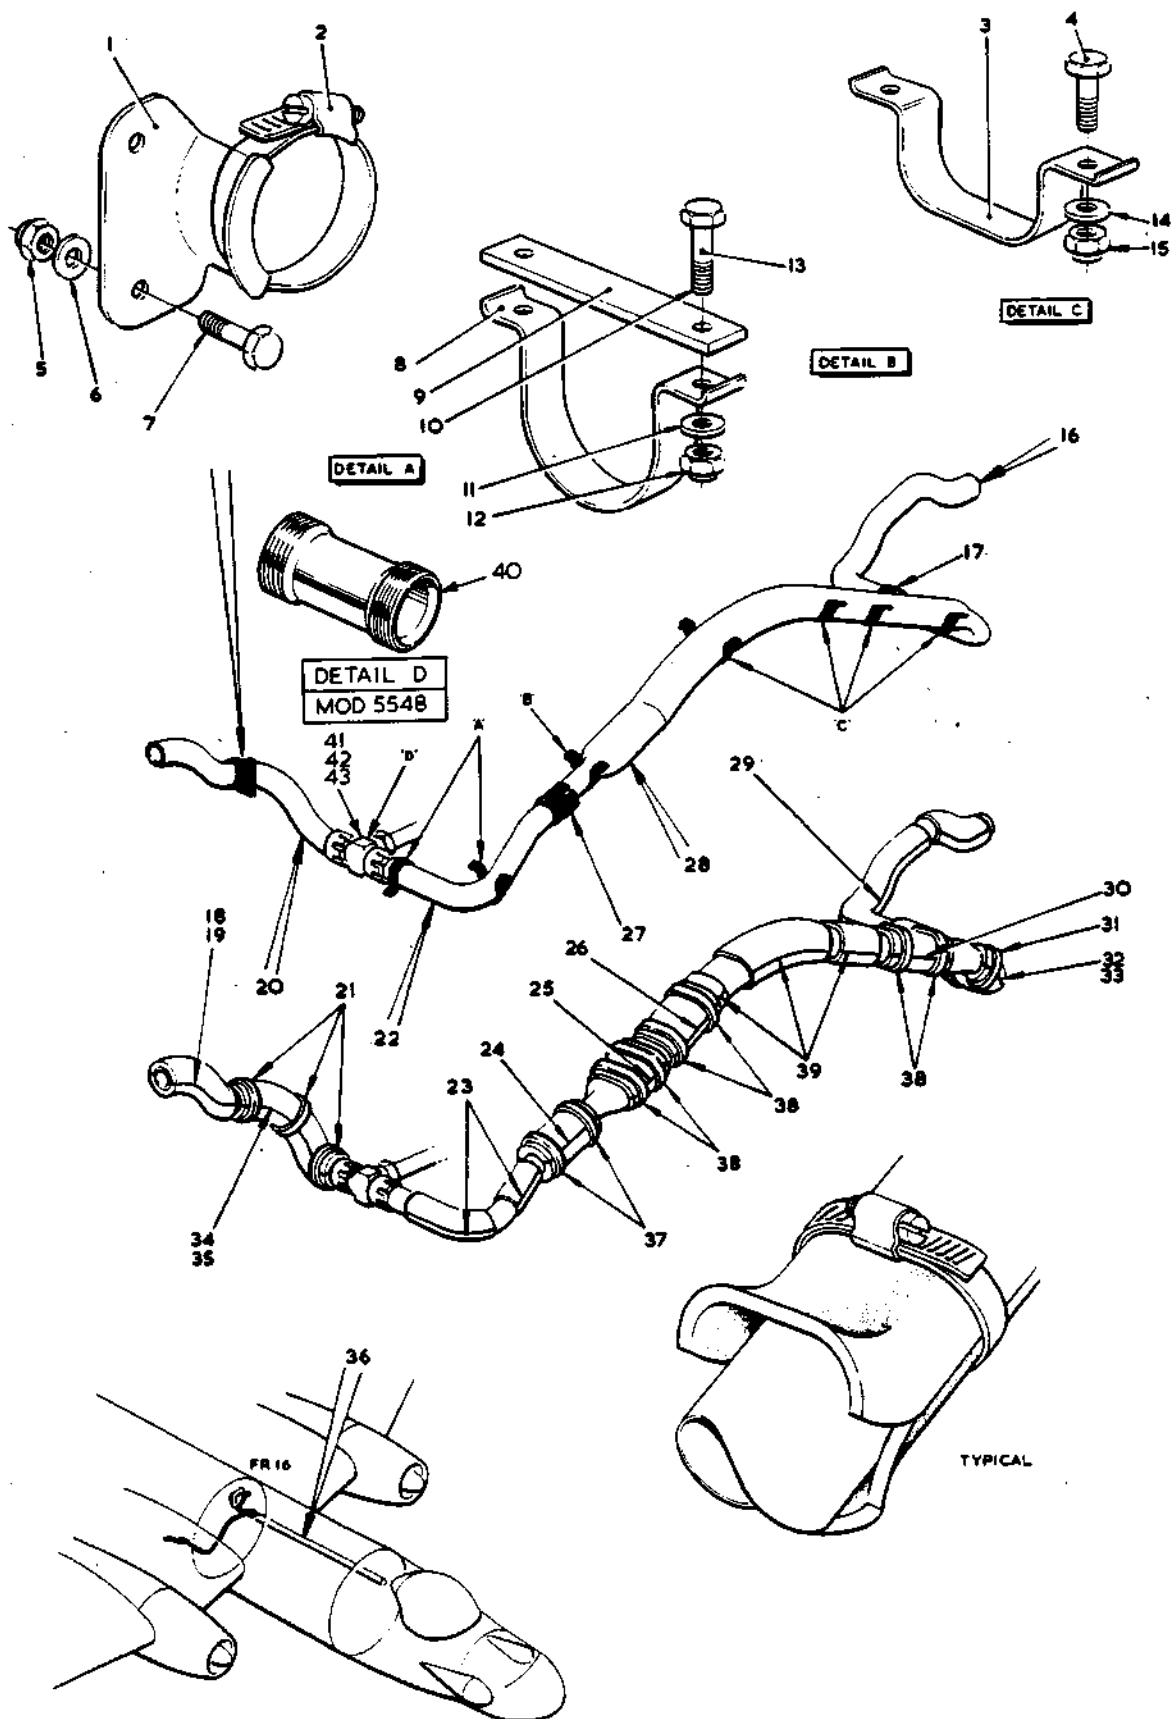


FIG.18 CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE
T.MK.17 SECT.N

Restricted

A.L. 2

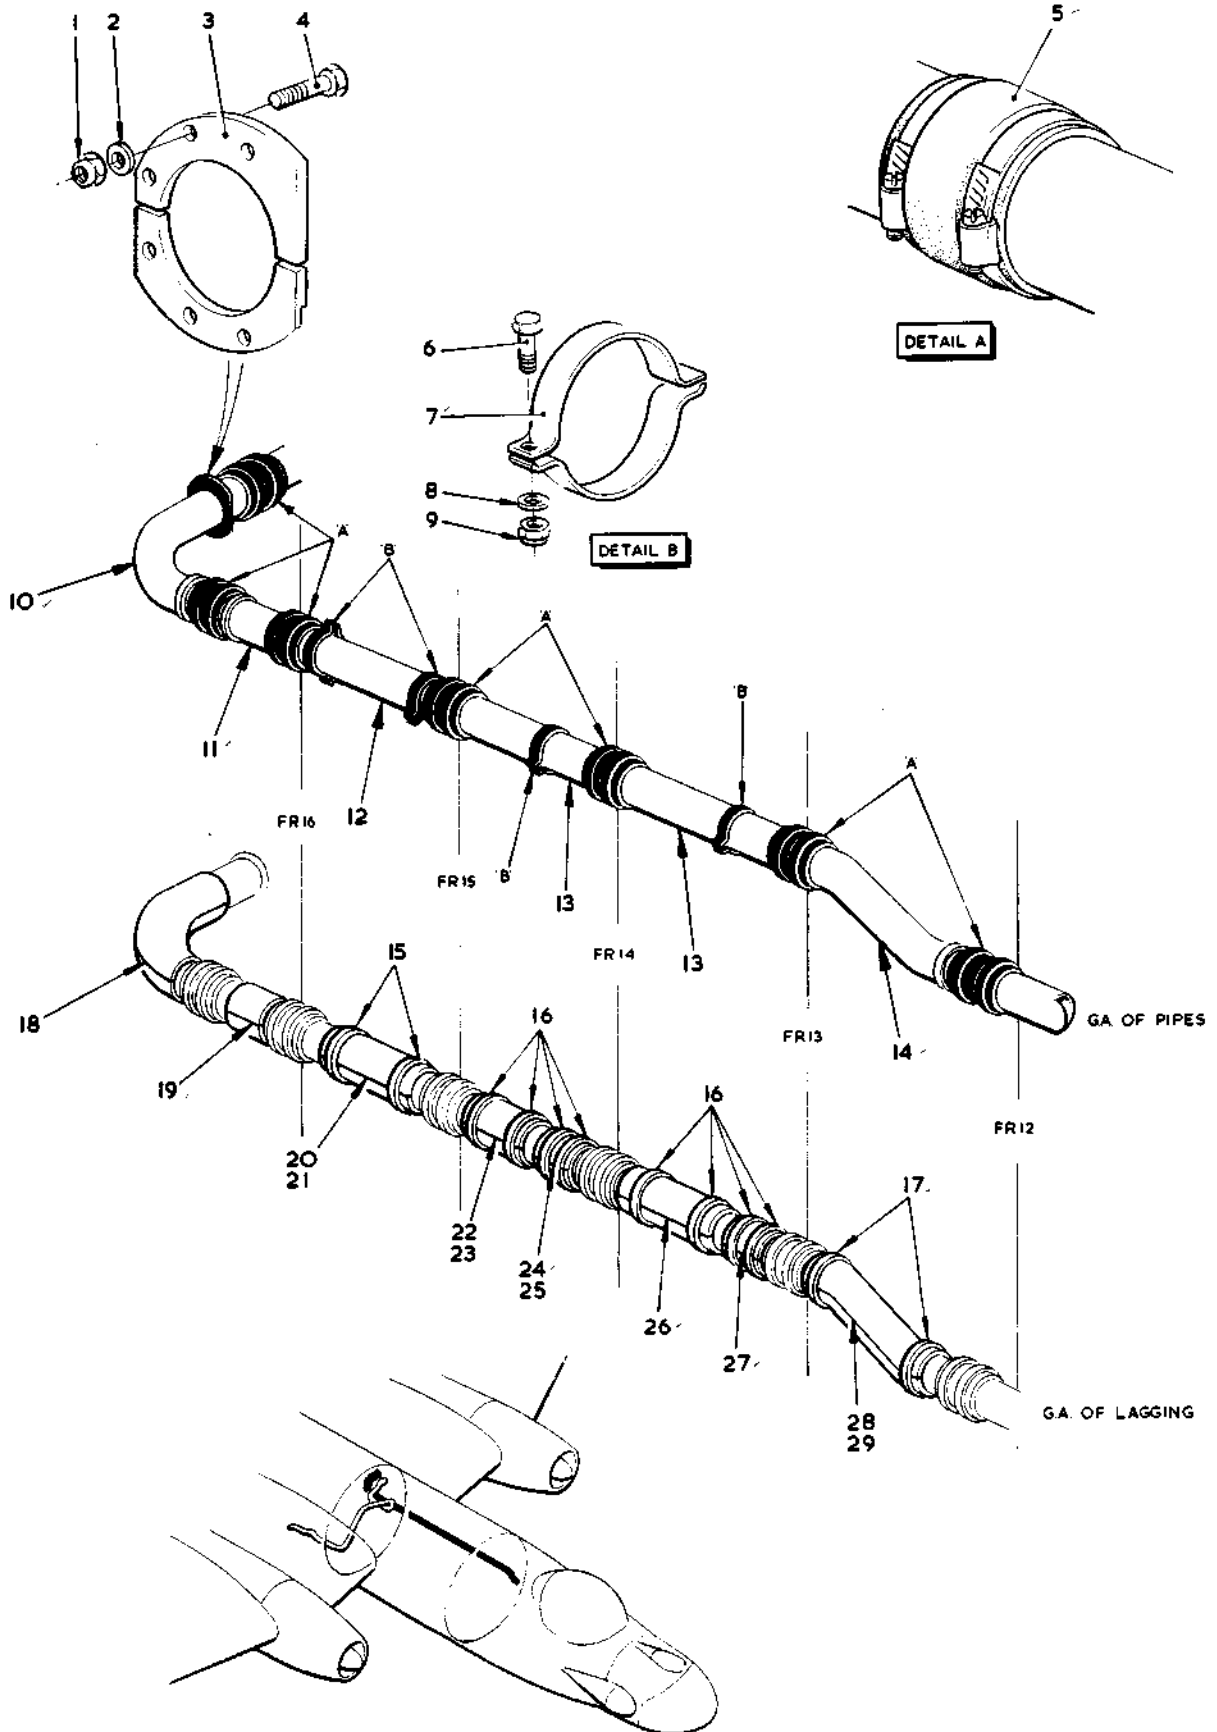


FIG.19 CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Restricted

T.MK.17 SECT N

●

●

●

●

●

●

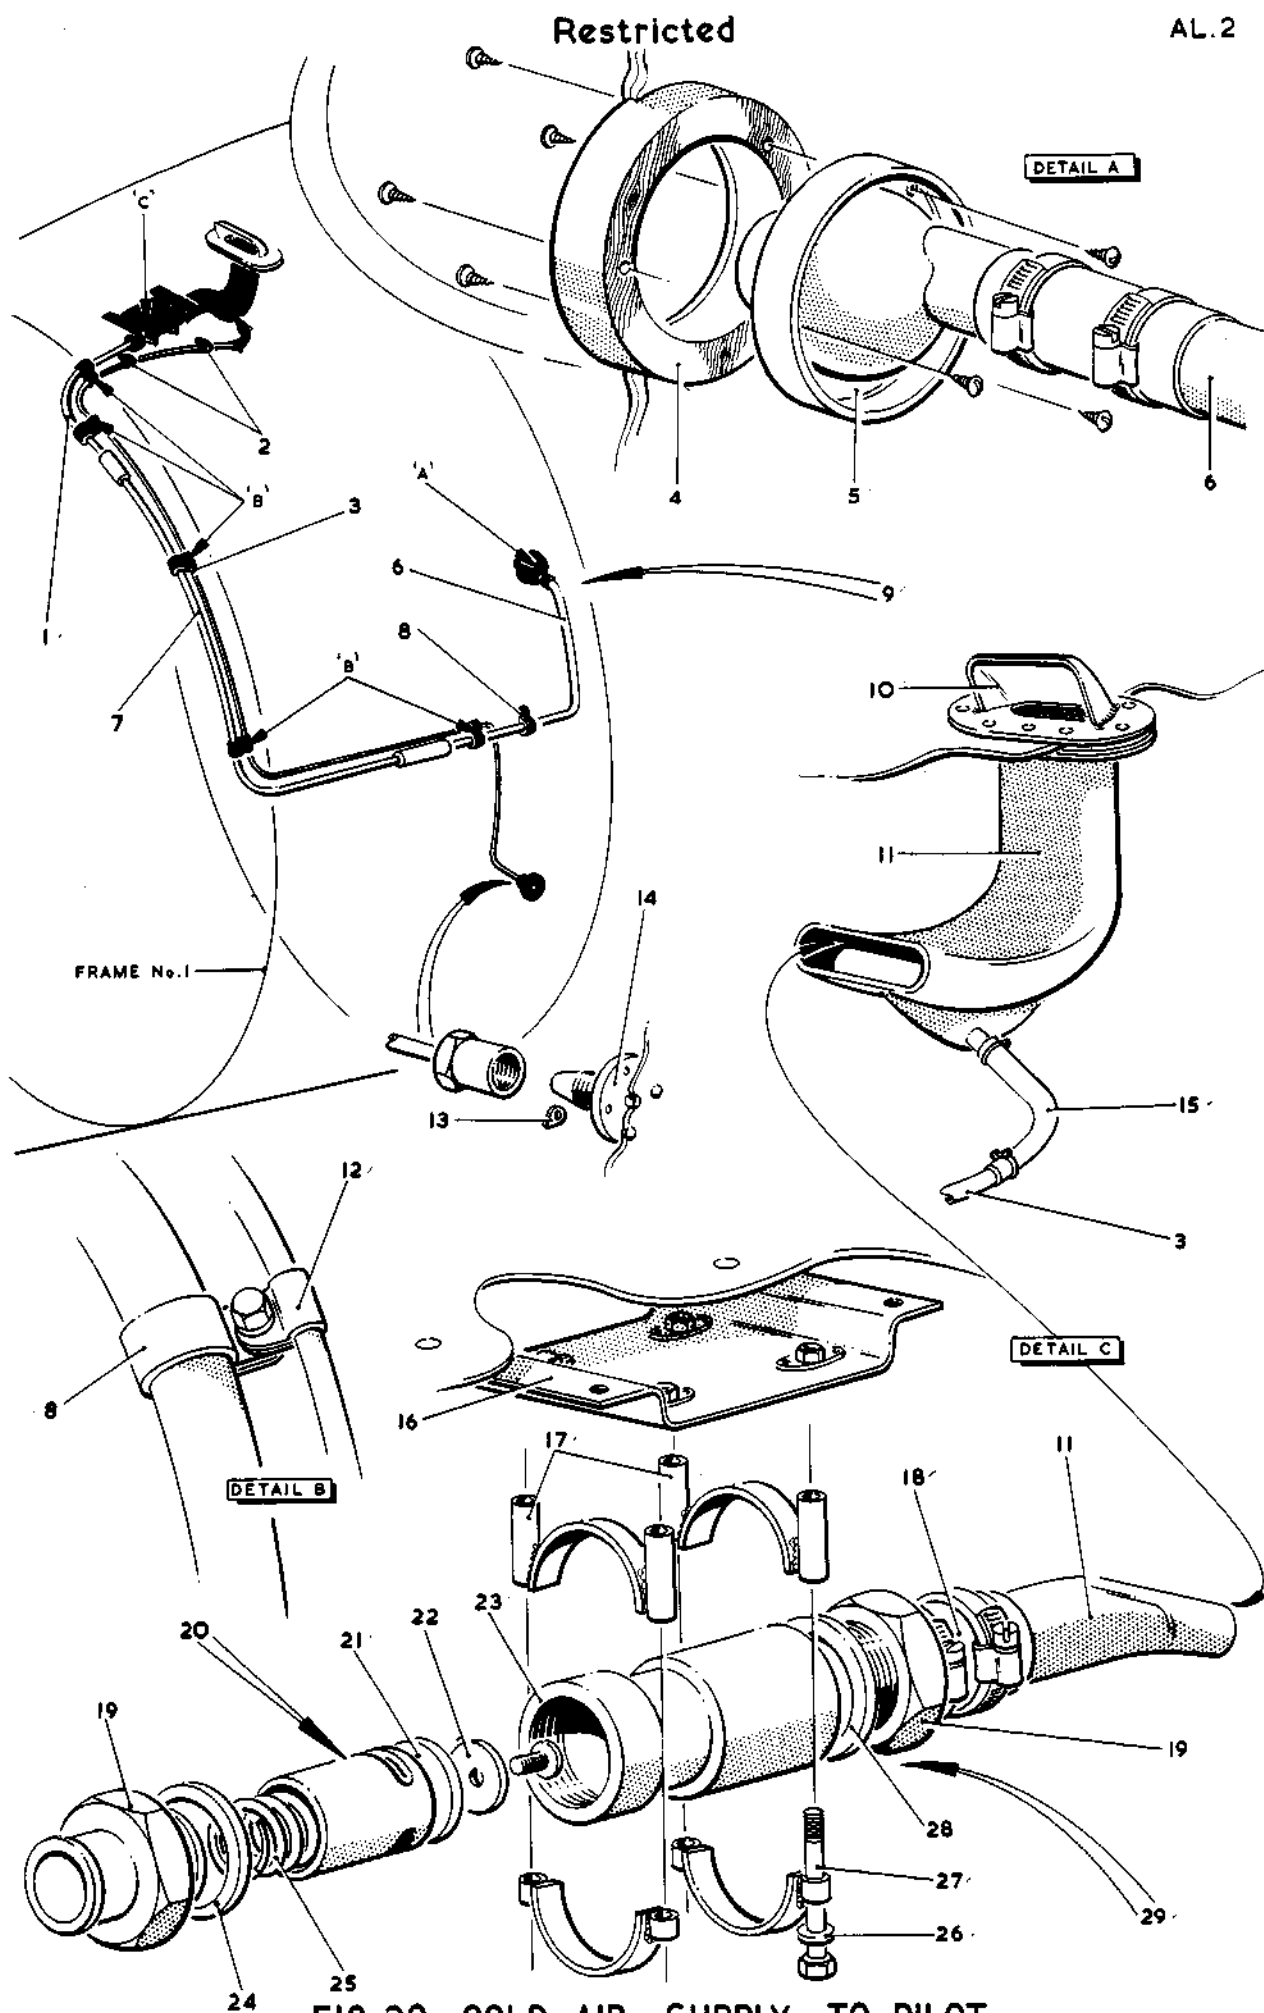


FIG. 20 COLD AIR SUPPLY TO PILOT
Restricted

●

●

●

●

●

●

●

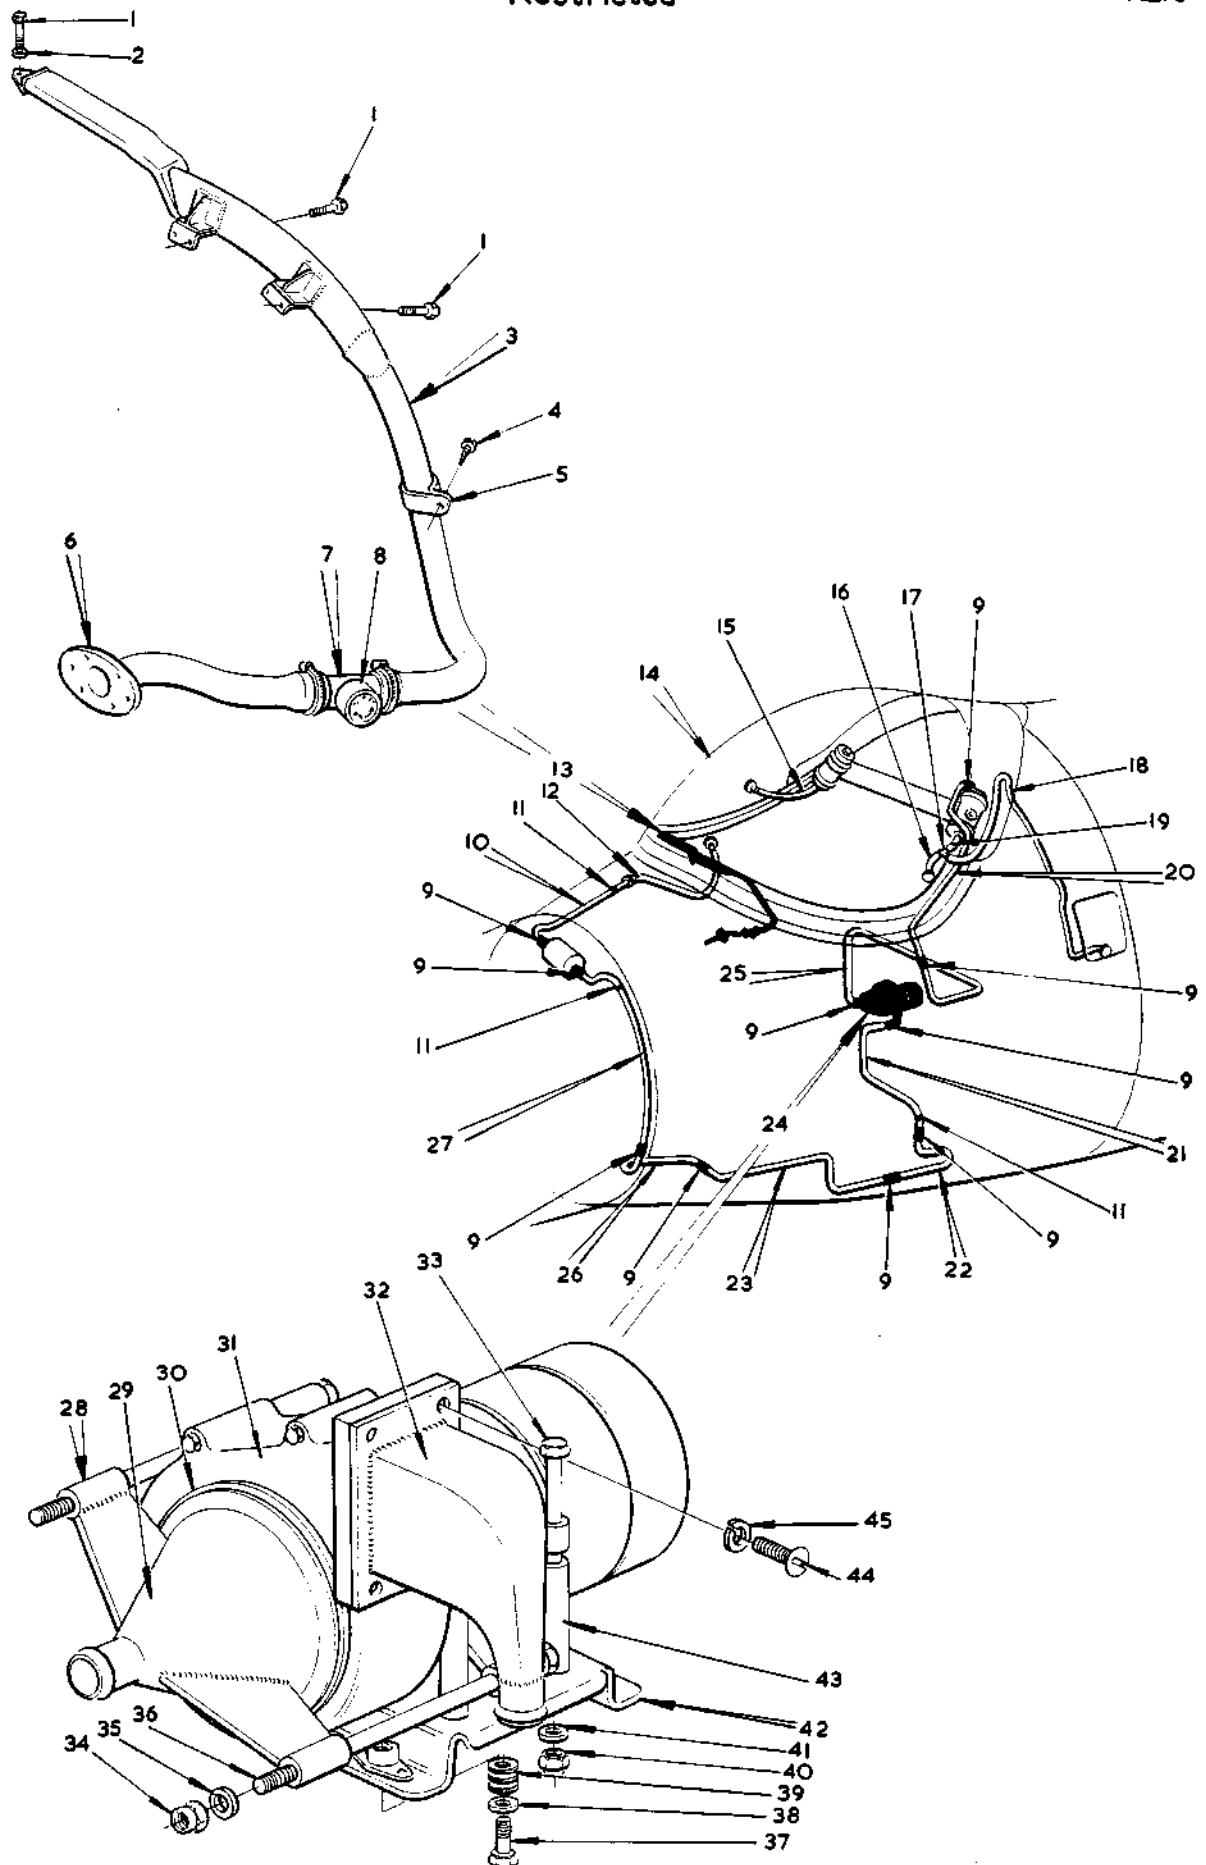


FIG. 21 DE-MISTING SYSTEM
Restricted

10

11

12

13

14

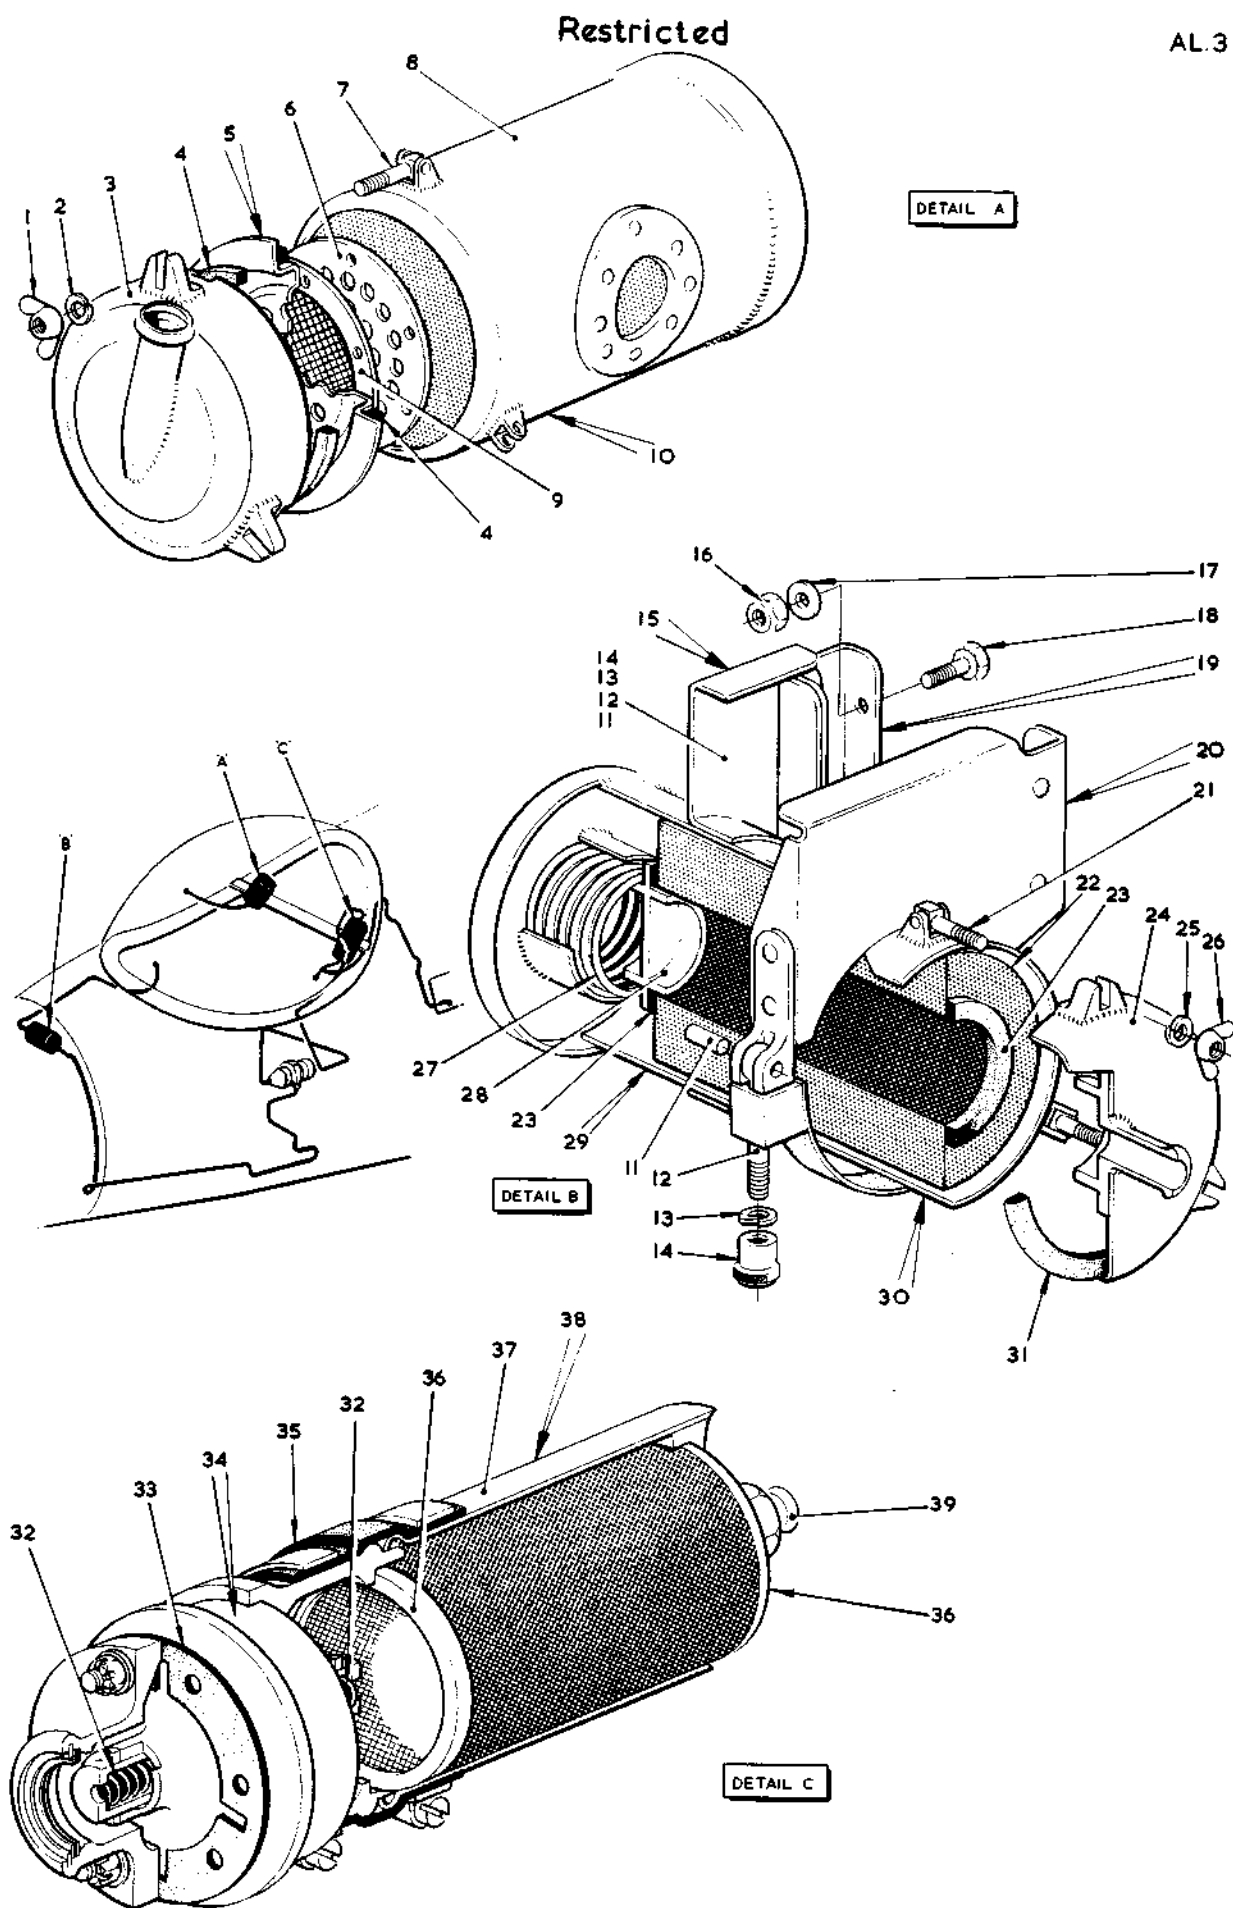


FIG. 22 DE-MISTING SYSTEM
Restricted

1

2

3

4

5

6

7

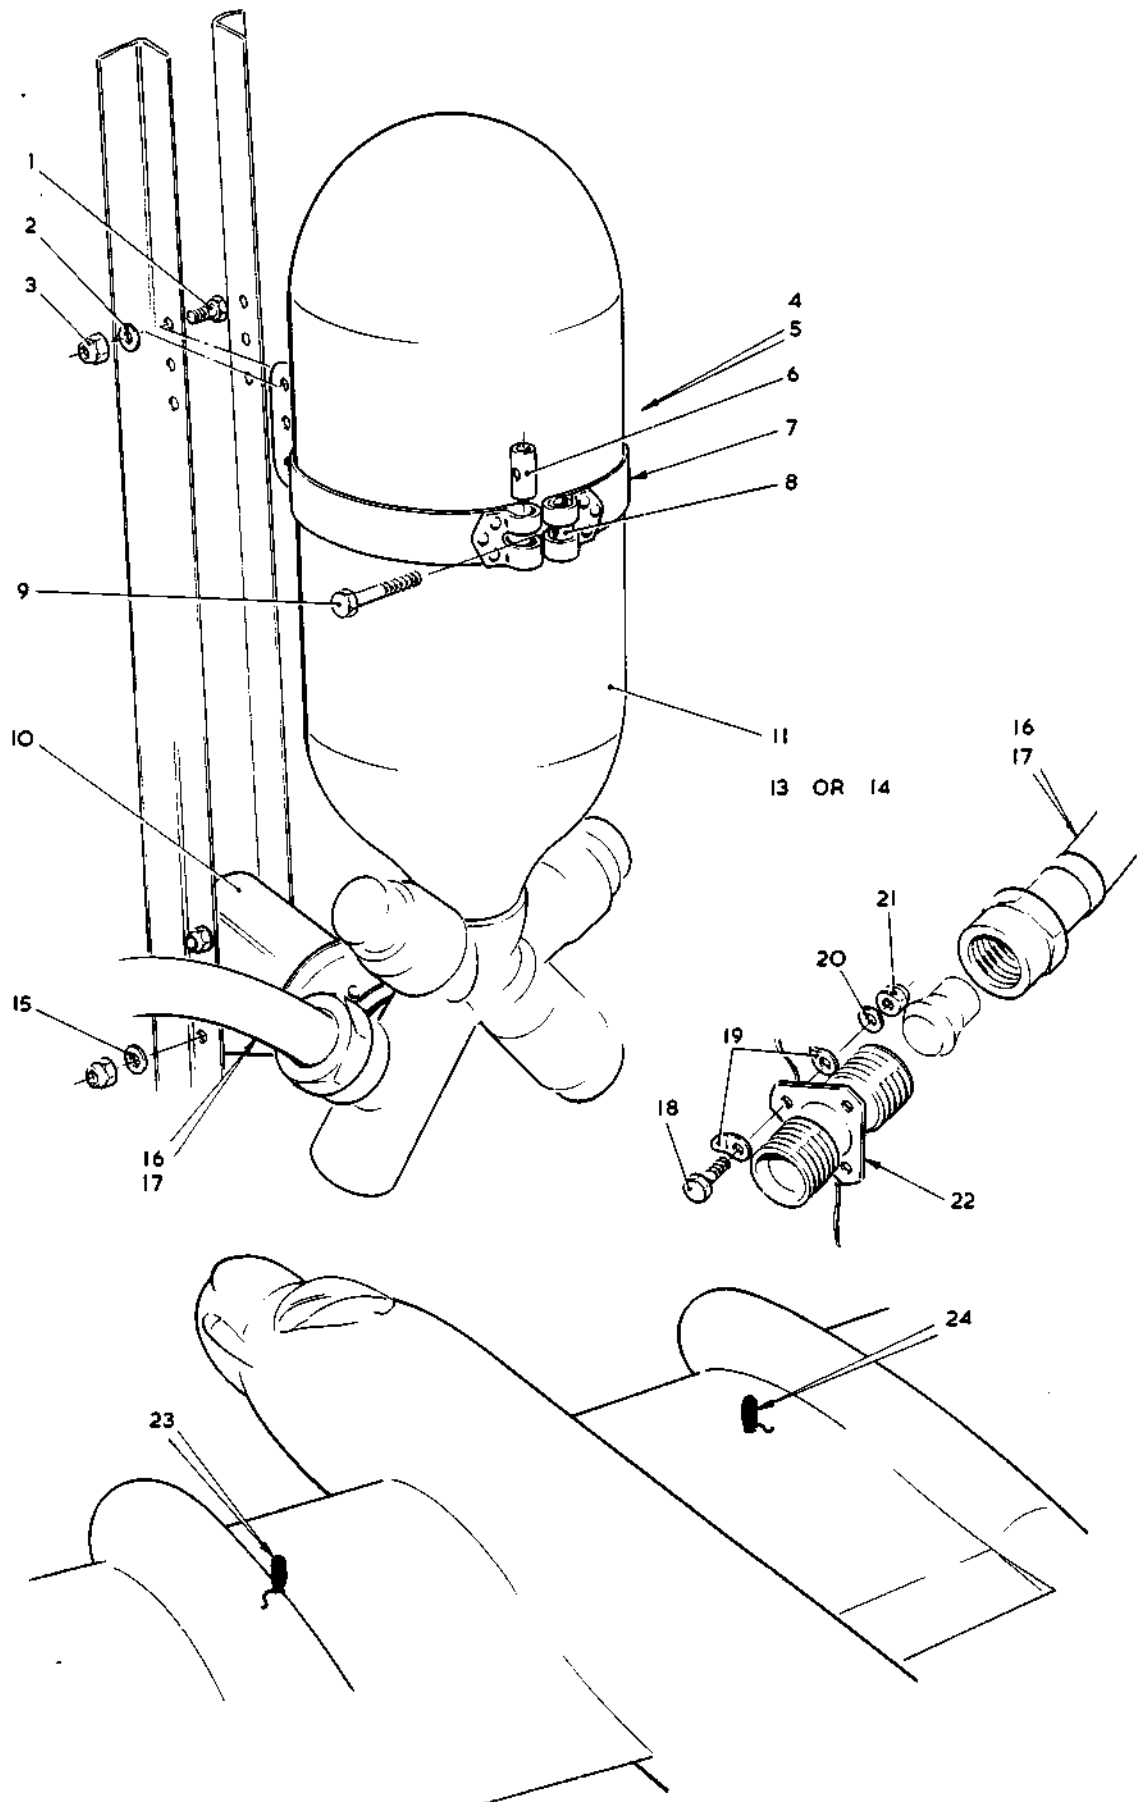


FIG.23 FIRE PROTECTION SYSTEM IN WINGS
Restricted



Restricted

AL.3

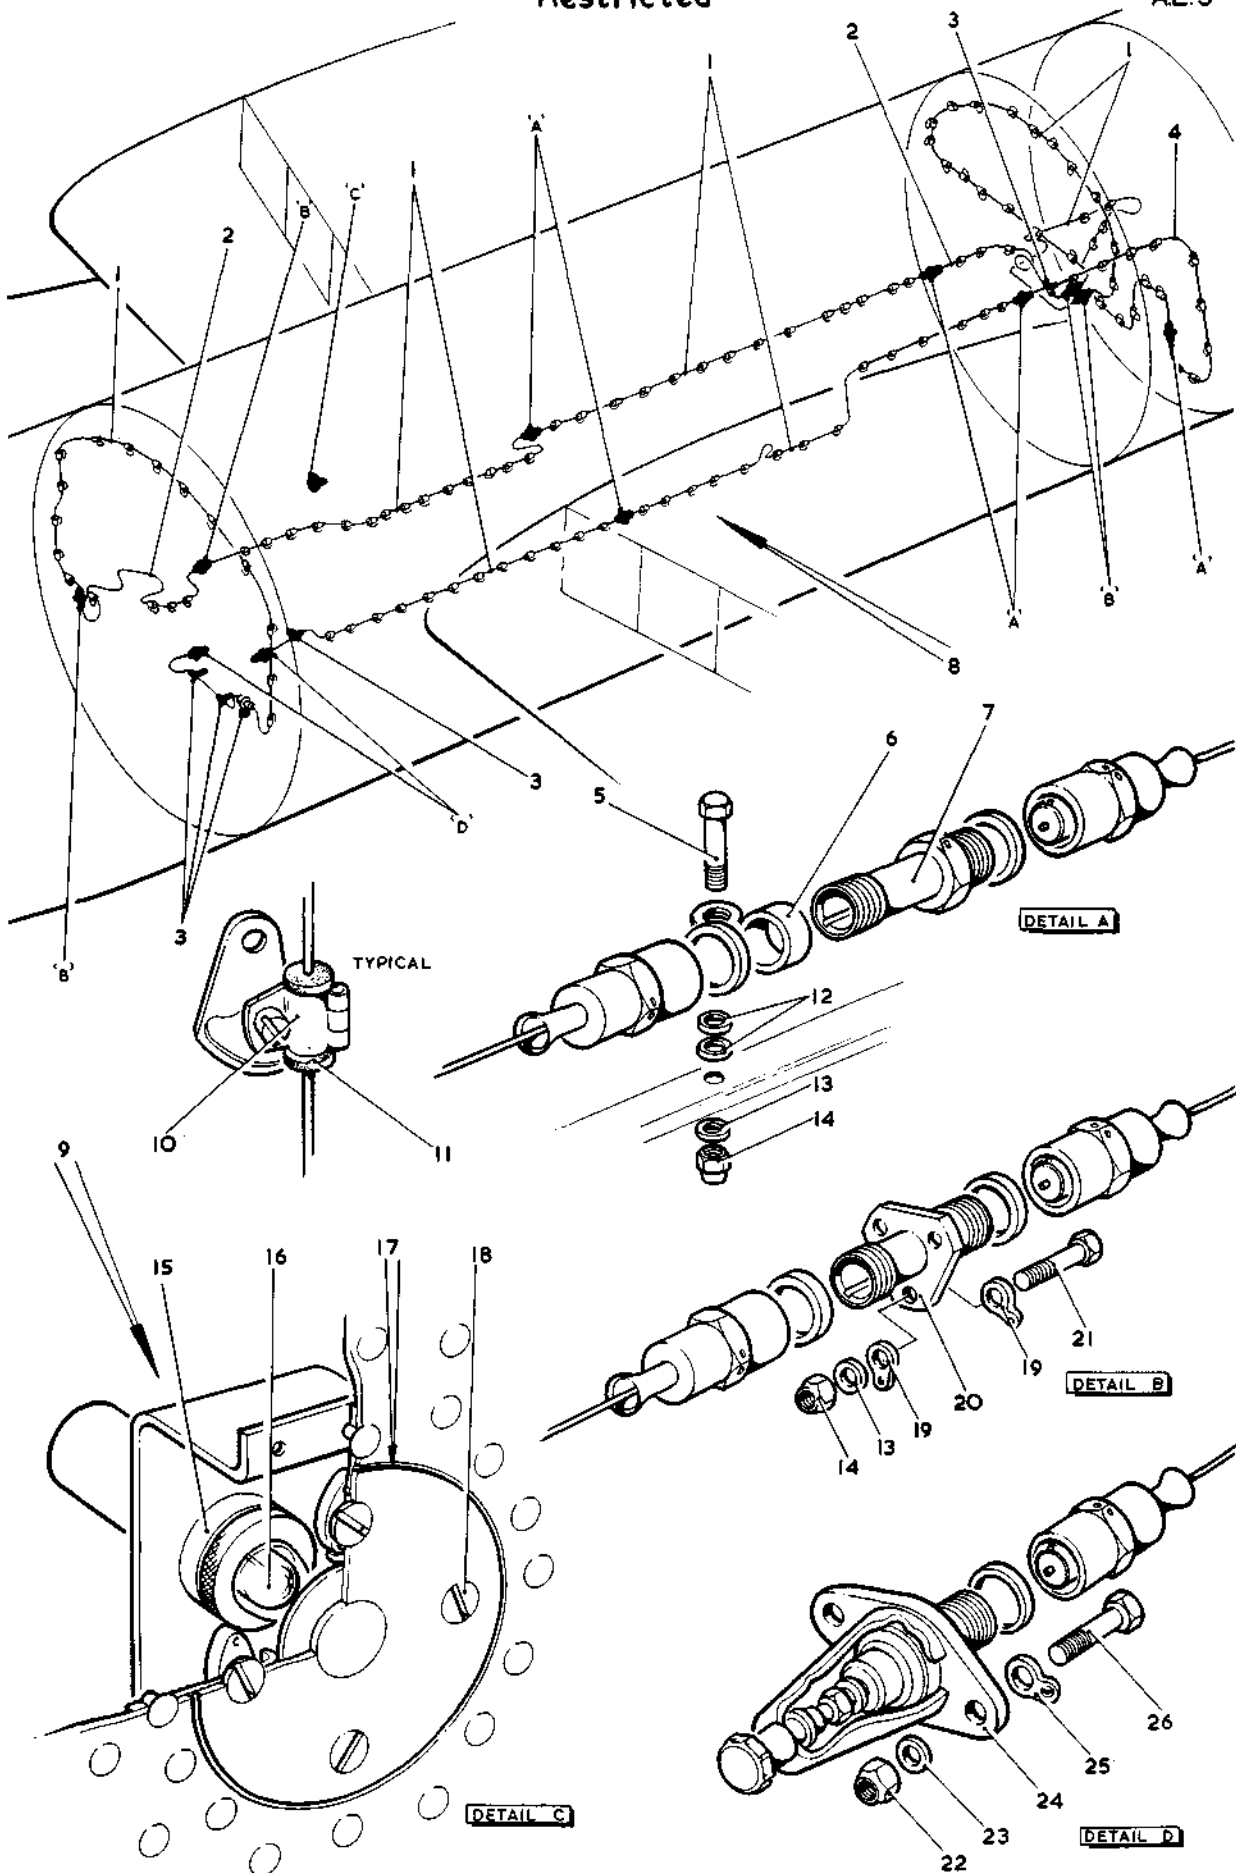


FIG. 24 FIRE PROTECTION SYSTEM IN FUSELAGE
Restricted

T. MK. 17 SECT. N

●

●●

●●

●

●●

●●●

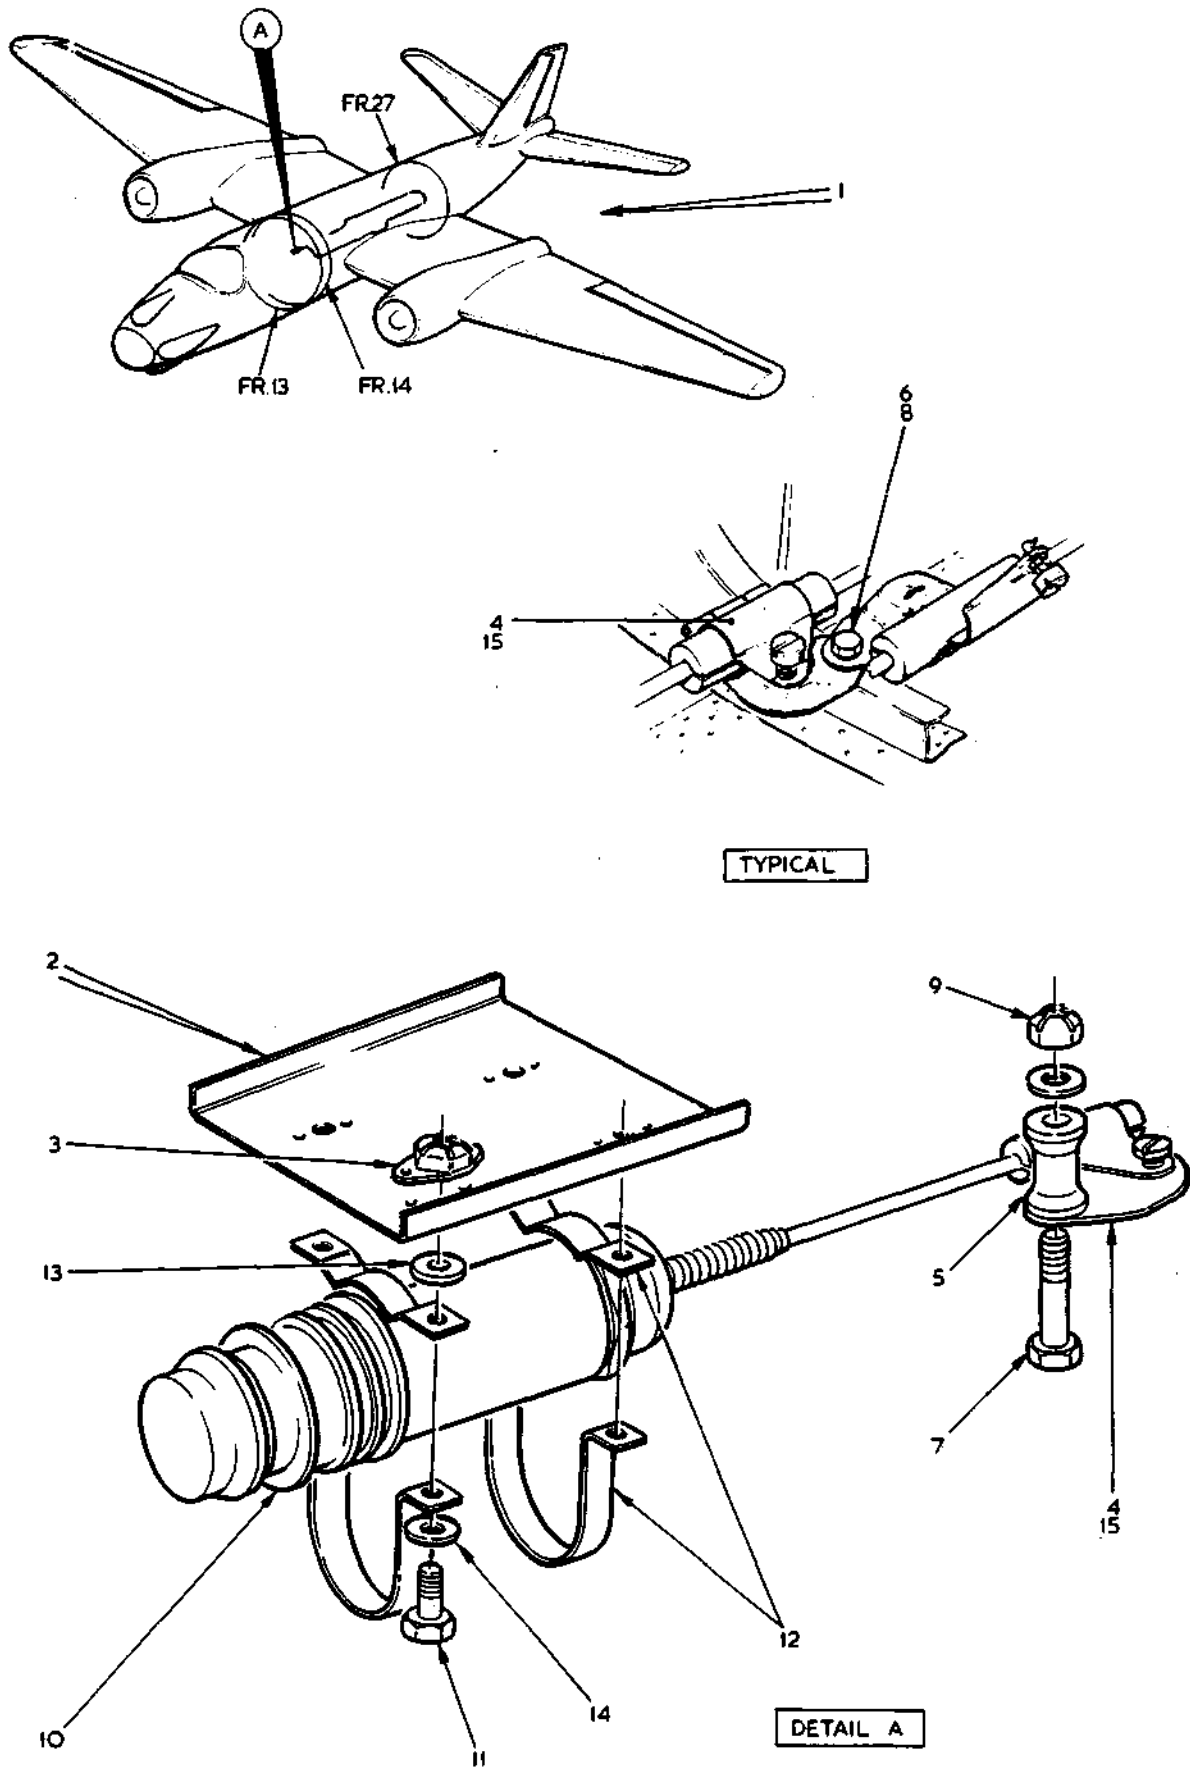


FIG.24A FIRE PROTECTION SYSTEM IN FUSELAGE

T.MK.17 SECT.N

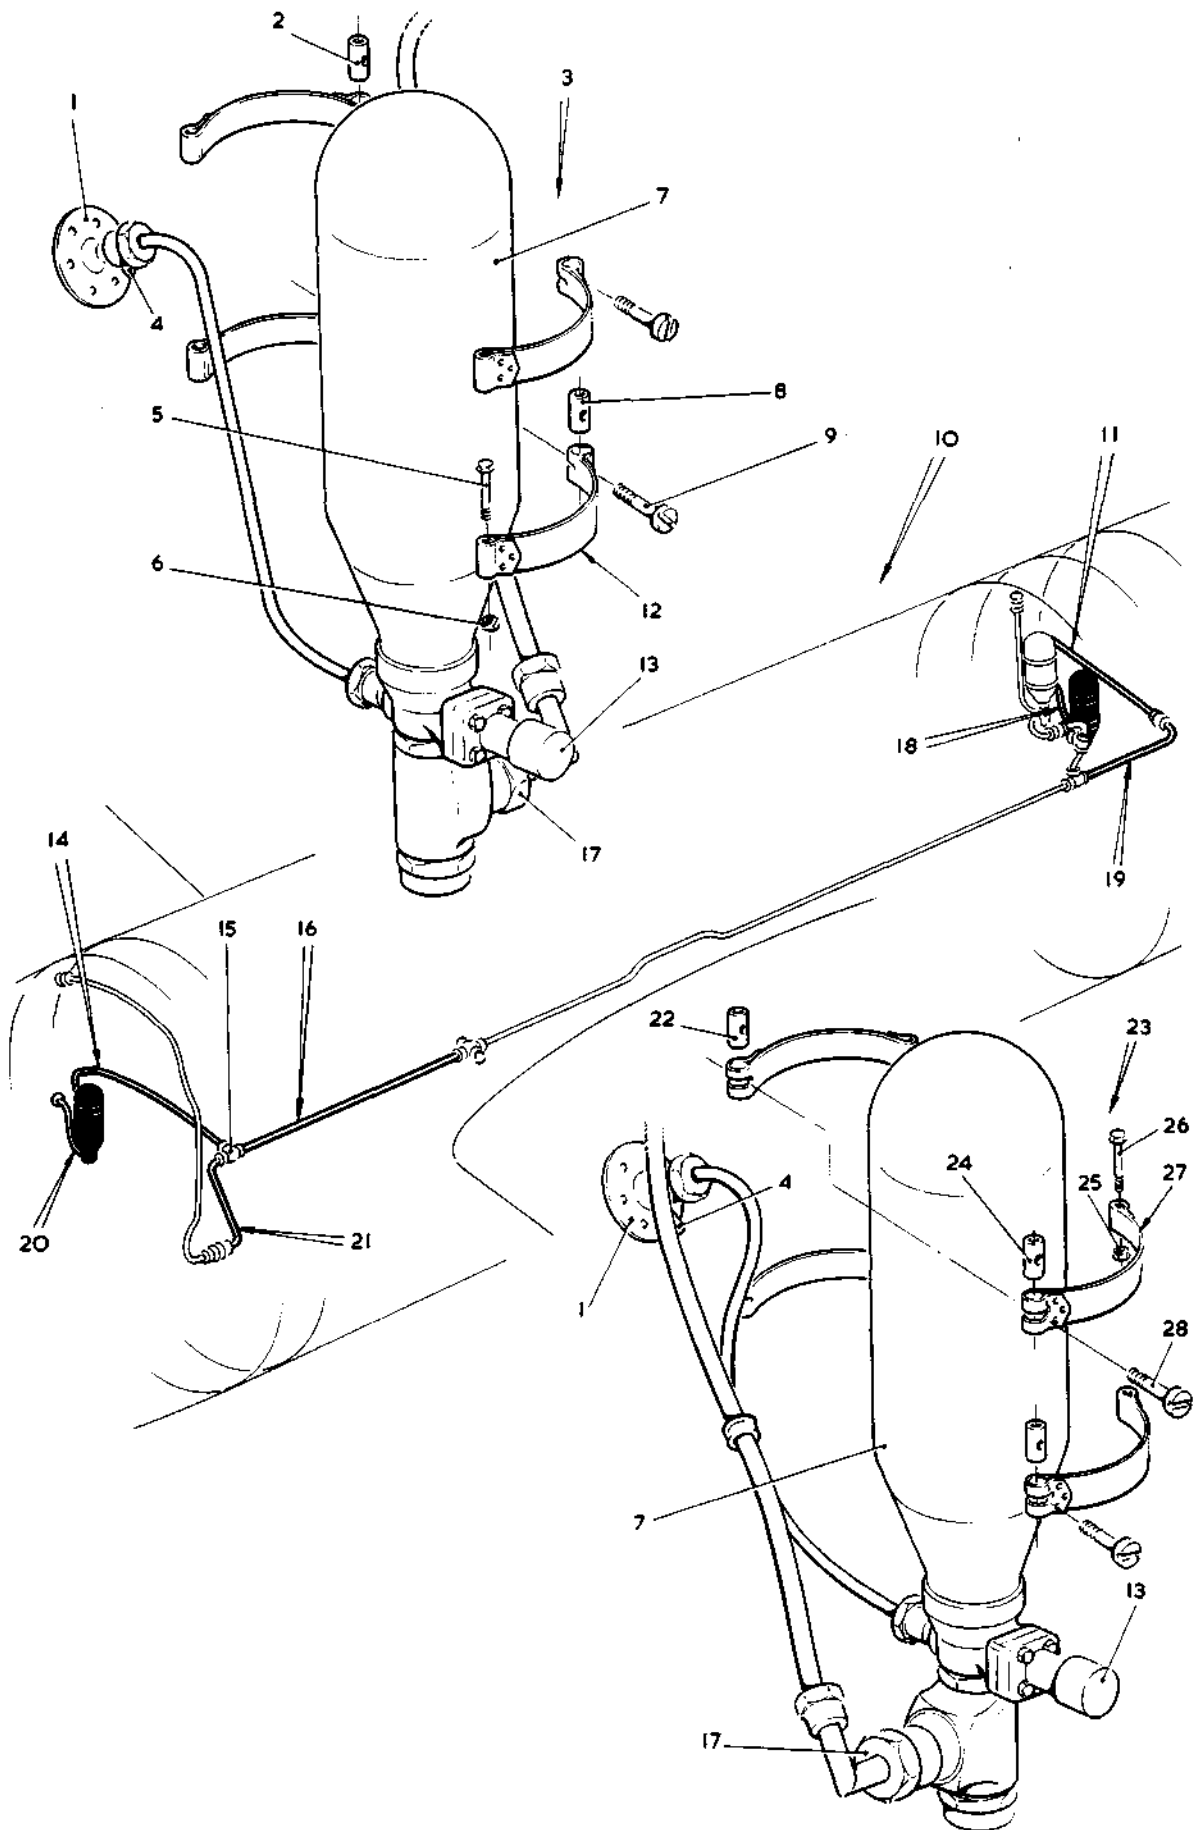


FIG.26 FIRE PROTECTION SYSTEM IN FUSELAGE
Restricted

●

●

●

●

●

●

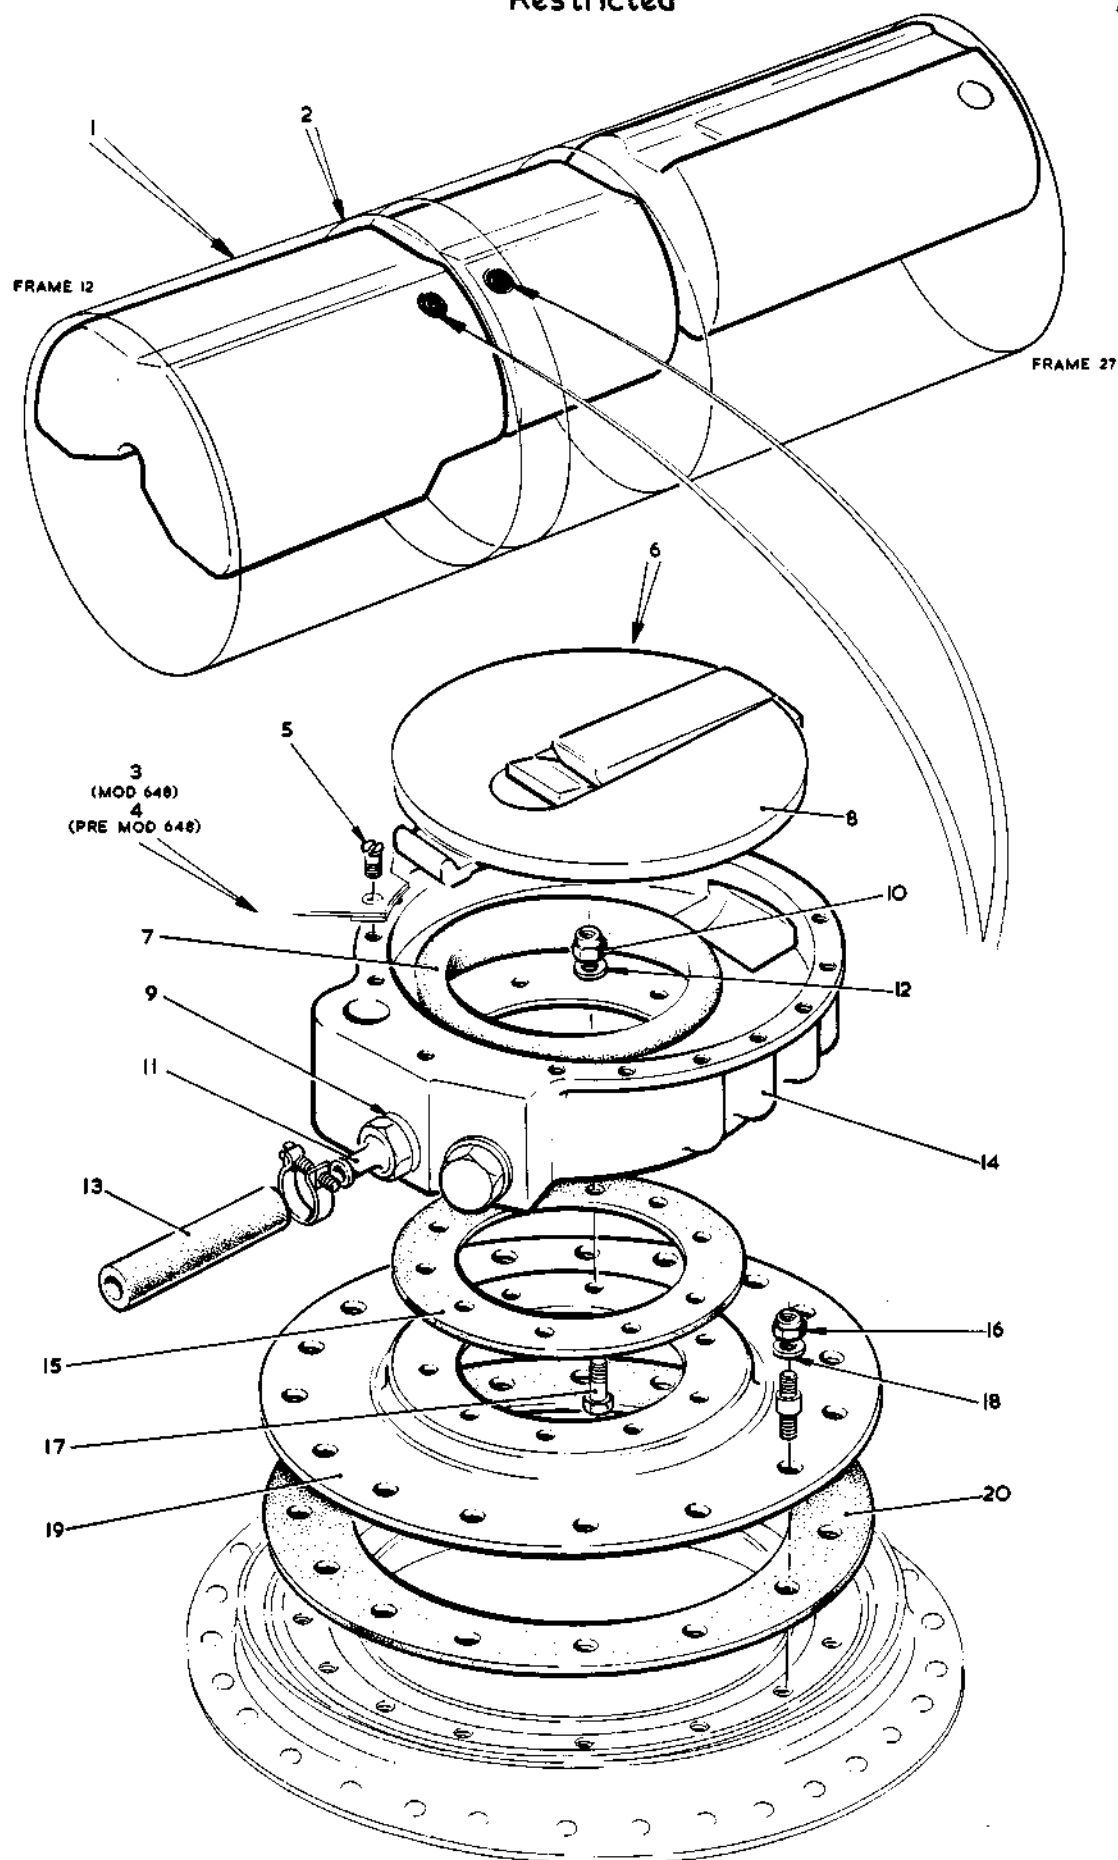


FIG. 27 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

●

●●

●●

●

●●

●●●

Restricted

A.L.3

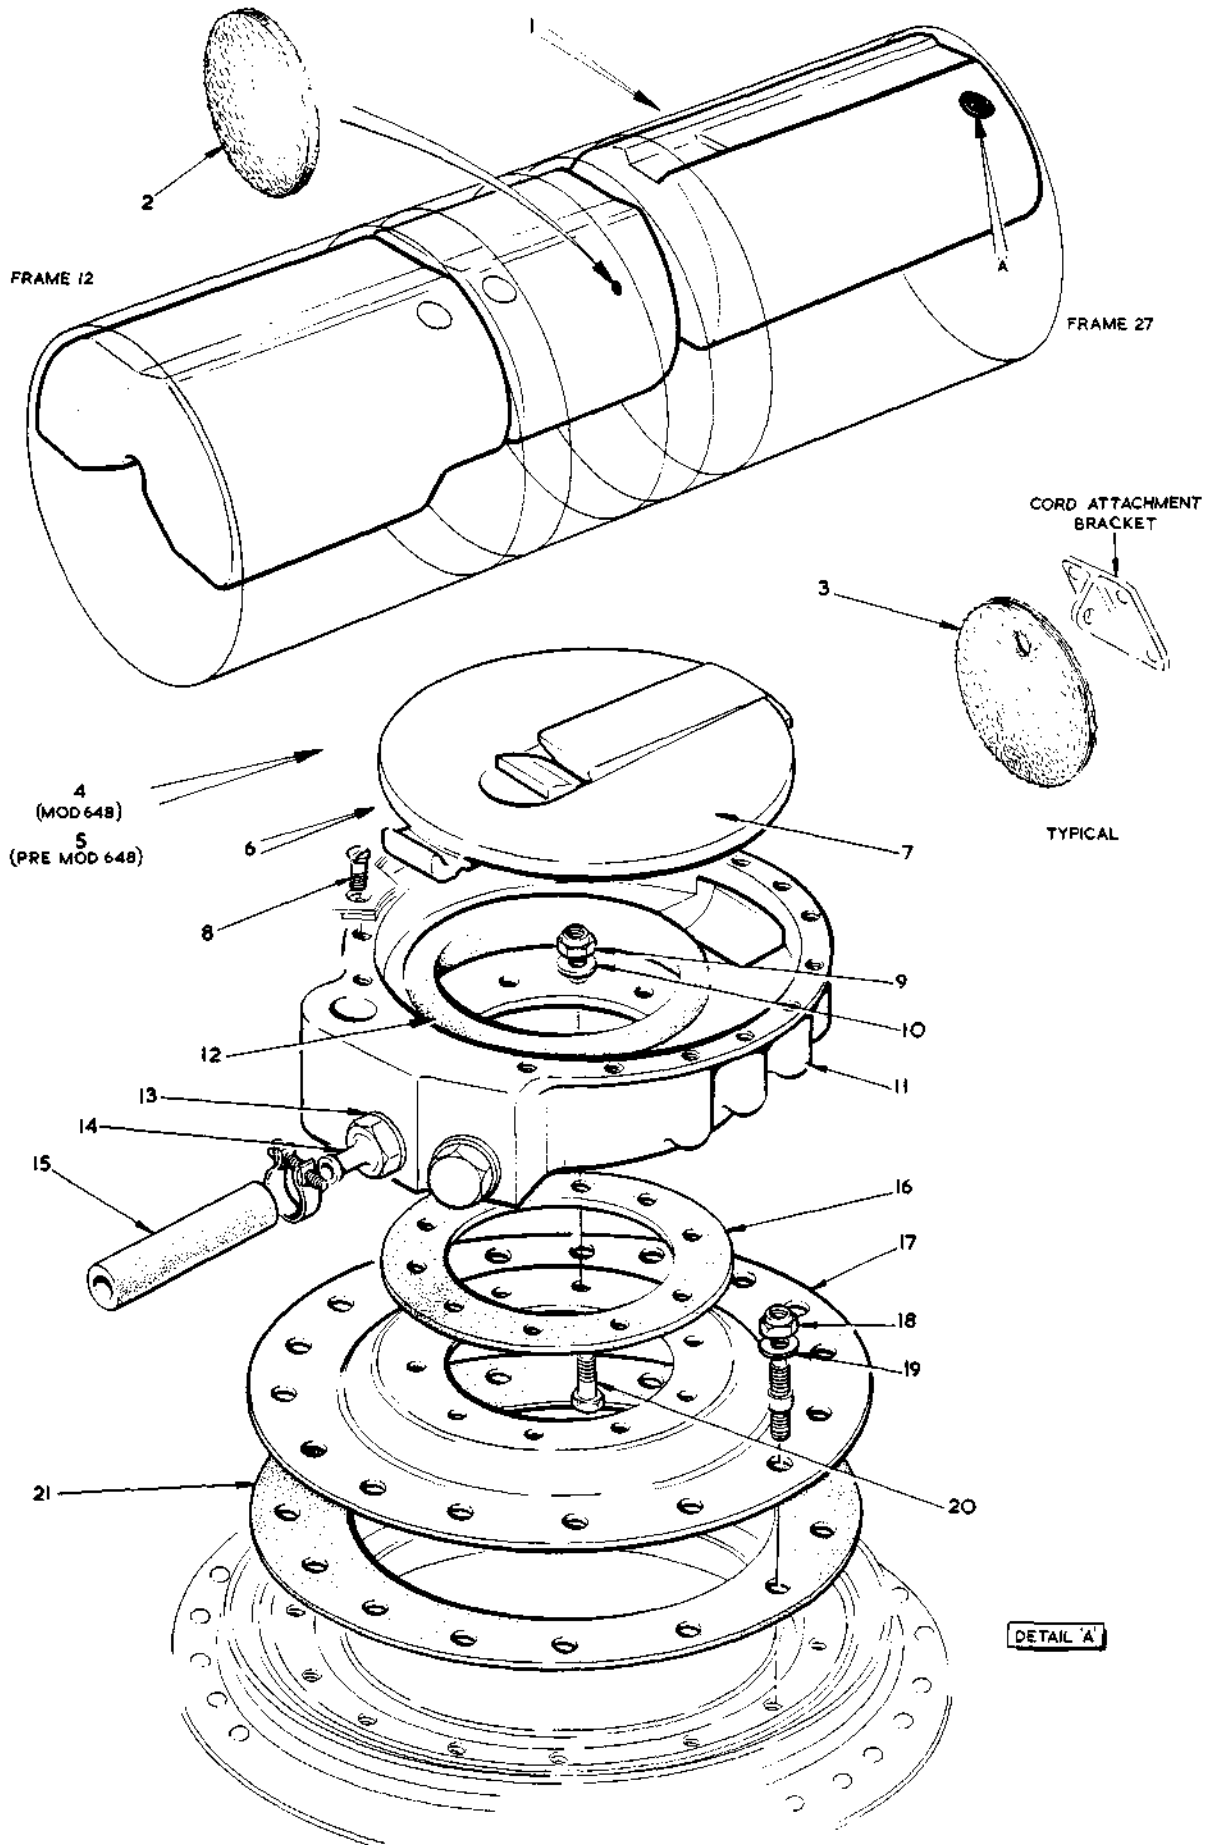


FIG. 28 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

T.MK.17 SECT N

●

●

●

●

●

●

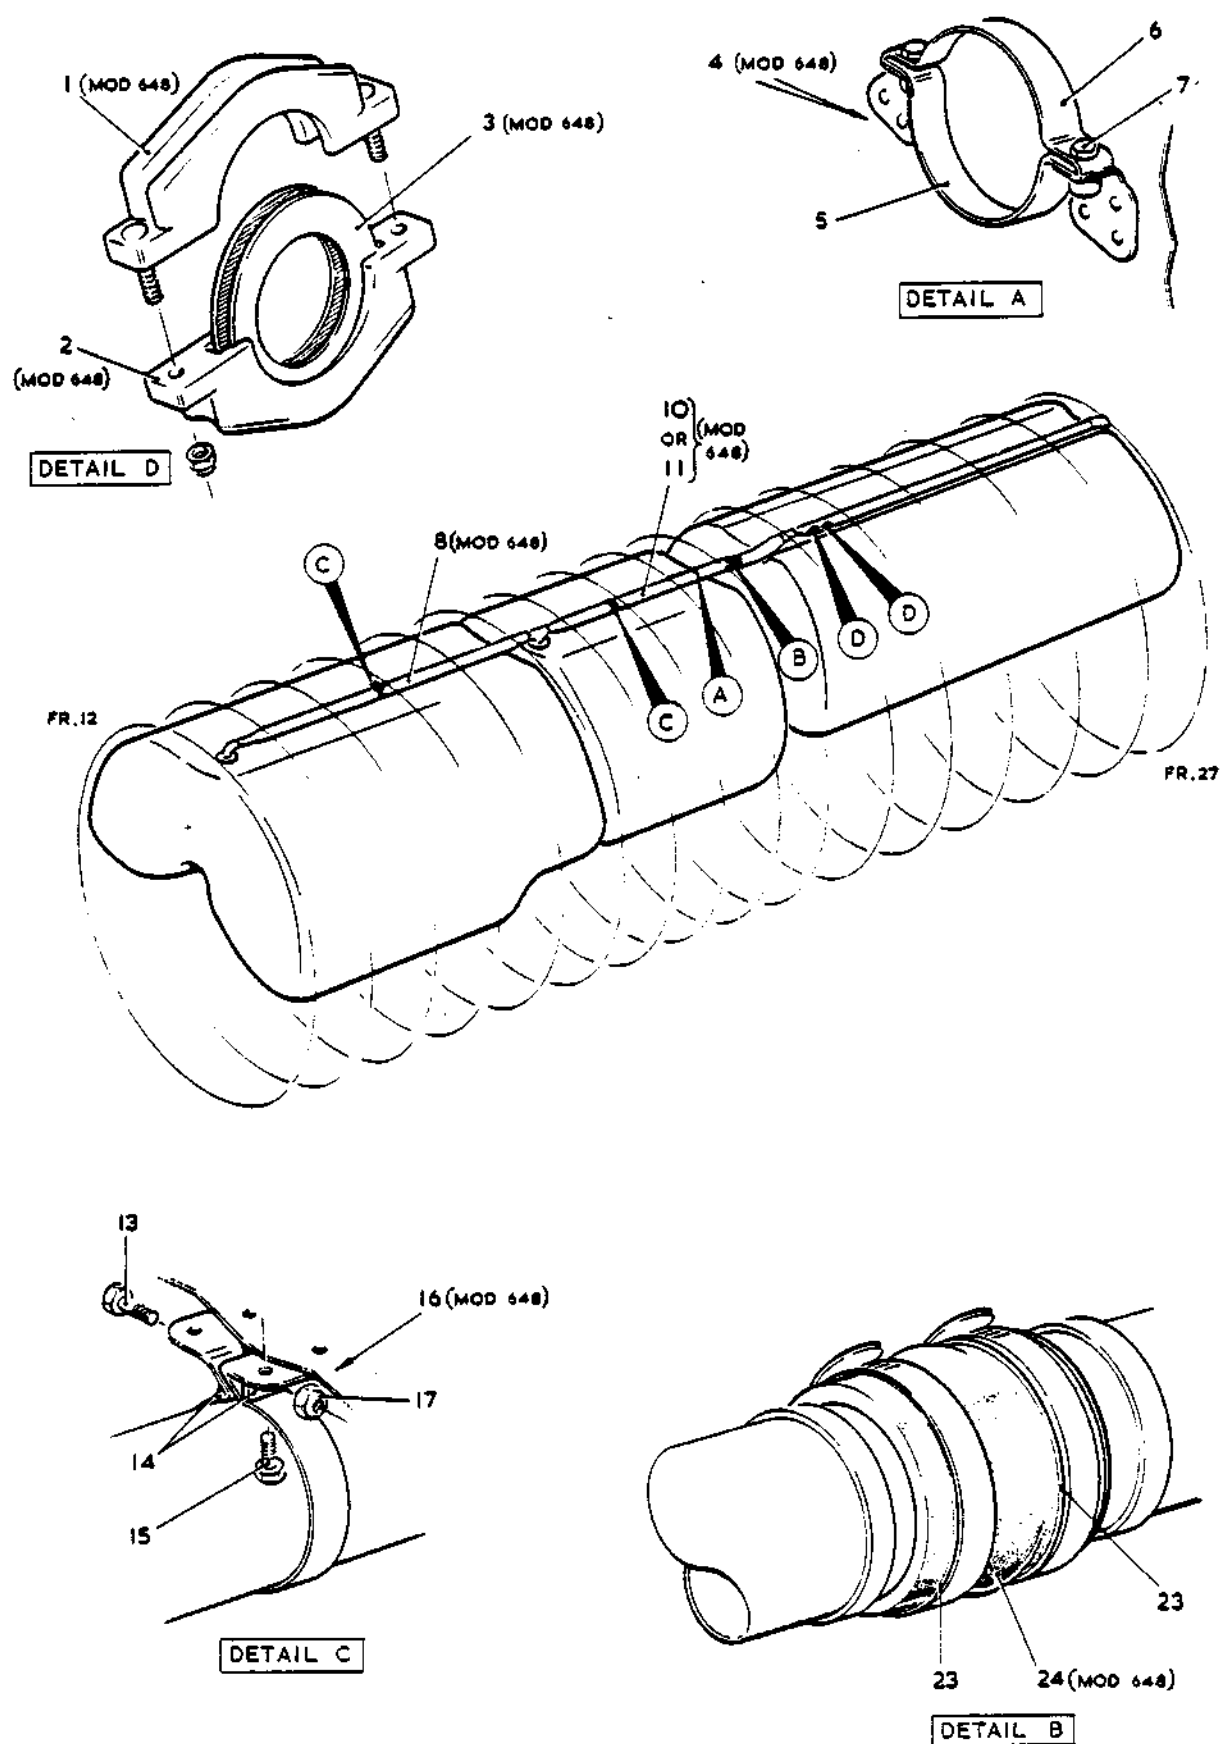


FIG. 29 FUEL SYSTEM IN CENTRE FUSELAGE

T MK 17 SECT N

1

2

3

4

5

6

7

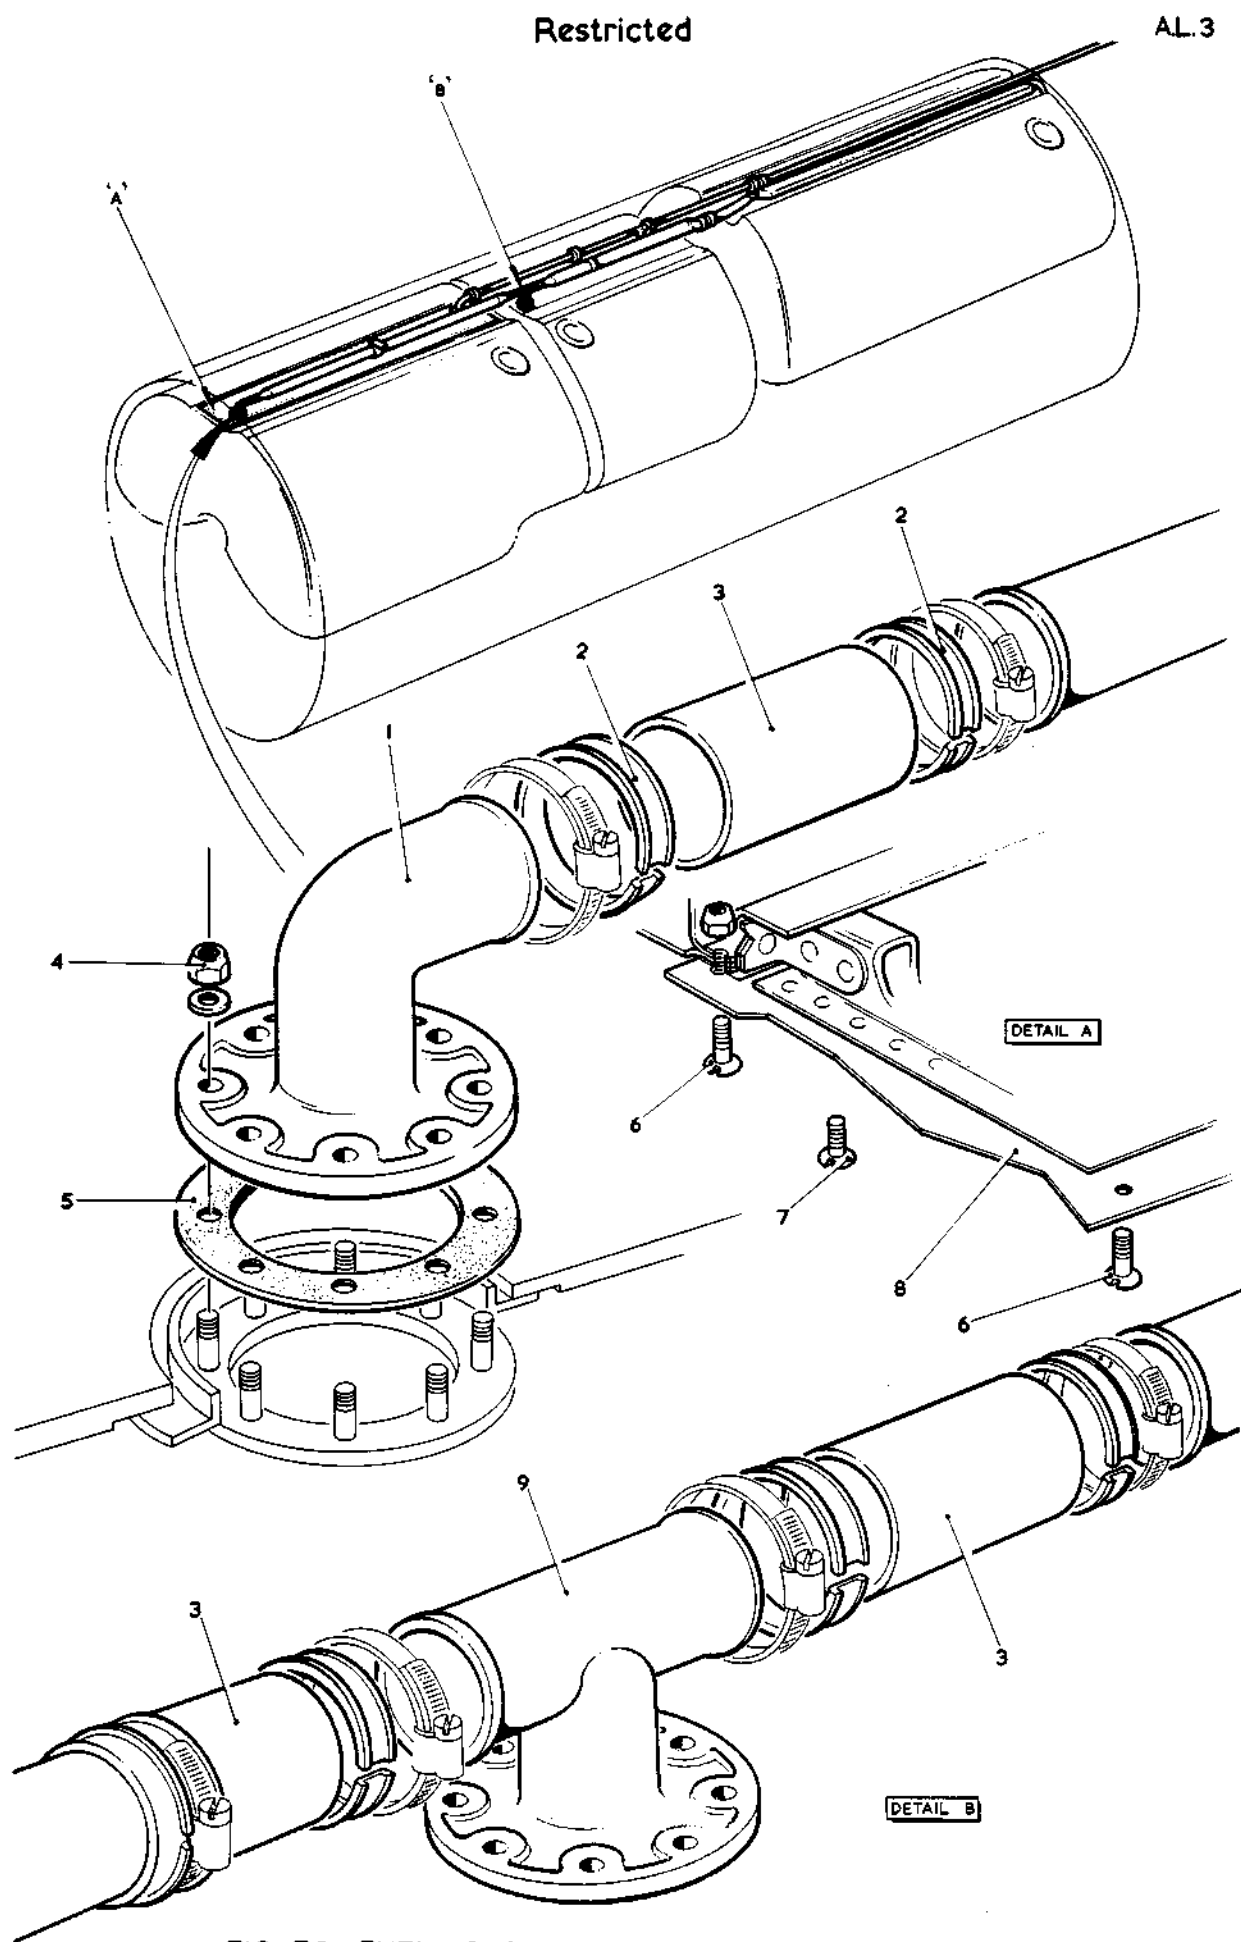


FIG. 30 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

●


●●

●●

●

●●

●●●

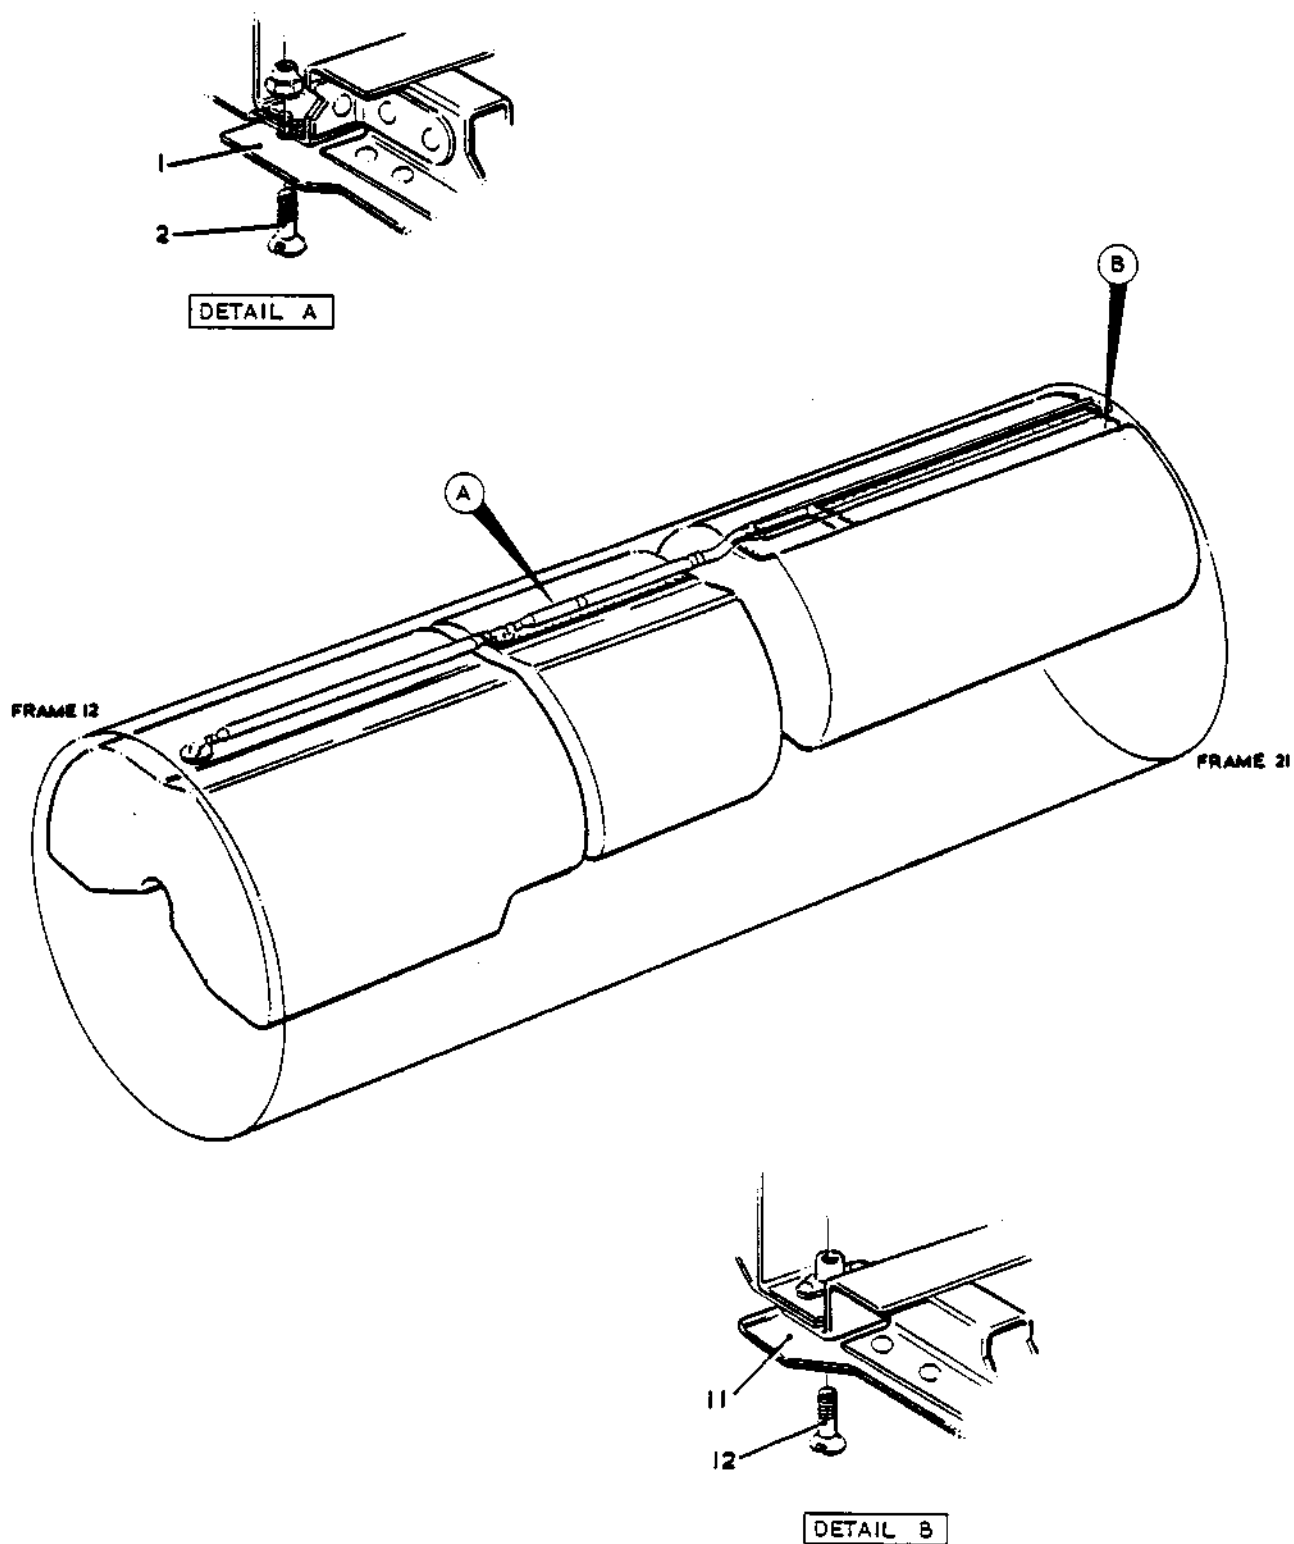**FIG. 31 FUEL SYSTEM IN CENTRE FUSELAGE**

T MK 17 SECT N



Restricted

A.L.3

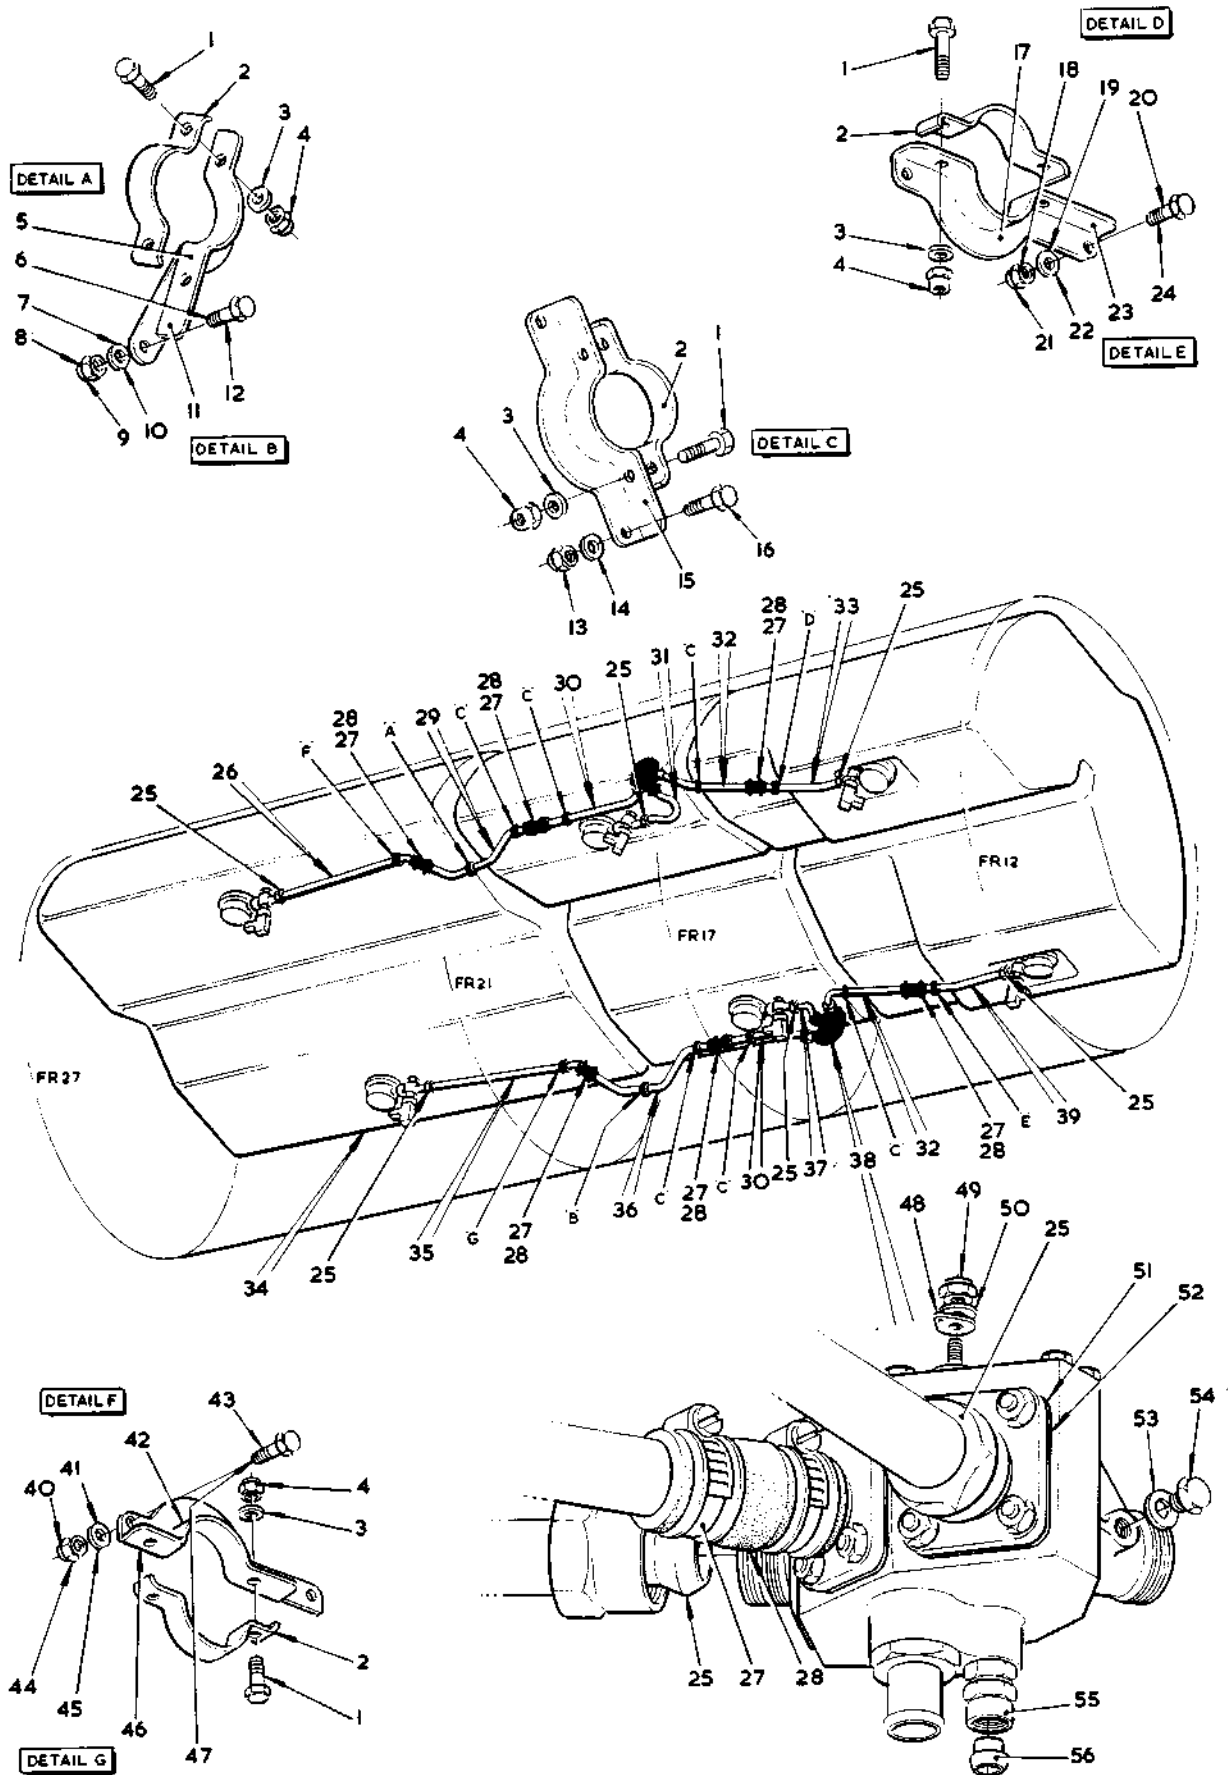


FIG. 32 FUEL SYSTEM IN CENTRE FUSELAGE

Restricted

T.MK.17 SECT. N

●

●

●

●

●

●

●

Restricted

AL.3

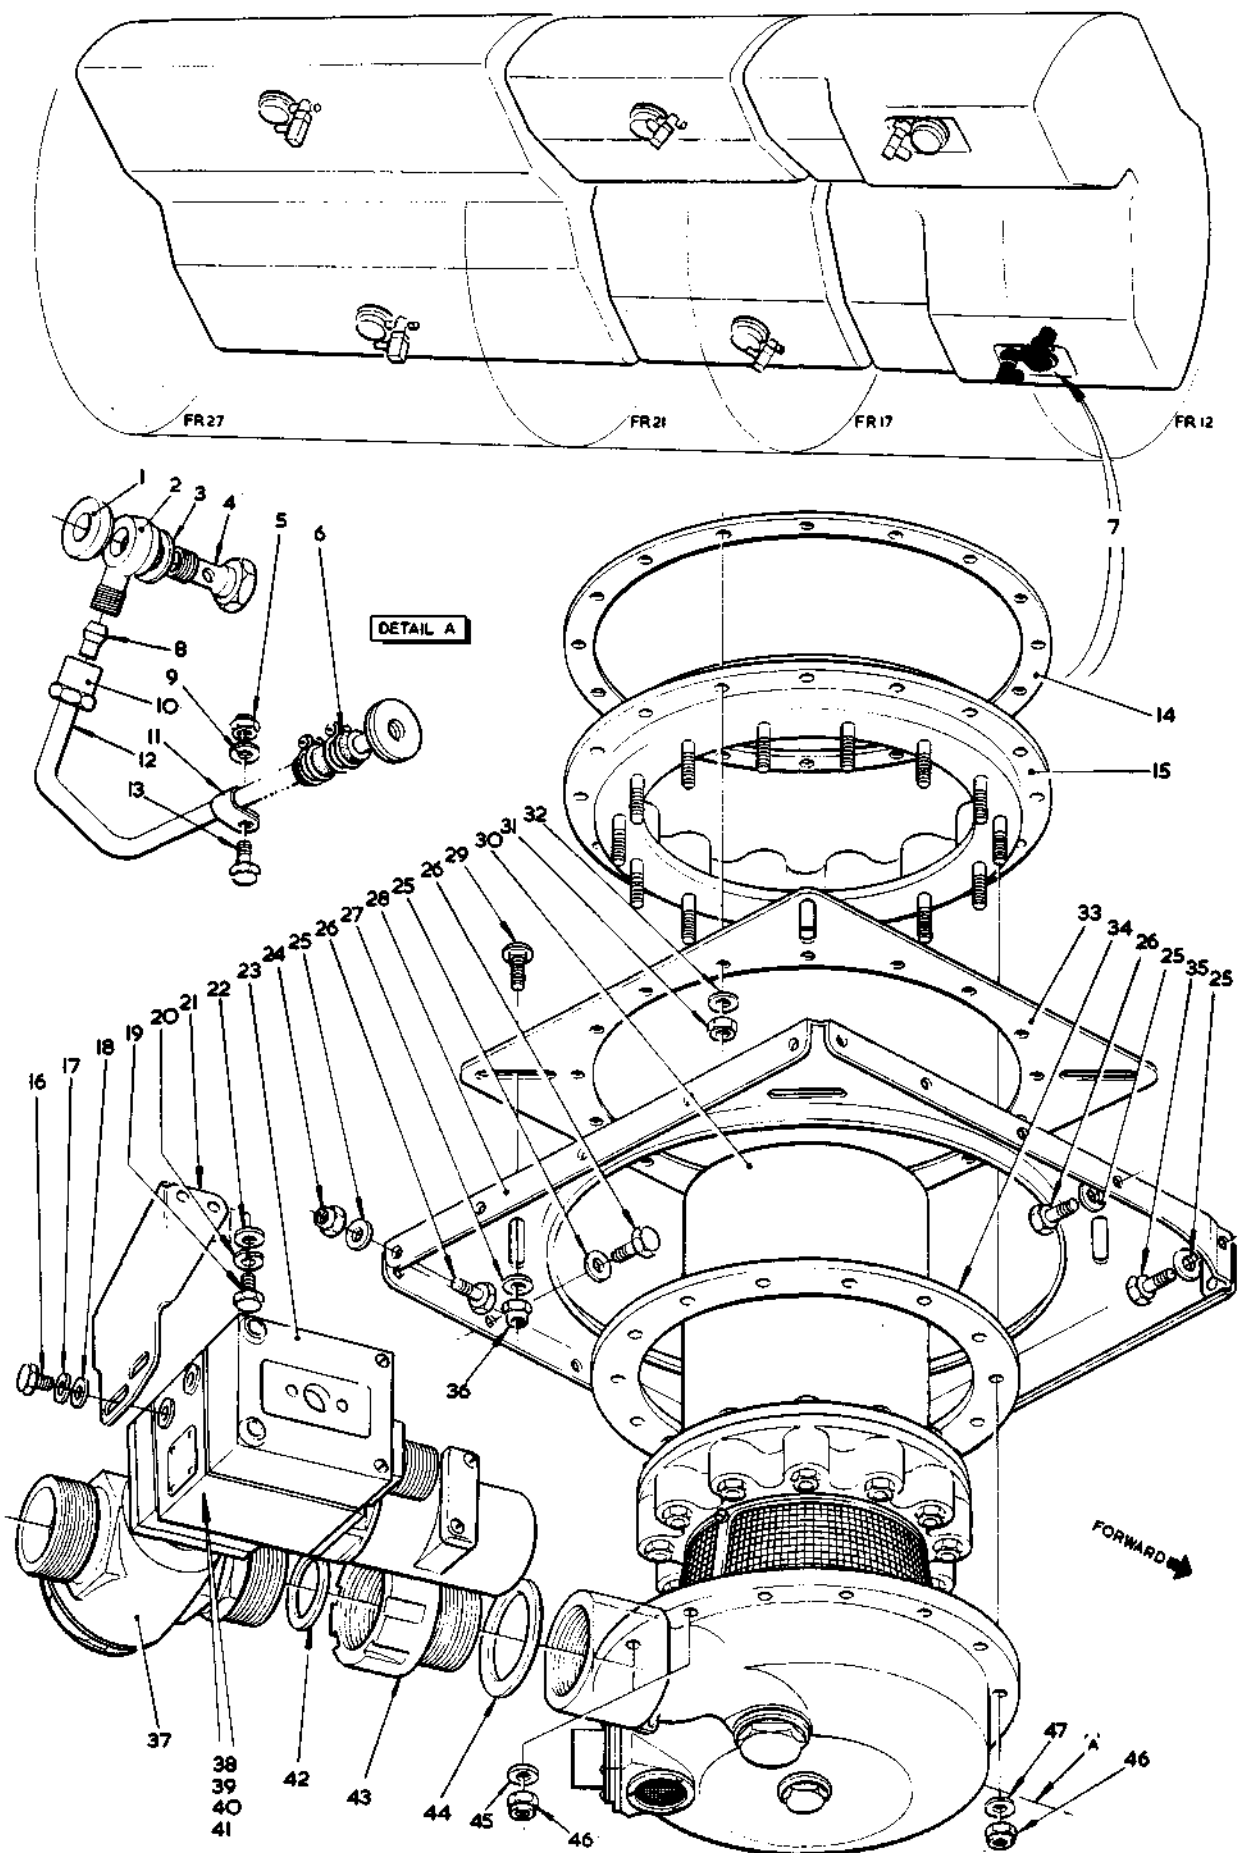


FIG.33 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

T MK.17 SECT. N

●

●

●

●

●

●

●

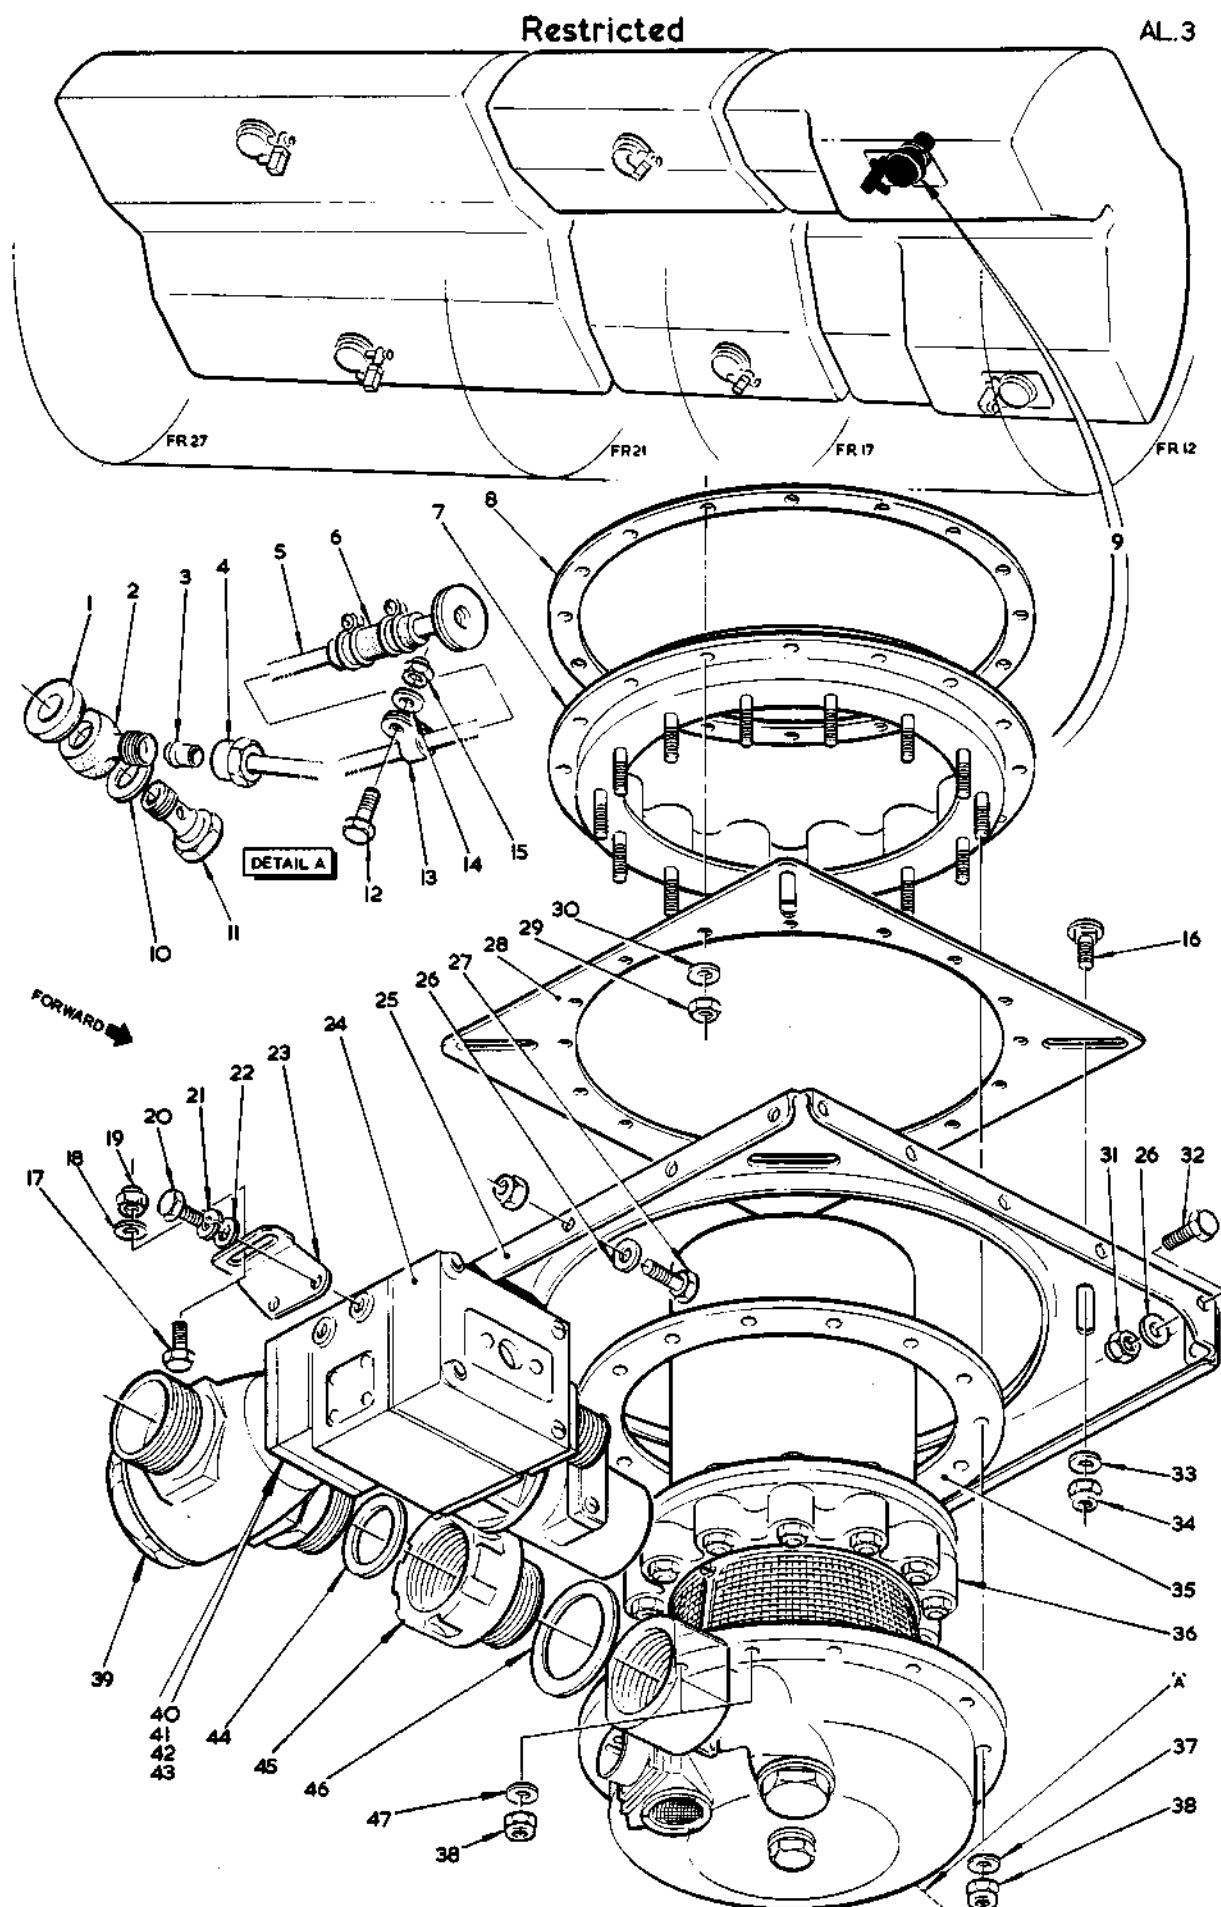


FIG.34 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

•

•

•

•

•

•

•

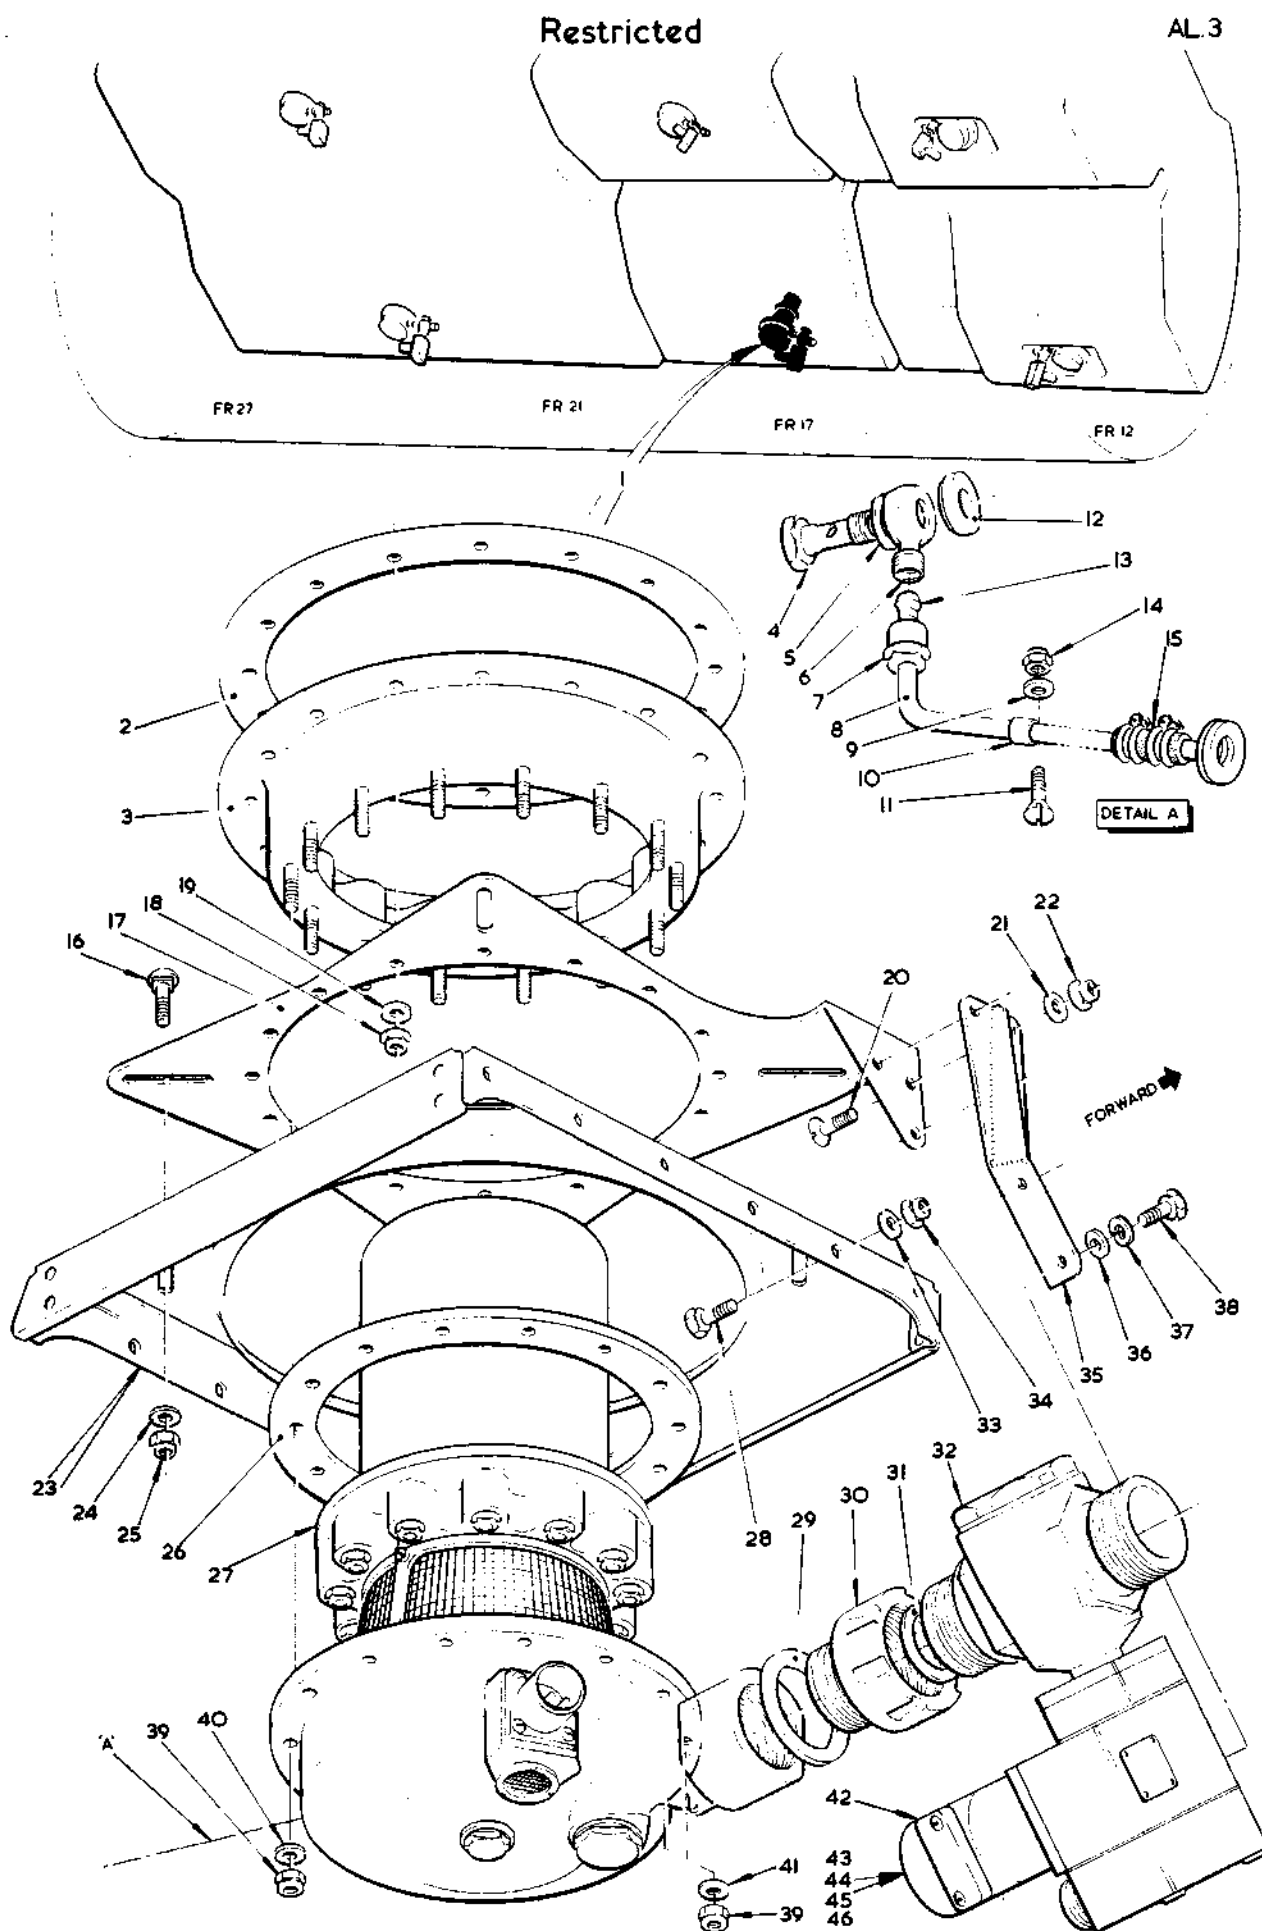


FIG.35 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

●

●

●

●

●

●

●

Restricted

AL.3

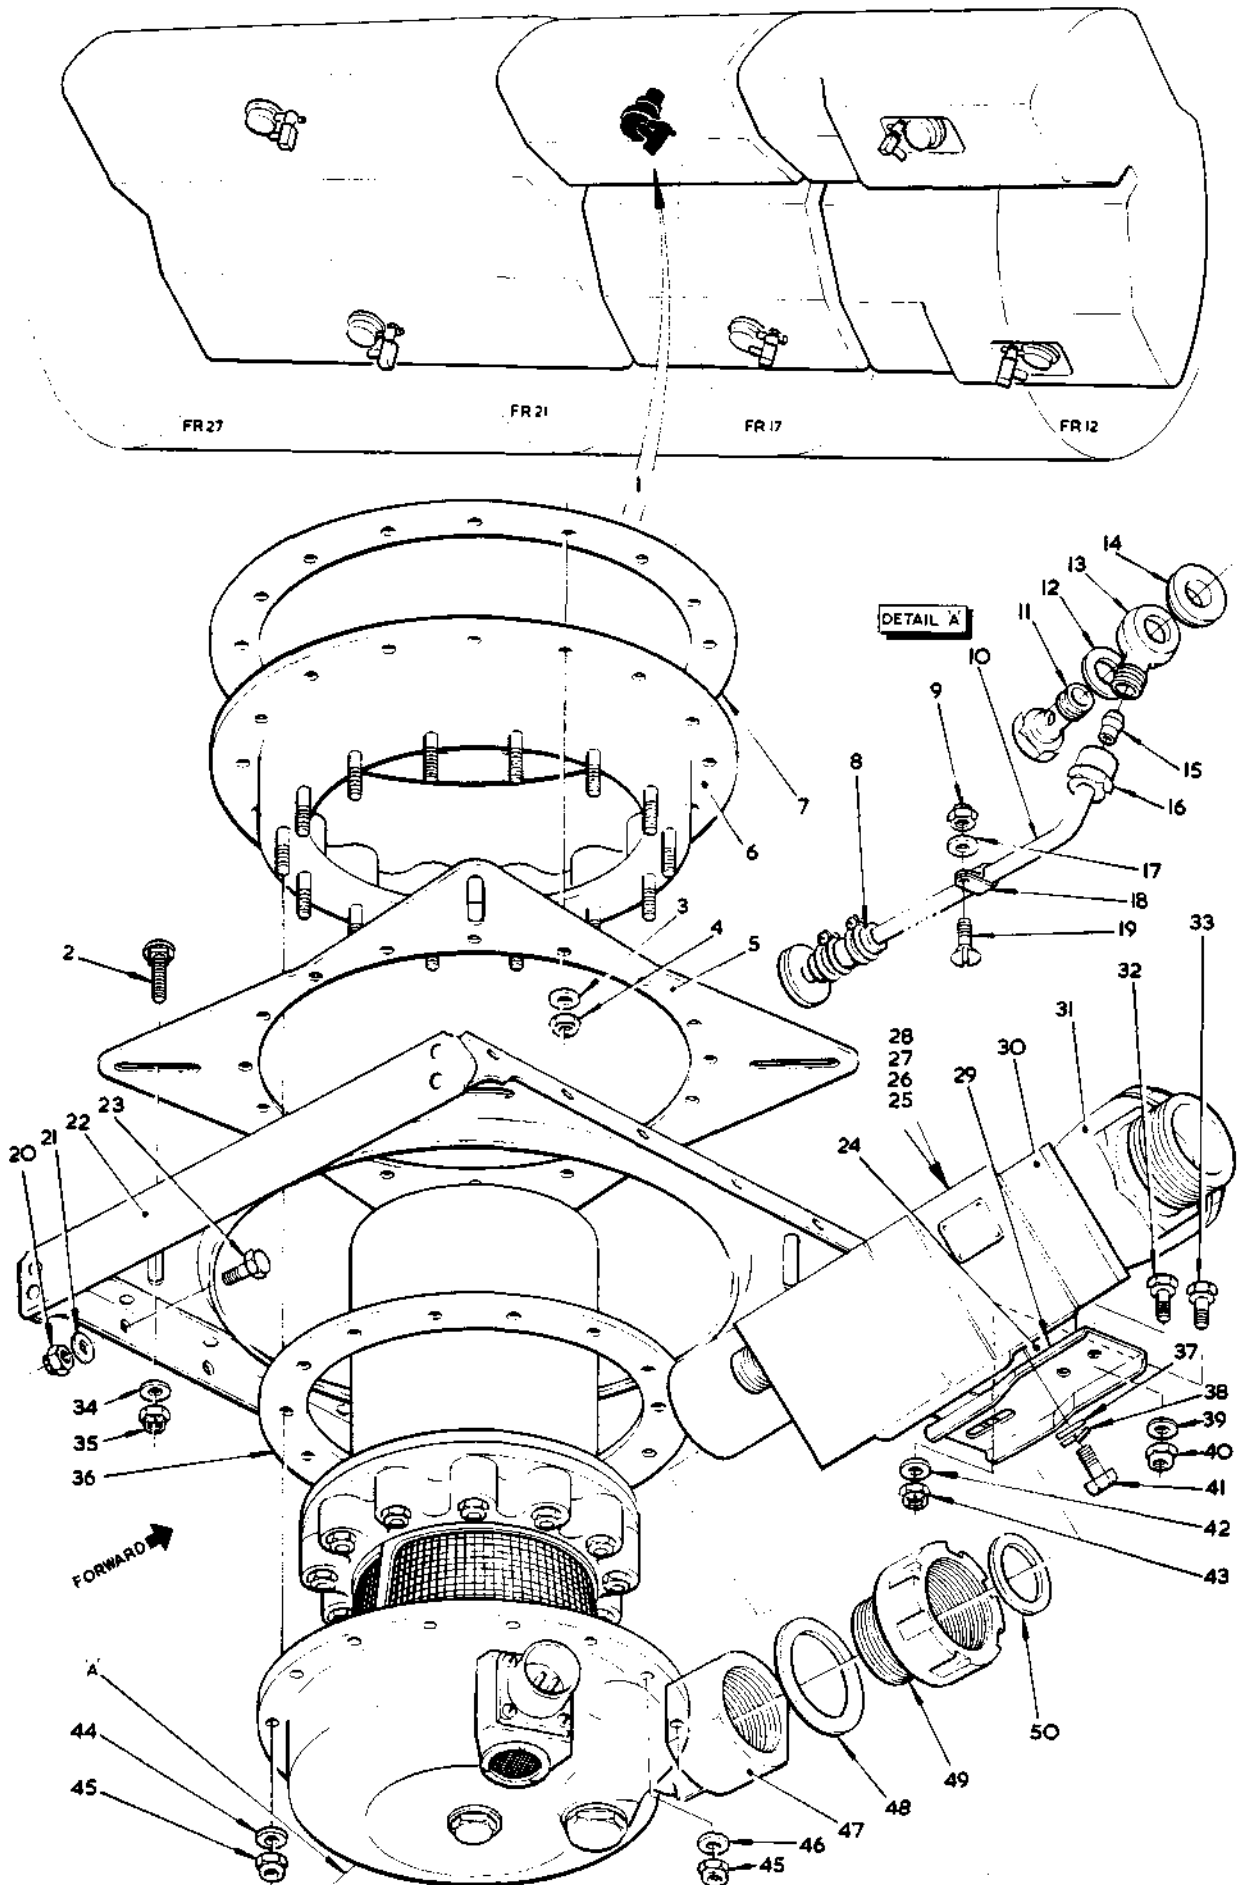


FIG.36 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

●

●

●

●

●

●

●

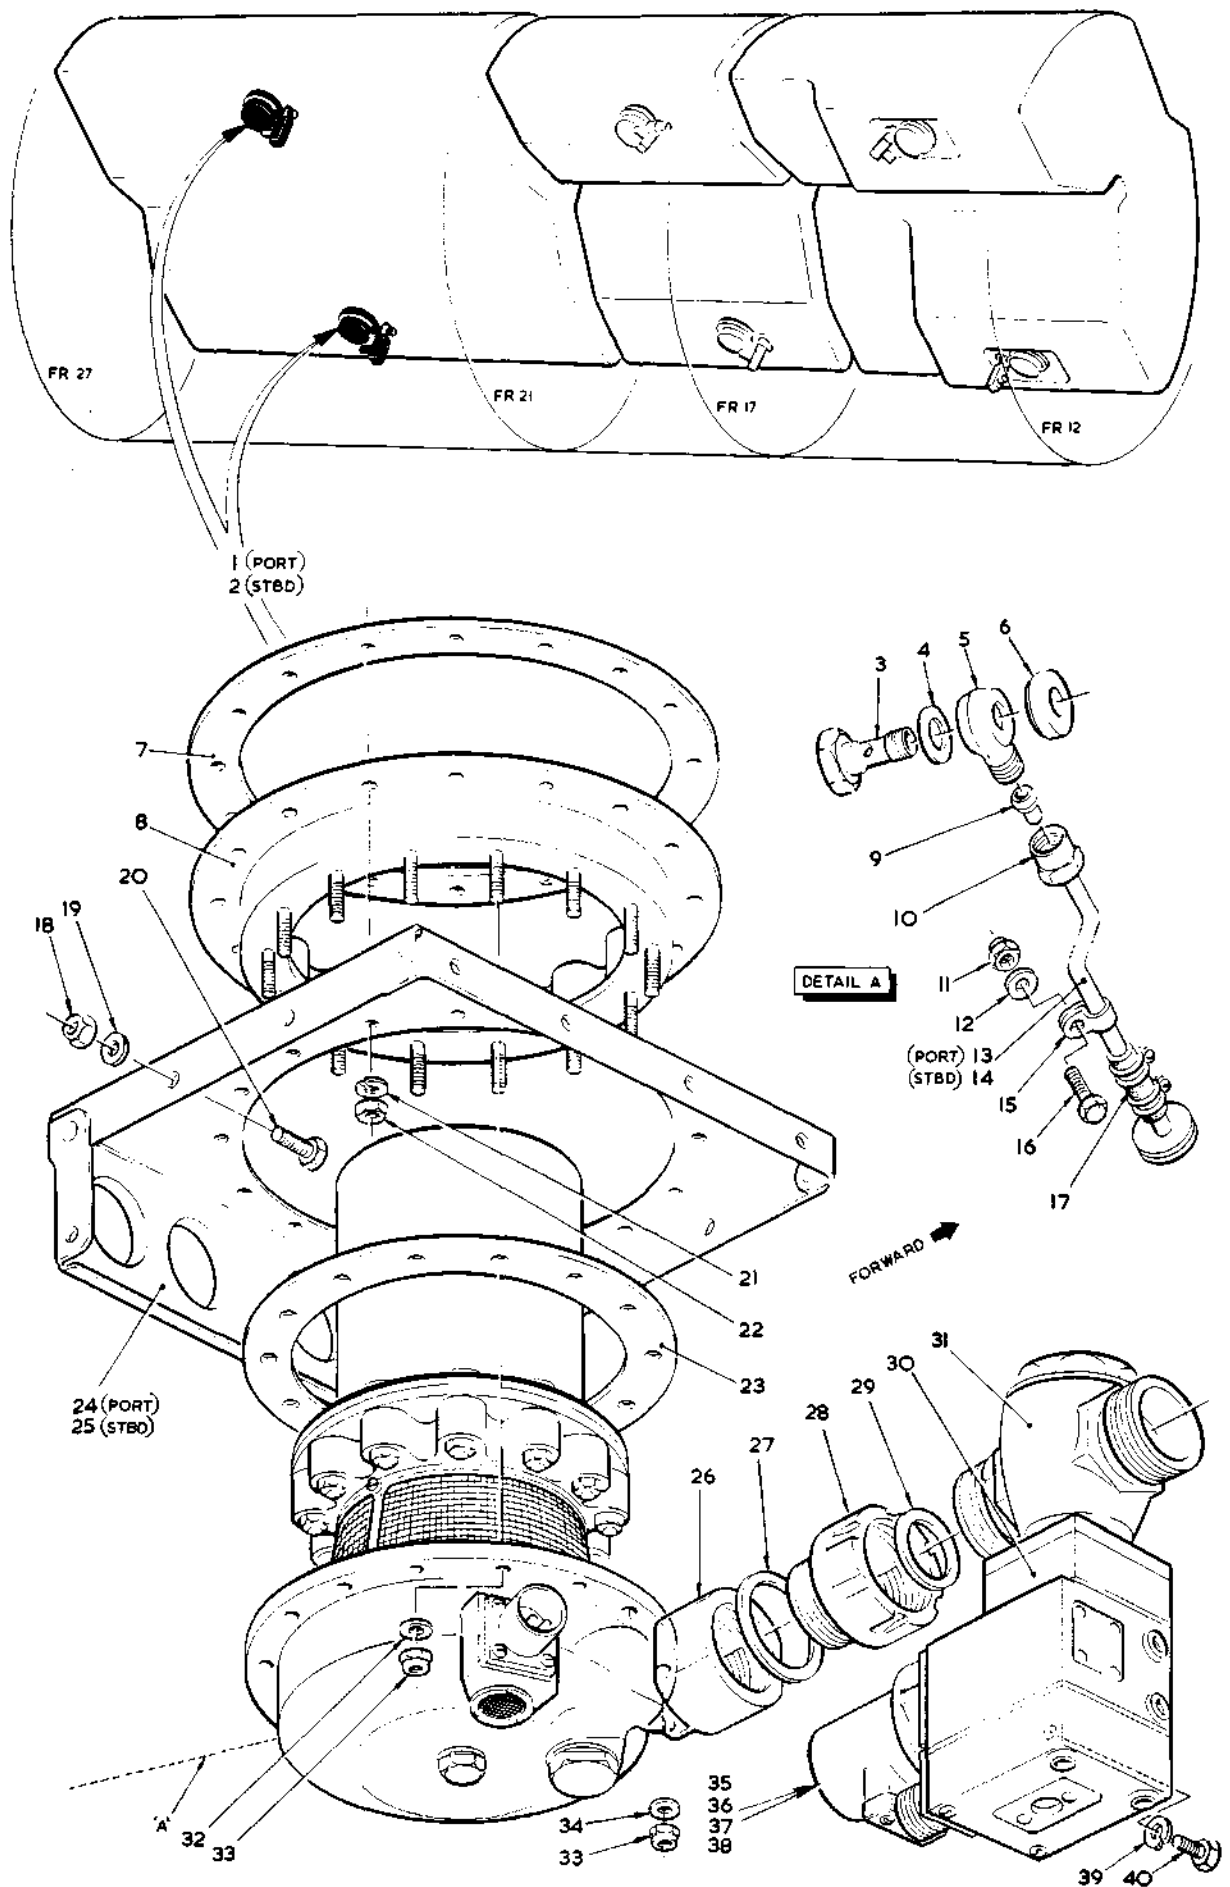


FIG. 37 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

●

●

●

●

●

●

●

Restricted

A.L.3

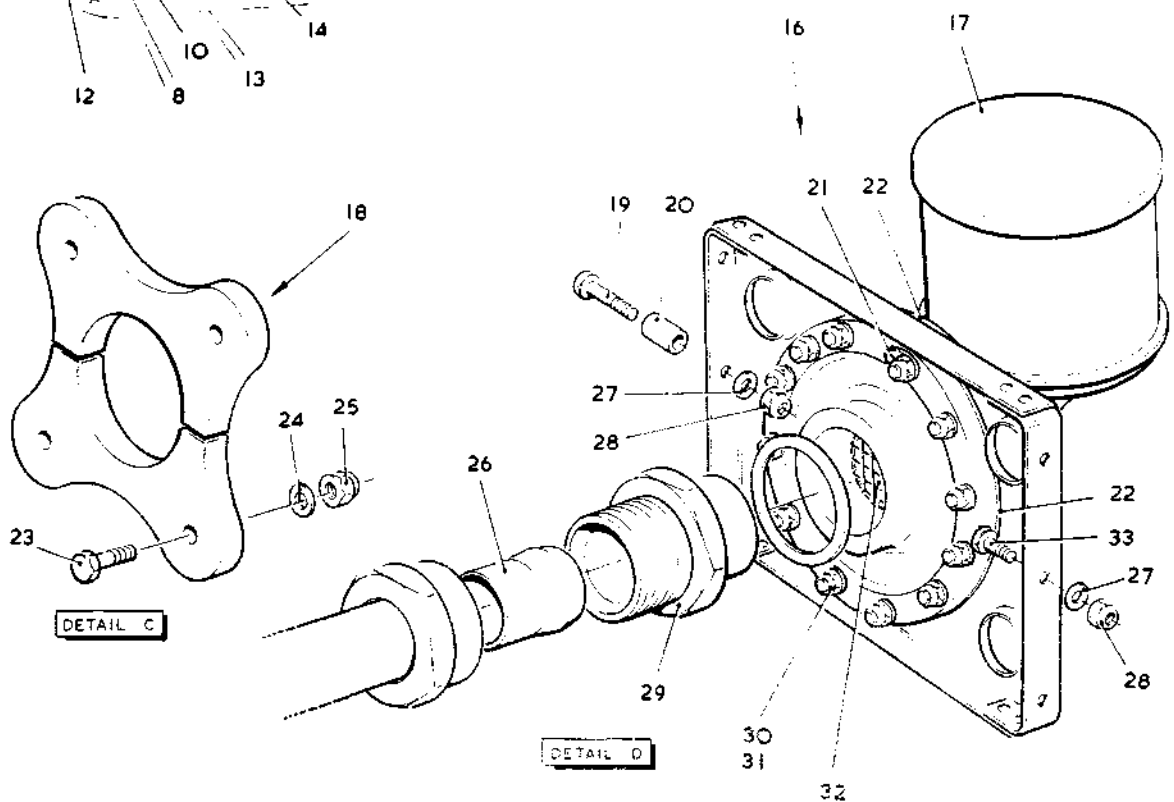
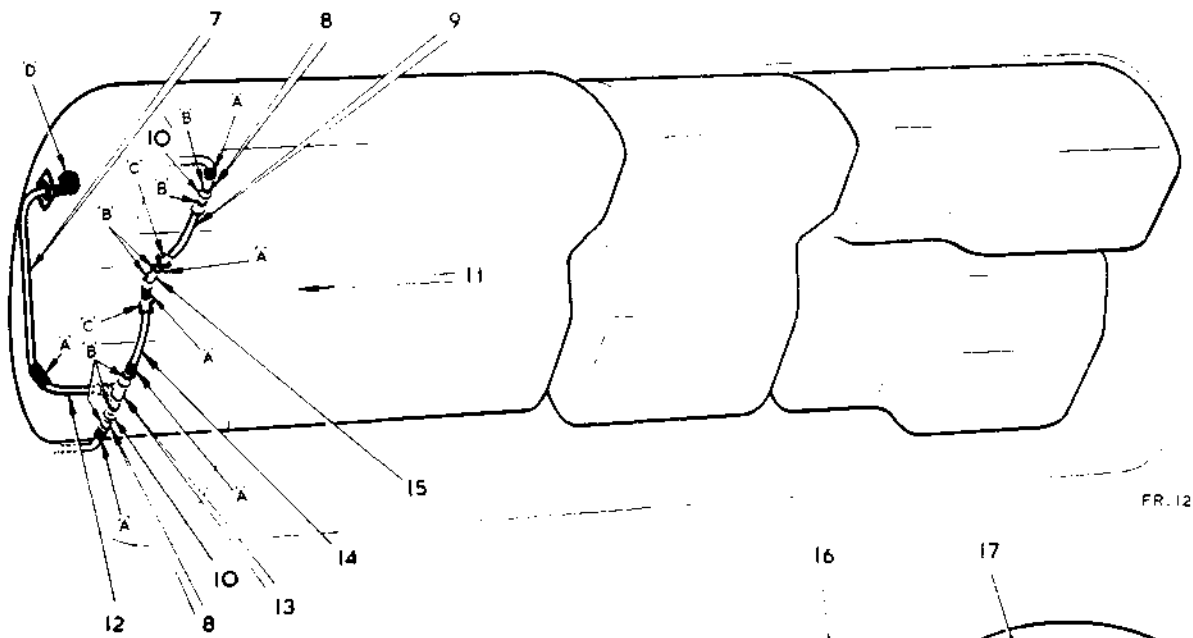
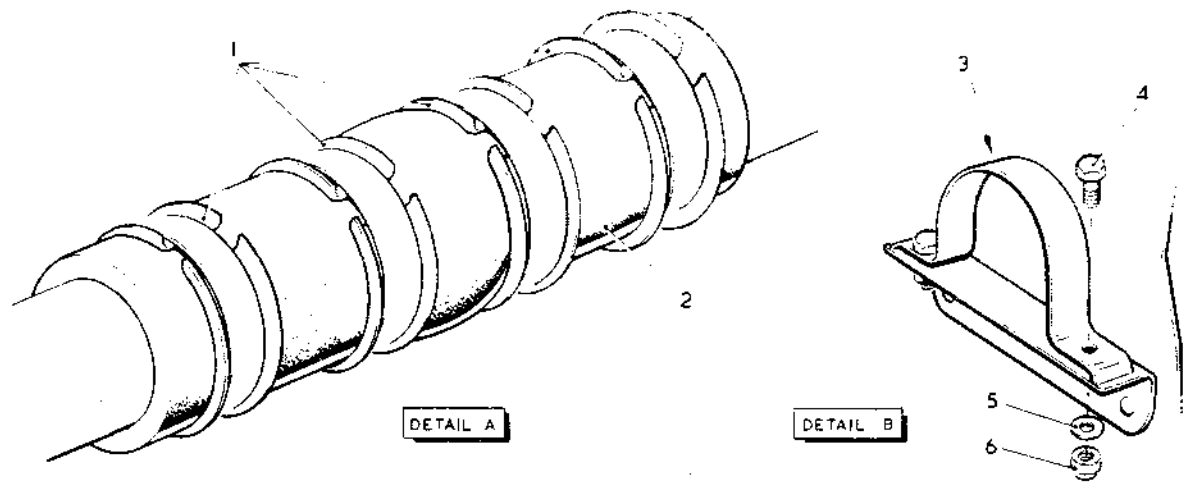


FIG. 38 FUEL SYSTEM IN CENTRE FUSELAGE
Restricted

T.M.K.17 SECT N

●

●

●

●


●

●

●

Restricted

AL.3

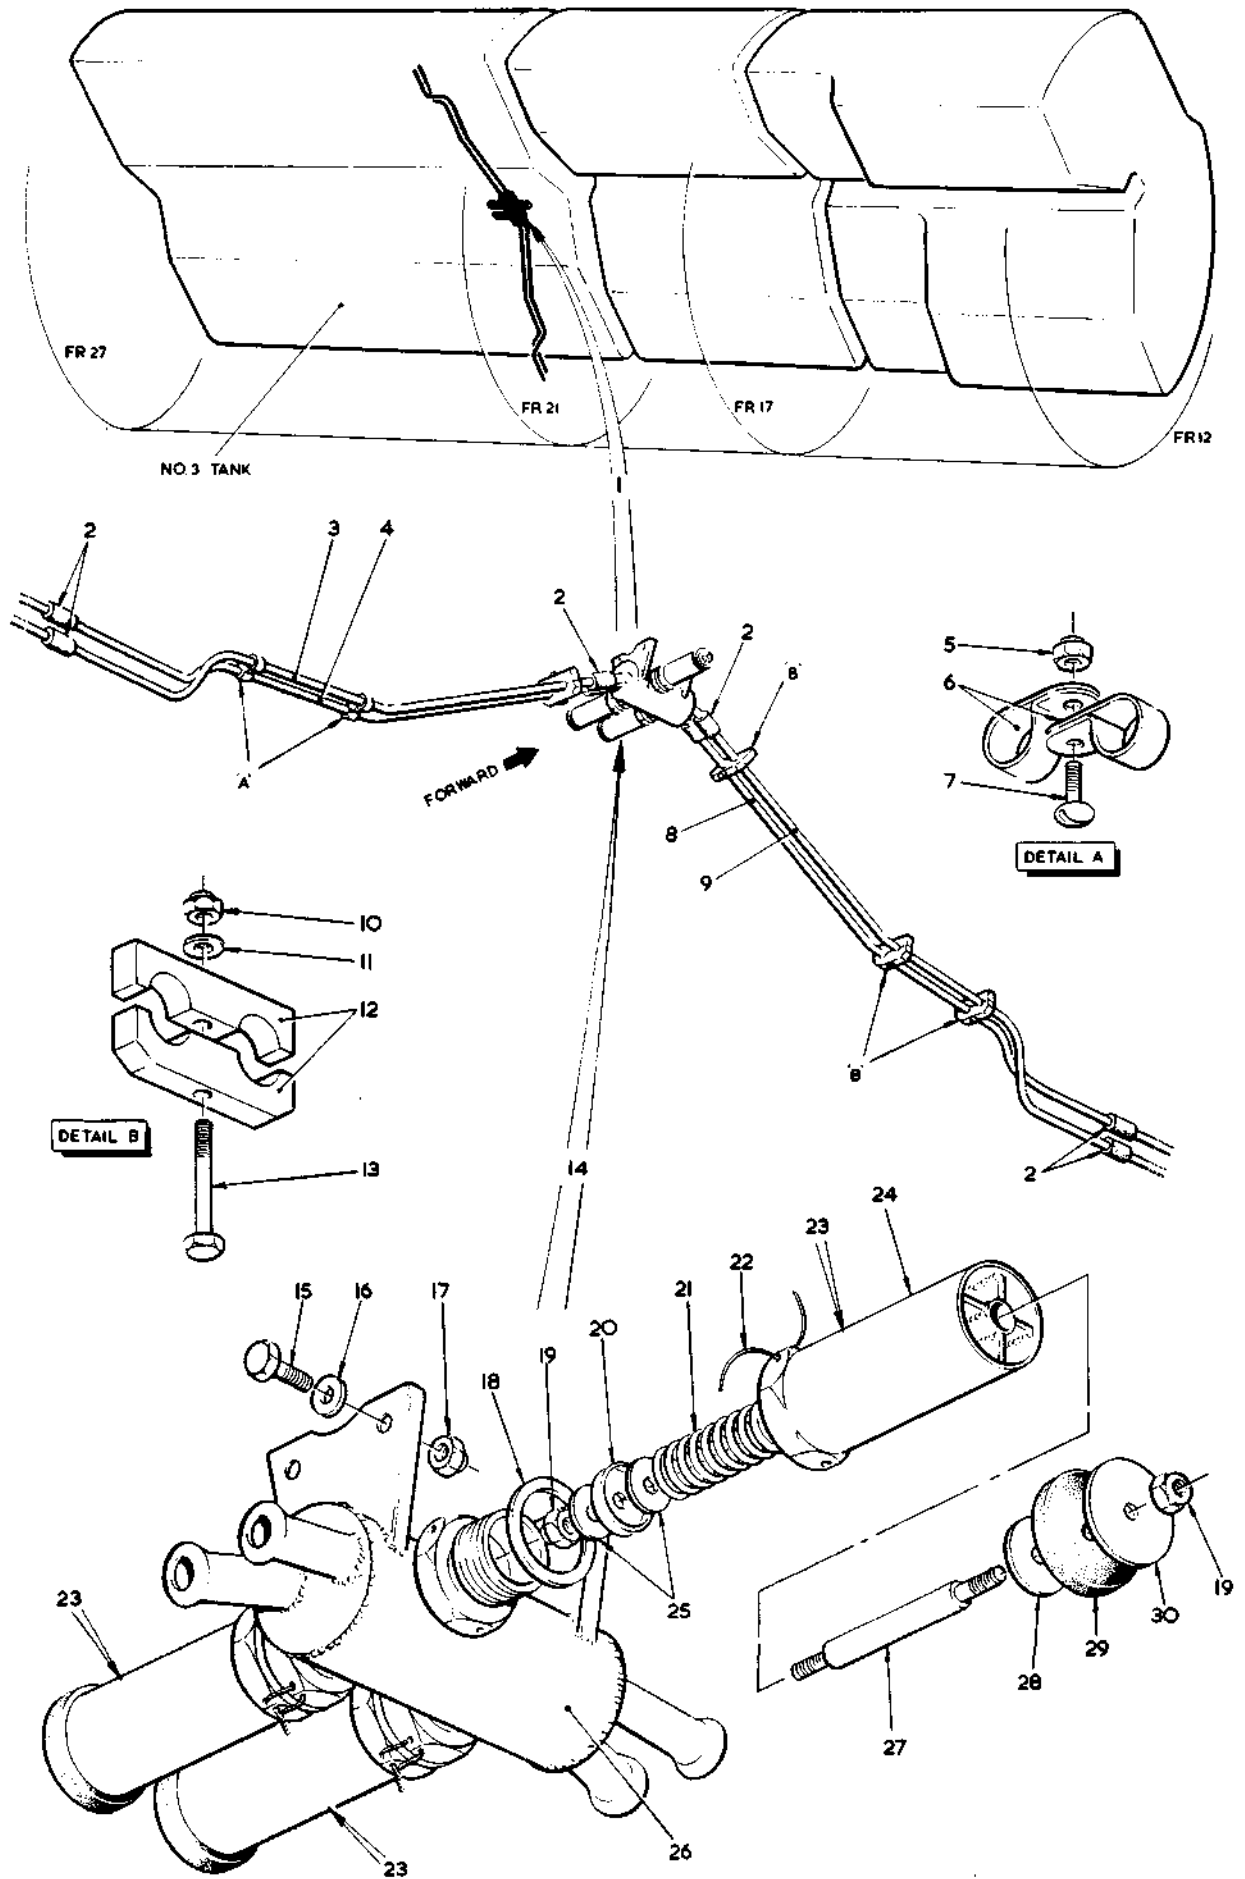

•

•

•

•

•

•

•

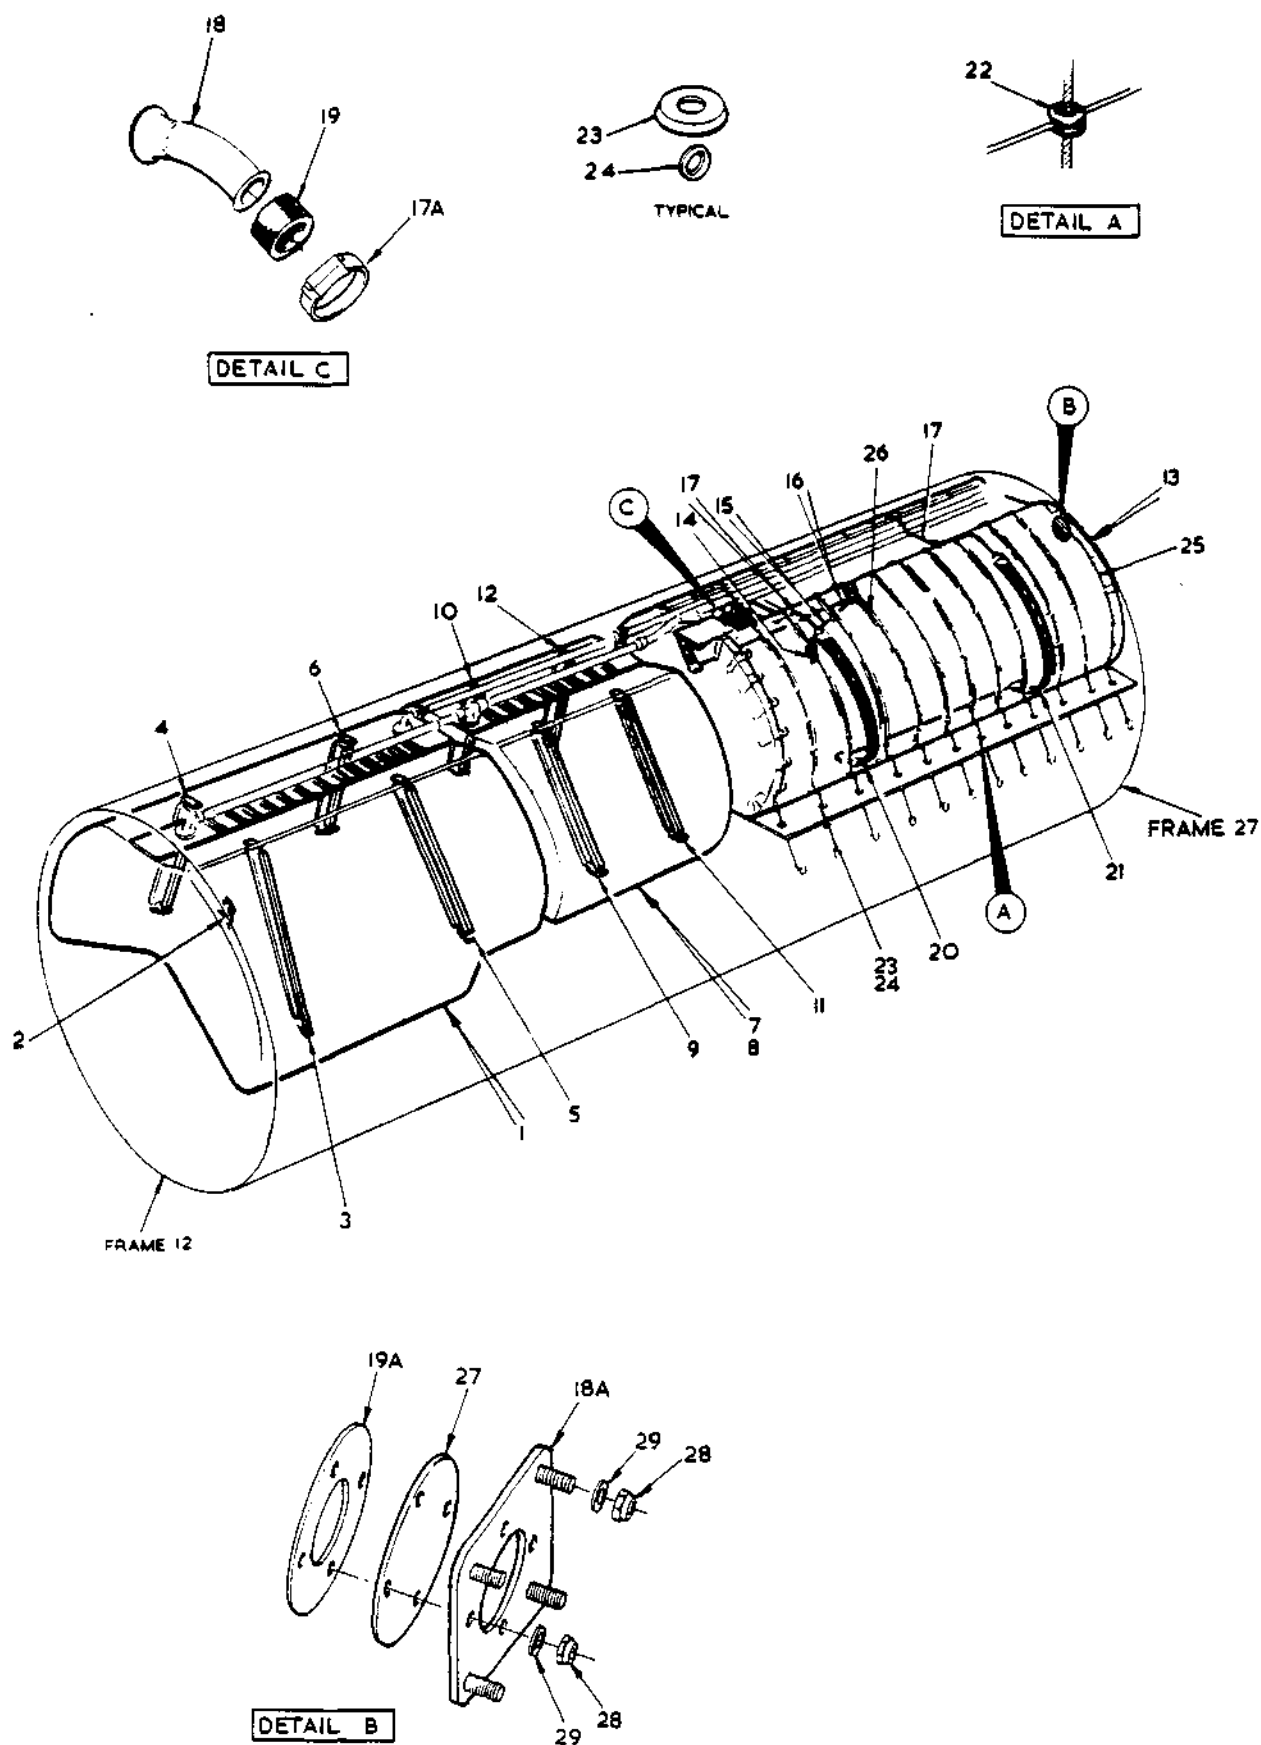


FIG. 40 FUEL SYSTEM IN CENTRE FUSELAGE

T MK 17 SECT N



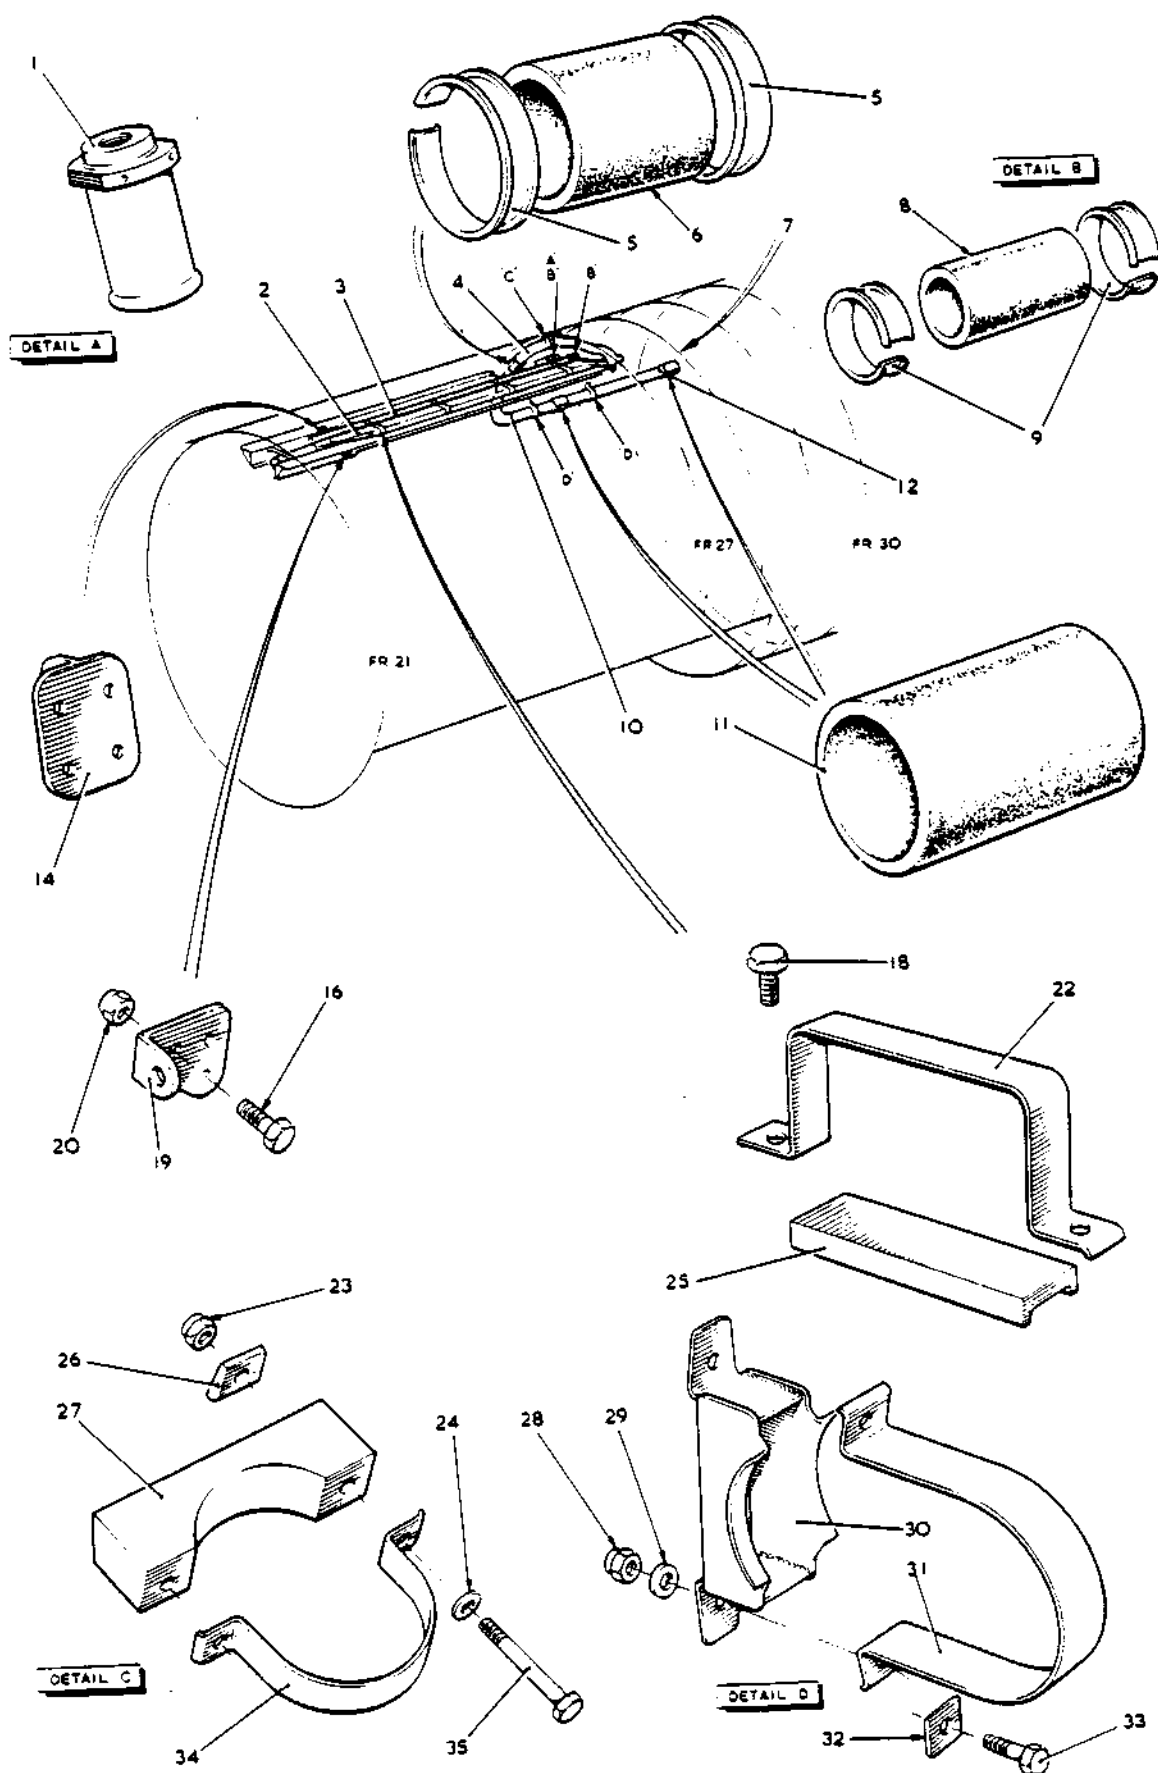


FIG 41 FUEL SYSTEM IN CENTRE FUSELAGE

T MK 17 SECT N

●

●

●

●

●

●

●

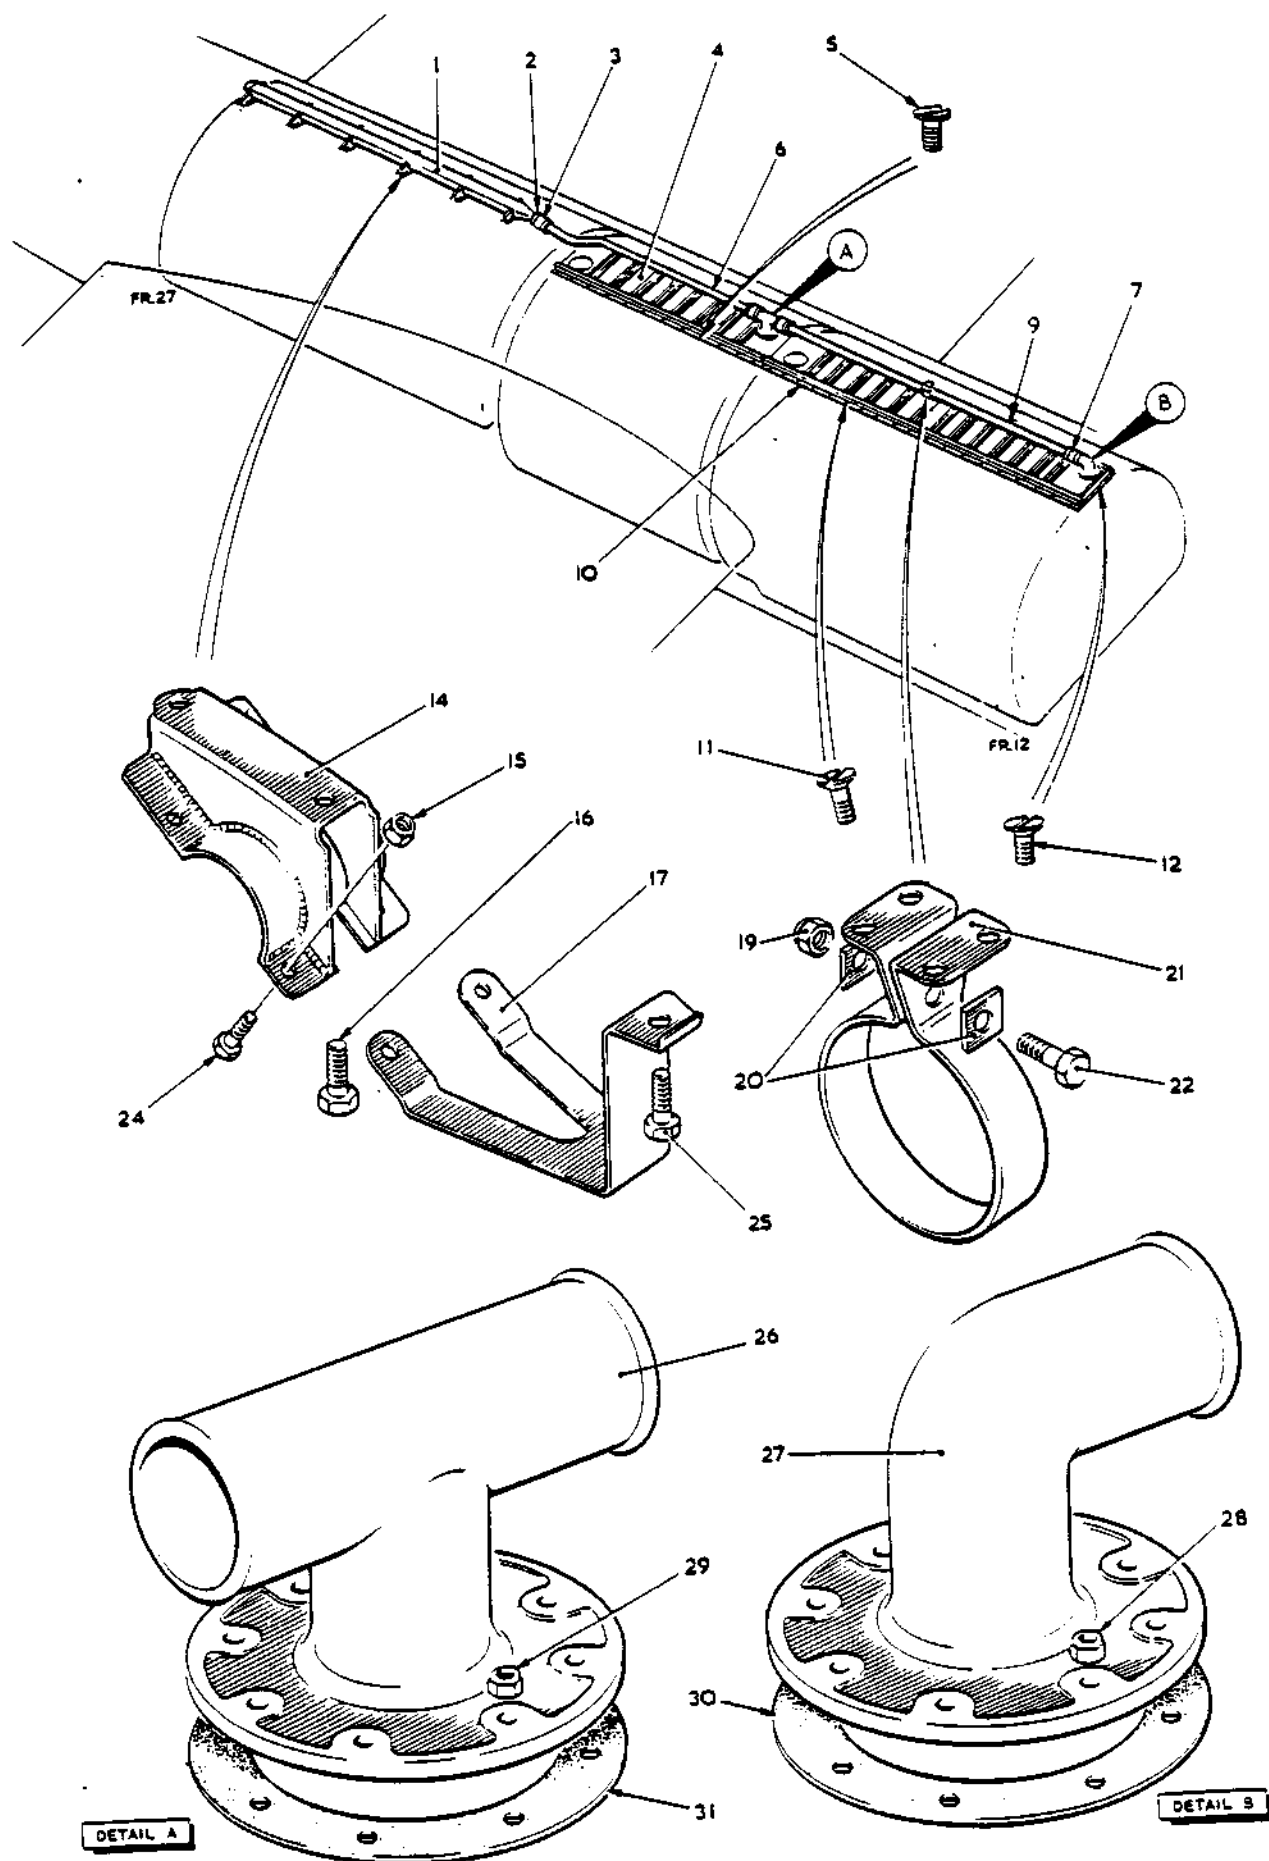


FIG. 43 FUEL SYSTEM IN CENTRE FUSELAGE

T MK 17 SECT N

•

•

•

•

•

•

•

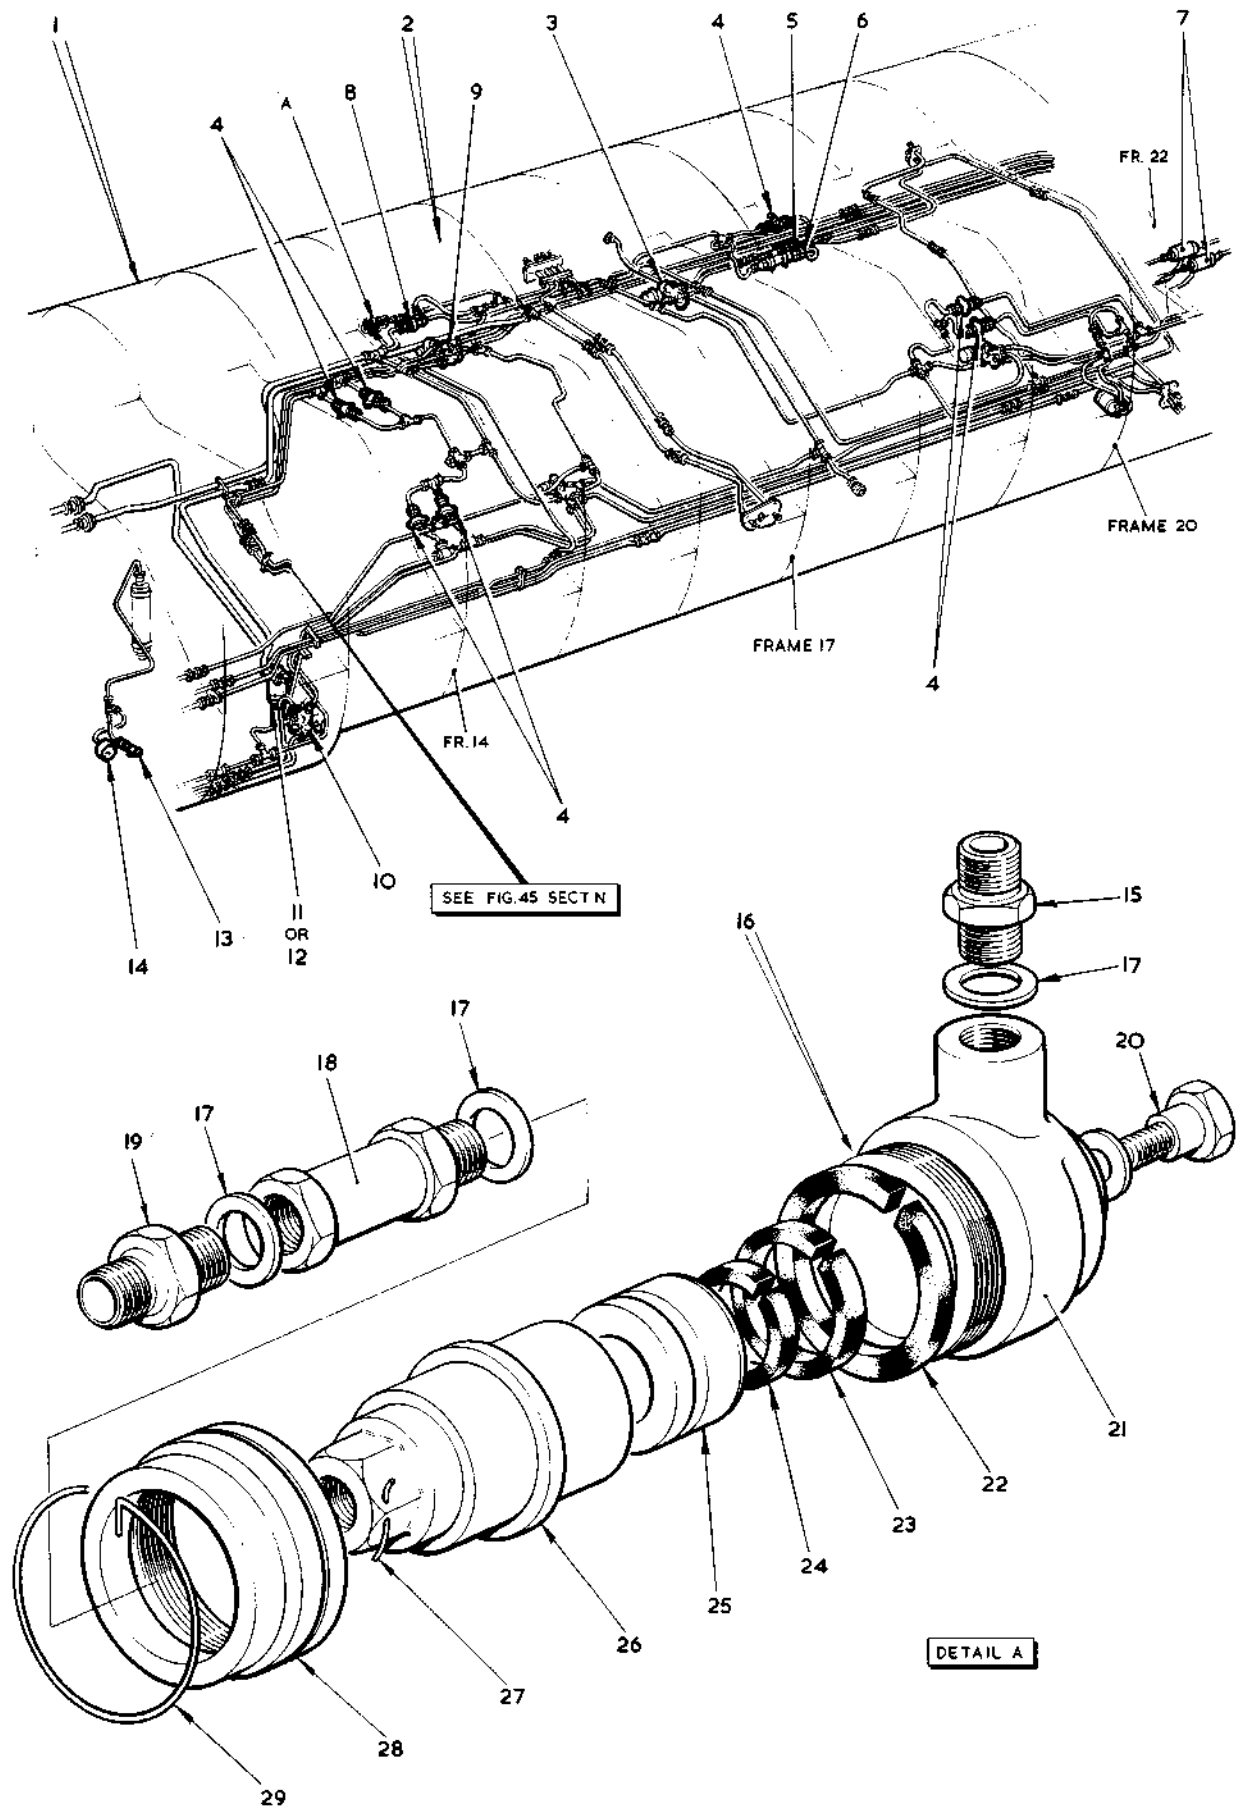


FIG 44 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

1

2

3

4

5

6

7

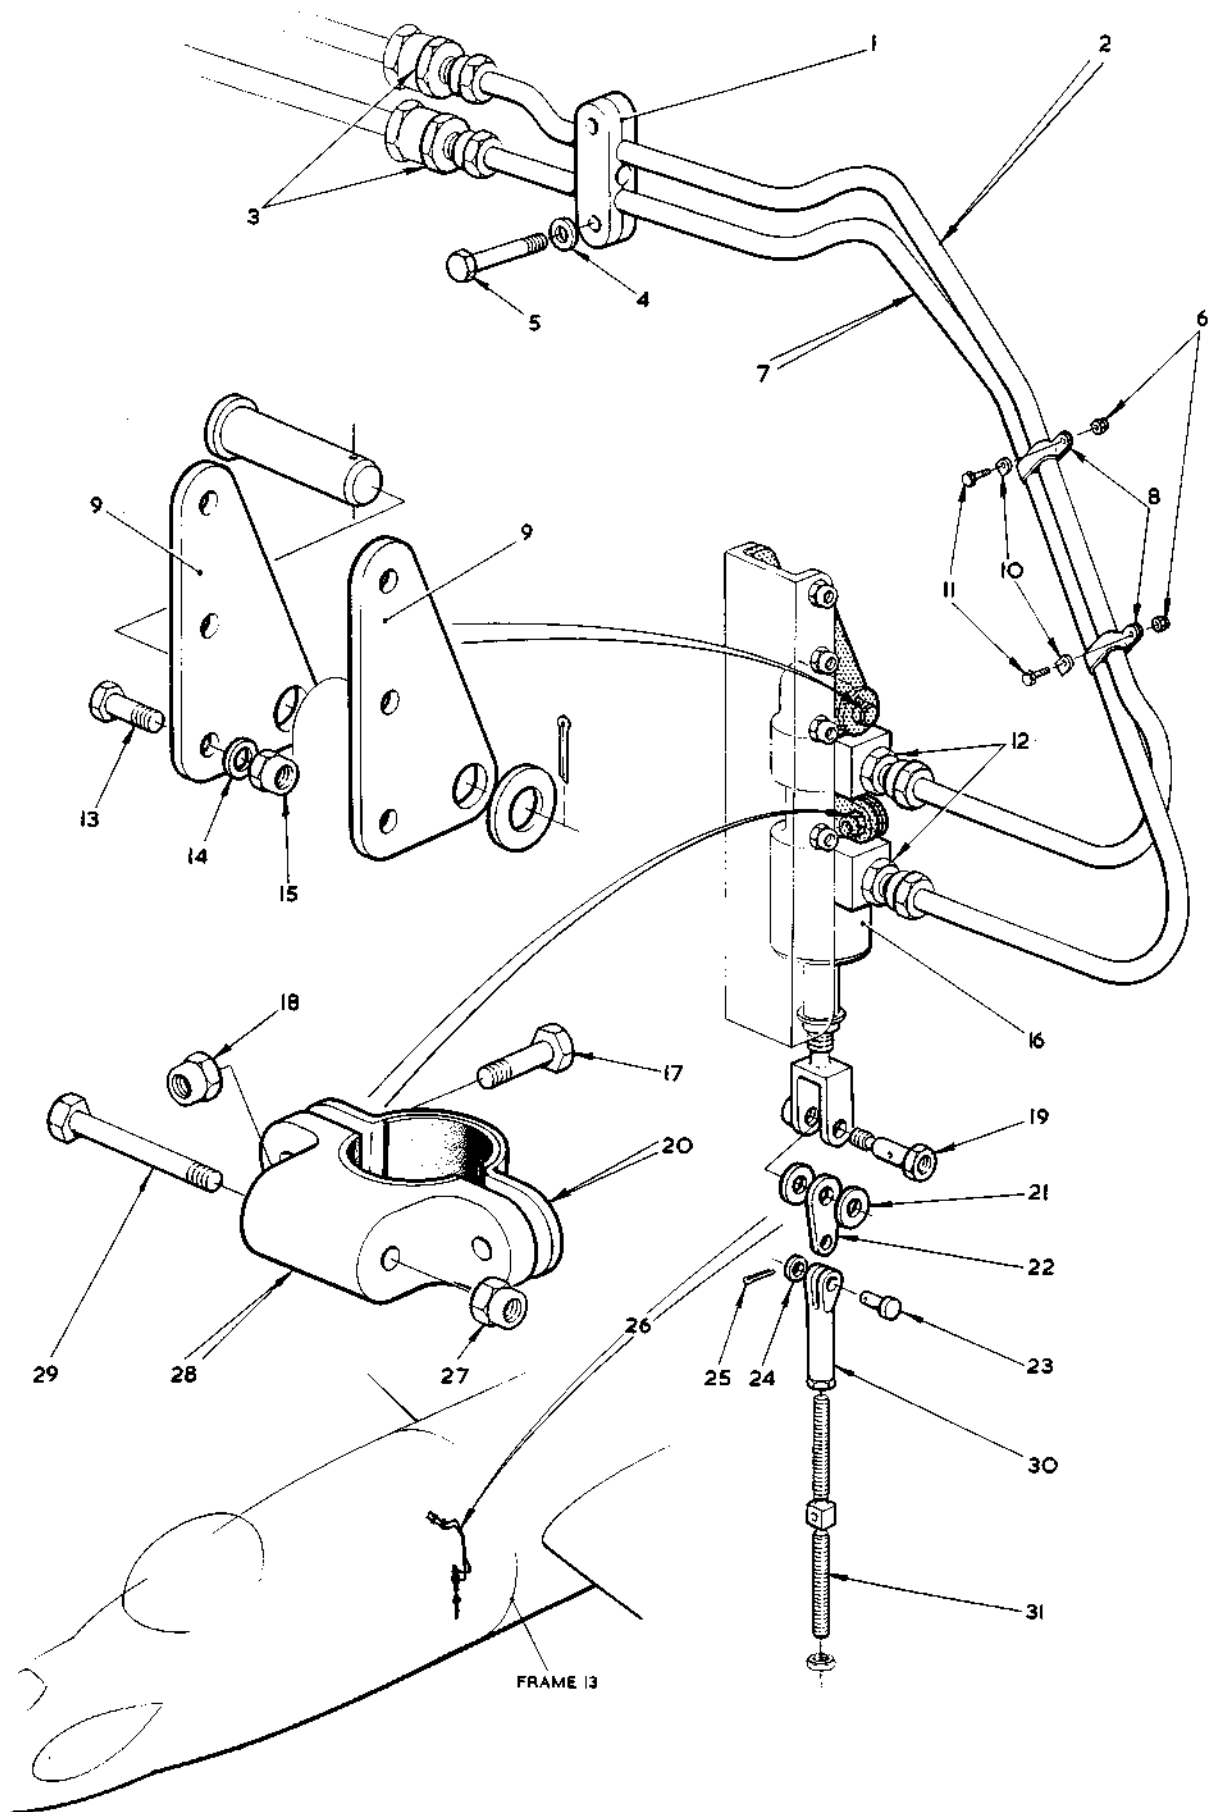


FIG 45 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

1

2

3

4

5

6

7

Restricted

AL.3

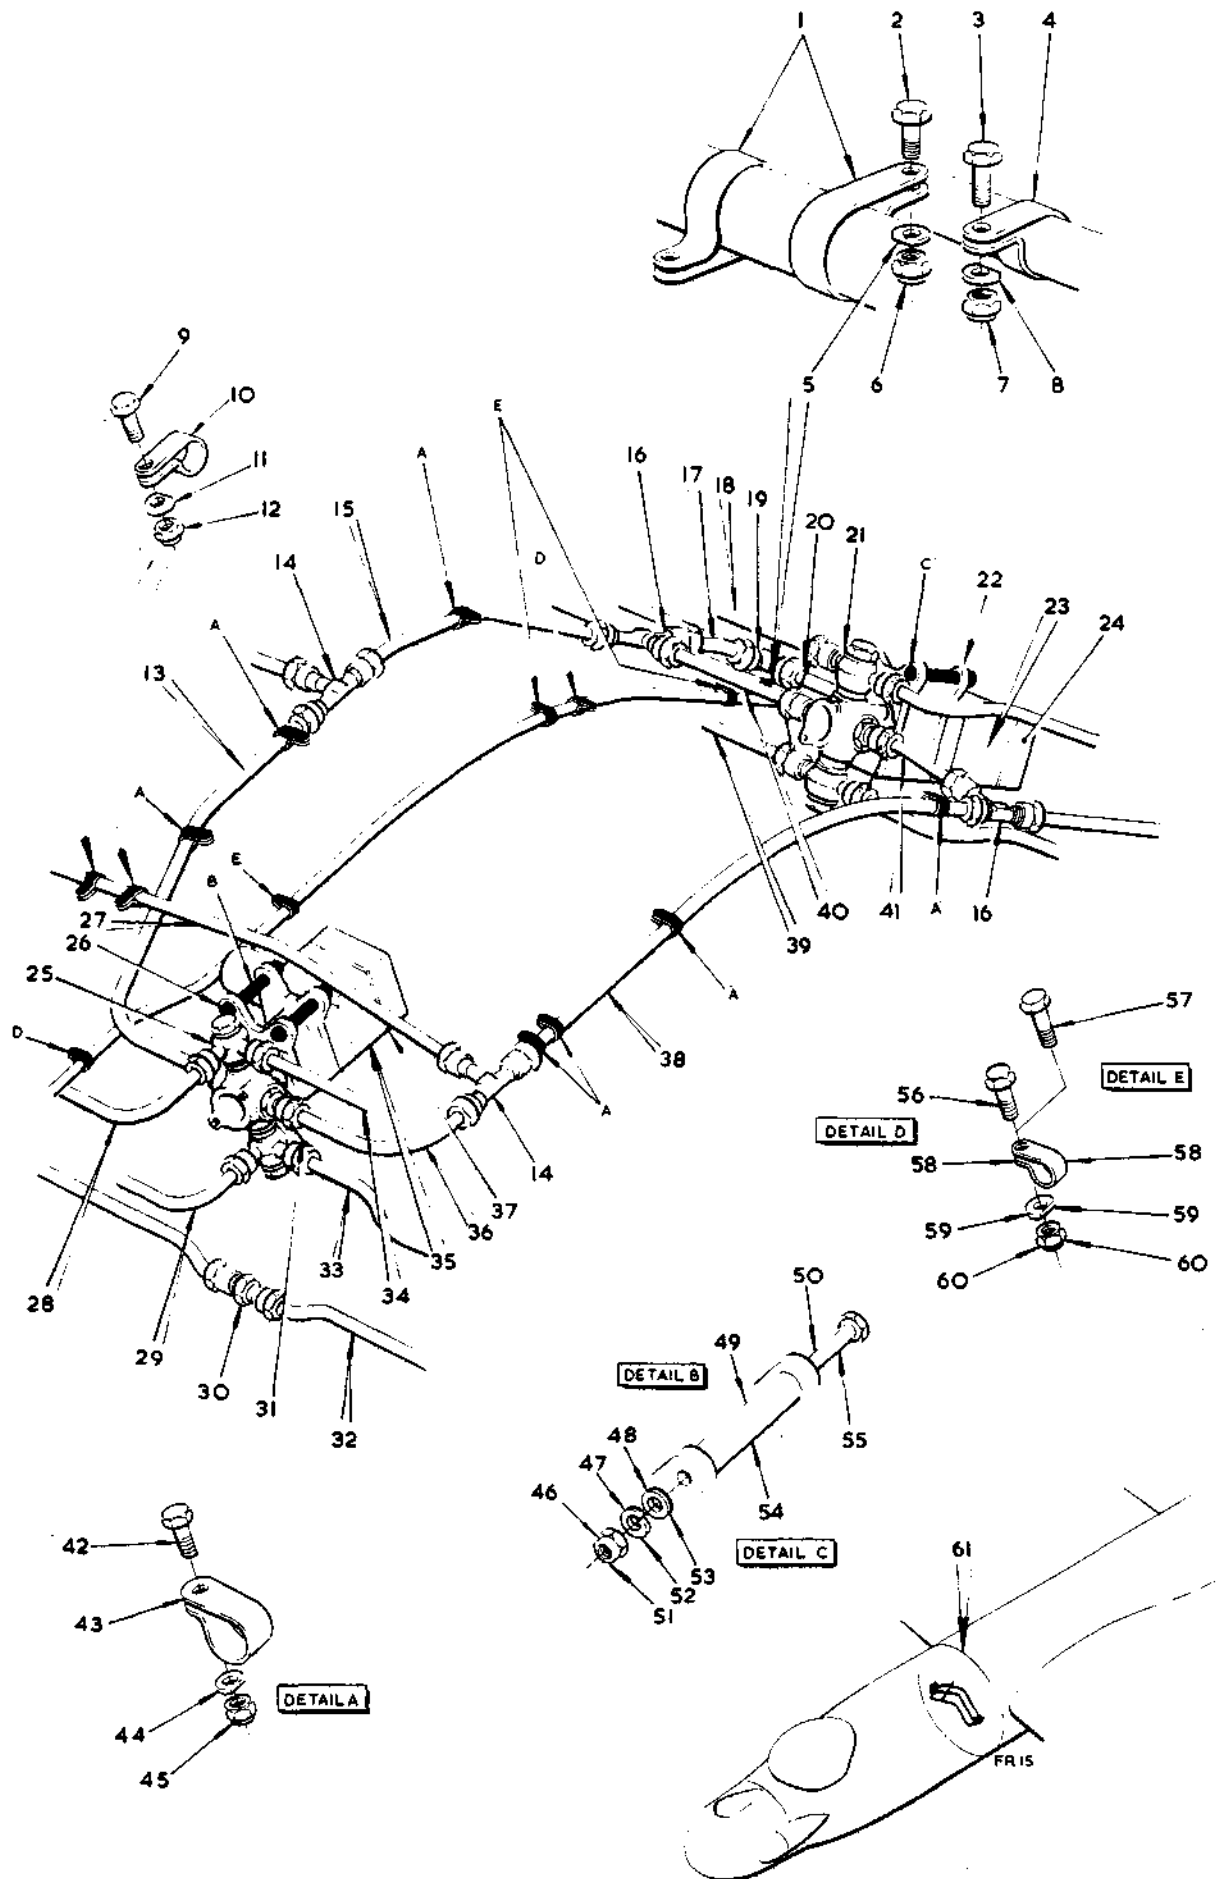


FIG.46 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Restricted

T MK. 17 SECT. N

●

●

●

●

●

●

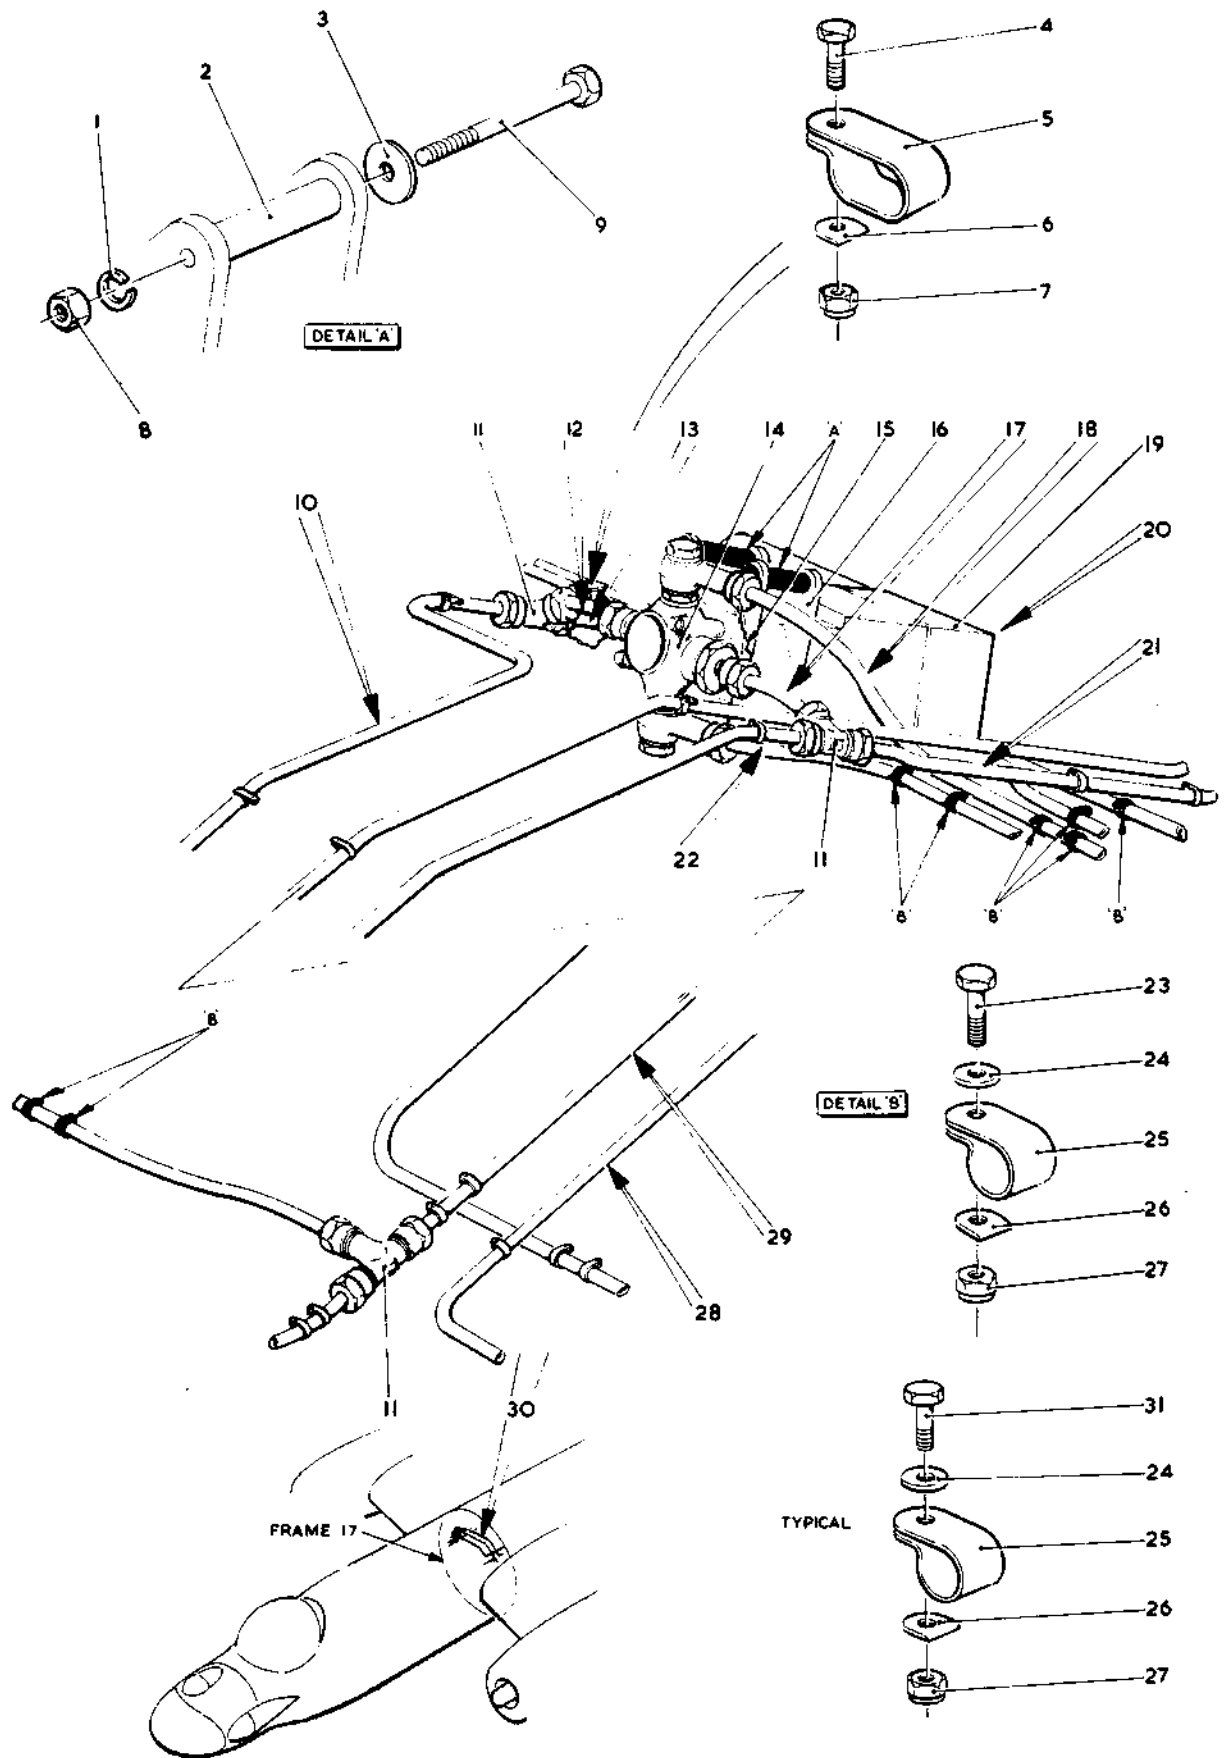


FIG 47. HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

•

•

•

•

•

•

•

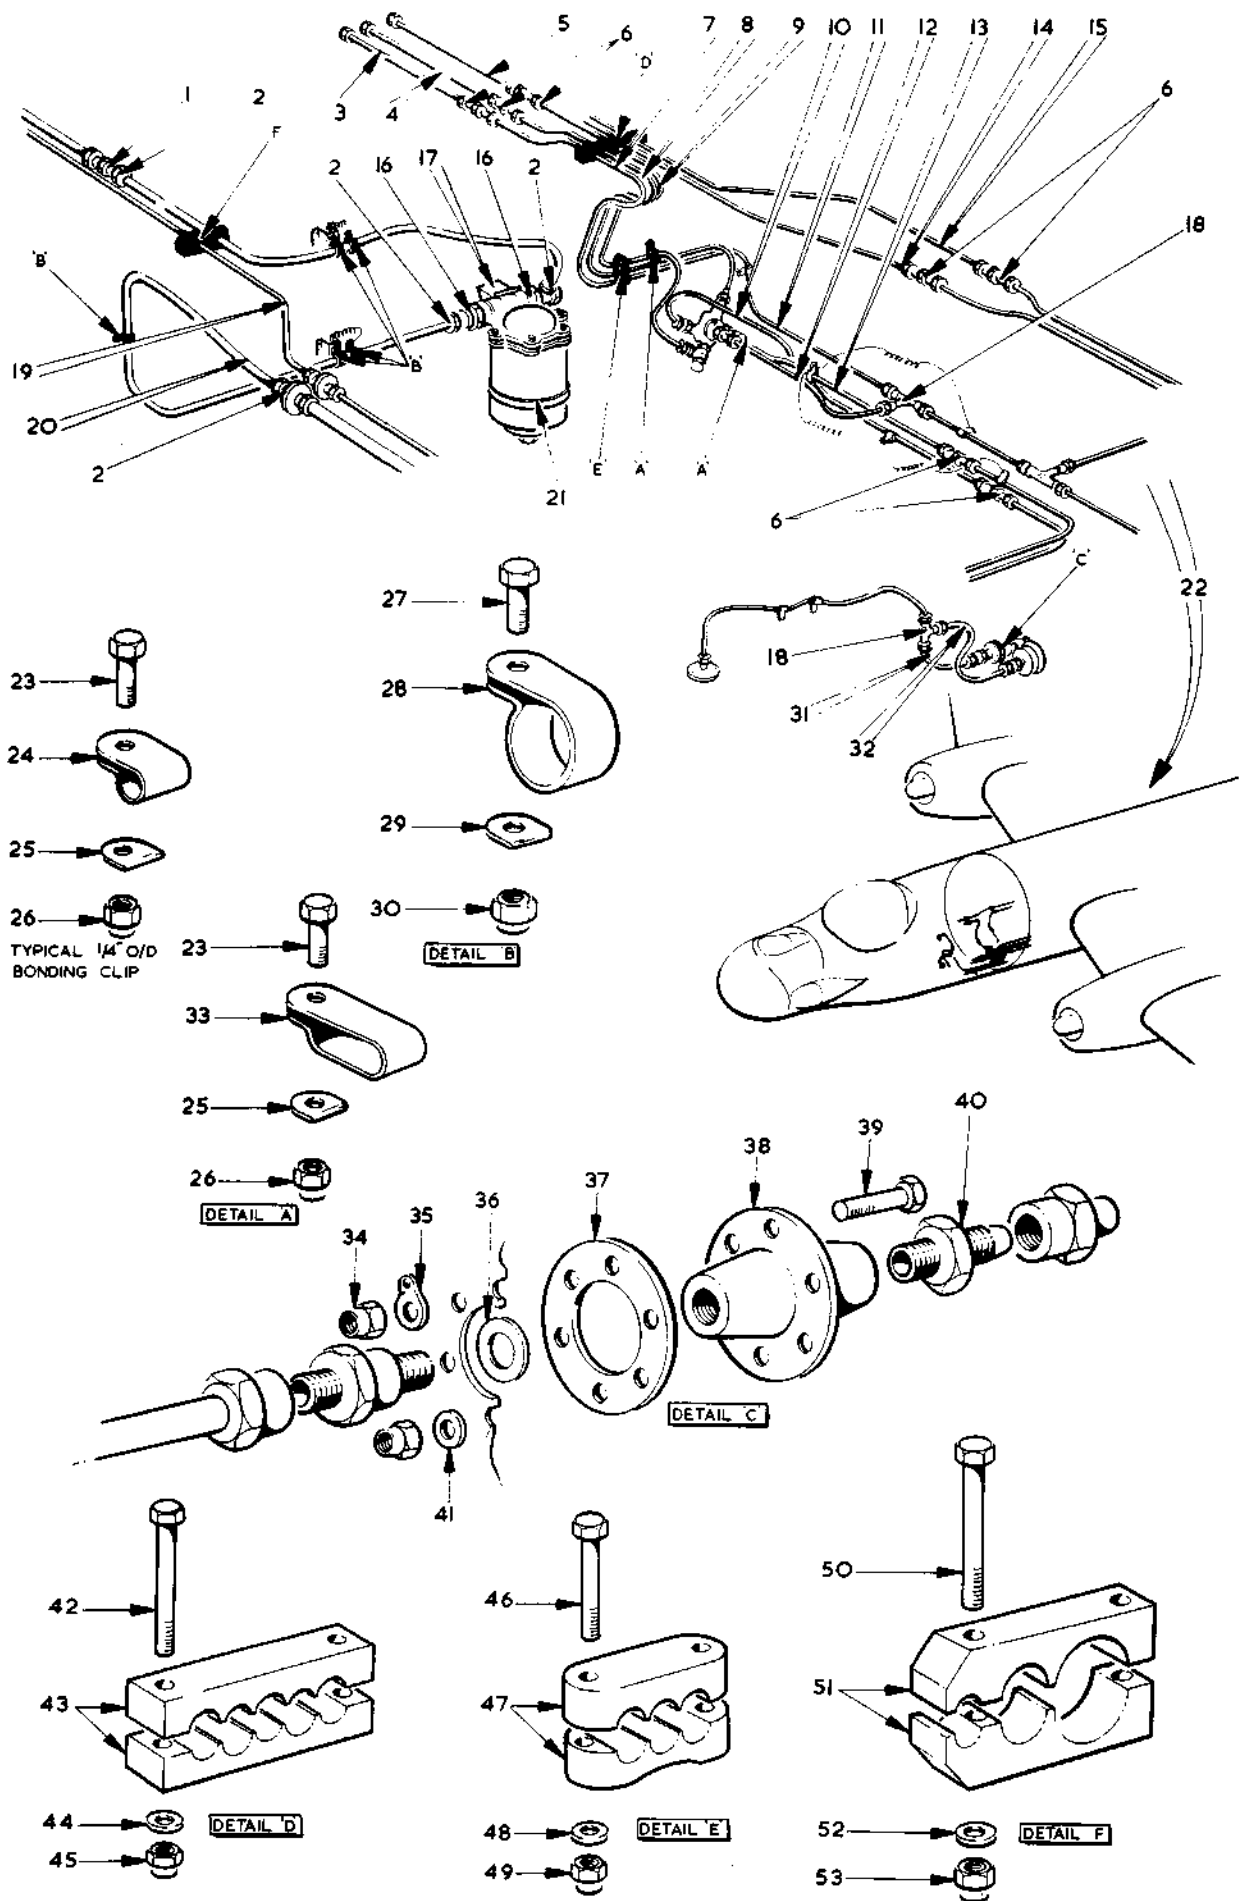


FIG. 48 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

1

2

3

4

5

6

7

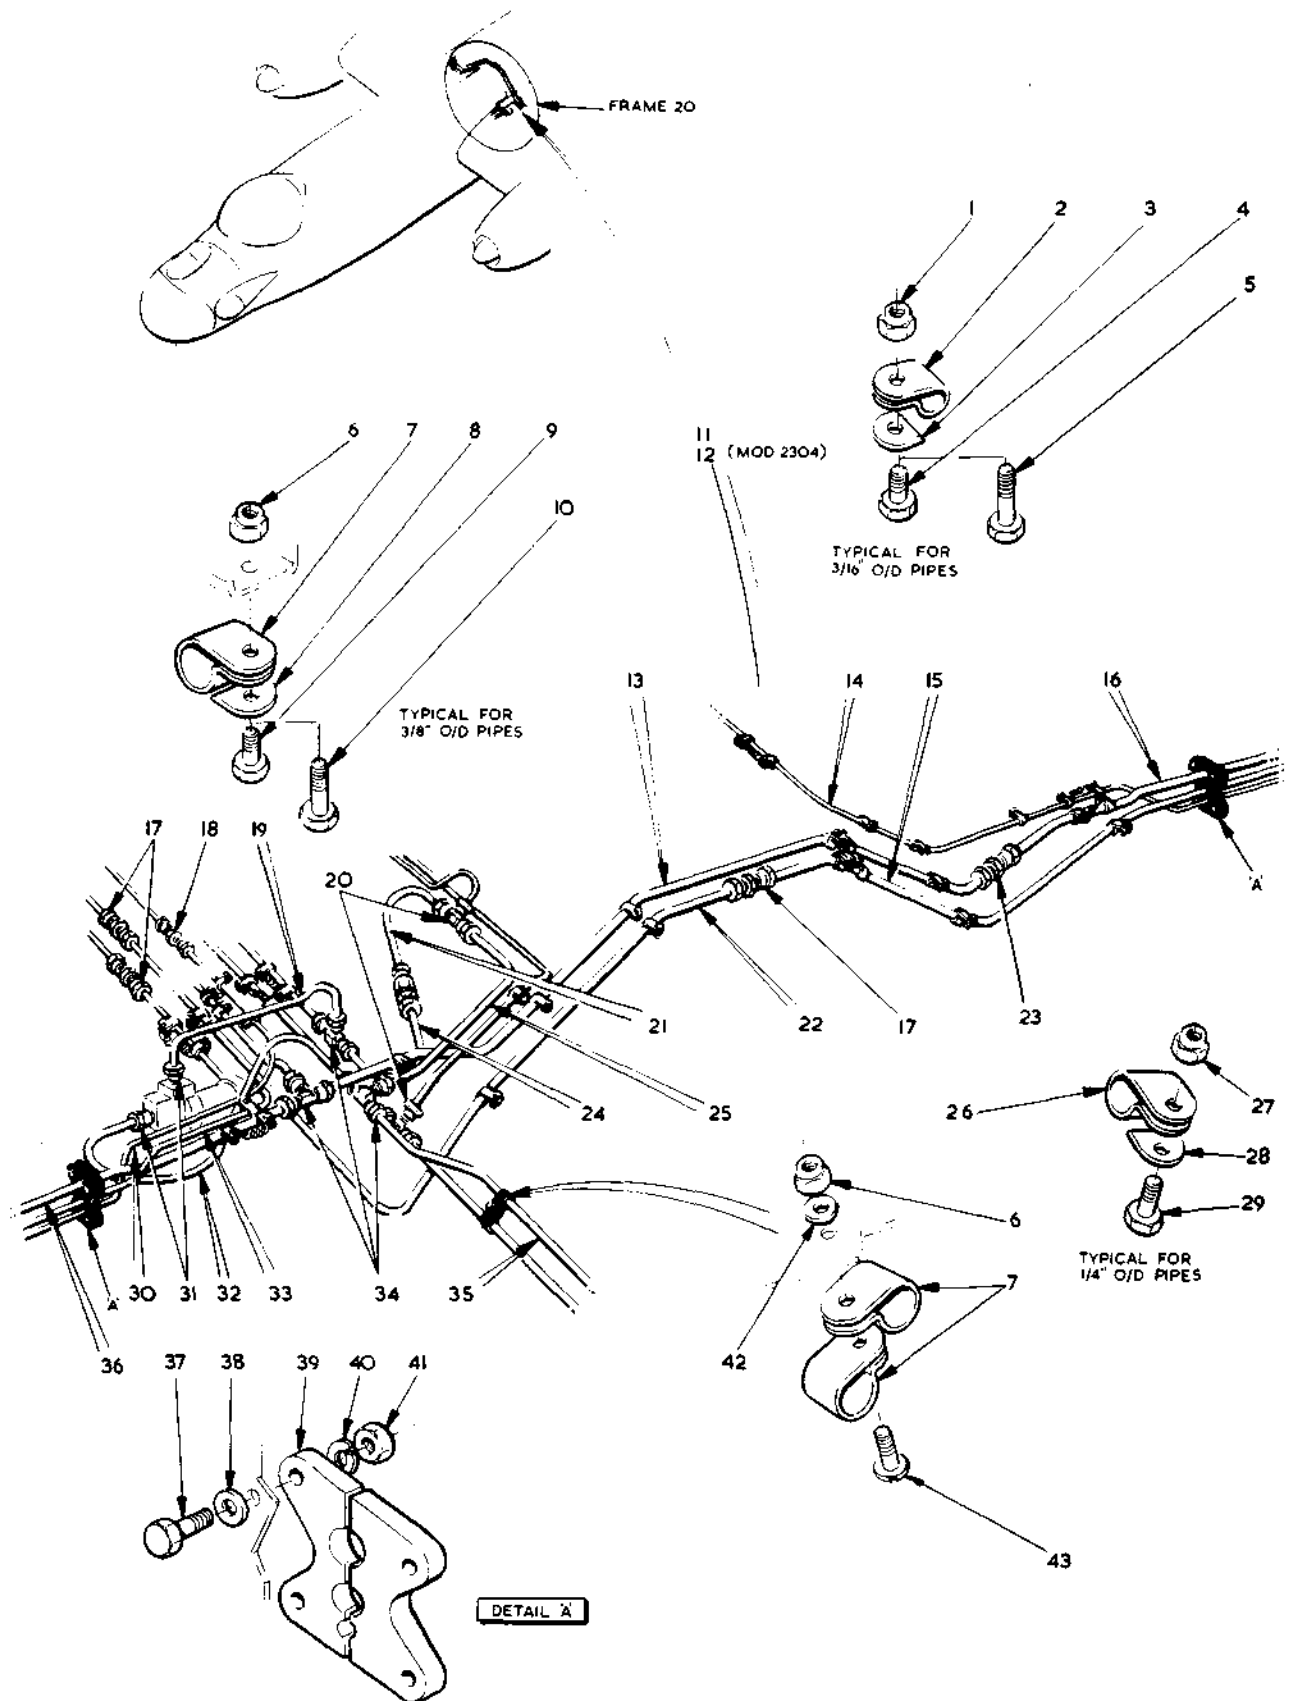


FIG. 49 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

1

2

3

4

5

6

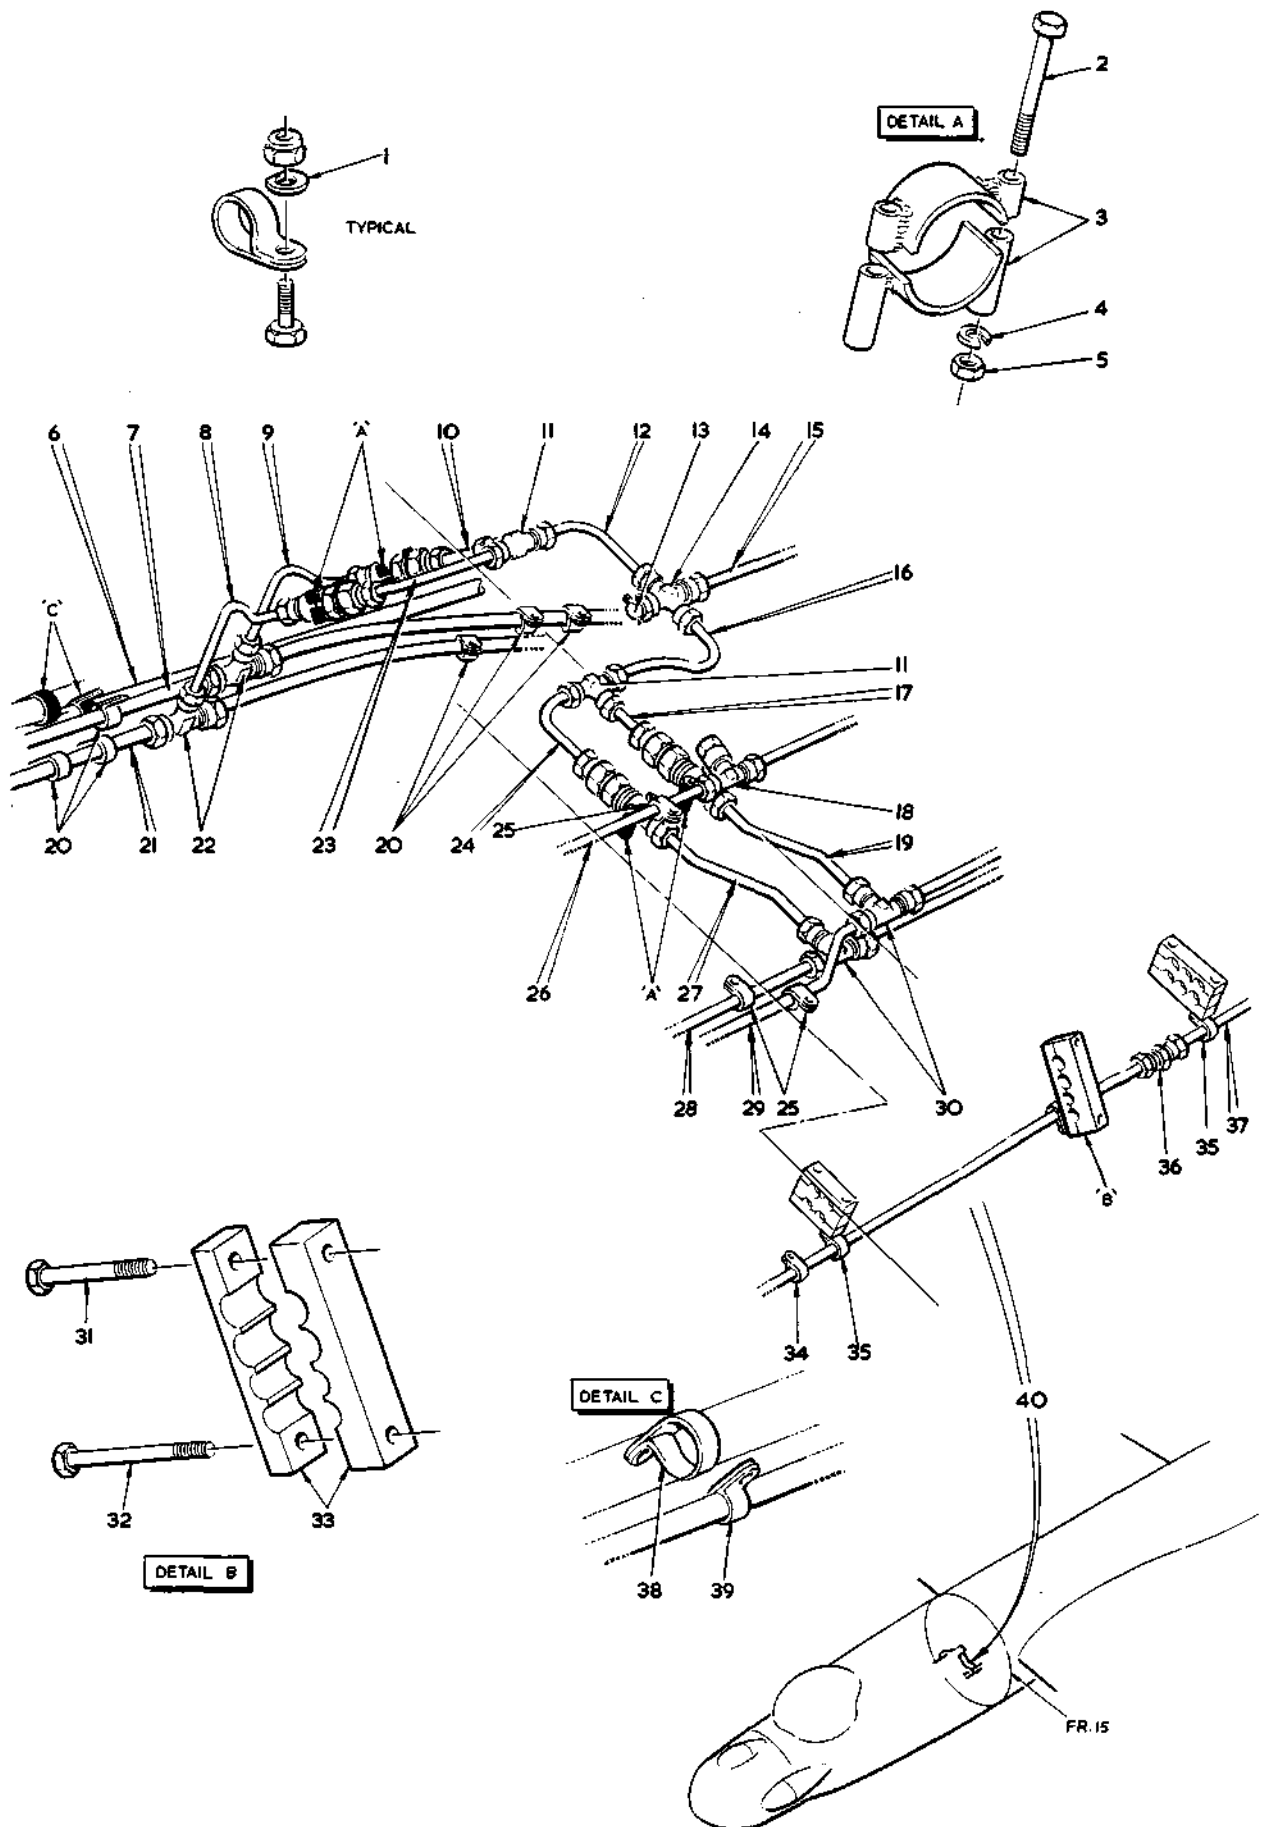


FIG.50 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

1

2

3

4

5

6

7

Restricted

AL.3

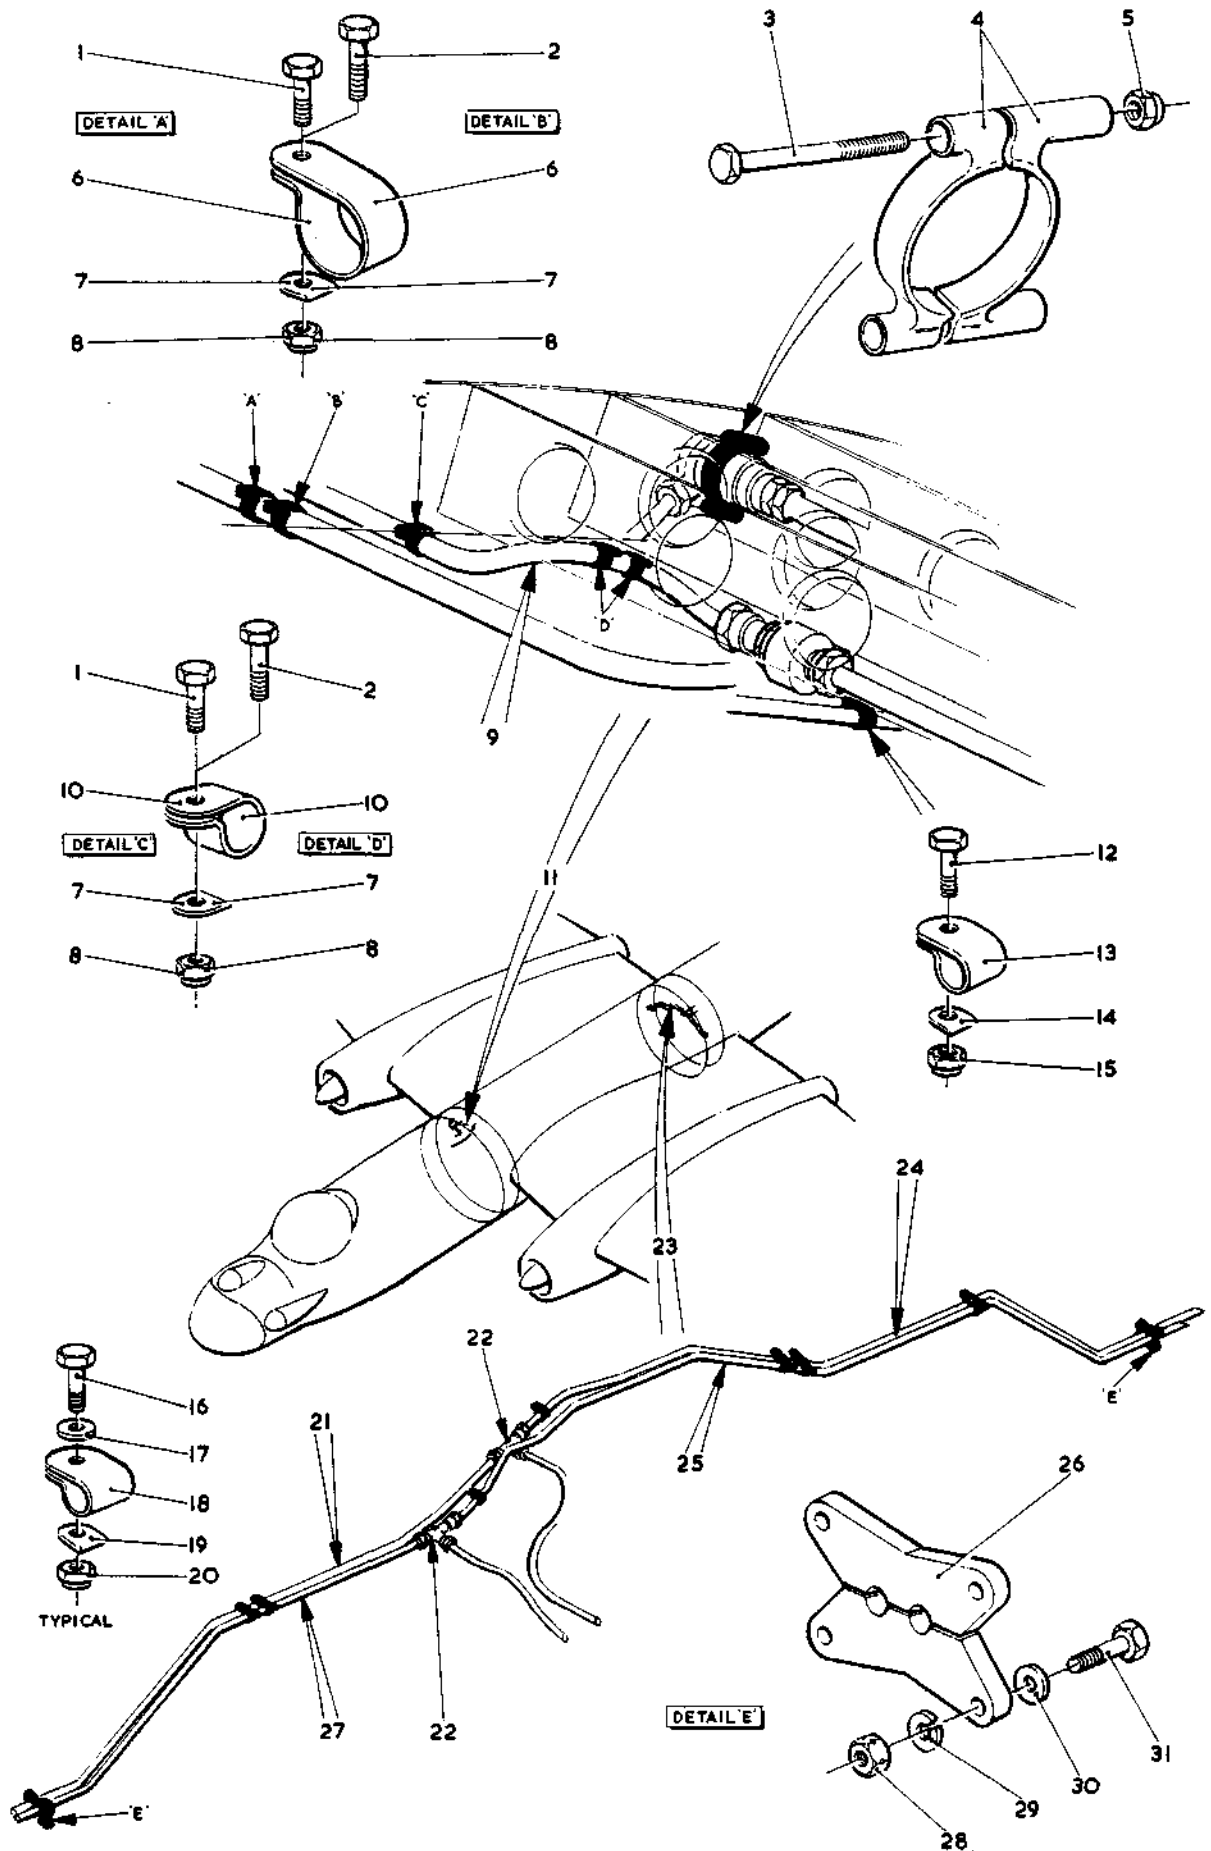


FIG 51. HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

T. MK.17, SECT. N

●

●●

●

●●

●●

●●

●●●●●

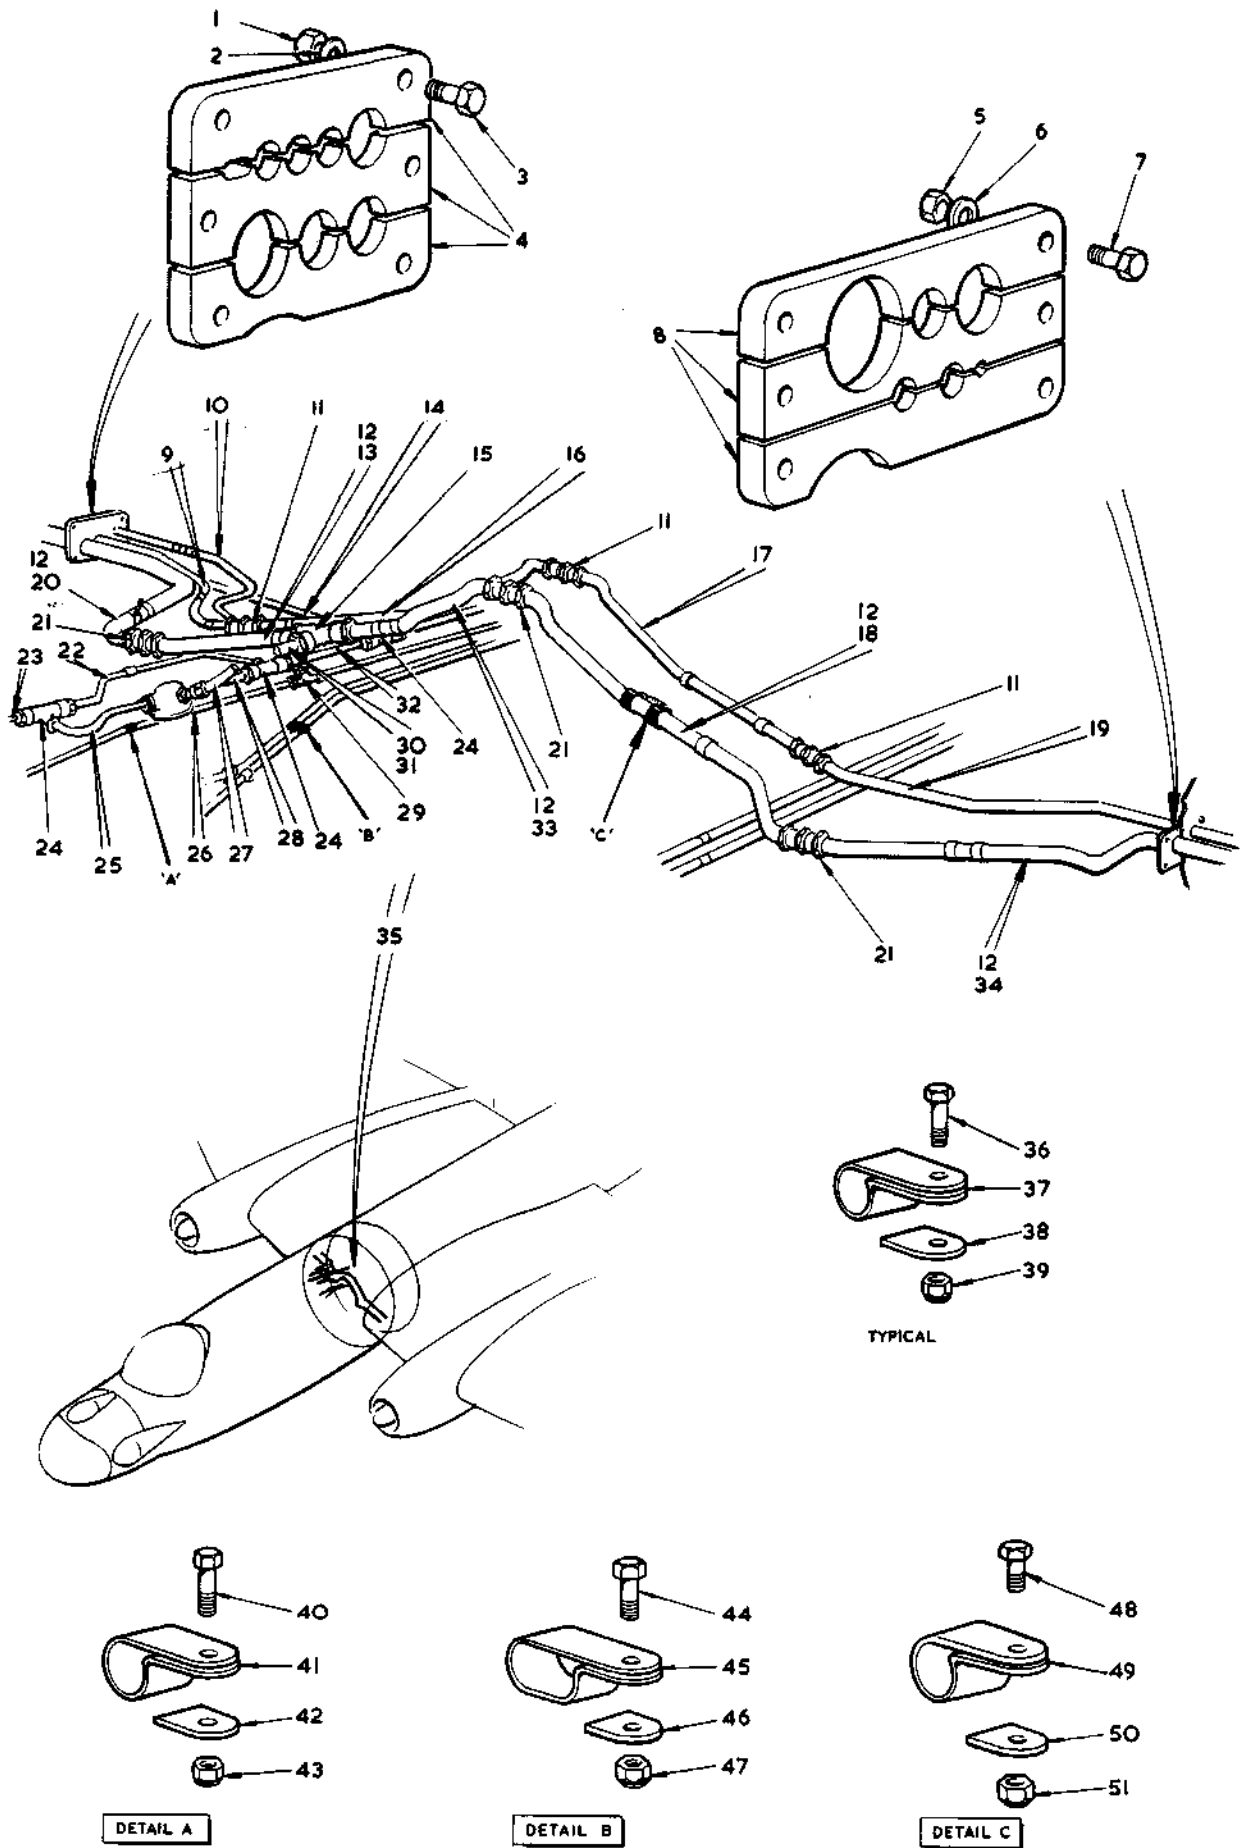


FIG 52. HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

●

●

●

●

●

●

●

Restricted

A.L.3

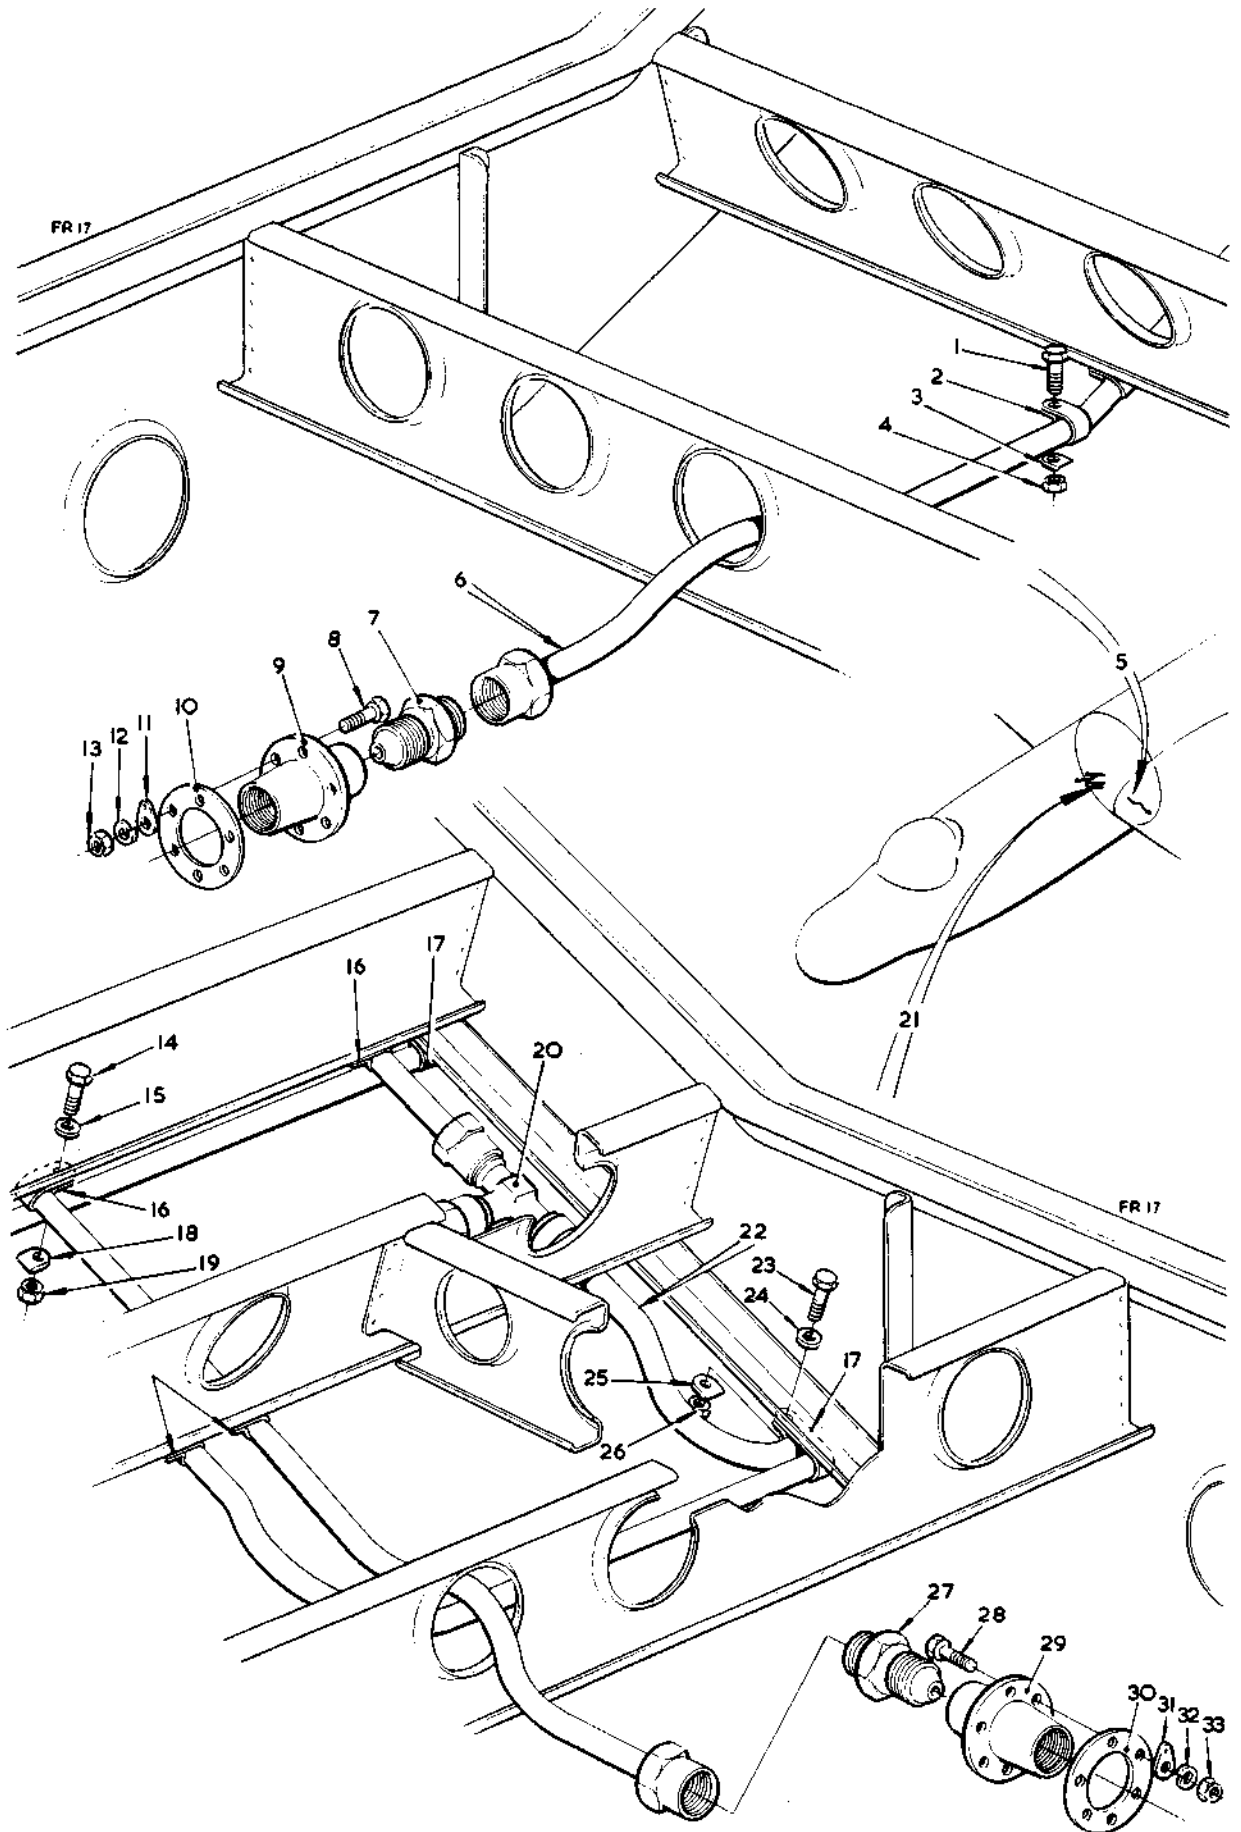


FIG.53 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE

Restricted

T MK.17 SECT. N

●

●

●

●

●

●

●

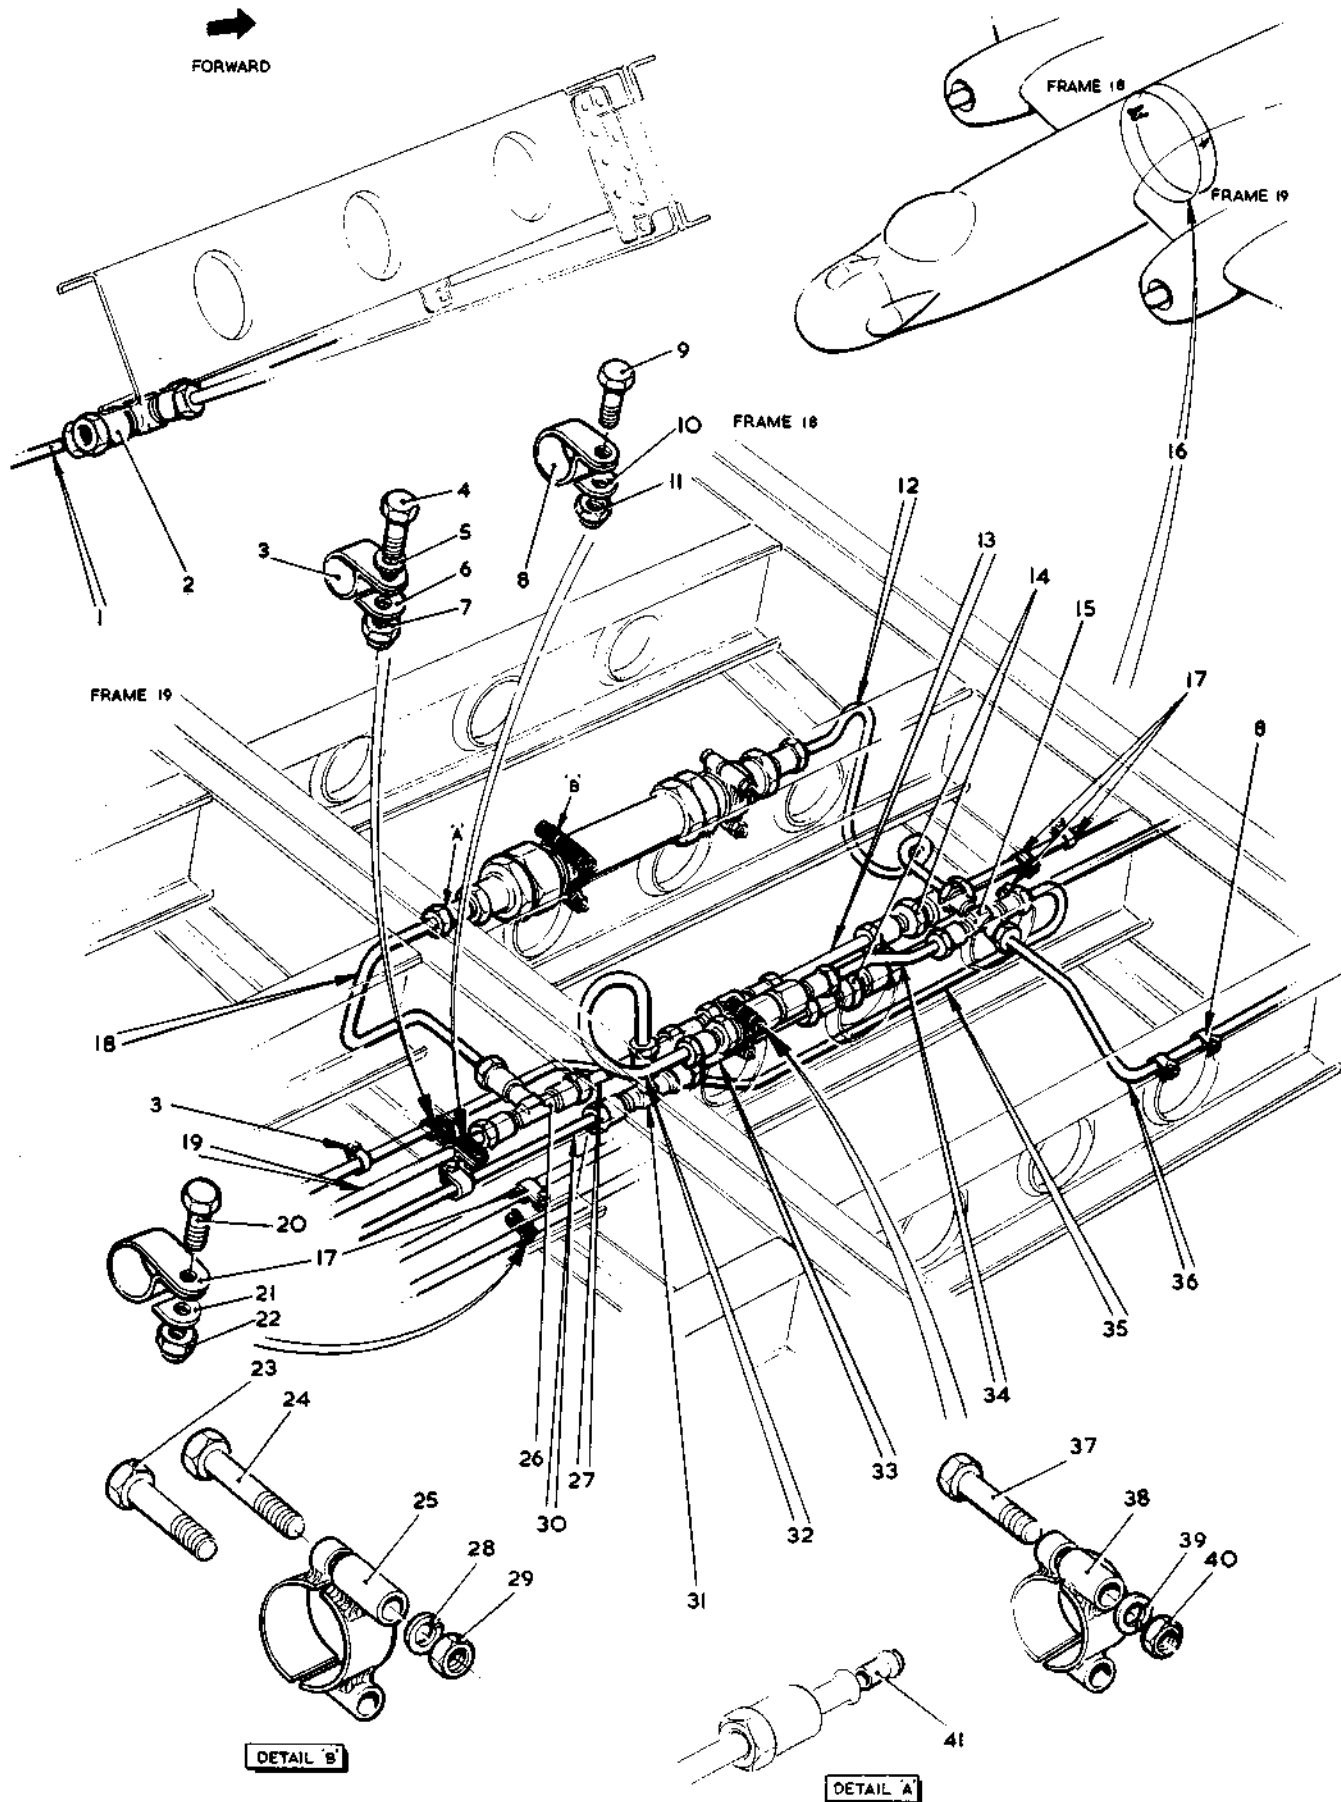


FIG. 54 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

●

●

●

●

●

●

●

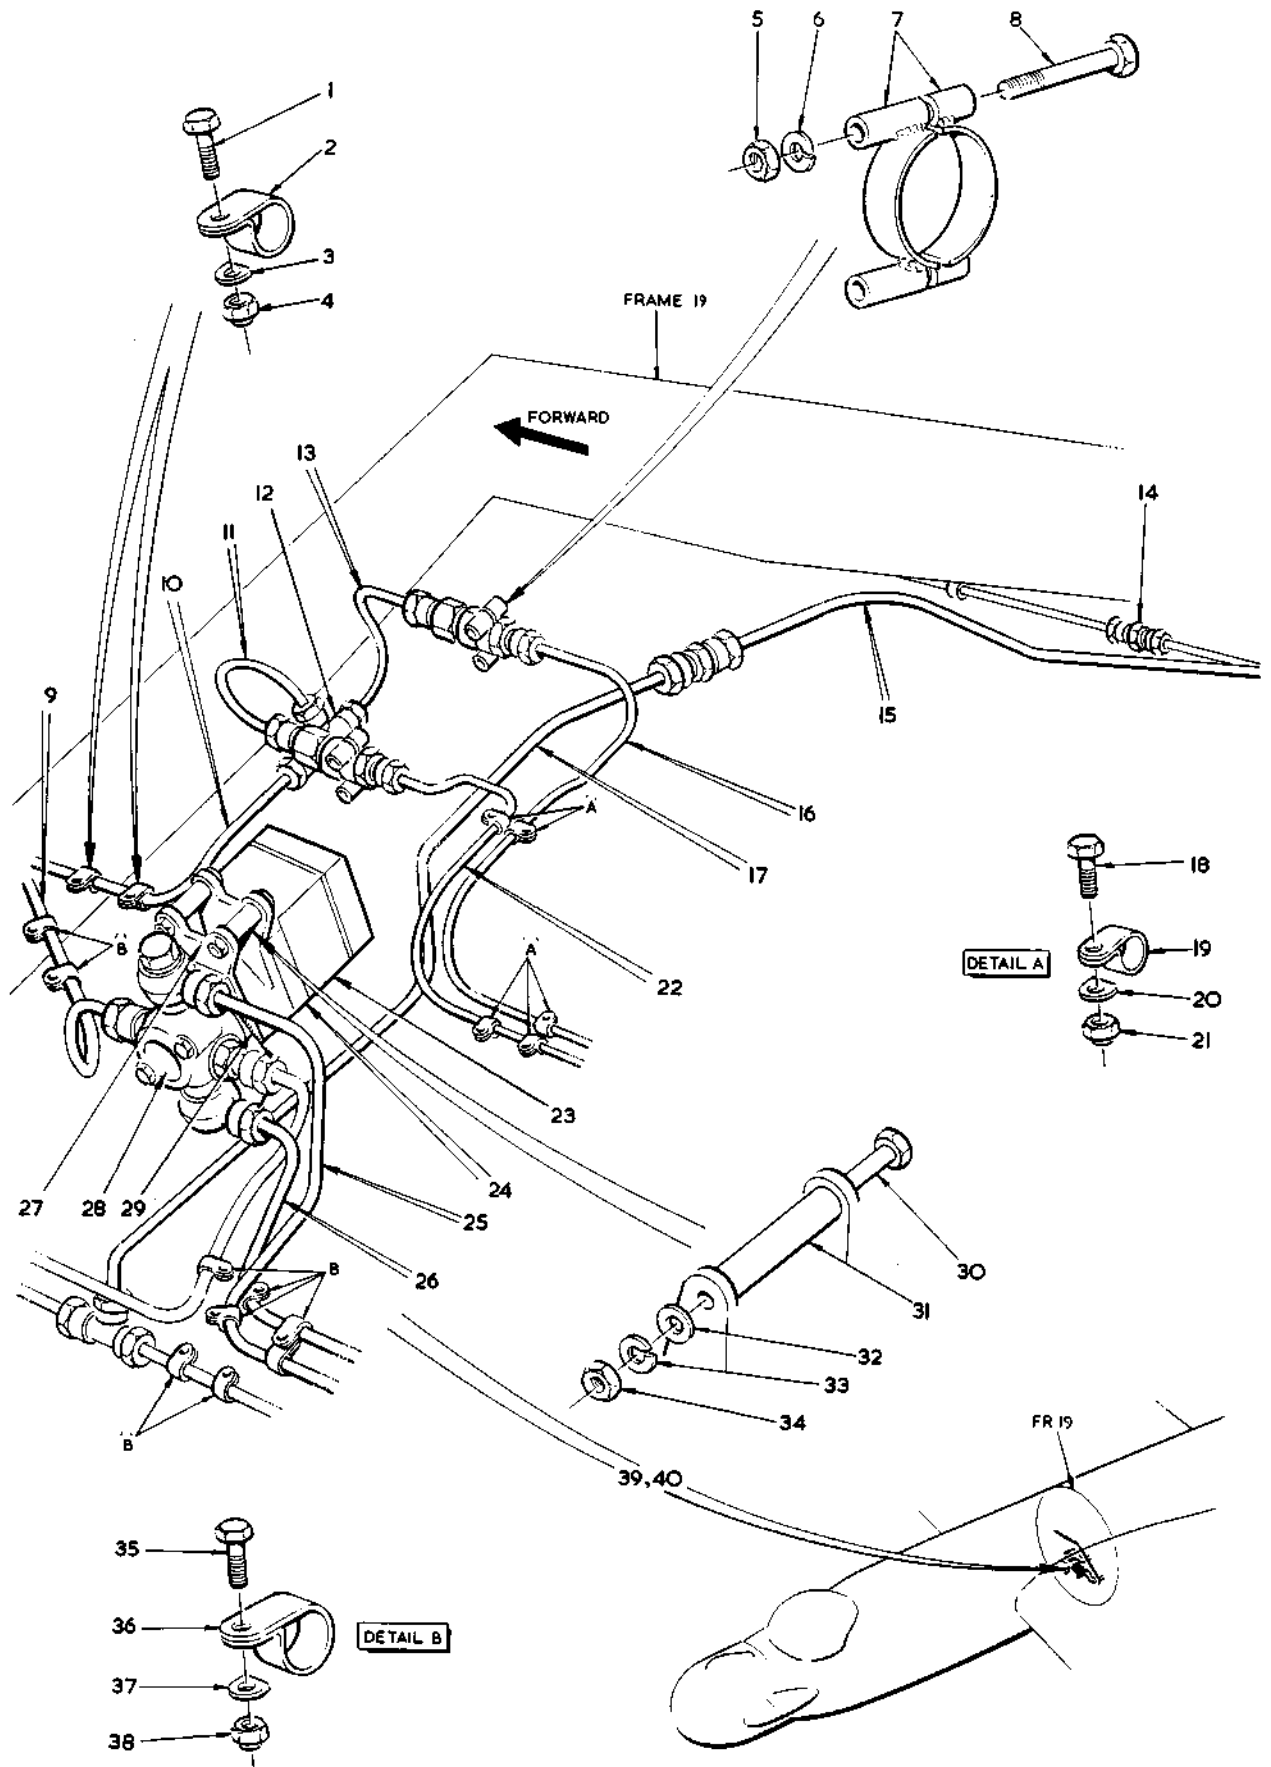


FIG.55 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted

1

2

3

4

5

6

7

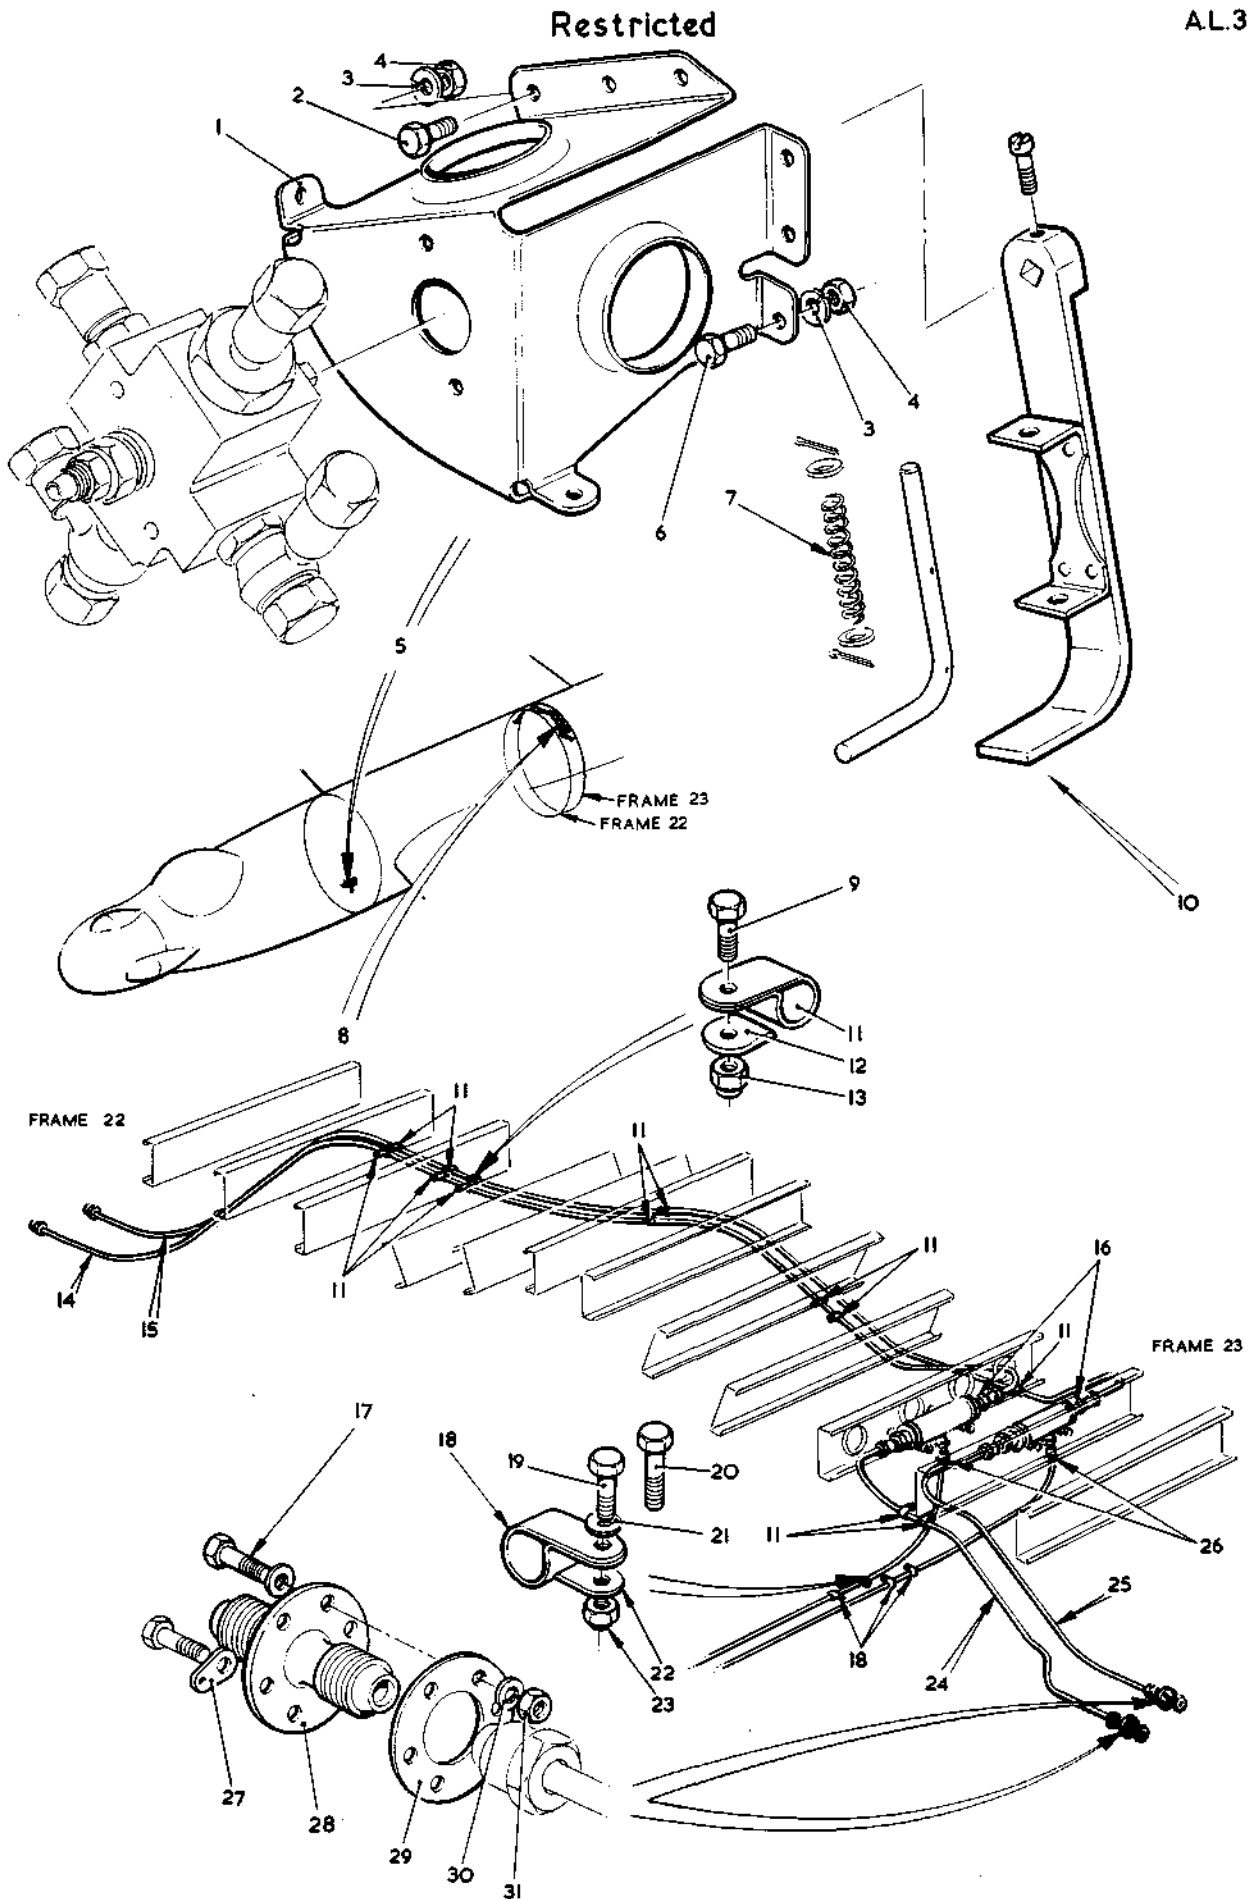


FIG. 56 HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE
Restricted



Restricted

A.L.3

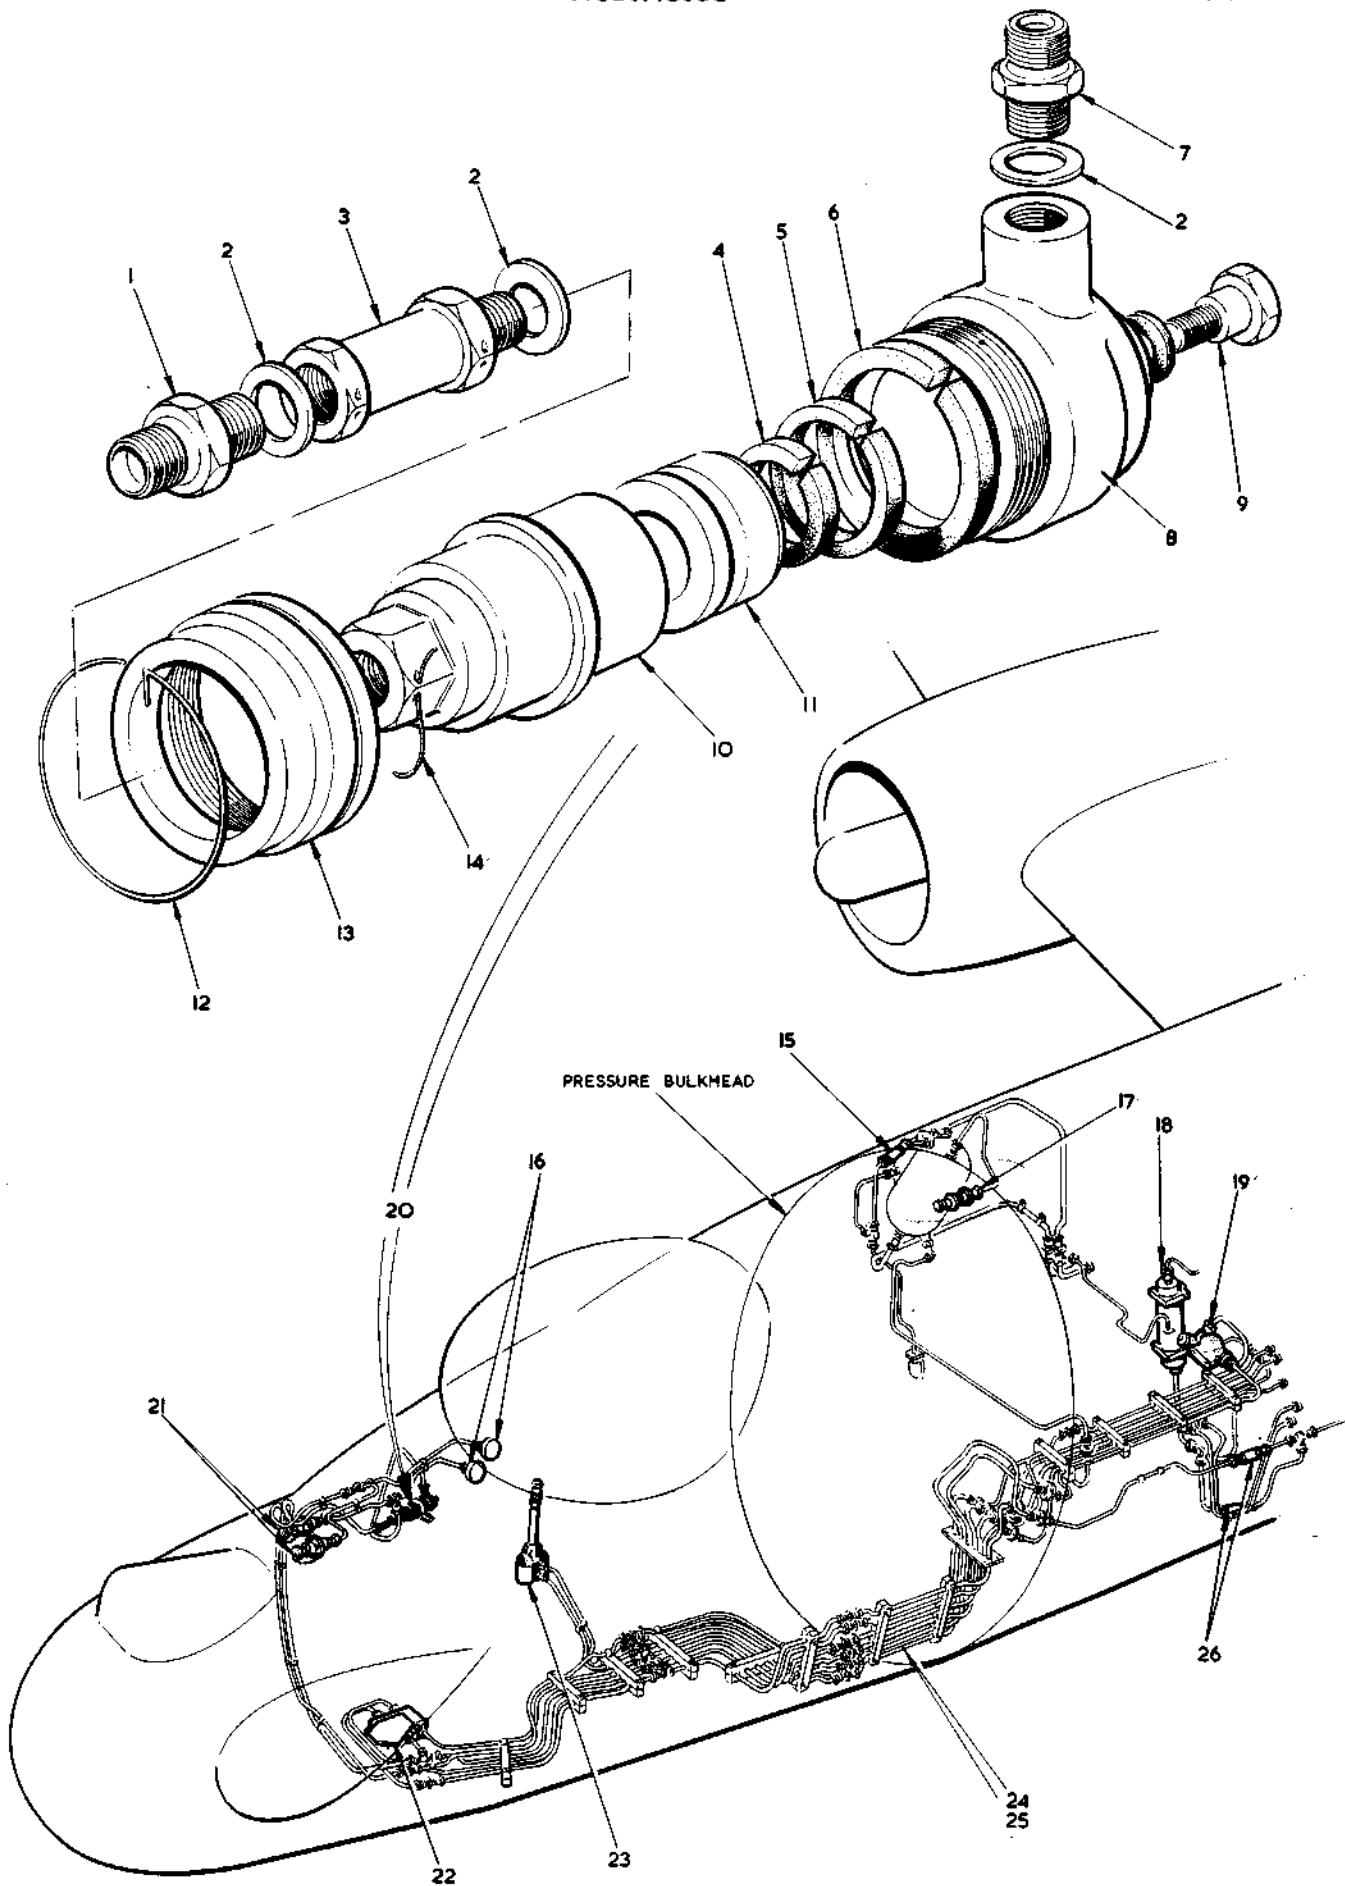


FIG. 57 HYDRAULIC EQUIPMENT IN FRONT FUSELAGE
Restricted

T. MK.17 SECT N

1

2

3

4

5

6

7

Restricted

AL.3

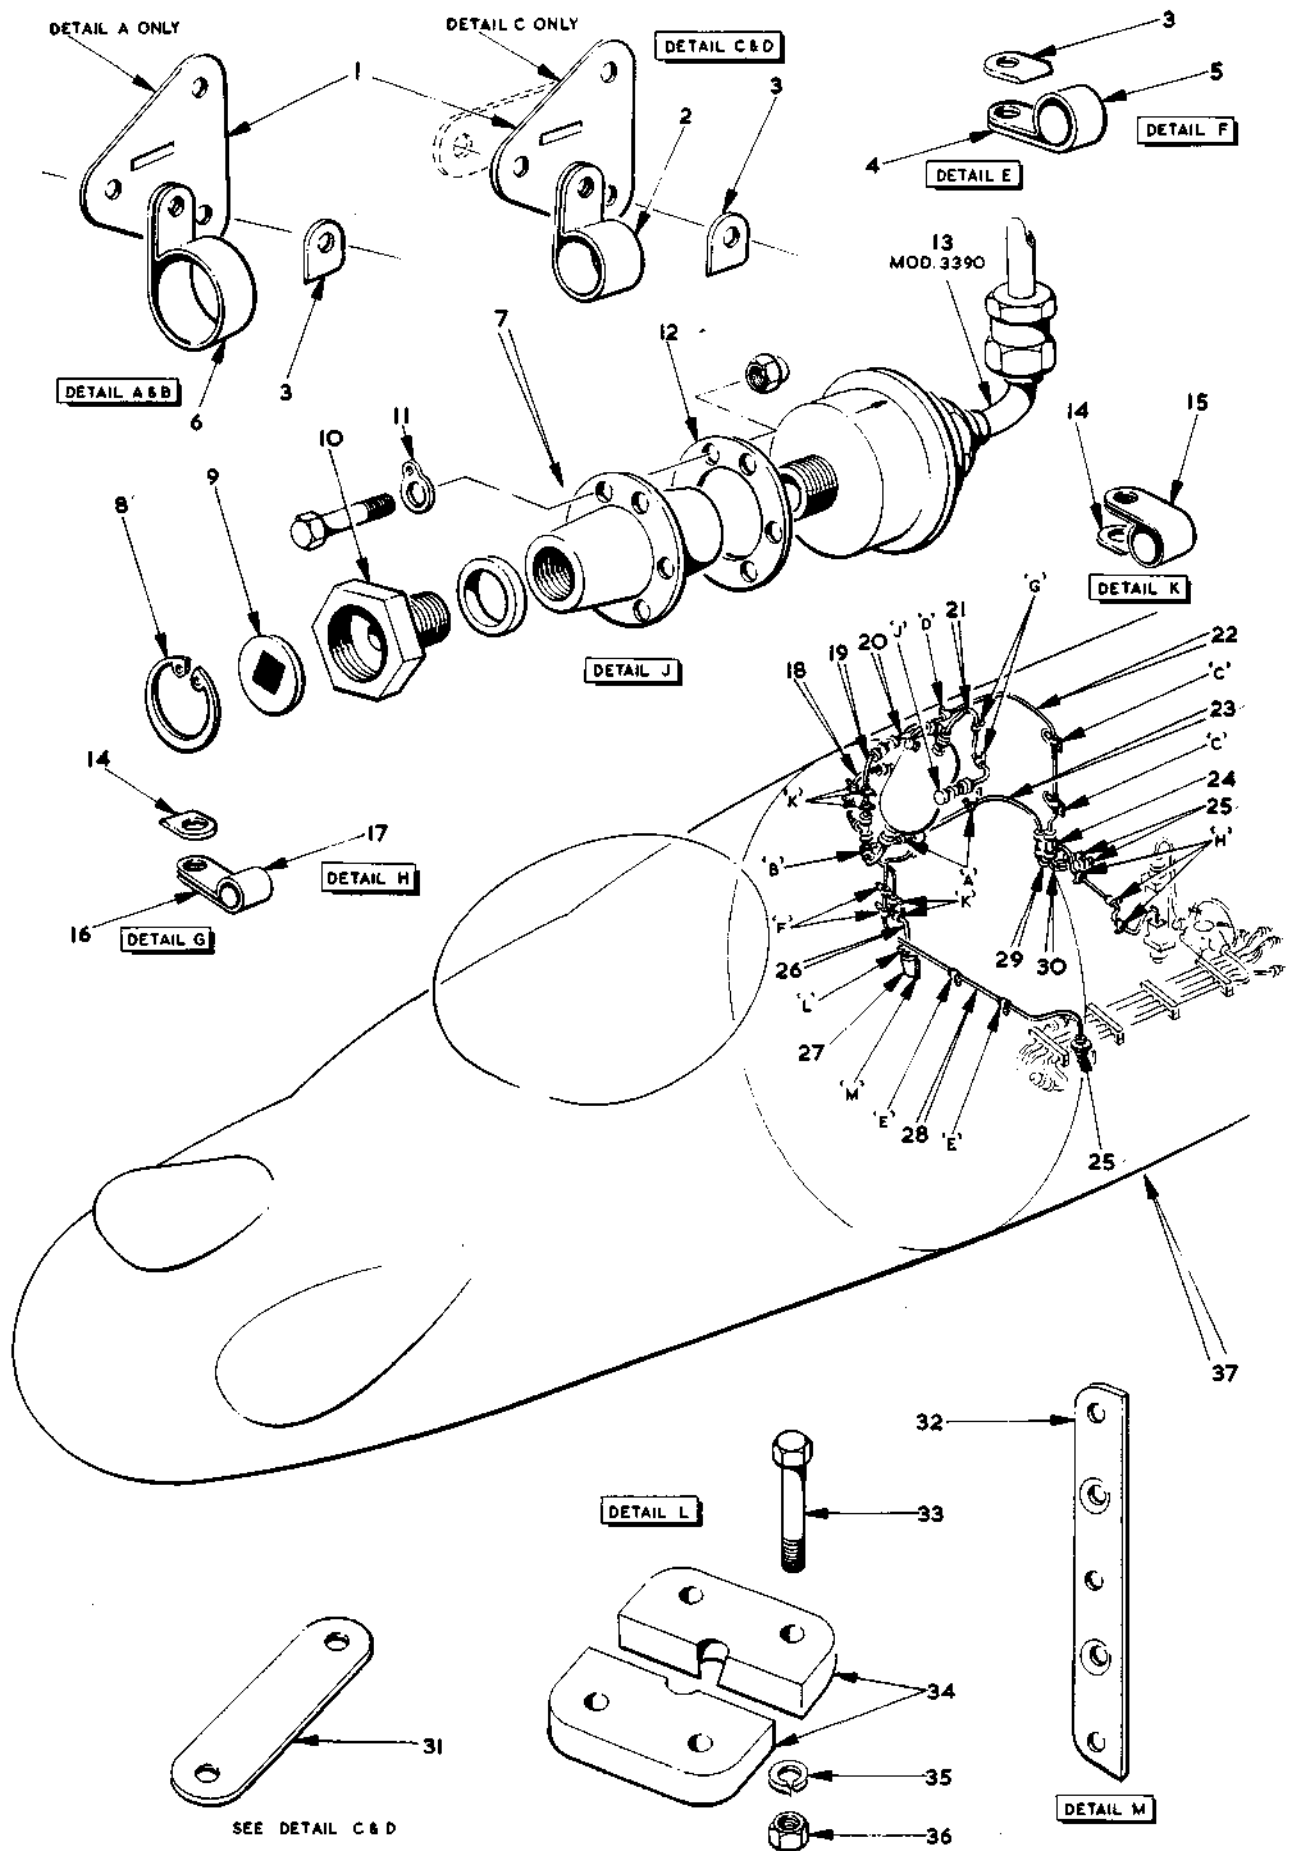


FIG.58 HYDRAULIC EQUIPMENT IN FRONT FUSELAGE
Restricted

T.MK.17 SECT. N



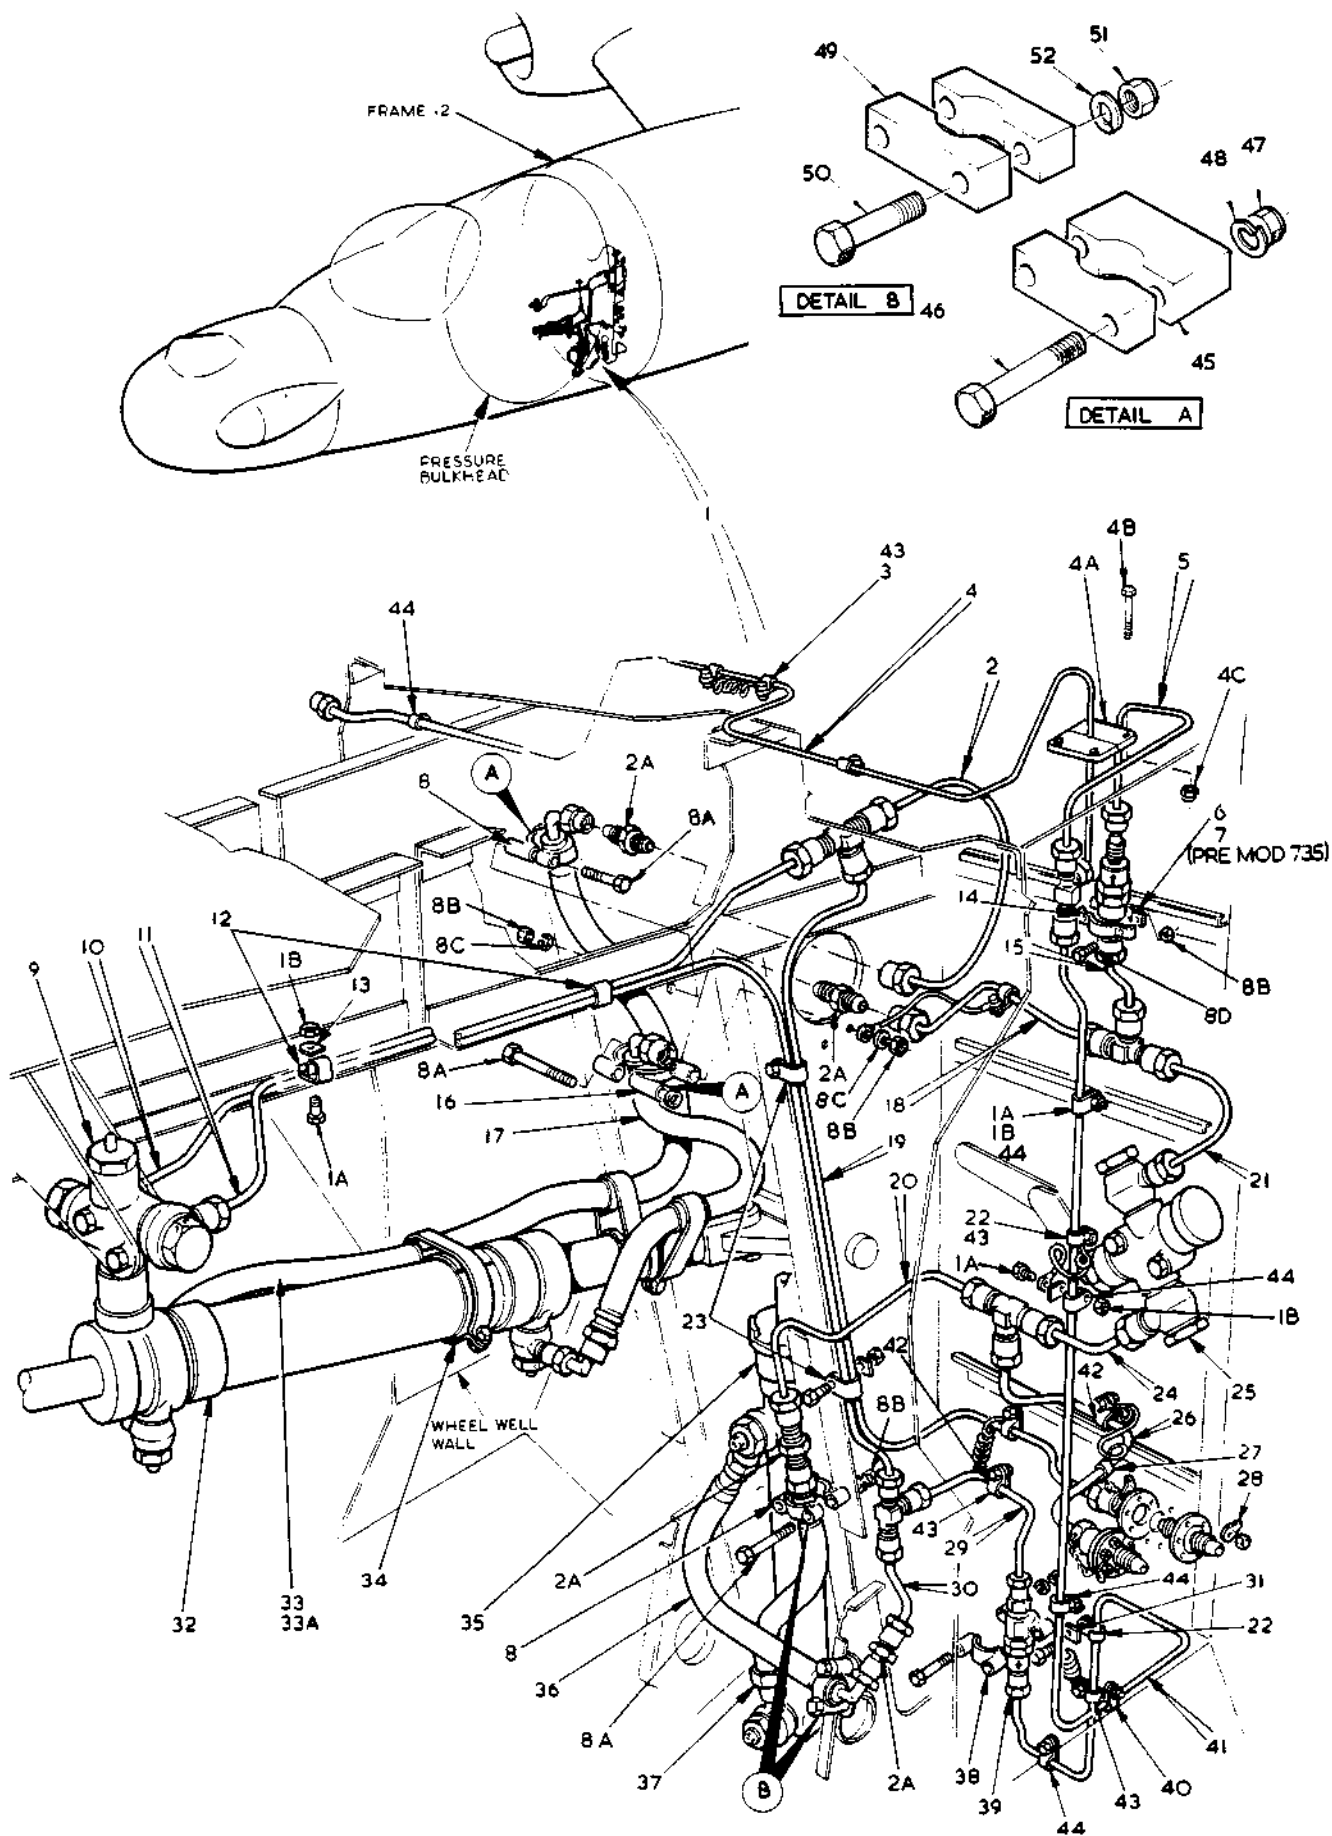


FIG.59 HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

T.MK.17 SECT. N

1

2

3

4

5

6

7

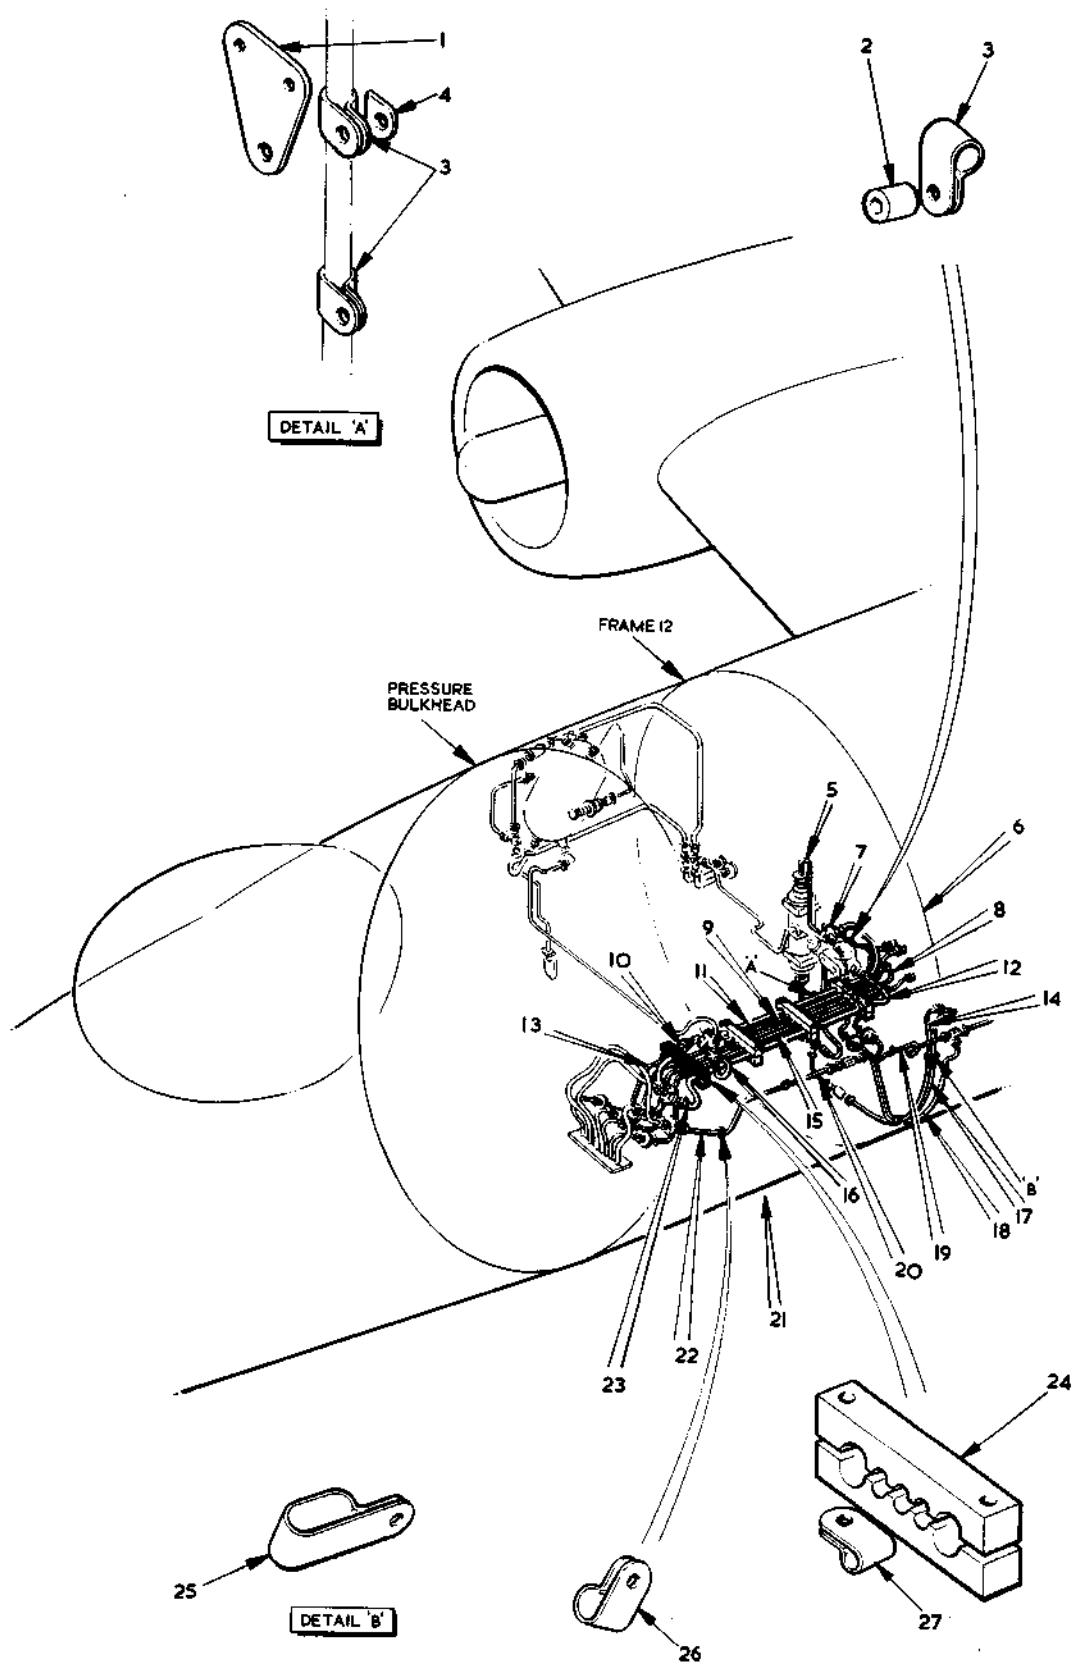


FIG. 60 HYDRAULIC EQUIPMENT IN FRONT FUSELAGE
Restricted

1

2

3

4

5

6

7

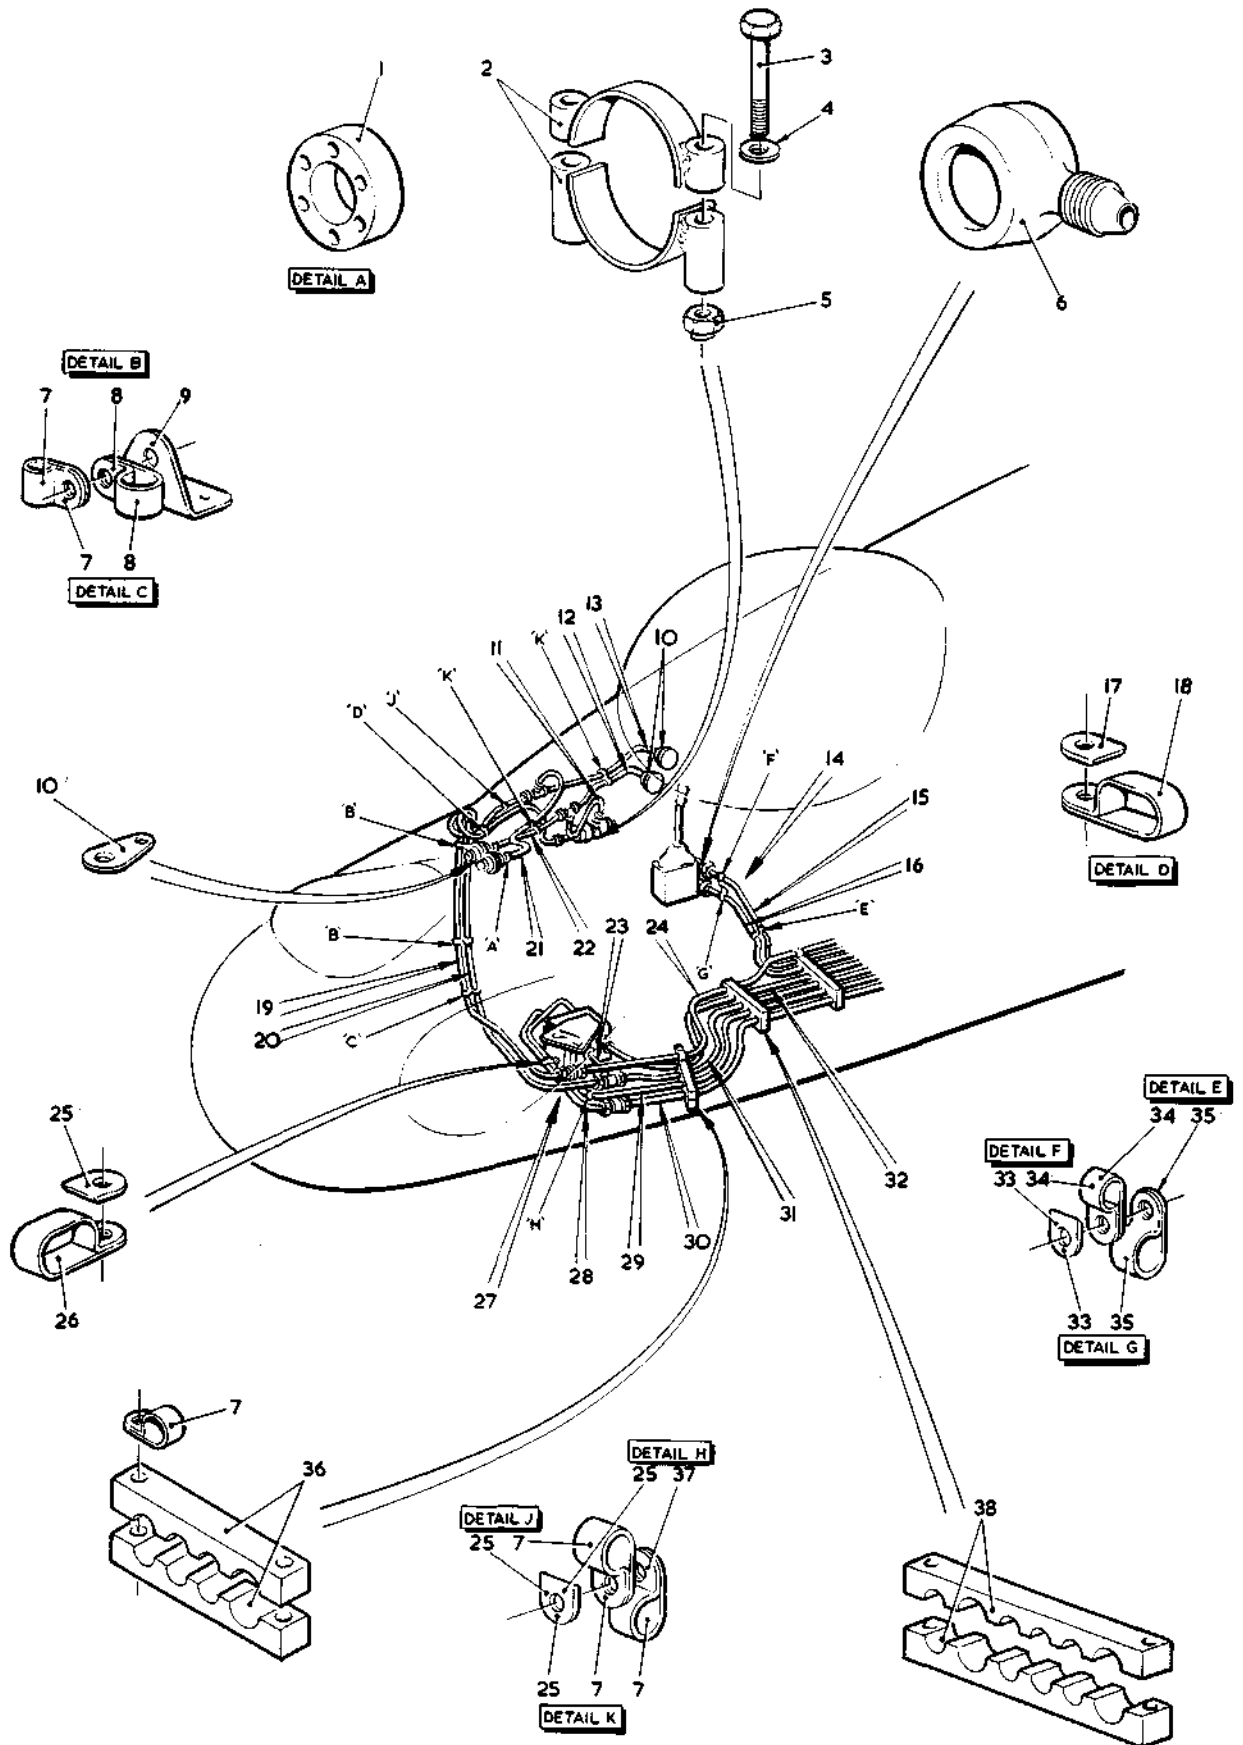


FIG.61 HYDRAULIC EQUIPMENT IN FRONT FUSELAGE
Restricted

10

11

12

13

14

Restricted

A.L.3

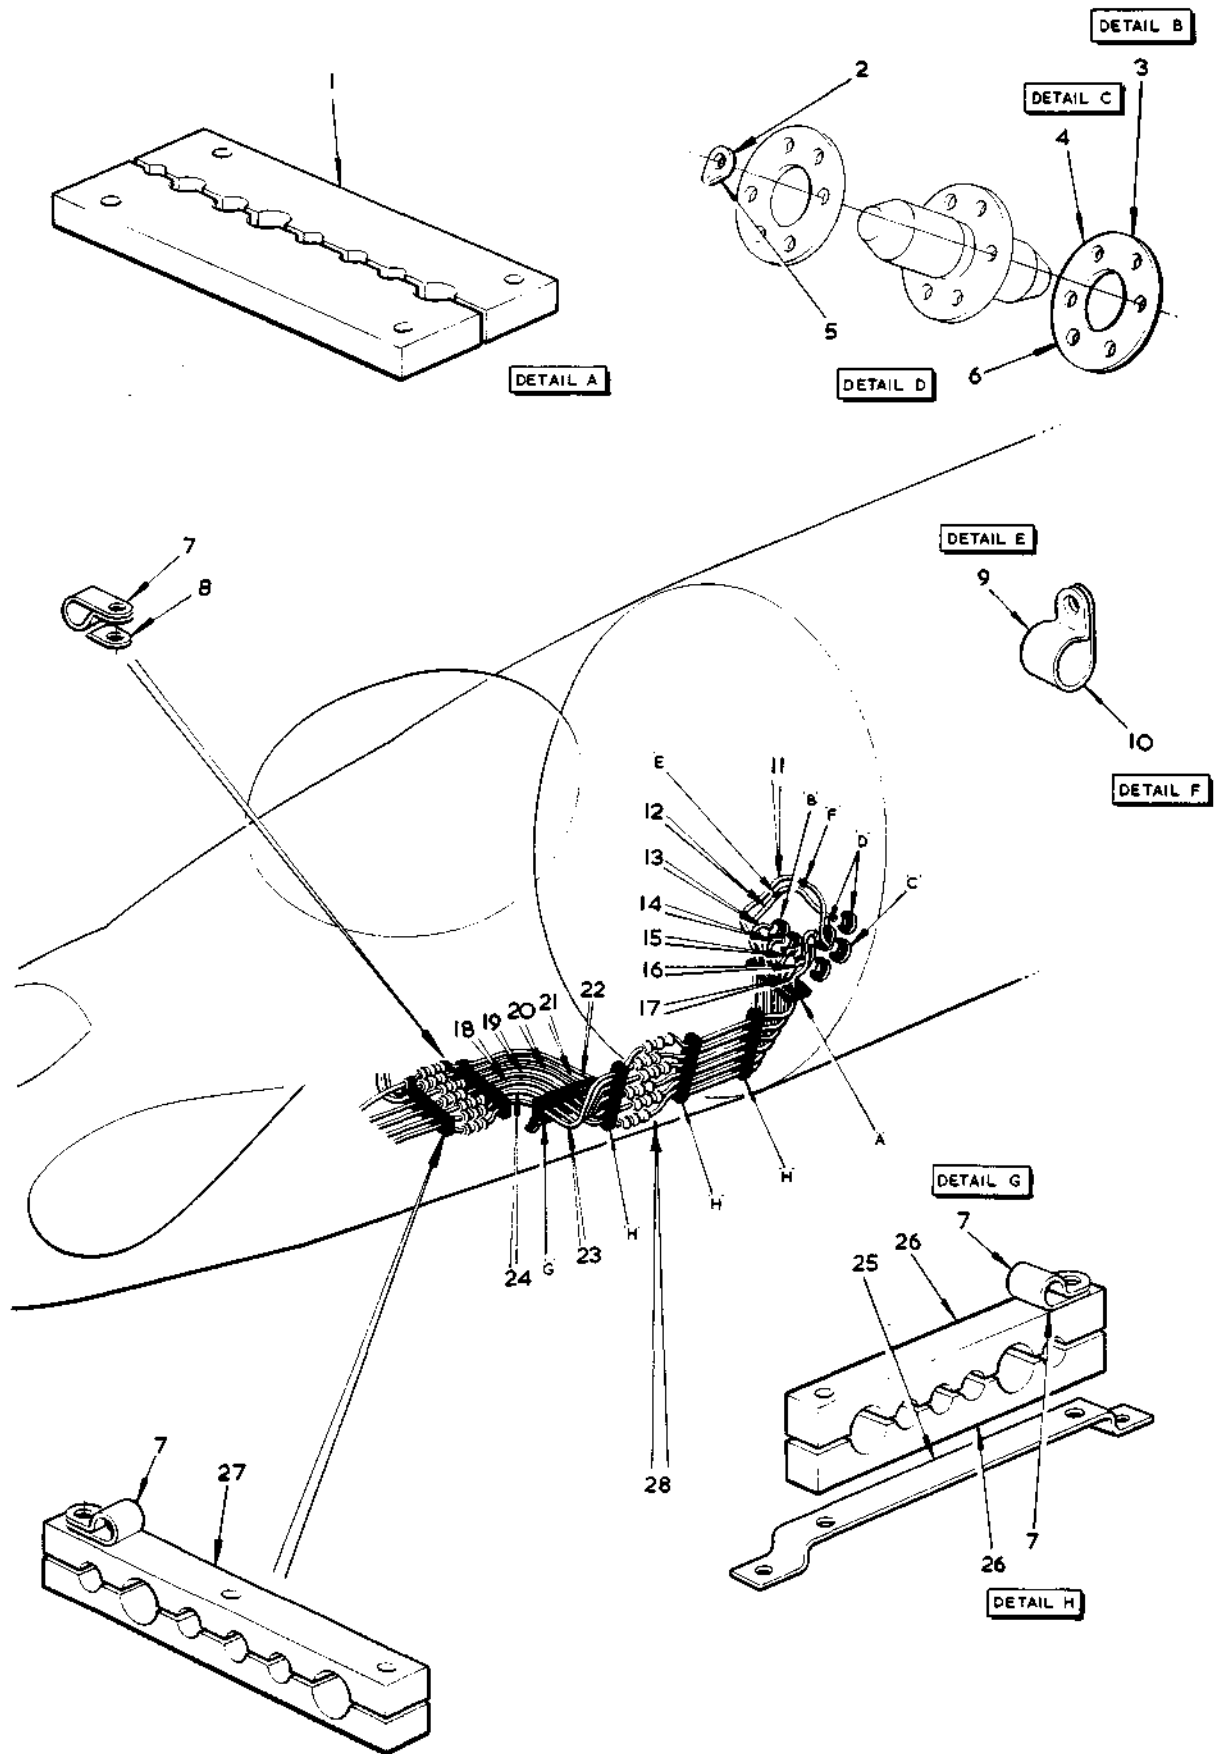


FIG.62 HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

Restricted

T MK. 17 SECT. N



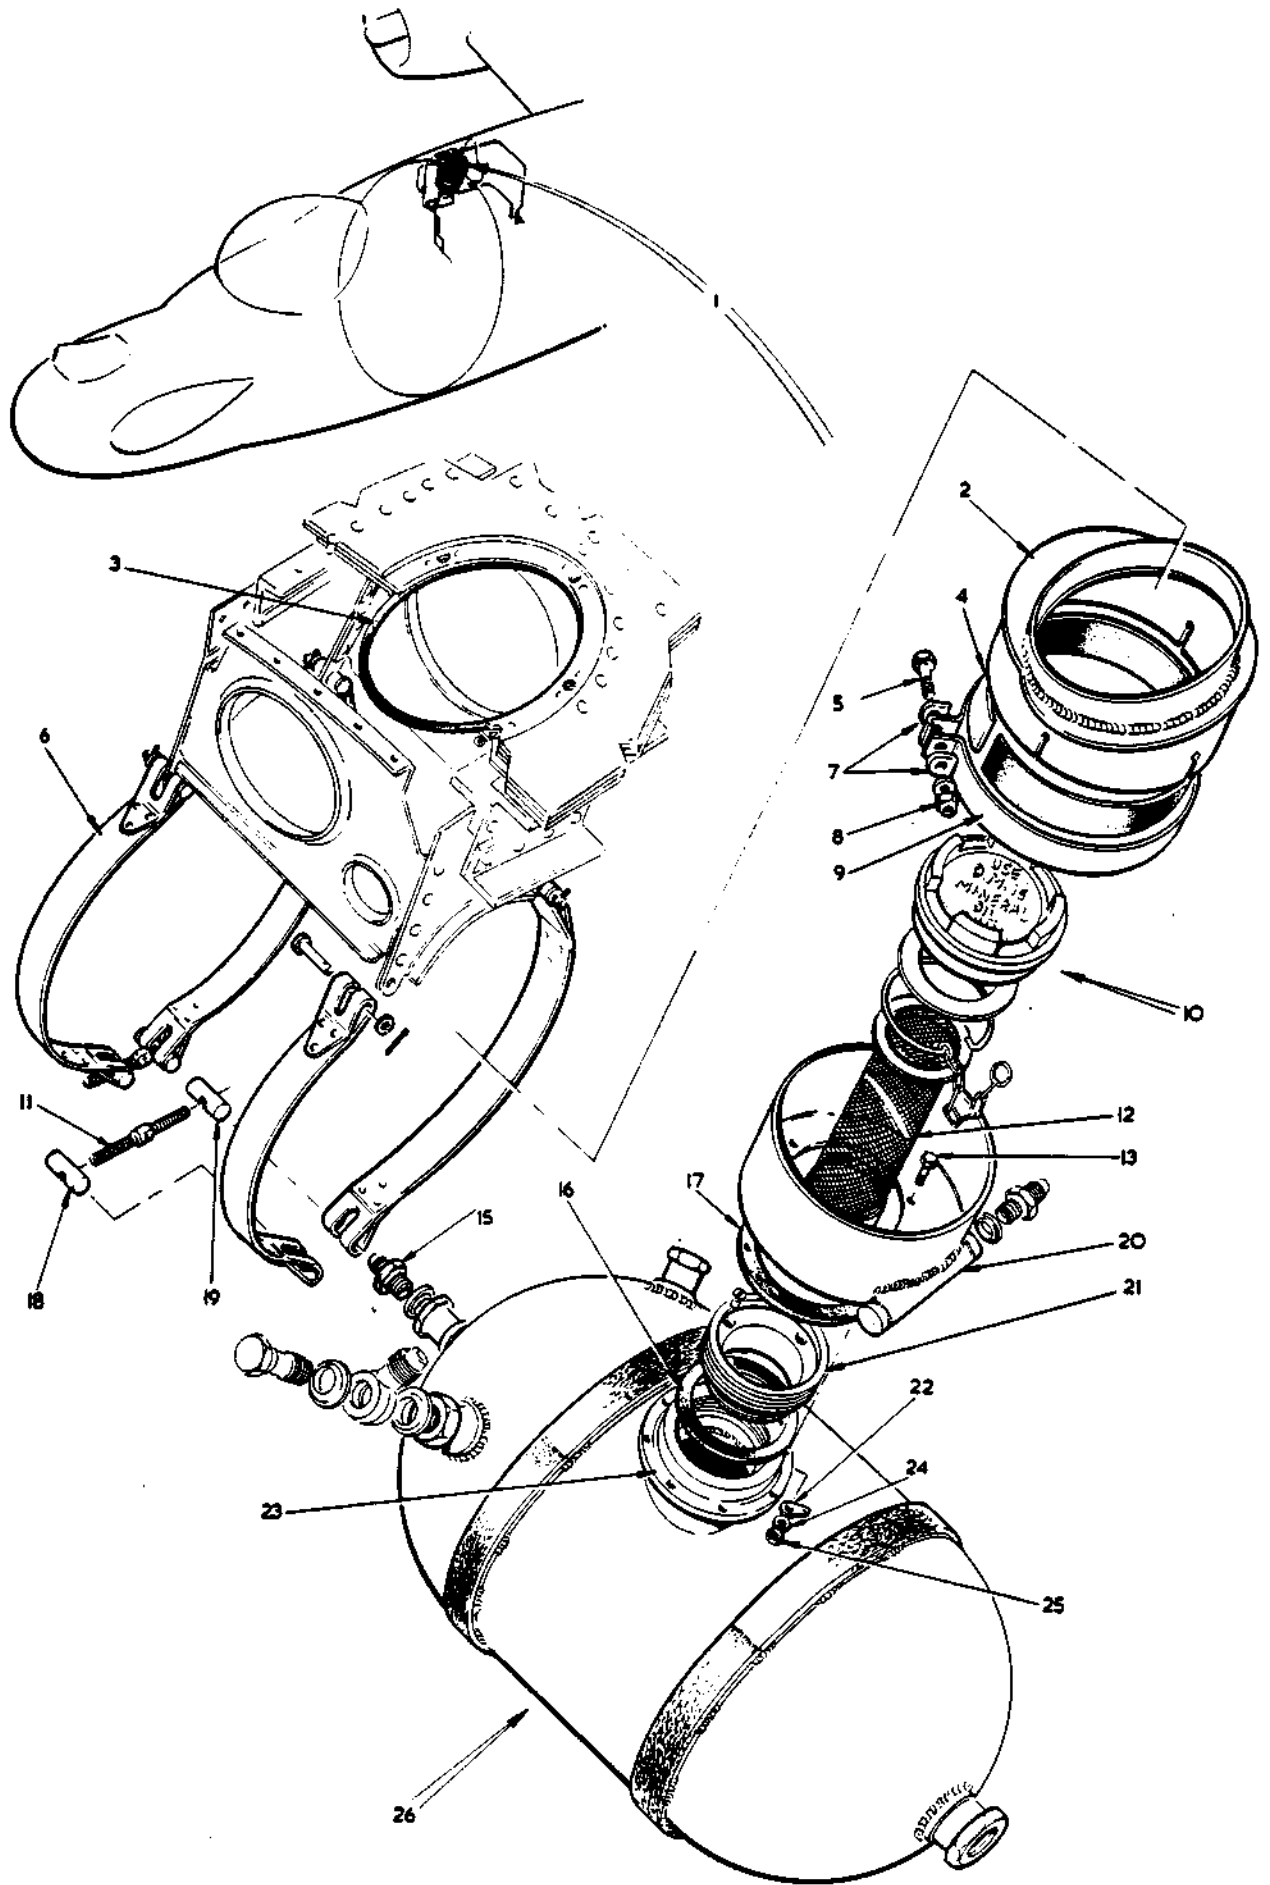


FIG.63 HYDRAULIC EQUIPMENT IN FRONT FUSELAGE

T. MK.17 SECT. N



Restricted

A.L. 3

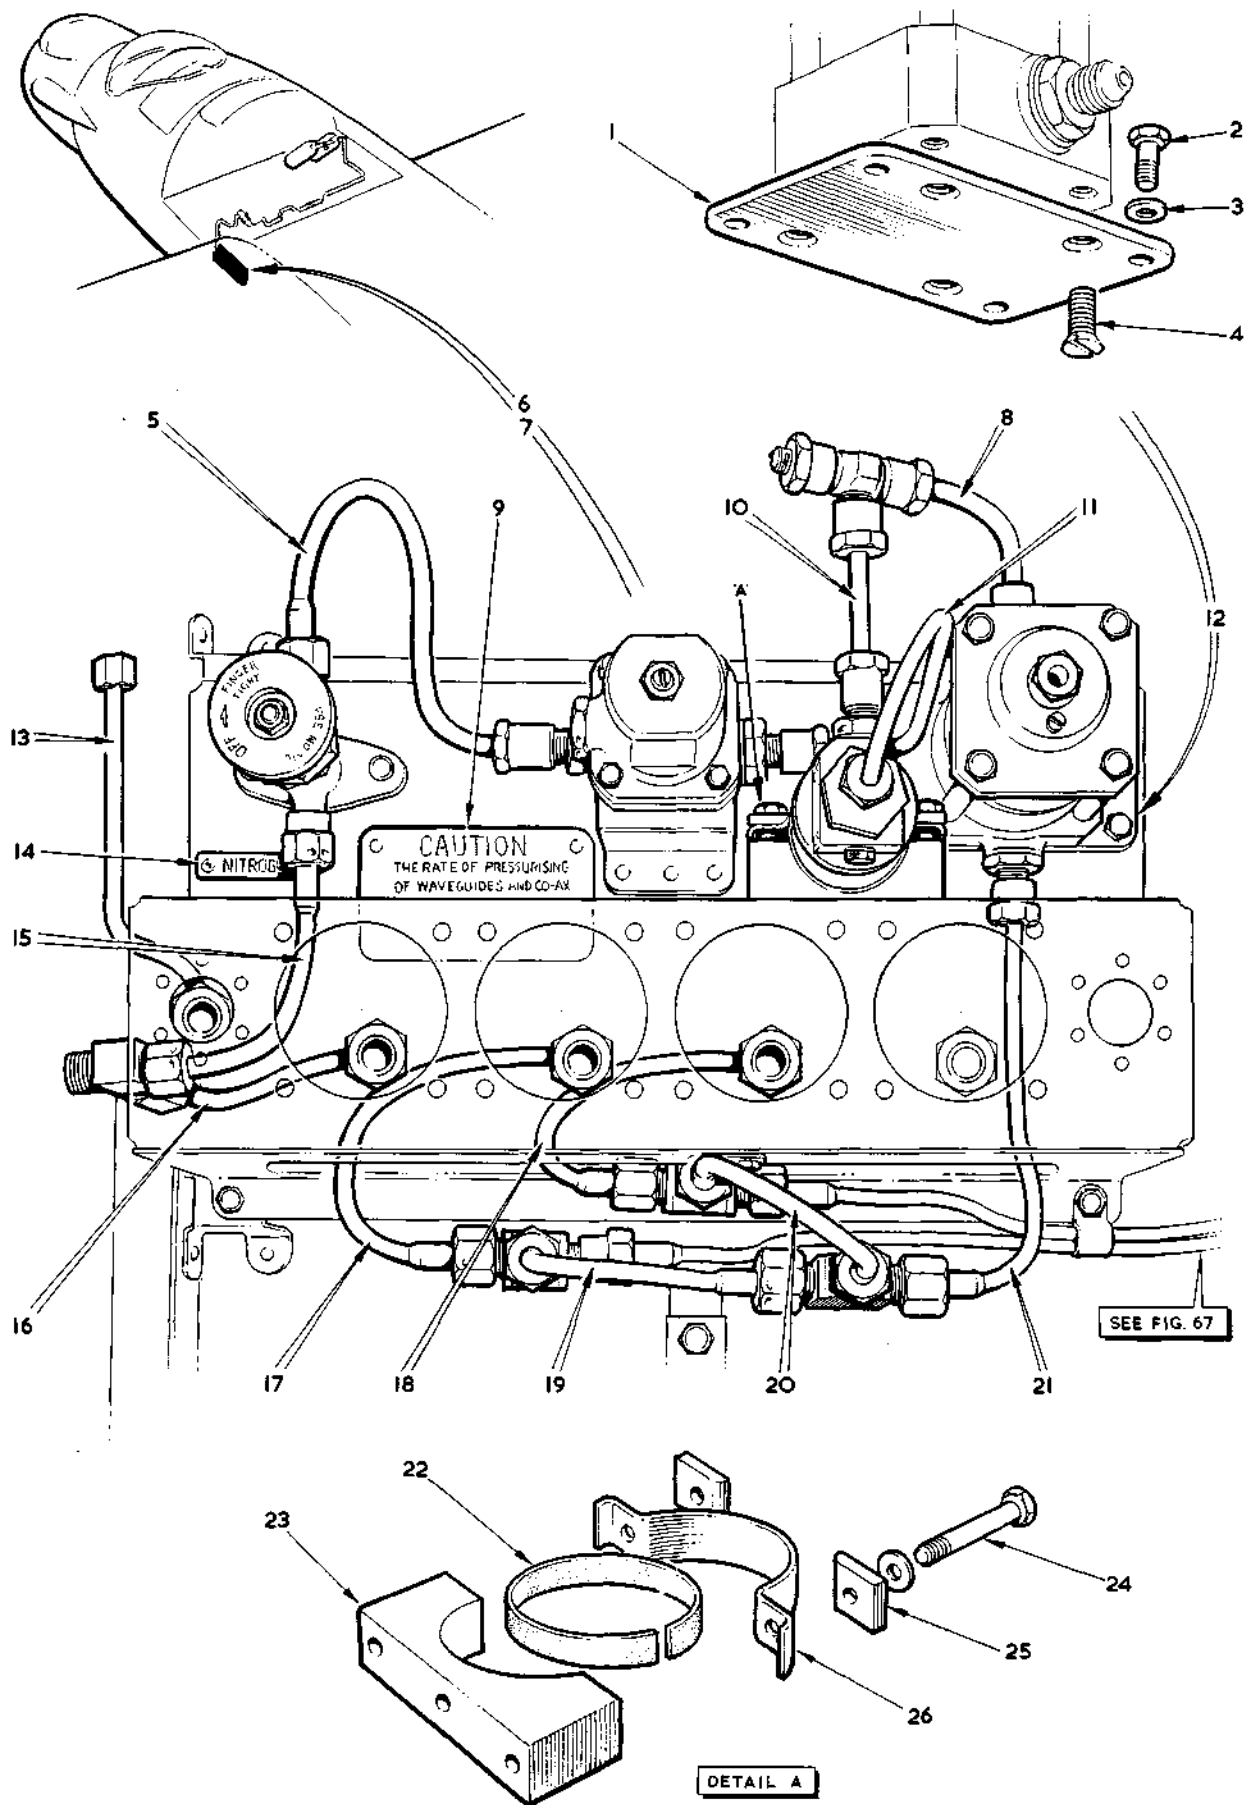


FIG. 64
NITROGEN PRESSURISING OF WAVEGUIDES & CO-AXIAL CABLES IN FRONT FUSELAGE
Restricted

T MK.17 SECT N

●

●

●

●

●

●

Restricted

A.L.3

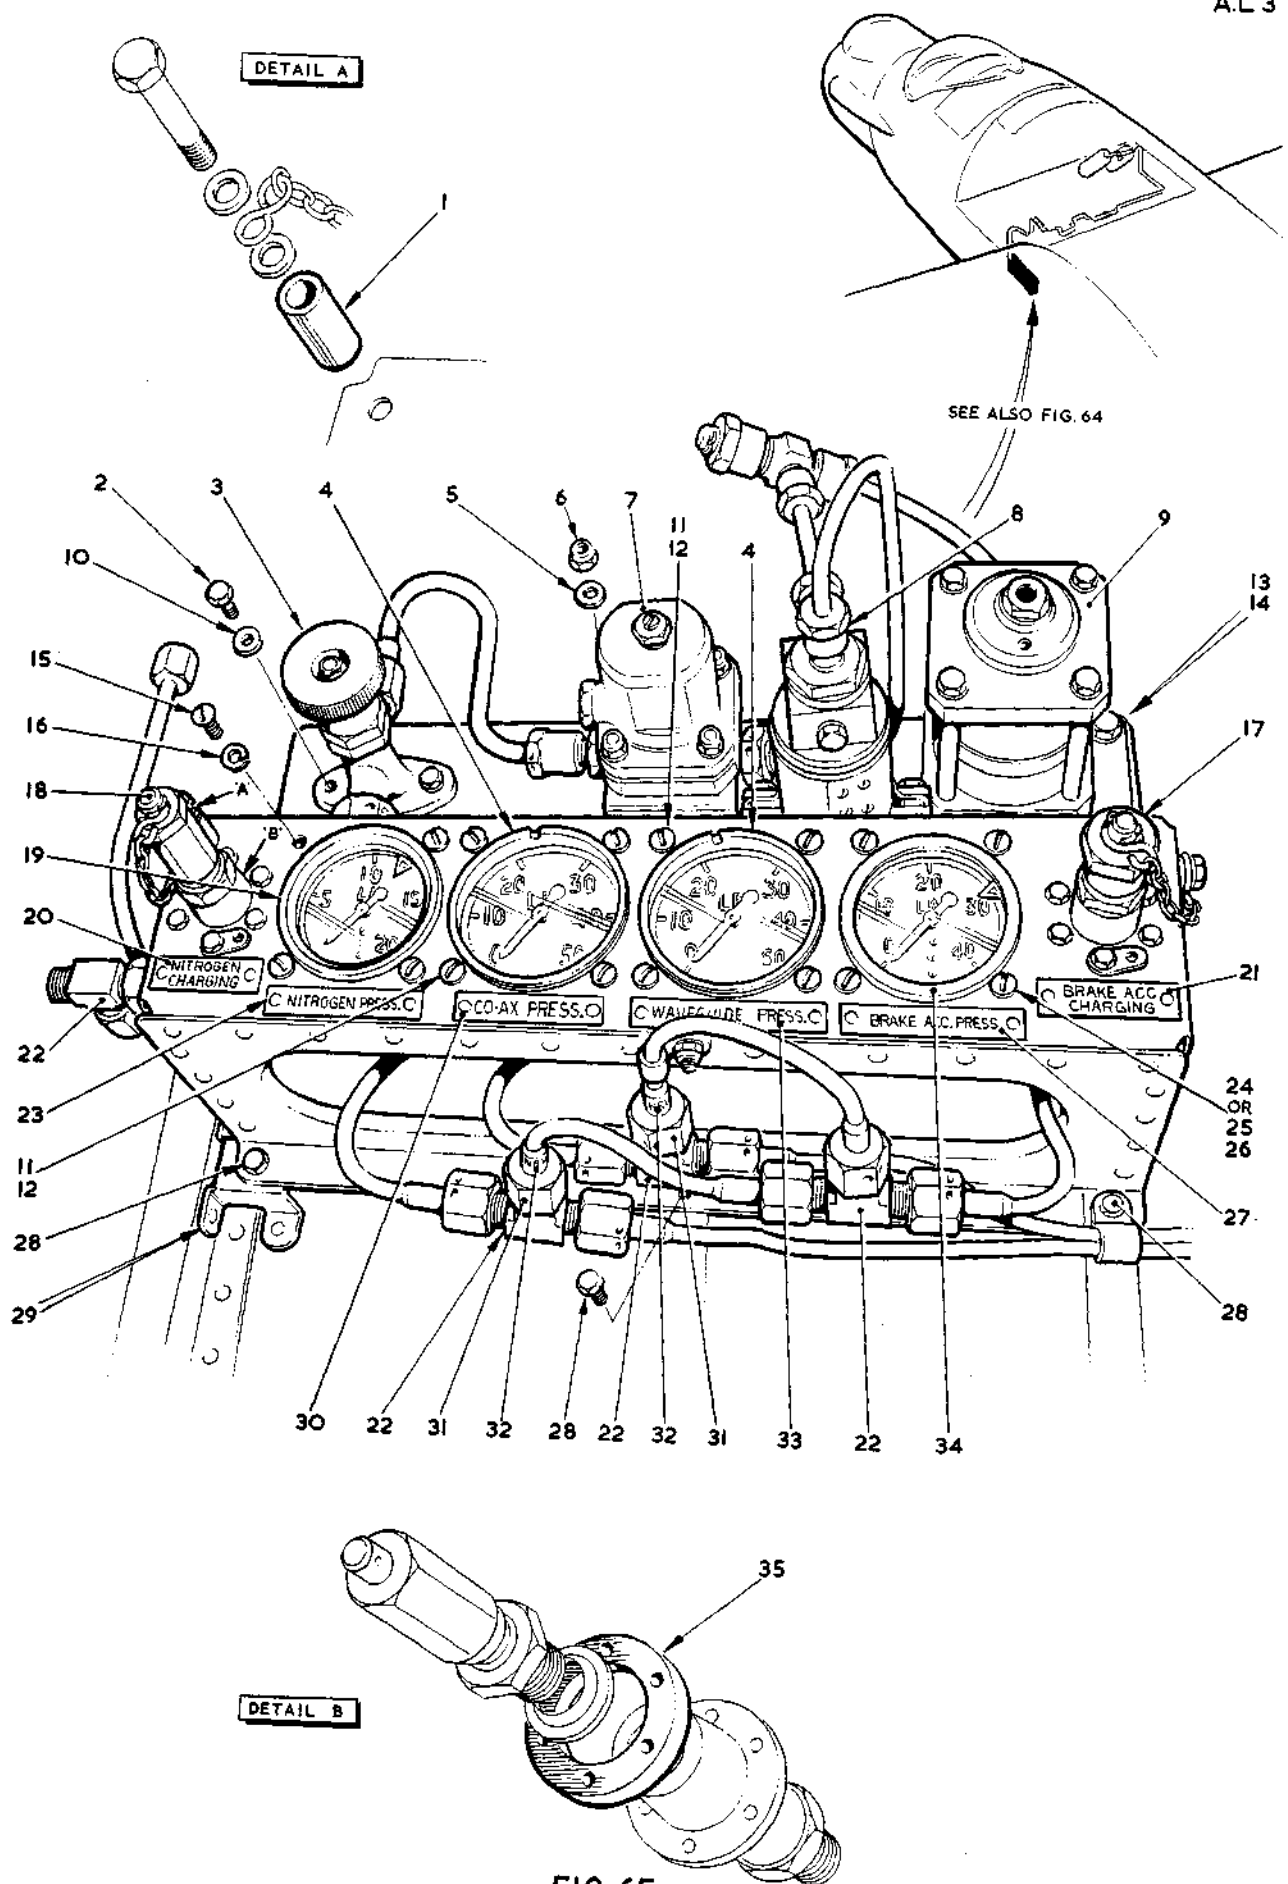


FIG. 65
NITROGEN PRESSURISING OF WAVEGUIDES & CO-AXIAL CABLES IN FRONT FUSELAGE
Restricted

T MK.17 SECT N

1

2

3

4

5

6

7

Restricted

AL.3

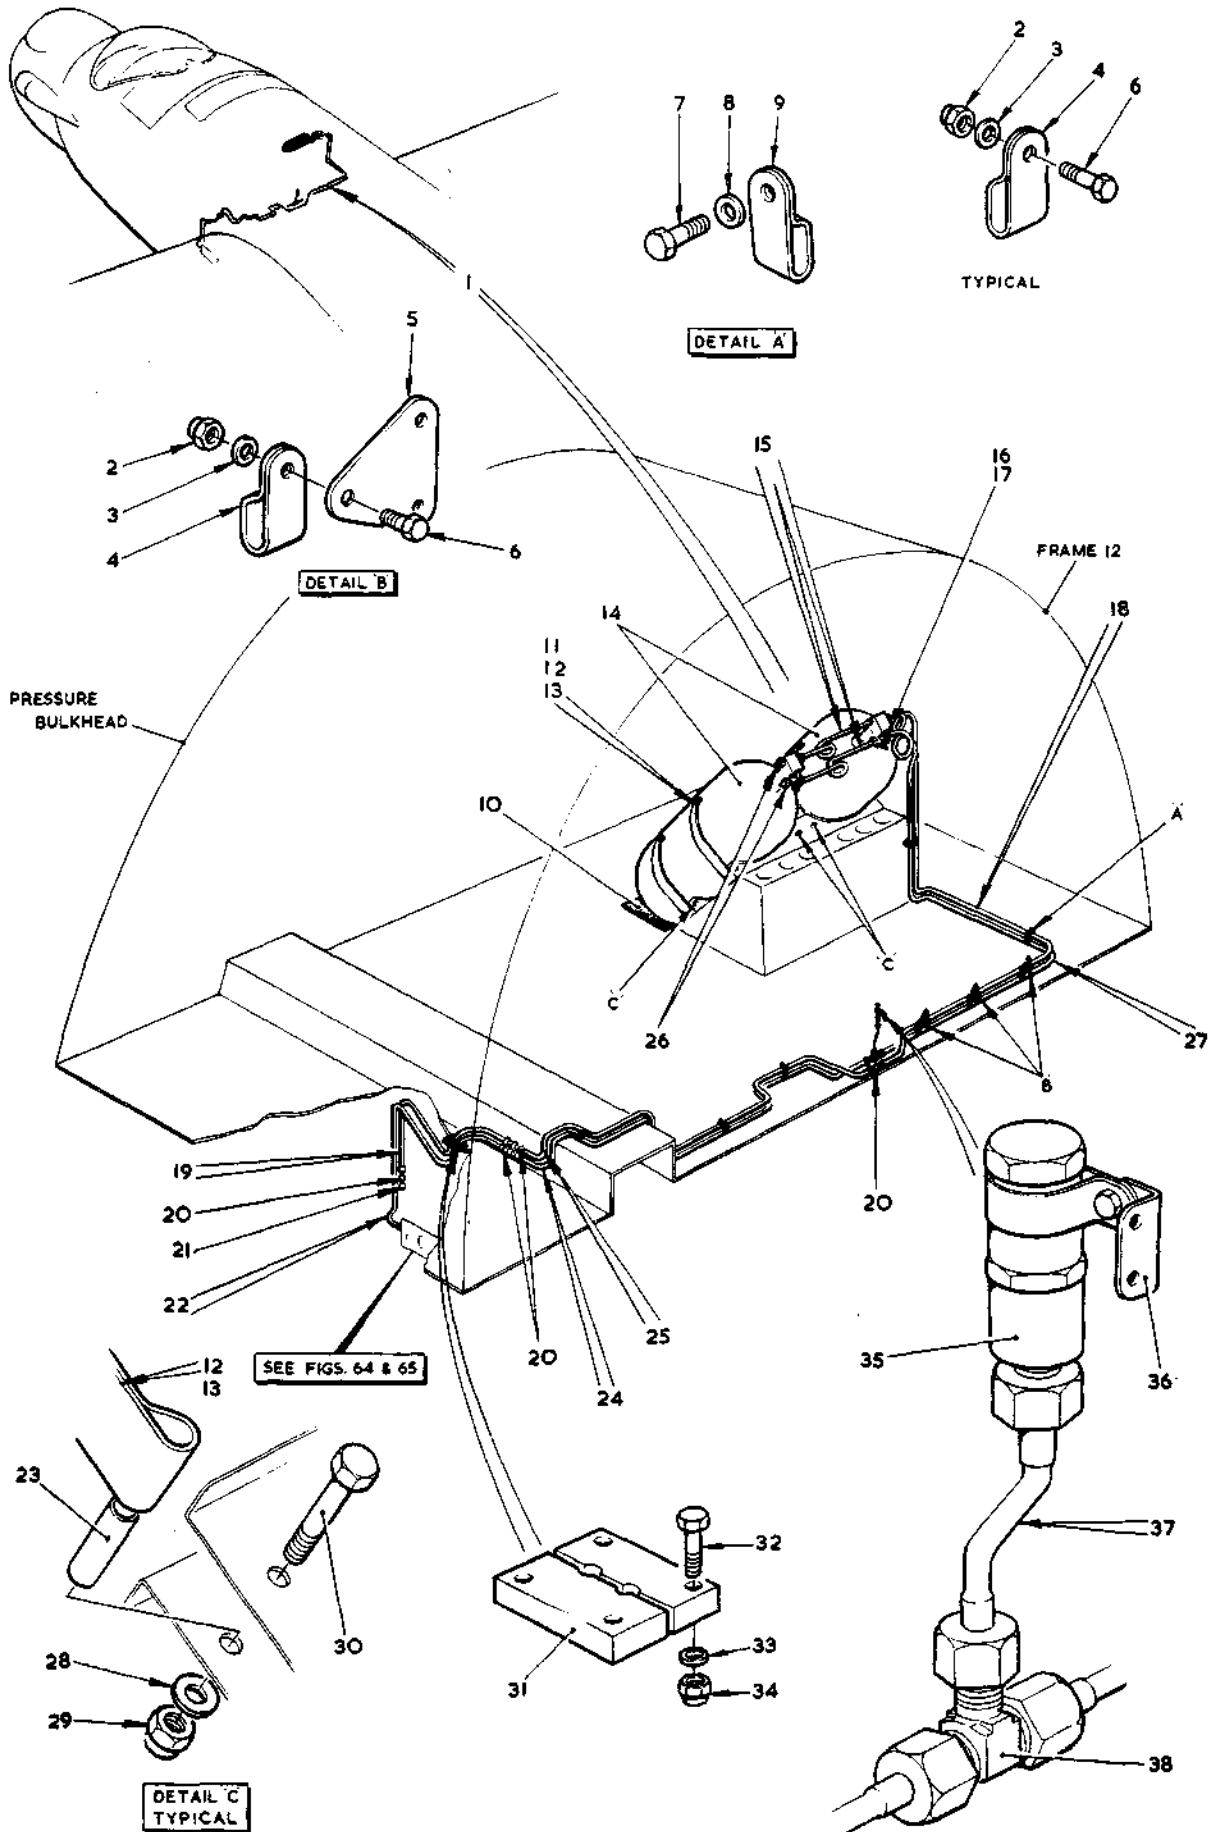


FIG. 66
NITROGEN PRESSURISING OF WAVEGUIDES & CO-AXIAL CABLES IN FRONT FUSELAGE
Restricted

T.MK. 17 SECT. N

1

2

3

4

5

6

7

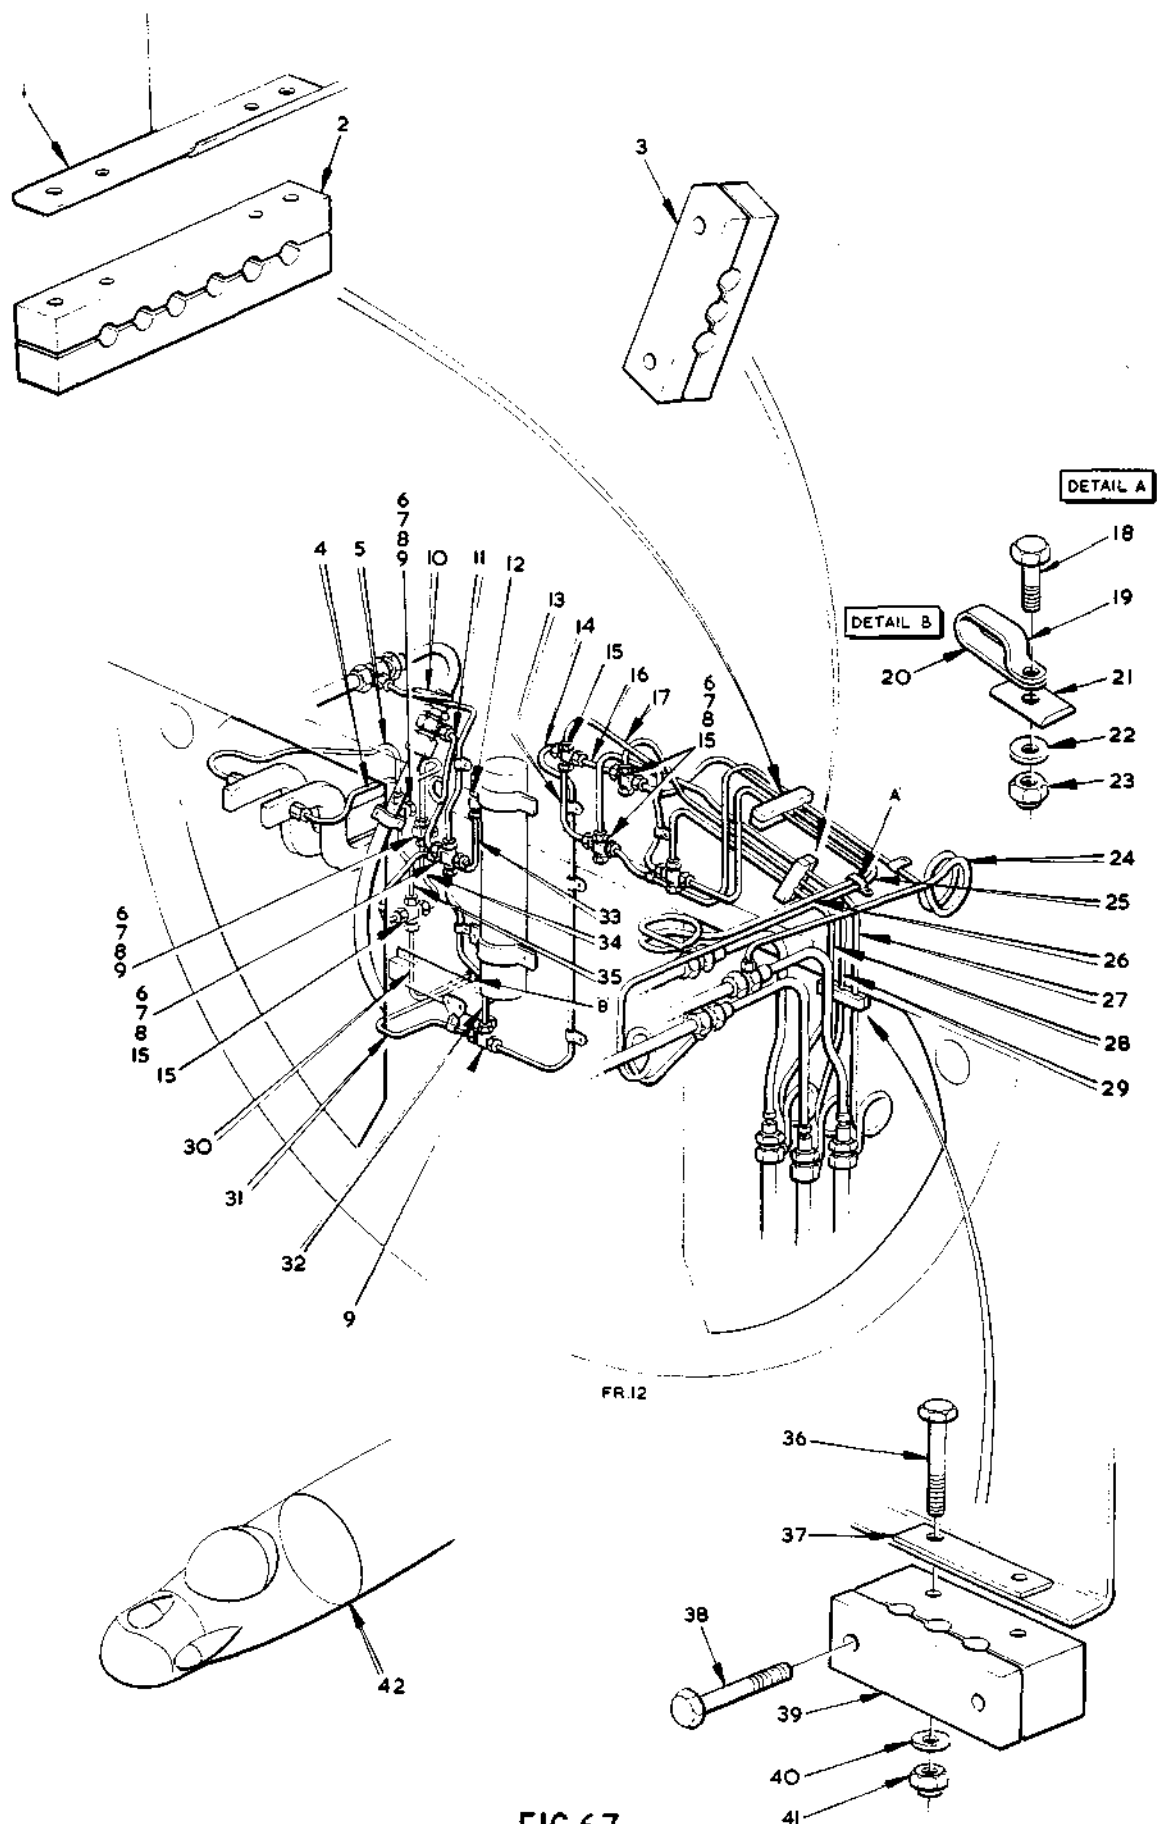


FIG.67
 NITROGEN PRESSURISING OF WAVEGUIDES & CO-AXIAL CABLES IN FRONT FUSELAGE
 Restricted

1

2

3

4

5

6

7

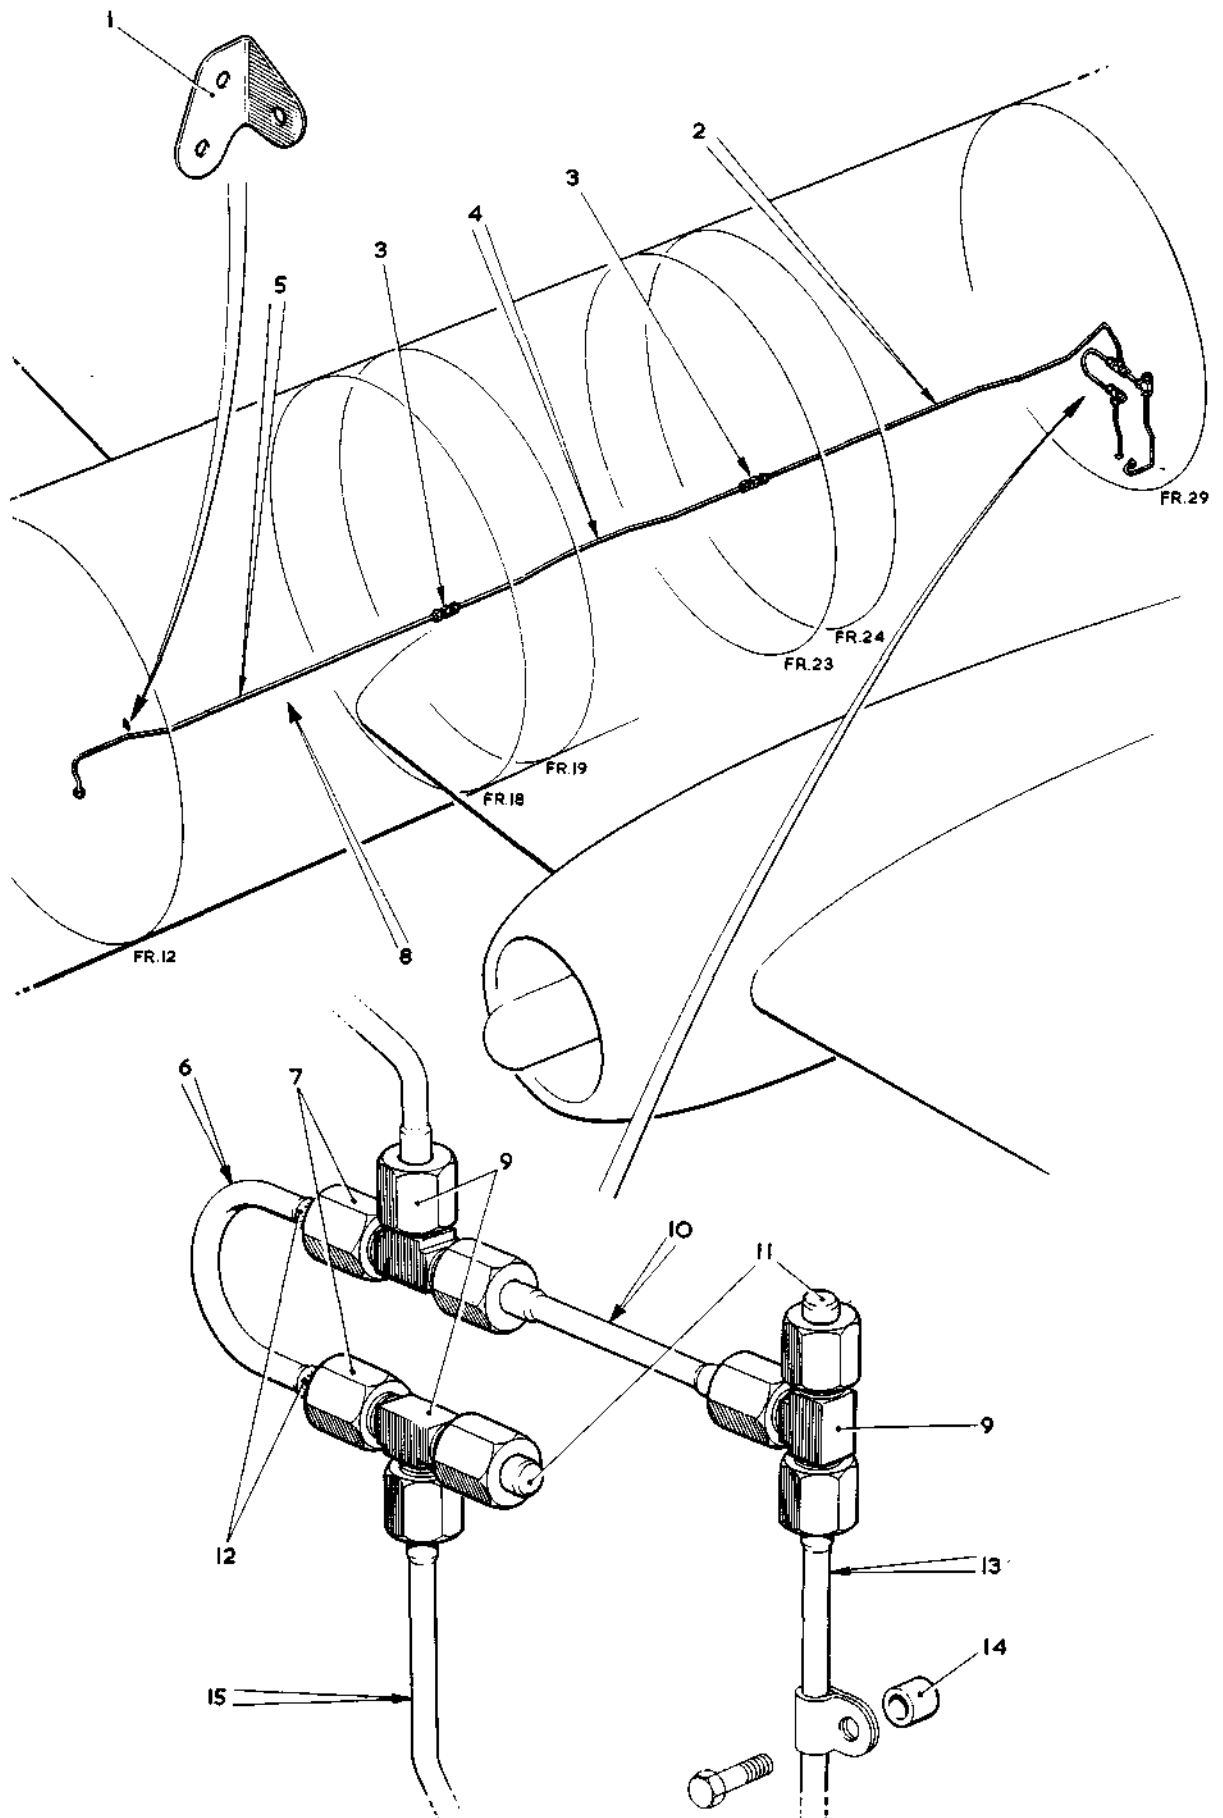


FIG.68 NITROGEN PRESSURISING OF WAVEGUIDES IN BOMB BAY

Restricted

1

2

3

4

5

6

7

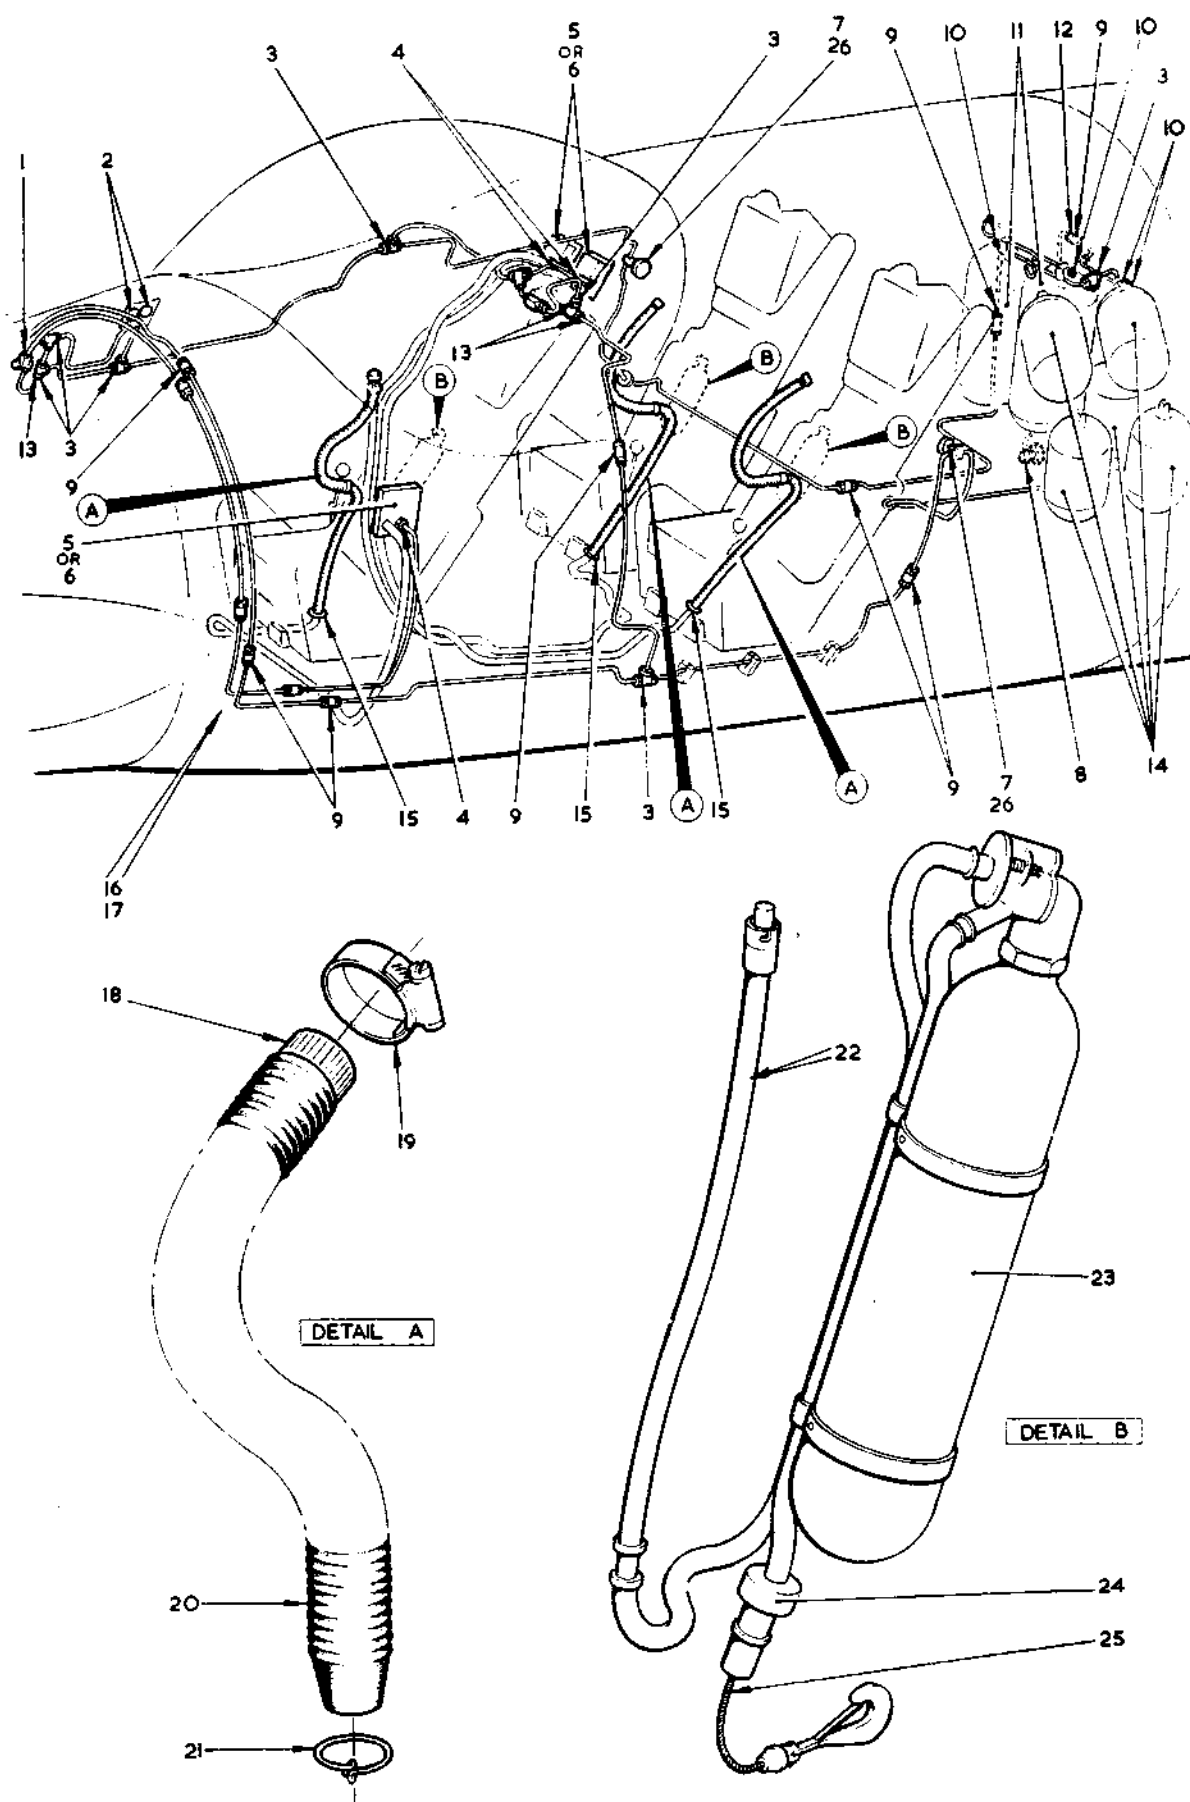


FIG. 69 OXYGEN SYSTEM

●

●

●

●

●

●

●

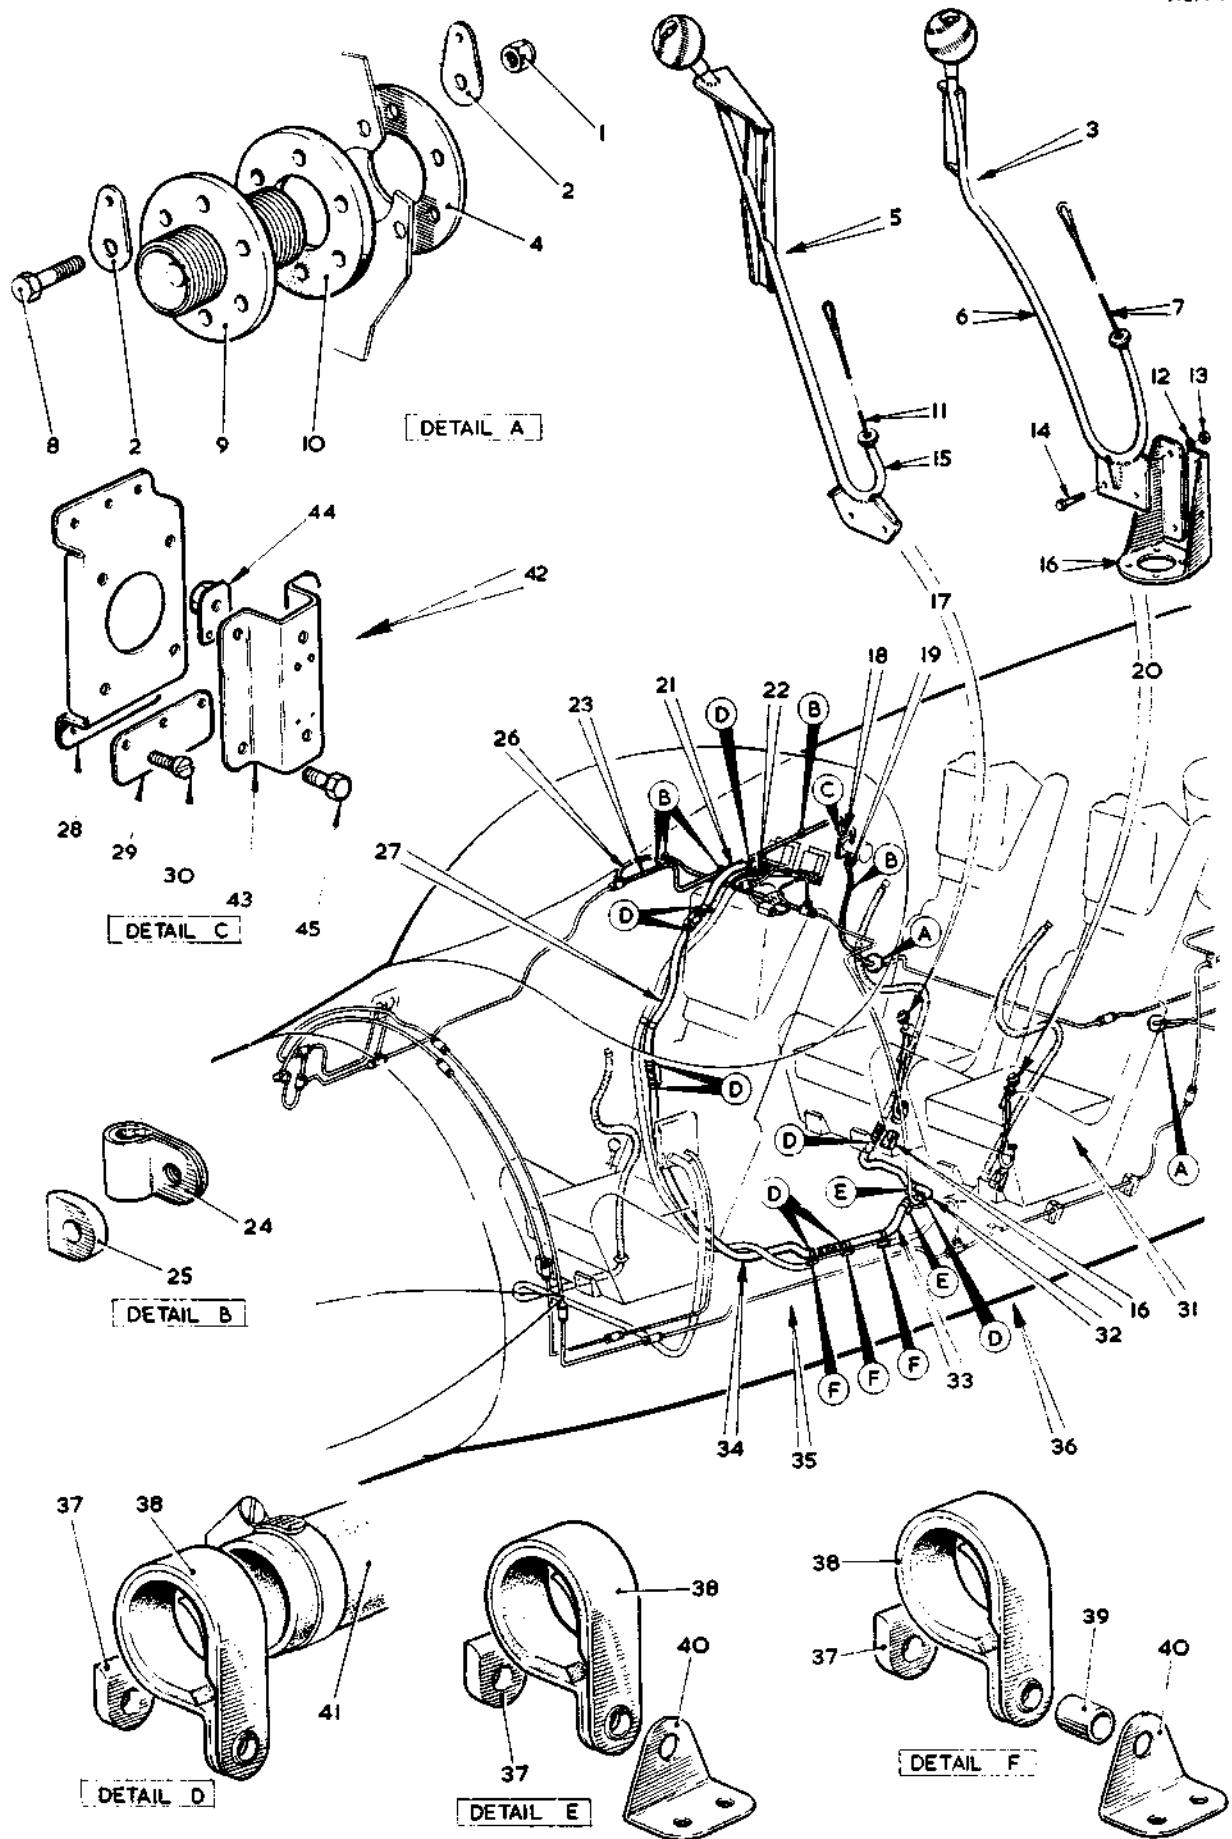


FIG. 70 OXYGEN SYSTEM

•

•

•

•

•

•

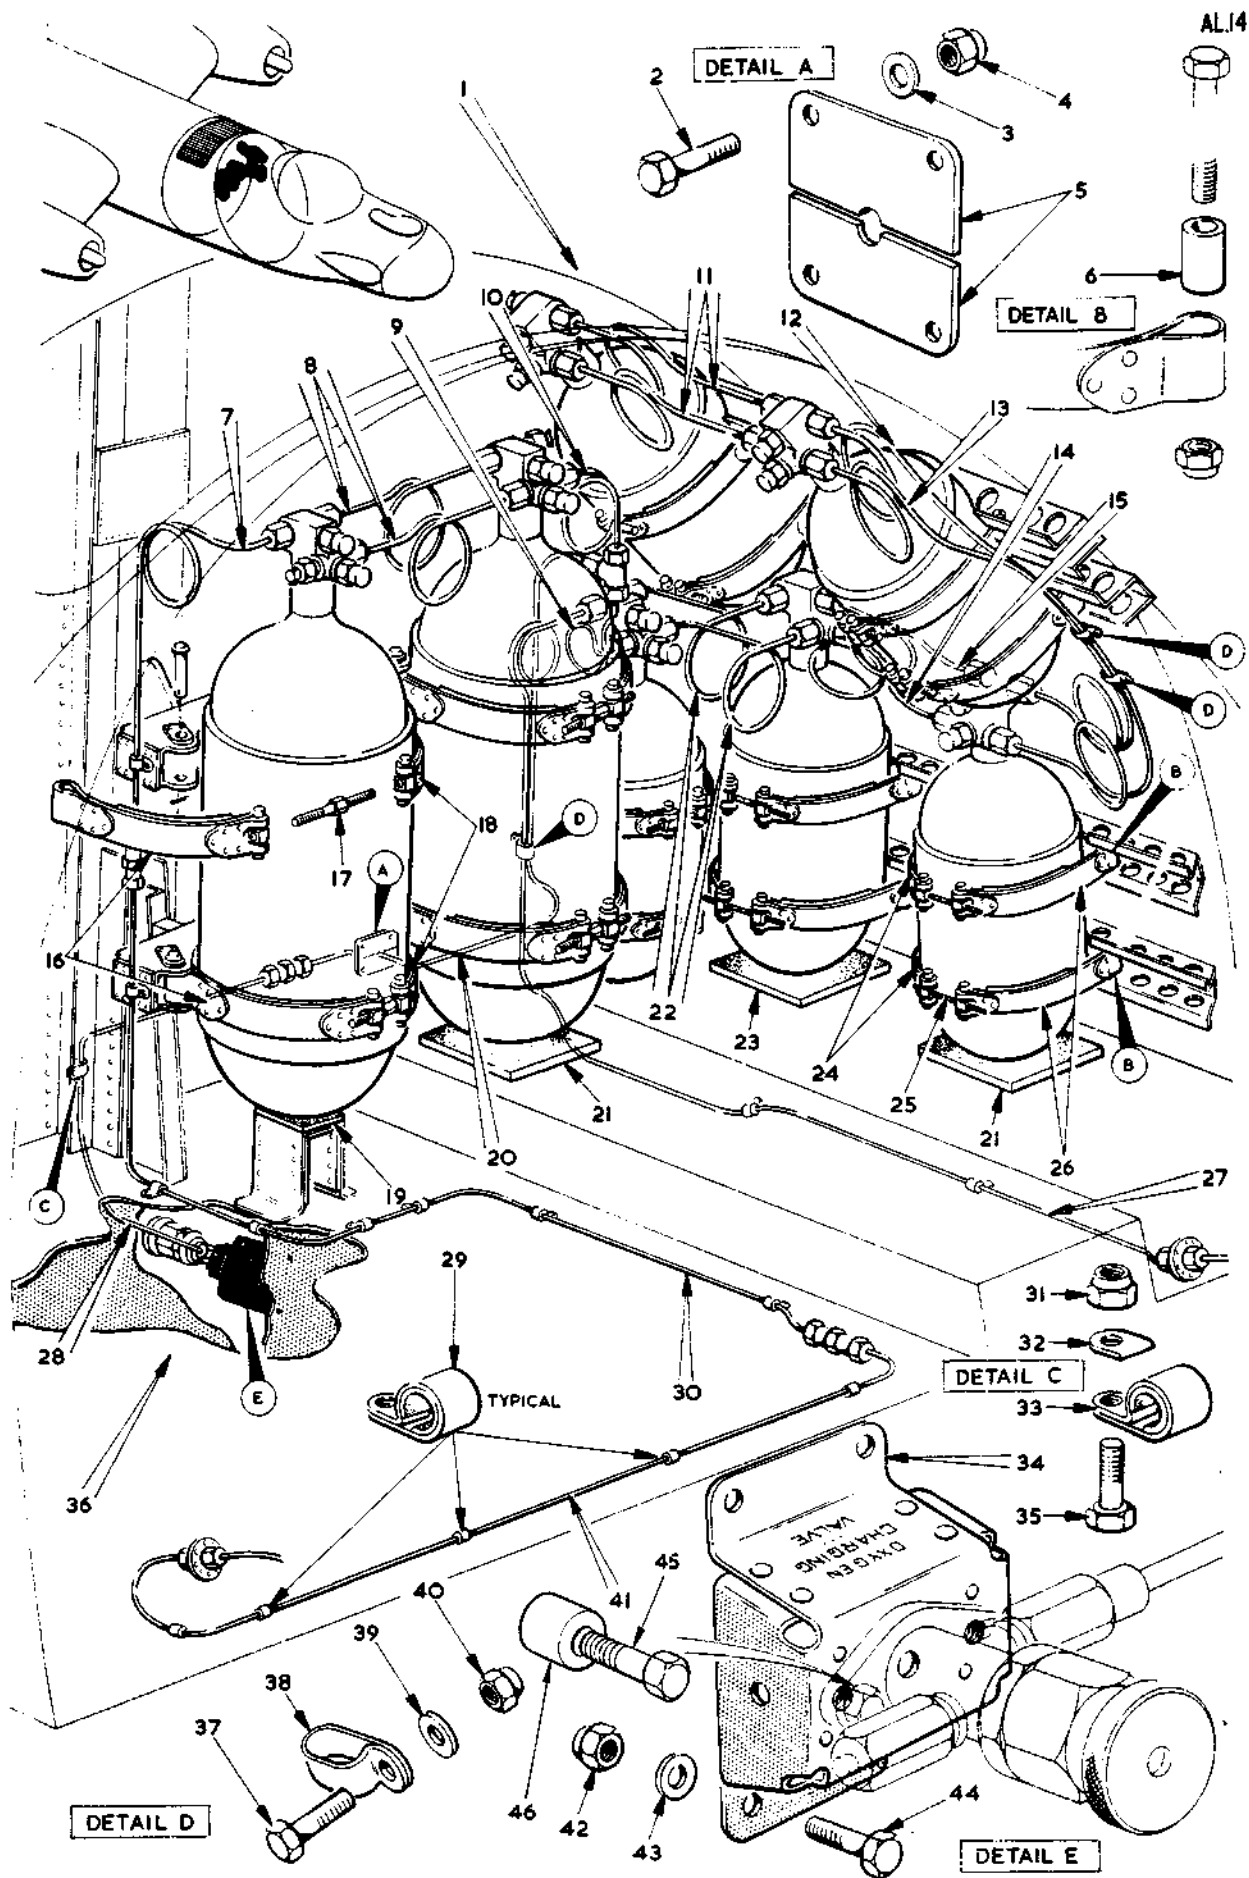


FIG. 71 OXYGEN SYSTEM

•

•

•

•

•

•

•

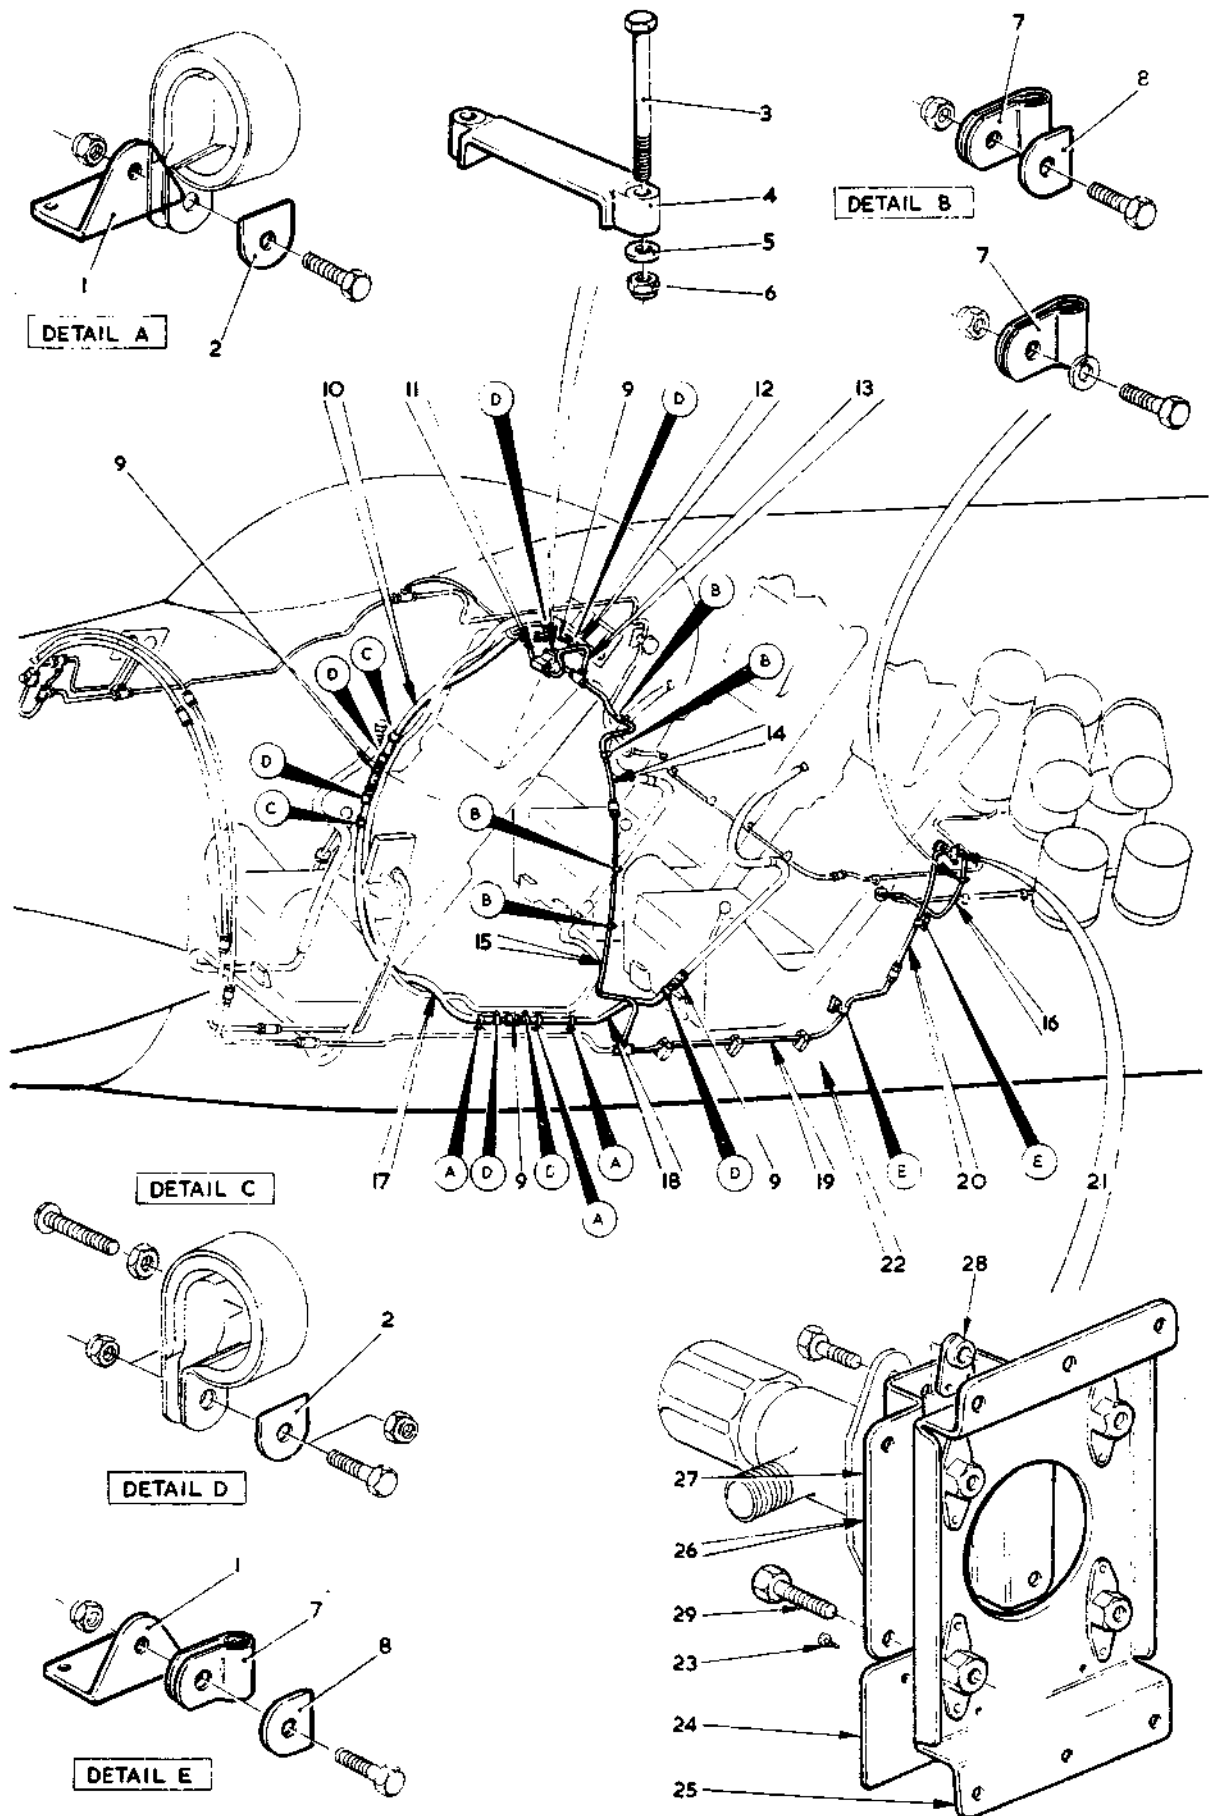


FIG.72 OXYGEN SYSTEM

•

•

•

•

•

•

•

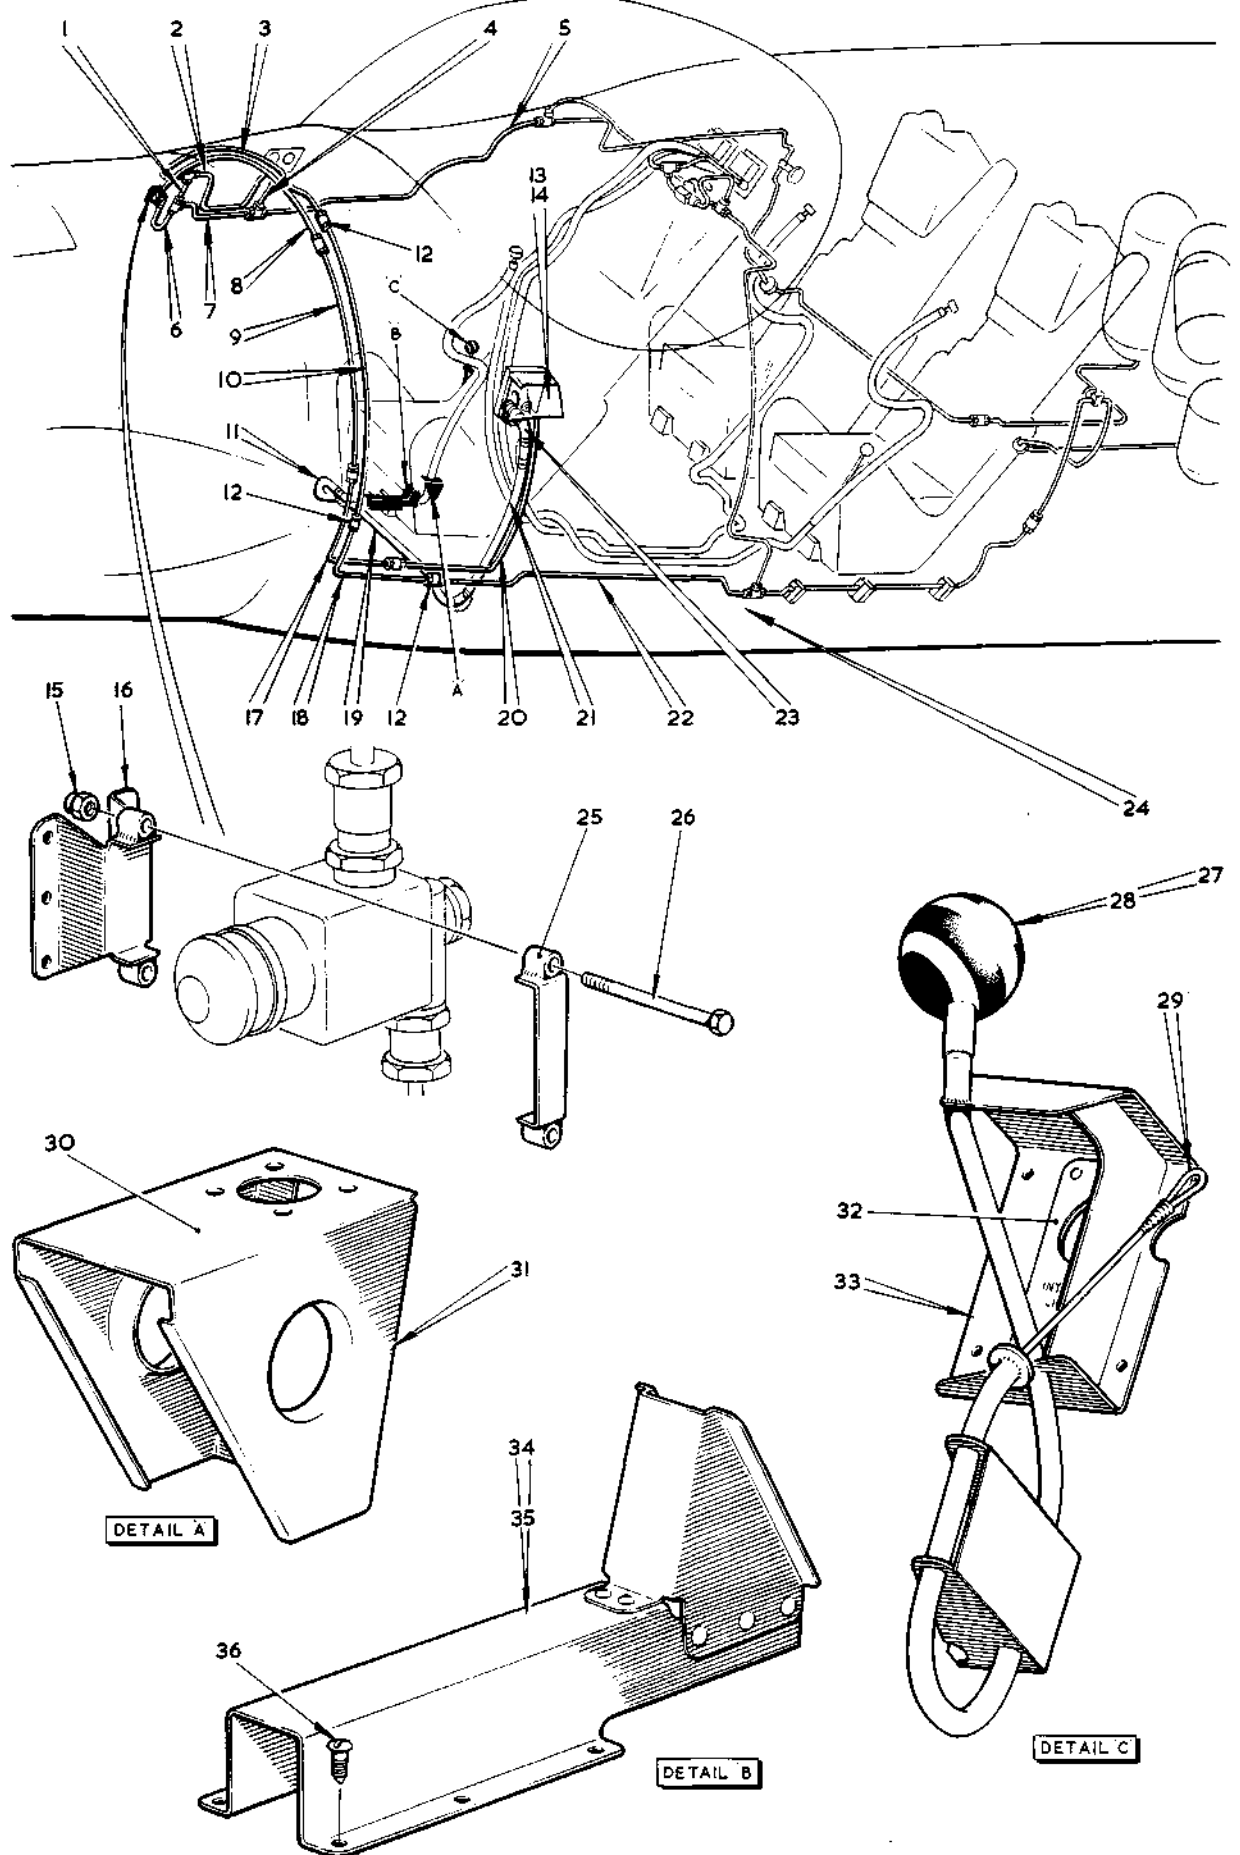


FIG 73 OXYGEN SYSTEM
Restricted

•

•

•

•

•

•

•

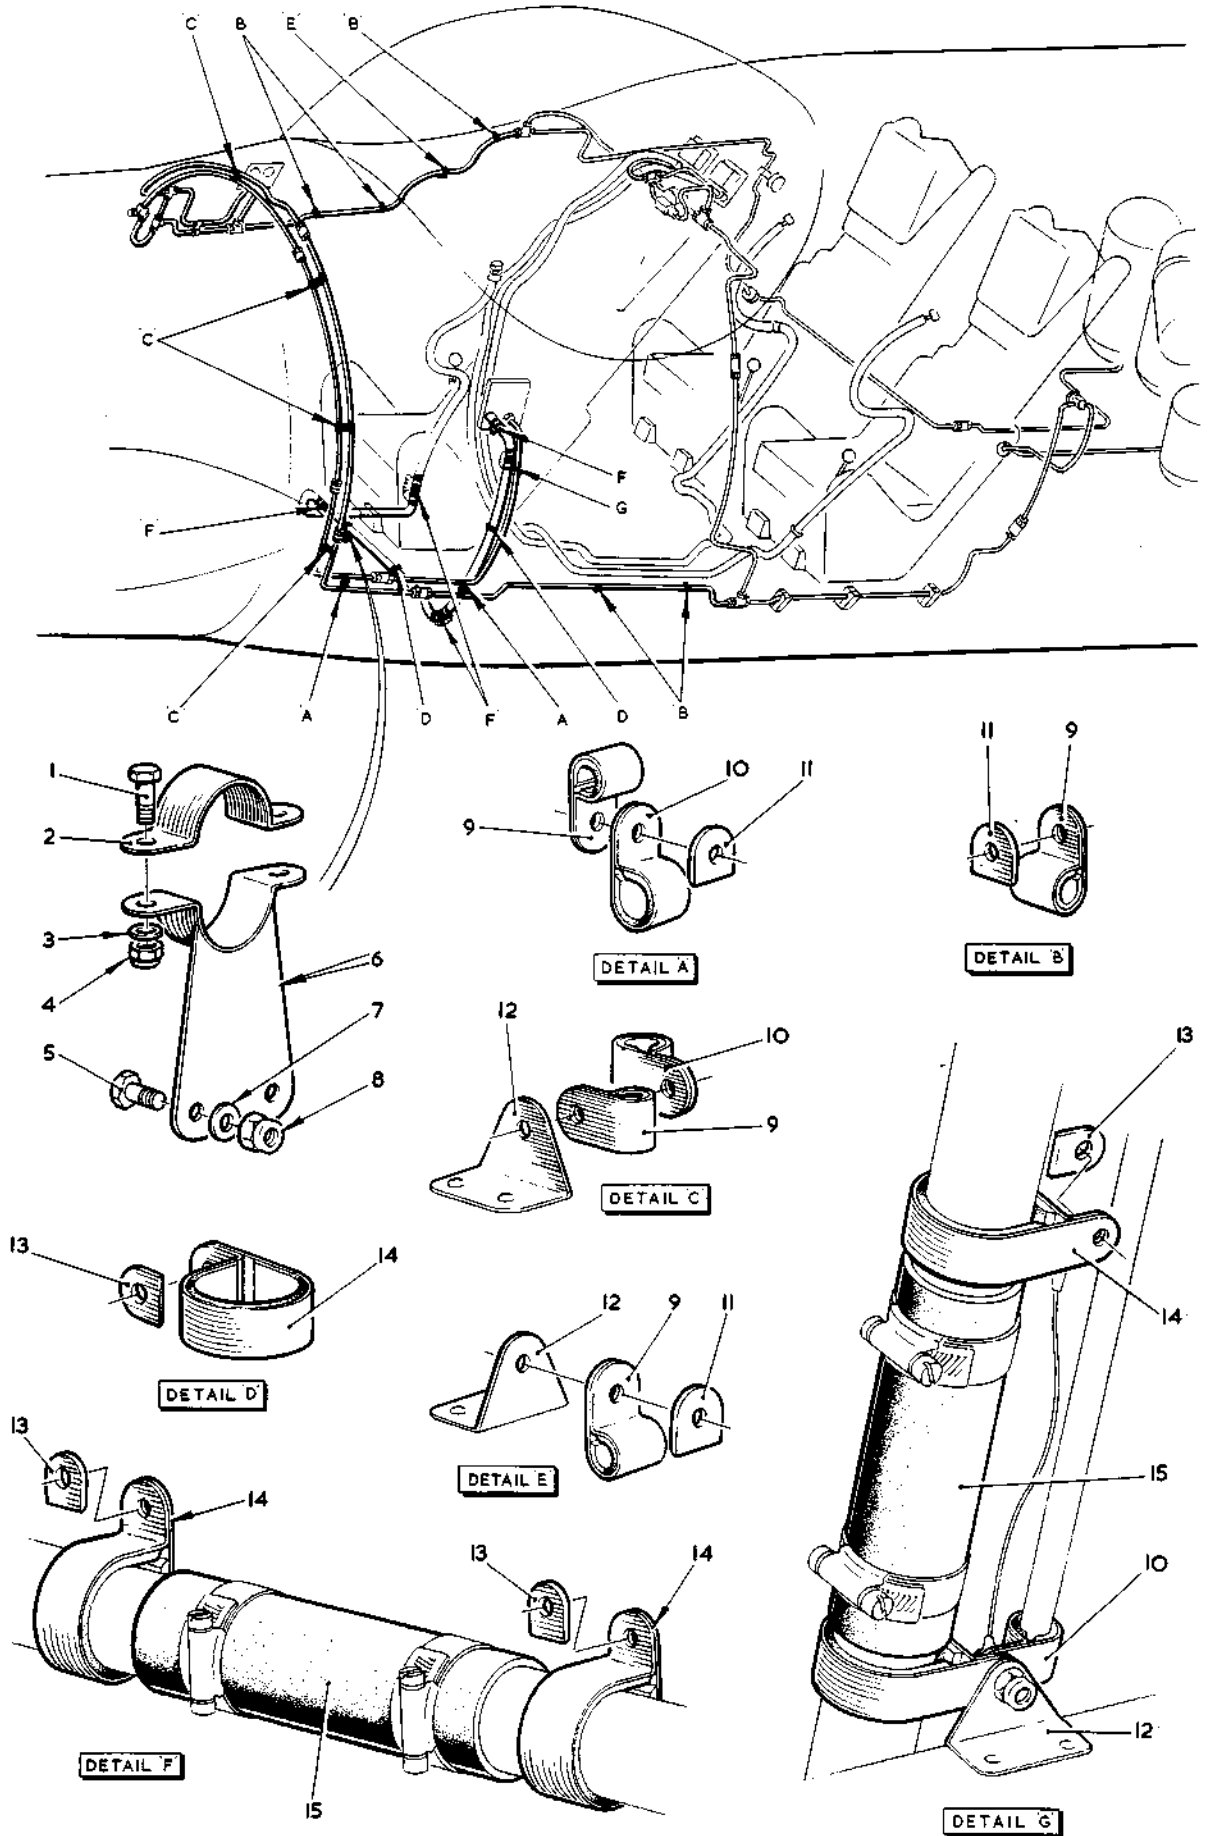


FIG 74 OXYGEN SYSTEM
Restricted

●

●

●

●

●

●

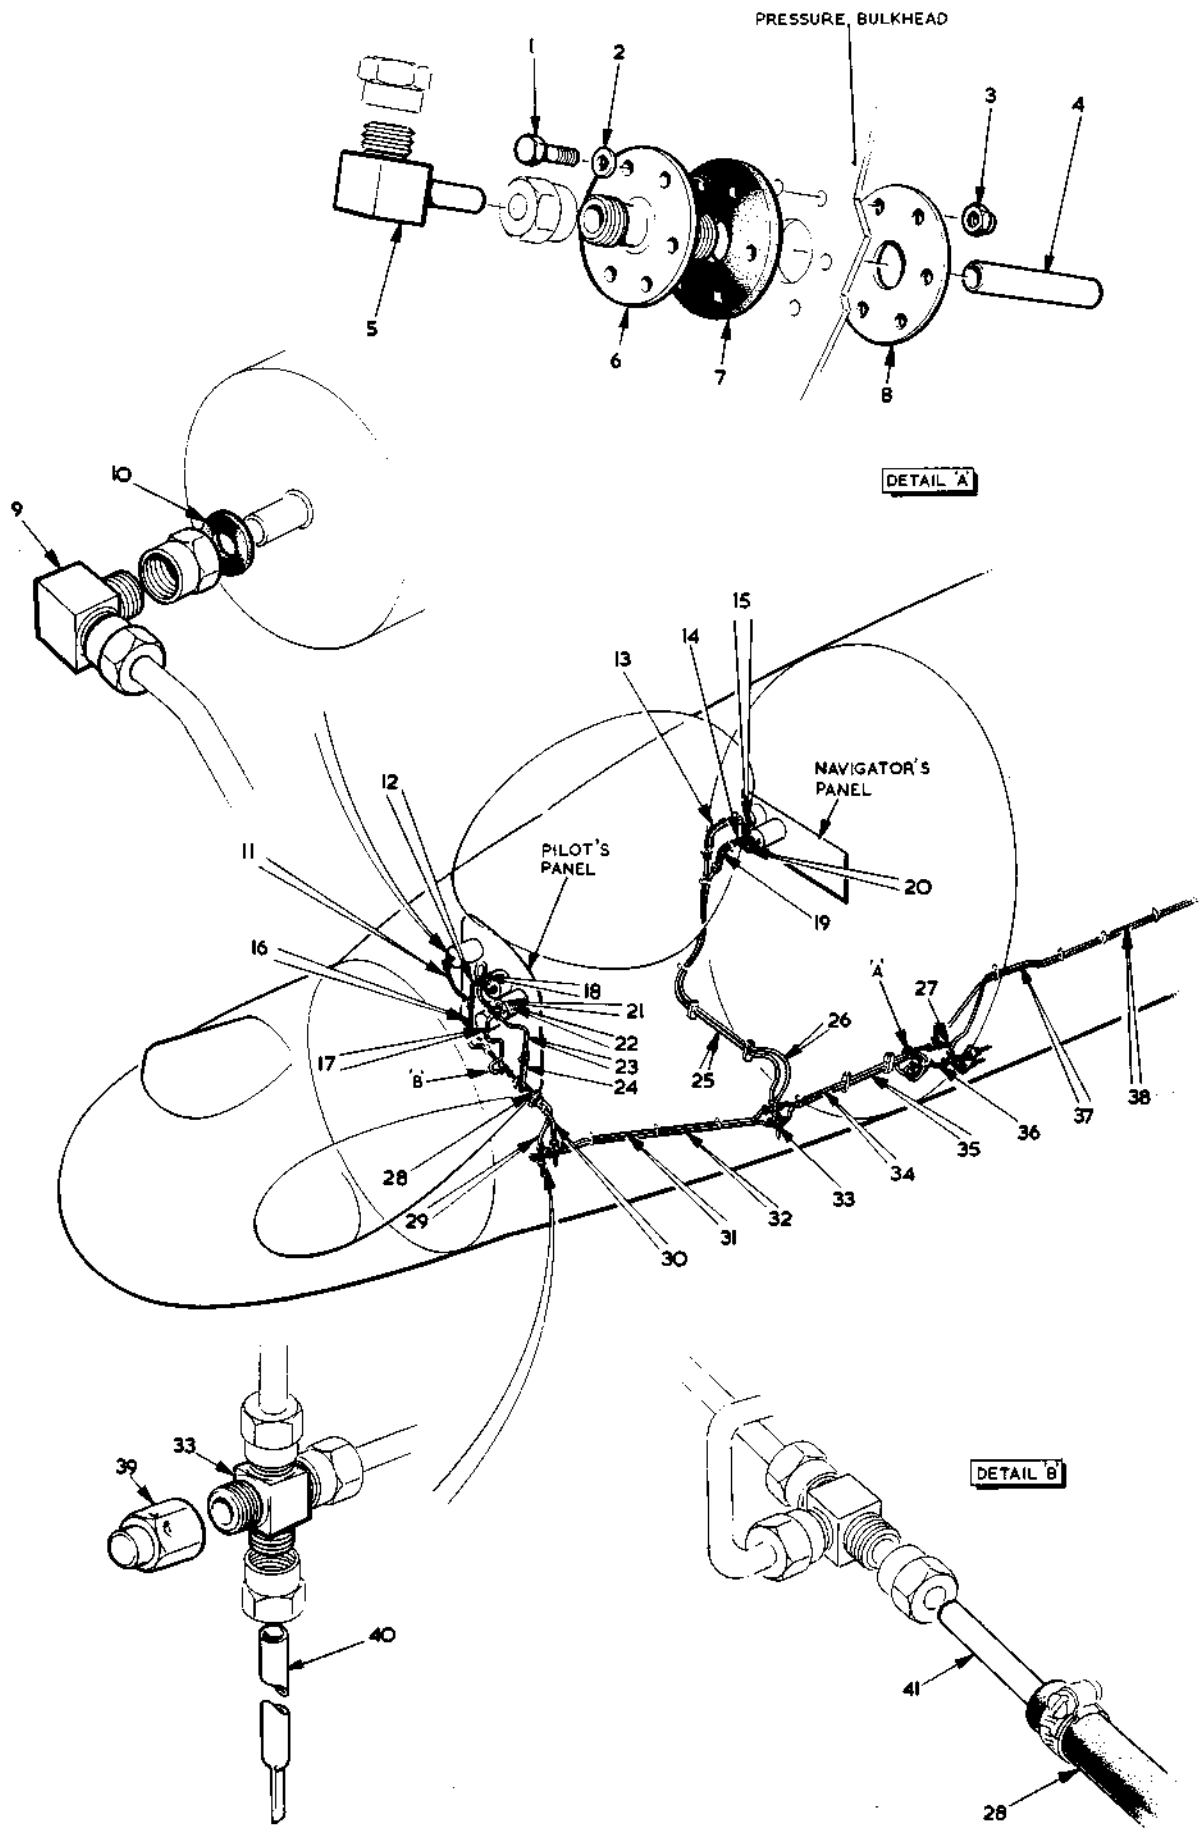


FIG. 75 PITOT AND STATIC PIPES IN FRONT FUSELAGE
Restricted

●

●

●

●

●

●

●

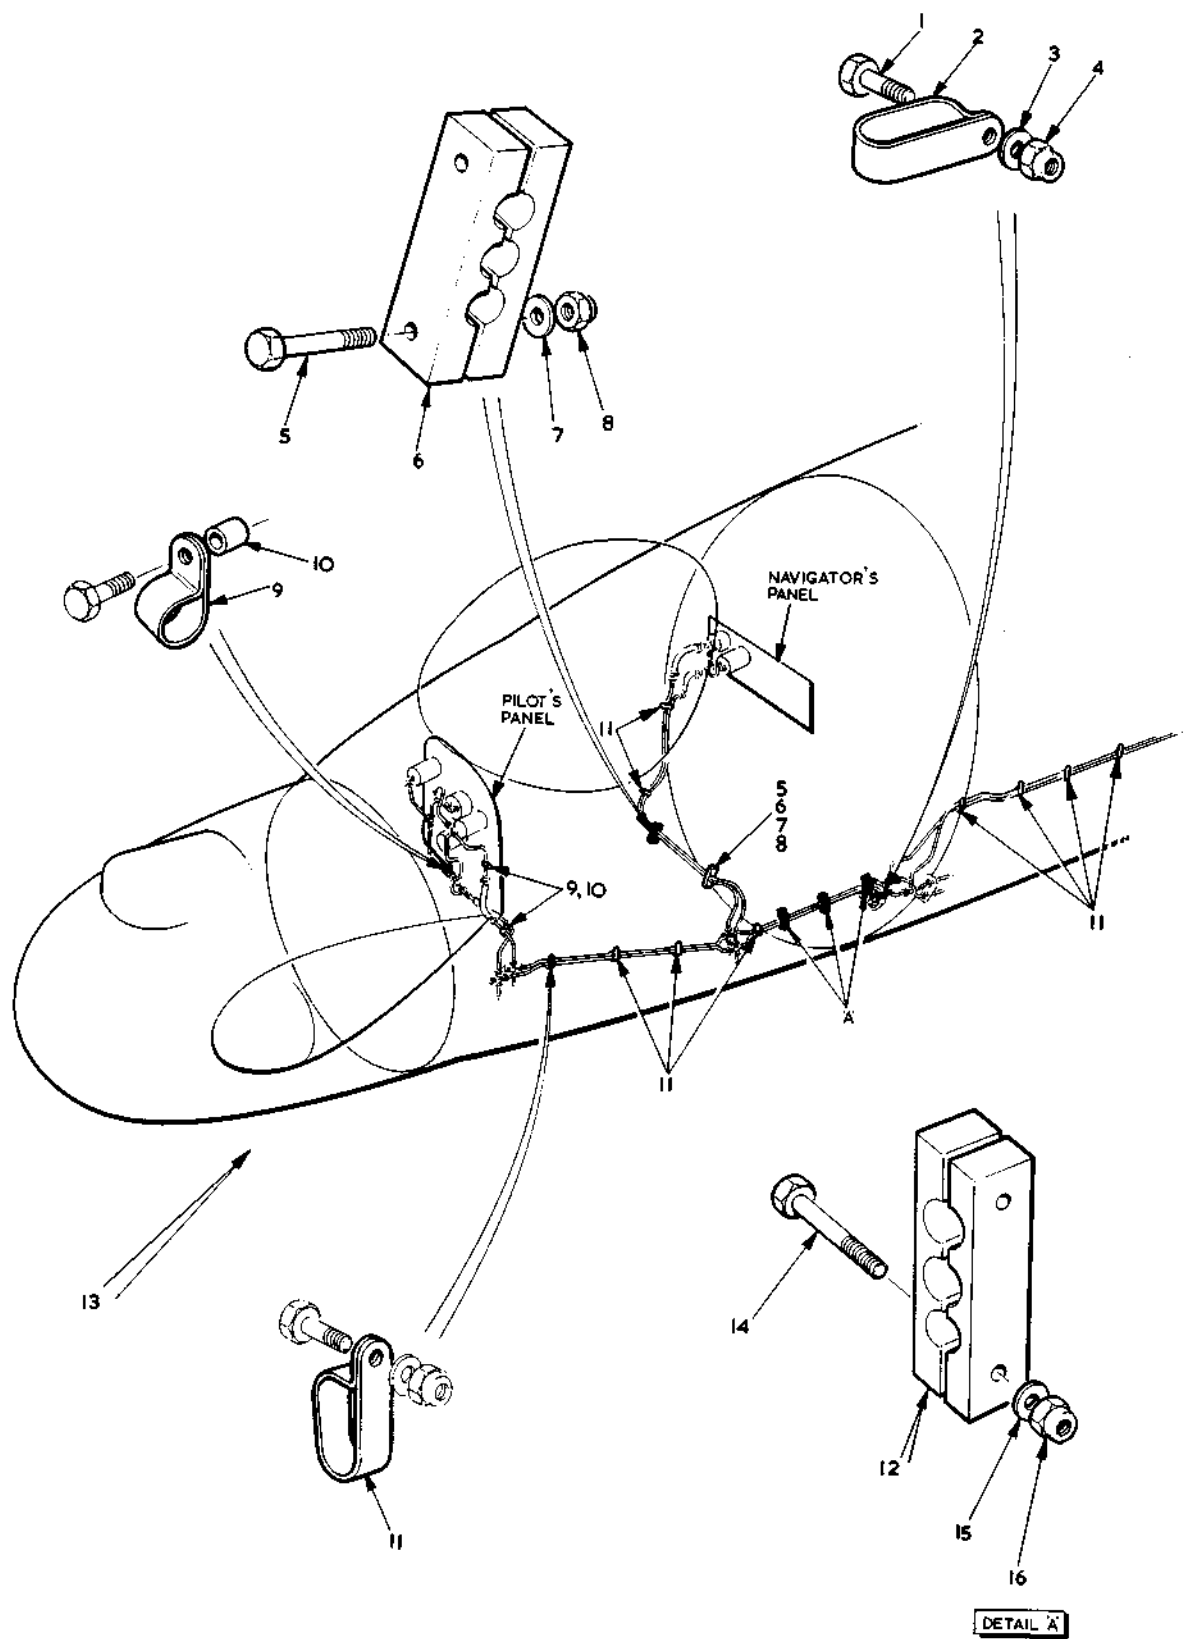


FIG. 76 PITOT AND STATIC PIPES IN FRONT FUSELAGE
Restricted

1

2

3

4

5

6

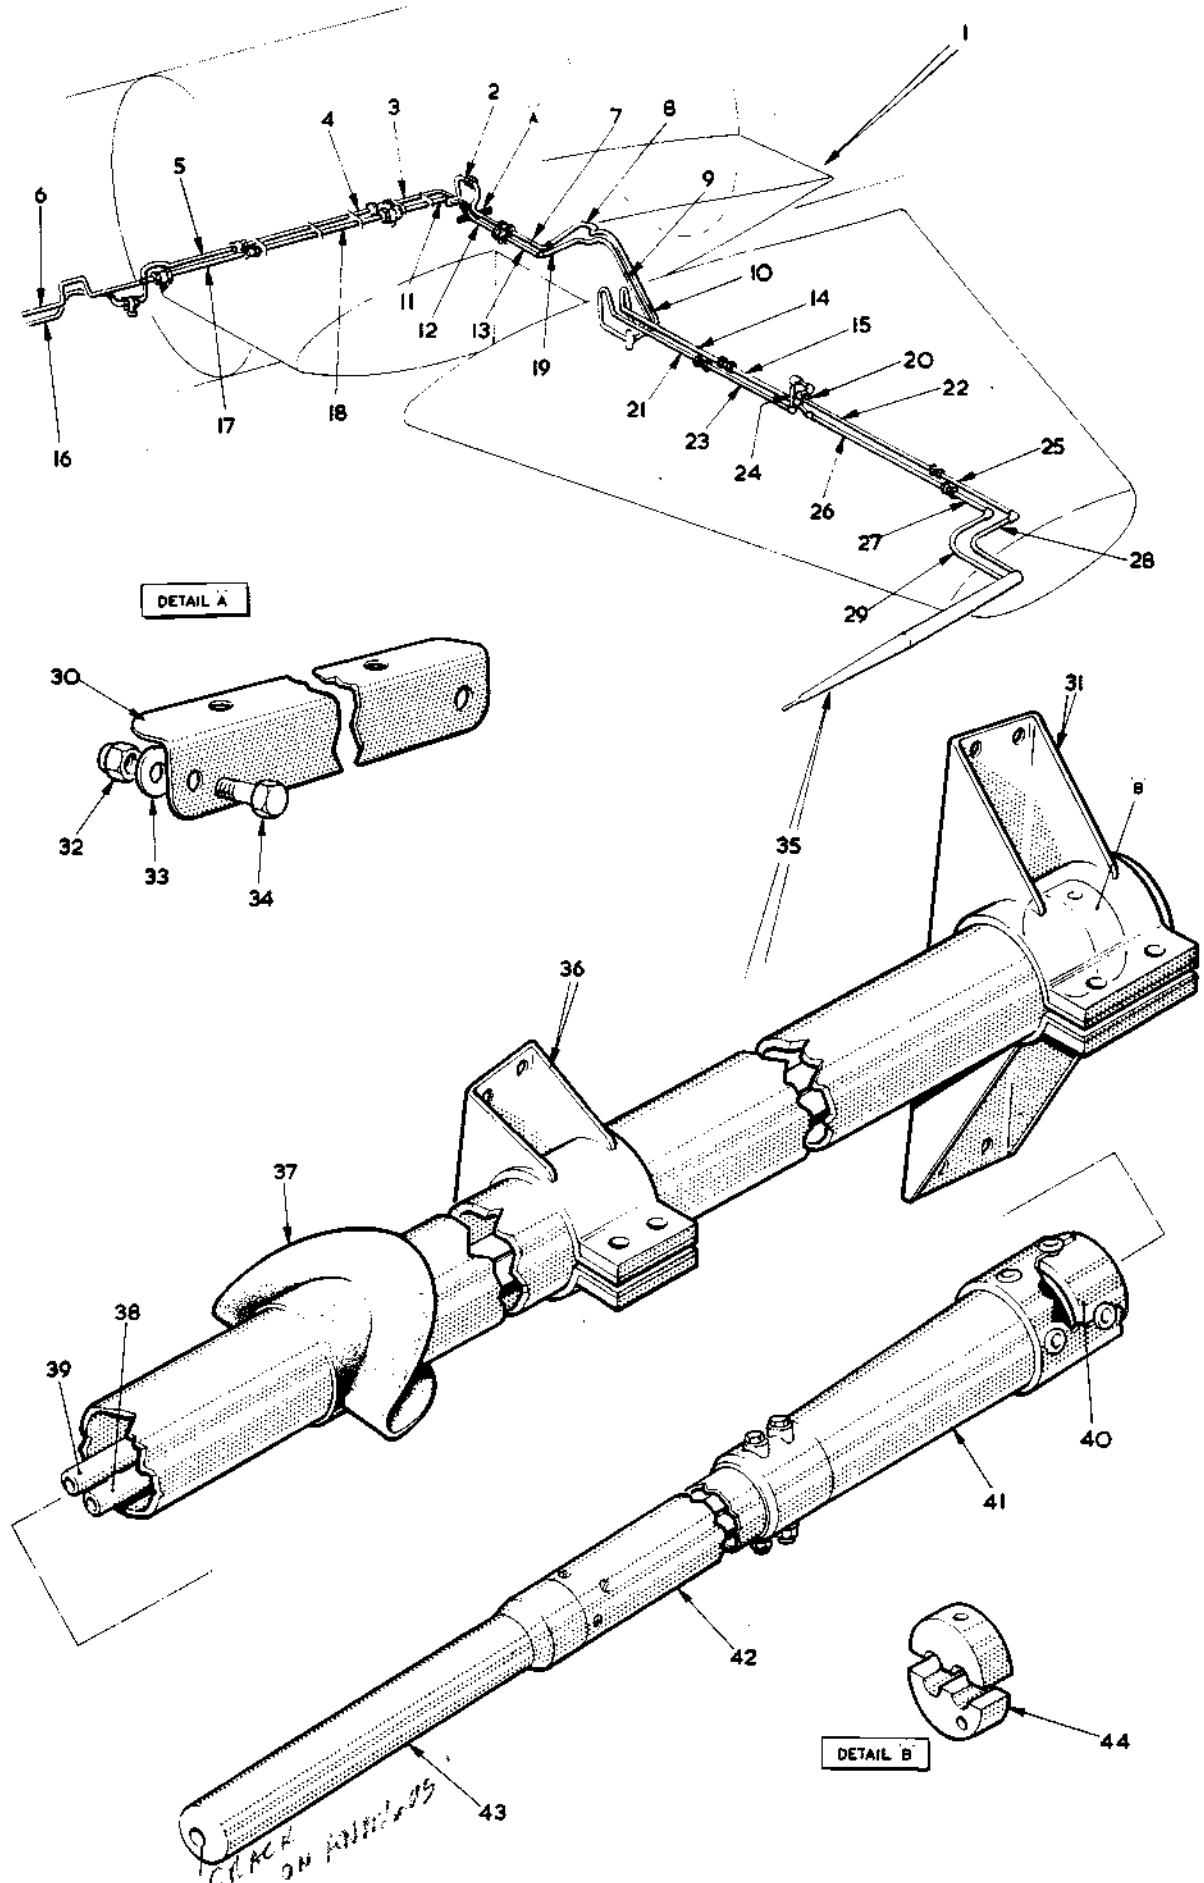


FIG 77. PITOT AND STATIC PIPES IN PORT WING
Restricted

•

•

•

•

•

•

•

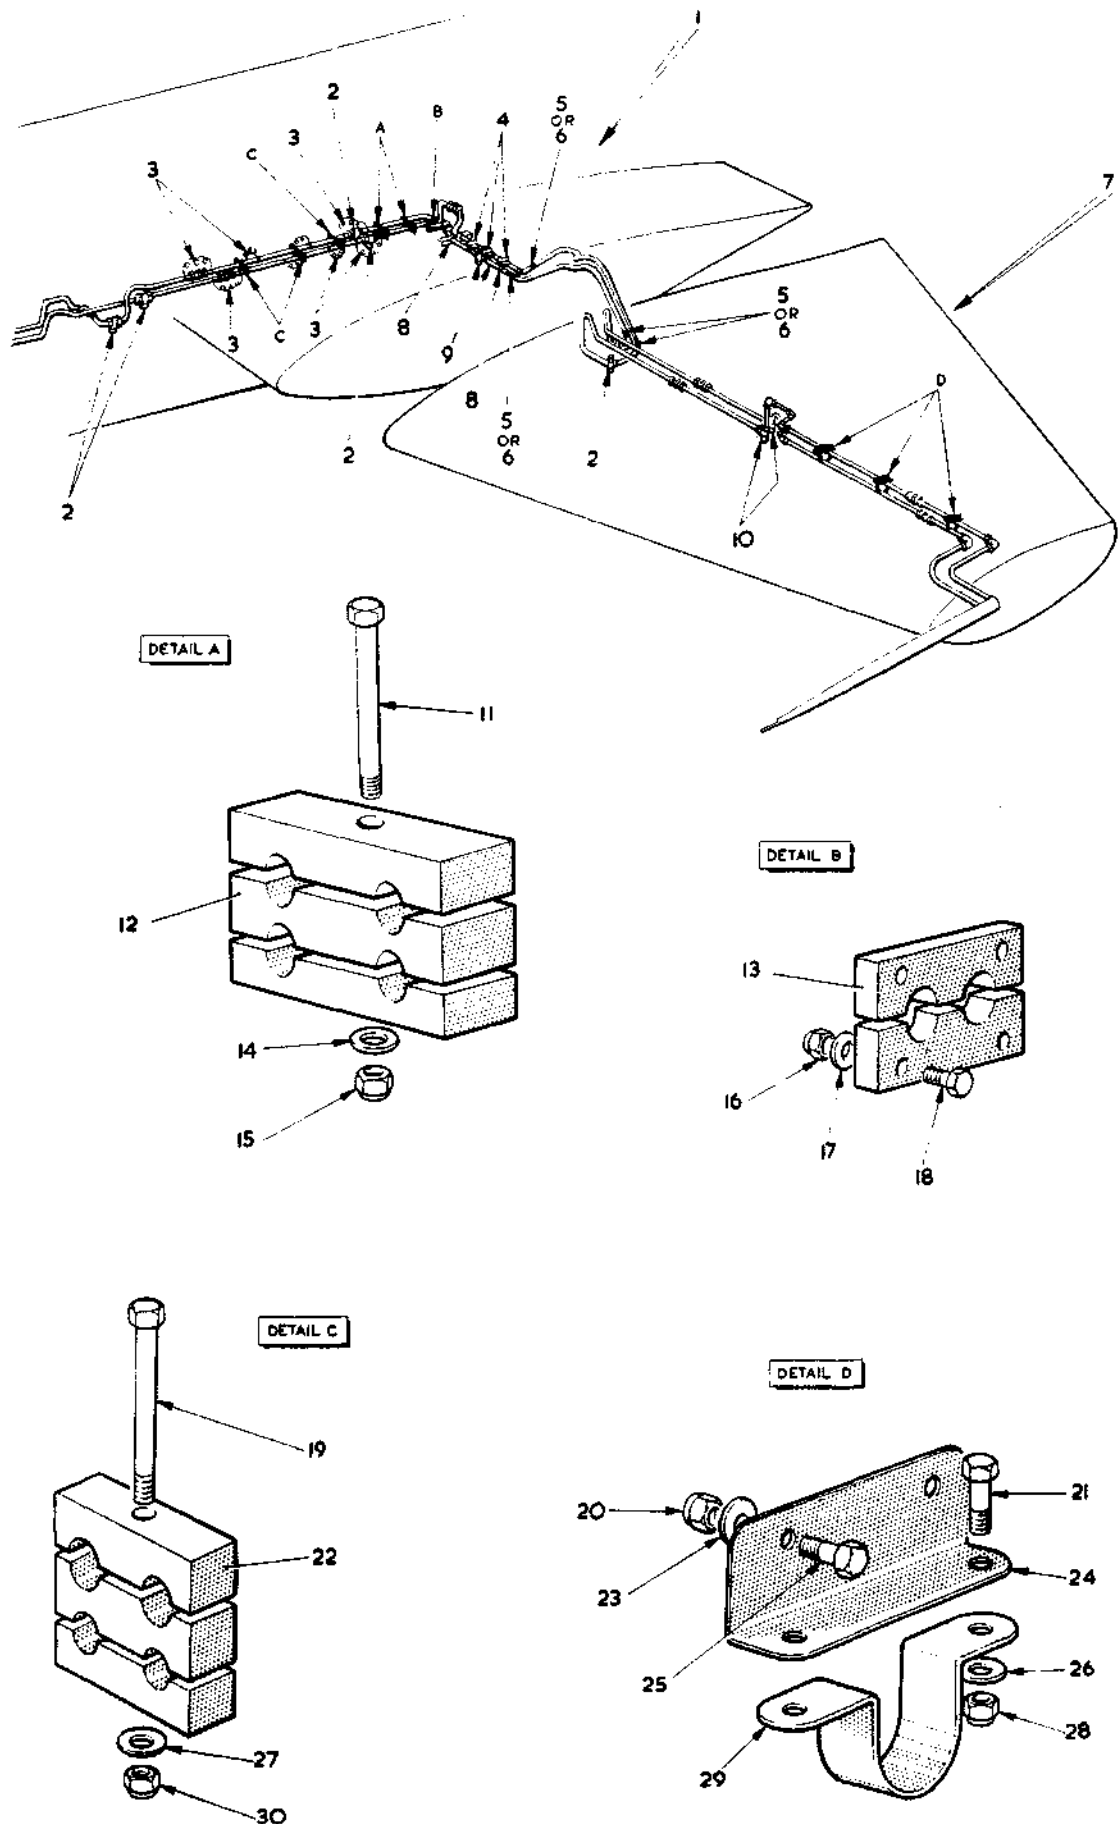


FIG 78. PITOT AND STATIC PIPES IN PORT WING
Restricted

1

2

3

4

5

6

7

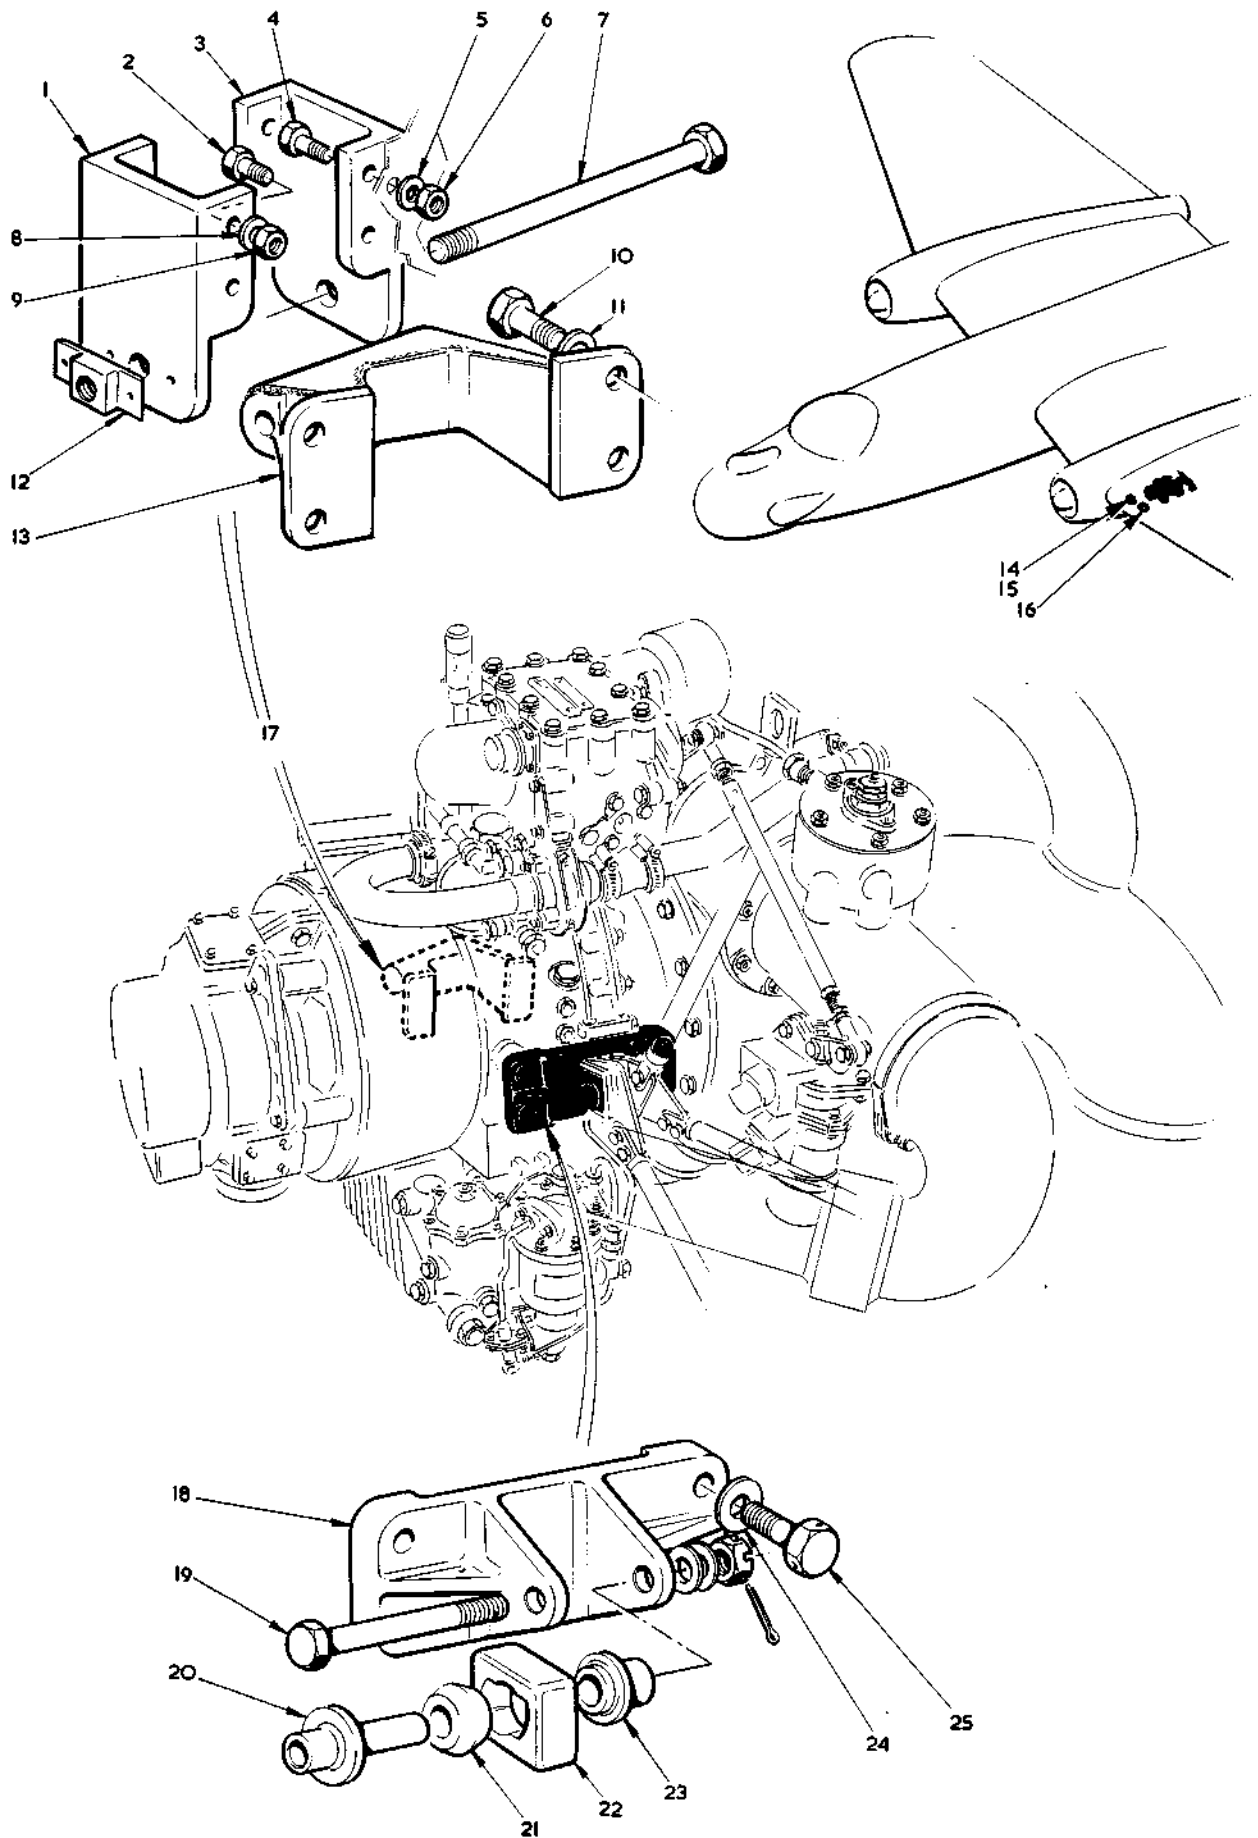


FIG. 79 TURBO-ALTERNATOR IN PORT WING
Restricted

1

2


3

4

5

6

7

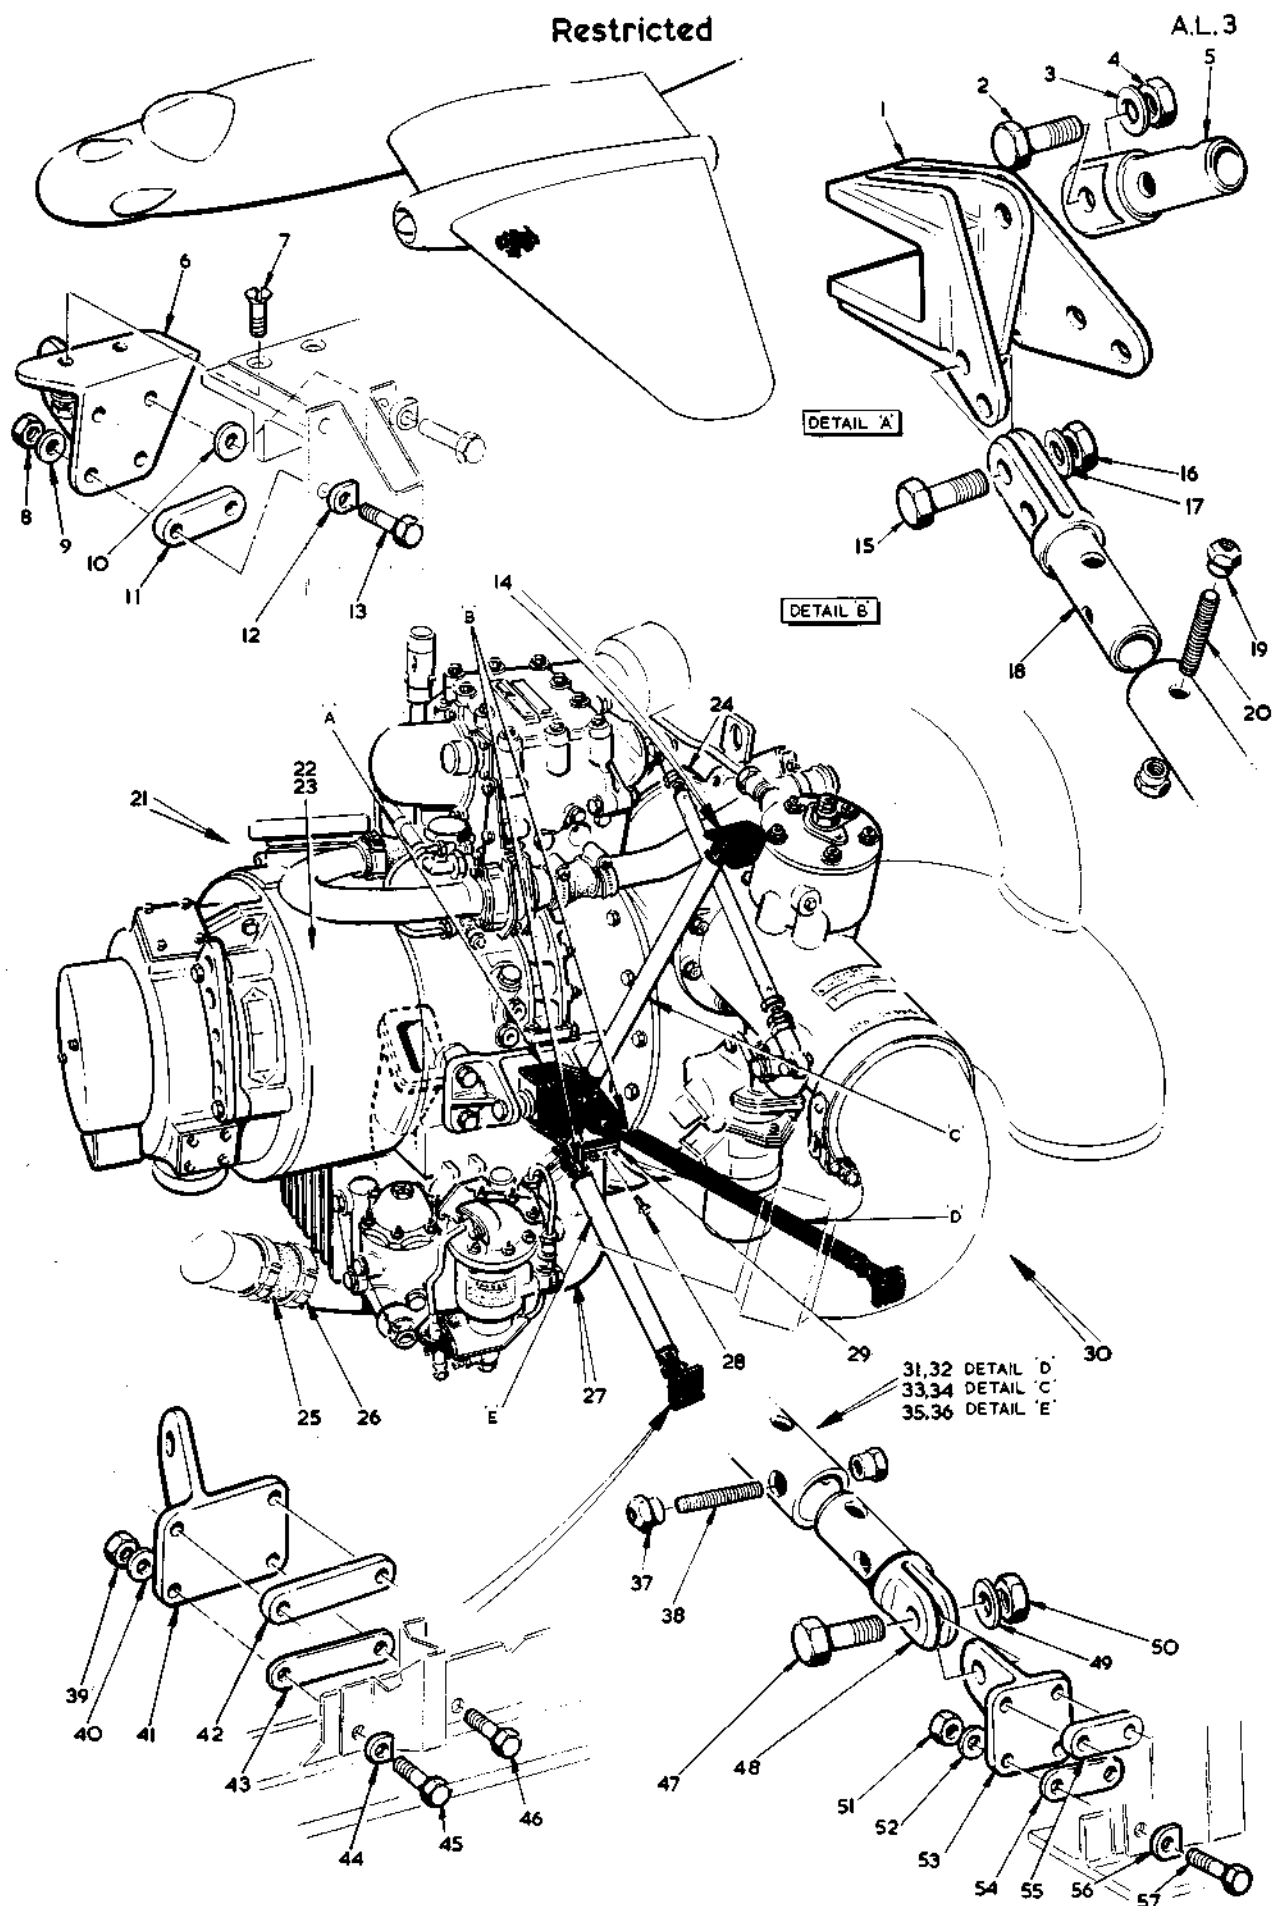



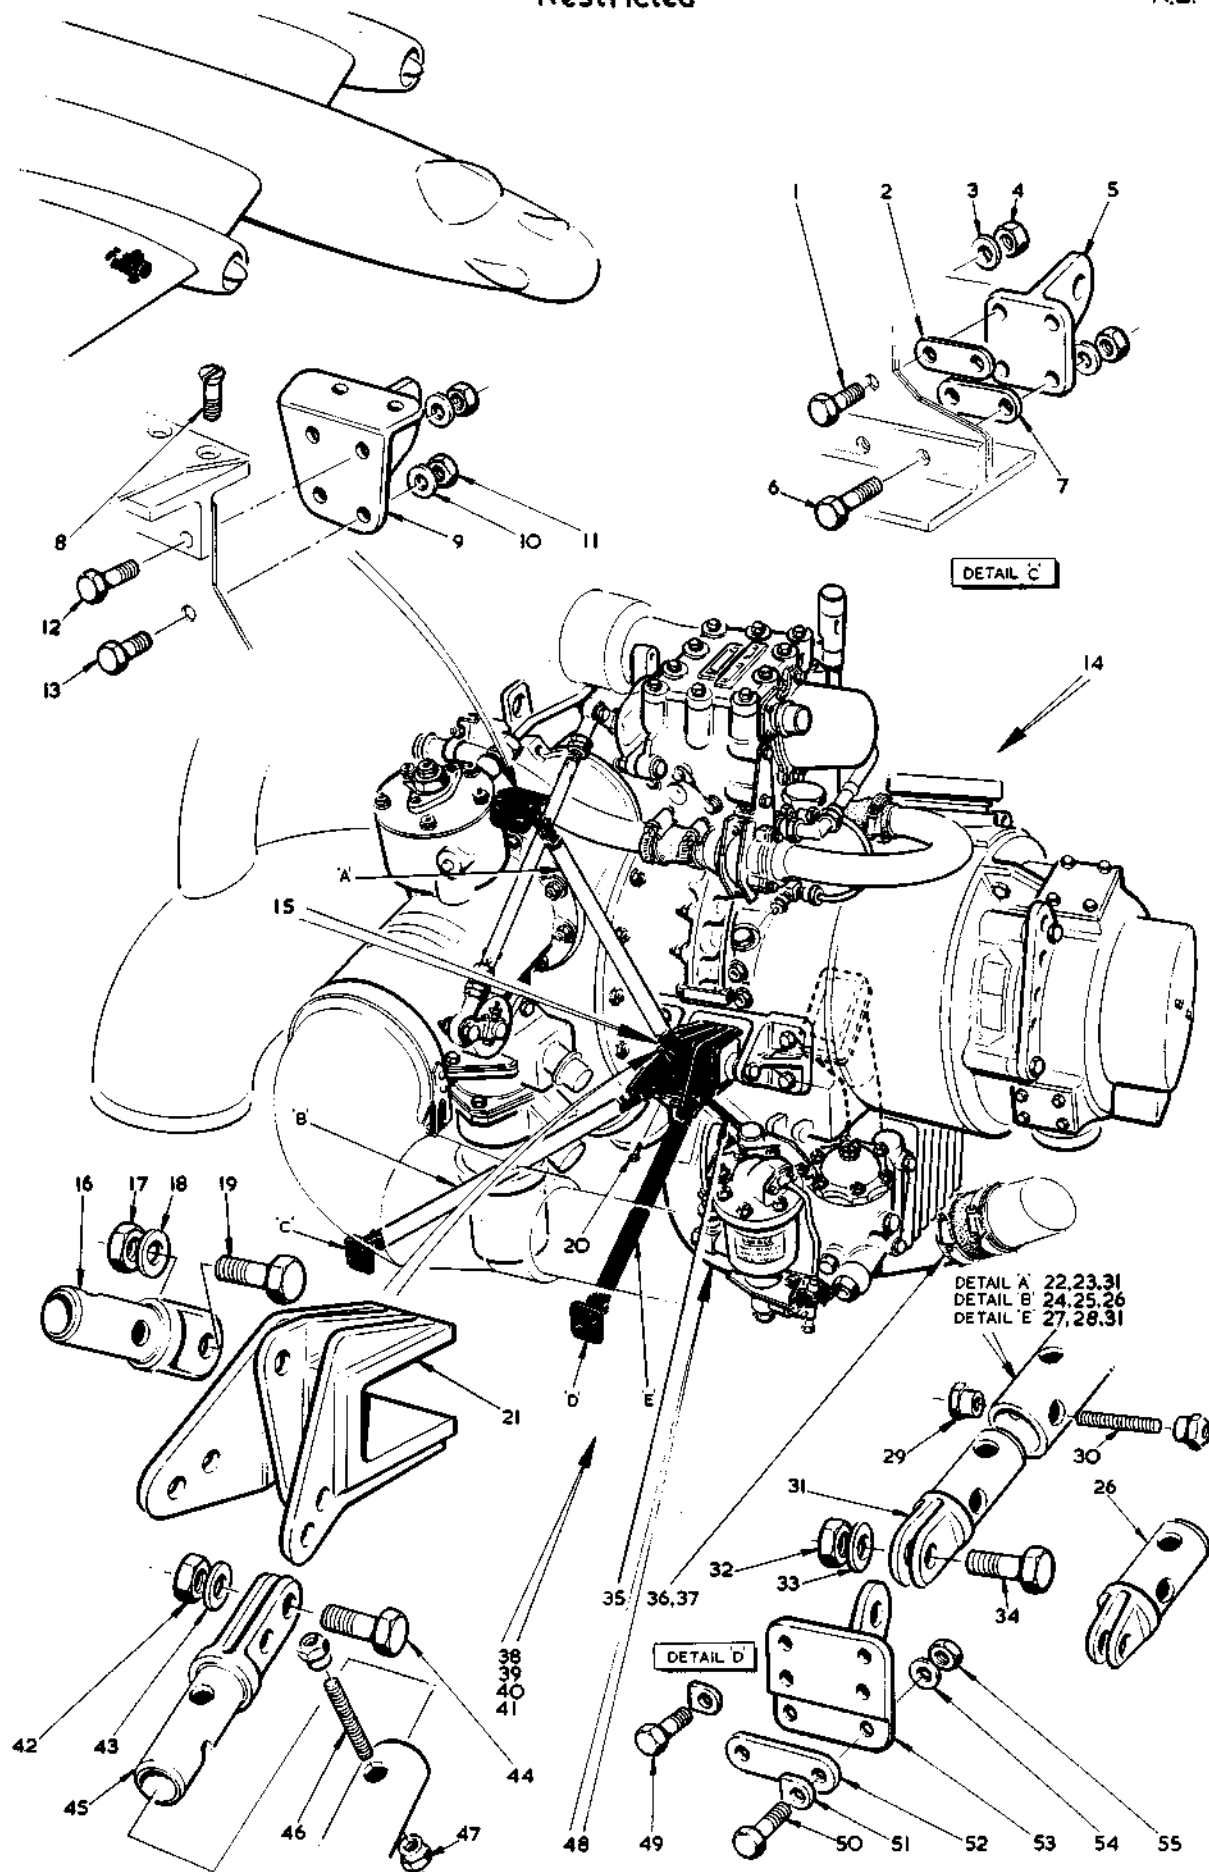


FIG. 81 TURBO ALTERNATOR IN STARBOARD WING
Restricted

1

2

3

4

5

6

7

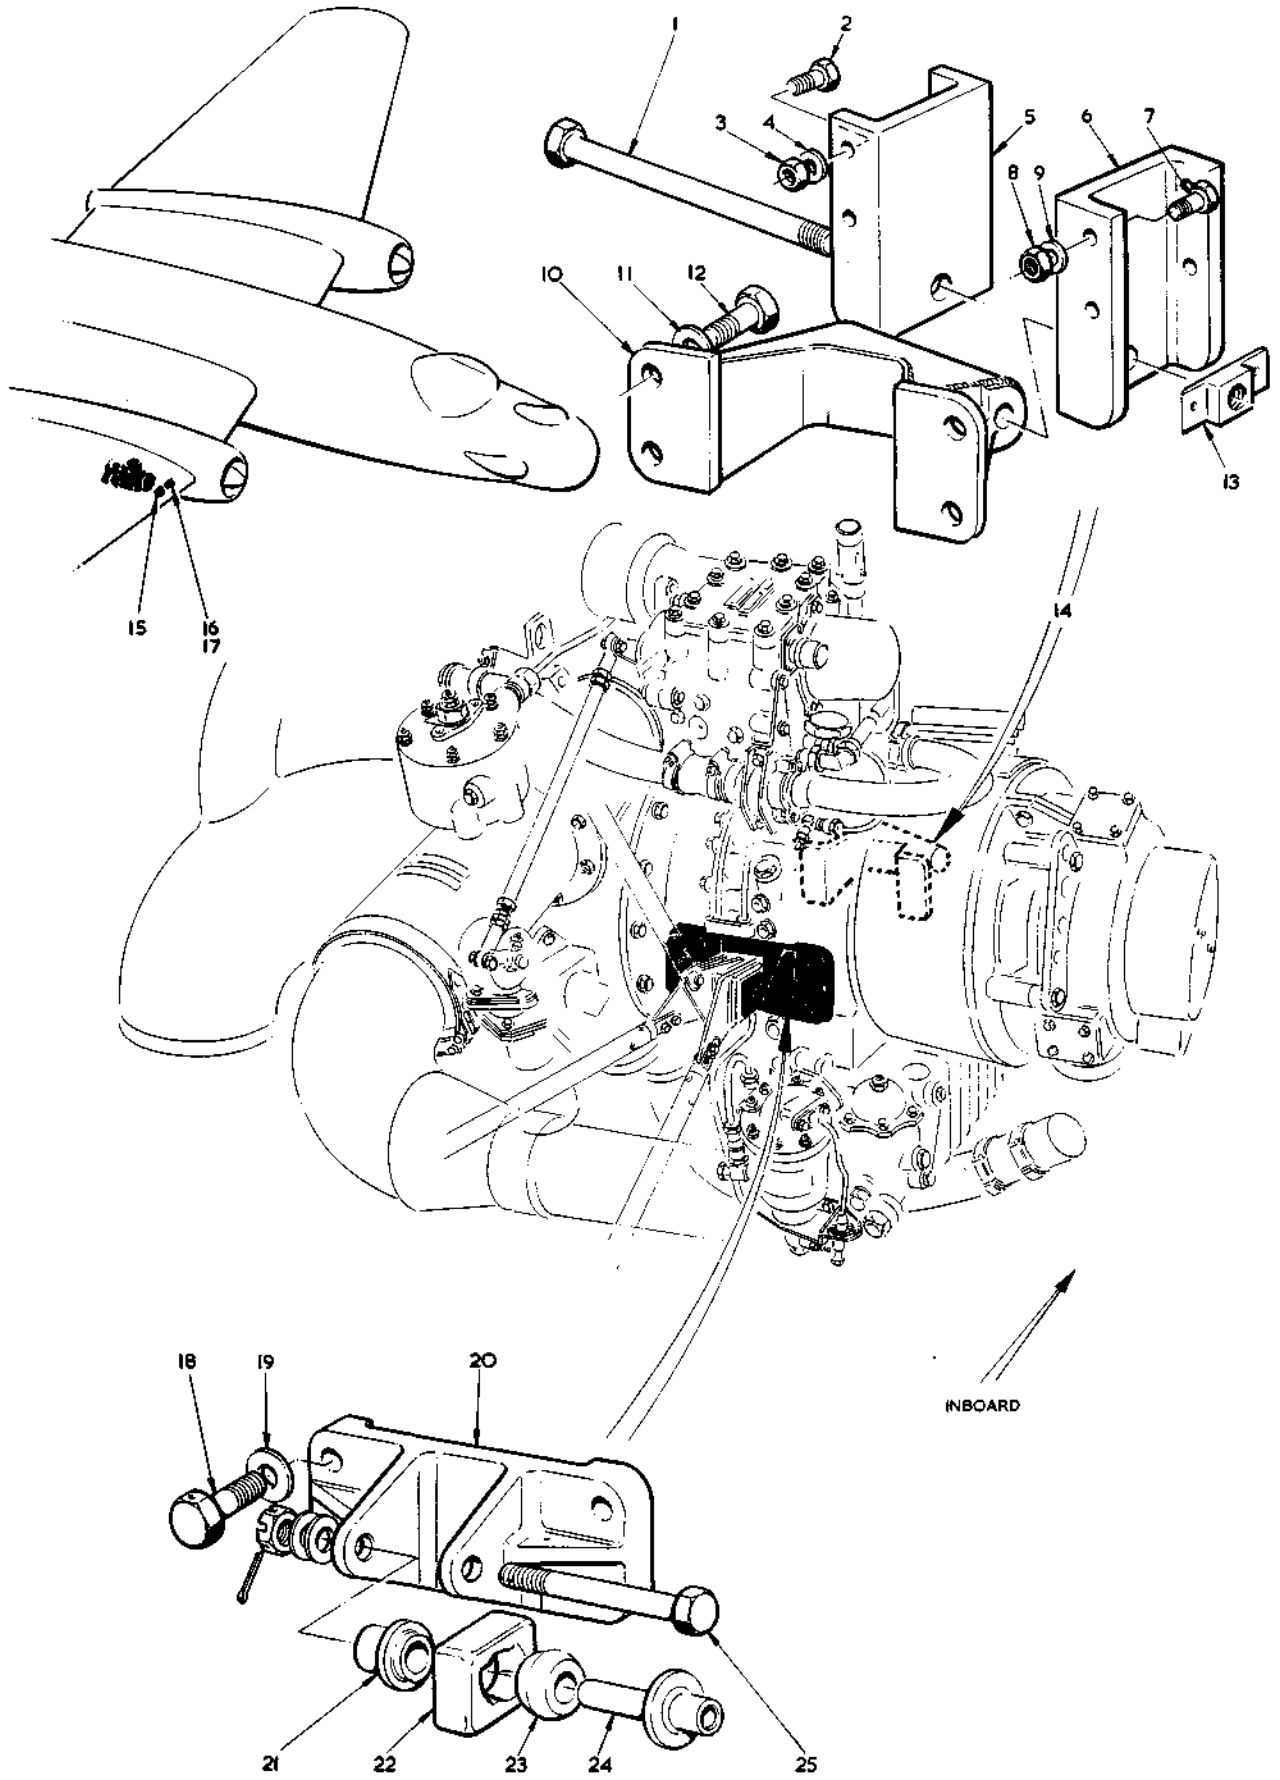


FIG. 82 TURBO-ALTERNATOR IN STARBOARD WING

Restricted

1

2

3

4

5

6

7

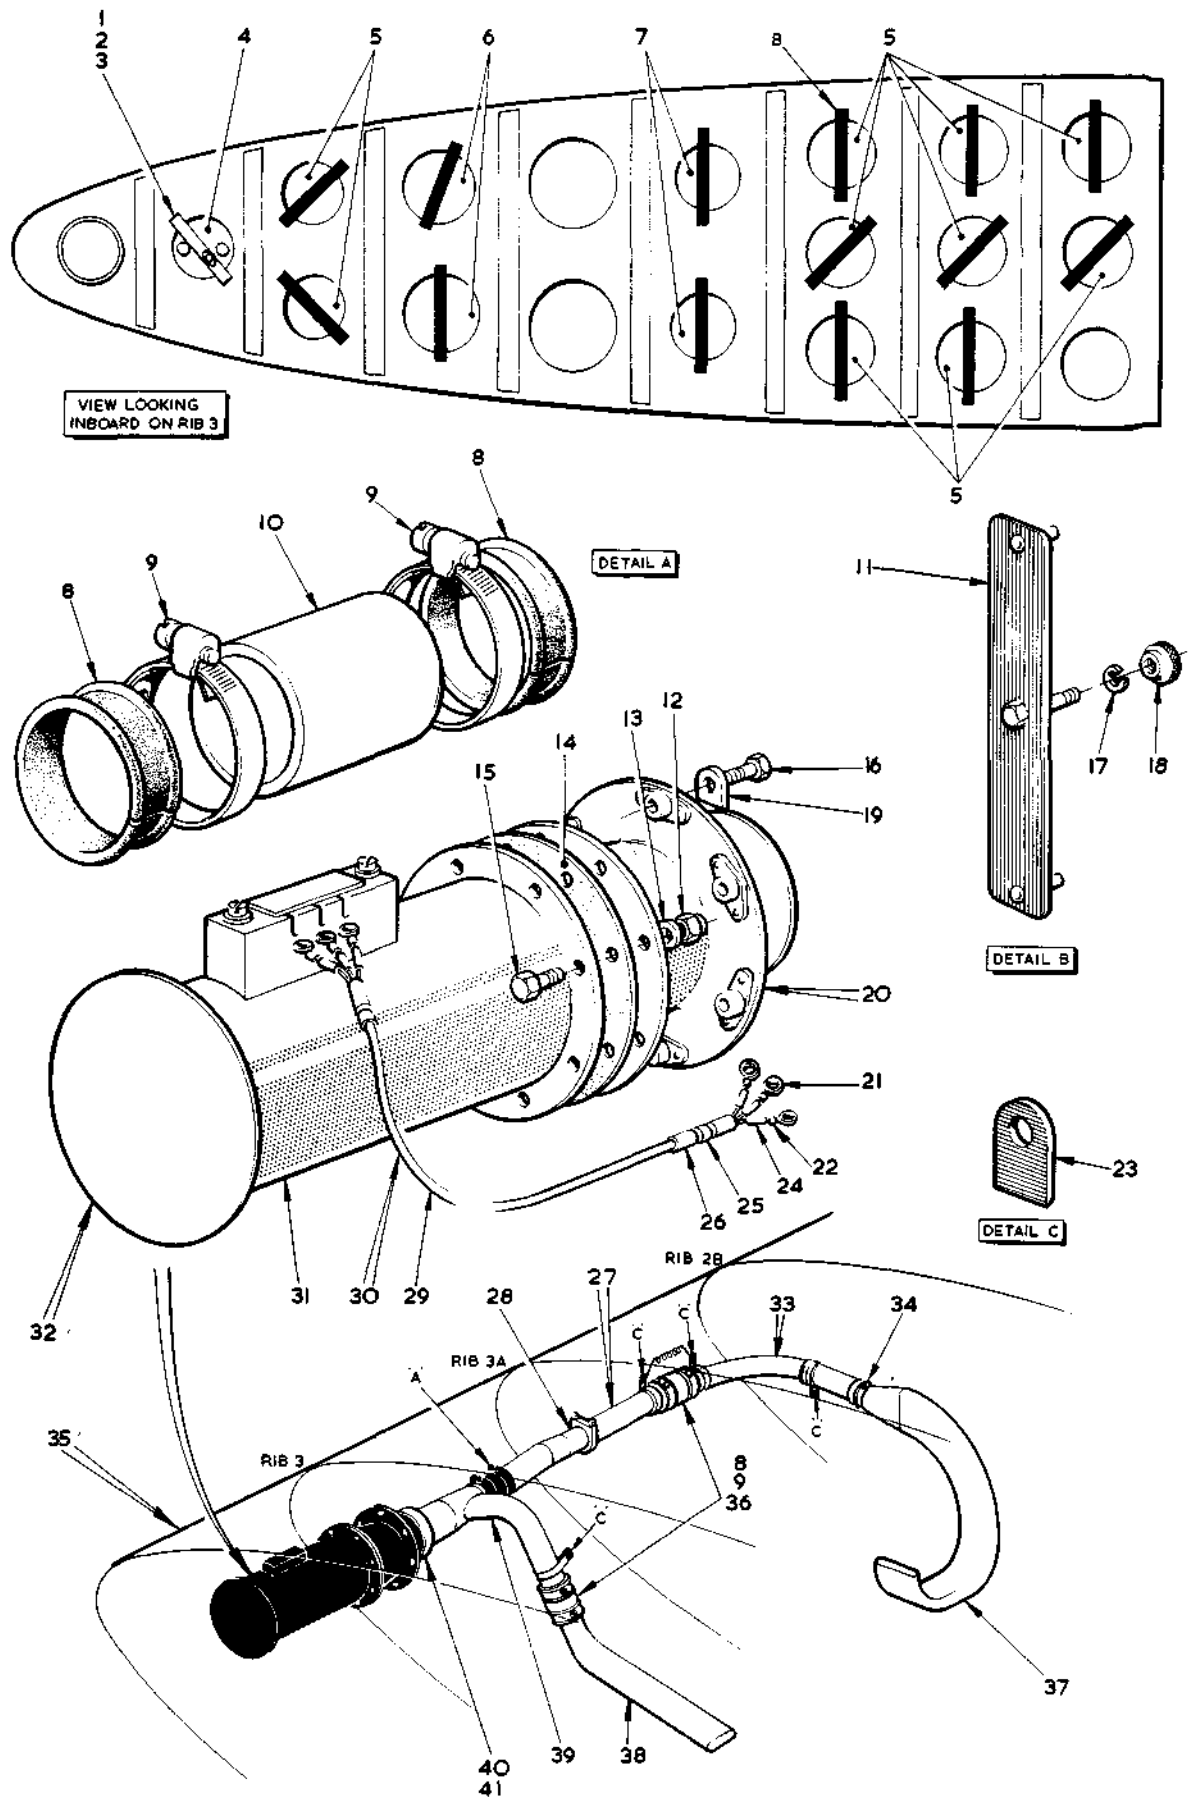


FIG. 83 TURBO-ALTERNATOR CONTROL UNITS COOLING IN PORT WING

Restricted



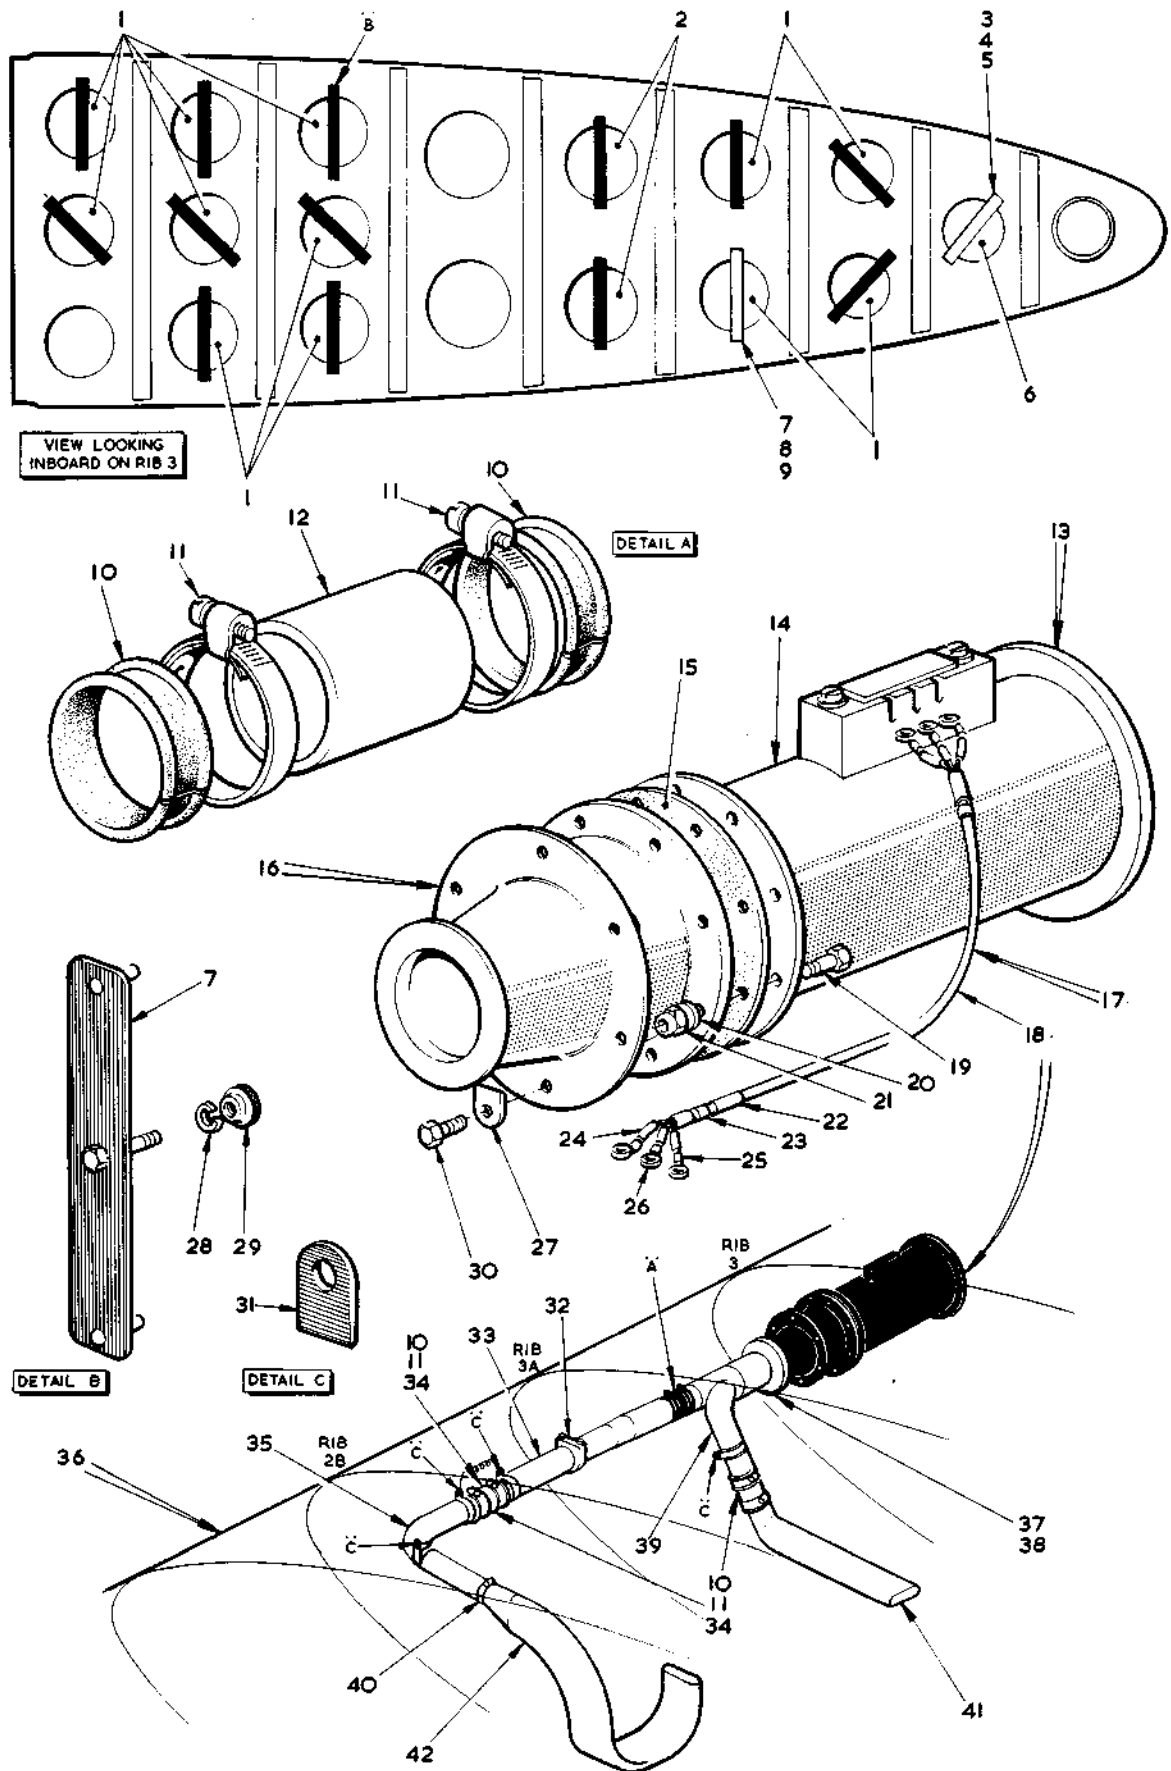


FIG.84 TURBO-ALTERNATOR CONTROL UNITS COOLING IN STBD WING

•

•

•

•

•

•

•

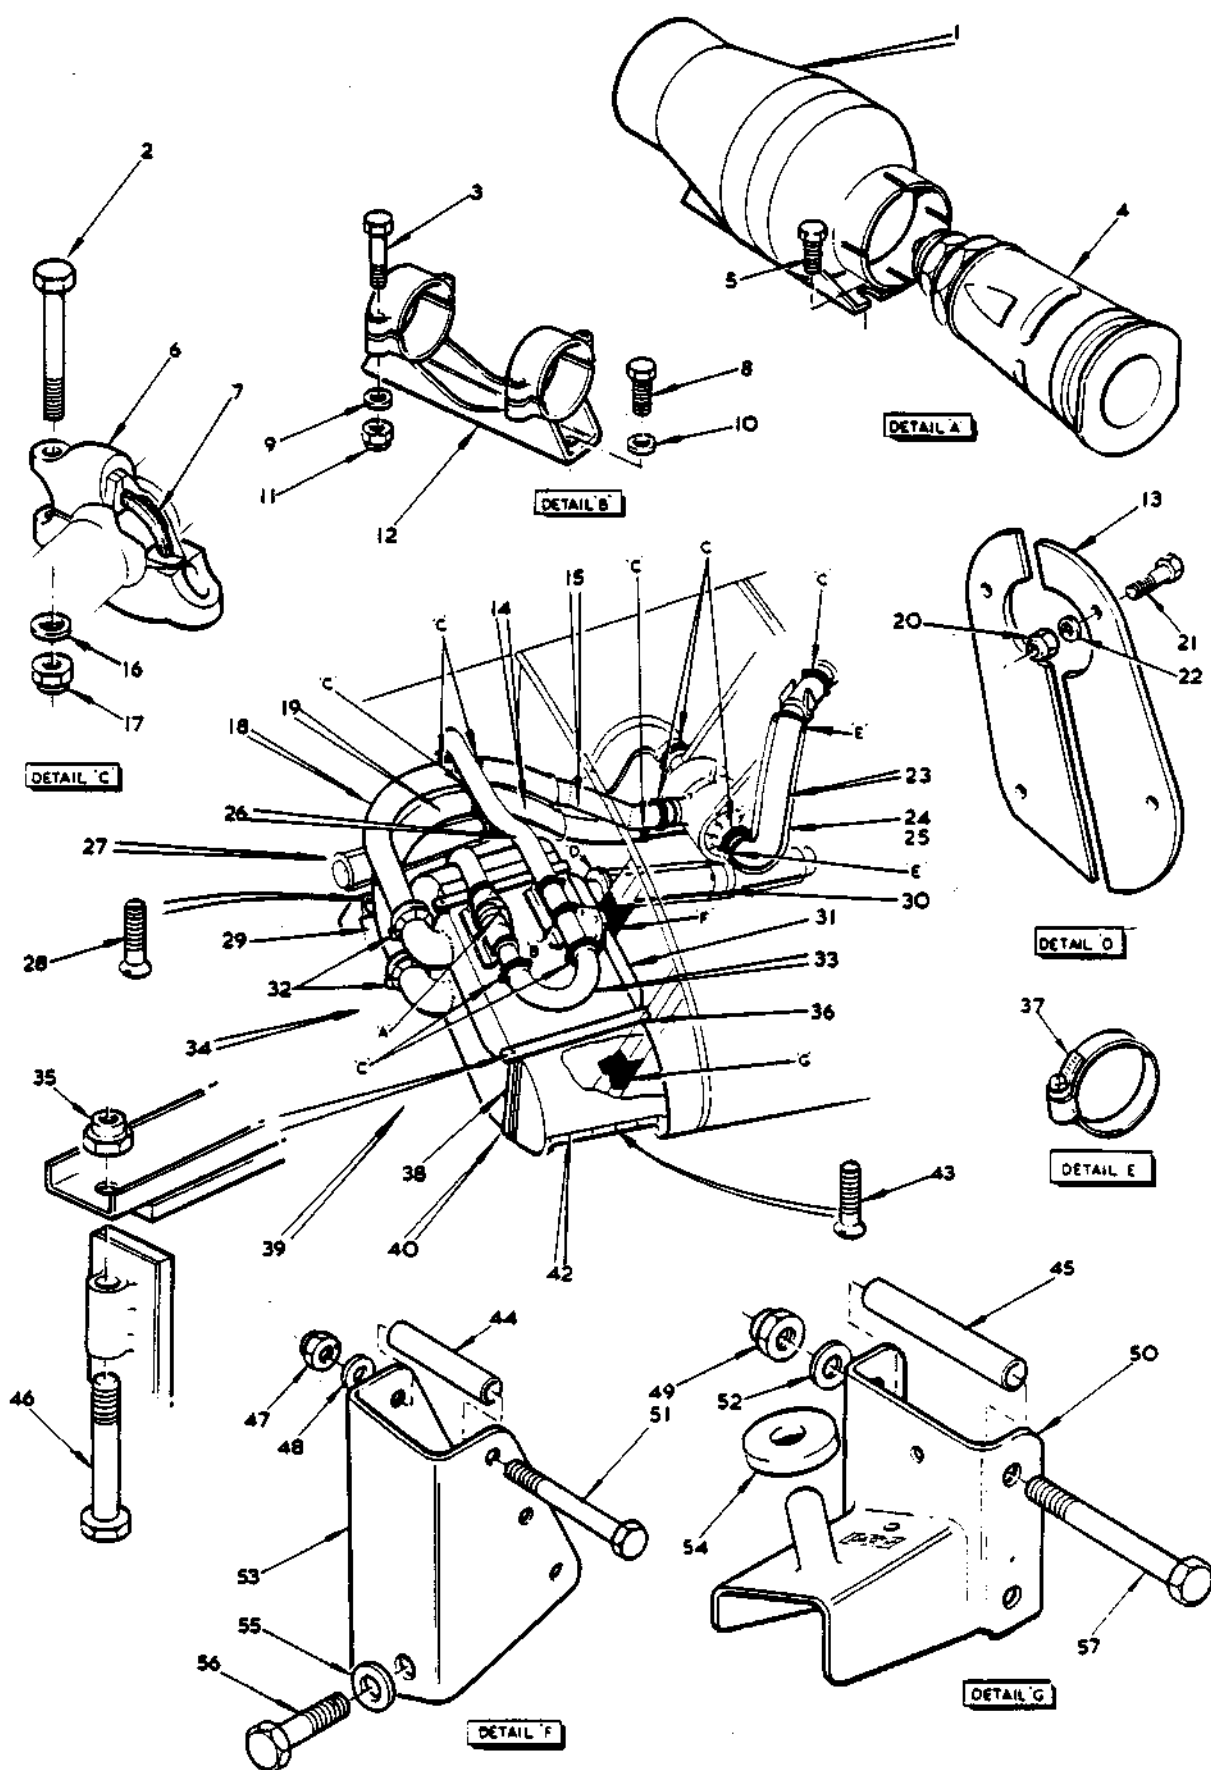


FIG.85 CABIN PRESSURE & COLD AIR SYSTEM IN PORT WING

T.MK.17 SECT N



Restricted

AL8

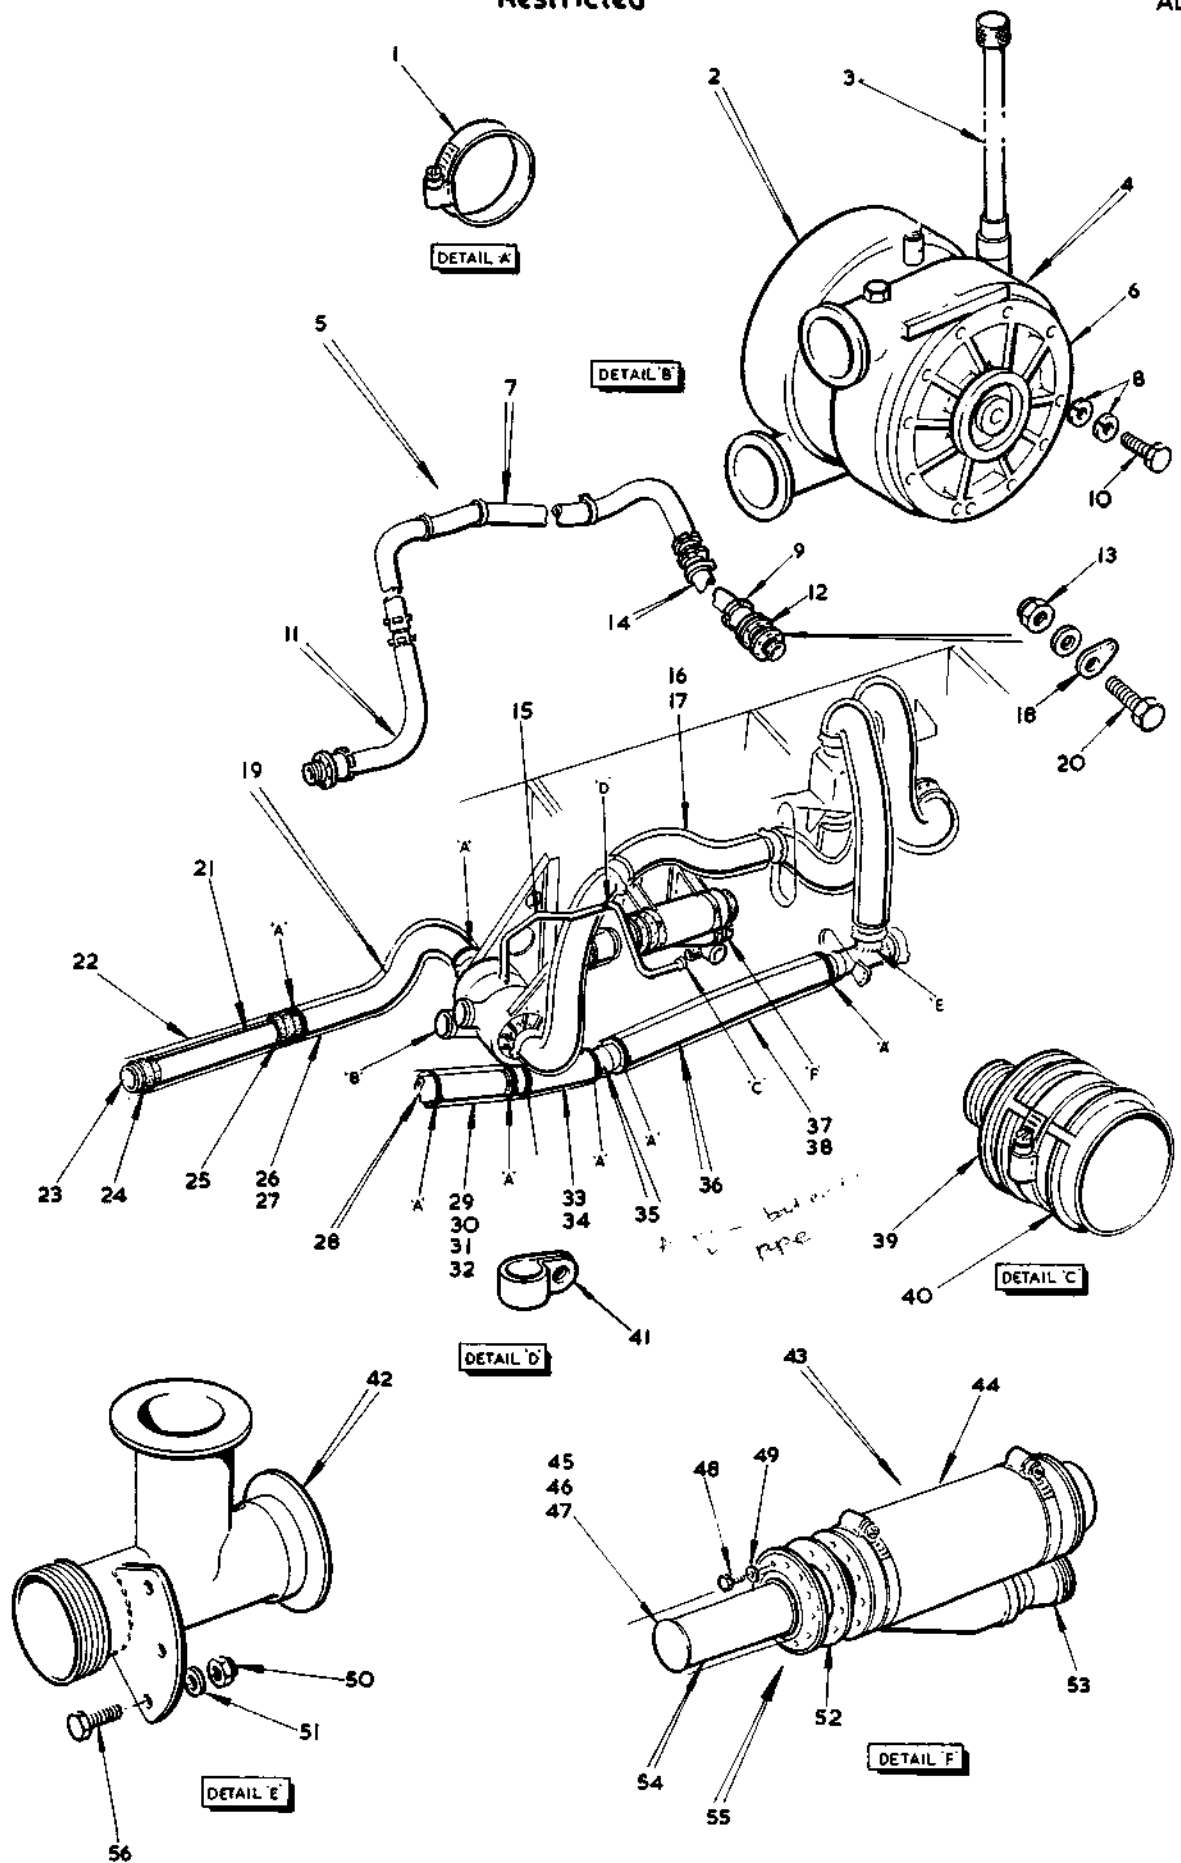


FIG 86. CABIN PRESSURE & COLD AIR SYSTEM IN PORT WING

Restricted

T.MK.17 SECT N

1

2


3

4

5

6

7

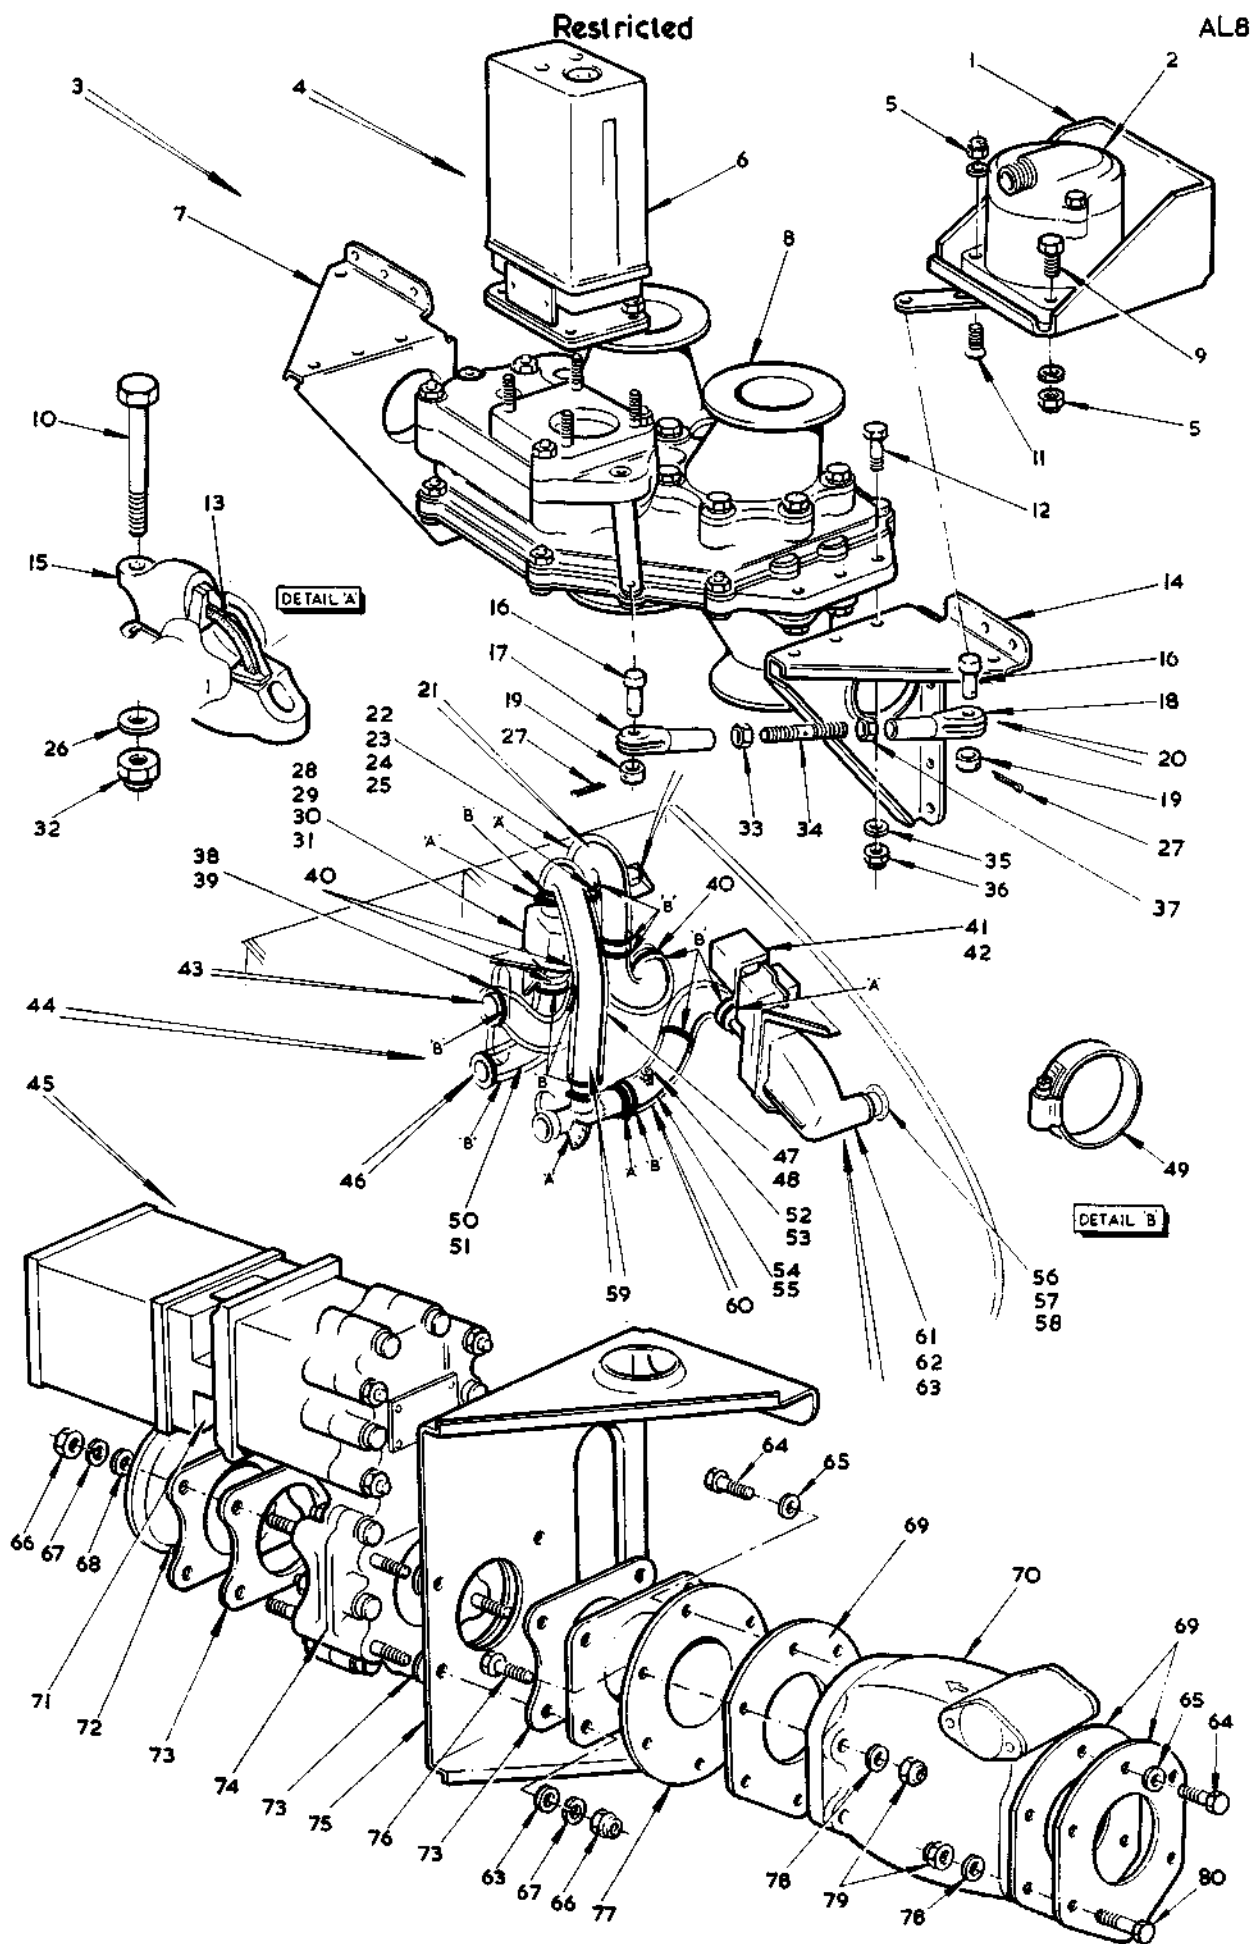

•

•

•

•

•

•

Restricted

AL8

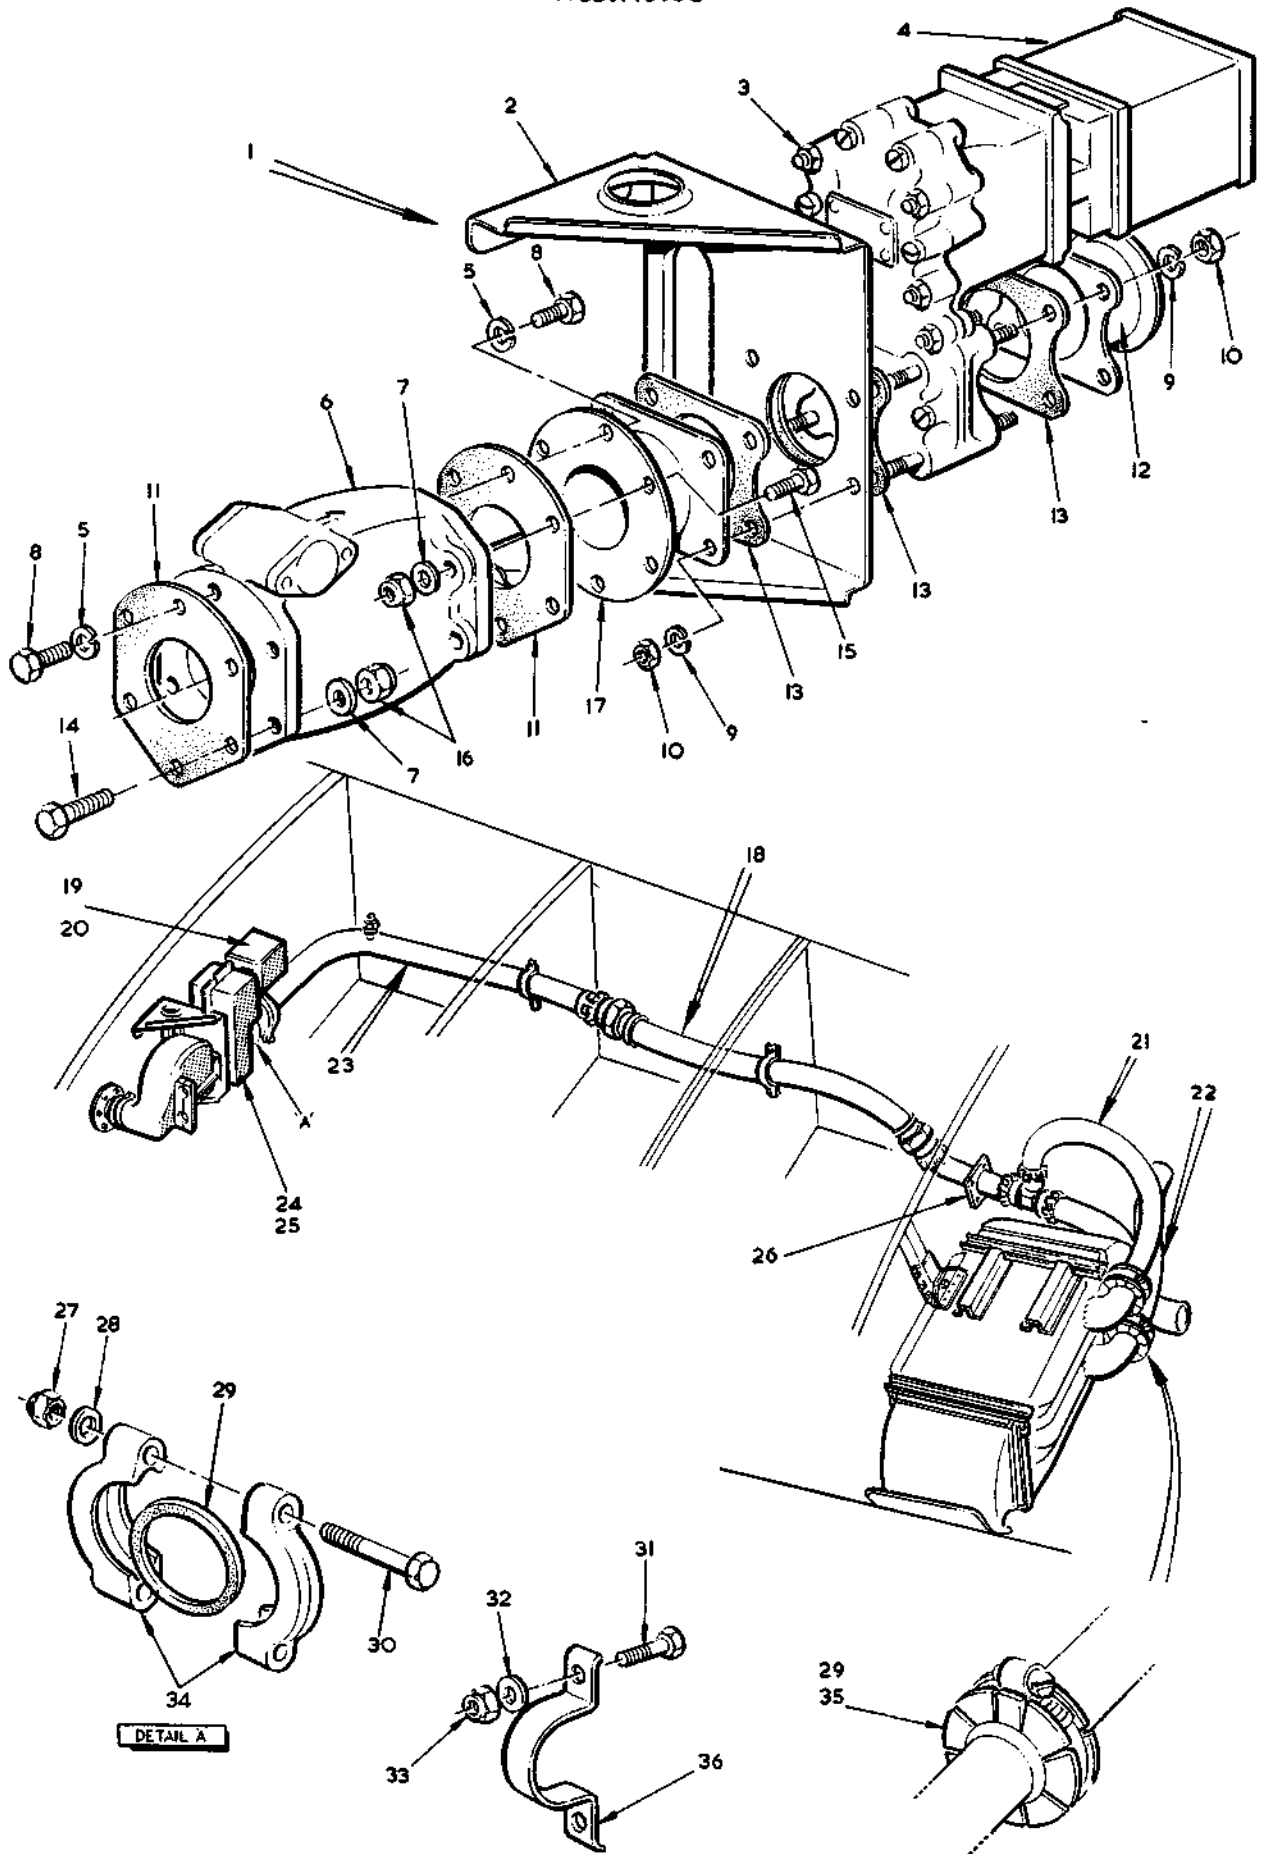


FIG 89. CABIN PRESSURE & COLD AIR SYSTEM IN STBD WING.

Restricted

T MK.17 SECT N

●

●

●

●

●

●

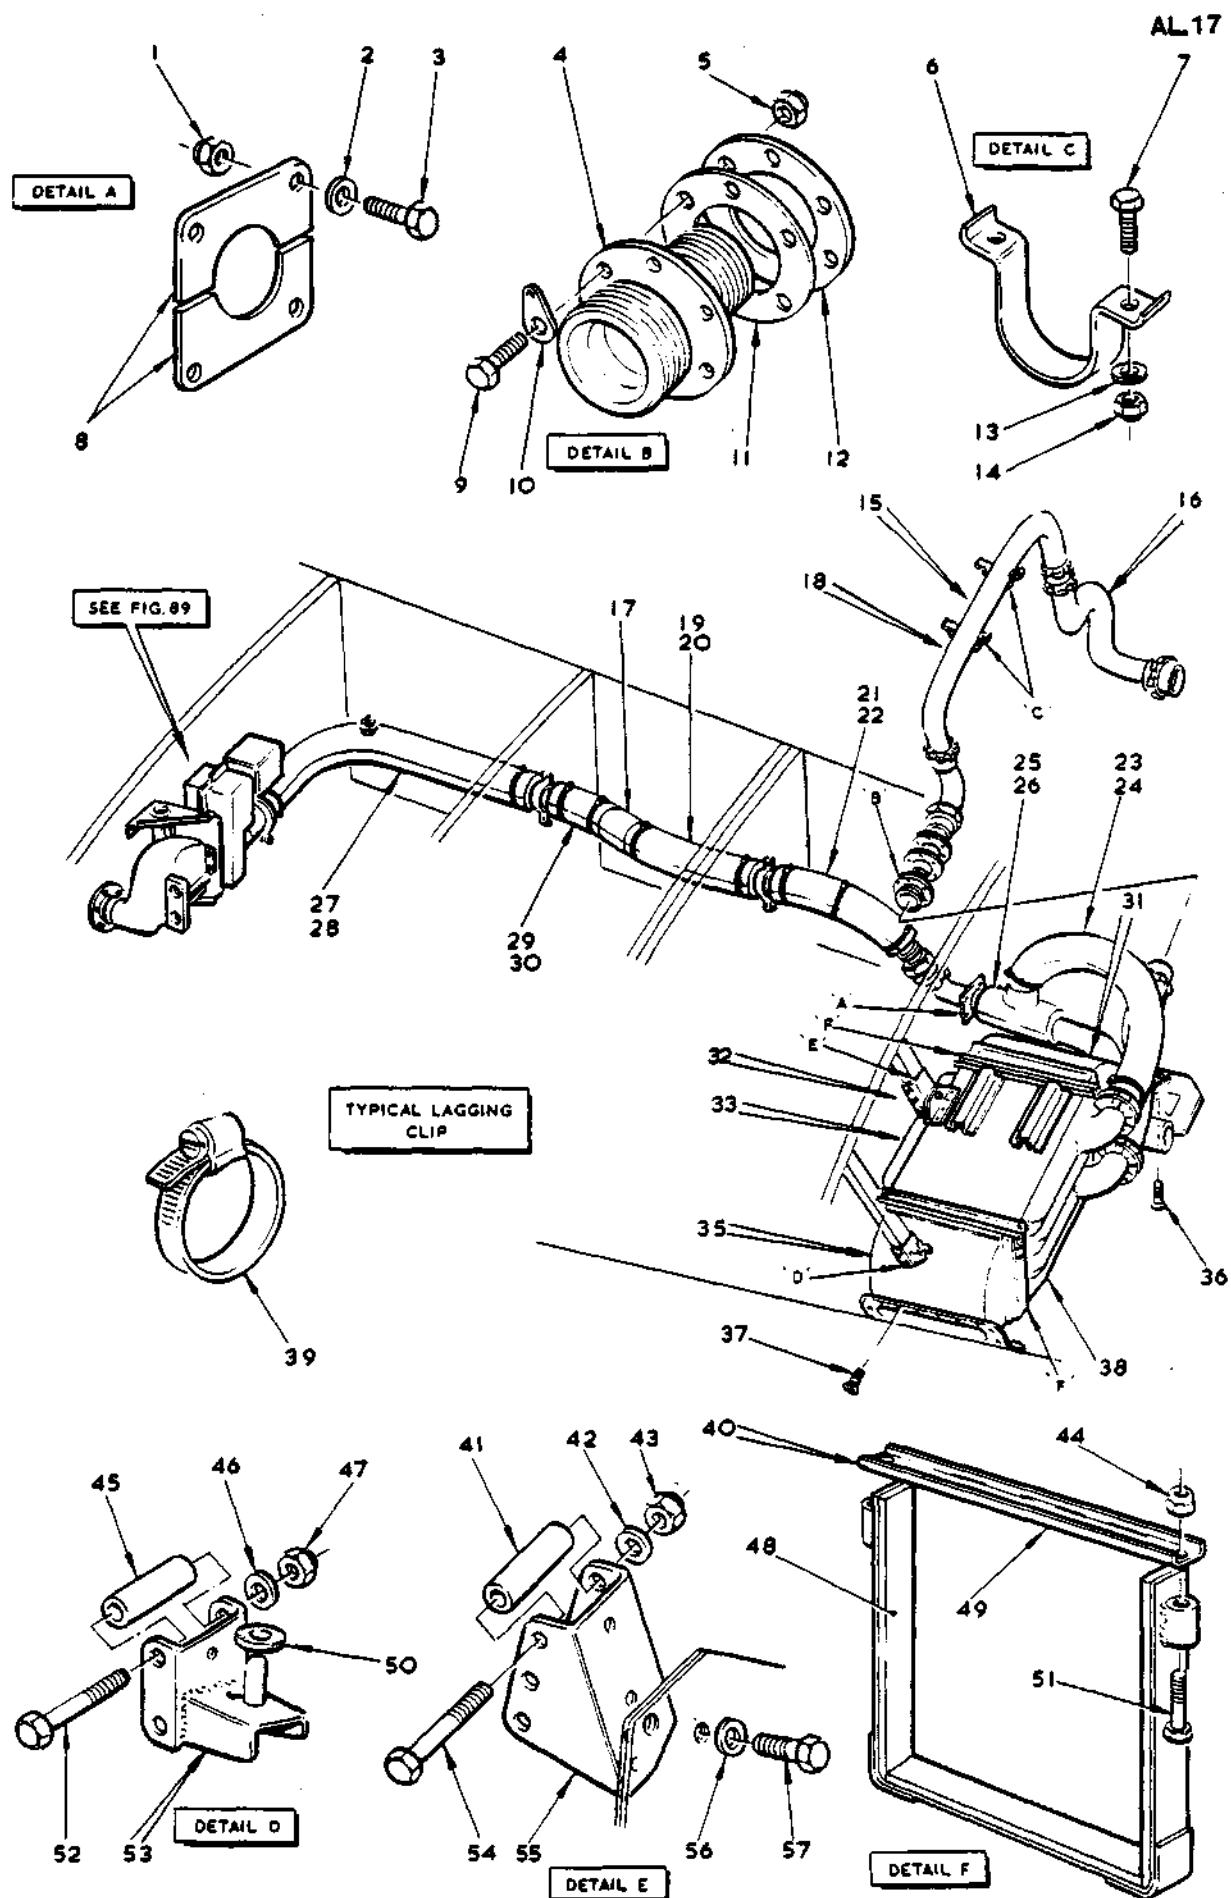


FIG.88 CABIN PRESSURE & COLD AIR SYSTEM IN STBD WING
T.MK.17 SECT.N



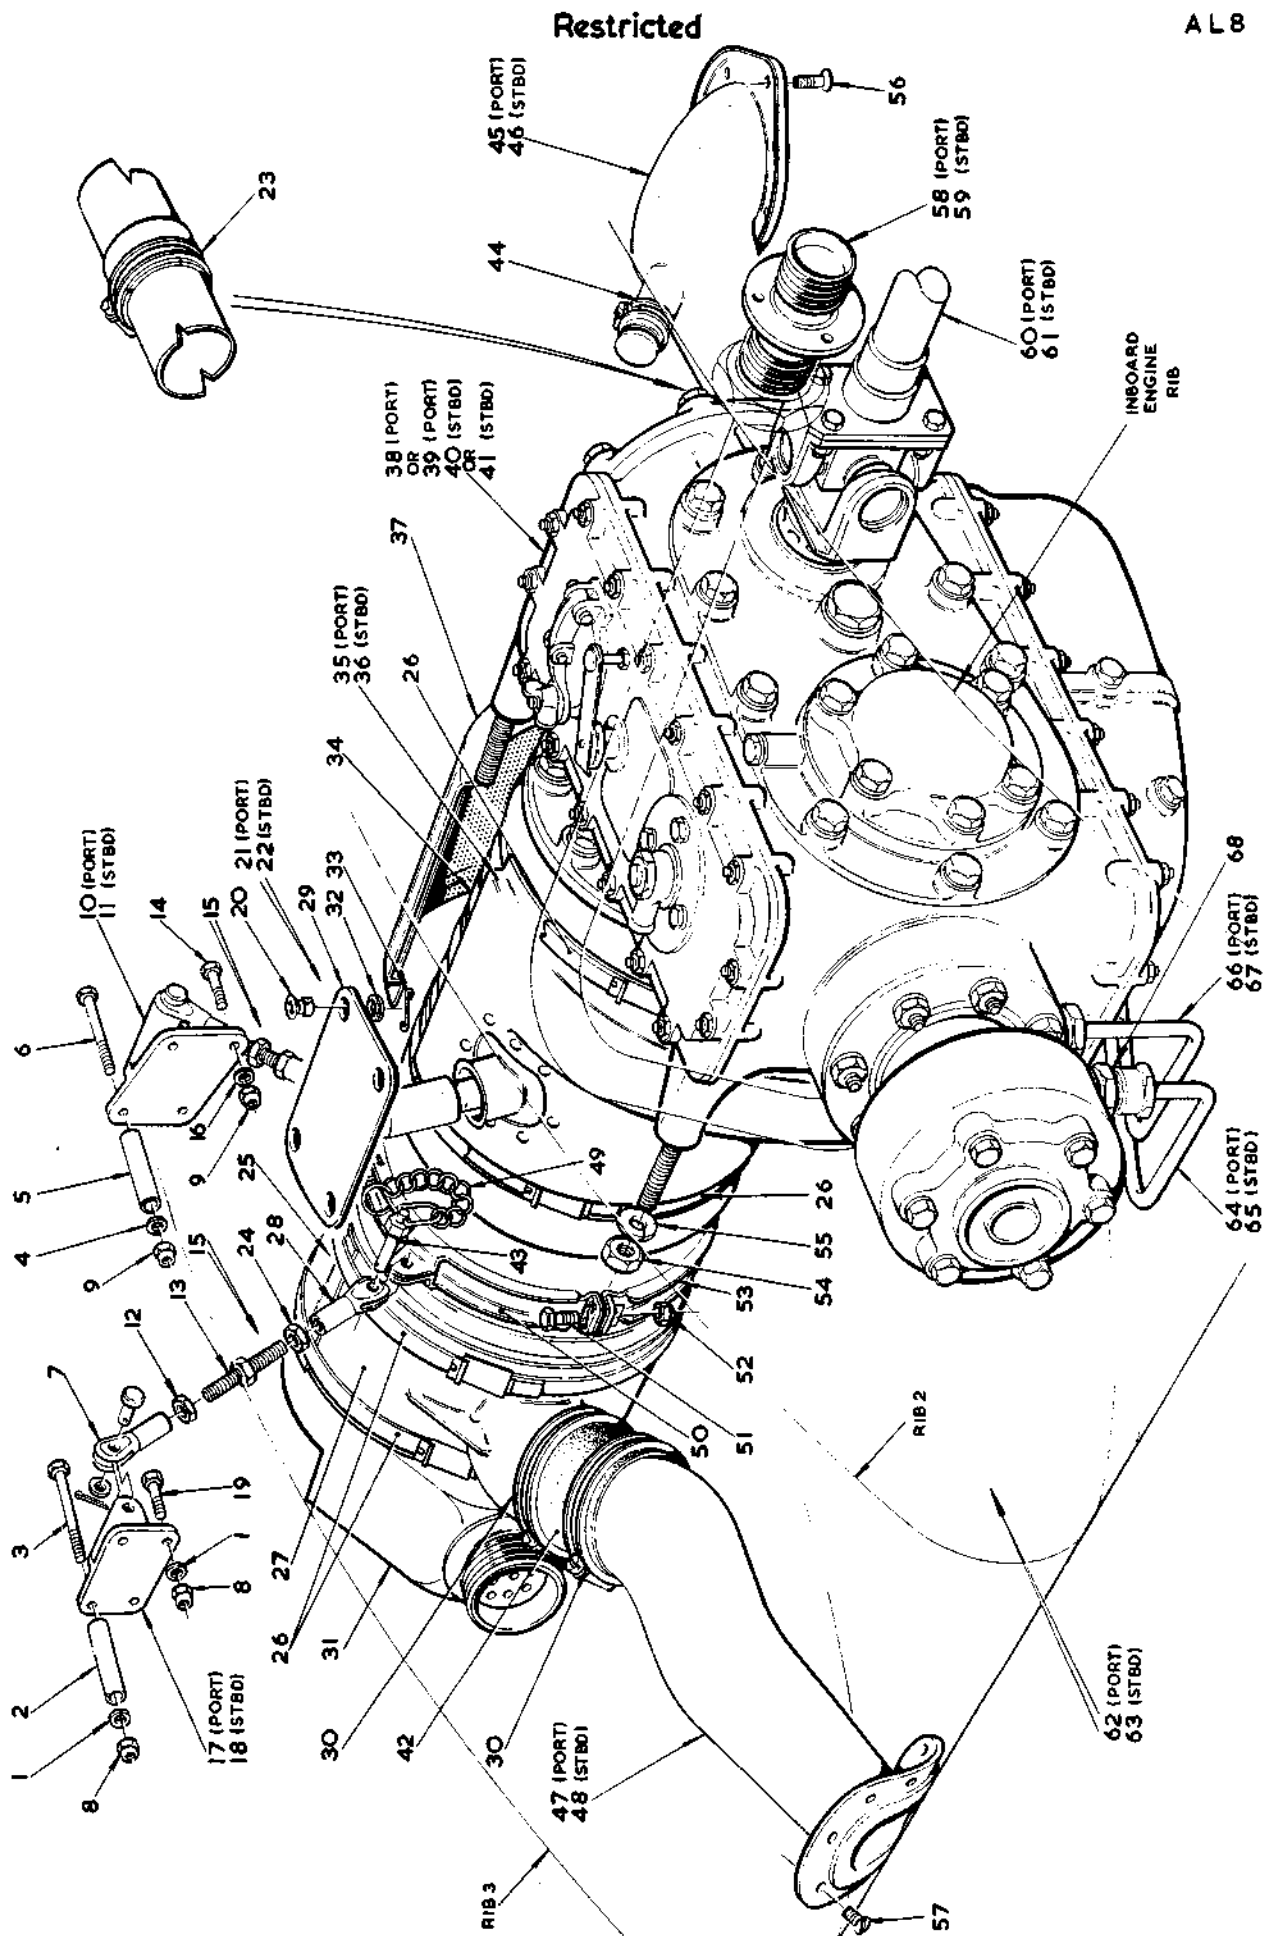


FIG 90 EQUIPMENT IN INNER WING. LEADING EDGE PORT & STBD
Restricted

•

•

•

•

•

•

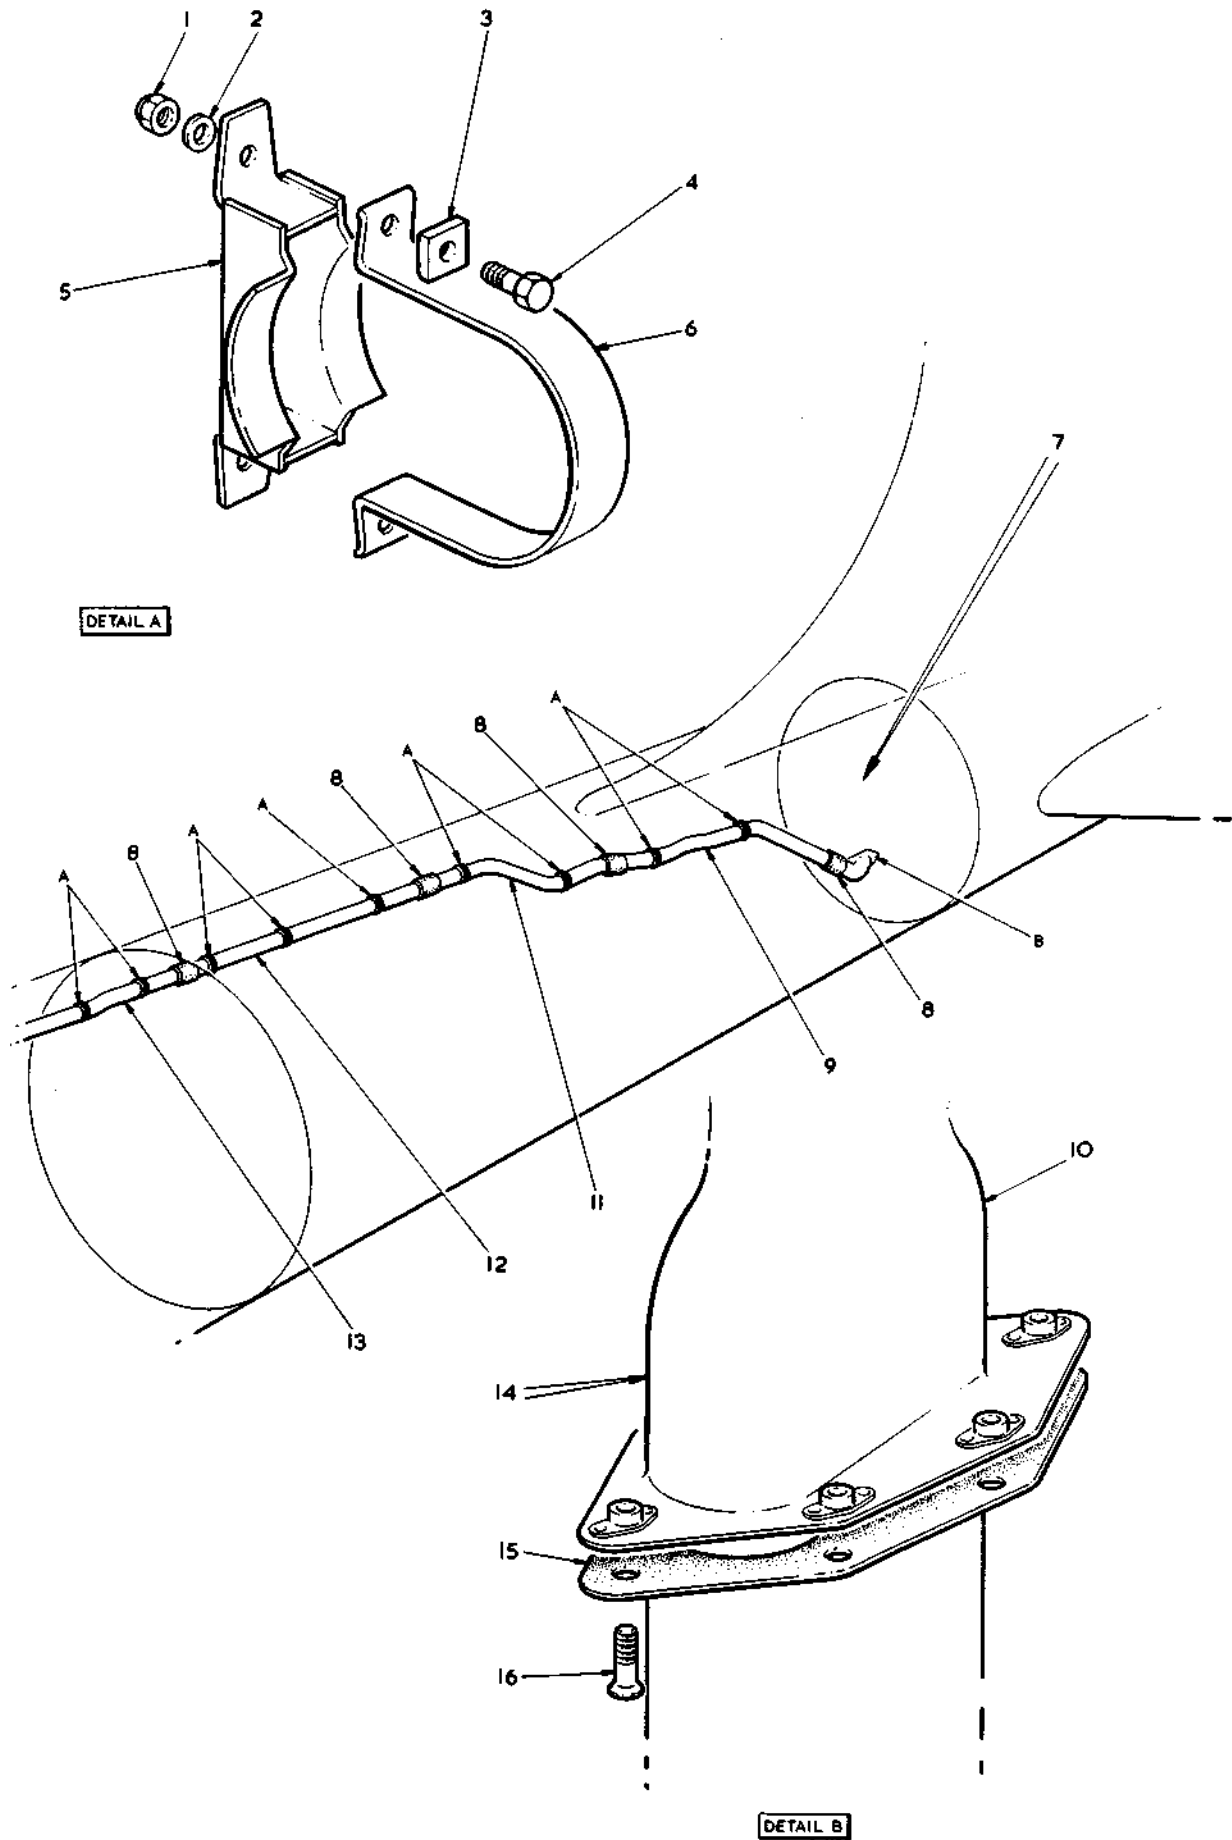


FIG. 91 FUEL SYSTEM IN REAR FUSELAGE
Restricted

1

2

3

4

5

6

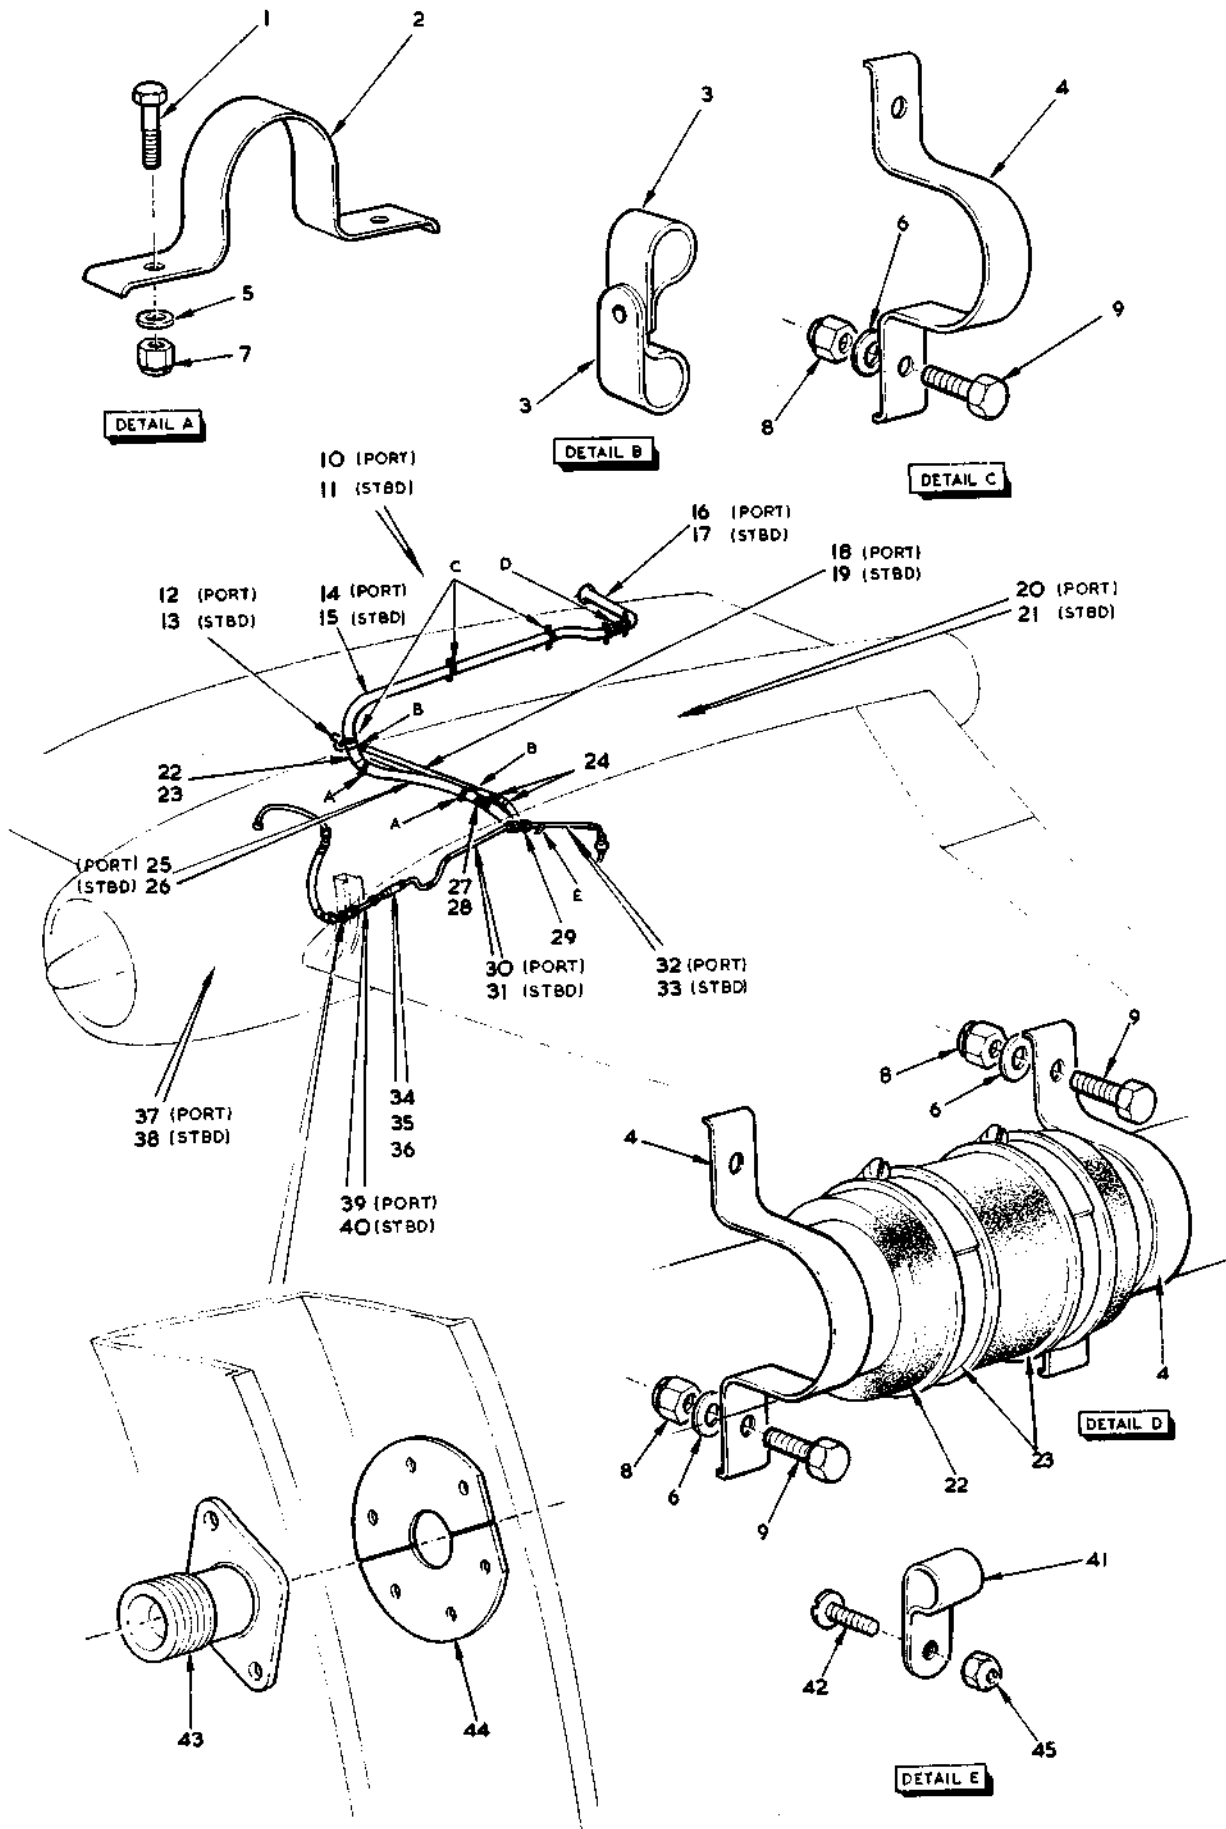


FIG. 92 FUEL SYSTEM IN PORT & STBD WINGS
Restricted

•

•

•

•

•

•

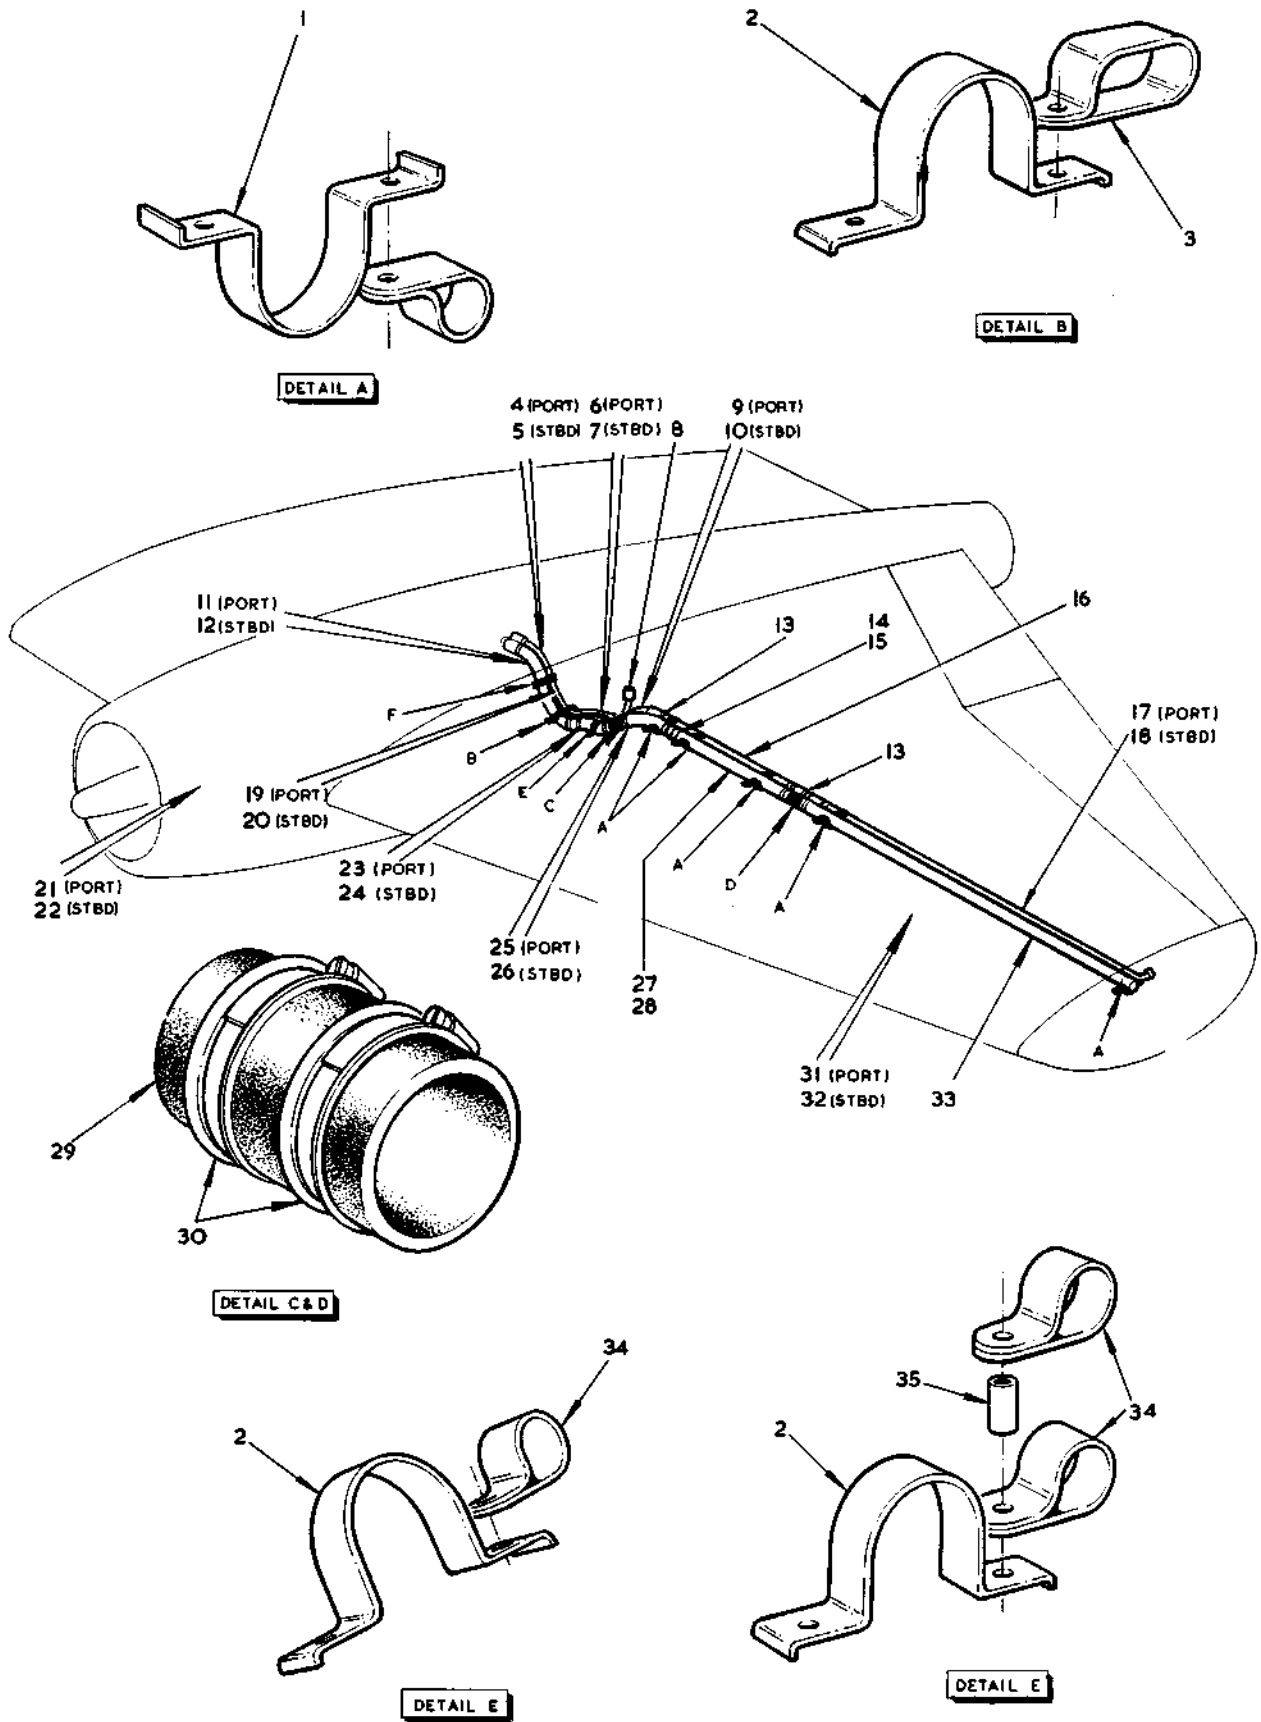


FIG 93. FUEL SYSTEM IN PORT & STBD WINGS
Restricted

•

•

•

•

•

•

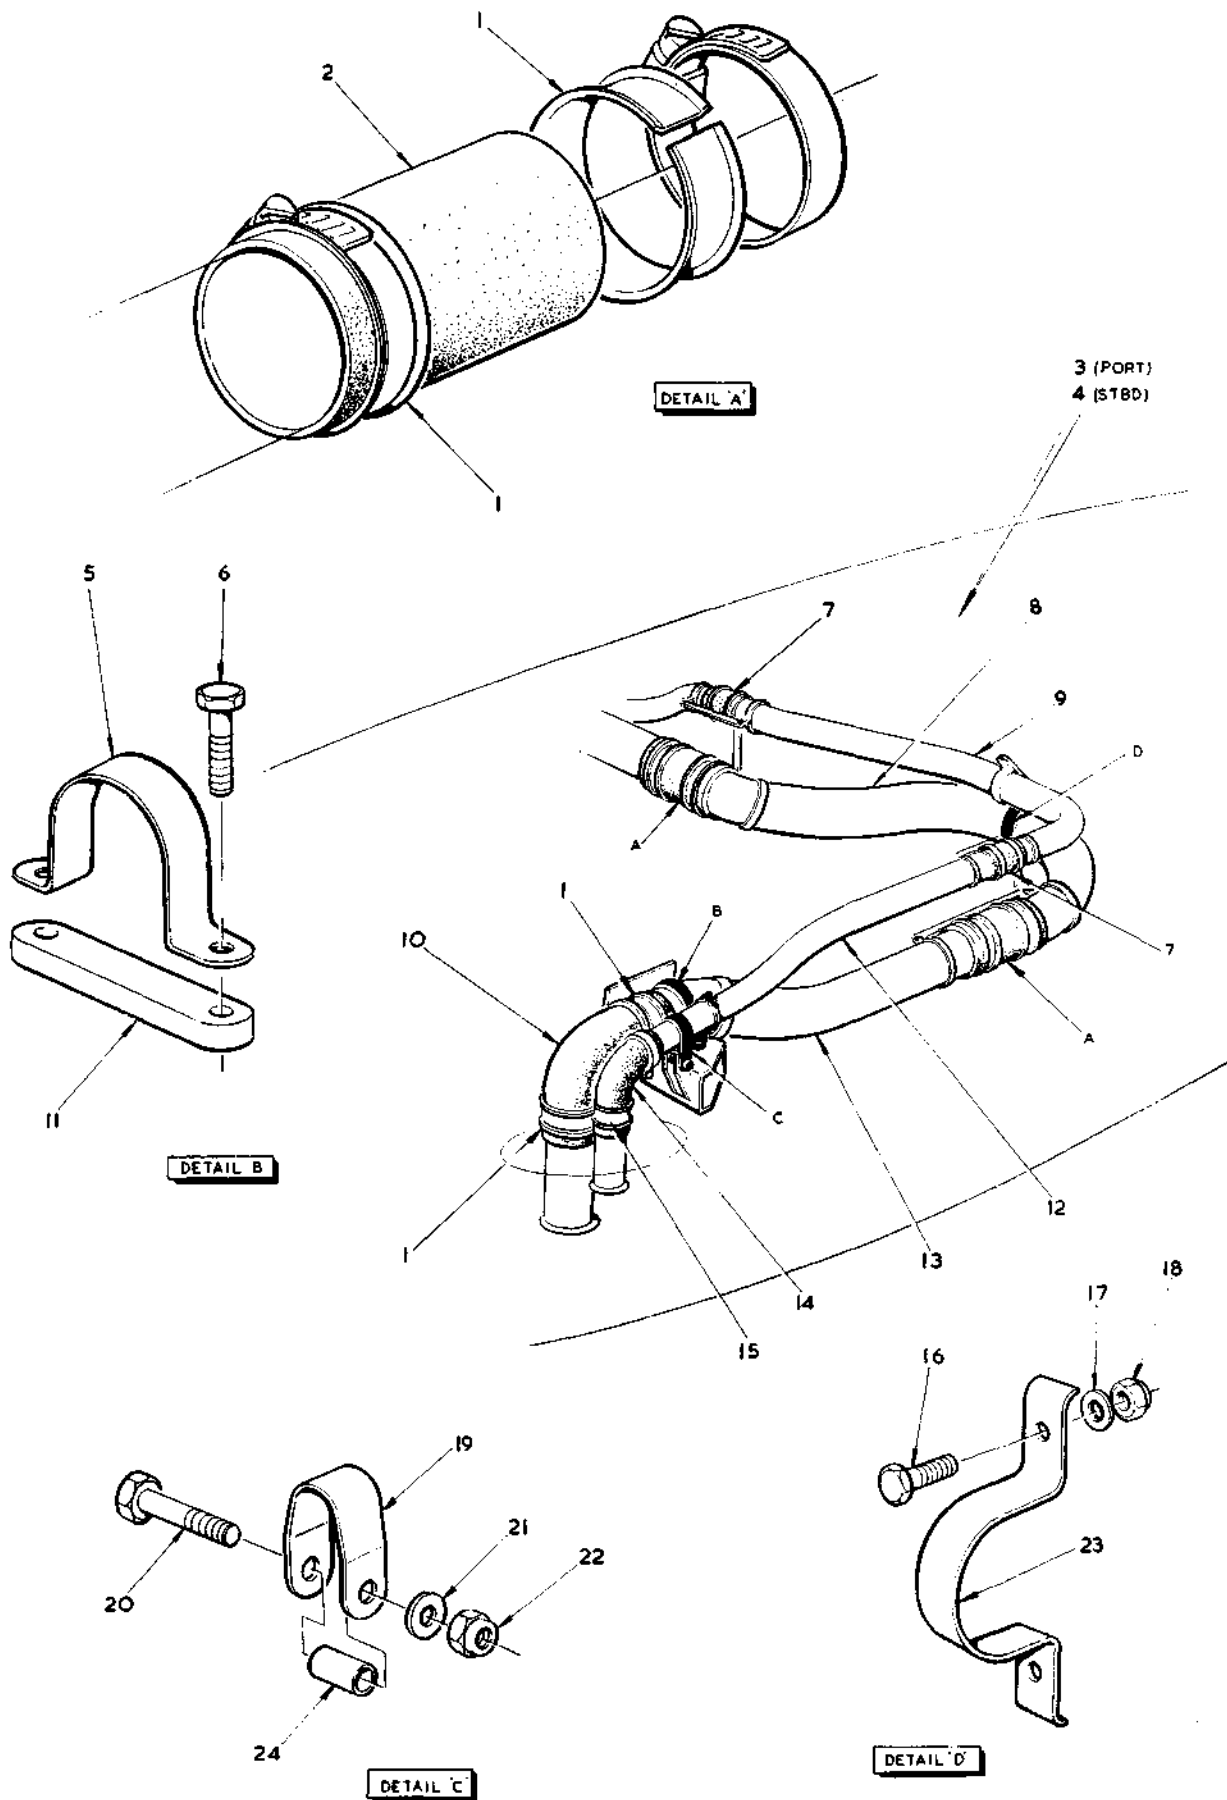


FIG 94. FUEL AND AIR PIPES IN PORT & STBD WING TIP
Restricted

•

•

•

•

•

•

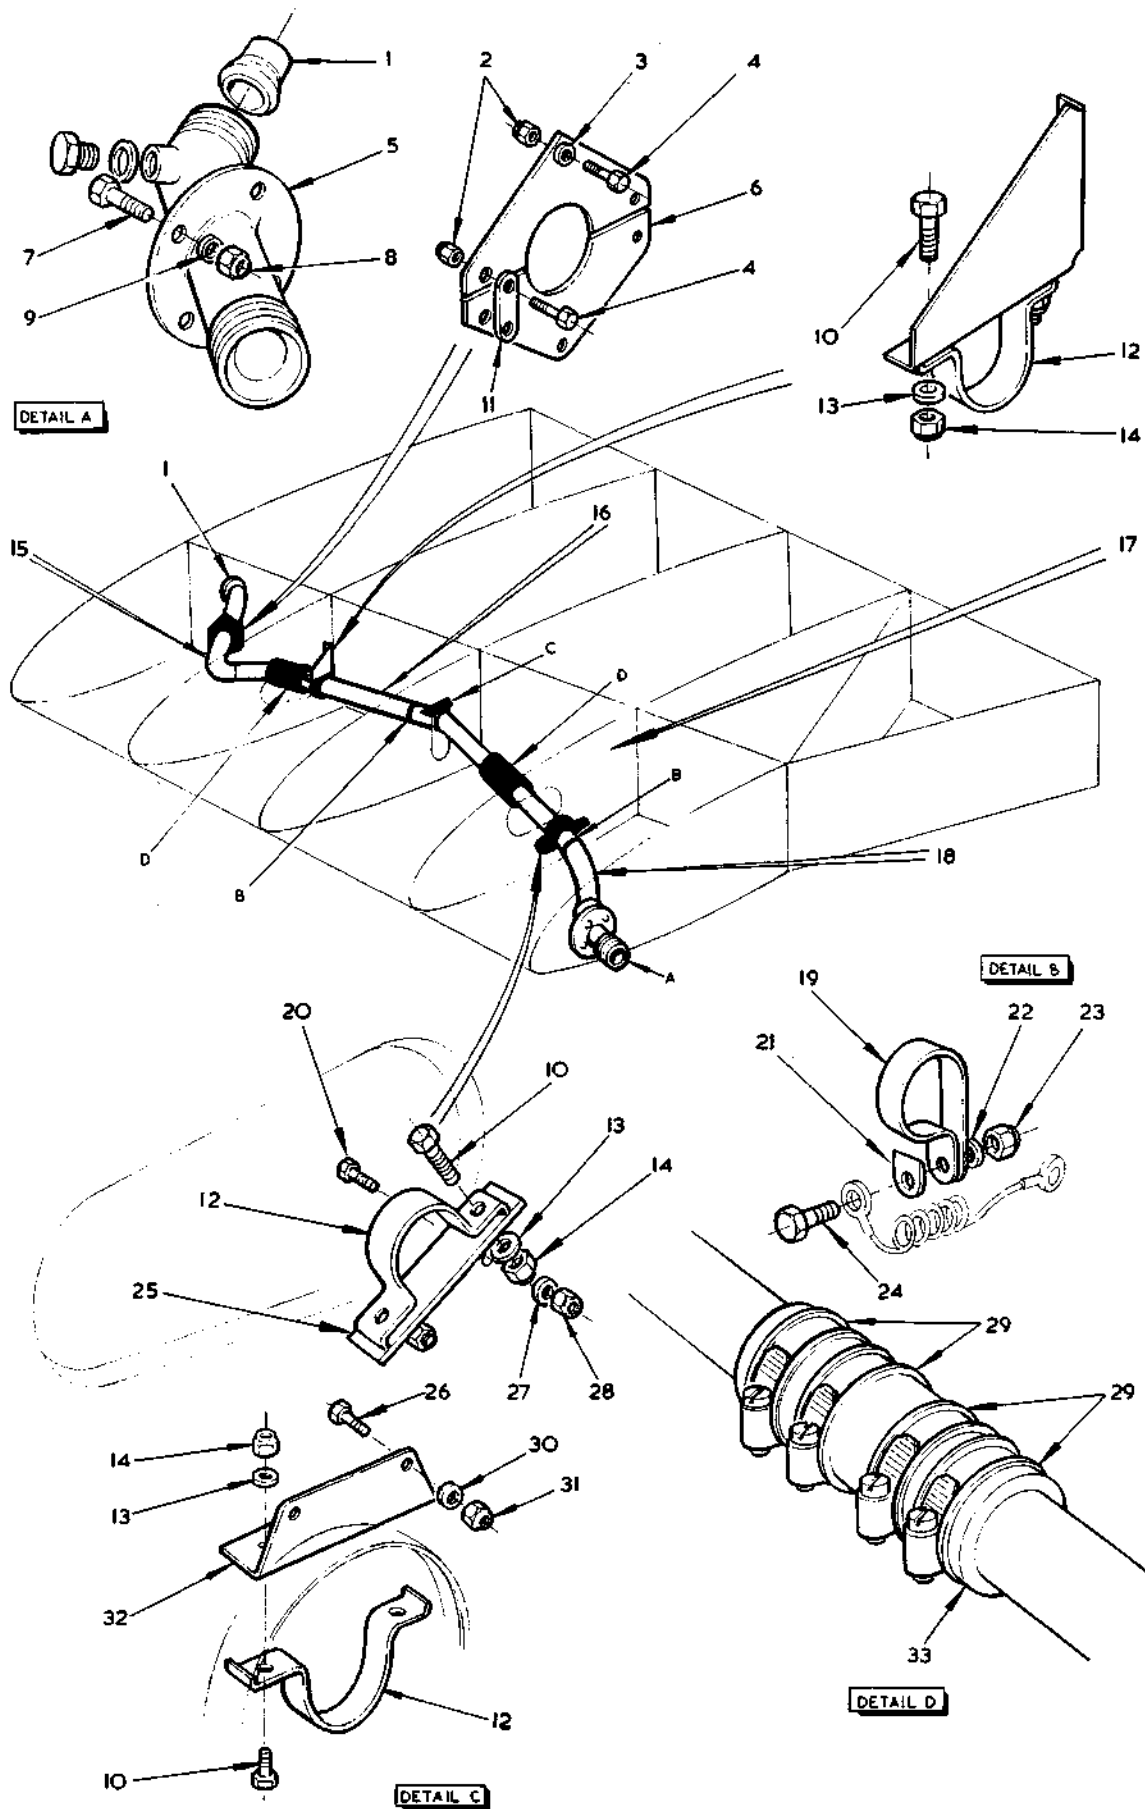


FIG 95. SERVICES FUEL SYSTEM IN PORT INNER WING
Restricted

•

•

•

•

•

•

Restricted

AL8

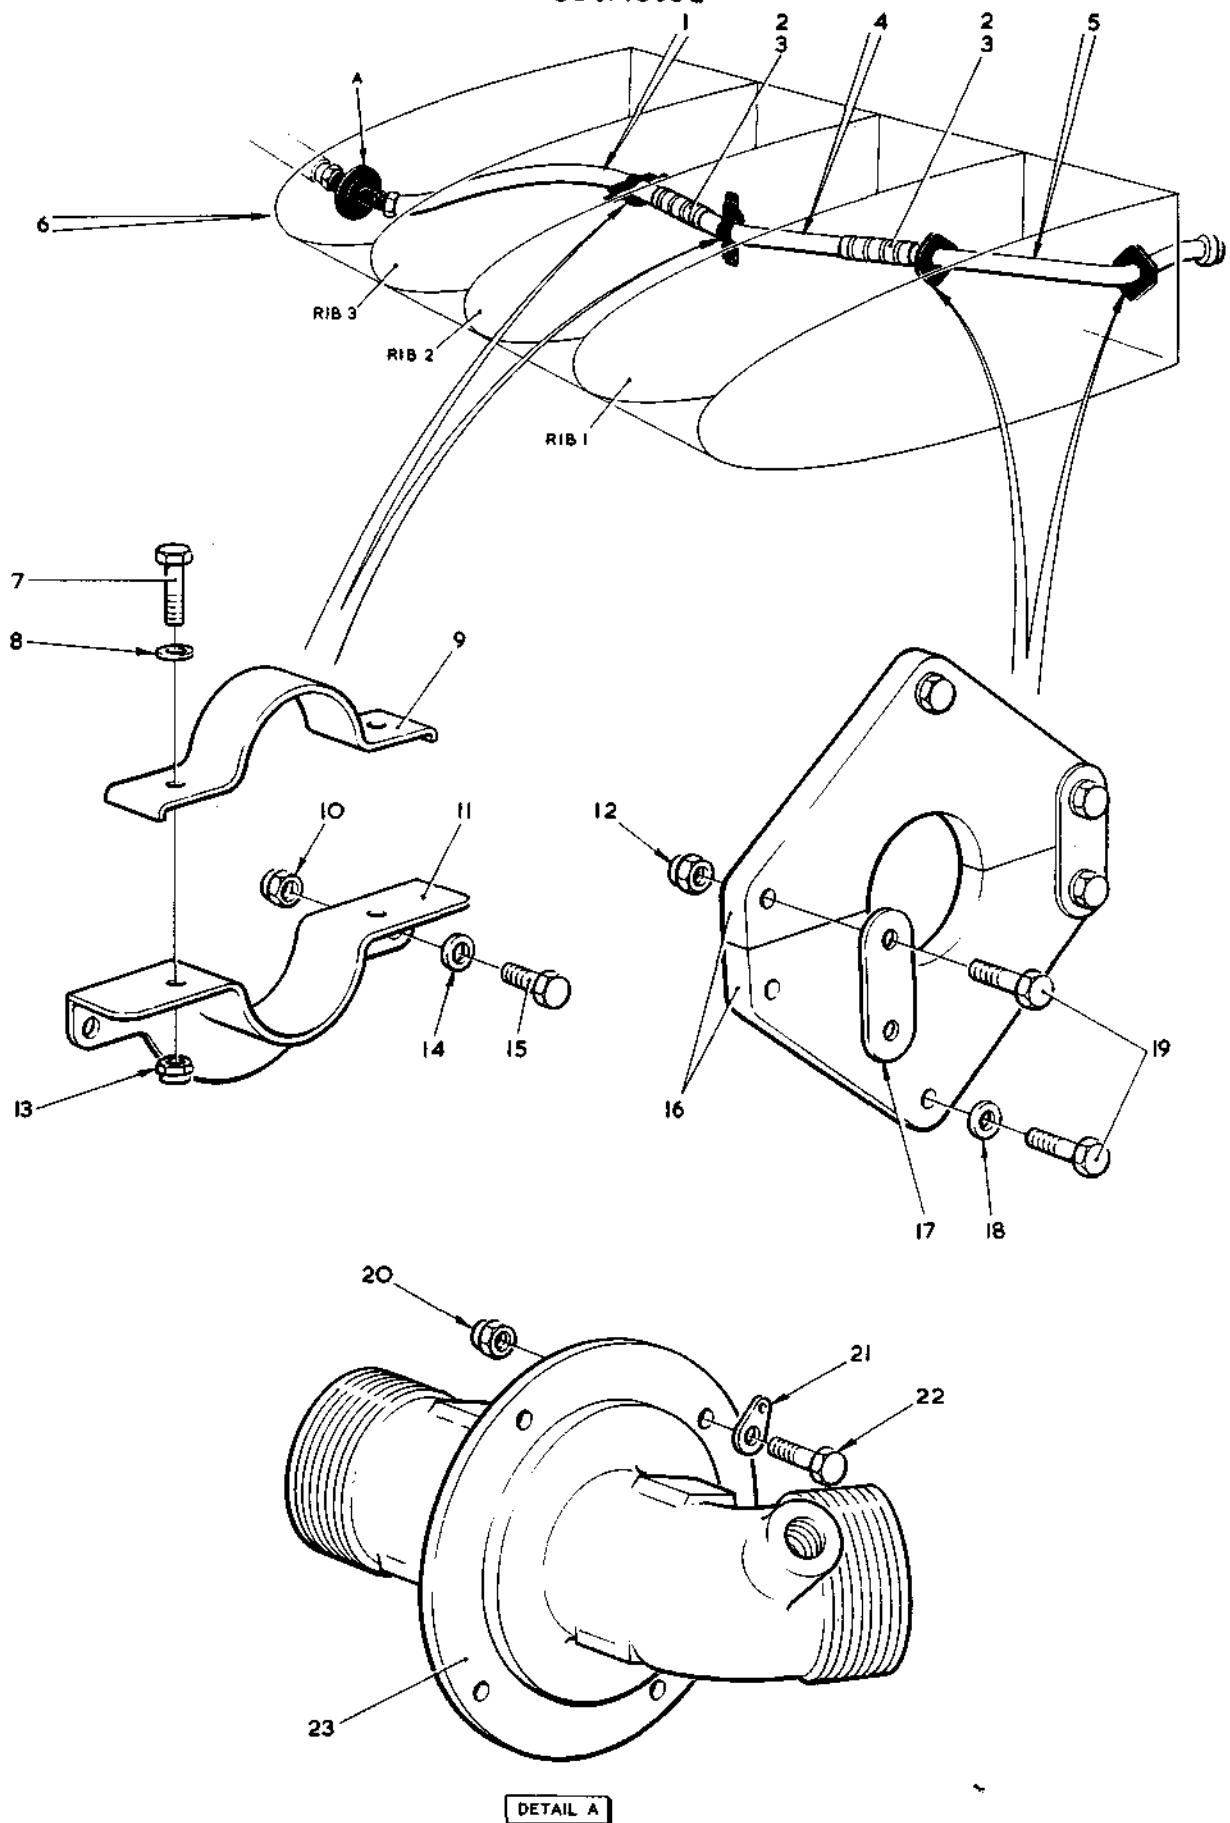


FIG 96 FUEL SYSTEM IN STARBOARD INNER WING
Restricted

T MK 17 SECT N

1

2

3

4

5

6

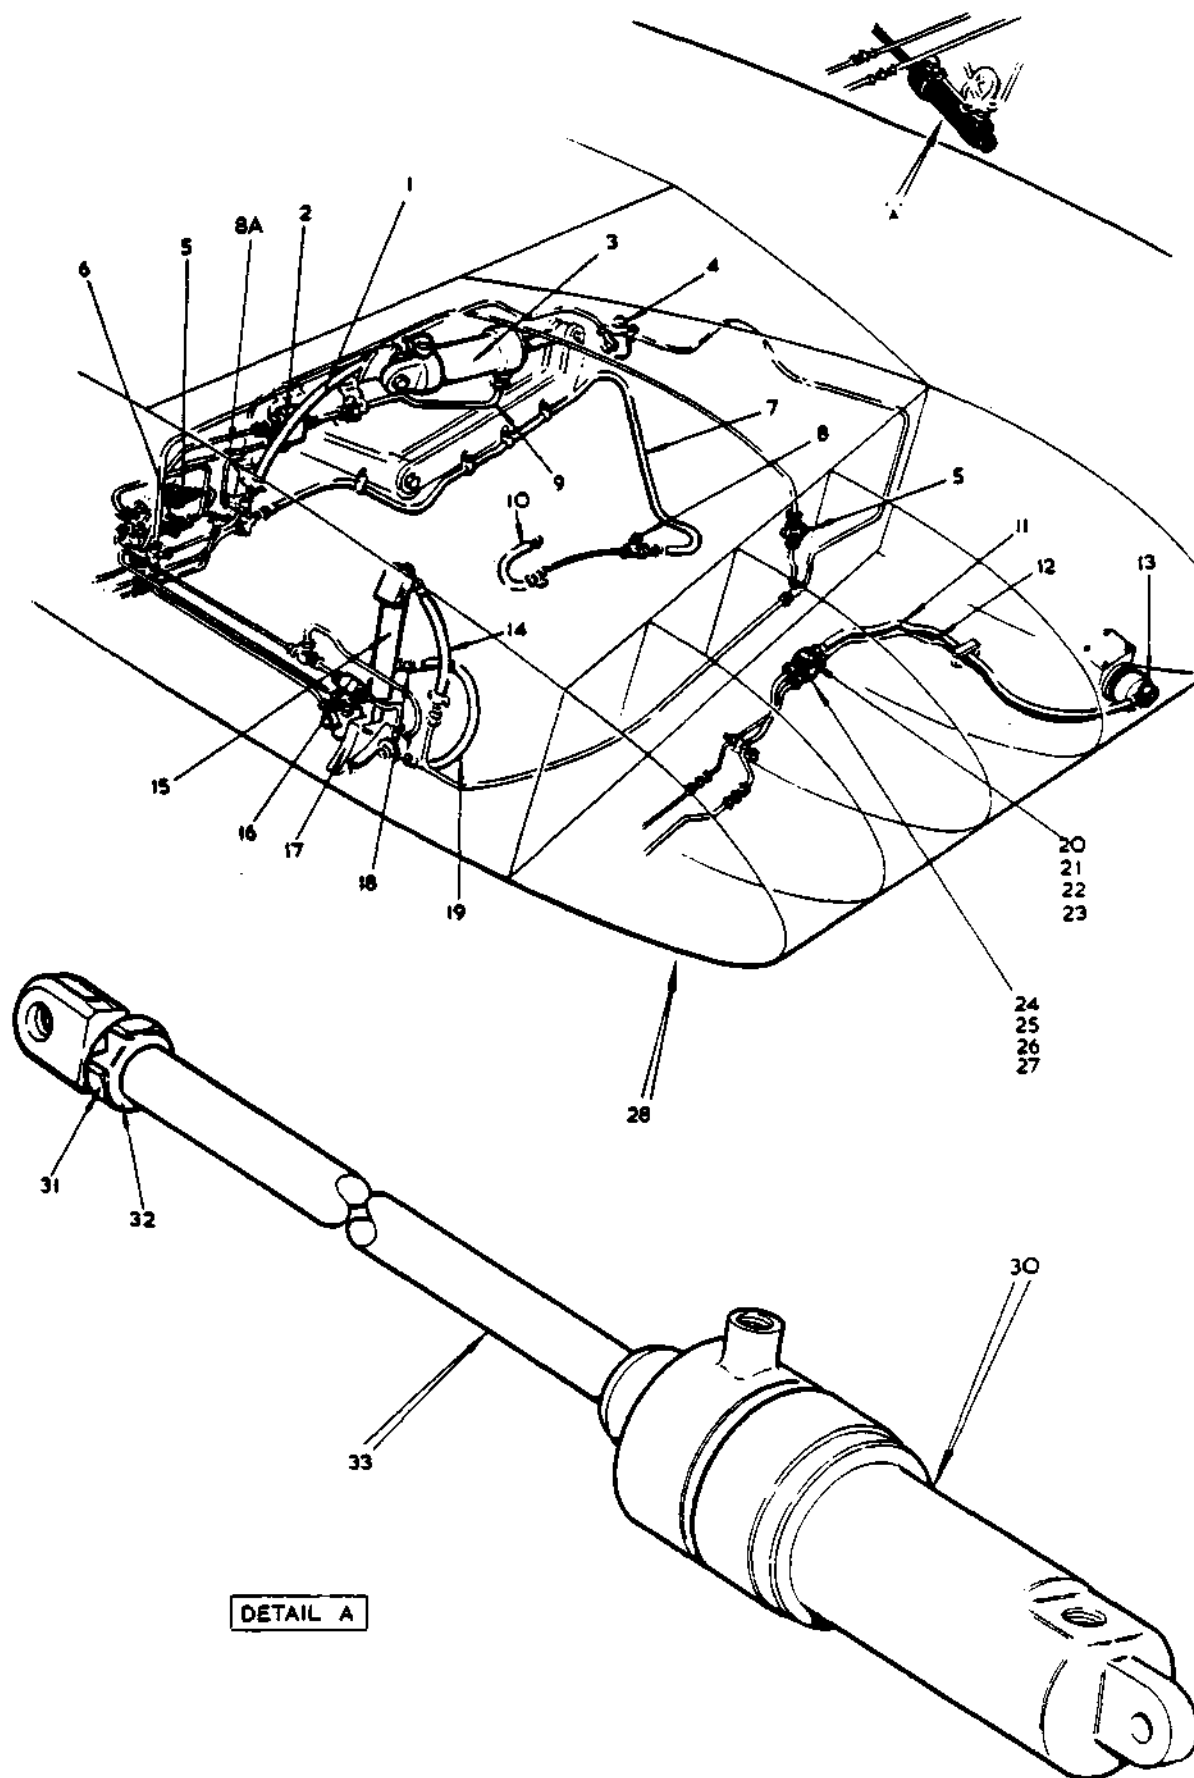


FIG 97 HYDRAULIC EQUIPMENT IN PORT WING



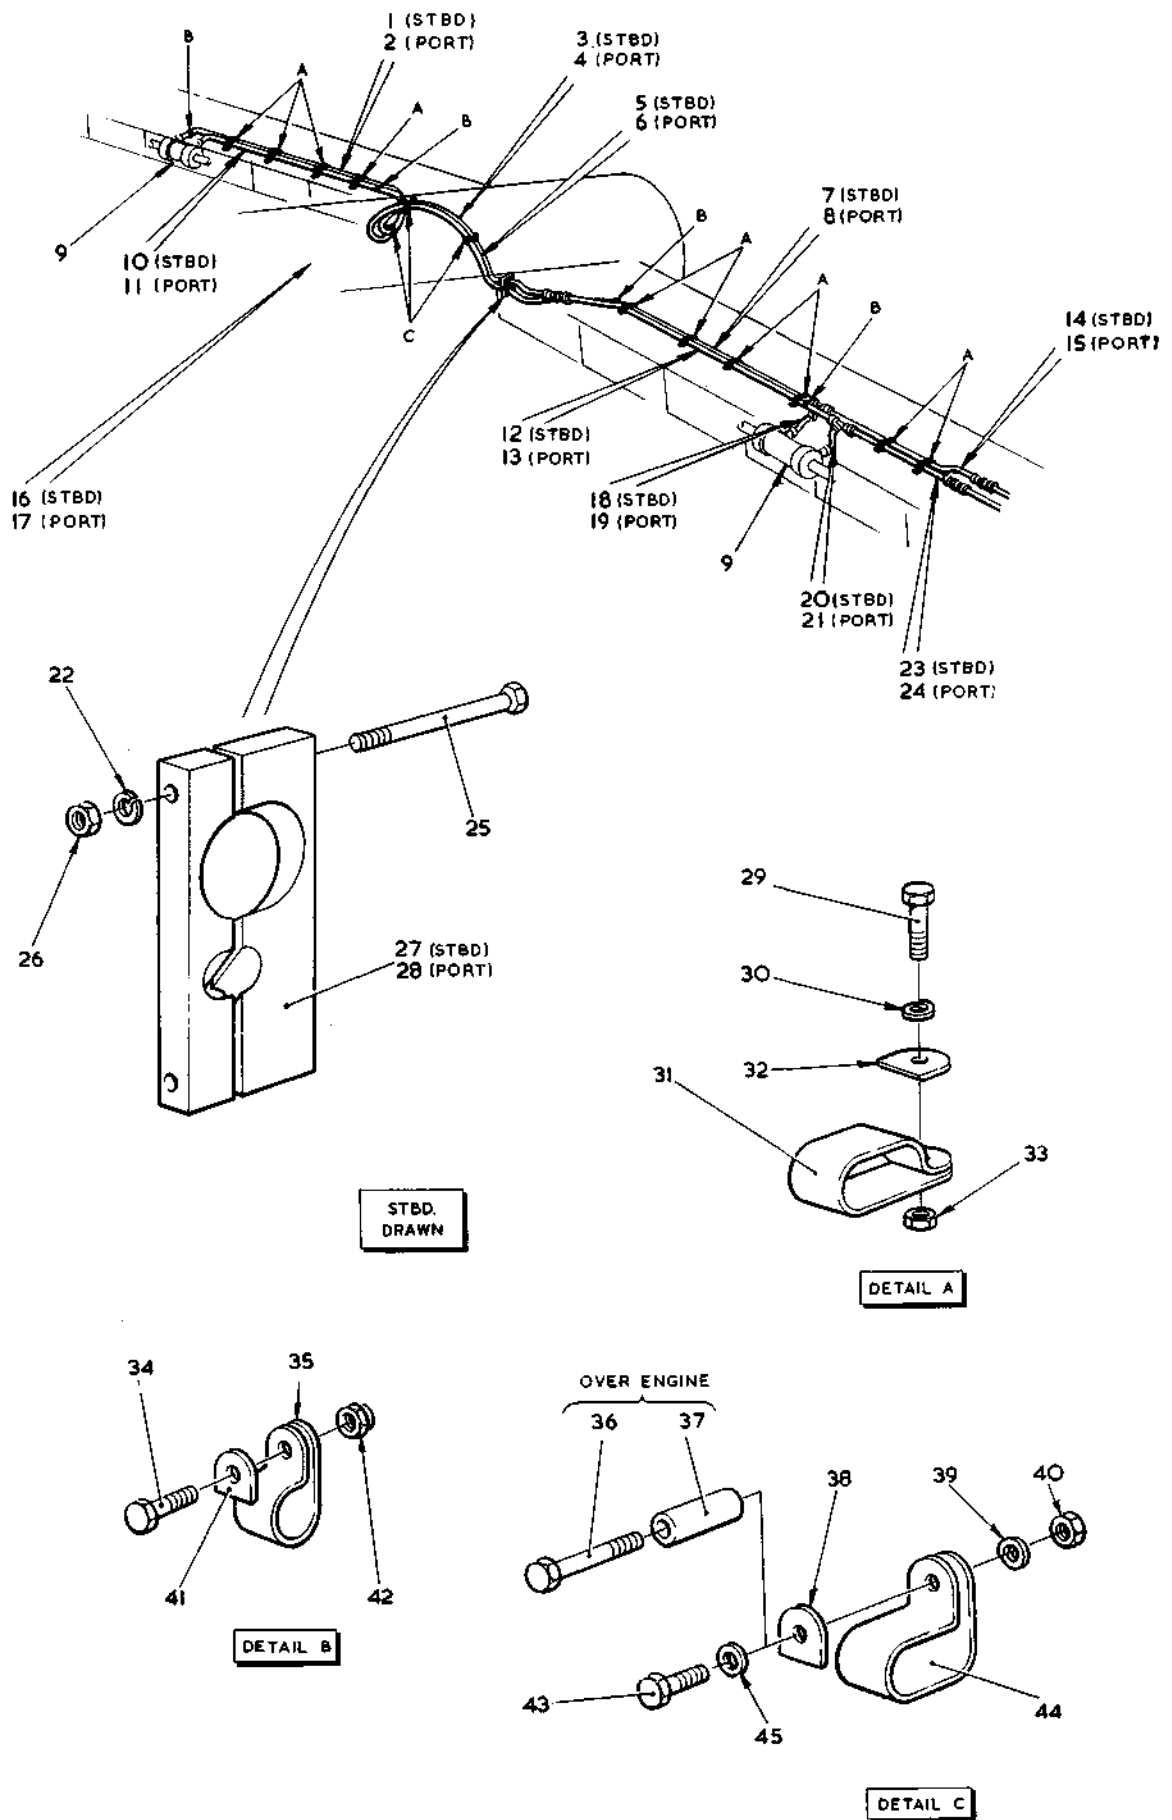


FIG. 98 HYDRAULIC EQUIPMENT IN PORT & STBD. WINGS
Restricted

1

2

3

4

5

6

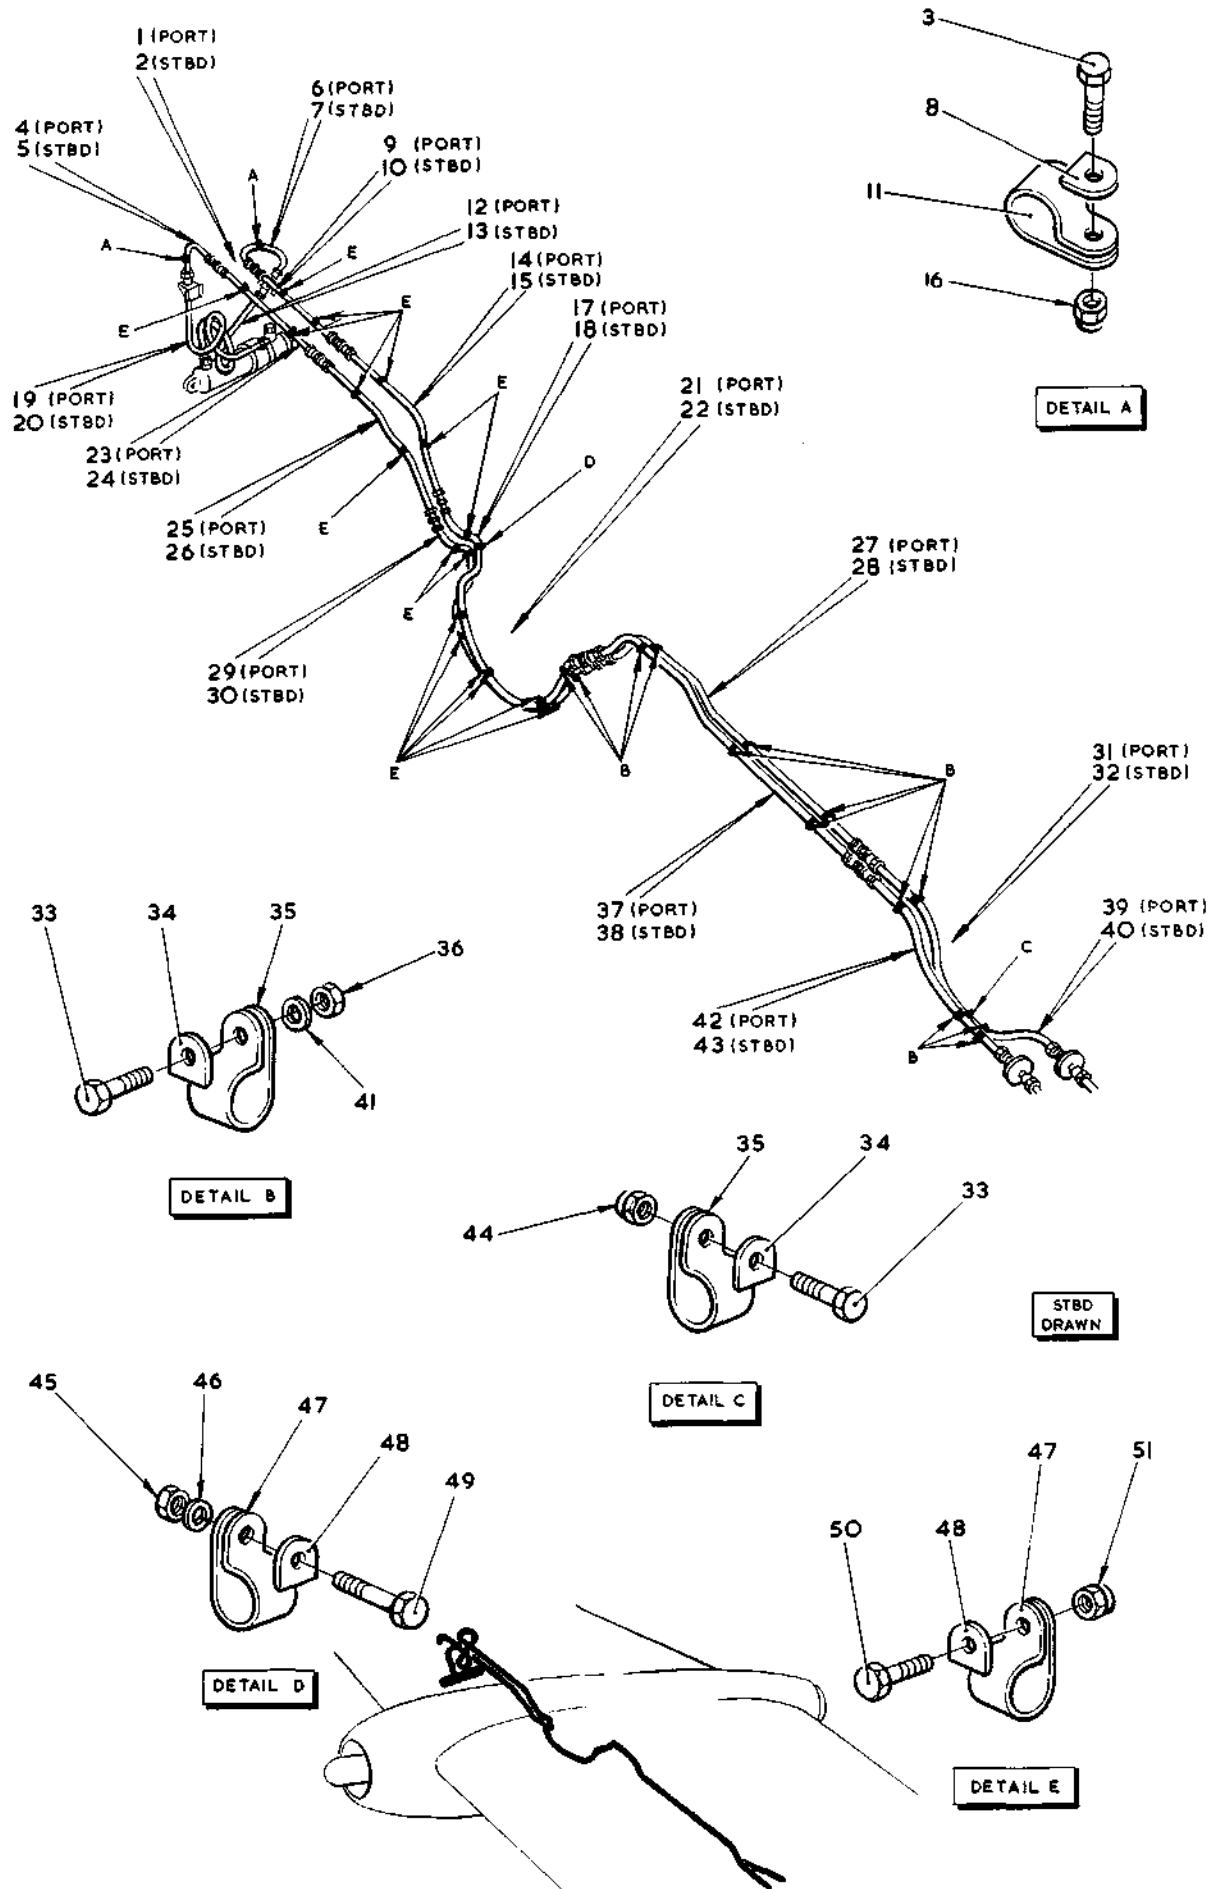


FIG.99 HYDRAULIC EQUIPMENT IN PORT & STBD. WINGS
Restricted

1

2

3

4

5

6

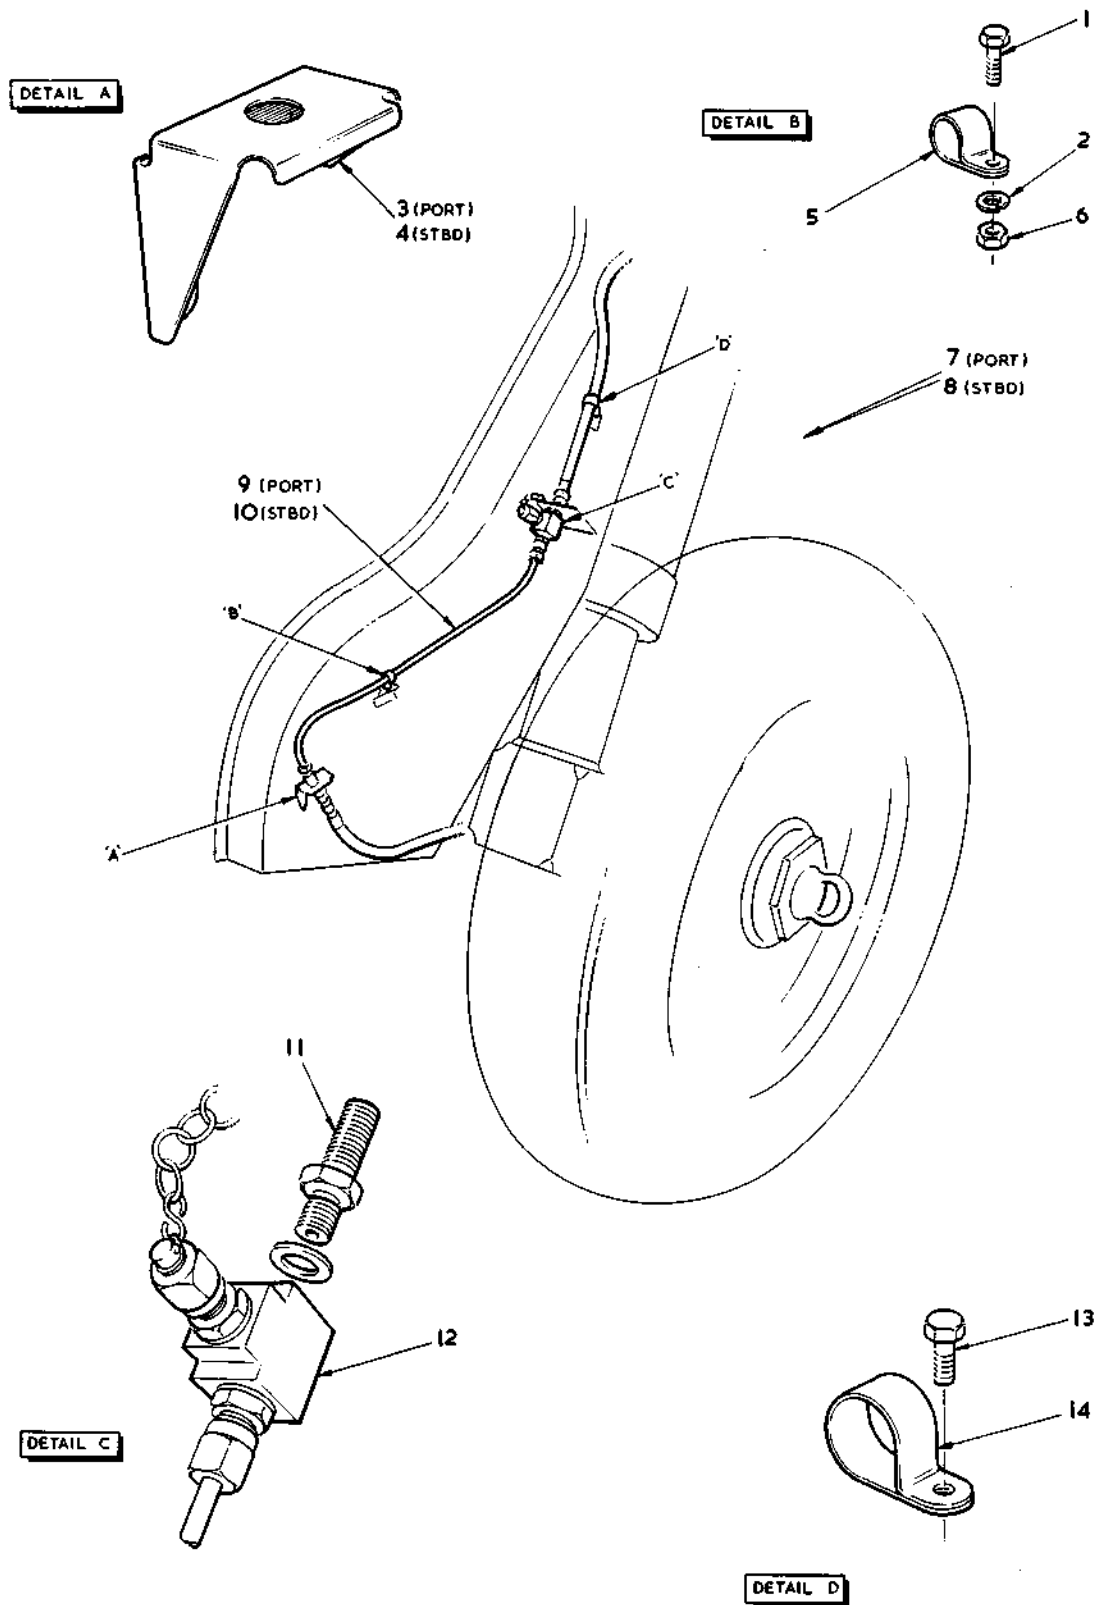


FIG. 100 HYDRAULIC EQUIPMENT IN PORT AND STBD WING
Restricted

1

2

3

4

5

6

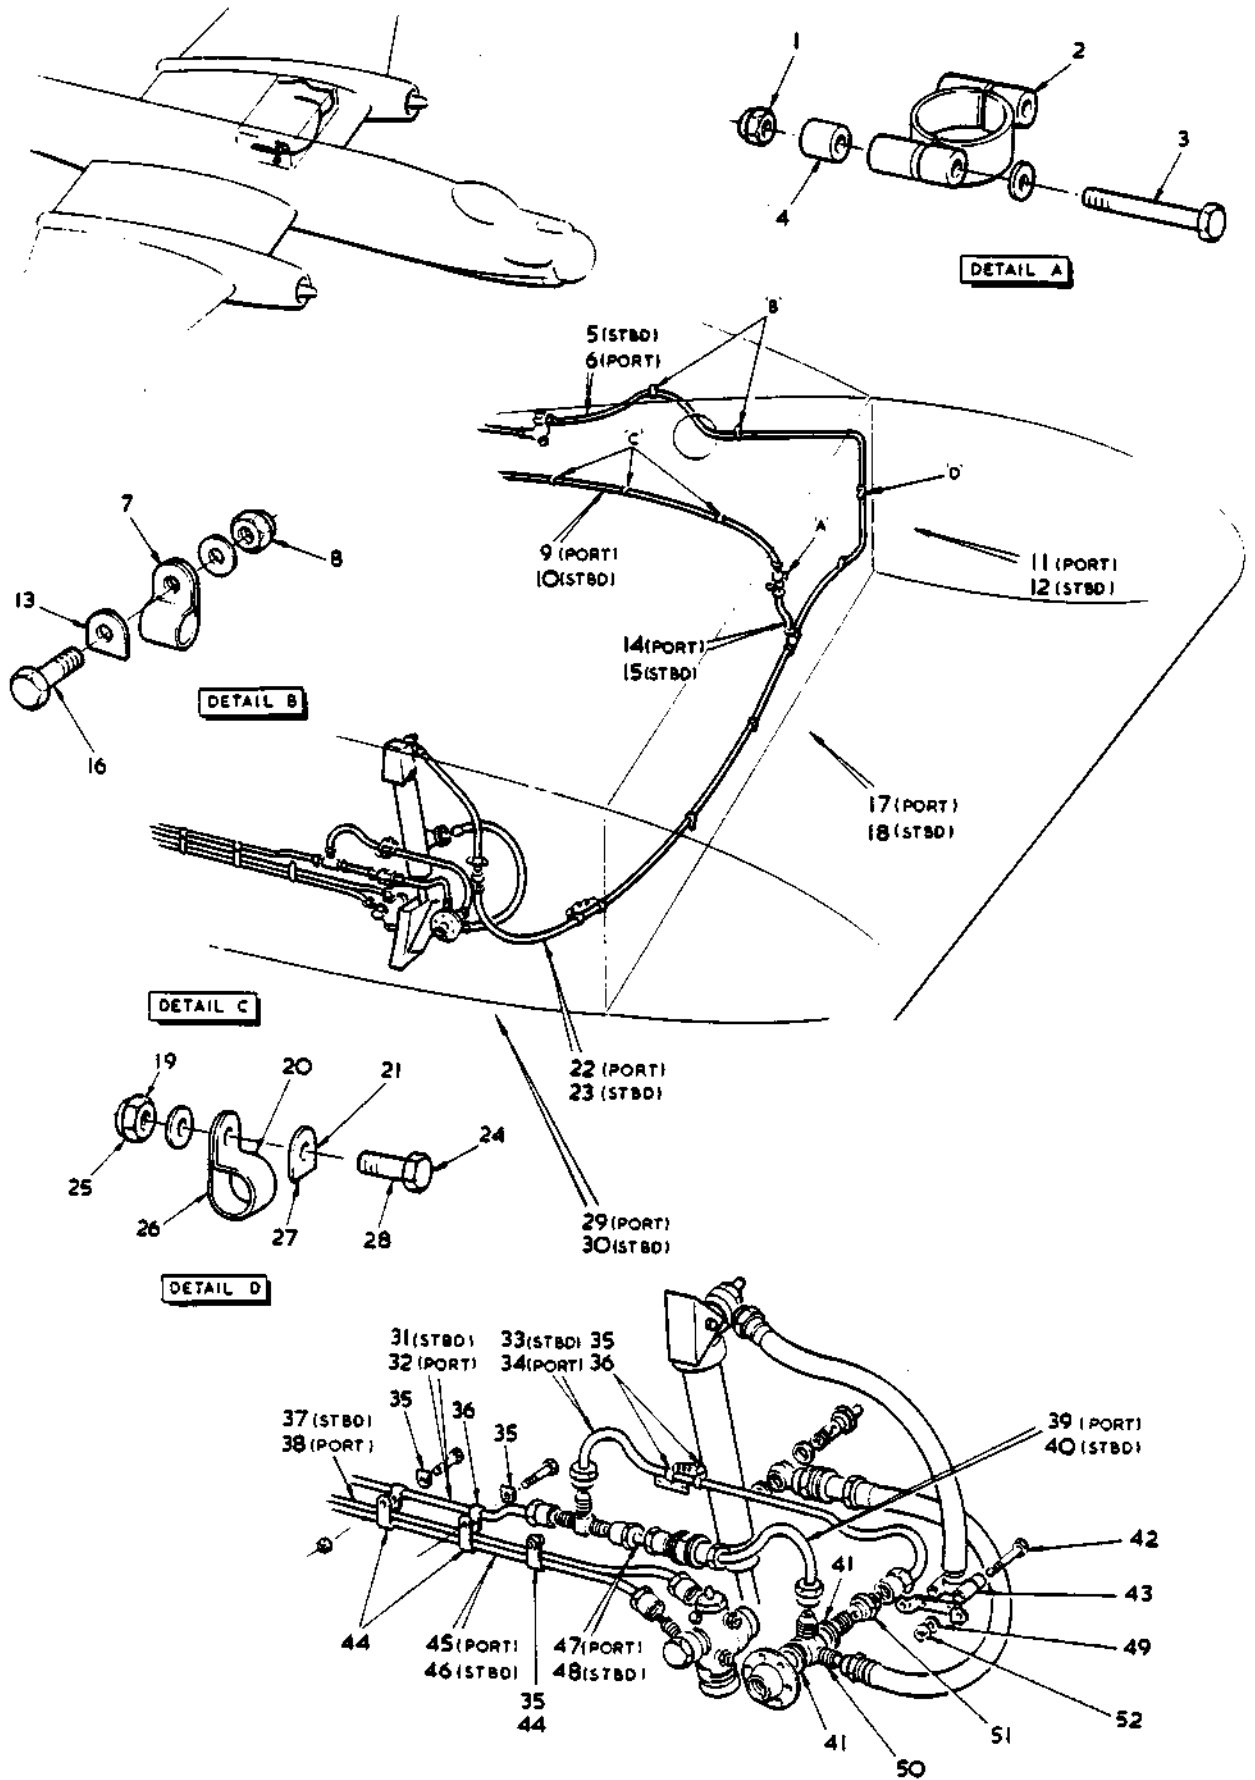


FIG. 101 HYDRAULIC EQUIPMENT IN PORT AND STBD WING

1

2

3

4

5

6

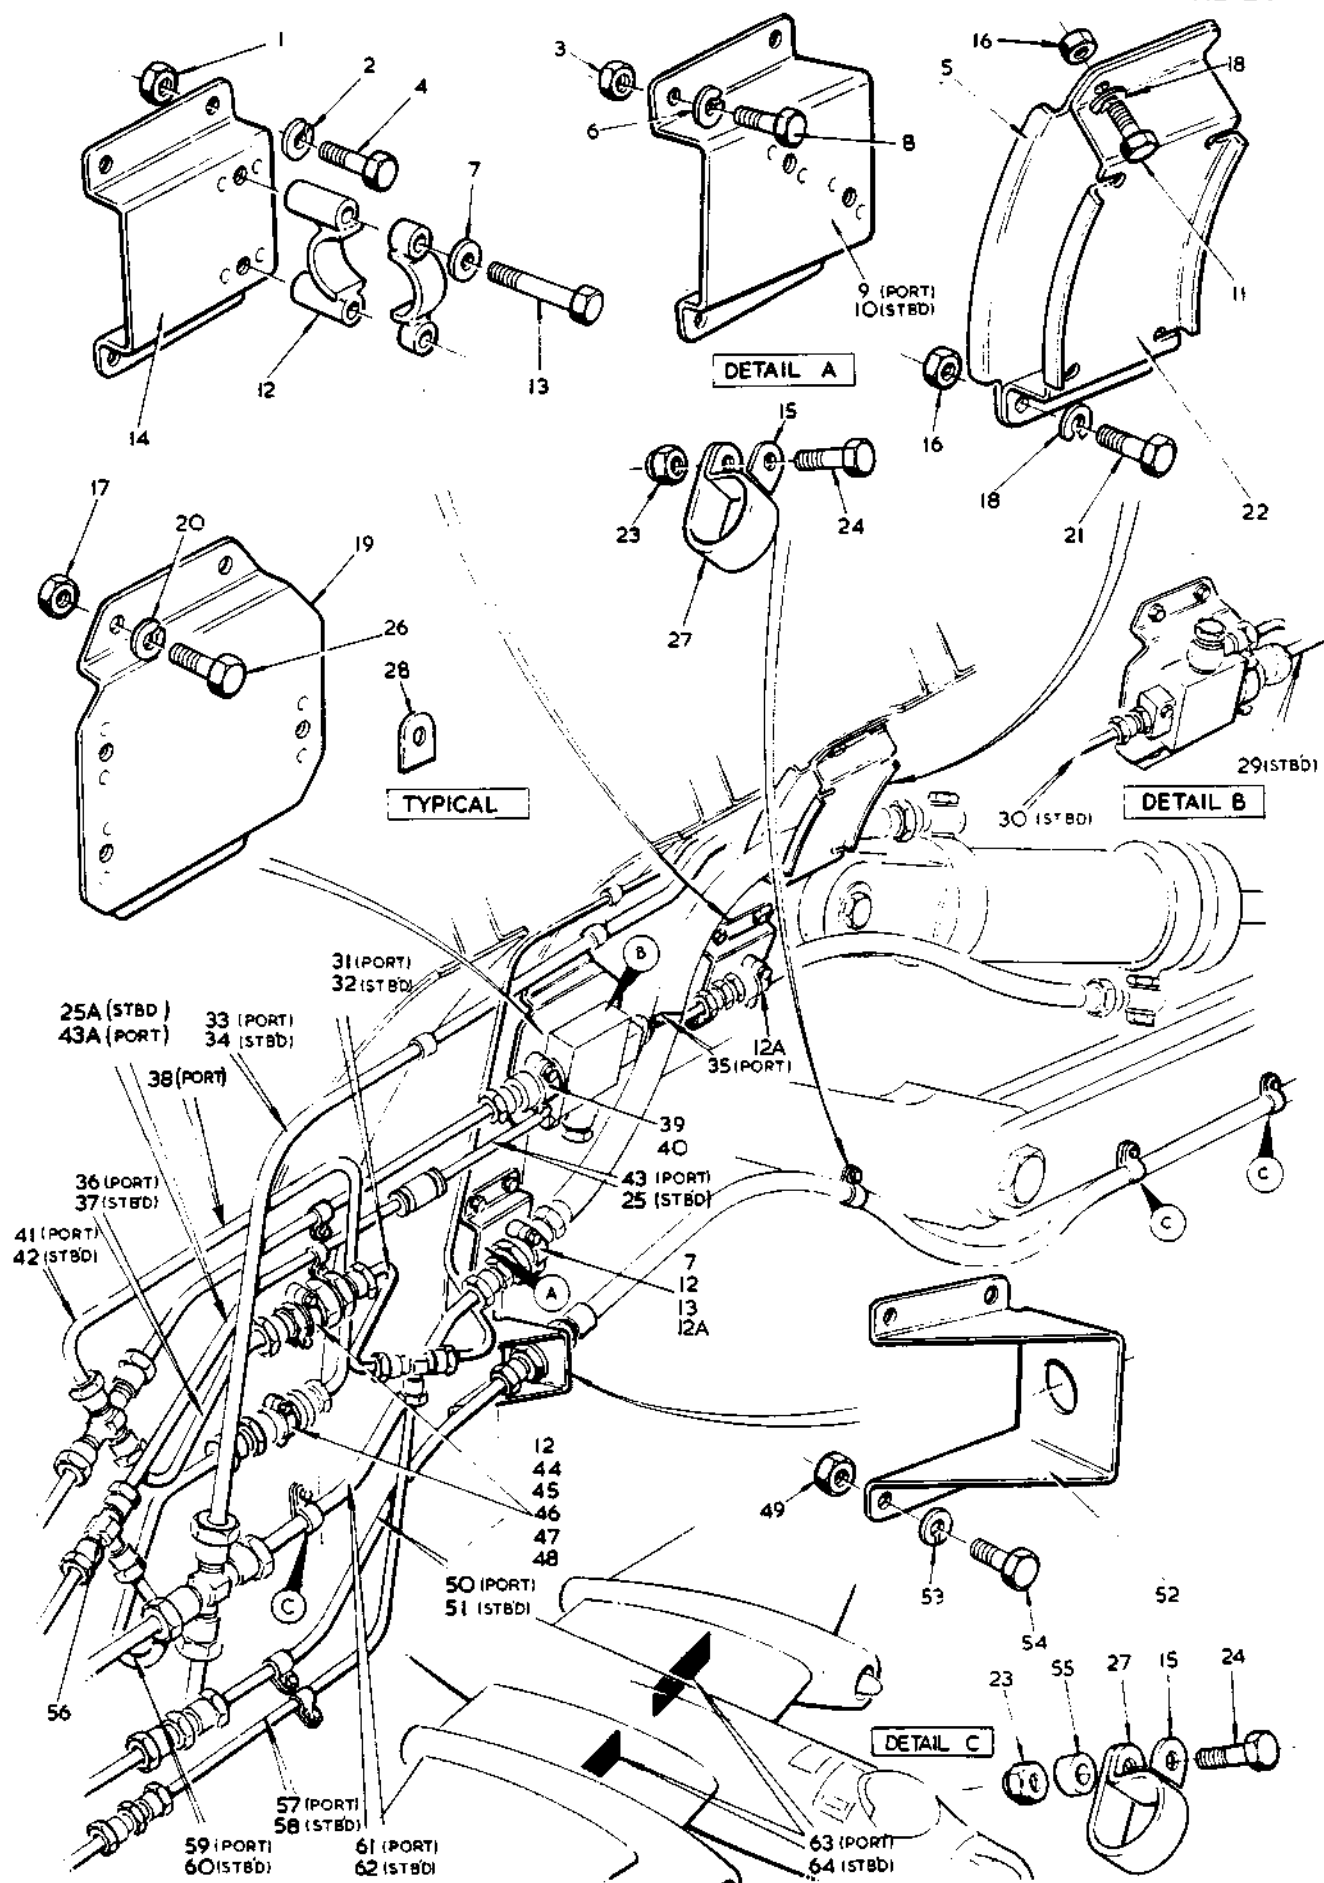


FIG. 102 HYDRAULIC EQUIPMENT PORT & STB'D WING

1

2

3

4

5

6

7

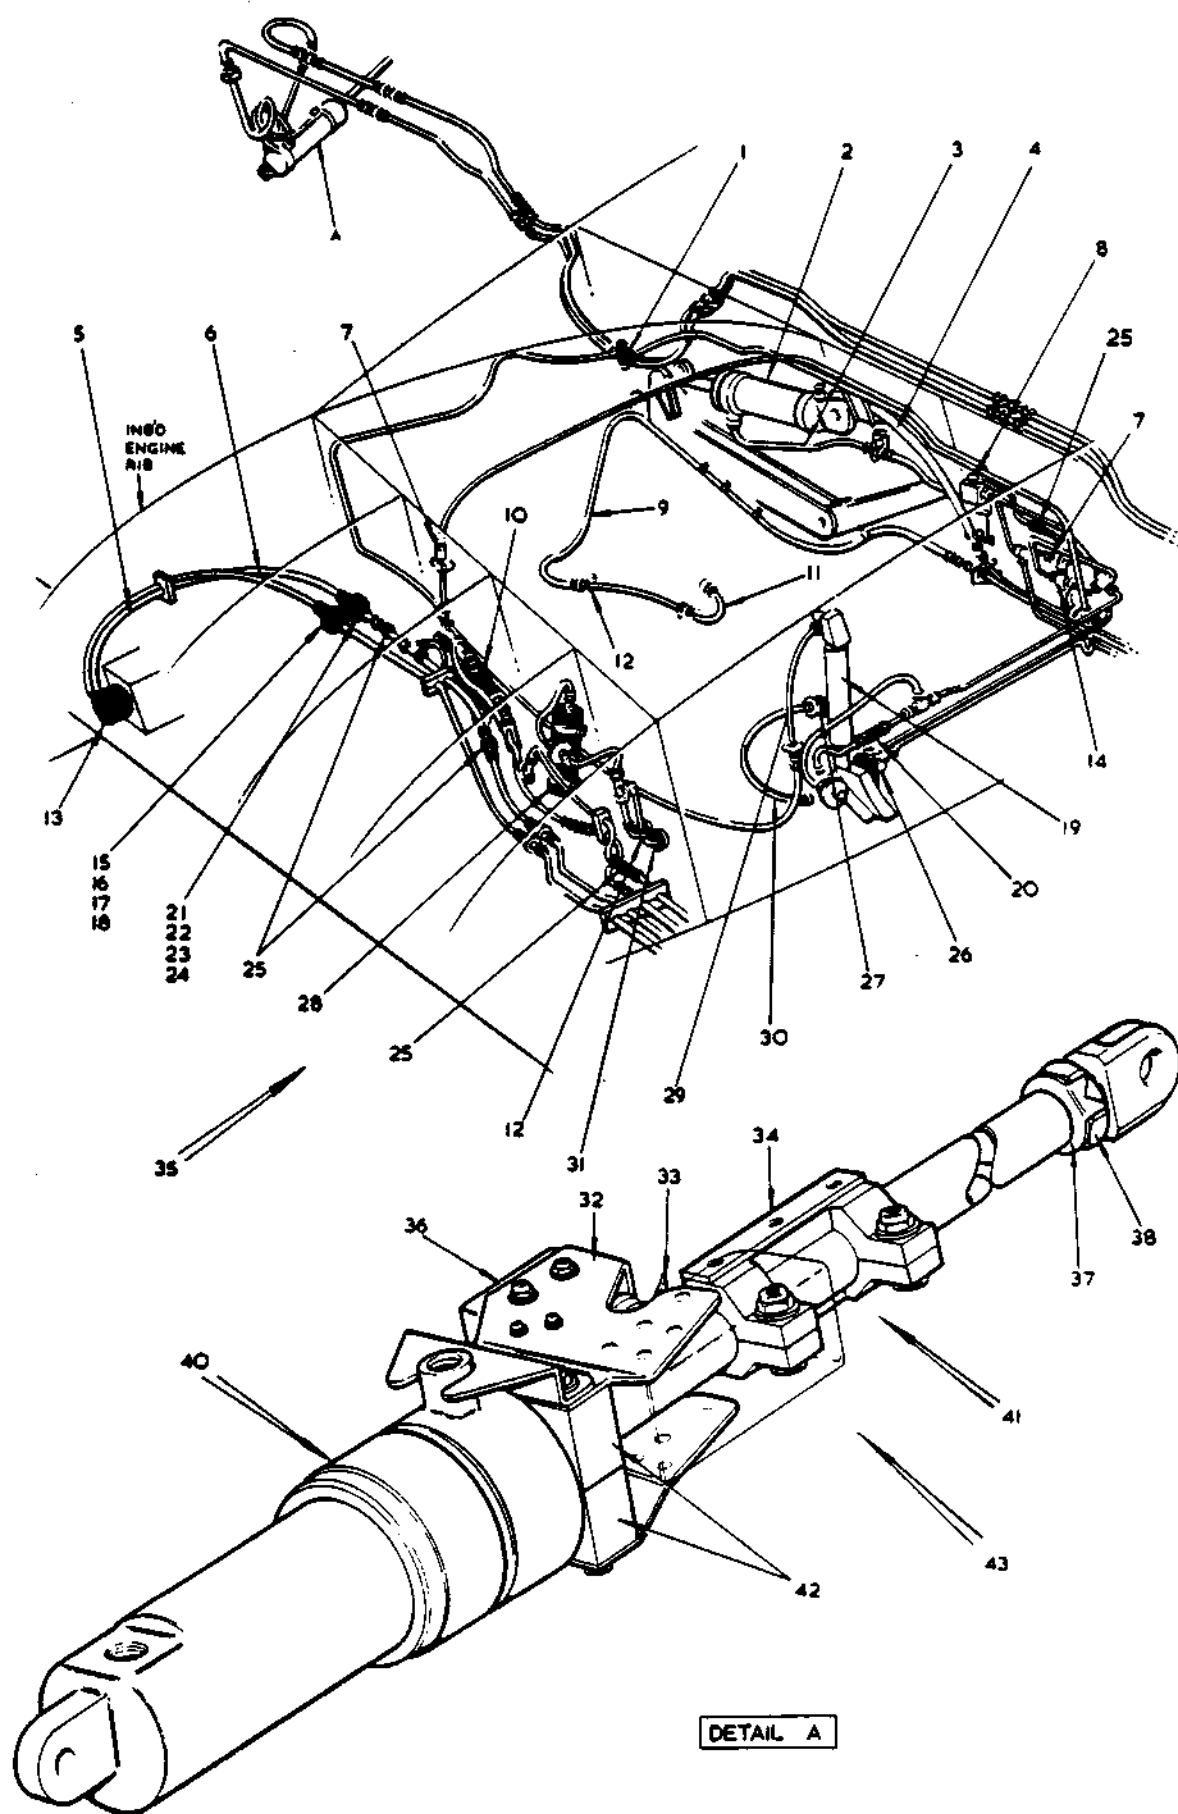


FIG 103 HYDRAULIC EQUIPMENT IN STBD WING



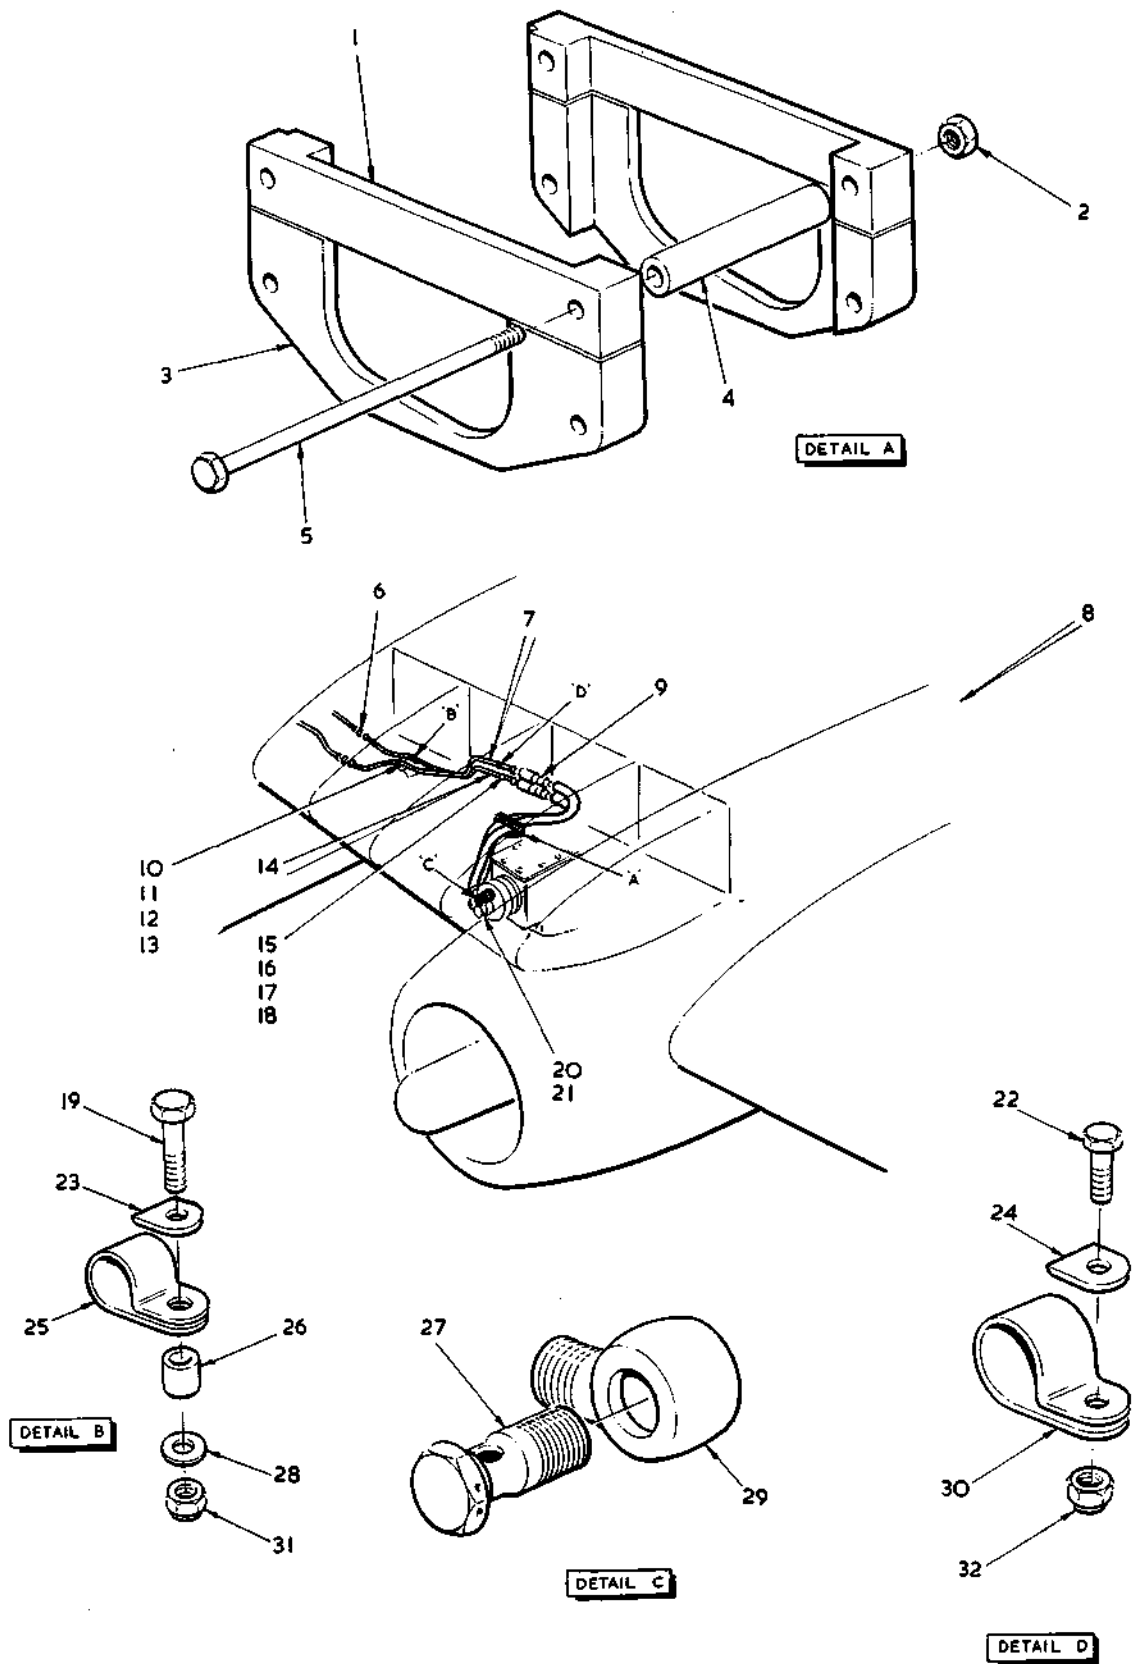


FIG.104 HYDRAULIC EQUIPMENT IN INNER WING LEADING EDGE PORT

•

•

•

•

•

•

•

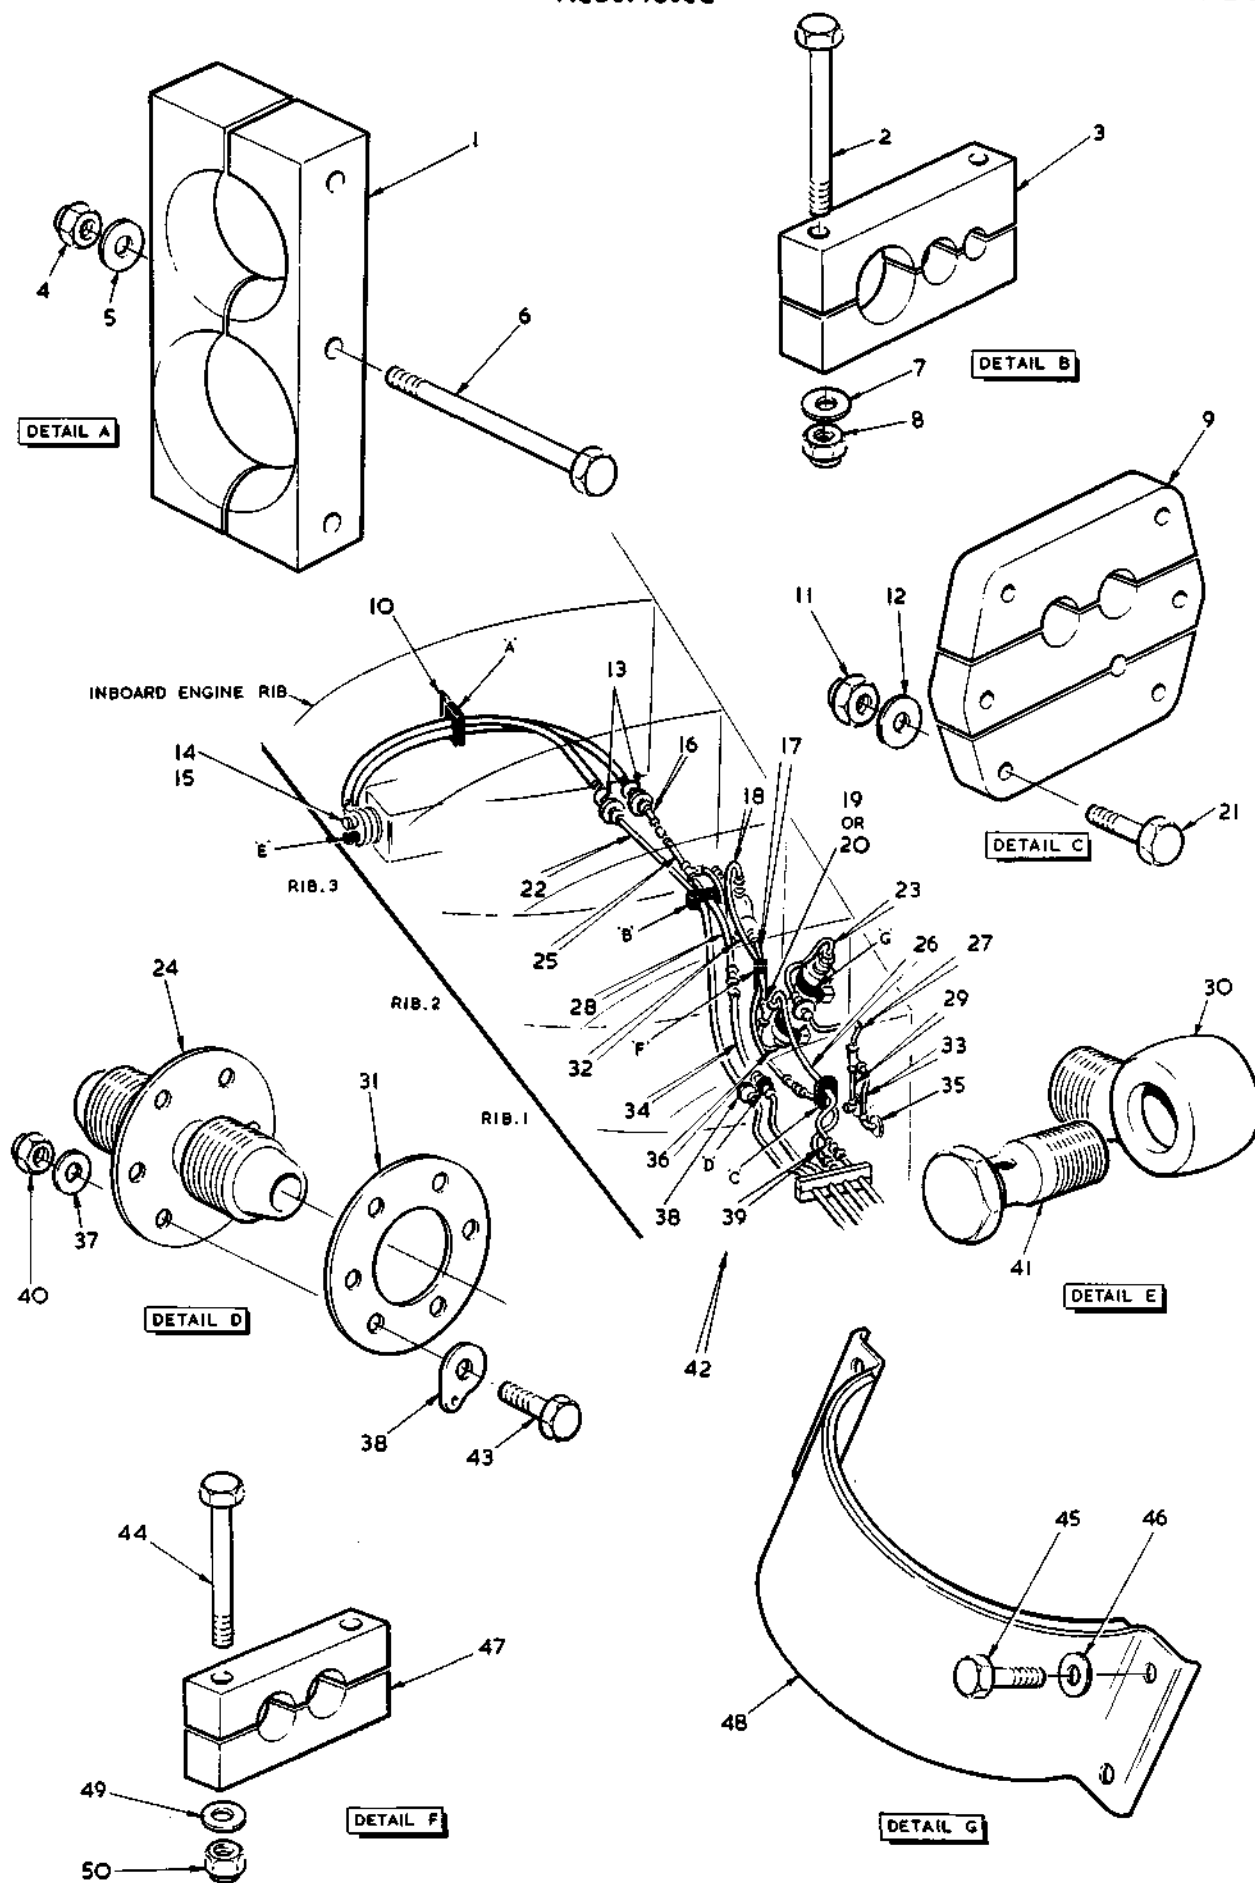


FIG.105 HYDRAULIC EQUIPMENT IN INNER WING LEADING EDGE,STBD

Restricted

T MK.17 SECT. N



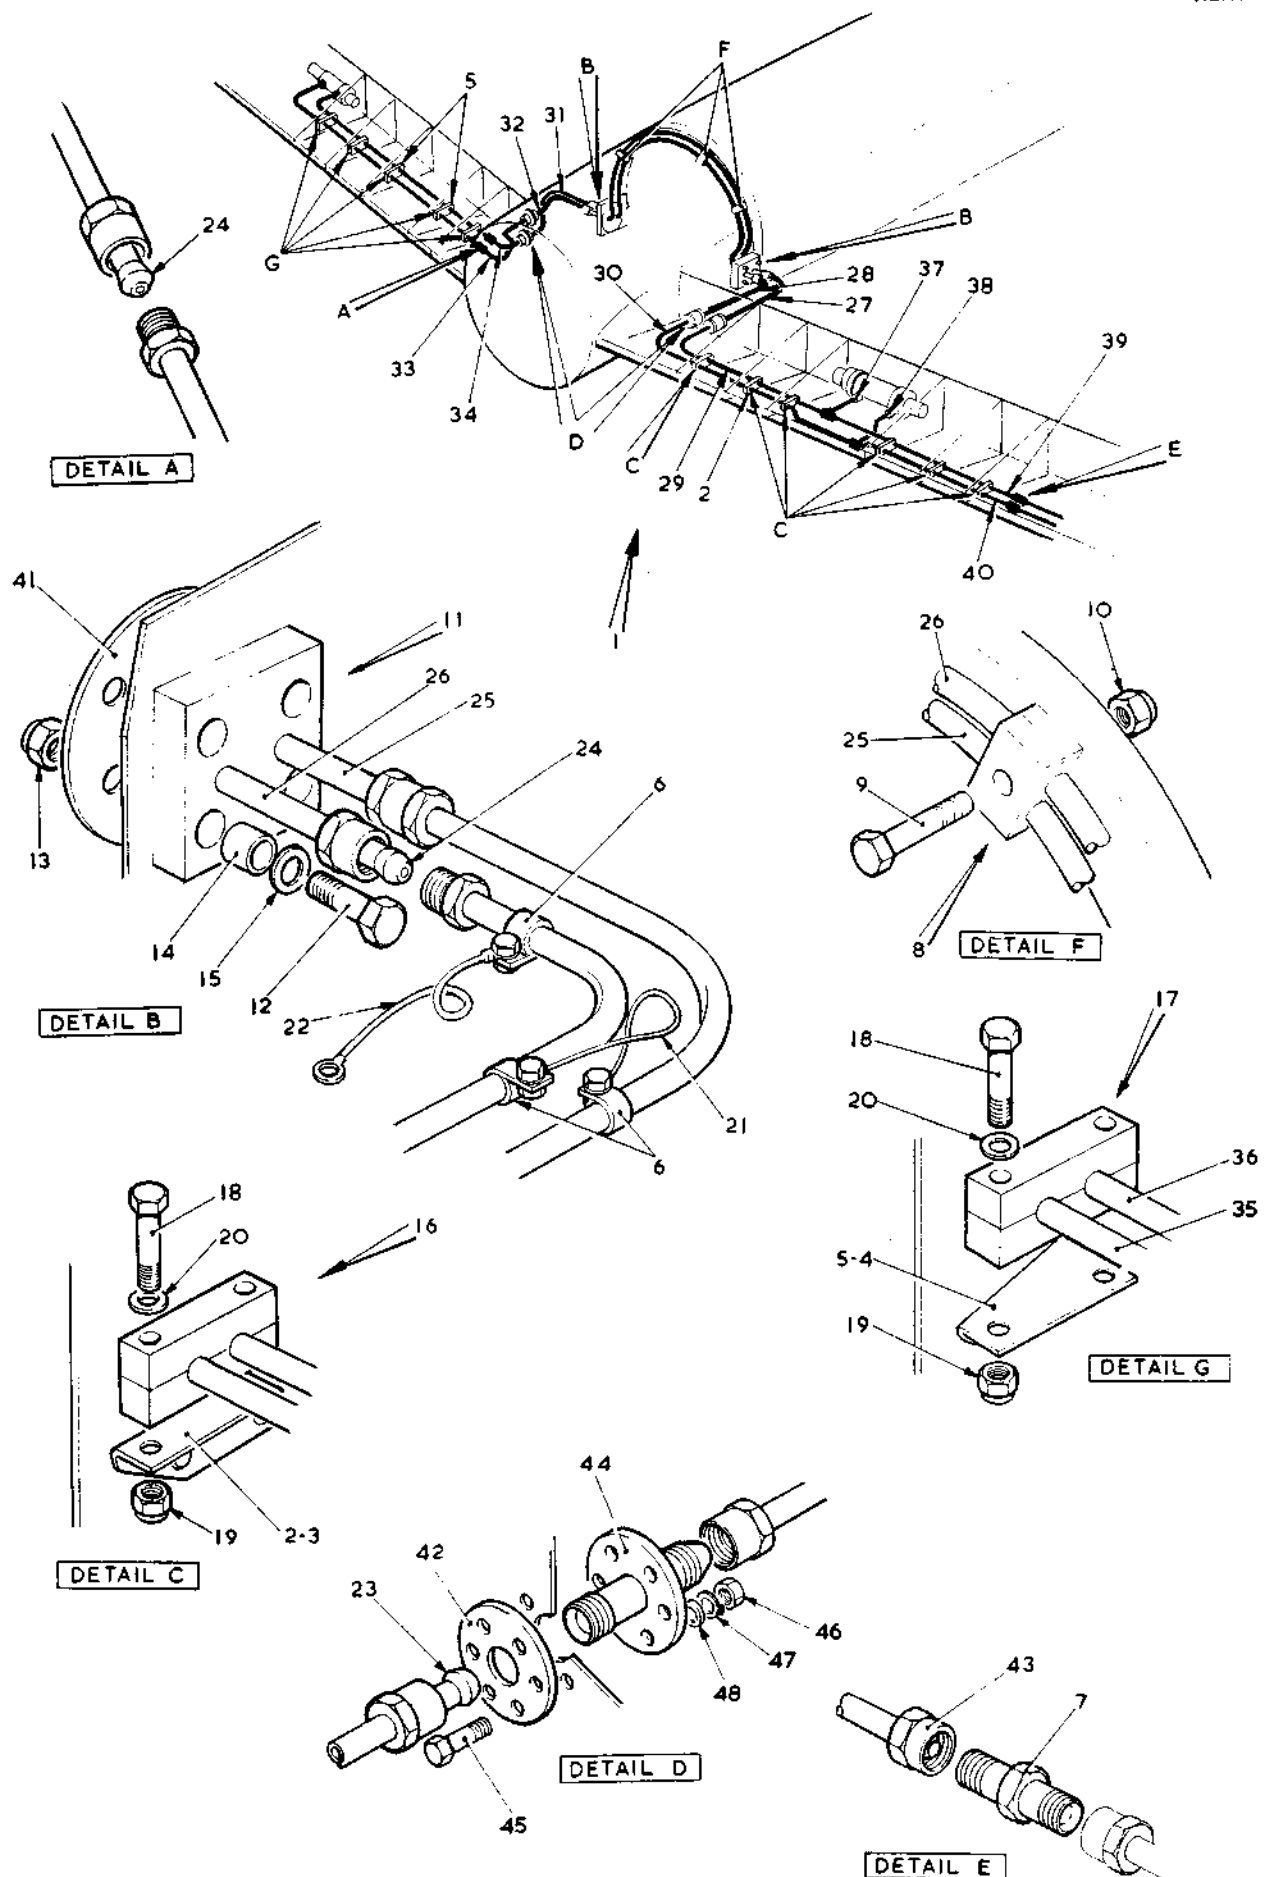


FIG. 106 PIPES TO HYDRAULIC FLAP JACK ASSEMBLY
Restricted

●

●●

●●

●

●●

●●●●

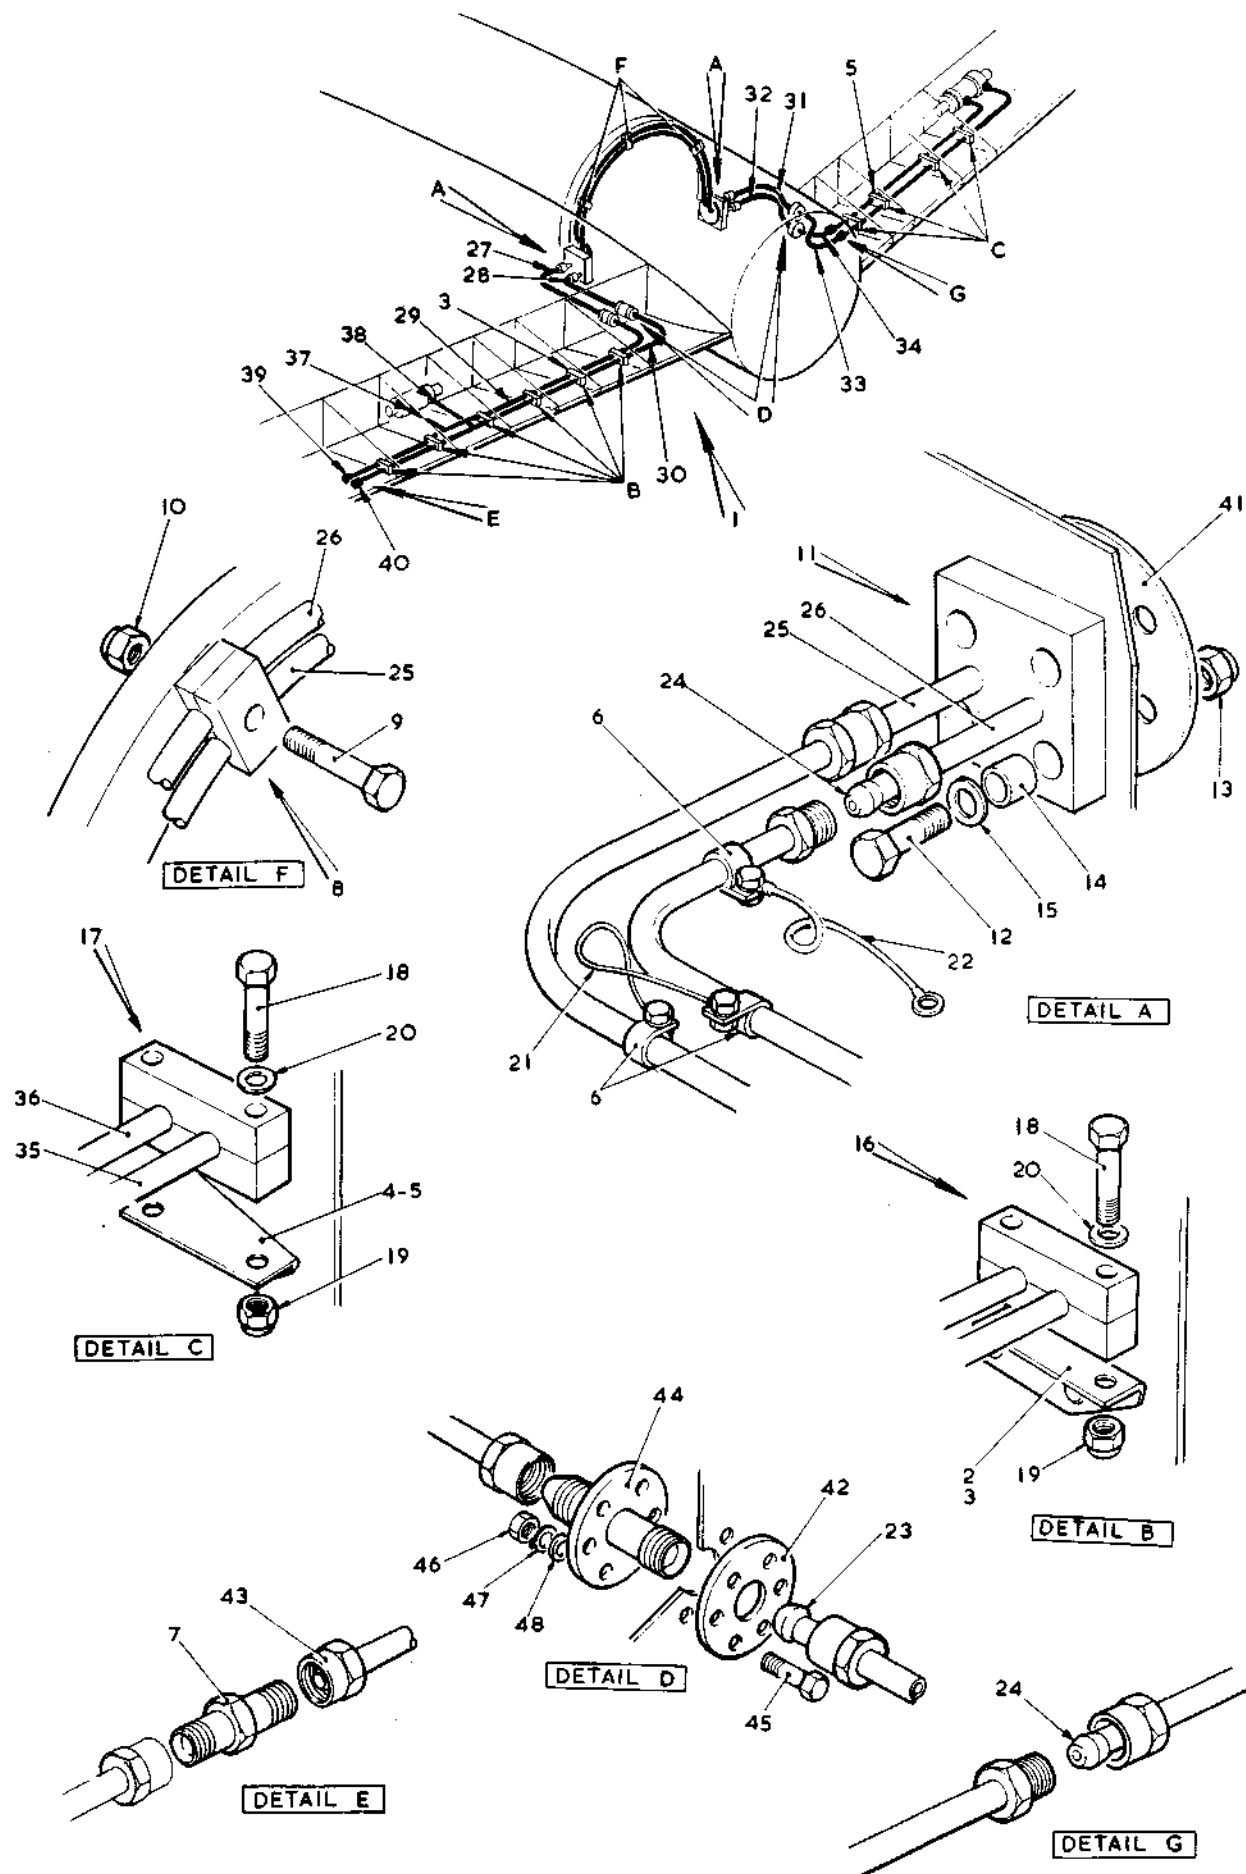


FIG. 106A PIPES TO HYDRAULIC FLAP JACK ASSEMBLY
Restricted

1

2

3

4

5

6

7

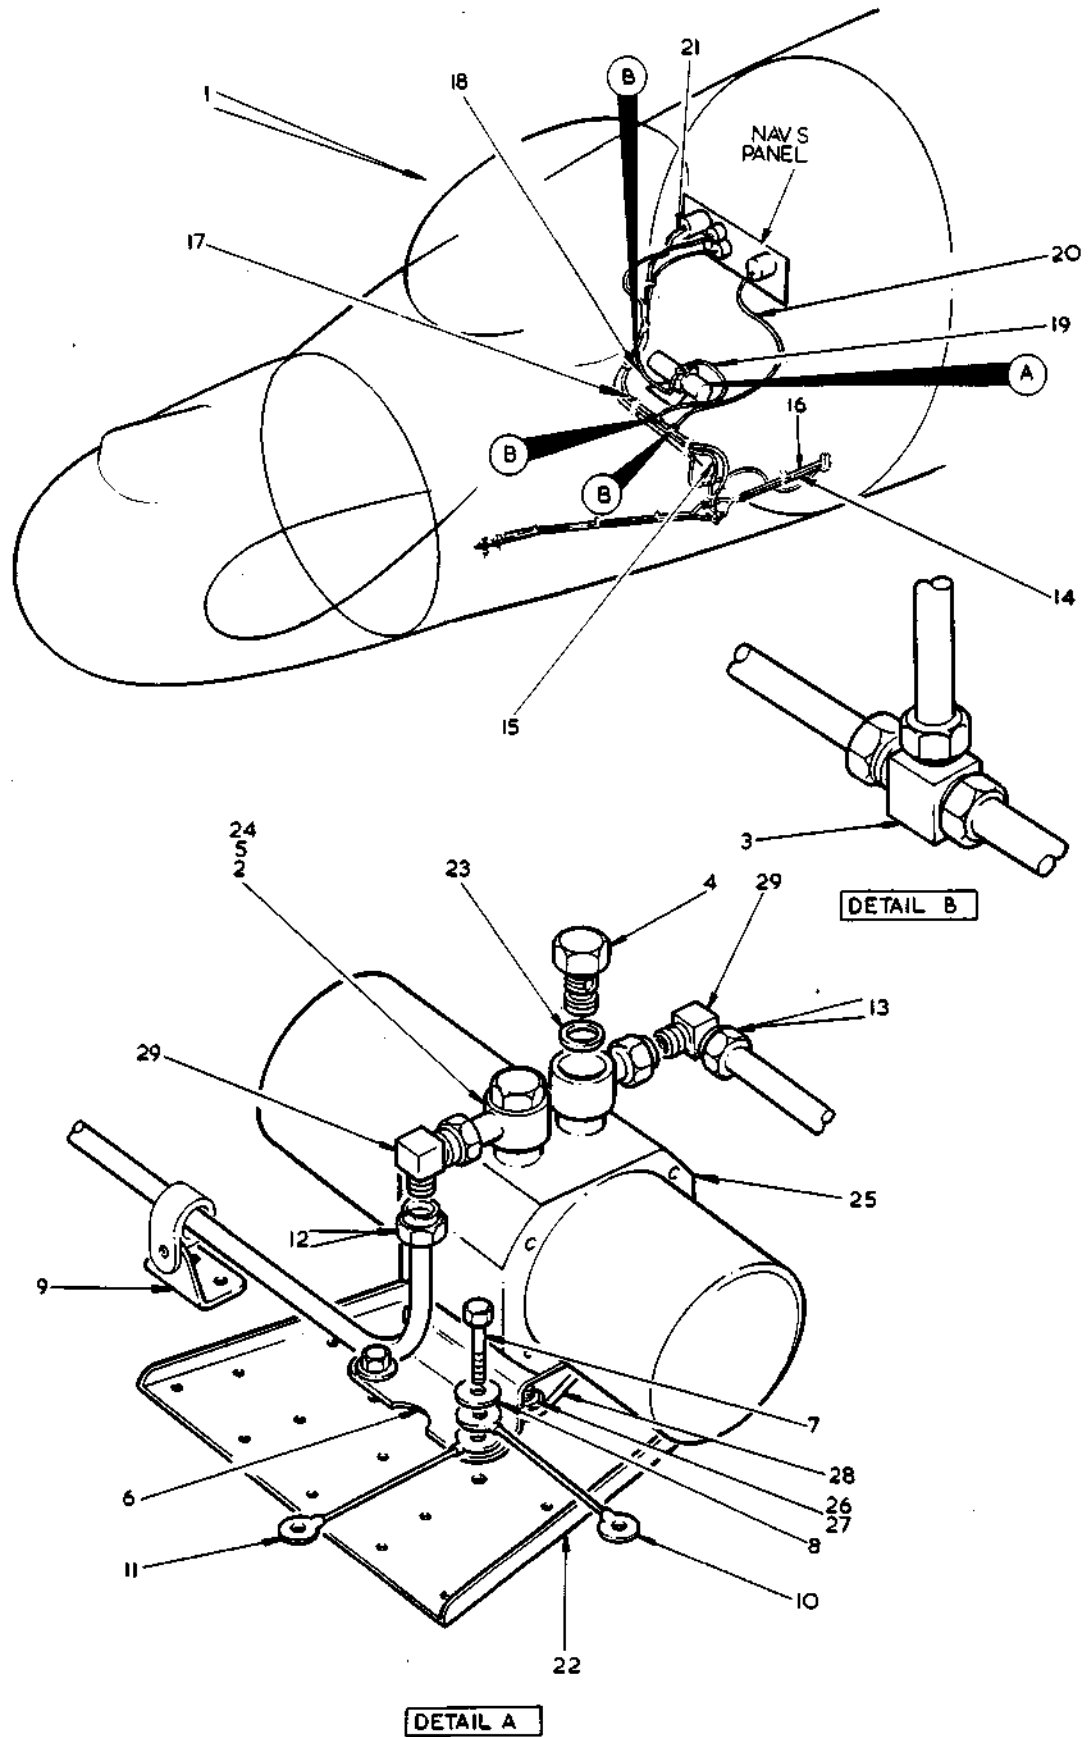


FIG 107 PITOT AND STATIC PIPES IN FRONT FUSELAGE

T.MK 17 SECT N

•



•

•


•

•


•

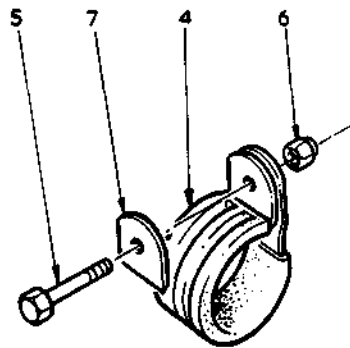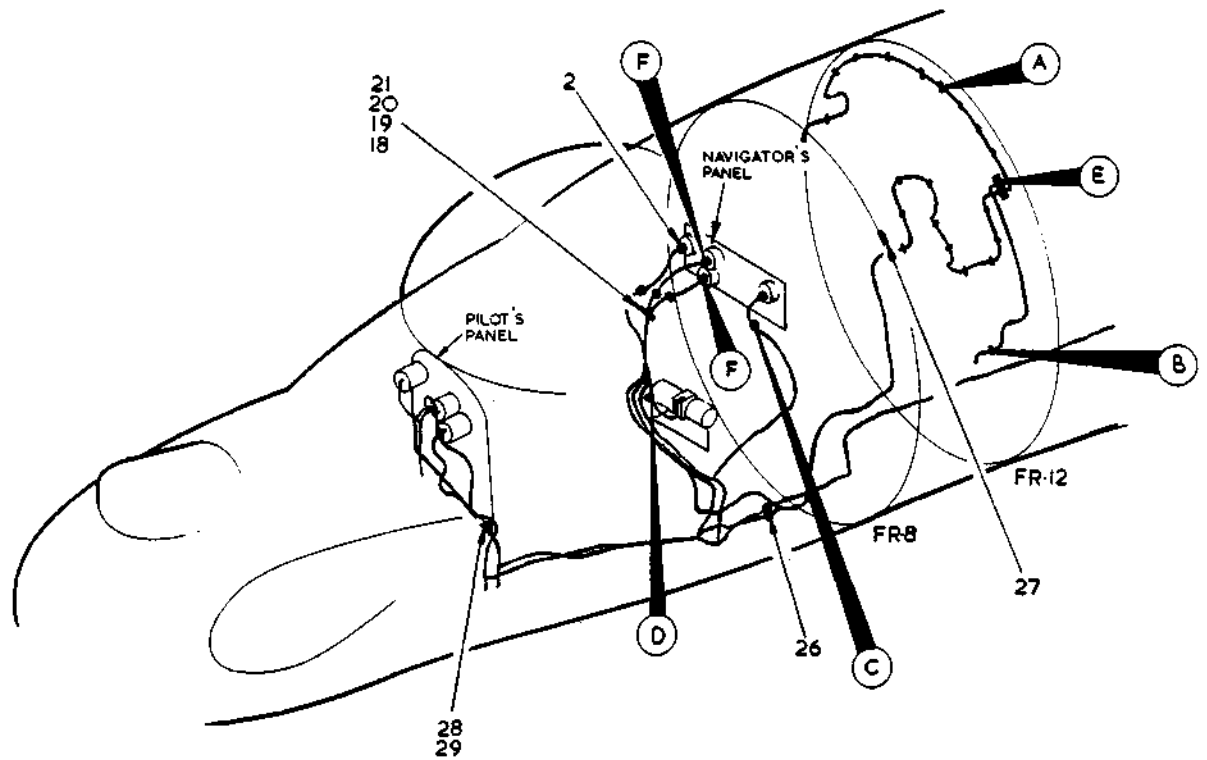


DETAIL A

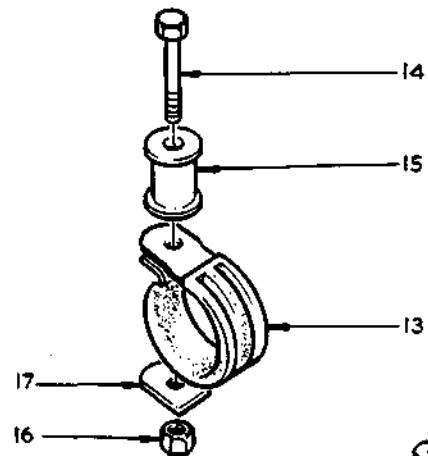


DETAIL B

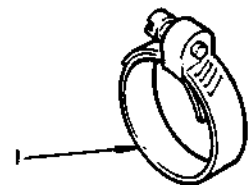


DETAIL C

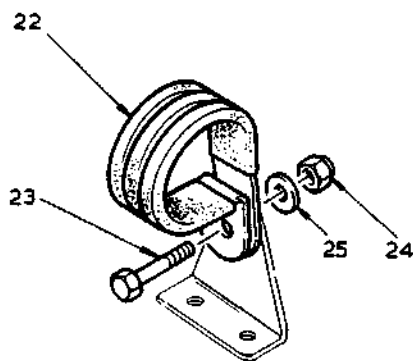

DETAIL D

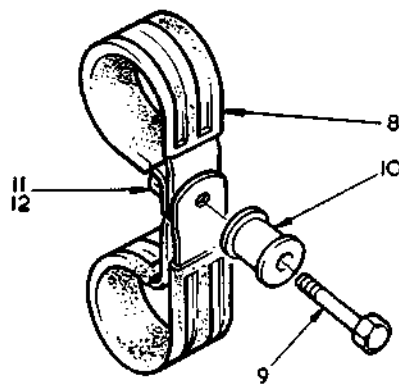

DETAIL E

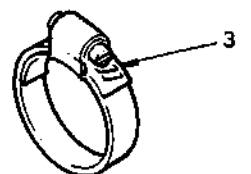

DETAIL F

FIG 108 PITOT AND STATIC PIPES IN FRONT FUSELAGE

T.MK 17 SECT N

•

•


•

•

•

•

•

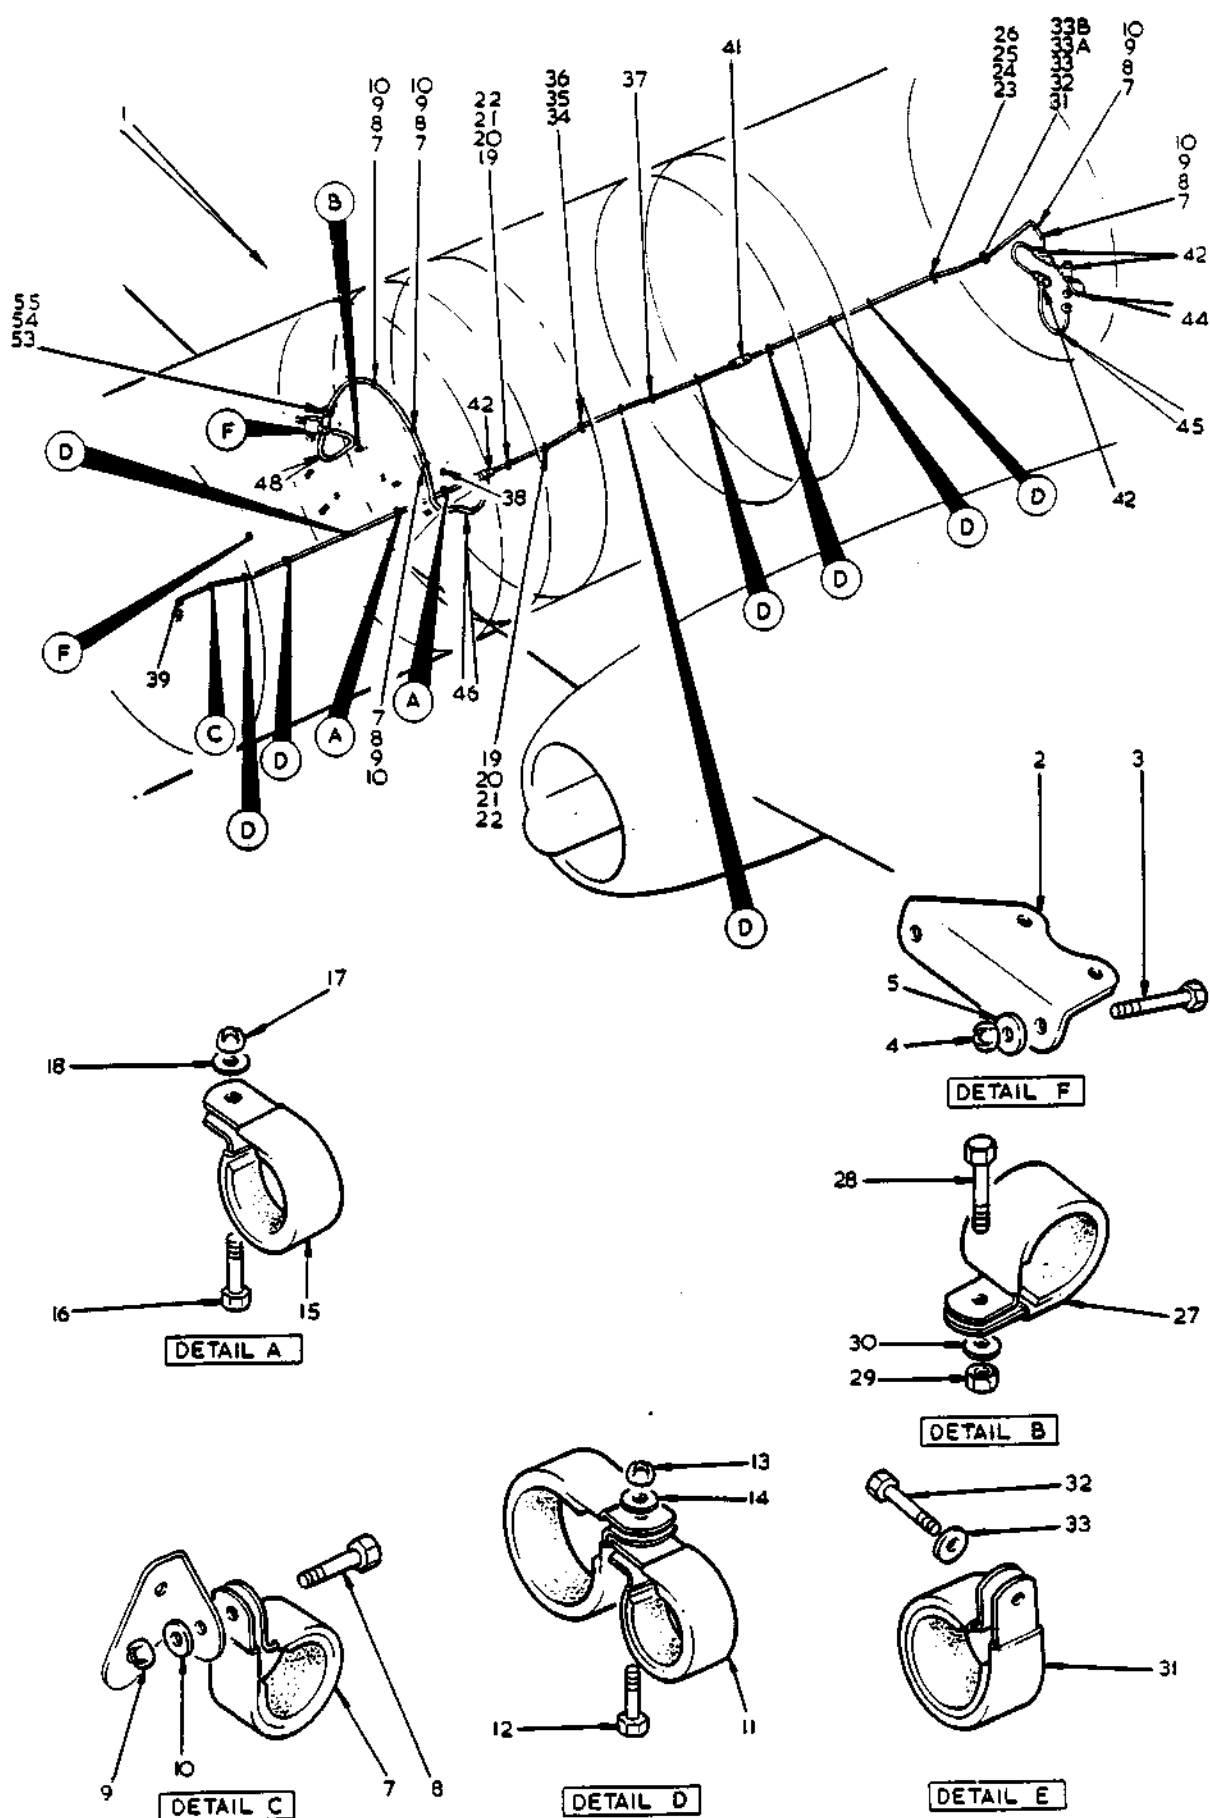

**FIG 109 NITROGEN PRESSURISING OF WAVEGUIDES
IN BOMB BAY**

T MK 17 SECT N



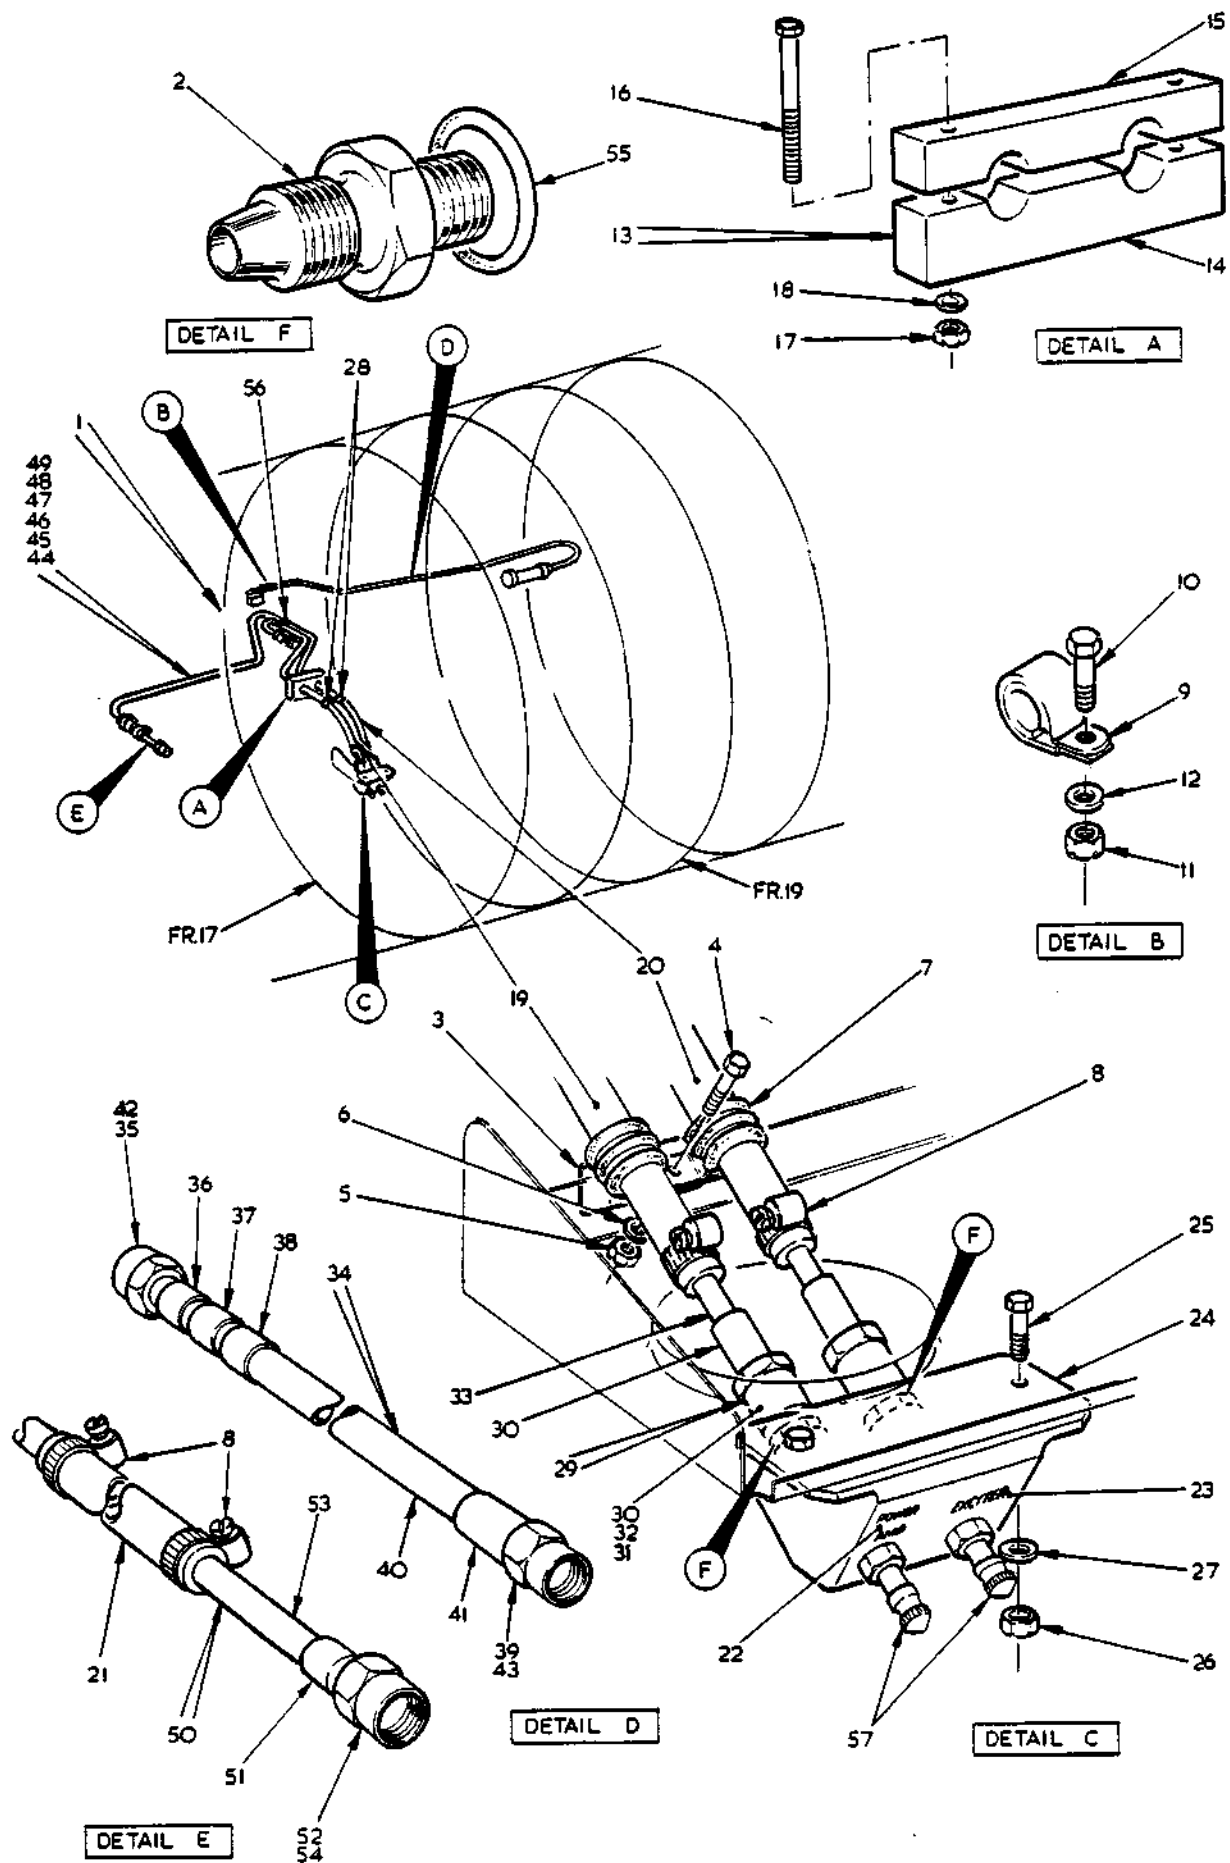


FIG.110 NITROGEN CHARGING

