

UNDERCARRIAGE
MAIN UNDERCARRIAGE PORT

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
EA1.40.1		MAIN UNDERCARRIAGE PORT ASSEMBLY Consisting of:-	1	—	
EA3.40.5		. LEG OLEO (LESS WHEEL FIXED FAIRING AND BRAKE UNIT GROUP Consisting of:-	1	—	1/1
DUNLOP AH9597		. . BRAKE—UNIT, (For spares see AP4515C Vol.3 Part 1 Sec. 2 Chap 37)	1	—	1/2
DUNLOP KJN16N		. . COVER, outer 43" x 13" .5 x 19" (DUNLOP DR4521 or FIRESTONE ZA341 OR ZA173 or GOODYEAR GA1209)	1	—	1/3
EA3.20.853		. . FAIRING FIXED GROUP (Supplied with trim allowance) Spares for:-	1	—	1/4
EA3.20.2869		. . . PANEL, HINGE ASSEMBLY Spares for:-	1	—	1/5
EA1.20.1679		 HINGE (Make from 28N/10363)	1	—	1/6
EA1.20.1675		 PANEL, hinge 16 SWG	1	L.72	1/7
EA1.40.435		 SPRING	2	Spring Steel	1/8
EA1.20.6817		. . . PANEL, access picket point	1	—	1/9
R EA3.20.1741		. . . SEAL, 'P' (Pre-Mod 5282) (Make from EEAS120) (26FZ/20626)	1	—	
R EA3.20.5319		. . . SEAL, 'P' (Mod 5282) (Make from EEAS842) (26FZ/6147759)	1	—	
R EA3.20.1627		. . . SEAL, 'P' (Pre-Mod 5282) (Make from EEAS121) (26FZ/4432)	1	—	1/10
R EA3.20.5317		. . . SEAL, 'P' (Mod 5282) (Make from EEAS843) (26FZ/6147758)	1	—	1/10
EA3.40.233		. . LEG SLIDING AND OLEO HEAD GROUP Spares for:-	1	—	2/1
EA6.40.35		. . . BOLT, brake unit securing	10	S.97	3/1
EA1.40.153		. . . BUSH, bearing torque link centre joint	4	DTD412	2/2
EA3.40.231		. . . HEAD OLEO GROUP Spares for:-	1	—	2/3
EA1.40.89		 BEARING, spherical seated ball joint side stay Attaching parts for EA1.40.89:-	1	S.11	2/4
EA1.40.101		 Bush, bearing	1	DTD412	2/5
EA1.40.95		 Ring, cover retaining ball joint	1	DTD124	2/6
EA1.40.97		 Ring, upper retaining ball joint	1	DTD124	2/7
EA1.40.99		 Stud retaining rings	12	S.11	2/8
EA9.40.63		 BUSH, pivot	2	DTD412	2/9
EA1.40.111		 BUSH, torque link Attaching parts for EA1.40.111:-	2	DTD412	2/10
EA1.40.679		 Plug, bearing bush retaining	1	L.40	2/11
EA1.40.133		 DISC, sealing piston dowel plug Attaching parts for EA1.40.133:-	2	L.40	2/12
EA1.40.625		 Screw, retaining plug down seal	1	L.40	2/13

UNDERCARRIAGE
MAIN UNDERCARRIAGE PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1	2 3 4 5 6			
EA1.40.131	 DOWEL, piston	2	S.11	2/14
EA9.07.35	 HEAD, oleo forging (EA9.40.55)	1	DTD5094	2/15
EA1.40.103	 HOOK, 'S' shaped, 16 SWG	2	MS	2/16
EA1.40.127	 PIPE, stack assembly Attaching parts for EA1.40.127:-	1	—	2/17
AGS1138B	 Washer, jointing	1	—	2/18
EA1.40.17	 PISTON OPERATING GROUP Consisting of:-	1	—	2/19
EEAS37/22A	 NIPPLE, 2 BA	2	S.11	2/20
EA1.40.647	 PISTON	1	DTD197	2/21
EA1.40.649	 PLATE, orifice enclosure control Attaching parts for EA1.40.649:-	1	S.11	2/22
EA1.40.61	 Bolt, special	3	S.11	2/23
EA1.40.651	 RING, piston	1	—	2/24
EEAS38/3A	 SPOKE, 2 BA (Make from 28R/6328)	1	S.11	2/25
EA1.40.117	 STRUT, piston main	1	T.4	2/26
EA1.40.155	 RING, seating	2	Synthetic Rubber	2/27
H.P. COMPS A58	 VALVE, charging Attaching parts for A58:-	1	—	2/28
AS1246/5C	 Bolt, 2 BA round head	1	—	2/29
EA1.40.105	 Tube, distance	1	L.40	2/30
SP47C	 Washer, 2 BA spring	1	—	2/31
AGS1138B	 Washer, jointing	1	—	2/32
EA1.40.149	 Washer, locking 14 SWG Attaching parts for EA3.40.231:-	1	DTD124	2/33
EA1.40.519	 Bolt, securing fixed fairing mounting brackets to leg	8	—	2/34
SP47E	 Washer, 1/4" BSF spring	8	—	2/35
EA3.40.235	 LEG SLIDING COMPRESSION GROUP Consisting of:-	1	—	3/2
EA3.40.201	 BOLT, clamp axle locking	1	S.95	3/3
EA3.40.45	 BUSH, bearing	1	—	3/4
EA1.40.161	 BUSH, bearing in lug	2	DTD124	3/5
EA3.40.13	 CLAMP, AXLE GROUP Spares for:-	1	—	3/6
EA3.40.23	 BUSH	1	L.16	3/7
EA3.40.17	 CLAMP, axle body	1	—	3/8
EA3.40.19	 LINK, towing	1	—	3/9
EA3.40.21	 WASHER, tow link	1	—	3/10
EA3.40.209	 HOUSING, seals	1	L.65	3/11
EA3.40.9	 LEG, sliding c/w integral axle	1	—	3/12
EA1.40.41	 NUT, stop	1	S.11	3/13
EA3.40.221	 PIN, locking piston	3	S.97	3/14
EA3.40.219	 PISTON, sliding leg	1	DTD197	3/15

R

UNDERCARRIAGE

MAIN UNDERCARRIAGE, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA1.40.175	 PLATE, orifice Attaching parts for EA1.40.175:—	1	L65	3/16
EA1.40.61	 Bolt, special	6	S11	3/17
EA3.40.203	 PLUG, sealing	1	L40	3/18
EA1.40.677	 PLUG, pivot, bearing bush, retaining	2	L40	3/19
EA1.40.45	 RING, retaining felt washer Attaching parts for EA1.40.45:—	1	S3	3/20
AS1242/1B	 Bolt, 4 BA c'sk head	8	—	3/21
EA1.40.57	 RING, piston	1	—	3/22
EA3.40.205	 RING, sealing, on plug	1	Soft Rubber	3/23
EA3.40.207	 RING, distance, between sealing and backing rings	1	L64	3/24
EA3.40.211	 RING, sealing, seal housing	1	Soft Rubber	3/25
EA3.40.213	 RING, sealing, seal housing	2	Soft Rubber	3/26
EA3.40.215	 RING, backing	1	Fabric C x 18	3/27
EA1.40.657	 RING, spacer, between fibre washer	1	L40	3/28
EA1.40.659	 RING, shock absorber stop	1	L40	3/29
EA1.40.167	 SCREW, grub, stop nut locking	1	S1	3/30
EA1.40.39	 WASHER, fibre, under stop nut	1	BS216	3/31
EA1.40.43	 WASHER, packing, under ring retaining x 3/16" thick	1	Hard Felt	3/32
30A9437135	 WIRE, locking, 22 SWG	QR	DTD189A	
EA1.40.467	 LEVER, COWL DOOR MECHANISM, GROUP Spares for:—	1	—	2/36
EA1.40.465	 BUSH, bearing	2	L40	2/37
EA1.40.529	 LEVER, operating Attaching parts for EA1.40.467:—	1	—	2/38
EA1.40.517	 Bolt, securing	4	—	2/39
EA1.40.27	 LINK, torque, top Attaching parts for EA1.40.27:—	1	DTD5024	2/40
A27/SS	 Nut, 3/4" BSF slotted	1	—	2/41
EA1.40.69	 Pin, bearing, top torque link	1	S11	2/42
EA3.40.27	 Pin, bearing, torque link joint	1	S97	2/43
EA1.40.77	 Screw, retaining, bearing pin	1	S11	2/44
EA1.40.139	 Screw, grub, locking, top bearing pin	1	MS	2/45
EA1.40.619	 Shim, bearing, pin sleeve	1	LA	2/46
EA1.40.73	 Sleeve, bearing, for torque link	1	S11	2/47
EA1.40.75	 Washer, bearing thrust	1	DTD412	2/48
EA1.40.79	 Washer, locking, bearing pin screw	1	MS	2/49
EA1.40.83	 Washer, spacing, at torque link, joint, between link bearing	1	or S515 S11	2/50
EA1.40.147	 Washer, bearing, thrust	1	DTD412	2/51
EA3.40.29	 Washer, at torque link joint	1	S96	2/52
EA3.40.31	 Washer, at torque link joint	1	S96	2/53

UNDERCARRIAGE

MAIN UNDERCARRIAGE, PORT

Part Number	Description	No. Off	Matl. Spec.	Plate No.
	1 2 3 4 5 6			
EA1.40.28	. . . LINK, torque, bottom Attaching parts for EA1.40.28:—	1	DTD5024	2/54
EA1.40.67	. . . Pin, bearing, bottom torque link	1	S11	2/55
EA1.40.77	. . . Screw, retaining, bearing pin	1	S11	2/56
EA1.40.139	. . . Screw, grub, locking, bottom bearing pin	1	MS	2/57
EA1.40.619	. . . Shim, bearing, pin, sleeve	1	LA	2/58
EA1.40.71	. . . Sleeve, bearing, for torque link	1	S11	2/59
EA1.40.75	. . . Washer, bearing, thrust	1	DTD412	2/60
EA1.40.79	. . . Washer, locking, bearing pin retaining screw	1	MS	2/61
EA1.40.147	. . . Washer, bearing, thrust	1	DTD412	2/62
SP21	. . . NIPPLE, lubricating, 1/4" BSF	5	LA	2/63
A27/NS	. . . NUT, 1/2" BSF, brake unit securing	10	—	3/33
SP90/E8	. . . PIN, split, brake unit securing	10	—	3/34
EA1.40.137	. . . TAB, locking, 16 SWG Attaching parts for EA1.40.137:—	1	MS	2/64
A31/B16	. . . Screw, 4 BA cheese head	1	—	2/65
SP47/B	. . . Washer, 4 BA spring	1	—	2/66
EA3.40.43	. . . WASHER, brake unit securing	10	—	3/35
DUNLOP				
KJ9	. . . TUBE, inner, 43" x 13".5 x 19"	1	—	1/11
DUNLOP	. . . WHEEL, undercarriage (For spares, see AP.4515C, Vol. 3, Pt. 1 Sect. 12, Chap. 37)	1	—	1/12
AH9343				
or				
DUNLOP	. . . WHEEL, undercarriage (For spares, see AP.4515C, Vol. 3, Pt. 1, Sect. 2, Chap. 37)	1	—	
AH50439				
EA9.40.73	. . . STAY, SIDE, UNDERCARRIAGE, GROUP (Mod 5051) Spares for:—	1	—	4/1
EA1.40.221	. . . BOLT, connecting undercarriage operating jack	1	S65 or S81	4/2
EA1.40.239	. . . BOLT, stop link stay Attaching parts for EA1.40.239:—	1	S65 or S81	4/3
EA1.40.353	. . . Nut, lock	1	S11	4/4
EA1.40.405	. . . BOLT, sequence valve operating	1	S11	4/5
EA1.40.229	. . . BRACKET, stop bolt Attaching parts for EA1.40.229:—	1	S11	4/6
A25/15L	. . . Bolt, 7/16" BSF hex. head	1	—	4/7
A25/8L	. . . Bolt, 7/16" BSF hex. head	2	—	4/8
A27/LS	. . . Nut, 7/16" BSF slotted	3	—	4/9

A.P.101B-0418-3A

UNDERCARRIAGE
MAIN UNDERCARRIAGE, PORT

Page R5

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
7114	E.A1.40.403	BRACKET, sequence valve operating stud							1	L.40	C	4/10
28D/1212688	A25/18L	Attaching parts for E.A1.40.403:—							1	—	C	4/11
28M/9129449	A27/LS	Bolt, 7/16" BSF hex. head							1	—	C	4/12
		Nut, 7/16" BSF slotted							1	—	C	4/12
531	E.A1.40.199	LEVER, UNDERCARRIAGE LOCK, GROUP							1	—	C	4/13
		Consisting of:—										
532	E.A1.40.213	BUSH							1	DTD.197	C	4/14
	E.A1.40.201	LEVER							1	S.11	—	4/15
533	E.A1.40.200	LEVER, UNDERCARRIAGE LOCK, GROUP							1	—	C	4/16
		Consisting of:—										
532	E.A1.40.213	BUSH							1	DTD.197	C	4/17
	E.A1.40.202	LEVER							1	S.11	—	4/18
		Attaching parts for E.A1.40.199 and E.A1.40.200:—										
525	E.A1.40.195	Bolt, hook							1	S.61 or S.65	C	4/19
22176	E.A1.40.351	Nut, slotted, for hook catch pin bolt							1	—	C	4/20
543	E.A1.40.219	Tube, distance, for undercarriage "down" switch							1	L.40	C	4/21
		operating bracket										
28W/9419481	SP.15/Q	Washer, 5/8" BSF plain							1	—	C	4/22
544	E.A1.40.291	Washer, tab, at undercarriage hook catch bolt,							1	S.3	C	4/23
		20 SWG										
547	E.A1.40.417	Washer, under tab and connecting bolt, 24 SWG							1	L.72	C	4/24
13168	E.A3.40.191	LEVER, UNDERCARRIAGE "DOWN"							1	—	C	4/25
		MICROSWITCH OPERATING, ASSEMBLY										
		Spares for:—										
179	E.A1.40.569	SCREW, tappet							1	S.11	C	4/26
6472	E.A1.40.225	LINK, SIDE STAY, GROUP							1	—	B/MR	4/27
		Spares for:—										
536	E.A1.40.227	BUSH, bearing							2	DTD.197	C	4/28
		Attaching parts for E.A1.40.227:—										
526	E.A1.40.197	Bolt, connecting stay and link							1	S.65 or S.81	C	4/29
12916	E.A1.40.347	Nut, slotted							1	—	C	4/30
538	E.A1.40.223	Plug, adaptor							1	L.40	C	4/31
37307	E.A1.40.765	Washer, link and link stay connecting bolt							1	S.3	C	4/32
28N/9156370	SP.21	NIPPLE, lubricating, 1/4" BSF							3	—	C	4/33
26667	E.A3.40.193	NUT, slotted, for undercarriage operating jack bolt							1	—	C	4/34
13184	E.A3.40.199	PLATE							1	DTD.124	C	4/35
539	E.A1.40.205	ROLLER, stop, lever, assembly							1	—	C	4/36
		Attaching parts for E.A1.40.205:—										
527	E.A1.40.203	Bolt							1	S.11	C	4/37
40530	E.A1.40.349	Nut, slotted							1	—	C	4/38
7113	E.A1.40.233	SLEEVE, operating spring, for undercarriage lock							1	DTD.197	C	4/39
		stop										

UNDERCARRIAGE
MAIN UNDERCARRIAGE, PORT

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
540	E.A1.40.237	SPRING, compression, at lock stop							1	Spring Steel	C	4/40
6119308	E.A9.40.79	STAY, side (Mod. 5051)							1	S.97	C/MR	4/41
541	E.A1.40.235	STOP, undercarriage lock							1	S.11	C	4/42
542	E.A1.40.217	TUBE, distance, undercarriage jack bolt, undercarriage "down" switch							1	L.40	C	4/43
545	E.A1.40.355	WASHER, link and link stay connecting bolt							1	L.72	C	4/44

A.P.101B-0418-3A

UNDERCARRIAGE

Page RA1

MAIN UNDERCARRIAGE, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1 2 3 4 5 6 7				
	E.A1.40.2	MAIN, UNDERCARRIAGE, STARBOARD, ASSEMBLY	1	—	—	
	E.A3.40.6	Consisting of:— LEG, OLEO (LESS WHEEL, FIXED FAIRING AND BRAKE UNIT), GROUP	1	—	—	1/13
		Consisting of:—				
27G/4070	DUNLOP AH.9598	BRAKE, UNIT (For spares, see AP.4515C, Vol. 3, Part 1, Sect. 2, Chap 37)	1	—	—	1/14
27A/2852	DUNLOP KJN.16N	COVER, outer, 43" x 13" .5 x 19" (Dunlop DR.4521 or Firestone ZA.341 or ZA.173 or Goodyear GA.1209)	1	—	B	1/3
3061	E.A3.20.854	FAIRING, FIXED, GROUP (Supplied with trim allowance) Spares for:—	1	—	B	1/15
21721	E.A3.20.2870	PANEL, HINGE, ASSEMBLY Spares for:—	1	—	B	1/16
	E.A1.20.1679	HINGE, (Make from 28N/10363)	1	—	LM	1/6
3026	E.A1.20.1676	PANEL, hinge	1	L72	C	1/17
1887	E.A1.40.436	SPRING	2	Spring Steel	C	1/18
1413	E.A1.20.6817	PANEL, access, picket point	1	—	C	1/9
	E.A3.20.1627	SEAL, 3/8" dia. x 90" long (Make from Ref. 4432)	1	Synthetic Rubber	LM	1/10
42538	E.A3.40.234	LEG, SLIDING AND OLEO HEAD, GROUP Spares for:—	1	—	A	2/67
2168	E.A6.40.35	BOLT, brake unit securing	10	S97	C	3/1
660	E.A1.40.639	BRACKET, angle, micro-switch mounting Attaching parts for E.A1.40.639:—	1	L72	C	2/68
28D/9140638	A25/4B	Bolt, 4 BA hex. head	4	—	C	2/69
28M/9403519	A27/BP	Nut, 4 BA plain	4	—	C	2/70
706	E.A1.40.335	Plate, packing	1	LA	C	2/71
28W/9416642	SP47/B	Washer, 4 BA spring	4	—	C	2/72
661	E.A1.40.153	BUSH, bearing, torque link centre joint	4	DTD412	C	2/2
662	E.A1.40.671	FINGER, operating, micro-switch plunger Attaching parts for E.A1.40.671:—	1	—	C	2/73
28S/9435713	A31/C20	Screw, 2 BA cheese head	2	—	C	2/74
28W/9416643	SP47/C	Washer, 2 BA spring	2	—	C	2/75

UNDERCARRIAGE

MAIN UNDERCARRIAGE, STARBOARD

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	E.A3.40.232							HEAD, OLEO, GROUP	1	—	—	2/76
								Spares for:—				
663	E.A1.40.89							BEARING, spherical seated, ball joint side stay	1	S11	C	2/4
								Attaching parts for E.A1.40.89:—				
664	E.A1.40.101							Bush, bearing	1	DTD412	C	2/5
675	E.A1.40.96							Ring, lower, retaining, ball joint	1	DTD124	C	2/77
677	E.A1.40.98							Ring, upper, retaining, ball joint	1	DTD124	C	2/78
680	E.A1.40.99							Stud, retaining rings	12	S11	C	2/8
1438501	E.A9.40.63							BUSH, pivot	2	DTD412	C	2/9
666	E.A1.40.111							BUSH, torque link	2	DTD412	C	2/10
								Attaching parts for E.A1.40.111:—				
673	E.A1.40.679							Plug, bearing bush, retaining	1	L40	C	2/11
667	E.A1.40.133							DISC, sealing, piston dowel plug	2	L40	C	2/12
								Attaching parts for E.A1.40.133:—				
679	E.A1.40.625							Screw, retaining, plug dowel seal	1	L40	C	2/13
668	E.A1.40.131							DOWEL, piston	2	S11	C	2/14
	E.A9.07.36							HEAD, oleo, forging (E.A9.40.56)	1	DTD5094	—	2/79
669	E.A1.40.103							HOOK, 'S' shaped, 16 SWG	2	MS	C	2/16
								Wire				
20656	E.A1.40.127							PIPE, stack, assembly	1	—	B/MR	2/17
								Attaching parts for E.A1.40.127:—				
28F/8014021 41911	AGS.1138/B							Washer, jointing	1	—	C	2/18
	E.A1.40.18							PISTON, OPERATING, GROUP	1	—	—	2/80
								Consisting of:—				
1099	EEAS.37/22A							NIPPLE, 2 BA	2	S11	C	2/20
670	E.A1.40.647							PISTON	1	DTD197	C	2/21
671	E.A1.40.649							PLATE, orifice enclosure control	1	S11	C	2/22
								Attaching parts for E.A1.40.649:—				
683	E.A1.40.61							Bolt, special	3	S11	C	2/23
672	E.A1.40.651							RING, piston	1	—	C	2/24
	EEAS.38/3A							SPOKE, 2 BA (Make from 28R/6328)	1	S11	LM	2/25
12914	E.A1.40.118							STRUT, piston, main	1	T4	C	2/81
678	E.A1.40.155							RING, sealing	2	Synthetic Rubber	C	2/27
28Y/15486	H.P. COMP'S A58							VALVE, charging	1	—	B	2/28
								Attaching parts for A.58:—				
28D/1215078	AS.1246/5C							Bolt, 2 BA round head	1	—	C	2/29
681	E.A1.40.105							Tube, distance	1	L40	C	2/30
28W/9416643	SP47/C							Washer, 2 BA spring	1	—	C	2/31
28F/8014021	AGS.1138/B							Washer, jointing	1	—	C	2/32
682	E.A1.40.149							Washer, locking valve, 14 SWG	1	DTD124	C	2/33
								Attaching parts for E.A3.40.232:—				
4174	E.A1.40.519							Bolt, securing, fixed fairing mounting brackets to leg	8	—	C	2/34
28W/941664	SP47/E							Washer, 1/4" BSF spring	8	—	C	2/35

A.P.101B-0418-3A

UNDERCARRIAGE
MAIN UNDERCARRIAGE, STARBOARD

Page RA3

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	E.A3.40.236							LEG, SLIDING, COMPRESSION, GROUP	1	—	—	3/36
								Consisting of:—				
26640	E.A3.40.201							BOLT, clamp, axle, locking	1	S.95	C	3/3
2467	E.A3.40.45							BUSH, bearing	1	—	C	3/4
684	E.A1.40.161							BUSH, bearing in plug	2	DTD.124	C	3/5
20865	E.A3.40.13							CLAMP, AXLE, GROUP	1	—	A/MR	3/6
								Spares for:—				
21355	E.A3.40.23							BUSH	1	L.16	C	3/7
1752	E.A3.40.17							CLAMP, axle body	1	—	C	3/8
1753	E.A3.40.19							LINK, towing	1	—	C	3/9
21537	E.A3.40.21							WASHER, tow link	1	—	C	3/10
14706	E.A3.40.209							HOUSING, seals	1	L.65	C	3/11
1463	E.A3.40.10							LEG, sliding, c/w integral axle	1	—	A	3/37
691	E.A1.40.41							NUT, stop	1	S.11	C	3/13
32210	E.A3.40.221							PIN, locking, piston	3	S.97	C	3/14
	E.A3.40.219							PISTON, sliding leg	1	DTD.197	—	3/15
693	E.A1.40.175							PLATE, orifice	1	L.65	C	3/16
								Attaching parts for E.A1.40.175:—				
683	E.A1.40.61							Bolt, stud	6	S.11	C	3/17
14701	E.A3.40.203							PLUG, sealing	1	L.40	C	3/18
695	E.A1.40.677							PLUG, pivot, bearing bush retaining	2	L.40	C	3/19
12915	E.A1.40.45							RING, retaining felt washer	1	S.3	C	3/20
								Attaching parts for E.A1.40.45:—				
28D/1007285	AS.1242/1B							Bolt, 4 BA c'sk head	8	—	C	3/21
697	E.A1.40.57							RING, piston	1	—	C	3/22
14702	E.A3.40.205							RING, sealing on plug	1	Soft Rubber	C	3/23
14700	E.A3.40.207							RING, distance, between sealing and backing rings	1	L.64	C	3/24
14704	E.A3.40.211							RING, sealing, seal housing	1	Soft Rubber	C	3/25
14703	E.A3.40.213							RING, sealing, seal housing	2	Soft Rubber	C	3/26
14705	E.A3.40.215							RING, backing	2	Fabric CX.18	C	3/27
12913	E.A1.40.657							RING, spacer, between fibre washer	1	L.40	C	3/28
21354	E.A1.40.659							RING, shock absorber stop	1	L.40	C	3/29
700	E.A1.40.167							SCREW, grub, stop nut locking	1	S.1	C	3/30
701	E.A1.40.39							WASHER, fibre, under stop nut	1	BS.216	C	3/31
702	E.A1.40.43							WASHER, packing, under ring retaining x 3/16" thick	1	Hard Felt	C	3/32
30A/9437135	†							WIRE, locking, 22 SWG	QR	DTD.189A	C	
521	E.A1.40.467							LEVER, COWL DOOR MECHANISM, GROUP	1	—	C	2/36
								Spares for:—				
522	E.A1.40.465							BUSH, bearing	2	L.40	C	2/37
	E.A1.40.529							LEVER, operating	1	—	—	2/38
								Attaching parts for E.A1.40.467:—				
4173	E.A1.40.517							Bolt, securing	4	—	C	2/39

UNDERCARRIAGE
MAIN UNDERCARRIAGE, STARBOARD

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
3631	E.A1.40.27							1	L.40	C	2/40
28M/13590	A27/SS							1	—	C	2/41
704	E.A1.40.69							1	S.11	C	2/42
1500	E.A3.40.27							1	S.97	C	2/43
707	E.A1.40.77							1	S.11	C	2/44
708	E.A1.40.139							1	M.S.	C	2/45
709	E.A1.40.619							1	L.A.	C	2/46
711	E.A1.40.73							1	S.11	C	2/47
713	E.A1.40.75							1	DTD.412	C	2/48
714	E.A1.40.79							1	M.S. or S.515	C	2/49
715	E.A1.40.83							1	S.11	C	2/50
718	E.A1.40.147							1	DTD.412	C	2/51
1514	E.A3.40.29							1	S.96	C	2/52
1515	E.A3.40.31							1	S.96	C	2/53
3632	E.A1.40.28							1	L.40	C	2/54
703	E.A1.40.67							1	S.11	C	2/55
707	E.A1.40.77							1	S.11	C	2/56
708	E.A1.40.139							1	M.S.	C	2/57
709	E.A1.40.619							1	L.A.	C	2/58
710	E.A1.40.71							1	S.11	C	2/59
713	E.A1.40.75							1	DTD.412	C	2/60
714	E.A1.40.79							1	M.S.	C	2/61
718	E.A1.40.147							1	DTD.412	C	2/62
28N/9156370	SP.21							5	L.A.	C	2/63
28M/13259	A27/NS							10	—	C	3/33
28P/9560929	SP.90/E8							10	—	C	3/34
712	E.A1.40.137							1	M.S.	C	2/64
28S/1200034	A31/B16							1	—	C	2/65
28W/9416642	SP.47/B							1	—	C	2/66
2169	E.A3.40.43							10	—	C	3/35
27A/2653	DUNLOP KJ.9							1	—	C	1/11

A.P.101B-0418-3A

Page RA5

UNDERCARRIAGE
MAIN UNDERCARRIAGE, STARBOARD

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
27A/2657	DUNLOP AH.9343 or							1	—	A	1/12
R 27A/4560430	DUNLOP AH.50439							1	—	A	
6119300	E.A9.40.74							1	—	A	4/45
528	E.A1.40.221							1	S.65 or S.81	C	4/2
529	E.A1.40.239							1	S.65 or S.81	C	4/3
537	E.A1.40.353							1	S.11	C	4/4
530	E.A1.40.405							1	S.11	C	4/5
7112	E.A1.40.229							1	S.11	C	4/6
28D/1212690	A25/15L							1	—	C	4/7
28D/1011310	A25/8L							2	—	C	4/8
28M/9129449	A27/LS							3	—	C	4/9
32721	E.A1.40.404							1	L.40	C	4/46
28D/1212688	A25/18L							1	—	C	4/11
28M/9129449	A27/LS							1	—	C	4/12
531	E.A1.40.199							1	—	C	4/13
532	E.A1.40.213							1	DTD.197	C	4/14
	E.A1.40.201							1	S.11	—	4/15
533	E.A1.40.200							1	—	C	4/16
532	E.A1.40.213							1	DTD.197	C	4/17
	E.A1.40.202							1	S.11	—	4/18
525	E.A1.40.195							1	S.65 or S.81	C	4/19
22176	E.A1.40.351							1	—	C	4/20
543	E.A1.40.219							1	L.40	C	4/21
28W/9419481	SP.15/Q							1	—	C	4/22
544	E.A1.40.291							1	S.3	C	4/23
547	E.A1.40.417							1	L.72	C	4/24

Page RA6

UNDERCARRIAGE
MAIN UNDERCARRIAGE, STARBOARD

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6				
13169	E.A3.40.192	LEVER, UNDERCARRIAGE "DOWN" MICRO-SWITCH OPERATING, ASSEMBLY						1	—	C	4/47
179	E.A1.40.569	SCREW, tappet						1	S.11	C	4/26
6472	E.A1.40.225	LINK, SIDE STAY, GROUP						1	—	B/MR	4/27
536	E.A1.40.227	BUSH, BEARING						2	DTD.197	C	4/28
526	E.A1.40.197	Bolt, connecting stay and link						1	S.65 or S.81	C	4/29
12916	E.A1.40.347	Nut, slotted						1	—	C	4/30
538	E.A1.40.223	Plug, adaptor						1	L.40	C	4/31
37307	E.A1.40.765	Washer, link and link stay connecting bolt						1	S.3	C	4/32
28N/9156370	SP.21	NIPPLE, lubricating, 1/4" BSF						3	—	C	4/33
26667	E.A3.40.193	NUT, slotted, for undercarriage operating jack bolt						1	—	C	4/34
13184	E.A3.40.199	PLATE						1	DTD.124	C	4/35
539	E.A1.40.205	ROLLER, stop, lever, assembly						1	—	C	4/36
527	E.A1.40.203	Bolt						1	S.11	C	4/37
40530	E.A1.40.349	Nut, slotted						1	—	C	4/38
7113	E.A1.40.233	SLEEVE, operating spring, for undercarriage lock stop						1	DTD.197	C	4/39
540	E.A1.40.237	SPRING, compression at lock stop						1	Spring Steel	C	4/40
6119309	E.A9.40.80	STAY, side (Mod. 5051)						1	S.97	C/MR	4/48
541	E.A1.40.235	STOP, undercarriage lock						1	S.11	C	4/42
542	E.A1.40.217	TUBE, distance, undercarriage jack bolt, undercarriage drain switch						1	L.40	C	4/43
545	E.A1.40.355	WASHER, link and link stay connecting bolt						1	L.72	C	4/44

UNDERCARRIAGE

NOSEWHEEL

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
-	NOSEWHEEL, ASSEMBLY (EA9.40.1)	-	-	
	Spares for:—			
EA9.40.15	. BLOCK, flexible hose support	2	LFS21	5/1
	Attaching parts for EA9.40.15:—			
A25/2C	. Bolt, 2BA hex head	1	-	5/2
EA9.40.13	. Clip	1	-	5/3
AGS2001/C/1	. Nut, stiff, 2BA	1	-	5/4
EA9.40.17	. Washer, corner	2	L72	5/5
EA1.40.617	. BOLT, adjusting, undercarriage door cross head stop	2	HTS	5/6
EA9.40.21	. BOLT, connecting, operating jack to undercarriage	1	S46	5/7
EA1.40.605	. BOLT, hydraulic jack anchor	1	S97	5/8
EA3.40.139	. BOLT, jack attachment to cross head	1	S96	5/9
EA1.40.491	. BOLT, nosewheel door "up" latch, forward	1	S94 or S96	6/1
EA1.40.493	. BOLT, nosewheel door "up" latch, aft	1	L94 or S96	5/10
EA9.40.11	. BOLT, nose undercarriage jack hinge	1	S95	5/11
EA3.40.251	. BRACKET, UNDERCARRIAGE "UP" HOOK, ASSEMBLY (MOD 4449)	1	-	6/2
	Spares for:—			
EA1.40.385	. . BEAM, bracket, assembly (Pre—Alt. R60/304)	1	-	6/3
EA3.40.265	. . BEAM, bracket, assembly (Alt R60/304)	1	-	
	Spares for:—			
EA1.40.365	. . . BEAM, bracket	1	-	
EA1.40.369	. . . LUG (Pre—Alt. R60/304)	1	L40	6/4
EA3.40.263	. . . LUG (Alt R60/304)	1	-	
EA1.40.377	. . . PLATE, locking	1	L72	6/5
	Attaching parts for EA1.40.385 or EA3.40.265:—			
A25/22C	. . Bolt, 2BA hex head	8	-	6/6
A27/CP	. . Nut, 2BA plain	8	-	6/7
EA1.40.381	. . Tube, distance	8	L62	6/8
SP47/C	. . Washer, spring	8	-	6/9
EA3.40.151	. . BOLT, stop, for buffer, assembly	2	S96	6/10
	Attaching parts for EA3.40.151:—			
AGS2001/J/1	. . Nut, stiff, 3/8" BSF	1	-	6/11
EA1.40.399	. . Washer, laminated	1	Lam. Alum.	6/12
EA1.40.373	. . BRACKET, hook suspension	1	S96	6/13
	Attaching parts for EA1.40.373:—			
AGS2001/J/1	. . Nut, stiff, 3/8" BSF	1	-	6/14
SP16/J	. . Washer, 3/8" BSF plain	1	-	6/15
EA1.40.399	. . Washer, laminated	1	Lam. Alum.	6/16
EA3.40.249	. . HOOK, UNDERCARRIAGE "UP", LATCH, GROUP (MOD 4449)	1	-	6/17
	Consisting of:—			
EA3.40.147	. . . BOLT, special	1	DTD126A	6/18
EA1.40.393	. . . BUSH	1	DTD147	6/19
EA3.40.243	. . . HOOK, "up" latch	1	HTS	6/20

UNDERCARRIAGE

NOSEWHEEL

Part Number	1 2 3 4 5 6	Description	No. Off	Matl. Spec.	Plate No.
A27/CP	. . .	NUT, 2BA plain	1	—	6/21
AGS162/C	. . .	WASHER, spring	1	—	6/22
		Attaching parts for EA3.40.249:—			
EA1.40.371	. .	Bolt, pivot, for hook	1	S96	6/23
A27/ES	. .	Nut, 1/4" BSF slotted	1	—	6/24
EA1.40.389	. .	SCREW, adjusting, hook stop	1	HTS	6/25
		Attaching parts for EA1.40.389:—			
A27/EP	. .	Nut, 1/4" BSF plain	1	—	6/26
EA3.40.93	. .	CROSS-HEAD, NOSEWHEEL DOORS, C/W VALVE TRIP, ASSEMBLY Spares for:—	1	—	5/12
EA3.40.97	. .	PIN, roller, top	1	S11	5/13
EA3.40.181	. .	PIN, roller, bottom	1	S11	5/14
EA1.40.553	. .	ROLLER, guide	2	L40	5/15
EA1.40.561	. .	VALVE, trip	1	—	5/16
		Attaching parts for EA1.40.561:—			
A33/C32	. .	Screw, 2BA csk head	1	—	5/17
EA3.40.95	. .	YOKE cross-head	1	—	5/18
EA9.40.35	. .	LEVER, micro-switch operating undercarriage door front latch Attaching parts for EA9.40.35:—	1	L65	6/27
A25/14C	. .	Bolt, 2BA hex head	1	—	6/28
AGS2001/C/1	. .	Nut, stiff, 2BA	1	—	6/29
EA1.40.731	. .	Piece, distance	1	S1	6/30
EA1.45.989	. .	Shim, laminated	2	Lam. Alum.	6/31
AS2811/7/023	. .	Spacer (7/16" dia x 0.23" long, made from 17 gauge alum. alloy tube)	2	L62	6/32
EA1.40.567	. .	LEVER, UNDERCARRIAGE SEQUENCE VALVE, ASSEMBLY Spares for:—	1	—	5/19
EA1.40.569	. .	TAPPET, valve screw	1	S96	5/20
		Attaching parts for EA1.40.569:—			
A27/ET	. .	Nut, 1/4" BSF thin	1	—	5/21
		Attaching parts for EA1.40.567:—			
EA1.40.581	. .	Bolt, fulcrum	1	S96	5/22
A27/GP	. .	Nut, 5/16" BSF plain	1	—	5/23
EEAS28/35/FU	. .	Washer, packing	1	S515	5/24
EA1.40.703	. .	LEVER, BRACKET, UNDERCARRIAGE SEQUENCE VALVE, ASSEMBLY Spares for:—	1	—	6/33
EA1.40.705	. .	BRACKET, sequence valve, rear	1	—	6/34
EA1.40.707	. .	BRACKET, sequence valve, front	1	—	6/35
EA1.40.573	. .	LEVER, sequence valve operating	1	L40	6/36
		Attaching parts for EA1.40.573:—			
EA1.40.709	. .	Bolt, fulcrum	1	—	6/37
A27/CS	. .	Nut, 2BA slotted	1	—	6/38
SP90/C7	. .	Pin, split	1	—	6/39
SP15/C	. .	Washer, 2BA plain	1	—	6/40
EA1.40.711	. .	Washer, spacing	2	L40	6/41

A.P.101B-0418-3A

UNDERCARRIAGE
NOSEWHEEL

Page RB3

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
179	E.A1.40.569	TAPET, valve screw							1	S.96	C	6/42
28M/1007403	A27/ET	Attaching parts for E.A1.40.569:—							1	—	C	6/43
		Nut, 1/4" BSF thin							1	—	C	6/44
		Attaching parts for E.A1.40.703:—							4	—	C	6/45
		Bolt, 2 BA hex. head							4	—	C	6/45
28D/9133012	A25/3C	Nut, stiff, 2 BA							2	—	B	5/25
28M/1278190	AGS.2001/C/1	LINK, DOOR OPERATING, ASSEMBLY							1	—	C	5/26
180	E.A1.40.531	Consisting of:—							1	—	C	5/27
4778	E.A1.40.535	BOLT, eye, assembly							1	—	C	5/28
33793	E.A1.40.541	Attaching parts for E.A1.40.535:—							1	—	C	5/29
		Nut, locking							1	—	C	5/30
	E.A1.40.533	TUBE, assembly							1	—	C	5/31
		Attaching parts for E.A1.40.531:—							1	S.96	C	5/32
		Bolt, special, 1/4" BSF, link to door							1	S.96	C	5/33
		Bolt, special, 1/4" BSF, link to cross head							2	—	C	5/34
167	E.A1.40.593	Nut, 1/4" BSF slotted							2	—	C	5/35
168	E.A1.40.595	Pin, split							2	—	C	5/36
28M/1011467	A27/ES	MUDGUARD, NOSEWHEEL, L.H., GROUP							1	—	B	6/46
28P/9527619	SP.90/C7	Consisting of:—							1	—	C	6/47
8987	E.A3.40.169	FLAP, rubber, nosewheel mudguard							1	—	C	6/48
		MUDGUARD, nosewheel							1	—	C	6/49
		Attaching parts for E.A3.40.127:—							9	—	C	6/50
		Bolt, 1/4" BSF c'sk head							6	—	C	6/51
28D/1013177	AS.1242/2E	Nut, 1/4" BSF thin							3	S.95	C	6/52
28M/1007403	A27/ET	Nut, shoulder, 1/4" BSF							1	DTD.124A	C	6/53
5505	E.A3.40.131	STAY, mudguard, assembly							3	L.72	C	6/54
6948	E.A3.40.165	STAY END, mudguard attachment							3	—	C	6/55
6949	E.A3.40.167	Attaching parts for E.A3.40.167:—							3	—	C	6/56
28D/9133012	A25/3C	Bolt, 2 BA hex. head							3	—	C	6/57
28M/1006473	A27/CT	Nut, 2 BA thin							3	—	C	6/58
28W/9419475	SP.15/C	Washer, 2 BA plain							1	L.72	C	6/59
20930	E.A3.40.135	STRIP, bonding							3	—	C	6/60
28D/1007974	AS.1242/1/2C	Attaching parts for E.A3.40.135:—							3	—	C	6/61
		Bolt, 2 BA c'sk head							3	S.95	C	6/62
		Nut, shoulder, 2 BA							3	—	C	6/63
		Attaching parts for E.A3.40.169:—							3	—	C	6/64
28D/1011300	A25/7J	Bolt, 3/8" BSF hex. head							3	—	C	6/65
28W/9419477	SP.15/J	Washer, 3/8" BSF plain							3	—	C	6/66
8988	E.A3.40.170	MUDGUARD, NOSEWHEEL, R.H., GROUP							1	—	B	6/67
		(Spares for this assembly are identical with those of Part No. E.A3.40.169)							3	—	C	6/68
		Attaching parts for E.A3.40.170:—							3	—	C	6/69
		Bolt, 3/8" BSF hex. head							3	—	C	6/70
		Washer, 3/8" BSF plain							1	—	C	6/71
28N/9156370	SP.21	NIPPLE, lubricating							1	—	C	6/72

Page RB4

UNDERCARRIAGE
NOSEWHEEL

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
1439144	E.A3.40.261	ROD, RADIUS, GROUP (Mod. 4449)							1	—	A	7/1
		Consisting of:—										
1439148	E.A3.40.255	BRACKET, micro-switch							1	L.72	C	7/2
		Attaching parts for E.A3.40.255:—										
28D/9436920	A25/1C	Bolt, 2 BA hex. head							3	—	C	7/3
28W/9416643	SP.47/C	Washer, 2 BA spring							3	—	C	7/4
3656	E.A3.40.65	BUSH, spring plunger							1	DTD.197	C	7/5
186	E.A1.40.621	DOWEL							2	S.11	C	7/6
1893	E.A6.40.21	END, PLUG, RADIUS ROD, ASSEMBLY							1	—	B	7/7
		Spares for:—										
187	E.A1.40.363	BUSH, bearing							2	DTD.197	C	7/8
28N/9156370	SP.21	NIPPLE, lubricating							1	—	C	7/9
4937	E.A1.40.311	FINGER, operating, undercarriage "up"							1	L.40	C	7/10
		micro-switch										
		Attaching parts for E.A1.40.311:—										
4447	E.A1.40.321	Bolt, bearing							1	DTD.126A	C	7/12
28M/9436836	AGS.2001/C/2	Nut, stiff, 2 BA							1	—	C	7/13
28W/9419402	SP.13/C	Washer, 2 BA plain							1	—	C	7/14
1894	E.A6.40.29	FORK, strut end							1	L.40	C	7/15
3655	E.A3.40.73	HOUSING, spring lock plunger							1	L.40	C	7/16
		Attaching parts for E.A3.40.73:—										
28D/1011240	A25/5E	Bolt, 1/4" BSF hex. head							4	—	C	7/17
28W/9416644	SP.47/E	Washer, 1/4" BSF spring							4	—	C	7/18
41255	E.A9.40.49	LEVER, LOCKING, NOSEWHEEL							1	—	B	7/19
		UNDERCARRIAGE, ASSEMBLY										
		Spares for:—										
190	E.A1.40.337	BUSH, bearing							2	DTD.197	C	7/20
28N/9156370	SP.21	NIPPLE, lubrication							1	—	C	7/21
192	E.A1.40.339	ROLLER, assembly							1	—	C	7/22
		Attaching parts for E.A1.40.339:—										
188	E.A1.40.343	Bolt, special, 1/4" BSF							1	S.96	C	7/23
28M/1011467	A27/ES	Nut, 1/4" BSF slotted							1	—	C	7/24
28P/9527619	SP.90/C7	Pin, split							1	—	C	7/25
28W/9419415	SP.15/E	Washer, 1/4" BSF plain							1	—	C	7/26
191	E.A1.40.341	ROLLER, assembly							1	—	C	7/27
		Attaching parts for E.A1.40.341:—										
189	E.A1.40.345	Bolt, special, 1/4" BSF							1	S.96	C	7/28
28M/1011467	A27/ES	Nut, 1/4" BSF slotted							1	—	C	7/29
28P/9527619	SP.90/C7	Pin, split							1	—	C	7/30
		Attaching parts for E.A9.40.49:—										
34309	E.A9.40.47	Bolt, operating lever bearing							1	S.96	C	7/32
28M/1011476	A27/JS	Nut, 3/8" BSF slotted							1	—	C	7/33
28/9527619	SP.90/C7	Pin, split							1	—	C	7/34
203	E.A1.40.327	Washer, at operating lever bearing							1	DTD.126A	C	7/35

UNDERCARRIAGE

NOSEWHEEL

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA6.40.23	. . LINK, STAY, NOSEWHEEL UNDERCARRIAGE, AT RADIUS ROD, ASSEMBLY Spares for:—	1	S96	7/36
EA1.40.359	. . . BUSH, bearing	2	DTD197	7/37
EA1.40.361	. . . BUSH, bearing	2	DTD197	7/38
SP21	. . . NIPPLE	1	—	7/39
EA1.40.681	. . Bolt, special connecting	1	S96	7/40
A27/LS	. . Nut, 7/16" BSF slotted	1	—	7/41
SP90/E8	. . Pin, split	1	—	7/42
A31/C12	. . Screw, 2 BA cheese head	1	—	7/43
EA1.40.325	. . Washer, cap	1	DTD126A	7/44
SP47/C	. . Washer, 2 BA, spring	1	—	7/45
EEAS37/24A	. . NIPPLE, 1/4" BSF, for strut tube spokes	24	S96	7/47
EA3.40.241	. . PAD, undercarriage down micro-switch (Mod 4449) Attaching parts for EA3.40.241:—	1	L40	7/48
A25/3C	. . Bolt, 2 BA hex. head	3	—	7/49
SP47/C	. . Washer, 2 BA spring	3	—	7/50
EA3.40.75	. . Pin, latch	1	S96	7/51
EA1.40.277	. . PLATE, stop, stay link Attaching parts for EA1.40.277:—	1	S96	7/52
A25/5E	. . Bolt, 1/4" BSF hex. head	2	—	7/53
SP47/E	. . Washer, 1/4" BSF spring	2	—	7/54
EA3.40.67	. . SCREW, cap, locking plunger, and spring, retaining	1	L40	7/55
EA3.40.71	. . SCREW, grub, latch pin and bush retaining	1	S97	7/56
EA1.40.319	. . SHIM, laminated, stop plate adjusting	1	Lam. Alum.	7/57
EA1.40.431	. . SPINDLE, hook latch, nosewheel undercarriage stay Attaching parts for EA1.49.431:—	1	S96	7/58
AGS2031/4	. . Circlip, external	2	—	7/59
EA1.40.309	. . Tube, distance	1	—	7/60
EEAS38/4A	. . SPOKE, 1/4" BSF (Make from 28R/6330)	12	S94 S95 or S96	7/61
EA3.40.69	. . SPRING, compression, locking plunger operating	1	Spring Steel	7/62
EA3.40.259	. . SPRING, leaf, for micro-switch operating finger (Mod 4449)	1	S515	7/63
DOWTY DN1322Z.Mk.2 or DN1322Z.Mk.3	. . SWITCH, micro, undercarriage (Mod 4449)	2	—	7/64
A25/8B	. . Bolt, 4 BA hex. head (up switch)	2	—	7/65
AS1242/10B	. . Bolt, 4 BA c'sk head (down switch)	2	—	7/66
AGS2001/B/1	. . Nut, stiff, 4 BA	2	—	7/67
SP15/B	. . Washer, 4 BA plain	2	—	7/68

UNDERCARRIAGE

NOSEWHEEL

Part Number	Description	No. Off	Matl. Spec.	Plate No.
1 2 3 4 5 6				
EA6.40.27	. TUBE, strut, nose undercarriage Attaching parts for EA3.40.261:—	1	T60	7/69
EA1.40.451	. Bolt, c/w spoke and nut	1	—	7/70
EA1.40.683	. Bolt, special	1	S96	7/71
A27/LS	. Nut, 7/16" BSF, slotted	2	—	7/72
EA1.40.449	. Pin, strut, pivot, radius rod bearing	1	S65	7/73
SP90/E8	. Pin, split	2	—	7/74
A35/C8	. Screw, 2 BA, cheese head	1	—	7/75
EA1.40.325	. Washer, special cap	3	DTD126A	7/76
SP47/C	. Washer, 2 BA, spring	1	—	7/77
EA1.40.455	. SCREW, grub, 2 BA, strut bearing pin locking	1	S96	5/33
EA1.31.277	. SHIM, laminated	2	Lam.	6/67
or			Alum.	
EEAS27/8/4B	. SHIM, laminated	2	Lam.	
			Alum.	
EA3.40.245	. SPRING, return, undercarriage hook (Mod 4449)	1	DTD215	6/67
EA1.40.601	. SPRING, tension, undercarriage sequence valve	1	Spring	5/34
			Steel	
EA1.40.719	. SPRING, forward door latch	1	Spring	6/68
			Steel	
EA3.40.157	. STOP, door jack extension Attaching parts for EA3.40.157:—	2	S96	5/35
A27/ES	. Nut, 1/4" BSF, slotted	1	—	5/36
SP90/C7	. Pin, split	1	—	5/37
EA1.40.701	. STOP, sequence valve lifter Attaching parts for EA1.40.701:—	1	S96	5/38
SP15/C	. Washer, 2 BA plain	1	—	5/39
EA9.40.37	. TAPPET, front latch lever Attaching parts for EA9.40.37:—	1	—	6/69
A27/CT	. Nut, 2 BA plain	1	—	6/70
DUNLOP				
KK.2	. TUBE, inner	2	—	6/71
DUNLOP	. TYRE, outer, cover	2	—	6/72
DR2565	(DUNLOP KKEN.14N or GOODYEAR GA1202 or FIRESTONE ZA297)			
DOWTY	. UNIT, undercarriage (Pre Mod 5207)	1	—	6/73
2.00397.042	(For spares, see AP.4515B, Vol. 3, Pt. 1)			
DOWTY	. UNIT, undercarriage (Mod 5207)	1	—	
2.00396.040	(For spares, see AP.4515B, Vol. 3, Pt. 1)			
	(Pre Mod 5505)			
200396041	. UNIT, undercarriage assembly (Mod 5505)	1	—	6/73
EA1.40.587	. WASHER, special, packing, undercarriage sequence valve, mounting block	2	L40	5/40
EEAS28/30/EU	. WASHER, special	1	S515	5/41
DUNLOP				
AH9590	. WHEEL, nose	2	—	6/74

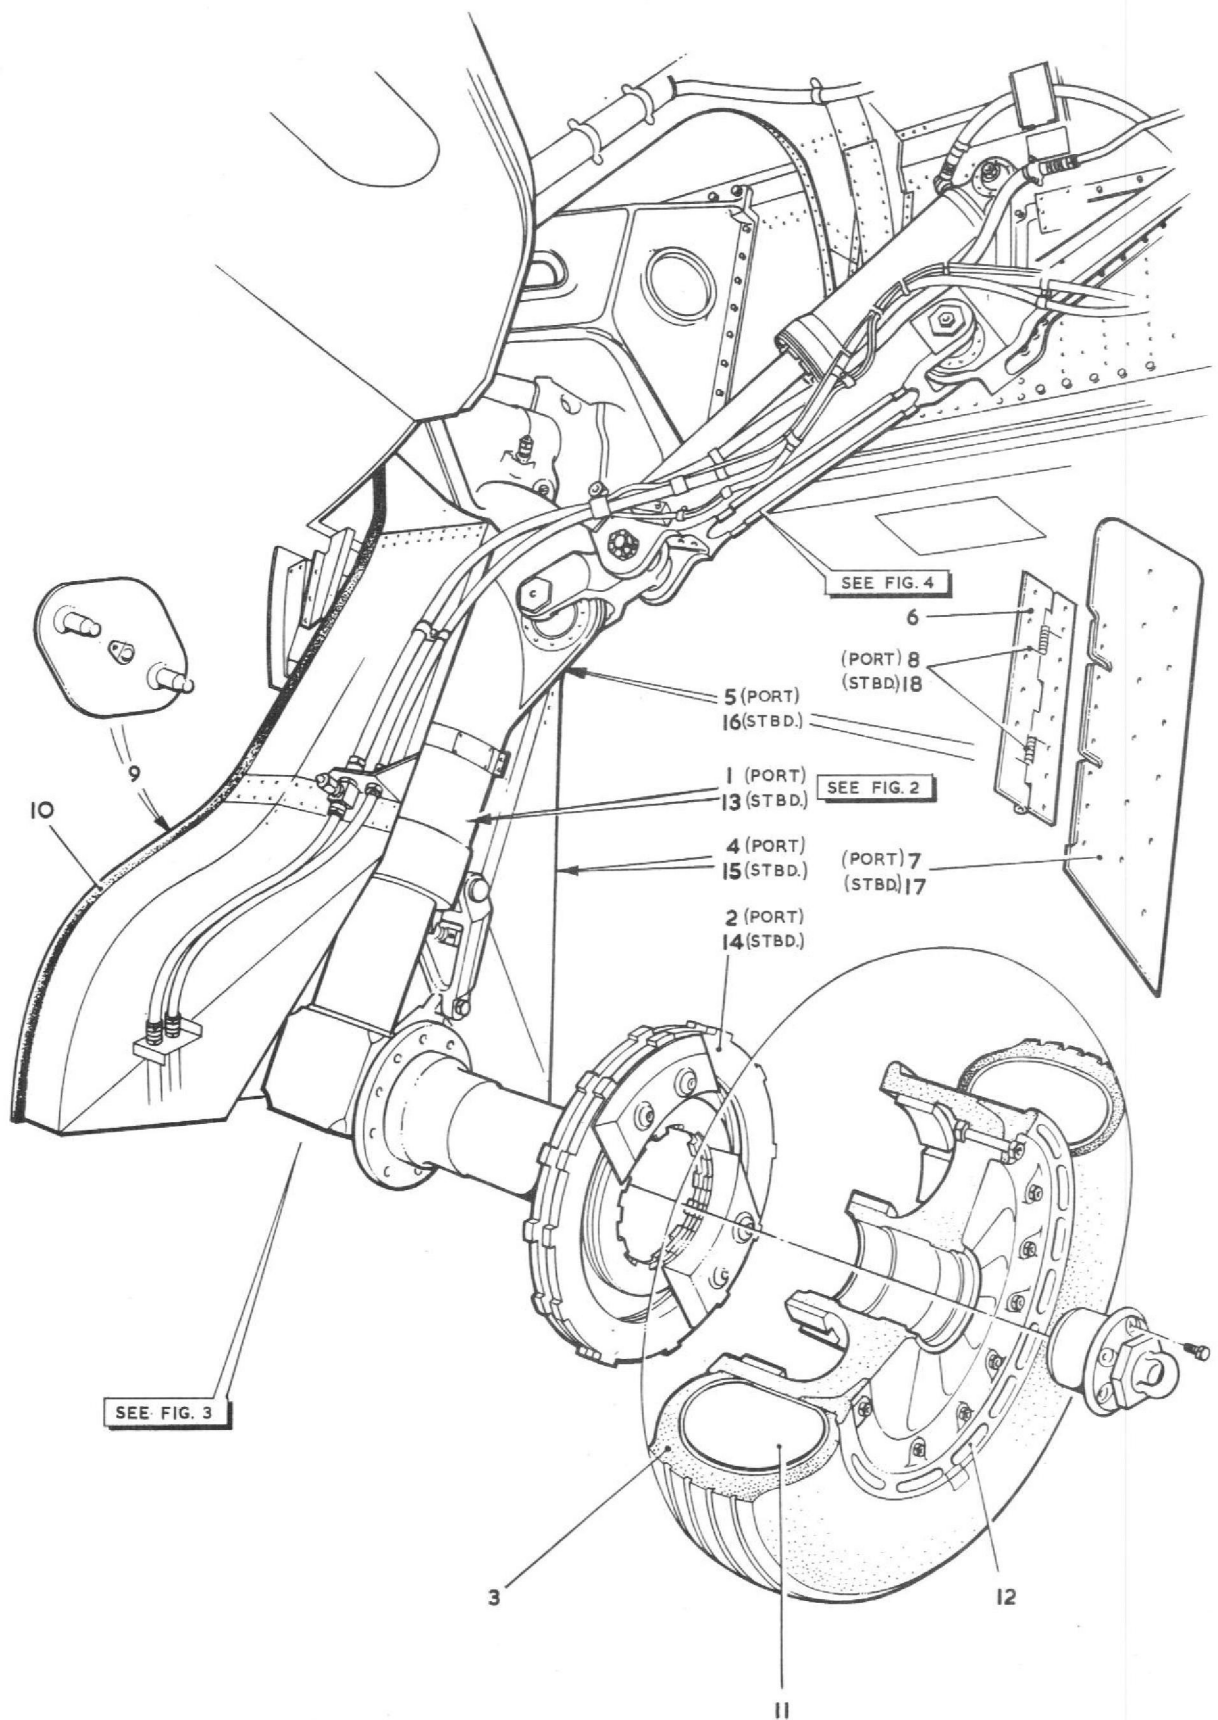


FIG.1 MAIN UNDERCARRIAGE, PORT & STBD.

Restricted



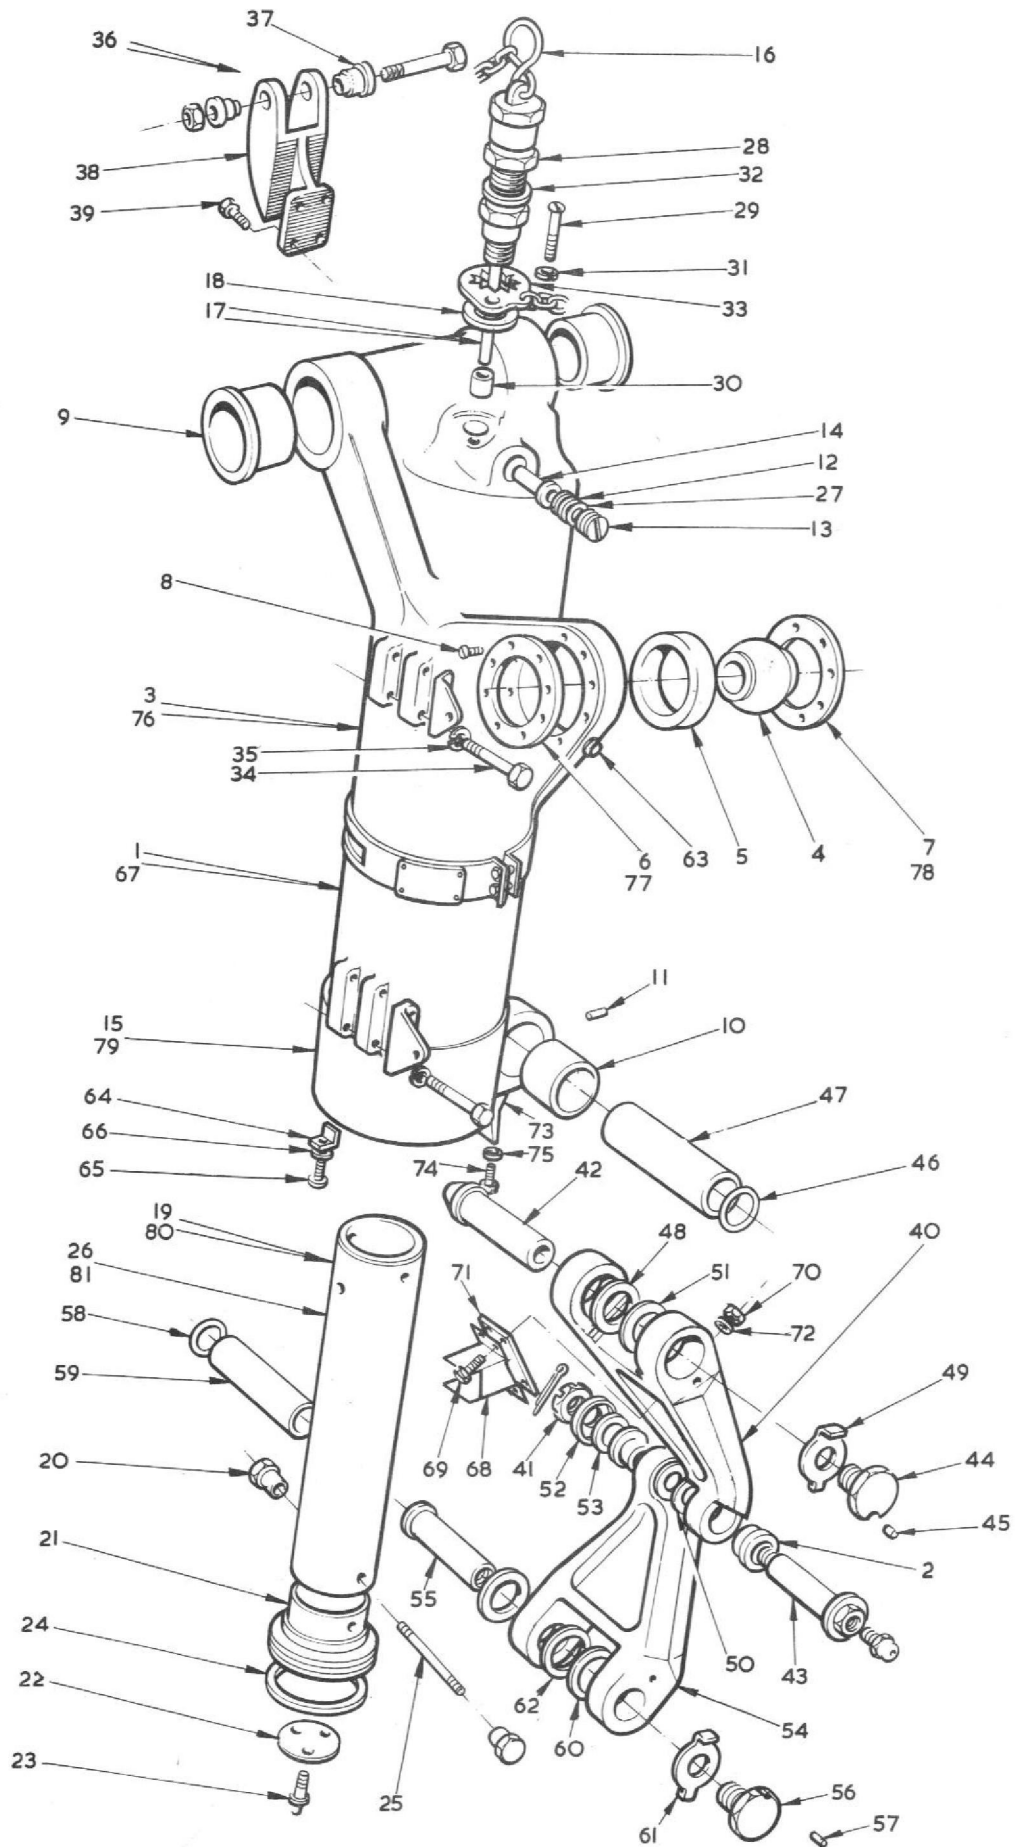


FIG 2 MAIN UNDERCARRIAGE PORT & STBD
Restricted



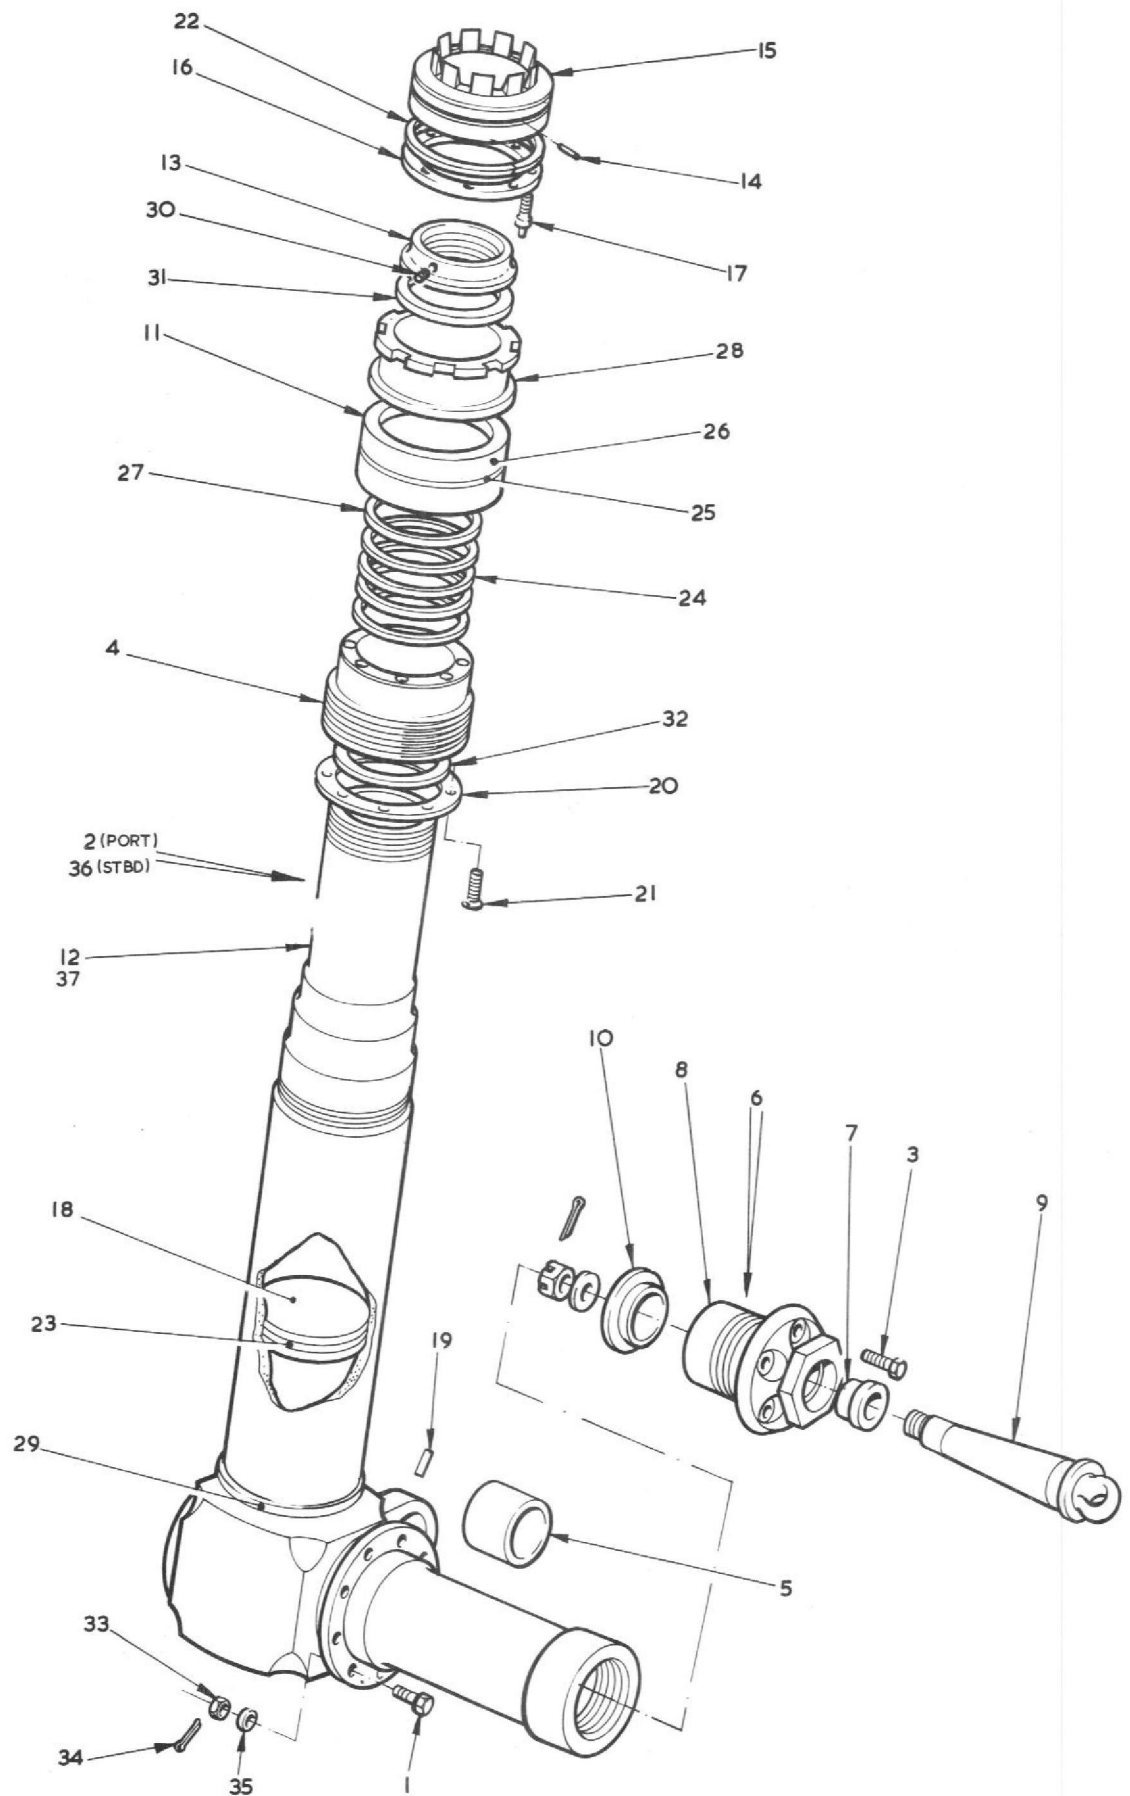


FIG 3 MAIN UNDERCARRIAGE PORT & STBD

Restricted

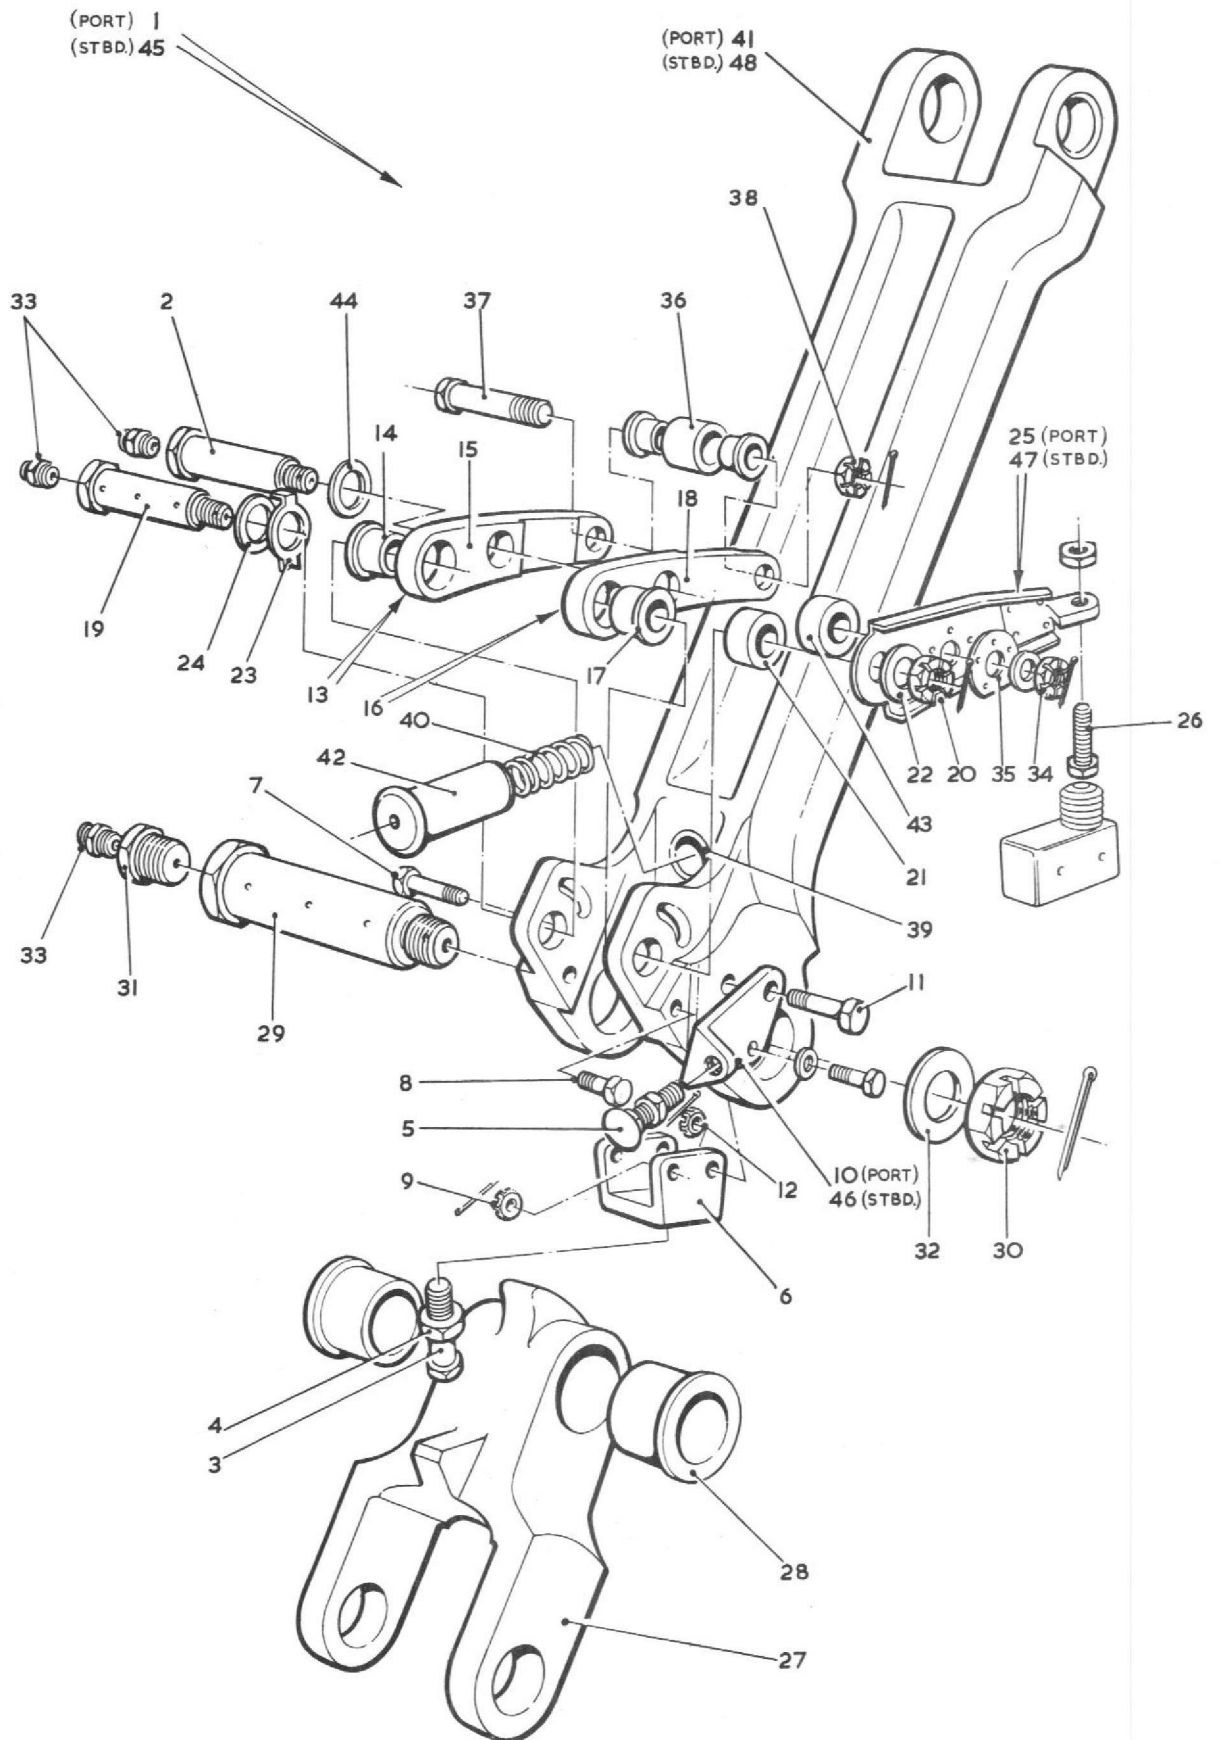


FIG. 4 MAIN UNDERCARRIAGE, PORT & STBD.

Restricted

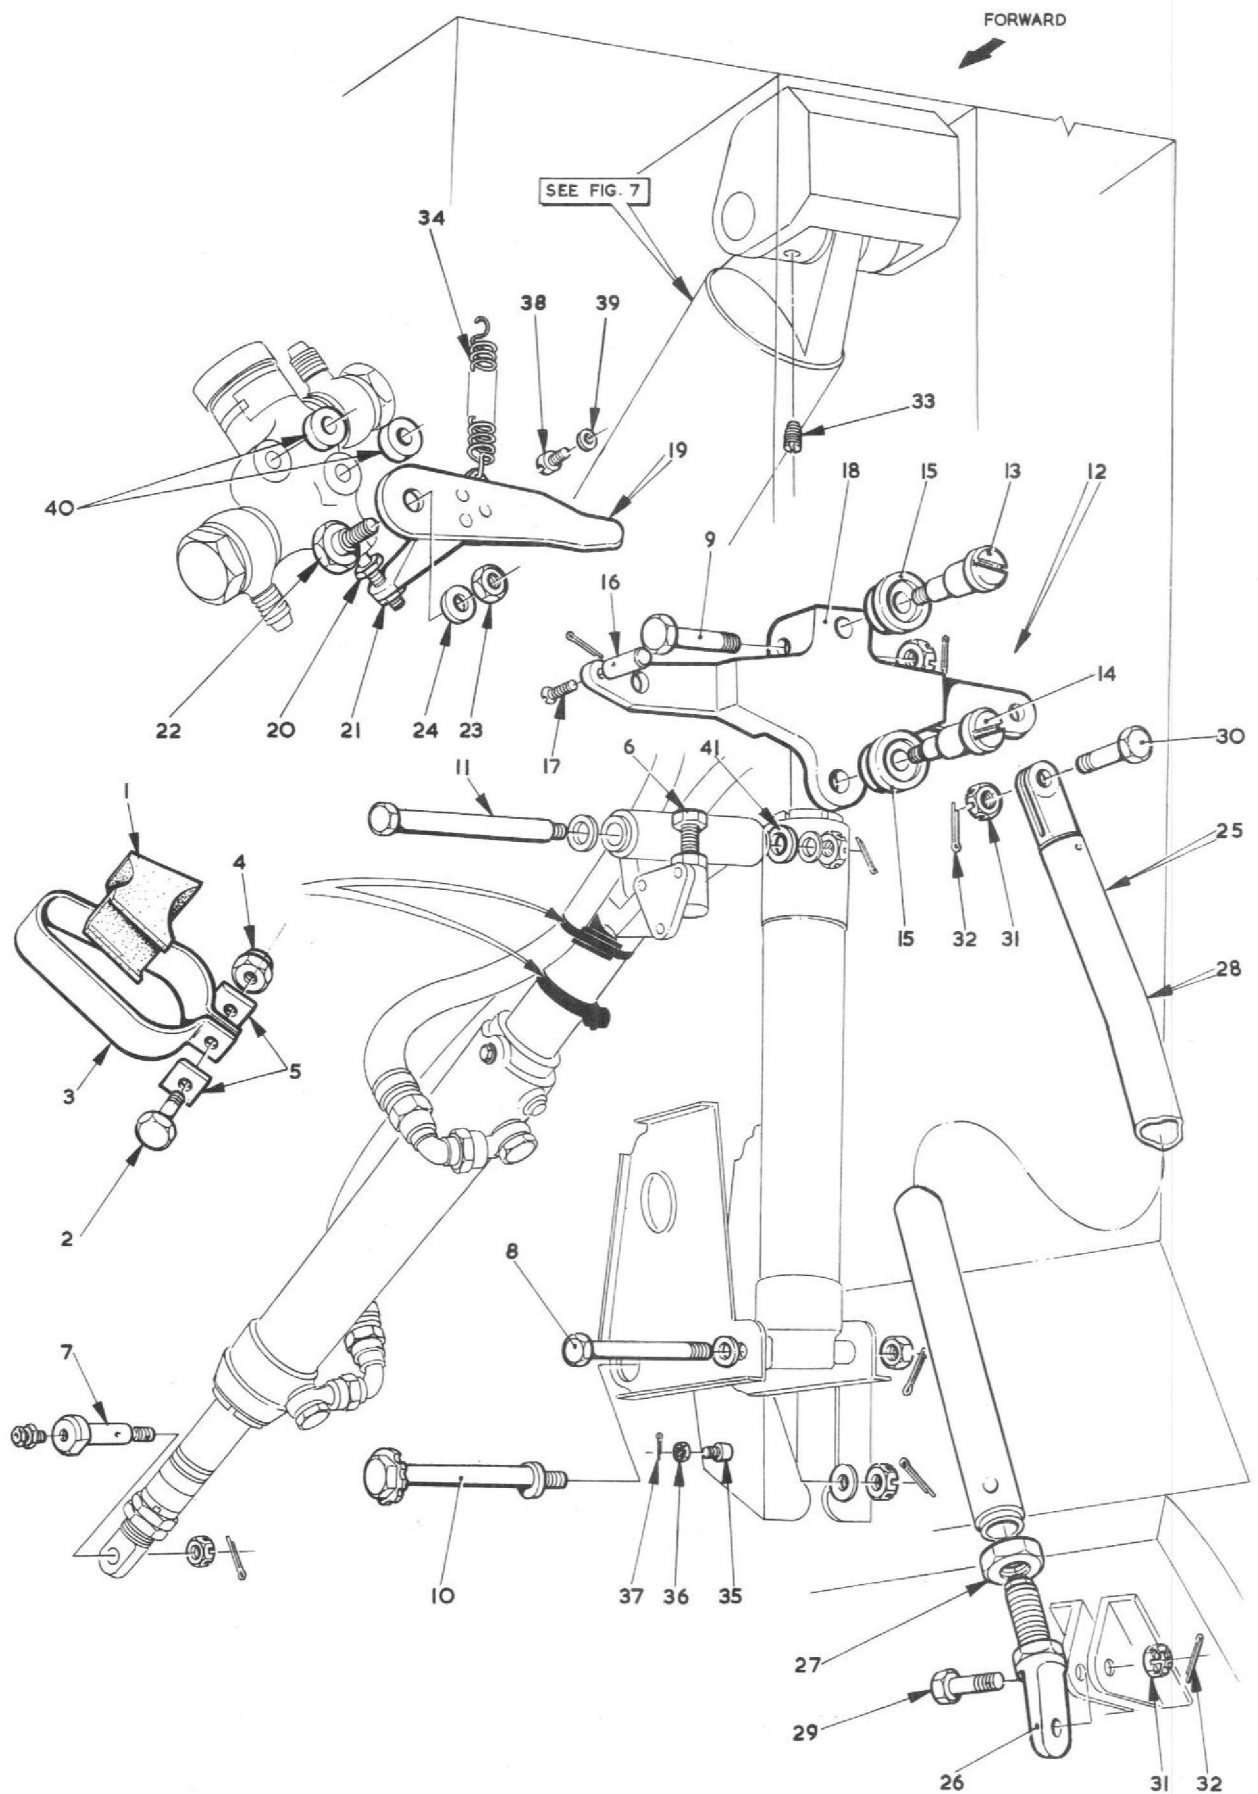


FIG.5 UNDERCARRIAGE NOSEWHEEL

Restricted

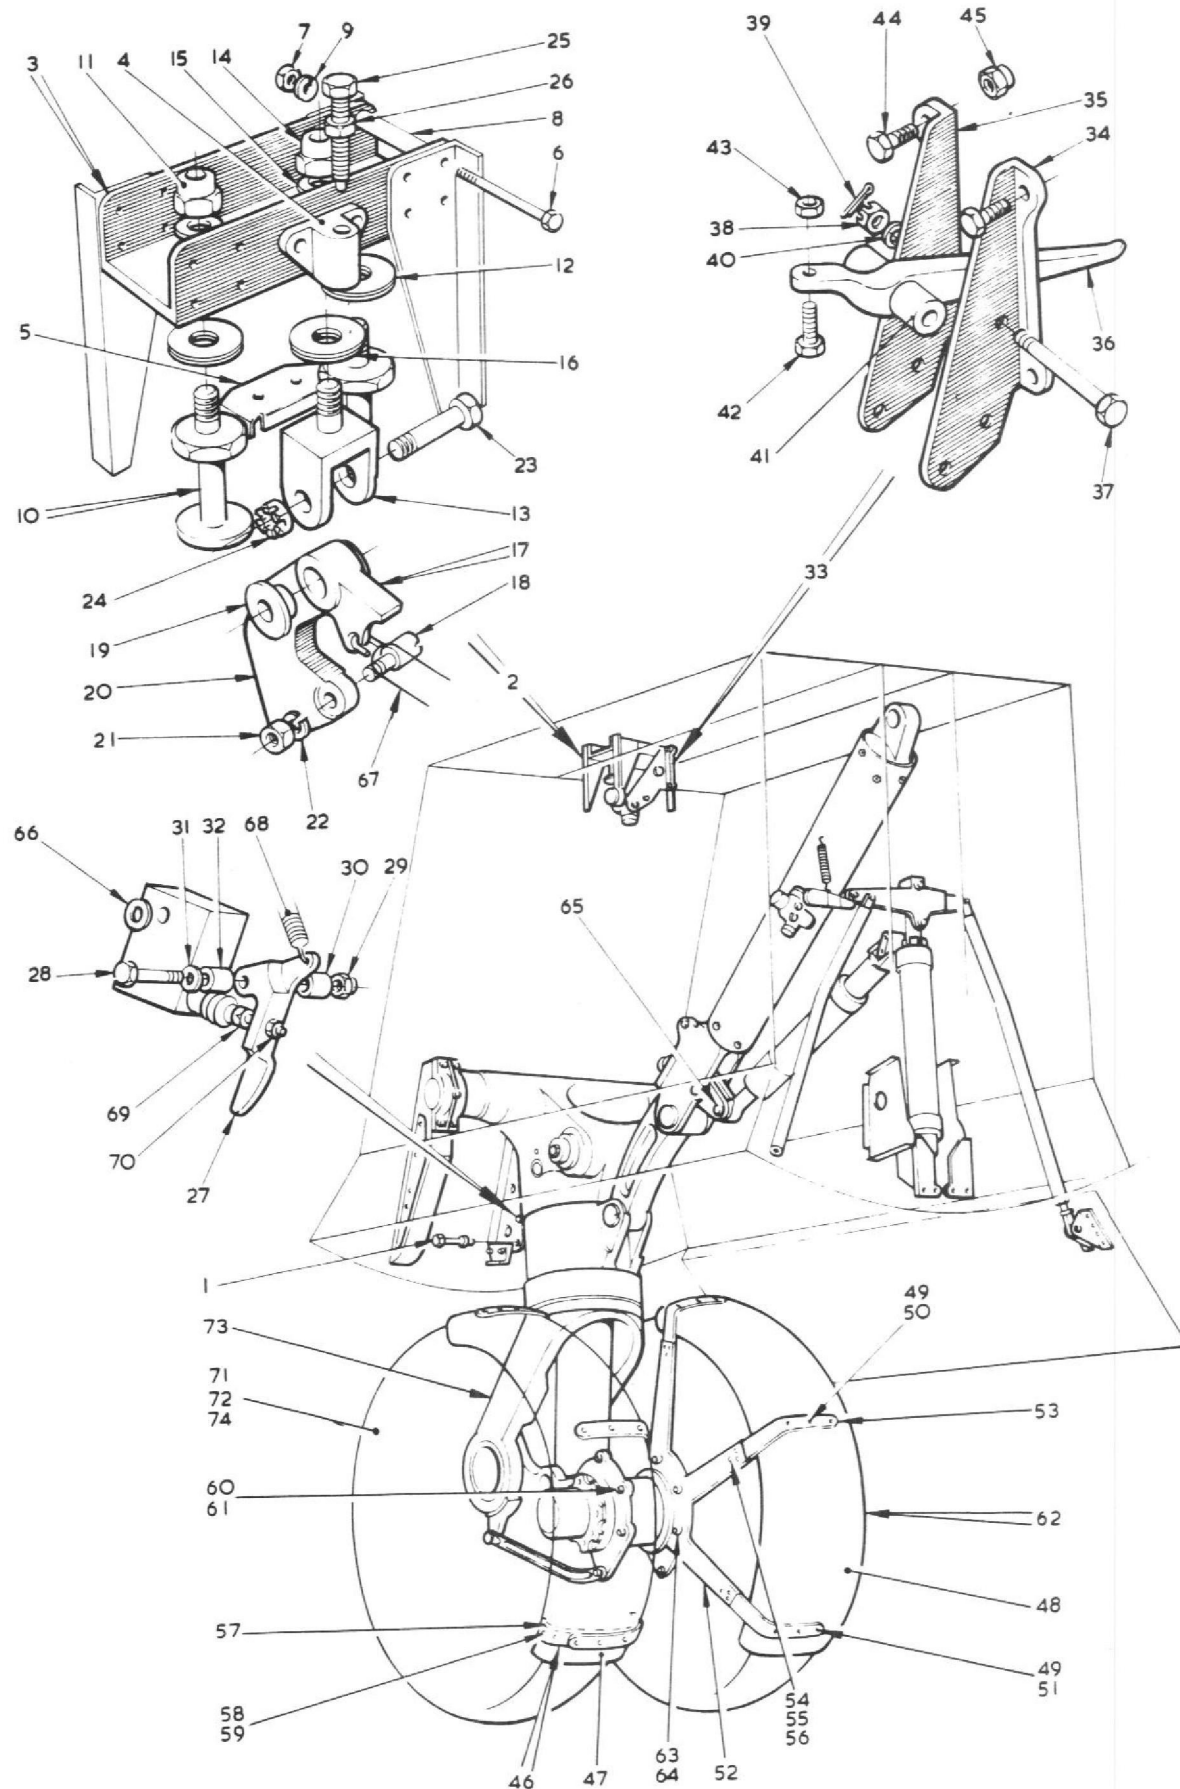


FIG.6 UNDERCARRIAGE NOSEWHEEL

Restricted

AL. 3

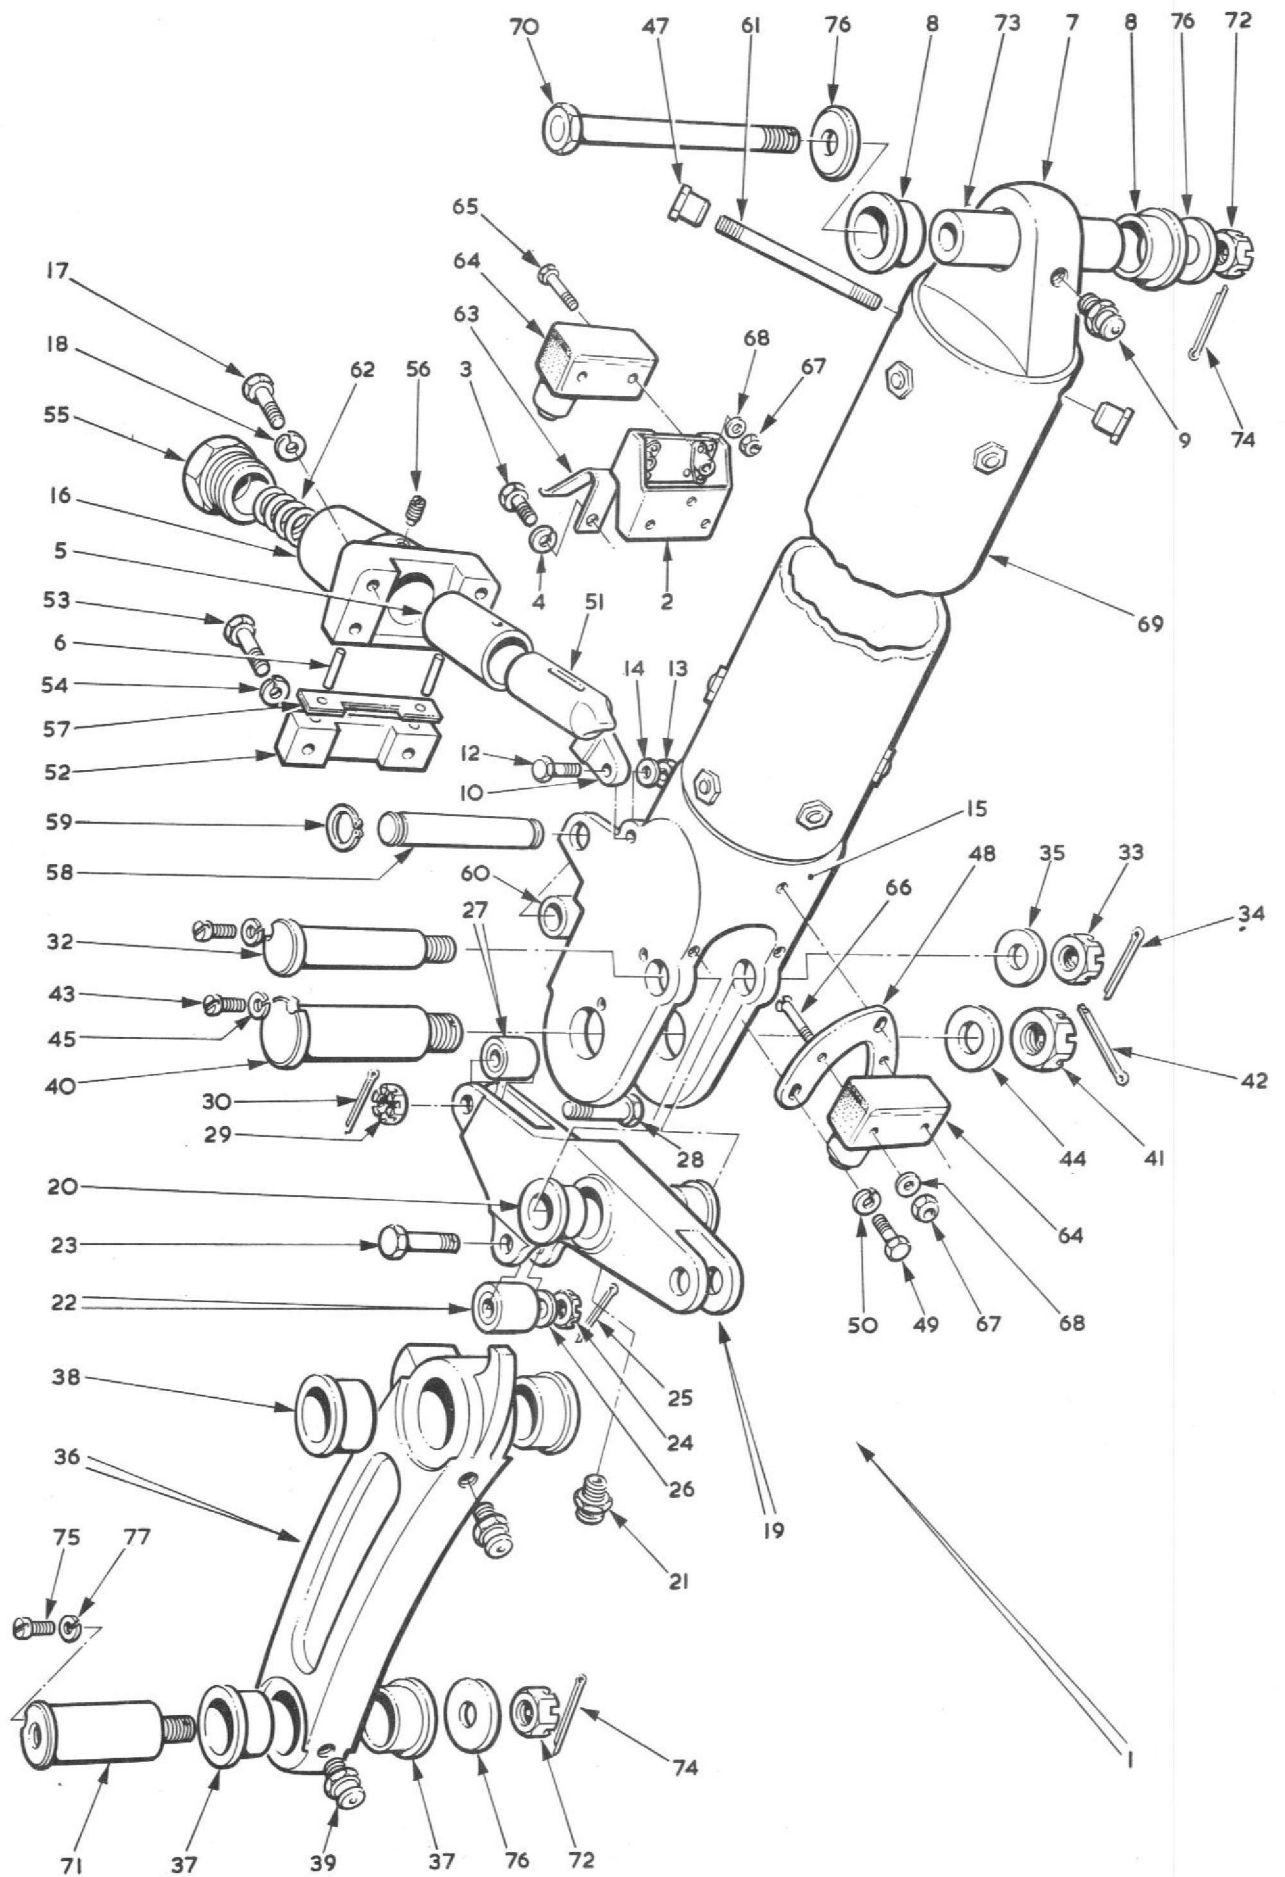


FIG.7 UNDERCARRIAGE NOSEWHEEL

Restricted

