

CANBERRA T.Mk.19

Page D.1

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-80-1	EQUIPMENT IN PRESSURE CABIN, GROUP (MOD. 4425)						—	—	—	
6A/3451		Spares for:—						1	—	A	
		ACCELEROMETER, Mk. 2, on pilot's coaming (Mod. 5075)									
28S/1012358	A43/B32	Attaching parts for 6A/3451:—						3	—	C	
		Screw, 4 BA									
	EA3-81-6331	AMPLIFIER, INSTALLATION (MOD. 4048)						—	—	—	
6A/5465	—	Spares for:—						1	—	A	
		AMPLIFIER, Mk. 1A									
28D/9436920	A25/1C	Attaching parts for Ref. 6A/5465:—						4	—	C	
28W/9419475	SP.15/C	Bolt, 2 BA						4	—	C	
		Washer									
	EA3-81-6341	CHANNEL, mounting						1	—	—	
28D/9436920	A25/1C	Attaching parts for EA3-81-6341:—						6	—	C	
28M/1278190	AGS.2001/C/1	Bolt, 2 BA						6	—	C	
28W/9419475	SP.15/C	Nut, 2 BA						6	—	C	
		Washer									
5K/1037443	AS.3360/C6C	LEAD, bonding						1	—	C	
34741	EA3-90-5265	BRACKET, coaming, assembly (Modified to Drg. 19C/11566)						1	—	C	
		(Mod. 4098)									
28D/1007972	A25/1/2C	Attaching parts for EA3-90-5265:—						8	—	C	
28W/9128924	SP.14/C	Bolt, 2 BA						8	—	C	
		Washer									
	EA3-80-5649	COMPASS, E.2A, INSTALLATION						—	—	—	
		Spares for:—									
	EA3-80-5627	BRACKET, compass mounting						1	L.72	—	
	EA3-80-5635	BRACKET, mounting, inboard						1	L.72	—	
	EA3-80-5637	BRACKET, mounting, outboard						1	L.72	—	
14614	EA3-80-5633	CATCH, compass hood						1	—	C	
6B/4343605	—	COMPASS, type E.2A (Pre-Mod. 5076)						1	—	A	
6B/1048857	—	COMPASS, type E.2B (Mod. 5076)						1	—	A	
14613	EA3-80-5631	HOOD, compass						1	L.72	C	D.1
	EA3-80-5643	PLATE, mounting						1	L.72	—	
14615	EA3-80-5645	SPINDLE						1	DTD.5024	C	D.1
14612	EA3-80-5629	SPRING						1	L.73	C	D.1
5CW/2531	—	SWITCH, dimmer, E.2B compass light (Mod. 5076)						1	—	C	
	EA3-80-5045	CONSOLE, PILOT'S, INSTALLATION						—	—	—	
		Spares for:—									
8549	EA3-47-149	BOX, CONTROL, ENGINE THROTTLE, GROUP						1	—	A/MR	
		Spares for:—									
		See AP.101B-0402-3A									
	EA3-81-6035	EQUIPMENT AND WIRING, PILOT'S CONSOLE (MOD. 3384)						—	—	—	
		Spares for:—									
5X/3271	CZ.52815	BLOCK, fuse, 4-way						2	—	C	
		Attaching parts for CZ.52815:—									
28S/1200080	A32/B8	Screw, 4 BA						2	—	C	
28W/9416642	SP.47/B	Washer						2	—	C	
5CZ/430	—	BLOCK, terminal, 2-way						1	—	C	
		Attaching parts for Ref. 5CZ/430:—									
28M/1987493	AGS.2001/A/1	Nut, 6 BA						2	—	C	
28S/9992531	A33/A24	Screw, 6 BA						2	—	C	
28W/9419464	SP.13/A	Washer						2	—	C	

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
	EA3-80-5017	BRACKET, assembly						2	—	—	
28D/9140202	AS.1246/1C	Attaching parts for EA3-80-5017:—						4	—	C	
28M/1278190	AGS.2001/C/1	Bolt, 2 BA						4	—	C	
28W/9419475	SP.15/C	Nut, 2 BA						4	—	C	
		Washer						4	—	C	
8485	EA2-81-359	BRACKET, plug						1	—	C	
		Attaching parts for EA2-81-359:—						6	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA						6	—	C	
28S/9992525	A32/B12	Screw, 4 BA						6	—	C	
5CW/4593	EA3-81-2083	BRACKET, switch lock, bomb doors						1	—	C	
5E/3898	—	CABLE, Unisersil 12						QR	—	C	
5E/3896	—	CABLE, Unisersil 16						QR	—	C	
5E/3894	—	CABLE, Unisersil 20						QR	—	C	
	EA2-81-5907	CABLE, ASSEMBLY, EARTH, RUDDER						1	—	—	
		TRIM SWITCH (MOD. 4229)									
		Spares for:—									
		See AP.101B-0402-3A									
	EA3-81-6547	CABLE, ASSEMBLY, N49D, FROM						1	—	—	
		JETTISON SWITCH UNIT TO									
		SNATCH UNIT TOGGLE SWITCH									
		(MOD. 4435)									
		Spares for:—									
		See AP.101B-0402-3A									
5K/9436636	AGS.1600/A	CABLE-END, eye type						QR	—	C	
5CW/5252	—	CAP. Helvin						10	—	C	
15336	EA1-81-542	CARRIER, spare fuse, assembly						1	—	C	
		Attaching parts for EA1-81-542:—						4	—	C	
28M/1987493	AGS.2001/A/1	Nut, 6 BA						4	—	C	
28S/9995324	A32/A16	Screw, 6 BA						4	—	C	
28W/9419473	SP.15/A	Washer						4	—	C	
5K/2724	—	COVER, spring						1	—	C	
5L/9951273	—	FILAMENT, 28v, 3.5w						1	—	C	
10H/23864	—	FUSE, type AS, 5 amp						6	—	C	
10H/23862	—	FUSE, type AS, 10 amp.						8	—	C	
10H/23860	—	FUSE, type AS, 20 amp.						2	—	C	
5X/9539618	Z.1719	GROMMET						4	—	C	
5X/1874	Z.1840	GROMMET						1	—	C	
5X/2790	Z.22634	GROMMET, dummy						2	—	C	
5CW/4509	EA3-81-787	KNOB, switch, aileron trim						1	—	C	
		Attaching parts for EA3-81-787:—						1	—	C	
3222	EA3-81-1089	Screw, grub (Alternative to A55/A4)						1	—	C	
28S/1008070	A55/A4	Screw, grub (Alternative to EA3-81-1089)						1	—	C	
5CX/1553	—	LAMP, warning						1	—	C	
14601	EA3-80-5759	LID, ASSEMBLY						1	—	B	D.1
		Spares for:—									
28FP/1004892	Oddie 213/2	STUD						1	—	C	
28FP/1004893	Oddie 214	WASHER						1	—	C	
5X/4491431	EEAS.71/3	LINK, terminal						2	—	C	
	19C/11617	PANEL, engraved (Mod. 4098)						1	—	—	

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
5X/7140	2CZ.111399						PLUG, 4-pin	1	—	C	
5X/5805562	2CZ.111224						PLUG, 9-pin	1	—	C	
5X/7159	2CZ.111229						PLUG, 26-pin	2	—	C	
5X/1005131	Z.49428						SLEEVE	24	—	C	
5K/4346879	EEAS.146/12						SLEEVE	10	—	C	
5K/4346888	EEAS.146/20						SLEEVE	55	—	C	
	EA3-81-5851						SWITCH, ASSEMBLY, BOMB DOORS	1	—	—	
							Spares for:— See AP.101B-0402-3A				
5CW/898	—						SWITCH, push	2	—	B	
							Attaching parts for 5CW/898:—				
28M/1987493	AGS.2001/A/1						Nut, 6 BA	4	—	C	
28S/9995324	A32/A16						Screw, 6 BA	4	—	C	
5CW/1047690	—						SWITCH, S.P.	2	—	C	
							Attaching parts for Ref. 5CW/1047690:—				
28S/9992525	A32/B12						Screw, 4 BA	2	—	C	
5CW/9234	AS.10512A-1						SWITCH, toggle, aileron trim, rudder trim (2) (Mod. 5057)	3	—	B	
5CW/9255	AS.10512C-1						SWITCH, toggle, navigation lights, taxi lights, external lights master, vent valve heating, D.V. window heating, pressure head light, I.L.S. control (Mod. 5057)	7	—	B	
5CW/9256	AS.10512C-2						SWITCH, toggle, anti-collision lights, canopy demist, landing light filament (Mod. 5057)	3	—	B	
5CW/9275	AS.10512E-1						SWITCH, toggle, Morse steady, downward identification, landing lamp (Mod. 5057)	3	—	B	
5X/9450396	HC.490						TAG	3	—	C	
5X/9482491	HC.500						TAG	4	—	C	
5X/9450224	HC.510						TAG	5	—	C	
5X/4491653	HC.1197						TAG	1	—	C	
	EA3-80-6359						TOP, console	1	L.72	—	
	EA3-80-669						STRUCTURE, PILOT'S CONSOLE, ASSEMBLY	—	—	—	
							Spares for:— See AP.101B-0402-3A				
	EH3-80-11						CURTAINS, BLACK-OUT, GROUP (MOD. 4425)	—	—	—	
							Spares for:—				

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-80-179	CURTAIN, BLACK-OUT, STARBOARD SIDE, NAVIGATOR'S COMPARTMENT, ASSEMBLY (MOD. 4425)						1	—	—	
		Spares for:—									
29G/1034153	Carr 708A	BACKPLATE						24	—	C	
	—	FASTENER, ZIPP, heavy duty, 31" long						2	—	—	
29G/1034156	Carr N.608	SOCKET						24	—	C	
30861	EA3-80-5967	CURTAIN, BLACK-OUT, ESCAPE HATCH, PORT AND STARBOARD						2	—	A	
		Spares for:—									
	EA3-80-5959	CAPPING, strip						1	L.72	LM	
	EA3-80-5961	CAPPING, strip						1	L.72	LM	
	EA3-80-5353	CAPPING, strip						2	L.72	LM	
	EA3-80-5963	CURTAIN, ASSEMBLY						1	—	—	
		Consisting of:—									
	EA3-80-5963A	CURTAIN, black duck						1	F.55	—	
	—	FASTENER, ZIPP, heavy duty, 9" long						2	—	—	
29G/4441	Carr 410A	PLATE, clinch						3	—	C	
29G/4440	Carr 410	STUD						3	—	C	
	EA3-80-5965	CURTAIN, FLAP, ASSEMBLY						1	—	—	
		Consisting of:—									
	EA3-80-5965A	CURTAIN, black duck						1	F.55	—	
29G/4220	Carr 400	EYELET						3	—	C	
29G/4222	Carr 400B	WASHER						3	—	C	
	EA3-80-5355	PLATE						1	—	—	
	EA3-80-5351	STRAP, ASSEMBLY						1	—	—	
		Consisting of:—									
29G/1034153	Carr 708A	BACKPLATE						1	—	C	
29G/1034156	Carr N.608	SOCKET						1	—	C	
	EA3-80-5351A	STRAP, black duck						1	F.55	—	
29G/2180	Carr 882	STUD						1	—	C	
30862	EA3-80-5973	CURTAIN, BLACK-OUT, NAVIGATOR'S WINDOW, ASSEMBLY						1	—	A	
		Spares for:—									
	EA3-80-5985	CAPPING, strip						1	L.72	—	
	EA3-80-5987	CAPPING, strip						1	L.72	—	
	EA3-80-5989	CAPPING, strip						1	L.72	—	
	EA3-80-5991	CAPPING, strip						1	L.72	—	
	EA3-80-5995	CURTAIN, ASSEMBLY						1	—	—	
		Consisting of:—									
	EA3-80-5995A	CURTAIN, black duck						1	F.55	—	
	—	FASTENER, ZIPP, heavy duty, 9" long						2	—	—	
29G/4441	Carr 410A	PLATE, clinch						3	—	C	
29G/4440	Carr 410	STUD						3	—	C	
	EA3-80-5997	CURTAIN, FLAP, ASSEMBLY						1	—	—	
		Consisting of:—									
	EA3-80-5997A	CURTAIN, black duck						1	F.55	—	
29G/4220	Carr 400	EYELET						3	—	C	

CANBERRA T.Mk.19

Page D.5

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.							No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
5K/1009087	SP.40/A10							1	—	C	
28S/9489570	4101/6/3/16							2	—	C	
	EA3-80-5351							1	—	—	
29G/1034153	Carr 708A							1	—	C	
29G/1034156	Carr N.608							1	—	C	
	EA3-80-5351A							1	F.55	—	
29G/2180	Carr 882							1	—	C	
	EH5-80-177							1	—	—	
29G/1034153	Carr 708A							1	—	C	
29G/1034156	Carr N.608							1	—	C	
29G/1034154	Carr 895							3	—	C	
29G/1034152	Carr 295A							3	—	C	
30864	EA3-80-6061							1	—	B	
29G/4053	Tenax 22							1	—	C	
29G/4054	Tenax 31							1	—	C	
	EH5-80-383							—	—	—	
15316	EA3-80-2067							1	—	C	
15317	EA3-80-2069							1	—	C	
28D/9436920	A25/1C							2	—	C	
28M/1278190	AGS.2001/C/1							2	—	C	
28W/9419402	SP.13/C							2	—	C	
	EA3-90-5405							—	—	—	
	EA3-90-5491							2	—	—	
28D/9436920	A25/1C							2	—	C	
28M/1278190	AGS.2001/C/1							2	—	C	
28W/9419475	SP.15/C							2	—	C	
	EA3-90-5689							1	—	C	
6B/437	—							1	—	C	
28D/1011029	A25/1E							4	—	C	
28M/9480017	AGS.2001/E/1							4	—	C	
28W/9419405	SP.15/E							4	—	C	

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-80-381	PANEL, INSTRUMENT, NAVIGATOR'S, GROUP (MOD. 4867)						—	—	—	
		Spares for:—									
	EA3-80-6069	BRACKET, mounting						1	—	—	
	EA3-80-2313	BRACKET, mounting, G4B compass indicator						1	—	—	
	EA3-80-5077	BRACKET, bottom AV mounting						1	—	—	
	EA3-80-533	BRACKET, side AV mounting						1	—	—	
6A/4722	—	INDICATOR, air speed, Mk. 9M						1	—	A	
		Attaching parts for Ref. 6A/4722:—									
28D/1215160	AS.4565/2C	Bolt, 2 BA						4	—	C	
28M/10281	AGS.2001/C/3	Nut, 2 BA						4	—	C	
28W/9419475	SP.15/C	Washer						4	—	C	
6B/634	—	INDICATOR, G4B compass						1	—	A	
		Attaching parts for Ref. 6B/634:—									
28D/1215162	AS.4565/4C	Bolt, 2 BA						3	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA						3	—	C	
28W/9419475	SP.15/C	Washer						3	—	C	
5K/7000231	AS.3360/B3C	LEAD, bonding						1	—	C	
	EA3-80-5069	MOUNTING, top AV mounting						1	—	—	
		Attaching parts for EA3-80-5069:—									
28D/9133011	A25/2C	Bolt, 2 BA						3	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA						3	—	C	
28S/1214193	4101/10/5/16	Screw, self tapping						1	—	C	
28W/9419475	SP.15/C	Washer						3	—	C	
10AJ/143	—	MOUNTING, AV, type 952						3	—	C	
		Attaching parts for Ref. 10AJ/143:—									
28D/1007979	AS.1246/1B	Bolt, 4 BA						4	—	C	
28M/1086618	AGS.2002/B/1	Nut, 4 BA						4	—	C	
28W/9419474	SP.15/B	Washer						4	—	C	
	EA3-80-5063	PANEL, INSTRUMENT, SUB-ASSEMBLY						1	—	—	
		Spares for:—									
6A/1037475	—	INDICATOR, external air temp. thermometer (Mod. 5039)						1	—	—	
		Attaching parts for 6A/1037475:—									
28S/1007817	A32/B24	Screw, 4 BA						4	—	C	
28M/1278189	AGS.2001/B1	Nut						4	—	C	
28W/9419474	SP.15/B	Washer						4	—	C	
	EA3-80-5065	PANEL						1	—	—	
		Attaching parts for EA3-80-5065:—									
28D/1010031	A25/8E	Bolt, 1" BSF						3	—	C	
28M/7002430	AGS.2002/E/1	Nut, 1" BSF						2	—	C	
10A/17930	—	Washer, check						3	—	C	
28W/9419405	SP.15/E	Washer						2	—	C	

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-80-367	PANEL, CONTROL UNITS AND NAV'S ALTIMETER, INSTALLATION (MOD. 4867) Spares for:—						—	—	—	
6A/1146374	Kollsman L.83261-04-010	ALTIMETER, Mk. 30A Attaching parts for L83261-04-010:—						1	—	A	
6A/6204138	L.84380-00-100	Plate, mooring						1	—	C	
28S/	A219/B36	Screw, 6-32 UNC						4	—		
5CZ/9516495		BLOCK, terminal Attaching parts for 5CZ/9516495:—						1	—	C	
5CZ/6424	WB/1114/28	Pillar, fixing						2	—	C	
28M/1278189	AGS.2001/B1	Nut, 4 BA						2	—	C	
28W/9419456	SP.10/J	Washer						2	—	C	
	31492 (SRIM.3491)	BRACKET						1	—	—	
	EH5-80-245 Hellermann- Deutsch	BRACKET, plug break, altimeter cable						1	—	—	
5X/1942392	416125/14 13322	CAP, protective, altimeter cable plug CLAMP Attaching parts for 13322:—						1 2	— —	C —	
28D/9436920	A25/1/2C	Bolt, 2 BA						2	—	C	
28M/1278190	AGS.2001/C1	Nut						2	—	C	
28W/9419402	SP.13/C	Washer						2	—	C	
10L/9563379		CONTROL unit, transponder, type 16929						1	—	—	
10L/16867		CONTROL unit, TACAN, type 9273A						1	—	—	
5CZ/9546245		COVER, terminal block						1	—	C	
5L/9959118		FILAMENT, miniature						2	—	C	
10Q/16355		INDICATOR, TACAN, type 9547 Attaching parts for 10Q/16355:—						1	—		
28S/9995376	A32/B20	Screw, 4 BA						2	—	C	
5CW/4400657	C1101/C/7	LAMP, I.F.F. failure						1	—	C	
5CX/5363		LAMP, pillar						2	—	C	
10AJ/132		Mounting, Equiflex Attaching parts for 10AJ/132:—						4	—	C	
28D/1937408	AS.1246/1/2B	Bolt, 4 BA						4	—	C	
28M/1278189	AGS.2001/B1	Nut						4	—	C	
28W/9419474	SP.15/B	Washer						4	—	C	
	13328	PANEL Attaching parts for 13328:—						1	—	—	
28D/1213723	AS.1248/8B	Bolt, 4 BA						4	—	C	
	13324	Spacer						4	—	—	
28M/1278189	AGS.2001/B1	Nut						4	—	C	
28W/9419474	SP.15/B	Washer						4	—	C	
	EH5-80-321	PANEL, sub-assembly Attaching parts for EH5-80-321:—						1	—	—	
28D/1007982	AS.1248/1C	Bolt, 2 BA						3	—	C	
28D/1212792	AS.1248/8C	Bolt, 2 BA						2	—	C	
	13327	Spacer						2	—	—	
28M/1278190	AGS.2001/C1	Nut						1	—	C	
28W/9457834	SP.124/D	Washer						1	—	C	

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
5X/4504065	Hellermann-Deutsch 418618/20							1	—	C	
28D/1108147	A25/1A							4	—	C	
28M/1987493	AGS.2001/A1							4	—	C	
28S/1990896	SP.124/A							4	—	C	
5CW/9354	Dowty AS.10512M-2 13323							1	—	C	
5CW/1047697								2	—	—	
								1	—	C	
28S/9992522	A32/B16							4	—	C	
28W/9419474	SP15/B							4	—	C	
5CW/1047690								1	—	C	
28S/9992522	A32/B16							4	—	C	
28W/9419474	SP.15/B							4	—	C	
5CW/11499	THORN 01-0010							1	—	C	
5CW/9262	Dowty AS.10512D-1							1	—	C	
	EH5-80-385							—	—	—	
	EH5-80-89							1	L.72	—	
	EH5-80-101							1	—	—	
	EH5-80-95							1	S.515	—	
	EH5-80-97							1	S.515	—	
28D/9133012	A25/3C							2	—	C	
28M/1278190	AGS.2001/C/1							2	—	C	
	EEAS.21A/7GR							4	—	—	
10Q/16355								1	—	A	
28S/9995376	A32/B20							2	—	C	
28S/1011488	A32/B28							2	—	C	
5CX/5352	80/10/1192							1	—	C	
5L/9958118								2	—	C	
10AJ/132								4	—	B	
28D/9137408	AS.1246/1B							4	—	C	
28M/1278189	AGS.2001/B1							4	—	C	
28W/9419474	SP.15/B							4	—	C	
	13323							2	—	—	

CANBERRA T.Mk.19

Page D.7

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-80-93							1	L.72	—	
	EH5-80-377							1	L.72	—	
28D/1007981	AS.1248/1/3C							4	—	C	
	13328							1	—	—	
28D/1213723	AS.1248/8B							4	—	C	
28M/1278189	AGS.2001/B							4	—	C	
	13324							4	—	C	
28V/9419474	SP.15/B							4	—	C	
	EA3-80-5197							1	—	—	
	—							—	—	—	
	EH5-80-143							1	L.72	—	
28M/9403520	A27/CP							4	—	C	
28M/1278190	AGS.2001/C/1							4	—	C	
28S/9137828	A32/C32							4	—	C	
28V/9419475	SP.15/C							8	—	C	
28V/9419404	SP.16/C							12	—	C	
	EH5-80-27							1	—	—	
8722	EA3-80-2119							4	—	C	
	EA3-80-2185							1	—	—	
8814	EA3-80-2091							1	—	C/MR	
8813	EA3-80-2169							1	—	C/MR	
28D/9133011	A25/2C							4	—	C	
28D/1214031	AS.1242/8C							3	—	C	
28M/9403520	A27/CP							7	—	C	
8727	EA3-80-2098							1	—	C/MR	
8726	EA3-80-2097							1	—	C/MR	
28V/1007983	AGS.162/C							7	—	C	
8723	EA3-80-2117							1	—	C/MR	
8811	EA3-80-2173							1	—	B/MR	
8725	EA3-80-2133							2	—	C	
28M/1278190	AGS.2001/C/1							2	—	C	
	AS.2808/5/012							2	T.35	LM	
8728	EEAS.28/36CU							2	—	C	
	EA3-81-5579							—	—	—	
	EA3-81-5581							1	—	—	
15303	EA3-80-647							1	L.72	C	
15304	EA3-80-651							2	L.72	C	

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
3501	EA3-80-1989	HANDLE, EMERGENCY HYDRAULIC HAND PUMP, ASSEMBLY						1	—	C	
		Spares for:—									
		See AP.101B-0402-3A									
	EH5-80-355	PANELS, PILOT'S, INSTALLATION									
		Spares for:—									
	EA3-80-5943	CORD, panel retaining, assembly						1	—	..	
	EA3-80-5533	FITTING, panel support						2	—	—	
		Attaching parts for EA3-80-5533:—									
28D/9137409	AS.1246/2C	Bolt, 2 BA						2	—	C	
28M/1278190	AGS.2001/C1	Nut						2	—	C	
28W/9419402	SP.13/C	Washer						2	—	C	
18739	EA1-81-401	LEAD, bonding						2	—	C	
27H/2952		MOUNTING, anti-vibration, 4 lbs.						6	—	C	
27H/3248		MOUNTING, anti-vibration, 8 lbs.						3	—	C	
27H/2785		MOUNTING, anti-vibration, 10 lbs.						2	—	C	
27H/2786		MOUNTING, anti-vibration, 12 lbs.						3	—	C	
	EA3-80-1841	PANEL, ENGINE INSTRUMENT, ASSEMBLY						1	—	—	
		Spares for:—									
		See AP.101B-0402-3A									
	19C/40105	PANEL, FIXED, STARBOARD, AUXILIARY CONTROL, INSTALLATION (EA3-80-5101) (MOD. 4098)						—	—	—	
		Spares for:—									
6A/2709	—	ALTIMETER, Mk. 18						1	—	A	
		Attaching parts for Ref. 6A/2709:—									
28S/1017078	A44/B24	Screw, 4 BA						4	—	C	
28W/1007776	AGS.2034/B	Washer						4	—	C	
5CZ/1053794	—	BLOCK, terminal						2	—	C	
		Attaching parts for Ref. 5CZ/1053794:—									
28M/10273	AGS.2001/A/4	Nut, 6 BA						2	—	C	
28S/9446303	A45/A20	Screw, 6 BA						2	—	C	
	19C/20710	BRACKET (Mod. 4098)						1	L.72	—	
	19C/20711	BRACKET (Mod. 4098)						1	L.72	—	
	19C/20712	BRACKET, plug mounting (Mod. 4098)						1	L.72	—	
	19C/11577	BRACKET (Mod. 4098)						1	L.72	..	
5CW/5252	HV.3711	CAP, Helvin						2	—	C	
16674	EA3-80-381	CLIP, cable						1	—	C	
5K/2724		COVER, spring						2	—	C	
	EA3-80-6095	COVER, tag board (Mod. 2732)						1	—	—	
5X/3272	—	COVER, terminal block						1	—	C	
5L/9951273	—	FILAMENT, 28v, 3.5w						3	—	C	
5X/1872	—	GROMMET						1	—	C	
5CW/4222	—	GUARD, locking, switch						1	—	C	
	19C/11578	HINGE (Make from Ref. 28N/10786)						1	—	LM	
6A/2713	289FL	INDICATOR, air mixer valve						1	—	A	
		Attaching parts for 289FL:—									
28S/1013430	A44/B20	Screw, 4 BA						4	—	C	
28W/1007776	AGS.2034/B	Washer						4	—	C	

CANBERRA T.Mk.19

Page D.9

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.							No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-81-117							1	L.72	—	
28D/1007972	A25/1/2C							5	—	C	
28D/1007981	AS.1248/1/2C							3	—	C	
28W/9419402	SP.13/C							8	—	C	
43073	EA3-80-6091							1	—	B	
	Texas Inst.							3	—	—	
	Belling Lee										
	L.666							6	—	—	
	EA6-80-6093							1	LFS	—	
28M/1278189	AGS.2001/B/1							2	—	C	
28S/1006947	A33/B40							2	—	C	
	19C/11579							2	L.56	—	
28W/9419465	SP.13/B							2	—	C	
5X/9450403	—							2	—	C	
10H/0560301	—							1	—	C	
5X/6182	CZ.50357							1	—	C	
5X/6091	CZ.28108							1	—	C	
5CW/2453	—							1	—	B	
28M/1987493	AGS.2001/A/1							3	—	C	
28S/9995324	A32/A16							3	—	C	
28W/9419464	SP.13/A							3	—	C	
5CW/7450	—							1	—	C	
5CW/1047695	—							1	—	C	
28S/9992525	A33/B12							2	—	C	
28W/9419465	SP.13/B							2	—	C	
5CW/1047690	—							1	—	C	
28S/9992525	A32/B12							2	—	C	
3526	EEAS.28/2HP							4	—	C	
28W/1206041	AGS.2035/B							2	—	C	
5CW/6311	—							2	—	C	
28S/9992522	—							4	—	C	
5CW/9438526	—							1	—	C	
28S/1011487	—							2	—	C	
28M/9418829	—							2	—	C	
5CW/7539	—							1	—	C	
28S/9992525	A32/B12							2	—	C	
28W/1206041	AGS.2035/B							2	—	C	
5X/9450396	HC.490							1	—	C	
10L/9990839	—							1	—	A	

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.							No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-80-359						PANEL, PILOT'S FLYING INSTRUMENT (Mod. 4867) Spares for:—	1	—	—	
6A/6201976	Kollsman L82621-04-010						ALTIMETER, Mk. 29B Attaching parts for L82621-04-010:—	1	—	A	
6A/6204138	L84380-00-100						Plate, mooring	1	—	C	
28S/1028578	A219/B36						Screw, 4 BA	4	—	C	
	EG9-81-687						Piece, packing	2	—	—	
5CZ/1035380	Ward Brooke WB/UN/1146/ S2B						BLOCK, terminal, 2-way Attaching parts for WB/UN/1146/S2B:—	1	—	C	
	EEAS.550/2						Plate, ident.	1	—	—	
33440	EB6-81-5349						Pillar, fixing	2	—	—	
28S/9134015	A45/B20						Screw, 4 BA	2	—	C	
28S/9474099	A44/B10						Screw, 4 BA	2	—	C	
29C/1200328	AGS.2037/B						Washer, shake proof	2	—	C	
5CZ/1039946	WB/UN/1146/ S3W						BLOCK, terminal, 3-way Attaching parts for WB/UN/1146/S3W:—	1	—	C	
	EEAS.550/3						Plate, ident.	1	—	—	
33440	EB6-81-5349						Pillar, fixing	2	—	—	
28S/9134015	A45/B20						Screw, 4 BA	2	—	C	
28S/9474099	A45/B10						Screw, 4 BA	2	—	C	
29C/1200328	AGS.2037/B						Washer, shake proof	2	—	C	
5CZ/6589	WB/1110/S10B						BLOCK, terminal, 10-way (Mod. 4727) Attaching parts for WB/1110/S10B:—	1	—	C	
5CZ/6424	WB/1114/28						Pillar, fixing	2	—	C	
5CZ/1035662	WB/1114/23						Spacer	1	—	C	
	EA3-80-5257						BRACKET, A.V. mounting, lower Attaching parts for EA3-80-5257:—	2	—	—	
28D/9710453	AS.1246/4C						Boft, 2 BA	2	—	C	
28W/9156626	SP.122/C						Washer	2	—	C	
	EA3-80-5529						BRACKET, A.V. mounting, upper Attaching parts for EA3-80-5529:—	2	—	—	
28D/9140203	AS.1246/3C						Boft, 2 BA	2	—	C	
28W/9156626	SP.122/C						Washer	2	—	C	
	EH5-80-263						BRACKET, pilot's altimeter plug break	1	—	—	
	EA3-81-5147						CABLE, ASSEMBLY, N77, FROM FLIGHT INSTRUMENT JUNCTION BOX TO TRIM AND FLAP CONTROL INDICATORS Consisting of:—	1	—	—	
5E/4183	—						CABLE, Uninyvin 20	QR	—	C	
10H/0970294	—						CLAMP, cable	1	—	C	
37A/1058027	—						CORD, waxed, braided	QR	—	C	
10H/0970059	—						GASKET, outlet	1	—	C	
10H/0970111	—						GASKET, union	1	—	C	
10H/19080	—						OUTLET, straight	1	—	C	
10H/0560860	—						PLUG	1	—	C	
10H/0970091	—						RING, sealing	1	—	C	
	S.616						RING, thrust	1	—	—	
5K/4346874	EEAS.146/2						SLEEVE	4	—	C	
5K/4346882	EEAS.146/16						SLEEVE	24	—	C	
5F/2035	—						TUBE, P.V.C.	QR	—	C	

CANBERRA T.Mk.19

Page D.11

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R L.M	Plate No
		1	2	3	4	5	6				
	EA3-81-2603	CABLE, ASSEMBLY, N101A, FROM STARTER PANEL TO FLYING PANEL						1	—	—	
		Consisting of:—									
		See AP.101B-0402-3A									
	EA3-81-5163	CABLE, ASSEMBLY, N78, FROM FLIGHT INSTRUMENT JUNCTION BOX TO RESET SWITCH, MAGNETIC INDICATORS AND ZERO READER SWITCH						1	—	—	
		Consisting of:—									
5E/4183	—	CABLE, Uninyvin 20						QR	—	C	
10H/0970292	CZ.69733	CLAMP, cable						1	—	C	
10H/0970058	CZ.60667	GASKET, outlet						1	—	C	
10H/0970108	Z.62235	GASKET, union						1	—	C	
10H/0970062	CZ.49180	OUTLET, straight						1	—	C	
10H/0560300	CZ.49222	PLUG, Mk. 4						1	—	C	
10H/0970088	Z.62229	RING, sealing						1	—	C	
10H/0970096	Z.49037	RING, thrust						1	—	C	
5K/4346882	EEAS.146/16	SLEEVE						12	—	C	
5K/4346890	EEAS.146/6	SLEEVE						5	—	C	
	EA3-81-5609	CABLE, ASSEMBLY, N554, FROM VOLUME CONTROL, TYPE 2 TO ATTENUATOR BOX						1	—	—	
		Consisting of:—									
5E/4199	—	CABLE, Uninyvinmetsheath 20						QR	—	C	
10L/240	—	CONTROL, volume, type 2						1	—	B	
10H/0970058	Z.60667	GASKET, outlet						1	—	C	
10H/0970061	CZ.49178	OUTLET, straight						1	—	C	
10H/0970087	Z.62228	RING, sealing						1	—	C	
5K/1008391	—	SLEEVE, inner						1	—	C	
5K/1008392	—	SLEEVE, outer						1	—	C	
5K/4346882	EEAS.146/16	SLEEVE						3	—	C	
5K/4346890	EEAS.146/6	SLEEVE						4	—	C	
10H/0560505	CZ.49015/5	SOCKET, Mk. 4						1	—	C	
	EA3-82-5021	CABLE, ASSEMBLY, N527, FROM JUNCTION BOX, TYPE 164 TO ILS MARKER BEACON						1	—	—	
		Consisting of:—									
5E/9100004	—	CABLE, miniature 2C						QR	—	C	
10H/0970292	CZ.69733	CLAMP, cable						1	—	C	
10H/0970058	Z.60667	GASKET, outlet						1	—	C	
10H/0970108	Z.62235	GASKET, union						1	—	C	
10H/0970062	CZ.49180	OUTLET, straight						1	—	C	
10H/0970102	Z.49040	RING, compression						1	—	C	
10H/0970096	Z.49037	RING, thrust						1	—	C	
10H/0970114	Z.62240	SLEEVE						1	—	C	
5K/4346882	EEAS.146/16	SLEEVE						2	—	C	
5K/4346879	EEAS.146/12	SLEEVE						2	—	C	
5K/4346890	EEAS.146/6	SLEEVE						5	—	C	
10H/0560090	CZ.49014	SOCKET, Mk. 4						1	—	C	
5E/3141	—	WIRE, tinned copper						QR	—	C	

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
	EA3-82-5067	CABLE, ASSEMBLY, N542, FROM FLIGHT INSTRUMENT, JUNCTION BOX TO TERMINAL BLOCK, PILOT'S PANEL, INSTRUMENTS Consisting of:—						1	—	—	
5E/9100022	—	CABLE, miniature 6C						QR	—	C	
10H/0970292	CZ.69733	CLAMP, cable						1	—	C	
10H/0970058	Z.60667	GASKET, outlet						1	—	C	
10H/0970108	Z.62235	GASKET, union						1	—	C	
10H/0970069	CZ.49181	OUTLET, angle						1	—	C	
10H/0970102	Z.49040	RING, compression						1	—	C	
10H/0970096	Z.49037	RING, thrust						1	—	C	
10H/0970117	Z.62242	SLEEVE						1	—	C	
5X/1005131	Z.49428	SLEEVE						5	—	C	
5K/4346882	EEAS.146/16	SLEEVE						10	—	C	
5K/4346890	EEAS.146/6	SLEEVE						6	—	C	
10H/0560120	CZ.49017	SOCKET, Mk. 4						1	—	C	
5X/9450396	HC.490	TAG						5	—	C	
5E/3141	—	WIRE, tinned, copper						QR	—	C	
	Hellermann-Deutsch										
5X/	416125/20	CAP, protective, altimeter cable assembly						1	—	—	
	EA3-82-5171	CONTROL, V.H.F. (see page KE.1)						1	—	—	
	EA3-81-5609	CONTROL, volume, I.L.S. audio						1	—	—	
		Attaching parts for EA3-81-5609:—									
28S/9148118	A43/B10	Screw, 4 BA						2	—	C	
	6A/4417	COURSE-SELECTOR, Zero Reader						1	—	A	
		Attaching parts for 6A/4417:—									
28S/1214167	A44/B32	Screw, 4 BA						4	—	C	
	Ward Brooke										
5CZ/4340116	WB/1110/2B	COVER, T.B.						1	—	C	
5CZ/	WB/NY/1110/B3W	COVER, T.B.						1	—	C	
	5CZ/7694	COVER, T.B.						1	—	C	
	5L/1928	FILAMENT, 28v, 3w						1	—	C	
	5L/9959118	FILAMENT, 28v, 0.04 amp.						3	—	C	
	6A/4348	GYRO HORIZON, Mk. 1, Zero Reader						1	—	A	
		Attaching parts for 6A/4348:—									
28S/1214172	A44/C20	Screw, 2 BA						4	—	C	
	6A/3147	INDICATOR, air speed, Mk. 9H						1	—	A	
		Attaching parts for 6A/3147:—									
28S/1214177	A44/C40	Screw, 2 BA						3	—	C	
28S/1214178	A44/C44	Screw, 2 BA						1	—	C	
28M/1990760	AGS.2002/C4	Nut						4	—	C	
	AGS.2810/5/070	Distance tube						4	—	—	
28W/1010007	SP.22/C	Washer						3	—	C	
26DK/9340	EEAS.238/2A	Washer						1	—	C	
	6A/3119	INDICATOR, cross pointer, Zero Reader						1	—	A	
		Attaching parts for 6A/3119:—									
28S/1214165	A44/B18	Screw, 4 BA						4	—	C	

CANBERRA T.Mk.19

Page D.13

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
5CZ/5003								1	—	C	
10Q/16355								1	—	A	
28D/9482091	A.170/2B							4	—	C	
10Q/61								1	—	A	
28S/1013430	A44/B20							4	—	C	
6A/2924	218FL							1	—	A	
28S/1017078	A44/B24							4	—	C	
5CZ/4361								1	—	C	
6A/2697								1	—	A	
28S/1214166	A44/B28							4	—	C	
6A/3160	430FL							1	—	A	
6A/3161	431FL							1	—	A	
6A/5621	813FL							1	—	A	
6A/3953								1	—	A	
or											
6A/2945								1	—	A	
28S/1017078	A44/B24							4	—	C	
	Thorn										
5CX/5363	80/10/0678/Red							3	—	C	
5CX/5364	80/10/0855/Red							1	—	C	
5CX/4192								1	—	C	
5CZ/6894								1	—	C	
6A/3384								1	—	A	
28S/1013430	A44/B24							3	—	C	
28S/	A44/B36							1	—	C	
28M/1278109	AGS.2001/B1							4	—	C	
28W/9419474	SP.15/B							4	—	C	
	EA3-20-6027							1	—	—	
	EH5-80-213							1	—	—	
	EH5-80-261							1	—	—	
28D/1212940	A61/2C							4	—	C	
	Hellermann-Deutsch										
5X/2221822	4186/14							1	—	C	
28D/1108147	A25/1A							4	—	C	
28M/1987493	AGS.2001/A1							4	—	C	
28W/1990896	SP.124/A							4	—	C	
	ARROW										
5CW/12663	93A-402A-13							1	—	C	
5CW/4401168	29-761							1	—	C	

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
5CW/4179							SWITCH, turn and slip, emerg. supply	1	—	C	
5CW/4222	ZA2401/1						Attaching parts for 5CW/4179:—	1	—	C	
28S/9148118	A43/B10						Guard, switch	2	—	C	
29C/1200328	AGS.2037/B						Screw, 4 BA	2	—	C	
							Washer, shakeproof	2	—	C	
10F/0510501							SWITCH, Zero Reader	1	—	C	
26DK/5836	EEAS.200						Attaching parts for 10F/0510501:—	1	—		
							Ring, locking	1	—		
5CW/4221							SWITCH, F.I. reset	1	—	C	
28S/9148118	A43/B10						Screw, 4 BA	2	—	C	
29C/1200328	AGS.2037/B						Washer, shakeproof	2	—	C	
6B/1992							UNIT, gyro compass, Mk. 4B	1	—	A	
							Attaching parts for 6B/1992:—				
28S/1214174	A44/C28						Screw, 2 BA	4	—	C	
28M/10275	AGS.2001/C4						Nut	4	—	C	
28W/1010007	SP.22/C						Washer	4	—	C	
12611	EB7-80-497						SNUB, pilot's instrument panel	4	—	C	
2033	EA3-80-1789						WASHER, special, panel mounting	9	—	C	
6918	EEAS.28/51FR						WASHER, special, panel mounting	10	—	C	
34344	EEAS.28/51JR						WASHER, special, panel mounting	2	—	C	
	EA3-80-5551						PANEL, UNDERCARRIAGE, INSTRUMENT, ASSEMBLY	1	—	—	
							Spares for:—Identical to assembly Pt. No. EA2-80-17, AP.101B-0402-3A, except for the following deletions and additions				
							Delete:—				
8601	EA1-80-321						PANEL, removable	1	—	B	
							Add:—				
14610	EA3-80-5471						PANEL, louvre, assembly	1	—	C	D.1
	EH5-80-153						SEATING IN PRESSURE CABIN, INSTALLATION	—	—	—	
							Spares for:—				
5340-99-4163724	EEAS.136						BRACKET	1	—	C	
	EA2-80-5135						BRACKET, pipe clamp, assembly (Mod. 4062)	1	—	—	
							Attaching parts for EA2-80-5135:—				
28D/9436920	A25/1C						Bolt, 2 BA	2	—	C	
28W/9419402	SP.13/C						Washer	2	—	C	
8583	EA1-80-867						BRACKET, top attachment, pilot's guide rail	2	—	C	
							Attaching parts for EA1-80-867:—				
28D/9133013	A25/5C						Bolt, 2 BA	2	—	C	
28M/9403520	A27/CP						Nut, 2 BA	2	—	C	
16680	EA3-80-1569						Packing, fillet	2	—	C	
	EB6-80-5947						BRACKETS, TRIP ROD, INSTALLATION (MOD. 4059)	—	—	—	
							Spares for:—				
41333	EB6-80-5951						BRACKET	1	—	C	
41334	EB6-80-5955						BRACKET	3	—	C	

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
12K/1277	—					CARTRIDGE, No. 3, Mk. 1	1	—	C		
12K/1433	—					CARTRIDGE-SET, No. 13, Mk. 1 (Mod. 4448)	2	—	C		
41866	EG.5-80-177					CLAMP, pipe, assembly (Mod. 4062) Attaching parts for EG5-80-177:—	1	—	MR		
28D/9435711	A25/10B					Bolt, 4 BA	2	—	C		
28M/1279189	AGS.2001/B/1					Nut, 4 BA	2	—	C		
28W/9419465	SP.13/B					Washer	2	—	C		
27L/1445245	Martin Baker MBEU.34679					GUN; ejection, type 10, Mk. 1 (Mod. 4448)	1	—	A		
27L/1445246	MBEU.34678					GUN; ejection, type 12, Mk. 1 (Mod. 4448)	1	—	A		
5K/7001266	AS.3360/C3C					LEAD, bonding	1	—	C		
	EA4-80-1247					LINES, LEG RESTRAINT AND BRACKETS, NAVIGATOR'S STATION, GROUP Spares for:—	—	—	—		
27L/510	Martin Baker A/MBEU/3666					BRACKET Attaching parts for A/MBEU/3666:—	2	—	C		
28D/1010030	A25/7C					Bolt, 2 BA	4	—	C		
28M/1279190	AGS.2001/C/1					Nut, 2 BA	4	—	C		
	AS.2809/4/060					Tube, distance (As required)	2	L.62	LM		
28W/9419402	SP.13/C					Washer	4	—	C		
27L/2729	Martin Baker B/MBEU/17353					LINE, leg	2	—	C		
27L/80	C/MBEU/1434					PIN	2	—	C		
	EA2-80-5143					LINES, LEG RESTRAINT AND BRACKETS, PILOT'S STATION, GROUP (MOD. 4062) Spares for:— See AP.101B-0402-3A	—	—	—		
	EH5-80-33					MECHANISM, SINGLE LEVER EJECTION, REAR CREW MEMBER, GROUP (MOD. 3794) Spares for:—Identical to group Pt. No. EA3-80-6405, AP.101B-0402-3A, except for the following deletions and additions Delete:—	—	—	—		
34835	EA3-80-6423					CABLE, assembly, secondary firing	1	—	C		
	EA3-80-6407					COVER, mechanism assembly	1	—	—		
34838	EA3-80-6417					LEVER, cocking, assembly	1	—	C		
42535	EA3-81-6327					MECHANISM, ASSEMBLY, STARBOARD	1	—	B		
34847	EA3-80-6415					PLATE, peg	1	—	C		
	EA3-80-6419					STOWAGE, cocking lever assembly	1	—	—		
						Add:—					
6051223	EA3-80-6609					CABLE, assembly, secondary firing (Mod. 4949) Attaching parts for EA3-80-6609:—	1	—	C		
28P/16440	SP.113/G5					Shear pin }	1	—	C		
28N/1046380	SP.121/G					Collar } at seat	1	—	C		
28P/9554984	SP.90/E7					Split pin }	1	—	C		
28P/9140979	SP.4Z/B4					Pin, steel }	1	—	C		
29W/9149402	SP.13/C					Washer }	1	—	C		
28P/1021104	SP.90/C3					Split pin }	1	—	C		

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.							No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EB7-80-5713							1	—	—	
28N/9486470	AS.1877							1	—	C	
	EB7-80-5717							1	L.72	—	
34850	EA7-80-6453							1	—	C	
28D/1007982	AS.1248/1C							2	—	C	
28M/1278190	AGS.2001/C/1							2	—	C	
28W/9419475	SP.15/C							2	—	C	
27C/2646	—							2	—	B	
15A/1539	—							2	—	A	
	Martin Baker										
27L/	MBCJ.2001							1	—	—	
27L/	MBCJ.2002							1	—	—	
27L/	MBCJ.2003							1	—	—	
27L/	MBCJ.2004							1	—	—	
	Martin Baker										
27L/365	—							1	—	B	
27L/50130	E/MBEU/1963/ EE							1	—	B	
27L/50129	MBEU/1902/EE							1	—	B	
4887	EA3-80-1725							1	—	C	
16667	EA2-80-439							1	—	MR	
	Martin Baker										
27L/1445204	—							1	—	A	
27L/1445205	—							1	—	A	
	EH5-80-105							—	—	—	
6101183	EA3-80-6547							1	—	C	
28D/1204937	AS.1242/6C							2	—	C	
1438887	EA3-80-6173							1	—	C	
	EH5-80-107							—	—	—	
6101183	EA3-80-6547							1	—	C	
28D/1010030	A25/7C							2	—	C	
28M/1278190	AGS.2001/C/1							2	—	C	
28W/9419454	SP.10/C							2	—	C	
28W/9419475	SP.15/C							2	—	C	

CANBERRA T.Mk.19

Page D.16A/B

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT


Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M	Plate No
		1	2	3	4	5	6				
27L/1445196	Martin Baker C76-HC/MB	UNION, Ermeto, 1/2" (Mod. 4062)						3	—	C	
27L/5021	Martin Baker MBCJ/159	UNIT, combined time release and breech (Mod. 4062)						1	—	A	
28D/1212830	AS.1242/13E	Attaching parts for MBCJ.159:—									
28D/1212834	AS.1242/17E	Bolt, 1/2" BSF						2	—	C	
28M/9480017	AGS.2001/E/1	Bolt, 1/2" BSF						1	—	C	
28W/9418921	SP.13/E	Nut, 1/2" BSF						3	—	C	
		Washer (As required)						6	—	C	
27L/ 26DK/11172	Martin Baker MBEU/23/6EE	UNIT, time delay						1	—	—	
	EEAS.239/1A	WASHER, 'D', for pipe clips						4	—	C	
	EA3-80-5461	SEAT, OCCASIONAL, CREW MEMBER, ASSEMBLY						1	—	—	
		Spares for:—									
	EA3-80-5445	ANGLE, support channel, assembly						1	—	—	
	EA3-80-5453	ANGLE, support channel						1	—	—	
33325	EB6-80-275	BACKREST, assembly						1	—	B	
	EA3-80-5441	BRACKET, support						1	L.72	—	
	EA3-80-5465	BRACKET, support						1	L.72	—	
	EA3-80-5463	BRACKET, support						1	L.72	—	
	EA3-80-5359	BRACKET, headrest, support						1	—	—	
	EA3-80-5367	BRACKET, shoulder strap						1	L.72	—	
	EA3-80-5369	BRACKET, headrest						1	L.72	—	
	EA3-80-5529	BRACKET, stowage, assembly						1	—	—	
4537	EA3-80-1289	CABLE, Bowden, assembly						1	—	C	
	EA3-80-5511	CABLE, SEAT UP LOCK, ASSEMBLY						1	—	—	
		Consisting of:—									
14605	EA3-80-5513	CATCH, assembly						1	—	C	D.1
28M/9403520	A27/CP	NUT, 2 BA						1	—	C	
14607	EA3-80-5519	PIN						1	—	C	D.1
14606	EA3-80-5521	SPRING						1	—	C	D.1
28W/9419402	SP.13/C	WASHER						1	—	C	
	EA3-80-5443	CHANNEL, support						1	—	—	
	EA3-80-5451	CHANNEL, support						1	—	—	
8609	EA3-80-1239	CHANNEL, guide, assembly						1	—	MR	

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description						No. Off	M.R.		C.O.S. L.M.	Plate No.
		1	2	3	4	5	6		Mat.	Spec.		
4538	EA3-80-5527						HEADREST, assembly	1	—		—	
	EA3-80-5501						HINGE, support, assembly	1	—		—	
	EA3-80-1237						LOCK, BOTTOM, ASSEMBLY	1	—		B	
							Spares for:— See AP.4326B, Vol. 3					
	EA3-80-5506						PACKER	1	—		—	
14608	EB6-80-507						PAD, back	1	—		B	
14609	EA3-80-5503						PAD, seat	1	—		B	
33328	EB6-80-303						PIN, backrest hinges	2	S.96		C	
	EA3-80-5507						PLATE, radius	2	L.72		—	
	EA3-80-5307						SEAT, assembly	1	—		—	
28S/1213813	4101/4/5/16						SCREW, self tapping	4	—		C	
28S/1018882	4101/6/1/4						SCREW, self tapping	2	—		C	
	EA3-80-5497						SUPPORT, seat	1	—		—	
	EA3-80-275						SUPPORT, backrest	1	—		—	
33708	EB6-80-295						SUPPORT, backrest	2	—		C	
	EA3-80-5427						SUPPORT, REAR, ASSEMBLY	1	—		—	
							Spares for:—					
14604	EA3-80-5431						HOOK, seat retaining	1	S.94		C	D.1
14602	EA3-80-5439						PIN, locking	1	S.1		C	D.1
14603	EA3-80-5437						SPRING, compression	1	—		C	D.1
	EA3-80-5737						STOWAGE, ASBESTOS GLOVES, ASSEMBLY	1	—		—	
							Spares for:—					
	Newey 7/7-101						FASTENER	1	—		—	
8613	EA3-80-1795						STRAP	1	—		C	
	EA3-83-179						STOWAGE, FLAP SWITCH AND UNDERCARRIAGE	—	—		—	
							LOCK, GROUP					
							Spares for:— See AP.4326B, Vol. 3					
	EH5-80-31						STOWAGE, HYDRAULIC EMERGENCY HANDLE, INSTALLATION (MOD. 4425)	—	—		—	
							Spares for:—					
	EH5-80-121						CHANNEL, ASSEMBLY	1	—		—	
							Spares for:—					
	EH5-80-119						CHANNEL	1	—		—	
28E/9128839	—						CLIP, spring, type 257, 7/8" dia.	2	—		C	
	EA3-80-5613						STOWAGE, FIRE EXTINGUISHER AND AXE, GROUP	—	—		—	
							Spares for:—					
27N/	—						AXE	1	—		B	
	EA3-80-5617						BRACKET, assembly, axe	1	S.3		—	
	EA3-80-5619						BRACKET, assembly, axe	1	S.3		—	
	EA3-80-5621						BRACKET, fire extinguisher	2	—		—	
28E/9513854	AS.2294/8						CLIP, spring	1	—		C	
27N/299	—						EXTINGUISHER, fire	1	—		A	
	EA3-80-5615						GUARD, foot at axe	1	—		—	
8595	EA3-80-1829						PLATE, doubling	1	—		C	
8596	EA3-80-1831						STRAP, 1/8" thick	1	Leather		C	

EQUIPMENT, AIRCRAFT
PRESSURE CABIN EQUIPMENT


Ref. No.	Part No.	Description						No. Off	M.R.		C.O.S. L.M.	Plate No.
		1	2	3	4	5	6		Mat.	Spec.		
2167	EA3-80-5607	STOWAGE						—	—	—		
2167	EA1-80-881	STOWAGE						1	—		B	
2167	EA3-80-5651	STOWAGE						—	—	—		
2167	EA3-80-5655	BOX, stowage, assembly						1	—	—		
2167	EA3-80-6083	CLIP, retaining, assembly (Mod. 2731)						1	—	—		
2167	EA3-80-5663	CORD, retaining						1	—	—		
2167	EA3-80-5715	PLATE, radius						2	—	—		
2167	EA3-80-1731	STOWAGE						—	—	—		
2167	EA3-80-785	STOWAGE						1	—	—	B	
2167	EA3-80-6045	URINE, INSTALLATION						—	—	—		
2167	—	CLIP, assembly						1	—	—	C	
2167	—	CONTAINER						1	—	—	B	
2167	—	FUNNEL						1	—	—	C	

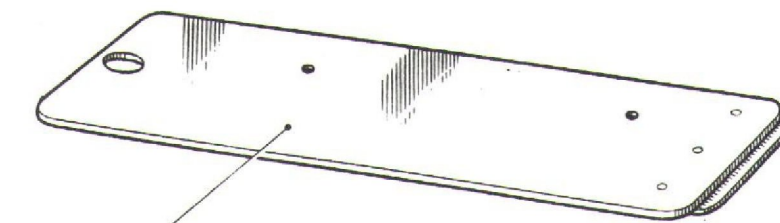

EA3-80-5759




EA3-80-5629

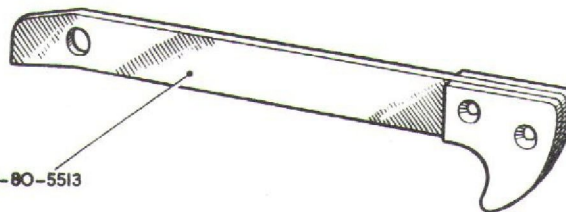

EA3-80-5513



EA3-80-5521

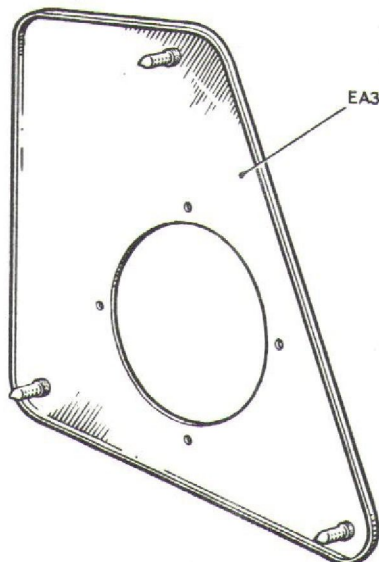

EA3-80-5471



EA3-80-381




EA3-80-5631



EA3-80-5437




EA3-80-5519

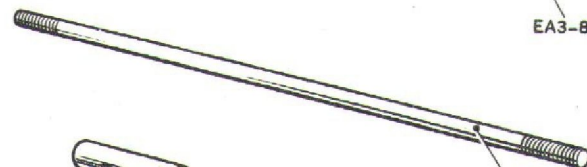


EA3-80-5645




EA3-80-5439

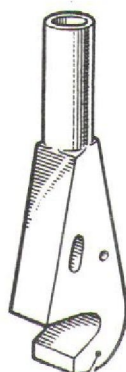

EA3-80-5431

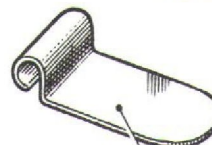

EA3-80-5259

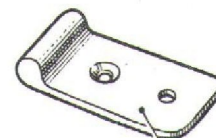

EA3-80-5633

EQUIPMENT IN PRESSURE CABIN

