

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Place No.
	E.219019	HOOD, LOCKING AND JETTISON GEAR, ASSEMBLY	—	—		
	A.229403	Angle, for Micro Switch mounting, at front centre lock	1	L.65.B		
10219	F.235439	Bearing, for link at front centre lock (For use with brackets D.219595 Issue 5)	1	BS.369	C.	JE.2
8843	F.212202	Bearing, special, at bell crank, aft of frame 6, for front centre lock control	2	BSS.369	C.	JE.2
8844	F.212203	Bearing, special, for control rod attachment to front centre lock	1	BSS.369	C.	JE.2
	F.212037	Bell-crank, aft of frame 6, for front centre lock control	1	Stamping		
8847	F.212223	Bolt, lubricating, at bell-crank, for front centre lock control	1	S.154	C.	
8849	F.210333	Bolt, special, attaching connecting rod to torque shaft lever assembly	2	S.154	C.	
8850	Std.323/42	Bolt, shoulder, for control rod attachment, forward lock	1	S.2	C.	4
8851	Std.323/46	Bolt, shoulder, at hood jettison release unit attachment	1	S.2	C.	4
5664	Std.1639/4/CX	Bolt, for front centre lock attachment	4	S.95.B	C.	5
10220	F.235400	Bolt, special, for hook attachment to link, front centre lock	1	DTD.498	C.	
9757	F.229423	Bolt, for attachment of control rod to front centre lock	1	DTD.487	C.	JE.2
9758	Std.1697/3B	Bolt, for attachment of micro switch mounting, front centre lock	1	DTD.487	C.	5
5305-99-1247990	Std.1697/1B	Bolt, for attachment of standby compass mounting bracket	2	DTD.487	C.	5
10434	F.240792	Bolt, at front centre lock	1	—	C.	JE.2
	F.219966	Bracket, for front centre lock	1	DTD.498		JE.2
9850	A.229427	Bracket, mounting, for EB.2 standby compass	1	—	C.	JE.2
8854	F.211016	Bush, at hook attachment, front centre lock	1	BSS.369	C.	JE.2
	B.259994	Casing, hook locking gear and safety pin stowage, port group (mod. 1178)	1	—		JE.2
	B.244850	Casing, hood locking gear and safety pin stowage, port group (Pre Mod. 1178)	1	—		
11054-9878	C.233144	Casing, hood locking, group (P.T.)	1	—	C.	
	F.213590	Angle	1	L.72		
	F.213601	Angle	1	L.72		
	F.213588	Bracket	1	L.72		
1327	Std.1547/24/12	Washer	4	DTD.610	C.	4
11053	B.259992	Stowage, for seat safety pins, port group (Mod. 1178)	1	—	C.	
10596	B.241760	Stowage, for seat safety pins, port group (Pre Mod. 1178)	1	—	C.	
	F.239978	Plate, label	1	L.72		
	B.259995	Casing, hood locking gear and safety pin stowage, starboard group (Mod. 1178)	1	—		JE.2
	B.244851	Casing, hood locking gear and safety pin stowage, starboard group (Pre Mod. 1178)	1	—		
11055-9880	C.233145	Casing, hood locking gear (S.T.A.)	1	—	C.	
	F.213591	Angle	1	L.72		
	F.213601	Angle	1	L.72		
	F.213589	Bearing	2	L.72		
1327	Std.1547/24/12	Washer	4	DTD.610	C.	4
	B.259993	Stowage, for seat safety pins, starboard group (Mod. 1178)	1	—		
10597	B.241761	Stowage, for seat safety pins, starboard group (Pre Mod. 1178)	1	—	C.	
	A.259943	Plate, label (Mod. 1178)	1	L.72		
	F.239979	Plate, label (Pre Mod. 1178)	1	L.72		

FUSELAGE—HOOD LOCKING AND JETTISON GEAR

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Place No.
		1	2	3	4	5				
	8857 B.221137	Control, between forward lock and bell-crank, frame 6 Consisting of:—					1	—	B.	JE.2
21	27K/— Teleflex DS.377	Conduit, length (Hawker No. B.221137/1)					1	—	C.	
	27K/— Teleflex DS.377	Conduit, length (Hawker Pt. No. B.221137/2)					1	—	C.	
	27K/— Teleflex B.44665	Connector, No. 4, assembly					1	—	C.	
	F.221138	Fork-end					1	S.154		
	28K/6187 SP.7.YE	Fork-end					1	—	C.	
	28K/— SP.7.ZE	Fork-end (Alternative to SP.7.YE)					1	—	C.	
21	28M/1007403 A.27.ET	Nut, lock					2	—	C.	
	27K/— Teleflex C.44637/ 56"/C.44637	Rod and cable, assembly					1	—	C.	
	27K/— Teleflex C.44661	Swivel, No. 4, assembly					2	—	C.	
	D.218777	DETAILS OF HOOD LOCKING AND JETTISON GEAR, ASSEMBLY					—	—		
	9978 F.232125	Adapter, lubricating					2	BSS.251	C.	JE.3
	9979 F.233564	Angle, securing stem (Make from Std. 1338)					2	L.40	C.	JE.3
	8843 F.212202	Bearing, for jack release lever					1	BSS.369	C.	
	8844 F.212203	Bearing, for jack release lever					1	BSS.369	C.	
	Std.1988/42	Bolt, shouldered					2	—		
	Std.1988/62	Bolt, shouldered					2	—		
	8858 F.213495	Bolt, greaser, attaching latch to support brackets					2	S.95.B	C.	JE.2
	9880 F.233563	Block, stem attachment					2	L.65	C.	JE.3
	F.210151	Bush					2	BSS.369		JE.2
	9981 F.233562	Clip, securing stem					2	L.72	C.	JE.3
21	8859 A.210150	Latch, at forward hood attachment, group					2	Stamping or S.95.B or S.154	C.	JE.2
	8860 F.212719	Lever, jack release					1	Stamping	C.	JE.3
	8861 F.212720	Lever, jack release					1	Stamping	C.	JE.3
	8862 F.212750	Lever, jack release					1	Stamping	C.	JE.3
	8863 F.213494	Piece, distance, for latch					2	S.95.B	C.	JE.2
	8864 Std.499/1	Plate, locking					1	L.3	C.	4
	8865 A.218069	Rod, connecting, between hood jettison shaft and jack release levers, group					1	—	C.	JE.2
	8866 A.218129	Rod, connecting, between hood jettison shaft and latch, group					1	—	C.	JE.2
	F.212721	Shaft, for release jack levers					1	T.45		JE.3
	4117 Std.1283/G	Shim, at torque shaft mounting					8	Laminum	C.	4
	9982 A.232126	Stem, lubricating					2	—	C.	JE.3
21	— Std.1507/24/100	Tube, distance, at jack release lever, 3/8" o/d x 17 s.w.g. x 1" long (Make from 30A/1469)					1	T.26	—	4
	9983 Std.1335/F/16	Washer, at adapter					2	L.34	C.	4
	E.218993	HOOD, JETTISON GEAR, ASSEMBLY					—	—		
	8867 F.214136	Block, clamp, securing gas pipe between firing unit and jettison gun					2	LFS.21	C.	JE.1
	8868 F.214137	Block, clamp, securing gas pipe between firing unit and jettison gun					2	LFS.21	C.	JE.1
	1935 F.196363	Bush, for emergency release, cable					1	Rubber	C.	
	8870 A.213166	Cable, control, hood release, group					1	—	B.	JE.1
		Consisting of:—								
21	Std.1920	Adjuster					2	—		5
	A.213166/1	Cable, 5 cwt					1	W.11		
	29H/— Bowdenix T.3	Conduit, size T3, 34.7" long (A.213166/2)					1	—	C.	
	28U/15288 SP.38A	Fork-end					2	—	C.	

FUSELAGE—HOOD LOCKING AND JETTISON GEAR

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
	8871	A.213076				Cable, control, for hood external release, group	1	—	B.	JE.1
						Consisting of:—				
21		Std.1920				Adjuster	1	—		5
		A.213076/1				Cable, 5 cwt	1	W.11		
		F.213077				Collet	1	L.65.C		
	29H/—	Bowdenix T.3				Conduit, size T.3, 29" long (A.213076/2)	1	—	C.	
	28U/15288	SP.38A				Fork-end	1	—	C.	
		Std.1920/2				Sleeve, outer	1	—		
21	26VA/6044412	Std.2045/17/26				Clip, sleeved	3	—	C.	6
21	11303	Std.2046/17/26				Clip, sleeved	1	—	C.	6
21	11305	Std.2046/25/24				Clip, sleeved	4	—	C.	6
		C.213112				Cross-shaft, for jettison gun, group	1	—		
		B.212980				Bracket, bearing, port, group	1	—		JE.1
		F.212982				Bush	1	BSS.369		JE.1
		B.212981				Bracket, bearing, starboard, group	1	—		JE.1
		F.212982				Bush	1	BSS.369		JE.1
		A.213103				Bracket, bearing, group	1	—		JE.1
		F.213104				Bush	1	BSS.369		JE.1
21		Std.165/4				Ferrule, securing, lever	8	S.2	C.	
	12191	A.212996				Lever	2	Stamping	C.	JE.1
21		F.212995				Lever	1	S.154 & T.26		JE.1
		A.213099				Lever, for control cable	1	Stamping		JE.1
		A.214342				Lever, for release unit	1	Stamping		JE.1
21	—	Std.1510/2/087				Tube, distance, 1/4" o/d x 22 s.w.g. .87" long (Make from 30B/9611260)	2	T.4	—	4
21	—	Std.1507/2/010				Tube, distance, 1/4" o/d x 22 s.w.g. x 1" long (Make from 30A/9610294)	2	T.26	—	4
	—	C.213280				DETAILS OF HOOD JETTISON GEAR,	—	—		
		F.214337				ASSEMBLY				
	12849	F.214339				Bracket, bearing, for cross-shaft	2	—		JE.1
						Bush, spherical, at link operating hood jettison release unit	2	BSS.369	C.	JE.1
21	12K/9629451	Martin Baker MBCJ/440				Cartridge, jettison, No. 4, Mk.2	1	—	C.	
		—				Chain	2	Brass	—	
		A.219015				Cross-shaft, at flying control casing, group	1	—		JE.1
21	—	A.221340				Lever	1	Stamping		
		Std.1509/2/063				Tube, distance, 1/4 o/d x 22 s.w.g. x .63" long (Make from 30B/9611260)	1	T.4	—	4
21		F.213078				Lever, for hood de-sealing valve control	1	S.21.B & S.154		JE.1
		F.214336				Lever, operating, at release unit	1	L.65.C		JE.1
21		F.213050				Lever, for hood de-sealing valve control	1	S.154 & T.26		JE.1
	—	F.212424				Link, attaching cable, at release unit	1	L.72	—	
						(Make from 30B/9611215)				
		F.214338				Link, operating, for hood jettison release unit	1	L.65.C		
21	27L/4540203	Martin Baker MBEU/18553				Pin, safety for canopy (Mod. 913)	1	—	C.	
	28FP/1048015	A.405				Pin, pip, type A	1	—	C.	
		—				Ring, key, 1.0" dia.	2	Steel		
		A.213058				Rod, control, for hood de-sealing valve	1	—		JE.1
		F.213095				Rod, control, between cross shaft and control rod operating de-sealing valve	1	L.65.C		JE.1
	10050	F.215738				Rod, connection, between firing unit and cross-shaft lever, group	1	—	B.	JE.1
	362	F.187712				Fork-end	2	S.95.B	C.	JE.1
21	27QA/4534536	Dowty GD.1309/7				Seal, "O" ring	1	—	C.	JE.1
21	—	Std.1507/2/010				Tube, distance, 1/4" o/d x 22 s.w.g. x 1" long (Make from 30A/9610241)	1	T.26	—	4
	—	Std.1509/2/062				Tube, distance, 1/4" o/d x 22 s.w.g. x 62" long (Make from 30B/9610294)	1	T.4	—	4

FUSELAGE—HOOD LOCKING AND JETTISON GEAR


Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
21	27L/4541138	Std.1507/3/020				Tube, distance, 5/16" o/d x 22 s.w.g. x 2" long	1	T.26		
		Std.1507/23/008				Tube, distance, 7/16" o/d x 17 s.w.g. x .08" long	4	T.26		
		Martin Baker				Unit, firing	1	—	A.	
		B/MBCJ/191								
21	3763	Std.915/B/2C1				Washer	4	L.168	C.	4
21	5781	Std.915/E/20				Washer	1	L.168	C.	4
	8873	C.214166				Guard, for hood jettison cable	1	L.59 or Plastic	C.	JE.1
	—	B.215031				GUARD, FOR EMERGENCY RELEASE	—	—	—	
						HANDLE, ASSEMBLY				
	8875	B.215031/A				Angle, mounting and guard plate, group	1	—	C.	JE.1
						Consisting of:—				
		A.215033				Angle, mounting	1	—		
		Std.1362/2/375				Ferrule (Mod. 1128)	1	T.9		
		A.254637				Plate, guard (Mod. 1128)	1	L.72		
21	28Q/1015151	SP.78—404				Rivet	5	—	C.	
	590	F.188534				Spring	1	Spr. Stl.	C.	JE.1
	27L/5053	Martin Baker				Gun, jettison	2	—	A.	
		MBCJ/174								
21	27L/4541136	Martin Baker				Pipe, gas, port	1	—	B.	
		MBCJ/186								
21	27L/4541137	Martin Baker				Pipe, gas, starboard	1	—	B.	
		MBCJ/187								
		—				Ring, key, split type, 1.5" i/d	1	—		
	9667	F.226850				Shim, at cross-shaft bearing bracket	QR	—	C.	
	8876	F.136453				Spring, return, for cross-shaft levers	1	Spring Wire	C.	JE.1
	4162	Std.915/B/22				Washer, at control cable attachment to cross shaft lever and release handle	2	DTD.610	C.	4
	7169	Std.915/C/18				Washer, at gas pipe attachment, starboard	1	DTD.610	MR/C	4
	912	F.176949				Window, for hood external emergency release	1	Perspex	C.	JE.1
21	11067	Std.1507/23/050				Tube, distance	1	T.26	C.	4
		A.210978				Hook, for front centre lock	1	Stamping		JE.2
	10212	B.235482				Latch, hood forward port, group	1	—	B.	JE.2
	10213	B.235483				Latch, hood forward starboard, group	1	—	B.	JE.2
	8848	F.210332				Bolt	1	S.99.B	C.	JE.2
		F.220562				Pipe, drain	1	—		JE.2
		F.209861				Roller, latch	1	S.80.B		JE.2
	9985	B.235382				Latch, hood, port, aft, group	1	—	B.	JE.2
	9986	B.235383				Latch, hood, starboard, group side	2	—	B.	JE.2
21	8848	F.210332				Bolt, special, attaching roller to hood latch	1	S.154	C.	JE.2
		F.220562				Pipe, drain	1	—		JE.2
		F.209861				Roller, for latch	1	S.80.B		JE.2
		A.211698				Lever, assembly, between torque shaft and connecting rod, port, group	1	—		
		A.210165				Bracket, bearing, group	1	—		JE.3
		F.210167				Bush	1	BSS.369		JE.3
		A.210163				Coupling	1	L.65.C		JE.3
		A.210269				Lever	—	Stamping		JE.3
21	27QA/4534540	Dowty				Seal, "O" ring	1	—	C.	JE.3
		GD.1309/14								
		A.211699				Lever, assembly, between torque shaft and connecting rod, starboard, group	1	—		
		A.210165				Bracket, bearing, group	1	—		JE.3
		F.210167				Bush	1	BSS.369		JE.3
		A.210163				Coupling, half	1	L.65.C		JE.3
		A.210270				Lever	1	Stamping		JE.3
21	27QA/4534540	Dowty				Seal, "O" ring	1	—	C.	JE.3
		GD.1309/14								

FUSELAGE—HOOD LOCKING AND JETTISON GEAR


Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Place No.
		1	2	3	4	5				
21	10166	C.218120	Levers, hood jettison, group				1	—	B.	JE.3
		B.210173	Block, bearing, group				1	Stamping		JE.3
		F.210009	Bush				2	BSS.369		JE.3
		A.210122	Bracket, bearing, group				1	L.65 or Stpg. A.216		JE.3
		F.210123	Bush				1	BSS.369		JE.3
		B.218109	Lever, group				1	—		JE.3
		F.212661	Bush				1	BSS.369		JE.3
		Std.608/7	Bush				1	B.8		JE.3
		A.218058	Lever, group				1	—		JE.3
		Std.608/7	Bush				1	B.8		JE.3
		A.210174	Lever, group				1	Stamping		JE.3
		Std.608/7	Bush				1	B.8		JE.3
		F.212718	Lever				1	Stamping		JE.3
	27QA/4534541	Dowty	Seal, "O" ring				2	—	C.	JE.3
21		GD.1309/15	Shaft				1	—	MR/C	4
	3804	Std.1510/2/068	Tube, distance				1	—		
		F.228638	Lever, micro switch operating, at front centre lock				1	—		JE.2
	9670	F.229422	Lever, at centre lock				1	—	C.	JE.2
	6098188	A.210209	Link, for rear lock, group				2	Stamping	C.	JE.2
		F.210259	Bearing				1	BSS.369		JE.2
	13129	F.210261	Bearing				2	BSS.369	C.	JE.2
	8881	F.213315	Link, for forward and rear lock, group				4	Stamping	C.	JE.2
		F.210258	Bearing				1	BSS.369		JE.2
	8882	F.210211	Link, for forward lock, port, group				1	S.154	C.	JE.2
		F.210259	Bearing				1	BSS.369		JE.2
	13129	F.210261	Bearing				2	BSS.369	C.	JE.2
	8883	F.210461	Link, for forward lock, starboard, group				1	S.154	C.	JE.2
		F.210259	Bearing				1	BSS.369		JE.2
21	13129	F.210261	Bearing				2	BSS.369	C.	JE.2
	8884	F.210966	Link, at front centre lock				1	DTD.498	C.	JE.2
	8885	F.213285	Link, at front centre lock				1	DTD.498	C.	JE.2
		A.219534	Mounting, for front centre lock				1	Sect. 111 Stamping		
		F.232070	Packing, at bearing blocks				4	L.72		
	9761	F.229424	Pin, special, for lever at centre lock				1	DTD.487	C.	
	—	B.221236	PIPES, DRAIN, AT HOOD LOCKS, ASSEMBLY				—	—	—	
	—	B.221236/1	Hose, drain pipe to outlet pipe, front, 7/16" o/d x 1/4" i/d x 3" long (Make from 32C/1275030)				4	Rubber	LM	JE.2
	8886	F.210402	Rod, connecting, between torque shaft and rear lock, group				2	—	C.	JE.2
	12535	F.210067	Bush, spherical				2	BSS.369	C.	JE.2
		F.210403	Eye-end, screwed				1	S.154		JE.2
	8887	A.210041	Rod, connecting, between forward and rear lock,				2	—	C.	JE.2
			group							
	12535	F.210067	Bush, spherical				2	BSS.369	C.	JE.2
		F.210062	Eye-end, screwed				1	S.154		JE.2
21	8888	A.211173	Rod, connecting, between bell-crank, frame 6, and front centre lock, group				1	—	C.	JE.2
		F.211174	Fork-end, adjustable				1	DTD.498 Sect. 111		
	8890	F.209864	Shim, at bearing block, for forward and rear locks				4	Laminated Brass	C.	JE.2
	8891	F.211139	Shim, at trunnion attachment, forward and rear lock				4	Laminated Alum.	C.	JE.2
	8892	F.219967	Shim, for front centre lock mounting				QR	Laminated Brass	C.	JE.2
	8893	F.219760	Shim, for front centre lock mounting				QR	Laminated Brass	C.	JE.2


FUSELAGE—HOOD LOCKING AND JETTISON GEAR

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Place No.
		1	2	3	4	5				
8894	F.219968					Shim, for bracket, front centre lock	QR	Laminated Brass	C.	JE.2
8895	F.216574					Shim, for front centre lock mounting	QR	Laminated Brass	C.	JE.2
10044	F.227545					Shim, at torque-shaft, assembly	2	—	C.	
	F.231519					Stop, at front centre lock	1	L.65.C		JE.2
	B.210168					Torque-shaft, group	1	—		JE.3
	A.210270					Block, bearing, group	1	—		JE.3
	F.210171					Bush	2	BSS.369		JE.3
	Std. 165/4					Ferrule	16	—		4
	A.210169					Lever, group	1	L.65.C		JE.3
	F.212662					Bush	2	BSS.369		JE.3
21	A.212001					Lever	1	S.510 & S.1		JE.3
21	Std. 1510/24/125					Tube, distance, 3/8" o/d x 17 s.w.g. x 1.25" long	4	T.4		4
21	Std. 1510/24/144					Tube, distance, 3/8" o/d x 17 s.w.g. x 1.44" long	4	T.4		4
100447	F.211138					Trunnion, at forward and rear lock	4	S.99.B	C.	JE.2
	B.254634					Unit, release, group (Mod. 1128)	1	—		JE.3
897	F.189118					Bolt, special	2	S.95.B	C.	JE.3
898	A.127278					Bolt, special	2	S.1	C.	JE.3
899	F.189074					Bolt, special	2	S.95.B	C.	JE.3
	F.212258					Bolt, special	2	S.95.B		JE.3
21	F.212257					Bearing	1	S.510		JE.3
	F.228234					Bearing	1	S.1		JE.3
2A/9500491	B.S.I.S.F.E.3/8"					Bearing	1	—	C.	
	A.189071					Casing	1	—		
21	900					Coupling	2	S.510	C.	JE.3
	F.212237					Eye-end	2	S.95.B		JE.3
12338	F.229583					Label, for checking of switches	1	—	C.	
	A.254635					Lever, group (Mod. 1128)	1	—		JE.3
	F.254636					Handle (Mod. 1128)	1	L.65.C		JE.3
904	A.126610					Nut, special	1	S.20	C.	JE.3
	A.127030					Packing	1	L.1		
21	906					Plug	1	L.168	C.	JE.3
	A.215724					Plug, slotted	1	S.1		JE.3
21	907					Plunger	1	L.168	C.	JE.3
	8162					Rod	1	S.95.B	C.	JE.3
	909					Sleeve	2	S.1	C.	JE.3
	F.210655					Spool, bearing	1	L.65.C		JE.3
	A.126828					Spring	1	DTD.239		JE.3
21	F.212423					Stud, special, for handle	1	S.510		JE.3
	910					Washer	2	Rubber	C.	JE.3
	F.232051					Washer, special, at bearing blocks	16	—		

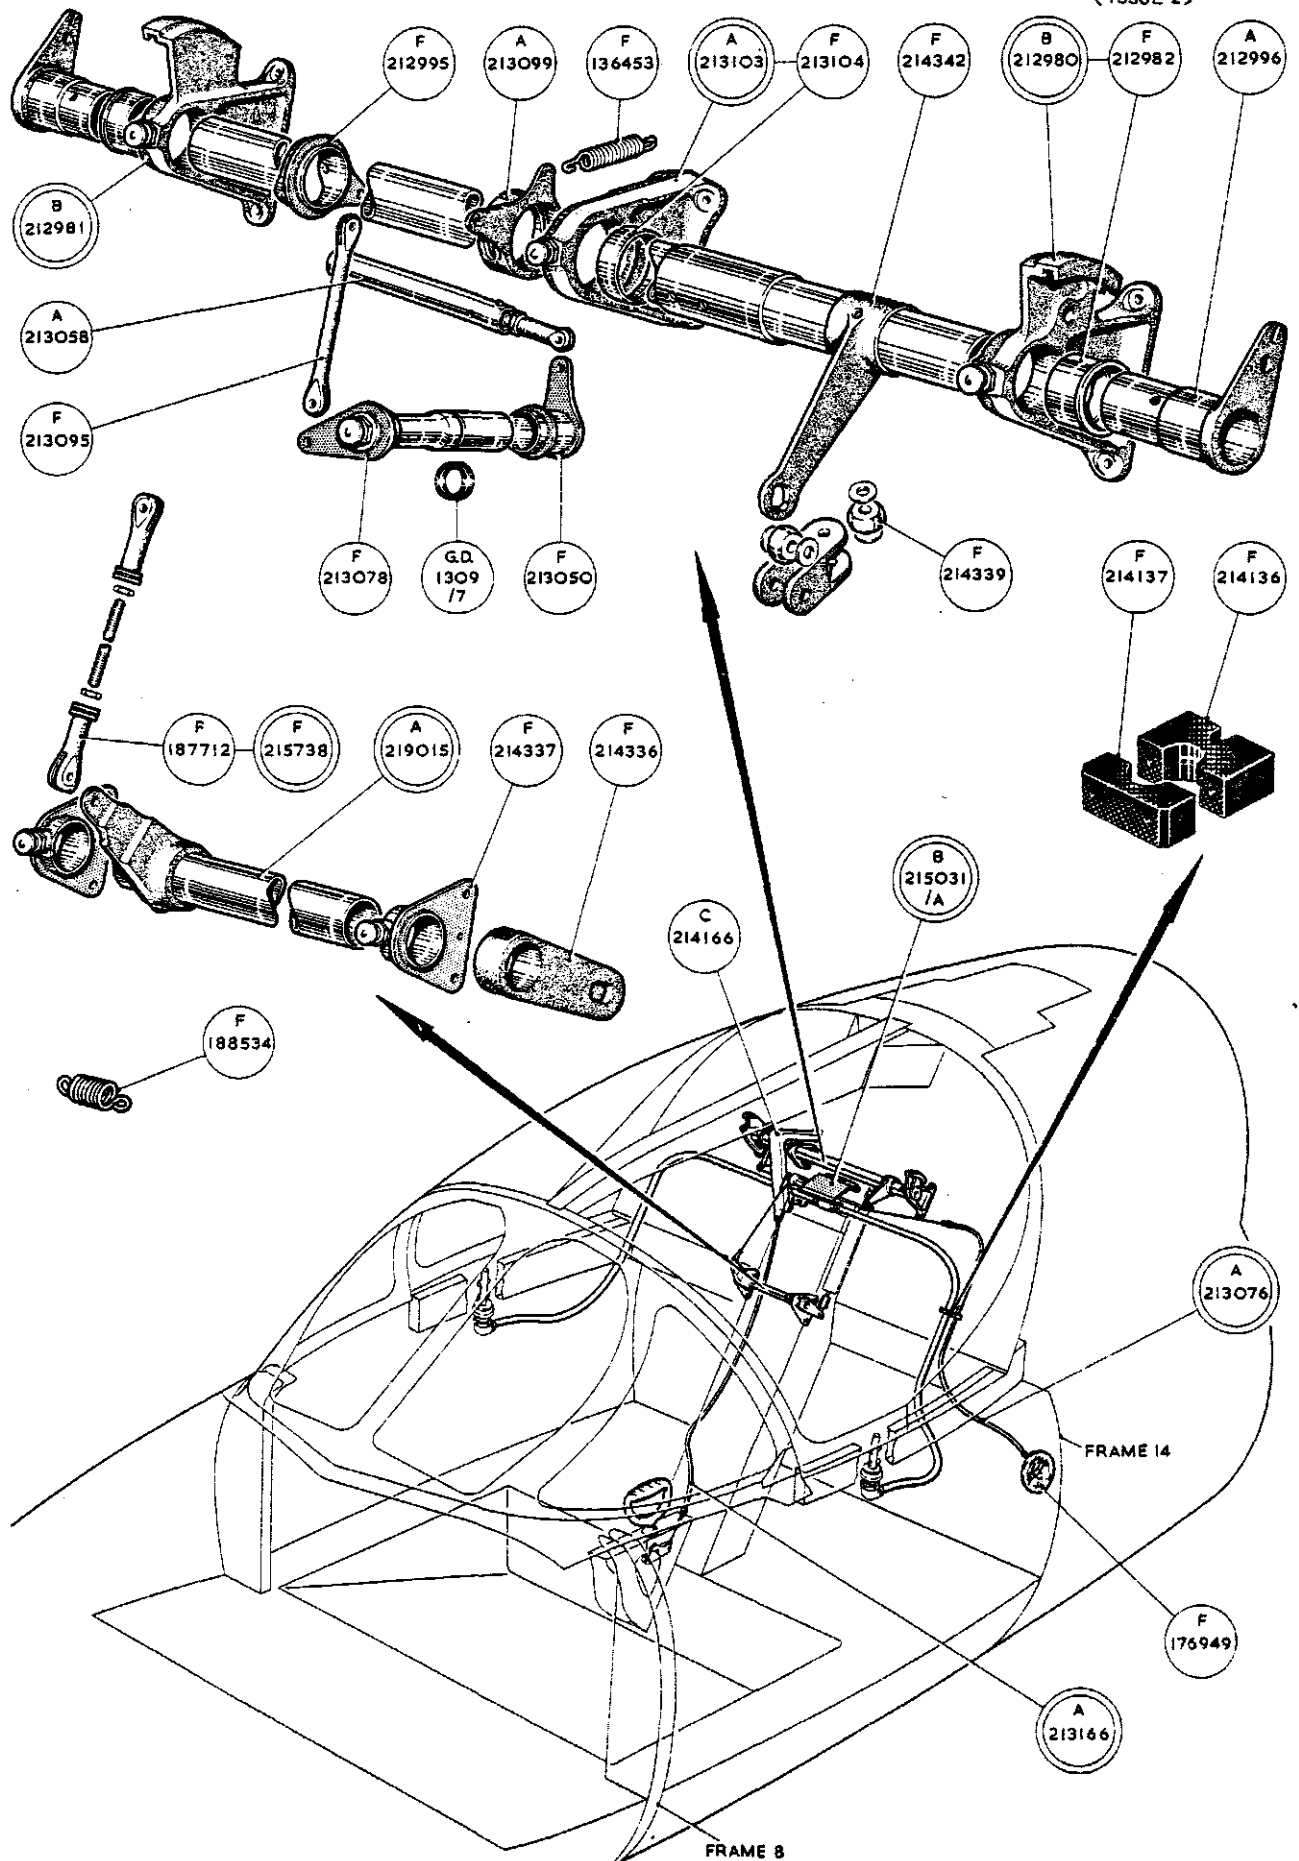

HOOD JETTISON GEAR

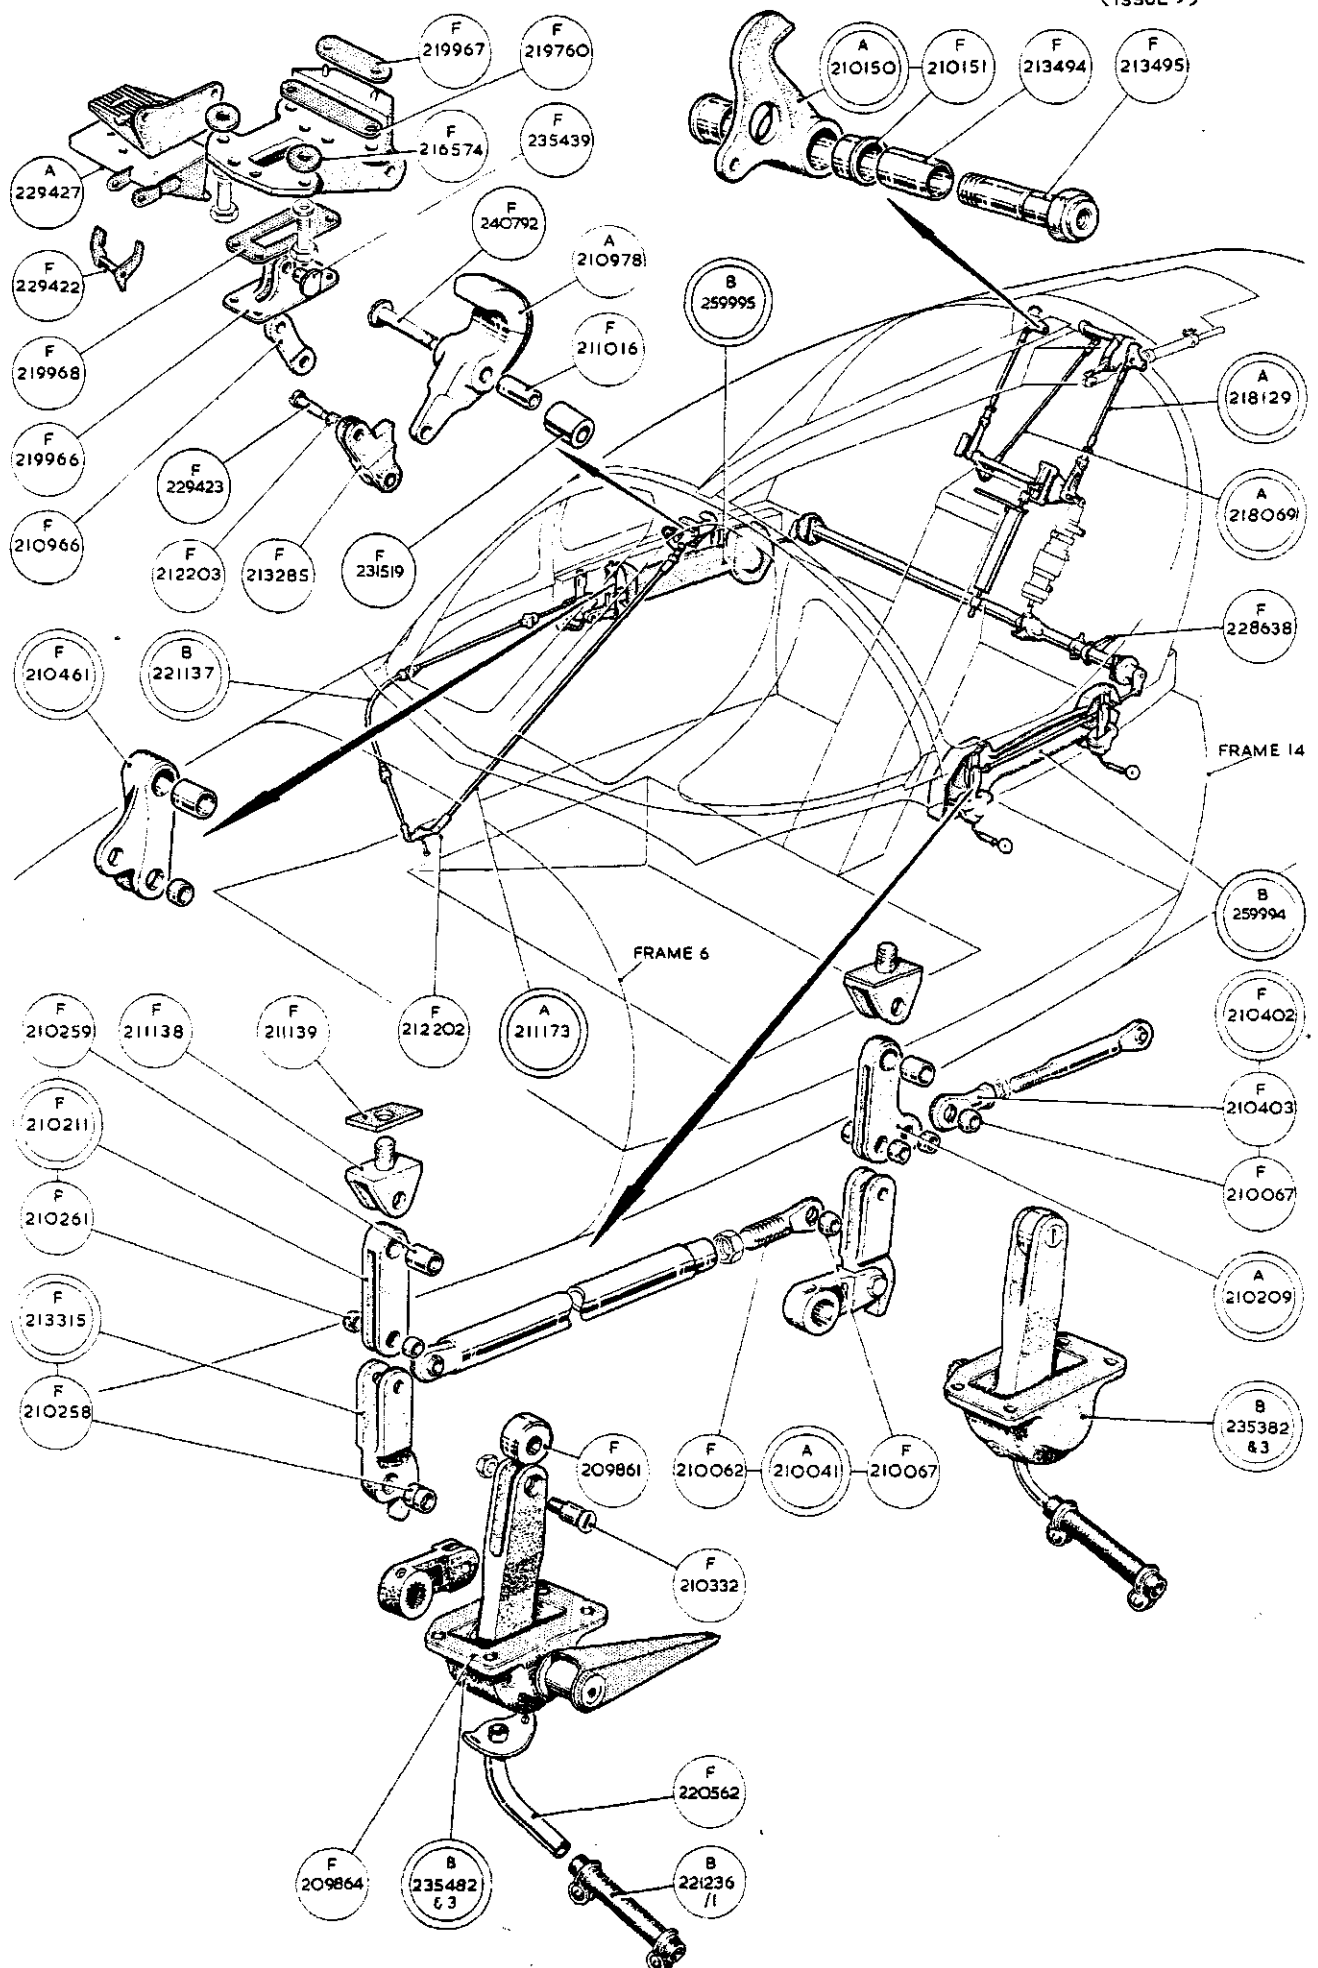

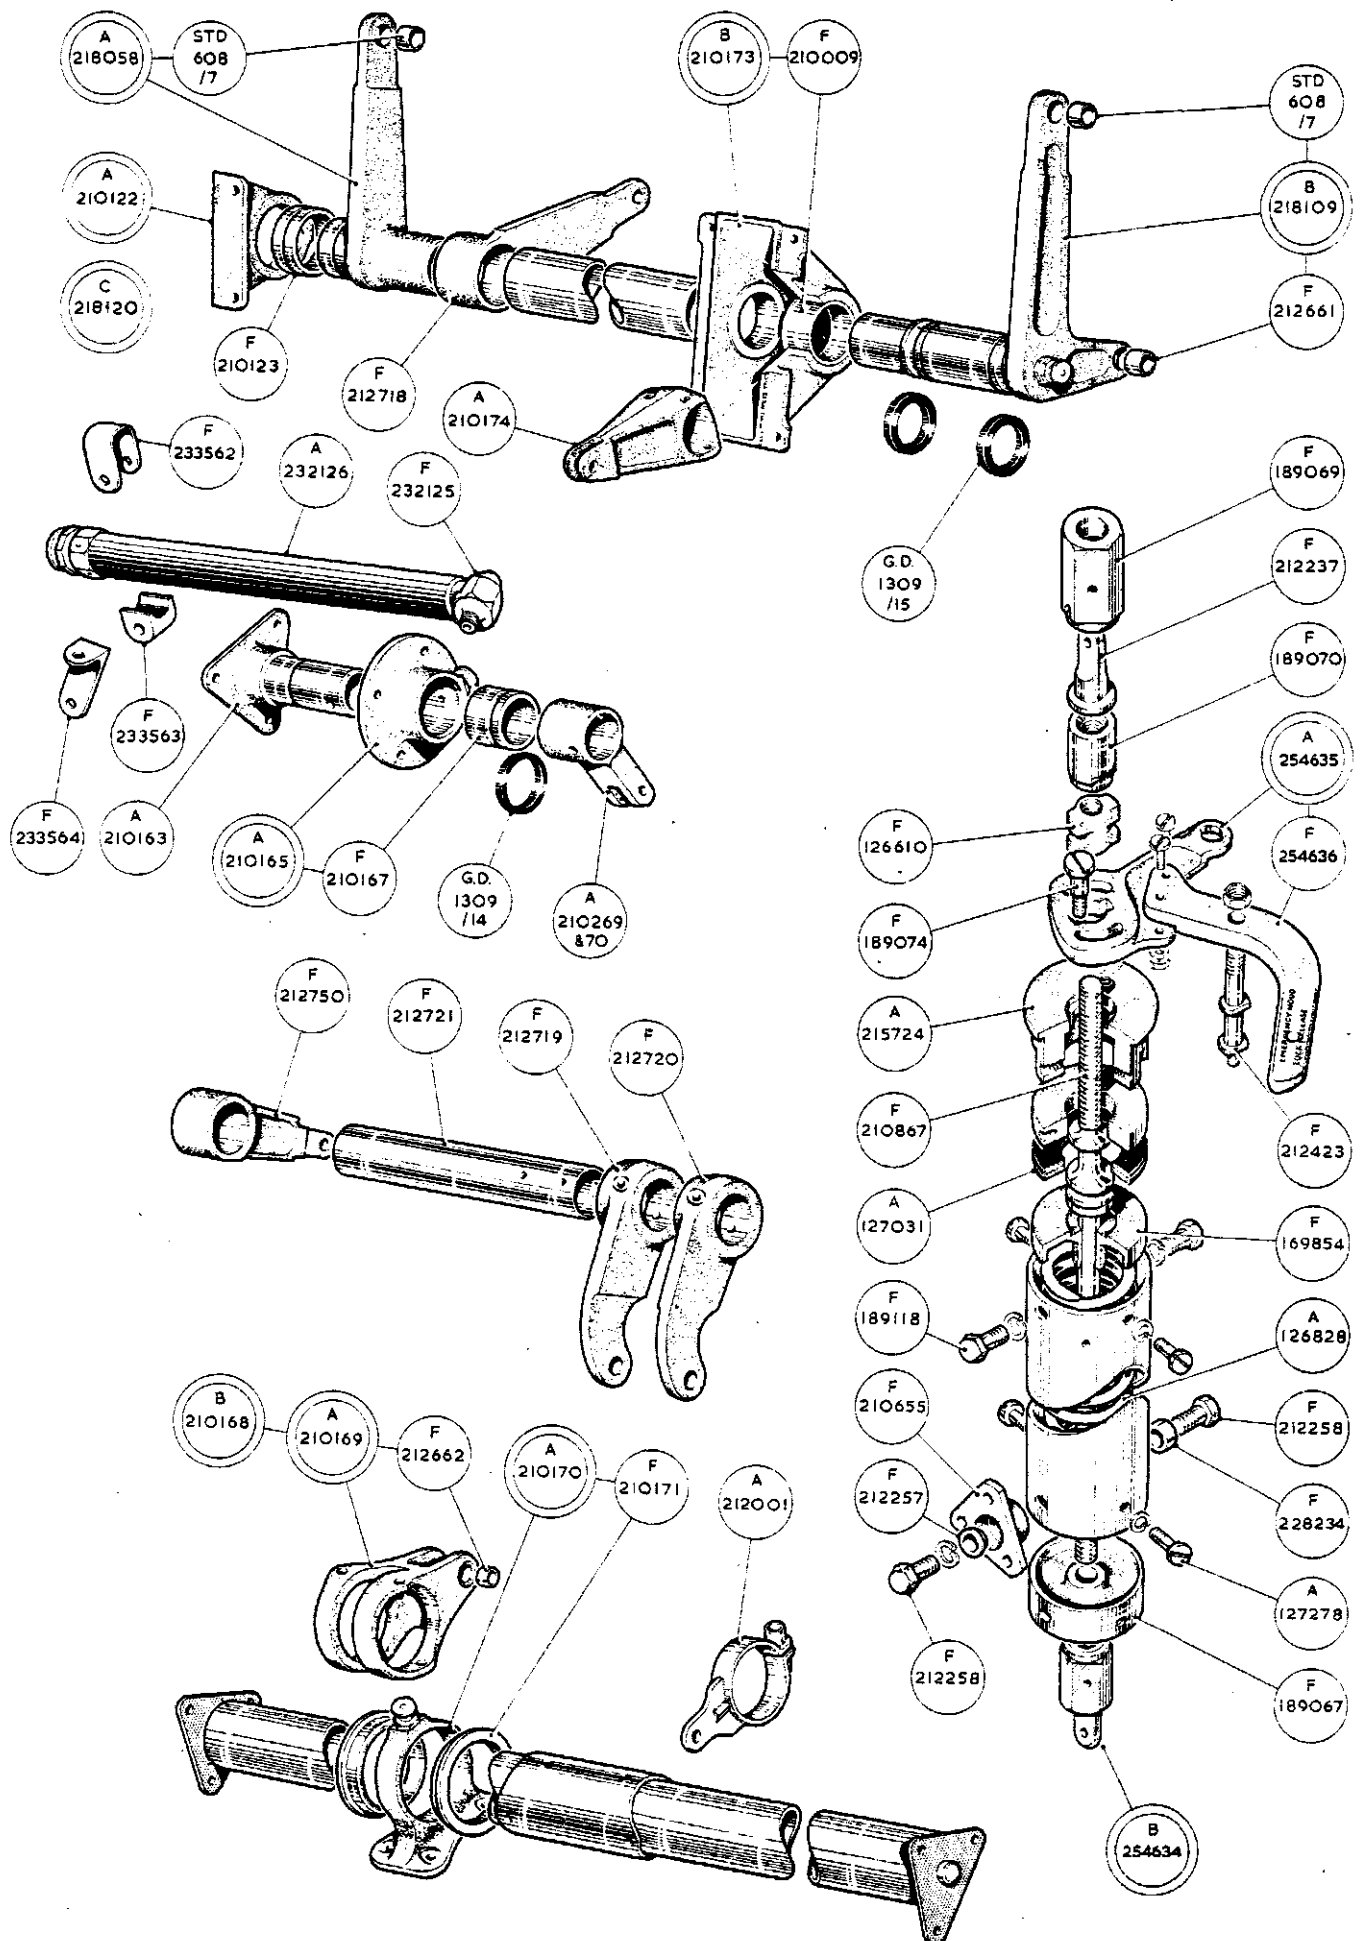

HOOD LOCKING GEAR

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

**TELEBRIEF
CONNECTIONS**

E