


FUSELAGE—HOOD WINDING GEAR

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Place No.
		1 2 3 4 5				
	D.187117	HOOD WINDING GEAR, ASSEMBLY	—	—		
	D.186215	ACTUATOR AND CROSS SHAFT, ASSEMBLY	—	—		
10	5W/4511892	B.186227 Actuator, group	1	—		
	560	Rotax C.5209/1 Actuator, rotary	1	—	A.	
		B.186228 Housing, group	2	—	C.	JF.1
		Torrington Bearing, needle roller	1	—		
	561	B.1012 Bush	2	BSS.369	C.	JF.1
	562	F.186230 Sprocket	1	S.95.B	C.	JF.1
	563	A.186231 Washer, sprocket retaining	1	S.3	C.	JF.1
	5256	F.202895 Bolt, for cross shaft pinion housing	4	S.95.B	C.	JF.1
	11401	AS.924/48P Chain	1	—	C.	
	567	F.169576 Eye-end, tension rod	2	S.1	C.	JF.1
	568	F.186217 Eye-end, tension rod	2	S.1	C.	JF.1
	569	A.186224 Housing, cross shaft pinion, group	2	—	C.	JF.1
	570	F.186225 Bearing	1	BSS.369	C.	JF.1
	571	F.186226 Bearing	1	BSS.369	C.	JF.1
	573	F.186219 Pinion, cross shaft	2	S.95.B	C.	JF.1
	1503	F.189478 Rod, tension, for actuator	2	S.95.B	C.	JF.1
	575	F.186218 Shim, cross shaft housing	QR	Laminated Brass	C.	JF.1
	5252	B.202856 Shaft, cross, group	1	—	B.	JF.1
	564	F.188564 Block, bearing	1	Stamping	C.	JF.1
	4001	Std.1292/9C Bolt, attaching plug end	2	S.2		4
	565	Std.1292//8C Bolt, attaching plug end	2	S.2	C.	4
	1564	Std.1292/10C Bolt, attaching sprocket	2	S.2	C.	4
10	27QA/4534535	Dowty Seal "O"	2	—	C.	JF.1
		GD.1309/6				
10	27QA/4534537	Dowty Seal, "O"	2	—	C.	JF.1
		GD.1309/9				
	577	F.186865 Sprocket	1	S.95.B	C.	JF.1
	3808	Std.1509/23/040 Tube, distance	1	T.4	C.	4
	2192	Std.915/C/14 Washer, 2 B.A.	2	DTD.610	C.	4
	4117	Std.1283/G Washer, shim	3	Laminum	C.	4
	578	Std.1547/50/12 Washer, profile	2	DTD.610	C.	4
	6203	A.211787 Box, control, group (Mod. 376)	1	—	B.	JF.1
	6204	A.211786 Box, actuator control, group (Mod. 376)	1	—	B.	JF.1
		A.211785 Gate, group (Mod. 376)	1	—		
	6206	F.211257 Piece, distance	2	L.65.C.	C.	JF.1
	6205	F.211244 Spring, leaf	1	DTD.166	C.	JF.1
10	555	F.188527 Knob, lever	1	BSS.771	C.	JF.1
				or Rilsan		
10	554	A.188524 Lever	1	S.510	C.	JF.1
	559	A.188987 Cable, control box to bell crank lever, group	1	—	B.	JF.1
		Consisting of:—				
	Std.1920	Adjuster, complete with sleeve and nut	1	—		5
10	28X/9511235	— Cable, 5 cwt.	QR	W.11	C.	
	29H/	Bowden T.3 Conduit	QR	—	C.	
10	28U/7135303	SP.37.A Eye-end	1	—	C.	
10	28U/1204114	SP.38.A Fork-end	1	—	C.	

FUSELAGE—HOOD WINDING GEAR

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Score	Place No.
		1	2	3	4	5				
10	5K/1200718	SP.40.B.14			Grommet		2	—	C.	
		F.178859			Plug		1	L.168		
	29H/1902	Bowden PN.999			Stop		1	—	C.	
	585	A.188529			Switch, hood actuator, group		1	—	A.	JF.1
	2374	B.191749			Cable, F.40, group (See Cable Chart)		1	—	MR/B	JF.1
10	586	F.188532			Lever		1	S.61 or S.80	C.	JF.1
10	587	F.188531			Lever		1	S.61 or S.80	C.	JF.1
	588	F.188533			Link		1	S.3	C.	JF.1
	589	Mills, GP.5			Pin, grooved		2	M.S.	C.	JF.1
	5F/	Hellermann			Sleeve, P.V.C., .6" long		1	1738	C.	
		P.9 Grey						Type B		
	590	F.188534			Spring		1	Sp. St.	C.	JF.1
10	5CW/1047696	—			Switch		1	—	B.	
10	5CW/4405550	—			Transfer, "Open"		1	—	C.	
10	5CW/4405551	—			Transfer, "Shut"		1	—	C.	
		Std.1509/12/064			Tube, distance, 1/4 o/d x 20 S.W.G. x .52"		4	T.4		4
					long					
		Std.1509/3/022			Tube, distance		2	—		4
	556	A.188986			Cable, bell crank lever to actuator, group		1	—	B.	JF.1
					Consisting of:—					
	Std.1920				Adjuster, complete with sleeve and nut		2	—		5
10	28X/9511235	—			Cable, 5 cwt.		QR	W.11	C.	
	29H/	Bowden T.3			Conduit		QR	—	C.	
10	28U/1204114	SP.38.A			Fork-end		1	—	C.	
	557	F.171912			Nipple		1	BSS.250	C.	
10	28M/1007403	A27.ET			Nut, 1/4" B.S.F.		1	—	C.	
		F.172899			Pin, taper		1	M.S.		
		F.189131			Plate, stop		1	DTD.610		
	1563	F.191834			Spring		1	Sp. St.	C.	JF.1
10		F.190950			Stop		1	L.168		
		F.214243			Cover, pulley, at frame 14		1	—		
		F.214244			Cover, pulley, at frame 14		1	—		
	579	F.188317			Lever, front limit switch		1	S.80	C.	JF.1
	580	F.188316			Plunger, front limit switch		1	S.1	C.	JF.1
	6207	F.210854			Plunger, rear limit switch, group (Mod. 377)		1	—	C.	JF.1
		F.187272			Plunger		1	S.80.B		JF.1
		F.187273			Spring		1	Sp. St.		JF.1
	582	F.182857			Ring "D", cable locking at actuator		1	Sp. St.	C.	JF.1
	583	F.188318			Screw, front limit switch		1	S.95.B	C.	JF.1
	584	F.188319			Spring, torsion, front limit switch		—	Sp. St.	C.	JF.1
	3784	Std.1507/4/036			Tube, distance		1	T.35	C.	4

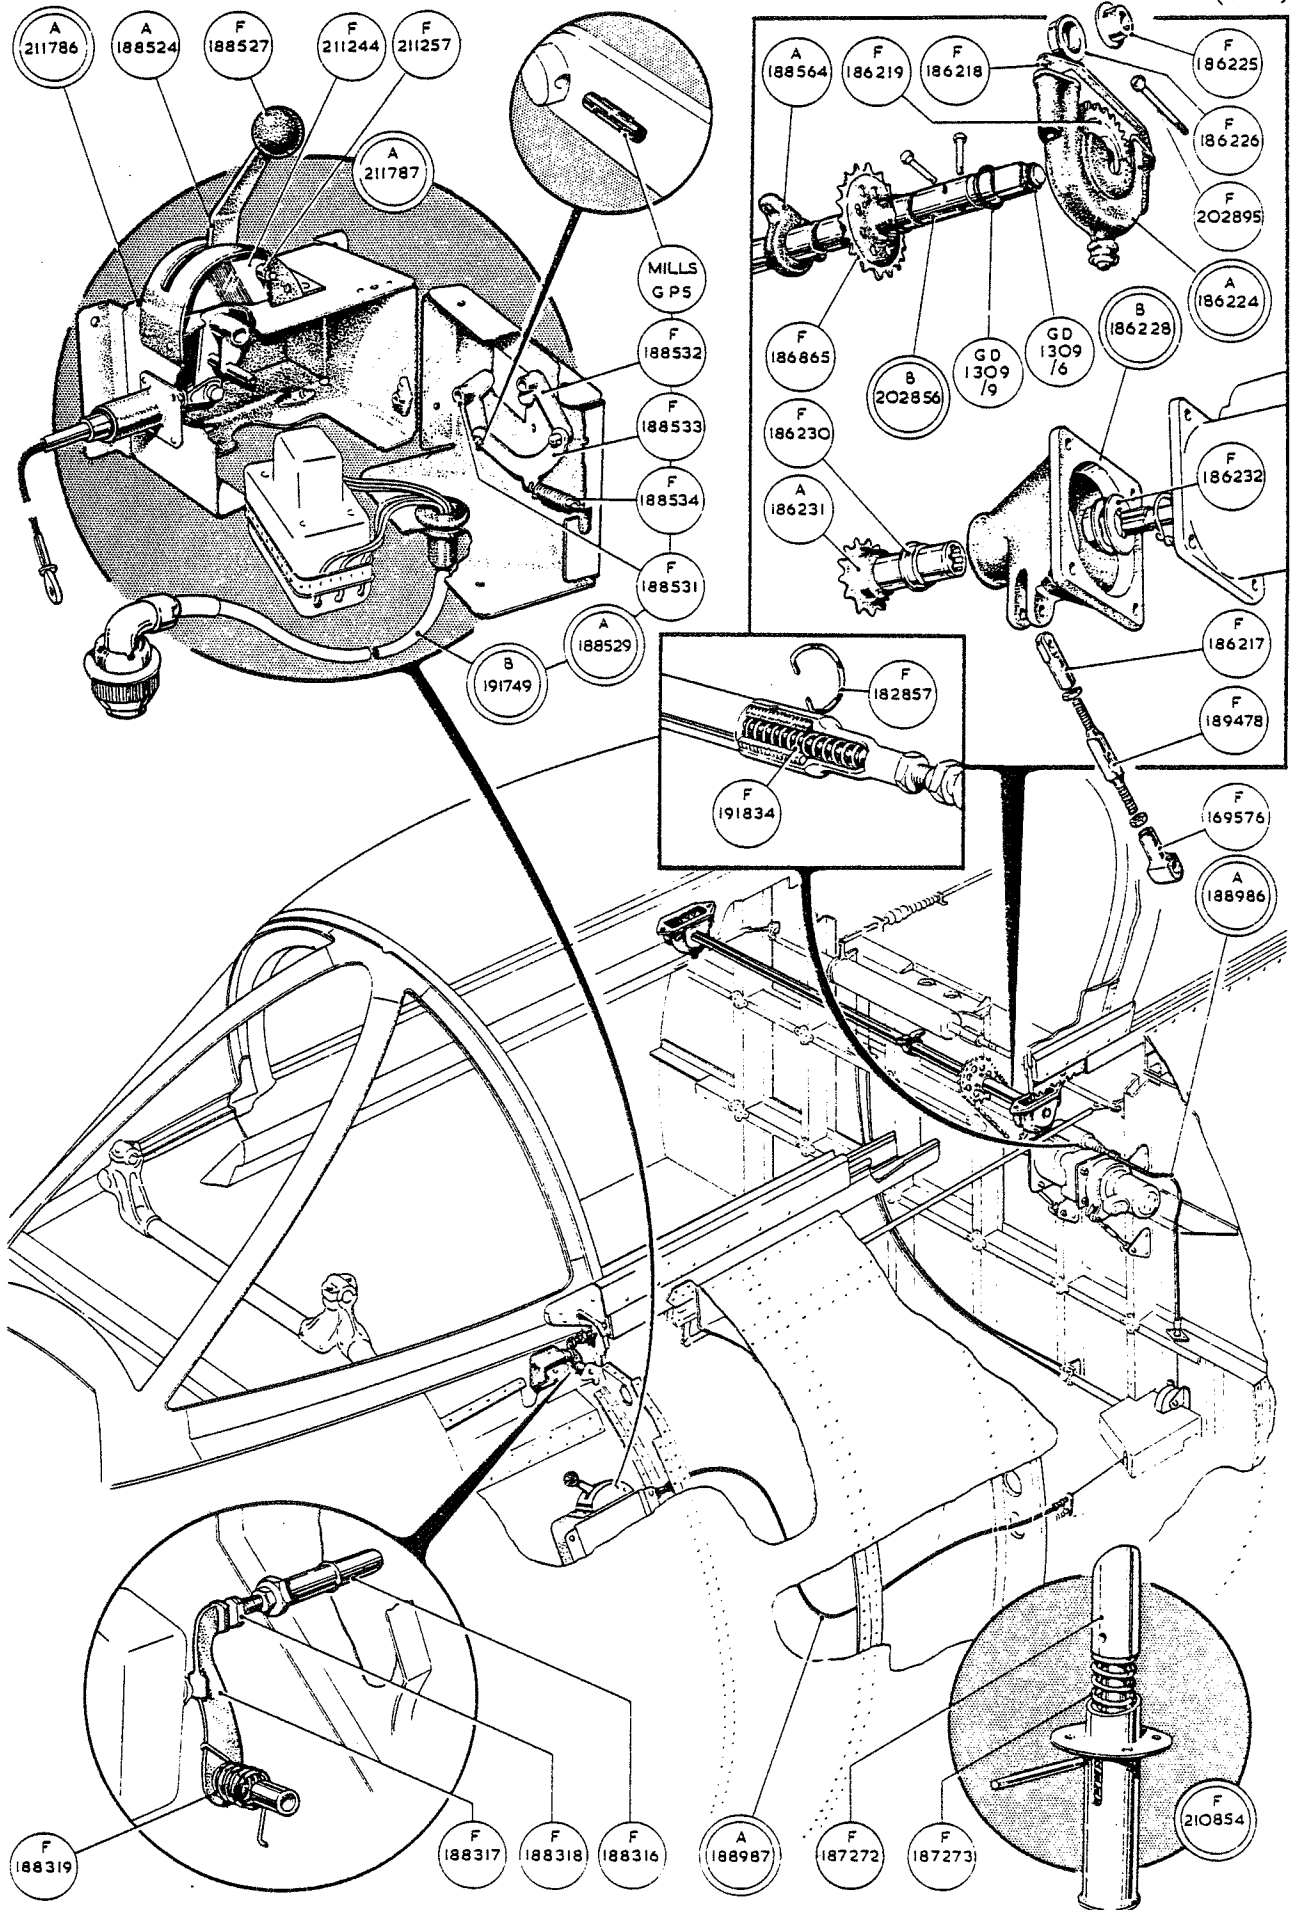



This file was downloaded
from the RTFM Library.
Link: www.scottbouch.com/rtfm
Please see site for usage terms,
and more aircraft documents.