

VULCAN Mk. 2

ELECTRICAL INSTALLATION

Page FF. 1

CONSOLE, STARBOARD, IN CREW'S NACELLE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
					M.R.	
		1 2 3 4				
		CONSOLE AND MOUNTING, STARBOARD, IN CREW'S NACELLE (V9043) Spares for:—				
	3V8522	BAR, COUPLING, PRESSURE HEAD	1	—		FF1/1
5CW/4222	ZA2401/1	HEATER SWITCHES, GROUP	1	—	C	FF1/2
	DOWTY	Guard	1	—		
5CZ/4337458	C5175Y MK55	Indicator (Mod. 1942)	3	—	C	FF1/3
	1V10810	LOOM, CABLE, GROUP	1	—		
		PANEL, FLIGHT REFUELLING RECEIVER	—	—		FF1/4
		(1V11896) (Mod. 1430) Spares for:—				
	FLIGHT REFUELLING	Indicator, refuelling	1	—	A	FF1/5
5CX/4330367	C4507000/21	Indicator, magnetic	4	—	C	FF1/6
5CZ/4340430	—	Label, "OFF"	1	—	MR	
13495	359SS6001	Label, master switch	1	L59	C	
	758SS6002	Label, flight refuelling panel	1	L59		
	824SS6002	Label, tank pressurisation	1	L59		
	883SS6004	Label, probe lighting	1	L59		
	307SS6005	Label, "ON"	2	—		
	225SS6006	Label, nitrogen purge	1	L59		
	638SS6030	Label, tank pressure indicator	1	L59		
	639SS6030	Label, "ON"	1	L59		
	657SS6030	LOOM, CABLE, GROUP (Pre-Mod. 2255)	1	—		
	1V11898	LOOM, CABLE, GROUP (Mod. 2255)	1	—		
	1V15487	MOUNTING, PLUG, GROUP	1	—		FF1/7
	3V11896	PANEL, LESSEQUIPMENT, GROUP	1	—		
	2V11896	Spares for:—				
28FP/9507911	A4/50	Fastener	4	—	C	
28FP/9430915	GA4/250	Grommet	4	—	C	
	6V7461	Plate, plug	1	—		FF1/8
	A.E.I.	Switch, nitrogen purge	1	—	C	FF1/9
5CW/4408361	LHA1/BG/205/D1	Switch, tank pressurisation	1	—	C	FF1/10
	A.E.I.	Switch, dimmer	2	—	C	FF1/11
5CW/1082936	LHA1/BG/205	Switch, master	2	—	C	FF1/12
5CW/4405520	—	Strap, master switches	2	DTD364B		
5CW/1047693	—			DTD130		
	—					
28W/1097257	BARBER & COLMAN 1906/1	Washer, locking	8	—	C	

ELECTRICAL INSTALLATION
CONSOLE, STARBOARD, IN CREW'S NACELLE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of St.	Plate and Illust'n No.
					M.R.	
		1 2 3 4				
		CONSOLE AND MOUNTING, STARBOARD, IN CREW'S NACELLE (V9043) (Cont'd.)				
		PANEL, HEATING AND VENTILATING CONTROL (C9051)	—	—		FF1/13
		Spares for:—				
6A/3823	—	Clamp, at pressure gauge	1	—	C	FF1/14
6A/6173	S149/1/55	Gauge, pressure	1	—		FF1/15
5CW/4222	ZA2401/1	Guard, switch	2	—	C	FF1/16
6A/4333494	SMITH'S 422/FL	Indicator, ram air valve	1	—		FF1/17
6A/3931	SMITH'S 423/FL	Indicator, temperature control	1	—		FF1/18
5CZ/4335793	DOWTY C5175Y.MK58	Indicator	1	—	C	FF1/19
5CZ/5073	—	Indicator, dolls-eye	1	—	C	FF1/20
	1V11789	LOOM, CABLE, GROUP (Mod. 1508)	1	—		
	5V9051	PANEL, LESS EQUIPMENT, GROUP	1	—		
		Spares for:—				
28FP/9507911	A4/50	Fastener	4	—	C	
28FP/9430915	GA4/250	Grommet	4	—	C	
5CW/4405759	ROTAX N136931	Plate, fixing, reset switch	1	—	C	FF1/21
	8SS4624	Plate, fixing	6	—		FF1/22
	12SS4624	Plate, fixing	2	—		FF1/23
	13SS4624	Plate, fixing	1	—		FF1/24
	9SS4625	Plate, fixing	6	—		FF1/25
	13SS4625	Plate, fixing	2	—		FF1/26
5CZ/4335548	TEDDINGTON'S FHK/A7	Selector, temperature	1	—	A	FF1/27
5CW/4405758	ROTAX N136930	Shroud, switch	9	—	C	FF1/28
5CW/4402830	—	Switch, 3 way auto-manual	1	—	B	FF1/29
5CW/4407828	—	Switch	1	—	B	FF1/30
5CW/4400325	DOWTY C5148.MK5	Switch, lever	1	—	A	FF1/31
5CW/6209279	—	Switch, open-shut	3	—	C	FF1/32
5CW/1047695	—	Switch, reset	1	—	C	FF1/33
5CW/6209280	—	Switch, engine air	4	—	C	FF1/34
5CW/4405072	B.T.H. LTD. X2251569	Switch, dimmer	1	—	A	FF1/35
28W/1097257	BARBER & COLMAN 1906/1	Washer, locking	22	—	C	

ELECTRICAL INSTALLATION
CONSOLE, STARBOARD, IN CREW'S NACELLE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of	Plate and Illust'n No.
					St. M.R.	
			1	2	3	4
		CONSOLE AND MOUNTING, STARBOARD IN CREW'S NACELLE (V9043) (Cont'd)				
		PANEL, THERMO, ANTI-ICING CONTROL ... (V9044) (Mod. 1092)				FF1/36
		Spares for:				
5CW/4222	ZA2401/1 SANGAMO WESTON S63/4/482	Guard, switch	2		C	FF1/37
		Indicator, temperature	3			FF1/38
	1V10950	LOOM, CABLE, GROUP	1			
10641	4V7608	PANEL, LESS EQUIPMENT, GROUP	1			
	2SS4491	Plate, fixing	3			FF1/39
	2SS4492	Plate, fixing	3			FF1/40
	14SS4624	Plate, fixing	3			FF1/41
	14SS4625	Plate, fixing	3			FF1/42
	ROTAX					
5CW/4405756	N135530 ROTAX	Shroud, auto-manual switches	3		C	FF1/43
	5CW/4405758	Shroud, bottom switches	3		C	FF1/44
5CW/4407828	—	Switches, single pole	3		B	FF1/45
5CW/1047696	—	Switches, double pole	3		C	FF1/46
5CW/6209280	—	Switch	2		C	FF1/47
	BARBER & COLMAN					
28W/1097257	1906/1	Washer, locking	30		C	
	3SS4491	Plate, fixing	2			FF1/48
	4SS4492	Plate, fixing	2			FF1/49
	4SS4491	Plate, fixing	1			FF1/50
	5SS4492	Plate, fixing	1			FF1/51
	8SS4624	Plate, fixing	1			FF1/52
	8SS4625	Plate, fixing	1			FF1/53
	11SS4624	Plate, fixing	1			FF1/54
	12SS4625	Plate, fixing	1			FF1/55
	ROTAX					
5CW/4405759	N136931	Plate, fixing	5		C	FF1/56


ELECTRICAL INSTALLATION
CONSOLE, STARBOARD, IN CREW'S NACELLE

Ref. No.	Part No.	Description	No. off	Macl. Spec.	Cl. of St.	Plate and Illust'n No.
					M.R.	
		1 2 3 4				
CONSOLE AND MOUNTING, STARBOARD IN CREW'S NACELLE (V9043) (Cont'd.)						
6D/2383	MK21B	Regulator, oxygen	1	--	A	FF1/57
6D/2671	MK17F	Regulator, oxygen (Mod. 1961 S.O.O.)	1	--	A	FF1/58
5CZ/4337688	PLESSEY 7CZ/107201	Selector, temperature	1	--	A	FF1/59
5CW/4405758	ROTAX N136930	Shroud, heater and lights switches	6	--	C	FF1/60
5CW/4405756	ROTAX N135530	Shroud, landing lights	3	--	C	FF1/61
5CW/6209279	--	Switch	2	--	C	FF1/62
5CW/6209280	--	Switch, external light and heaters	3	--	C	FF1/63
5CW/1047696	--	Switch, navigation light	1	--	C	FF1/64
5CW/1047691	--	Switch, I/D light	1	--	B	FF1/65
5CW/4402872	--	Switch, landing lights	2	--	B	FF1/66
5CW/1047692	--	Switch, test throttle	1	--	C	FF1/67
27KD/4631315	NORMALAIR 513390	Valve, manual control	1	--	B	FF1/68

VULCAN Mk. 2

**ELECTRICAL INSTALLATION
SUMMARY OF STANDARD ITEMS**

Stores Ref.		No. off	Stores Ref.		No. off	Stores Ref.		No. off
Section	Ref. No.		Section	Ref. No.		Section	Ref. No.	
28D	9436920	8	28S	1011484	6			
28D	1007980	2	28S	1008327	7			
28D	9128739	8	28S	1011490	5			
28D	1007982	6	28S	1200058	2			
			28S	1214163	74			
			28S	9145185	4			
			28S	1214165	5			
			28S	1013430	12			
28FP	151	12	28S	1214166	1			
28FP	9430915	12	28S	9473255	2			
			28W	9419454	17			
			28W	9419465	7			
28M	9995181	4	28W	9419473	6			
28M	10286	6	28W	9419475	2			
28M	10287	8	28W	9419185	4			
28M	10288	10	28W	1206041	4			
28M	10281	2						
28M	10328	2						
28M	9434253	3						
28M	11957	11						
28M	9434252	4						

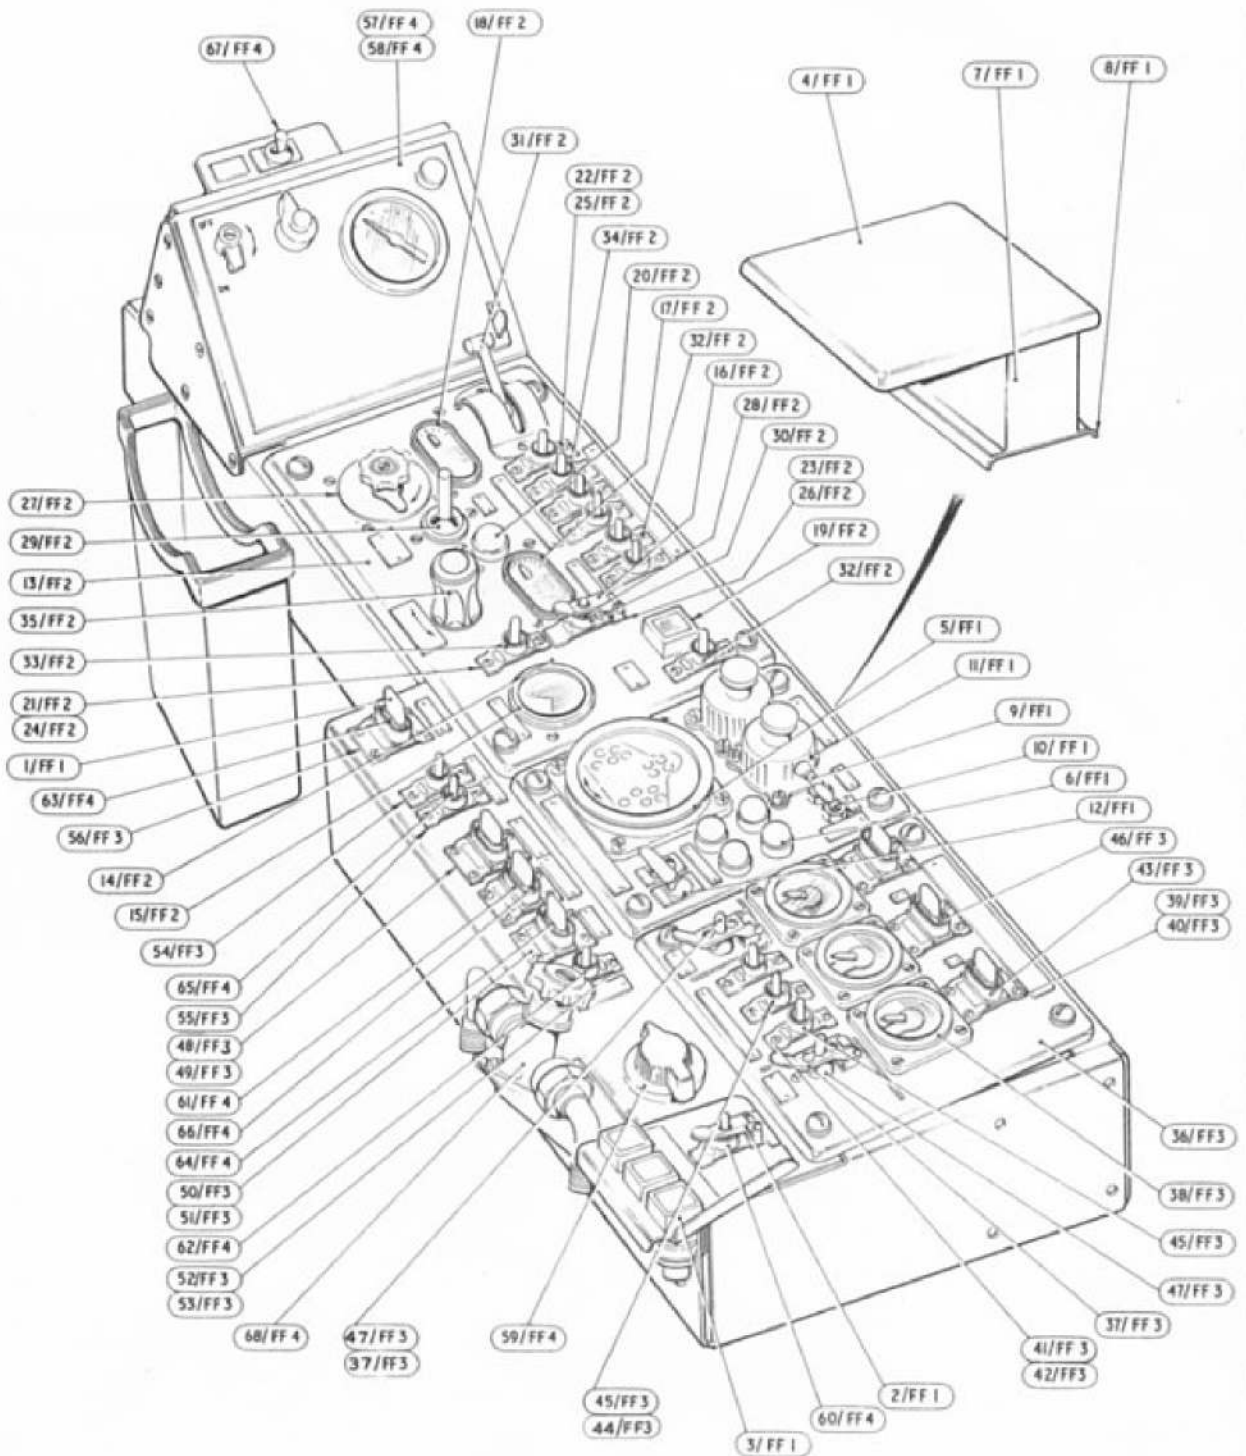

CONSOLE AND MOUNTING
STARBOARD IN CREW'S NACELLE

(1)

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

