

Chapter 31

INSTRUMENTS

31-1	PANELS AND INSTRUMENTATION	Fig.
-1	PANELS	-
	Centre Roof Panel and Mounting	1
	Roof Panels and Mounting (LH and RH)	2
	Flight Panels and Attachments	3
	Flight Panels Support Assembly	4
	Flight Engineer's Top Panels and Mounting	5
	Flight Engineer's Bottom Panel and Mounting	6
	A.A.P.P. Panel and Mounting	7
	Navigator's Main Panel and Mounting	8
	Anti-Vibration Panel and Mounting	9
	Navigator's Side Panel and Mounting	10
-2	INSTRUMENTATION	-
	Instrumentation of Centre Roof Panel	1
	Instrumentation of Roof Panel (RH)	2
	Instrumentation of Centre Flight Panel	3
	Instrumentation of Flight Panel (LH)	4
	Instrumentation of Flight Panel (RH)	5
	Instrumentation of Fixed Panels and LH side Console	6
	Instrumentation of Flight Engineer's Top Panels	7
	Instrumentation of Flight Engineer's Bottom Panel	8
	Instrumentation of A.A.P.P. Panel	9
	Instrumentation of Navigator's Main Panel	10
	Instrumentation of Anti-Vibration Panel	11
	Instrumentation of Navigator's Side Panel	12
31-2	ELECTRICS	-
-1	INSTALLATION-FATIGUE METER AND A.S.I. SWITCH..	-
	Cable Run to A.S.I. Switch and Fatigue Meter	1

RESTRICTED

Argosy C. MK.I.

INSTRUMENTS

PANELS AND INSTRUMENTATION

Subject 1

PANELS AND INSTRUMENTATION


RESTRICTED

RESTRICTED

INSTRUMENTS

PANELS

Argosy C. MK.I.

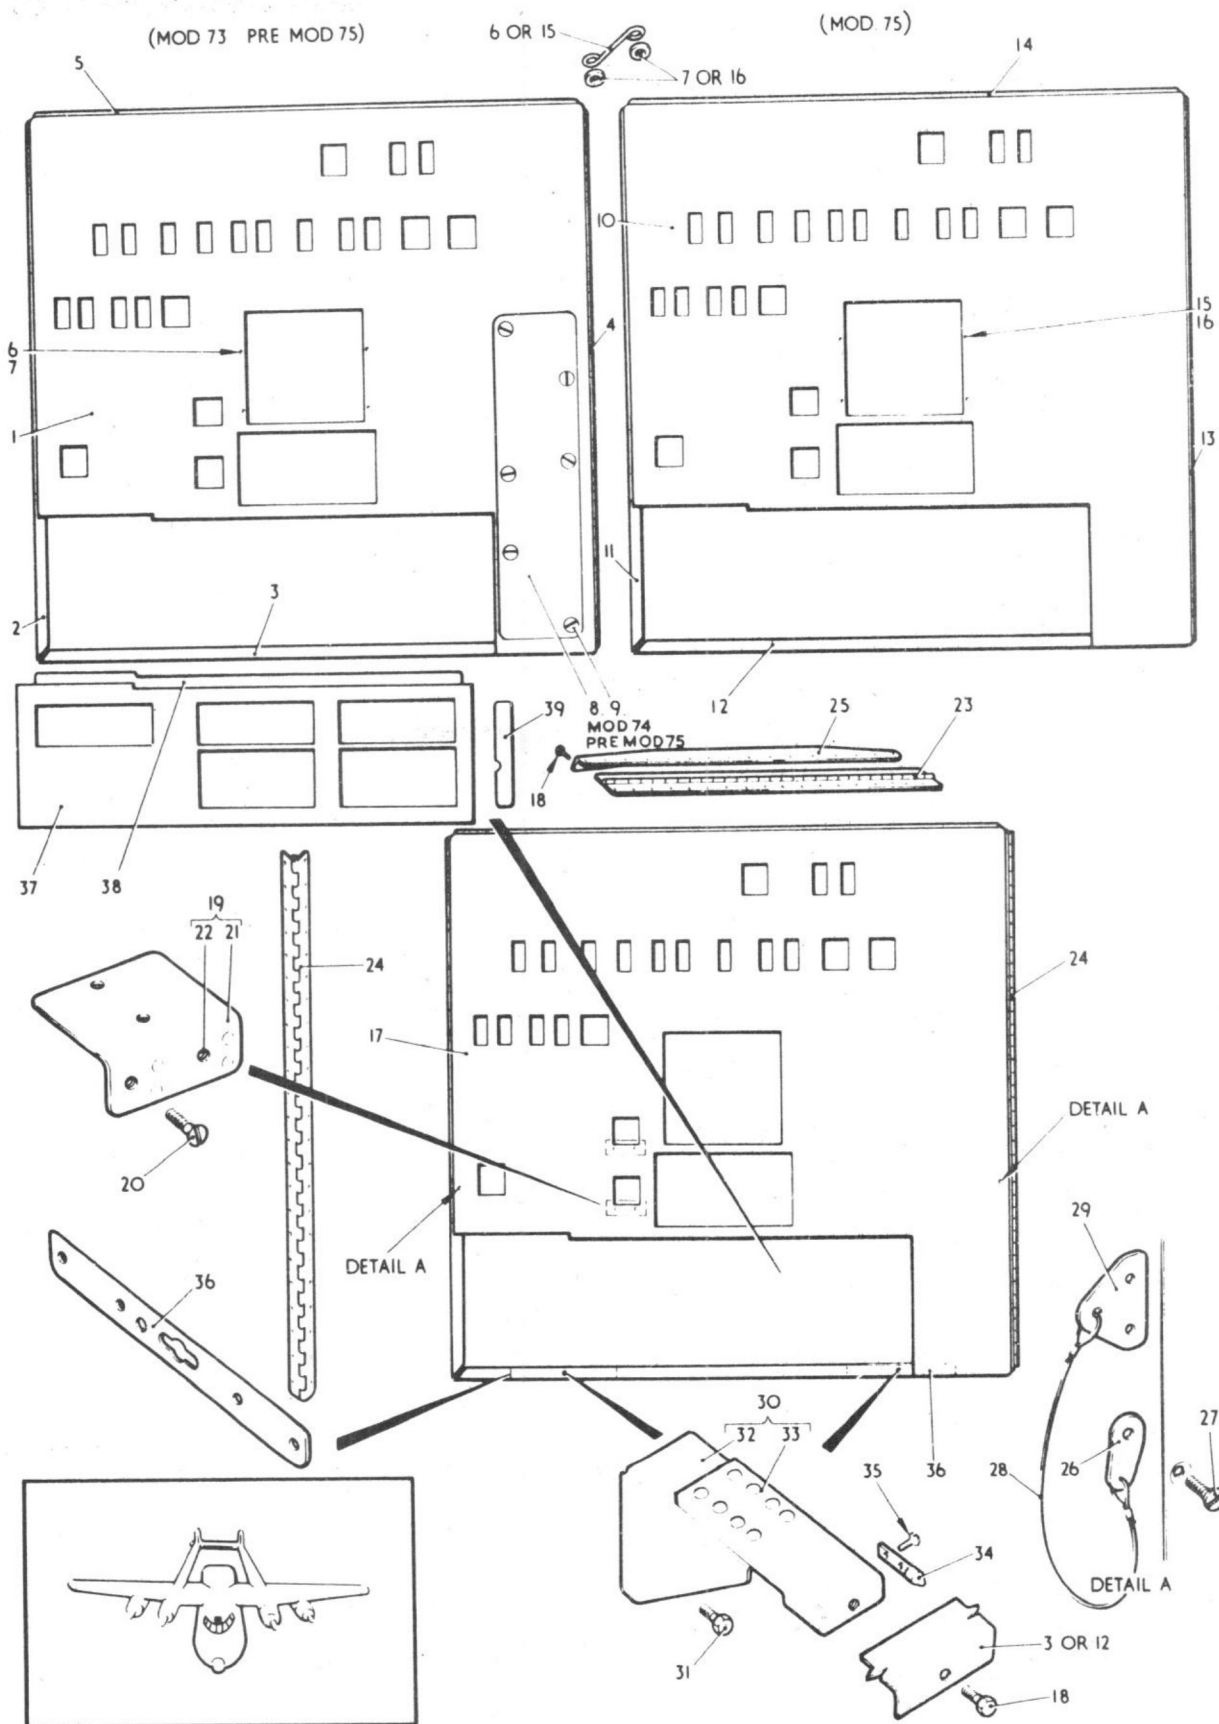

31-1-1

CENTRE ROOF PANEL & MOUNTING

NOVEMBER 1966

PAGE 1

FIGURE 1

A.L.36 TP 27

RESTRICTED

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Qty. Code
			1	2	3	4	5	6				
1-		—	CENTRE ROOF PANEL AND MOUNTING						Ref.			
			(Ref. Drgs. FS.0516 and FS.0671)									
1		FS.0782	Panel Assembly (Mod. 73, Pre Mod. 75)						1			
2		FS.0782/4	Angle						1			
3		FS.0782/6	Angle						1			
4		FS.0782/5	Angle						1			
5		FS.0782/3	Angle						1			
6	28FP/9492814	SX/560	Form, Wire (Dzus)						4		C	
7	28VV/9419446	SP.10/A	Washer						8		C	
8		FS.0516/78	Plate (Mod. 74, Pre Mod. 75)						1			
			ATTACHING PARTS									
9	28DU/9480222	A.113/1D	Bolt, Mush. Hd., No. 10 UNF 2A						6		C	
	28M/9438422	A.125/D	Nut, Stiff, No. 10 UNF 2B						6		C	
			* * *									
10		FS.0835	Panel Assembly (Mod. 75)						1			
11		FS.0835/4	Angle						1			
12		FS.0835/6	Angle						1			
13		FS.0835/5	Angle						1			
14		FS.0835/3	Angle						1			
15	28FP/9492814	SX/560	Form, Wire (Dzus)						4		C	
16	28VV/9419446	SP.10/A	Washer						8		C	
17		FS.0782	Panel Assembly (See Index 1)						Ref.			
		or										
		FS.0835	Panel Assembly (See Index 10)						Ref.			
			ATTACHING PARTS									
18	28DU/9419565	A.102/1D	Bolt, No. 10 UNF 2A						8		C	
	28M/9438422	A.125/D	Nut, Stiff, No. 10 UNF 2B						6		C	
			* * *									
19		CS.0869	Angle Assembly (Mod. 937)						2			
			ATTACHING PARTS									
20	28S/1007469	A.33/B14	Screw, Csk. Hd., 4 BA						2		C	
			* * *									
21		CS.0869/2	Angle						1			
22	28M/9438468	A.157/B	Nut, Anchor, UNC, No. 6 2B						2		C	
23		AS.1878	Hinge (Make from Ref. 28N/9511950 x 15" long)						1			LM
24		AS.1878	Hing (Make from Ref. 28N/9511950 x 21" long)						2			LM
25		DS.0573	Bracket, Mounting						1			
26		FS.0024/40	Lug						2			
			ATTACHING PARTS									
27	28DU/9480269	A.173/1D	Bolt, Csk. Hd., No. 10 UNF 2A						1		C	
	28W/1010519	SP.122/D	Washer, No. 10 UNF						1		C	
	28M/9438422	A.125/D	Nut, Stiff, No. 10 UNF 2B						1		C	
			* * *									
28	32A/1250216	F.32-20Z	Cord, Plaited						A.R.		C	
29		FS.0671/16	Bracket						2			
30	7509	CS.0567/2	Bracket Assembly (RH)						1		C	V
	7508	CS.0567/1	Bracket Assembly (LH) (See Index 30)						1		C	V
			ATTACHING PARTS									
31	28DU/9419565	A.102/1D	Bolt, No. 10 UNF 2A						4		C	
	28M/9438422	A.125/D	Nut, Stiff, No. 10 UNF 2B						4		C	
			* * *									
32		CS.0563	Bracket (LH)						1			
		CS.0564	Bracket (RH) (See Index 32)						1			
33		CS.0562	Block, Mounting (LH & RH)						1			

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Qty. Code
			1	2	3	4	5	6				
1-34		BS.0812							1			
35	28S/9435594	A.204/B12							2		C	
36		BS.0810							1			
		BS.0811							1			
37		DS.0751							1			
38		CS.0748							1			
39		BS.0747							1			


Argosy C. MK.I.

PANELS

November 1966
TP27 AL36

31-1-1
Page 4

RESTRICTED

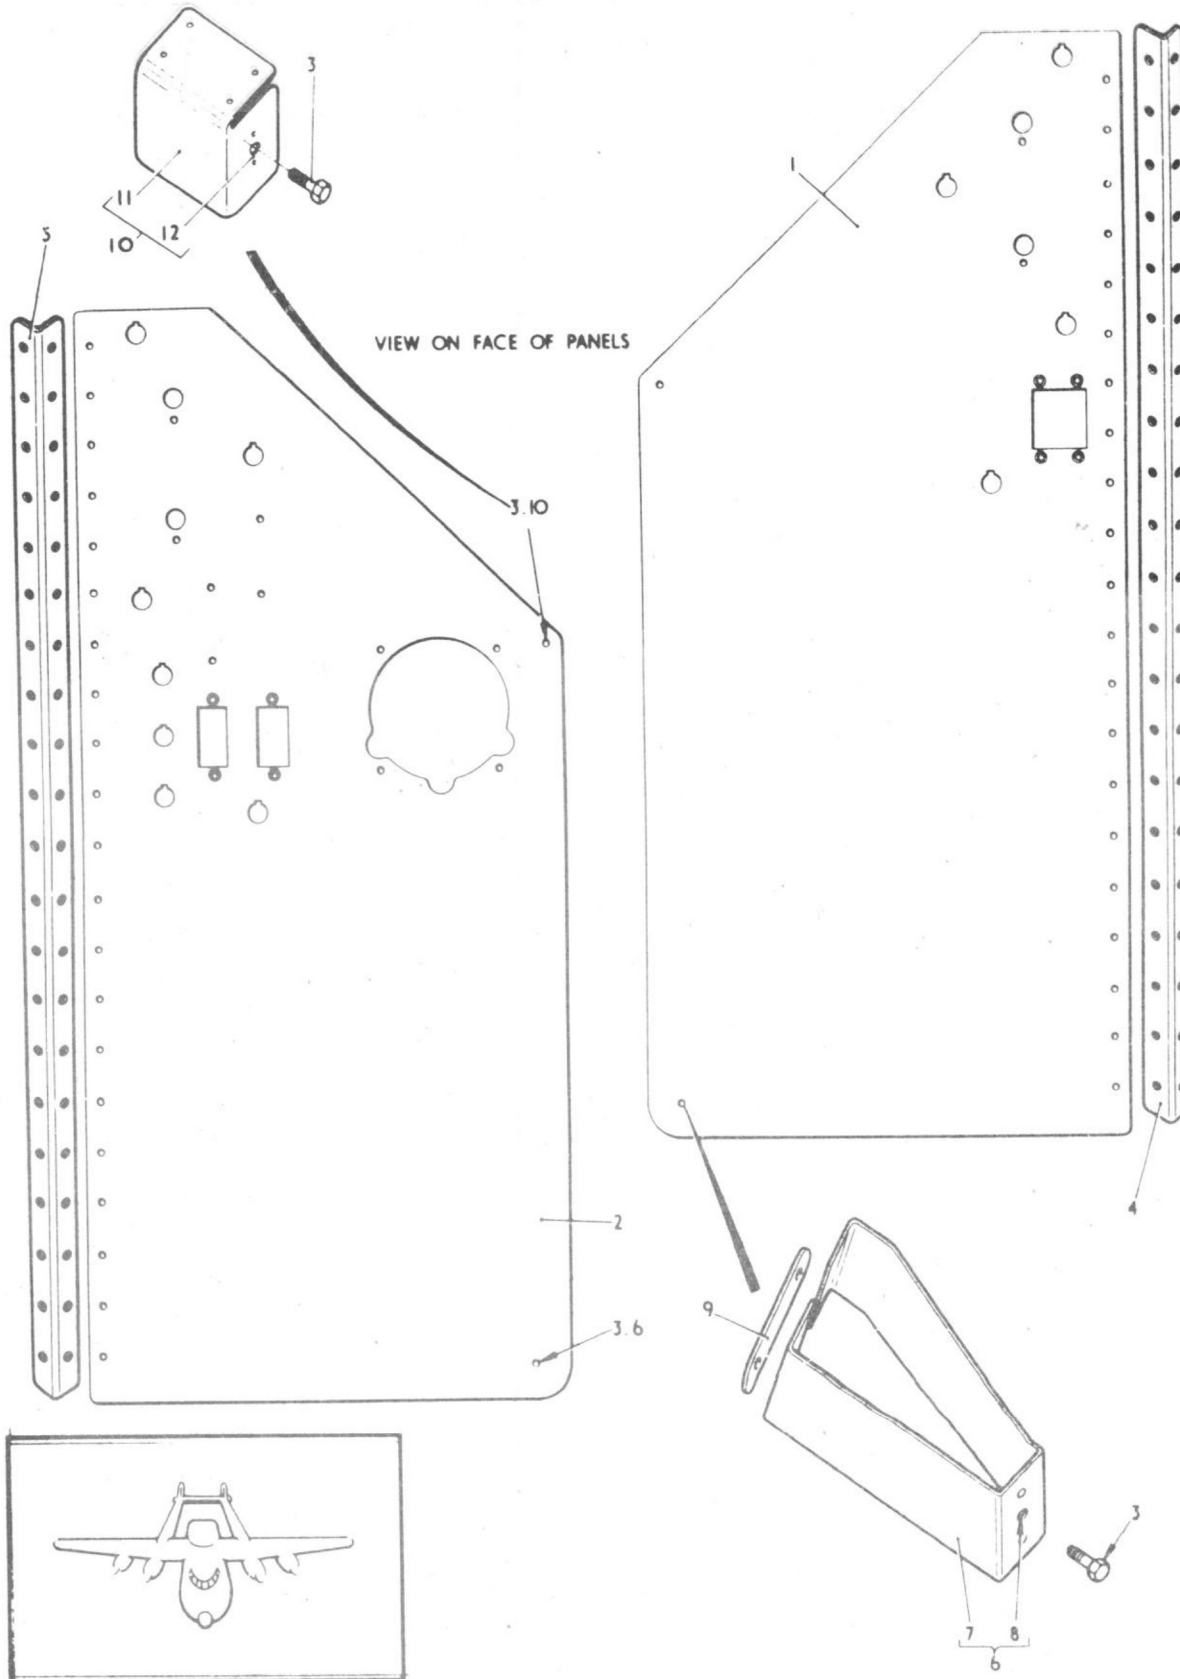
Argosy C MK.I.

RESTRICTED

Argosy C. MK.I.

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Key Code
			1	2	3	4	5	6				
2-			ROOF PANELS AND MOUNTING (LH and RH)						Ref.			
			(Ref. Drgs. FS.0517, FS.0518, FS.0671)									
1		FS.0549	Panel Assembly (LH)						1			
2		FS.0548	Panel Assembly (RH) (Pre Mod. 6) (See 31-1-2, Fig. 2)						1			
		FS.0743	Panel Assembly (RH) (Mod. 6) (See 31-1-2, Fig. 2)						1			
			ATTACHING PARTS (For Indices 1 or 2)									
3	28DU 9419565	A.102 1D	Bolt, No. 10 UNF 2A						2		C	
4		FS.0549 5	ND	Angle (LH)					1			
5		FS.0548 5	ND	Angle (RH)					1			
6	4762	CS.0639 1		Bracket Assembly, Mounting (LH)					1		B	
	4763	CS.0639 2		Bracket Assembly, Mounting (RH) (See Index 6)					1		B	
7		CS.0639 9	ND	Bracket (LH)					1			
		CS.0639 10	ND	Bracket (RH) (See Index 7)					1			
8	28M.9438446	A.136 D		Nut, Anchor, No. 10 UNF 2B					1		C	
9		FS.0671 15	ND	Piece, Packing					1			
10	4760	CS.0638 2		Bracket Assembly (LH)					1		B	VY
	4761	CS.0638 1		Bracket Assembly (RH) (See Index 10)					1		B	VY
11		CS.0638 4	ND	Bracket (LH)					1			
		CS.0638 3	ND	Bracket (RH) (See Index 11)					1			
12	28M 9438446	A 136 D		Nut, Anchor, No. 10 UNF 2B					1		C	


Argosy C MK I

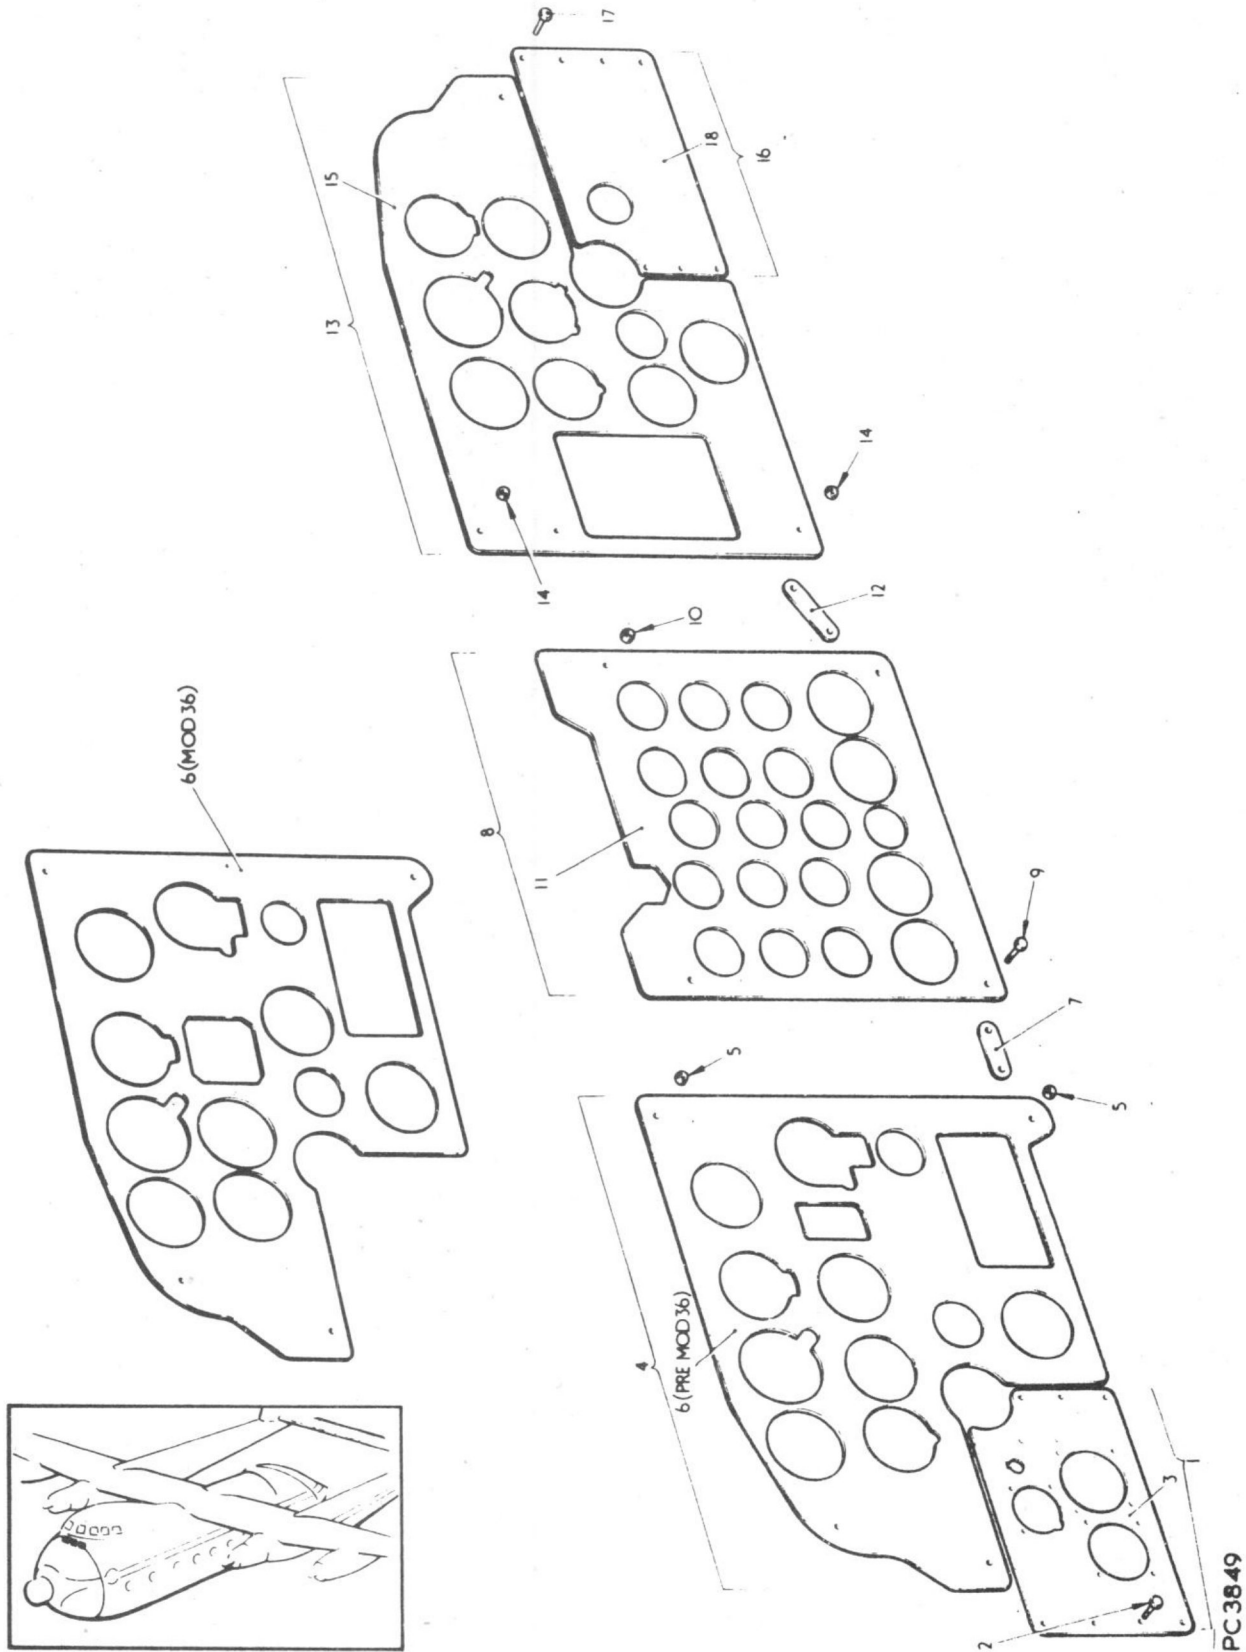

Argosy C. MK.I.

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
3-		—	FLIGHT PANELS AND ATTACHMENTS						Ref.			
			(Ref. Drg. FS.0665)									
1		ES.0514	Panel, Fixed (LH) (See 31-1-2, Fig. 6)						1			
			ATTACHING PARTS									
2	28DU/9419534	A.113/1D	Bolt, Mush. Hd., No. 10 UNF 2A						7		C	
			* * *									
3	9181	CS.0820	Panel						1		B	
4		FS.0512	Panel (LH) (See 31-1-2, Fig. 4)						1			
			ATTACHING PARTS									
5	28M/9435983	A.131/G	Nut, Stiff, 5/16" UNF 2B						5		C	
			* * *									
6	7511	FS.0512/2	Panel (Pre Mod. 36)						1		B	
	9143	FS.0806	Panel (Mod. 36)						1		C	
7		BS.0566	Link						1			
8	7513	ES.0510/1	Panel, Centre (See 31-1-2, Fig. 3)						1		B	
			ATTACHING PARTS									
9	28DU/9414395	A.102/1G	Bolt, 5/16" UNF 2A						2		C	
10	28M/9435983	A.131/G	Nut, Stiff, 5/16" UNF 2B						2		C	
			* * *									
11		ES.0510/7	Panel						1			
12		BS.0566/1	Link						1			
13		FS.0513	Panel (RH) (See 31-1-2, Fig. 5)						1			
			ATTACHING PARTS									
14	28M/9435983	A.131/G	Nut, Stiff, 5/16" UNF 2B						5		C	
			* * *									
15	7512	FS.0513/2	Panel						1		B	
16		ES.0515	Panel, Fixed (RH) (See 31-1-2, Fig. 6)						1			
			ATTACHING PARTS									
17	28DU/9419534	A.113/1D	Bolt, Mush. Hd., No. 10 UNF						7		C	
			* * *									
† 18	7515	CS.0515/2	Panel						1		C	

Argosy C. MK.I.

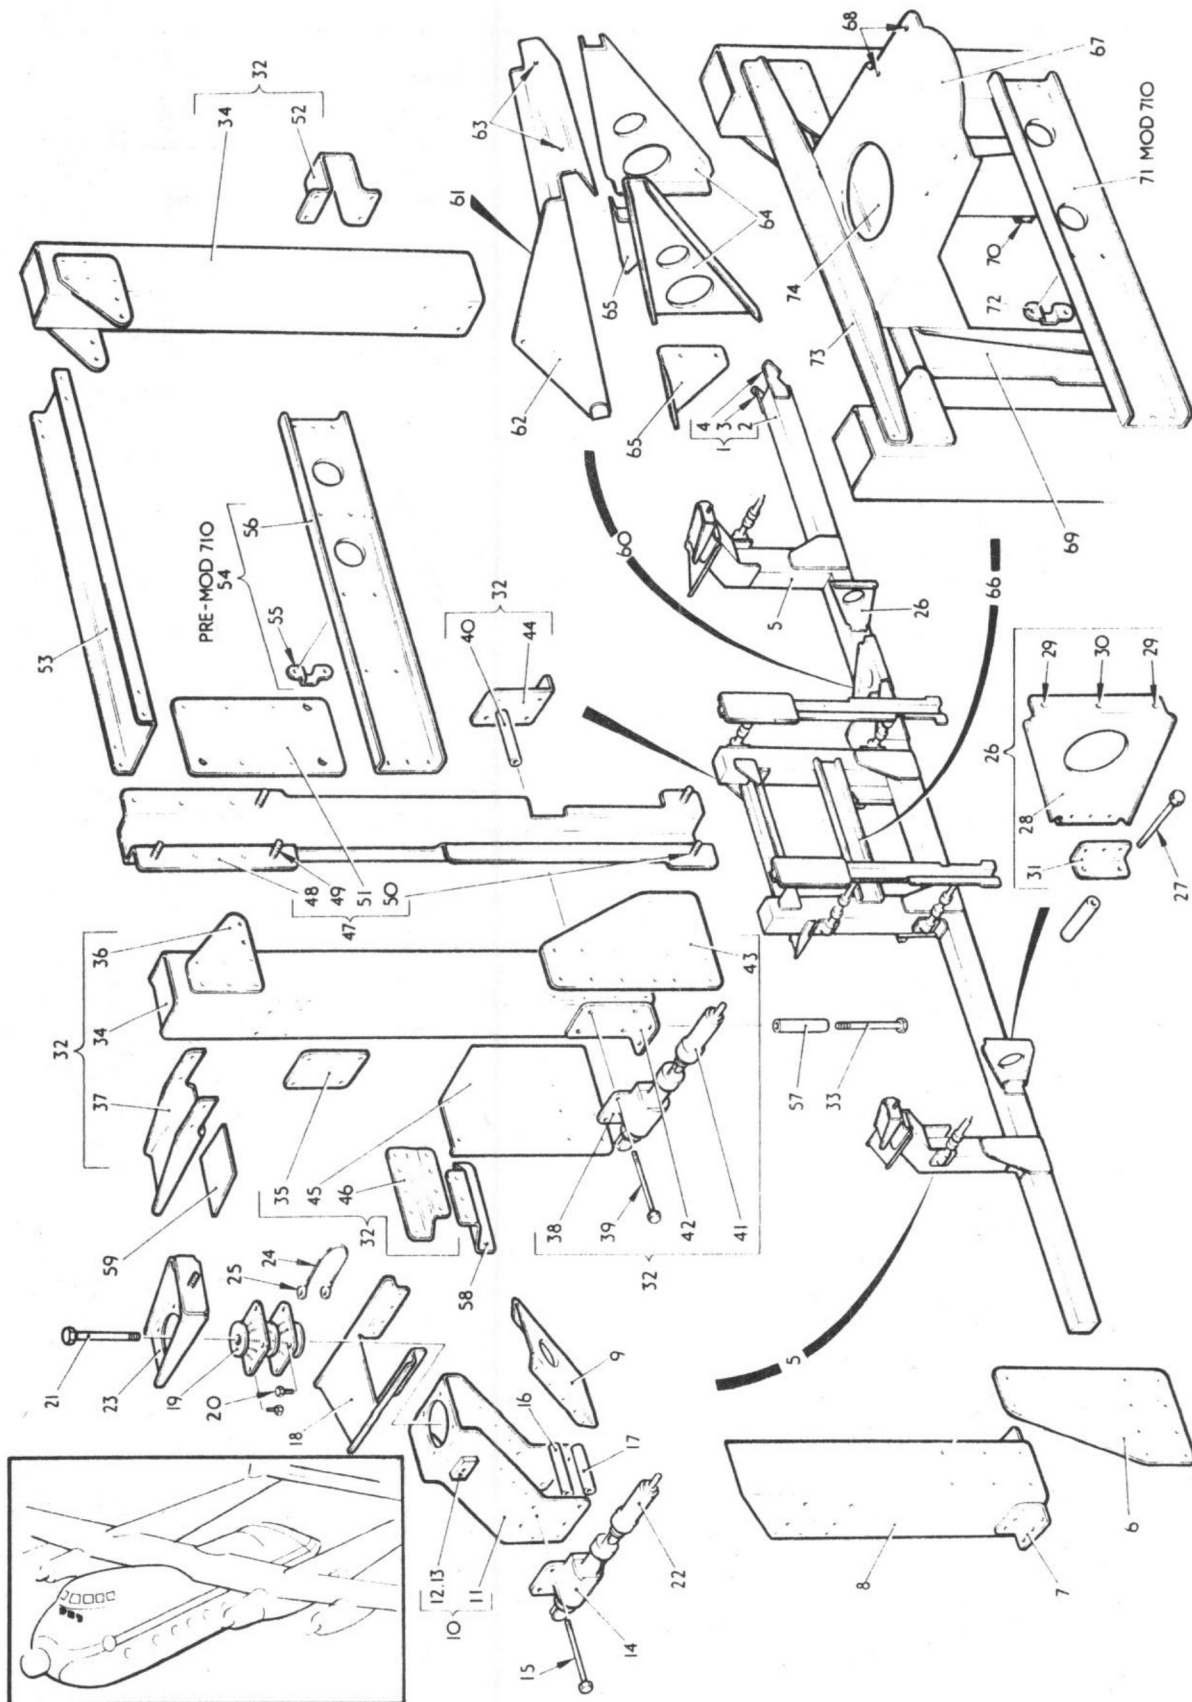

PC 3850

RESTRICTED
Argosy C. Mk. I.

INSTRUMENTS

PANELS

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Qty. Code
			1	2	3	4	5	6				
4		—	FLIGHT PANELS SUPPORT ASSEMBLY (Ref. Drg. FS.0504)						Ref.			
1		FS.0524	ND	Tube Assembly					1			
2		FS.0524/4		Tube					1			
3		BS.0524/3		Bracket					1			
4		BS.0524/2		Bracket					1			
5		FS.0507		Mounting Assembly, Outboard (LH)					1			
		FS.0508		Mounting Assembly, Outboard (RH)					1			
6		CS.0505/3		Plate					2			
7		BS.0507/4		Angle					2			
8		CS.0547		Tube					1			
9		BS.0507/7		Channel, Stiffening					1			
10		ES.0546/1		Mounting Assembly (LH)					1			
		ES.0546/2		Mounting Assembly (RH)					1			
11		ES.0546/8	ND	Bracket (LH)					1			
		ES.0546/9	ND	Bracket (RH)					1			
12	28M/9438446	A.136/D	ND	Nut, Anchor, No. 10 UNF 2B					1		C	
13		ES.0546/7		Packing					1			
14	8171	CS.0525		Lug, Mounting					1		C	
				ATTACHING PARTS								
15	28DU/9419981	A.102/21D		Bolt, No. 10 UNF 2A					4		C	
	28M/9438422	A.125/D		Nut, Stiff, No. 10 UNF 2B					4		C	
				* * *								
16		AS.2811/5/196		Tube, Distance (Make from Ref. 30B/1784)					2			LM
17		AS.2811/5/200		Tube, Distance (Make from Ref. 30B/1784)					2			LM
18		CS.0536		Bracket					1			
19	10AJ/143	—		Unit, Anti-Vibration (Type 952)					2		B	
				ATTACHING PARTS								
20	28DU/9480167	A.102/1/2 C		Bolt, No. 8 UNC 2A					4		C	
	28W/9156626	SP.122/C		Washer					4		C	
	28M/9438421	A.125/C		Nut, No. 8 UNC 2B					4		C	
21	28DU/9414354	A.102/15E		Bolt, 1/2" UNF 2A					1		C	
	28M/9419130	A.125/E/66		Nut, Stiff, 1/2" UNF 2B					1		C	
				* * *								
22	1372	GA.5/80/2560		Mounting, "Molehill" Mk. 90 BU					1		C	
23		CS.0535		Bracket					1			
24		FS.0507/24	ND	Wireflex, Copper, 3" Long, 12/5/0048 (LH only)					2			
25	5X/	30996		Terminal, Ring Tongue 8-32 UN (Amphenol) (LH only)					2		C	
26		CS.0529/1		Bracket Assembly (LH)					1			
		CS.0530/1		Bracket Assembly (RH)					1			
				ATTACHING PARTS								
27	28DU/9419981	A.102/21D		Bolt, No. 10 UNF 2A					2		C	
	28W/1010519	SP.122/D		Washer, No. 10 UNF					2		C	
	28M/9438422	A.125/D		Nut, Stiff, No. 10 UNF 2B					2		C	
				* * *								
28		CS.0529/9	ND	Bracket (LH)					1			
		CS.0530/9	ND	Bracket (RH)					1			
29	28M/9438469	A.157/D		Nut, Anchor, No. 10 UNF 2B					2		C	
30	28M/9438446	A.136/D		Nut, Anchor, No. 10 UNF 2B					1		C	
31		CS.0529/8	ND	Angle (LH)					1			
		CS.0530/8	ND	Angle (RH)					1			

RESTRICTED


Argosy C. MK.I.

PANELS

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of L.	Icy. Code
			1	2	3	4	5	6				
4-32		FS.0505							1			
		FS.0506							1			
33	28DU/9419980	A.102/20D							2		C	
	28W/1010519	SP.122/D							2		C	
	28M/9438422	A.125/D							2		C	
34		CS.0824							1			
		CS.0531/2							1			
35		FS.0505/12	ND						1			
		FS.0506/12	ND						1			
36		BS.0505/18							2			
37		CS.0532							1			
38	8171	CS.0525							2		C	
39	28DU/9419981	A.102/21D							8		C	
	28W/9457834	SP.124/D							4		C	
	28M/9438422	A.125/D							8		C	
40		AS.2811/5/196							8			LM
41	7663	GA.5/80/2594							2		C	
42		BS.0505/23							1			
		BS.0505/24							1			
43		CS.0505/3							1			
		CS.0505/3							2			
44		BS.0505/25							1			
		BS.0505/26							1			
45		CS.0505/4							1			
46		BS.0505/5							1			
47		DS.0533/1	ND						1			
		DS.0534/1	ND						1			
48		DS.0533/2	ND						1			
		DS.0534/2	ND						1			
49		BS.0737/2							4			
50	28M/9438448	A.136/G							1		C	
51		DS.0533/5	ND						1			
		DS.0534/5	ND						1			
52		BS.0597							1			
53		CS.0526							1			
54		CS.0527							1			
55	26FX/4211	STD.1687/2							3		C	
56		CS.0527/2	ND						1			
57		SP.97320/374							2			
58		BS.0504/7							1			
59		FS.0504/22							1			
		FS.0504/18							1			
60		FS.0593							1			
61		ES.0594/1							1			
62		ES.0594/6	ND						1			
63	28M/9438446	A.136/D							2		C	
64		DS.0595/1							1			
		DS.0595/2							1			
65		BS.0596/1							1			
		BS.0596/2							1			

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
4-66		—	Mounting, Pilot's Release Unit (Ref. Drg. FU.5356) (Mod. 710)						Ref.			
67		EU.5736/1	Bracket Assembly, Mounting						1			
68	28M/9438453	A.137/D	Nut, Anchor, No. 10 UNF						4		C	
69		DU.5737/1	Bracket Assembly, Support (LH)						1			
		DU.5737/2	Bracket Assembly, Support (RH)						1			
70	26FX/4211	STD.1687/2	Saddle						1		C	
71		CU.5738/1	Channel Assembly						1			
72	26FX/4211	STD.1687/2	Saddle						1		C	
73		CU.5739	Angle						1			
74		CU.5740	Bracket						1			

RESTRICTED

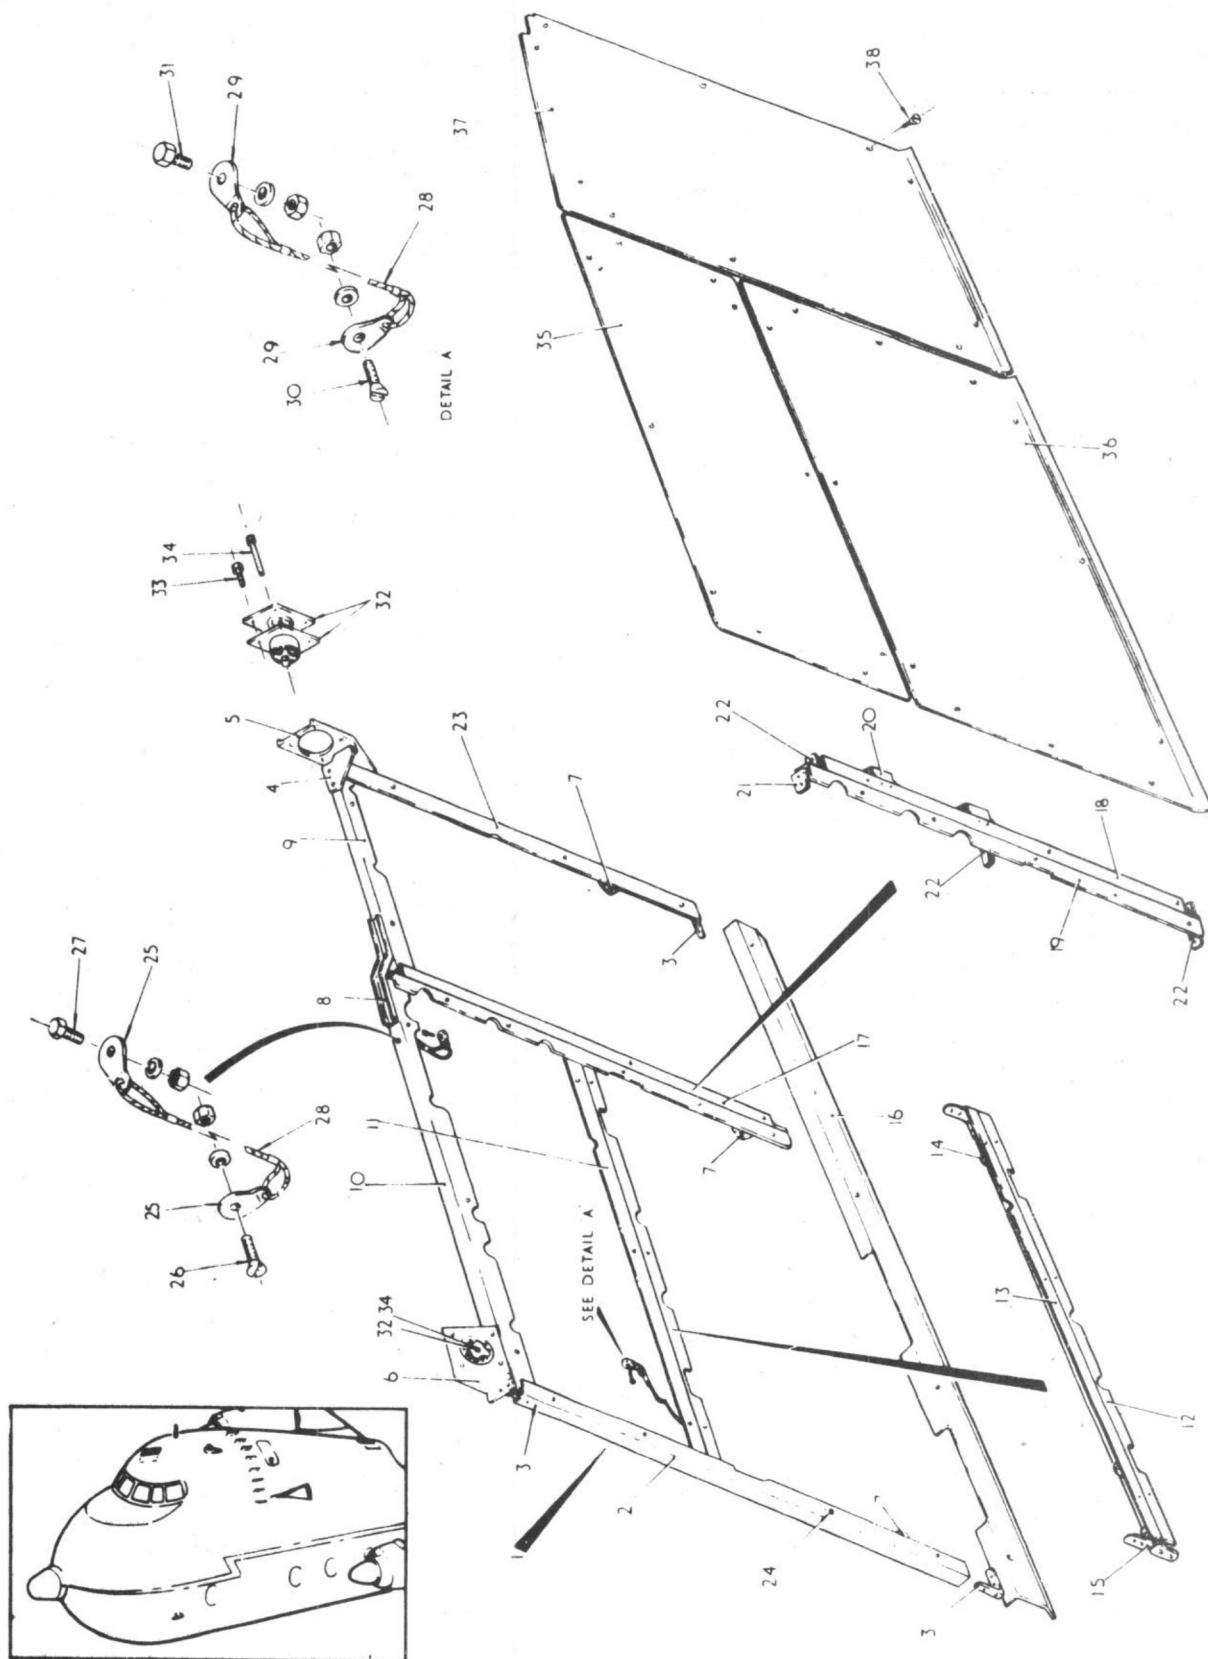Argosy C MK.1

PC 5061

FLIGHT ENGINEERS TOP
PANELS AND MOUNTING

FIG 5
RESTRICTED

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
5-		—	FLIGHT ENGINEER'S TOP PANELS AND MOUNTING (Ref. Drg. FS.0521)						Ref.			
1		FS.0552	Frame Assembly						1			
2		DS.0552/4	Angle						1			
3		BS.0552/9	Bracket						3			
4		BS.0552/20	Bracket						1			
5		BS.0552/21	Bracket						1			
6		BS.0552/10	Bracket						1			
7		BS.0553/6	ND	Bracket					4			
8		BS.0552/16	Channel						1			
9		BS.0552/7	Angle						1			
10		CS.0552/15	Angle						1			
11		DS.0553	Angle Assembly						1			
12		DS.0553/2	ND	Angle					1			
13		DS.0553/3	ND	Angle					1			
14		DS.0553/6	ND	Bracket					2			
15		BS.0552/9	Bracket						4			
16		DS.0714	Angle						1			
17		DS.0554	Angle Assembly						1			
18		DS.0554/4	ND	Angle					1			
19		DS.0554/5	ND	Angle					1			
20		BS.0709	Bracket						2			
21		BS.0554/2	Bracket						1			
22		BS.0552/9	Bracket						5			
23		DS.0715	Angle						1			
24	28M/9438446	A.136/D	Nut, Anchor, No. 10 UNF 2B.....						30		C	
25		FS.0024/40	ND	Lug					14			
ATTACHING PARTS												
26	28DU/9480269	A.173/1D	Bolt, Csk. Hd., No. 10 UNF 2A (attaching lug to panel) .						1		C	
27	28DU/9419565	A.102/1D	Bolt, No. 10 UNF 2A (attaching lug to angle)						1		C	
	28W/1010519	SP.122/D	Washer, No. 10 UNF						1		C	
	28M/9438422	A.125/D	Nut, Stiff, No. 10 UNF 2B						1		C	
* * *												
28	32A/1250216	F.32/20Z	Cord, Plaited						A.R.		C	
29	28W/9435073	AS.4561/2	Washer						4		C	
ATTACHING PARTS												
30	28DU/9480269	A.173/1D	Bolt, Csk. Hd., No. 10 UNF 2A (attaching lug to panel) .						1		C	
31	28DU/9419565	A.102/1D	Bolt, No. 10 UNF 2A (attaching lug to angle)						1		C	
	28W/1010519	SP.122/D	Washer, No. 10 UNF						1		C	
	28M/9438422	A.125/D	Nut, Stiff, No. 10 UNF 2B						1		C	
* * *												
32	10AJ/143	—	Unit, Anti-Vibration (Type 952) (FN.0521/43ND)						4		B	
ATTACHING PARTS												
33	28DU/9480168	A.102/1C	Bolt, No. 8 UNF 2A						8		C	
	28W/9156626	SP.122/C	Washer, No. 8 UNF						8		C	
	28M/9438421	A.125/C	Nut, No. 8 UNF 2B						8		C	
34	28DU/9414354	A.102/15E	Bolt, 1" UNF 2A						1		C	
	28W/1009149	SP.122/E	Washer, 1" UNF						1		C	
	28M/9418915	A.125/E	Nut, 1" UNF 2B						1		C	
* * *												

Argosy C. MK.I.

PANELS

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
† † 5-35		DS.0519/3	Panel (Pre Mod. 444)						1			
		DS.0659/1	Panel (Mod. 444)						1			
36		ES.0519/2	Panel						1			
37		ES.0776	Panel						1			
† 38	28S/9489176	A.204/D18	ATTACHING PARTS (For Indices 35, 36 or 37)									
			Screw, Csk. Hd., No. 10 UNF 2A						10		C	

Argosy C. MK.I.

PANELS

[illegible]


RESTRICTED

31-1-1
Page 16

RESTRICTED

INSTRUMENTS

PANELS

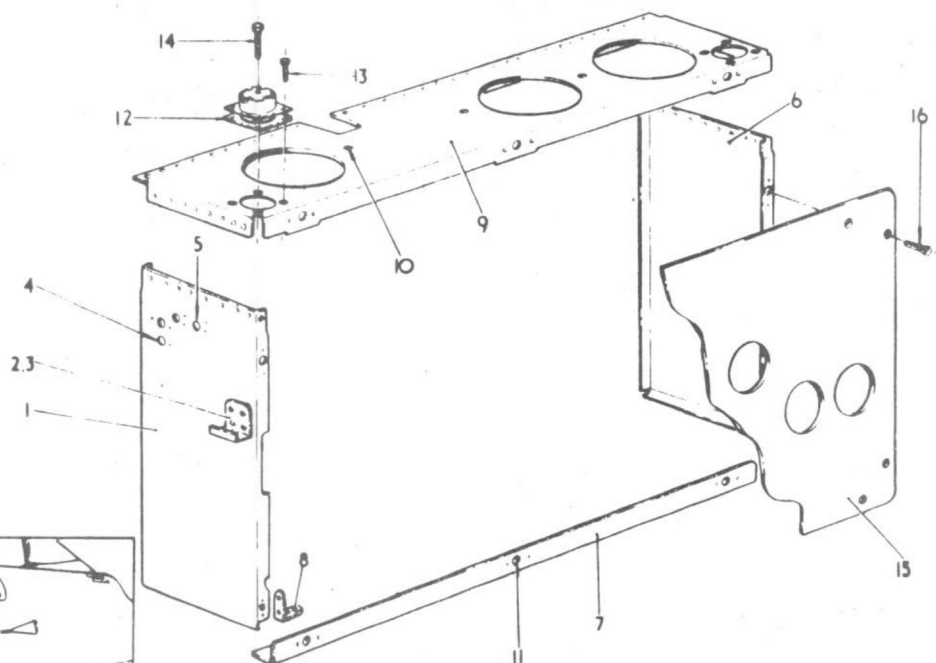Argosy C. MK.I.

PC5064

**FLIGHT ENGINEER'S
BOTTOM PANEL AND MOUNTING**

FIGURE 6.

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Qty. Code	
			1	2	3	4	5	6					
6-		—	FLIGHT ENGINEER'S BOTTOM PANEL AND MOUNTING (Ref. Drg. FS.0521)						Ref.				
1		DS.0645	ND	Plate Assembly, Side						1			
2		CN.1572/5		Hook						1			
3		DS.0645/7		Trim (Vynide)						A.R.			
4	28M/9438446	A.136/D		Nut, Anchor, No. 10 UNF 2B						2		C	
5	28M/9438469	A.157/D		Nut, Anchor, No. 10 UNF 2B						2		C	
6		CS.0654		Plate, Side						1			
7		DS.0716		Angle						1			
8		BS.0521/15		Bracket						2			
9		DS.0522		Plate Assembly						1			
10	28M/9438444	A.136/B		Nut, Anchor						3		C	
11	28M/9438446	A.136/D	Nut, Anchor						10		C		
12	10AJ/143	—	Unit, Anti-Vibration (Type 952) (FN.0521/43ND)						4		B		
ATTACHING PARTS													
13	28DU/9480168	A.102/1C	Bolt, No. 8 UNF 2A						8		C		
	28W/9156626	SP.122/C	Washer, No. 8 UNF						8		C		
	28M/9438421	A.125/C	Nut, No. 8 UNF 2B						8		C		
14	28DU/9414354	A.102/15E	Bolt, 1/2" UNF 2A						1		C		
	28W/1009149	SP.122/E	Washer, 1/2" UNF						1		C		
	28M/9418915	A.125/E	Nut, 1/2" UNF 2B						1		C		
15		FS.0520/2	Panel						1				
ATTACHING PARTS													
16	28S/19559	A.294/D18	Screw, Gsk. Hd., No. 10 UNF 2A						10		C		

RESTRICTED

Argosy 'C' MK.I.


PANELS

[illegible]

RESTRICTED

31-1-1
Page 18

Argosy C MK I

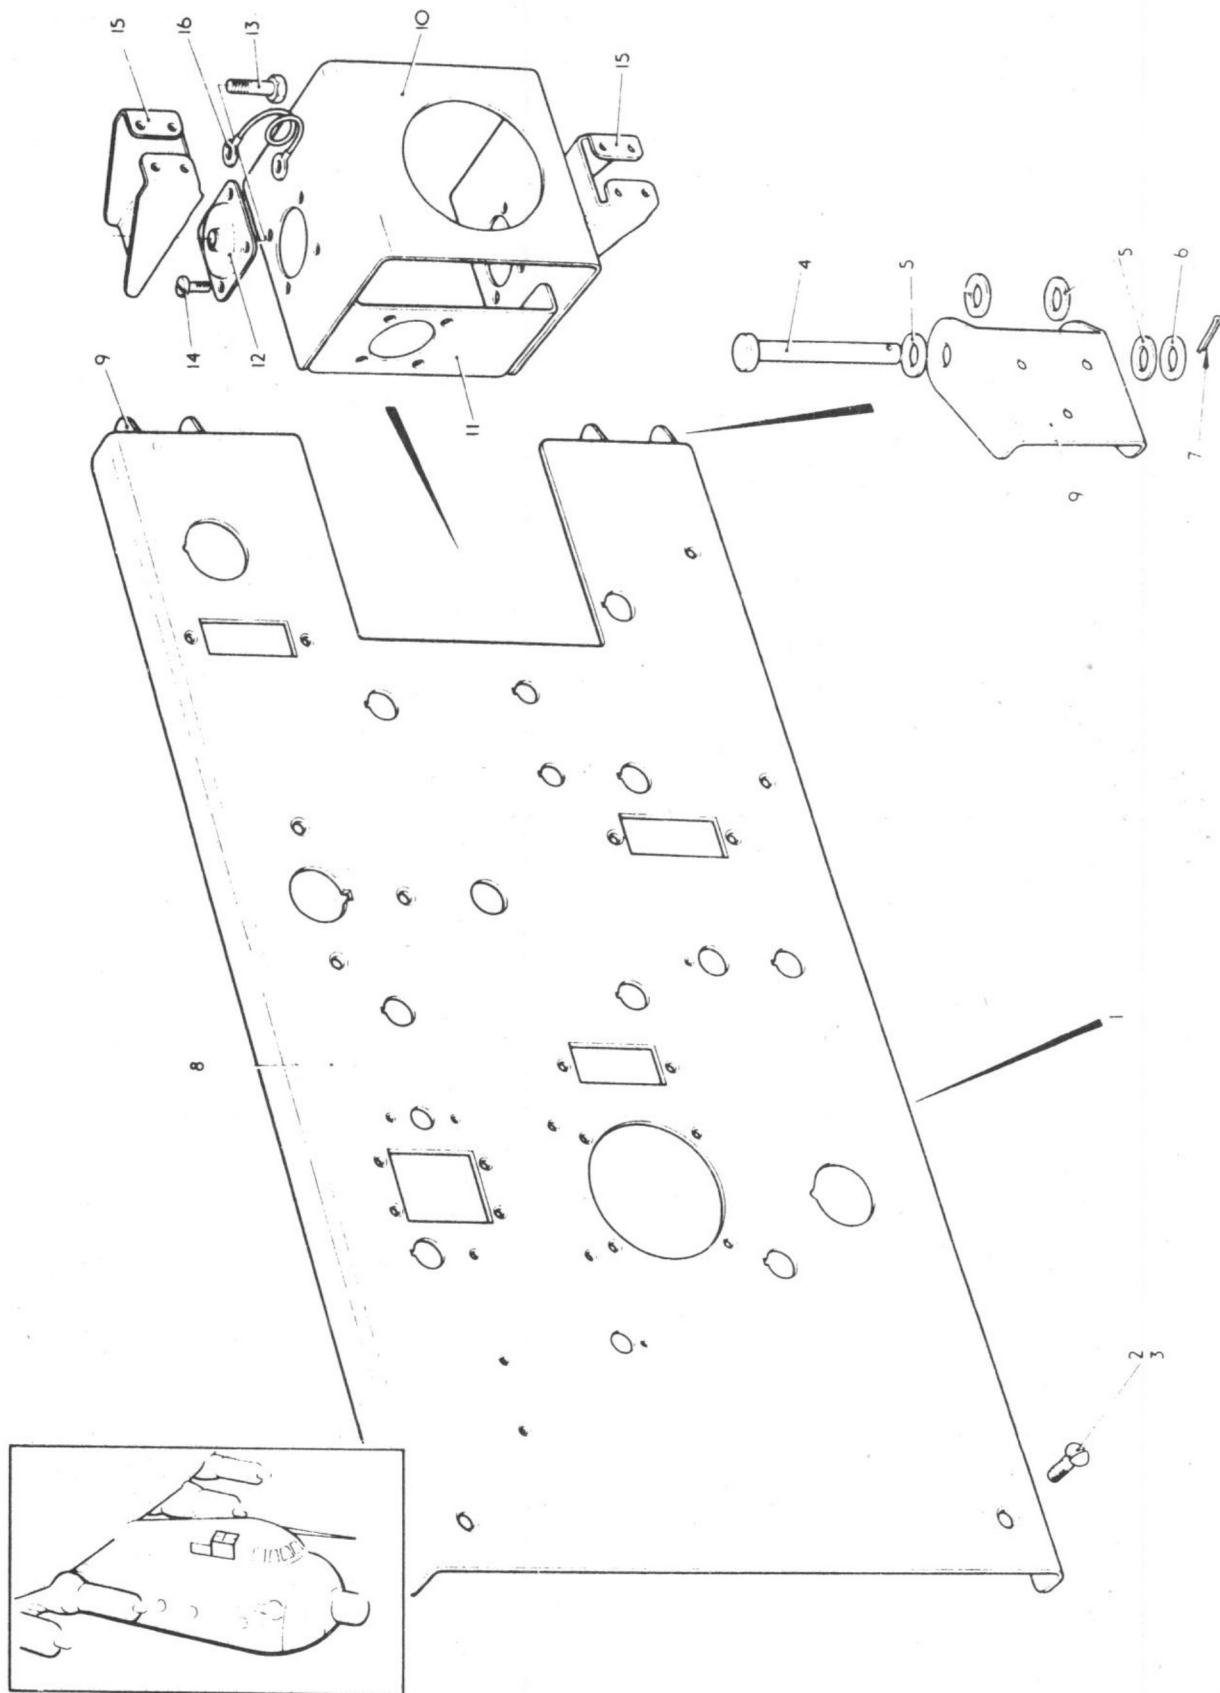

PC 3852


Argosy C. MK.I.

INSTRUMENTS

PANELS

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
7-		—	AIRBORNE AUXILIARY POWER PLANT PANEL AND MOUNTING (Ref. Drgs. ES.0601, ES.0602)						Ref.			
1		ES.0601/1	Panel Assembly						1			
			ATTACHING PARTS									
2	28FP/552	217/2	Stud (Oddie)						2		C	
3	28FP/1004893	214	Washer (Oddie)						2		C	
4	28P/1024	SP.4.B22	Pin, Shackle						2		C	
5	28W/9128924	SP.14/C	Washer, 2 BA						8		C	
6	28W/9419454	SP.10/C	Washer, 2 BA						2		C	
7	28P/9429619	SP.9 C5	Pin, Split						2		C	
			* * *									
8		ES.0601/6	ND Panel						1			
9		ES.0601/3	ND Bracket, Hinge						2			
10		ES.0601/7	ND Channel						1			
11		ES.0601/15	ND Bracket						1			
12	10AJ/263	—	Mounting, Anti-Vibration (ES.0601/9 ND)						3		B	
			ATTACHING PARTS									
13	28DU/9480980	A.102/5C	Bolt, No. 10 UNC 2A						1		C	
	28W/9156626	SP.122/C	Washer, No. 8 UNC						1		C	
	28M/9438421	A.125/C	Nut, Stuff, No. 8 UNC 2B						1		C	
14	28S/1007942	A.205/B12	Screw, Panhead, No. 6 UNC						4		C	
	28M/9438420	A.125/B	Nut, Stuff, No. 6 UNC 2B						4		C	
			* * *									
15		ES.0601/8	ND Bracket						3			
16	1839	TDS.27/A/20/B	Lead Bonding						1		C	

RESTRICTED

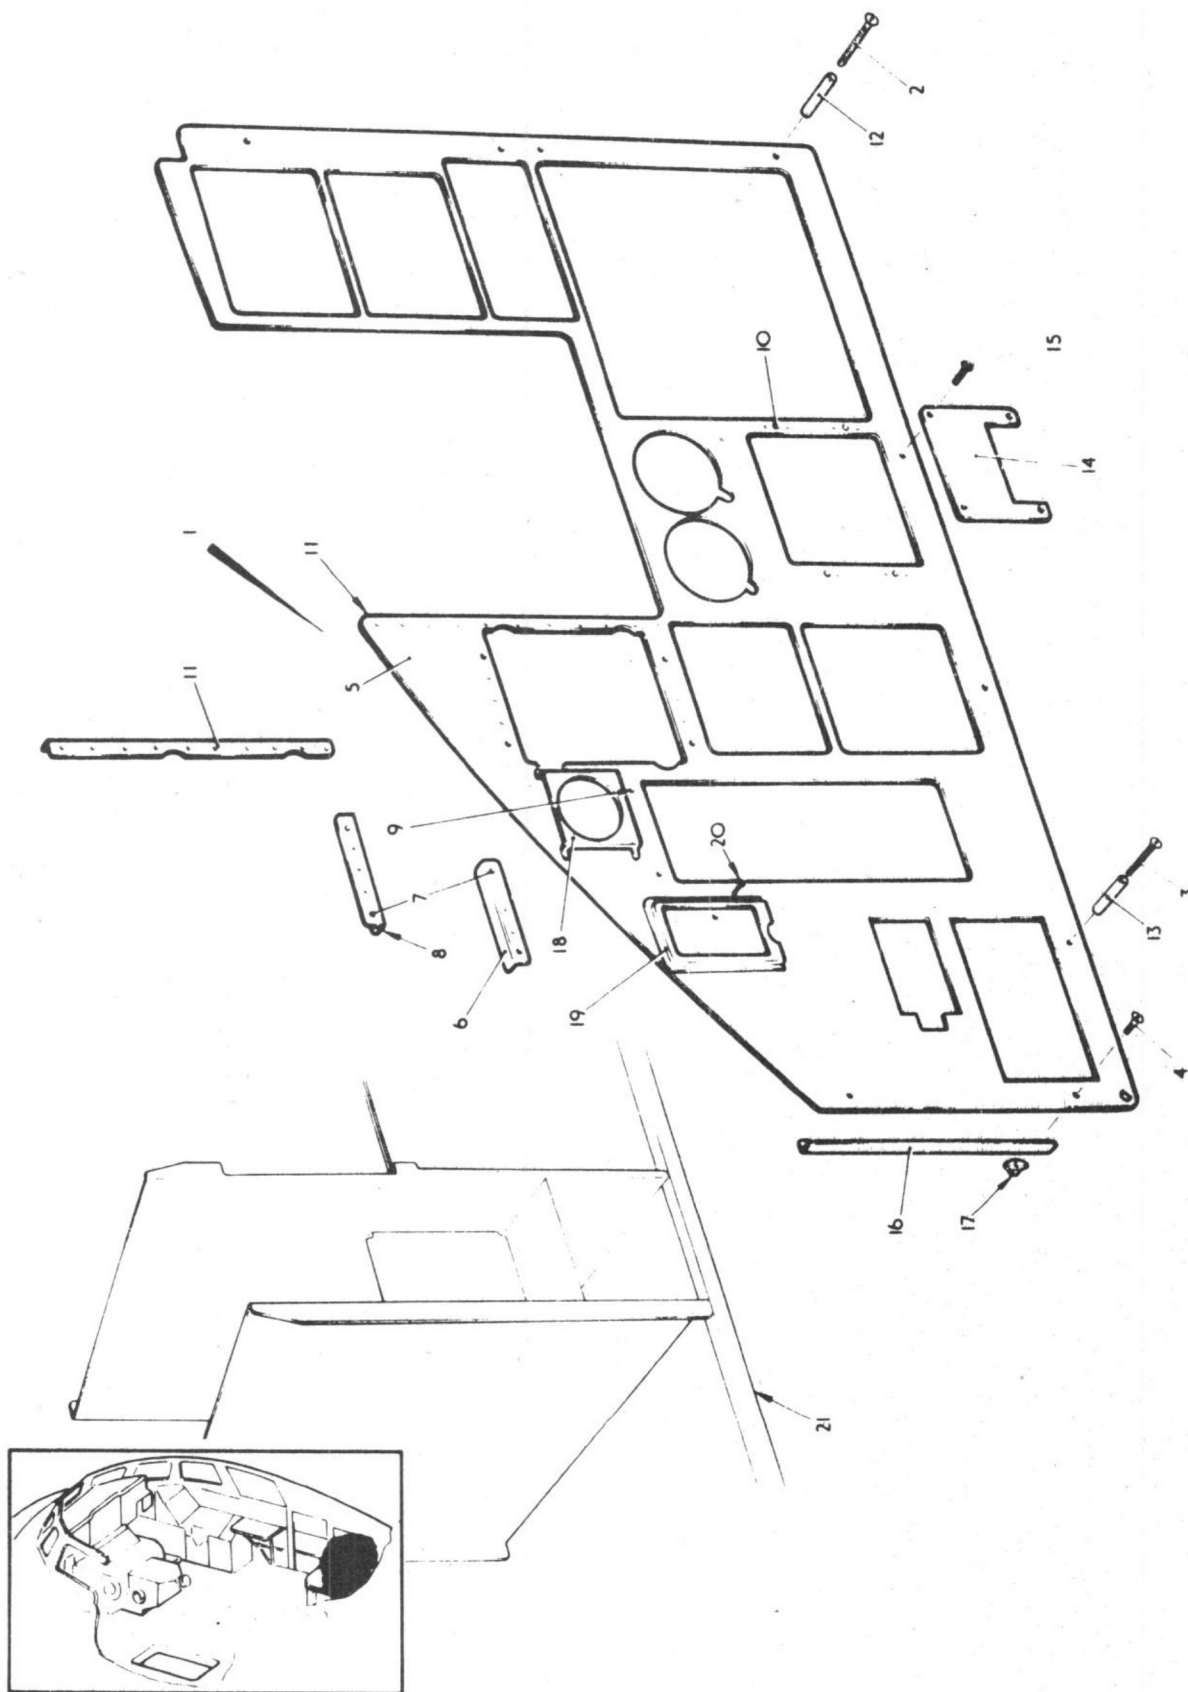Argosy C MK. I.

NAVIGATOR'S MAIN PANEL & MOUNTING

FIGURE 8

RESTRICTED

PC 3851


NOVEMBER 1966

AL 36 TP 27

Argosy 'C' Mk.I.

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
8—		—	NAVIGATOR'S MAIN PANEL AND MOUNTING						Ref.			
			(Ref. Drgs. FS.0637, FS.0668, FS.0674)									
1		FS.0568	Panel, Assembly, Main						1			
			ATTACHING PARTS									
2	28DU/9419645	A.113/10D	Bolt, Mush. Hd., No. 10 UNF 2A						3		C	
3	28DU/9419644	A.113/9D	Bolt, Mush. Hd., No. 10 UNF 2A						3		C	
4	28DU/9419534	A.113/1D	Bolt, Mush. Hd., No. 10 UNF 2A						4		C	
	28M/9706320	A.125/D/66	Nut, Stiff. No. 10 UNF 2B						10		C	
			* * *									
5		FS.0568/10	ND	Panel					1			
6		FS.0568/8	ND	Angle					1			
7	28M/9466528	A.136/D/66		Nut, Anchor, No. 10 UNF 2B					4		C	
8		FS.0568/7	ND	Angle					1			
9	28M/9438445	A.136/C		Nut, Anchor, No. 8 UNC 2B					2		C	
10	28FP/9492814	XS/560		Form, Wire (Dzus)					16		C	
11		FS.0568/5	ND	Angle					1			
12		AS.2811/5/100		Tube, Distance (Make from Ref. 30B/1911262)					3			LM
13		AS.2811/5/092		Tube, Distance (Make from Ref. 30B/1911262)					3			LM
14		BS.0652		Plate Cover					1			
			ATTACHING PARTS									
15	28DU/9419534	A.113/1D		Bolt, Mush. Hd., No. 10 UNF 2A					2		C	
				* * *								
16		FS.0668/11	ND	Angle					1			
17	28M/9466528	A.136/D/66		Nut, Anchor, No. 10 UNF 2B					2		C	
18	6B/1054118	—		Holder, Card, Mk. 4 (A.S.I.)					1		B	
19	10H/19789	—		Holder, Card					1		C	
			ATTACHING PARTS									
20	28S/9992524	A.32/A8		Screw, Rd. Hd., 6 BA					3		C	
				* * *								
21		—		Mounting, Structure (See 25-1-8, Fig. 14)					Ref.			

Argosy C MK.I.

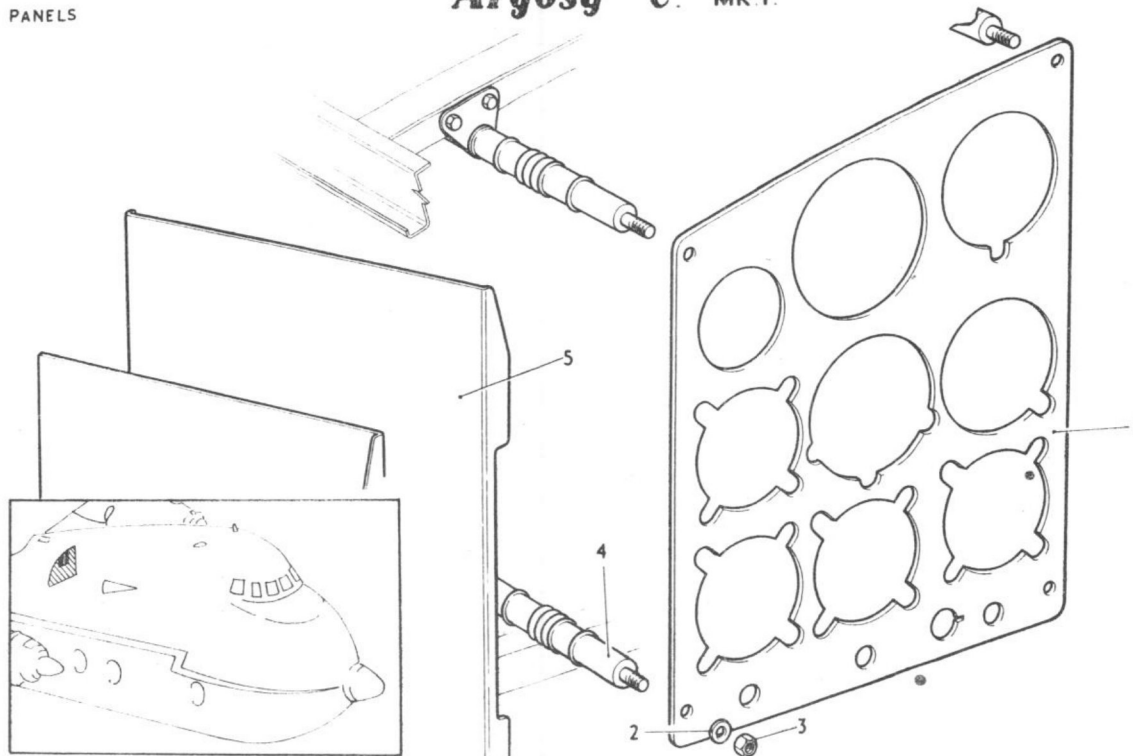

ANTI-VIBRATION PANEL & MOUNTING

FIGURE 9

PC 3853

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
9-		—	ANTI-VIBRATION PANEL AND MOUNTING						Ref.			
			(Ref. Drgs. FS.0668, FS.0674, FS.0598)									
1		ES.0570	Panel						1			
			ATTACHING PARTS									
2	28W/9419455	SP.10/G	Washer, 5/16"						4		C	
3	28M/17799	A.125/G/66	Nut, Stiff, 5/16" UNF 2B						4		C	
			* * *									
4	4764	GA.5/80/2595	Mounting "Molehill"						4		C	
5		—	Mounting Structure (See 25-1-8, Fig. 14)						Ref.			



Argosy C. MK.L

PANELS

November 1966
TP27 AI 36

31-1-1
Page 24

Argosy 'C' MK.I.

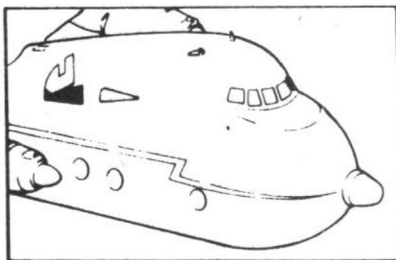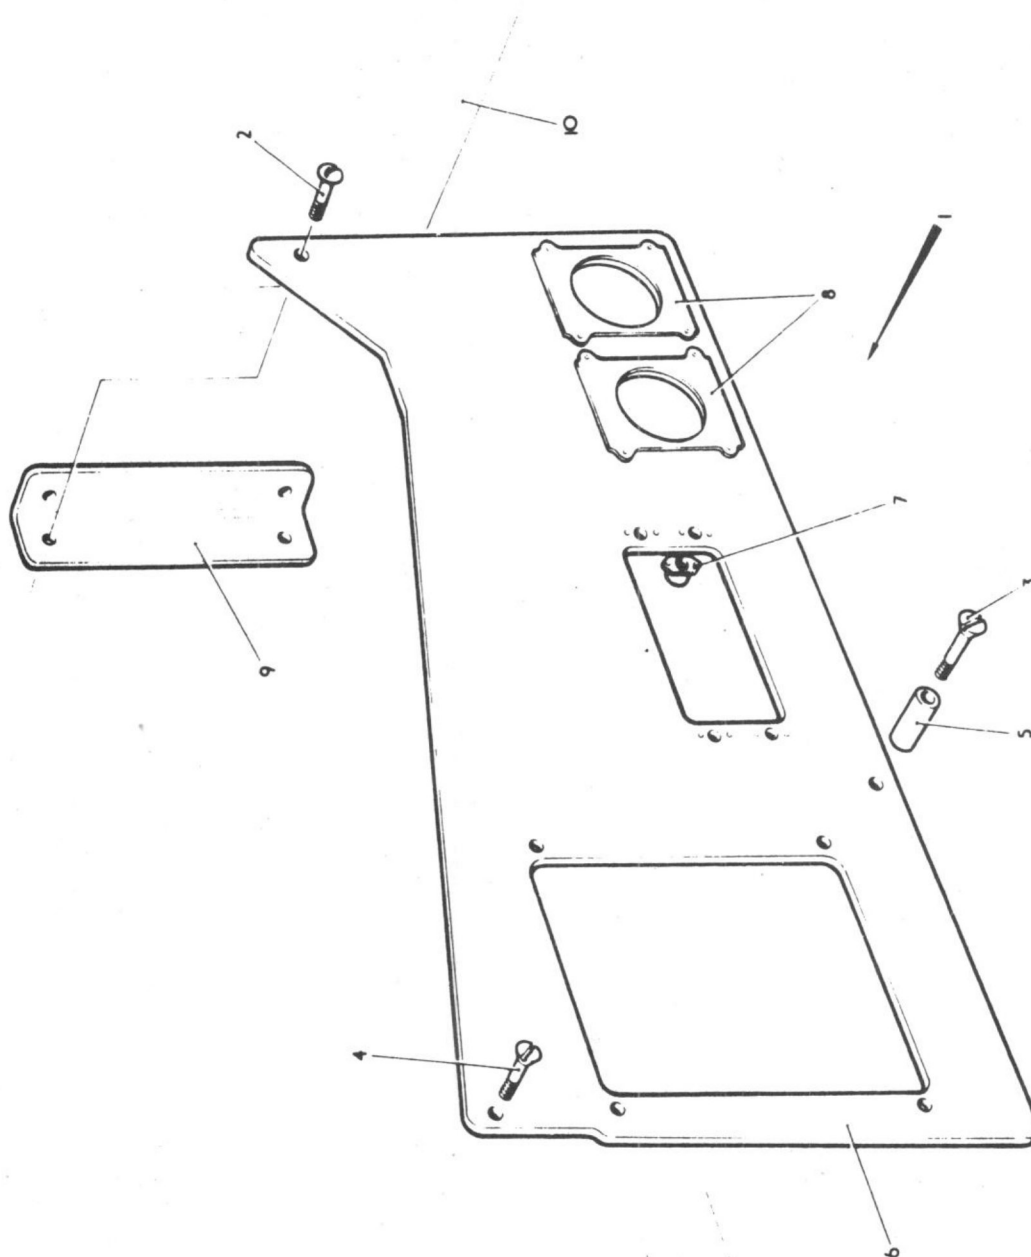

RESTRICTED

Argosy 'C' MK.I.

INSTRUMENTS



PANELS

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
10-			NAVIGATOR'S SIDE PANEL AND MOUNTING						Ref.			
			(Ref. Drg. FS.0688)									
1		ES.0581	Panel Assembly (See 31-1-2, Fig. 12)						1			
			ATTACHING PARTS									
2	28DU/9419534	A.113/1D	Bolt, Mush. Hd., No. 10 UNF 2A						2		C	
3	28DU/1212046	A.173/11D	Bolt, Csk. Hd., No. 10 UNF 2A						2		C	
4	28DU/9480269	A.173/1D	Bolt, Csk. Hd., No. 10 UNF 2A						1		C	
†	28M/9706320	A.125/D/66	Nut, Stiff, No. 10 UNF 2B						3		C	
			* * *									
5		AS.2811/5/104	Tube, Distance (Make from 30B/9611262)						2			LM
6		ES.0531	Panel						1			
†	28M/9466528	A.136/D/66	Nut, Anchor, No. 10 UNF 2B						4		C	
†	6B/1054118	—	Holder, Compass Card, Mk. 4						2		B	
9		—	Angle (Ref. Drg. FS.0668/11 ND) (See 31-1-1, Fig. 8)						Ref.			
10		—	Navigator's Main Panel (Ref. Drg. FS.0568) (See 31-1-1, Fig. 8)						Ref.			

RESTRICTED

RESTRICTED

Argosy 'C' MK.I.

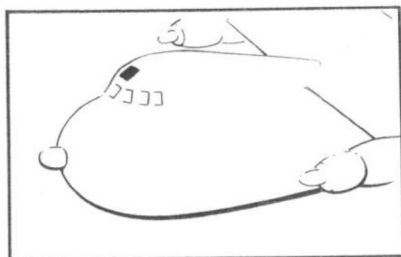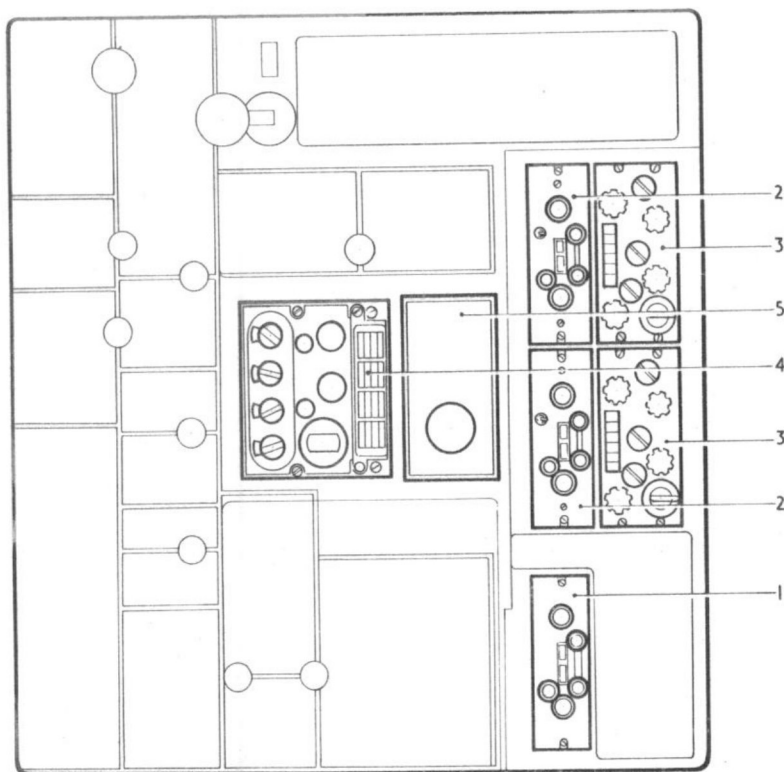

31-1-2.

PAGE 1.

INSTRUMENTATION OF CENTRE ROOF PANEL.

FIGURE 1.

PC 5060

NOVEMBER 1966



T.L.36 TP 27.

RESTRICTED
Argosy C. MK.I.

INSTRUMENTS
INSTRUMENTATION

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
1-		—	INSTRUMENTATION OF CENTRE ROOF PANEL						Ref.			
			(Ref. Drg. FS.0516) (See 31-1-1, Fig. 1)									
1		—	Unit, Navigational Control, Type M.41 (Elliott)						Ref.			
			(See 34-3-7, Fig. 1)									
2		—	Unit, Control, VHF (Elliott) (See 23-4-1, Fig. 1)						Ref.			
3		—	Unit, Control, HF, Type 53 (Collins) (See 23-3-1, Fig. 2)						Ref.			
4		—	Unit, Control, UHF, Type C.1607/ARC-52 (Plessey)						Ref.			
			(See 23-5-1, Fig. 1)									
5		—	Unit, Control, Radio Altimeter (S.T. & C.)						Ref.			
			(See 34-3-1, Fig. 2)									

Argosy C MK.I.

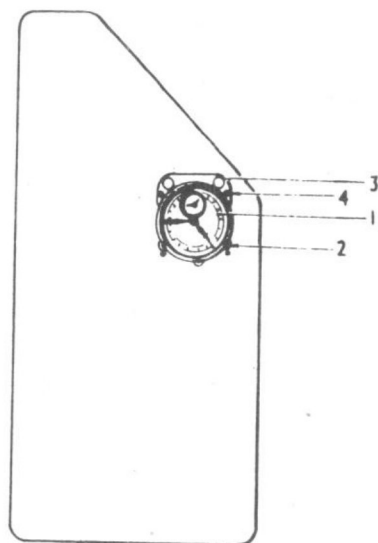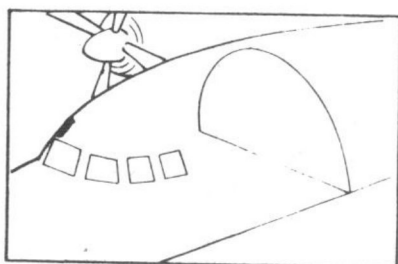

INSTRUMENTATION
OF ROOF PANEL (RH)
FIGURE 2

PC5066

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
2-			INSTRUMENTATION OF ROOF PANEL (RH) (Ref. Drgs. FS.0518, Pre Mod. 6 and FS.0744, Mod. 6) (See 31-1-1, Fig. 2)						Ref.			
1	6A/3157	V.308	Clock, Time of Flight (Smiths)						1		A	
			ATTACHING PARTS									
2	28D/9130082	AS.1246/3B	Bolt, Rd. Hd., 4 BA						2		C	
			* * *									
3	5CX/5477	80/10/1486	Bridge, Fitting, Type C (Thorns)						1		B	
			ATTACHING PARTS									
4	28D/12182	AS.1246/6B	Bolt, Rd. Hd., 4 BA						2		C	
			* * *									

Argosy C. MK.I.

INSTRUMENTATION

November 1966
TP27 AL36



31-1-2
Page 4

RESTRICTED

INSTRUMENTS

INSTRUMENTATION

Argosy C. MK. I

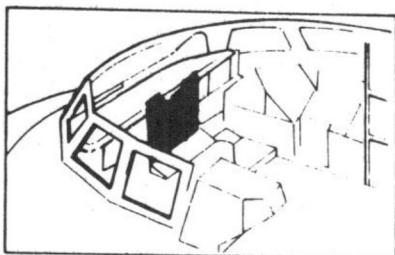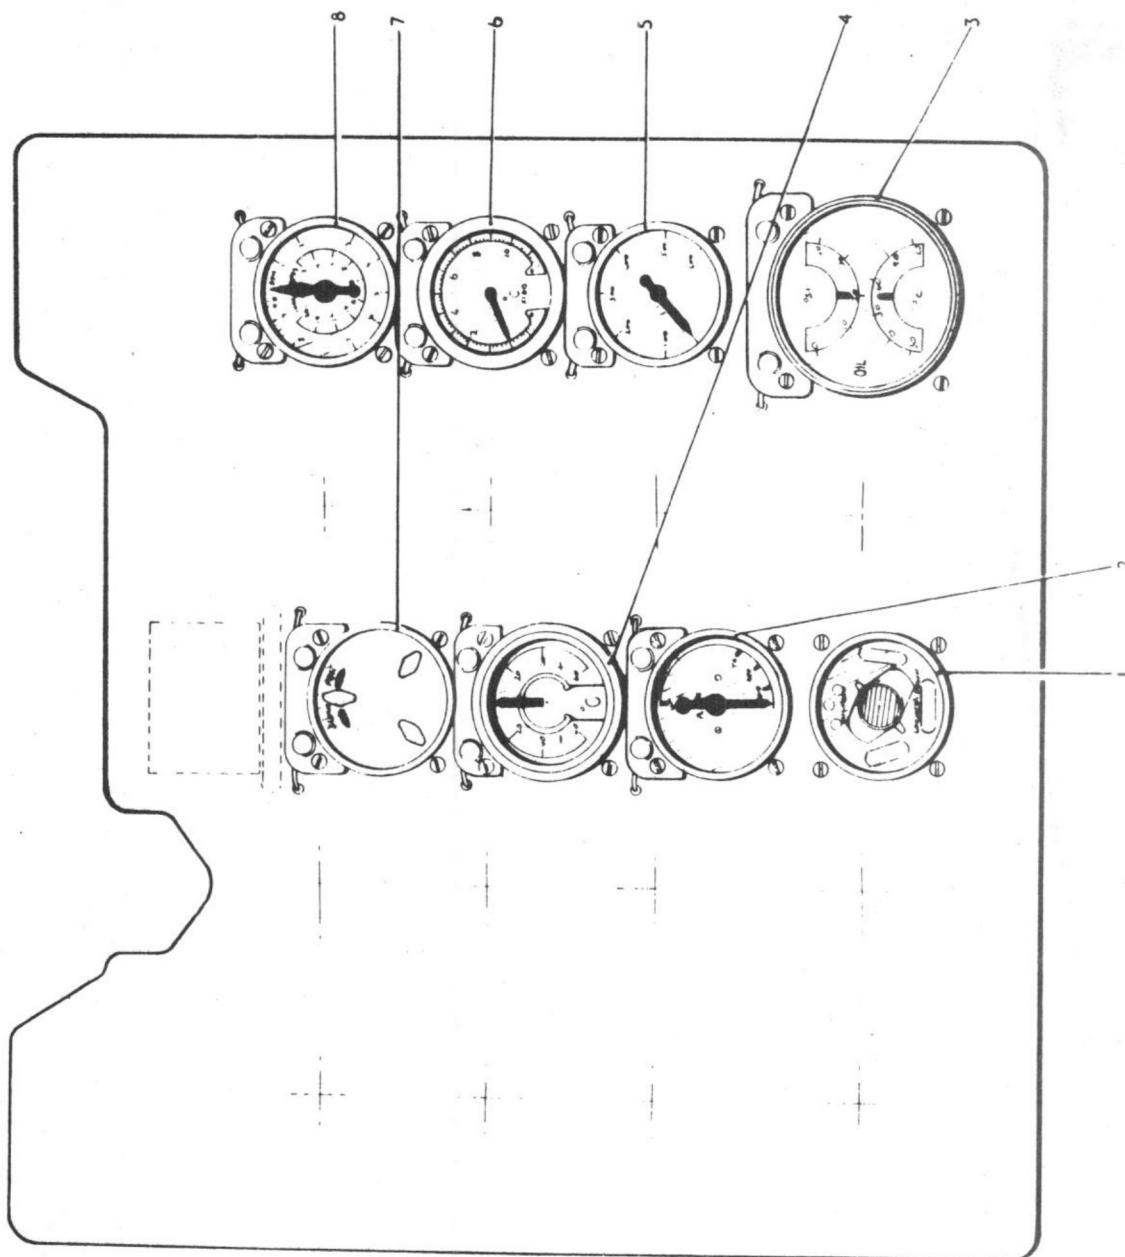

PC 5065

31-1-2

PAGE 5

INSTRUMENTATION OF CENTRE FLIGHT PANEL

FIGURE 3.

RESTRICTED


NOVEMBER 1966

T.L.36 TP27

Argosy 'C' Mk.I.INSTRUMENTS
INSTRUMENTATION

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per U. C. of E.	Code
			1	2	3	4	5	6		
3-		—	INSTRUMENTATION OF CENTRE FLIGHT PANEL						Ref.	
			(Ref. Drg. ES.0511) (See 31-1-1, Fig. 3)							
1		—	Indicator, Undercarriage (Dowty) (See 32-5-1, Fig. 3) ..						Ref.	
2		—	Indicator, Flap Position (Smiths) (See 27-4-5, Fig. 1) ...						Ref.	
3		—	Gauge, Oil Temperature (Sangamo-Weston) (See 77-4-1, Fig. 6)						Ref.	
4		—	Thermometer, Outside Air (Sangamo-Weston) (See 34-2-1, Fig. 2)						Ref.	
5		—	Torquemeter (Smiths) (See 77-2-1, Fig. 6)						Ref.	
6		—	Gauge, Temperature (Sangamo-Weston) (See 77-3-1, Fig. 6)						Ref.	
7		—	Synchroscope (Kelvin-Hughes) (See 77-1-2, Fig. 2)						Ref.	
8		—	Indicator, R.P.M. (Kelvin-Hughes) (See 77-1-2, Fig. 2) ..						Ref.	

Argosy C. MK.I.

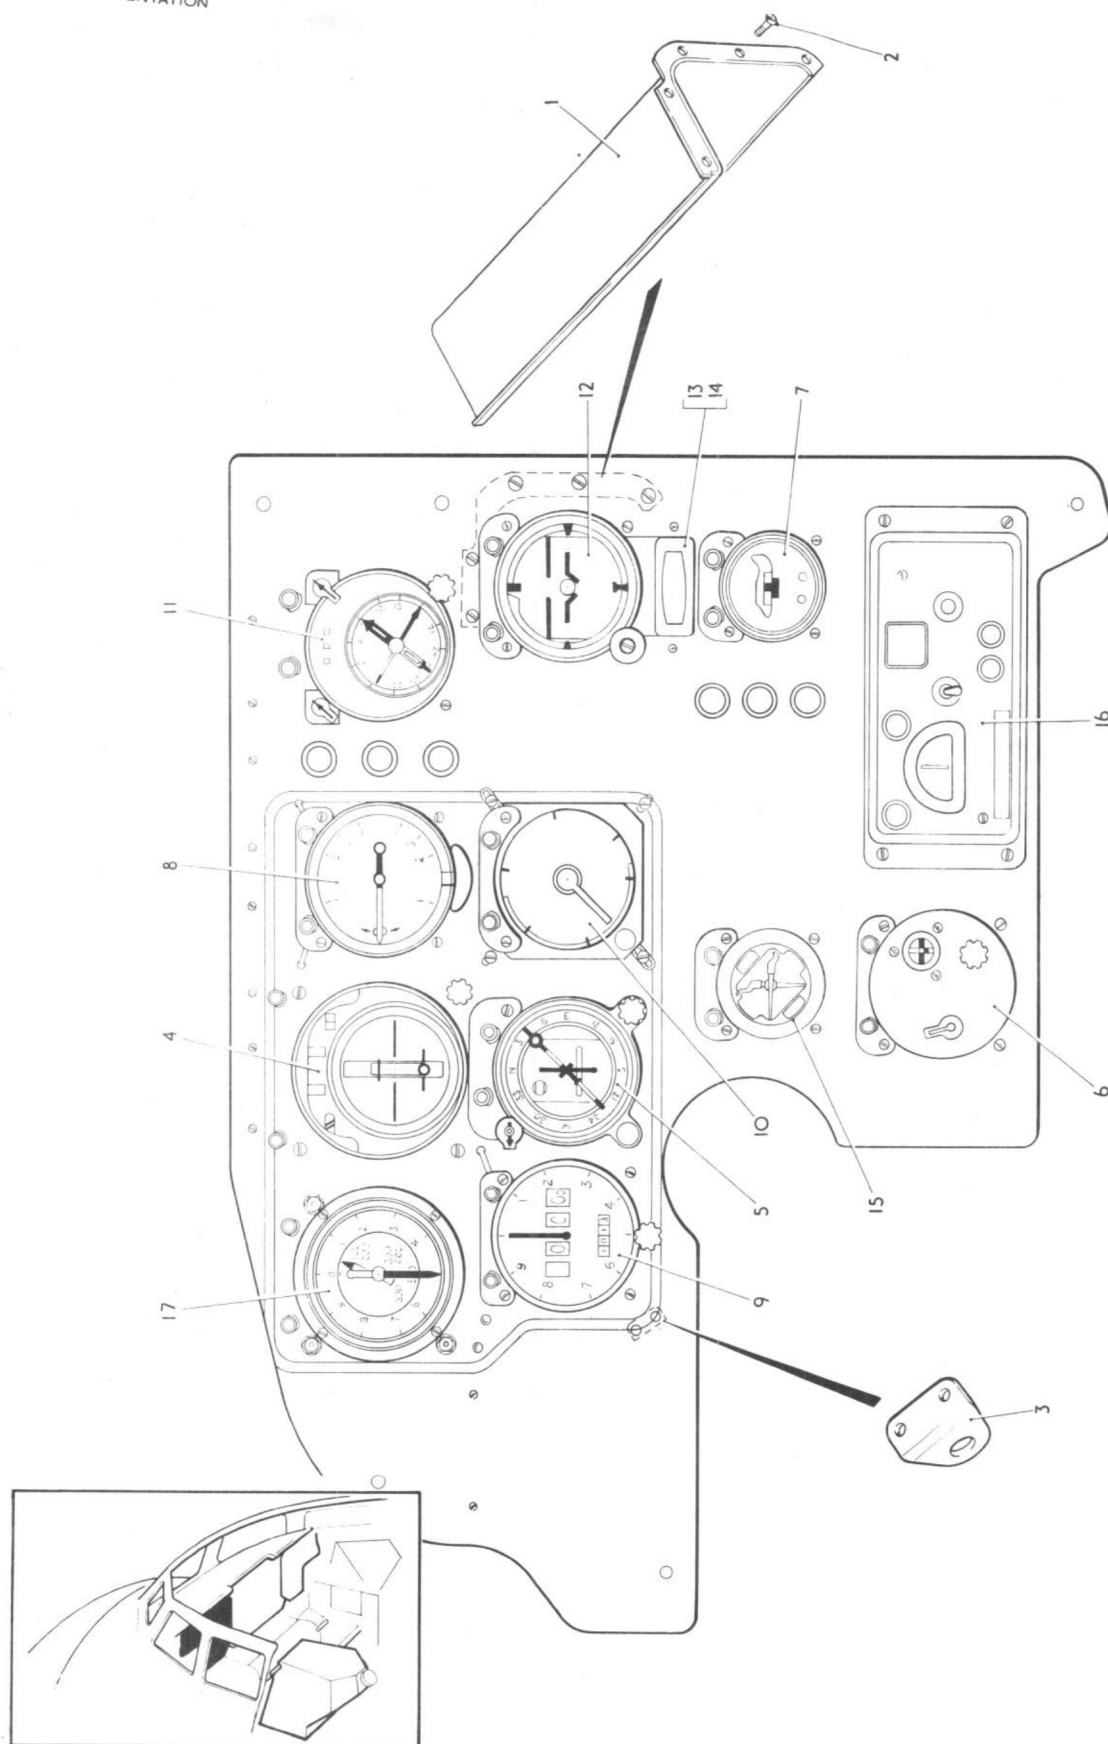

INSTRUMENTATION OF FLIGHT PANEL (L.H.)

FIGURE 4
RESTRICTED

PC 3855

Argosy C. Mk.I.



Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
4-		—	INSTRUMENTATION OF FLIGHT PANEL (LH)						Ref.			
			(Ref. Drg. FS.0512) (See 31-1-1 Fig. 3)									
1	4789	DS.0745/1	Guard						1		C	
			ATTACHING PARTS									
2	28S/1201336 28M/9706321	A.204/D16 A.126/D/66	Screw, Csk. Hd. No. 10 UNF 2A						5		C	
			Nut, Stiff No. 10 UNF 2B						5		C	
			* * *									
3		—	Bracket (Ref. Drg. 0512/80ND) (See 34-1-7, Fig. 1)						Ref.			
4		—	Director, Horizon (Smiths) (See 22-3-1, Fig. 1)						Ref.			
5		—	Compass, Beam (Smiths) (See 22-3-1, Fig. 1)						Ref.			
6		—	Annunciator, Compass (Smiths) (See 22-3-1, Fig. 1)						Ref.			
7		—	Indicator, Trim (Smiths) (See 22-2-1, Fig. 3)						Ref.			
8		—	Indicator, Rate of Climb (Kelvin Hughes) (See 34-1-7, Fig. 1)						Ref.			
9		—	Altimeter (Smiths) (See 34-2-2, Fig. 1)						Ref.			
10		—	Indicator, (Type 16094) (Pre Mod. 36) (See 34-3-1, Fig. 2)						Ref.			
		—	Indicator, Auto Landing, Phase and Altitude (Smiths)						Ref.			
			(Mod. 36) (See 34-3-1, Fig. 2)									
11		—	Selector, Radial Magnetic (Smiths) (See 34-3-4, Fig. 1) ..						Ref.			
12		—	Horizon, Artificial (Ferranti) (See 34-2-3, Fig. 1)						Ref.			
13	6A/6618	KSL.0102K	Indicator, Slip (Kelvin Hughes) (See 23-5-1, Fig. 1)						1		A	
			ATTACHING PARTS									
14	28S/9997565	A.204/B14	Screw, Csk. Hd., No. 6 UNC						2		C	
			* * *									
15		—	Indicator, Electric (Type 9024) (See 23-5-1, Fig. 1)						Ref.			
16		—	Unit, Control (Murphy) (See 34-3-5, Fig. 1)						Ref.			
†												
†												
17		—	Indicator, Airspeed Mk. 15A (See 34-1-7, Fig. 1)						Ref.			

RESTRICTED

INSTRUMENTS

INSTRUMENTATION

Argosy C. MK.I.

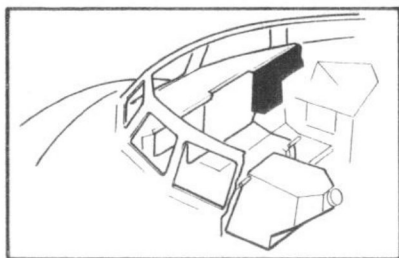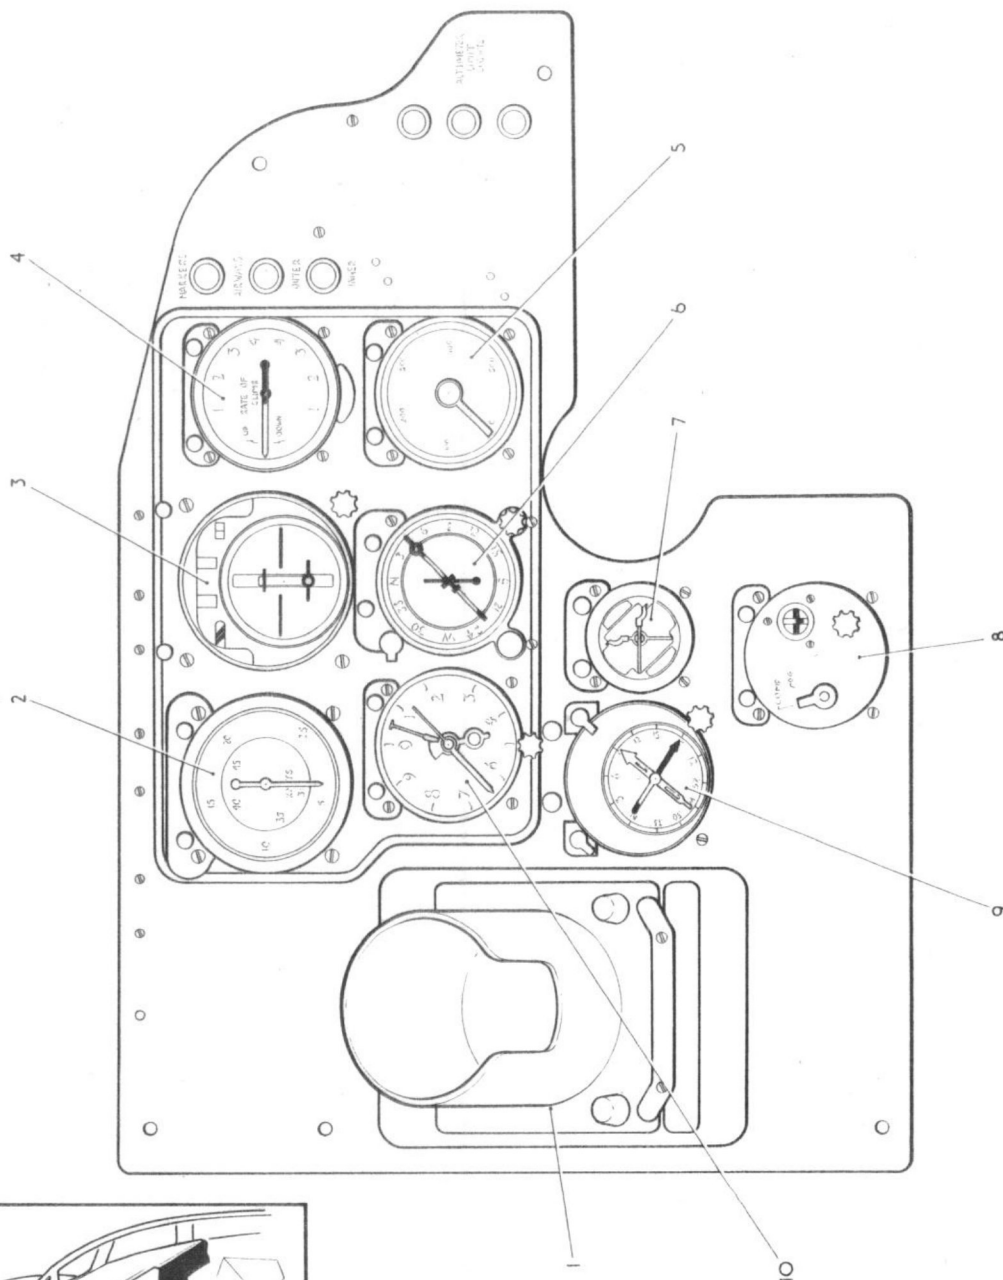

INSTRUMENTATION OF FLIGHT PANEL (R.H.)

FIGURE 5
RESTRICTED


PC 3856

NOVEMBER 1966

A.L.36 TP 27

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
5-		—	INSTRUMENTATION OF FLIGHT PANEL (RH)						Ref.			
			(Ref. Drg. FS.0513) (See 31-1-1, Fig. 3)									
1		—	Indicator: A.S.R. (See 34-4-2, Fig. 1)						Ref.			
2		—	Indicator: Air Speed (Munro) (See 34-1-7, Fig. 2)						Ref.			
3		—	Director: Horizon (Smiths) (See 22-3-1, Fig. 1)						Ref.			
4		—	Indicator: Rate of Climb (Kelvin-Hughes)						Ref.			
			(See 34-1-7, Fig. 2)									
5		—	Indicator: (See 34-3-1, Fig. 2)						Ref.			
6		—	Compass: Beam (Smiths) (See 22-3-1, Fig. 1)						Ref.			
7		—	Indicator: (See 23-5-1, Fig. 1)						Ref.			
8		—	Compass: Annunciator (Smiths) (See 22-3-1, Fig. 1)						Ref.			
9		—	Selector: Radial, Magnetic (Smiths) (See 34-3-4, Fig. 1)						Ref.			
10		—	Altimeter (Smiths) (See 34-1-7, Fig. 2)						Ref.			

RESTRICTED
Argosy 'C' MK.I.

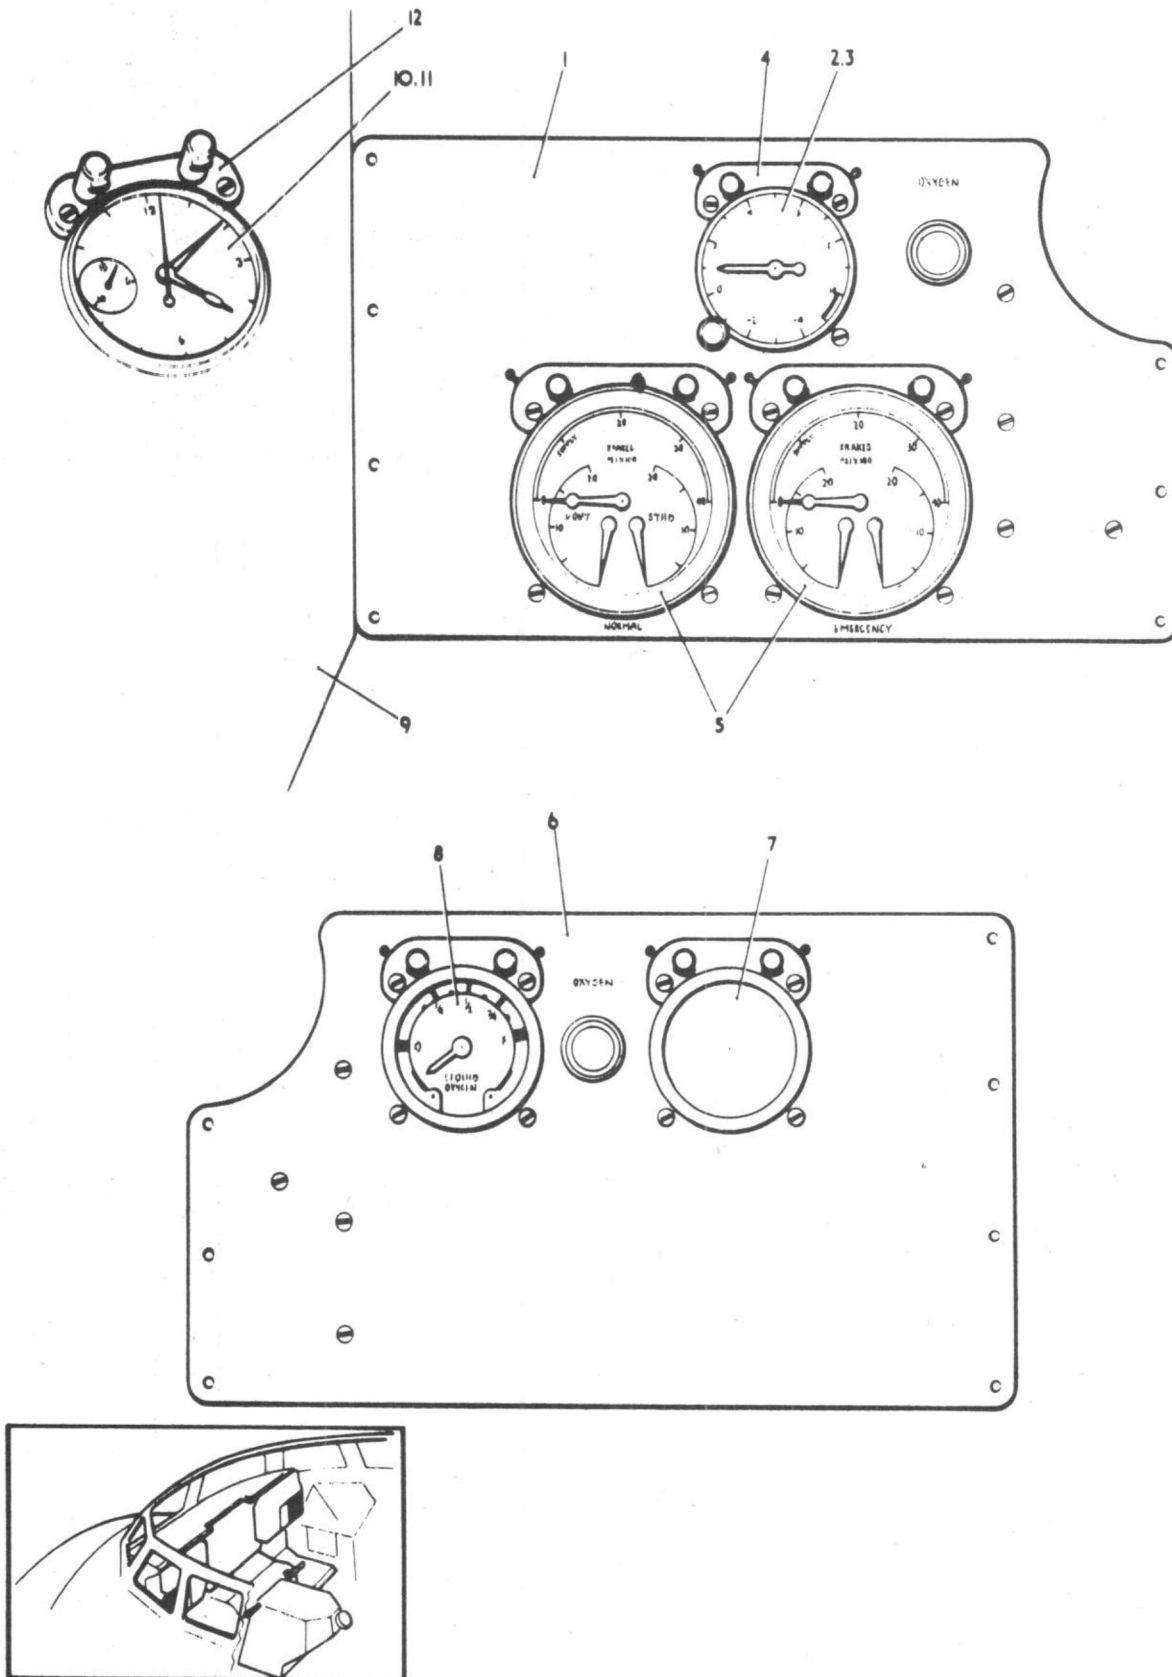

PC 5357

31-1-2 INSTRUMENTATION OF FIXED PANELS (L.H. & R.H.) AND SIDE CONSOLE (L.H.) NOVEMBER 1966

PAGE 11

FIGURE 6
RESTRICTED

A.L.36 TP 27

RESTRICTED
Argosy C. MK.I.

INSTRUMENTS
INSTRUMENTATION



Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Qty. Code
			1	2	3	4	5	6				
6-		—	INSTRUMENTATION OF FIXED PANELS (LH & RH) AND						Ref.			
			SIDE CONSOLE (LH) (Ref. Drgs. ES.0514, ES.0515 and FN.0666)									
1		—	Panel, Fixed (LH) (Ref. Drg. ES.0514) (See 31-1-1, Fig. 3)						Ref.			
2	6A/5418	—	Accelerometer, Mk. 111 (Kelvin Hughes)						1		A	
			ATTACHING PARTS									
3	28S/9993237	A.204/B28	Screw, Csk. Hd., No. 6 UNC						1		C	
			* * *									
4		—	Lamp, Bridge (See 33-3-1, Fig. 5)						Ref.			
5		—	Gauge, Brake Pressure (Ref. No. 6A/4749) (Murray)						Ref.			
			(See 32-4-3, Fig. 2)									
6		—	Panel, Fixed (RH) (Ref. Drg. ES.0515) (See 31-1-1, Fig. 2)						Ref.			
7		—	Gauge, Oxygen Pressure (Ref. Drg. 63-4-1132) (Sangamo						Ref.			
			Weston) (See 35-2-1, Fig. 3)									
8		—	Gauge, Oxygen Contents (Ref. Drg. 803161) (B.O.C.)						Ref.			
			(See 35-2-1, Fig. 1)									
9		—	Panel, Side Console (LH) (Ref. Drg. FN.0683/1)						Ref.			
			(See 25-1-7, Fig. 2)									
10	6A/4833	—	Clock, Time Elapsed (Smiths)						1		A	
			ATTACHING PARTS									
11	28S/1011449	A.33/B32	Screw, Csk. Hd., 4 BA						1		C	
			* * *									
12		—	Lamp, Bridge (See 33-3-1, Fig. 4)						Ref.			

RESTRICTED

INSTRUMENTS

INSTRUMENTATION

Argosy 'C' MK.I.

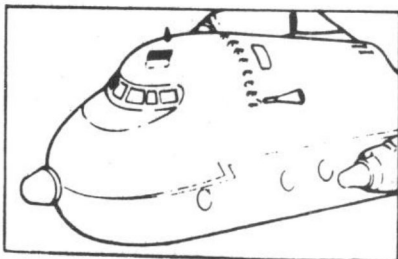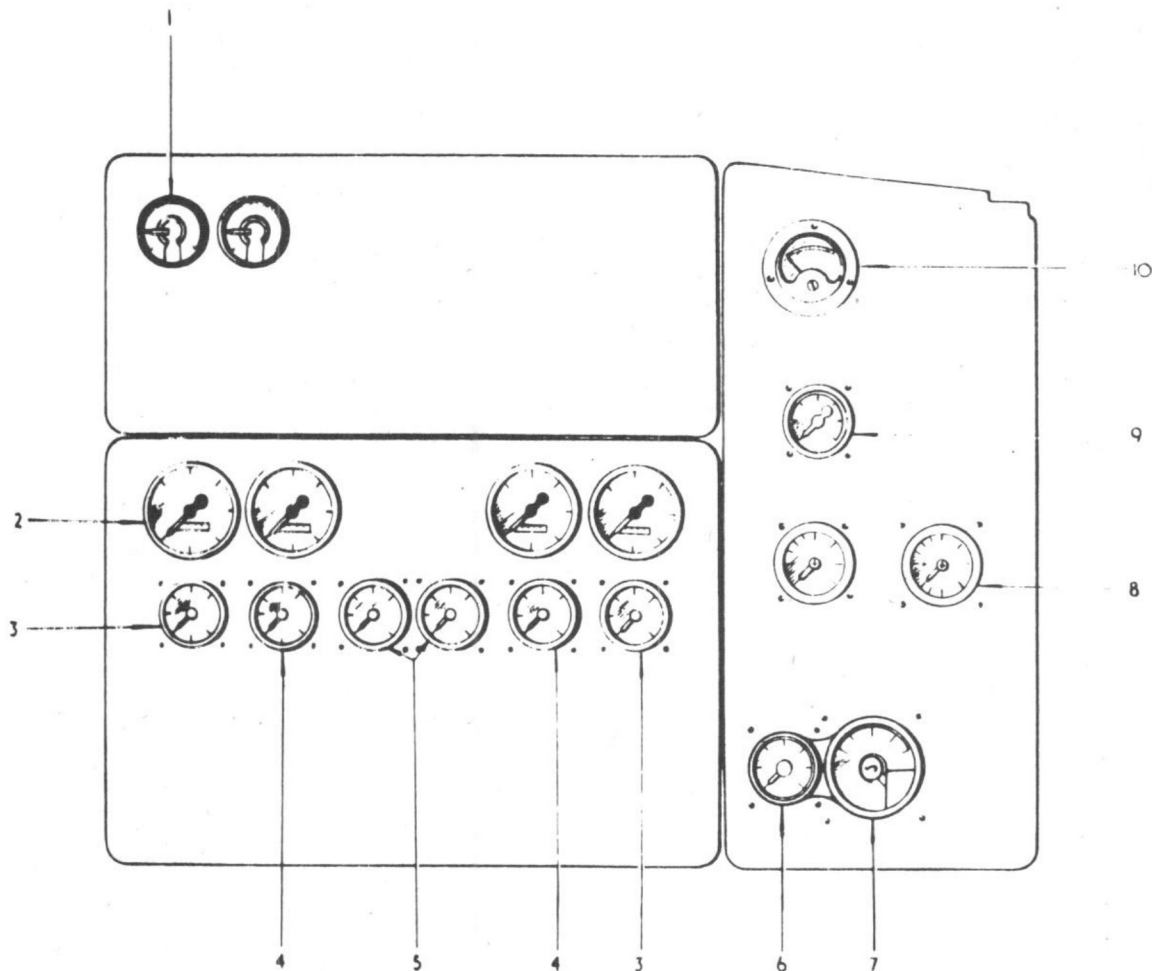


PC 5062

Argosy 'C' MK.I.

INSTRUMENTS

INSTRUMENTATION

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
7-		—	INSTRUMENTATION OF FLIGHT ENGINEER'S TOP						Ref.			
			PANELS (Ref. Drg. FS.0519)									
1		—	Gauge, Temperature (Sangamo-Weston) (See 30-4-3, Fig. 1)						Ref.			
2		—	Flowmeter (Elliott) (See 28-4-3, Fig. 1)						Ref.			
3		—	Indicator, Fuel Contents (Aux.) (Firth-Cleveland)						Ref.			
			(See 28-4-5, Fig. 1)									
4		—	Indicator, Fuel Contents (Nos. 1 and 2) (Firth-Cleveland)						Ref.			
			(See 28-4-5, Fig. 1)									
5		—	Indicator, Fuel Contents (Nos. 3 and 4) (Firth-Cleveland)						Ref.			
			(See 28-4-5, Fig. 1)									
6		—	Voltmeter (Sangamo-Weston) (See 24-6-1, Fig. 1)						Ref.			
7		—	Meter, Frequency (Sangamo-Weston) (See 24-6-1, Fig. 1)						Ref.			
8		—	Indicator, Contents (Firth-Cleveland) (See 82-3-1, Fig. 1)						Ref.			
9		—	Gauge, Hydraulic Pressure (See 29-4-15, Fig. 1)						Ref.			
10		—	Ammeter (Pullen) (See 24-6-1, Fig. 1)						—			

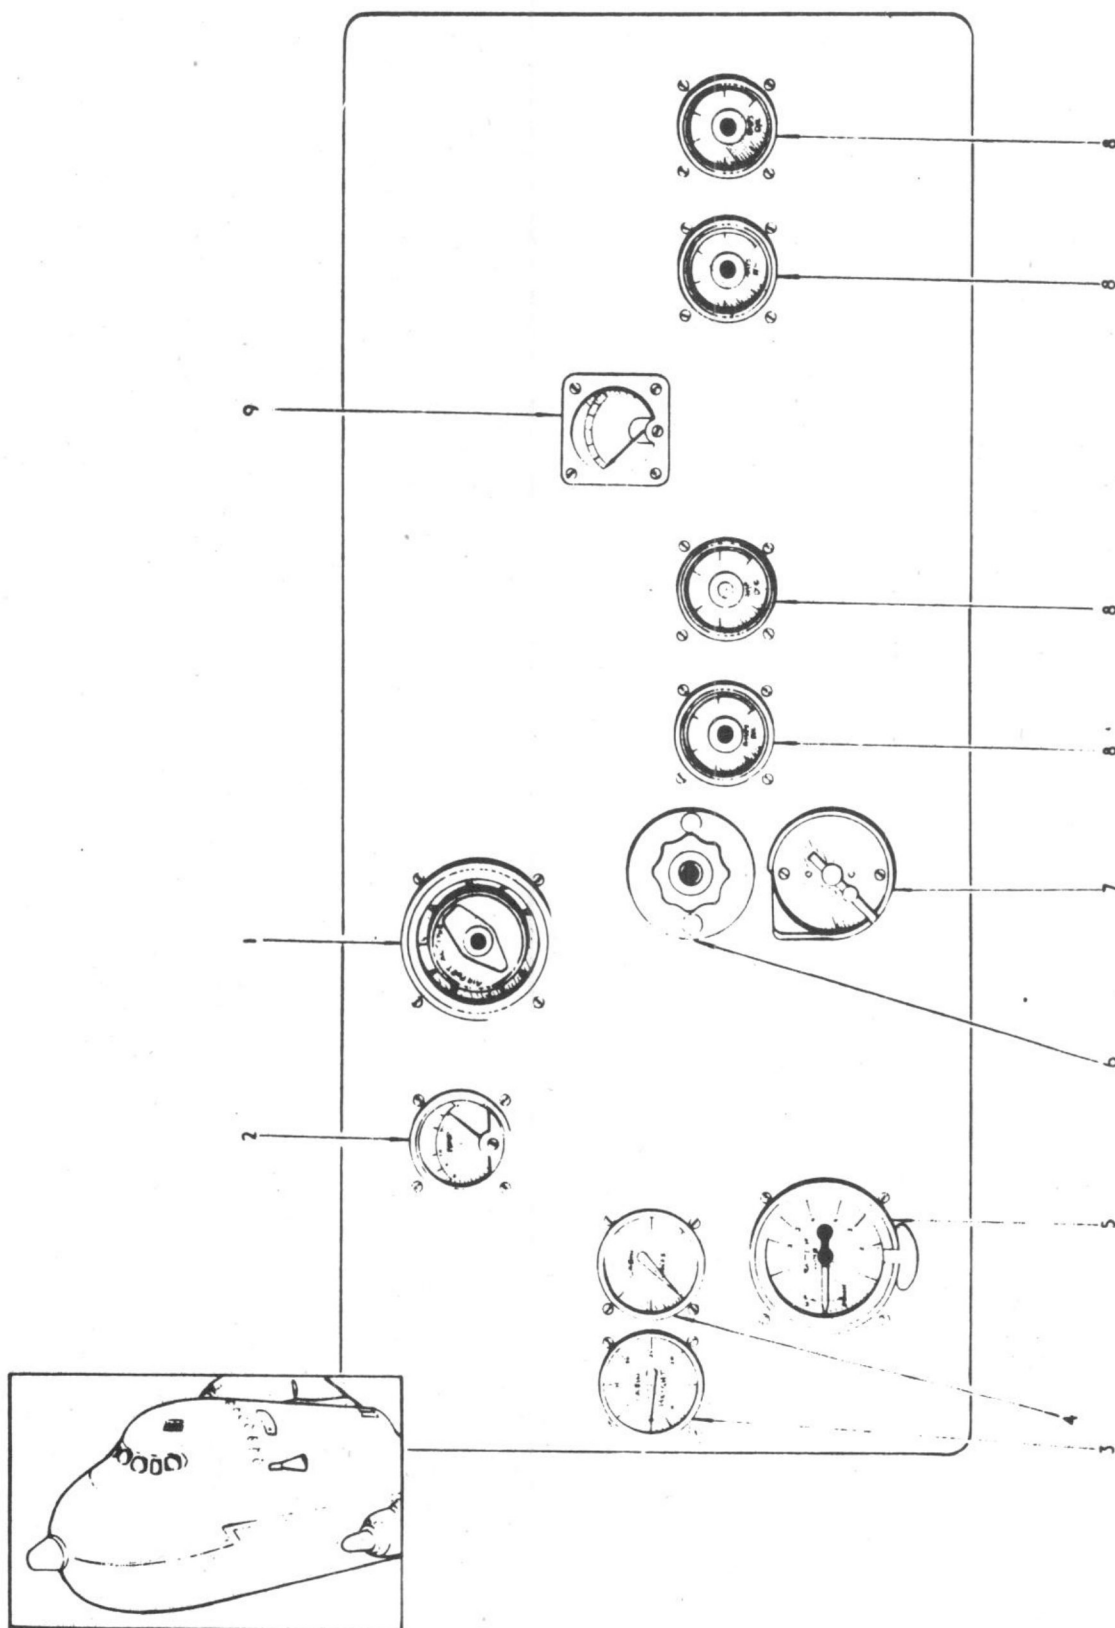

PC 5063



INSTRUMENTATION OF FLIGHT ENGINEER'S BOTTOM PANEL

FIGURE 8.

RESTRICTED

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
8-		—	INSTRUMENTATION OF FLIGHT ENGINEER'S BOTTOM						Ref.			
			PANEL (Ref. Drg. FS.0520)									
1		—	Selector, Airport Altitude (Normalair) (See 21-4-1, Fig. 3)						Ref.			
2		—	Gauge, Temperature (Smiths) (See 21-7-2, Fig. 1)						Ref.			
3		—	Indicator, Cabin Height (Smiths) (See) . . .						Ref.			
4		—	Gauge, Cabin Pressure (Smiths) (See 21-4-1, Fig. 3)						Ref.			
5		—	Indicator, Rate of Climb (Smiths) (See)						Ref.			
6		—	Valve, Dump (Normalair) (See 21-4-1, Fig. 3)						Ref.			
7		—	Valve, S.P. Aero (Saunders) (See)						Ref.			
8		—	Ammeter (Sangamo-Weston) (See 24-1-2, Fig. 7)						Ref.			

RESTRICTED
Argosy C. MK.I.

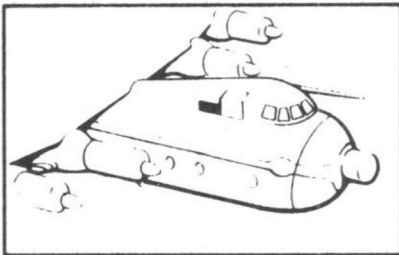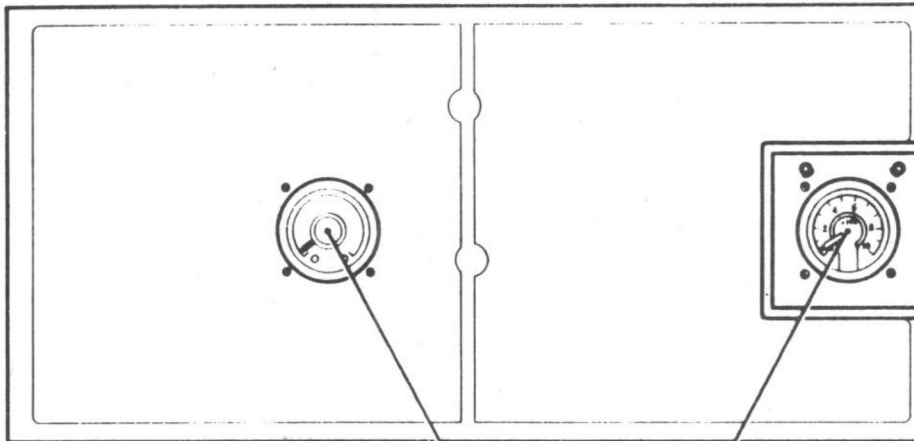

INSTRUMENTATION OF AA P.P. PANEL
FIGURE 9

PC 5073



Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
8-		—	INSTRUMENTATION OF AIRBORNE AUXILIARY POWER PLANT PANEL (Ref. Drg. ES.0602)						Ref.			
1		—	Ammeter (Sangamo-Weston) (See 49-2-1, Fig. 1)						Ref.			
2		—	Indicator Temperature (Sangamo-Weston)						Ref.			
			(See 49-2-1, Fig. 1)									

Argosy 'C' MK.I.

INSTRUMENTATION

[illegible]

Argosy C. MK.1

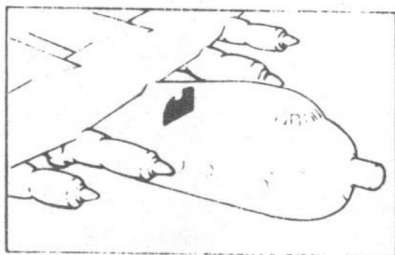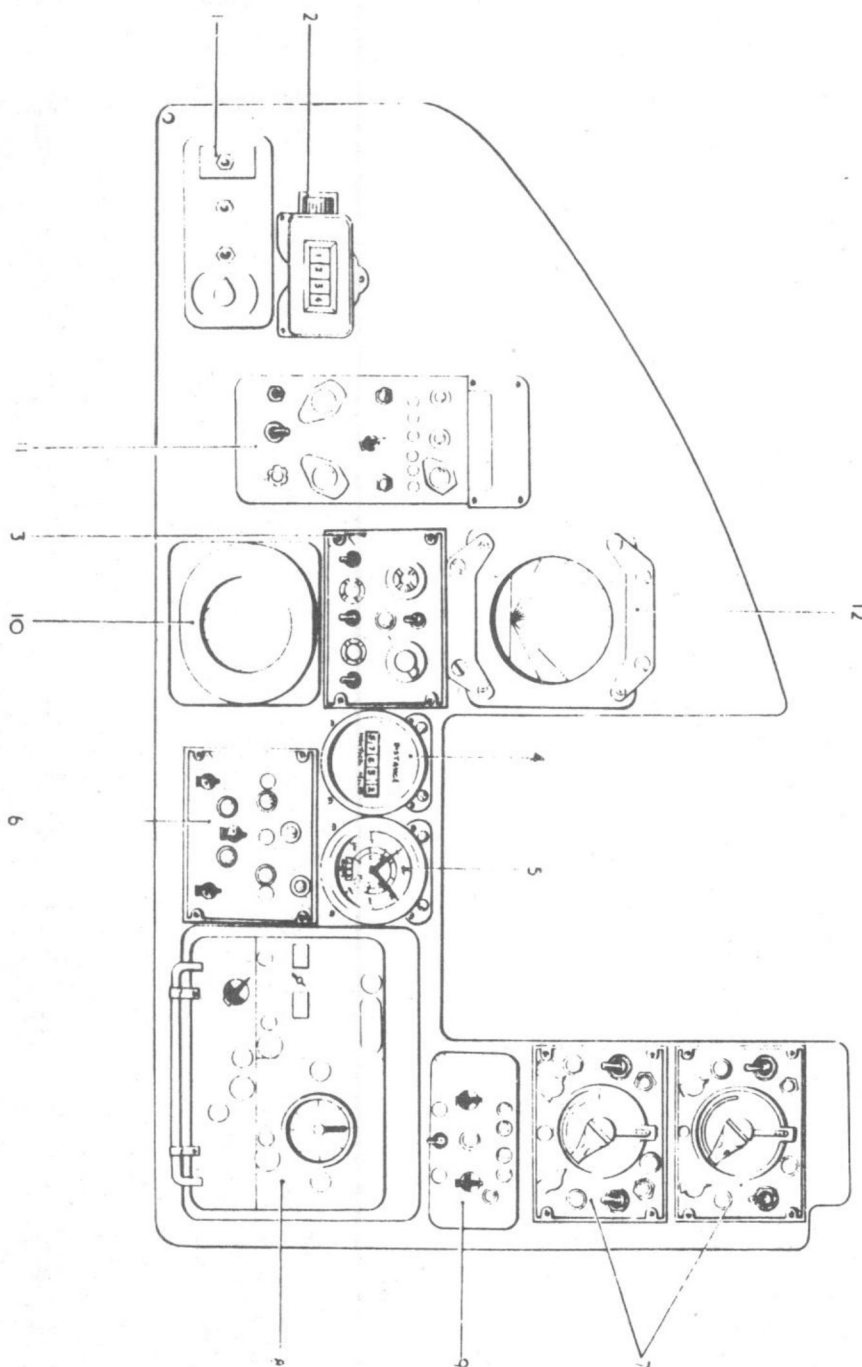

PC5067

Argosy 'C' MK.I



Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
10-		—	INSTRUMENTATION OF NAVIGATOR'S MAIN PANEL						Ref.			
			(Ref. Drgs. FS.0668, FS.0637, FS.0664)									
1		—	Unit, Air Mileage Control (Kelvin Hughes) (See 34-2-1, Fig. 3)						Ref.			
2		—	Indicator, Air Mileage (Kelvin Hughes) (See 34-2-1, Fig. 3)						Ref.			
3		—	Unit, Control (A.S.R.) (E. K. Cole) (See 34-4-2, Fig. 1) ..						Ref.			
4		—	Indicator, Distance Flown (Marconi) (See 34-4-1, Fig. 1)						Ref.			
5		—	Indicator, Drift and Ground Speed (Marconi) (See 34-4-1, Fig. 1)						Ref.			
6		—	Unit, Display (Doppler) (Marconi) (See 34-4-1, Fig. 1) ..						Ref.			
7		—	Unit, Control (A.D.F.) (Marconi) (See 34-3-3, Fig. 1) ..						Ref.			
8		—	Unit, Track Control (Smiths) (See 22-3-1, Fig. 1)						Ref.			
9		—	Box, Control (Decca) (See)						Ref.			
10		—	Indicator, Rebecca, Type 208 (See 34-4-3, Fig. 1)						Ref.			
11		—	Unit, Control, Rebecca, Type 526A (See 34-4-3, Fig. 1) ..						Ref.			
12		—	Indicator, A.S.R. (E. K. Cole) (See 34-4-2, Fig. 1)						Ref.			

RESTRICTED

INSTRUMENTS

INSTRUMENTATION

Argosy C. MK.1

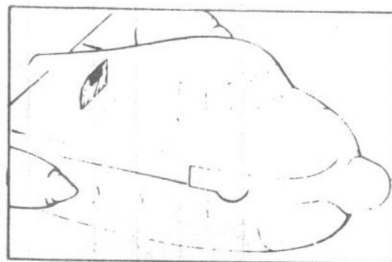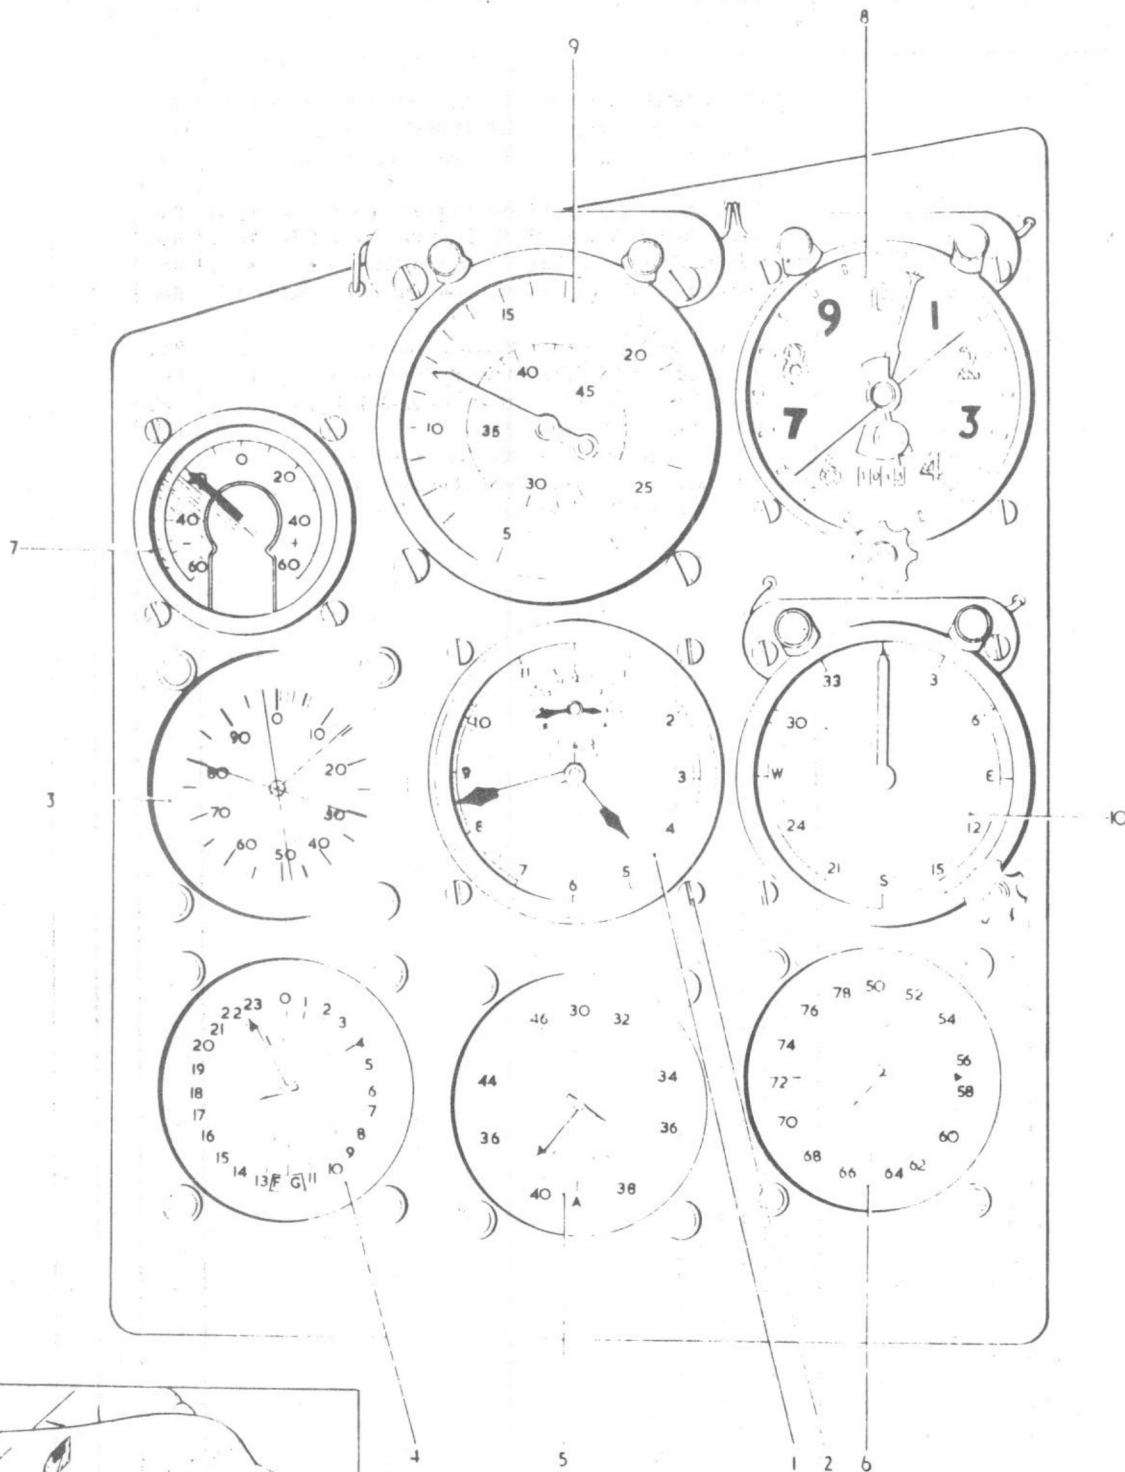

PC 5068

INSTRUMENTATION OF A.V. PANEL

NOVEMBER 1966

FIGURE II.

TL 36 TP 27


RESTRICTED

Argosy 'C' MK.I.

INSTRUMENTS

INSTRUMENTATION

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
11-		—	INSTRUMENTATION OF ANTI-VIBRATION PANEL						Ref.			
			(Ref. Drg. ES.0598)									
1	6A/3157	V.308	Clock (Smiths)						1		A	
			ATTACHING PARTS									
2	28D/9130082	AS.1246/3B	Bolt, Rd. Hd., 4 BA						4		C	
3		—	Indicator: Lane Identification (Decca) (See 34-3-2, Fig. 1)						Ref.			
4		—	Decometer (Red) (Decca) (See 34-3-2, Fig. 1)						Ref.			
5		—	Decometer (Green) (Decca) (See 34-3-2, Fig. 1)						Ref.			
6		—	Decometer (Purple) (Decca) (See 34-3-2, Fig. 1)						Ref.			
7		—	Gauge, Air Temperature (Sangamo-Weston) (See 34-2-1, Fig. 2)						Ref.			
8		—	Altimeter (Smiths) (See 34-2-2, Fig. 2)						Ref.			
9		—	Indicator: Airspeed (Munro) (See 34-1-5, Fig. 1)						Ref.			
10		—	Compass: Repeater (Smiths) (See 22-3-1, Fig. 1)						Ref.			

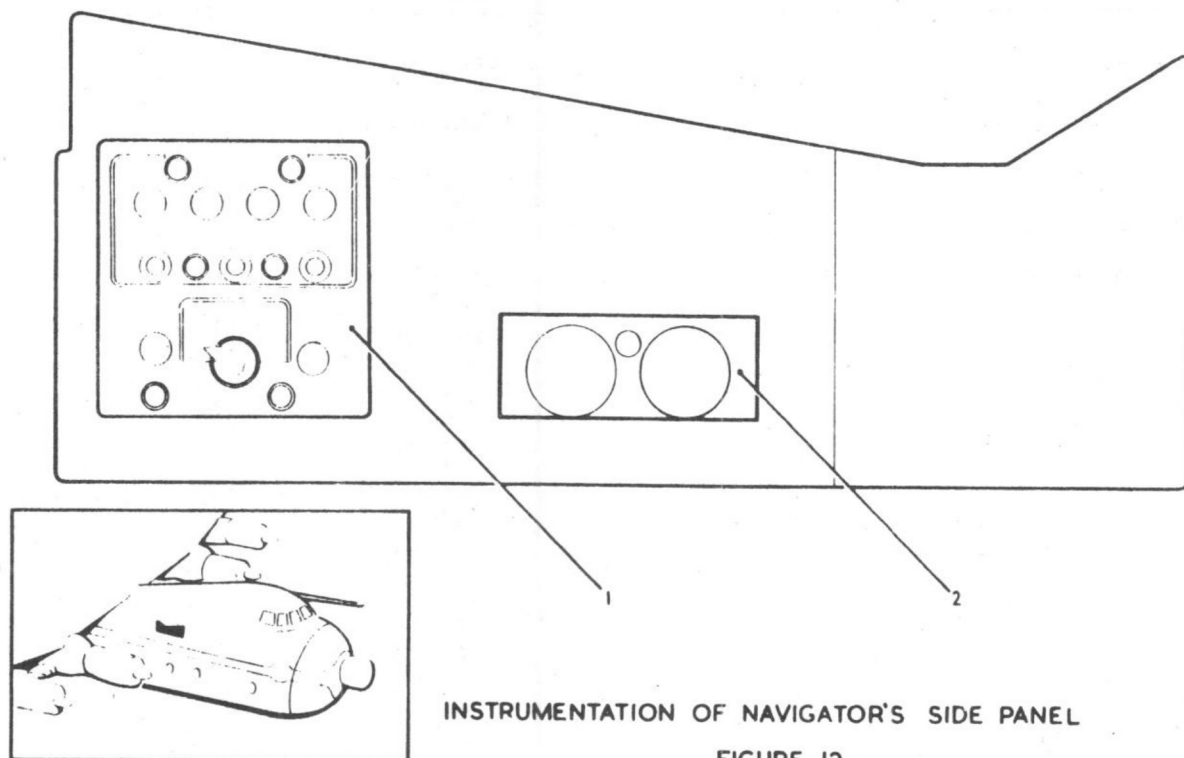

INSTRUMENTATION OF NAVIGATOR'S SIDE PANEL
FIGURE 12.

PC 5074

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Icy. Code
			1	2	3	4	5	6				
12-		—	INSTRUMENTATION OF NAVIGATOR'S SIDE PANEL ...						Ref.			
1		—	(Ref. Drg. ES.0581) (See 31-1-1, Fig. 10)									
2		—	Unit, Control (See 23-7-1, Fig. 1)						Ref.			
		—	Unit, Control (See 23-6-1, Fig. 1)						Ref.			

RESTRICTED

Argosy 'C' MK.I.

INSTRUMENTS


ELECTRICS

Subject 2

ELECTRICS

RESTRICTED

Argosy C. MK.I.

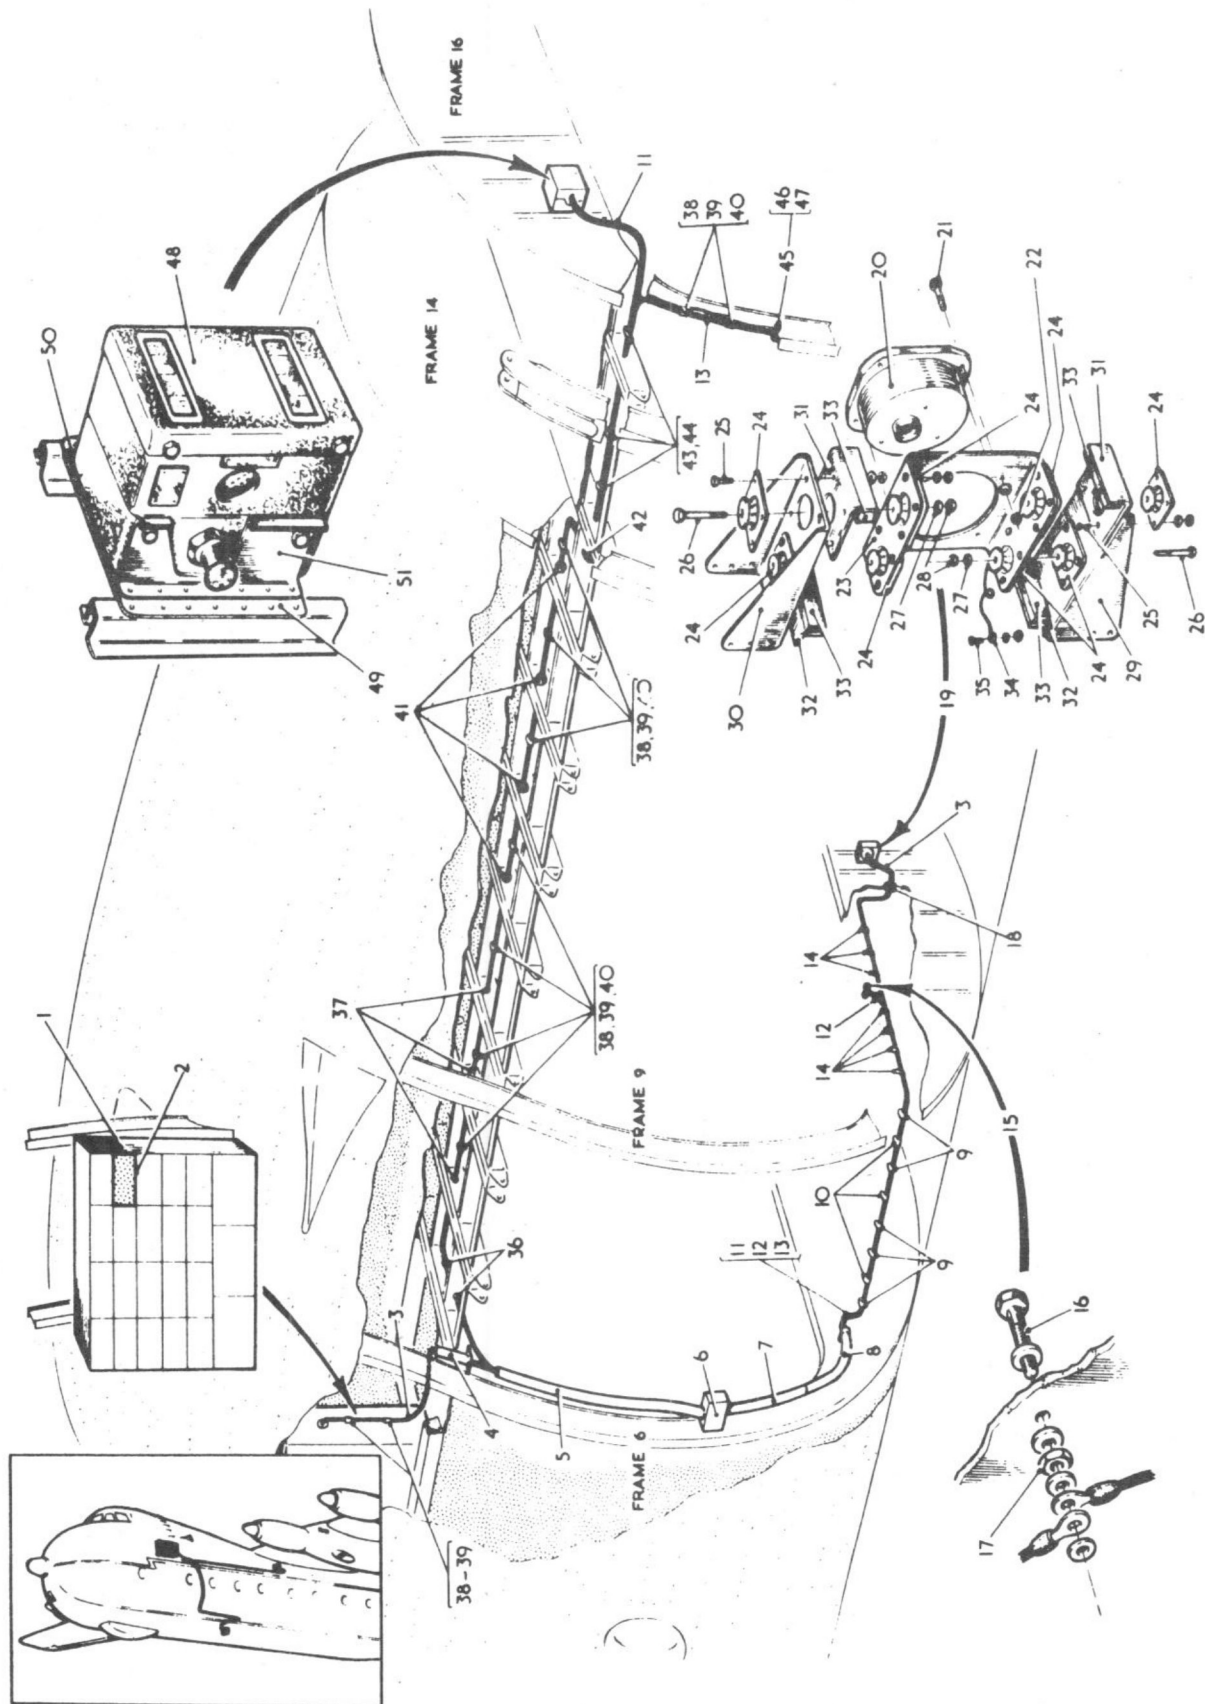

P.C.1380

RESTRICTED

Argosy C. MK.I.

INSTRUMENTS

ELECTRICS

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Qty. Code
			1	2	3	4	5	6				
1-		—	INSTALLATION OF FATIGUE METER AND A.S.I. SWITCH						Ref.			
			CABLE RUN P.1 TO A.S.I. SWITCH AND FATIGUE METER						Ref.			
			(Ref. Drgs. FV.2655, FV.2656 and DV.2001 Sht. 91)									
1		—	Distribution Panel P.1 (See 24-2-1, Fig. 1, Index 2) ...						Ref.			
2		—	Panel, Fuse (See 24-2-1, Fig. 3, Index 46)						Ref.			
		DV.2301	Set, Flylead (P.1)						Ref.			
3		DV.2091/2	Cable						1			
4		—	Conduit Assembly (See 24-1-2, Fig. 8, Index 27)						Ref.			
5		—	Conduit (See 24-1-2, Fig. 8, Index 34)						Ref.			
6		—	Conduit Junction Box Assembly (See 24-1-2, Fig. 8, Index 38)						Ref.			
7		—	Conduit (See 24-1-2, Fig. 8, Index 56)						Ref.			
8		—	Conduit (See 24-1-2, Fig. 8, Index 57)						Ref.			
9		—	Clip Assembly (See 29-5-1, Fig. 2, Index 19)						Ref.			
10		—	Clip Assembly (See 29-5-1, Fig. 2, Index 22)						Ref.			
		CV.2422	Set, Wiring (Zone 22)						Ref.			
11		DV.2091/1	Cable						1			
12		DV.2091/3	Cable						1			
13		DV.2091/4	Cable						1			
14		—	Clip Assembly (See 31-4-2, Fig. 2, Index)						Ref.			
15		—	Earthing Point Assembly						1			
16	7037	BV.0363/7	Bolt, 1" UNF						1		C	
	28W/9471273	SP.124/E	Washer, 1" UNF						4		C	
17	28M/9416088	A.103/ET	Nut Thin, 1" UNF						1		C	
	28M/9438423	A.125/E	Nut, Stiff, 1" UNF						1		C	
18	5K/2877	SP.40/A8	Grommet, Rubber						1		C	
19		—	Switch, A.S.I. and Mounting Assembly						1			
20	6A/5416	E.12A/10A/314	Switch, A.S.I. (Munroe)						1		A	
			ATTACHING PARTS									
21	28D/9419452	A.25/3B	Bolt, 4 BA						4		C	
	28W/9419465	SP.13/B	Washer, 4 BA						4		C	
22	28W/9416642	SP.47/B	Washer, Spring, 4 BA						4		C	
			* * *									
23		FS.0683/2	Plate, Mounting						1			
24	10AJ/131	—	Mounting, A.V. Type 944 (Equiflexible)						8		B	
			ATTACHING PARTS									
25	28DU/9419560	A.102/1B	Bolt, No. 6 UNC 2A						32		C	
26	28DU/17791	A.102/12C	Bolt, No. 8 UNC 2A						4		C	
	28W/9129655	SP.122/B	Washer, No. 6 UNC						32		C	
27	28W/9156626	SP.122/C	Washer, No. 8 UNC						4		C	
	28M/9438434	A.129/B	Nut, Stiff, No. 6 UNC 2B						32		C	
28	28M/9438435	A.129/C	Nut, Stiff, No. 8 UNC 2B						4		C	
			* * *									
29		FS.0683/3	Bracket, Bottom						1			
30		FS.0683/4	Bracket, Top						1			
31		FS.0683/5	Angle						2			
32		FS.0683/6	Angle						2			
33		FS.0683/7	Rubber, Strip, Sorbo						4			
34	1840	TDS.27-A-30A	Strip, Bonding						1		C	
			ATTACHING PARTS									
35	28DU/9419560	A.102/1B	Bolt, No. 6 UNC 2A						1		C	
	28W/9129655	SP.122/B	Washer, No. 6 UNC						1		C	
	28M/9438435	A.129/B	Nut, Stiff, No. 6 UNC 2B						1		C	
			* * *									
36		—	Clip Assembly (See 33-2-2, Fig. 2, Indices 11, 14)						Ref.			
37		—	Clip Assembly (See 33-2-2, Fig. 2, Index 52)						Ref.			

Fig. & Index	Ref. No.	Part No.	Nomenclature						Units Per. Assy.	Usage Code	C. of E.	Key. Code
			1	2	3	4	5	6				
1-38	5F/9434857	HV.3341	Strapping (Hellermann)						A.R.		C	
39	5F/9138822	NY.3342	Stud (Hellermann)						A.R.		C	
40	26FX/4211	STD.1687/2	Clip, Saddle						9		C	
41	—	—	Fairlead Assembly (See 33-2-2, Fig. 3, Index 1)						Ref.			
42	—	—	Clip Assembly (See 33-2-2, Fig. 3, Index 9)						Ref.			
43		AS.3180/B	Clip (Size to Suit)						3			
			ATTACHING PARTS									
44	28S/1201335	A.205/B16	Screw, Panhead, No. 6 UNC						1		C	
	28W/9471274	SP.124/B	Washer, No. 6 UNC						1		C	
			* * *									
45		—	Earthing Point Assembly, E.74						1			
46	7037	BV.0363/7	Bolt, 1" UNF						1		C	
	28W/9471273	SP.124/E	Washer, 1" UNF						4		C	
47	28M/9416088	A.103/ET	Nut, Thin, 1/2" UNF 2B						1		C	
	28M/9438423	A.125/E	Nut, Stiff, 1/2" UNF 2B						1		C	
48	6A/6485	M.1946	Meter, Fatigue, Mk. 11 (Mechanisms)						1		A	
49		FS.0681/3	Plate, Mounting						1			
50		FS.0681/5	Channel						1			
51		FS.0681/4	Channel						1			

