

CHAP. 1 AIRFRAME S.P. 4 A.L. 3 SHEET 1 OF 3	SERVICING PROCEDURE F53 T55	BAC F53 & T55 (SA) 5A3A Section 1 2nd Edition
Brake Parachute - Removal	AFSC	TIME EST
Safety and Servicing Notes are to be complied with throughout the work detailed on this card.	43151	
SPECIAL TOOLS AND EQUIPMENT		ASSOCIATED PROCEDURES
Locking Key (26DK/95118).		
<u>43151</u>		
<p>1. PREPARATION</p> <p>1.1 No.1 controls system Release hydraulic pressure. accumulator.</p> <p>1.2 Braking parachute Operate to unlock. stream handle. (See Fig.1).</p> <p>1.3 Parachute compartment Open fully, by hand. doors. (See Fig.2).</p> <p>1.4 Battery isolating Set to ON. switch.</p> <p>1.5 Braking parachute Press. jettison push-switch. (See Fig.1).</p> <p>1.6 Battery isolating Set to OFF. switch.</p> <p>1.7 Cable clamp (aft of Slacken. tail bumper).</p> <p>1.8 Parachute cables Release from attachment clips. (rear of fuselage and tail bumper).</p> <p>2. REMOVAL</p> <p>2.1 Container. Support.</p> <p>2.2 Dzus fasteners Release. (quantity 4).</p> <p>2.3 Container. Remove, complete with parachute.</p>		
		Continued Overleaf

CHAP. 1 AIRFRAME

SERVICING PROCEDURE

S.P. 4 A.L.

SHEET 2 OF 3

F53


T55

BAC F53 & T55 (SA)

5A3A Section 1

2nd Edition

Safety and Servicing Notes are to be complied with  
throughout the work detailed on this card.

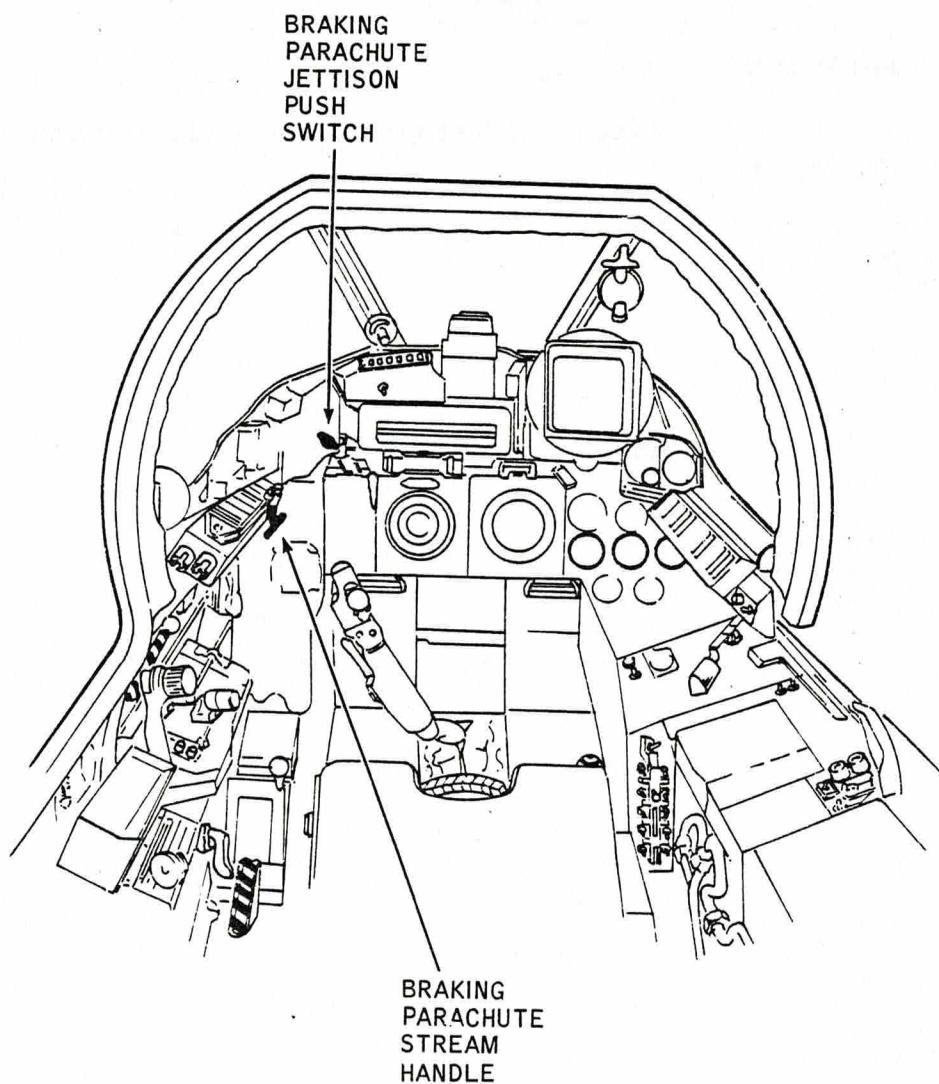

BRAKE PARACHUTE - REMOVAL

FIGURE 1

Continued

CHAP. 1 AIRFRAME  
S.P. 4 A.L.  
SHEET 3 OF 3

SERVICING PROCEDURE


F53 T55

BAC F53 & T55 (SA)

5A3A Section 1

2nd Edition

Safety and Servicing Notes are to be complied with  
throughout the work detailed on this card.

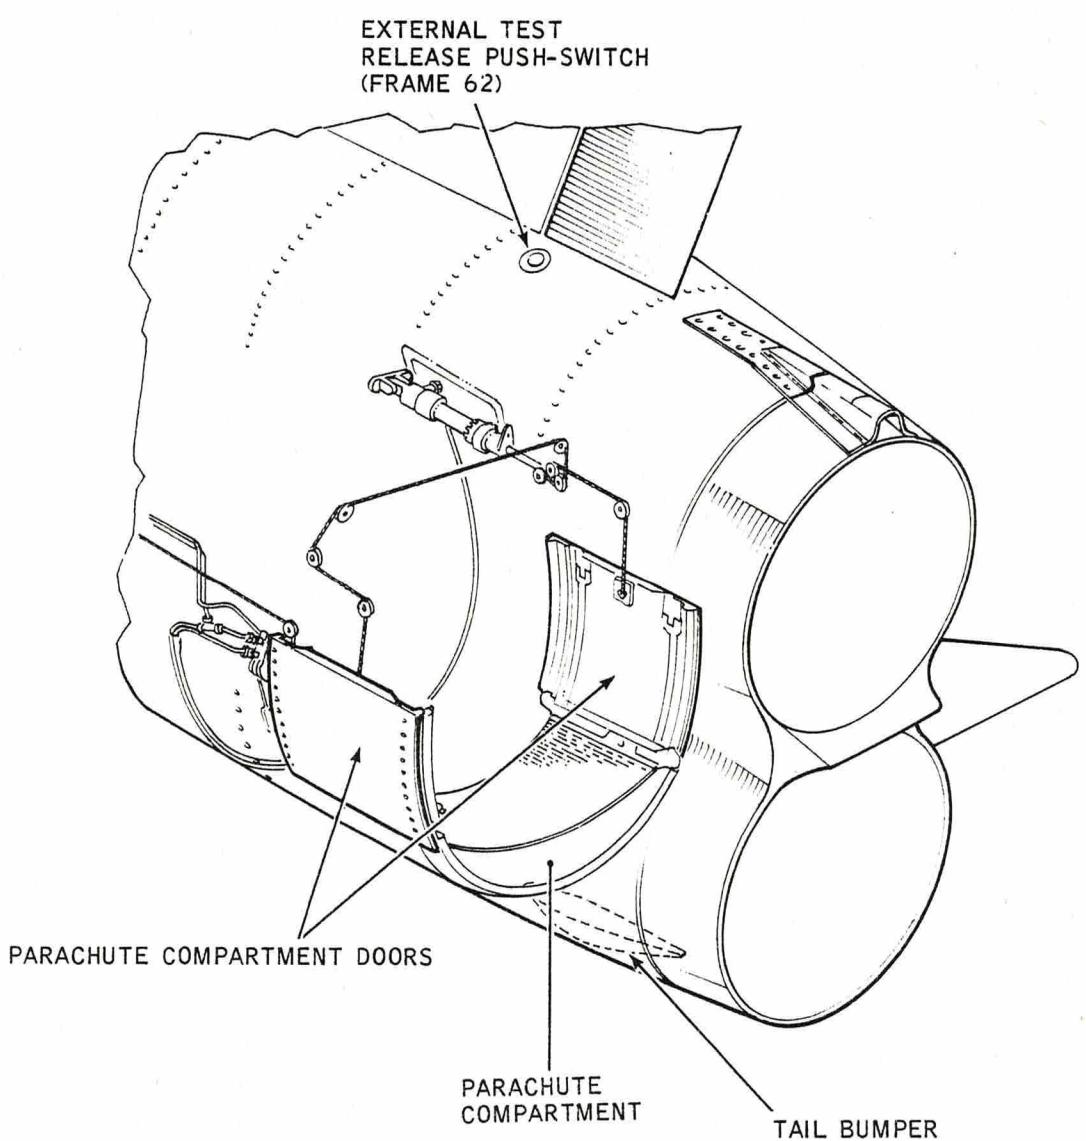

BRAKE PARACHUTE - REMOVAL

FIGURE 2

SERVICING PROCEDURE INSPECTION STAGES DO NOT EXCLUDE ADDITIONAL INSPECTION STAGES  
INCORPORATED AS NECESSARY IN MAINTENANCE CERTIFICATION DOCUMENTS





This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.