

E ELECTRICS

ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.C.N. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.7	ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE, ASSEMBLY	-	-	-	-
	6140-99-910-1534	Spares for: ACCUMULATORS, type 'C' (See E.H8.81.3)	4	-	-	EA1/1
	E.H8.81.95	BOX, JUNCTION, No.1 INSTALLATION	-	-	-	EA1/2
	E.H8.81.97	Spares for: BOX, JUNCTION No.1 ASSEMBLY	1	-	-	EA1/3
5X/1002695	CZ/23212/1	Spares for: BLOCK, terminal, 20-way	2	-	C	EA1/4
28S/	AGS.246/24	Attaching parts for CZ23212/1:- Screw, Ch.Hd. 4 BA	2	-	C	EA1/5
	E.A1.81.583	BOX, JUNCTION 40-way	1	-	-	EA1/6
5E/3038	†	CABLE, unipren 6	QR	-	C	
5E/3040	†	CABLE, unipren 12	QR	-	C	
5E/3042	†	CABLE, unipren 24	QR	-	C	
	E.A1.81.597/A	COVER, ASSEMBLY	1	-	-	EA1/7
5X/6168	Z23197	GASKET	2	-	C	
5X/	Z23198	GASKET	2	-	C	
5X/2790	Z22634	GROMMET	1	-	C	
5X/6174	Z50216	LINK, connecting 8-way	1	-	C	
	E.A1.81.461	PLATE, blanking	1	-	-	EA1/8
	E.A1.81.463	PLATE, blanking	2	-	-	EA1/9
		Attaching parts for E.A1.81.461, E.A1.81.463:-				
28S/	AGS.246/30	SCREW, rd. hd. 6 BA	4	-	C	EA1/10
28M/5314	A16Y/AP	Nut, plain 6 BA	4	-	C	
28W/9475535	AGS.162/A	Washer, spring 6 BA	4	-	C	
5X/6185	CZ.50361	PLUG, size 'D'	1	-	C	EA1/11
5X/1006131	Z49428	SLEEVE, cable	12	-	C	
	SIEGRIST-OREL					
	SL 2/3	SLEEVE, 3/4" long	20	-	-	
	MAM RUBBER CO					
	†	SLEEVE, 3 m/m i/d grade CXH 3/8" long	30	-	-	
5X/2266	Z19924	TAG, QR	12	-	C	
5X/2267	Z19925	TAG, QR	6	-	C	
5X/2268	Z19926	TAG, QR	2	-	C	
5X/2269	Z19979	THIMBLE	12	-	C	
5X/2270	Z19980	THIMBLE	6	-	C	
5X/2271	Z19981	THIMBLE	2	-	C	
		Attaching parts for E.H8.81.97:-				
28D/9436920	A25/1C	Bolt, 2 BA	4	-	C	EA1/12
28M/1278190	AGS.2001/C/1	Nut, stiff 2 BA	4	-	C	
28W/9419475	SP15/C	Washer, 2 BA	4	-	C	
	E.A3.81.300	BOX, JUNCTION, No.2 INSTALLATION	-	-	-	EA1/13
		Spares for:-				
	E.A3.81.303/1	BOX JUNCTION, No.2 ASSEMBLY	1	-	-	EA1/14
		Spares for:-				
5X/1002695	CZ23212/1	BLOCK, terminal, 20-way	1	-	C	EA1/15
		Attaching parts for CZ23212/1:-				
28S/1200033	A31/B24	Screw, ch. hd. 4 BA	2	-	C	EA1/16

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5X/6168	E.A1.81.589	BOX JUNCTION 20-WAY	1	—	—	EA1/17
	Z23197	GASKET	1	—	C	
	E.A1.81.598/E	LID, ASSEMBLY	1	—	—	EA1/18
		Spares for:-				
32C/814	†	RUBBER, strip	QR	—	C	
32368	E.A9.81.4357	SCREW, cover	4	—	—	EA1/19
1066	EEAS.28/2CU	WASHER	8	DTD.124	C	
1108	EEAS.42	WASHER, leather	4	—	C	
5X/1004083	Z50211	LINK, 3-way	2	—	C	
5K/9107066	EEAS.146/B	SLEEVE	15	—	C	
		Attaching parts for E.A3.81.303/1:-				
28D/9436920	A25/1C	Bolt, 2 BA	4	—	C	EA1/20
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	4	—	C	
28W/9419475	SP15/C	Washer, 2 BA	4	—	C	
7724	EEAS.28/2EPH	WASHER, for earth bolt	2	—	C	EA1/21
	E.H8.81.281	BOX JUNCTION No.3 INSTALLATION	—	—	—	EA1/22
		Spares for:-				
	E.H8.81.283	BOX, JUNCTION No.3 ASSEMBLY	1	—	—	EA1/23
		Spares for:-				
5X/1002695	CZ.23212/1	BLOCK, terminal	2	—	C	EA1/24
		Attaching parts for CZ.23212/1				
	AGS.246/24	Screw, ch. hd. 2 BA	2	—	C	EA1/25
	E.A1.81.583	BOX, JUNCTION 40-WAY	1	—	—	EA1/26
5E/3038	†	CABLE, unipren 8	QR	—	C	
5E/3040	†	CABLE, unipren 12	QR	—	C	
5E/3042	†	CABLE, unipren 24	QR	—	C	
	E.A1.81.587/B	COVER, ASSEMBLY	1	—	—	EA1/27
5X/6168	Z23197	GASKET	2	—	C	
5X/	Z23198	GASKET	2	—	C	
5X/1004082	Z50210	LINK, 2 way	1	—	C	
	E.A1.81.461	PLATE, blanking	1	—	—	EA1/28
	E.A1.81.463	PLATE, blanking	2	—	—	EA1/29
		Attaching parts for:- E.A1.81.461, E.A1.81.463:-				
28S/	AGS.245/30	Screw, rd. hd. 6 BA	4	—	C	EA1/30
28M/5314	A16Y/AP	Nut, plain 6 BA	4	—	C	
28W/9475535	AGS.162/A	Washer, 6 BA	4	—	C	
5X/6185	CZ/50361	PLUG, size 'D'	1	—	C	EA1/31
	or					
5X/7159	2CZ/111229	PLUG, size 'D'	1	—	C	
	SIEGRIST-OREL					
	SL 2/3	SLEEVE, 1/2" long	22	—	C	
	EEAS.146/B	SLEEVE, 3/8" long	30	—	—	
5X/3148	Z49428	SLEEVE	13	—	C	
5X/2266	Z19924	TAG QR	13	—	C	
5X/2267	Z19925	TAG QR	7	—	C	
5X/2268	Z19926	TAG QR	2	—	C	
5X/2269	Z19979	THIMBLE	13	—	C	
5X/2270	Z19980	THIMBLE	7	—	C	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5X/2271	Z19981	THIMBLE Attaching parts for E.H.8.1.283:-	2	—	C	
28D/10100030	A25/7C	Bolt, 2 BA	4	—	C	EA1/32
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	4	—	C	
28W/9419402	SP13/C	Washer, 2 BA	4	—	C	
	AS.2811/5/075	Tube, distance	4	—	C	
	E.H.8.1.653	BOX, JUNCTION No.4 INSTALLATION Spares for:-	—	—	—	EA2/1
	E.H.8.1.651	BOX, JUNCTION, No.4 ASSEMBLY Spares for:-	1	—	—	EA2/2
5X/1002695	CZ.23212/1	BLOCK, terminal, 20-way Attaching parts for CZ.23212/1:-	1	—	C	EA2/3
28S/1006622	A31/B28	Screw, ch. hd. 4 BA	2	—	C	EA2/4
28W/1206041	AGS.2035/B	Washer, shakeproof	2	—	C	
	E.H.6.81.339	BOX, SHELL	1	—	—	EA2/5
	HV.2855	GROMMET, solid	1	—	C	
5X/8850	508/1/04585/ 002	INSERT, socket 16	20	—	C	
33463	E.B.6.81.3641	LID, ASSEMBLY Spares for:-	1	—	—	EA2/6
6171	E.A.3.81.1259	CLIP, spring	4	S.92	C	EA2/7
32C/614	†	RUBBER, synthetic	QR	DTD.552	C	
20457	EEAS.117/1	SCREW, cover	4	S.92	C	EA2/8
1066	EEAS.28/2CU	WASHER	8	DTD.124	C	EA2/9
1108	EEAS.42	WASHER, leather	4	—	C	EA2/10
5X/6713	Z50213	LINK, 5 way	1	—	C	
5X/3130	Z23213	PILLAR, mounting Attaching parts for Z23213:-	2	—	C	EA2/11
28S/1201448	A31/B10	Screw, ch. hd. 4 BA	2	—	C	EA2/12
28W/1206041	AGS.2035/B	Washer, shakeproof, 4 BA	2	—	C	
5X/	508/2/03547/ 002	PIN, plug 16	24	—	C	EA2/13
	EEAS.589/16	PLUG, filler	17	—	—	EA2/14
	†	SLEEVE, 3 m/m i/d grade CXH 3/8" long	20	—	—	
5X/	UK-AN-(ET)8000/ 24/28/P	SOCKET, panel	1	—	C	EA2/15
5X/	UK-AN-(ET)8000/ 18/1/S/W	SOCKET, panel	1	—	C	EA2/16
5X/	UK-AN-(ET)8000/ 18/1/S	SOCKET, panel	1	—	C	EA2/17
	22/139601	WASHER, panel, pecking	1	—	—	
	22/139598	WASHER, panel, pecking	2	—	—	
	E.A.3.81.299	BOX, JUNCTION, No.5 INSTALLATION Spares for:-	—	—	—	EA2/18
	E.A.1.81.444	BOX, JUNCTION, No.5 ASSEMBLY Spares for:-	1	—	—	EA2/19
5X/1002695	CZ23212/1	BLOCK, terminal, 20-way Attaching parts for CZ23212/1	1	—	C	EA2/20
28S/1200033	A31/B24	Screw, ch. hd. 4 BA	2	—	C	EA2/21
	E.A.1.81.589	BOX, JUNCTION, 20-WAY	1	—	—	EA2/22
5X/6168	Z23197	GASKET, plug moulding	1	—	C	
	E.A.1.81.598/B	LID, ASSEMBLY Spares for:-	1	—	—	EA2/23
32C/614	†	RUBBER, synthetic	QR	DTD.552	C	
32368	E.A.9.81.4357	SCREW, cover	4	—	C	EA2/24
1066	EEAS.28/2CU	WASHER	8	DTD.124	C	EA2/25
1108	EEAS.42	WASHER, leather	4	—	C	EA2/26

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Pile No.
					M.R. L.M.	
5X/1004083 5K/9107086	Z50211 EEAS.146/B	LINK, communing 3-way SLEEVE Attaching parts for E.A1.81.444:-	2 13	- -	C C	
28D/9436920 28M/1278180 28W/9419475	A25/1C AGS.2001/C/1 SP15/C	Bolt, 2 BA Nut, stiff, 2 BA Washer, 2 BA	4 4 4	- - -	C C C	EA2/27
	E.A3.81.399	EQUIPMENT, ELECTRICAL, REAR BOMB BAY BULKHEAD ASSEMBLY Spares for:-	-	-	-	
	E.A3.81.1829	BAG, stowage Attaching parts for E.A3.81.1829:-	1	-	C	EA3/1
28S/9131095 28M/1278190 28W/9419402	A31/C14 AGS.2001/C/1 SP13/C	Screw, 2 BA Nut, stiff, 2 BA Washer, 2 BA	3 3 3	- - -	C C C	EA3/2
41343	E.A3.81.5959	FAIRLEAD, assembly (Mod. 3906-S.0.0) Attaching parts for E.A3.81.5959:-	1	-	C	EA3/3
28D/9140638 28M/1278189 28W/9419474	A25/4B AGS.2001/B/1 SP15/B	Bolt, 4 BA Nut, stiff, 4 BA Washer, 4 BA	6 6 6	- - -	C C C	EA3/4
10H/ 10H/20744 5X/6007	CZ.61881 CZ.61888/5 CZ.28181	PLUG/SOCKET, MK.4 3-way PLUG/SOCKET, MK.4 18-way PLUG, bulkhead, size A	1 1 1	- - -	C C C	EA3/5 EA3/6 EA3/7
5X/7022 5X/7121 5X/	2CZ.84866 2CZ.108927 CZ.28200	PLUG, bulkhead, size 'A' PLUG, bulkhead, size 'Z' PLUG, bulkhead, size 'Z'	1 1 1	- - -	C C C	EA3/8 EA3/9 EA3/10
5X/ 5X/6132	2CZ.111428 CZ.28206	PLUG, bulkhead, size 'C' PLUG, bulkhead, size 'C'	1 1	- -	C C	EA3/11
5X/7029 5X/7164 10H/19425	2CZ.84869 2CZ.111417 +	PLUG, bulkhead, size 'D' PLUG, bulkhead, size 'D' PLUG, type 744	1 1 1	- - -	C C C	EA3/12 EA3/13
28S/9995376 28M/1278189	A31/B20 AGS.2001/B/1	Attaching parts for 10H/19425:- Screw, 4 BA Nut, stiff 4 BA	4 4	- -	C C	EA3/14
10H/ 3416	Z560042 EEAS.132/7	SOCKET, double ended STRAP, webbing, cable c/w buckle Attaching parts for EEAS.132/7:-	2 4	- -	- C	EA3/15 EA3/16
28S/9995376 28M/1278189 4910 3420	A32/B20 AGS.2001/B/1 EEAS.28/180R EEAS.73	Screw, 4 BA Nut, stiff, 4 BA Washer Plate, clamp	1 1 1 1	- - - -	C C C C	EA3/17 EA3/18 EA3/19
	E.H8.81.35	LOOMS, CABLE ASSEMBLY Spares for:-	-	-	-	
	E.A1.81.704/2	CABLE, ASSEMBLY, C8 from front transport joint plug to JB8	1	-	-	
	E.A1.81.705/2	CABLE, ASSEMBLY, C8X from front transport joint plug to JB8	1	-	-	
	E.A1.81.711/2	CABLE, ASSEMBLY, T21, from bomb bay Bulkhead to camera socket	1	-	-	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Photo No.
		1 2 3 4 5 6				
	E.A1.81.735/2	CABLE, ASSEMBLY, C/ from front transport joint plug to plug at bomb bay bulkhead	1	-	-	
	E.A1.81.738/2	CABLE, ASSEMBLY, C21 from front transport joint to plug at bomb bay bulkhead	1	-	-	
	E.A1.81.738/2	CABLE, ASSEMBLY, C33, from front transport joint to plug at bomb bay bulkhead	1	-	-	
	E.A1.81.769/2	CABLE, ASSEMBLY, C9, from pressure bulkhead to port wing, break	1	-	-	
	E.A1.81.774/2	CABLE, ASSEMBLY, battery link	1	-	-	
	E.A3.81.703/2	CABLE, ASSEMBLY, C2 from pressure bulkhead to JB2	1	-	-	
	E.A3.81.704/2	CABLE, ASSEMBLY, C8, from No.1 Distribution box to JB8	1	-	-	
	E.A3.81.705/2	CABLE, ASSEMBLY, C8X, from pressure bulkhead to JB8	1	-	-	
	E.A3.81.706/2	CABLE, ASSEMBLY, C2A, from pressure bulkhead to JB2	1	-	-	
	E.A3.81.708/2	CABLE, ASSEMBLY, C5 from pressure bulkhead to JB5	1	-	-	
	E.A3.81.710/2	CABLE, ASSEMBLY, I.D, from JB1 to undercarriage actuator valve	1	-	-	
	E.A3.81.714/1	CABLE, ASSEMBLY, 1G from JB1 to flap position transmitter port wing	1	-	-	
	E.A3.81.718/2	CABLE, ASSEMBLY, 1H3, from No.1 fuel tank terminal board to fuel cock, port	1	-	-	
	E.A3.81.722/2	CABLE, ASSEMBLY, 1J3 from No.2 fuel tank terminal board to fuel cock, port	1	-	-	
	E.A3.81.726/2	CABLE, ASSEMBLY, 1K3, from No.3 fuel tank terminal board to fuel cock, port	1	-	-	
	E.A3.81.727/1	CABLE, ASSEMBLY, 2C, 2D, from JB2 to port and starboard bomb door micro switches	1	-	-	
	E.A3.81.734/1	CABLE, ASSEMBLY, 3D, from JB3 to bomb door actuator terminal board	1	-	-	
	E.A3.81.739/2	CABLE, ASSEMBLY, 3D1, from terminal board to bomb door actuator valve	1	-	-	
	E.A3.81.740/2	CABLE, ASSEMBLY, 3F from JB3 to flap valve actuator	1	-	-	
	E.A3.81.748/2	CABLE, ASSEMBLY, 3J3, from No.2 fuel tank terminal board to fuel cock starboard	1	-	-	
	E.A3.81.752/2	CABLE, ASSEMBLY, 3K3 from No.3 fuel tank terminal board to fuel cock starboard	1	-	-	
	E.A3.82.763/1	CABLE, ASSEMBLY, 3L from JB3 to fuel contents transformer No.1 fuel tank	1	-	-	
	E.A3.81.754/1	CABLE, ASSEMBLY, 3M, from JB3 to fuel contents transformer No.2 fuel tank	1	-	-	
	E.A3.81.755/1	CABLE, ASSEMBLY, 3N from JB3 to fuel contents transformer No.3 fuel tank	1	-	-	
	E.A3.81.762/1	CABLE, ASSEMBLY, 5B from JB5 to bomb door terminal board	1	-	-	
	E.A3.81.763/1	CABLE, ASSEMBLY, 5C and 5D, from JB5 to bomb door micro switches	1	-	-	
	E.A3.81.774/1	CABLE, ASSEMBLY, bomb release cocking indicator	1	-	-	
	E.A3.81.1839/2	CABLE, ASSEMBLY, 5F, from JB5 to forward bomb jettison beam	1	-	-	
	E.A3.81.1881/2	CABLE, ASSEMBLY, 5H, from JB5 to rear bomb jettison beam	1	-	-	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Q. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.81.1939	CABLE, ASSEMBLY, 2G, 2J, 2K from JB2 to terminal board, nose and tail fusing units	1	—	B	
	E.A3.81.1941	CABLE, ASSEMBLY, 2G1, from terminal board to release unit main beam	1	—	B	
	E.A3.81.2359/2	CABLE, ASSEMBLY, C1, from JB1 to No.1 distribution box front fuselage	1	—	B	
	E.A3.81.2381/2	CABLE, ASSEMBLY, C3, from JB3 to No.1 distribution box front fuselage	1	—	B	
	E.A3.81.2363	CABLE, ASSEMBLY, 1H, from JB1 to No.1 fuel tank terminal board	1	—	B	
	E.A3.81.2365	CABLE, ASSEMBLY, 1H1 from No.2 fuel tank terminal board to fuel pump suppressor port	1	—	B	
	E.A3.81.2369	CABLE, ASSEMBLY, 1J from JB1 to No.2 fuel tank terminal board, port	1	—	B	
	E.A3.81.2371	CABLE, ASSEMBLY, 1J1, from No.2 fuel tank terminal board to fuel pump suppressor port	1	—	—	
	E.A3.81.2373/2	CABLE, ASSEMBLY, 1J2, from No.2 fuel tank suppressor to fuel pump port	1	—	B	
	E.A3.81.2375	CABLE, ASSEMBLY, 1K from JB1 to NO.3 fuel tank terminal board, port	1	—	B	
	E.A3.81.2377	CABLE, ASSEMBLY, 1K1 from No.3 fuel tank terminal board to fuel pump suppressor	1	—	B	
	E.A3.81.2381	CABLE, ASSEMBLY, 3H from JB3 to No.1 fuel tank terminal board starboard	1	—	B	
	E.A3.81.2383	CABLE, ASSEMBLY, 3H1 from No.1 fuel tank terminal board to fuel pump suppressor starboard	1	—	B	
	E.A3.81.2385/2	CABLE, ASSEMBLY, 3H2, from No.1 fuel tank suppressor to fuel pump starboard	1	—	B	
	E.A3.81.2387	CABLE, ASSEMBLY, 3J from JB3 to No.2 fuel tank terminal board starboard	1	—	B	
	E.A1.81.2389	CABLE, ASSEMBLY, 3J1 from No.2 fuel tank terminal board to fuel pump suppressor starboard	1	—	B	
	E.A3.81.2391/2	CABLE, ASSEMBLY, 3J2, from No.2 fuel tank suppressor to fuel pump starboard	1	—	B	
	E.A3.81.2393	CABLE, ASSEMBLY, 3K from JB3 to No.3 fuel tank terminal board starboard	1	—	B	
	E.A3.81.2395	CABLE, ASSEMBLY, 3K1, from No.3 fuel tank terminal board to fuel pump suppressor starboard	1	—	B	
	E.A3.81.2397/2	CABLE, ASSEMBLY, 3K2, from No.3 fuel tank suppressor to fuel pump starboard	1	—	B	
	E.A3.81.2427/2	CABLE, ASSEMBLY, 1F, from JB1 to dive break actuator	1	—	B	
	E.A3.81.2429/2	CABLE, ASSEMBLY, 1L, from JB1 to solenoid valve	1	—	B	
	E.A3.81.2541/1	CABLE, ASSEMBLY, 3H3, from No.1 fuel tank terminal board to fuel cock, starboard	1	—	B	
	E.A3.81.2553/2	CABLE, ASSEMBLY, C7, from No.1 Distribution box front fuselage to JB7 port wing	1	—	—	
	E.A3.81.2555/2	CABLE, ASSEMBLY, C7X from pressure bulkhead to JB7 port wing	1	—	—	
	E.B6.81.491	CABLE, ASSEMBLY, E2 from JB2 to earth	1	—	B	
	E.B6.81.1686	CABLE, ASSEMBLY, C31 from main electric panel front fuselage to No.1 Generator port wing	1	—	—	
	E.B6.81.1695	CABLE, ASSEMBLY, C32 from main electrical panel front fuselage to No.2 Generator starboard wing	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Mod. Spec.	Cl. of Equip. M.T. L.M.	Page No.
		1 2 3 4 5 6				
	E.86.81.4055	CABLE, ASSEMBLY, C.37 from Main Electrical panel front fuselage to voltage regulator port wing	1	-	-	
	E.86.81.4057	CABLE, ASSEMBLY C38 from Main Electrical panel to voltage regulator starboard	1	-	-	
	E.86.81.4131	CABLE, ASSEMBLY, E4 from JB4 to earth	1	-	-	
	E.87.81.1119	CABLE, ASSEMBLY, E1 from JB1 to earth	1	-	-	
	E.87.81.1121	CABLE, ASSEMBLY, E3 from JB3 to earth	1	-	-	
	E.87.81.1125	CABLE, ASSEMBLY, E5 from JB5 to earth	1	-	-	
	E.87.81.5477	CABLE, ASSEMBLY, C36 from Main Electrical panel to Voltage regulator and No.2 Generator starboard wing	1	-	-	
	E.87.81.5483	CABLE, ASSEMBLY, C35 from Main Electrical panel to Voltage regulator and No.1 Generator, port wing	1	-	-	
	E.G4.81.1793	CABLE, ASSEMBLY, 2F from JB2 to forward release supply bomb beam	1	-	-	
	E.G4.81.1797	CABLE, ASSEMBLY 2H from JB2 to rear release supply bomb beam	1	-	-	
	E.H6.81.303	CABLE, ASSEMBLY, 4A from JB4 to port wing break	1	-	-	
	E.H6.81.307	CABLE, ASSEMBLY, 4B from JB4 to starboard wing break	1	-	-	
	E.H8.81.627	CABLE, ASSEMBLY, C93 from No.2 Distribution box front fuselage to Doppler JB2	1	-	-	
	E.H8.81.629	CABLE, ASSEMBLY, 3B from JB3 to fire extinguisher bottle	1	-	-	
	E.H8.81.631	CABLE, ASSEMBLY, 1B from JB1 to identification light	1	-	-	
	E.H8.81.633	CABLE, ASSEMBLY, C10 from No.1 Distribution box front fuselage to starboard wing break	1	-	-	
	E.H8.81.637	CABLE, ASSEMBLY, 1H2, from No.1 fuel tank suppressor to fuel pump port	1	-	-	
	E.H8.81.639	CABLE, ASSEMBLY, 1K2, from No.3 fuel tank suppressor to fuel pump port	1	-	-	
	E.H8.81.1019	CABLE, ASSEMBLY, C4, from pressure bulkhead to JB4	1	-	-	
	SMITHS					
	WAYMOUTH					
6A/2767	CA.14	CONNECTOR	3	-	C	
6A/2768	CA.26	CONNECTOR	3	-	C	
5X2790	Z22634	GROMMET, dummy	4	-	C	
14A/862	†	LEAD, camera No.4	1	-	B	
	E.A3.81.45	LOOMS, CABLE, INSTRUMENT ASSEMBLY	-	-	-	
		Spare for:				
	E.A3.81.936	CABLE, ASSEMBLY, DIC-DIB, from pressure bulkhead to wing root starboard	1	-	-	
	E.A3.81.938	CABLE, ASSEMBLY, AUI-AUIA, from pressure bulkhead to air mileage unit port wing	1	-	-	
	E.A3.81.941	CABLE, ASSEMBLY, AU2-AU2A, from pressure bulkhead to air mileage unit port wing	1	-	-	
	E.A3.81.969	CABLE, ASSEMBLY, AU3-E11, from air mileage unit to earth, port wing	1	-	-	
	E.H6.81.447	PANEL, CONTROL, INVERTER AND ARMAMENT SAFETY BREAK	1	-	-	
		Spare for:-				
	AGS.2100.8.6	LEAD, earth	2	-	C	EA4/1
28D/1007971	A25/4B	Attaching parts for AGS.2100.8.6:-	1	-	C	EA4/2
28M/1278189	AGS.2001/B/1	Bolt, 4 BA	1	-	C	
		Nut, stiff, 4 BA	1	-	C	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description 1 2 3 4 5 6	N ^o . off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	E.G7.81.3217	PANEL, ASSEMBLY, access door	1	—	—	EA4/3
	A4-35	Attaching parts for E.G7.81.3217:-	8	—	—	EA4/4
	GA4-250	Fastener, DZUS	8	—	—	EA4/4
	E.H6.81.449	PLUG, shorting	1	—	—	EA4/5
		Consisting of:-				
	E.F3.81.1188	CAP, protective	1	—	—	EA4/6
	E.G7.81.451	LANYARD, ASSEMBLY	1	—	—	EA4/7
	E.F3.81.13155	NUT, outlet modified	1	—	—	EA4/8
	E.H6.81.451	PLUG, shorting	1	—	—	EA4/9
	S4.200	SPRING, DZUS	8	—	—	EA4/10
33680	E.A9.81.3661	TRAY, ASSEMBLY MOUNTING	1	—	B	EA4/10
		Spares for:-				
33410	E.A9.81.3675	BRACKET, catch securing	2	L.72	C	EA4/11
33411	E.A9.81.3677	CATCH	2	L.72	C	EA4/12
		Attaching parts for E.A9.81.3677				
33408	E.A9.81.3671	Circlip	1	DTD.215	C	EA4/13
33409	E.A9.81.3673	Nut, cylindrical	1	S1	C	EA4/14
33406	E.A9.81.3667	Screw, knurled	1	S.92	C	EA4/15
28W/5417	AGS.160/A	Washer	1	—	C	
28W/9703147	AGS.163/D	Washer	1	—	C	
28W/9418921	SP13/E	Washer	1	—	C	
	E.A9.81.3669	DOWEL	2	—	—	EA4/16
		Attaching parts for E.A9.81.3669:-				
28M/1086618	AGS.2002/C/1	Nut, stiff 2 BA	1	—	—	
10AJ/158	†	MOUNTING A.V.	2	—	—	EA4/17
10AJ/159	†	MOUNTING A.V.	2	—	—	EA4/18
		Attaching parts for 10AJ/158, 10AJ/159:-				
28S/1200050	A31/C20	Screw, ch. hd. 2 BA	4	—	C	EA4/19
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	4	—	C	
28W/9419402	SP13/C	Washer, 2 BA	4	—	C	
33412	E.A9.81.3683	PILLAR	2	—	—	EA4/20
28M/1278189	AGS.2001/B1	Nut, stiff, 4 BA	1	—	C	
		Attaching parts for E.A9.81.3681:-				
28D/1011245	A25/10E	Bolt, 1/2" BSF	4	—	C	EA4/21
10A/17930	SIS.5669	Washer, check	8	—	C	
	E.A4.81.1335	SUPPORT AND ROLLERS ACCUMULATOR TRAY ASSEMBLY	1	—	—	EA5/
		Spares for:-				
12002	E.A1.81.223	BEAM, support outer L.H.	1	—	C	EA5/2
12003	E.A1.81.224	BEAM, support outer R.H.	1	—	C	
		Attaching parts for E.A1.81.223 & E.A1.81.224:-				
28D/9133013	A25/5C	Bolt, 2 BA	3	—	C	EA5/3
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	3	—	C	
28S/9419402	SP13/C	Washer 2 BA	3	—	C	
	AS.2811/5/042	Tube, distance	3	—	—	
20794	E.A1.81.225	BEAM, support inner	1	—	—	EA5/4
		Attaching parts for E.A1.81.225:-				
28D/9133013	A25/5C	Bolt, 2 BA	2	—	C	EA5/5
28M/9403520	A27/CP	Nut, plain, 2 BA	2	—	C	
28W/9416643	SP47/C	Washer, spring	2	—	C	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Meth. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A1.81.228	ROLLER, ASSEMBLY	6	-	-	EA5/6
28D/9133011	A26/2C	Attaching parts for E.A1.81.228:-	4	-	C	EA5/7
28M/9403520	A27/CP	Bolt, 2 BA	4	-	C	
28W/9416643	SP47/C	Nut, plain 2 BA	4	-	C	
		Washer, 2 BA	4	-	C	
	E.A1.81.227	STOP, channel mounting	1	-	-	EA5/8
2727	E.A1.81.232	TRAY, ACCUMULATOR, ASSEMBLY	1	-	-	EA5/9
		Spares for -				
	E.A3.81.2177	ANGLE, assembly, L.H.	1	-	-	EA5/10
	E.A3.81.2178	ANGLE, assembly, R.H.	1	-	-	
		Attaching parts for E.A3.81.2177, E.A3.81.2178:-				
28D/1013173	AS1242/10C	Bolt, 2 BA	2	-	C	EA5/11
28M/9403520	A27/CP	Nut, stiff, 2 BA	2	-	C	
28W/9416643	SP47/C	Washer, 2 BA	2	-	C	
2743	E.A1.81.232E	BUFFER, rubber 1/2" o/d x 0.785 long	2	Shore 55	C	EA5/12
2744	E.A1.81.236	FERRULE	8	-	C	EA5/13
		Attaching parts for E.A1.81.236:				
28D/9709461	AS1242/3C	Bolt, 2 BA	2	-	C	EA5/14
28M/9403520	A27/CP	Nut, plain	2	-	C	
28W/9416643	SP47/C	Washer	2	-	C	
	E.A1.81.273	Washer, packing	2	L.72	LM	EA5/15
	E.A1.81.274	Washer, packing	2	L.72	LM	EA5/16
2745	E.A1.81.235	NUT, wing, accumulator fixing	8	-	C	EA5/17
	E.A3.81.417	WIRING, FRAME 12-13 PORT ASSEMBLY	-	-	-	
		Spares for				
3418	EEAS.132/12	STRAP, cable c/w buckle 12" long	2	Webbing Comm	-	EA6/1
		Attaching parts for EEAS.132/12:				
28D/8337	AS1248/1B	Bolt, 4 BA	1	-	C	EA6/2
28M/1278189	AGS.2001 B/1	Nut, stiff, 4 BA	1	-	C	
3420	EEAS.73	Plate, clamp	1	-	C	EA6/3
	E.A3.81.418	WIRING, FRAME 12-13 STARBOARD	-	-	-	
		Spares for:-				
3418	EEAS.132/12	STRAP, cable c/w buckle 12" long	3	Webbing Comm	-	EA6/4
	E.A3.81.1263	WIRING, FRAME 13-14 ASSEMBLY	-	-	-	
		Spares for:				
7729	E.A3.81.1279	BOLT	1	-	C	EA6/5
7153	E.A1.81.451	BRACKET, micro switch	1	-	C	EA6/6
7726	E.A1.81.452	BRACKET, micro switch	1	-	C	EA6/7
3419	EEAS.132/15	STRAP, cable c/w buckle 15" long	1	Webbing Comm	C	EA6/8
5CW/9438275	+	SWITCH, micro type 1A	4	-	-	EA6/9
		Attaching parts for 5CW/9438275				
28D/1220052	A25/11/B	Bolt, 4 BA	2	-	C	EA6/10
28M/9403519	A27/BP	Nut, plain, 4 BA	2	-	C	
3765	E.A1.81.460	Washer, plate	1	-	C	EA6/11
28W/9419474	SP15/B	Washer, 4 BA	2	-	C	
28W/1010155	AGS.162/B	Washer, spring, 4 BA	2	-	C	
7724	EEAS.28/2EPH	WASHER, 4 BA	6	-	C	EA6/12

ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A3.81.405	WIRING, FRAME 15 to FRAME 16 ASSEMBLY	1	—	—	
		Spares for:				
5CZ/432	†	BLOCK, terminal, type B, 3-way	1	—	B	EA6/13
28M/9403518	A27/AP	Attaching parts for 5CZ/432:-				
28S/3840	A33/A32	Nut, 6 BA	2	—	C	EA6/14
28W/3096	AGS.162/A	Screw, 6 BA	2	—	C	
		Washer, spring, 6 BA	2	—	C	
3416	EEAS.132/7	STRAP, cable c/w buckle, 7" long, port	1	Webbing	C	EA6/15
3419	EEAS.132/15	STRAP, cable c/w buckle, 15" long, starboard	1	Webbing	C	
		Attaching parts for EEAS.132/7 and EEAS.132/15:-				
28D/8338	AS.1248/3B	Bolt, 4 BA	1	—	C	EA6/16
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	
3420	EEAS.73	Plate, clamp	1	—	C	EA6/17
	E.A3.81.401	WIRING, FRAME 16 to FRAME 17, ASSEMBLY	1	—	—	
		Spares for:-				
1324	E.A1.75.65	GROMMET	1	Tufnol	C	EA6/18
1416	EEAS.132/7	STRAP, cable, c/w buckle, 7" long, port	1	Webbing	C	EA6/19
3419	EEAS.132/15	STRAP, cable, c/w buckle, 15" long starboard	1	Webbing	C	
		Attaching parts for EEAS.132/7 and EEAS.132/15:-				
28D/8338	AS.1248/3B	Bolt, 4 BA	1	—	C	EA6/20
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	
3420	EEAS.73	Plate, clamp	1	—	C	EA6/21
	E.A3.81.389	WIRING, FRAME 17 to FRAME 18, ASSEMBLY	1	—	—	
		Spares for:-				
7723	E.A3.81.539	FAIRLEAD, port	1	—	C	EA6/22
6731	E.A3.81.540	FAIRLEAD, starboard	1	—	C	
15351	E.A3.81.541	FAIRLEAD, port	1	—	C	EA6/23
6732	E.A3.81.542	FAIRLEAD, starboard	1	—	C	
		Attaching parts for E.A3.81.539, E.A3.81.540, E.A3.81.541 & E.A3.81.542:-				
28M/9403520	A27/CP	Nut, 2 BA	3	—	C	EA6/24
28S/14546	A31/C14	Screw, 2 BA	3	—	C	
28W/3098	AGS.162/C	Washer, spring 2 BA	3	—	C	
28W/9419475	SP.15/C	Washer, 2 BA	3	—	C	
3418	EEAS.132/12	STRAP, cable, c/w buckle, 12" long	1	Webbing	C	EA6/25
		Attaching parts for EEAS.132/12:-			Comm	
28D/8338	AS.1248/3B	Bolt, 4 BA	1	—	C	EA6/26
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	
3420	EEAS.73	Plate, clamp	1	—	C	EA6/27

ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A3.81.1285	WIRING, FRAME 19 to FRAME 20, ASSEMBLY Spares for:-	1	-	-	
5X/3276	CZ.50205	BLOCK, terminal, 2-way, type G	2	-	B	EA7/1
28M/10287	AGS.2001/B/1	Attaching parts for CZ.50205:-	2	-	C	EA7/2
5X/3278	Z.28426	Nut, 4 BA	2	-	C	
	SMITHS	Pillar, fixing				
	WAYMOUTH					
6A/2764	JLA/103/61	BOX, connecting, cable	1	-	B	EA7/3
		Attaching parts for JLA/103/61:-				
28D/9436920	A25/1C	Bolt, 2 BA	2	-	C	EA7/4
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	-	C	
7725	EEAS.133	BRACKET, clip	2	-	C	EA7/5
5X/3272	CZ.26799	COVER, block terminal	2	-	B	EA7/6
3417	EEAS.132/9	STRAP, cable c/w buckle, 9" long, port	1	Webbing Comm	C	EA7/7
3418	EEAS.132/12	STRAP, cable c/w buckle, 12" long, starboard	1	Webbing Comm	C	
		Attaching parts for EEAS.132/9 & EEAS.132/12:-				
28D/8337	AS.1248/1B	Bolt, 4 BA	1	-	C	EA7/8
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	-	C	
3420	EEAS.73	Plate, clamp, starboard	1	-	C	EA7/9
7736	E.86.81.745	Plate, clamp, port	1	-	C	
	E.A3.81.415	WIRING, FRAME 20 to FRAME 21, ASSEMBLY Spares for:-	1	-	-	
3416	EEAS.132/7	STRAP, cable, c/w buckle, 7" long	1	Webbing Comm	C	EA7/10
3417	EEAS.132/9	STRAP, cable, c/w buckle, 9" long	1	Webbing Comm	C	EA7/11
		Attaching parts for EEAS.132/7 & EEAS.132/9:-				
28D/9744	AS.1248/2B	Bolt, 4 BA	1	-	C	EA7/12
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	-	C	
3420	EEAS.73	Plate, clamp	1	-	C	EA7/13
	E.A3.81.393	WIRING, FRAME 21 TO FRAME 22, ASSEMBLY Spares for:-	1	-	-	
10H/20417	CZ.61887	PLUG, socket, bulkhead, Mk.4	1	-	B	EA7/14
5X/6092	CZ.28198	PLUG, bulkhead, size C	2	-	B	EA7/15
5X/6493	Z.24933	SHELL, plug, size C	1	-	C	EA7/16
5X/6495	Z.49252	SHELL, plug, size Z	1	-	C	EA7/17
		Attaching parts for Z.24933 and Z.49252:-				
28M/10288	AGS.2001/A/1	Nut, 6 BA	4	-	C	EA7/18
28S/9995378	A31/A30	Screw, 6 BA	4	-	C	
3417	EEAS.132/9	STRAP, cable, c/w buckle, 9" long	2	Webbing Comm.	C	EA7/19
		Attaching parts for EEAS.132/9:-				
28D/8338	AS.1248/3B	Bolt, 4 BA	1	-	C	EA7/20
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	-	C	
3420	EEAS.73	Plate, clamp	1	-	C	EA7/21
7724	EEAS.28/2EPH	WASHER, 4 BA, plain	3	-	C	EA7/22

ELECTRICAL EQUIPMENT
ELECTRICAL EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.81.1267	WIRING, FRAME 24 to FRAME 25 ASSEMBLY Spares for:-	1	-	-	
6A/2765	SMITHS WAYMOUTH JLA/102/J	BOX, connection cable	1	-	B	EA7/23
28D/9436920	A25/1C	Attaching parts for JLA/103/J:-	2	-	C	EA7/24
28M/1278190	AGS.2001/C/1	Bolt, 2 BA	2	-	C	
		Nut, stiff 2 BA				
3418	EEAS.132/12	STRAP, cable c/w buckle, 12" long	-	Webbing Comm	C	EA7/25
		Attaching parts for EEAS.132/12:-				
28D/1218385	AS.1248/28	Bolt, 4 BA	1	-	C	
28M/1278189	AGS.2001/B/1	Nut, stiff 4 BA	1	-	C	EA7/27
3420	EEAS.73	Plate, clamp	1	-	C	
17519	EEAS.28/4DPH	WASHER, earth bolt	2	L.16	C	
	E.A3.81.397	WIRING TO FLAP TRANSMITTER ASSEMBLY Spares for:-	1	-	-	EA8/1
	E.A9.81.4069	FAIRLEAD, half	2	-	-	EA8/2
		Attaching parts for E.A9.81.4069:-				
28S/1200034	A31/B16	Screw, ch. hd. 4 BA	3	-	C	EA8/3
28M/1278189	AGS.2001/B/1	Nut, stiff	3	-	C	
3417	EEAS.132/9	STRAP, cable c/w buckle, 9" long	2	Webbing Comm	C	EA8/4
		Attaching parts for EEAS.132/9:-				
28D/1218386	AS1248/38	Bolt, 4 BA	1	-	C	EA8/5
38M/1278189	AGS.2001/B/1	Washer, 4 BA	1	-	C	
3420	EEAS.73	Plate, clamp	1	-	C	EA8/6
	E.H8.81.105	WIRING TO IDENTIFICATION LIGHT AND FLAME SWITCH, FRAMES 12 to 13 Spares for:-	-	-	-	
5CZ/1947	†	BLOCK, terminal, dummy type J	1	-	C	EA9/1
		Attaching parts for 5CZ/1947:-				
28D/1200119	A25/4C	Bolt, 2 BA	2	-	C	EA9/2
28M/9433473	AGS.2002/C/1	Nut, stiff 2 BA	2	-	C	
28W/9419402	SP13/C	Washer, 2 BA	2	-	C	
5L.9952604	†	FILAMENT, 24V 80W	1	-	C	
5CX/1744	†	GASKET, special	1	-	C	
5CX/557	†	LAMP, identification downward, type C	1	-	C	
		Attaching parts for 5CX/557:-				
28D/	A25/2C	Bolt, 2 BA	3	-	C	EA9/3
5CX/4621	†	LAMP, front, white	1	-	C	EA9/4
	EEAS.132/7	STRAP, cable c/w buckle, 7" long	2	Webbing Comm	-	EA9/5
		Attaching parts for EEAS.132/7:-				
28D/8337	AS.1248/18	Bolt, 4 BA	1	-	C	EA9/6
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	-	C	
3420	EEAS.73	Plate, clamp	1	-	C	EA9/7
3419	EEAS.132/15	STRAP, cable c/w buckle 15" long	1	Webbing Comm	C	EA9/8

ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matd. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	E.A3.81.387	WIRING, No.1 FUEL TANK TRANSMITTER ASSEMBLY Spares for:-	-	-		
6A/2763	SMITHS WAYMOUTH JLA/103/60	BOX, connection cable	1	-	B	EA9/9
28D/1200119	A25/4C	Attaching parts for JLA/103/60:-	2	-	C	EA9/10
28M/9433473	AGS.2002/C/1	Bolt, 2 BA	2	-	C	
	AS2809/4/030	Nut, stiff, 2 BA	2	-	-	
		Tube, distance	2	-	-	
	E.A3.81.2529	WIRING AND SUPPRESSOR, FRAME 14 TO FRAME 15, ASSEMBLY (MOD.411) Spares for:-	-	-	-	EA9/11
5CZ/868	†	BLOCK, terminal, type B, No.1	2	-	C	EA9/13
28S/1011495	A33/A32	Attaching parts for 5CZ/868	2	-	C	
28M/9403618	A27/AP	Screw, Csk. Hd. 6BA	2	-	C	
28W/9475535	AGS.162/A	Nut, plain 6 BA	2	-	C	EA9/14
		Washer, spring, 6 BA	2	-	C	
3416	EEAS.132/7	STRAP, cable, c/w buckle 7" long	1	Webbing Comm	C	EA9/15
3419	EEAS.132/15	STRAP, cable c/w buckle 15" long	1	Webbing Comm	C	EA9/16
		Attaching parts for EEAS.132/7 & EEAS.132/15:-				
28D/1218386	AS1248/3B	Bolt, 4 BA	1	-	C	EA9/17
28M/1278189	AGS.2001/9/1	Nut, stiff 4 BA	1	-	C	
3420	EEAS.73	Plate, clamp	1	-	C	EA9/18
5CY/2967	†	SUPPRESSOR, type O No.2	2	-	A	EA9/19
		Attaching parts for 5CY/2967:-				
28D/1008149	A25/2B	Bolt, 4 BA	4	-	C	EA9/20
28M/9403519	A27/BP	Nut, plain 4 BA	4	-	C	
28W/1010155	AGS.162/B	Washer, spring 4 BA	4	-	C	
	E.A3.81.2531	WIRING AND SUPPRESSORS FRAME 18 TO FRAME 19, ASSEMBLY (MOD.411) Spares for:-	-	-	-	
5CZ/868	†	BLOCK, terminal type B No.1	2	-	C	EA9/21
		Attaching parts for 5CZ/868:-				
28S/1011496	A33/A36	Screw, csk hd. 6 BA	2	-	C	EA9/22
28M/9403518	A27/AP	Nut, plain, 6 BA	2	-	C	
28W/9475535	AGS.162/A	Washer, spring 6 BA	2	-	C	
28W/9419473	SP15/A	Washer, 6 BA	1	-	C	
48W/9419485	SP16/A	Washer, 6 BA	1	-	C	
5X/6493	Z24933	SHELL, plug C size	1	-	C	EA9/23
5X/6496	Z49252	SHELL, plug C size	1	-	C	EA9/24
		Attaching parts for Z24933 & Z49252:-				
28S/9435714	A31/A31	Screw, ch. hd. 6 BA	4	-	C	EA9/25
28M/9403518	A27/AP	Nut, stiff, 6 BA	4	-	C	
28W/9475535	AGS.162/A	Washer, spring, 6 BA	4	-	C	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE**

Ref. No.	Part No.	Description	No. off	Mtl. Spec.	Cl. of Equip.	Pile No.
					M.R. L.M.	
		1 2 3 4 5 6				
3417	EEAS.132/9	STRAP, cable c/w buckle, 9" long	1	Webbing Comm	C	EA9/28
3418	EEAS.132/12	STRAP, cable c/w buckle 12" long	1	Webbing Comm	C	EA9/27
28D/1218385	AS.1248/28	Attaching parts for EEAS.132/9 & EEAS.132/12:- Bolt, 4 BA	1	—	C	EA9/28
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	EA9/28
3420	EEAS.73	Plate, clamp	1	—	C	EA9/28
5CY/2967	†	SUPPRESSOR, type O, No.2 Attaching parts for 5CY/2967:-	2	—	A	EA9/30
28D/9140638	A26/48	Bolt, 4 BA	4	—	C	EA9/31
28M/9403519	A27/BP	Nut, plain 4 BA	4	—	C	
28W/1010155	AGS.162/8	Washer, spring 4 BA	4	—	C	
21389	AS.2806/4/02	Piece, distance	4	T.35	C	
	E.A3.81.2533	WIRING AND SUPPRESSORS FRAME 23 TO FRAME 24, ASSEMBLY (MOD.411) Spares for:-	—	—	—	
5CZ/868	†	BLOCK, terminal, type B, No.1 Attaching parts for 5CZ/868:-	2	—	C	EA9/32
28S/1011495	A33/A32	Screw, csk. hd. 6 BA	2	—	C	EA9/33
28M/9403518	A27/AP	Nut, plain 6 BA	2	—	C	
28W/9416641	SP47/A	Washer, spring, 6 BA	2	—	C	
3418	EEAS.132/12	STRAP, cable c/w buckle 12" long	1	Webbing Comm	C	EA9/34
28D/1218385	AS.1248/28	Attaching parts for EEAS.132/12:- Bolt, 4 BA	1	—	C	EA9/35
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	
3420	EEAS.73	Plate, clamp	1	—	C	EA9/36
5CY/2967	†	SUPPRESSOR, type O, No.2 Attaching parts for 5CY/2967:-	2	—	A	EA9/30
28D/1008149	A25/2B	Bolt, 4 BA	4	—	C	EA9/37
28M/9403519	A27/BP	Nut, plain, 4 BA	4	—	C	
28W/9416642	SP47/B	Washer, spring 4 BA	4	—	C	

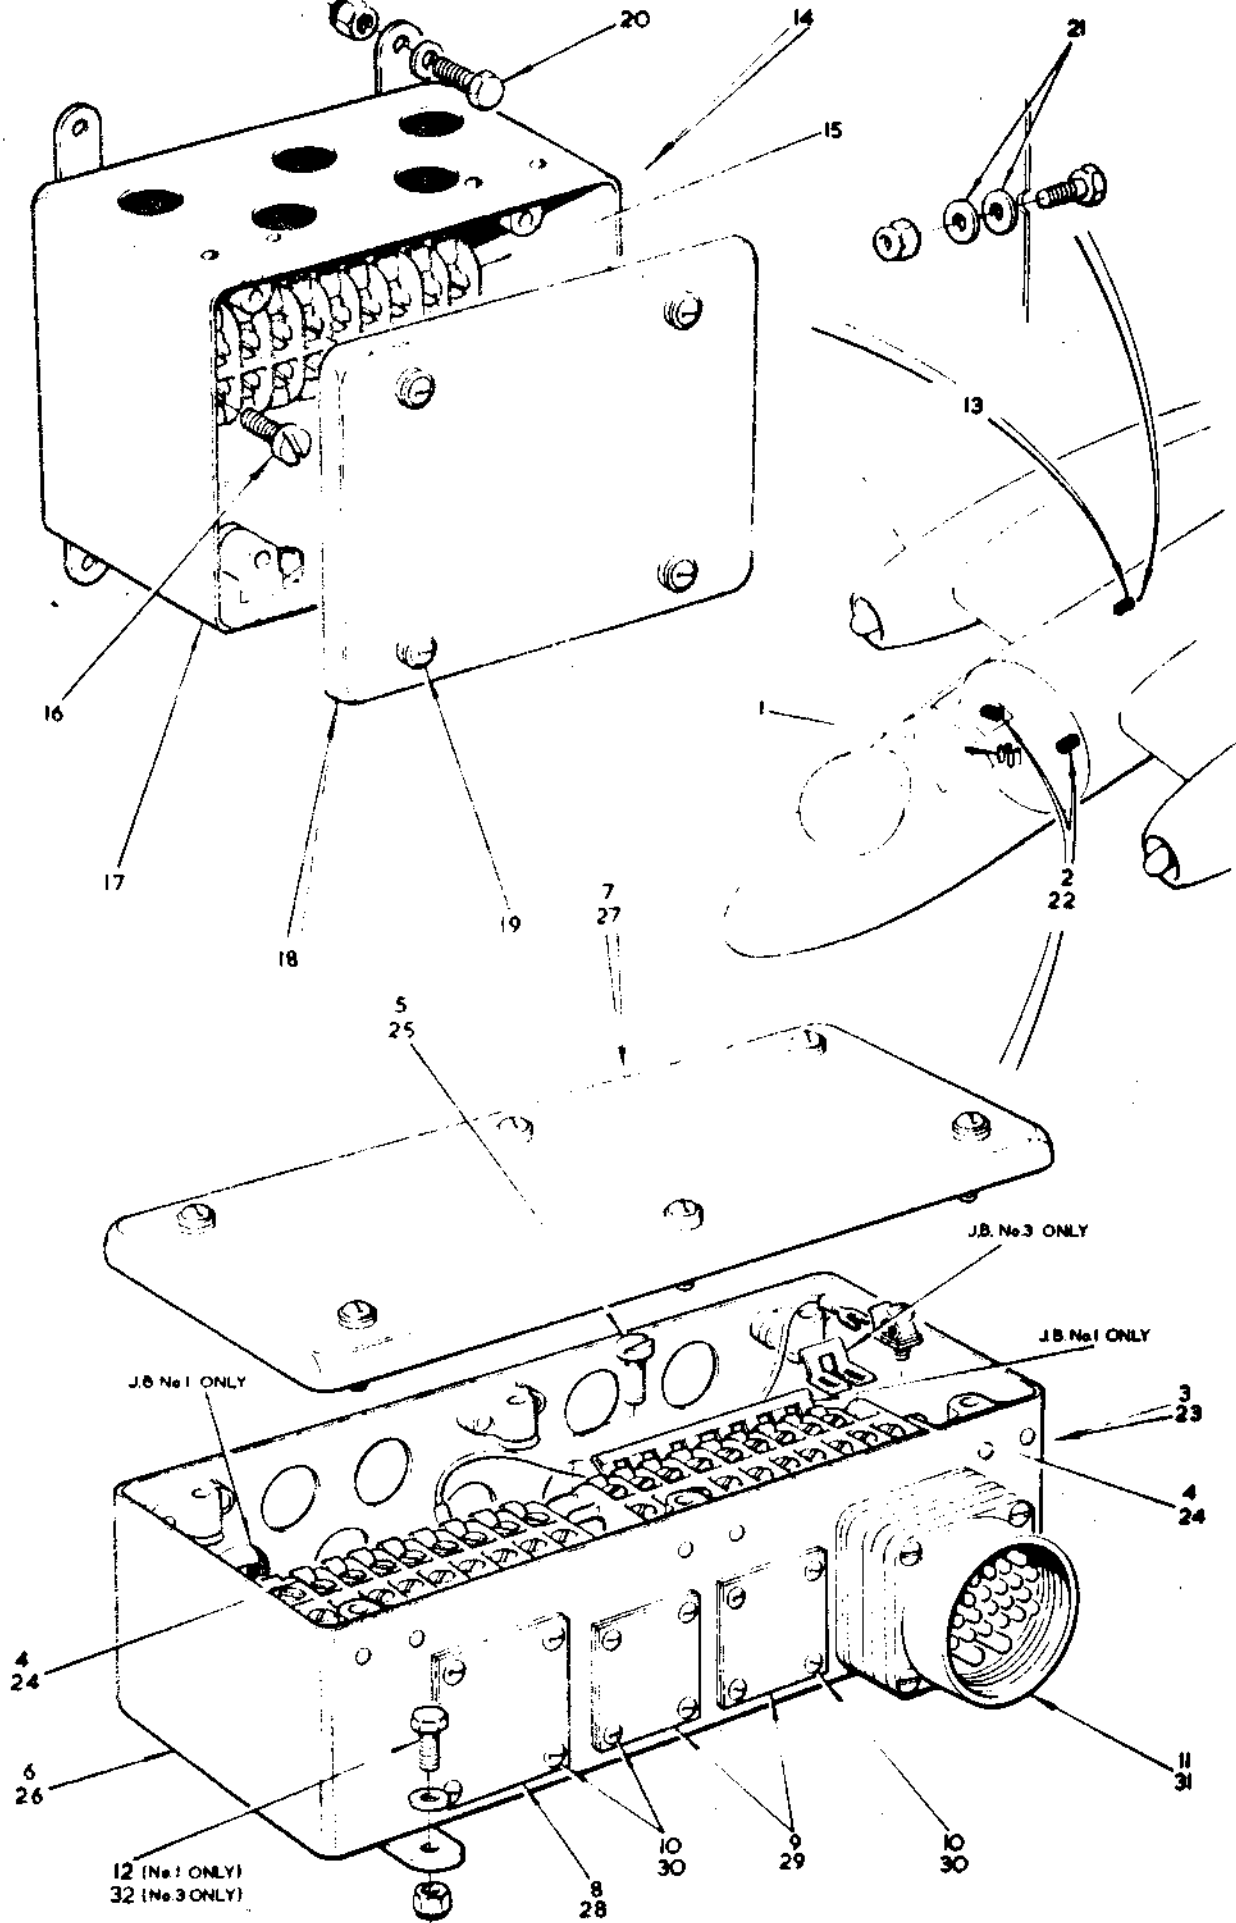


FIG.1 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE A

SECT. EA

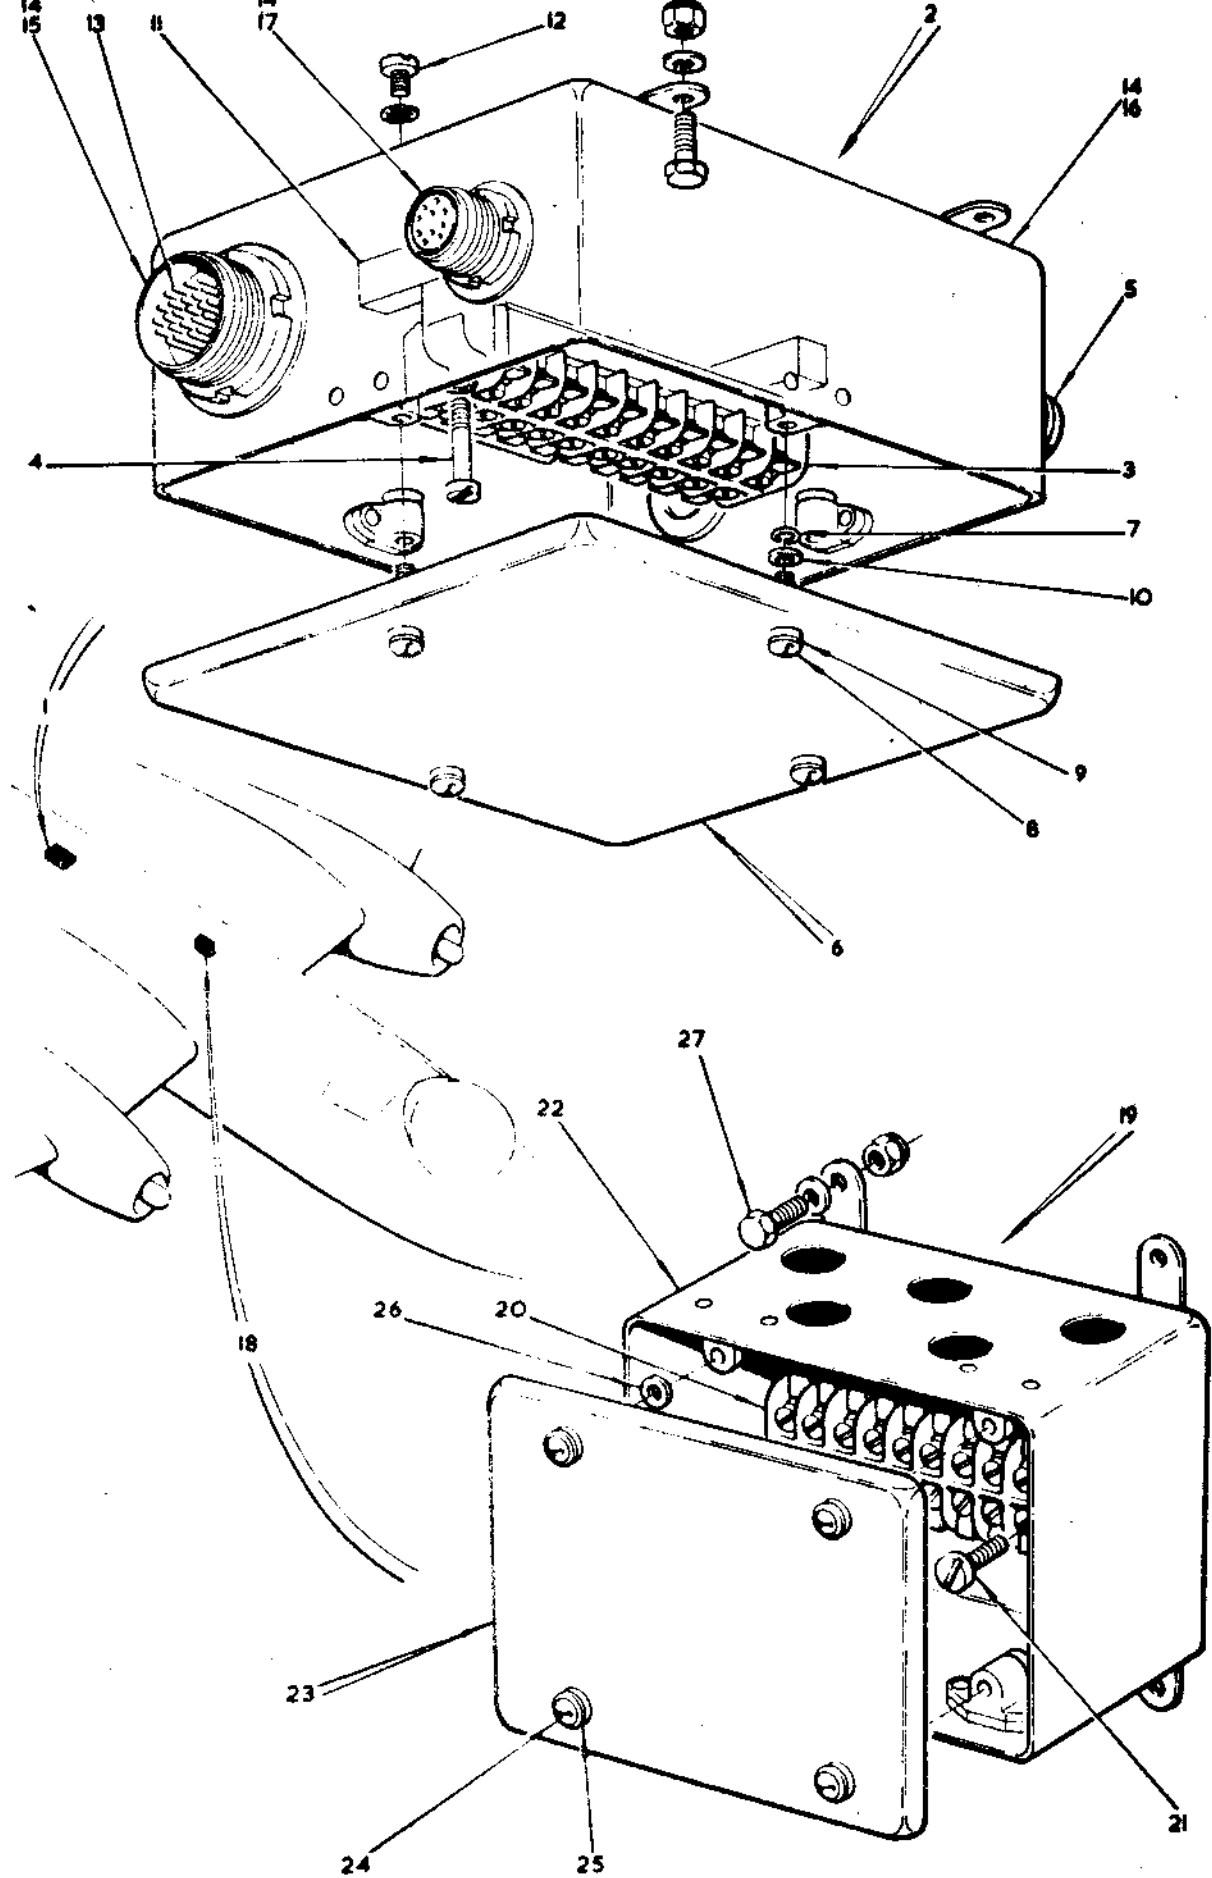


FIG. 2 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE A,B

SECT EA

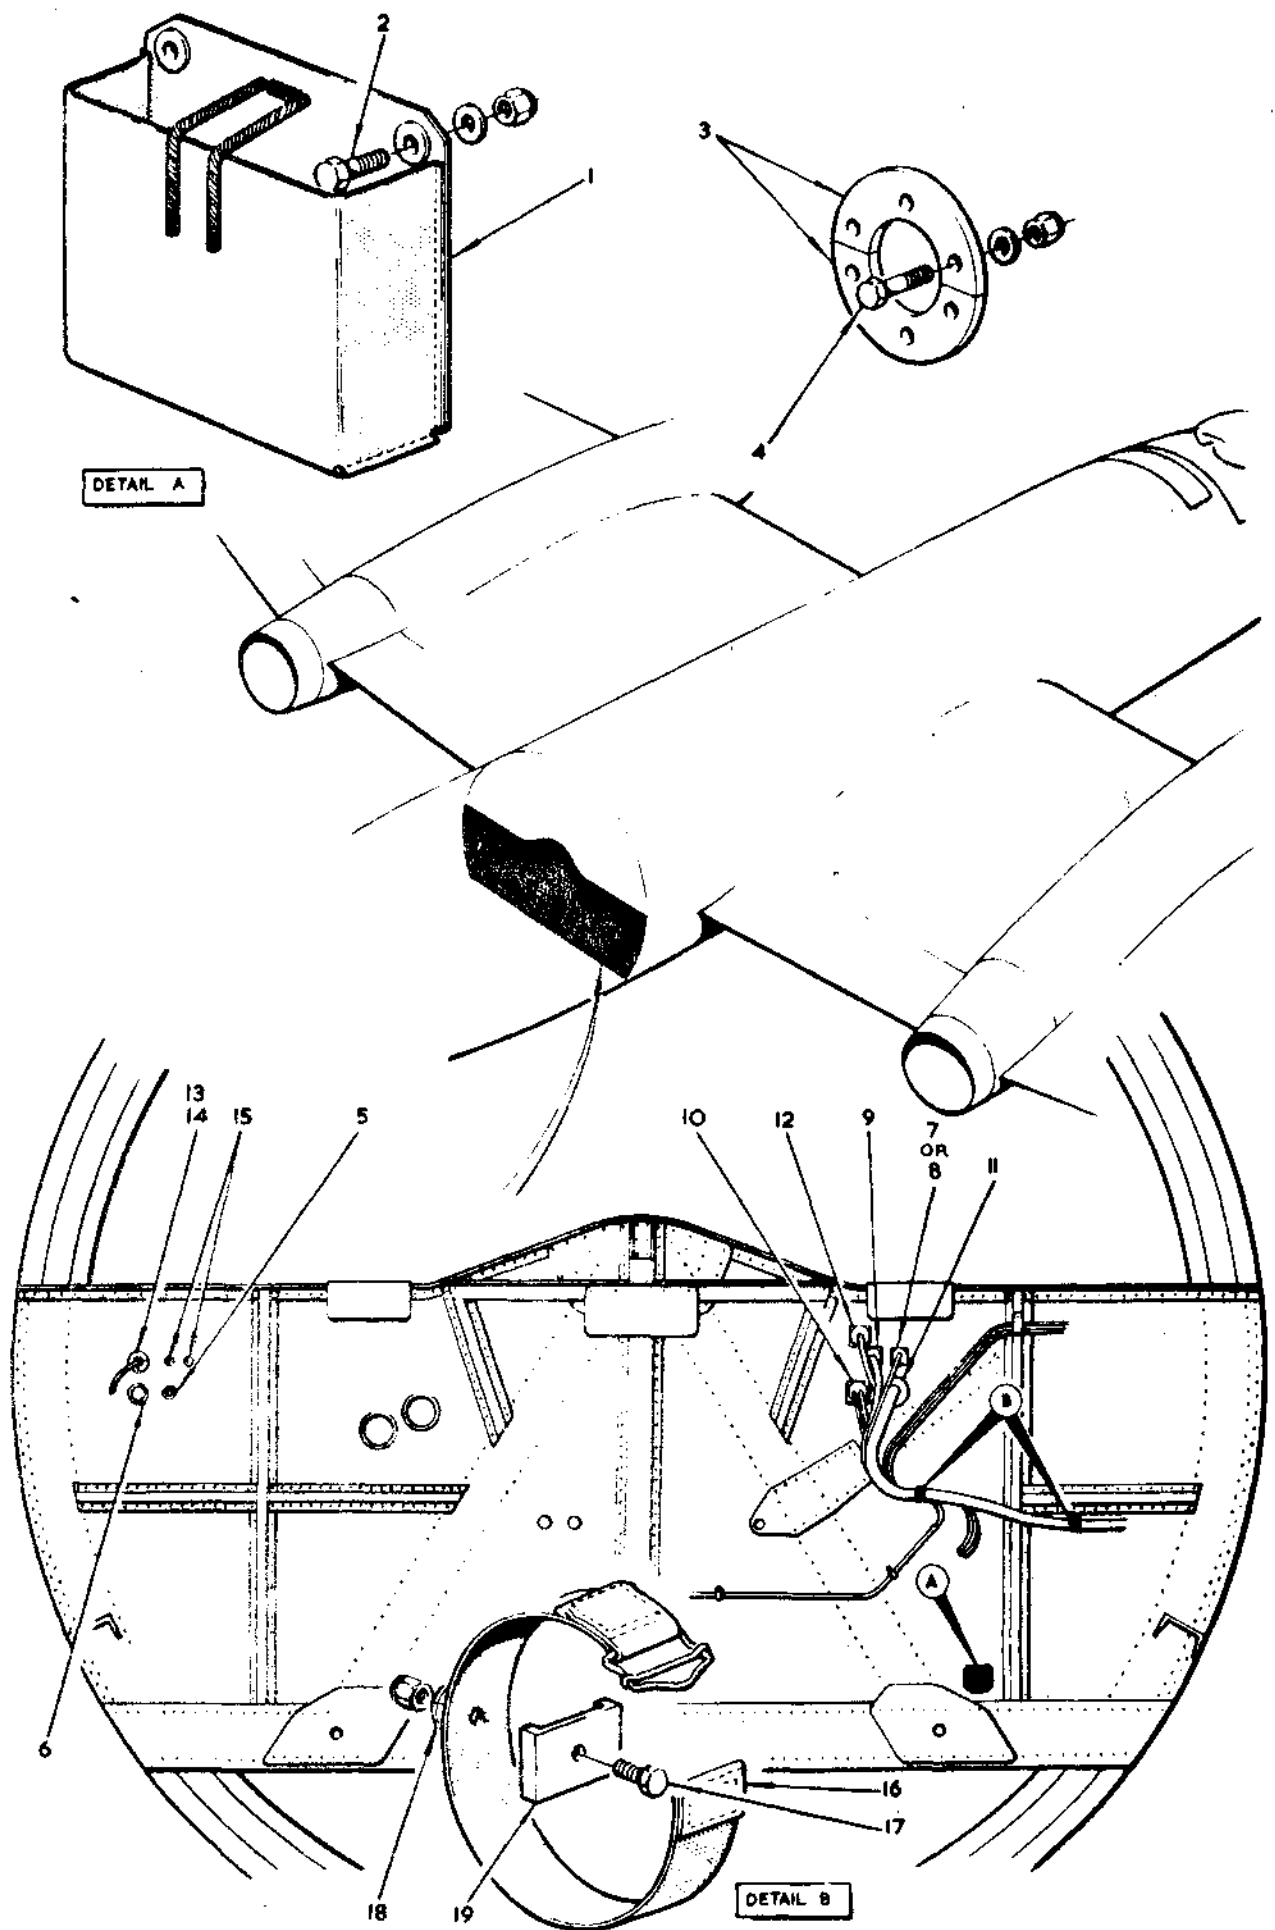


FIG.3 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE A

SECT 8A

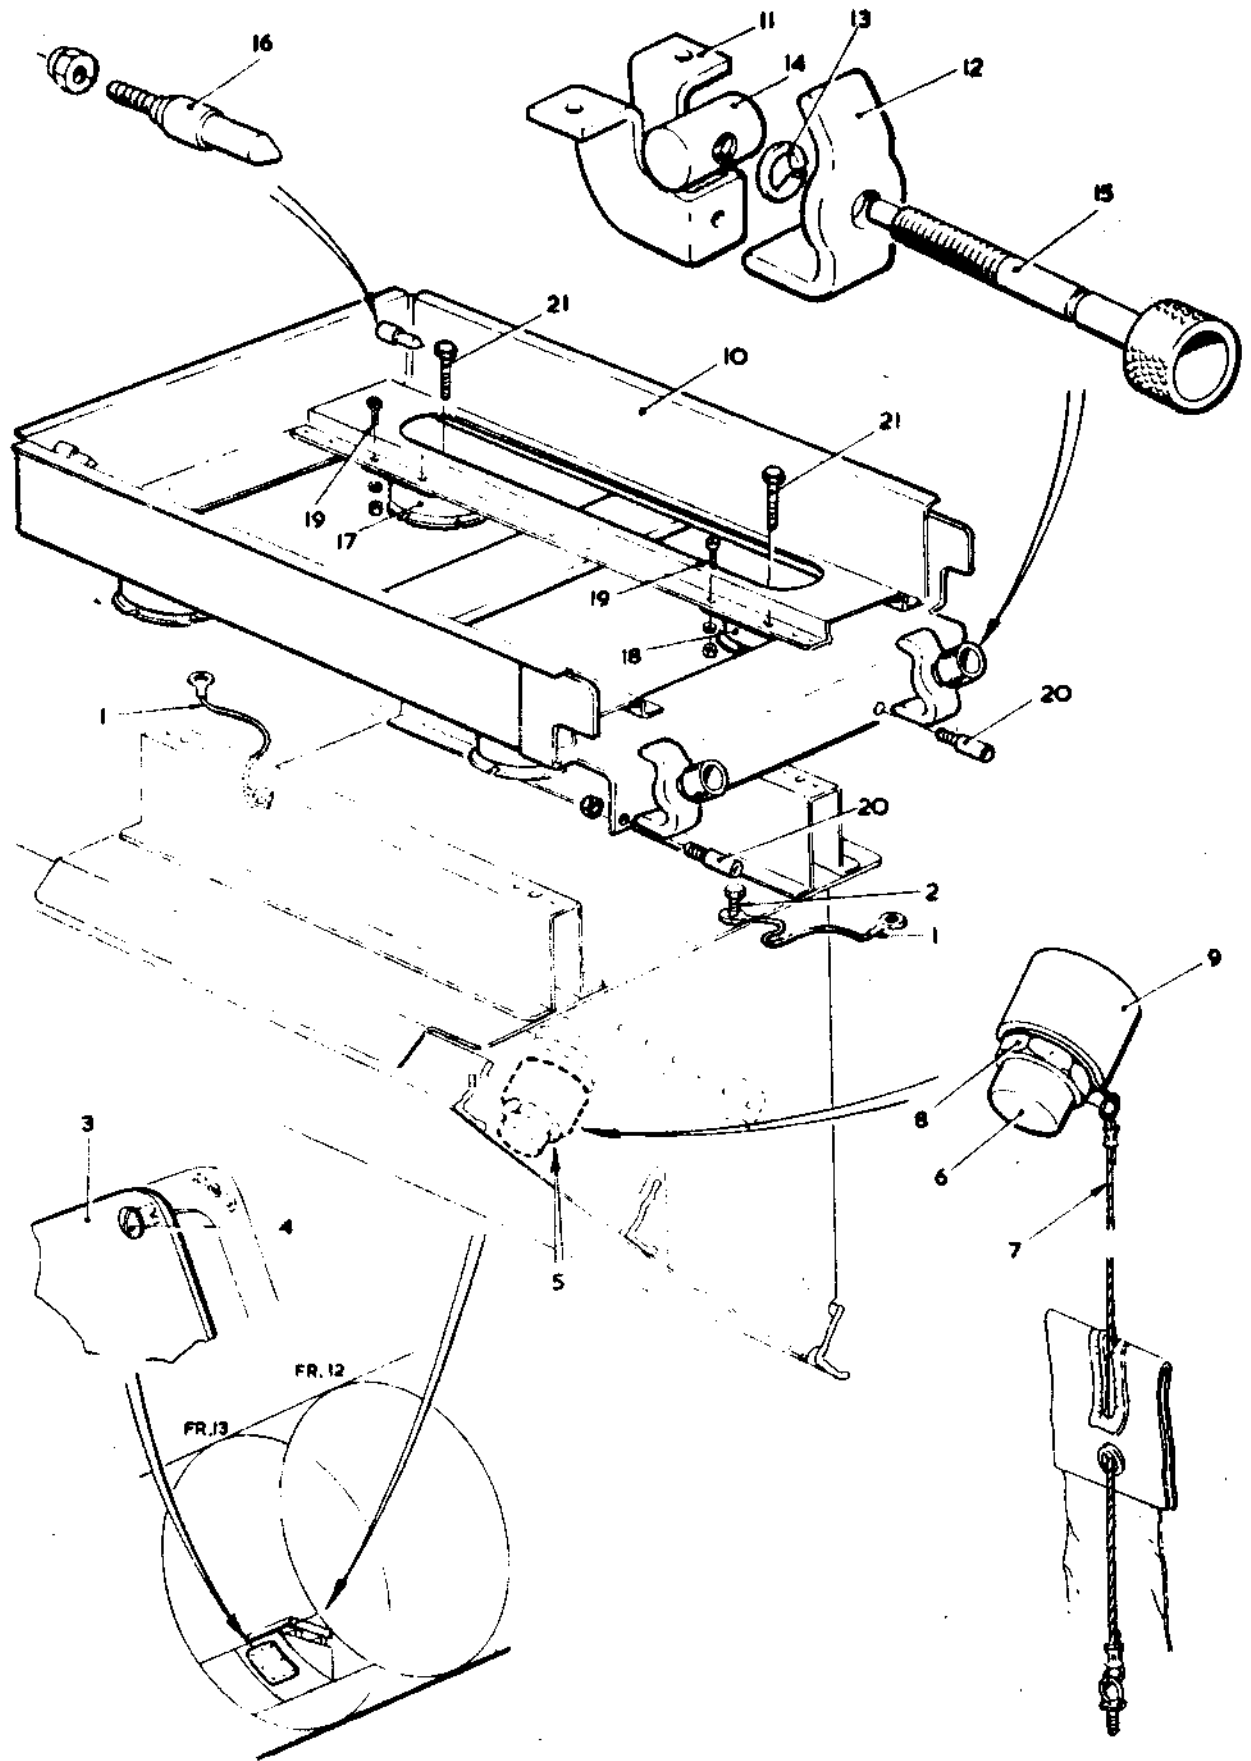


FIG.4 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE A

SECT. EA

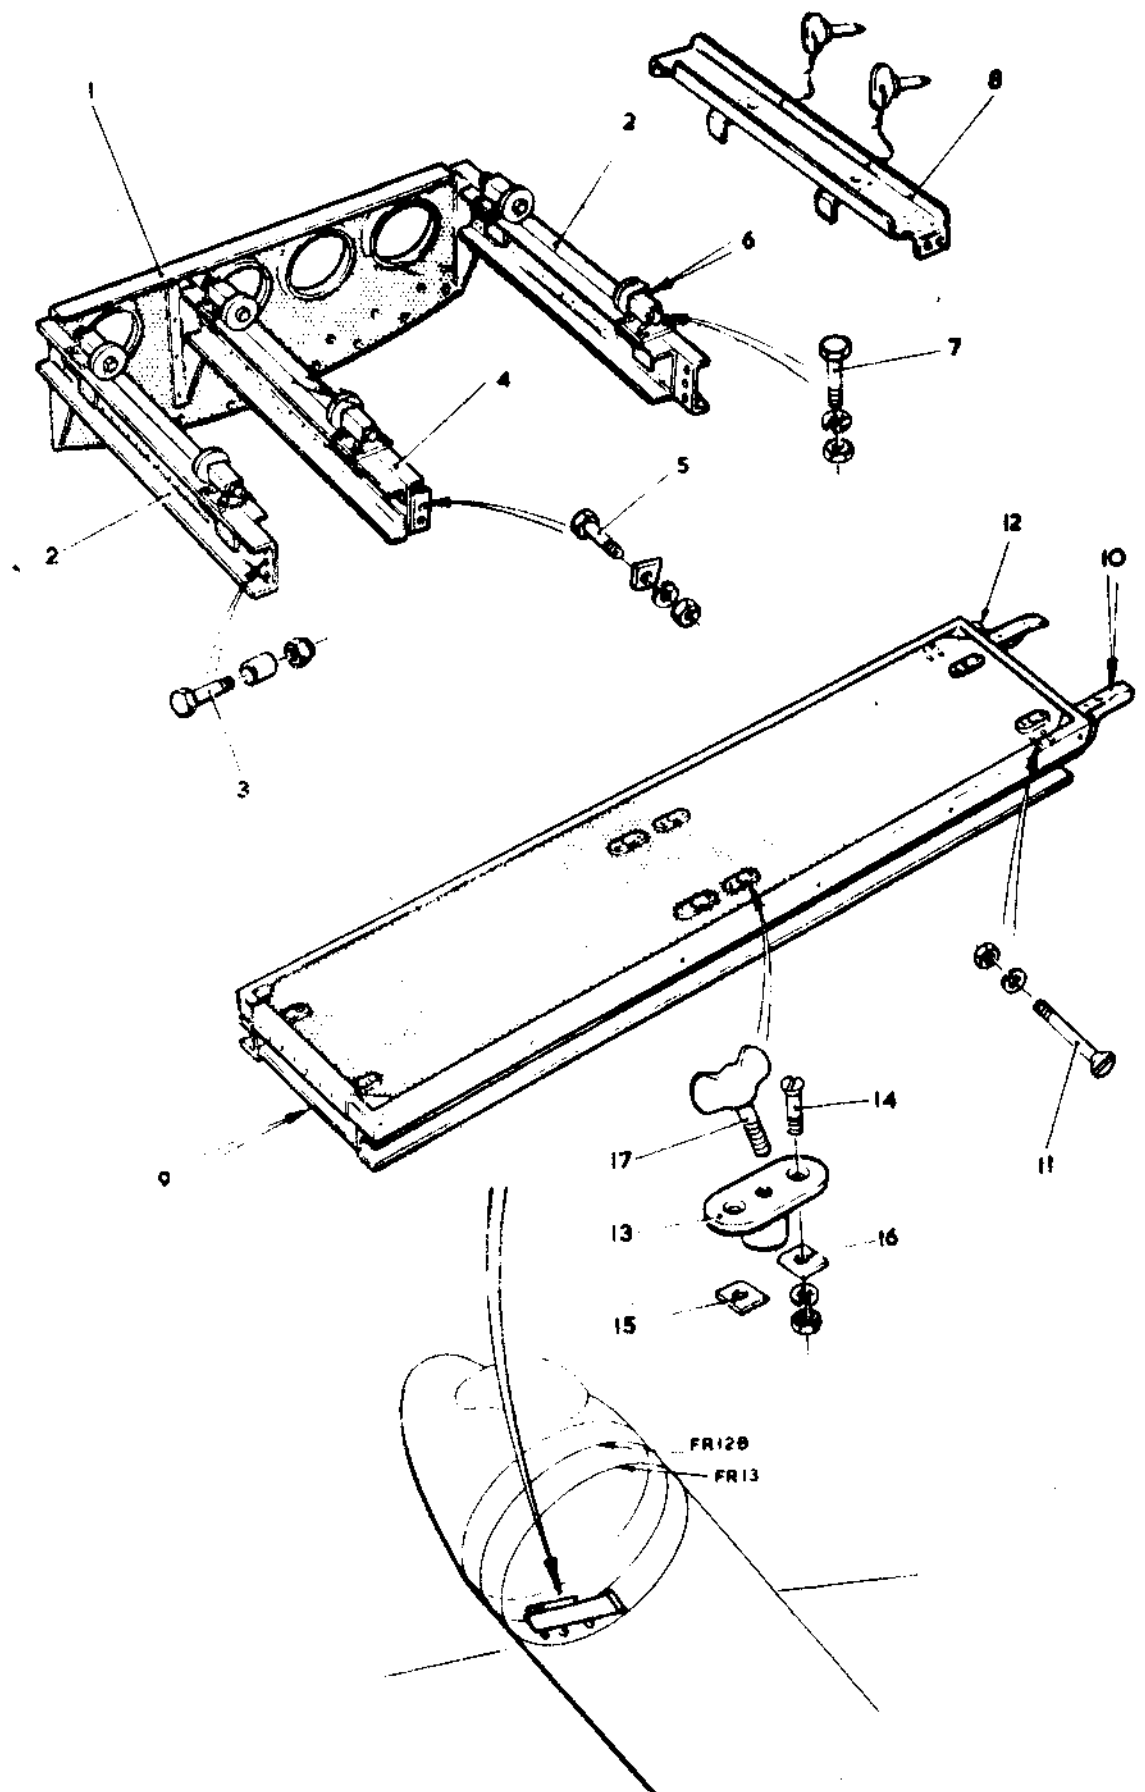


FIG. 5 ELECTRICAL EQUIPMENT IN CENTRE SECTION

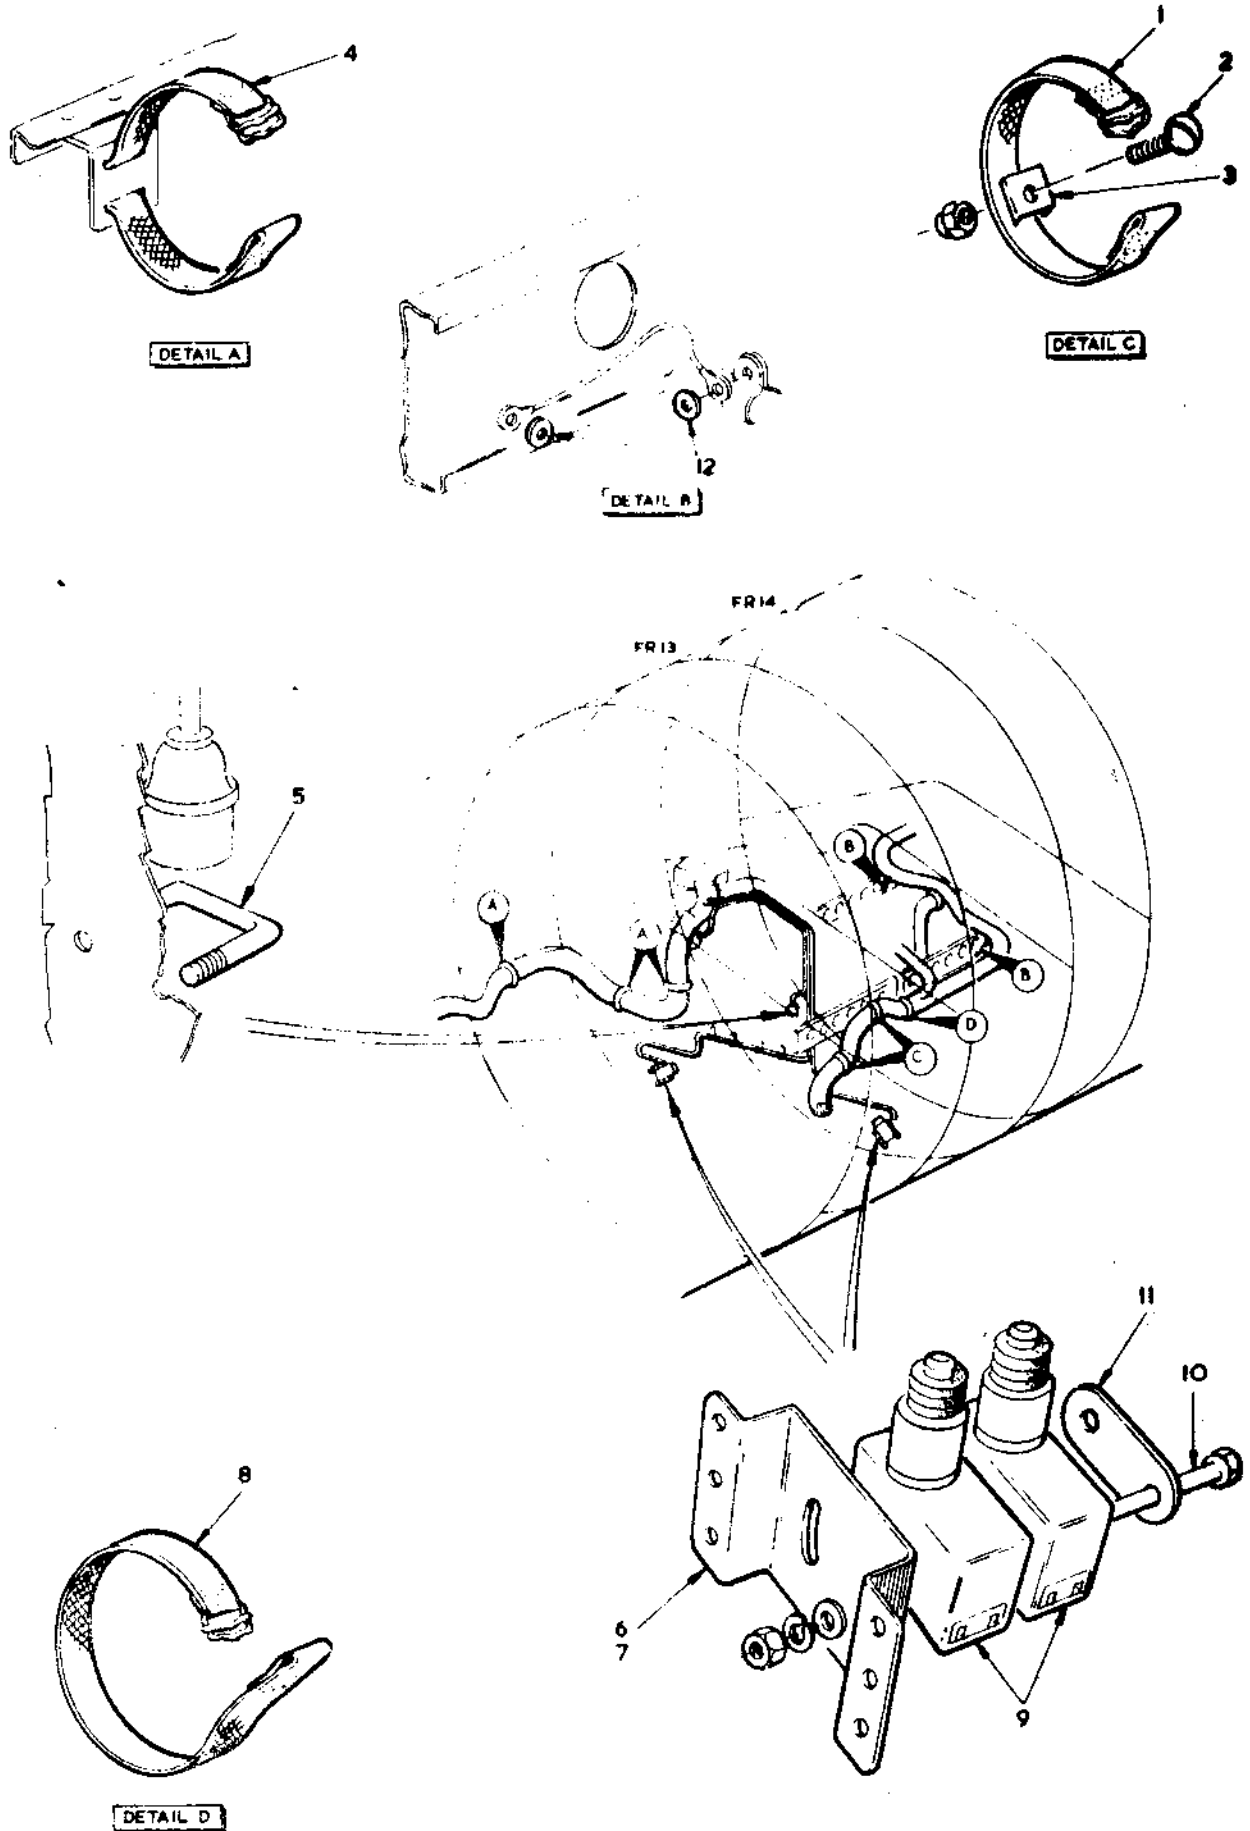


FIG. 6 ELECTRICAL EQUIPMENT IN CENTRE SECTION

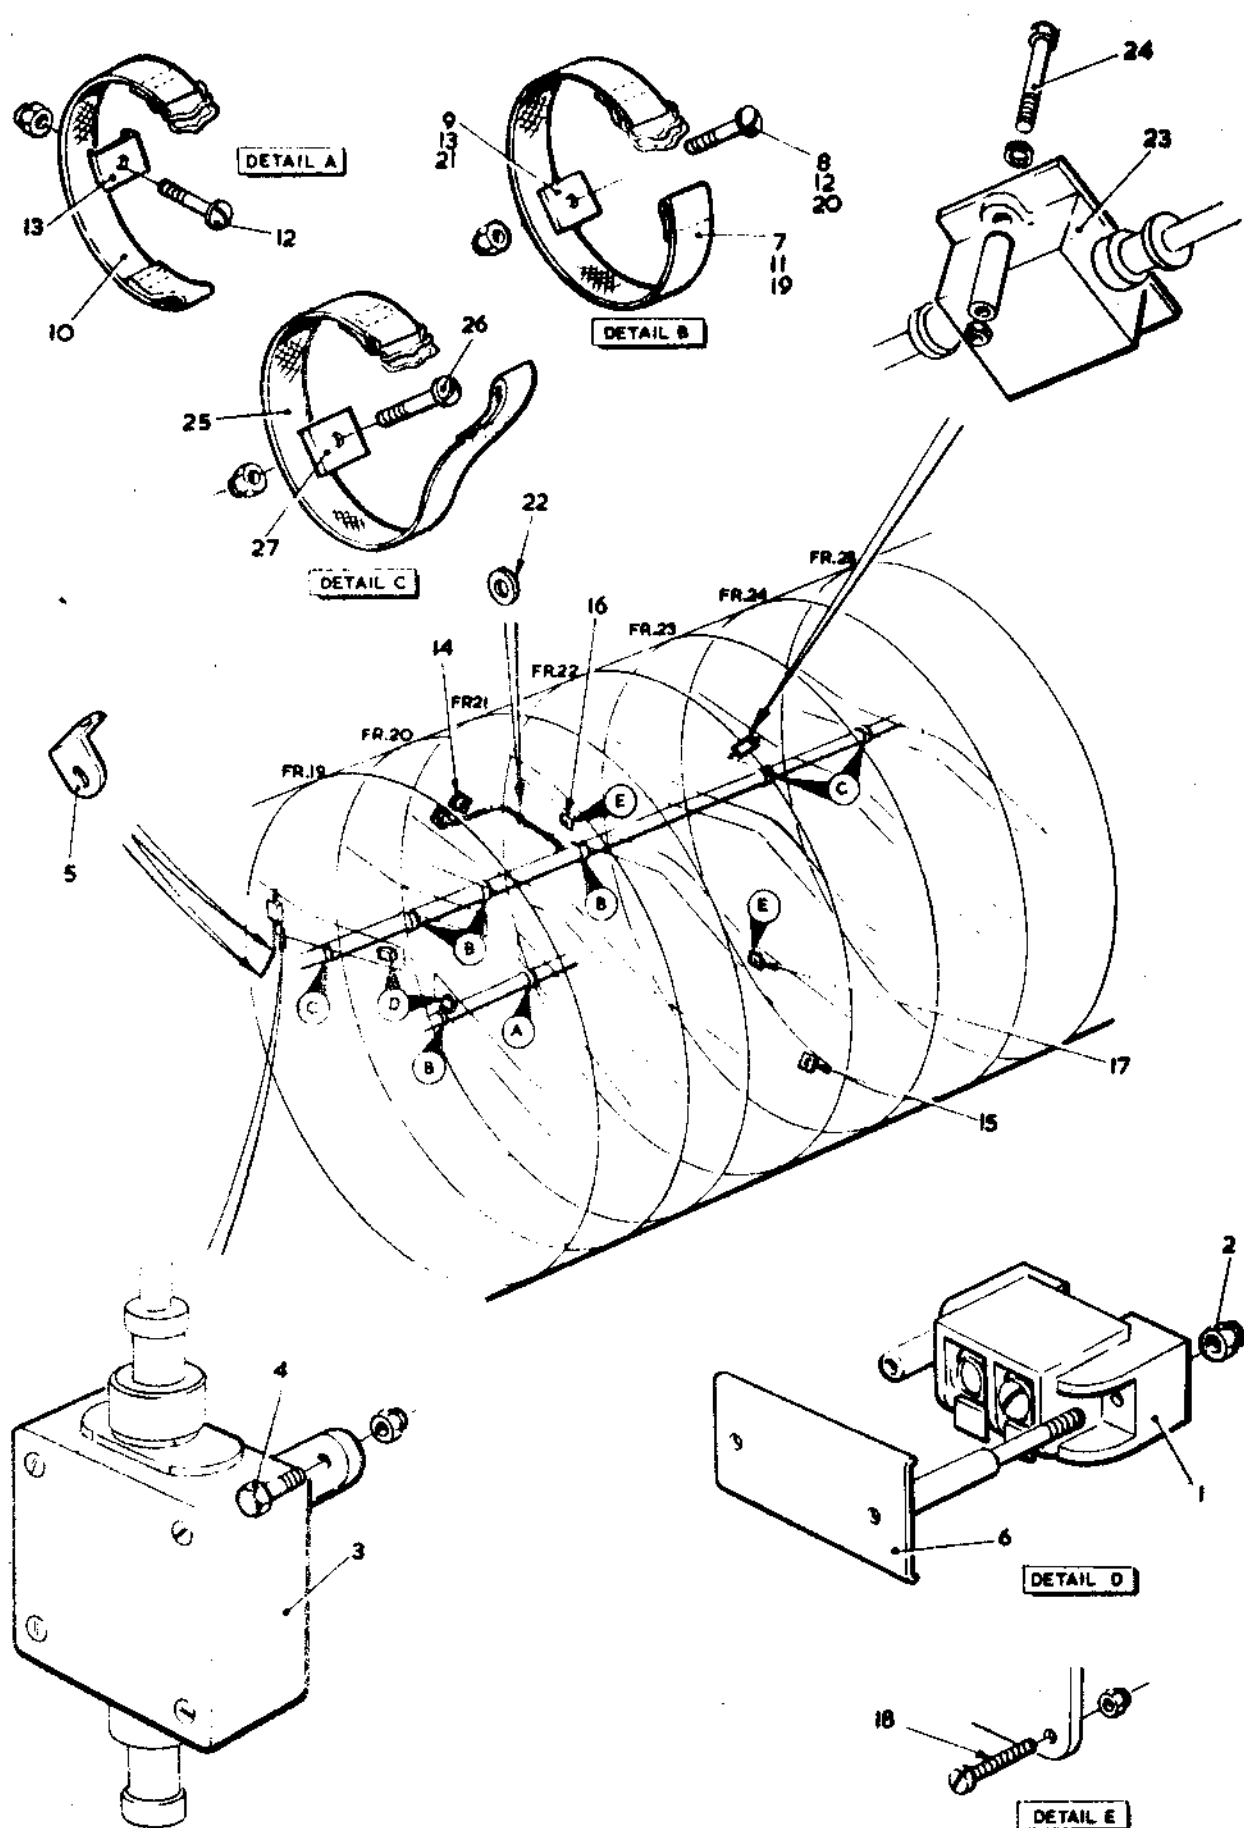


FIG 7 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE A

SECT EA

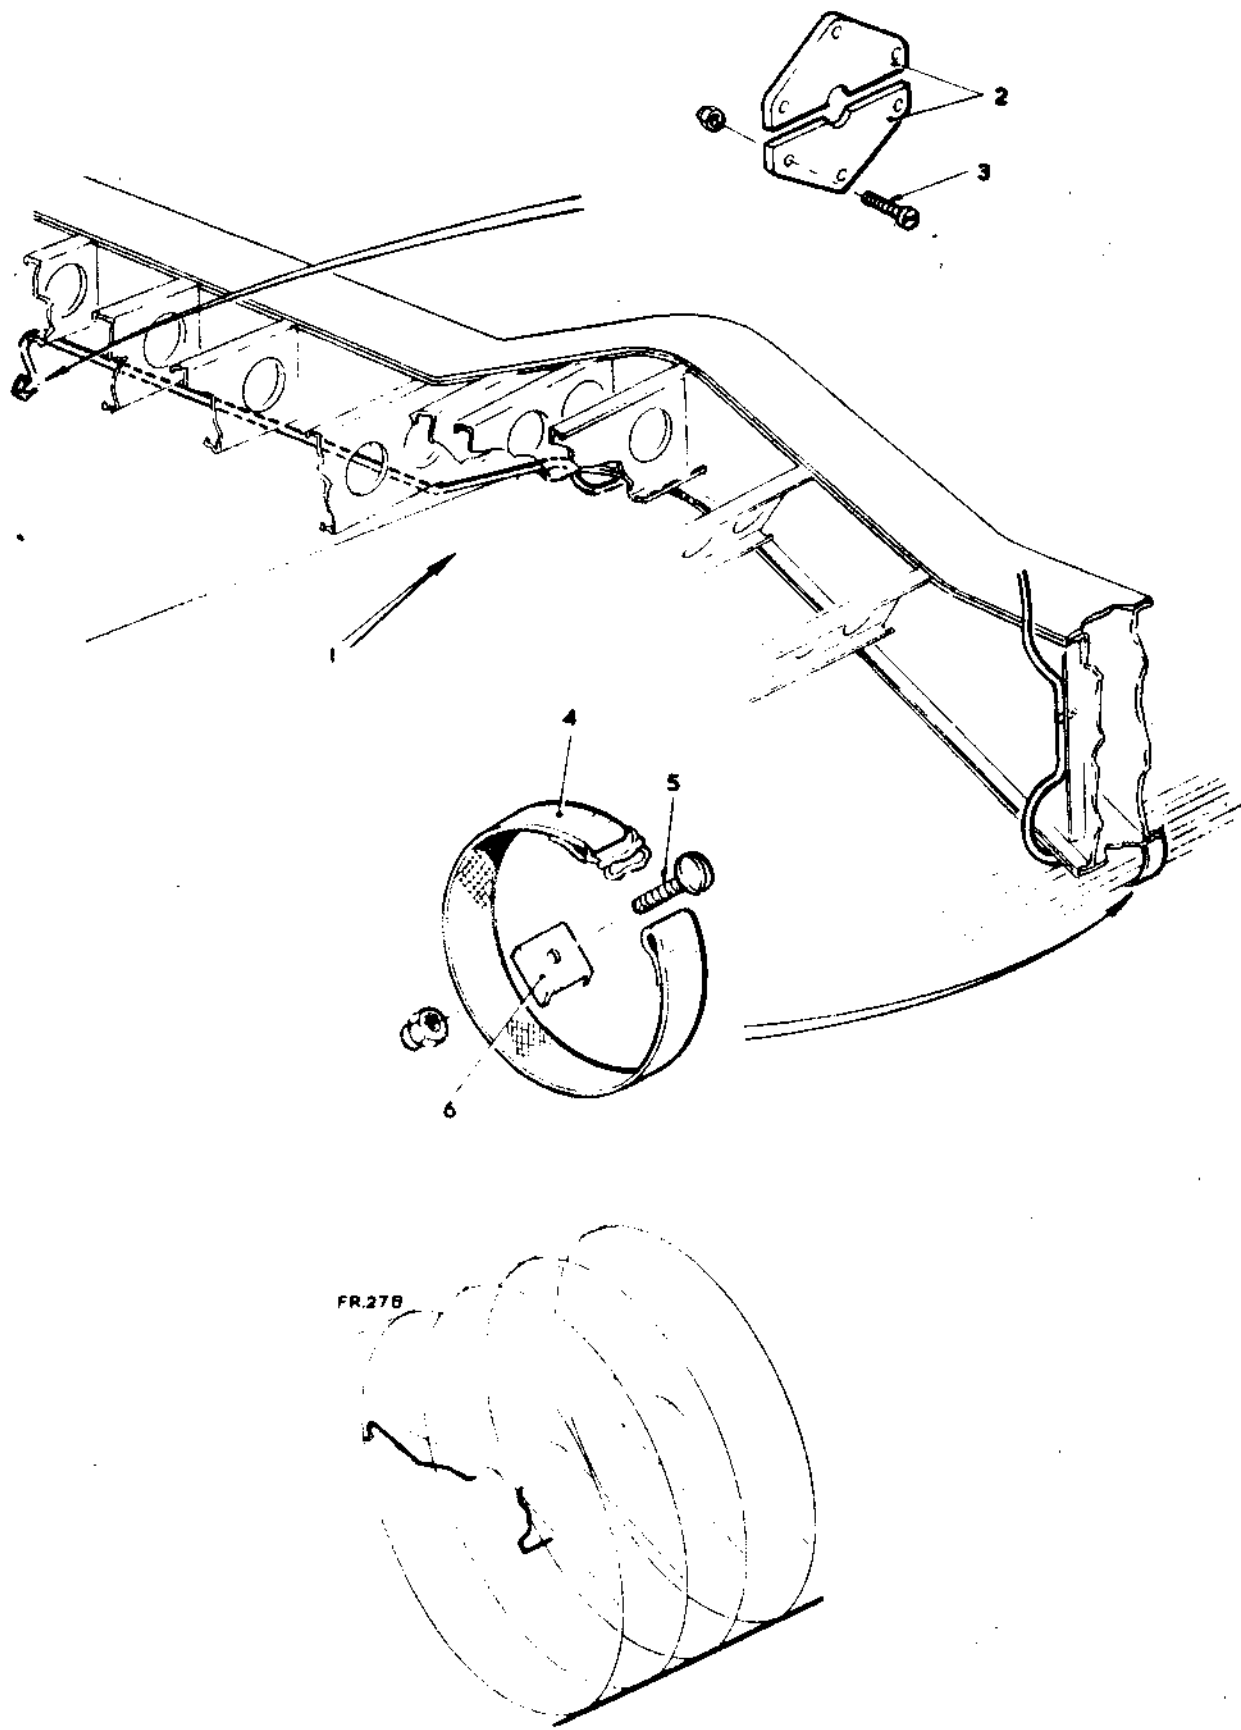


FIG 8 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE A

SECT. EA

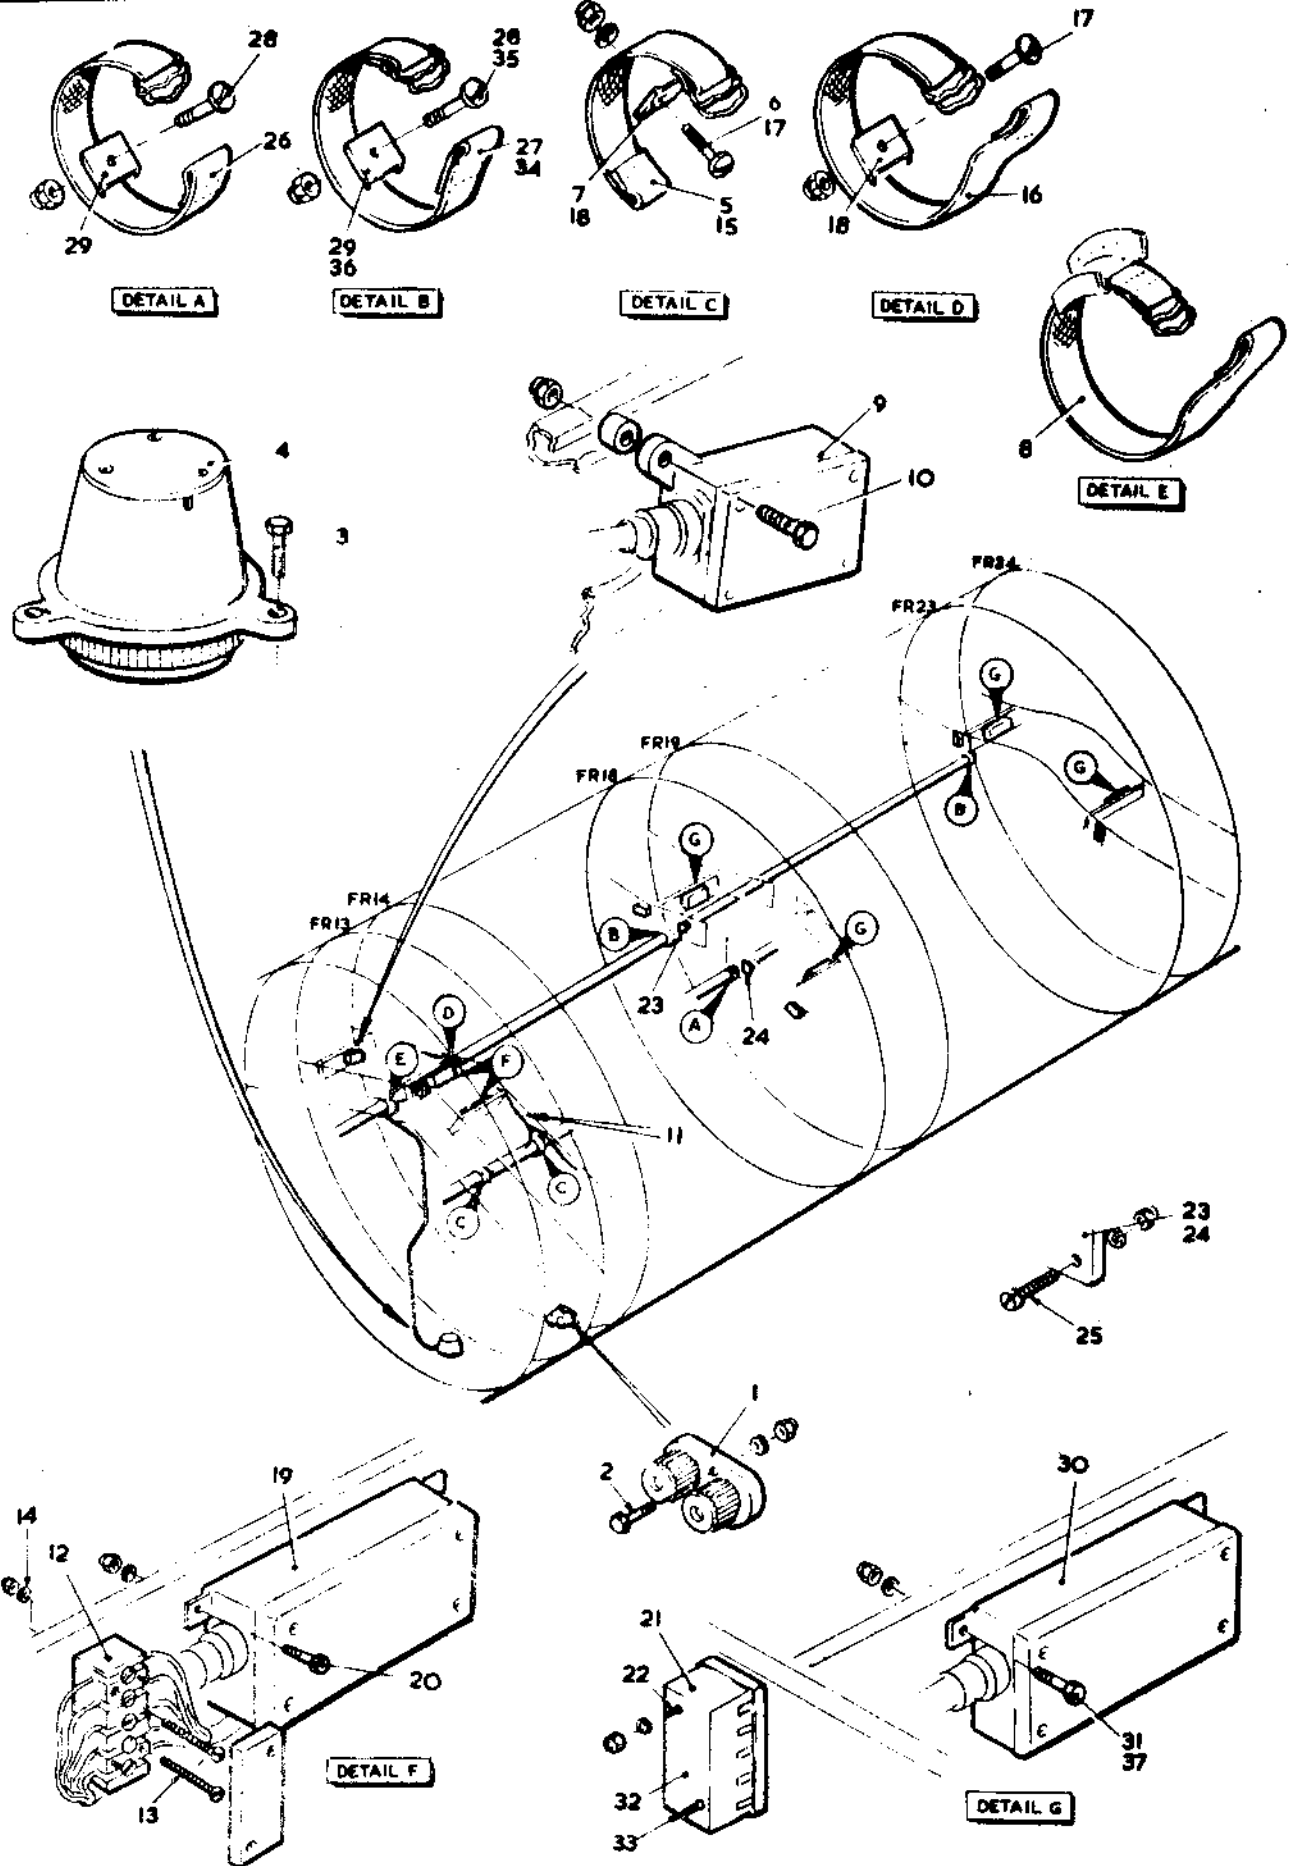


FIG 9 ELECTRICAL EQUIPMENT IN CENTRE FUSELAGE

CODE A

SECT. EA

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.5	ELECTRICAL EQUIPMENT IN FRONT FUSELAGE, ASSEMBLY	-	-	-	
	E.H8.81.461	Spares for:- AMPLIFIER ALTIMETER, INSTALLATION	-	-	-	EB1/1
6A/5465	†	Spares for:- AMPLIFIER, Mk. 1A	1	-	A	EB1/2
28D/9133011	A25/2C	Attaching parts for 6A/5465:-	4	-	C	EB1/3
28W/9419402	SP.13/C	Bolt, 2BA	4	-	C	
	E.H8.81.463	Washer, 2BA	4	-	C	
	E.H8.81.463	BRACKET, assembly	1	-	-	EB1/4
28D/9436920	A25/1C	Attaching parts for E.H8.81.463	4	-	C	EB1/5
28M/1278190	AGS.2001/C/1	Bolt, 2BA	4	-	C	EB1/6
28W/9419402	SP.13/C	Nut, stiff, 2BA	4	-	C	
		Washer, 2BA	4	-	C	
5K/1037443	AS.3360/C6C	LEAD, bonding	1	-	C	
	E.H8.81.469	AMPLIFIER, BOMB AIMERS INSTALLATION	-	-	-	EB1/7
6A/5465	†	Spares for AMPLIFIER, Mk. 1A	1	-	A	EB1/8
28D/9133011	A25/2C	Attaching parts for 6A/5465:-	4	-	C	EB1/9
28W/9419402	SP.13/C	Bolt, 2BA	4	-	C	
	E.H8.81.473	Washer, 2BA	4	-	C	
	E.H8.81.473	CHANNEL, mounting, assembly	1	-	-	EB1/10
28D/9436920	A25/1C	Attaching parts for E.H8.81.473	6	-	C	EB1/11
28M/1278190	AGS.2001/C/1	Bolt, 2BA	6	-	C	EB1/12
28W/9419402	SP.13/C	Nut, stiff, 2BA	6	-	C	
		Washer, 2BA	6	-	C	
5K/1037443	AS.3360/C6C	LEAD, bonding	1	-	C	
	E.H8.81.1001	BLOCK ASSEMBLY TERMINAL	1	-	-	EB1/13
5X/1004088	CZ.24285	Spares for:- BLOCK, terminal, 10-way	1	-	C	EB1/14
5X/9450403	Z.28426	Attaching parts for CZ.24285	2	-	C	EB1/15
28M/1278189	AGS.2001/B/1	Pillar, fixing	2	-	C	EB1/16
28W/9419465	SP.13/B	Nut, stiff, 4BA	2	-	C	
28W/9419474	SP.15/B	Washer, 4BA	2	-	C	
5X/3275	CZ.26808	COVER, terminal block	1	-	C	EB1/17
	E.H8.81.1013	BLOCK ASSEMBLY TERMINAL	1	-	-	EB1/18
5X/1002694	CZ.50207	Spares for BLOCK, terminal, 5-way	1	-	C	EB1/19
28S/1005622	A31/B28	Attaching parts for CZ.50207:- Screw, ch. hd. 4BA	2	-	C	EB1/20
	E.H8.81.711	BOX CAMERA CONTROL INSTALLATION	-	-	-	
	E.H8.81.465	Spares for:- BOX, F.95, CAMERA CONTROL ASSEMBLY	1	-	-	EB1/21
5X/1004088	CZ.24285	Spares for:- BLOCK, terminal, 10-way	1	-	C	EB1/22
28S/1005622	A31/B28	Attaching parts for CZ.24285:- Screw, ch. hd. 4BA	2	-	C	EB1/23

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
33390	E.B6.81.4851	BOX, CAMERA CONTROL	1	—	A	
	E.B6.81.4871	Spares for:-	1	—	—	EB1/24
33391	E.B6.81.4853	BOX, engraved	1	—	B	EB1/25
	E.B6.81.4683	LID, assembly	1	—	LM	EB1/26
	E.B6.81.4683	Spares for:-	1	—	—	—
	E.A9.81.4357	HINGE (Make from Ref. 28N/9486470)	1	—	—	—
32368	E.A9.81.4357	Attaching parts for E.B6.81.4853:-	2	—	C	EB1/27
1066	EEAS.28/2CU	Screw, cover	2	DTD.124	C	—
1108	EEAS.42	Washer	2	—	—	—
	E.H6.81.521	Washer, leather	1	—	—	EB1/28
	W. VINTEN LTD.	GUARD, switch	1	—	—	—
14A/5068	390/1A	INDICATOR, film	1	—	B	EB1/29
		Attaching parts for 390/1A:-	—	—	—	—
28S/1006979	A32/A10	Screw, rd. hd. 6BA	4	—	C	EB1/30
28W/9416641	SP.47/A	Washer, spring, 6BA	4	—	C	—
34457	BULGIN K.421	KNOB	1	—	C	EB1/31
5X/1004083	Z.50211	LINK, commoning, 3-way	1	—	C	—
5X/1004082	Z.50210	LINK, terminal, 2-way	2	—	C	—
5X/7151	2CZ.111226	PLUG, size 'C'	1	—	C	EB1/32
5X/7152	2CZ.111227	PLUG, size 'C'	1	—	C	EB1/33
5K/9107065	EEAS.146/A	SLEEVE	54	—	C	—
5K/9107067	EEAS.146/C	SLEEVE	7	—	C	—
	EEAS.146/16	SLEEVE	OR	—	—	—
	N.F.S.	—	—	—	—	—
5CW/6291	8820/B.103	SWITCH	1	—	B	EB1/34
5CW/6511	8810/B.101	SWITCH	1	—	B	EB1/35
5CW/6529	8800/B.105	SWITCH	1	—	B	EB1/36
	E.B8.81.3501	SWITCH, rotary (Make from Ref.No.32530.DM1)	—	—	—	—
5X/9482954	HC.306B	TAG, crimping	13	—	C	—
5X/9482491	HC.500	TAG, quick release	1	—	C	—
5X/9400063	Z.19925	TAG, No 2	11	—	C	—
	321626	TERMINAL, ring tongue 6 amp, 6BA	2	—	C	—
5X/9400064	Z.19980	THIMBLE, No.2	11	—	C	—
5E/9100229	1	WIRE, equipment type 3, 40/0076	AR	—	C	—
		Attaching parts for E.H6.81.465:-	—	—	—	—
28S/9997545	A31/C16	Screw, ch. hd. 2BA	4	—	C	EB1/38
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	—
	E.H8.81.83	BOX DISTRIBUTION, No.1 ASSEMBLY	1	—	—	EB2/1
	E.H8.81.137	Spares for	1	—	—	EB2/2
		BASEPLATE, ASSEMBLY	1	—	—	—
		Attaching parts for E.H8.81.137:-	—	—	—	—
28S/9419435	A31/B12	Screw, ch. hd. 4BA	5	—	C	EB2/3
28W/9419465	SP.13/B	Washer, 4BA	5	—	C	—
5X/1002694	CZ.50207	BLOCK, terminal, 5-way	1	—	C	EB2/4
		Attaching parts for CZ.50207:-	—	—	—	—
28S/1200033	A31/B24	Screw, ch. hd. 4BA	2	—	C	EB2/5
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	—	C	EB2/6
28W/9419465	SP.13/B	Washer, 4BA	2	—	C	—

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.N. L.M.	
		1 2 3 4 5 6				
5X/1002695	CZ.23212/1	BLOCK, terminal, 20-way	10	—	C	EB2/7
28S/1200033	A31/B24	Attaching parts for CZ.23212/1:- Screw, ch. hd. 4BA	2	—	C	EB2/8
	E.H8.81.151	BOX, shell	—	—	—	EB2/9
	↑	CABLE, uniminyvin 12	OR	—	—	
	↑	CABLE, uniminyvin 16	OR	—	—	
	↑	CABLE, uniminyvin 20	—	—	—	
	E.H8.81.411	CABLE, ASSEMBLY, F72, to pressure bulkhead	1	—	—	
	E.H8.81.415	CABLE, ASSEMBLY, F18, to pressure bulkhead	1	—	—	
	E.H8.81.417	CABLE, ASSEMBLY, F25, to pressure bulkhead	1	—	—	
	E.H8.81.419	CABLE, ASSEMBLY, F26, to pressure bulkhead	1	—	—	
	E.H8.81.421	CABLE, ASSEMBLY, F27, to pressure bulkhead	1	—	—	
	E.H8.81.423	CABLE, ASSEMBLY, F28, to earth	1	—	—	
	E.H8.81.425	CABLE, ASSEMBLY, F29, to pressure bulkhead	1	—	—	
	E.H8.81.617	CABLE, ASSEMBLY, F64, to pressure bulkhead	1	—	—	
	E.H8.81.619	CABLE, ASSEMBLY, F66, to pressure bulkhead	1	—	—	
16922	E.A2.81.795	CARRIER, fuse spare	1	—	—	EB2/10
		Attaching parts for E.A2.81.795:-				
28S/1200049	A31/A12	Screw, ch. hd. 6BA	2	—	C	EB2/11
28M/10286	AGS.2001/A/1	Nut, stiff, 6BA	2	—	C	EB2/12
	AS.491/28	CLIP	1	—	—	EB2/13
		Attaching parts for AS.491/28:-				
28S/9992525	A32/B12	Screw, rd. hd. 4BA	2	—	C	EB2/14
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	—	C	EB2/15
10C/0115565	Z.115565	CONDENSER, 0.25 uf. 300 v	2	—	B	EB2/16
	E.A3.81.215	COVER, assembly	1	—	—	EB2/17
		Attaching parts for E.A3.81.215:-				
20457	EEAS.117/1	Screw, 4BA	6	—	C	EB2/18
1066	EEAS.28/2CU	Washer, special	12	DTD.124	C	EB2/19
1108	EEAS.42	Washer, leather	6	—	C	EB2/20
10H/23864	5CZ/5215	FUSE, 5 amp, type AS	10	—	C	EB2/21
10H/21791	5CZ/5866	FUSE, dummy	2	—	C	EB2/22
5X/6168	Z.23197	GASKET, plug	8	—	C	EB2/23
	HELLERMANN					
	GS1H-A	GROMMET, nylon flexiform	OR	—	C	
5X/6237	EEAS.71/1	LINK, commoning, 2-way	2	—	C	
5X/1004082	Z.50210	LINK, terminal, 2-way	4	—	C	
5X/1004083	Z.50211	LINK, commoning, 3-way	3	—	C	
5X/1004085	Z.50213	LINK, commoning, 5-way	1	—	C	
5X/6314	Z.50214	LINK, commoning, 6-way	1	—	C	
	E.G7.81.2169	MOUNTING, relay	1	—	—	EB2/24
	E.H8.81.173	PLATE, blanking	1	—	—	EB2/25
		Attaching parts for E.H8.81.173:-				
28S/1200049	A31/A12	Screw, ch. hd. 6BA	4	—	C	EB2/26
28M/10286	AGS.2001/A/1	Nut, stiff, 6BA	4	—	C	EB2/27

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5X/9166	E.A3.81.1549	PLATE, patch	1	—	—	EB2/28
5X/9178	508/1/06394	PLUG, size 'A'	3	—	C	EB2/29
5X/9185	508/1/06406	PLUG, size 'C'	4	—	C	EB2/30
	508/1/06413	PLUG, size 'D'	5	—	C	EB2/31
	508/2/12373/001	RING, anti-chaff	2	—	—	EB2/32
	MAM RUBBER CO.					
5X/3148	Z.49428	SLEEVE 3 mm i/d. grade CXH 3/8" long	QR	—	—	
5K/9107066	EEAS.146/12	SLEEVE	QR	—	C	
	EEAS.146/16	SLEEVE ¼" and ⅜" long	QR	—	C	
	EEAS.146/20	SLEEVE	QR	—	—	
5K/9107065	508/1/07043/220	SLEEVE	QR	—	C	
	508/1/07043/221	SOCKET, fixed Mk.7 (T4) 6-way	1	—	C	EB2/33
5CW/6717	↑	SOCKET, fixed Mk.7 (T4) 6 way	1	—	C	EB2/34
5CW/6719	↑	SWITCH, magnetic relay type S.7	2	—	C	EB2/35
	↑	SWITCH, magnetic relay type S.9	2	—	C	EB2/36
	HELLERMANN					
5X/9462951	HC.294	TAG, quick release	8	—	C	
5X/9462745	HC.304	TAG, quick release	1	—	C	
5X/9450396	HC.490	TAG, quick release	266	—	C	
5X/9482491	HC.500	TAG, quick release	97	—	C	
5X/9450224	HC.510	TAG, quick release	16	—	C	
	AS.2810/4/075	TUBE, distance .25 o/d. 75" long	4	—	C	
28D/9436920	A25/1C	Attaching parts for E.H8.81.83 Bolt, 2BA	4	—	C	EB2/37
	E.H8.81.85	BOX, DISTRIBUTION NO.2 ASSEMBLY Spare for	1	—	—	EB3/1
5X/1002695	CZ.23212/1	BLOCK, terminal 20-way	1	—	C	EB3/2
5X/1004088	CZ.24285	BLOCK, terminal, 10-way	1	—	C	EB3/3
		Attaching parts for CZ.23212/1 CZ.24285				
28S/1200033	A31/824	Screw, ch. hd. 4BA	2	—	C	EB3/4
28M/1278189	AGS.2001/8/1	Nut, stiff, for CZ.24285	2	—	C	EB3/5
28W/9416642	SP.47/B	Washer, spring, 4BA	2	—	C	
5X/3271	CZ.52815	BLOCK, fuse	1	—	C	EB3/6
28E/8018277	AS.3130/78	CLIP, cable	1	—	C	EB3/7
		Attaching parts				
28S/1200034	A31/B16	Screw, ch. hd. 4BA	1	—	C	EB3/8
	EEAS.240/1A	Washer, 'D'	1	—	—	EB3/9
	E.H8.81.527	BOX, shell	1	—	—	EB3/10
	F.H8.81.529	COVER, assembly	1	—	—	EB3/11
		Spare for				
	E.A2.81.795	CARRIER, fuse, spare	1	—	—	EB3/12
		Attaching parts for E.A2.81.795				
28S/1006948	A32/A12	Screw, rd. hd. 6BA	2	—	C	EB3/13
28M/10326	AGS.2002/A/1	Nut, stiff, 6BA	2	—	C	EB3/14
28W/9419464	SP.13/A	Washer, 6BA	2	—	C	
		Attaching parts for E.H8.81.529				
20457	EEAS.117/1	Screw	4	—	C	EB3/15
1066	EEAS.28/2CU	Washer	8	—	C	EB3/16
1108	EEAS.42	Washer, leather	4	—	C	EB3/17

**ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE**

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
10H/23864	†	FUSE, 5 amp	9	—	C	EB3/18
5X/1004082	Z.50210	LINK, terminal, 2-way	6	—	C	
5X/6238	EEAS.71/3	LINK, commoning, 4-way	1	—	C	
5X/1004085	Z.50213	LINK, commoning, 5-way	1	—	C	
	E.H8.81.533	MOUNTING, fuse block	1	—	—	EB3/19
		Attaching parts for E.H8.81.533:-				
28S/1200034	A31/B16	Screw, ch. hd. 4BA	4	—	C	EB3/20
	508/2/03547/002	PIN, contact 16	2	—	—	EB3/21
	508/2/05604/002	PIN, contact 16/20	2	—	—	EB3/22
5X/9413	UK-AN.8000/ 14S 2P	PLUG, connector	1	—	C	EB3/23
	EEAS.589/16	PLUG, filler	13	—	—	EB3/24
	508/2/05851/ 004	RING, anti chaff	2	—	—	EB3/25
	508/2/05851/ 005	RING, anti chaff	3	—	—	EB3/26
	508/2/05851/ 006	RING, anti chaff	1	—	—	EB3/27
	508/2/15663	SLEEVE, packing	21	—	—	
	MAM RUBBER CO.	SLEEVE, 3 mm i/d. grade CXH 3/8" long	30	—	—	
5K/9107065	EEAS.146/6	SLEEVE, 1/4" and 3/4" long	QR	—	—	
	EEAS.146/20	SLEEVE, 1/4" and 3/4" long	QR	—	C	
	508/1/04585/ 002	SOCKET, contacts 16	18	—	—	EB3/28
	508/1/05602/ 002	SOCKET, contact 16/20	19	—	—	EB3/29
5X/7928	UK-AN.8000/ 14S-6S	SOCKET, connector	1	—	C	EB3/30
5X/7792	UK-AN.8000/ 16S-1S	SOCKET, connector	1	—	C	EB3/31
	UK-AN.8000/ 16-1SW	SOCKET, connector	1	—	—	EB3/32
5X/10384	UK-AN.8000/ 16S-1S2	SOCKET, connector	1	—	C	EB3/33
5X/930318	UK-AN.8000/ 18-1S	SOCKET, connector	1	—	C	EB3/34
	HENDREY					
5CW/10678	†	SWITCH, magnetic relay	2	—	A	EB3/35
		Attaching parts for 5CW/10678:-				
28S/9140642	A31/B36	Screw, ch. hd. 4BA	3	—	C	EB3/36
28W/9419465	SP.13/B	Washer, 4BA	3	—	C	
5X/7424	HC.296D	TAG, ring tongue	12	—	C	
5X/9462745	HC.304	TAG, ring tongue	2	—	C	
5X/1936351	HC.306D	TAG, ring tongue	4	—	C	
5X/9450396	HC.490	TAG, quick release	25	—	C	
5X/9482491	HC.500	TAG, quick release	11	—	C	
	E.H8.81.531	TRAY, assembly, relay	1	—	—	EB3/37
		Attaching parts for E.H8.81.531:-				
28S/1200034	A31/B16	Screw, ch. hd. 4BA	7	—	C	EB3/38
	†	WIRE, 23/0076 type 2 (black)	QR	—	—	
3E/9424124	†	WIRE, 40/0076 type 3 (black)	QR	—	C	
		Attaching parts for E.H8.81.85:-				
28D/9436920	A25/1C	Bolt, 2BA	4	—	C	EB3/39

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
	E.H8.81.89	BOX, FUSE ASSEMBLY 400 ohms	1	—	—	EB4/1
		Spares for:-				
5X/1002694	CZ.50207	BLOCK, terminal	2	—	C	EB4/2
		Attaching parts for CZ.50207:-				
28S/1200065	A33/B28	Screw, csk. hd. 4BA	2	—	C	EB4/3
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	—	C	EB4/4
5X/3271	CZ.52815	BLOCK, fuse	5	—	C	EB4/5
		Attaching parts for CZ.52815:-				
	AGS.245/20	Bolt	2	—	—	EB4/6
	AGS.585/8	Washer	2	—	—	
	E.H8.81.115	BOX, shell	1	—	—	EB4/7
16692	E.A3.81.325	COVER, assembly	1	—	C	EB4/8
		Spares for:-				
16336	E.A1.81.542	CARRIER, fuse spare	1	—	C	EB4/9
6171	E.A3.81.1259	CLIP, spring	4	—	C	EB4/10
20457	EEAS.117/1	SCREW, 4BA	4	—	C	EB4/11
1066	EEAS.28/2CU	WASHER	8	—	C	EB4/12
1108	EEAS.42	WASHER, leather	4	—	C	EB4/13
10H/23864	†	FUSE, 5 amp	25	—	C	EB4/14
10H/21791	†	FUSE, dummy	4	—	C	EB4/15
1120	EEAS.62/2	GLAND	7	—	C	EB4/16
1121	EEAS.62/3	GLAND	2	—	C	EB4/17
5X/6237	EEAS.71/1	LINK, commoning 2-way	1	—	C	
5X/6286	EEAS.71/2	LINK, commoning 3-way	1	—	C	
6X/6238	EEAS.71/3	LINK, commoning, 4-way	2	—	C	
5X/6172	Z.50212	LINK, commoning, 4-way	1	—	C	
5X/1004085	Z.50213	LINK, commoning, 5-way	1	—	C	
	E.G4.81.963	PLATE, insulating	1	—	—	EB4/18
	MAM RUBBER CO.	SLEEVE, 3 mm i/d. grade CXH 3/8" long	QR	—	—	
5K/9107065	EEAS.146/20	SLEEVE, 1/2" long	QR	—	C	
5X/9462951	HC.294	TAG, quick release	2	—	C	
5X/9450369	HC.490	TAG, quick release	6	—	C	
	E.G4.81.965	TERMINAL, assembly	1	—	—	EB4/19
		Attaching parts for E.H8.81.89:				
	AGS.247/12	Screw, ch. hd. 2BA	4	—	—	EB4/20
	E.H8.81.93	BOX, JUNCTION No.13 ASSEMBLY	1	—	—	EB4/21
		Spares for:-				
5X/1002695	CZ.23212/1	BLOCK, terminal, 20 way	1	—	C	EB4/22
		Attaching parts for CZ.23212/1:-				
28S/9992519	A43/B24	Screw, ch. hd. 4BA	2	—	C	EB4/23
	E.A1.81.589	BOX, 20-way	1	—	—	EB4/24
5X/6168	Z.23197	GASKET	1	—	C	EB4/25
	E.A1.81.598F	LID, assembly	1	—	—	EB4/26
5X/6172	Z.50212	LINK, commoning, 4 way	1	—	C	
	MAM RUBBER CO.	SLEEVE, 3 mm i/d. grade CXH 3/8" long	QR	—	—	
		Attaching parts for E.H8.81.93:				
28D/9436920	A25/1C	Bolt, 2BA	4	—	C	EB4/27
	E.H8.81.91	BOX, JUNCTION No.14, ASSEMBLY	1	—	—	EB4/28
		Spares for:-				
5X/1002695	CZ.23212/1	BLOCK, terminal 20-way	2	—	C	EB4/29
		Attaching parts for CZ.23212/1:-				
28S/9992519	A43/B24	Screw, ch. hd. 4BA	2	—	C	EB4/30

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5X/6168 5X/ 5X/1004082 5X/6314	E.A3.81.583	BOX, 40-way	1	—	—	EB4/31
	E.A1.81.597F	COVER, assembly	1	—	—	EB4/32
	Z.23197	GASKET	2	—	C	EB4/33
	Z.23198	GASKET	2	—	C	EB4/34
	Z.50210	LINK, terminal, 2-way	1	—	C	
	Z.50214	LINK, commoning, 6-way	1	—	C	
	E.A1.81.464	PLATE, adaptor	2	—	—	EB4/35
	E.H8.81.935	PLATE, adaptor	2	—	—	EB4/36
		Attaching parts for E.A1.81.464 and E.H8.81.935:-				
		Screw, rd. hd. 6BA	4	—	C	EB4/37
28S/1006948	A32/A12	Nut, stiff, 6BA	4	—	C	EB4/38
28M/10286	AGS.2001/A/1					
	MAM RUBBER CO	SLEEVE, 3 mm i/d. grade CXH 3/8" long	QR	—	—	
		Attaching parts for E.H8.81.91				
28D/9436920	A25/1C	Bolt	4	—	C	EB4/39
	E.H8.82.207	BOX, JUNCTION RADIO	1	—	—	EB5/1
		Spares for				
	BENDIX RMA-21B-RM1	AMPLIFIER, comm/Nav. systems	1	—	—	EB5/2
		Attaching parts for RMA-21B-RM1:-				
28S/9144891	A39/B12	Screw, ch. hd. 4BA	4	—	C	EB5/3
5X/3271	CZ.52815	BLOCK, fuse, 4-way	2	—	C	EB5/4
		Attaching parts for CZ.52815				
28S/9435712	A31/B8	Screw, ch. hd. 4BA	2	—	C	EB5/5
28W/9416642	SP.47/B	Washer, spring	2	—	C	
5X/1002695	CZ.23212/1	BLOCK, terminal, 20-way	4	—	C	EB5/6
		Attaching parts for CZ.23212/1				
5X/9450403	Z.28426	Pilot, fixing	2	—	C	EB5/7
	E.H8.81.273	BOX, shell	1	—	—	EB5/8
	508/1/07779/ 001	CLAMP, cable	1	—	—	EB5/9
28E/1006377	AS.3180/12B	CLIP, cable	1	—	—	EB5/10
		Attaching parts for AS.3180/12B:-				
28S/9419453	A31/B14	Screw, ch. hd. 4BA	1	—	C	EB5/11
28W/9419465	SP.13/B	Washer, 4BA	1	—	C	
26DK/10561	EEAS.237/6A	Washer, 'D'	1	—	C	EB5/12
5X/9149643	CZ.25111	COVER, block terminal	4	—	C	EB5/13
10H/23864	†	FUSE, 5 amp	4	—	C	EB5/14
10H/21791	*	FUSE, dummy	4	—	C	EB5/15
5X/6238	EEAS.71/3	LINK, commoning 4-way	1	—	C	
5X/1004082	Z.50210	LINK, terminal 2-way	4	—	C	
5X/6172	Z.50212	LINK, commoning 4-way	1	—	C	
5X/6174	Z.50216	LINK, commoning 8-way	1	—	C	
5X/1004086	Z.50219	LINK, transverse	5	—	C	
	E.G7.81.1133	MOUNTING, assembly, transformer	1	—	—	EB5/16
		Attaching parts for E.G7.81.1133:-				
28S/1214674	A39/B14	Screw, ch. hd. 4BA	2	—	C	EB5/17
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	
	508/2/07643/ 001	OUTLET, straight for socket	1	—	—	EB5/18

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
28S/9419453 28W/9419465	508/2/07706/ 300	OUTLET, gasket for socket	1	—	C	EB5/19
	E.G.7.81.1139	PLATE, TOP, fuse block	1	—	—	EB5/20
	A31/B14	Attaching parts for E.G.7.81.1139:-	6	—	C	EB5/21
	SP.13/B	Screw, ch. hd. 4BA Washer, 4BA	6	—	C	
28S/9144891 28M/1956039	508/2/03547/ 002	PIN, contacts 16	2	—	—	
	508/2/05604/ 002	PIN, contacts 16/20	8	—	—	
	508/2/04367	PLUG, filler 16	7	—	—	
	UK-AN.8000/ 18-1P	PLUG, fixed	1	—	—	EB5/22
	CLARE ELLIOT XA 1.02.2400	RELAY	1	—	—	EB5/23
	A39/B12	Attaching parts for XA.1.02.2400:-	2	—	C	EB5/24
	AGS.2001/B/3	Screw, ch. hd. 4BA Nut, stiff	2	—	C	EB5/25
	508/2/05851/ 008	RING, anti chaff	2	—	—	EB5/26
	508/2/05851/ 004	RING, anti chaff	1	—	—	
	508/2/05851/ 006	RING, anti chaff	1	—	—	
	508/2/05851/ 007	RING, anti chaff	1	—	—	
	508/2/12373/ 001	RING, anti chaff	1	—	—	
28S/9992522 5K/9107065	508/2/07706/ 300	RING, sealing	1	—	—	
	508/2/07757/ 007	RING, thrust	1	—	—	
	A32/B16	SCREW, Rd. Hd. 4BA for gunsight mirror support	4	—	C	EB5/27
	FEAS.146/6	SLEEVE, 1/4" long	QR	—	—	
	FEAS.146/20	SLEEVE, 1/4", 1/2" and 3/4" long	QR	—	C	
	FEAS.146/22	SLEEVE, 1/4", 1/2" and 3/4" long	QR	—	—	
	MAM RUBBER CO.	SLEEVE, 3 mm i/d. grade CXH 3/8" long	QR	—	—	
	508/1/07043/ 220	SOCKET, fixed 6-way	1	—	—	EB5/28
	508/1/07005/ 220	SOCKET, free, 3-way	1	—	—	EB5/29
	or CZ.74882	SOCKET, free, 3-way	1	—	—	
	508/1/04585/ 002	SOCKET, contacts 16	5	—	—	
	508/1/05602/ 002	SOCKET, contacts 16/20	57	—	—	
	UK-AN.8000/ 20-29S	SOCKET, fixed	1	—	—	EB5/30
	UK-AN.8000/ 22-14S	SOCKET, fixed	2	—	—	EB5/31
	UK-AN.9000/ 18-1S	SOCKET, free	1	—	—	EB5/32

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mtl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	K02-21-30SN	SOCKET, fixed	1	-	-	EB5/33
	K0A2-21-50SN	SOCKET, fixed	1	-	-	EB5/34
28S/9419437	A31/A16	Attaching parts for K02-21-30SN & K0A2 21-50SN	4	-	C	EB5/35
28M/10286	AGS.2001/A/1	Screw, ch. hd. 6BA	4	-	C	EB5/36
		Nut, stiff, 6BA		-		
5X/9450396	E.H8.82.425	STRIP, packing	2	-	-	
	HC 490	TAG, quick release	156	-	C	
	ENGLISH ELEC. A E 5718	TRANSFORMER, AUTO	1	-	-	EB5/37
		Attaching parts for A E 5718:-		-		
28S/100118	A39/B16	Screw, ch. hd. 4BA	4	-	C	EB5/38
28M/195039	AGS 2001/B/3	Nut, stiff	4	-	C	EB5/39
	508/2/07722/ 300	UNION, gasket	1	-	-	
		Attaching parts for E.H8.82.207:-		-		
28D/9436920	A25/1C	Bolt, 2BA	8	-	C	EB5/40
28W/9419475	SP.13/C	Washer, 2BA	8	-	C	
	E A2 81.1241	BOX, SLAVE RELAY INSTALLATION	-	-	-	
		Spares for:-		-		
	E A3.81 2843	BOX, SLAVE RELAY ASSEMBLY	1	-	-	EB5/1
		Spares for:-		-		
5CZ/430	†	BLOCK, terminal	1	-	C	EB5/2
		Attaching parts for 5CZ/430:-		-		
28S/1200061	A33/A18	Screw, csk. hd. 6BA	2	-	C	EB5/3
	E A3.81 2847	LID, assembly	1	-	-	EB5/4
		Spares for:-		-		
10H/3780	†	BLOCK, terminal, 2 way	4	-	C	EB5/5
		Attaching parts for 10H/3780:-		-		
28S/9435715	A33/B16	Screw, csk. hd. 4BA	1	-	C	EB5/6
28M/9403519	A27/BP	Nut, plain	1	-	C	EB5/7
28W/9416642	SP 47/B	Washer, spring	1	-	C	
22485	E A3.81 3101	LID, box	1	-	C	EB5/8
		Attaching parts for E A3.81 3101:-		-		
22488	E A3.81 3107	Screw, captive	2	-	C	EB5/9
22489	E A3.81 3113	LINK, commoning	2	-	C	EB5/10
22486	E A3.81 3103	PANEL, relay mounting	1	-	C	EB5/11
		Attaching parts for E A3.81.3103:-		-		
22487	E A3.81.3105	Stud	4	-	C	EB5/12
28M/1278189	AGS.2001/B/1	Nut, stiff	8	-	C	EB5/13
28W/9419465	SP.13/B	Washer	4	-	C	
10H/0630463	STC SM-5A-H19	RELAY	2	-	B	EB5/14
		Attaching parts for STC SM-5A-H19:-		-		
10326	AGS.2002/A/1	Nut, stiff	2	-	C	EB5/15
28W/9419464	SP 13/A	Washer	2	-	C	
	7CZ/106800/23	CONTROLLER, Mk 1	1	-	-	EB5/16
		Attaching parts for 7CZ/106800/23:-		-		
28D 1007979	AS 1246/1B	Bolt, rd. hd.	4	-	C	EB5/17
28W/9419474	SP.15/B	Washer	4	-	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.349	INVERTER, INSTALLATION, BETWEEN FRAMES 9-11, PORT Spares for:-	—	—	—	
5UB/6731	ROTAX S.3106/1/L	INVERTER, type 103A, No.4	1	—	A	EB6/18
5UB/9181	S.3304	INVERTER, type 108A, No.5 Attaching parts for S.3106/1/L, S.3304:-	1	—	A	EB6/19
28D/1011256	A25/5G	Bolt, 5/16" BSF	4	—	C	EB6/20
28M/10291	AGS.2001/G/1	Nut, stiff, 5/16" BSF	4	—	C	EB6/21
28W/9419403	SP 13/G	Washer, 5/16" BSF	4	—	C	
	E.K2.81.549	INSTALLATION EARTH POINT, (E22) Attaching parts:-	1	—	—	EB6/22
28S/9446684	A43/C40	Screw, ch. hd. 2BA	1	—	C	
28M/9129528	A54/CP	Nut, plain, 2BA	2	—	C	
28M/10275	AGS.2001/C/4	Nut, stiff, 2BA	1	—	C	
28W/1009752	SP.25/C	Washer, 2BA	2	—	C	
28W/9457834	SP 124/D	Washer, 10 UNF	2	—	C	
	E.H8.81.113	INVERTER, INSTALLATION, BETWEEN FRAMES 9-10, STARBOARD Spares for:-	—	—	—	
5UB/4938	ROTAX †	INVERTER, type 100A, No.2 Attaching parts for 5UB/4938	1	—	A	EB6/23
28D/9133011	A25/2C	Bolt, 2BA	4	—	C	EB6/24
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	4	—	C	EB6/25
28W/1006946	AGS.2035/C	Washer, shakeproof	4	—	C	
5UB/6731	ROTAX S.3106/1/L	INVERTER, type 103A, No.1	1	—	A	EB6/26
5UB/9181	S.3304	INVERTER, type 108A, No.2 Attaching parts for S.3106/1/L, S.3304	1	—	A	EB6/27
28D/7002427	A25/6G	Bolt, 5/16" BSF for S.3304	4	—	C	EB6/28
28D/1011257	A25/1G	Bolt, 5/16" BSF	4	—	C	EB6/29
28M/10291	AGS.2001/G/1	Nut, stiff, 5/16" BSF	4	—	C	EB6/30
28W/9419403	SP 13/G	Washer, 5/16" BSF	4	—	C	
5UC/5759	†	PANEL, control type 15 Attaching parts for 5UC/5759:-	1	—	A	EB6/31
28D/1008151	A25/4E	Bolt, 1/4" BSF	4	—	C	EB6/32
28M/10290	AGS.2001/E/1	Nut, stiff, 1/4" BSF	2	—	C	EB6/33
28W/9418921	SP 13/E	Washer, 1/4" BSF	4	—	C	
5UC/4939	†	PANEL, control type 12 Attaching parts for 5UC/4939:-	1	—	A	EB6/34
28D/1011238	A25/3E	Bolt, 1/4" BSF	3	—	C	EB6/35
28D/1212372	AS.1248/3E	Bolt, mush. hd. 1/4" BSF	1	—	C	EB6/36
5UC/1983716		PANEL, control type 26D	1	—	A	EB6/37
	E.H8.81.21	LIGHTING, ASSEMBLY FRONT FUSELAGE Spares for:-	—	—	—	EB7/1
4683	E.A3.81.1831	BAG, stowage inspection lamp Attaching parts for E.A3.81.1831	1	—	—	EB7/2
28M/1086618	AGS.2002/B/1	Nut, stiff, 4BA	4	—	C	EB7/3
28W/9419474	SP.15/B	Washer, 4BA	4	—	C	
	SIS.1564	BLOCK, terminal 2-way Attaching parts for SIS.1564:-	1	—	—	EB7/3A
28S/9446303	A45/A20	Screw, csk. hd. 6BA	2	—	C	EB7/3B

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mtl. Spec.	Cl. of Equip.	Plate No.
					M.N. L.M.	
28M/10309 5CZ/1035662	WARD BROOKE WB/UN/1146/S/ 5/B	BLOCK, terminal 5-way Attaching parts for WB/UN/1146/S/5/B:-	1	—	C	EB7/4
	WB/1114/28	Pillar, fixing	2	—	—	EB7/5
	AGS.2002/B/4	Nut, stiff, 4BA	2	—	C	EB7/6
	WB/1114/23	Spacer	2	—	C	EB7/7
5CZ/1035382	WB/UN/1146/S/ 5/B	BLOCK, terminal 5-way Attaching parts for WB/UN/1146/S/5/B.	1	—	C	EB7/8
28D/9419452	A25/3B	Bolt, 4BA	2	—	C	EB7/9
28M/1086618	AGS.2002/B/1	Nut, stiff, 4BA	2	—	C	EB7/10
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	
	E.G9.80.801	BRACKET, lamp Attaching parts for E.G9.80.801:-	1	—	—	EB7/11
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	EB7/12
28M/1086618	AGS.2002/B/1	Nut, stiff, 4BA	2	—	C	EB7/13
	E.H5.81.57	BRACKET Attaching parts for E.H5.81.57:-	1	—	—	EB7/14
28S/1200049	A31/A12	Screw, ch. hd. 6BA	2	—	C	EB7/15
28M/10326	AGS.2002/A/1	Nut, stiff, 6BA	2	—	C	EB7/16
	E.G9.81.867	BRACKET, floodlight Attaching parts for E.G9.81.867.	1	—	—	EB7/17
28D/1010658	A25/1B	Bolt, 4BA	3	—	C	EB7/18
28M/1086618	AGS.2002/B/1	Nut, stiff, 4BA	3	—	C	EB7/19
28W/9419474	SP.15/B	Washer, 4BA	3	—	C	
	E.G9.81.1013	BRACKET Attaching parts	1	—	—	EB7/20
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	EB7/21
28M/1086618	AGS.2002/B/1	Nut, stiff, 4BA	2	—	C	EB7/22
	E.A3.81.2226	CABLE, ASSEMBLY, 13F/13G, from JB13 to dimmer switch and cabin lamp	1	—	—	
	E.A3.81.2228	CABLE, ASSEMBLY, 14F, from JB14 to dimmer switch	1	—	—	
	E.G9.81.761	CABLE, ASSEMBLY, N477, from JB14 to flood lamp, red	1	—	—	
	E.H7.81.533	CABLE, ASSEMBLY, N481, from pilots coaming to lighting panel	1	—	—	
	E.H7.81.539	CABLE, ASSEMBLY, N476, from pilots coaming panel to floodlights	1	—	—	
	E.H7.81.543	CABLE, ASSEMBLY, N475, from pilots coaming panel to floodlights	1	—	—	
	E.H7.81.545	CABLE, ASSEMBLY, N479, from pilots coaming panel to floodlights	1	—	—	
	E.H7.81.567	CABLE, ASSEMBLY, N65, F3, from prone position cabin lamp to T.B.	1	—	—	
	E.H7.81.571	CABLE, ASSEMBLY, N65, F1, from T.B. to dimmer switch	1	—	—	
	E.H8.81.753	CABLE, ASSEMBLY, N474, from navigators instrument panel to floodlights	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.81.755	CABLE, ASSEMBLY, N480, from T.B., to floodlight	1	—	—	
	E.H8.81.757	CABLE, ASSEMBLY, 13F1, from dimmer switch to navigators wander lamp	1	—	—	
	E.H8.81.759	CABLE, ASSEMBLY, 14F1, from dimmer switch to wander lamp	1	—	—	
	E.H8.81.761	CABLE, ASSEMBLY, N478, from JB14 to navigators instrument panel	1	—	—	
	E.H8.81.763	CABLE, ASSEMBLY, N471, from navigators coaming panel to navigators instrument panel	1	—	—	
	E.H8.81.1005	CABLE, ASSEMBLY, F36, from main electrical panel to equipment bay	1	—	—	
	E.H8.81.1027	CABLE, ASSEMBLY, N65, F2, from dimmer switch to prime position wander lamp	1	—	—	
	E.A3.81.2307	CLIP, spring	1	—	—	EB7/23
28E/9436819	AS.3180/B3	CLIP, cable	7	—	C	
28E/1201809	AS.3180/B6	CLIP, cable	1	—	C	
28E/8018278	AS.3180/B8	CLIP, cable	2	—	C	
		Attaching parts for AS.3180:				
28D/1010658	A25/18	Bolt, for AS.3180/B8	1	—	C	
28S/1200034	A31/B16	Screw, ch. hd. 4BA	1	—	C	
28S/1012356	A43/B12	Screw, ch. hd. 4BA	1	—	C	
28M/1086618	AGS.2002/B/1	Nut, stiff, 4BA	1	—	C	
26DK/9852	EEAS.2381/1/A	Washer, 'D'	1	—	C	
	WARD BROOKE					
5CZ/7221	WB/NY.1110/B, 4/B	COVER, terminal block	1	—	C	EB7/24
5L/9951283	†	FILAMENT, 28v, 3.5 watt	1	—	C	EB7/25
5L/9959122	†	FILAMENT, 28v, .08 watt	2	—	C	EB7/26
5L/9953271	†	FILAMENT, 28v, 7 watt	3	—	C	EB7/27
5L/9953273	†	FILAMENT, 28v, 18 watt	2	—	C	EB7/28
5L/9951263	†	FILAMENT, 24v, 2.8 watt (Red)	11	—	C	EB7/29
5CX/4858	†	FILTER, amber	2	—	C	EB7/30
5K/9518404	SP.93/B10	GROMMET	1	—	C	
	E.B4.81.309	KNOB	1	—	—	EB7/31
5CX/4857	SIS.6249	LAMP, chartboard, type E	2	—	B	EB7/32
		Attaching parts for SIS.6249				
28D/1011030	A25/2E	Bolt, 4" BSF	1	—	C	EB7/33
28D/1011238	A25/3E	Bolt, 4" BSF	1	—	C	EB7/34
28M/10290	AGS.2001/E/1	Nut, stiff, 1/4" BSF	1	—	C	EB7/36
28W/9419487	SP.16/E	Washer, 1/4" BSF	2	—	C	
5CX/446	SIS.1616	LAMP, cockpit Mk.1A	2	—	C	EB7/36
		Attaching parts for SIS.1616:				
28S/1012356	A43/B12	Screw, ch. hd. 4BA	5	—	C	EB7/37
5CX/4058	SIS.3008	LAMP, cockpit, type 2, No.2	12	—	C	EB7/38
		Attaching parts for SIS.3008:				
28S/1200049	A31/A12	Screw, ch. hd. 6BA (as required)	2	—	C	EB7/39
28S/9134012	A43/A12	Screw, ch. hd. 6BA (as required)	2	—	C	EB7/40
28S/9146385	A43/A20	Screw, ch. hd. 6BA (as required)	2	—	C	EB7/41
	4R.3/8.S971	Screw, P.K. (as required)	2	—	—	
28M/10326	AGS.2002/A/1	Nut, stiff, 6BA (as required)	2	—	C	EB7/42
28W/9419473	SP.15/A	Washer, 6BA (as required)	2	—	C	
	AS.2304/020	Tube, distance (as required)	2	—	—	
	AS.2304/030	Tube, distance (as required)	2	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Pics No.
					M.R. L.M.	
		1 2 3 4 5 6				
5CX/389	SIS.1584	LAMP, inspection, Mk.2	1	—	—	EB7/43
4754	E.A3.81.2281	LAMP, HAND, BOMB AIMERS ASSEMBLY	1	—	B	EB7/44
		Spares for:-				
28D/1010658	A25/1B	BOLT	1	—	C	EB7/46
28D/1008149	A25/2B	BOLT	2	—	C	EB7/48
28D/1212276	A25/15B	BOLT	1	—	C	EB7/47
	E.A3.81.2295	BRACKET	1	—	—	EB7/48
	E.A3.81.2283	CLAMP, arm assembly	1	—	—	EB7/49
	E.A3.81.2285	CLAMP	1	—	—	EB7/50
5CX/2279	†	COVER	1	—	C	EB7/51
5L/9951263	†	FILAMENT	1	—	C	EB7/52
5CX/2282	†	LAMPHOLDER	1	—	C	EB7/53
28M/1278189	AGS.2001/B/1	NUT, STIFF, 4BA	4	—	C	EB7/54
5CX/3430	SIS.3008	SCREEN	1	—	C	EB7/55
	E.A3.81.2297	SPRING	1	—	—	EB7/56
	E.A3.81.2301	STRIP, CORK	2	—	—	
	E.A3.81.2287	TUBE, DISTANCE	1	—	—	
28W/9419465	SP.13/B	WASHER, 4BA	3	—	C	
28W/9419486	SP.16/B	WASHER, 4BA	1	—	C	
	AGS.586/B	WASHER, 4BA	3	—	—	
	E.A3.81.2291	WASHER	1	—	—	
	THORN					
5CX/5363	80/10/0678	LAMPHOLDER, pillar rod	2	—	C	EB7/57
5CX/370	SIS.1585	LEAD, extension	1	—	C	EB7/58
	E.B6.81.5301	LIGHT EQUIPMENT BAY, ASSEMBLY	1	—	—	EB7/59
		Spares for:-				
5L/9952254	†	FILAMENT, 24v, 6 watt	1	—	C	EB7/60
5CX/446	†	LAMP, cockpit, Mk.1A	1	—	C	EB7/61
		Attaching parts for 5CX/446:-				
28D/1007979	AS.1246/1B	Bolt, 4BA	3	—	C	EB7/62
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	3	—	C	EB7/63
28W/9419465	SP.13/B	Washer, 4BA	3	—	C	
	WARD BROOKE					
5CZ/1035373	WB/1146/72	LINK	1	—	C	
5CZ/1982541	WB/1146/73	LINK	3	—	C	
	E.H5.81.73	PACKER, 6 long	2	—	—	
	E.A6.10.2181	PACKING, cork	4	—	—	
	E.H7.81.681	PLATE, mounting	1	—	—	EB7/64
		Attaching parts for E.H7.81.681:-				
28S/9419435	A31/B12	Screw, ch. hd. 4BA	3	—	C	EB7/65
	EEAS.200	RING, locking for switch	1	—	—	
5CX/3430	SIS.3008	SCREEN, lamp	12	—	C	EB7/66
4202	E.A3.81.1165	STUD, mounting	4	—	C	EB7/67
5CW/2530	†	SWITCH, dimmer	2	—	C	EB7/68
5CW/2453	†	SWITCH, dimmer	1	—	C	EB7/69
		Attaching parts for 5CW/2530, 5CW/2453:-				
28S/9458393	A43/A16	Screw, ch. hd. 6BA	3	—	C	EB7/70
	THORN					
	01-0103-37	SWITCH, dimmer	1	—	C	EB7/71
	N.S.F					
5CW/6511	8810-B101	SWITCH, single pole	1	—	B	EB7/72
28W/9436838	†	WASHER, crinkle	2	—	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.33	LOOMS, CABLE, ASSEMBLY Spares for:-	-	-	-	
	E.A1.81.675	CABLE, ASSEMBLY, 4C4, from u/c terminal board to nosewheel door switch	1	-	-	
	E.A1.81.777	CABLE, ASSEMBLY, EB, from battery to earth	1	-	-	
	E.A2.81.298/2	CABLE, ASSEMBLY, N55, from time switch to starter panel	1	-	-	
	E.A2.81.300/2	CABLE, ASSEMBLY, N56, from time switch to starter panel	1	-	-	
	E.A3.81.602/2	CABLE, ASSEMBLY, N2A, from JB14 to pressure bulkhead	1	-	-	
	E.A3.81.603/2	CABLE, ASSEMBLY, N5, from pilots console to pressure bulkhead	1	-	-	
	E.A3.81.610/2	CABLE, ASSEMBLY, N21, from camera control to pressure bulkhead	1	-	-	
	E.A3.81.630	CABLE, ASSEMBLY, N61, from flight instrument JB to 400 ohms fuse box	1	-	-	
	E.A3.81.639/2	CABLE, ASSEMBLY, N72, from pilots console to pressure bulkhead	1	-	-	
	E.A3.81.649	CABLE, ASSEMBLY, N87, from 400 ohms fuse box to G4R amplifier	1	-	-	
	E.A3.81.669	CABLE, ASSEMBLY, F44, from distribution box to nosewheel terminal board	1	-	-	
	E.A3.81.670/1	CABLE, ASSEMBLY, F45, from distribution box to voltage compensator gyro	1	-	-	
	E.A3.81.824/1	CABLE, ASSEMBLY, 13C1, from A.M.U. and A.P.I. suppressor to JB	1	-	-	
	E.A3.81.834/1	CABLE, ASSEMBLY, 14C, from JB14 to camera switch	1	-	-	
	E.A3.81.835/1	CABLE, ASSEMBLY, 14C1, from camera master switch to camera control	1	-	-	
	E.A3.81.837/1	CABLE, ASSEMBLY, 14D1, from bomb aimers control to main apparatus unit	1	-	-	
	E.A3.81.838/1	CABLE, ASSEMBLY, 14D2, from bomb aimers control to main apparatus unit	1	-	-	
	E.A3.81.841	CABLE, ASSEMBLY, 14J, from JB14 to Westland control valve	1	-	-	
	E.A3.81.842/1	CABLE, ASSEMBLY, 14K, from JB14 to nose and tail fusing switch	1	-	-	
	E.A3.81.843/1	CABLE, ASSEMBLY, 14K1, from nose and tail fusing switch to main apparatus unit	1	-	-	
	E.A3.81.844	CABLE, ASSEMBLY, 14L, 14M, 14N, from JB14 to pilots warning horn relay	1	-	-	
	E.A3.81.848/1	CABLE, ASSEMBLY, E25, from electric control panel to earth	1	-	-	
	E.A3.81.849/1	CABLE, ASSEMBLY, E27, from pilots console to earth	1	-	-	
	E.A3.81.851/1	CABLE, ASSEMBLY, E.W from 400 ohms distribution box to earth	1	-	-	
	E.A3.81.852/1	CABLE, ASSEMBLY, E28, from distribution box to earth	1	-	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.N. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.81.853/1	CABLE, ASSEMBLY, E29, from 1600 ohms distribution box to earth	1	-	-	
	E.A3.81.1525	CABLE, ASSEMBLY, N75, from pilots bomb control to bomb release unit	1	-	-	
	E.A3.81.2543	CABLE, ASSEMBLY, E27, from windscreen heater to T.B.	1	-	-	
	E.A3.81.2593	CABLE, ASSEMBLY, N50, from starter panel to throttle box	1	-	-	
	E.A3.81.2601	CABLE, ASSEMBLY, N101, from starter panel to jettison relay panel	1	-	-	
	E.A3.81.2603	CABLE, ASSEMBLY, N101A, from starter panel to flying panel	1	-	-	
	E.A3.81.2631	CABLE, ASSEMBLY, E13, from JB13 to earth	1	-	-	
	E.A3.81.6487	CABLE, ASSEMBLY, F170, from 400 ohms fuse box to windscreen heater control unit	1	-	-	
	E.B6.81.589	CABLE, ASSEMBLY, E14, from JB14 and 400 ohms fuse box to earth	2	-	-	
	E.B7.81.1783	CABLE, ASSEMBLY, 4C1, from nose wheel up lock switch to T.B.	1	-	-	
	E.B7.81.1785	CABLE, ASSEMBLY, 4C2, from nose wheel down lock switch to T.B.	1	-	-	
	E.B7.81.1787	CABLE, ASSEMBLY, 4C3, from nose wheel down lock switch to T.B.	1	-	-	
	E.B6.81.3599	CABLE, ASSEMBLY, N147, from camera F95 control box to F95 camera	1	-	-	
	E.B6.81.4063	CABLE, ASSEMBLY, F46, from main electrical panel to port inertia switch	1	-	-	
	E.B6.81.10713	CABLE, ASSEMBLY, N190, from altimeter amplifier to flying instrument panel	1	-	-	
	E.G7.81.1421	CABLE, ASSEMBLY, N102, from pressure bulkhead to T.B. and pilots coaming	1	-	-	
	E.G7.81.3413	CABLE, ASSEMBLY, 14Q, from JB14 to T.B.	1	-	-	
	E.G9.81.310	CABLE, ASSEMBLY, N22, from electric control panel to pressure bulkhead	1	-	-	
	E.G9.81.313	CABLE, ASSEMBLY, N66, from pilots u/c panel to pressure bulkhead	1	-	-	
	E.G9.81.335	CABLE, ASSEMBLY, F57, from No.1 distribution box to No.1 inverter	1	-	-	
	E.G9.81.336	CABLE, ASSEMBLY, F58, from No.1 distribution box to control panel	1	-	-	
	E.G9.81.339	CABLE, ASSEMBLY, F125, from control panel to No.3 inverter	1	-	-	
	E.G9.81.340	CABLE, ASSEMBLY, F126, from control panel to No.3 inverter	1	-	-	
	E.G9.81.341	CABLE, ASSEMBLY, F127, from control panel to No.2 inverter	1	-	-	
	E.G9.81.456	CABLE, ASSEMBLY, 13H/J, from JB13 to pilots oxygen regulator	1	-	-	
	E.G9.81.623	CABLE, ASSEMBLY, N116, from 400 ohms fuse box to suppressor	1	-	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.G9.81.653	CABLE, ASSEMBLY, 13C, from JB13 to A.M.U. A.P.I. suppressor	1	-	-	
	E.G9.81.1031	CABLE, ASSEMBLY, N48, from detonator resistance unit to pressure bulkhead	1	-	-	
	E.H6.81.171	CABLE, ASSEMBLY, N422, from bomb sight J.B. to gyro control unit	1	-	-	
	E.H6.81.175	CABLE, ASSEMBLY, N427, from gyro control unit to computer	1	-	-	
	E.H6.81.177	CABLE, ASSEMBLY, N428, from bomb sight J.B. to suppressor	1	-	-	
	E.H6.81.179	CABLE, ASSEMBLY, N429, from gyro control unit to bomb sight head	1	-	-	
	E.H6.81.183	CABLE, ASSEMBLY, N81, from 400 ohms fuse box to bomb sight J.B.	1	-	-	
	E.H6.81.185	CABLE, ASSEMBLY, N49, from jettison relay panel to pressure bulkhead	1	-	-	
	E.H6.81.333	CABLE, ASSEMBLY, 14D, from JB14 to bomb aimers M.A.U.	1	-	-	
	E.H6.81.477	CABLE, ASSEMBLY, N82, from engine instrument panel to pressure bulkhead	1	-	-	
	E.H7.P1.519	CABLE, ASSEMBLY, N73, from bomb firing station to J.B.	1	-	-	
	E.H8.81.369	CABLE, ASSEMBLY, N80, from pilots console to suppressor	1	-	-	
	E.H8.81.371	CABLE, ASSEMBLY, N18, from 400 ohms fuse box to pressure bulkhead	1	-	-	
	E.H8.81.373	CABLE, ASSEMBLY, N78, from flight instrument J.B. to flying instrument panel	1	-	-	
	E.H8.81.375	CABLE, ASSEMBLY, F41, from distribution box No.1 to sequence unit No.1	1	-	-	
	E.H8.81.377	CABLE, ASSEMBLY, F42, from distribution box No.1 to sequence unit No.1	1	-	-	
	E.H8.81.379	CABLE, ASSEMBLY, F52, from distribution box No.1 to No.3 relay, control panel and main electric panel	1	-	-	
	E.H8.81.381	CABLE, ASSEMBLY, N54, from electric control panel to engine instrument panel	1	-	-	
	E.H8.81.383	CABLE, ASSEMBLY, F150, from distribution box No.1 to sequence unit No.2	1	-	-	
	E.H8.81.385	CABLE, ASSEMBLY, F151, from distribution box No.1 to sequence unit No.2	1	-	-	
	E.H8.81.387	CABLE, ASSEMBLY, F152, from distribution box to auto pilot test socket	1	-	-	
	E.H8.81.389	CABLE, ASSEMBLY, F153, from distribution box No.1 to auto pilot amplifier	1	-	-	
	E.H8.81.391	CABLE, ASSEMBLY, F154, from control panel to inverter No.4	1	-	-	
	E.H8.81.393	CABLE, ASSEMBLY, F155, from distribution box to main electric panel	1	-	-	
	E.H8.81.395	CABLE, ASSEMBLY, F156, from distribution box to inverter No.4	1	-	-	
	E.H8.81.397	CABLE, ASSEMBLY, F157, from inverter No.4, to relay No.3 and mag. start switch No.3	1	-	-	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.81.399	CABLE, ASSEMBLY, F158, from No.3 relay to magnetic start switch No.3	1	—	—	
	E.H8.81.401	CABLE, ASSEMBLY, F159, from inverter No 1, Relay No. 1, to mag. start switch and earth	1	—	—	
	E.H8.81.403	CABLE, ASSEMBLY, NA47, from computer to drift smoothing cut-out	1	—	—	
	E.H8.81.405	CABLE, ASSEMBLY, 14A, from JB14 to suppressor	1	—	—	
	E.H8.81.407	CABLE, ASSEMBLY, 14A1, from 400 ohms fuse box to suppressor	1	—	—	
	E.H8.81.409	CABLE, ASSEMBLY, 13M, from JB13 to navigators coaming panel	1	—	—	
	E.H8.81.413	CABLE, ASSEMBLY, N53, from electric control panel to engine instrument panel	1	—	—	
	E.H8.81.427	CABLE, ASSEMBLY, F23, from distribution box to main electrical panel	1	—	—	
	E.H8.81.429	CABLE, ASSEMBLY, F24, from distribution box to main electrical panel	1	—	—	
	E.H8.81.433	CABLE, ASSEMBLY, N187, from 400 ohms fuse box and navigator's instrument panel to pilots altimeter amplifier and altimeter amplifier	1	—	—	
	E.H8.81.435	CABLE, ASSEMBLY, 13D, from JB13 to air thermometer	1	—	—	
	E.H8.81.437	CABLE, ASSEMBLY, F91, from distribution box No.2 to control panel and No.4 relay	1	—	—	
	E.H8.81.439	CABLE, ASSEMBLY, F92, from distribution box No.1 and No.2 to pressure bulkhead	1	—	—	
	E.H8.81.441	CABLE, ASSEMBLY, N92, from doppler JB to pressure bulkhead	1	—	—	
	E.H8.81.443	CABLE, ASSEMBLY, F94, from distribution box No 2 to control panel and main electrical panel	1	—	—	
	E.H8.81.449	CABLE, ASSEMBLY, N74, from windscreen heater control unit to D.V. windscreen	1	—	—	
	E.H8.81.555	CABLE, ASSEMBLY, N7X, from electric control panel to pressure bulkhead	1	—	—	
	E.H8.81.557	CABLE, ASSEMBLY, N8X, from electric control panel to pressure bulkhead	1	—	—	
	E.H8.81.559	CABLE, ASSEMBLY, N14, from JB14 to electric control panel	1	—	—	
	E.H8.81.561	CABLE, ASSEMBLY, N19, from electric control panel to pressure bulkhead	1	—	—	
	E.H8.81.563	CABLE, ASSEMBLY, N25, from electric control panel to pressure bulkhead	1	—	—	
	E.H8.81.565	CABLE, ASSEMBLY, N26, from electric control panel to pressure bulkhead	1	—	—	
	E.H8.81.567	CABLE, ASSEMBLY, N27, from electric control panel to pressure bulkhead	1	—	—	
	E.H8.81.568	CABLE, ASSEMBLY, N28, from electric control panel to pressure bulkhead	1	—	—	
	E.H8.81.571	CABLE, ASSEMBLY, N29, from electric control panel to pressure bulkhead	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.81.573	CABLE, ASSEMBLY, N51, from electric control panel to engine instrument panel	1	—	—	
	E.H8.81.575	CABLE, ASSEMBLY, N62, from electric control panel to engine instrument panel	1	—	—	
	E.H8.81.577	CABLE, ASSEMBLY, N57, from electric control panel to starter panel	1	—	—	
	E.H8.81.579	CABLE, ASSEMBLY, N58, from electric control panel to starter panel	1	—	—	
	E.H8.81.581	CABLE, ASSEMBLY, N62, from electric control panel to flight instrument JB	1	—	—	
	E.H8.81.583	CABLE, ASSEMBLY, N70, from electric control panel to aileron trim actuators	1	—	—	
	E.H8.81.585	CABLE, ASSEMBLY, N71, from electric control panel to pilots console and T.B.	1	—	—	
	E.H8.81.587	CABLE, ASSEMBLY, N401, from electric control panel to engine instrument panel	1	—	—	
	E.H8.81.589	CABLE, ASSEMBLY, N402, from electric control panel to engine instrument panel	1	—	—	
	E.H8.81.591	CABLE, ASSEMBLY, N425, from electric control panel to F95 camera control box, sight head control box, lighting T.B. and suppressor	1	—	—	
	E.H8.81.593	CABLE, ASSEMBLY, N51, from electric control panel to engine instrument panel	1	—	—	
	E.H8.81.595	CABLE, ASSEMBLY, N64, from pilots coaming panel strike panel, instrument panel to pressure bulkhead	1	—	—	
	E.H8.81.597	CABLE, ASSEMBLY, N69, from electric control panel to pilots control column T.B.	1	—	—	
	E.H8.81.599	CABLE, ASSEMBLY, 14T, from JB14 to strike panel	1	—	—	
	E.H8.81.601	CABLE, ASSEMBLY, NA42, from computer to amplifier	1	—	—	
	E.H8.81.603	CABLE, ASSEMBLY, F160, from control panel to inverter No.5	1	—	—	
	E.H8.81.605	CABLE, ASSEMBLY, F161, from control panel to inverter No.5	1	—	—	
	E.H8.81.607	CABLE, ASSEMBLY, F162, from main electric panel to relay No.3 and relay No.4	1	—	—	
	E.H8.81.609	CABLE, ASSEMBLY, N191, from altimeter amplifier to altimeter prone position	1	—	—	
	E.H8.81.611	CABLE, ASSEMBLY, N112, from electric control panel to I/C JB and navigators coaming panel	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.81.613	CABLE, ASSEMBLY, F171, from distribution box No.1 to pressure bulkhead	1	—	—	
	E.H8.81.616	CABLE, ASSEMBLY, N171, from pilots control column T.B. to pressure bulkhead	1	—	—	
	E.H8.81.621	CABLE, ASSEMBLY, F172	1	—	—	
	E.H8.81.626	CABLE, ASSEMBLY, N59, from electric control panel to engine instrument panel	1	—	—	
	E.H8.81.636	CABLE, ASSEMBLY, F19, from distribution box No.2 to pressure bulkhead	1	—	—	
	E.H8.81.643	CABLE, ASSEMBLY, F120, from armament safety break main electrical panel to pressure bulkhead	1	—	—	
	E.H8.81.645	CABLE, ASSEMBLY, NA41, from computer to amplifier	1	—	—	
	E.H8.81.647	CABLE, ASSEMBLY, N113, from electric control box to JB13, navigators instrument and coaming panels	1	—	—	
	E.H8.81.725	CABLE, ASSEMBLY, N76, from pilots control column to throttle box, windscreen heater control unit and T.B.	1	—	—	
	E.H8.81.727	CABLE, ASSEMBLY, 14R, from JB.14 to oxygen regulator prone position	1	—	—	
	E.H8.81.729	CABLE, ASSEMBLY, 14S, from JB 14 to oxygen regulator	1	—	—	
	E.H8.81.731	CABLE, ASSEMBLY, F48, from jettison resistance unit to pressure bulkhead	1	—	—	
	E.H8.81.733	CABLE, ASSEMBLY, F49, from main electric panel resistance unit and pressure bulkhead	1	—	—	
	E.H8.81.735	CABLE, ASSEMBLY, N13, from electric control panel to JB.13 navigators instrument and coaming panels	1	—	—	
	E.H8.81.737	CABLE, ASSEMBLY, 14P, from JB.14 to oxygen mag indicator	1	—	—	
	E.H8.81.743	CABLE, ASSEMBLY, N110, from electric control panel to pilots coaming panel	1	—	—	
	E.H8.81.746	CABLE, ASSEMBLY, N65, from electric control panel to stbd instrument panel	1	—	—	
	E.H8.81.747	CABLE, ASSEMBLY, N193, from 400 ohms fuse box to navigators side panel	1	—	—	
	E.H8.81.749	CABLE, ASSEMBLY, N83A, from sight head control box to bomb sight head	1	—	—	
	E.H8.81.751	CABLE, ASSEMBLY, N423, from bomb sight JB to computer	1	—	—	
	E.H8.81.765	CABLE, ASSEMBLY, F163, from inverter No.3 to mag start switch, relay No.3 and earth	1	—	—	
	E.H8.81.769	CABLE, ASSEMBLY, N431, from electric control panel to backplate J.B	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.773	CABLE, ASSEMBLY, F164, from main electric panel to port inertia switch	1	—	—	
	E.H8.81.778	CABLE, ASSEMBLY, F22, from main electric panel to pressure bulkhead	1	—	—	
	E.H8.81.781	CABLE, ASSEMBLY, 1482, from strike panel to bomb aimers control	1	—	—	
	E.H8.81.797	CABLE, ASSEMBLY, 148, from JB.14 to relay type 20B, No.3	1	—	—	
	E.H8.81.799	CABLE, ASSEMBLY, N80A, from de-mist blower motor to suppressor	1	—	—	
	E.H8.81.939	CABLE, ASSEMBLY, F34, from main electric panel to battery	1	—	—	
	E.H8.81.951	CABLE, ASSEMBLY, N2, from bomb aimers panel rule change socket, strike panel and T.B. to pressure bulkhead	1	—	—	
	E.H8.81.999	CABLE, ASSEMBLY, N77, from flight instrument JB, to flying instrument panel	1	—	—	
	E.H8.81.43	LOOMS, CABLE, INSTRUMENT, ASSEMBLY Spares for	—	—	—	
	E.G9.81.624	CABLE, ASSEMBLY, M5 AJ3, from master indicator to compass repeater JB, and suppressor	1	—	—	
	E.G9.81.1123	CABLE, ASSEMBLY, AC4 AM1, from A.M.U. control panel to A.M.1	1	—	—	
	E.G9.81.1133	CABLE, ASSEMBLY, M1-A1, from master indicator to amplifier	1	—	—	
	E.G9.81.1135	CABLE, ASSEMBLY, M2-A4, from master indicator to amplifier	1	—	—	
	E.G9.81.1119	CABLE, ASSEMBLY, AC3-AR2, from A.M.U. control panel to repeater unit	1	—	—	
	E.G7.81.3103	CABLE, ASSEMBLY, M3-DIC, from master indicator to pressure bulkhead	1	—	—	
	E.G7.81.3106	CABLE, ASSEMBLY, G1 C3, from pilots control panel to gyro unit	1	—	—	
	E.H8.81.785	CABLE, ASSEMBLY, A2 C2, from amplifier to prints control panel	1	—	—	
	E.H8.81.787	CABLE, ASSEMBLY, AC1 AU1A, from A.M.U. control panel to pressure bulkhead	1	—	—	
	E.H8.81.789	CABLE, ASSEMBLY, AC2 AU2A from A.M.U. control panel to pressure bulkhead	1	—	—	
	E.H8.81.791	CABLE, ASSEMBLY, 13C3, from A.P.I. to 3-way junction box	1	—	—	
	E.H8.81.793	CABLE, ASSEMBLY, AJ1-AP2, from compass repeater JB to A.P.I. Mk.1	1	—	—	
	E.H8.81.795	CABLE, ASSEMBLY, 13C2, from 3-way JB to A.M.U. control panel	1	—	—	
	E.H8.81.131	MOUNTING, JUNCTION BOX FLIGHT INSTRUMENTS Spares for	1	—	—	
	E.A6.81.129	BOX, JUNCTION, FLIGHT INSTRUMENT Attaching parts for E.A6.81.129:-	1	—	—	EB8/1
28S/1008327	A32/B14	Screw, rod. hd. 4BA	4	—	C	EB8/2
17743	EEAS.28/2CR	Washer	4	—	C	EB8/3

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.H. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A2.81.93	BRACKET, mounting Attaching parts for E.A2.81.93:-	1	-	-	E88/4
28D/1010658	A25/1B	Bolt, 4BA	4	-	C	E88/5
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	4	-	C	E88/6
17743	EEAS.28/2CR	Washer	4	-	C	E88/7
	E.H8.81.991	MOUNTING, JUNCTION BOXES AND SUPPRESSOR FOR A.P.I. and A.M.U. Spares for:-	-	-	-	
5CZ/996	SIS.2364	BOX, junction type A, 3-way Attaching parts for SIS.2364:-	2	-	B	E88/8
28D/1007979	AS.1264/1B	Bolt, rd. hd. 4BA	2	-	C	E88/9
28M/1278189	AGS.2001/B/1	Nut, stiff	2	-	C	E88/10
	E.H8.81.989	PANEL Attaching parts for E.H8.81.989:-	1	-	-	E88/11
28S/1011490	A32/C16	Screw, rd. hd. 2BA	4	-	C	E88/12
5CY/7001363	SIS.3666	SUPPRESSOR, type B4 Attaching parts for SIS.3666:-	1	-	B	E88/13
28D/1007979	AS.1246/1B	Bolt, rd. hd. 4BA	2	-	C	E88/14
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	-	C	E88/15
	E.A3.81.2257	MOUNTING, CABLE DUCT, ASSEMBLY Spares for:-	1	-	-	
	E.A3.81.2259	DUCT, assembly, cable Attaching parts for E.A3.81.2259:-	1	-	-	E88/16
28D/1007981	AS.1248/%C	Bolt, mush. hd. 2BA	4	-	C	E88/17
	E.A3.81.2261	COVER, cable duct Attaching parts for E.A3.81.2261:-	1	-	-	E88/18
28D/1007981	AS.1248/%C	Bolt, mush. hd. 2BA	6	-	C	E88/19
	E.H8.81.943	MOUNTING, CABIN PRESSURE WARNING HORN AND RELAY Spares for:-	-	-	-	
5CX/1961	SIS.3407	HORN, electrical, type C Attaching parts for SIS.3407:-	1	-	B	E88/20
28D/1011030	A25/2E	Bolt, 1/4" BSF	2	-	C	E88/21
5CW/6435	*	RELAY, magnetic, type 9B, No.2 Attaching parts for 5CW/6435:-	1	-	A	E88/22
28D/9419452	A25/3B	Bolt, 4BA	2	-	C	E88/23
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	-	C	E88/24
28W/9419474	SP.15/B	Washer, 4BA	4	-	C	
	E.H8.81.361	PANEL, CONTROL AND AUTO-PILOT JUNCTION BOX INSTALLATION Spares for:-	-	-	-	
	E.H8.81.713	BOX, JUNCTION AUTO-PILOT ASSEMBLY Spares for:-	1	-	-	E88/25
	E.H8.81.881	BOX, assembly	1	-	-	E88/26
	WB/UN/1164/D/ 10W	BLOCK, terminal Attaching parts for WB/UN/1164/D/10W:-	1	-	-	E88/27
28S/1008329	A33/B18	Screw, csk. hd. 4BA	2	-	C	E88/28
28M/1006504	A27/BT	Nut, stiff, 4BA	2	-	C	E88/29
28W/9419465	SP.13/B	Washer, 4BA	2	-	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mtl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5CZ/1035373 5CZ/8168	E.H8.81.883	COVER, assembly	1	—	—	EB8/30
	EEAS.551/20	LABEL, identity	1	—	—	
	WB/1146/72	LINK, connecting	1	—	C	
	WB/1114/22	SPACERS, cable	9	—	C	
28D/1008149 28W/9458598	A25/2B	Attaching parts for E.H8.81.713:- Bolt, 4BA	4	—	C	EB8/31
	SP.123/D	Washer, 10 UNF	6	—	C	
5UC/5759	†	PANEL, CONTROL type 15	1	—	A	EB8/32
28D/1011240 28W/9458599	A25/5E	Attaching parts for 5UC/5759:- Bolt, ½" BSF	4	—	C	EB8/33
	SP.123/E	Washer, ½" BSF	4	—	C	
28D/1011030 28W/9458599	E.H8.81.363	PANEL, MOUNTING	1	—	—	EB8/34
	A25/2E	Attaching parts for E.H8.81.363:- Bolt, ½" BSF	8	—	C	EB8/35
	SP.123/E	Washer	14	—	C	
	E.H8.81.937	PANEL, CONTROL INSTALLATION FOR NO.5 INVERTER	—	—	—	EB9/
	AGS.2100.B.6	Spares for:- LEAD, earth	2	—	—	EB9/1
28D/1007971 28M/1278189	A25/½B	Attaching parts for AGS.2100.B.6:- Bolt, 4BA	1	—	C	EB9/2
	AGS.2001/B/1	Nut, stiff, 4BA	1	—	C	EB9/3
33410 33411	U.1511	PANEL, CONTROL, type 260	1	—	—	EB9/4
	E.A9.81.3661	TRAY, mounting assembly	1	—	—	EB9/5
		Spares for:-				
33408 33409	E.A9.81.3675	BRACKET, catch securing	2	—	C	EB9/6
	E.A9.81.3677	CATCH, panel control securing	2	L.72	C	EB9/7
33406 28W/9994791	E.A9.81.3671	Attaching parts for E.A9.81.3677:- Circlip	1	DTD.215	C	EB9/8
	E.A9.81.3673	Nut, cylindrical	1	S.1	C	EB9/9
28W/3090 28W/9418921	E.A9.81.3667	Screw, knurled	1	S.92	C	EB9/10
	AGS.160/A	Washer	1	—	C	
28W/3090 28W/9418921	AGS.163/D	Washer	1	—	C	
	SP.13/E	Washer	1	—	C	
33407 28M/1278190	E.A9.81.3669	DOWEL, locating	2	—	C	EB9/11
	AGS.2001/C/1	Attaching parts for E.A9.81.3669:- Nut, stiff, 2BA	1	—	C	EB9/12
10AJ/158 10AJ/159	†	MOUNTING A.V.	2	—	B	EB9/13
	†	MOUNTING A.V.	2	—	B	EB9/14
28S/9435713 28M/1278190	A31/C20	Attaching parts for 10AJ/158 & 10AJ/159:- Screw, ch. hd. 2BA	4	—	C	EB9/16
	AGS.2001/C/1	Nut, stiff, 2BA	4	—	C	EB9/18
28W/9419402	SP.13/C	Washer, 2BA	4	—	C	
33412 28D/1011245	E.A9.81.3683	PILLAR	2	L.64	C	EB9/17
	A25/10E	Attaching parts for E.A9.81.3661:- Bolt, ½" BSF	4	—	C	EB9/18
10A/17930	SIS.5669	Check washer	8	—	C	EB9/19

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	E.H8.81.87	PANEL, ELECTRICAL CONTROL ASSEMBLY	1	—	—	EB10/1
		Spares for:-				
26678	E.A1.81.410	BAR, TERMINAL ASSEMBLY	4	—	C	EB10/1A
		Spares for:-				
	E.A1.81.411	BAR, terminal c/w studs	1	—	—	
	E.A1.81.410A	BASE, 5/16" thick	1	LFS.21	—	
	E.A1.81.410B	COVER, plate 1/8" thick	1	LFS.21	—	
5077	BULGIN T.S	HEAD, terminal moulded	2	—	C	
		Attaching parts for E.A1.81.410:-				
28S/9435715	A33/B16	Screw, csk. hd. 4BA	2	—	C	EB10/2
28M/15819	AGS.2021/B/1	Nut, cap. 4BA	2	—	C	EB10/3
5X/1002695	CZ.23212/1	BLOCK, terminal, 20-way	6	—	C	EB10/4
		Attaching parts for CZ.23212/1:-				
28S/1005622	A31/B28	Screw, ch. hd. 4BA	2	—	C	EB10/5
28M/1278189	AGS.2001/B/1	Nut, stiff. 4BA	2	—	C	EB10/6
	5E/4191	CABLE, uniminyvin 4	QR	—	C	
	5E/4189	CABLE, uniminyvin 8	QR	—	C	
	5E/4188	CABLE, uniminyvin 10	QR	—	C	
		CABLE, uniminyvin 12	QR	—	—	
		CABLE, uniminyvin 20	QR	—	—	
	508/1/03442/001	CAP, protective	QR	BSG.195	—	
	CZ.76634	CAP, protective	1	—	—	
	E.A2.81.803	CARRIER, fuse spare assembly	1	—	—	EB10/7
		Attaching parts for E.A2.81.803:-				
28S/9995324	A32/A16	Screw, rd. hd. 6BA	2	—	C	EB10/8
28M/10273	AGS.2001/A/4	Nut, stiff. 6BA	2	—	C	EB10/9
	5L/9951271	FILAMENT	2	—	C	EB10/10
	10H/23864	FUSE, 5 amp	76	—	C	EB10/11
	10H/23863	FUSE, 15 amp	2	—	C	
	10H/23862	FUSE, 10 amp	25	—	C	
	10H/23860	FUSE, 20 amp	12	—	C	
10H/0590125		FUSE, 30 amp	1	—	C	
	S.1283	FUSE, 40 amp	1	—	—	
10H/21791		FUSE, dummy	37	—	C	
	E.B6.81.3365	FUSE, mounting, assembly	1	—	—	EB10/12
		Spares for				
33989	E.B6.81.3403	BOLT, special	12	—	C	
	E.E.CO.LTD					
	BRADFORD					
	V.1234	CARRIER, fuse	6	—	—	
	E.B6.81.3405	LINK, fuse	3	—	—	
28M/9455059	A14/EB	NUT	12	—	C	
28M/12344	AGS.2002/E/4	NUT, stiff. 1/4" BSF	12	—	C	
	E.B6.81.3367	PLATE, mounting, bottom	1	—	—	
	E.B6.81.3369	PLATE, mounting, top	1	—	—	
40505	EEAS.28/22EW	WASHER	12	—	C	
28S/9418920	SP.10/E	WASHER, 1/4" BSF	24	—	C	
		Attaching parts for E.B6.81.3365:-				
28D/1011021	A25/16C	Bolt, 2BA	4	—	C	EB10/13
28W/9419402	SP.13/C	Washer, 2BA	4	—	C	
	5K/9560937	GROMMET	1	—	C	
5CX/5133		LAMP	2	—	C	EB10/14
		Attaching parts for 5CX/5133:-				
28S/1008327	A32/B14	Screw, rd. hd. 4BA	2	—	C	EB10/14
28W/1278189	AGS.2001/B/1	Nut, stiff. 4BA	2	—	C	EB10/14

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.B6.81.4747	LANYARD, assembly	2	—	—	EB10/15
28M/1278189	AGS.2001/B/1	Attaching parts for E.B6.81.4747:-	2	—	C	EB10/16
28W/9419465	SP.13/B	Nut, stiff, 4BA	2	—	C	
		Washer, 4BA		—		
5X/6238	EEAS.71/3	LINK, commoning, 4-way	27	—	C	
5X/1004082	Z.50210	LINK, commoning, 2-way	13	—	C	
5X/1004083	Z.50211	LINK, commoning, 3-way	1	—	C	
5X/6172	Z.50212	LINK, commoning, 4-way	2	—	C	
5X/1004085	Z.50213	LINK, commoning, 5-way	1	—	C	
5X/6315	Z.50215	LINK, commoning, 7-way	2	—	C	
5X/1012122	Z.50218	LINK, commoning, 10-way	1	—	C	
	E.H8.81.189	PANEL, DIODE, ASSEMBLY	1	—	—	EB10/17
		Spares for:-				
10CV/0372014	FERRANTI CV.7016	DIODE	2	—	B	
		Attaching parts for CV.7016:-				
	H14/3	Nut, stiff, 10 UNF	2	—	—	
28W/1010519	SP.122/D	Washer, 10 UNF	2	—	C	
	E.H8.81.109	PANEL, FUSE EQUIPMENT ASSEMBLY	1	—	—	EB10/18
		Spares for:-				
	CZ.52815	BLOCK, fuse, 4-way	32	—	C	EB10/19
		Attaching parts for CZ.52815:-				
28S/1200080	A32/B8	Screw, rd. hd. 4BA (as required)	24	—	C	EB10/20
28S/1012450	A32/B10	Screw, rd. hd. 4BA (as required)	40	—	C	EB10/21
5X/1878	†	GROMMET	14	—	C	
	E.H8.81.179	PANEL, fuse assembly	1	—	—	
		Attaching parts for E.H8.81.109:-				
28D/9436920	A25/1C	Bolt, 2BA	4	—	C	EB10/22
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	4	—	C	EB10/23
28W/9419402	SP.13/C	Washer, 2BA	4	—	C	
	E.H8.81.129	PANEL, RELAY, top assembly	1	—	—	EB10/24
		Spares for:-				
	E.G7.81.1001	PANEL, mounting (engraved)	1	—	—	EB10/25
5CW/10678	†	RELAY, type 20B, No.3	3	—	A	EB10/26
		Attaching parts for 5CW/10678:-				
28S/1009187	A32/B36	Screw, rd. hd. 4BA	3	—	C	EB10/27
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	3	—	C	EB10/28
28W/9419401	SP.10/B	Washer, 4BA	3	—	C	
		Attaching parts for E.H8.81.129:-				
28D/1010658	A25/1B	Bolt, 4BA	10	—	C	EB10/29
28W/9419465	SP.13/B	Washer, 4BA	10	—	C	
	E.B6.81.3733	PIECE, packing for fuse mounting assembly	4	—	—	
	508/2/03547/002	PIN, contact	25	—	—	
	508/2/05604/002	PIN, contact	16	—	—	
	508/2/09364/002	PIN, contact	3	—	—	
	E.H8.81.263	PLATE, cover assembly	1	—	—	EB10/30
		Attaching parts for:-				
28FP/1004892	ODDIE 213	Stud	11	—	C	EB10/31
28FP/1004893	ODDIE 214	WASHER	11	—	C	EB10/32

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Note No.
		1 2 3 4 5 6				
5X/11135	E.B6.81.3837	PLATE, insulating 1/16" thick paxolin	1	—	—	EB10/33
	EEAS.589/12	PLUG, filler	8	—	—	
	EEAS.589/16	PLUG, filler	118	—	—	
	508/2/06924	PLUG, filler	1	—	—	
	UK-AN.8000/ 28-22-P	PLUG, fixed	1	—	C	EB10/34
	5X/7866	UK-AN.8000/ 20-29-P	2	—	C	EB10/35
	5X/8083	UK-AN.8000/ 10S-3P	1	—	C	EB10/36
	508/2/12373/ 001	RING, anti chafe	1	—	—	
	508/2/05851/ 001	RING, anti chafe	1	—	—	
	508/2/05851/ 004	RING, anti chafe	3	—	—	
	508/2/05851/ 005	RING, anti chafe	1	—	—	
	508/2/05851/ 006	RING, anti chafe	5	—	—	
	508/2/05851/ 007	RING, anti chafe	12	—	—	
	508/2/05851/ 008	RING, anti chafe	1	—	—	
	508/2/05851/ 009	RING, anti chafe	6	—	—	
	508/2/05851/ 011	RING, anti chafe	4	—	—	
5K/9107066 5K/9107069 5K/9107065	EEAS.146/4	SLEEVE	QR	—	—	
	EEAS.146/8	SLEEVE	QR	—	—	
	EEAS.146/10	SLEEVE	QR	—	C	
	EEAS.146/12	SLEEVE	QR	—	C	
	EEAS.146/16	SLEEVE	QR	—	C	
	EEAS.146/20	SLEEVE	QR	—	—	
	EEAS.146/563	SLEEVE, rubber special	1	—	—	
	508/1/00407/ 002	SOCKET, contact	2	—	—	
	508/1/04583/ 007	SOCKET, contact	170	—	—	
	508/1/05602/ 002	SOCKET, contact	218	—	—	
5X/7928	508/1/09373/ 002	SOCKET, contact	31	—	—	
	508/1/09375/ 002	SOCKET, contact	6	—	—	
	508/1/09376/ 002	SOCKET, contact	1	—	—	
	C2.70950	SOCKET, fixed Mk.4 brass	1	—	—	
	508/1/07040/ 220	SOCKET, fixed Mk.7	1	—	—	
	UK-AN.8000/ 14S-6-S	SOCKET, fixed	3	—	C	
	UK-AN.8000/ 16-9-S	SOCKET, fixed	1	—	—	EB10/40
	UK-AN.8000/ 18-1-S-Z	SOCKET, fixed	1	—	—	EB10/41

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5X/9396	UK-AN.8000/ 18-1-S/Y	SOCKET, fixed	1	—	C	EB10/42
5X/10370	UK-AN.8000/ 18-1-S/X	SOCKET, fixed	1	—	C	EB10/43
	UK-AN.8000/ 18-1-S/W	SOCKET, fixed	1	—	—	EB10/44
5X/1930318	UK-AN.8000/ 18-1-S	SOCKET, fixed	1	—	C	EB10/45
5X/10386	UK-AN.8000/ 20-15-S/W	SOCKET, fixed	1	—	C	EB10/46
5X/9479514	UK-AN.8000/ 20-15-S	SOCKET, fixed	1	—	C	EB10/47
5X/7879	UK-AN.8000/ 20-18-S	SOCKET, fixed	1	—	C	EB10/48
5X/7799	UK-AN.8000/ 20-29-S	SOCKET, fixed	7	—	C	EB10/49
5X/7800	UK-AN.8000/ 22-14-S	SOCKET, fixed	1	—	C	EB10/50
5X/10389	UK-AN.8000/ 24-11-S	SOCKET, fixed	1	—	C	EB10/51
	UK-AN.8000/ 28-S/Z	SOCKET, fixed	1	—	—	EB10/52
	UK-AN.8000/ 24-28-S/Y	SOCKET, fixed	1	—	—	EB10/53
5X/8132	UK-AN.8000/ 24-28-S/X	SOCKET, fixed	1	—	C	EB10/54
	UK-AN.8000/ 24-28-S/W	SOCKET, fixed	1	—	—	EB10/55
5X/8088	UK-AN.8000/ 24-28-S	SOCKET, fixed	1	—	C	EB10/56
	UK-AN.8000/ 28-11-S/X	SOCKET, fixed	1	—	—	EB10/57
	UK-AN.8000/ 28-11-S/W	SOCKET, fixed	1	—	—	EB10/58
5X/8270	UK-AN.8000/ 28-11-S	SOCKET, fixed	1	—	C	EB10/59
5CY/597	†	SOCKET, test type F	1	—	C	EB10/60
		Attaching parts for 5CY/597:				
2RS/9995376	A32/820	Screw, rd. hd. 4BA	2	—	C	EB10/61
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	—	C	EB10/62
28W/9419485	SP.13/B	Washer, 4BA	2	—	C	
5CW/1102662	†	SWITCH, push button	6	—	C	EB10/63
		Attaching parts for 5CW/1102662:				
28S/9995324	A32/A16	Screw, rd. hd. 6BA	4	—	C	EB10/64
28M/10273	AGS.2001/A/4	Nut, stiff, 6BA	4	—	C	EB10/65
	N.F.S.					
5CW/6511	8810/B/101	SWITCH, SP	1	—	C	EB10/66
	C.W.C.					
5CW/1047693	†	SWITCH	1	—	C	EB10/67
		Attaching parts for 5CW/1047693:				
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	EB10/68
28W/9416642	SP.47/B	Washer, spring, 4BA	2	—	C	
5X/9450393	HC.292	TAG, ring tongue	2	—	C	
5X/9462951	HC.294	TAG, ring tongue	2	—	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5X/9718094	HC.295	. . TAG, ring tongue	5	—	C	
5X/7424	HC.296D	. . TAG, ring tongue	8	—	C	
5X/9462745	HC.304	. . TAG, ring tongue	7	—	C	
5X/1936351	HC.306D	. . TAG, ring tongue	4	—	C	
5X/9709524	HC.310	. . TAG, ring tongue	22	—	C	
5X/1930219	HC.314A	. . TAG, ring tongue	8	—	C	
5X/9450396	HC.490	. . TAG, quick release	146	—	C	
5X/9482491	HC.500	. . TAG, quick release	46	—	C	
5X/9450224	HC.510	. . TAG, quick release	121	—	C	
5X/9400080	CPL.98.01.10.C	. . TAG, ring tongue	1	—	C	
5X/9400098	CPL.98.01.10.A	. . TAG, ring tongue	1	—	C	
5X/9400083	CPL.98.01.8.A	. . TAG, ring tongue	6	—	C	
5X/9400089	CPL.98.01.4.A	. . TAG, ring tongue	3	—	C	
	E.B6.81.3407	. . TERMINAL, earth assembly	1	—	—	EB10/69
		Attaching parts for E.B6.81.3407:-				
28D/9142406	AS.1246/3C	. . Bolt, rd hd 2BA	2	—	C	EB10/70
28S/9473255	A44/C16	. . Screw, rd. hd. 2BA	1	—	C	EB10/71
28M/1278190	AGS.2001/C/1	. . Nut, stiff, 2BA	3	—	C	EB10/72
28W/9419402	SP.13/C	. . Washer, 2BA	3	—	C	
28W/1006946	AGS.2035/C	. . Washer, shakeproof	1	—	C	
6A/1200	†	. . UNIT, resistance	2	—	A	EB10/73
		Attaching parts for 6A/1200.				
28S/1007817	A32/B24	. . Screw, rd hd 4BA	2	—	C	EB10/74
28M/1278189	AGS.2001/B/1	. . Nut, stiff, 4BA	2	—	C	EB10/75
28W/9419465	SP.13/B	. . Washer, 4BA	2	—	C	
	†	. . WIRE, 23/ 00/6, type 2	QR	—	—	
	†	. . WIRE, 40/ 00/6, type 2	QR	—	—	
	E.H8.81.111	. . PANEL, MAIN ELECTRICAL ASSEMBLY	—	—	—	EB11/1
		Spares for:-				
	E.B6.81.4281	. . BOLT, special	2	—	—	EB11/2
5CZ/4056	—	. . BOOT, cover, rubber	2	—	C	EB11/3
	E.B7.81.2515	. . BUS-BAR, connector	1	—	—	EB11/4
	E.B7.81.1221	. . CABLE, ASSEMBLY E21, M.E.P. to earth	1	—	—	EB11/5
		Attaching parts for E.B7.81.1221:-				
28D/7002426	A25/6G	. . Bolt, 5/16" BSF	1	—	C	EB11/6
28M/10291	AGS.2001/G/1	. . Nut, 5/16" BSF	1	—	C	EB11/7
28W/9419403	SP.13/G	. . Washer, 5/16"	1	—	C	
	E.H8.81.431	. . CABLE, ASSEMBLY, F33	1	—	—	
5E/4193	—	. . CABLE, uniminyvin 1	QR	—	C	
5E/4190	—	. . CABLE, uniminyvin 6	QR	—	C	
5E/4188	—	. . CABLE, uniminyvin 10	QR	—	C	
	—	. . CABLE, uniminyvin	QR	BSG.195	—	
	—	. . CABLE, uniminyvin	QR	BSG.195	—	
	—	. . CABLE, uniminyvin	QR	BSG.195	—	
	E.H8.81.1041	. . CARRIER, SPARE FUSE, ASSEMBLY	1	—	—	EB11/8
		Spares for:-				
	E.A1.81.542	. . CARRIER, spare fuse 8-way	1	—	—	EB11/9
		Attaching parts for E.A1.81.542.				
28M/10286	AGS.2001/A/	. . Nut, 4BA	2	—	C	EB11/10
28S/1017747	A32/A14	. . Screw, rd hd. 4BA	2	—	C	EB11/11
	E.H8.81.1039	. . PLATE, mounting	1	—	—	EB11/12
		Attaching parts for E.H8.81.1039				
28D/1010658	A25/1B	. . Bolt, 4BA	2	—	C	EB11/13
28W/9419465	SP.13/B	. . Washer, 4BA	2	—	C	EB11/14

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
40633	E.B6.81.3729	CLAMP, cable, half	2	—	C	EB11/15
40634	E.B6.81.4939	CLAMP, cable, half	2	—	C	EB11/16
		Attaching parts for E.B6.81.3729 and 4939:-				
28D/1017157	A25/25C	Bolt, 2BA	2	—	C	EB11/17
28W/9419402	SP.13/C	Washer, 2BA	2	—	C	
28E/1201809	AS.3180/6B	CLIP, 'P'	3	—	C	EB11/18
		Attaching parts for AS.3180/6B:-				
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	—	C	EB11/19
28S/9992522	A32/B16	Screw, rd. hd. 4BA	1	—	C	
28W/9419474	SP.15/B	Washer, 4BA	1	—	C	
28E/8108278	AS.3180/8B	CLIP, 'P'	3	—	C	EB11/20
28E/1200550	AS.3180/12C	CLIP, 'P'	1	—	C	EB11/21
		Attaching parts for AS.3180/12C:-				
28D/9133011	A25/2C	Bolt, 2BA	1	—	C	EB11/22
28W/9419402	SP.13/C	Washer, 2BA	1	—	C	
28E/9000884	AS.3180/13C	CLIP, 'P'	1	—	C	EB11/23
		Attaching parts for AS.3180/13C:-				
28D/9436920	A25/1C	Bolt, 2BA	1	—	C	EB11/24
28M/1278190	AGS.2001/C/1	Nut, 2BA	1	—	C	EB11/25
30970	EEAS.237/7A	Washer, 'O'	1	—	C	
28E/9450597	AS.3180/16C	CLIP, 'P'	1	—	C	EB11/26
		Attaching parts for AS.3180/16C:-				
30970	EEAS.237/7A	Washer, 'O'	1	—	C	
	HC.1351	FERRULE, 19 amp	4	—	C	
	HC.1352	FERRULE, 19 amp	4	—	C	
10H/23864		FUSE, 5 amp, type AS	5	—	C	
10H/23862		FUSE, 10 amp, type AS	6	—	C	
10H/23861		FUSE, 15 amp, type AS	1	—	C	
10H/23860		FUSE, 20 amp, type AS	2	—	C	
10H/21791		FUSE, dummy	2	—	C	
5X/6237	EEAS.71/1	LINK, commoning, 2 way	1	—	C	
5X/6238	EEAS.71/2	LINK, commoning, 4 way	7	—	C	
5X/1004082	Z.50210	LINK, commoning, 7 way	6	—	C	
5X/6174	Z.50216	LINK, commoning, 8 way	1	—	C	
33512	E.B6.81.4943	LINK bus-bar, P3	1	—	C	EB11/27
33513	E.B6.81.4945	LINK bus-bar, P4	1	—	C	EB11/28
		Attaching parts for E.B6.81.4943 and 4945:-				
33510	E.B6.81.4779	Bolt, special	1	—	C	EB11/29
33509	E.B6.81.4713	Washer, bearing	1	—	C	EB11/30
24517	E.B9.81.2403	Washer, contact	1	—	C	EB11/31
28W/9128920	SP.56/G	Washer, spring, 5/16"	1	—	C	
	ERMA.2382	LUG, 6 amp 3/8" dia.	2	—	—	
	HC.292	LUG, 6 amp, 2BA	4	—	—	
	HC.294	LUG, 12 amp, 4BA	6	—	—	
5X/9400382	CPL.98.01.20/C	LUG, 6 amp, 4BA	12	—	C	
5X/9400383	CPL.98.01.20/D	LUG, 6 amp, 2BA	7	—	C	
5X/6815	CPL.98.01.20/F	LUG, 6 amp, 5/16" dia.	2	—	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5X/9400384	CPL.98.01.16/C	LUG, 12 amp, 4BA	4	—	C	
5X/6955	CPL.98.01.12/K	LUG, 24 amp, 4BA	4	—	C	
5X/7213	CPL.98.01.12/E	LUG, 24 amp, 3/8"	2	—	C	
5CZ/3137	—	LUG, 24 amp, No.25, 4BA	4	—	C	
5X/9400078	CPL.98.01.10/A	LUG, 35 amp, 4BA	2	—	C	
5X/9400086	CPL.98.01.6/A	LUG, 70 amp, 1/2"	6	—	C	
5X/9400095	CPL.98.01.1/F	LUG, 150 amp, 1/2"	1	—	C	
5X/9400096	CPL.98.01.1/A	LUG, 150 amp, 5/16"	1	—	C	
	E.H8.81.167	PANEL, BUS BAR, ASSEMBLY	1	—	—	EB12/1
		Spares for:				
	AS.2656	BLOCK, connector	1	—	—	EB12/2
		Attaching parts for AS.2656				
28S/1200039	A31/B32	Screw, ch. hd. 4BA	2	—	C	EB12/3
	CZ.52815	BLOCK, fuse, 4 way	6	—	—	EB12/4
		Attaching parts for CZ.52815				
28S/9435712	A31/88	Screw, ch. hd. 4BA	2	—	C	EB12/5
28W/1206041	AGS.2035/B	Washer, shakeproof, 4BA	2	—	C	
	E.B7.81.194	BLOCK, mounting, fuse	1	—	—	EB12/6
		Attaching parts for E.B7.81.194				
28D/1214878	AS.1246/16B	Bolt, rd. hd. 4BA	5	—	C	EB12/7
	E.H8.81.995	BLOCK, mounting, fuse	1	—	—	EB12/8
		Attaching parts for E.H8.81.995				
28D/1214874	AS.1246/12B	Bolt, rd. hd. 4BA	5	—	C	EB12/9
5X/3268	CZ.50207	BLOCK, terminal, 5-way	2	—	C	EB12/10
5X/3181	CZ.50209	BLOCK, terminal, 20 way	2	—	C	EB12/11
		Attaching parts for CZ.50207 and 50209				
5X/3278	Z.28426	Polar, fixing	2	—	C	EB12/12
	E.A2.81.1587	BOLT, special	2	—	—	EB12/13
	E.H8.81.1023	BUS-BAR, P10	1	—	—	EB12/14
	E.B7.81.1969	BUS-BAR, P10, extension	1	—	—	EB12/15
	E.H8.81.1035	CLEAT	2	—	—	EB12/16
		Attaching parts for E.H8.81.1035				
28D/122276	A25/15B	Bolt, 4BA	2	—	C	EB12/17
28W/9419465	SP.13/B	Washer, 4BA	2	—	C	
	E.B7.81.1963	COVER, assembly	1	—	—	EB12/18
	AS.2655	COVER, block, connector	1	—	—	EB12/19
5X/3274	CZ.26805	COVER, block, terminal, 5 way	1	—	C	EB12/20
5X/6165	CZ.25111	COVER, block, terminal, 20 way	1	—	C	EB12/21
10H/23864	5CZ/5215	FUSE, 5 amp, type AS	11	—	C	
10H/23862	5CZ/5216	FUSE, 10 amp, type AS	5	—	C	
10H/23860	5CZ/5218	FUSE, 20 amp, type AS	3	—	C	
10H/23861	5CZ/5217	FUSE, 15 amp, type AS	1	—	C	
	AP.19264	FUSE, 40 amp, type HRC	2	—	—	
	AP.19265	FUSE, 60 amp, type HRC	1	—	—	
	125/111/T	FUSE, 125 amp, type HRC	7	—	—	
	E.B7.81.1041	LINK	8	—	—	
	E.A2.81.1579	LINK	2	—	—	
	AS.2697	LUG, adaptor, 4-way, 19 amp	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.87.81.1033	PACKING, block	1	—	—	EB12/22
	E.87.81.1943	PACKING, block	1	—	—	EB12/23
	E.87.81.1945	PACKING, block	1	—	—	EB12/24
	E.87.81.1971	STUD, 5/16" dia.	1	—	—	EB12/25
	E.89.81.1045	STUD, 5/16" dia.	1	—	—	EB12/26
	E.87.81.1011	STUD, 1/4" dia.	12	—	—	EB12/27
	E.87.81.1009	STUD, 5/16" dia.	18	—	—	EB12/28
	AS 27.21	WASHER, contact, 5/16"	20	—	—	EB12/29
	E.88.81.105	PANEL, M.E.P. FORWARD ASSEMBLY	1	—	—	EB13/1
		Spares for				
24518	E.89.81.2405	BUS-BAR, connector	1	—	C	EB13/2
24520	E.89.81.2409	BUS-BAR, connector	1	—	C	EB13/3
24521	E.89.81.2411	BUS-BAR, connector	1	—	C	EB13/4
24522	E.89.81.2415	BUS-BAR, connector	1	—	C	EB13/5
		Attaching parts for E.89.81.2405, 2409, 2411 and 2415.				
28D/1008145	A25/05	Bolt, 1/2" BSF	7	—	C	EB13/8
28M/1011475	A21/05	Nut, 1/2" BSF	7	—	C	EB13/7
24517	E.89.81.2407	Washer	4	—	C	
28W/9418921	SP.13/E	Washer, 1/2"	14	—	C	
28W/9416644	SP.47/E	Washer, spring 1/2"	7	—	C	
5CY/5352		CIRCUIT BREAKER, type TB, No.6	2	—	B	EB13/8
		Attaching parts for 5CY/5352				
28D/9436920	A25/10	Bolt, 2BA	4	—	C	EB13/9
	E.89.81.2357	COVER, assembly	1	—	—	EB13/10
		Attaching parts for E.89.81.2357				
28S/1011490	A32/016	Screw, rd. hd. 2BA	3	—	C	EB13/11
24511	E.89.81.2371	COVER, end, assembly	1	—	C	EB13/12
24510	E.89.81.2369	COVER, top	1	—	C	EB13/13
		Attaching parts for E.89.81.2371 and 2369				
28S/1008327	A32/B14	Screw, rd. hd. 4BA	3	—	C	EB13/14
28S.9995376	A32/H20	Screw, rd. hd. 4BA	1	—	C	EB13/15
	AGS.2035/B	Washer, shakeproof 4BA	4	—	C	
24519	E.89.81.2407	LINK, c/b, reverse current	1	—	C	
24509	E.89.81.2365	PLUG, external supply assembly	1	—	B	EB13/16
		Spares for:				
	E.89.81.869	COVER, side, left	1	LFS.21	—	EB13/17
	E.89.81.2367	COVER, side	1	LFS.21	—	EB13/18
42475	E.89.81.2417	CONNECTOR, bus-bar	1	—	C	EB13/19
5CY/4314	SIS.6202	PLUG, power supply	1	—	C	EB13/20
33181	E.89.81.891	STRIP	1	—	C	EB13/21
27316	E.89.81.2419	WASHER, spacing	1	—	C	EB13/22
		Attaching parts for E.89.81.2365:				
28S/9419453	A31/B14	Screw, ch. hd. 4BA	4	—	C	EB13/23
5CW/6185		SWITCH, magnetic relay, type R3	1	—	B	EB13/24
		Attaching parts for 5CW/6185:				
28D/1011025	A25/24C	Bolt, 2BA	4	—	C	EB13/25
24525	E.89.81.2433	Piece, distance	8	—	C	EB13/26
28W/9419402	SP.13/C	Washer, 2BA	4	—	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Part No.
					M.R. L.M.	
		1 2 3 4 5 6				
5CW/6720	-	SWITCH, magnetic relay, type S10	2	-	C	EB13/27
28S/1200040	A31/B20	Attaching parts for 5CW/6720:- Screw, ch. hd. 4BA	4	-	C	EB13/28
24284	E.A9.81.951	TERMINAL, earth insulated	1	-	C	EB13/29
28S/1200040	A33/B20	Attaching parts for E.A9.81.951:- Screw, ch. hd. 4BA	2	-	C	EB13/30
	E.H8.81.147	UNIT, sequency, assembly	1	-	-	EB13/31
28D/1010658	A25/18	Attaching parts for E.H8.81.147:- Bolt, 4BA	6	-	C	EB13/32
28W/9419474	SP.15/B	Washer, 4BA	6	-	C	
	E.H7.81.587	WASHER, packing	2	-	-	EB13/33
28D/1011240	A25/5E	Attaching parts for E.H8.81.165:- Bolt, 1/4" BSF	1	-	C	EB13/34
28D/9133013	A25/5C	Bolt, 2BA	5	-	C	EB13/35
28W/9419475	SP.15/C	Washer, 2BA	5	-	C	
	E.H8.81.169	PANEL, M.E.P. AFT ASSEMBLY	1	-	-	EB14/1
	E.H8.81.299	Spares for:- BLOCK, fuse mounting, assembly	1	-	-	EB14/2
28S/1200034	A31/B16	Attaching parts for E.H8.81.299:- Screw, ch. hd. 4BA	4	-	C	EB14/3
28W/9419465	SP.13/B	Washer, 4BA	4	-	C	
	E.A9.81.1003	BRACKET, assembly	1	-	-	EB14/4
28S/9419453	A31/B14	Attaching parts for E.A9.81.1003:- Screw, ch. hd. 4BA	4	-	C	EB14/5
5CY/2561	-	BREAKER, circuit, 15 amp, type A3	2	-	C	EB14/6
5CY/4520	-	COVER, moulded	2	-	C	EB14/7
28S/1213081	A44/A6	Attaching parts for 5CY/4520:- Screw, rd. hd. 5BA	2	-	C	EB14/8
	E.H9.81.171	PANEL, aft, sub-assembly	1	-	-	EB14/9
	E.H8.81.163	PANEL, GENERATOR TEST ASSEMBLY	1	-	-	EB14/10
	E.B6.81.479	Spares for:- PANEL, generator test	1	-	-	EB14/11
5CY/3002	-	SOCKET, 3 pole, 2 amp	2	-	C	EB14/12
28M/1086618	AGS.2002/B/1	Attaching parts for 5CY/3002:- Nut, 4BA	3	-	C	EB14/13
28S/1007469	A23/B14	Screw, 4BA, csk. hd.	3	-	C	EB14/14
28W/9419465	SP.13/B	Washer, 4BA	3	-	C	
5CW/7552	-	SWITCH, double pole	2	-	B	EB14/15
28S/9992525	A32/B12	Attaching parts for 5CW/7552:- Screw, 4BA, rd. hd.	4	-	C	EB14/16
28W/1206041	AGS.2035/B	Washer, 4BA, shakeproof	4	-	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5UC/1054116	—	RESISTOR, remote, type 4	2	—	C	EB14/17
28S/1011488	A32/B28	Attaching parts for 5UC/1054116:- Screw, rd. hd. 4BA	2	—	C	EB14/18
5CW/6165	F6701	SWITCH, magnetic relay, type 18B	2	—	A	EB14/19
28S/1200040	A31/B20	Attaching parts for F6701:- Screw, ch. hd. 4BA	4	—	C	EB14/20
28W/9419465	SP.13/B	Washer, 4BA	4	—	C	
5CW/6166	F.6801	SWITCH, magnetic, type 10B	2	—	A	EB14/21
28D/7002428	A25/6C	Attaching parts for F6801:- Bolt, 2BA	2	—	C	EB14/22
28D/1011240	A25/5E	Attaching parts for F. HR B1 169 Bolt, 2BA	3	—	C	EB14/23
28D/9133013	A25/5C	Bolt, 2BA	7	—	C	EB14/24
28W/9419475	SP.15/C	Washer, 2BA	7	—	C	
5CW/4620	EL.38635	RELAY, type T1	2	—	B	EB14/25
28D/9133011	A25/2C	Attaching parts for EL 38635:- Bolt, 2BA	2	—	C	EB14/26
28W/9419402	SP.13/C	Washer, 2BA	2	—	C	
	SR.8327	SHROUD, side entry	4	—	—	
	SR.8496	SHROUD, side entry	2	—	—	
	EEAS 146/00	SLEEVE, 1"	QR	—	—	
5K/9107066	EEAS.146/10	SLEEVE, 1/2"	QR	—	C	
5K/9107069	EEAS 146/12	SLEEVE, 3/4"	QR	—	C	
5K/9107065	EEAS 146/16	SLEEVE, 1/2"	QR	—	C	
5K/9107065	EEAS 146/20	SLEEVE, 1/2"	QR	—	C	
	MAM RUBBER CO.	SLEEVE, 3 mm i/d. grade OXH 3/8"	QR	—	—	
	AS.2697	SOCKET, adaptor, 4 way, 19 amp	3	—	—	EB14/27
	E.B7.81.1007	STUD, earth	1	—	—	EB14/28
		Attaching parts for E.B7.81.1007:- Nut, 3/8"	2	—	C	EB14/29
28M/10560 8439	AGS 2001/J4 EEAS.28/33EP	Washer	3	—	C	
5CW/5016	U2005/1	SWITCH, magnetic start, type 1A, No.5	2	—	A	EB14/30
28D/9133012	A25/3C	Attaching parts for U2005/1:- Bolt, 2BA	4	—	C	EB14/31
28W/9419402	SP.13/C	Washer, 2BA	4	—	C	
5X/9709523	HC.290	TAG, R.T. 1/2"	2	—	C	
5X/1010324	HC.296	TAG, R.T.	42	—	C	
5X/9462748	HC.304	TAG, R.T.	6	—	C	
	HC.306A	TAG, R.T., 4BA	3	—	—	
5X/9450396	HC.490	TAG, quick release, 6 amp	59	—	C	
5X/9482491	HC.500	TAG, quick release, 12 amp	15	—	C	
5X/9450224	HC.510	TAG, quick release, 24 amp	19	—	C	
	HC.1187	TERMINAL, cranked, 4BA	2	—	—	
	E.86.81.4713	WASHER, bearing, cable attachment	2	—	—	
	E.A9.81.2403	WASHER, contact, cable attachment	2	—	—	
28W/9128920	SP.56/G	WASHER, spring, cable attachment	2	—	C	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	E.H8.81.45	PLUGS AND SOCKETS THROUGH PRESSURE BULKHEAD Spares for:-	—	—	—	EB15/1
	UG.30D/U	ADAPTOR, bulkhead, co-axial	2	—	—	EB15/2
	E.H8.82.265	BUNG, split	1	—	—	EB15/3
	E.H8.82.267	BUNG, split	1	—	—	EB15/4
	E.H8.82.269	BUNG, housing	2	—	—	EB15/5
		Attaching parts for E.H8.82.269:-				
28D/9133011	A25/2C	Bolt, 2BA	6	—	C	EB15/6
28M/1278190	AGS.2001/C/1	Nut, 2BA	6	—	C	EB15/7
28W/9458598	SP.123/D	Washer	6	—	C	
	CZ.51539	CAP, protective, Mk.4	4	—	—	EB15/8
	CZ.51540	CAP, protective, Mk.4	6	—	—	EB15/9
	CZ.51541	CAP, protective, Mk.4	2	—	—	EB15/10
	AP.1380	CAP, protective, co-axial	4	—	—	EB15/11
	CZ.62271	CONNECTOR, Mk.4	2	—	—	EB15/12
	CZ.62271/1	CONNECTOR, Mk.4	1	—	—	EB15/13
	TBF.16S 1PS	CONNECTOR, bulkhead	1	—	—	EB15/14
	075/7507/000	GASKET	1	—	—	EB15/15
	E.A3.81.421	GASKET	1	—	—	EB15/16
	E.H8.81.979	PLATE, blanking	1	—	—	EB15/17
		Attaching parts for E.H8.81.979:-				
28D/1008149	A25/2B	Bolt, 2BA	32	—	C	EB15/18
10H/19610	—	PLUG, type 257	3	—	C	EB15/19
5X/6422	CZ.57212	PLUG, size B	1	—	C	EB15/20
5X/6008	CZ.28032	PLUG, size A	1	—	C	EB15/21
5X/6018	CZ.28034	PLUG, size 2	2	—	C	EB15/22
5X/6038	CZ.28038	PLUG, size B	2	—	C	EB15/23
5X/6063	CZ.28043	PLUG, size B	2	—	C	EB15/24
5X/6113	CZ.28053	PLUG, size D	1	—	C	EB15/25
5X/6133	CZ.28057	PLUG, size D	7	—	C	EB15/26
10H/19481	CZ.62275	PLUG/SOCKET, Mk.4, 12-way	1	—	C	EB15/27
10H/19457	CZ.62271	PLUG/SOCKET, Mk.4, 6-way	2	—	C	EB15/28
10H/19458	CZ.62271/1	PLUG/SOCKET, Mk.4, 6-way	1	—	C	EB15/29
5CW/10329	DIAMOND H	RELAY	1	—	A	EB16/1
4202	E.A1.31.1165	STUD, mounting, assembly	2	—	C	EB16/2
5CY/1002	—	SUPPRESSOR, type 'P'	1	—	B	EB16/3
5CY/7001363	—	SUPPRESSOR, type 'B'	3	—	C	EB16/4
27N/93	—	SWITCH, inertia piston, type Mk.1	2	—	A	EB16/5
		Attaching parts for 27N/93:-				
28M/1278190	AGS.2001/C/1	Nut, 2BA	4	—	C	EB16/6
	E.B6.81.2417	Piece, packing	1	—	—	EB16/7
28S/1007752	A31/C36	Screw, ch. hd. 2BA	4	—	C	EB16/8
5CW/4620	—	SWITCH, magnetic, type T.1	2	—	B	EB16/9
5CW/5016	—	SWITCH, magnetic start, type 1A, No.5	2	—	B	EB16/10
5CW/10678	—	SWITCH, relay, type 20B, No.3	1	—	B	EB16/11
	E.A3.81.1269	SWITCH, TIME, ASSEMBLY	1	—	—	EB16/12
		Spares for:-				
	E.A3.81.1403	BRACKET, mounting	1	—	—	EB16/13
	TEDDINGTON					
	FHM/A/25	SWITCH, time	2	—	—	EB16/14
		Attaching parts for FHM/A/25				
28S/9435713	A31/C20	Screw, ch. hd. 2BA	4	—	C	EB16/15

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
6A/1678	—	THERMOMETER, exhaust gas, type B, compensator voltage, type A, No. 1	1	—	A	EB16/17
28D/9140202	AS.1246/1C	Attaching parts for 6A/1678: Bolt, 2BA	3	—	C	EB16/18
	E.H9.81.329	WIRING AND CLIPPING, SWITCH, UPPER EQUIPMENT BAY Spares for:	—	—	—	EB17/1
28E/9436819	AS.3180/3B	CLIP, 'P'	2	—	C	EB17/2
28E/1201807	AS.3180/5B	CLIP, 'P'	1	—	C	EB17/3
28E/8018278	AS.3180/8B	CLIP, 'P'	3	—	C	EB17/4
28E/9000883	AS.3180/9B	CLIP, 'P'	1	—	C	EB17/5
		Attaching parts for AS.3180/3B, /5B, /8B, and /9B				
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	—	C	EB17/8
28S/1008075	A31/B18	Screw, ch. hd. 4BA	1	—	C	EB17/7
	EEAS.238.1A	Washer	1	—	—	
	EEAS.240.1A	Washer	1	—	—	
28M/10275	AGS.2001/C/4	NUT, 2BA	1	—	C	EB17/8
28M/9129528	A54/C	NUT, 2BA	2	—	C	EB17/9
28S/9436540	A43/C40	SCREW, ch. hd. 2BA	1	—	C	EB17/10
28W/1009752	SP.25/C	WASHER, 2BA	2	—	C	
28W/9457834	SP.24/D	WASHER	2	—	C	
	E.H8.81.23	WIRING DETONATOR ASSEMBLY Spares for:	—	—	—	EB17/11
	E.G9.91.135	BLOCK, fuse	1	—	—	EB17/12
SC2/	WARD BROOKE WB/UN/1146/S/ 3/W	BLOCK, terminal, 3-way Attaching parts for WB/UN/1146/S/3/W:-	3	—	—	EB17/13
28M/1086618	AGS.2002/B/1	Nut, 4BA	2	—	C	EB17/14
	WB/114/28	Pillar, fixing	2	—	—	EB17/15
28S/1086618	A32/B20	Screw, rd. hd. 4BA	2	—	C	EB17/16
	WARD BROOKE WB/UN/1146/D/ 3/W	BLOCK, terminal, 6 way Attaching parts for WB/UN/1146/D/3/W:-	1	—	—	EB17/17
28M/1086618	AGS.2002/B/1	Nut, 4BA	2	—	C	EB17/18
	WB/114/28	Pillar, fixing	2	—	—	EB17/19
5E/3898	—	CABLE, uniminyvin 12	QR	BSG.195	—	
	—	CABLE, unifersil 12	QR	—	C	
	E.G9.81.167	CABLE, ASSEMBLY, N49A, jettison switch unit to relay unit	1	—	—	
	E.G9.81.168	CABLE, ASSEMBLY, N49B, jettison switch to resistor assembly	1	—	—	
	E.G9.81.169	CABLE, ASSEMBLY, N49C, resistor assembly to control tube detonator	1	—	—	
	E.G9.81.173	CABLE, ASSEMBLY, E27, jettison switch to earth	1	—	—	
	E.G9.81.178	CABLE, ASSEMBLY, N115, terminal block block to terminal block	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
	E.G9.81.1247	CABLE, ASSEMBLY, N49D, jettison switch to terminal block and fuse block	1	—	—	
	E.H6.81.499	CABLE, ASSEMBLY, N114, jettison relay unit to jettison switches	1	—	—	
	E.H8.81.447	CABLE, ASSEMBLY, N419, jettison switch to detonators	1	—	—	
	E.H8.81.945	CABLE, ASSEMBLY, N420, jettison switches to detonators	1	—	—	
5CZ/7557	WARD BROOKE					
	WB/NY/1110/B/3	COVER, terminal block, 3-way	2	—	C	EB17/20
	WB/NY/1110/B/8	COVER, terminal block, 6-way	1	—	—	EB17/21
	12G/1438	DETONATOR	2	—	—	
	12G/1278	DETONATOR	64	—	—	
10H/23864	X.114	EXTRUSION	QR	PVC	—	
		FUSE, 5 amp	1	—	C	
	CPL 98.01.12K	LUG, R.T.	24	—	—	
	E.86.81.5803	PACKING	2	—	—	
	E.86.81.5575	PACKING	4	—	—	
	E.A6.81.2181	PACKING	8	—	—	
	EEAS.550/3	PLATE, identity	3	—	—	
	EEAS.551/6	PLATE, identity	1	—	—	
	E.A1.81.942	PLATE, securing	3	—	—	EB17/22
		Attaching parts for E.A1.81.942:-				
	AGS 249/28	Screw, blk. hd. 5BA	2	—	C	EB17/23
	E.A1.81.940	PLUG, detonator	3	—	—	
	EEAS.566	SLEEVE, special	3	—	—	
	EEAS 146/12	SLEEVE, 1/2"	QR	—	—	
	MAM RUBBER CO.	SLEEVE, 3 mm i/d. grade CXH 3/8"	QR	—	—	
5CZ/6398	WARD BROOKE					
5CZ/6587	WB/1114/22	SPACER	—	—	—	
	WB/1114/23	SPACER	—	—	—	
	E.A1.81.940	STUD	—	—	—	
	E.H6.81.101	SWITCH, unit, detonator	1	—	—	

ELECTRICAL
ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.G9.81.163	SWITCH, UNIT, DETONATOR, INSTALLATION	—	—	—	EB17/24
	E.A3.81.6517	Spares for: FLAP, assembly	1	—	—	EB17/25
	E.A6.81.369	Attaching parts for E.A3.81.6517:- Pin, hinge	1	—	—	EB17/26
	E.A1.81.929	SPRING, torsion	1	—	—	EB17/27
5CW/9255	DOWTY					
	AS.10512C-1	SWITCH	1	—	B	EB17/28
	E.A3.81.6409	UNIT, detonator switch, sub-assembly	1	—	—	EB17/29
	HADDEN & STOKES					
	DP 1002A	WASHER, locking	4	—	—	
	E.A3.81.1041	WIRING, CONTROL COLUMN, UNDER PILOT'S FLOOR		—	—	EB17/30
	E.A3.81.2611	Spares for: BRACKET	1	—	—	EB17/31
28S/1012460	A32/B10	Attaching parts for E.A3.81.2611:- Screw, rd. hd. 4BA	1	—	C	EB17/32
	5CZ/432	BLOCK, terminal, type 'B' 3-way, No.1	2	—	C	EB17/33
5CZ/430		BLOCK, terminal, type 'B', 2-way, No.1	2	—	C	EB17/34
	AGS.249/32	Attaching parts for 5CZ/432 and 5CZ/430:- Screw, 6BA	2	—	C	EB17/35
28E/8018278	AS.3180/BB	CLIP	1	—	C	EB17/36
		Attaching parts for AS.3180/BB.				
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	—	C	EB17/37
28S/1012450	A32/B10	Screw, rd. hd. 4BA	1	—	C	EB17/38
	AS.491/25	CLIP	2	—	—	EB17/39
		Attaching parts for AS.491/25.				
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	EB17/40
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	—	C	EB17/41
28W/9416642	SP.47/9	Washer, spring, 4BA	1	—	C	
	E.A3.81.295	WIRING, U/C NOSE, ASSEMBLY	1	—	—	EB17/42
		Spares for:				
5CW/868		BLOCK, terminal, type B, No. 1	1	—	C	EB17/43
		Attaching parts for 5CW/868				
28M/940351R	A27/AP	Nut, 6BA	2	—	C	EB17/44
28S/1200062	A33/A20	Screw, csk. hd. 6BA	2	—	C	EB17/45
28W/9416641	SP.47/A	Washer, spring, 6BA	2	—	C	
	DOWTY					
	DN.1322.Z	SWITCH, micro, Mk 2	1	—	—	EB17/46

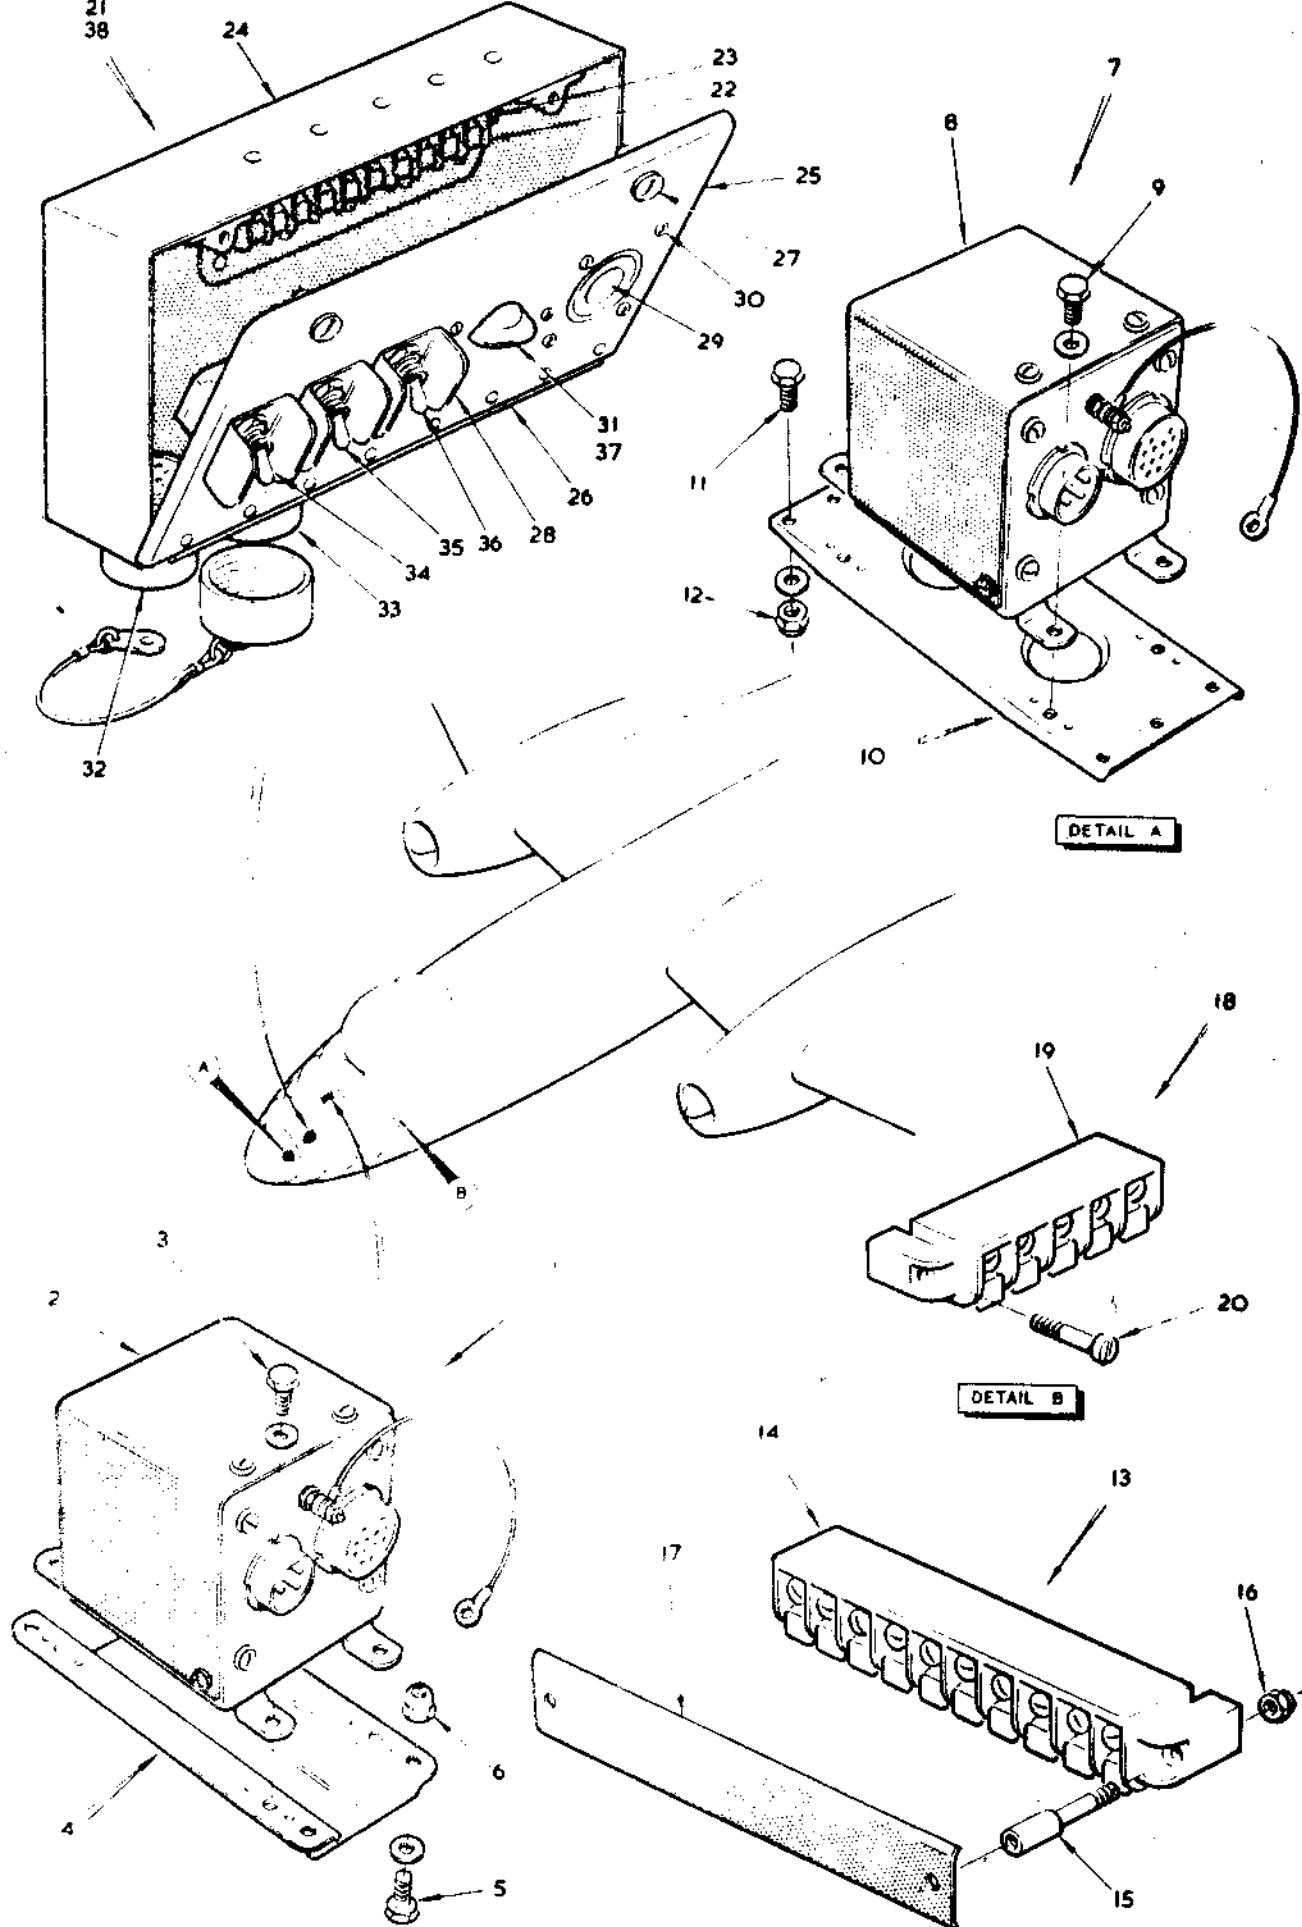


FIG.1 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

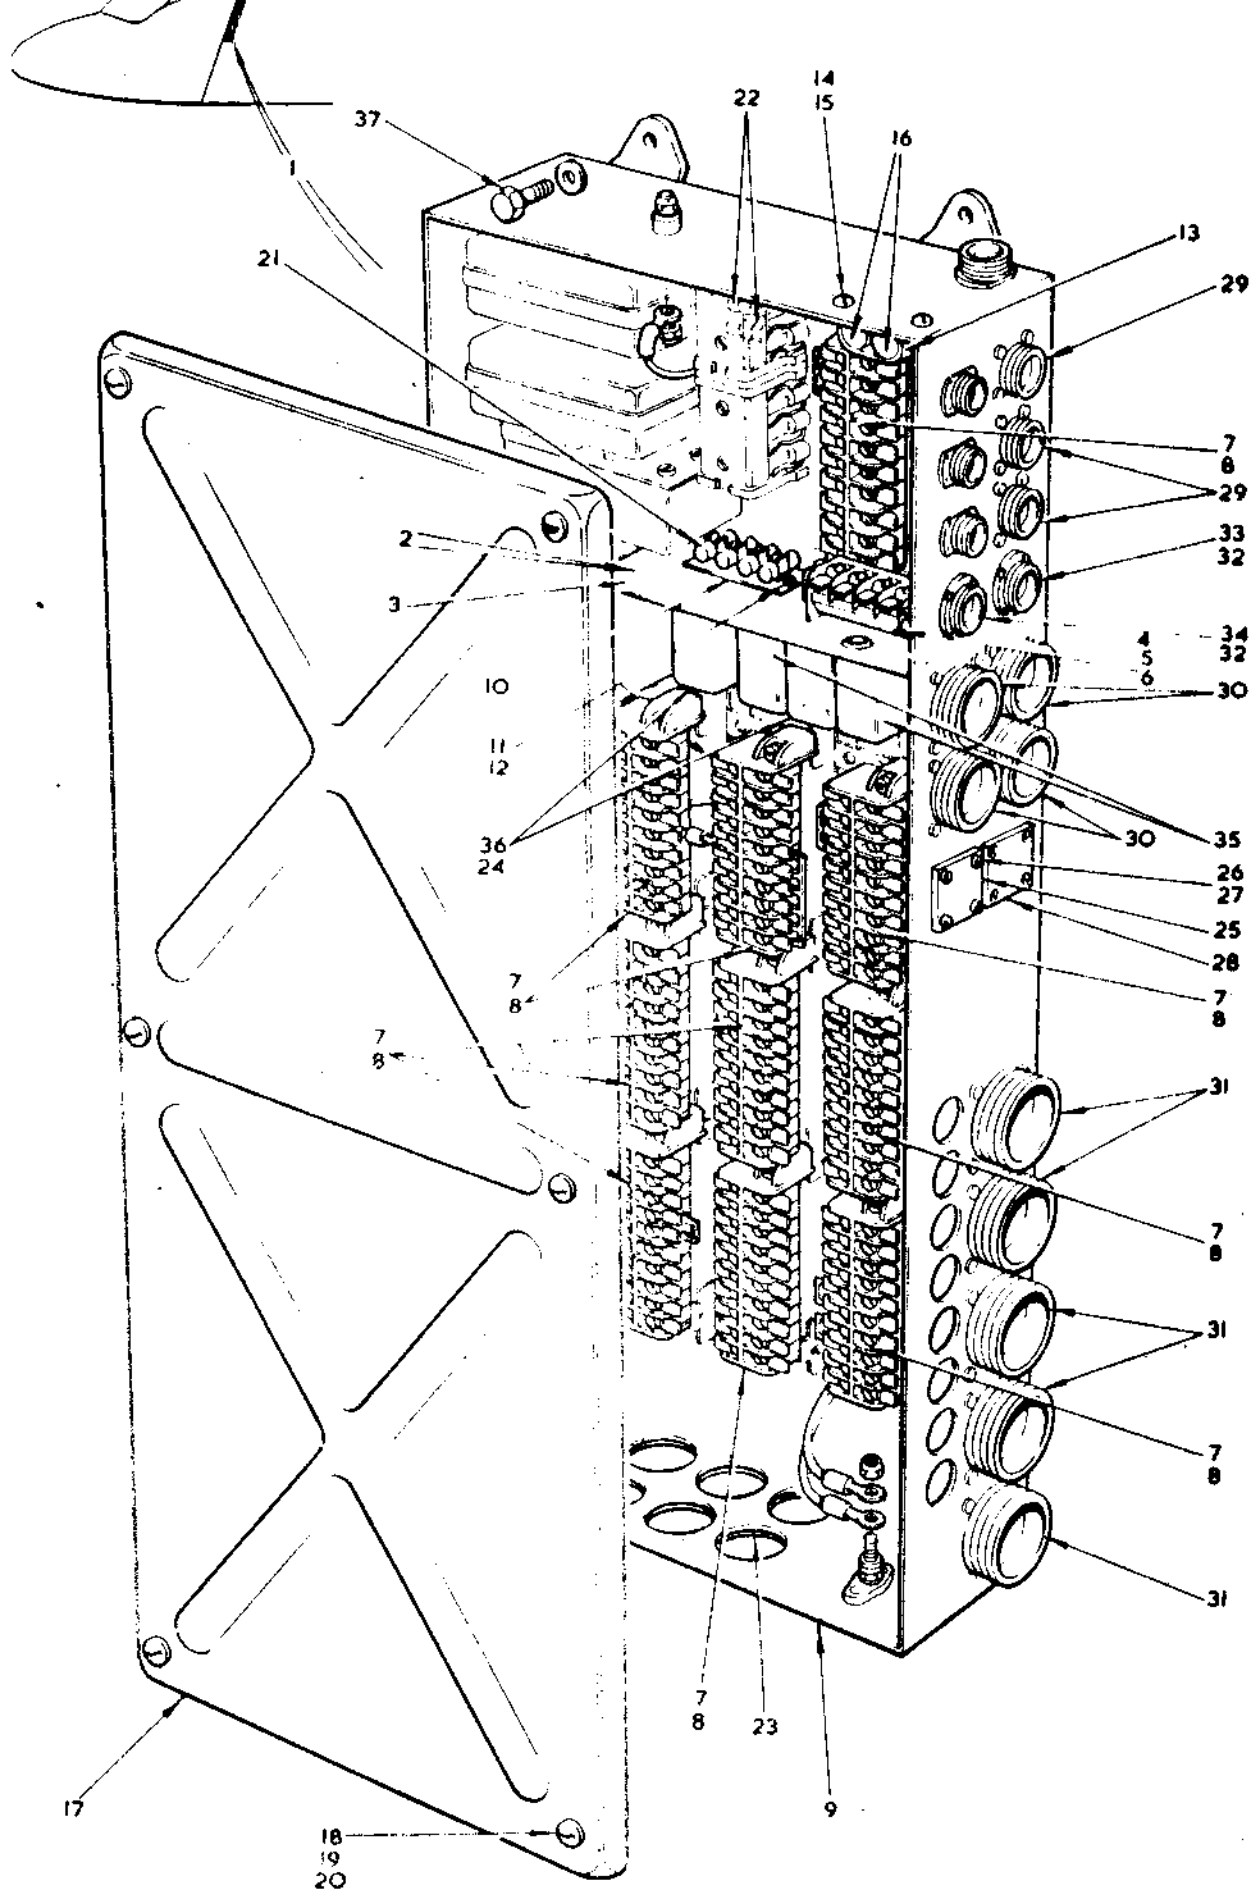


FIG.2 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECTION

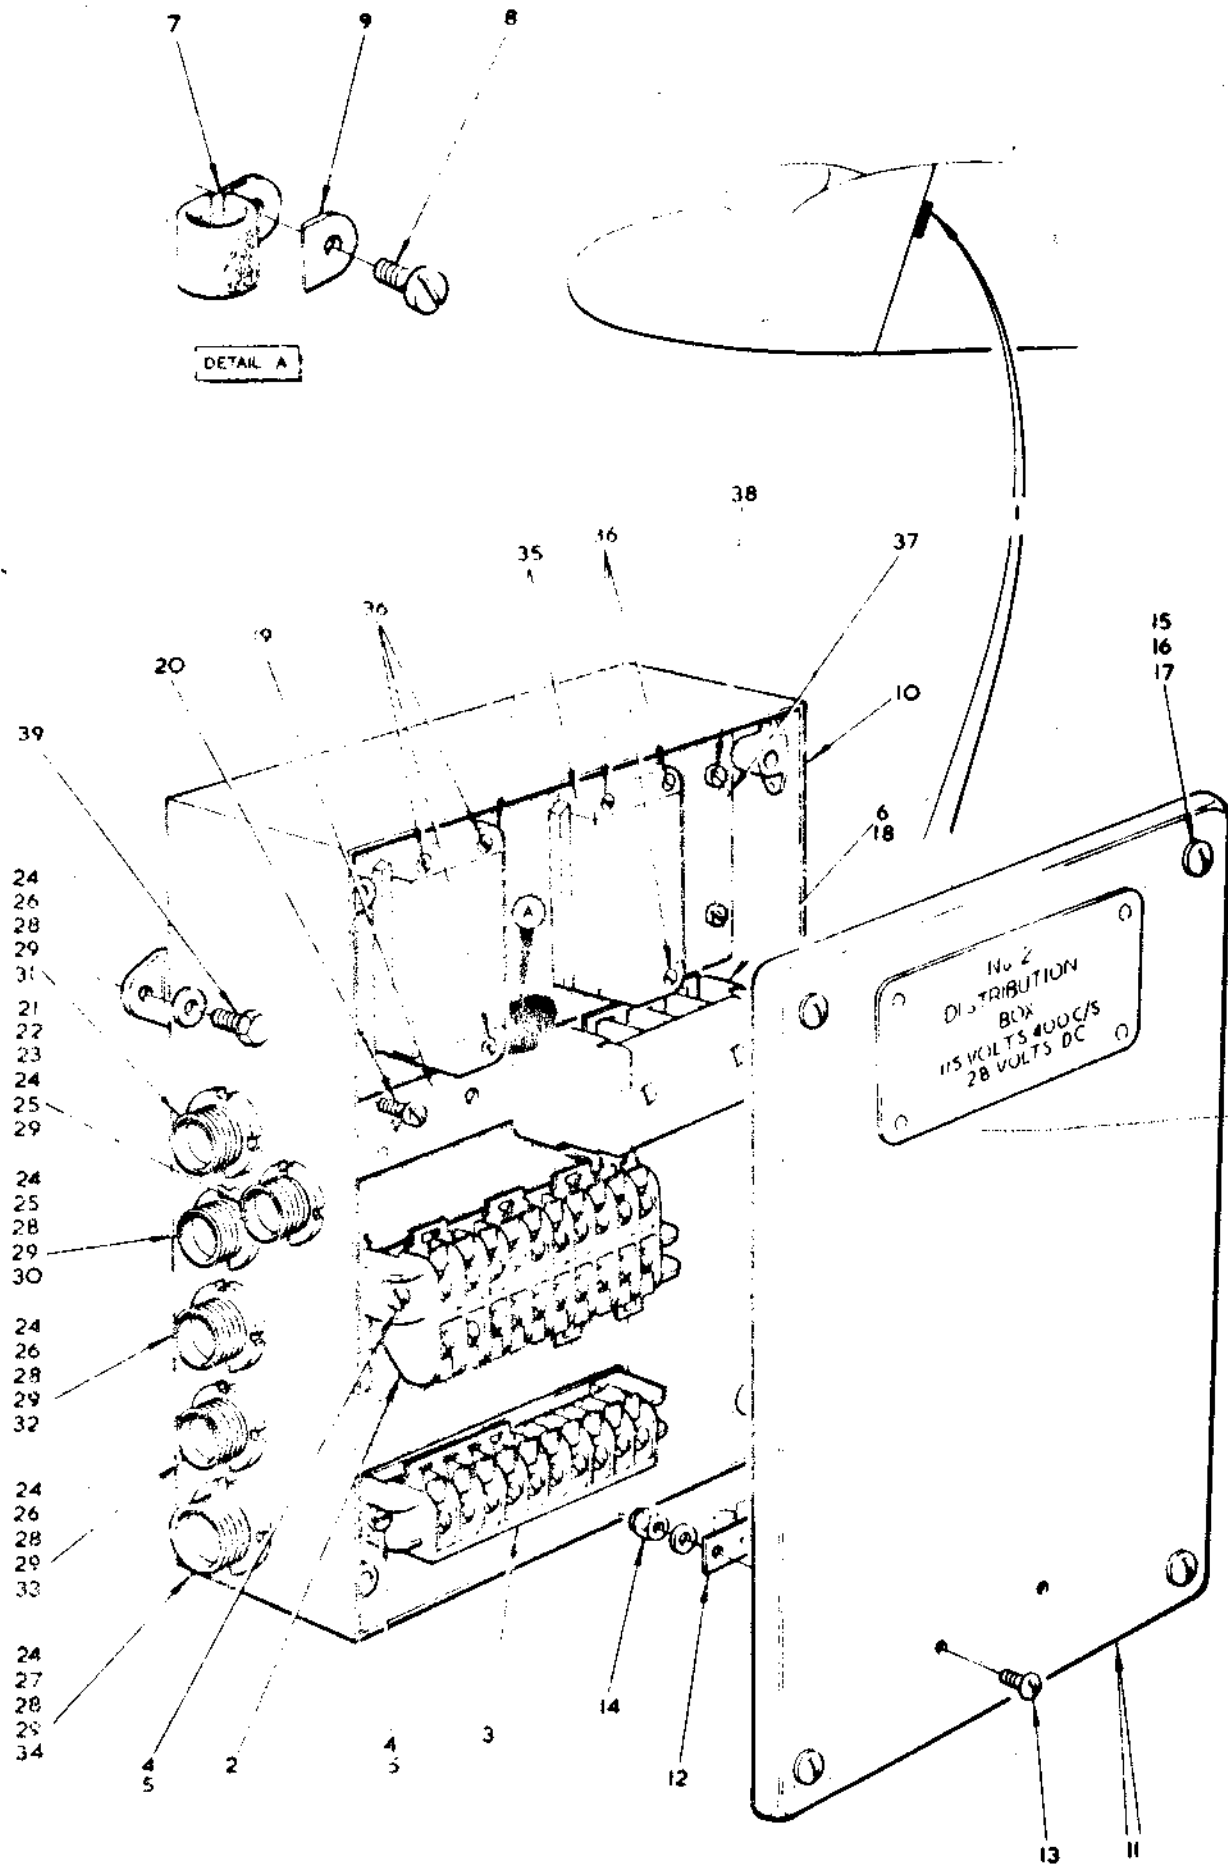


FIG.3 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

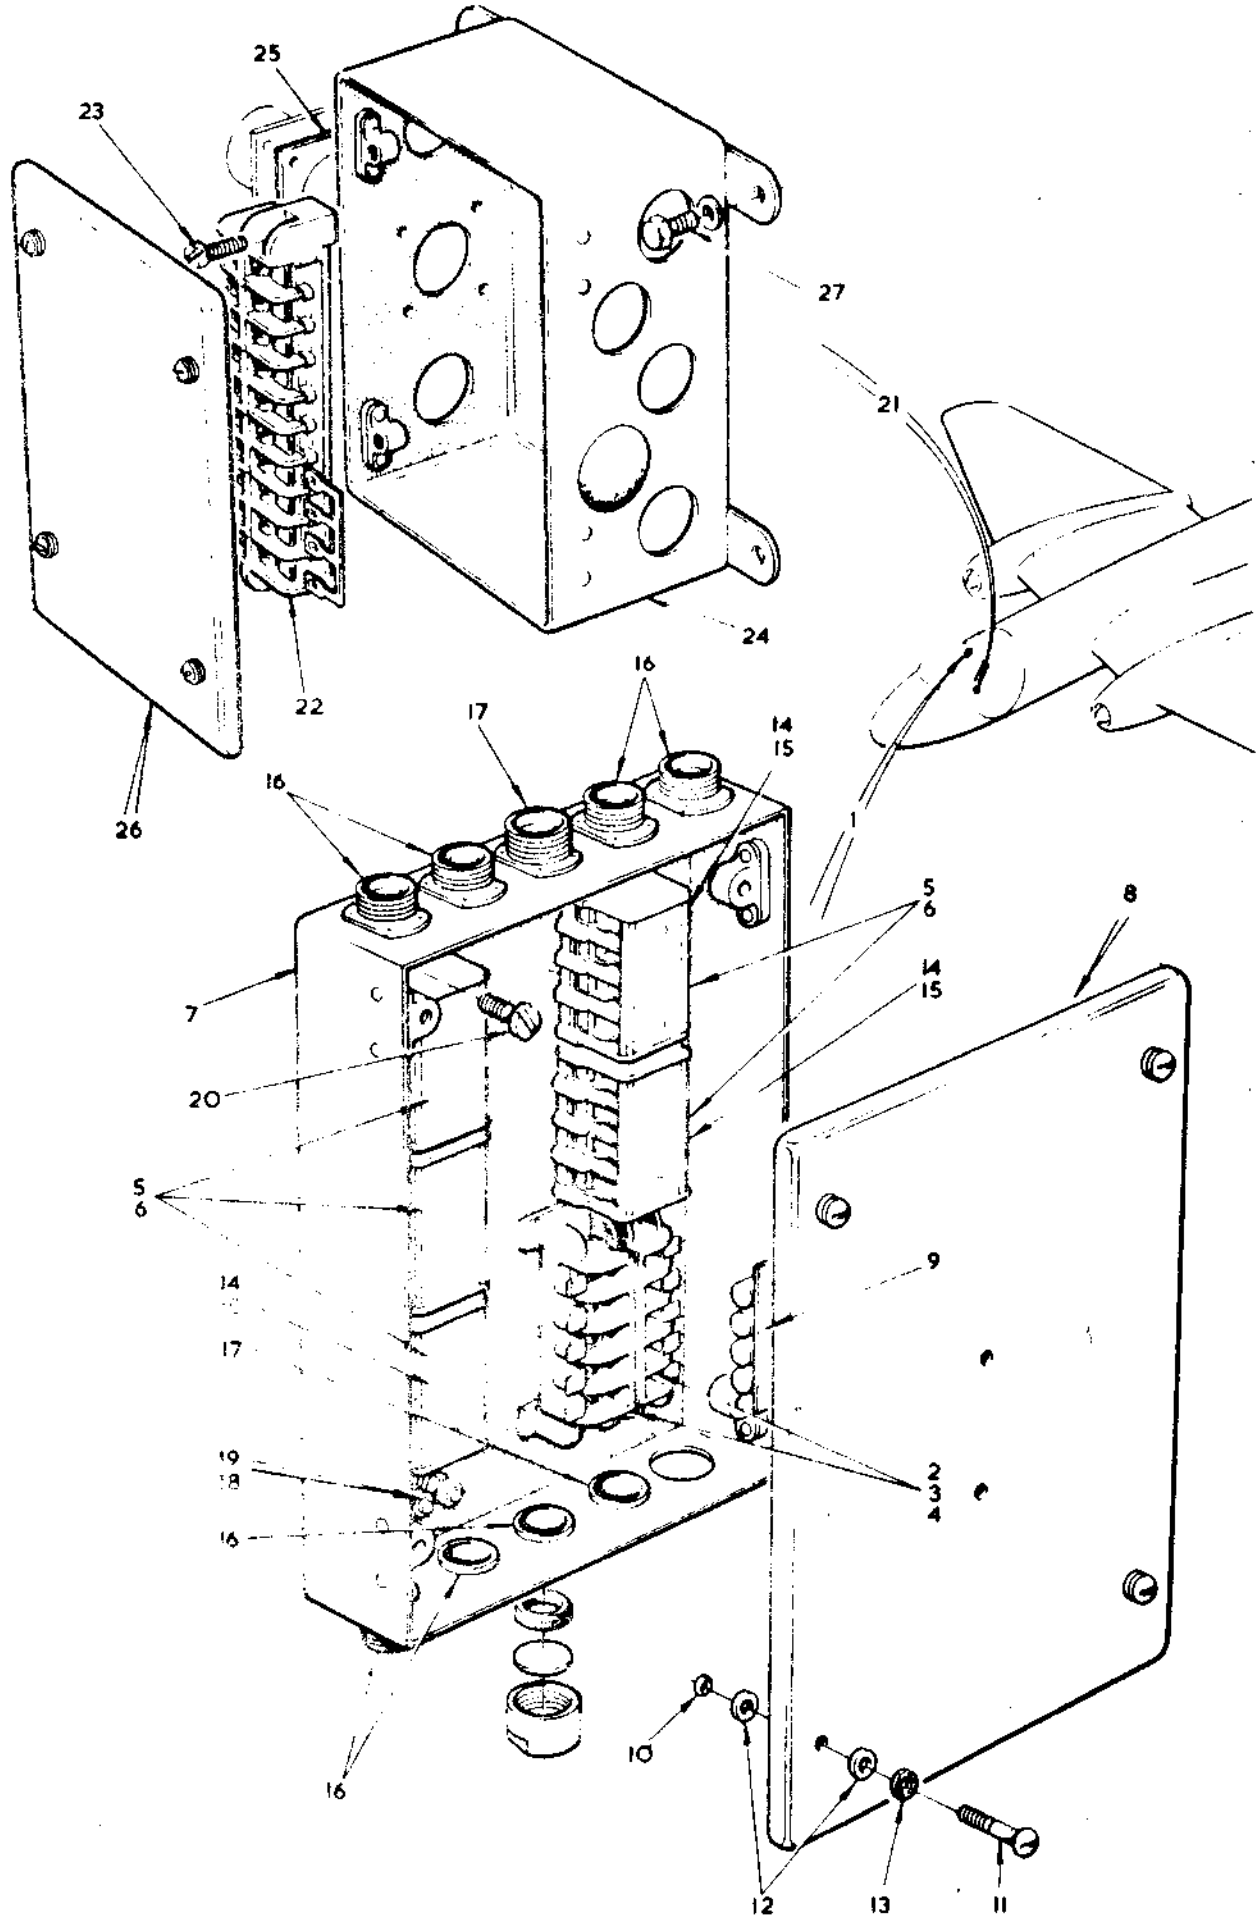


FIG. 4A ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

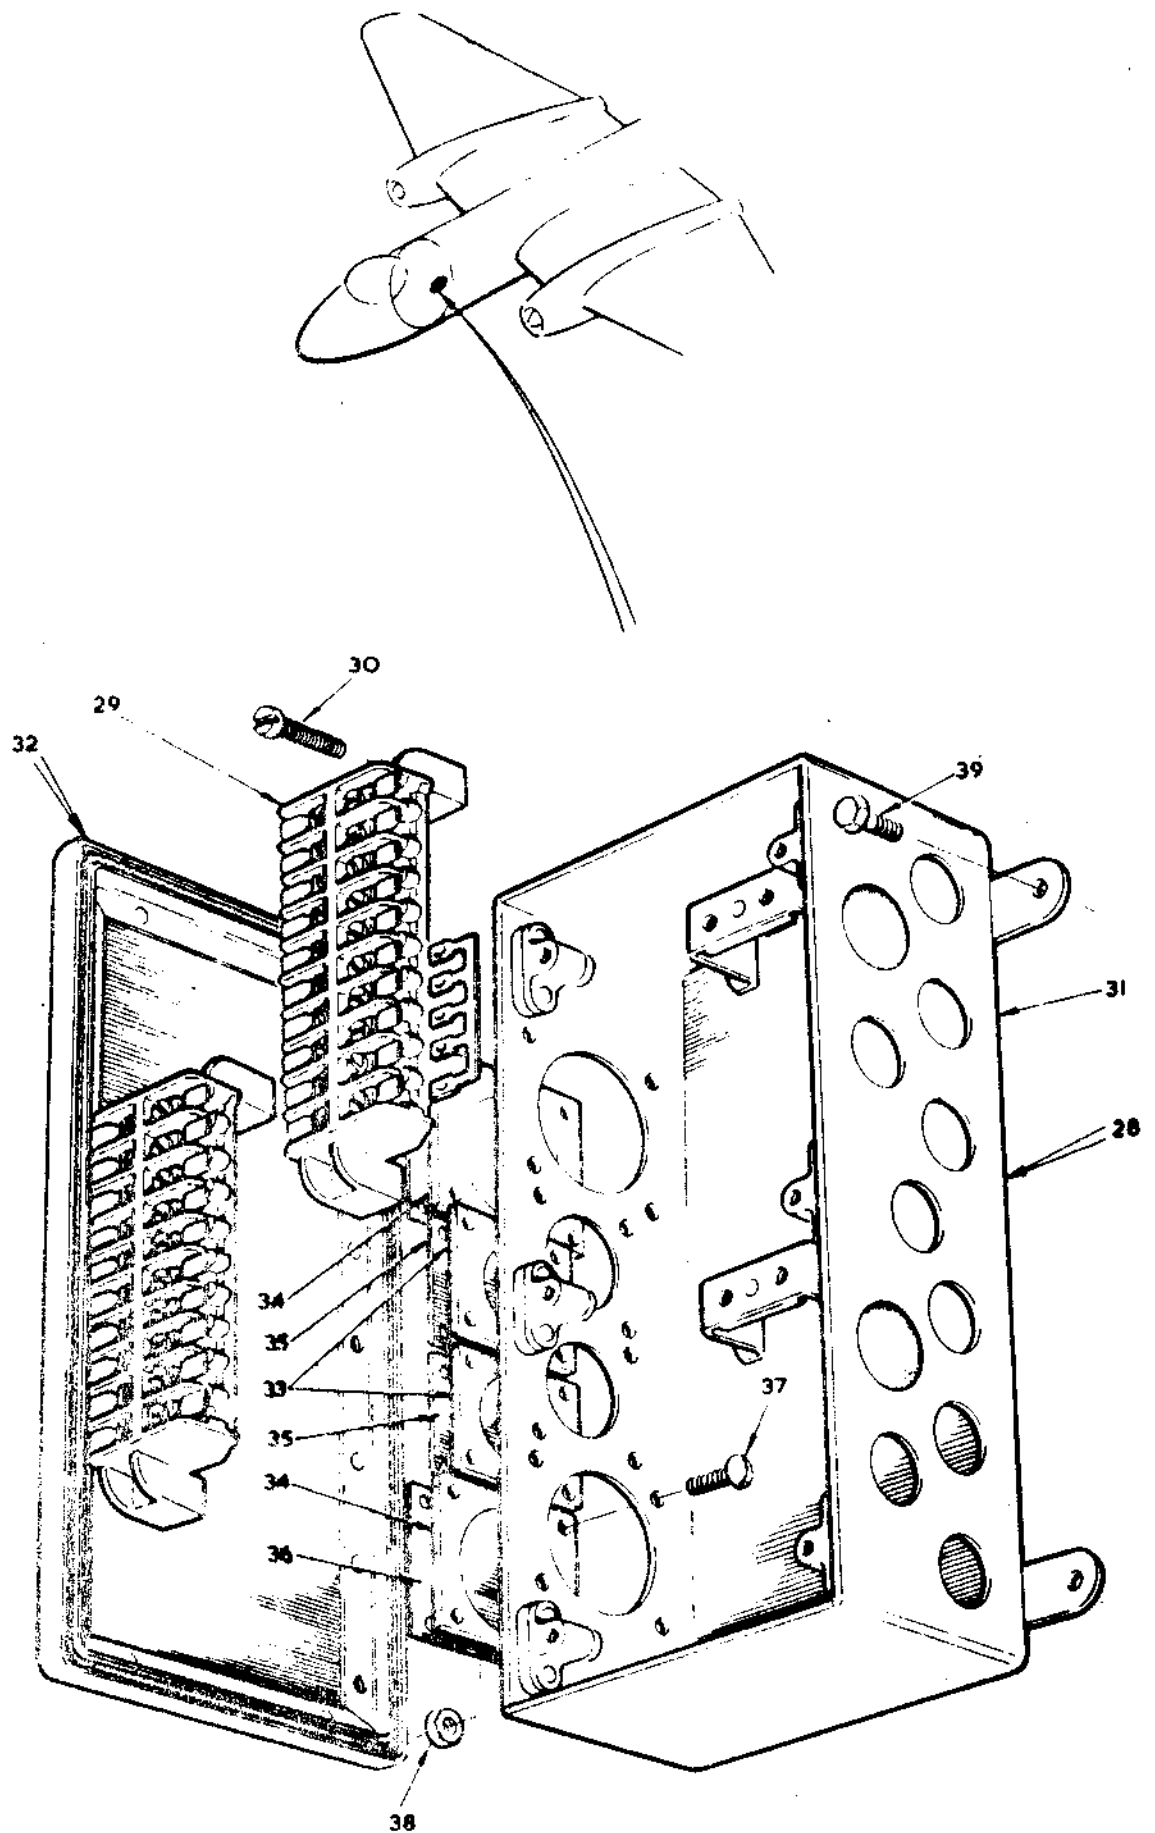


FIG. 4B ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT E8

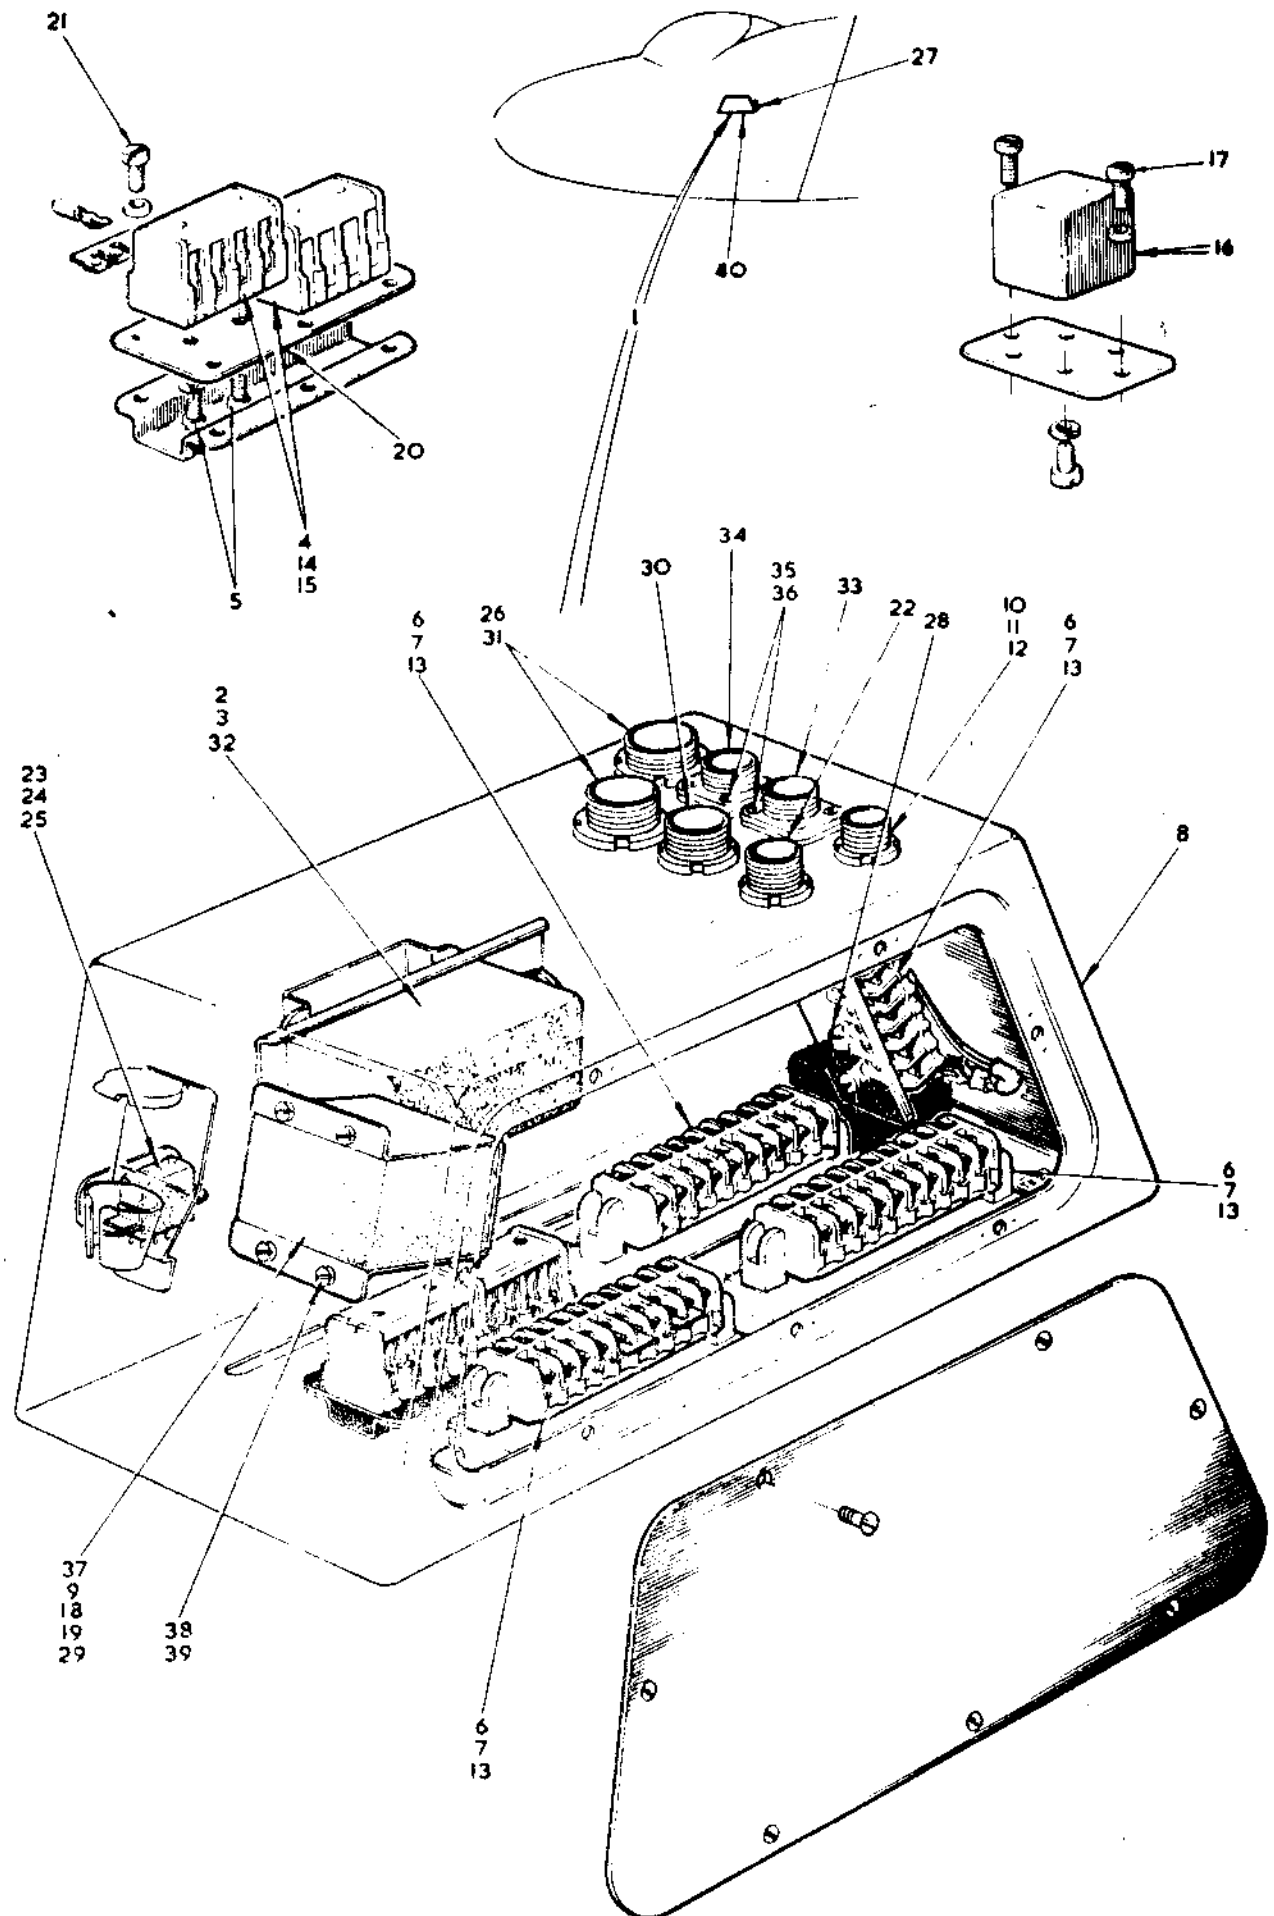


FIG.5 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

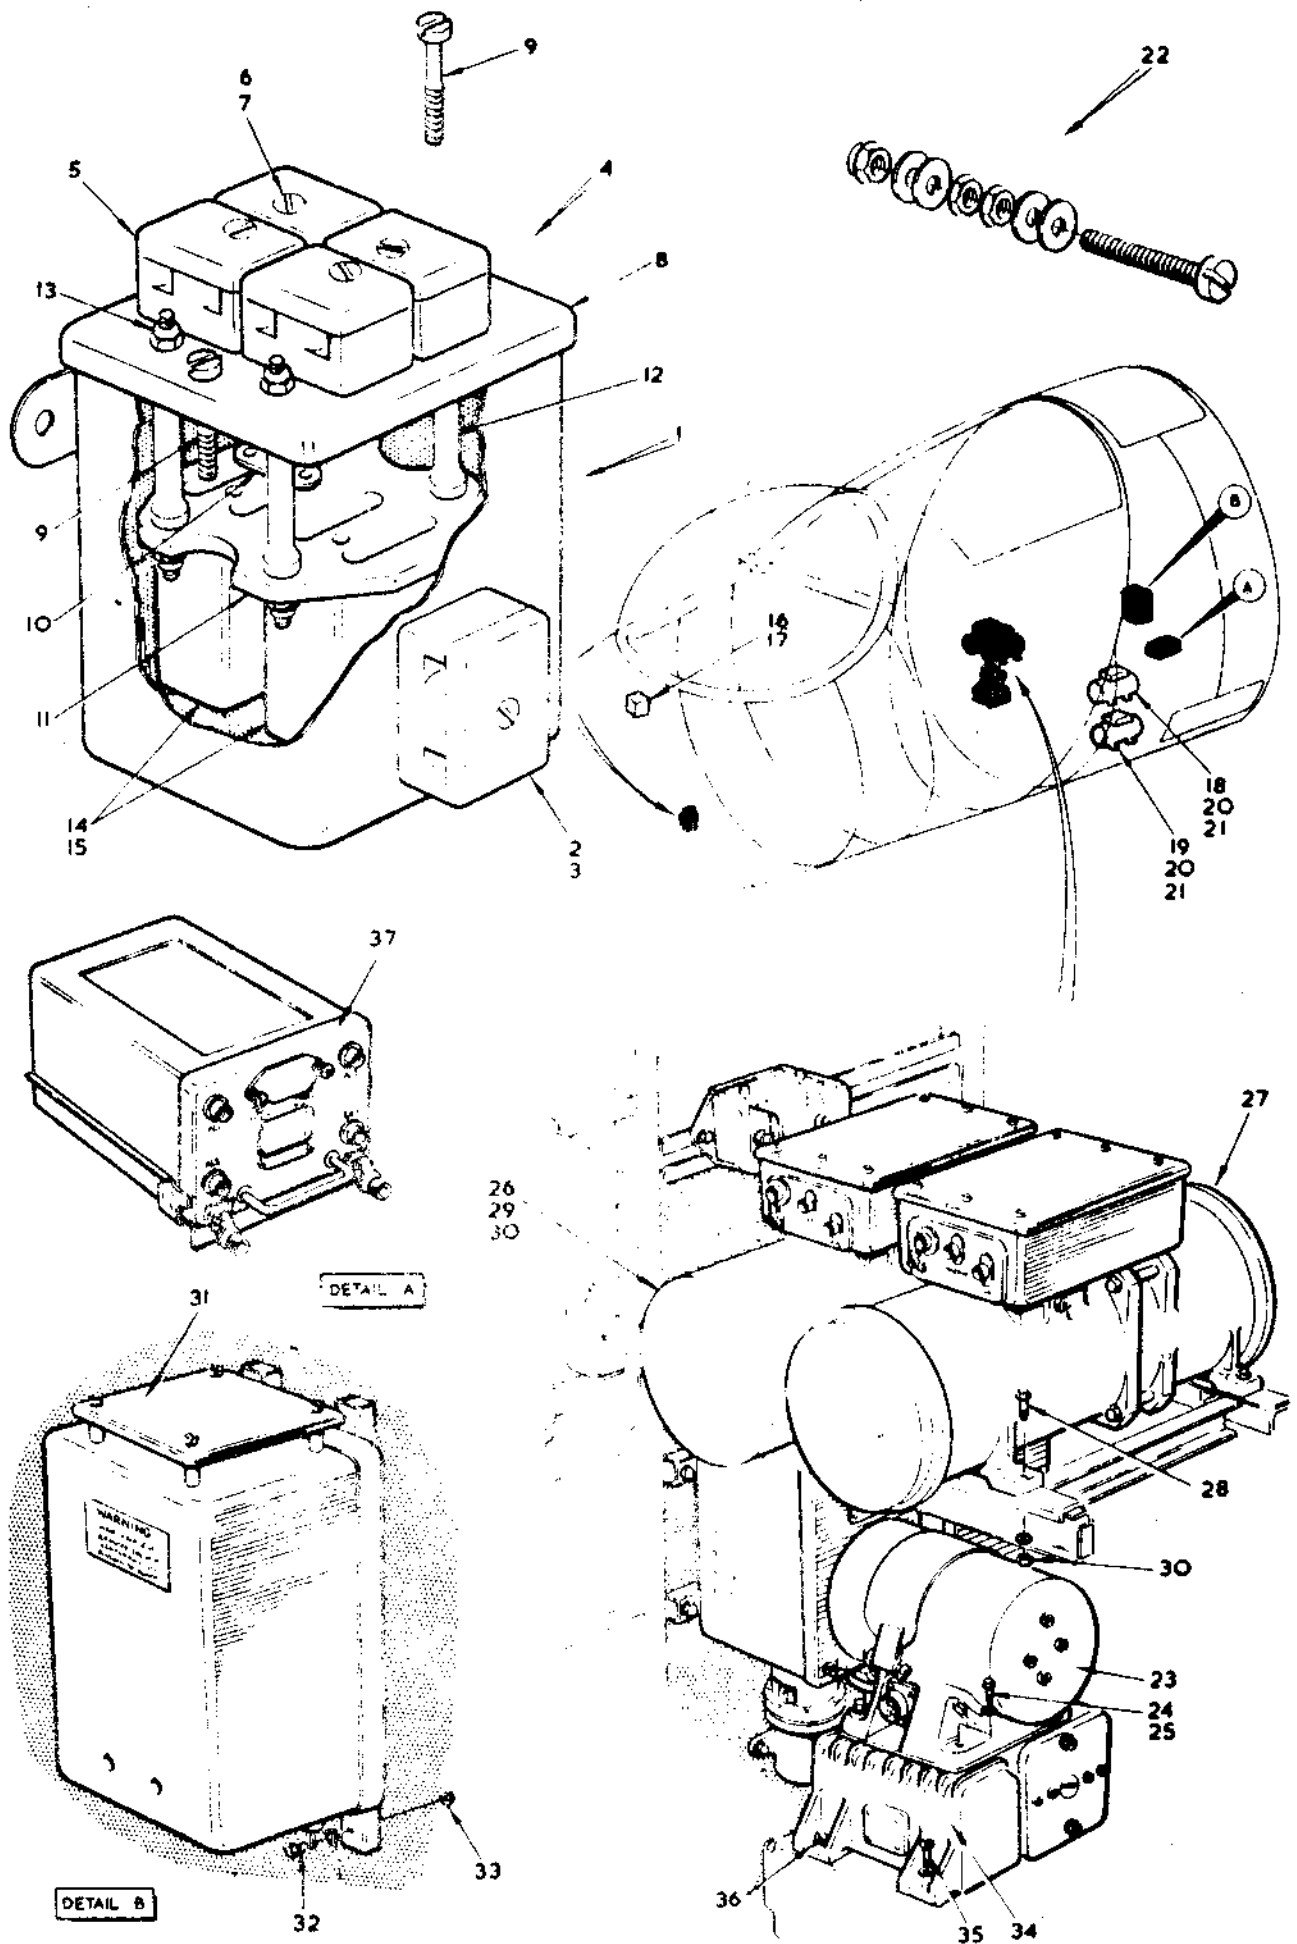


FIG. 6 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

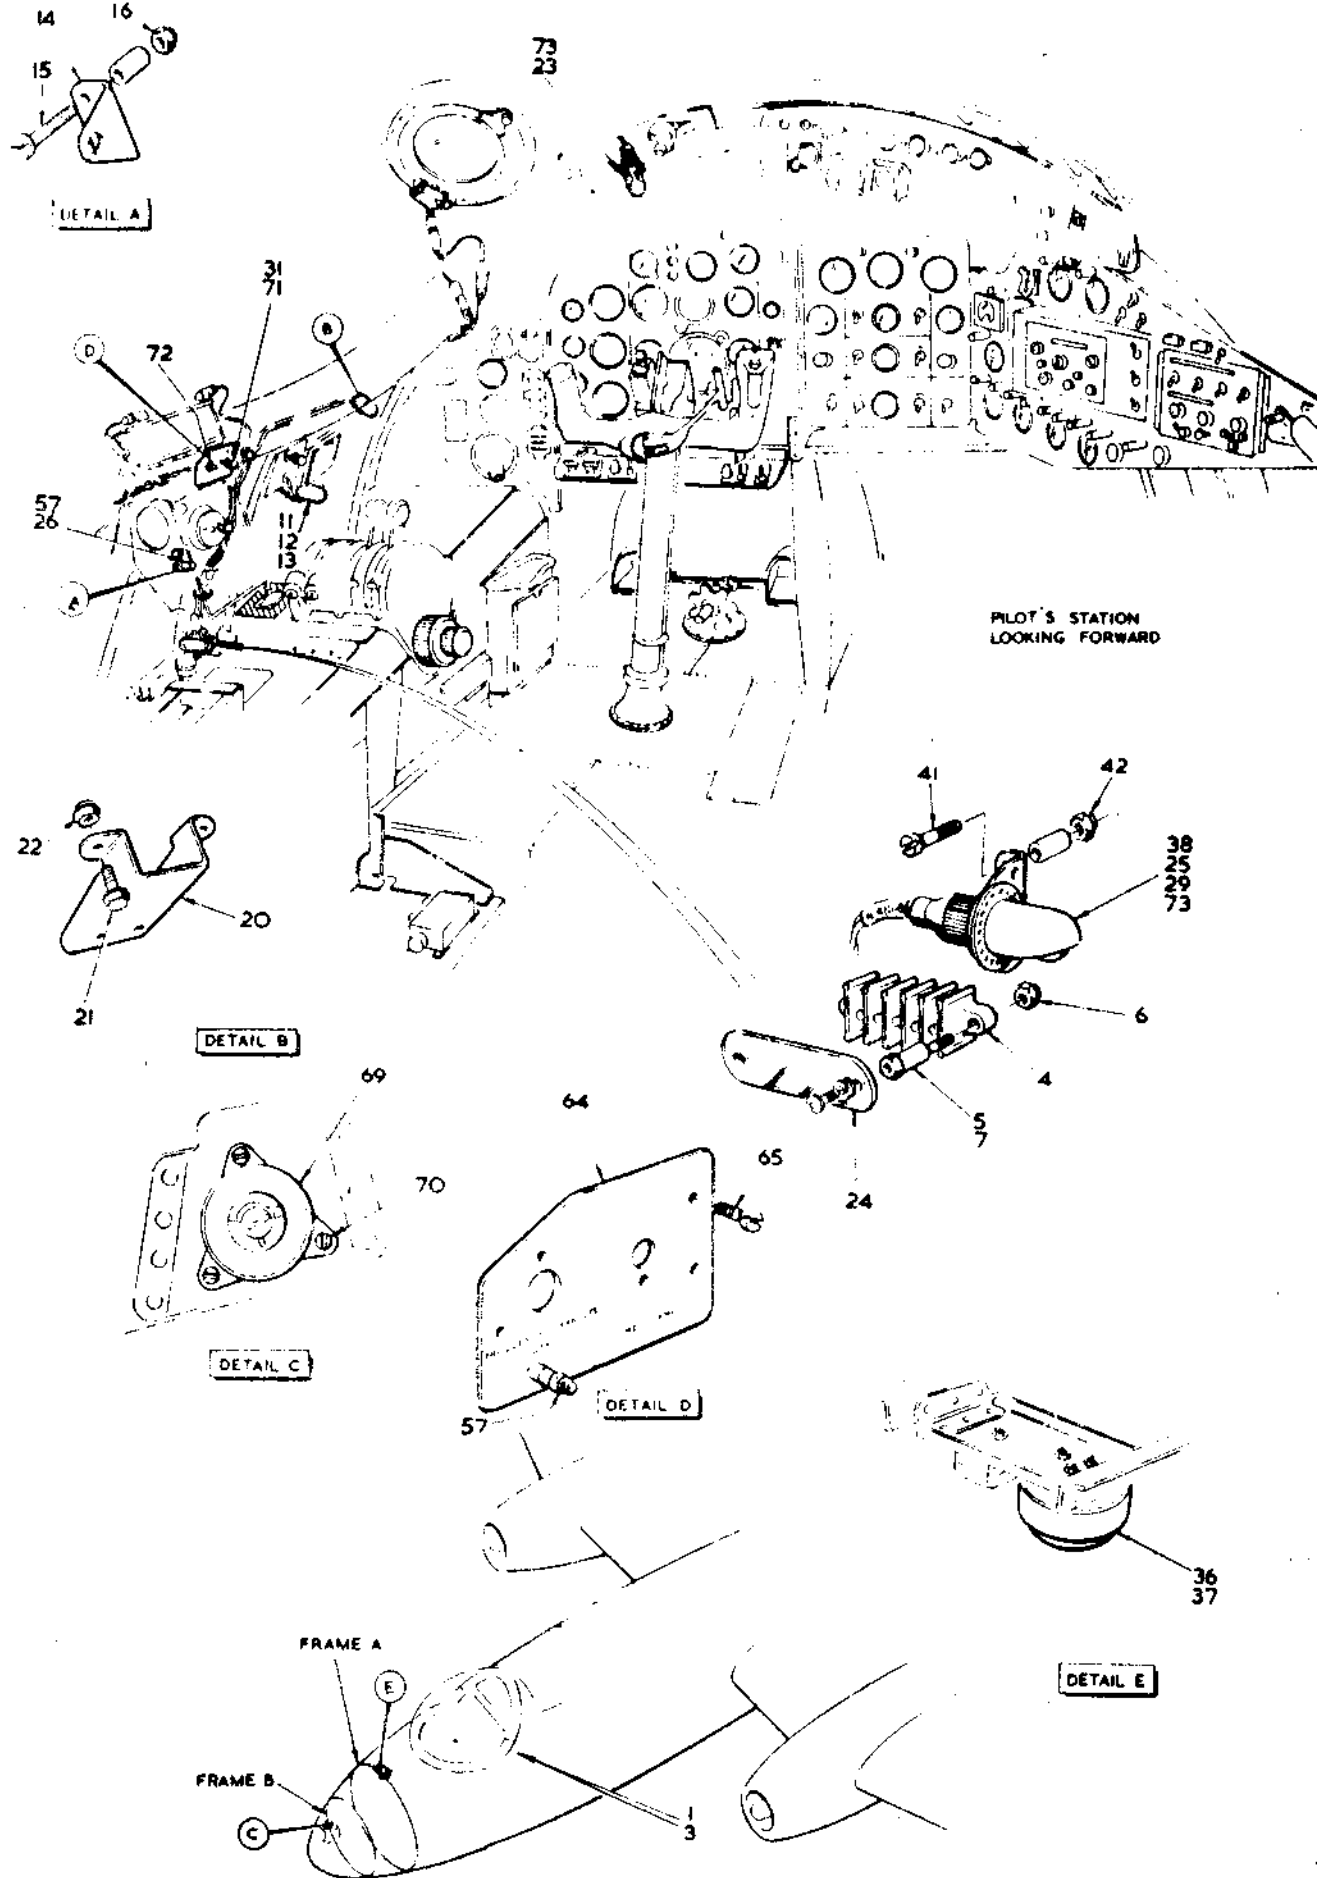



FIG. 7A ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT E6

NAVIGATOR'S STATION
LOOKING FORWARD

DETAIL A

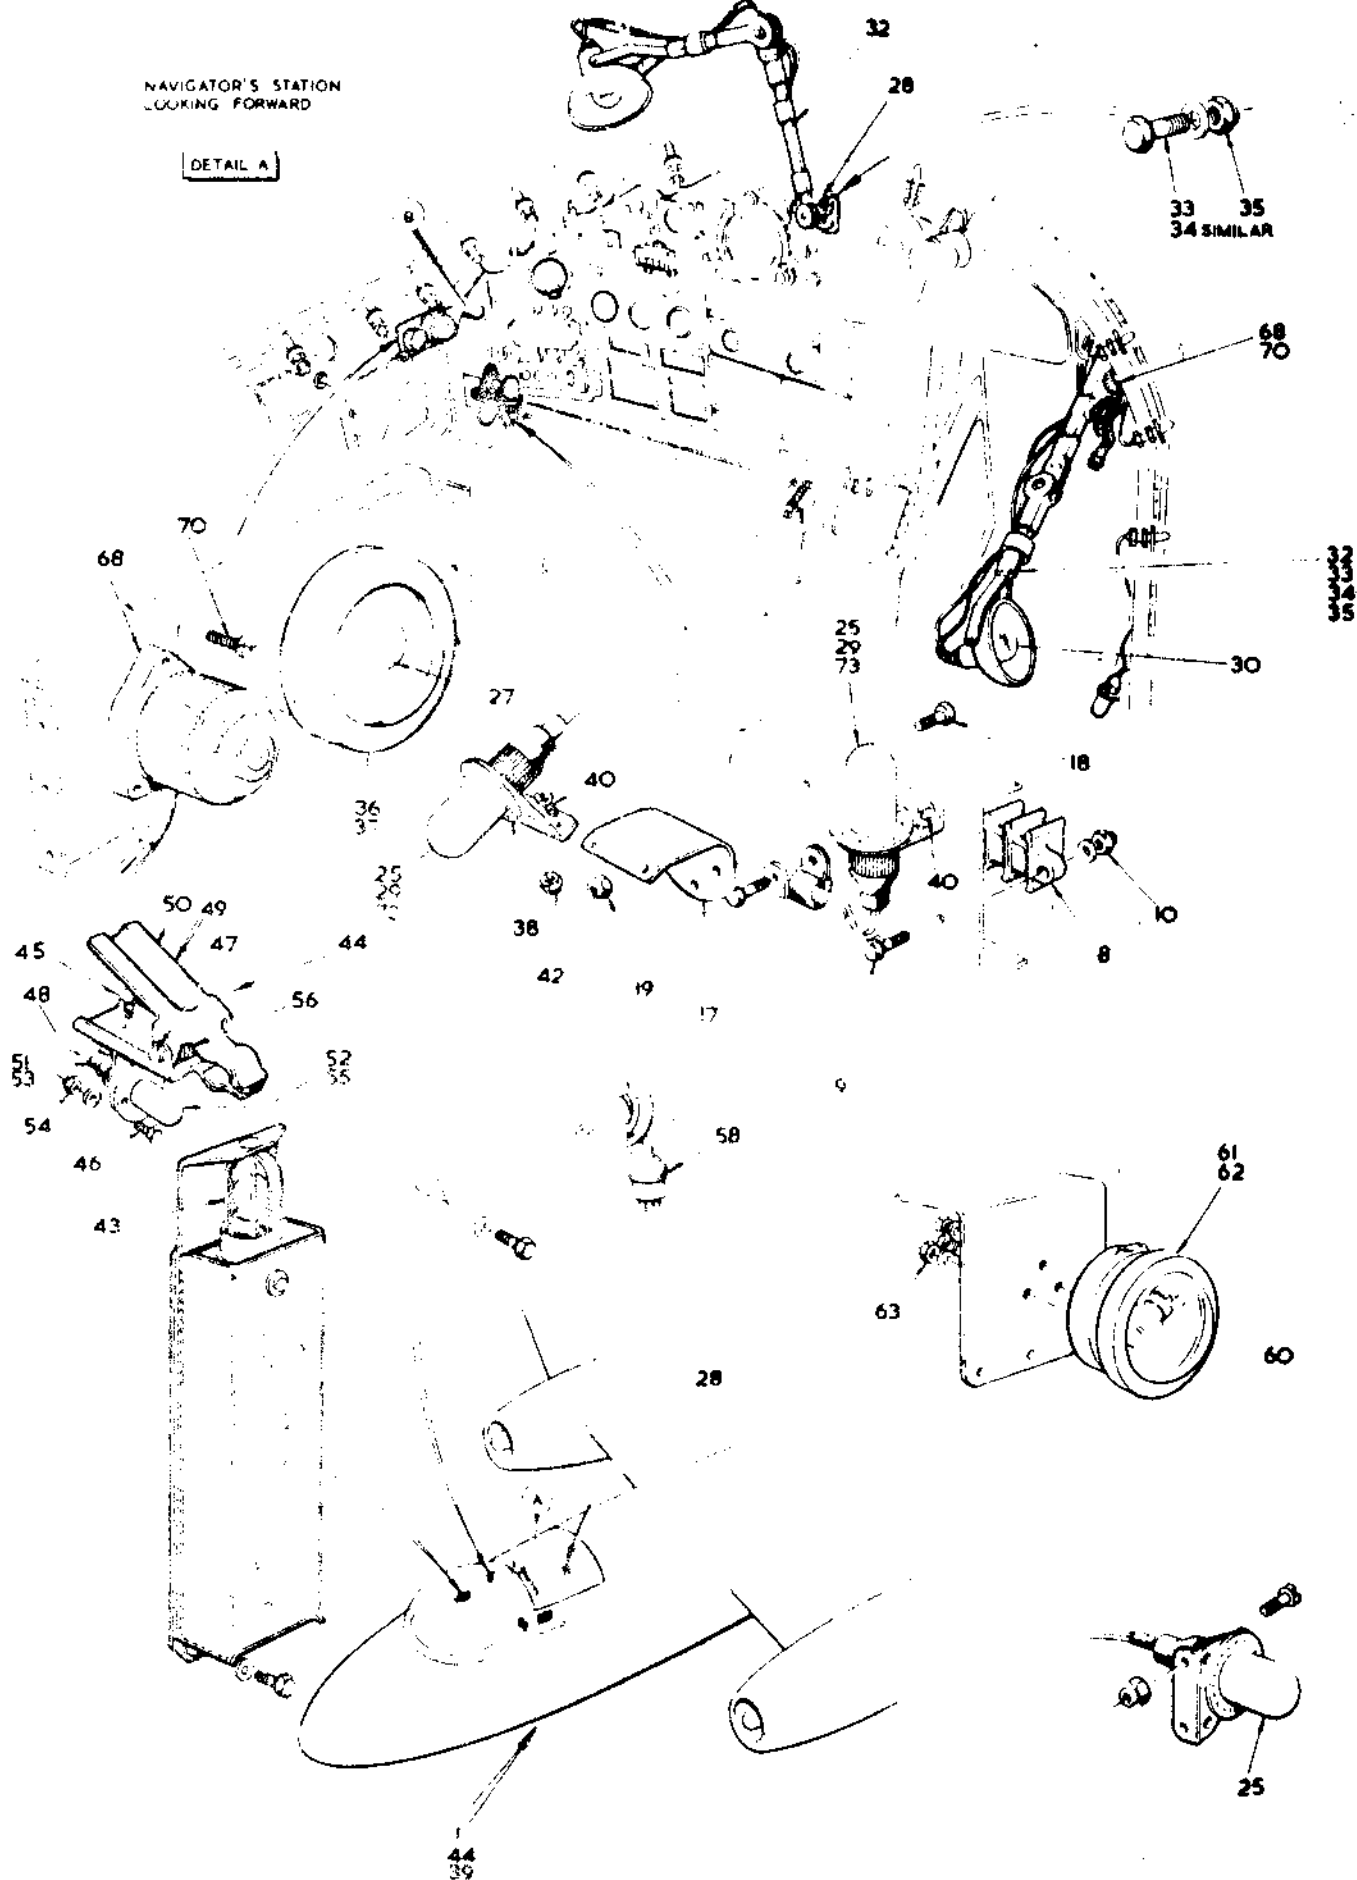

DETAIL B

FIG. 7B ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT 69

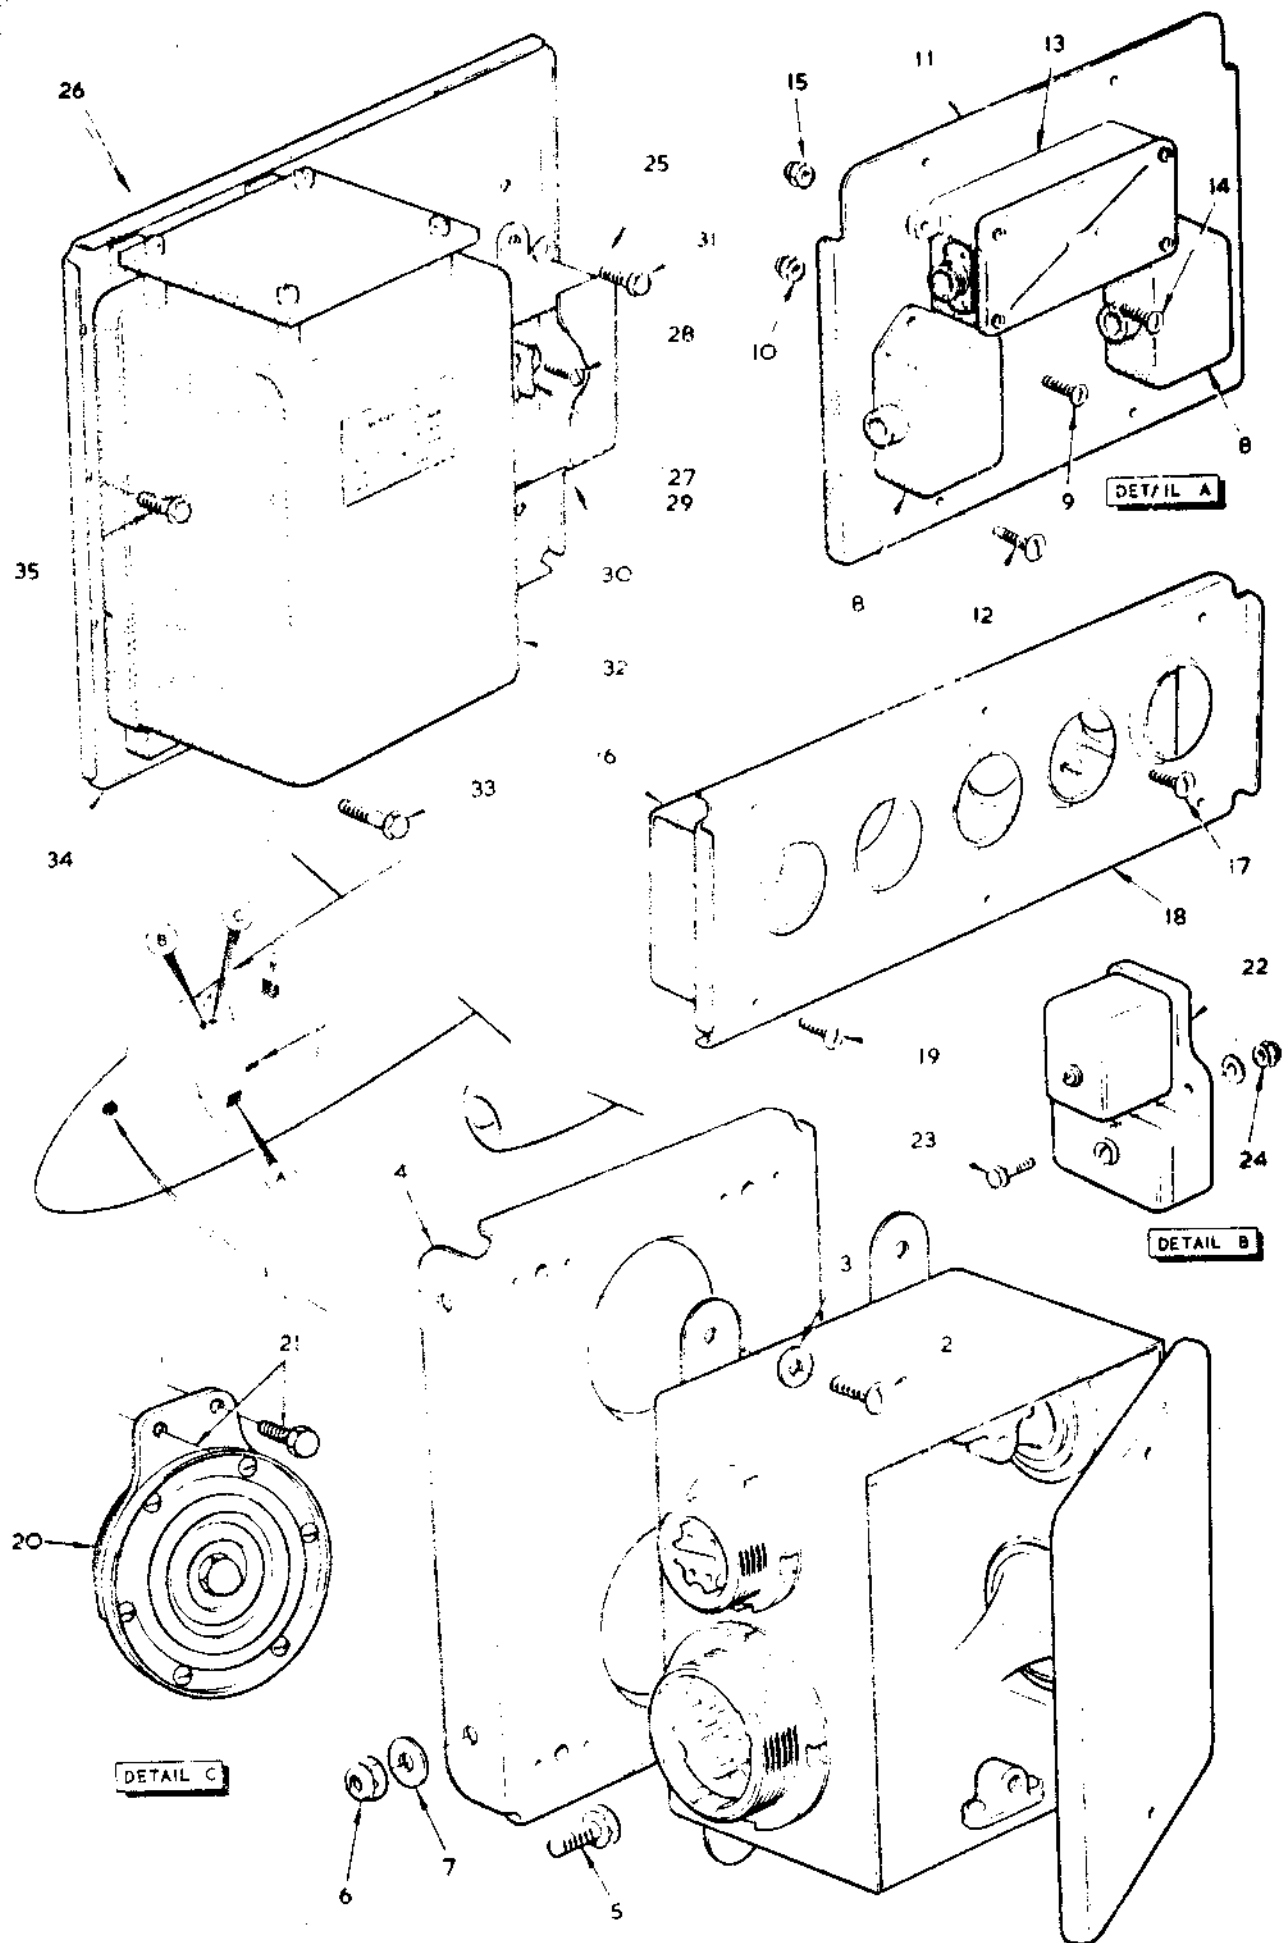


FIG. 8 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT. E8

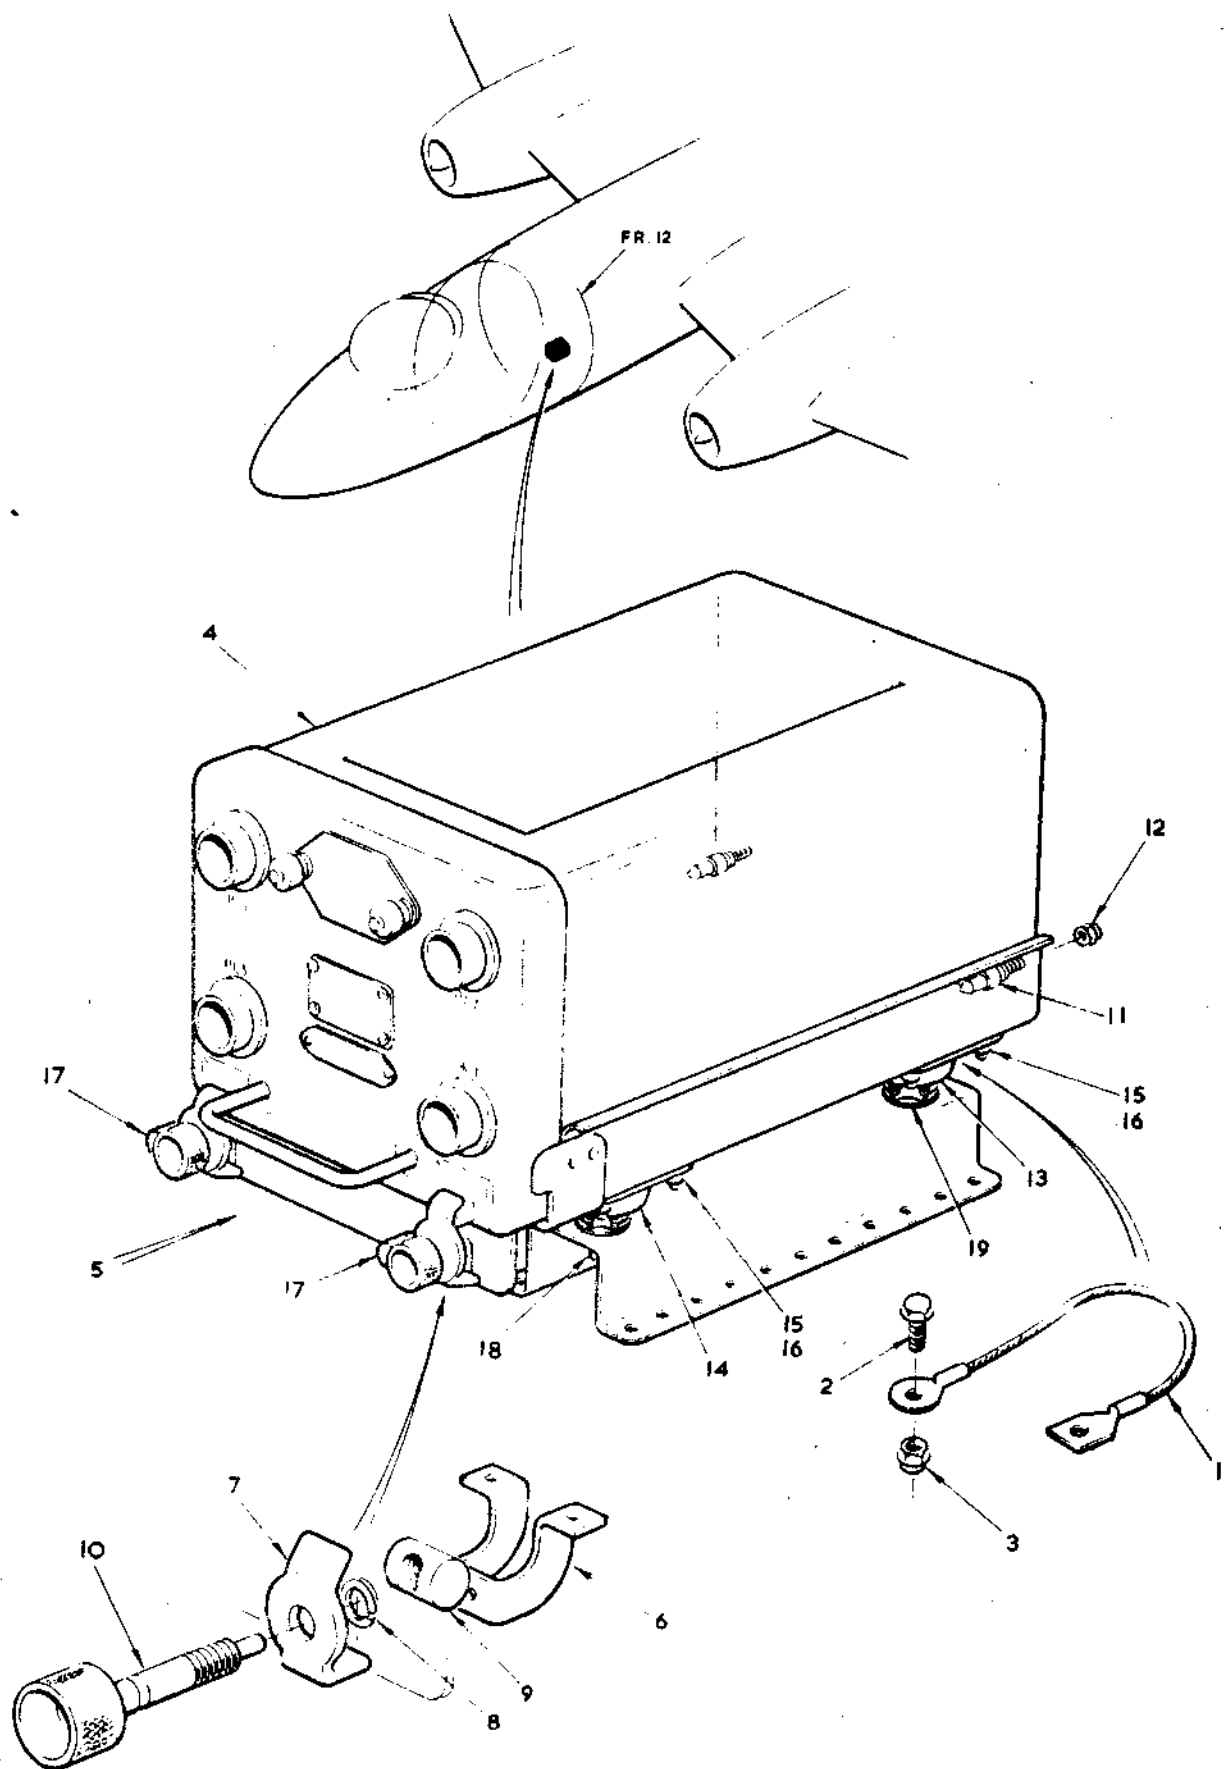


FIG.9 ELECTRICAL EQUIPMENT FRONT FUSELAGE

CODE A

SECT. EB

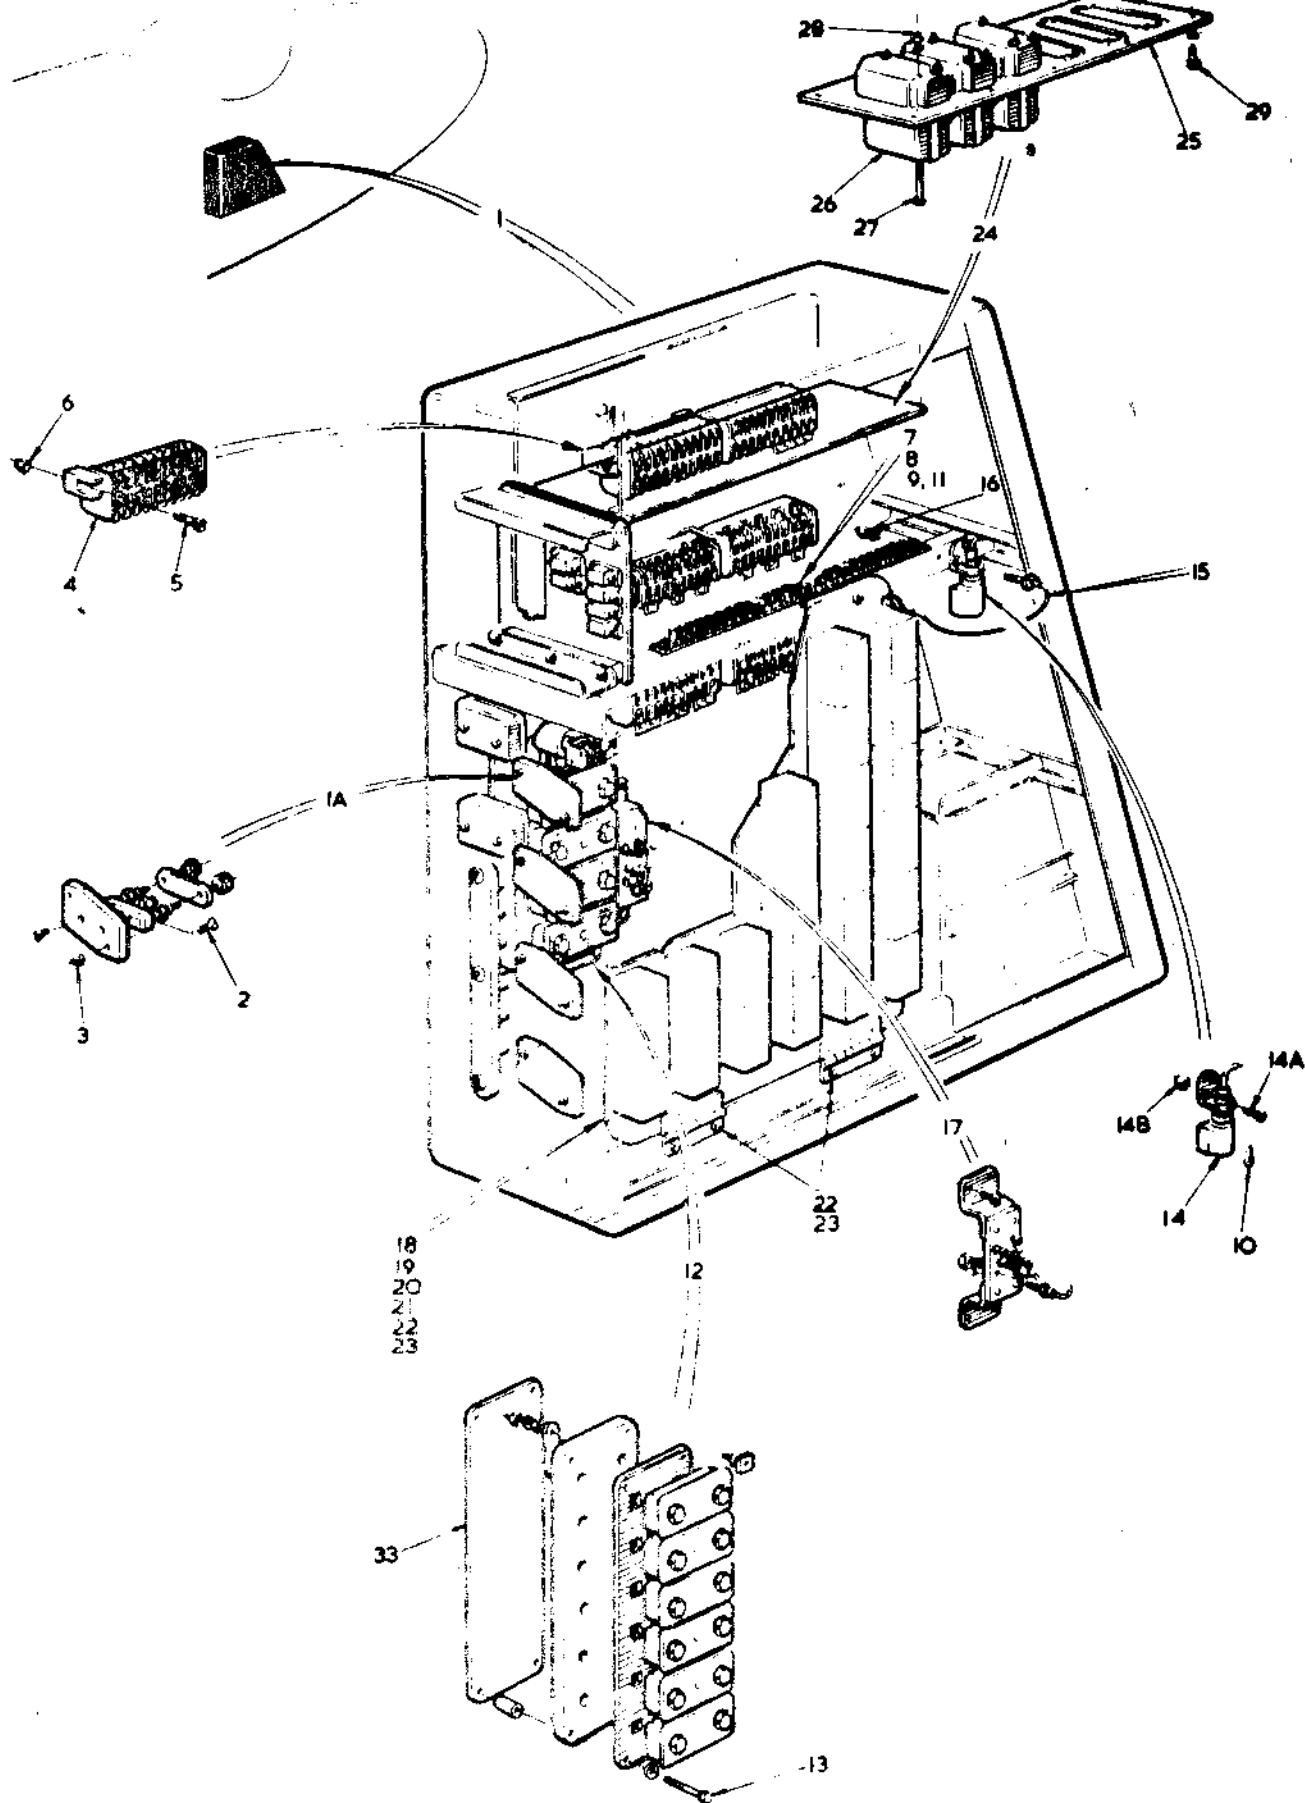


FIG. 10A ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

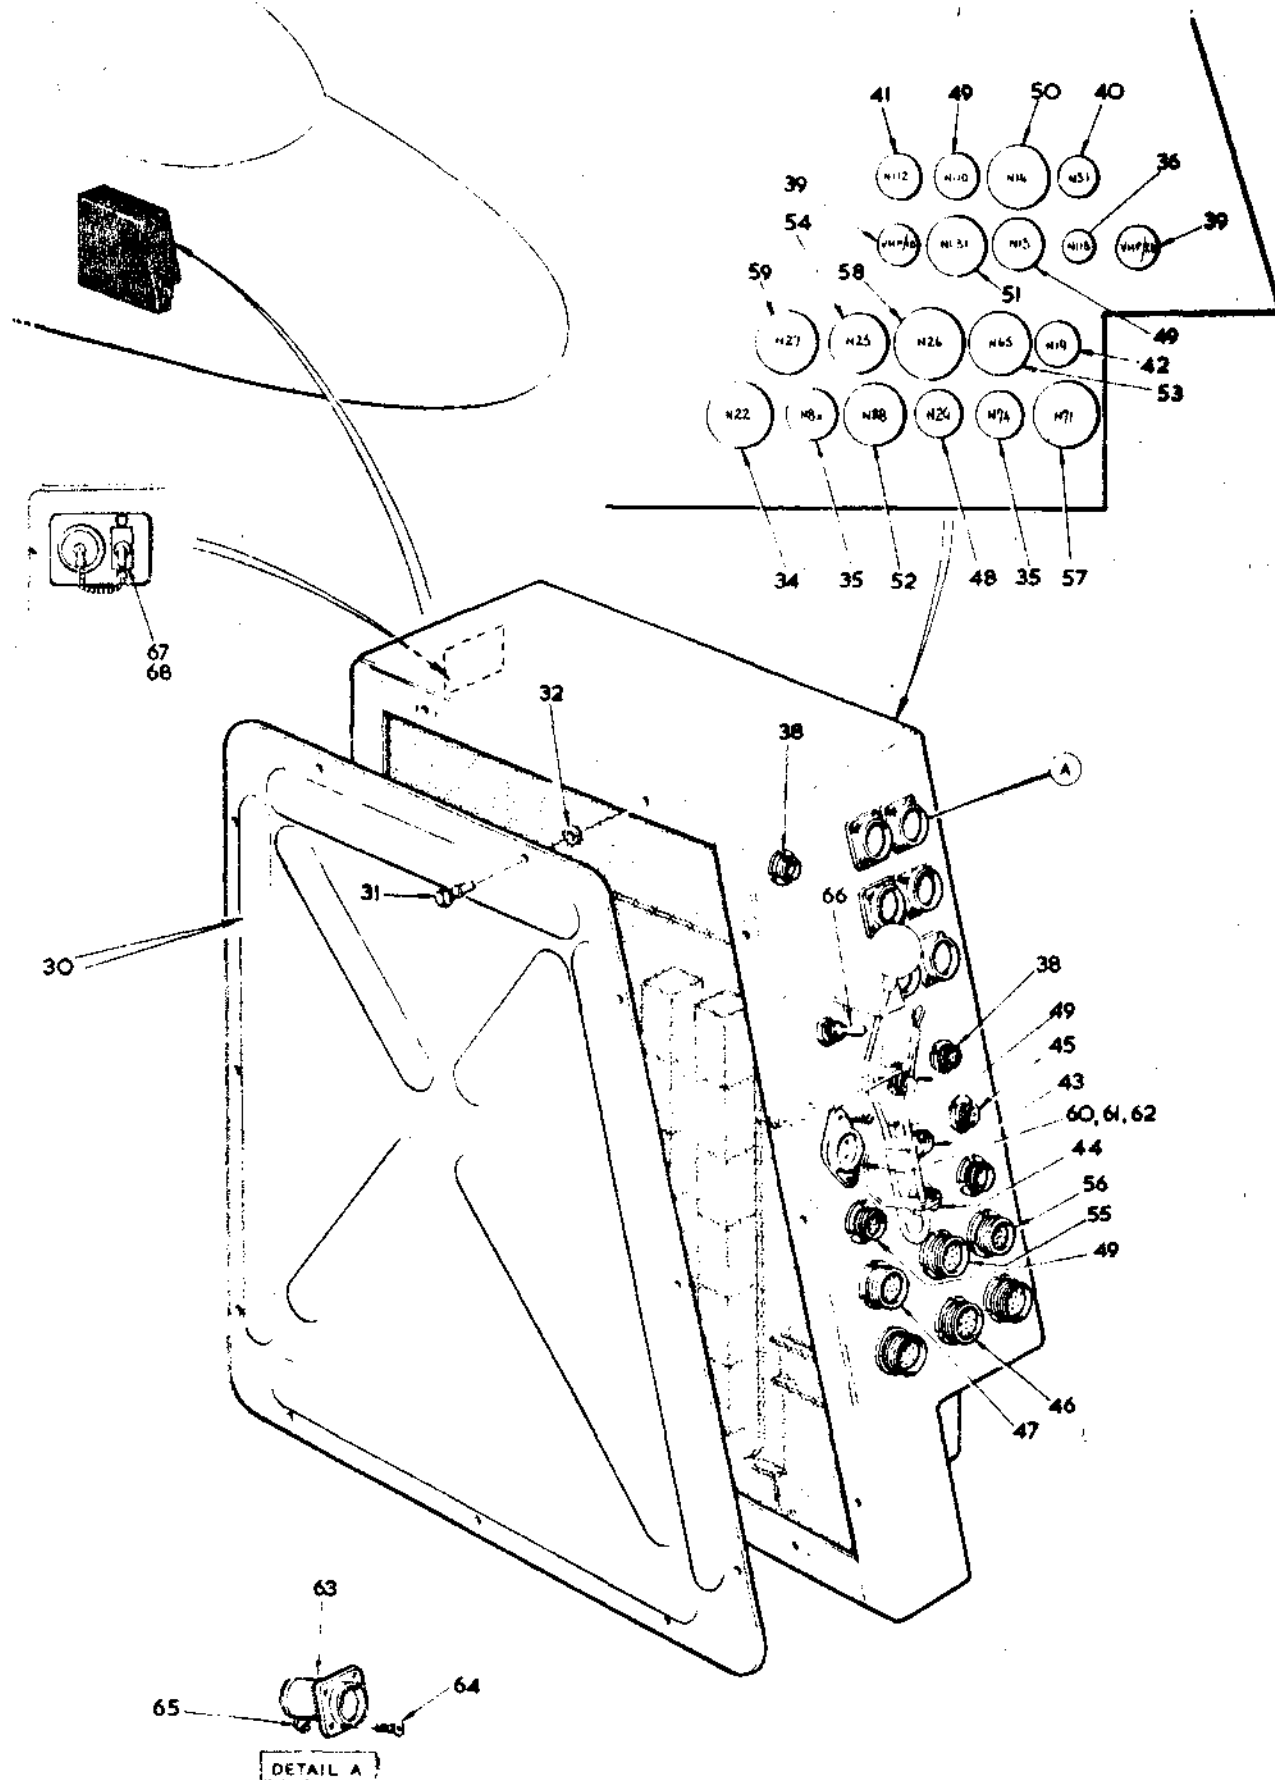


FIG. 10B ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

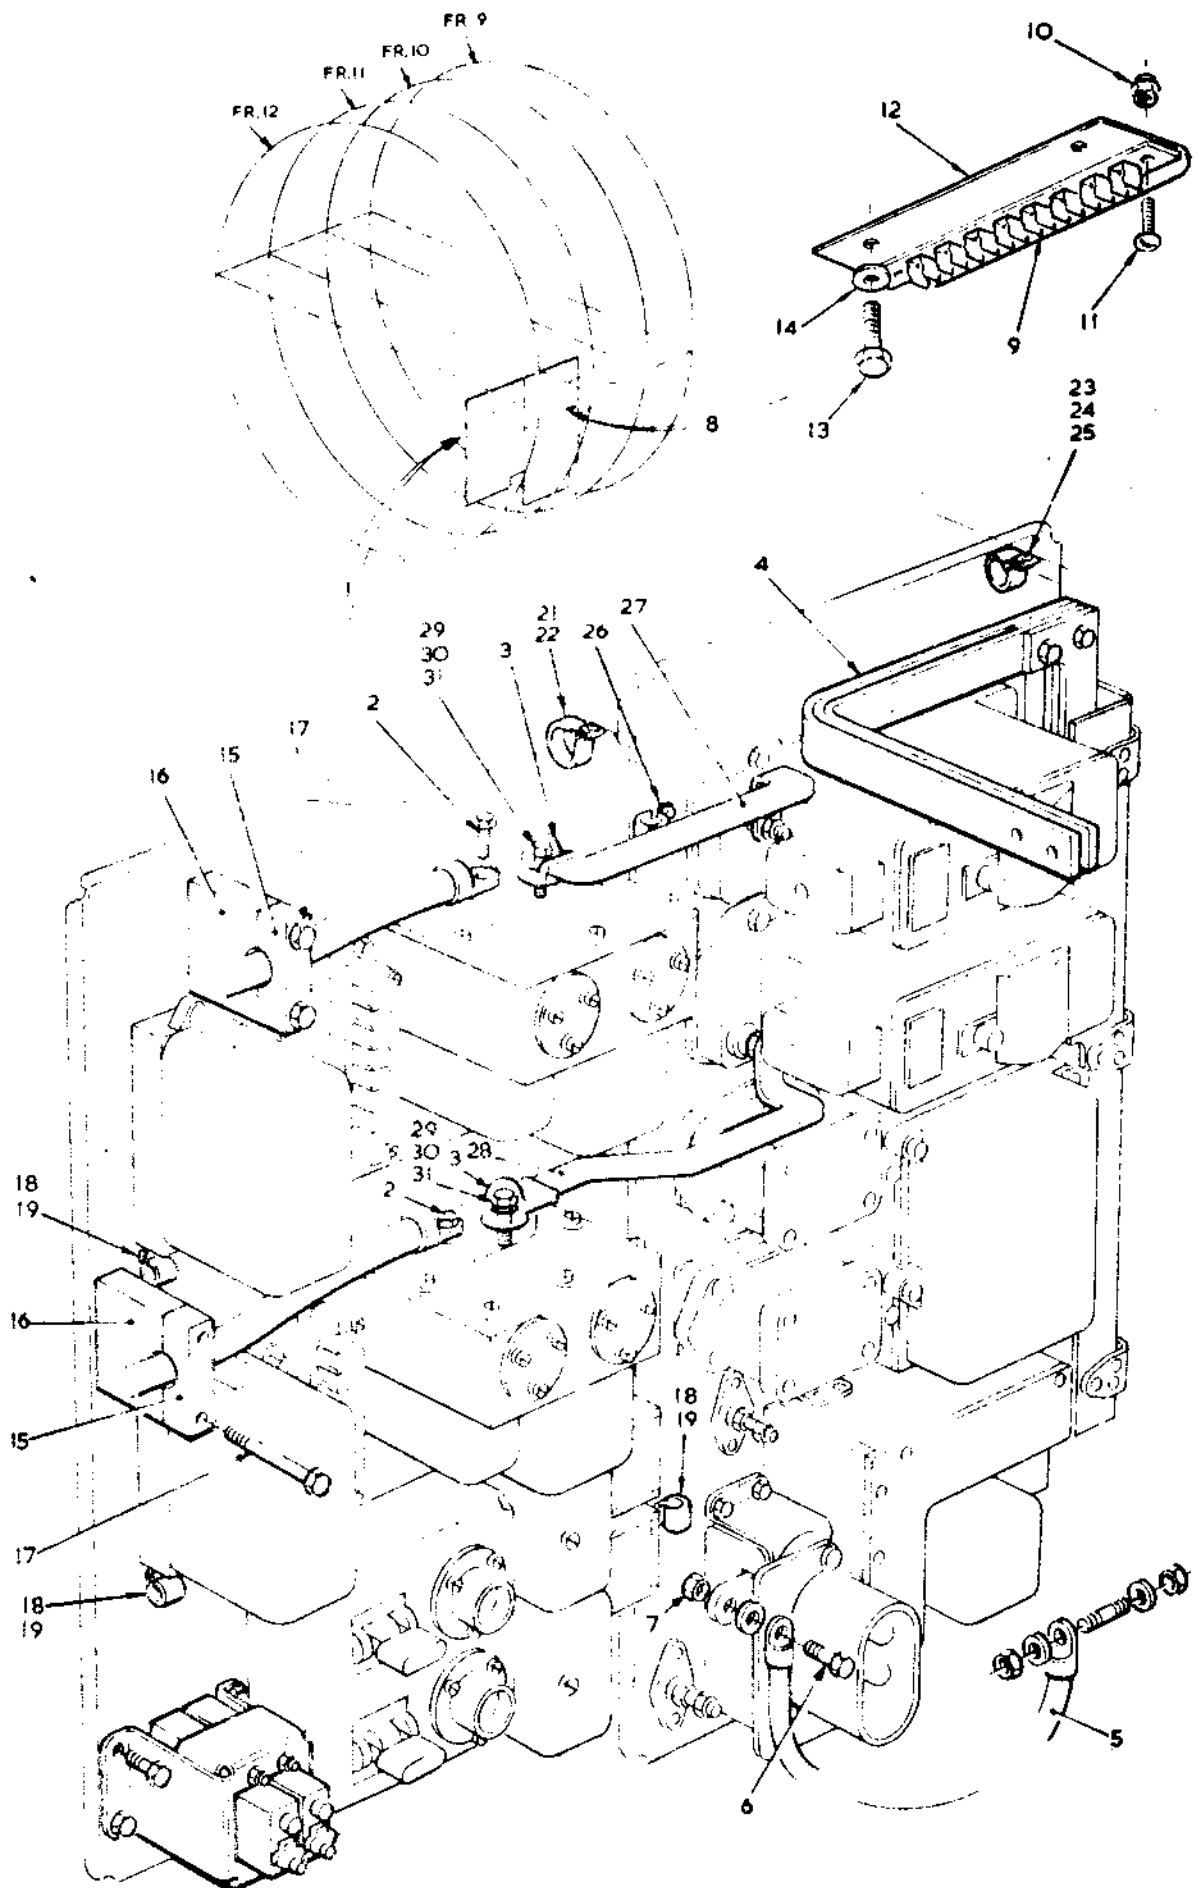


FIG. 11 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT. EB

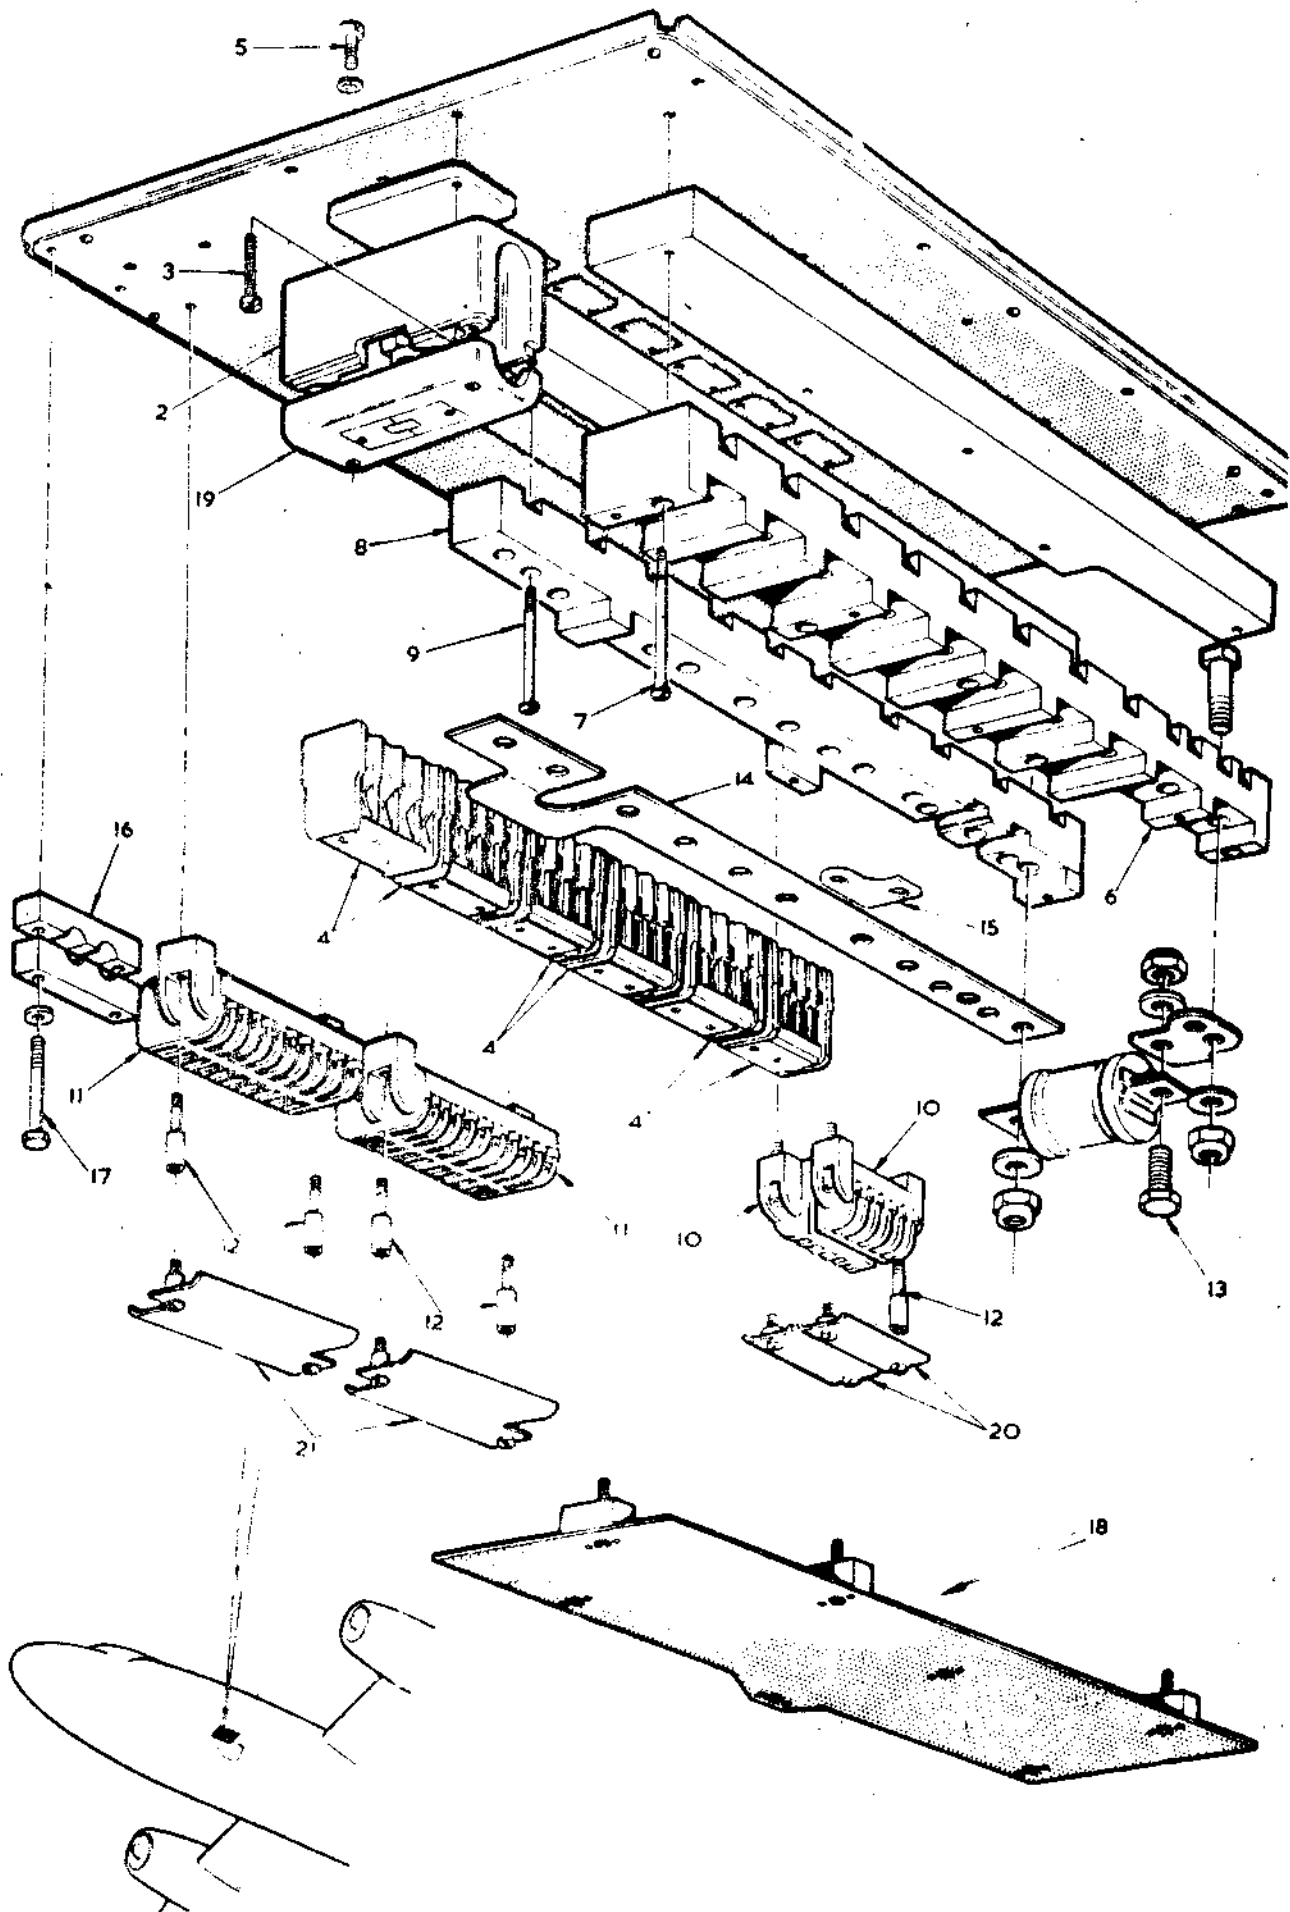


FIG.12 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT 68

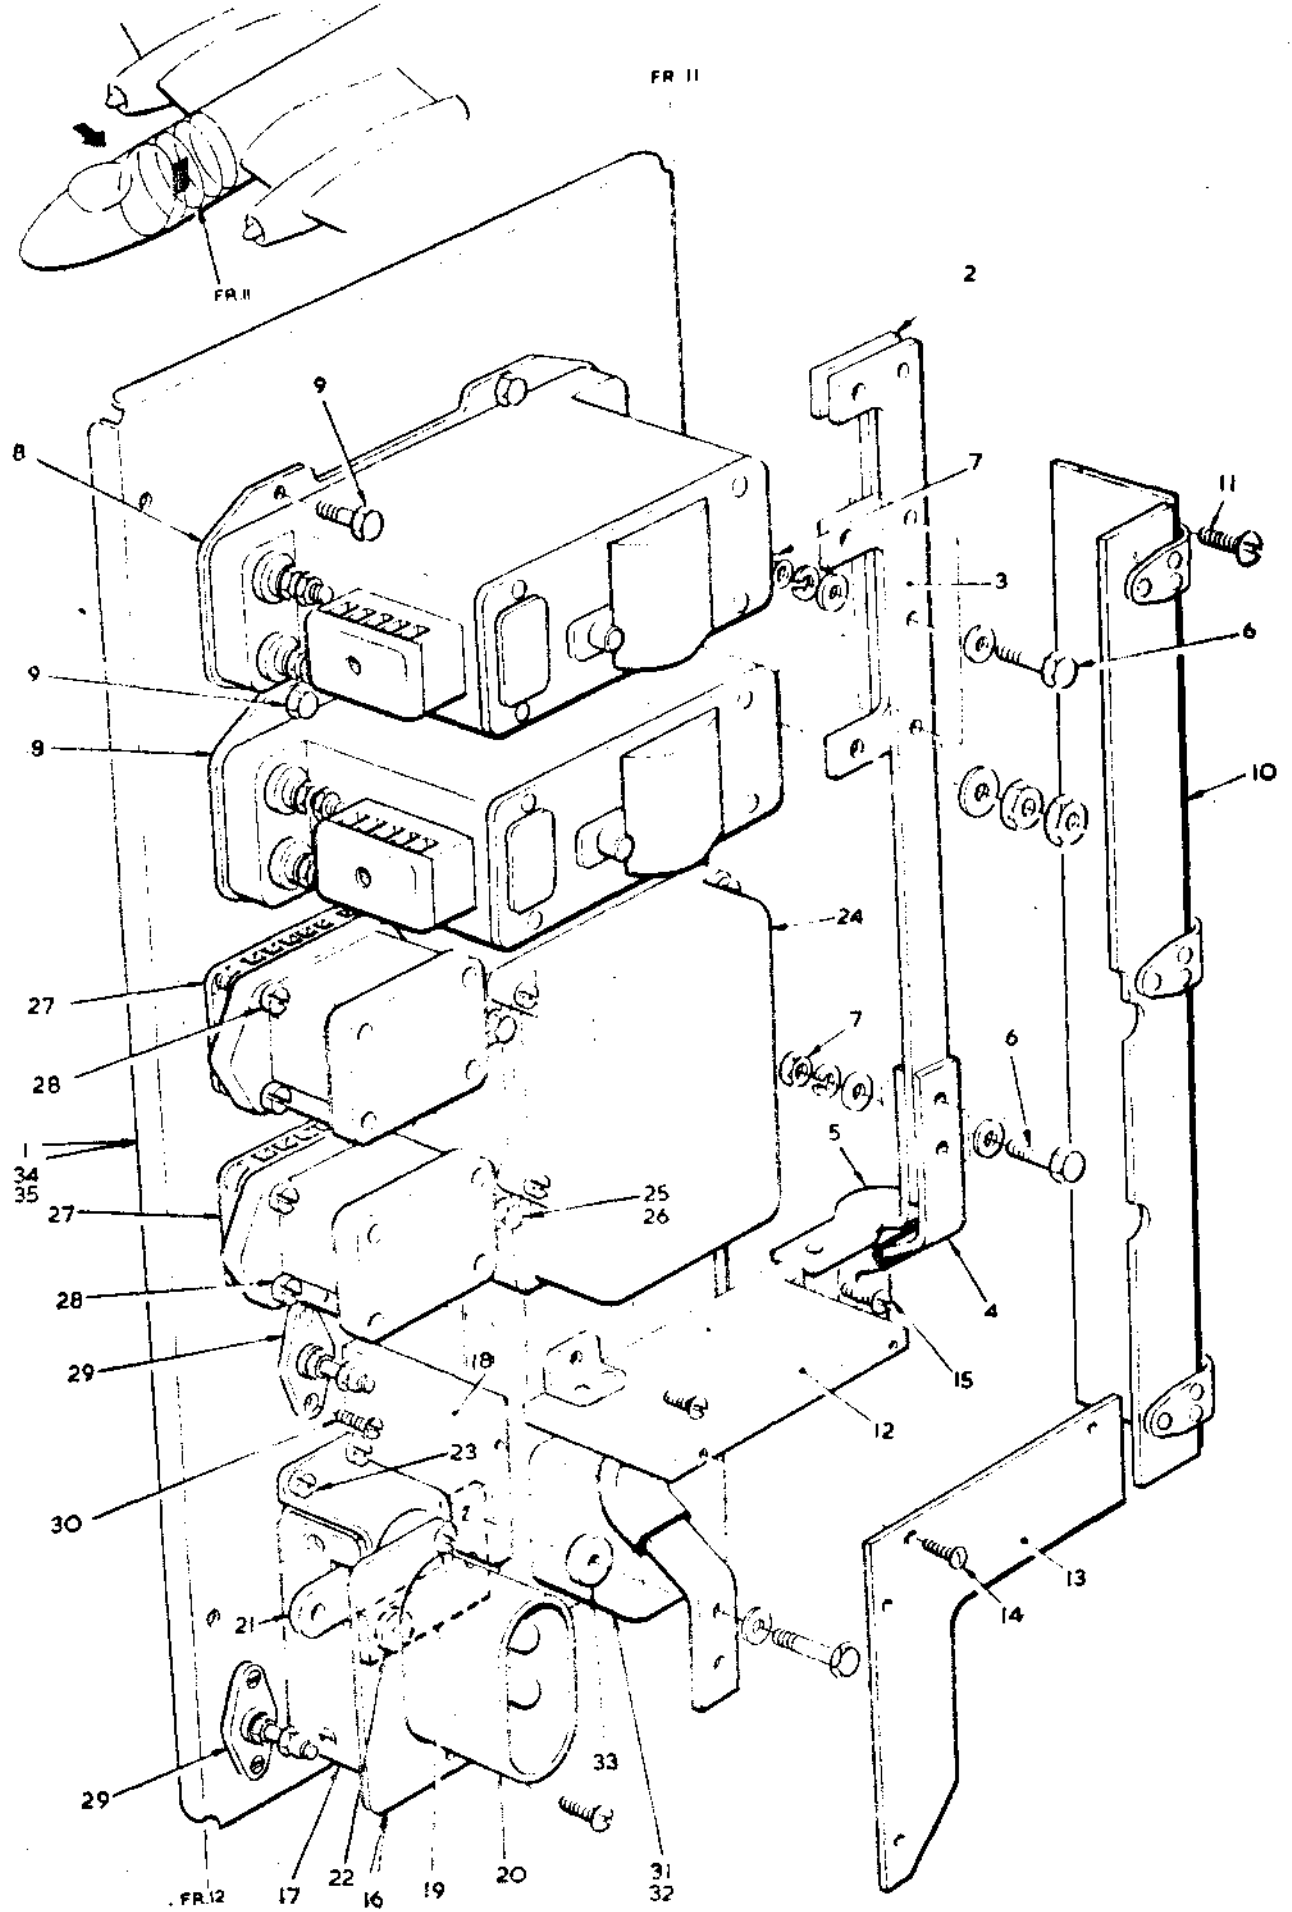


FIG.13 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT. EB

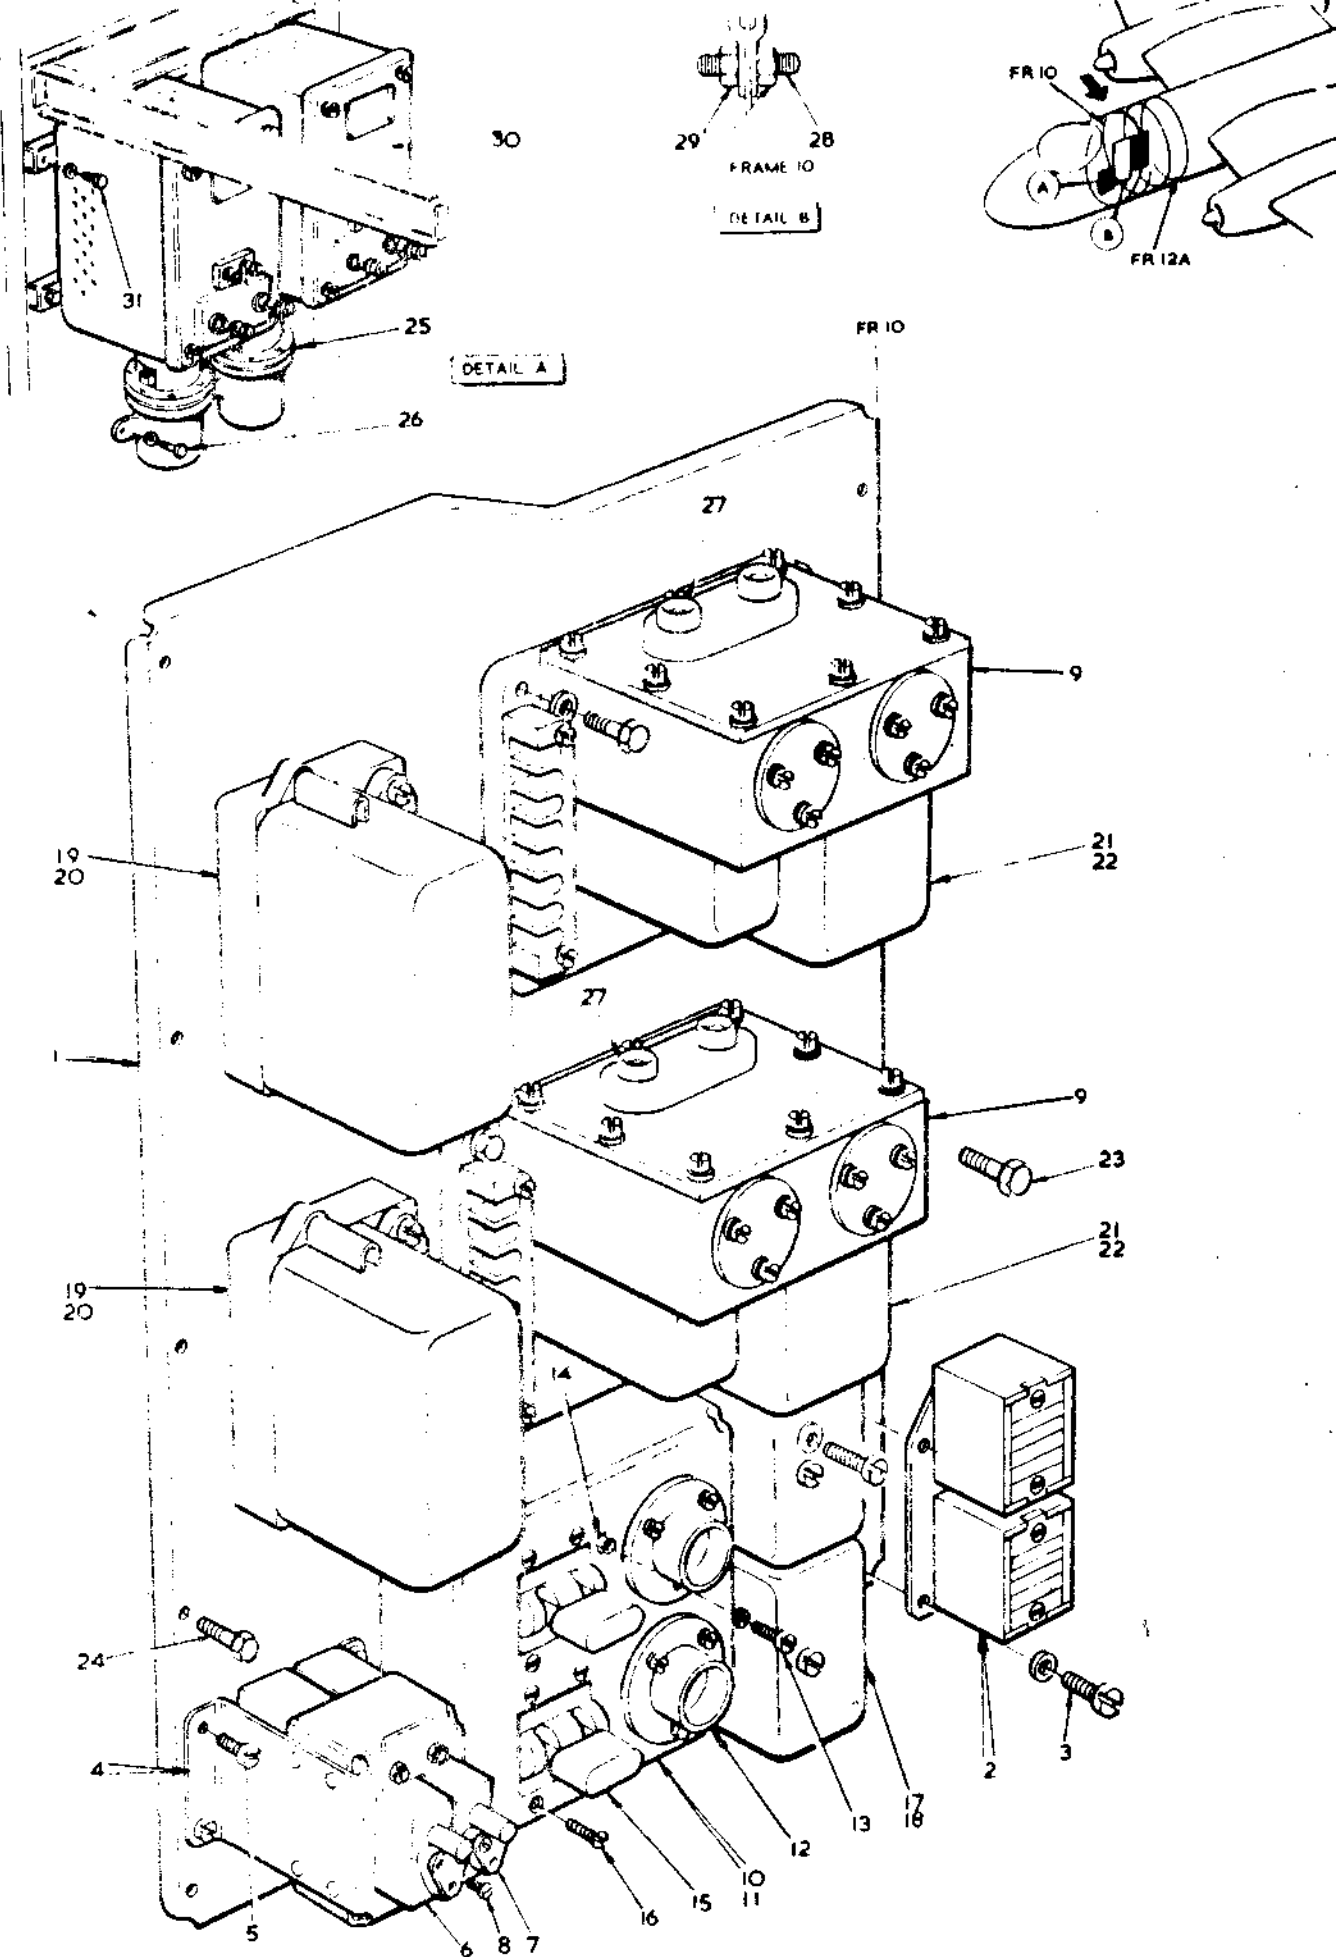


FIG. 14 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

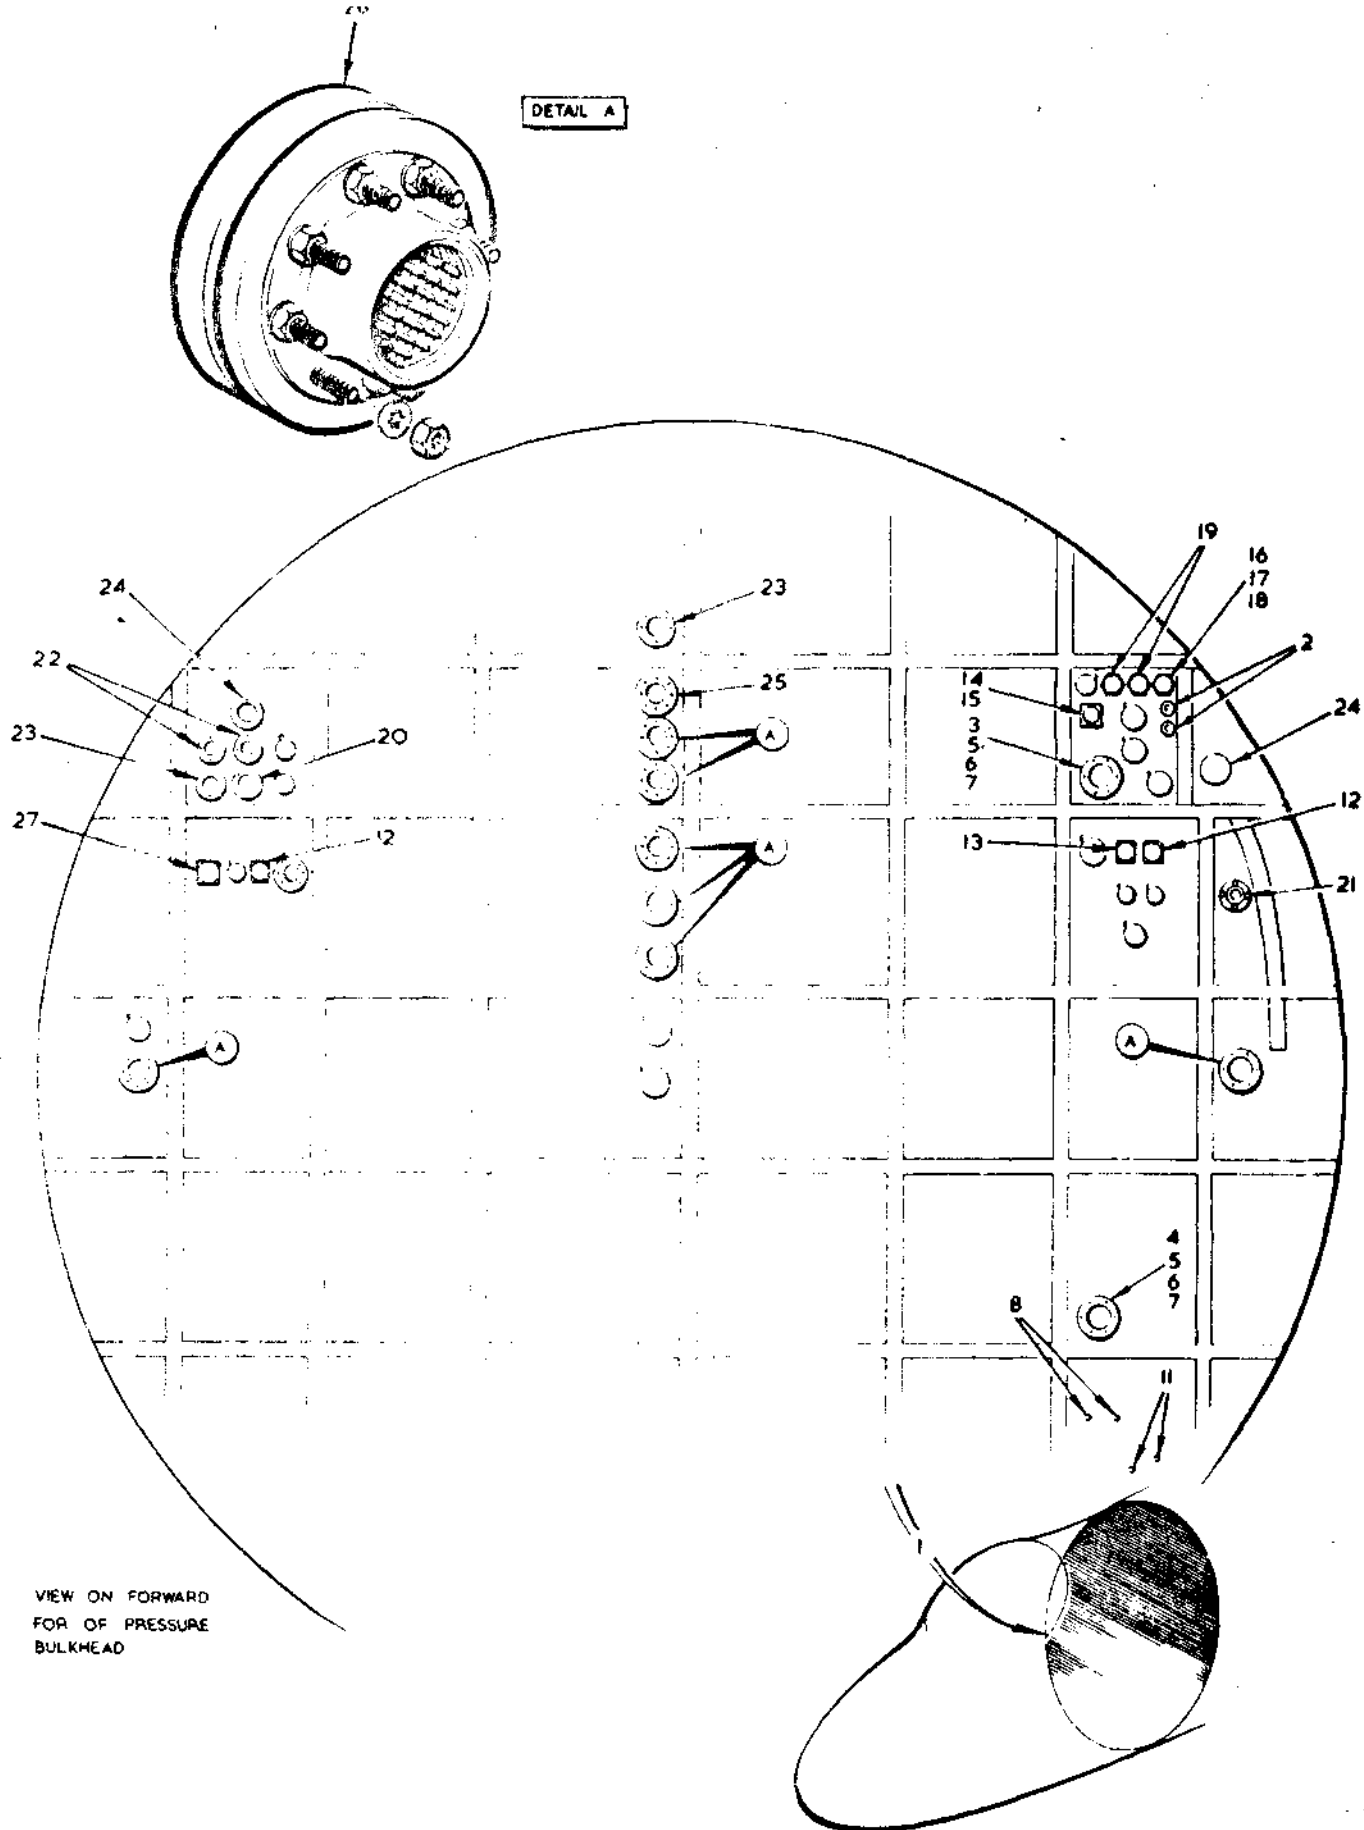


FIG.15 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

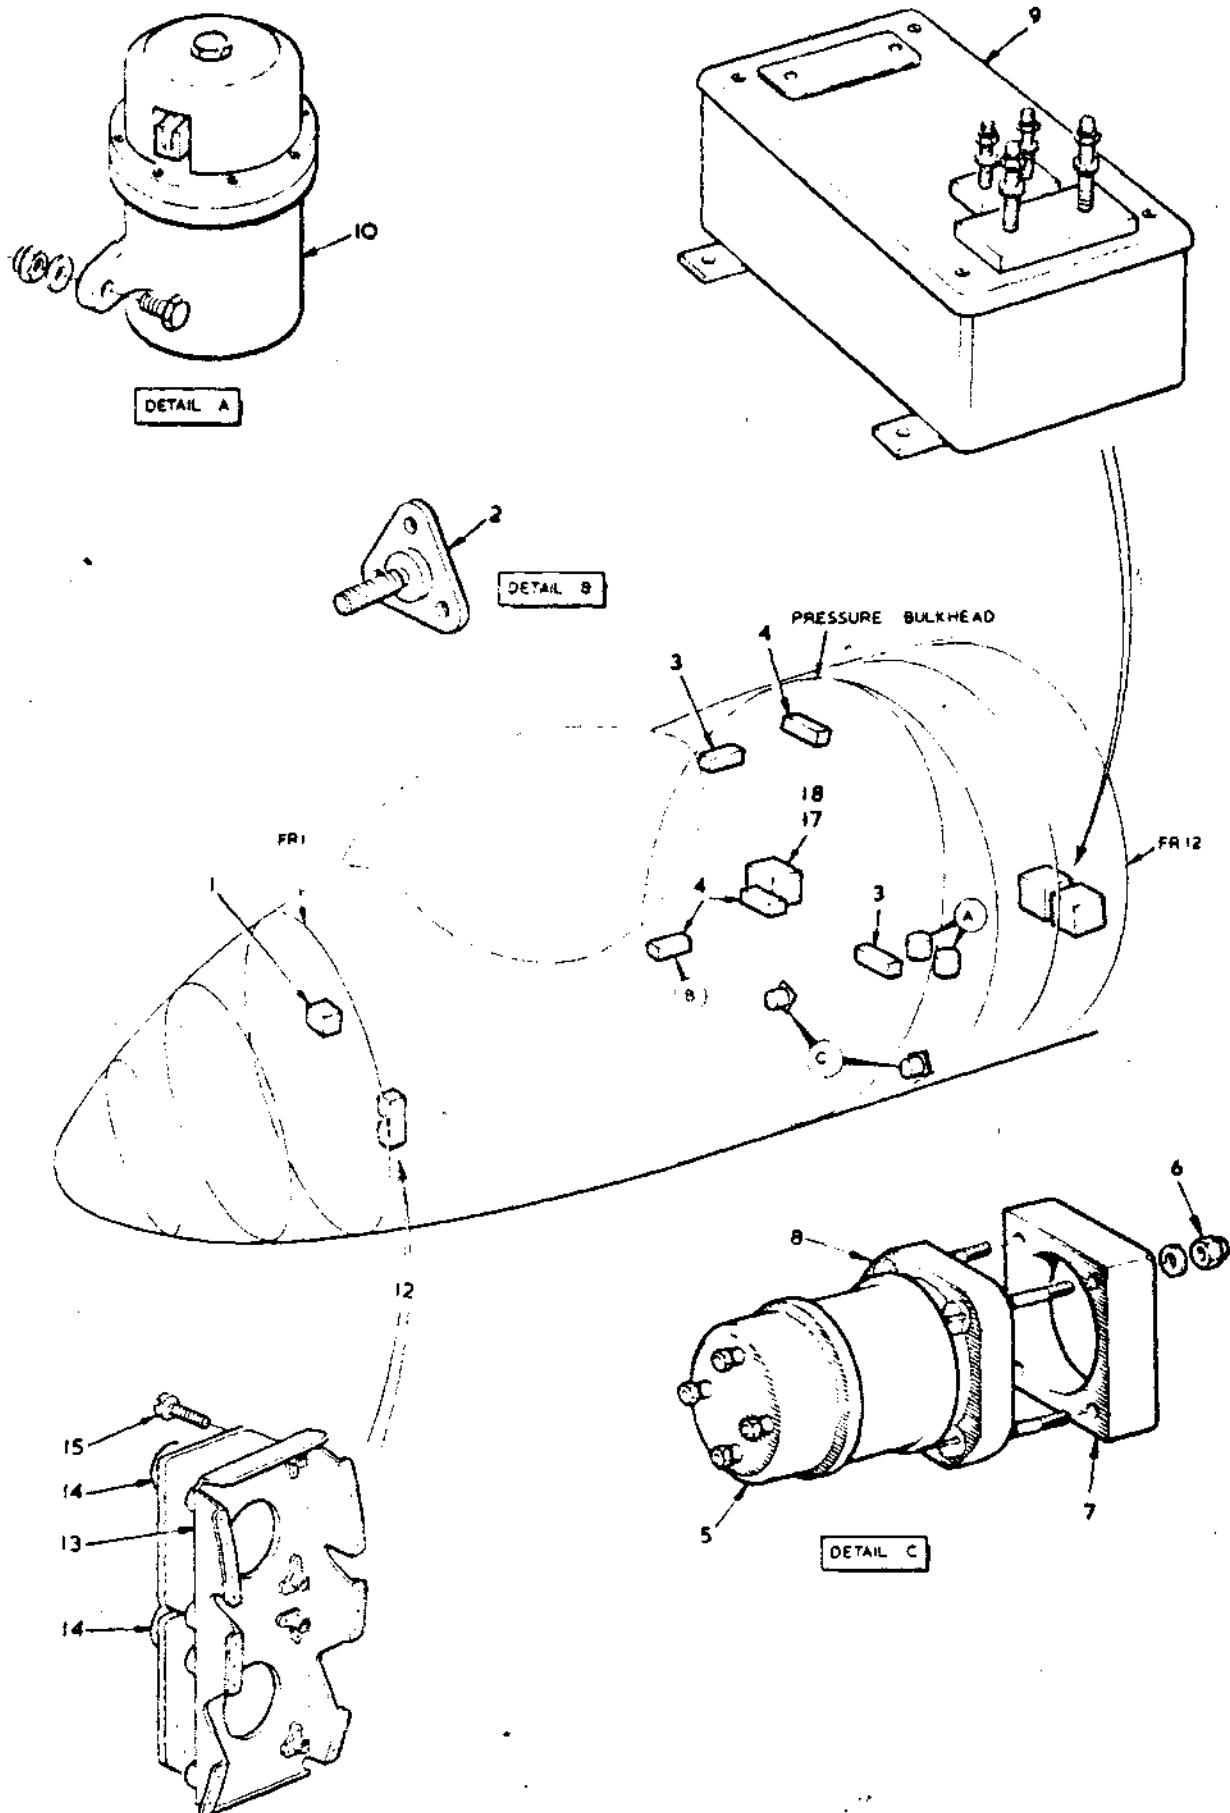


FIG. 16 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT E0

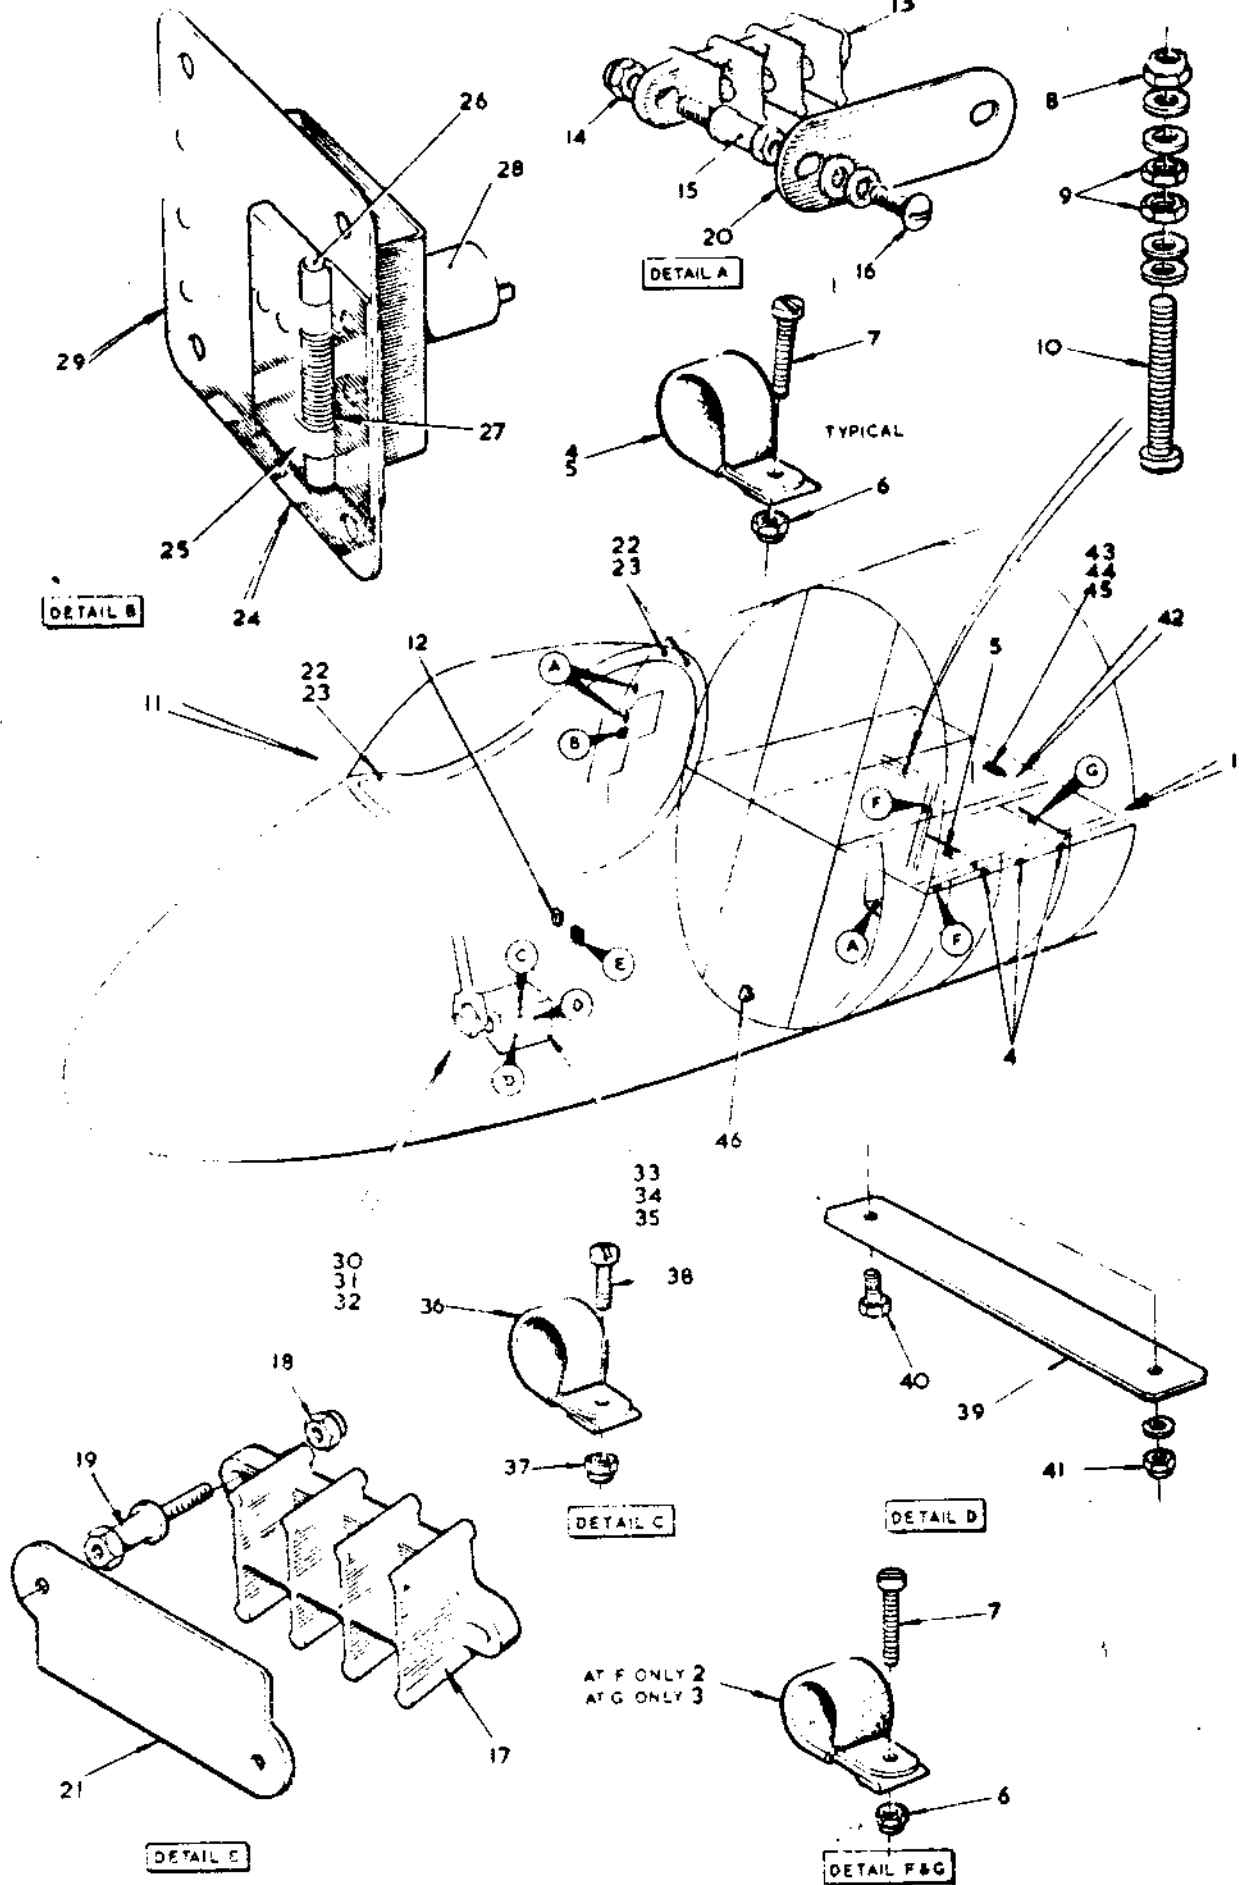


FIG 17 ELECTRICAL EQUIPMENT IN FRONT FUSELAGE

CODE A

SECT EB

ELECTRICAL
ELECTRICAL EQUIPMENT IN REAR FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.81.11	ELECTRICAL EQUIPMENT IN REAR FUSELAGE ASSEMBLY Spares for:-	-	-	-	
5W/4695	E.E.CO. LTD. BRADFORD ↑ E.E.CO. LTD. BRADFORD ↑	ACTUATOR, rudder bias, type 258, Mk.6	1	-	A	EC1/1
5W/4703	↑	ACTUATOR, stall plane, type AE.4023 Mk.2	1	-	A	EC1/2
5C/430	↑	BLOCK, terminal, 2 way	1	-	C	EC1/3
	E.H8.81.99	BOX, JUNCTION, No.6 ASSEMBLY	1	-	-	EC1/4
		Consisting of				
5X/3181	CZ.23212/1	BLOCK, terminal, 20-way	2	-	C	EC1/5
	E.A1.81.583	BOX, junction, 40-way	1	-	-	EC1/6
5E/4183	↑	CABLE, Uninyvin 20	QR	-	C	EC1/7
	E.A1.81.597/C	COVER, assembly	1	-	-	EC1/8
5X/6168	Z.23197	GASKET, seal for blanking plate	1	-	C	EC1/9
5X/6169	Z.23198	GASKET, seal for blanking plate	2	-	C	EC1/10
5X/2790	Z.22634	GROMMET, dummy, Heilsyn	4	-	C	EC1/11
5X/1004082	Z.50210	LINK, connecting, 2-way	1	-	C	EC1/12
5X/1004085	Z.50213	LINK, connecting, 5-way	1	-	C	EC1/13
8402	E.A1.81.461	PLATE, blanking, 20 SWG	1	L.72	C	EC1/14
8403	E.A1.81.463	PLATE, blanking, 22 SWG	2	L.72	C	EC1/15
5X.6185	CZ.50361	PLUG, 26 way, size D	1	-	C	EC1/16
5K/9107065	EEAS.146/20	SLEEVE, 1/4" long	12	-	-	EC1/17
5K/9107065	EEAS.146/20	SLEEVE, 1/4" long	12	-	-	EC1/18
5X/1005131	Z.49428	SLEEVE, cable	12	-	C	EC1/19
	MAM Rubber Co. Grade CXH	SLEEVE, 3/8" long x 3 mm i/d	40	-	-	EC1/20
5X/9450396	HC.490	TAG, QR	12	-	C	EC1/21
		DIODE TAIL TRIM CIRCUIT, INSTALLATION	-	-	-	EC1/22
		Spares for:-				
1438549	E.A3.81.6473	PLATE MOUNTING DIODE, ASSEMBLY	1	-	B	EC1/23
		Spares for:-				
	E.A3.81.6477	CABLE, ASSEMBLY, T451, FROM T100B RELAY TO DIODE	1	-	-	EC1/24
		Consisting of				
5E/3894	↑	CABLE, Universal 20	QR	-	C	EC1/25
5K/4446	EEAS.146/16	SLEEVE, 1/4" long	3	-	C	EC1/26
5K/9107065	EEAS.146/20	SLEEVE, 1/4" long	4	-	C	EC1/27
5K/3643	WE.487	TAG	2	-	C	EC1/28
10H/	HTX.1380-4C	CLIP	1	-	-	EC1/29
		Attaching parts for HTX 1380-4C:-				
28M/1273189	AGS.2001/B/1	Nut, 4 BA	1	-	C	EC1/30
28S/9435716	A33/B12	Screw, 4 BA	1	-	C	EC1/31
26DK.9852	EEAS.238/1A	Washer, D	1	-	C	
28E/9436947	AS.3180/4B	CLIP, "P" rubber covered	1	-	C	EC1/32
28E/1008744	AS.2295/1	CLIP, spring	1	-	C	EC1/33
10CV.7019	FERRANTI ZR12	DIODE	1	-	C	EC1/34
	E.A3.81.6475	PLATE, mounting diode	1	L.72	-	EC1/35

ELECTRICAL
ELECTRICAL EQUIPMENT IN REAR FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
10H/22535	OXLEY 156/50/LP	POST, barb binding	2	-	C	EC1/36
28M/1278189	AGS.2001/B/1	Attaching parts for E.A3.81.6473:-	2	-	C	EC1/37
1438652	E.A3.81.6479	Nut, 4 BA	1	DTD.5543	C	EC1/38
28S/1200034	A31/816	Packing, 3/16" thick vinton rubber	2	-	C	EC1/39
		Screw, 4 BA	-	-	-	-
	E.A3.81.5563	ELECTRICAL EQUIPMENT, REAR FUSELAGE FAIRING, ASSEMBLY	-	-	-	-
		Spares for:-	-	-	-	-
	E.A1.81.91/1	LIGHT TAIL, UPPER, ASSEMBLY	1	-	-	EC1/40
		Spares for:-	-	-	-	-
5E/4183	†	CABLE, Uninyvin 20	QR	-	C	EC1/41
5X/2785	Z.22430	GROMMET, Helsyn, No 2	1	-	C	EC1/42
5CX/4326	E.A1.81.978	LAMP, ASSEMBLY (LESS CABLE)	1	-	A	EC1/43
		Spares for:-	-	-	-	-
5CX/4242	E.A1.81.332	DOME, lamp, protecting, 1/8" thick	1	PERSPEX	C	EC1/44
5CX.887	†	LAMP, navigation, type B, port	1	-	C	EC1/45
5CX/4243	E.A1.81.331	SCREEN, cap, dome navigating, 2" dia.	1	DTD.683	C	EC1/46
5K/9107065	†	SLEEVE, 1" x 3/4"	4	-	C	EC1/47
5K/9107066	†	SLEEVE, 2" x 3/4"	2	-	C	EC1/48
	E.A1.81.92/1	LIGHT TAIL, LOWER, ASSEMBLY	1	-	-	EC1/49
		Spares for this assembly are identical with those for assembly Part No. E.A1.81. 91/1 except for the following deletion	-	-	-	-
		Delete:-	-	-	-	-
5X/2785	Z.22430	GROMMET, Helsyn, No 2	1	-	C	-
5X/240	Z.2272/2	FERRULE, size Z	1	-	C	EC1/50
	E.86.81.10355	LIGHT, ANTI-COLLISION, LOWER AT FRAMES 33-34 INSTALLATION	-	-	-	EC2/1
		Spares for:-	-	-	-	-
40691	E.86.81.10363	COVER, assembly	1	-	C	EC2/2
		Attaching parts for E.86.81.10363:-	-	-	-	-
28FP/9488815	A4-30	Fastener	6	-	C	EC2/3
28FP/9430916	S4-200	Spring	6	-	C	EC2/4
5L/9952445	†	FILAMENT, 28V, 40W	1	-	C	EC2/5
5CX/5315	F.N.L. 50	LAMP	1	-	C	EC2/6
	E.86.81.10339	LIGHT, ANTI-COLLISION, UPPER, AND FLASHER UNIT AT FRAMES 32-34, INSTALLATION	-	-	-	EC2/7
		Spares for:-	-	-	-	-
5L/9952445	†	FILAMENT, 28V 40W	1	-	C	SC2/8
5CX/5315	F.N.L. 50	LAMP	1	-	C	EC2/9
34134	E.86.81.10341	MEMBER, support	1	-	C	EC2/10
40688	E.86.81.10347	PLATE, packing	1	-	C	EC2/11
40687	E.86.81.10345	RING, packing	1	-	C	EC2/12
5CZ/5448	†	UNIT, flasher, type A	1	-	A	EC2/13
		Attaching parts for Ref. 5CZ/5448:-	-	-	-	-
28S/1200047	A31/C24	Screw, 2 BA	4	-	C	EC2/14
	AS.2299/025	Tube, distance	4	-	C	EC2/15
28W/9419402	SP.13/C	Washer	4	-	C	-

ELECTRICAL
ELECTRICAL EQUIPMENT IN REAR FUSELAGE

Ref. No.	Part No.	Description	No. off	Mtd. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.81.37	LOOMS, CABLE, ASSEMBLY	-	-	-	
		Consisting of:-				
7119	E.A1.81.811/2	CABLE ASSEMBLY 6A, FROM J86 TO TAIL PLANE POSITION TRANSMITTER	1	-	B	
		Consisting of:-				
5X/6219	E.A1.81.367	BRACKET, plug support	1	-	C	
5E/3079	†	CABLE, Quinpren 6	QR	-	C	
33H/56	†	CEMENT, Bostik	QR	-	C	
5X/240	Z.2277/2	FERRULE, cut	1	-	C	
5X/6402	Z.23414	GASKET, plug moulding	1	-	C	
5X/3169	Z.28156	GASKET	1	-	C	
5X/9491421	Z.22431	GROMMET, Helsyn, No.3	1	-	C	
5X/3250	Z.49280	NUT, coupling	1	-	C	
5X/5181	CZ.50356	PLUG, assembly, size Z	1	-	C	
	or					
5X/7142	2CZ.111401	PLUG, assembly, 5 pin, size Z	1	-	C	
5X/283	Z.1500	PLUG, shroud	1	-	C	
5K/9107065	EEAS.146/A	SLEEVE, 3/4" long	5	-	C	
5K/9107068	EEAS.146/D1	SLEEVE, 1" long	3	-	C	
5X/1005131	Z.49428	SLEEVE, cable	5	-	C	
5X/9450396	HC.490	TAG, QR	5	-	C	
32B.498	†	THREAD, waxed linen, No 18	QR	-	C	
	E.A2.81.1065	CABLE ASSEMBLY 6F, FROM J86 TO RUDDER TRIM POSITION TRANSMITTER	1	-	-	
		Consisting of:-				
5E/3115	†	CABLE, Quinprensheath 6	QR	-	C	
5X/9491421	Z.22431	GROMMET, Helsyn, No.3	2	-	C	
5K/9107065	EEAS.146/A	SLEEVE, 3/4" long	5	-	C	
5K/9107066	EEAS.146/A1	SLEEVE, 3/4" long	5	-	C	
5K/9107069	EEAS.146/E	SLEEVE, 1" long	2	-	C	
5X/9450396	HC.490	TAG, QR	5	-	C	
	E.A1.81.806/1	CABLE ASSEMBLY 6G, FROM J86 TO TAIL NAVIGATION LIGHTS TERMINAL BOARD	1	-	-	
		Spares for:-				
5E/4183	†	CABLE, Uninyvin 20	QR	-	C	
5X/2785	Z.22430	GROMMET, Helsyn, No 2	1	-	C	
5K/9107065	EEAS.146/A	SLEEVE, 3/4" long	2	-	C	
5K/9107066	EEAS.146/A1	SLEEVE, 3/4" long	2	-	C	
5K/9107067	EEAS.146/C	SLEEVE, 1" long	2	-	C	
5X/9450396	HC.490	TAG, QR	2	-	C	
	E.86.81.10379	CABLE ASSEMBLY 6Q, FROM ANTI- COLLISION LIGHTS AND FLASHER UNIT TO J86	1	-	-	
		Consisting of:-				
5E/4183	†	CABLE, Uninyvin 20	QR	-	C	
10H/0970292	CZ.69733	CLAMP, cable	1	-	C	
10H/0970108	Z.62235	GASKET, union	1	-	C	
10H/0970058	Z.60667	GASKET, outlet	1	-	C	
5X/9419421	CZ.22431	GROMMET, No 3	1	-	C	
10H/19072	Z.49033	OUTLET, angle	1	-	C	
10H/0970088	Z.62229	RING, sealing	1	-	C	
10H/0970096	Z.49037	RING, thrust	1	-	C	
5K/9107067	EEAS.146/6	SLEEVE	14	-	C	
5K/9107066	EEAS.146/12	SLEEVE	31	-	C	
5K/9107065	EEAS.146/20	SLEEVE	14	-	C	
10H/0560100	CZ.49015	SOCKET	1	-	C	
5X/9450396	HC.490	TAG	7	-	C	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN REAR FUSELAGE**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
	E.H8.81.623	CABLE ASSEMBLY 6R FROM JB6 TO AUTO PILOT TERMINAL BLOCK Consisting of:-	1	-	-	
5X/2785	Z.22430	CABLE, Uninyvin 20	QR	-	C	
	HT.15	GROMMET, No.2	1	-	C	
	HT.50	SLEEVE, Helsyn 150, 1/2" long	2	-	C	
5K/9107067	EEAS.146/6	SLEEVE, Helsyn 150, 1/2" long	2	-	C	
5K/9107065	EEAS.146/20	SLEEVE, 1" long	QR	-	C	
5X/9460396	HC.490	SLEEVE, 1/2" long	QR	-	C	
5F/	↑	TAG, quick release	4	-	C	
		TUBING, P.V.C., 1/2" i/d, 1 mm wall	QR	-	-	
5K/9107066	EEAS.146/A1	SLEEVE, 1/2" long	40	-	C	
	E.87.81.531	CABLE ASSEMBLY E6, FROM JB6 TO EARTH Consisting of:-	1	-	-	
5E/4187	↑	CABLE, Uninyvin 12	QR	-	C	
	HELLERMANN					
5K/3071	HV.3112	GROMMET	1	-	C	
5K/9107067	EEAS.146/C	SLEEVE, 1/2" long	4	-	C	
5X/7220	12108	TAG, closed end, 4 BA	2	-	C	
5X/9450224	HC.510	TAG, QR	2	-	C	
	E.A1.81.801/1	CABLE ASSEMBLY T6, FROM BOMB BAY BULKHEAD FRAME 29, TO JB6 Consisting of:-	1	-	-	
5E/4187	↑	CABLE, Uninyvin 12	QR	-	C	
5E/4185	↑	CABLE, Uninyvin 16	QR	-	C	
5E/4183	↑	CABLE, Uninyvin 20	QR	-	C	
5X/1526	Z.18500/D	FERRULE, size D	2	-	C	
5X/1533	Z.18501/D	RING, clamp	2	-	C	
5K/9107066	EEAS.146/A1	SLEEVE, 1/2" long	40	-	C	
5K/9107067	EEAS.146/C	SLEEVE, 1/2" long	2	-	C	
5X/1005131	Z.40428	SLEEVE, cable	32	-	C	
5K/	EEAS.118/5/T6	SLEEVE, identification	1	-	-	
5K/	EEAS.118/5/T6	SLEEVE, identification	1	-	-	
5X/6200	CZ.50414	SOCKET, 26-way, size D	1	-	C	
	or					
5X/7205	2CZ.111468	SOCKET, 26-way, size D	1	-	C	
5X/6194	CZ.50405	SOCKET, 26-way, size D	1	-	C	
	or					
5X/7192	2CZ.111238	SOCKET, 26-way, size D	1	-	C	
5F/2038	↑	TUBING, P.V.C., 25.4 m/m x 12 m/m	QR	-	C	
	E.H8.81.739	CABLE ASSEMBLY T33, FROM BOMB BAY BULKHEAD FRAME 29 TO T 1008 RELAY Consisting of:-	1	-	-	
5E/4189	↑	CABLE, Uninyvin 8	QR	-	C	
	CPL.98.01.BA	LUG, ring tongue	1	-	C	
5K/9107068	EEAS.146/2	SLEEVE, 1/2" long	QR	-	C	
5K/9107068	EEAS.146/2	SLEEVE, 1 1/2" long	QR	-	C	
5K/9107067	EEAS.146/6	SLEEVE, 1/2" long	QR	-	C	
5K/9107067	EEAS.146/6	SLEEVE, 1 1/2" long	QR	-	C	
	CPL.02.01.2.					
	13.4.51	SOCKET, free	1	-	C	
	↑	TUBING, P.V.C. 10 m/m x 1 m/m	QR	-	C	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN REAR FUSELAGE**

Ref. No.	Part No.	Description	No. off	Mod. Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
		1 2 3 4 5 6					
	E.H8.81.741	CABLE ASSEMBLY T33A, FROM T100B RELAY TO REVERSING RELAY Consisting of:-	1	-	-	-	
5E/4189	†	CABLE, Uninyvin 8	QR	-	-	C	
	CPL.98.01.8A	LUG, ring tongue, 1/4"	2	-	-	-	
	CPL.98.01.8B	LUG, ring tongue, 5/16"	2	-	-	-	
	EEAS.146/00	SLEEVE, 1" long	QR	-	-	C	
	EEAS.146/00	SLEEVE, 1 1/2" long	QR	-	-	C	
5K/9107068	EEAS.146/2	SLEEVE, 1 1/2" long	QR	-	-	C	
5K/9107067	EEAS.146/6	SLEEVE, 1/2" long	QR	-	-	C	
5F/2069	†	TUBING, P.V.C. 15.8mm x 1mm	QR	-	-	C	
	E.A3.81.3169/2	CABLE ASSEMBLY T33M, FROM REVERSING RELAY TO TAILPLANE ACTUATOR Consisting of:-	-	-	-	-	
	5K/3360	BUNG, sealing	1	-	-	-	
5E/3040	†	CABLE, Unipren 12A	QR	-	-	C	
5E/3044	†	CABLE, Unipren 50A	QR	-	-	C	
	4370	GLAND, body	1	-	-	-	
	AGS.1705	LUG, No.3	1	-	-	C	
5X/9400033	†	LUG, crimped, Mk.17	1	-	-	C	
5X/9400034	†	LUG, crimped, Mk.18	2	-	-	C	
5X/9400036	†	LUG, crimped, Mk.5A	1	-	-	C	
5K/	EEAS.118/2/T33	SLEEVE, identification	1	-	-	C	
5K/	EEAS.118/3/T33	SLEEVE, identification	1	-	-	C	
5K/9107065	EEAS.146/A1	SLEEVE, 1/2" long	2	-	-	C	
	EEAS.146/O	SLEEVE, 1/2" long	8	-	-	C	
5X/6313	CZ.71765	SOCKET assembly, size D	1	-	-	C	
	or						
	2CZ.111442	SOCKET assembly, size D	1	-	-	C	
5F/2281	HV.3341	STRAP, 5" wide	QR	-	-	C	
5F/2282	OP.3342	STUD	16	-	-	C	
	E.A1.31.42	MOUNTING, junction box 6	1	-	-	-	
	E.H8.81.1037	PANEL, RELAY, REVERSING, ASSEMBLY Spare parts for:-	1	-	-	-	EC2/16
5X/3277	CZ.50206	BLOCK, terminal, 3-way	1	-	-	C	EC2/17
5X/9450403	Z.28426	Attaching parts for CZ.50206:- Pillar, fixing	2	-	-	C	EC2/18
5E/4183	†	CABLE, Uninyvin 20	QR	-	-	C	EC2/19
18756	E.87.81.431	CLAMP, cable	1	-	-	C	EC2/20
18755	E.87.81.429	CLAMP, cable	1	-	-	C	EC2/21
		Attaching parts for E.87.81.431 & E.87.81.429:-					
280/1213262	AS.4565/10B	Bolt, 4 BA	2	-	-	C	EC2/22
5X/1957036	CZ.26802	COVER	1	-	-	C	EC2/23
5X/1004083	Z.50211	LINK, 3-way	1	-	-	C	EC2/24
18754	E.87.81.427	PANEL, base	1	-	-	B/MR	EC2/25
5K/9107066	EEAS.146/12	SLEEVE	4	-	-	C	EC2/26
5K/9107067	EEAS.146/6	SLEEVE	3	-	-	C	EC2/27
5X/1005131	Z.49428	SLEEVE	2	-	-	C	EC2/28
5X/9462952	HC.302	TAG	2	-	-	C	EC2/29
5X/9450396	HC.490	TAG	3	-	-	C	EC2/30
3420	EEAS.73	PLATE, clamp, securing cable webbing to airframe, 22 SWG	11	L.72	-	C	EC2/31

ELECTRICAL
ELECTRICAL EQUIPMENT IN REAR FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A3.81.2825	RELAY, TYPE T.1008, INSTALLATION	1	—	—	EC2/32
22448	E.A3.81.2827	Spares for:	1	—	C/MR	EC2/33
5CW/5986	THORN	BRACKET, assembly	1	—	A	EC2/34
	†	RELAY, type T.1008	1	—	—	—
		Attaching parts for Ref. 5CW/5986:-				
28S/1200039	A31/B32	Screw, 4 BA	4	—	C	EC2/35
1108	EEAS.42	Washer, leather	4	—	C	EC2/36
5X/1005131	Z.49428	SLEEVE, cable	5	—	C	EC2/37
5K/9107065	EEAS.148/20	SLEEVE, 1/2" long	5	—	C	EC2/38
	CPL.02.01.2					
	13.2.1.0	SOCKET, assembly 5-way	1	—	C	EC2/39
	E.A1.81.431	STRAP, cable, c/w buckle	11	Webbing Comm.	C	EC2/40
6F/2281	HV.3341	STRAP, Melvin	QR	—	C	—
6F/	OP.3255	STUD	QR	—	C	—
5CW/12444	DOWTY	SWITCH, micro, tailplane limit, type DN.1322Z. Mk 2	2	—	B	EC2/41
		Attaching parts for Ref. 5CW/12444.				
28D/1011011	A25/88	Bolt, 4 BA	2	—	C	EC2/42
28M/1278189	AGS.2001/3/1	Nut, 4 BA	2	—	C	EC2/43
	SCOTCH					
	BRAND No 27	TAPE, glasscloth	QR	—	—	—
	SP1172/5/8C	TAPE, varnished nylon	QR	—	—	—
32B/498	†	THREAD, waxed linen No.18	QR	—	C	—
1070	EEAS.28/6FP/H	WASHER, 4 BA, non-anodised	2	L.16	C	EC2/44
1071	EEAS.28/8FP	WASHER, 2 BA, non-anodised	1	L.16	C	EC2/45

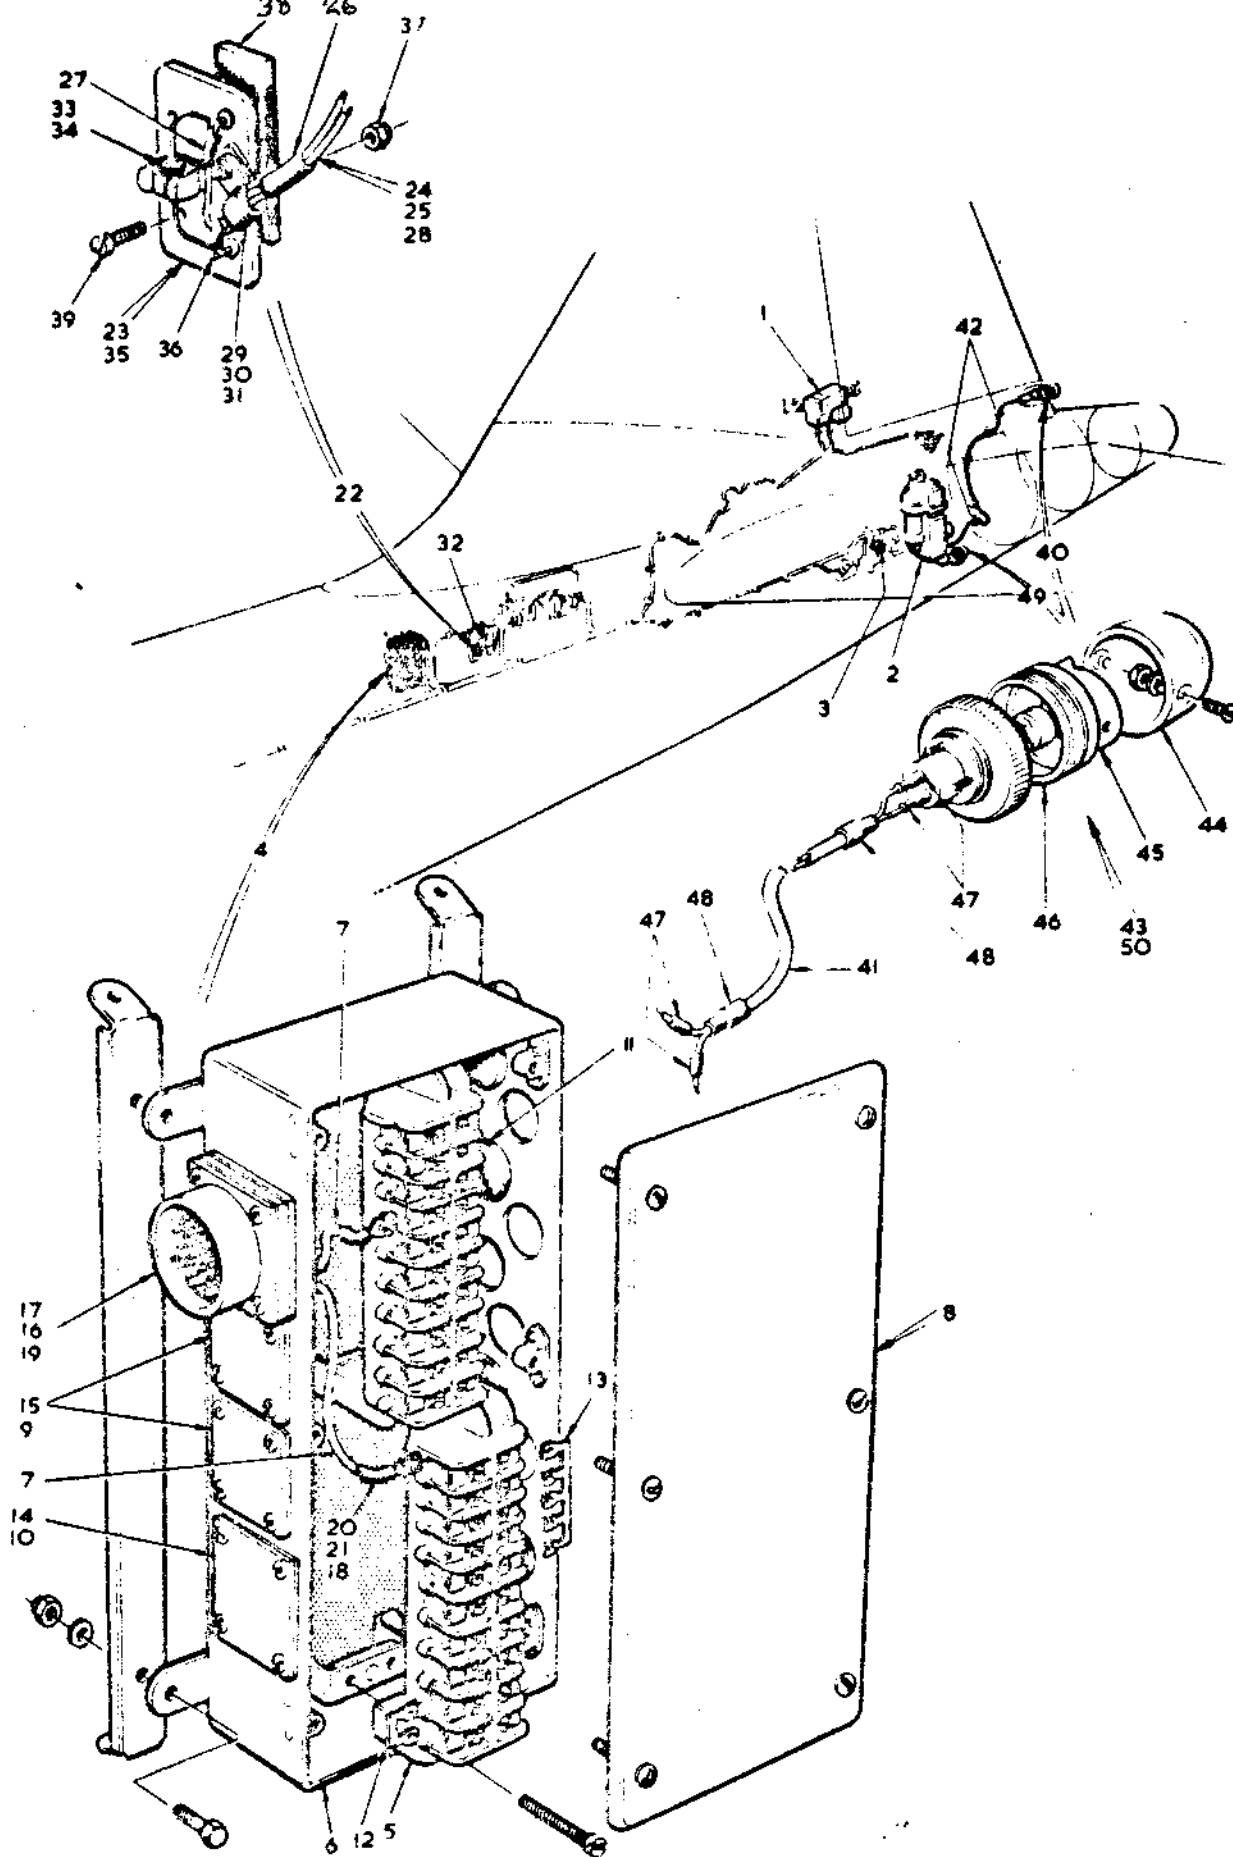


FIG.1 ELECTRICAL EQUIPMENT IN REAR FUSELAGE

CODE AB

SECT EC

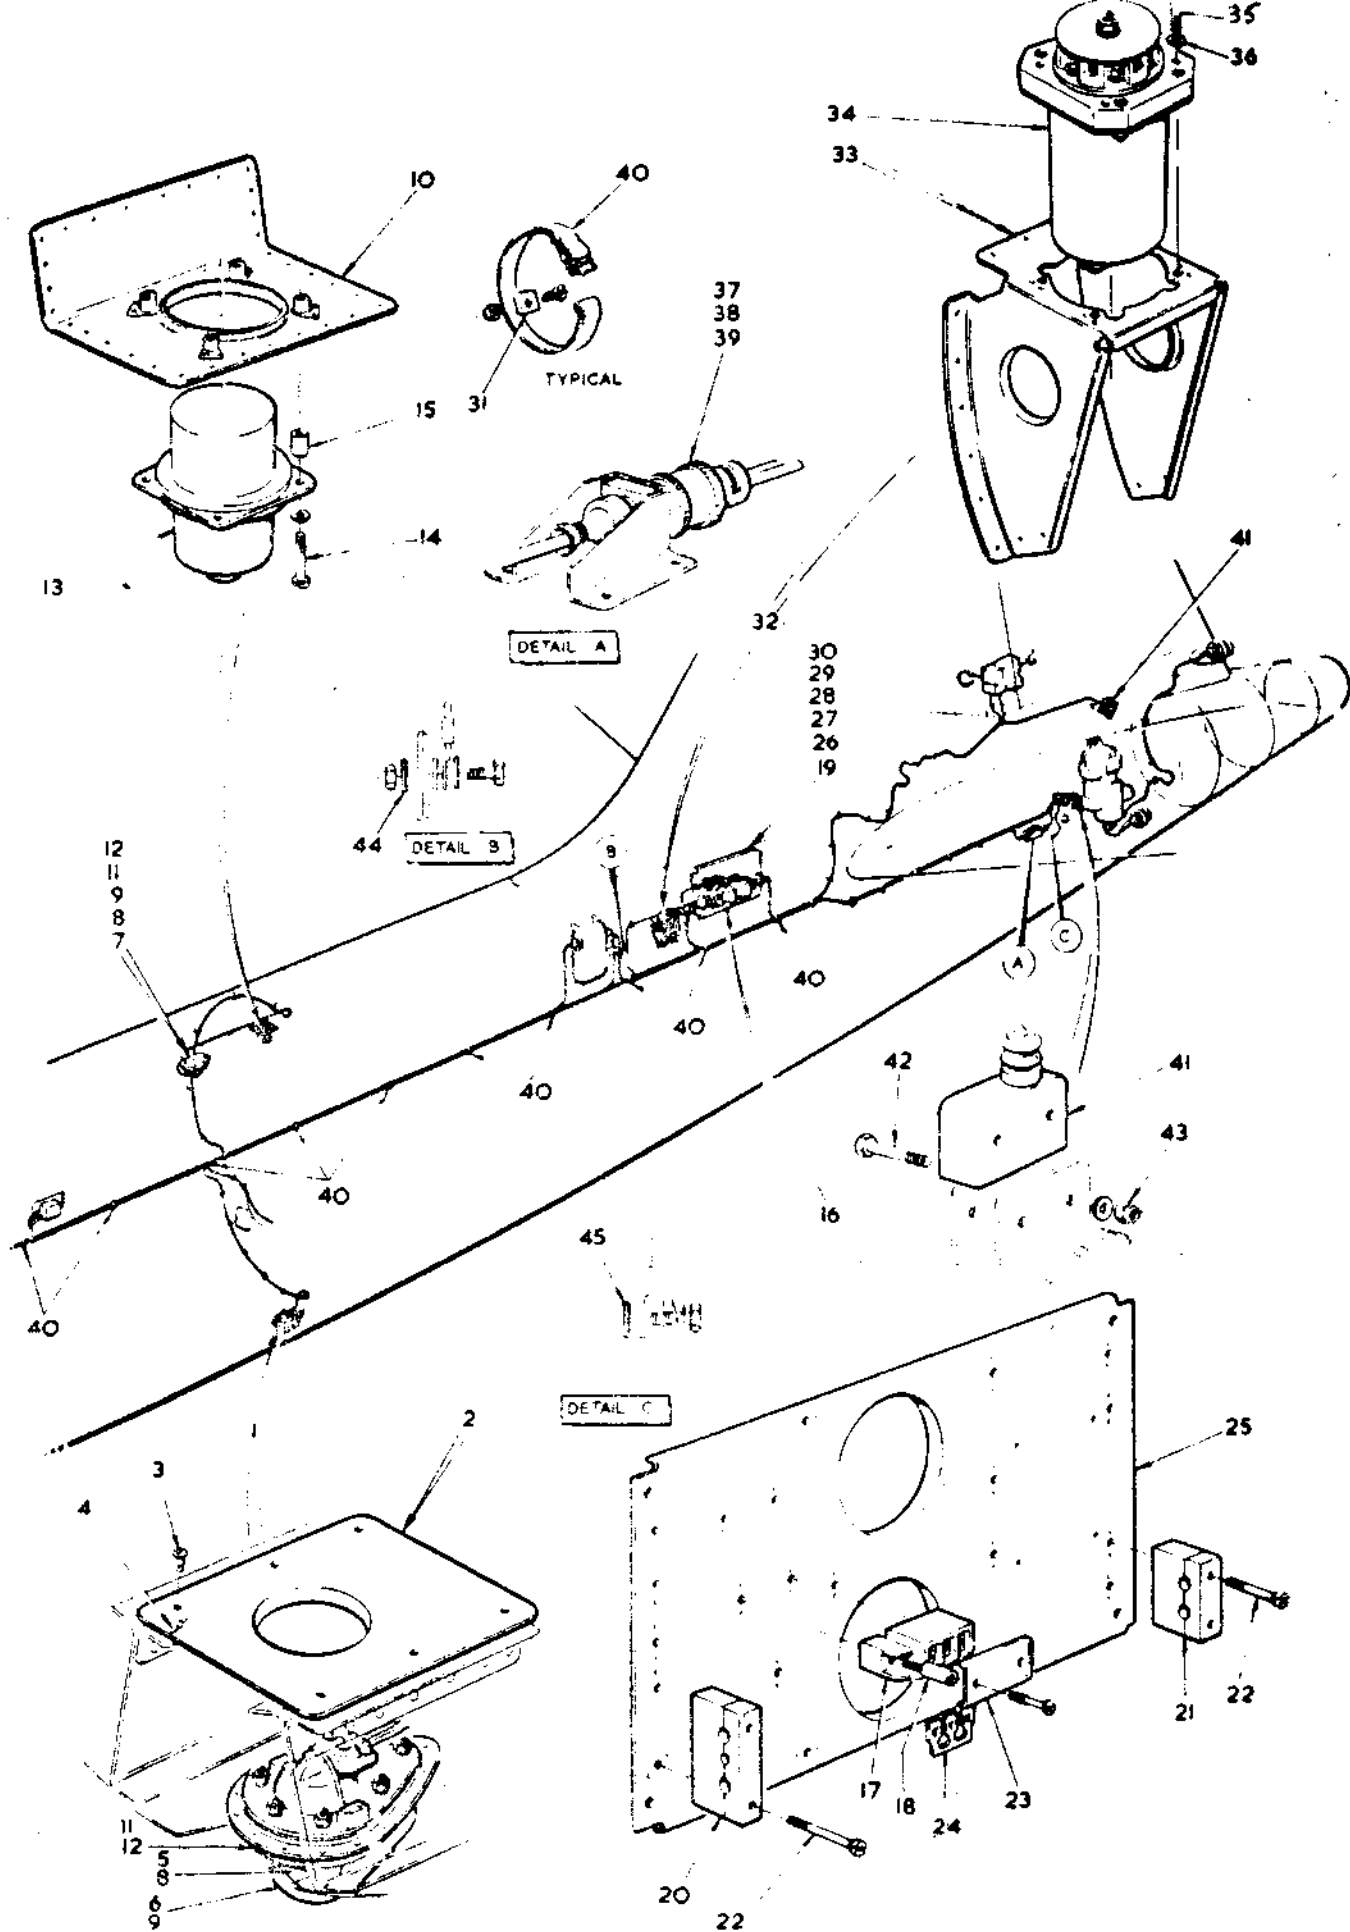


FIG. 2 ELECTRICAL EQUIPMENT IN REAR FUSELAGE

CODE A B

SECT EC

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.9	ELECTRICAL EQUIPMENT IN PORT WING, ASSEMBLY	-	-	-	
	E.H8.81.10	ELECTRICAL EQUIPMENT IN STARBOARD WING, ASSEMBLY	-	-	-	
		Spares for:- Are identical for port and starboard except where shown otherwise:-				
	E.H6.81.351	CONDUIT ACROSS ENGINE NACELLE, PORT, ASSEMBLY	-	-	-	
	E.H6.81.352	CONDUITS ACROSS ENGINE NACELLE, STARBOARD, ASSEMBLY	-	-	-	
		Spares for:- Are identical for port and starboard except where shown otherwise:-				
28E/9129092	AGS.605/2	CLIP, hose, securing sleeve	4	-	C	1 1
	E.A1.81.104	CLIP, 1/4" i/d. conduit securing	2	-	-	1 2
	E.A1.81.102	CLIP, 1/4" i/d. conduit securing	1	-	-	1 3
	E.A4.81.1857	CLIP, conduit securing	2	-	-	1 4
	E.A3.81.2135	CLIP, 1.5/8" i/d. conduit securing	1	-	-	1 5
	E.A4.81.1855	CLIP, conduit securing	2	-	-	1 6
		Attaching parts for E.A1.81.104, E.A1.81.102, E.A4.81.1857, E.A3.81.2135 and E.A4.81.1855:-				
28D/7001	A1/28	Bolt, 48A	AR	-	C	1 7
	A17/1C	Bolt, 28A	AR	-	-	1 8
28D/9436920	A25/1C	Bolt, 28A	AR	-	C	1 9
28D/1008149	A25/28	Bolt, 48A	AR	-	C	1 10
	A16/Y/BP	Nut, 48A	AR	-	-	1 11
	A18/CP	Nut, 28A	AR	-	-	1 12
28M/1278189	AGS.2001/B/1	Nut, 48A	AR	-	C	1 13
28M/1278190	AGS.2001/C/1	Nut, 28A	AR	-	C	1 14
17005	E.A3.81.2133	Washer, 'D' 48A	AR	-	C	1 15
	E.A1.81.105	Washer, 'D' 48A	AR	-	-	1 16
28W/1010155	AGS.162/B	Washer, 48A, spring	AR	-	C	1 17
28W/9419402	SP.13/C	Washer	AR	-	C	1 18
	E.A9.81.1075	Washer, square	AR	-	-	1 19
	E.A1.81.101	CONDUIT, 1/4" o/d. x 20 SWG	1	-	-	1 20
	E.A1.81.11/A	CONDUIT, 1/4" o/d. x 20 SWG, 24" long Port only	1	-	-	1 21
	E.A1.81.12/A	CONDUIT, 1/4" o/d. x 20 SWG, 24" long Starboard only	1	-	-	1 22
17046	E.A3.81.2171	CONDUIT, 1.5/8" o/d.	1	L.54	C	1 23
17047	E.A3.81.2173	CONDUIT, 1.5/8" o/d.	1	L.54	C	1 24
17016	E.A3.81.1595	SLEEVE, conduit coupling	1	-	C	1 25
	E.A1.81.11/B	SLEEVE, conduit coupling, 1.5/8" o/d. x 3" x 17 SWG	1	T.4	-	1 26

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H.6.81.353 E.H.6.81.354	CONDUITS IN INNER WING, PORT, ASSEMBLY CONDUITS IN INNER WING, STARBOARD, ASSEMBLY Spares for:- Are identical for port and starboard	- -	- -	- -	
9747	E.A1.81.108	CLIP, conduit securing	1	-	C	2 1
9746	E.A1.81.111	CLIP, conduit securing	2	-	C	2 2
	E.F3.81.10889	CLIP, 'P', assembly Attaching parts for E.A1.81.108, E.A1.81.111 and E.F3.81.10889:-	4	-	-	2 3
	A1/1B	Bolt, 4BA	AR	-	-	2 4
28D/9436920	A25/2C	Bolt, 2BA	AR	-	C	2 5
	A16/Y/BP	Nut, 4BA	AR	-	-	2 6
28M/1278190	AGS.2001/C/1	Nut, 2BA	AR	-	C	2 7
28W/1010155	AGS.162/B	Washer, 4BA, spring	AR	-	C	2 8
28W/9419402	SP.13/C	Washer, 2BA	AR	-	C	2 9
28W/9419404	SP.16/C	Washer, 2BA	AR	-	C	2 10
	E.A1.81.15A	CONDUIT, 1.5/8" o/d	1	-	-	2 11
	E.G7.20.383	CONDUIT, assembly Attaching parts for E.G7.20.383:-	1	-	-	2 12
	E.A3.57.527	Washer	2	-	-	2 13
		Wire, locking	AR	DTD.189	-	
	E.A1.81.17	CONDUIT ON RIB 7, INNER WING, PORT, ASSEMBLY	-	-	-	2 14
	E.A1.81.18	CONDUIT ON RIB 7, INNER WING, STARBOARD, ASSEMBLY Spares for:- Are identical for port and starboard	-	-	-	2 15
9739	E.A1.81.102	CLIP, conduit securing	1	-	C	2 16
9751	E.A1.81.110	CLIP, conduit securing Attaching parts for E.A1.81.102 and E.A1.81.110:-	5	-	C	2 17
28D/9436920	A25/1C	Bolt, 2BA	AR	-	C	2 18
28D/9133011	A25/2C	Bolt, 2BA	AR	-	C	2 19
28M/9403520	A27/CP	Nut, 2BA	AR	-	C	2 20
28W/9416643	SP.47/C	Washer, 2BA	AR	-	C	2 21
9750	E.A1.81.17A	CONDUIT, 1 1/2" o/d. x 82" long x 20 SWG	1	T.9	C	2 22
	E.A1.81.13	CONDUITS IN OUTER WING, PORT, ASSEMBLY	-	-	-	
	E.A1.81.14	CONDUITS IN OUTER WING, STARBOARD, ASSEMBLY Spares for:- Are identical for port and starboard	-	-	-	
	AGS.605/1	CLIP, hose, securing sleeve	2	-	-	3 1
	E.A1.81.109	CLIP, conduit securing Attaching parts for E.A1.81.109:-	6	-	-	3 2
	A1/1B	Bolt, 4BA	AR	-	-	3 3
	A16/Y/BP	Nut, 4BA	AR	-	-	3 4
28W/1010155	AGS.162/B	Washer	AR	-	C	3 5

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A1.81.13/L	CONDUIT, 1" o/d. x 11ft. x 24 SWG	1	T.9	-	3 8
	E.A1.81.13/M	CONDUIT, 1" o/d. x 5 1/2 ft. x 24 SWG	1	T.9	-	3 7
	E.A1.81.13/N	SLEEVE, conduit coupling, 1 1/8" o/d. x 3" x 20 SWG	1	T.9	-	3 8
	E.H8.81.887	CONDUITS RADAR ALTERNATOR AND DOPPLER IN INNER WING, PORT, ASSEMBLY	-	-	-	
	E.H8.81.888	CONDUITS RADAR ALTERNATOR IN INNER WING, STARBOARD, ASSEMBLY	-	-	-	
		Spares for:- Are identical for port and starboard except where shown otherwise:-				
28E/9143385	AS.3180/18C	CLIP, conduit securing, port	8	-	C	3 9
28E/9143385	AS.3180/18C	CLIP, conduit securing, starboard	4	-	C	3 10
		Attaching parts for AS.3180/18C:-				
28D/9436920	A25/1C	Bolt, 28A	AR	-	C	3 11
28M/1278190	AGS.2001/C/1	Nut, 28A	AR	-	C	3 12
30970	EEAS.237/7A	Washer, 'D'	AR	-	C	3 13
	E.H8.81.921	CONDUIT, Doppler, 1 1/8" o/d. x 20 SWG, port only	1	L.54	-	3 14
	E.H8.81.899	CONDUIT, Radar alternator	1	-	-	3 15
	E.H8.81.923	FAIRLEAD, Doppler conduit, port only	2	-	-	3 16
	E.H8.81.911	FAIRLEAD, Radar alternator	2	-	-	3 17
		Attaching parts for E.H8.81.923 and E.H8.81.911:-				
28D/9140638	A25/4B	Bolt, 48A	2	-	C	3 18
	E.H8.81.295	ELECTRICAL EQUIPMENT, ARMAMENT, IN WING, PORT, ASSEMBLY	-	-	-	
	E.H8.81.296	ELECTRICAL EQUIPMENT, ARMAMENT, IN WING, STARBOARD, ASSEMBLY	-	-	-	
		Spares for:- Are identical for port and starboard except where shown otherwise:-				
	E.H8.81.29	BOX, JUNCTION, No.17, PORT, ASSEMBLY	1	-	-	4 1
	E.H8.81.30	BOX, JUNCTION, No.18, STARBOARD, ASSEMBLY	-	-	-	4 2
		Spares for:- Are identical for port and starboard except where shown otherwise:-				
	CZ.50207	BLOCK, terminal, 5-way	2	-	-	4 3
	CZ.23212/1	BLOCK, terminal, 20-way	1	-	-	4 4
28S/1011488	A32/8/28	BOLT, 48A, rd. hd.	6	-	C	4 5
	E.H6.81.439	BOX, junction No.17 port, assembly	1	-	-	4 6
	E.H6.81.440	BOX, junction, No.18 starboard, assembly	1	-	-	4 7
	E.A9.81.1711	LID, J.B.17, port, assembly	1	-	-	4 11
	E.A9.81.1713	LID, J.B.18, starboard, assembly	1	-	-	4 12
	Z.50213	LINK, commoning, 5-way	2	-	-	4 8
	Z.50211	LINK, commoning, 3-way	1	-	-	4 9
	Z.50210	LINK, commoning, 2-way	1	-	-	4 10

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28M/1278189	AGS.2001/8/1 CLARE ELLIOTT XA-1 02-24.00 508/1/07066/ 220 508/1/07049/ 220	. . . NUT, 4BA . . . RELAY, Type XA . . . SOCKET, fixed, Mk.7, 25-way . . . SOCKET, fixed, Mk 7, 12-way	8 1 1 1	- - - -	C - - C	4 13 4 14 4 15 4 16
17524	EEAS.43/3	. . . WASHER	1	-	C	4 17
1116	EEAS.43/2	. . . WASHER	1	-	C	4 18
		Attaching parts for E.H8.81 29 and E.H8.81.30:-				
28D/9133011	A25/2C	. . . Bolt, 2BA	4	-	C	4 19
28E/9436947	AS.3180/4B	. . . CLIP, fixing cables	6	-	C	4 20
28E/10030	AS.2295/5	. . . CLIP, spring, fixing cables	1	-	C	4 21
		Attaching parts for AS.3180/4B and AS.2295/5:-				
28D/1010658	A25/1B	. . . Bolt, 4BA	AR	-	C	4 22
28M/10328	AGS.2002/8/1	. . . Nut, 4BA	AR	-	C	4 23
28M/10286	AGS.2001/A/1	. . . Nut, 6BA	AR	-	C	4 24
28S/1200044	A31/A14	. . . Screw, 6BA	AR	-	C	4 25
28OK/9852	EEAS.238/1A	. . . Washer, 'O'	AR	-	C	4 26
	E.A3.81.2435	. ELECTRICAL EQUIPMENT IN ENGINE BAY, PORT, ASSEMBLY	-	-	-	
	E.A3.81.2436	. ELECTRICAL EQUIPMENT IN ENGINE BAY, STARBOARD, ASSEMBLY Spares for:- Are identical for port and starboard except where shown otherwise:-	-	-	-	
	E.A1.81.123	. . . BOX, JUNCTION NO.11, PORT, ASSEMBLY	1	-	-	5 1
	E.A1.81.124	. . . BOX, JUNCTION NO.12, STARBOARD, ASSEMBLY Spares for:- Are identical for port and starboard except where shown otherwise:-	1	-	-	5 2
	E.A1.81.117	. . . BOX, junction	1	-	-	5 3
	E.A1.81.119	. . . COVER, junction box No.11, port	1	-	-	5 4
	E.A1.81.120	. . . COVER, junction box No.12, starboard	1	-	-	5 5
5X/9194	508/1/06422	. . . PLUG, 9-way, size 'B'	3	-	C	5 6
5X/9195	509/1/08423	. . . PLUG, 6-way, size 'B'	1	-	C	5 7
5X/9200	508/1/06428	. . . PLUG, 12-way, size 'C'	1	-	C	5 8
5X/9201	508/1/06429	. . . PLUG, 14-way, size 'C'	1	-	C	5 9
	AGS.246/21	. . . SCREW, 4BA, fixing, J.B. cover	2	-	-	5 10
3823	EEAS.142	. . . TERMINAL, earth Attaching parts for EEAS.142:-	1	-	C	5 11
	AGS.1584/D	. . . Nut, 6BA	2	-	-	5 12
	AGS.248/30	. . . Screw, 6BA	2	-	-	5 13
	AGS.160/B	. . . WASHER, 4BA, for cover fixing screws	2	-	-	5 14

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
28D/9436920	A25/1C	Attaching parts for E.A1.81.123 and E.A1.81.124:-	4	—	C	6 16
28M/10288	AGS.2001/C/1	Bolt, 28A	4	—	C	6 16
28W/9419475	SP.15/C	Nut, 28A	4	—	C	6 17
	AS.471/C	Washer	4	—	C	6 17
		Washer, spacing	2	—	—	6 18
	AV/W50	BUCKLE, clipping cable to breather pipe	6	—	—	6 19
	E.A3.81.1965	CLAMP, fixing cable	2	—	—	6 20
	AGS.1617/9	CLEAT, fixing cables	7	—	—	6 21
	AS.491/20	CLIP, fixing cable	1	—	—	6 22
	AS.1900/C	CLIP, fixing cables, port	5	—	—	6 23
	AS.1900/C	CLIP, fixing cables starboard	6	—	—	6 24
	AS.1900/E	CLIP, fixing cables, port	2	—	—	6 25
	AS.1901/A	CLIP, fixing cables	23	—	—	6 26
	AS.1901/C	CLIP, fixing cable	1	—	—	6 27
	AS.1901/D	CLIP, fixing cable	1	—	—	6 28
		Attaching parts for E.A3.81.1965, AGS 1617/9, AS.491/20, AS.1900/C, AS.1900/E, AS.1901/A, AS.1901/C & AS.1901/D:-				
28D/1010658	A25/18	Bolt, 48A	AR	—	C	6 29
28D/1008149	A25/28	Bolt, 48A	AR	—	C	6 30
28D/1011006	A25/58	Bolt, 48A	AR	—	C	6 31
28M/10287	AGS.2001/B/1	Nut, 48A	AR	—	C	6 32
28W/9419474	SP.15/B	Washer	AR	—	C	6 33
	E.A3.81.561	FAIRLEAD	1	—	—	6 34
28D/1010658	A25/18	Attaching parts for E.A3.81.561:- Bolt, 48A	6	—	C	6 35
	E.H.8.81.25	ELECTRICAL EQUIPMENT, IN INNER WING, REAR, PORT, ASSEMBLY	1	—	—	
	E.H.8.81.26	ELECTRICAL EQUIPMENT, IN INNER WING, REAR, STARBOARD, ASSEMBLY	1	—	—	
		Spares for:- Are identical for port and starboard except where shown otherwise:-				
	E.H.8.81.453	BOX, JUNCTION NO 9, PORT, ASSEMBLY	1	—	—	6 1
	E.H.8.81.451	BOX, JUNCTION No 10, STARBOARD, ASSEMBLY	1	—	—	6 2
		Each consisting of the following except where shown otherwise:-				
5X/3181	CZ.23212/1	BLOCK, terminal 20-way	1	—	C	6 3
	E.A1.81.539	BOX, junction	1	—	—	6 4
5X/6168	Z.23197	GASKET	1	—	C	6 5
5X/2770	Z.22634	GROMMET, Helsyn, dummy	2	—	C	6 6
	E.A1.598	LID, junction box, port	1	—	—	6 7
	E.A1.598/D	LID, junction box, starboard	1	—	—	6 8
5X/8171	Z.50211	LINK, commoning, 3 way	1	—	C	6 9
28M/9403518	A27/AP	NUT, 68A	4	—	C	6 10
	EEAS 281/CZ	OUTLET, straight	1	—	—	6 11
28S/9446305	A43/928	SCREW, 49A	2	—	C	6 12
28S/1006948	A32/A12	SCREW, 68A	4	—	C	6 13
	†	SLEEVE, 3/8" long x 3 mm i/d.	20	—	—	6 14
28W/1206041	AGS.2035/B	WASHER, spring, 48A	2	—	C	6 15
28W/9419641	SP.47/A	WASHER, spring, 68A	4	—	C	6 16

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
		Attaching parts for E.HB.81.451 and E.HB.81.453:-				
	A1/5C	Bolt, 2BA	3	—	—	6 17
	A1/6C	Bolt, 2BA	1	—	—	6 18
	A16/Y/CA	Nut, 2BA	4	—	—	6 19
	E.A1.25/B	Tube, distance	1	—	—	6 20
	E.A1.25/A	Tube, distance	3	—	—	6 21
28W/1007983	AGS.162/C	Washer, 2BA, spring	4	—	C	6 22
28D/1010658	A25/1B	Bolt, 4BA, earthing cable	1	—	C	6 23
	AS.491/18	CLIP, fixing cables	2	—	—	6 24
	AS.491/22	CLIP, fixing cables	2	—	—	6 25
	AS.491/31	CLIP, fixing cables	4	—	—	6 26
	AS.491/39	CLIP, fixing cables	2	—	—	6 27
	AS.1900/D	CLIP, fixing cables	1	—	—	6 28
		Attaching parts for AS.491/18, AS.491/22, AS.491/31, AS.491/39 & AS.1900/D:-				
28D/1010658	A25/1B	Bolt, 4BA	AR	—	C	6 29
	A1/1C	Bolt, 2BA	AR	—	C	6 30
28M/1278189	AGS.2001/B/1	Nut, 4BA	AR	—	C	6 31
28W/1010155	AGS.162/B	Washer, 4BA, spring	AR	—	C	6 32
6A/1677	†	COMPENSATOR cold junction	1	—	B	6 33
		Attaching parts for Ref. 6A/1677:-				
28D/9706373	A25/2A	Bolt, 6BA	4	—	C	6 34
	E.A3.81.1473	FAIRLEAD, at ribs 5 and 6	2	—	—	6 35
		Attaching parts for E.A3.81.1473:-				
28D/1010142	A25/9B	Bolt, 4BA	3	—	C	6 36
28M/10287	AGS.2001/B/1	Nut, 4BA	3	—	C	6 37
28M/1006504	A27/T/8	Nut, 4BA	3	—	C	6 38
28W/9419474	SP.15/E	Washer, 4BA	3	—	C	6 39
	A16/Y/8P	NUT, 4BA, for earthing cable bolt	1	—	—	6 40
3416	EEAS.132/7	STRAP, cable, c/w buckle (7" long)	1	—	C	6 41
		Attaching parts for EEAS.132/7:-				
28D/9128739	AS.1248/4B	Bolt, 4BA	1	—	C	6 42
3420	EEAS.72	Plate, clamp	1	L.72	C	6 43
3417	EEAS.132/9	STRAP, cable, c/w buckle (9" long)	1	—	C	6 44
		Attaching parts for EEAS.132/9:-				
28D/1218386	AS.1248/3B	Bolt, 4BA	1	—	C	6 45
28M/10287	AGS.2001/B/1	Nut, 4BA	1	—	C	6 46
3420	EEAS.72	Plate, clamp	1	L.72	C	6 47
	E.A1.81.25/C	WASHER, for earthing cable bolt	1	Alum.	—	6 48
28W/1010155	AGS.152/B	WASHER, 4BA, spring, for earthing cable bolt	1	—	C	6 49

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.13	ELECTRICAL EQUIPMENT, IN LEADING EDGE, PORT, ASSEMBLY	—	—	—	
		Spares for:-				
9734	E.A3.81.559	BRACKET, mounting, air thermocouple bulb	2	—	C	7 1
6A/3684	†	BULB, thermocouple, type 'A', c/w compensating lead (Ref. No. 6A/3694, Type 'B')	2	—	A	7 2
28E/9436947	AS.3180/4B	CLIP, fixing cables	2	—	C	7 3
28E/1201807	AS.3180/5B	CLIP, fixing cables	3	—	C	7 4
28E/8108278	AS.3180/8B	CLIP, fixing cables	3	—	C	7 5
28E/9000883	AS.3180/9B	CLIP, fixing cables	4	—	C	7 6
28E/9138333	AS.3180/14B	CLIP, fixing cables	1	—	C	7 7
28E/14075	AS.3181/18B	CLIP, fixing cables	1	—	C	7 8
28E/9130756	AS.5419/12%	CLIP, fixing cables	1	—	C	7 9
		Attaching parts for AS.3180/4B, AS.3180/5B, AS.3180/8B, AS.3180/9B, AS.3180/14B, AS.3181/18B and AS.5419/12%:-				
	EEAS.552/6	Bobbin	1	—	—	7 10
28D/1010658	A25/1B	Bolt, 4BA	AR	—	C	7 11
28D/1008149	A25/2B	Bolt, 4BA	AR	—	C	7 12
28D/1010030	A25/7C	Bolt, 2BA	AR	—	C	7 13
28M/1278189	AGS.2001/B/1	Nut, 4BA	AR	—	C	7 14
28M/1278190	AGS.2001/C/1	Nut, 2BA	AR	—	C	7 15
28W/9419474	SP.15/B	Washer, 4BA	AR	—	C	7 16
28W/9419475	SP.15/C	Washer, 2BA	AR	—	C	7 17
10561	EEAS.237/6A	Washer, 'D'	AR	—	C	7 18
26DK/9852	EEAS.238/1A	Washer, 'D'	AR	—	C	7 19
5X/9491421	Z.22431	GROMMET	2	—	C	7 20
	E.A2.81.5755	PANEL, VOLTAGE REGULATOR, ASSEMBLY	1	—	—	7 21
		Spares for				
	E.A2.81.5753	PANEL	1	—	—	7 22
5UC/6360	†	REGULATOR, type 114	1	—	A	7 23
		Attaching parts for Ref. 5UC/6360.				
28D/1011238	A25/3E	Bolt, 1/2" BSP	4	—	C	7 24

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Pete No.
		1 2 3 4 5 6				
28D/9133011	A25/2C	Attaching parts for E.A2.81.5765:- Bolt, 2BA	4	—	C	7 26
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	7 26
	EEAS.146/4	SLEEVE	2	—	—	7 27
	EEAS.146/12	SLEEVE	4	—	—	7 28
5X/9482491	HC.500	TAG	4	—	C	7 29
	E.H8.81.15	ELECTRICAL EQUIPMENT, IN LEADING EDGE, STARBOARD, ASSEMBLY Spares for	—	—	—	
28E/9436947	AS.3180/4B	CLIP	2	—	C	8 1
28E/9003883	AS.3180/8B	CLIP	2	—	C	8 2
28E/1006317	AS.3180/11B	CLIP	2	—	C	8 3
28E/9450598	AS.3180/20C	CLIP	1	—	C	8 4
		Attaching parts for: AS.3180/4B, AS.3180/8B, AS.3180/11B and AS.3180/20C:-				
	EEAS.552/6	Robin	1	—	—	8 5
28D/1010658	A25/1B	Bolt, 4BA	AR	—	C	8 6
28D/1008149	A25/2B	Bolt, 4BA	AR	—	C	8 7
28D/1010030	A25/7C	Bolt, 2BA	AR	—	C	8 8
28M/1279190	AGS.2001/C/1	Nut, 2BA	AR	—	C	8 9
10561	EEAS.237/8A	Washer, 12	AR	—	C	8 10
26DK/9852	EEAS.238/1A	Washer, 12	AR	—	C	8 11
	E.A2.81.5765	PAVE VOLTAGE REGULATOR, ASSEMBLY Spares for	1	—	—	8 12
	E.A2.81.5754	PANEL	1	—	—	8 13
5UC/6360	1	REGULATOR, type 114	1	—	A	8 14
		Attaching parts for RE. 5UC/6360 -				
28D/1011238	A25/3E	Bolt, 1/2" 35"	4	—	C	8 15
		Attaching parts for E.A2.81.5765:-				
28D/9133011	A25/2C	Bolt, 2BA	4	—	C	8 16
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	8 17

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.81.17	ELECTRICAL EQUIPMENT, ON LEADING EDGE, DIAPHRAGM, PORT, ASSEMBLY	—	—	—	
	E.H8.81.19	ELECTRICAL EQUIPMENT, ON LEADING EDGE, DIAPHRAGM, STARBOARD, ASSEMBLY Spares for: Are identical port and starboard except where shown otherwise:-	—	—	—	
	E.A9.81.1095	BLOCK, connector Attaching parts for E.A9.81.1095:	1	—	—	9 1
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	9 2
28S/1005622	A31/B/28	Screw, 4BA	2	—	C	9 3
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	9 4
	E.H8.81.135	BOX, JUNCTION, No.7, PORT, ASSEMBLY	1	—	—	9 5
	E.H8.81.125	BOX, JUNCTION, No.8, STARBOARD, ASSEMBLY Spares for: Are identical port and starboard except where shown otherwise:-	1	—	—	9 6
5X/3181	CZ.23212/1	BLOCK, terminal, 20-way Attaching parts for CZ.23212/1:-	2	—	C	9 7
	AGS.246/24	Screw, 4BA	4	—	—	9 8
	E.A1.81.583	BOX, junction, 40-way, complete	1	—	—	9 9
	E.A1.81.592/D	COVER, assembly, port	1	—	—	9 10
	E.A1.81.597/E	COVER, assembly, starboard	1	—	—	9 11
5X/2790	Z.22634	GROMMET, Hel'syn, dummy, starboard	4	—	C	9 14
	Z.50215	LINK, 7-way, port	1	—	—	9 12
5X/6173	Z.50213	LINK, 6-way, starboard	1	—	C	9 13
5X/6185	CZ.50361	PLUG, 26-way, size D	2	—	C	9 15
	or					
5X/7159	2CZ.111229	PLUG, 26-way, size D	2	—	C	9 16
5X/6184	CZ.50360	PLUG, 12-way, size C	1	—	C	9 17
	or					
5X/7151	2CZ.111226	PLUG, 12-way, size C	1	—	C	9 18
5X/6091	CZ.28 08	PLUG, 14-way, size C	1	—	C	9 19
	or					
5X/7152	2CZ.111227	PLUG, 14-way, size C	1	—	C	9 20
28E/9436947	AS.3180/4B	CLIP, fixing cables, port	1	—	C	10 1
28E/1200549	AS.3180/8C	CLIP, fixing cables, starboard	1	—	C	10 2
28E/1201807	AS.3181/5B	CLIP, fixing cables, starboard	2	—	C	10 3
28E/8018278	AS.3181/8B	CLIP, fixing cables, port	3	—	C	10 4
28E/3018278	AS.3181/8B	CLIP, fixing cables, starboard	1	—	C	10 5
28E/1010245	AS.3181/15B	CLIP, fixing cables, port	6	—	C	10 6
28E/8108278	AS.3180/8B	CLIP, fixing cables, starboard	1	—	C	10 7
		Attaching parts for AS.3180/4B, AS.3180/8C, AS.3181/5B, AS.3181/8B, AS.3181/15B and AS.3180/8B:-				
28D/1010658	A25/19	Bolt, 4BA	AR	—	C	10 8
28D/9436920	A25/1C	Bolt, 2BA, starboard	AR	—	C	10 9
28M/1278189	AGS.2001/B/1	Nut, 4BA	AR	—	C	10 10
28M/1278190	AGS.2001/C/1	Nut, 2BA, starboard	AR	—	C	10 11
28W/9419465	SP.13/B	Washer, 4BA	AR	—	C	10 12
28W/9419474	SP.15/B	Washer, 4BA	AR	—	C	10 13

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.N. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A1.81.989	FAIRLEAD, for air mileage unit cables, port. Attaching parts for E.A1.81.989:-	1	—	—	10 14
28D/1010658	A25/1B	Bolt, 4BA	6	—	C	10 15
28M/1278189	AGS.2001/B/1	Nut, 4BA	6	—	C	10 16
28W/9419474	SP.15/B	Washer, 4BA	6	—	C	10 17
	E.A1.81.1099	FAIRLEAD, half, at rib No.1, port	2	—	—	10 18
	E.A3.81.3059	FAIRLEAD, half, at rib No.1, starboard Attaching parts for E.A1.81.1099 and E.A3.81.3059:-	2	—	—	10 19
28D/9133013	A25/3C	Bolt, 2BA	3	—	C	10 20
28M/1278190	AGS.2001/C/1	Nut, 2BA	3	—	C	10 21
28W/9419475	SP.15/C	Washer, 2BA	3	—	C	10 22
3417	EEAS.132/9	STRAP, c/w buckle, port	5	—	C	10 23
	EEAS.132/2	STRAP, c/w buckle, starboard Attaching parts for EEAS.132/9 and EEAS.132/2:-	5	—	—	10 24
28D/1007982	AS.1248/1C	Bolt, 2BA	1	—	C	10 25
28M/1278190	AGS.2001/C/1	Nut, 2BA	1	—	C	10 26
	E.A3.81.1955	Piece, backing	1	—	—	10 27
	E.A9.81.1097	STUD, connector Attaching parts for E.A9.81.1097:-	1	—	—	9 21
28M/10291	AGS.2001/G/1	Nut, 5/16" BSF	2	—	C	9 22
28M/1006939	A27/GP	Nut, 5/16" BSF	2	—	C	9 23
	H.V.3974	Shroud	1	—	—	9 24
	H.V.2962	Shroud	1	—	—	9 25
13195	EEAS.28/23E ^o	Washer, 5/16" plain	4	—	C	9 26
28W/	121/B	Washer, 5/16" shakeproof	2	—	—	9 27
28S/1012358	A43/B32	TERMINAL, bolt earthing, JB.7 and JB.8 to rib No.1 Attaching parts for A43/B32:-	1	Brass	C	9 28
28M/9136152	A54/B	Nut, 4BA	2	Brass	C	9 29
28M/1278190	AGS.2001/B/1	Nut, 4BA	1	—	C	9 30
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	9 31
28W/9437455	SP.25/B	Washer, 4BA	2	—	C	9 32
37A/1790	10TS/3	UNIT, high energy ignition Attaching parts for 10TS/3:-	2	—	A	10 28
28D/1011247	A25/13E	Bolt, 1/2" BSF	3	—	C	10 29
28W/9419405	SP.15/E	Washer, 1/2"	3	—	C	10 30

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
5L/9956705 5CX/2052	†	FILAMENT, 26v, 350w, port only	1	—	C	3 19
	†	LAMP, landing, type K, Mk.1 port only	1	—	A	3 20
	E.H8.81.31	LOOMS, CABLE, PORT, ASSEMBLY	—	—	—	
		Spares for:-				
	E.B7.81.5491	CABLE, ASSEMBLY — EP	1	—	—	
	E.86.81.527	CABLE, ASSEMBLY — E7	1	—	—	
	E.86.81.531	CABLE, ASSEMBLY — E9	1	—	—	
	E.A1.81.875/1	CABLE, ASSEMBLY — E11	2	—	—	
	E.A4.81.5393	CABLE, ASSEMBLY — P9	1	—	—	
	E.A9.81.1483	CABLE, ASSEMBLY — P31	1	—	—	
	E.A1.81.876/1	CABLE, ASSEMBLY — 7A	1	—	—	
	E.A1.81.819/1	CABLE, ASSEMBLY — 7A1	1	—	—	
	E.B7.81.1295	CABLE, ASSEMBLY — 7A2	1	—	—	
	E.B7.81.1325	CABLE, ASSEMBLY — 7A3	1	—	—	
	E.A1.81.881/1	CABLE, ASSEMBLY — 7A4	1	—	—	
	E.H8.81.335	CABLE, ASSEMBLY — 7C	1	—	—	
	E.A3.81.5877/2	CABLE, ASSEMBLY — 7F and 7D	1	—	—	
		Spares for:-				
5X/7038	2CZ.84872	SOCKET, 2 pin, size A	1	—	C	
	or					
5X/	2CZ.111692	SOCKET, 2 pin, size A	1	—	—	
5X/7039	2CZ.84872	SOCKET, 4 pin, size A	1	—	C	
	or					
5X/	2CZ.111693	SOCKET, 4 pin, size A	1	—	—	
	E.A3.81.3067	CABLE, ASSEMBLY — 7G	1	—	—	
	E.A3.81.3063	CABLE, ASSEMBLY — 7H	1	—	—	
	E.A3.81.3065	CABLE, ASSEMBLY — 7J	1	—	—	
	E.A3.81.3069	CABLE, ASSEMBLY — 7K	1	—	—	
	E.A3.04.11989	CABLE, ASSEMBLY — 7L	1	—	—	
	E.A3.04.10693	CABLE, ASSEMBLY — 7P	1	—	—	
	E.A3.81.1583	CABLE, ASSEMBLY — 9B	1	—	—	
	E.A3.81.1591	CABLE, ASSEMBLY — 9B1	1	—	—	
	E.A3.81.1593	CABLE, ASSEMBLY — 9B2	1	—	—	
	E.A3.31.895/1	CABLE, ASSEMBLY — 9B3	1	—	—	
	E.A3.31.5321	CABLE, ASSEMBLY — 9B4	1	—	—	
	E.A3.31.6319	CABLE, ASSEMBLY — 9B5	1	—	—	
	E.A3.81.877	CABLE, ASSEMBLY — 9D	1	—	—	
	E.A3.81.1469	CABLE, ASSEMBLY — 9F	1	—	—	
	E.H8.81.1017	CABLE, ASSEMBLY — 9H	1	—	—	
	E.A3.81.6451	CABLE, ASSEMBLY — 11A,B,K and M	1	—	—	
		Spares for				
5X/6004	CZ.27900	SOCKET, 2 pin, size A	1	—	C	
	or					
5X/7038	2CZ.84872	SOCKET, 2 pin, size A	1	—	C	
5X/6421	CZ.50416	SOCKET, 1 pin, size A	1	—	C	
	or					
5X/7127	2CZ.108943	SOCKET, 1 pin, size A	1	—	C	
5X/6039	CZ.27907	SOCKET, 9 pin, size B	1	—	C	
	or					
5X/7045	2CZ.94875	SOCKET, 9 pin, size B	1	—	C	

**ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Picta No.
		1 2 3 4 5 6				
	E.A3.81.2461/2	CABLE, ASSEMBLY - 11D Spares for -	1	-	-	
5X/9126	508/1/03992	SOCKET, 9 pin, size B	1	-	C	
	or					
5X/7045	2CZ.84875	SOCKET 9 pin, size B	1	-	C	
	E.A3.81.2463/2	CABLE, ASSEMBLY - 11F Spares for -	1	-	-	
5X/9126	508/1/03992	SOCKET 9 pin, size B	1	-	C	
	or					
5X/7045	2CZ.84875	SOCKET, 9 pin, size B	1	-	C	
5X/9121	508/1/03987	SOCKET, 4 pin, size A	1	-	C	
	or					
5X/7039	2CZ.84873	SOCKET, 4 pin, size A	1	-	C	
	E.A3.81.6441	CABLE, ASSEMBLY - 11M1	1	-	-	
	E.A3.81.6443	CABLE, ASSEMBLY - 11M2	1	-	-	
	E.A3.81.6445	CABLE, ASSEMBLY - 11R	1	-	-	
	E.A3.81.6445	CABLE, ASSEMBLY - 11R1	1	-	-	
	E.A3.81.6447	CABLE, ASSEMBLY - 11R2	1	-	-	
	E.A3.81.6449	CABLE, ASSEMBLY - 11R3	1	-	-	
	E.H8.81.779	CABLE, ASSEMBLY - 4A*	1	-	-	
5K/2374	AGS.1725/1	DRC, blanking	2	-	C	
6A/1942	†	LEAD, extension for thermocouples	4	-	B	
	E.A3.04.11191	LEAD, H.T. ignition	1	-	-	
	E.A3.04.11189	LEAD, H.T. ignition	1	-	-	
5K/88	AGS.1658/1	NUFF, cable gland	2	-	C	
	E.H8.81.32	LOOMS, CABLE, STARBOARD, ASSEMBLY Spares for -		-	-	
	E.B7.81.5485	CABLE, ASSEMBLY - E5	1	-	-	
	E.A3.81.3057	CABLE, ASSEMBLY - E8	1	-	-	
	E.B6.81.533	CABLE, ASSEMBLY - E10	1	-	-	
	E.A1.81.870/1	CABLE, ASSEMBLY - E12	2	-	-	
	E.H8.81.777	CABLE, ASSEMBLY - E10	1	-	-	
	E.A9.81.1491	CABLE, ASSEMBLY - S32	1	-	-	
	E.H8.91.775	CABLE, ASSEMBLY - 4B1	1	-	-	
	E.A1.81.871/1	CABLE, ASSEMBLY - 8A	1	-	-	
	E.A1.81.820/1	CABLE, ASSEMBLY - 8A1	1	-	-	
	E.B7.81.1327	CABLE, ASSEMBLY - 8A2	1	-	-	
	E.B7.81.1329	CABLE, ASSEMBLY - 8A3	1	-	-	
	E.A1.81.829/1	CABLE, ASSEMBLY - 8A4	1	-	-	
	E.B7.81.1331	CABLE, ASSEMBLY - 8A5	1	-	-	
	E.A1.81.880/1	CABLE, ASSEMBLY - 8A6	1	-	-	
	E.A3.81.5879/2	CABLE, ASSEMBLY - 8* 8D Spares for -	1	-	-	
5X/7038	2CZ.84872	SOCKET, 4 pin, size A	1	-	C	
	or					
5X/	2CZ.111692	SOCKET, 2 pin, size A	1	-	-	
5X/7039	2CZ.84872	SOCKET, 4 pin, size A	1	-	C	
	or					
5X/	2CZ.111693	SOCKET, 4 pin, size A	1	-	-	

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A.1.81.818/2	CABLE, ASSEMBLY - 8H	1	-	-	
	E.A.1.81.818/2	CABLE, ASSEMBLY - 8J	1	-	-	
	E.A.3.81.2457/2	CABLE, ASSEMBLY - 8K	1	-	-	
	E.A.3.04.11991	CABLE, ASSEMBLY - 8L	1	-	-	
	E.A.3.04.10695	CABLE, ASSEMBLY - 8P	1	-	-	
	E.A.3.81.1584	CABLE, ASSEMBLY - 10B	1	-	-	
	E.A.3.81.1592	CABLE, ASSEMBLY - 10B1	1	-	-	
	E.A.3.81.1594	CABLE, ASSEMBLY - 10B2	1	-	-	
	E.A.3.81.896/1	CABLE, ASSEMBLY - 10B3	1	-	-	
	E.A.3.81.6317	CABLE, ASSEMBLY - 10B4	1	-	-	
	E.A.3.81.8315	CABLE, ASSEMBLY - 10B5	1	-	-	
	E.A.3.81.1470	CABLE, ASSEMBLY - 10F	1	-	-	
	E.A.3.81.2433	CABLE, ASSEMBLY - 10G	1	-	-	
	E.A.3.81.1015	CABLE, ASSEMBLY - 10H	1	-	-	
	E.A.3.81.8467	CABLE, ASSEMBLY - 12A,B,K,M	1	-	-	
	E.A.3.81.2467/2	CABLE, ASSEMBLY - 12D	1	-	-	
		Spares for:				
5X/9126	508/103992	SOCKET, 3 pin, size B	1	-	C	
	or					
5X/7045	2C7.84875	SOCKET, 3 pin, size B	1	-	C	
	E.A.3.81.2469/2	CABLE, ASSEMBLY - 12F	1	-	-	
	E.A.3.81.6455	CABLE, ASSEMBLY - 12M1	1	-	-	
	E.A.3.81.6457	CABLE, ASSEMBLY - 12M2	1	-	-	
	E.A.3.81.6459	CABLE, ASSEMBLY - 12M3	1	-	-	
	E.A.3.81.6459	CABLE, ASSEMBLY - 12R	1	-	-	
		Spares for:				
5X/9127	508/103993	SOCKET, 3 pin, size B	1	-	C	
	or					
5X/7129	2C7.108946	SOCKET, 3 pin, size B	1	-	C	
	E.A.3.81.6461	CABLE, ASSEMBLY - 12R1	1	-	-	
	E.A.3.81.6463	CABLE, ASSEMBLY - 12R2	1	-	-	
	E.A.3.81.6465	CABLE, ASSEMBLY - 12R3	1	-	-	
5K/2374	AGS.1725/1	DISC, blank	2	-	C	
6A/1942	*	LEAD, extension for thermocouples	4	-	B	
	E.A.3.04.11193	LEAD, extension	1	-	-	
	E.A.3.04.11195	LEAD, extension	1	-	-	
5X/88	AGS.1658/1	NUT, cable gland	2	-	C	
	E.A.3.81.42	LOOMS, CABLE INSTRUMENT	-	-	-	
		STARBOARD ASSEMBLY				
		Spares for:				
	E.A.3.81.917	CABLE, ASSEMBLY - D1A-D1	-	-	-	
		Spares for:				
10H/0560180	CZ.49126	SOCKET, 4 pin	1	-	C	
	E.A.3.81.919	CABLE, ASSEMBLY - D1B-D1A	1	-	-	
		Spares for:				
10H/0560360	CZ.49458	PLUG, assembly	1	-	C	
	E.48.80.151	METER, FATIGUE, STARBOARD,	-	-	-	3 21
		ASSEMBLY				
		Spares for:				
6A/9657	*	METER, fatigue, type 16	1	-	A	3 22
		Attaching parts for Ref. 6A/9657 -				
		Are supplied with fatigue meter.				

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS


Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.A. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A1.81.27	WIRING, JET PIPE THERMOCOUPLES, PORT, ASSEMBLY	—	—	—	
	E.A1.81.28	WIRING, JET PIPE THERMOCOUPLES, STARBOARD, ASSEMBLY	—	—	—	
		Spares for:- Are identical for port and starboard assemblies:-				
5CZ/430	†	BLOCK, terminal, type B No.1	4	—	C	11 1
28S/1011495	A33/A32	Attaching parts for Ref. 5CZ/430:-				
	BROWN BROS.	Screw, 6 BA	2	—	C	11 2
29H/2100	AV/W50	CLIP, thermocouple leads	3	—	C	11 3
	E.B7.81.1307	WIRING, MAIN UNDERCARRIAGE, PORT, ASSEMBLY	—	—	—	
	E.B7.81.1308	WIRING, MAIN UNDERCARRIAGE, STARBOARD, ASSEMBLY	—	—	—	
		Spares for:- Are identical for port and starboard, except where shown otherwise:-				
5C/868	†	BLOCK, terminal, 5 way type B No.1	1	—	C	11 4
5C/430	†	BLOCK, terminal, 2 way type B No.1 starboard	2	—	C	11 5
		Attaching parts for Ref. 5C/868 and 5C/430:-				
28M/10286	AGS.2001/A/1	Nut, 6 BA	2	—	C	11 6
28S/1200062	A33/A20	Screw, 6 BA	2	—	C	11 7
28E/9436819	AS.3180/3B	CLIP, 'P' fixing cables	2	—	C	11 8
28E/1201807	AS.3180/5B	CLIP, 'P' fixing cables	3	—	C	11 9
28E/9000882	AS.3180/7B	CLIP, 'P' fixing cables, port	1	—	C	11 10
28E/8018278	AS.3180/8B	CLIP, 'P' fixing cables	2	—	C	11 11
28E/1201810	AS.3180/10B	CLIP, 'P' fixing cables, starboard	2	—	C	11 12
28E/8018280	AS.3180/7C	CLIP, 'P' fixing cables, port	3	—	C	11 13
28E/8018282	AS.3180/9C	CLIP, 'P' fixing cables, starboard	3	—	C	11 14
		Attaching parts for AS.3180/3B, AS.3180/5B, AS.3180/7B, AS.3180/8B, AS.3180/10B, AS.3180/7C and AS.3180/9C:-				
28D/1010658	A25/1B	Bolt, 4 BA	AR	—	C	11 15
28M/1278189	AGS.2001/B/1	Nut, 4 BA	AR	—	C	11 16
28S/1200080	A32/98	Screw, 4 BA	AR	—	C	11 17
28S/9992525	A32/B12	Screw, 4 BA	AR	—	C	11 18
28W/9416642	SP.47/B	Washer, 4 BA spring	AR	—	C	11 19
5CW/11254	†	SWITCH, micro, type 1HY1, port	2	—	B	11 27
5CW/11254	†	SWITCH, micro, type 1HY1, starboard	3	—	B	11 28
	DOWTY					
5CW/12444	DN.1322.Z Mk.2	SWITCH, micro, port (Mod 4449)	2	—	B	11 20
	DOWTY					
5CW/12444	DN.1322.Z Mk.2	SWITCH, micro, starboard (Mod 4449)	3	—	B	11 21
		Attaching parts for DN.1322.Z Mk.2:-				
2029	E.A1.20.1245	Bolt, special	2	—	C	11 22
28D/1010029	A25/6B	Bolt, 4 BA	2	—	C	11 23
28M/9403520	A27/CP	Nut, 2 BA	2	—	C	11 24
28W/1206041	AGS.2035/B	Washer, 4 BA shakeproof	2	—	C	11 25
28W/1006946	AGS.2035/C	Washer, 2 BA shakeproof	2	—	C	11 26

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Page No.
		1 2 3 4 5 6				
	E.H7.81.741	WIRING, AND ELECTRICAL EQUIPMENT, OUT BOARD OF RIB 8, PORT, ASSEMBLY	—	—	—	
	E.H7.81.742	WIRING, AND ELECTRICAL EQUIPMENT, OUT BOARD OF RIB 8, STARBOARD, ASSEMBLY Spares for: Are identical for port and starboard except where shown otherwise	—	—	—	
5CZ/4301	E.A1.81.1047	BLOCK, contact, assembly	1	—	C	12 1
5X/8287	CZ.50178	BLOCK, terminal, type 1, 2 way	1	—	C	12 2
5X/8288	CZ.50179	BLOCK, terminal, type 1, 3 way Attaching parts for CZ.50178 and CZ.50179	1	—	C	12 3
28S/9130752	A43/B24	Screw, 4 BA	2	—	C	12 4
5CZ/868	*	BLOCK, terminal, type 8 No.1 Attaching parts for Ref. 5CZ/868	1	—	C	12 5
9529	E.A3.81.2563	CLIP, socket support, starboard Attaching parts for E.A3.81.2563	1	—	C	12 6
28D/1272940	A61/20	Bolt, 2 BA	2	—	C	12 7
	E.H7.81.745	PLATE, base, resistor assembly	1	—	—	12 8
	E.H7.81.743	PLATE, base, resistor assembly	1	—	—	12 9
10W/0241028	P.2001/F/15	RESISTOR, 15 ohm, 20 watt	3	—	C	12 10
5F/9454141	NY.18007A	STRAP	QR	—	C	12 11
5F/9138822	NY.3342	STUD	QR	—	C	12 12
5X/9450396	HC490	TAG	2	—	C	12 13
	E.A3.81.1663	WIRING, RIB 22R, OUTER WING PORT, ASSEMBLY Spares for:	—	—	—	
28E/	AS 1900/C	CLIP, fixing cables Attaching parts for AS 1900/C	5	—	—	12 14
28D/1010658	A25/12	Bolt, 4 BA	1	—	C	12 16
28W/	A16.Y/BP	Nut, 4 BA	1	—	—	12 16
28W/1010156	AGS.162/8	Washer, 4 BA	1	—	C	12 17
	E.A3.81.1664	WIRING, RIB 22R, OUTER WING, STARBOARD, ASSEMBLY Spares for:	—	—	—	
	E.A3.81.1537	BOX, JUNCTION G4B, ASSEMBLY Spares for:	1	—	—	12 18
5X/3277	703/1/00232	BLOCK, terminal Attaching parts for Ref. 5X/3277:-	1	—	C	12 19
28M/1278189	AGS.2001/B/1	Nut, 4 BA	2	—	C	12 20
28S/1005622	A31/B28	Screw, 4 BA	2	—	C	12 21
	E.A3.81.1539	BOX, junction	1	—	—	12 22
	E.A3.81.1543	LID, assembly	1	—	—	12 23

ELECTRICAL
ELECTRICAL EQUIPMENT IN WINGS

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28D/9436020	A25/10	Attaching parts for E.A3.81 1537 Bolt, 2 BA	4	—	—	12 24
	CZ.23144/8	CLAMP, fixing cables at junction box G48	2	—	—	12 26
	or					
28E/	AGS.605/00	CLIP	2	—	—	12 26
28E/	AS.3180/48	CLIP, fixing cables	4	—	—	12 27
	AS.491/27	CLIP, fixing cables	2	—	—	12 28
		Attaching parts for AS.3180/48 and AS.491/27:-				
28D/101065R	A25/18	Bolt, 4 BA	AR	—	C	12 29
	A16/Y/8P	Nut, 4 BA	AR	—	—	12 30
28M/1278180	AGS.2001/81	Nut, 4 BA	AR	—	C	12 31
28W/1010155	AGS.162/8	Washer, 4 BA spring	AR	—	C	12 32

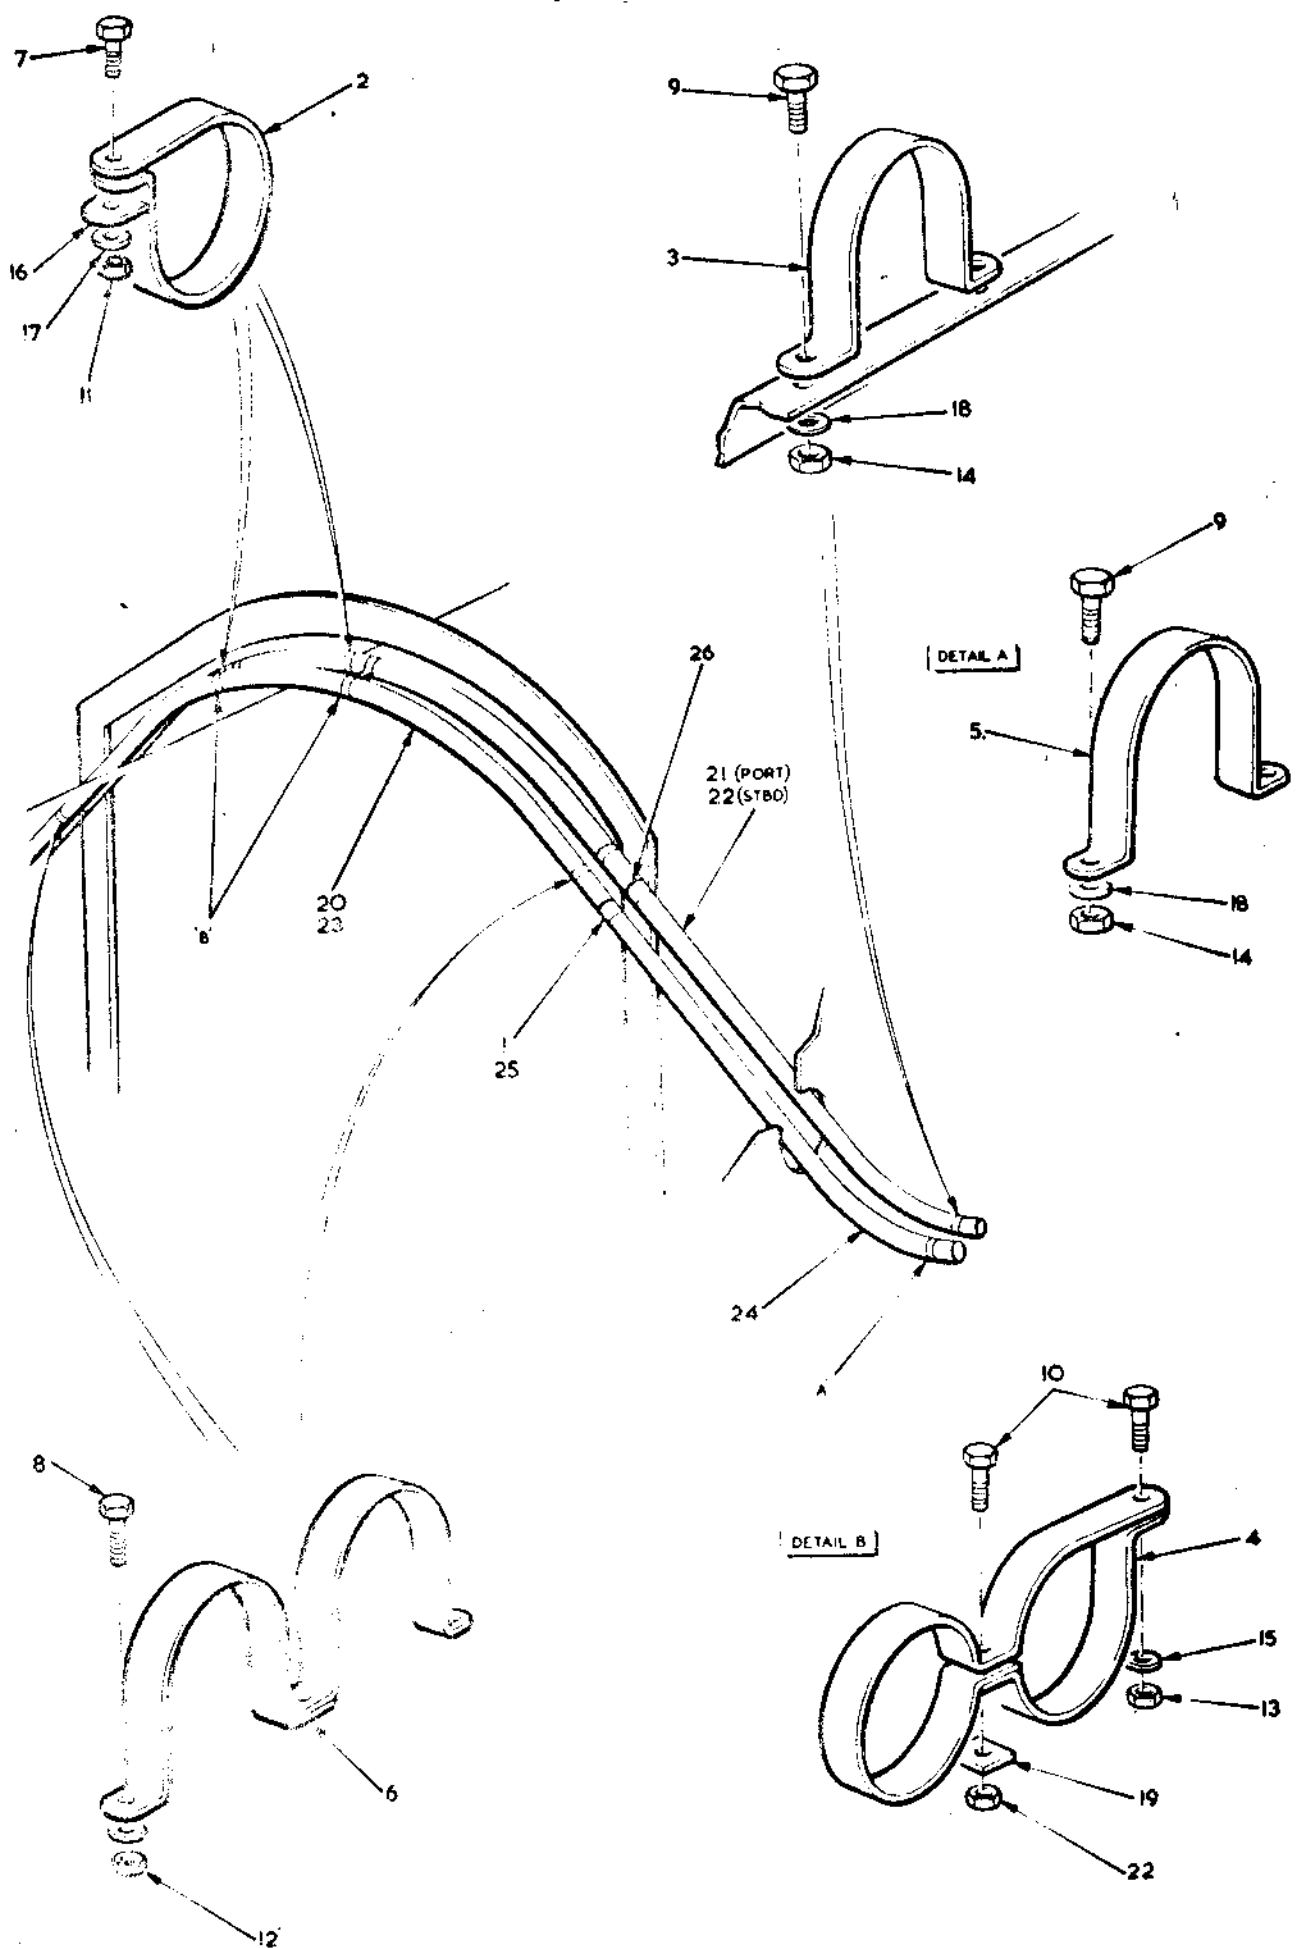

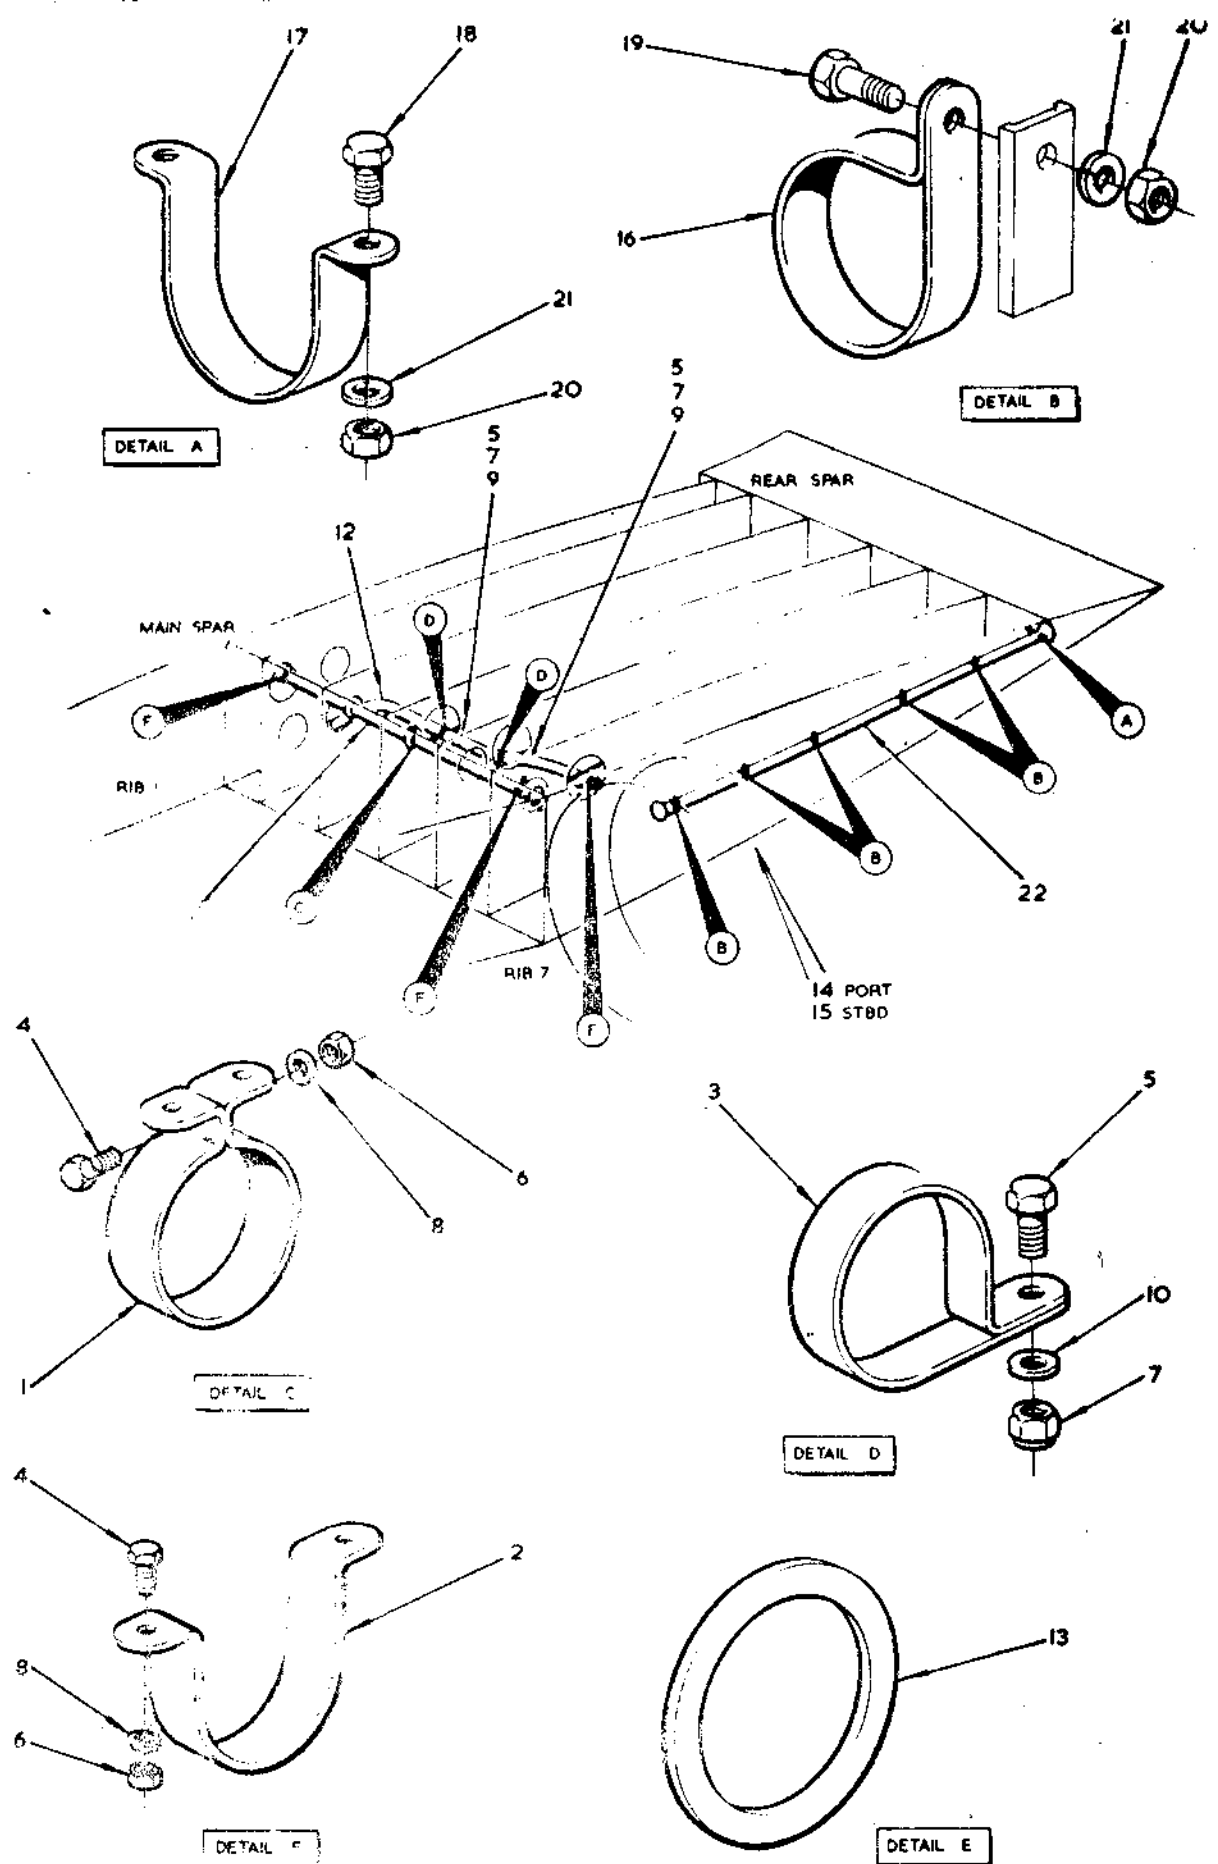


FIG.2 ELECTRICAL EQUIPMENT IN WINGS

CODE AB

SECT ED

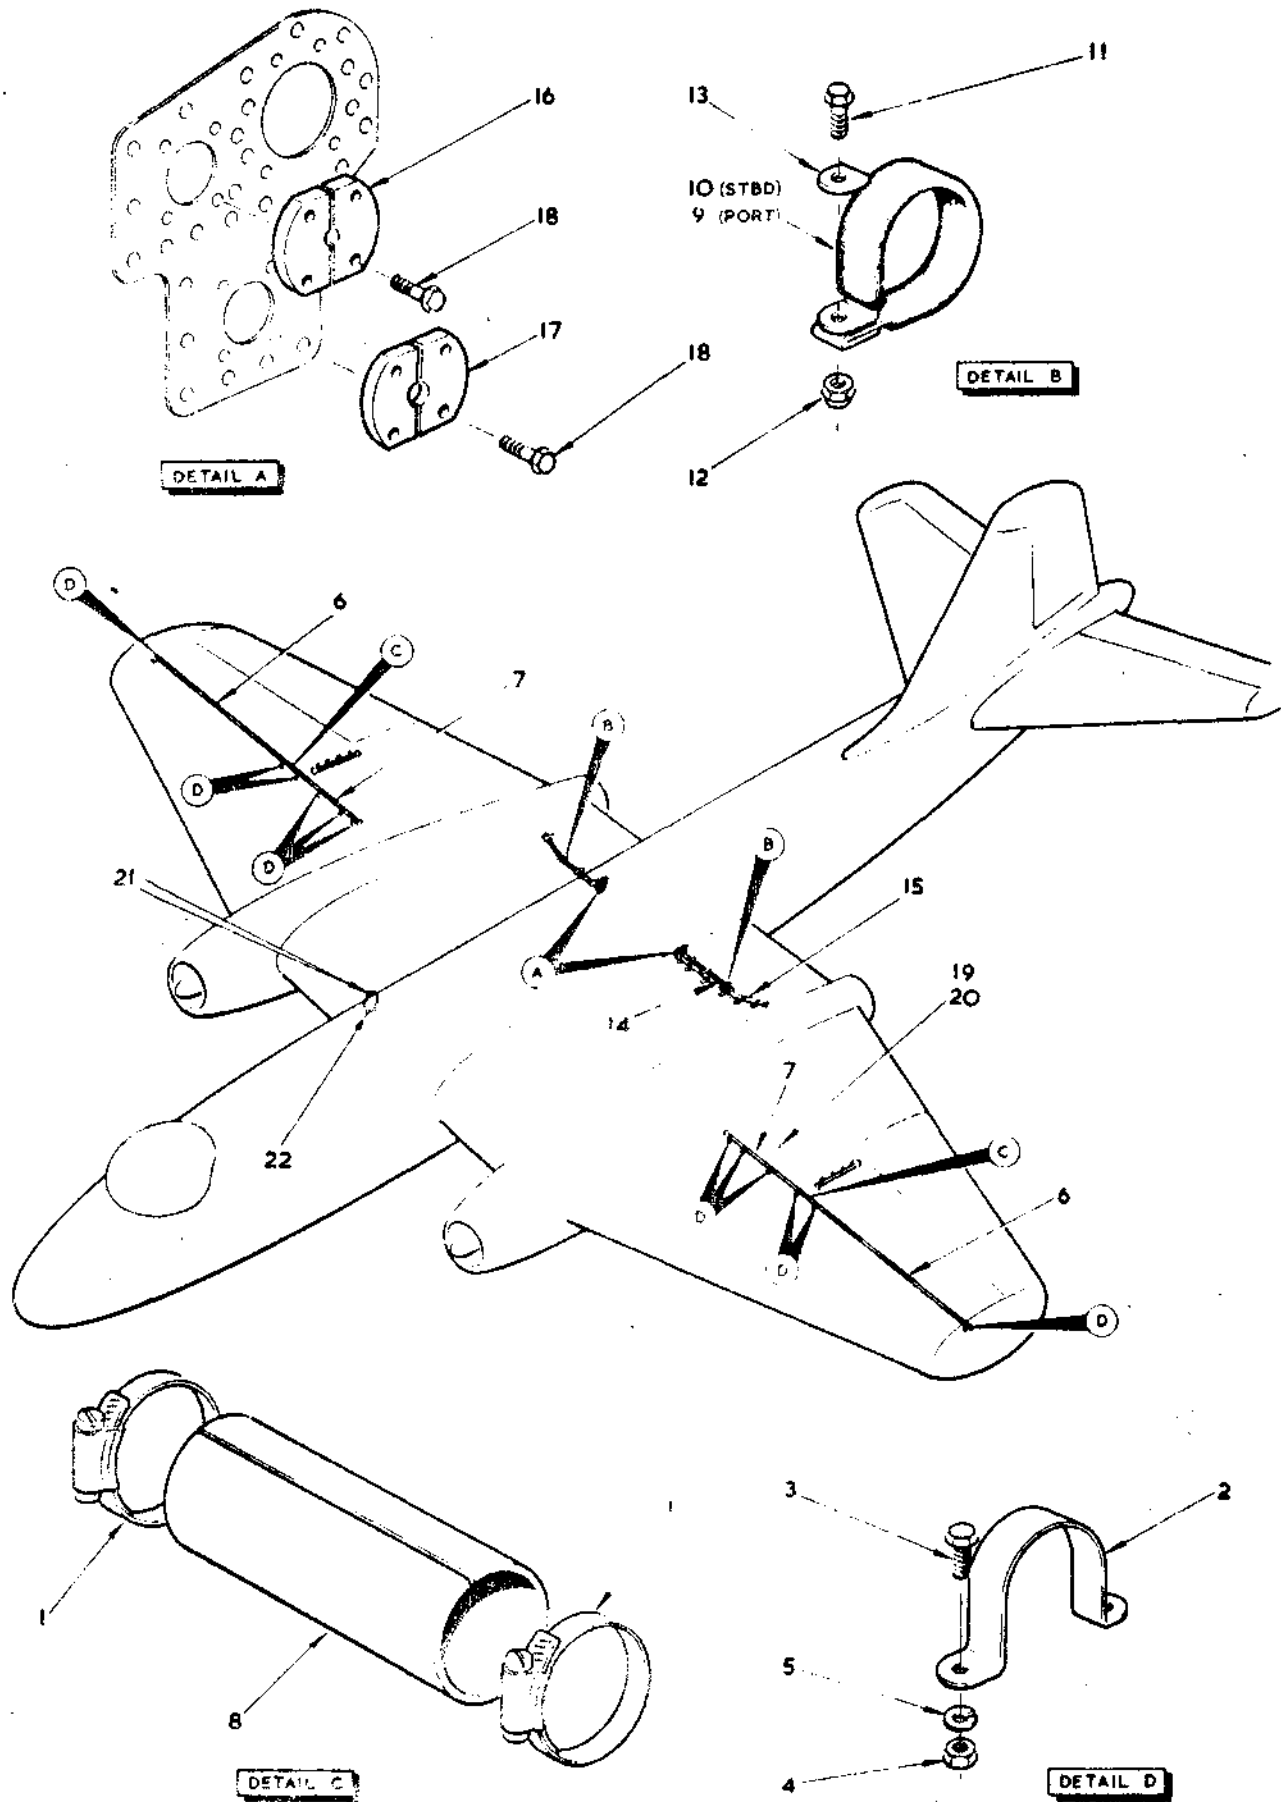


FIG.3 ELECTRICAL EQUIPMENT IN WINGS

CODE A

SECT ED

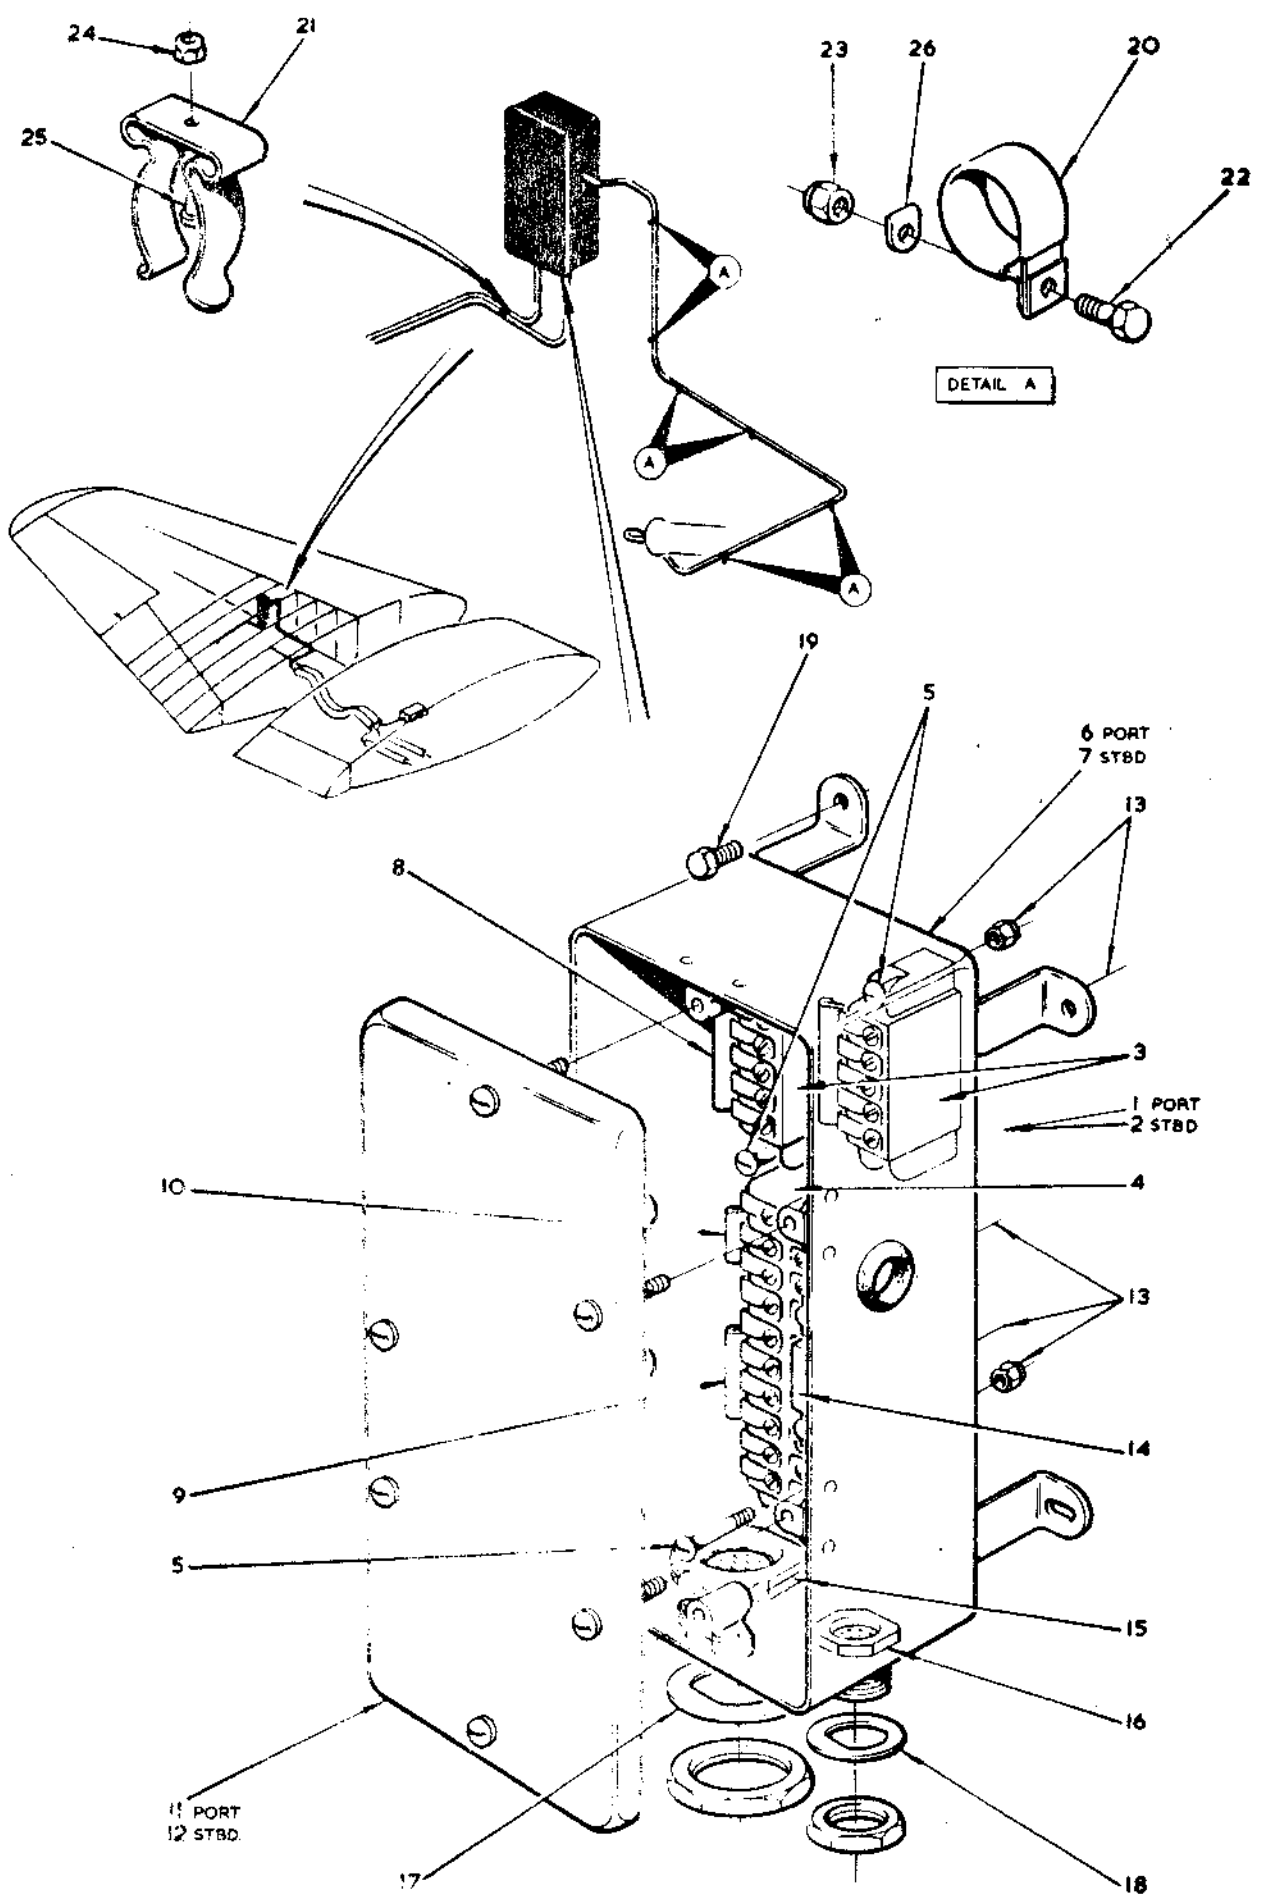


FIG.4 ELECTRICAL EQUIPMENT IN WINGS

CODE AB

SECT E D

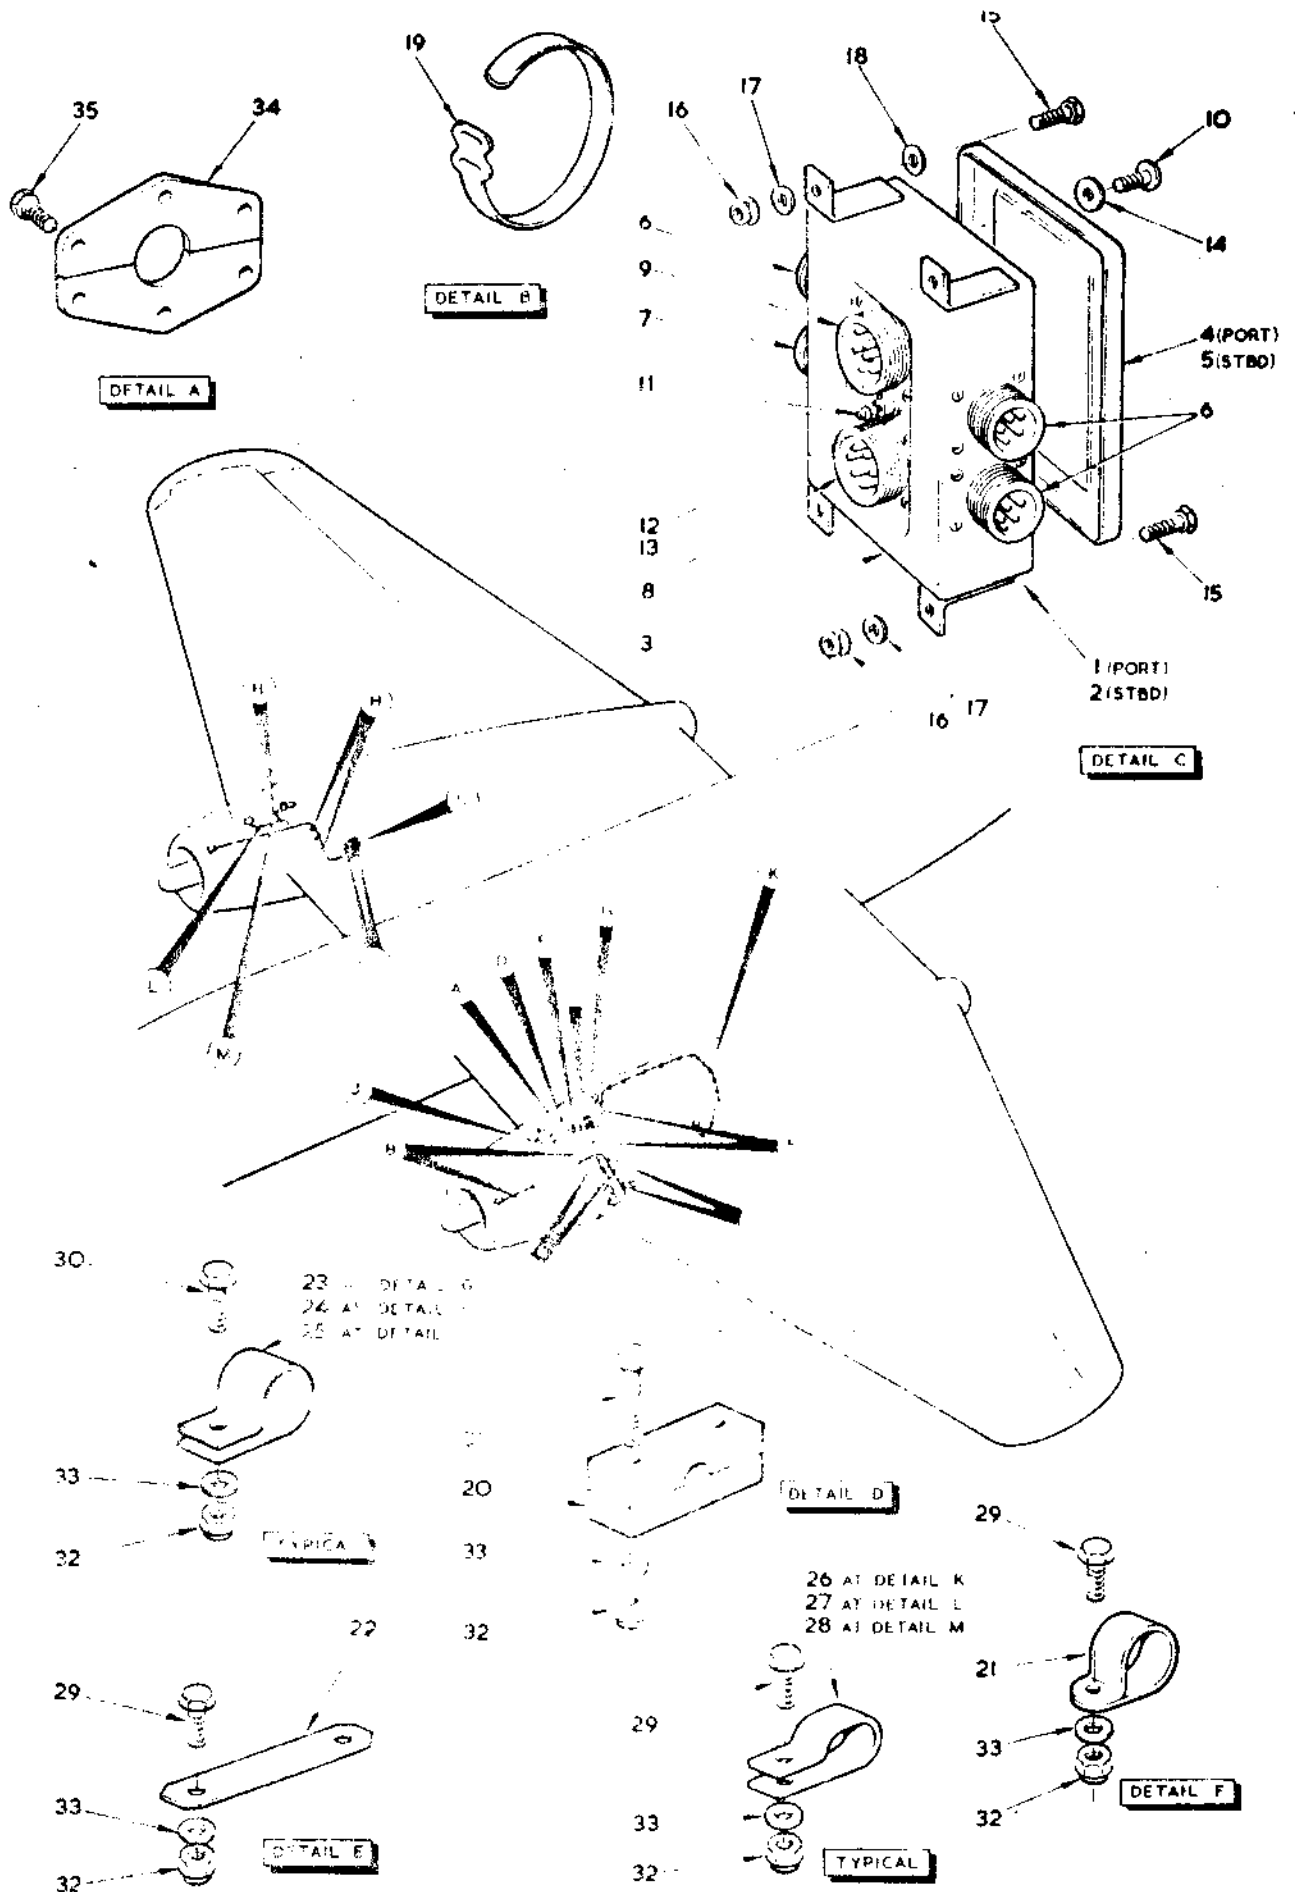


FIG.5 ELECTRICAL EQUIPMENT IN WINGS

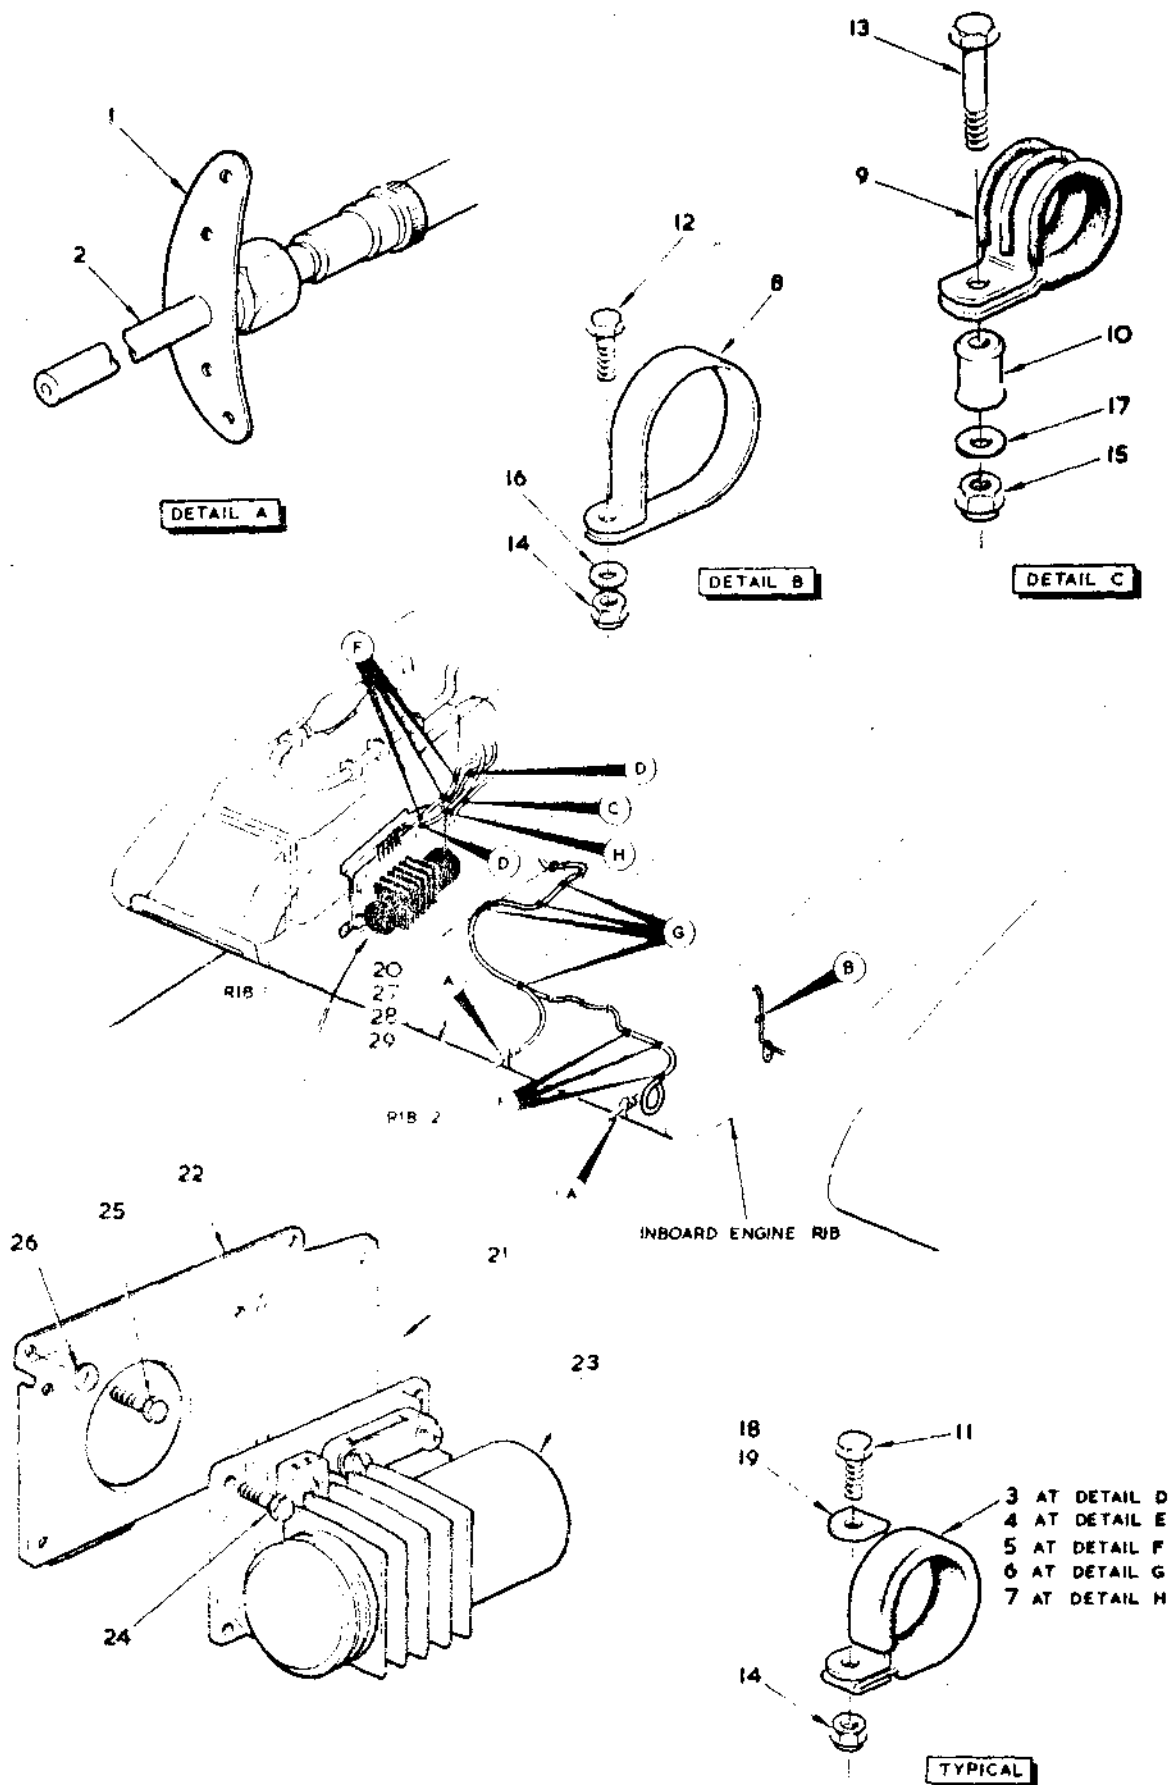


FIG.7 ELECTRICAL EQUIPMENT IN WINGS

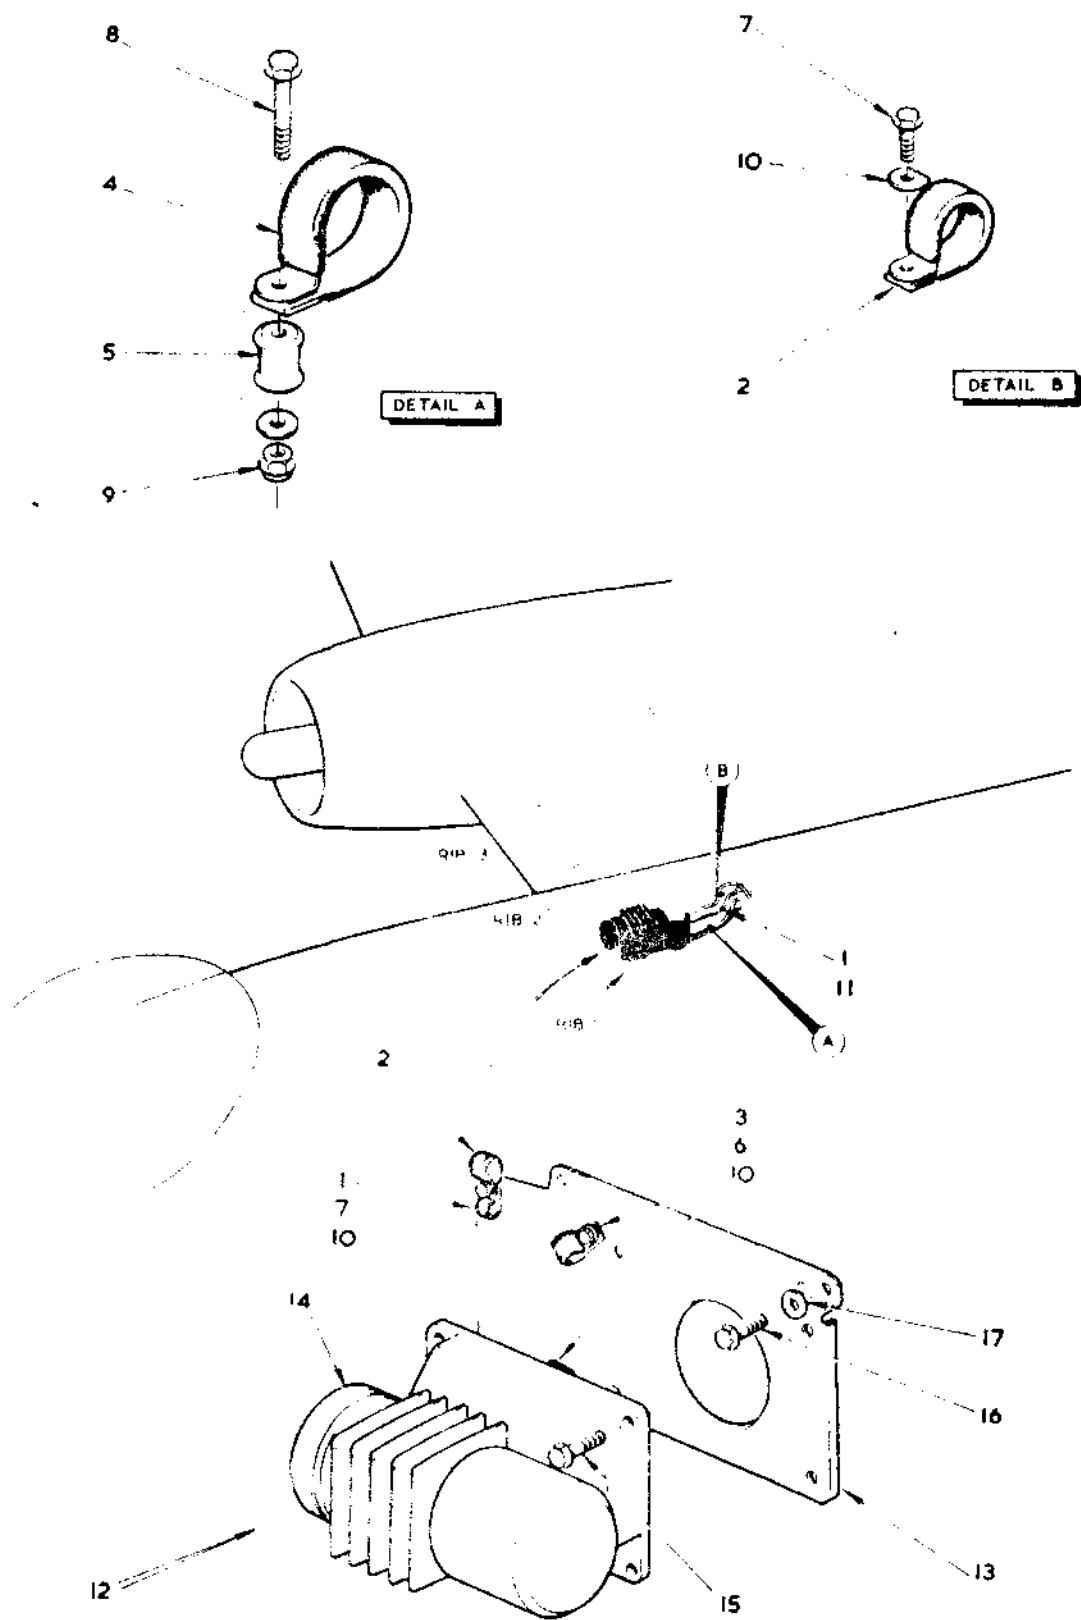


FIG.8 ELECTRICAL EQUIPMENT IN WINGS

CODE A8

SECT. ED

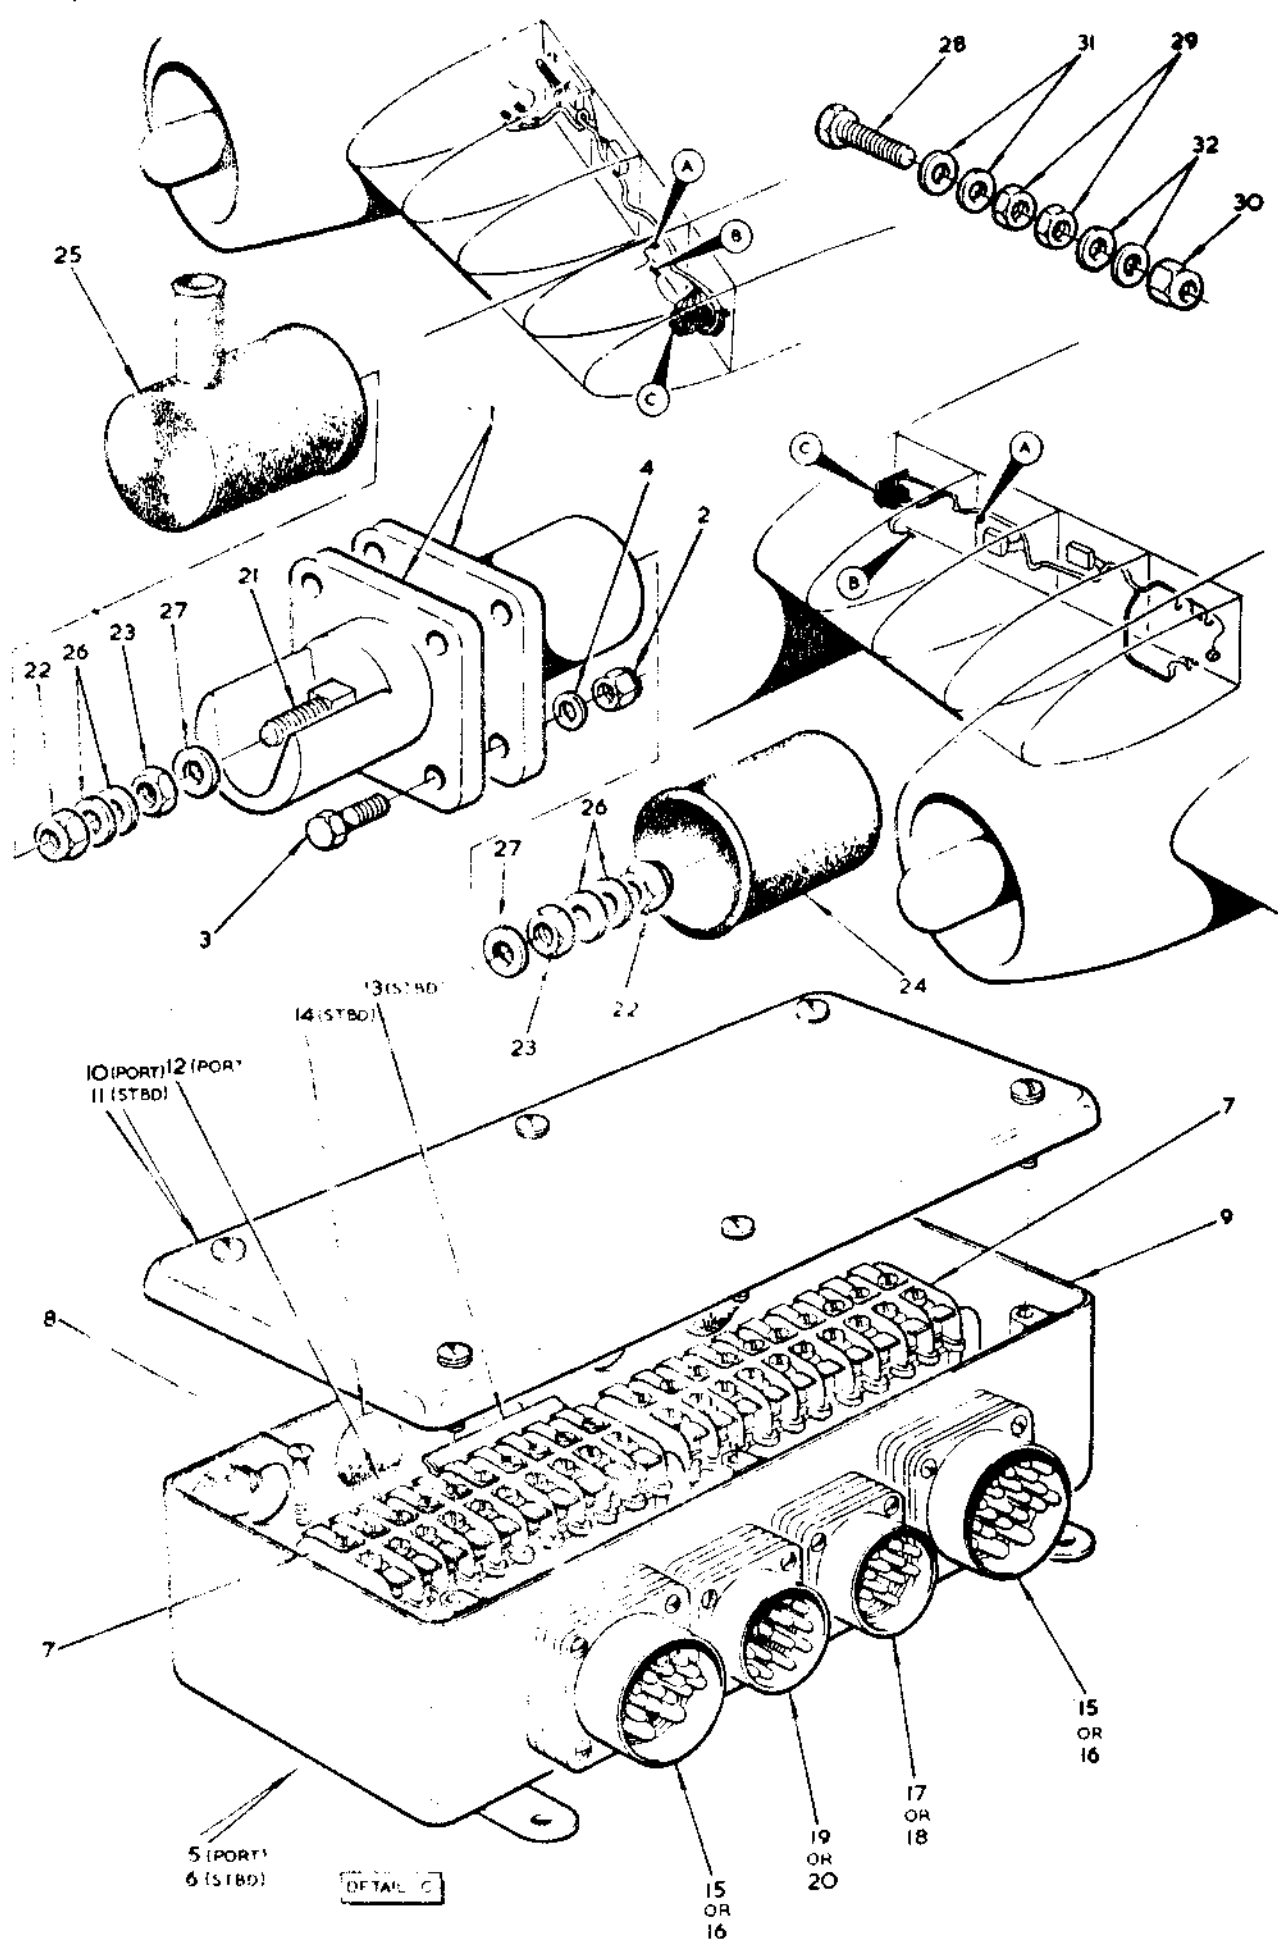


FIG.9 ELECTRICAL EQUIPMENT IN WINGS

CODE A

SECT ED


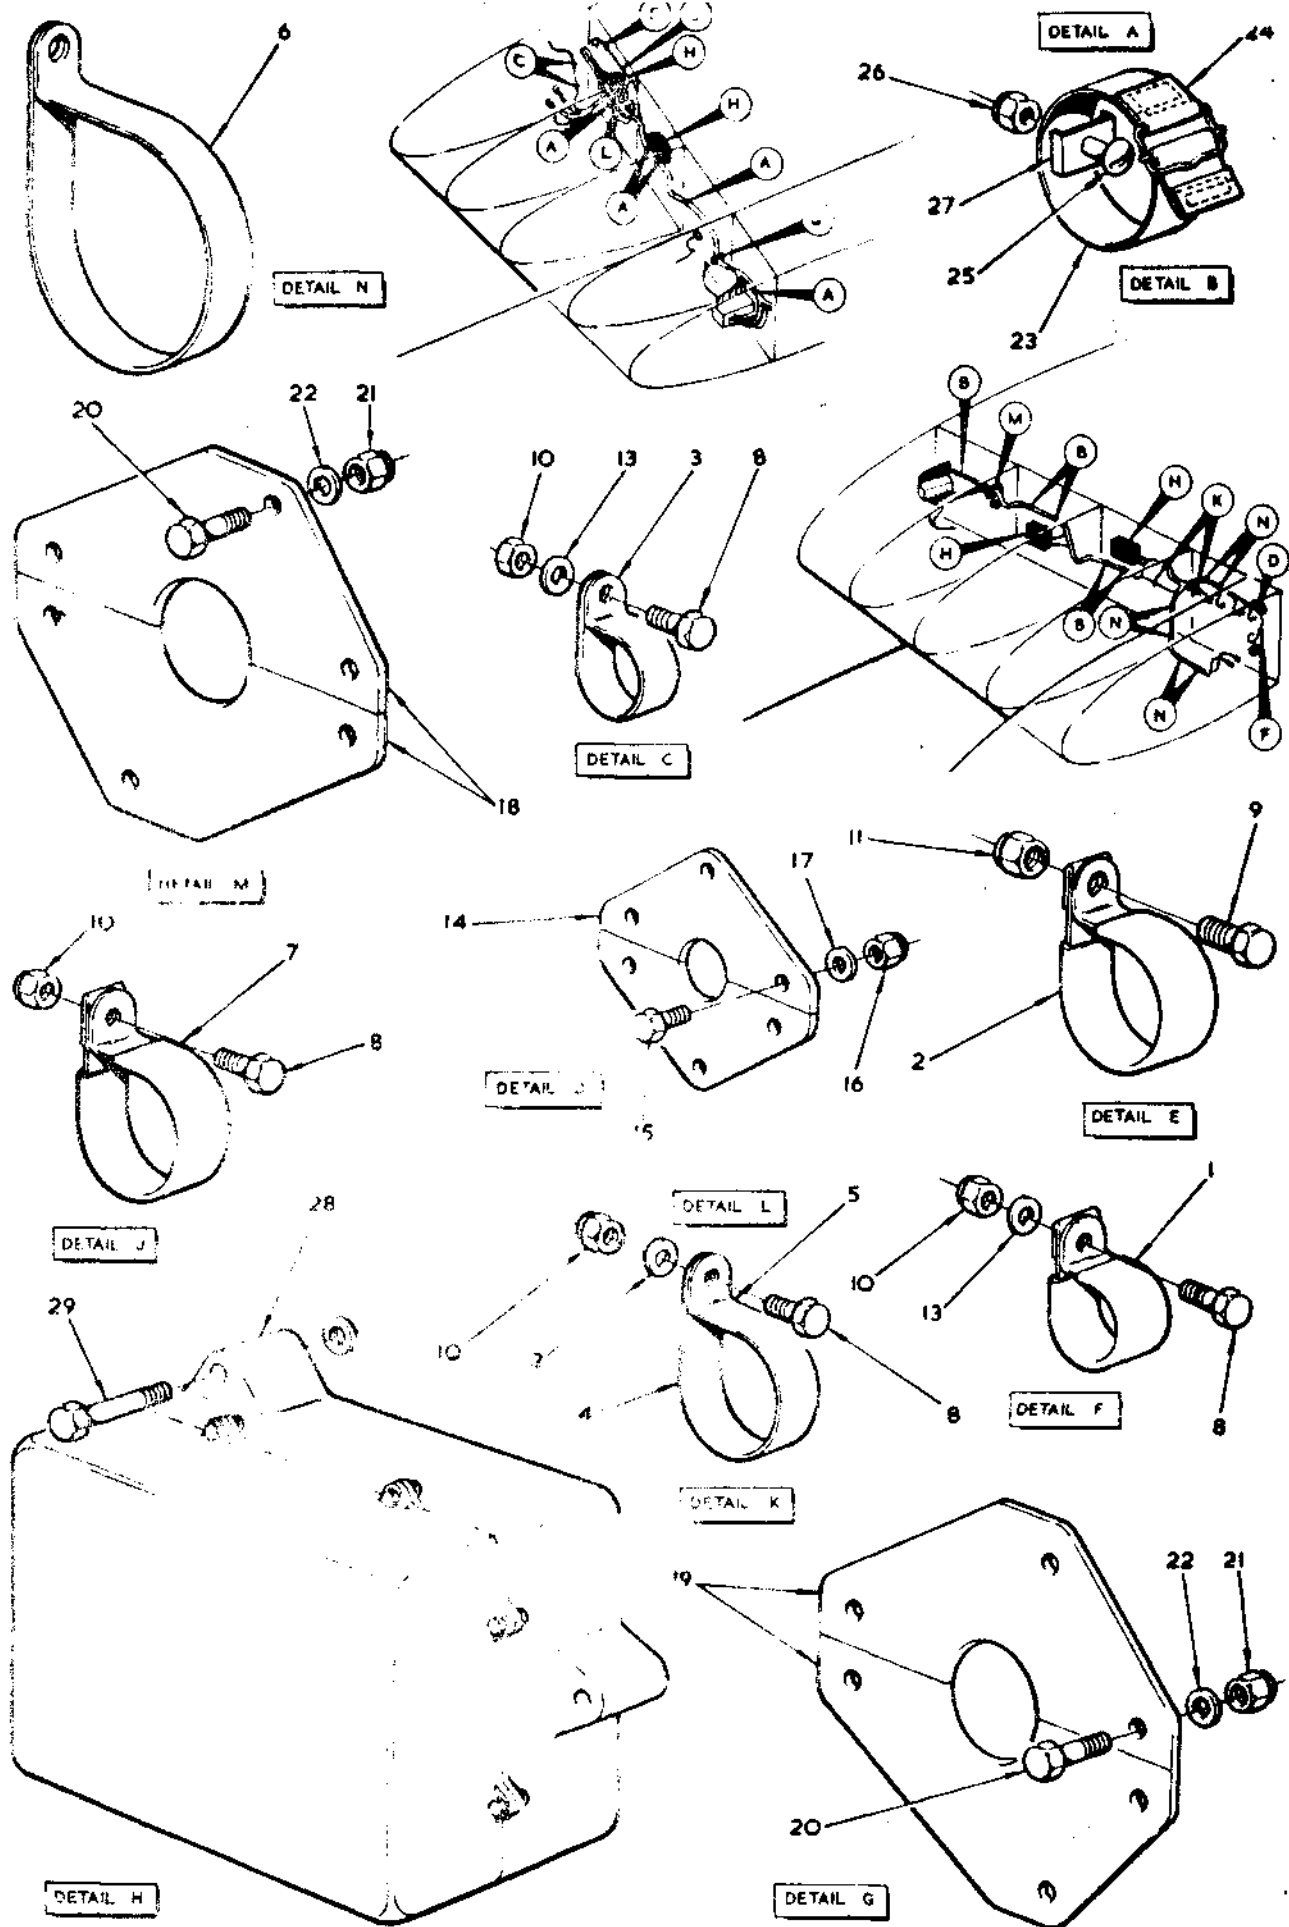


FIG.10 ELECTRICAL EQUIPMENT IN WINGS

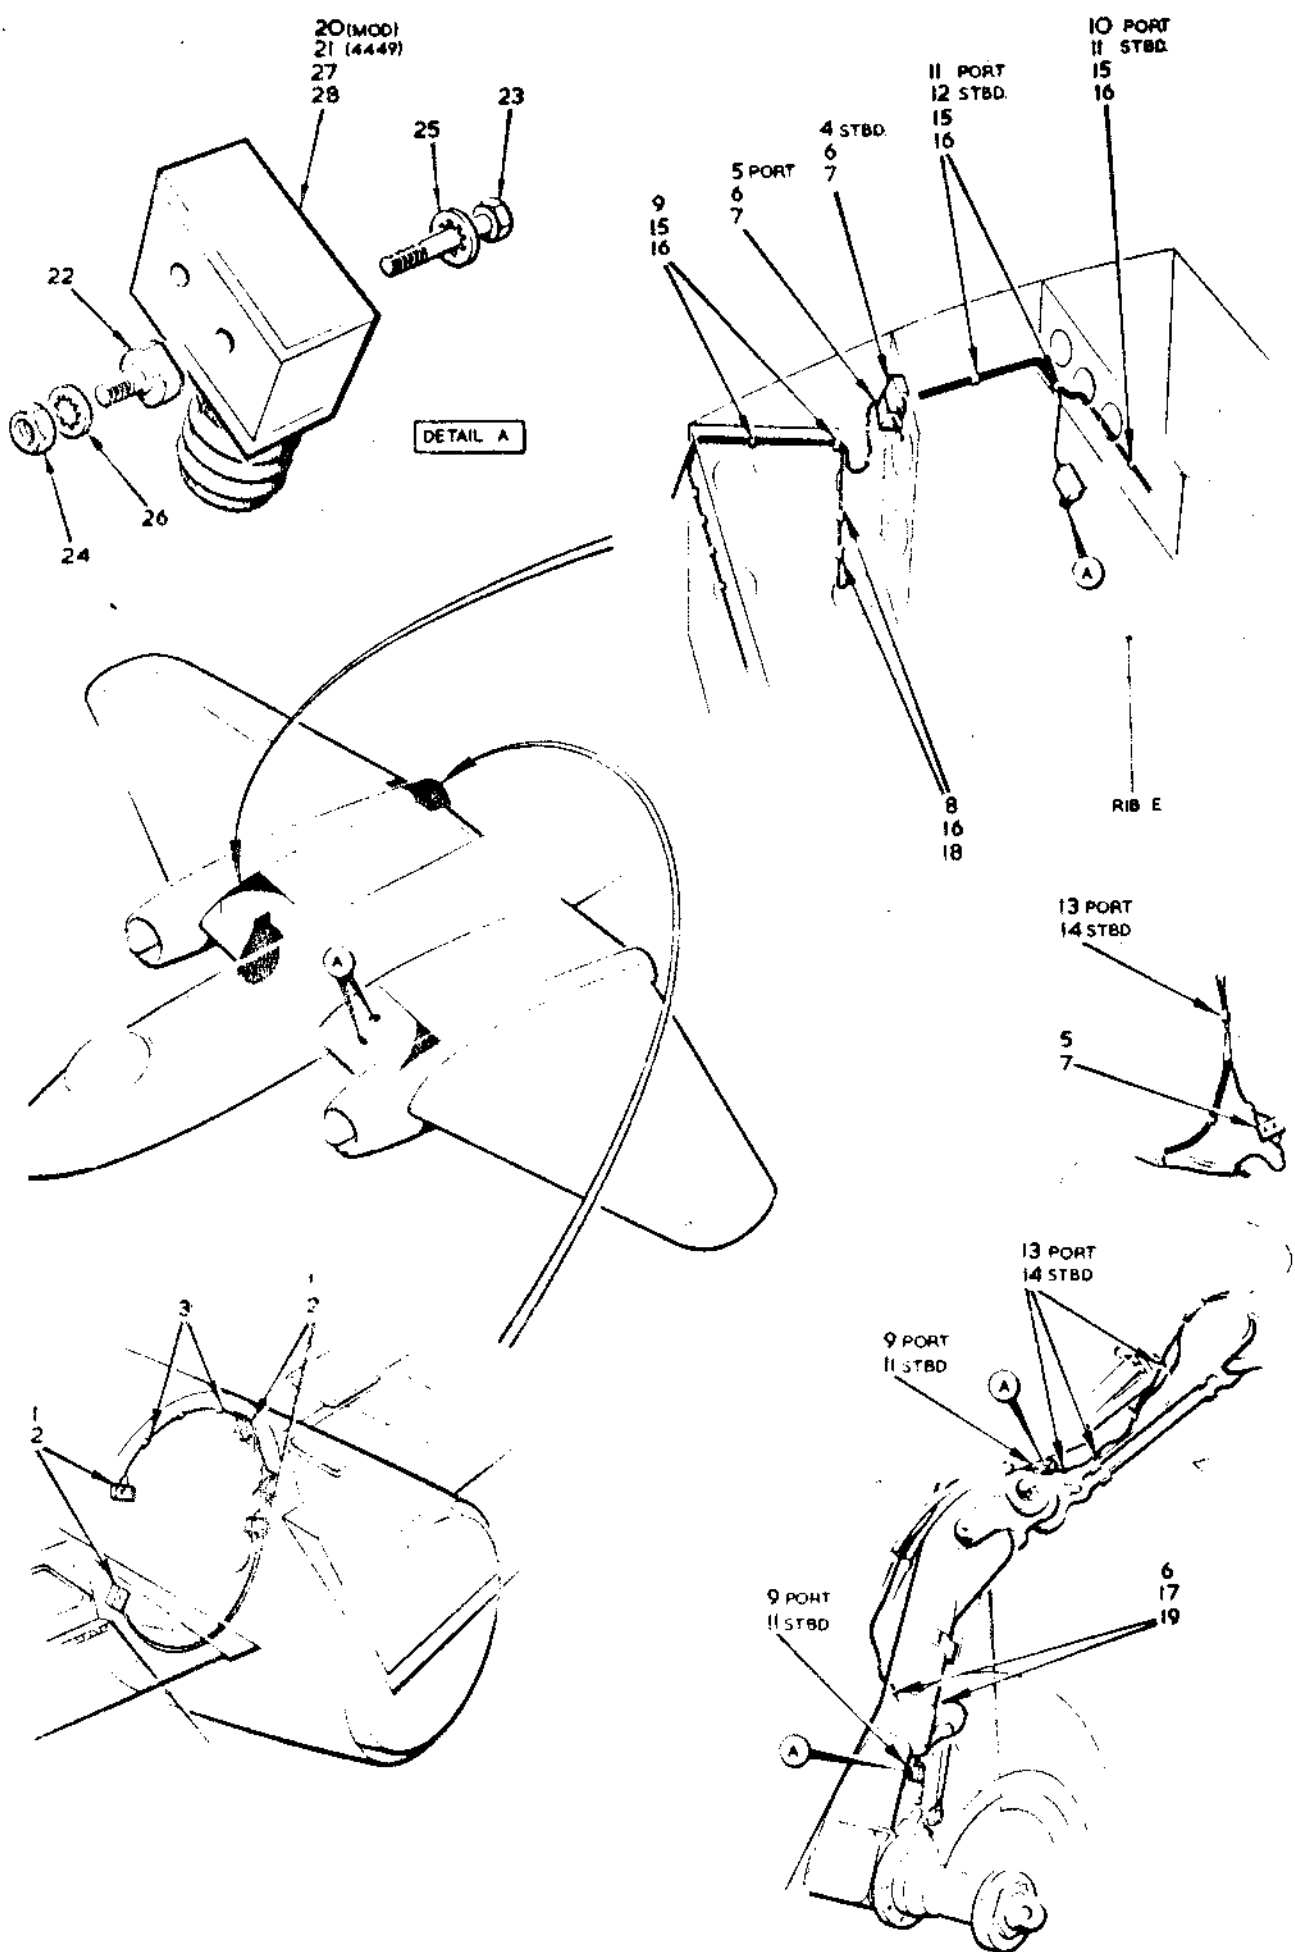

CODE A

SECTION

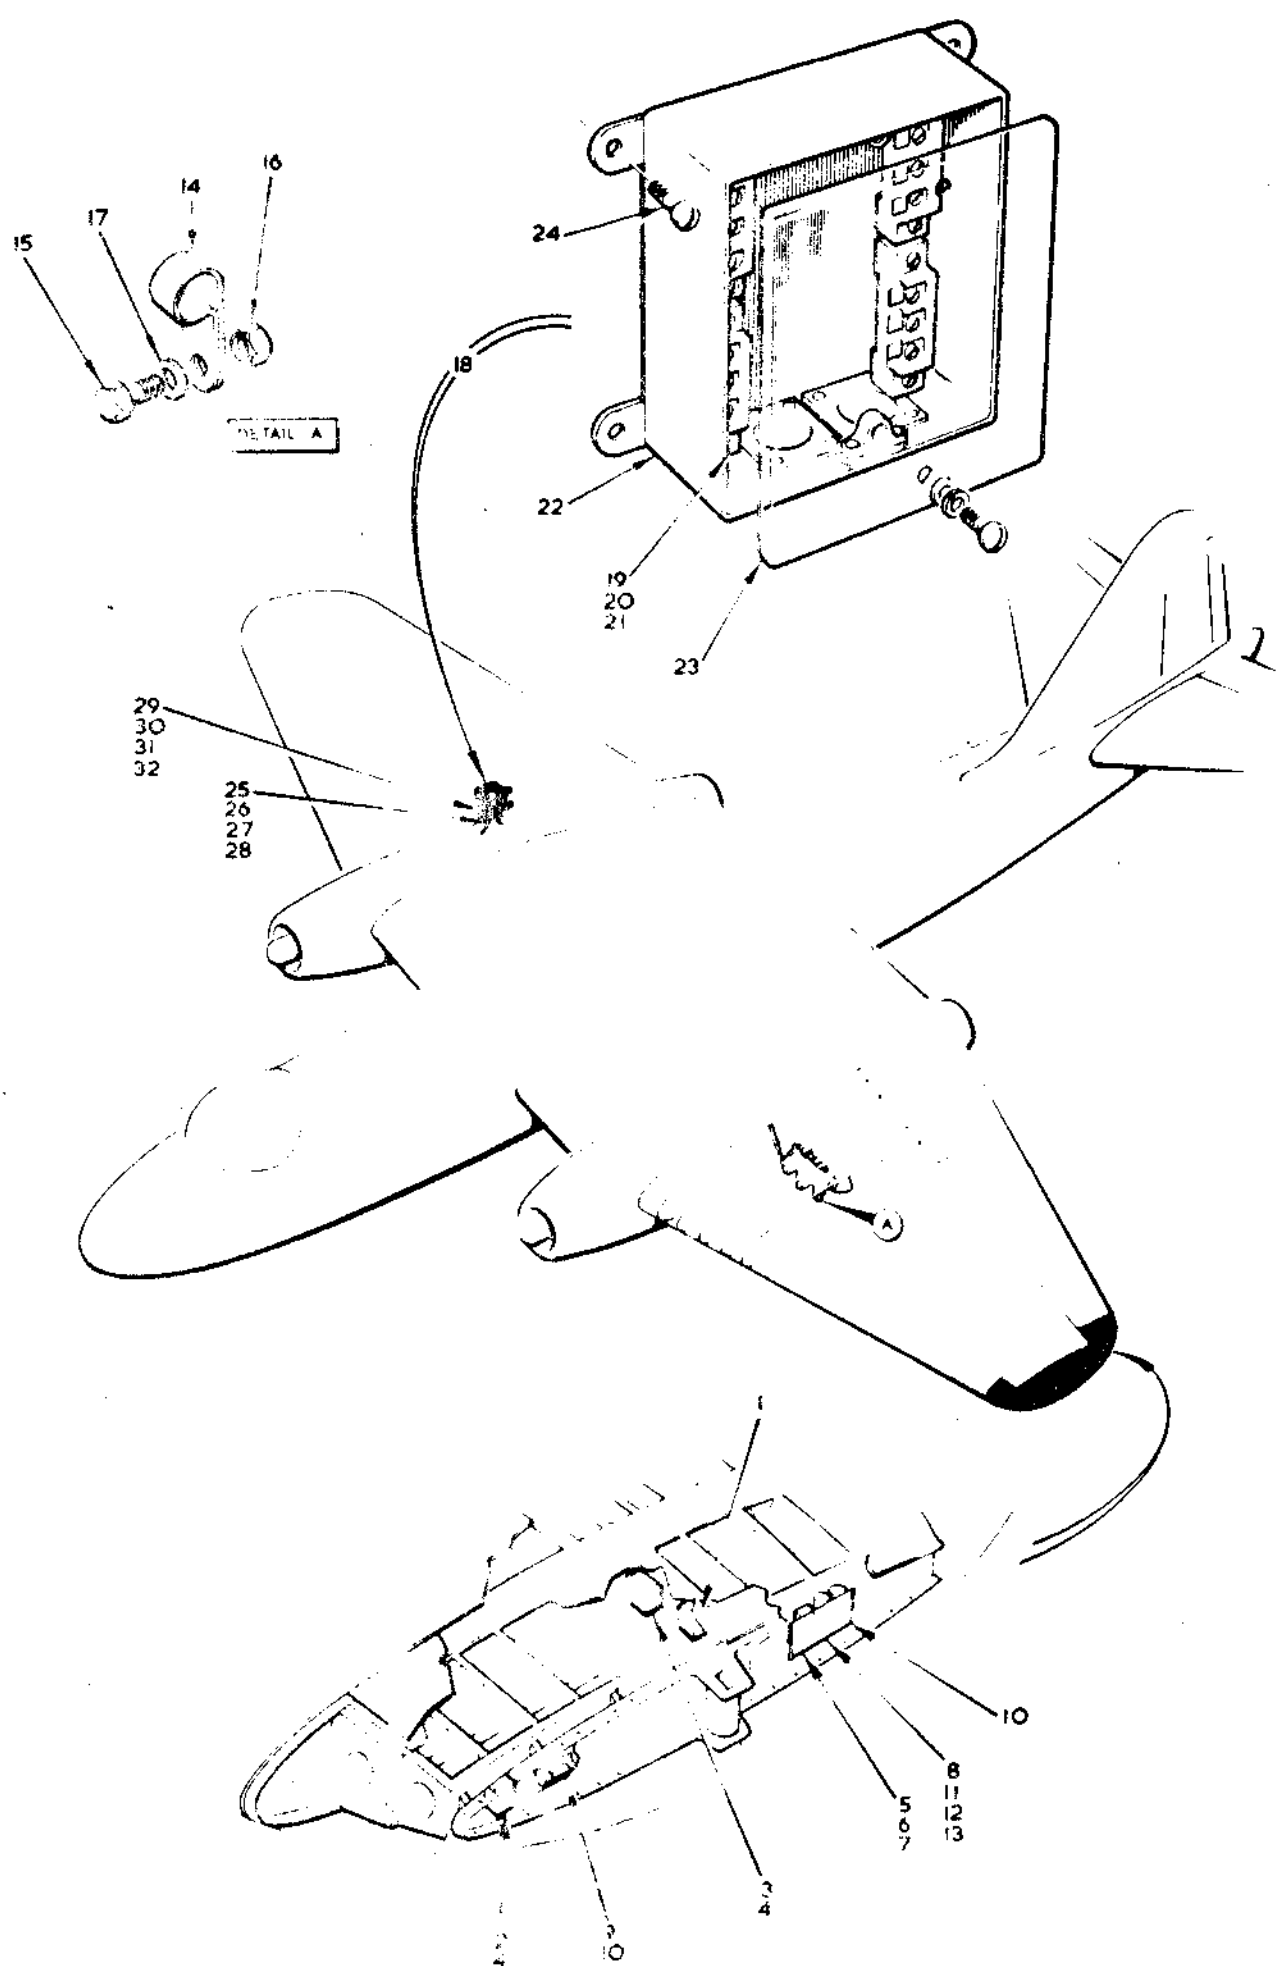


FIG 12 ELECTRICAL EQUIPMENT IN WINGS

CODE A

SECT ED