

G EQUIPMENT AIRCRAFT

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.80.1	EQUIPMENT IN PRESSURE CABIN, ASSEMBLY	—	—	—	
	E.A3.80.6473	Spares for:- ACCELEROMETER, INSTALLATION	—	—	—	1 1
6A/3451	—	Spares for:- ACCELEROMETER, Mk.2	1	—	A	1 2
28S/1012358	A43/B32	Attaching parts for Ref. 6A/3451:- Screw, 4BA	3	—	C	1 3
	E.A3.80.6465	BRACKET, mounting	1	L.59	—	1 4
28M/10274	AGS.2001/B/4	Attaching parts for E.A3.80.6465:- Nut, 4BA	6	—	C	1 5
28S/9150682	A43/B16	Screw, 4BA	6	—	C	1 6
28W/1010006	SP.22/B	Washer, 4BA	6	—	C	1 7
	E.A3.80.6469	BRACKET, L.H., coaming tube	1	BS.267	—	1 8
	E.A3.80.6471	BRACKET, R.H., coaming tube	1	BS.267	—	1 9
	E.H8.83.9	BALLAST, UNDER BOMB AIMER'S RAMP, ASSEMBLY	—	—	—	2 1
		Spares for:-				
32202	E.A3.84.21	BLOCK, ballast	1	—	B	2 2
34665	E.G4.83.149	BLOCK, ballast	1	—	B	2 3
	E.G4.83.151	BLOCK, BALLAST, ASSEMBLY	2	—	—	2 4
		Spares for:-				
34666	E.G4.83.151A	BLOCK, half	1	—	B	2 5
34667	E.G4.83.151B	BLOCK, half	1	—	B	2 6
	E.G4.83.153	BLOCK, BALLAST, ASSEMBLY	1	—	—	2 7
		Spares for:-				
34668	E.G4.83.153A	BLOCK, half	1	—	B	2 8
34669	E.G4.83.153B	BLOCK, half	1	—	B	2 9
26763	E.A3.83.105	BLOCK, packing	1	—	MR	2 10
26762	E.A3.83.107	BLOCK, packing	1	—	MR	2 11
	E.G4.83.141	BOX, ballast	1	—	—	2 12
32204	E.A3.83.99	STRAP, ballast box	1	—	B	2 13
26760	E.A3.83.101	STRAP, support	2	—	MR	2 14
26650	E.A3.83.103	SUPPORT, ballast box	1	—	B	2 15
	E.G4.83.195	SUPPORT, ballast box	1	—	—	2 16

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.N. L.M.	Note No.
		1 2 3 4 5 6				
	E.H6.80.431	BLOCK, STOWAGE, INSTALLATION Spares for:-	-	-	-	1 10
	E.H6.80.435	BLOCK, stowage	1	-	-	1 11
28D/1204937	AS.1242/6C	Attaching parts for E.H6.80.435:- Bolt, 2BA, csk. hd.	2	-	C	1 12
8627	E.A3.80.1839	BRACKET, support, accumulator	1	-	C	1 13
	E.G9.80.565	CONTAINER, URINE, ASSEMBLY Spares for:-	1	-	-	2 17
	AGS.584	CLIP	1	-	-	2 18
28D/8337	AS.1248/1B	Attaching parts for AGS.584:- Bolt, 4BA, mush. hd.	2	-	C	2 19
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	-	C	2 20
28W/9419465	SP.13/B	Washer, 4BA	2	-	C	2 21
27H/2255	-	CONTAINER	1	-	B	2 22
or	-	-	-	-	-	-
27H/3224	-	CONTAINER, Mk.2	1	-	B	2 23
27H/2316	-	FUNNEL	1	-	B	2 24
	E.H8.80.19	CURTAINS, BLACKOUT, ASSEMBLY Spares for:-	-	-	-	3 1
	E.H6.80.381	BLACKOUT, navigator's window	1	-	-	3 2
	E.G9.80.457	CURTAIN, main assembly	1	-	-	3 3
	E.G9.80.545	CURTAIN, top assembly	1	-	-	3 4
3418	EEAS.132/12	STRAP, securing	2	-	C	3 5
29G/2172	CARR No.248	STUD, flanged Attaching parts for No.248:-	4	-	C	3 6
28M/10327	AGS.2002/B/1	Nut, 4BA	2	-	C	3 7
28S/1005583	A37/B16	Screw, 4BA, csk. hd.	2	-	C	3 8
28W/9419465	SP.13/B	Washer, 4BA	2	-	C	3 9
29G/4074	CARR No.680	STUD, screwed Attaching parts for No.680:-	1	-	C	3 10
28M/13264	AGS.2021/C/1	Nut, 2BA, translucent cap	1	-	C	3 11
28W/9419402	SP.13/C	Washer, 2BA	1	-	C	3 12
29G/4137	CARR No.759	STUD, screwed Attaching parts for No.759:-	12	-	C	3 13
28S/7813	4100/6.3/8"	Screw, self tapping, csk. hd.	1	-	C	3 14
29G/2180	CARR No.882	STUD, hex. base Attaching parts for No.882:-	6	-	C	3 15
28M/10288	AGS.2001/C/1	Nut, 2BA	1	-	C	3 16
28W/9419402	SP.13/C	Washer, 2BA	1	-	C	3 17
	E.H8.80.7	EQUIPMENT BOMB AIMER'S, ASSEMBLY Spares for	-	-	-	4 1
6B/562	-	AMPLIFIER, type B	1	-	A	4 2
28D/1215327	AS.1242/6C	Attaching parts for Ref. 6B/562:- Bolt, 4BA, csk. hd.	4	-	C	4 3
28W/941892	SP.13/B	Washer, 4BA	4	-	C	4 4
5D/1480	SP.13/49	BOX, control Attaching parts for SP.13/49	1	-	A	4 5
28D/1215327	AS.1242/6C	Bolt, 4BA, csk. hd.	6	-	C	4 6
28M/1278189	AGS.2001/B/1	Nut, 4BA	6	-	C	4 7
28W/9419465	SP.13/B	Washer, 4BA	6	-	C	4 8
28W/9419465	SP.13/B	Washer, 4BA	1	-	-	4 9

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
14A/2206	—	CONTROL, camera, type 35, No.8 Attaching parts for Ref. 14A/2206:-	1	—	A	4 10
28M/1278190	AGS.2001/C/1	Nut, 2BA	4	—	C	4 11
	AGS.299/13	Screw, 2BA	4	—	—	4 12
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	4 13
	E.H6.80.29	FLOOR, BOMB AIMER'S, ASSEMBLY Spares for:-	—	—	—	4 14
28D/10471	AS.1248/11C	BOLT, 2BA, mush. hd.	4	—	C	4 15
28D/10472	AS.1248/12C	BOLT, 2BA, mush. hd.	3	—	C	4 16
28D/9133012	A25/3C	BOLT, 2BA	12	—	C	4 17
27L/510	—	BRACKET, floor	2	—	C	4 18
	AGS.2001/C/1	NUT, 2BA	8	—	—	4 19
	E.H6.80.113	PACKING	2	—	—	4 20
28W/9457834	SP.124/D	WASHER, 2BA	8	—	—	4 21
	E.H8.81.985	LABEL, bombing role	1	—	—	4 22
	E.H7.80.349	LABEL, camera master switch	1	—	—	4 23
	AS.3380/838	LEAD, bonding Attaching parts for AS.3380/838:-	1	—	—	4 24
	AGS.2001/B/1	Nut, 4BA	1	—	—	4 25
	AGS.2002/B/1	Nut, 4BA	1	—	—	4 26
	AGS.245/21	Screw, 4BA, rd. hd.	1	—	—	4 27
	EEAS 28/2CP	Washer, 4BA	1	—	—	4 28
	SIS.5569	Washer, check	2	—	—	4 29
	E.H6.80.115	MOUNTINGS, RAMP, FOOTSTEP AND H.F T/R INSTALLATION Spares for:-	—	—	—	1 14
28D/9709461	AS.1242/3C	BOLT, 2BA, csk. hd.	16	—	C	1 15
28D/1011006	A25/5E	BOLT, 1/4" BSF	4	—	C	1 16
28M/1278190	AGS.2001/C/1	NUT, 2BA	16	—	C	1 17
	COLLINS 390J1	SHOCKMOUNT	1	—	—	1 18
28W/9457834	SP.124/D	WASHER	16	—	C	1 19
28W/9471273	SP.124/E	WASHER	4	—	C	1 20

**EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT**

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
14A/540	SIS.1071	PLATE, wedge	1	—	C	4 30
5X/759	—	RING, locking, No.1	1	—	C	4 31
5X/769	—	RING, locking, No.2	2	—	C	4 32
5X/799	—	RING, locking, No.4	2	—	C	4 33
5D/1566	E.H8.81.983	STOWAGE, bomb role plugs	1	—	—	4 34
	—	SWITCH, fusing, Mk 1	1	—	B	4 35
Attaching parts for Ref. 5D/1566:-						
28D/1008147	A25/1A	Bolt, 6BA	4	—	C	4 36
28M/10286	AGS.2001/A/1	Nut, 6BA	4	—	C	4 37
28W/9419473	SP.15/A	Washer, 6BA	4	—	C	4 38
5CW/1047693	—	SWITCH	1	—	B	4 39
Attaching parts for Ref. 5CW/1047693:-						
28S/9992526	A32/R12	Screw, 4BA, rd. hd	2	—	C	4 40
28W/1206041	AGS.2035/B	Washer, 4BA, spring	2	—	C	4 41
—	E.E.AS.28/25P	Washer, spacing	2	—	C	4 42
—	6B/437	TRAY, mounting	1	—	B	4 43
5D/1742	—	UNIT, bomb distribution control, Mk.2	1	—	A	4 44
Attaching parts for Ref. 5D/1742:-						
28M/1278189	AGS.2001/B/1	Nut, 4BA	QR	—	C	4 25
—	SIS.5569	Washer, check	QR	—	—	4 29
—	E.H8.80.5	EQUIPMENT AND STRUCTURE AT NAVIGATOR'S STATION	—	—	—	5 1
Spares for:-						
—	E.H8.80.181	A.P. AND REPEATER UNIT, INSTALLATION	—	—	—	5 2
Spares for:-						
—	E.H8.80.183	BRACKET, repeater mounting	1	—	—	5 3
Attaching parts for E.H8.80.183:-						
28D/9133011	A25/2C	Bolt, 2BA	2	—	C	5 4
28M/1278180	AGS.2001/C/1	Nut, 2BA	2	—	C	5 5
28W/1014056	SP.124/C	Washer, 2BA	2	—	C	5 6
—	E.H8.80.185	BRACKET, repeater mounting	1	—	—	5 7
Attaching parts for E.H8.80.185:-						
28D/9133011	A25/2C	Bolt, 2BA	2	—	C	5 8
28M/1278190	AGS.2001/C/1	Nut, 2BA	2	—	C	5 9
28W/1014056	SP.124/C	Washer, 2BA	2	—	C	5 10
—	E.H8.80.187	BRACKET, clip mounting	1	—	—	5 11
Attaching parts for E.H8.80.187:-						
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	5 12
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	5 13
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	5 14
28E/1009114	AS.3181/5B	CLIP	1	—	C	5 15
Attaching parts for AS.3181/5B:-						
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	5 16
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	—	C	5 17
28W/9419474	SP.15/B	Washer, 4BA	1	—	C	5 18
6B/265	SIS.3521	DRIVE, flexible	1	—	B	5 19

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
68/458	SIS.2841	INDICATOR, air position, Mk.18	1	-	B	5 20
28D/1011244	A25/9E	Attaching parts for SIS.2841:-	2	-	C	5 21
28D/1212592	A25/31E	Bolt, 1/4" BSF	1	-	C	5 22
28W/9471273	SP.124/E	Washer, 1/4" BSF	3	-	C	5 23
68/314	SIS.3550	UNIT, repeater	1	-	B	5 24
28D/9133011	A25/2C	Attaching parts for SIS.3550:-	3	-	C	5 25
28W/1014056	SP.124/C	Bolt, 2BA	3	-	C	5 26
	E.H8.80.589	GUARD, FOOT, NAVIGATOR'S INSTALLATION	-	-	-	5 27
	E.H8.80.593	BRACKET, assembly	1	-	-	5 28
28D/9133013	A25/5C	Attaching parts for E.H8.80.593:-	2	-	C	5 29
28W/1014056	SP.124/C	Bolt, 2BA	2	-	C	5 30
	E.H8.80.595	BRACKET, panel attachment	1	-	-	5 31
28D/9133013	A25/5C	Attaching parts for E.H8.80.595:-	2	-	C	5 32
28D/9137409	AS.1246/2C	Bolt, 2BA	2	-	C	5 33
28W/1014056	SP.124/C	Washer, 2BA	4	-	C	5 34
	E.H8.80.591	PLATE, guard	1	-	-	5 35
28D/9137409	AS.1246/2C	Attaching parts for E.H8.80.591:-	2	-	C	5 36
	E.H8.81.659	PANEL, STRIKE, ASSEMBLY	1	-	-	6 1
	WARD BROOKE	Spares for:-				
	WB/UN/1146/S/ 10/W	BLOCK, terminal, 10-way	1	-	-	6 2
28D/9419452	A25/3B	Attaching parts for WB/UN/1146/S/10/W:-	2	-	C	6 3
28M/1278189	AGS.2001/B/1	Bolt, 4BA	2	-	C	6 4
28W/9419474	SP.15/B	Nut, 4BA, translucent cap	2	-	C	6 5
	E.H8.81.661	Washer, 4BA	1	-	-	6 6
	E.H8.81.671	BOX-SHELL, assembly	1	-	-	6 7
	HELLERMANN	DIAGRAM, wiring	1	-	-	6 8
	SP.4073	GROMMET, dummy	1	-	-	6 9
	E.H8.81.657	GUARD, switch	1	-	-	6 10
	THORN					
5CX/5364	80/10/0855/RED/	HOLDER, pillar, lamp	2	-	B	6 11
	BLACK	HOLDER, pillar, lamp	2	-	-	6 12
	OXLEY LTD.					
	156.LP	INSULATOR, barb	12	-	-	6 13
	E.H6.81.419	KNOB, assembly	1	-	-	6 14
	E.H8.81.1046	LABEL, ident	1	-	-	6 15
	PAGE					
	L.1004	LAMP, panel, 28v, 0.04 amp	2	-	-	6 16
	FEAS.550/10	PLATE, ident	-	-	-	6 17
	E.H6.81.401	PLATE, relay and diode	-	-	-	6 18
		Attaching parts for E.H6.81.401				
28M/1771111	AGS.2001/B/1	Nut, 4BA, translucent cap	4	-	C	6 19
13S/114620	A25/644	Screw, 4BA, csk. hd.	-	-	C	6 20
	AS.2P19/4/090	Tube, distance	4	-	C	6 21
28W/9419474	SP.15/B	Washer, 4BA	-	-	C	6 22

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.81.809	PLATE, bottom	1	—	—	6 21
	E.H8.81.667	PLATE, side	1	—	—	6 22
	E.H8.81.825	PLATE, side	1	—	—	6 23
	E.H8.81.823	PLATE, top	1	—	—	6 24
		Attaching parts for E.H8.81.809,667,825 and 823:-				
28S/9435716	A33/B12	Screw, 4BA, csk. hd.	QR	—	C	6 25
	XA-1-02-24-00	RELAY	2	—	—	6 26
		Attaching parts for XA-1-02-24-00:-				
28S/9435715	A32/B16	Screw, 4BA, rd. hd.	2	—	C	6 27
	EEAS.200	RING, locking	2	—	—	6 28
	N.S.F.					
	7694/B/101	SWITCH	1	—	—	6 29
	N.S.F.					
	8810/B/101	SWITCH	1	—	—	6 30
	N.S.F.					
	49945/SD6	SWITCH, armament master	1	—	—	6 31
		Attaching parts for E.H8.81.659:-				
28D/1218385	AS.1248/2B	Bolt, 4BA, mush. hd.	4	—	C	6 32
28W/9419474	SP.13/B	Washer, 4BA	4	—	C	6 33
	E.H8.80.21	PANELS NAVIGATOR'S INSTRUMENT, ASSEMBLY	—	—	—	7 1
		Spares for:-				
	E.H8.80.31	PANEL, NAVIGATOR'S COAMING, ASSEMBLY	1	—	—	7 2
		Spares for:-				
	E.A3.80.6171	BLOCK, stowage	2	—	—	7 3
		Attaching parts for E.A3.80.6171:-				
28D/1010030	A25/7C	Bolt, 2BA	2	—	C	7 4
28D/9133014	A25/13C	Bolt, 2BA	2	—	C	7 5
28M/1278190	AGS.2001/C/1	Nut, 2BA	4	—	C	7 6
28W/9419454	SP.10/C	Washer, 2BA	4	—	C	7 7
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	7 8
	WARD BROOKE WB/UN/1146/D/ 5/W	BLOCK, terminal, 5-way	1	—	—	7 9
		Attaching parts for WB/UN/1146/D/5/W:-				
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	7 10
28S/1008329	A33/B18	Screw, 4BA, csk. hd.	2	—	C	7 11
28W/9419474	SP.13/B	Washer, 4BA	2	—	C	7 12
	E.G9.81.705	BRACKET, lamp mounting	1	—	—	7 13
	AS.3180/4B	CLIP	4	—	—	7 14
		Attaching parts for AS.3180/4B:-				
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	—	C	7 15
28S/1214164	A44/B14	Screw, 4BA, rd. hd.	1	—	C	7 16
28W/9419474	SP.13/B	Washer, 4BA	1	—	C	7 17
	EEAS.238/1A	Washer, 4BA	1	—	—	7 18
	E.H8.81.327	DIAGRAM, wiring	1	—	—	7 19
	THORN					
	01-0108-5	DIMMER	1	—	—	7 20
	THORN					
	01-0103-36	DIMMER	1	—	—	7 21

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5L/9951283	—	FILAMENT, 28v, 3.5w, Red	1	—	B	7 22
5L/9959118	—	FILAMENT, 28v, 0.04A	8	—	B	7 23
	SP.40/B4	GROMMET	2	—	—	7 24
	E.G7.80.1015	GUARD, switch	3	—	—	7 25
6B/556	—	HOLDER, card, compass deviation, Mk.4	1	—	C	7 26
5CZ/5003	—	INDICATOR, electro magnetic	1	—	A	7 27
6B/3831	SPERRY 19834/0	INDICATOR, master, type E5	1	—	A	7 28
		Attaching parts for 19834/0:-				
28M/1278190	AGS.2001/C/1	Nut, 2BA	3	—	C	7 29
28S/9137828	A32/C32	Screw, 2BA, rd. hd.	3	—	C	7 30
28W/9419475	SP.13/C	Washer, 2BA	3	—	C	7 31
6B/293	—	INDICATOR, air mileage, Mk.1	1	—	B	7 32
		Attaching parts for 6B/293:-				
28M/1278190	AGS.2001/C/1	Nut, 2BA	3	—	C	7 33
28S/1011491	A32/C24	Screw, 2BA, rd. hd.	3	—	C	7 34
28W/9419475	SP.13/C	Washer, 2BA	3	—	C	7 35
5CZ/6921	—	INDICATOR, magnetic	1	—	B	7 36
	E.B4.81.3091	KNOB	2	—	—	7 37
		Attaching parts for E.B4.81.3091:-				
28S/9446737	A55/10A	Screw, grub	1	—	C	7 38
28W/9129583	AGS.2035/J	Washer	1	—	C	7 39
5CX/5364	THORN 80/10/0855	LAMP, pillar	6	—	B	7 40
5CX/5363	THORN 80/10/0678	LAMP, pillar	2	—	B	7 41
5CX/4058	—	LAMP, cockpit, type C	1	—	B	7 42
	E.G9.81.703	PACKER	2	—	—	7 43
	E.A3.80.6183	PACKER	2	—	—	7 44
	EEAS.551/10	PLATE, ident, double, 5W	1	—	—	7 45
	E.H8.80.289	PANEL, sub-assembly	1	—	—	7 46
	EEAS.200	RING, locking	6	—	—	7 47
5CX/3430	—	SCREEN	1	—	C	7 48
		Attaching parts for 5CX/3430:-				
28M/10286	AGS.2001/A/1	Nut, 6BA	2	—	C	7 49
28S/9134012	A43/A12	Screw, 6BA, ch. hd.	2	—	C	7 50
	N.S.F. LTD. 8832/B102	SWITCH, D.P. biased, 3 pos.	1	—	—	7 51
	N.S.F. LTD. 8820/B121	SWITCH, double pole, 3 pos.	1	—	—	7 52
	N.S.F. LTD. 8830/B103	SWITCH, D.P. biased, 2 pos.	1	—	—	7 53
	N.S.F. LTD. 8810/B101	SWITCH, single pole	3	—	—	7 54
	E.G9.81.683	WASHER, 15° taper	2	—	—	7 55
		Attaching parts for E.H8.80.31:-				
28D/9436920	A25/1C	Bolt, 2BA	6	—	C	7 56
28W/9419475	SP.15/C	Washer, 2BA	6	—	C	7 57

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.C.R. L.M.	
	E.H8.80.177	PANEL, NAVIGATOR'S INSTRUMENT, ASSEMBLY Spare parts for:-	1	-	-	8 1
6A/8267-1	-	ALTIMETER, Mk. 19F	1	-	A	8 2
		Attaching parts for 6A/8267-1:-				
28S/1214166	A44/828 or A205/832	Screw, 4BA, rd. hd.	4	-	C	8 3
		Screw, 6 UNC, pan. hd.	4	-	-	8 4
	WARD BROOKE WB/UN/1146/D/ 5/W	BLOCK, terminal, 10-way Attaching parts for WB/UN/1146/D/5/W:-	1	-	-	8 5
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	-	C	8 6
28S/1013430	A44/820	Screw, 4BA, rd. hd.	2	-	C	8 7
	H.K.PORTER 64.99.005 AS.3180/48	CLAMP CLIP, 'P' Attaching parts for AS.3180/48:-	2 1	- -	- -	8 8 8 9
28S/1214178	A44/C44 EEAS.238/1A	Screw, 2BA, rd. hd. Washer, 'D'	1 1	- -	C -	8 10 8 11
5L/995-9118	E.H8.81.471 -	DIAGRAM, wiring FILAMENT, 28v, 0.04A	1 12	- -	- B	8 12
5CX/5364	THORN 80/10/0853 BENDIX 36105-1S-14-C1	HOLDER, pillar lamp INDICATOR, radio magnetic, type MN72-G-1 Attaching parts for 36105-1S-14-C1:-	12 1	- -	C -	8 13 8 14
	A170/5B or A170/3B or A44/924	Bolt, 6 UNC, mush. hd. Bolt, 6 UNC, mush. hd. Screw, 4BA, rd. hd.	4 4 4	- - -	- - C	8 15
28S/1017078	MARCONI AA-5604-1 MARCONI AA-5605-2	INDICATOR, ground speed and drift INDICATOR, distance flown INDICATOR, air speed, Mk. 19M Attaching parts for 6A/4722:-	1 - 1	- - -	- - A	8 16 8 17 8 18
6A/4722	-	Nut, 2BA	3	-	C	8 19
28M/1278190	AGS.2001/C/1	Screw, 2BA, rd. hd.	3	-	C	8 20
28S/1214177	A44/C40 AS.2807/5/070	Tube, distance	4	-	-	8 21
6A/3682		INDICATOR, air temperature Attaching parts for 6A/3682:-	1	-	A	8 22
	A205/824 or A44/824	Screw, 6 UNC, pan. hd. Screw, 4BA, rd. hd.	4 4	- -	- C	8 23 8 24
28S/1017078	E.H8.80.179 EEAS.551/10	PANEL, blank PLATE, ident	1 1	- -	- -	8 25 8 26

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
6A/7041	—	UNIT, vibrator, and clip	1	—	A	8 27
28D/8337	AS.1248/1/B	Attaching parts for E.H8.80.177:-	2	—	C	8 28
28D/1218389	AS.1248/7/B	Bolt, 4BA, mush. hd.	2	—	C	8 29
	AS.3360/B/4/B	Lead, bonding	4	—	—	8 30
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	8 31
	10A/19429	Washer, check	8	—	—	8 32
	E.H8.80.29	PANEL, NAVIGATOR'S, SIDE, ASSEMBLY	1	—	—	9 1
	WARD BROOKE	Spares for:-				
	WB/UN/1148/D/10/W	BLOCK, terminal, 20-way	1	—	—	9 2
		Attaching parts for WB/UN/1148/D/10/W:-				
28D/8133082	AS.1248/3B	Bolt, 4BA, rd. hd.	2	—	C	9 3
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	9 4
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	9 5
5CX/5355	THORN	BRIDGE, lampholder	1	—	B	9 6
	80/10/1191	DIAGRAM, wiring	1	—	—	9 7
	THORN	FILAMENT, lamp, 28v, 0.04A	2	—	—	9 8
	L.1004	GROMMET	1	—	—	9 9
	SP.40/A4					
	THERMOTANKS LTD.					
	DAR.2	LOUVRE, "Punkah"	1	—	—	9 10
		Attaching parts for DAR.2:-				
28D/1214866	AS.1246/4B	Bolt, 4BA, rd. hd.	3	—	C	9 11
28M/1278189	AGS.2001/B/1	Nut, 4BA	3	—	C	9 12
28W/9419474	SP.15/B	Washer, 4BA	3	—	C	9 13
	SANGAMO WESTON					
	6625-99-100-3731	METER, frequency, type S109-6-24	1	—	—	9 14
		Attaching parts for 6625-99-100-3731:-				
28S/1017078	A44/B24	Screw, 4B, rd. hd.	4	Brass	C	9 15
6B/471	—	PANEL, A.M.U. control	1	—	A	9 16
		Attaching parts for 6B/471:-				
28D/1007979	AS.1246/1P	Bolt, 4BA, rd. hd.	4	—	C	9 17
28M/1278189	AGS.2001/B/1	Nut, 4BA	4	—	C	9 18
28W/9419474	SP.15/B	Washer, 4BA	4	—	C	9 19
	E.H8.80.287	Panel, sub-assembly	1	—	—	9 20
	FEASING 20	PLATE, ident	1	—	—	9 21
		Attaching parts for E.H8.80.29:-				
28D/1007997	AS.1246/1P	Bolt, 4BA, mush. hd.	6	—	C	9 22
28D/1218389	AS.1248/7/B	Bolt, 4BA, mush. hd.	3	—	C	9 23
		PANEL, closing, assembly	1	—	—	9 24
		Attaching parts for E.H7.80.245:-				
	AS.1246/1P	Bolt, 4BA, mush. hd.	14	—	—	9 25

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
5L/9959118	E.H8.80.603	PANEL, CLOSING, ASSEMBLY	1	—	—	9 26
	—	Spares for:-				
	—	FILAMENT, lamp 28v, 0.04A	1	—	B	9 27
5CX/5364	THORN					
	80/10/0855	LAMP, pillar	1	—	B	9 28
	E.H8.80.605	PANEL, sub-assembly	1	—	—	9 29
5CW/7080	EEAS.200	RING, locking	1	—	—	9 30
	EEAS.566	SLEEVE, special	1	—	—	9 31
	EEAS.146/20	SLEEVE, 3/4" long	OR	—	—	9 32
	8832/B102	SWITCH, D.P. on/off/on (biased)	1	—	B	9 33
	HELLERMANN					
	HC.295	TAG, RT 58A	2	—	—	9 34
	HELLERMANN					
	HC.294	TERMINAL, RT 48A	2	—	—	9 35
	BARBER					
	COLEMAN					
28D/8337	1905	WASHER, shakeproof	6	—	—	9 36
	EL 1930	WIRE, equip. type 'B', 19/0076	OR	—	—	9 37
	—	Attaching parts for E H8 80.603:-				
28D/1213334	AS.1248/18	Bolt, 4BA, mush. hd.	OR	—	C	9 38
	E.H8.80.555	PANEL, navigator's control, sub-assembly	1	—	—	9 39
	E.G9.80.27	STRUCTURE, COAMING PANEL MOUNTING	—	—	—	8 33
28W/9419475	—	Spares for:-				
	E.A3.10.2085	BOLT, explosive	2	—	—	8 34
	E.86.80.1721	BRACKET, assembly	1	—	—	8 35
28D/1213334	—	Attaching parts for E.86.80.1721:-				
	—	Bolt, 2BA	4	—	C	8 36
	—	Washer	4	—	C	8 37

CANBERRA

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
6B/2643 28D/1212371	E.H8.80.35	STOWAGE, PERISCOPIC SEXTANT Spares for:-	-	-	-	10 1
	E.H8.80.37	TRAY, stowage	1	-	-	10 2
	-	TRAY, c/w washers Attaching parts for Ref. 6B/2643:-	1	-	B	10 3
	AS.1242/2E	Screw, 1/4" BSF, csk.	4	-	C	10 4
	E.H8.82.175	STRUCTURE, ANTENNA COUPLER, MOUNTING Spares for:-	-	-	-	10 5
	E.G7.82.519	CHANNEL, assembly	1	-	-	10 6
	2F.59.3	CORD, retaining	4	-	-	10 7
	E.H6.82.201	DIAPHRAGM	2	-	-	10 8
	AGS.2105/419	PIN, "pip", 1/4"	2	-	-	10 9
	AGS.2105/403	PIN, "pip", 1/4"	2	-	-	10 10
	E.G7.82.481	STRUCTURE, mounting	1	-	-	10 11
28D/1011238	A25/3E	Attaching parts for E.G7.82.481:- Bolt, 1/4" BSF	2	-	C	10 12
28M/9480017	AGS.2001/E/1	Nut, 1/4" BSF	2	-	C	10 13
28W/9419405	SP.15/E	Washer, 1/4" BSF	2	-	C	10 14
28D/9436920 28M/1278190 28W/9419475	E.H6.10.29	SUPPORT, A.T.U.	1	-	-	10 15
	E.H8.82.177	TOP-HAT, assembly Attaching parts for E.H8.82.177:-	1	-	-	10 16
	A25/1C	Bolt, 2BA	4	-	C	10 17
	AGS.2001/C/1	Nut, 2BA	4	-	C	10 18
	SP5/C	Washer, 2BA	4	-	C	10 19
	E.H8.82.178	TOP-HAT, assembly Attaching parts for E.H8.82.178:-	1	-	-	10 20
	A25/1C	Bolt, 2BA	4	-	C	10 21
	AGS.2001/C/1	Nut, 2BA	4	-	C	10 22
	SP.15/C	Washer, 2BA	4	-	C	10 23
	E.H8.80.23	STRUCTURE AT NAVIGATOR'S STATION Spares for:-	-	-	-	11 1
	E.H8.80.25	CONSOLE, NAVIGATOR'S, FIXED STRUCTURE Spares for:-	-	-	-	11 2
28D/1009984 28D/8337 28M/1278189 28W/9419474	E.G9.80.153	ANGLE, panel mounting, assembly	2	-	-	11 3
	A25/78	BOLT, 4BA	2	-	C	11 4
	E.H8.80.97	BRACKET, snub, assembly Attaching parts for E.H8.80.97:-	4	-	-	11 5
	AS.1248/1B	Bolt, 4BA, mush. hd.	2	-	C	11 6
	AGS.2001/B/1	Nut, 4BA	2	-	C	11 7
	SP.15/B	Washer, 4BA	2	-	C	11 8
	E.B6.80.1983	CLAMP, half	2	-	-	11 9
	E.G4.80.145	CLAMP, assembly Attaching parts for E.B6.80.1983 & E.G4.80.145:-	2	-	-	11 10
	A25/22C	Bolt, 2BA	2	-	C	11 11
	AGS.2001/C/1	Nut, 2BA	2	-	C	11 12
	E.B6.80.2003	Shim	2	-	-	11 13

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
10AJ/135	947	MOUNTING, anti-vibration Attaching parts for 10AJ/135:-	4	—	B	11 14
28D/1010658	A25/1B	Bolt, 4BA	4	—	C	11 15
28M/1278189	AGS.2001/B/1	Nut, 4BA	4	—	C	11 16
28W/9419474	SP.13/B	Washer, 4BA	4	—	C	11 17
	E.G9.80.855	PAD, snubbing Attaching parts for E.G9.80.855:-	1	—	—	11 18
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	11 19
28S/1212706	A40/B12	Screw, 4BA	2	—	C	11 20
	E.G7.80.367	LOCK-UP, NAVIGATOR'S TABLE, ASSEMBLY Spares for:-	—	—	—	11 21
34813	E.G7.80.369	LOCK, ASSEMBLY Spares for:-	1	—	B	11 22
	E.G7.80.373	BRACKET	1	S.510	—	11 23
	E.G7.80.377	LOCK Attaching parts for E.G7.80.377:-	1	S.1	—	11 24
28P/836	SP.47/B10	Pin, shackle	1	—	C	11 25
28P/9710567	SP.90/C4	Pin, split	1	—	C	11 26
28W/9419402	SP.13/C	Washer, 2BA	1	—	C	11 27
28P/19223	SP.90/E8	PIN, split	1	—	C	11 28
34814	E.G7.80.379	SPRING	1	STA.3 or DTD.5A	C	11 29
	E.G7.80.1965	Attaching parts for E.G7.80.369:- Block, packing	1	BS.2672F3	—	11 30
28D/9419397	A25/12C	Bolt, 2BA	2	—	C	11 31
28M/10288	AGS.2001/C/1	Nut, 2BA	2	—	C	11 32
28W/9419475	SP.15/C	Washer, 2BA	2	—	C	11 33
	E.B6.80.4957	MOUNTING, NAVIGATOR'S SHIN GUARD Spares for:-	—	—	—	12 1
	E.B6.80.4959	GUARD, assembly	1	—	—	12 2
	E.G9.80.291	PANEL, CLOSING, NAVIGATOR'S, SIDE TABLE Spares for:-	—	—	—	12 3
28D/1010658	A25/1B	BOLT, 4BA	3	—	C	12 4
28D/9436920	A25/1C	BOLT, 2BA	2	—	C	12 5
28D/9133011	A25/1½C	BOLT, 2BA	2	—	C	12 6
28M/1278189	AGS.2001/B/1	NUT, 4BA	3	—	C	12 7
28M/1278190	AGS.2001/C/1	NUT, 2BA	4	—	C	12 8
	E.G9.80.295	PANEL, side	1	—	—	12 9
	E.G7.80.313	SPRING	1	—	—	12 10
	E.G7.80.69	TABLE, NAVIGATOR'S FOLDING, ASSEMBLY Spares for:-	1	—	—	11 34
34808	E.G7.80.123	BOLT, special	1	S.96	C	11 35
34812	E.G7.80.381	CATCH, assembly Attaching parts for E.G7.80.381:-	1	S.1	C	11 36
28D/9140202	AS.1246/1C	Bolt, 2BA, rd. hd.	2	—	C	11 37
28M/9403820	A27/CP	Nut, 2BA	2	—	C	11 38
	E.G7.80.821	Plate, saddle	1	L.72	—	11 39

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
28M/10288	E.G7.80.101	HINGE	1	—	—	11 40
	AGS.2001/C/1	NUT, 2BA	1	—	C	11 41
24809	E.G7.80.111	OVERLAY, cork	1	Langite	LM	11 42
	E.G7.80.126	PIECE, distance	1	S.1	C	11 43
28W/1200071	E.G7.80.127	WASHER, special	1	S.510	—	11 44
	SP.25/C	WASHER, 2BA	1	—	C	11 45
	E.H8.80.27	TABLE, NAVIGATOR'S FIXED PORTION AND SUPPORT STRUCTURE	—	—	—	12 11
		Spares for:-				
28D/9133011	E.G7.80.123	BOLT, special	1	—	—	12 12
	A25/2C	BOLT, 2BA	4	—	C	12 13
28D/9436920	A25/1C	BOLT, 2BA	25	—	C	12 14
28D/1011238	A25/3E	BOLT, 1/4" BSF	6	—	C	12 15
	E.B6.80.1241	HINGE	1	—	—	12 16
		Attaching parts for E.B6.80.1241:-				
28D/9142408	AS.1248/3C	Bolt, 2BA, mush. hd.	21	—	C	12 17
28M/1278190	AGS.2001/C/1	Nut, 2BA	21	—	C	12 18
28W/9419402	SP.13/C	Washer, 2BA	21	—	C	12 19
28M/1278190	AGS.2001/C/1	NUT, 2BA	24	—	C	12 20
28M/9480017	AGS.2001/E/1	NUT, 1/4" BSF	6	—	C	12 21
	E.G7.80.125	PIECE, distance	1	—	—	12 22
28W/9419402	SP.13/C	WASHER, 2BA	2	—	C	12 23
28W/9419475	SP.15/C	WASHER, 2BA	22	—	C	12 24
28W/9419405	SP.15/E	WASHER, 1/4" BSF	6	—	C	12 25
	E.G7.80.127	WASHER, special	1	—	—	12 26
	E.G9.80.171	TRAY, LOWER, ASSEMBLY	1	—	—	12 27
		Spares for:-				
1438719	E.G9.80.179	CHANNEL, support, assembly	2	EEJ.50	C	12 28
		Attaching parts for E.G9.80.179:-				
28D/1010658	A25/1B	Bolt, 4BA	8	—	C	12 29
28M/10287	AGS.2001/B/1	Nut, 4BA	8	—	C	12 30
28W/9419474	SP.15/B	Washer, 4BA	8	—	C	12 31
33579	E.B6.80.1303	PANEL, detachable, amplifier mounting	1	—	C	12 32
		Attaching parts for E.B6.80.1303:-				
28D/1007981	AS.1248/1/2C	Bolt, 2BA, mush. hd.	18	—	C	12 33
	E.G9.80.737	PANEL, BOTTOM ASSEMBLY	—	—	—	12 34
		Spares for:-				
	E.G9.80.749	PLATE, cover, assembly	1	L.72	—	12 35
		Attaching parts for E.G9.80.749:-				
28D/9140202	AS.1246/1C	Bolt, 2BA, rd. hd.	8	—	C	12 36

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. MCR. LM.	Plate No.
		1 2 3 4 5 6				
	E.H8.80.407	TRAY, MOUNTING, INSTALLATION	—	—	—	13 1
	E.H8.80.409	Spares for:- CHANNEL, support	2	—	—	13 2
28D/1010658	A25/1B	Attaching parts for E.H8.80.409:- Bolt, 4BA	8	—	C	13 3
28M/1278189	AGS 2001/B/1	Nut, 4BA	8	—	C	13 4
28W/9419474	SP.15/B	Washer, 4BA	8	—	C	13 5
	EEAS.40/3	CLEAT	4	—	—	13 6
		Attaching parts for EEAS.40/3:-				
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	13 7
28M/1278189	AGS 2001/B/1	Nut, 4BA	2	—	C	13 8
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	13 9
	EEAS.40/4	CLEAT	4	—	—	13 10
		Attaching parts for EEAS.40/4:-				
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	13 11
28M/1278189	AGS 2001/B/1	Nut, 4BA	2	—	C	13 12
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	13 13
	E.H8.80.551	TRAY, mounting	1	—	—	13 14
		Attaching parts for E.H8.80.551:-				
	A25/8E	Bolt, 1/2" BSF	4	—	—	13 15
	E.A3.80.899	EXTINGUISHER, FIRE, ASSEMBLY	—	—	—	13 16
		Spares for:-				
8625	E.A3.80.1211	BRACKET, assembly	1	—	C	13 17
8626	E.A3.80.1213	BRACKET, assembly	1	—	C	13 18
27N/85	—	BRACKET, extinguisher, fire	1	—	C	13 19
27N/70	—	EXTINGUISHER, fire	1	—	A	13 20
	AS.2810/8/05	TUBE, distance	4	T.4	LM	13 21
	E.A3.83.179	FLAP, SWITCH AND UNDERCARRIAGE	—	—	—	14 1
		SWITCH LOCK, STOWAGE, ASSEMBLY				
		Spares for:-				
8969	E.A3.88.173	BAG, stowage, flap switch locking pin	1	—	B	14 2
22167	E.A3.88.295	BAG, stowage, u/c switch locking pin	1	—	C	14 3
5CW/4751	E.A3.83.175	LOCK, FLAP SWITCH, ASSEMBLY	1	—	B	14 4
		Spares for:-				
28FP/1200982	AVDEL A.415	PIN, "pip"	1	—	C	14 5
22168	E.A3.83.299	LOCK, u/c switch	1	—	C	14 6
22G/9108081	—	GAUNTLETS, asbestos	1pr	—	—	14 9
3501	E.A3.80.1989	HANDLE EMERGENCY HYDRAULIC PUMP, ASSEMBLY	1	—	C	14 7
		Spares for:-				
6369	ROMAC B/80	HAND-GRIP	1	—	C	14 8
	6545-99-211- 0670	KIT, first aid	1	—	—	14 10
	E.A3.80.901	MOUNTING, FIRE-AXE, ASSEMBLY	1	—	—	13 22
		Spares for:-				
27N/1	—	AXE, fire	1	—	A	13 23
28E/9513854	AS.2294/8	CLIP, spring	1	—	C	13 24
	NEWBY 7/7	FASTENER	1	—	—	13 26
8595	E.A3.80.1829	PLATE, doubling	1	L.72	C/MR	13 28
8596	F.A3.80.1831	STRAP, 1/8" thick	1	Leather	C/MR	13 27

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A3.80.1833	MOUNTING, CONTAINER, FIRST AID, ASSEMBLY	1	—	—	14 11
2167	E.A1.80.881	Spares for:- CONTAINER, first aid box	1	—	B	14 12
28D/1013301	AS.1248/4C	Attaching parts for E.A1.80.881:- Bolt, 2BA	2	—	C	14 13
28M/1278190	AGS.2001/C/1	Nut, 2BA	2	—	C	14 14
3694	E.A3.80.1923	Pad, packing	1	—	C	14 15
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	14 16
8692	E.A3.80.1835	COVER	1	—	C	14 17
28FP/		Attaching parts for E.A3.80.1835:-				
9993392	ODDIE 212	Clip	2	—	C	14 18
28FP/						
1004892	ODDIE 213/2	Stud	2	—	C	14 19
28FP/						
1001892	ODDIE 214	Washer	2	—	C	14 20
	E.H8.80.3	PANELS, PILOT'S INSTRUMENTS AND CONSOLE	—	—	—	15 1
		Spares for:-				
28D/1011339	A26/8B	BOLT, 4BA, at 100 P4 mounting	2	—	C	15 2
28D/1213018	A26/11B	BOLT, 4BA, at 100 P4 mounting	1	—	C	15 3
28D/1213235	A61/14E	BOLT, 1/4" BSF at 150 P10 and 150 P12 mountings	4	—	C	15 4
28D/9140402	AS.1246/1/C	BOLT, 2BA, rd. hd. at u/c instrument panel surround	9	—	C	15 5
	E.86.80.621	BRACKET, angle, assembly	1	—	—	15 6
		Attaching parts for E.86.80.621:-				
28S/9436921	A31/C28	Screw, 2BA, ch. hd.	4	—	C	15 7
	E.H8.80.421	COMPASS, standby, type EB.2	1	—	—	15 8
	E.H8.80.159	CONSOLE, PILOT'S, ASSEMBLY	1	—	—	15 9
		Spares for:-				
	E.H8.80.155	PANEL, CONSOLE, TOP, ASSEMBLY	1	—	—	15 10
		Spares for:-				
	PLESSEY CZ.52815	BLOCK, fuse, 4-way	3	—	—	15 11
		Attaching parts for CZ.52815:-				
28S/1200080	A32/B8	Bolt, 4BA	2	—	C	15 12
28W/9418642	SP.47/B	Washer, 4BA, spring	2	—	C	15 13
	E.A2.81.359	BRACKET, plug	1	—	—	15 14
		Attaching parts for E.A2.81.359:-				
28M/1278189	AGS.2001/B/1	Nut, 4BA	4	—	C	15 15
28S/9992525	A32/B12	Screw, 4BA, rd. hd.	4	—	C	15 16
	E.A3.81.283	BRACKET, switch, assembly	1	—	—	15 17
		Attaching parts for E.A3.81.283:-				
28S/9419435	A31/B12	Screw, 4BA, ch. hd.	4	—	C	15 18
	BARBER COLEMAN 11.0.6	Washer, shakeproof	4	—	—	15 19
	EEAS.28/2/FP	Washer, spacing	4	—	—	15 20
	HELVIN HV.3711	CAP, dolly	7	—	—	16 1

**EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
28S/1006948	E.A3.81.377	COVER, spring	1	—	—	15 21
	A32/A12	Attaching parts for E.A3.81.377:- Screw, 6BA, rd. hd.	2	—	C	15 22
28M/10286 28S/9995324	E.G9.80.697	COVER, FUSE COMPARTMENT, ASSEMBLY Spares for:-	1	—	—	16 2
	E.A1.81.542	CARRIER, spare fuse Attaching parts for E.A1.81.542:-	1	—	—	16 3
28M/10286 28S/9995324	AGS.2001/A/1	Nut, 6BA	2	—	C	16 4
	A32/A16	Screw, 6BA, rd. hd.	2	—	C	16 5
	DZUS A4/25	FASTENER	4	—	—	16 6
	E.H8.81.445 THORN	DIAGRAM, wiring	1	—	—	
	5L/995-9118	FILAMENT, 0.04 amp	1	—	—	16 7
	5L/295-122	FILAMENT, 28v, 3.5w	1	—	—	16 8
	5CZ/5215	FUSE, HRC, Type AS 5A	8	—	—	16 9
	5CZ/5216	FUSE, HRC, Type AS 10A	1	—	—	16 10
	5CZ/5218	FUSE, HRC, Type AS 20A	1	—	—	16 11
	SP.93/86	GROMMET	1	—	—	16 12
	SP.93/B24	GROMMET	3	—	—	16 13
	E.A3.81.787	KNOB, switch Attaching parts for E.A3.81.787:-	1	—	—	16 14
28S/1008070	E.A3.81.1089 or	Screw, grub	1	—	—	16 15
	A55/A4	Screw, 6BA, grub	1	—	C	16 16
28S/1005622	E.A3.81.2077	KNOB, switch Attaching parts for E.A3.81.2077:-	1	—	—	15 23
	A31/B28	Screw, 4BA, ch. hd.	1	—	C	15 24
	E.H8.81.897	LABEL	1	—	—	16 17
	E.H8.81.895	LABEL	1	—	—	16 18
	E.H8.81.893	LABEL	1	—	—	16 19
	E.H8.80.503	LABEL	1	—	—	16 20
	SIS.2968 THORN	LAMP, warning, type 'B'	1	—	—	16 21
	80/10/10855	LAMP, pillar, red	1	—	—	16 22
	E.H8.80.153	PANEL, top console, blank	1	—	—	16 23
	E.H8.80.345	PANEL, fixed	1	—	—	16 24
	E.G9.80.691	PANEL, removable Attaching parts for E.G9.80.691:-	1	—	—	16 25
28S/9133016	A32/C12	Screw, 2BA, rd. hd.	3	—	C	16 26
28S/9133018	E.G9.80.703	PLATE, blanking Attaching parts for E.G9.80.703:-	1	—	—	16 27
	A32/C12	Screw, 2BA, rd. hd.	4	—	C	16 28
	PLESSEY 2CZ/111229	PLUG, 26-way, size D	2	—	—	15 26
	2CZ/111224	PLUG, 9-way, size B	1	—	—	15 26
	2CZ/111399	PLUG, 4-way, size A	2	—	—	15 27

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.N. L.M.	
		1 2 3 4 5 6				
	E.A3.81.6375	SWITCH, assembly	1	—	—	16 29
28S/1200080	A32/88	Attaching parts for E.A3.81.6375:-	4	—	C	16 30
28W/9416642	SP.47/B	Screw, 4BA, rd. hd.	4	—	C	16 31
		Washer, 4B, spring				
5CW/1047693	—	SWITCH, SP. C/O	6	—	B	16 32
		Attaching parts for 5CW/1047693:-				
28S/9992625	A32/B12	Screw, 4BA, rd. hd.	2	—	C	16 33
28W/9416642	SP.47/B	Washer, 4BA, spring	2	—	C	16 34
	EEAS.28/2HP	Washer, packing	2	—	—	16 35
5CW/4612	—	SWITCH, 3-way, S.P.	1	—	B	16 36
		Attaching parts for 5CW/4612:-				
28S/1200080	A32/88	Screw, 4BA, rd. hd.	4	—	C	16 37
28W/9416642	SP.47/B	Washer, 4BA, spring	4	—	C	16 38
5CW/1047697	—	SWITCH, D.P. C/O	1	—	B	16 39
		Attaching parts for 5CW/1047697:-				
28S/1200080	A32/88	Screw, 4BA, rd. hd.	4	—	C	16 40
28W/9416642	SP.47/B	Washer, 4BA, spring	4	—	C	16 41
	EEAS.28/2HP	Washer, packing	4	—	—	16 42
	AEI					
	LHA3.RG.201.D1	SWITCH	—	—	—	16 43
	E.A3.81.581	SWITCH, BOMB DOORS, ASSEMBLY	1	—	—	16 28
		Spares for:-				
28S/1200065	A33/A6	SCREW, 6BA, csk. hd.	2	—	C	15 29
5CW/7748	—	SWITCH, tumbler	1	—	B	15 30
5CW/4835	E.A3.81.2073	TOGGLE, switch	1	—	B	15 31
5CW/7543	ROTAX	SWITCH, S.P. C/O	1	—	B	15 32
		Attaching parts for 5CW/7543:-				
28S/1200080	A32/88	Screw, 4BA, rd. hd.	2	—	C	16 33
28W/9416642	SP.47/B	Washer, 4BA, spring	2	—	C	15 34
	EEAS.28/2HP	Washer, packing	2	—	—	15 35
	E.H8.80.167	STRUCTURE, PILOT'S CONSOLE, ASSEMBLY	—	—	—	17 1
		Spares for:-				
	E.A3.80.2575	FAIRING, CONTROL, ASSEMBLY	1	—	—	17 2
		Spares for:-				
	E.A3.80.2579	COVER, detachable	1	—	—	17 3
		Attaching parts for E.A3.80.2579:-				
28D/1007981	AS.1248/4C	Bolt, 2BA	5	—	C	17 4
28D/1007982	AS.1248/1C	Bolt, 2BA	3	—	C	17 5
5628	E.B7.80.365	PANEL, removable, forward	1	L.72	C	17 6
	E.A3.80.2755	PANEL, removable, centre	1	—	—	17 7
	E.A3.80.1177	PANEL, removable, rear intermediate	1	—	—	17 8
	E.G9.80.865	PANEL, removable, rear	1	—	—	17 9
		Attaching parts for E.B7.80.365, E.A3.80.2755, E.A3.80.1177 and E.G9.80.865:-				
28D/1007982	AS.1248/1C	Bolt, 2BA	QR	—	C	17 10
28D/1011029	A25/1E	Bolt, 1/4" BSF	QR	—	C	17 11

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Rate No.
		1 2 3 4 5 6				
	E.H8.80.393	COWL, ANTI-GLARE, INSTALLATION	-	-	-	17 12
28D/9140652	A61/1C	Spares for:- BOLT, 2BA, hex. hd.	1	-	C	17 13
	E.H8.80.396	COWL, anti-glare	1	-	-	17 14
28M/1278190	AGS.2001/C/1	Nut, 2BA	1	-	C	17 15
28W/9457834	SP.124/D	Washer, 2BA	1	-	C	17 16
	E.A3.80.5533	FITTING, support, panel Attaching parts for E.A3.80.5533:-	2	-	-	17 17
28D/9438770	A26/2C	Bolt, 2BA	4	-	C	17 18
28M/1278190	AGS.2001/C/1	Nut, 2BA	4	-	C	17 19
	E.A1.80.401	LEAD, bonding Attaching parts for E.A1.80.401:-	1	-	-	17 20
28D/1011333	A26/1B	Bolt, 4BA	1	-	C	17 21
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	-	C	17 22
	AS.3360/84B	LEAD, bonding	1	-	-	17 23
	100 P4	MOUNTING, A.V., 4 lb Attaching parts for 100 P4:-	6	Rubber	-	17 24
28D/1011333	A26/1B	Bolt, 4BA	4	-	C	17 25
28M/1278189	AGS.2001/B/1	Nut, 4BA	4	-	C	17 26
	150 P12	MOUNTING, A.V., 12 lb Attaching parts for 150 P12:-	3	Rubber	-	17 27
28D/1212964	A61/1B	Bolt, 4BA	4	-	C	17 28
28D/1212965	A61/2B	Bolt, 4BA	4	-	C	17 29
28M/1278189	AGS.2001/B/1	Nut, 4BA	4	-	C	17 30
28W/9143227	SP.14/B	Washer, 4BA	4	-	C	17 31
	150 P10	MOUNTING, A.V., 10 lb Attaching parts for 150 P10:-	5	Rubber	-	17 32
28D/1212964	A61/1B	Bolt, 4BA	4	-	C	17 33
28D/1212965	A61/2B	Bolt, 4BA	4	-	C	17 34
28M/1278189	AGS.2001/B/1	Nut, 4BA	4	-	C	17 35
28W/9143227	SP.14/B	Washer, 4BA	4	-	C	17 36
28M/1278189	AGS.2001/B/1	NUT, 4BA, at 100 P4 mounting	3	-	C	17 37
	AGS.2001/E/1	NUT, 1/4" BSF, at 150 P10 and 150 P12 mountings	4	-	-	17 38
	E.B6.80.757	PACKING	1	-	-	18 36
	E.H8.80.75	PANEL, INSTRUMENT, ENGINE, INSTALLATION	-	-	-	18 1
		Spares for:-				
5L/9961273		FILAMENT, 28v, 3.5w	2	-	B	18 2
5L/9961110		FILAMENT, 6v, 0.24w	2	-	B	18 3
	SP.93/A4	GROMMET	1	-	-	18 4
	E.A3.80.197	GUARD assembly	6	-	-	18 5
	5V TUB					
	NEUTRAL PEN					
	18	NOT A TYPICAL contents	1	-	-	18 6
28S/11107	44	NOT A TYPICAL contents	4	-	C	18 7
		NOT A TYPICAL contents	1	-	-	18 8
					C	18 9

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
28S/1017078	SMITHS WEYMOUTH AG.26	INDICATOR, fuel contents	1	—	—	18 10
	A44/B24	Attaching parts for AG.26:- Screw, 4BA, rd. hd.	4	—	C	18 11
28S/1017078	SMITHS 1ACR	INDICATOR, oil pressure	2	—	—	18 12
	A44/B24	Attaching parts for 1ACR:- Screw, 4BA, rd. hd.	4	—	C	18 13
28S/1007443	SIS.3652	INDICATOR, exhaust temperature	1	—	—	18 14
	AGS.2002/C/1	Attaching parts for SIS.3652:- Nut, 2BA	4	—	—	18 15
28S/1011492	A32/C18	Screw, 2BA, rd. hd.	2	—	C	18 16
	A32/C28	Screw, 2BA, rd. hd.	2	—	C	18 17
28S/1017078	SIS.3596	INDICATOR, engine speed	2	—	—	18 18
	A44/B24	Attaching parts for SIS.3596:- Screw, 4BA, rd. hd.	4	—	C	18 19
28M/10286	THORN 80/10/1191	LAMP, bridge	1	—	—	18 20
	5L/955-9118	LAMP, panel	18	—	—	18 21
28S/1200045	SIS.2968	LAMP, warning, type 'B'	4	—	—	18 22
	AGS.2001/A/1	NUT, 6BA	6	—	C	18 23
28M/1278189	AGS.1658/0	NUT, gland (for use with SIS.3596 if required)	2	—	—	18 24
	E.H8.80.77	PANEL, structure	1	—	—	18 25
28S/1200045	THORN 80/10/0855/Red	PILLAR, lamp holder	16	—	—	18 26
	EEAS.200	RING, locking	10	—	—	18 27
28M/1278189	A31/A10	Screw, 6BA, ch. hd.	8	—	C	18 28
	AGS.1861/3	SLEEVE, (for use with SIS.3596 if required)	2	—	—	18 29
28D/1011002	N.S.F. 8820-B125	SWITCH, locking	6	—	—	18 30
	N.S.F. 8824-B108	SWITCH	2	—	—	18 31
28M/10286	N.S.F. 8810-B101	SWITCH	2	—	—	18 32
	E.H8.81.293	WIRING, ENGINE INSTRUMENT PANEL Spares for:-	—	—	—	18 1
28W/9419473	WARD BROOKE WB/UN/1146/D/ 10/W	BLOCK, terminal	1	—	—	18 2
	WARD BROOKE WB/1114/28	Attaching parts for WB/UN/1146/D/10/W:- Pillar, fixing	2	—	—	18 3
28M/10286	AGS.2001/B/1	Nut, 4BA	2	—	C	18 4
	E.G9.81.399	BRACKET, plug and terminal block	2	—	—	18 5
28D/1011002	A25/A	Attaching parts for E.G9.81.399:- Bolt, 4BA	5	—	C	18 6
	AGS.2001/A/1	Nut, 4BA	5	—	C	18 7
28W/9419473	SP.15/A	Washer, 4BA	5	—	C	18 8
	E.H8.80.87	BRACKET	1	—	—	18 9
	E.H8.80.88	BRACKET	1	—	—	18 10

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	—	CABLE, uniminyvin, 12	QR	—	—	
	—	CABLE, uniminyvin, 16	QR	—	—	
	—	CABLE, uniminyvin, 20	QR	—	—	
	—	CABLE, uniminyvin, 22	QR	—	—	
	WARD BROOKE WB/NY/1110/B/ 10	COVER	1	—	—	19 11
	EE11/2	EXTRUSION	QR	—	—	19 12
	WARD BROOKE WB/1146/74	LINK, 4-way	2	—	—	19 13
	WARD BROOKE WB/1146/81	LINK, transverse	1	—	—	19 14
	EEAS.551/20	PLATE, ident	1	—	—	19 15
	PLESSEY CPL.0104.1.11. 1.4.2	PLUG, Mk.7 (T.4) 100° C free	1	—	—	19 16
5X/9171	508/1/06399	PLUG, size 'B', 9-way	2	—	—	19 17
	PLESSEY CZ.49061	PLUG, size '3', 25-way	1	—	—	19 18
	CZ.49061/1	PLUG, size '3', 25-way	1	—	—	19 19
	508/1/06407	PLUG, size 'C', 6-way	2	—	—	19 20
5X/3147	Z.28081	SLEEVE, inner	12	—	—	19 21
	EEAS.146/20	SLEEVE, 1/2" long	QR	—	—	19 22
	EEAS.566	SLEEVE, special	8	—	—	19 23
	EEAS.563	SLEEVE, special	2	—	—	19 24
	EEAS.146/6	SLEEVE, 1/2" long	QR	—	—	19 25
	EEAS.146/12	SLEEVE, 1/2" long	QR	—	—	19 26
	EEAS.146/12	SLEEVE, 1/2" long	QR	—	—	19 27
	EEAS.146/18	SLEEVE, 1/2" long	QR	—	—	19 28
	EEAS.146/16	SLEEVE, 1/2" long	QR	—	—	19 29
	EEAS.146/22	SLEEVE, 1/2" long	QR	—	—	19 30
	EEAS.146/22	SLEEVE, 1/2" long	QR	—	—	19 31
	EEAS.146/20	SLEEVE, 1/2" long	QR	—	—	19 32
	MAM RUBBER CO. CXH	SLEEVE, 3 mm. i/d. x 3/8" long, pink	20	—	—	19 33
	WARD BROOKE WB/1114/22	SPACER	4	—	—	19 34
	HV.3254	STRAPPING	QR	—	—	19 35
	HV.3256	STUD	QR	—	—	19 36
	HC.314/A	TAG, ring tongue	4	—	—	19 37
	HC.315	TAG, ring tongue	16	—	—	19 38
	HC.294	TAG, ring tongue	30	—	—	19 39
	HC.295	TAG, ring tongue	30	—	—	19 40
	HC.296 B	TAG, ring tongue	8	—	—	19 41
	HC.304	TAG, ring tongue	4	—	—	19 42
	—	TAPE, Tygaffor T120	QR	—	—	
	BARBER COLEMAN 1906	Washer, 5BA, shakeproof	46	—	—	18 33

**EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT**

Ref. No.	Part No.	Description	No. off	Mtd. Spec.	Cl. of Equip.	Pnse No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.80.71	PANEL, INSTRUMENT, FLYING, ASSEMBLY	—	—	—	20 1
6A/7762	—	Spares for:-				
	—	ALTIMETER, Mk.22D	1	—	A	21 1
	—	Attaching parts for Ref. 6A/7762:-				
	A.170/28	Bolt, 6 UNC	4	—	—	21 2
28S/1017078	or A44/B24	Screw, 4BA, rd. hd.	4	—	C	
	WARD BROOKE WB/UN/1146/D/ 10/W	BLOCK, terminal, 20-way	2	—	—	20 2
	—	Attaching parts for WB/UN/1146/D/10/W:-				
	AGS.2021/B/1	Nut, 4BA	2	—	—	20 3
	A45/B28	Screw, 4BA, csk. hd.	2	—	—	20 4
	A55/B32	Screw, 4BA, csk. hd.	1	—	—	20 5
	WARD BROOKE WB/1114/22	Spacer	2	—	—	20 6
	E.G9.81.845	BRACKET, mounting, lamp	1	—	—	21 3
	E.G9.81.843	BRACKET, mounting, lamp	4	—	—	21 4
	E.H8.80.321	BRACKET, mounting, shock absorber	4	—	—	20 7
	—	Attaching parts for E.H8.80.321:-				
	A61/3C	Bolt, 2BA	2	—	—	20 8
	SP.15/C	Washer, 2BA	2	—	—	20 9
	H.K.PORTER 64.99.005	CLAMP	2	—	—	20 10
6A/2958	SIS.6116	CLAMP	1	—	—	20 11
	—	CLOCK, fluorescent, Mk.4B, c/w screws	1	—	A	20 12
	E.H8.81.291	DIAGRAM, wiring	1	—	—	
	5L995-9119	FILAMENT, 6v. 0.1 amp	3	—	—	21 5
	SP.40/C4	GROMMET	1	—	—	21 6
	E.G9.80.247	HOLDER, compass card	2	—	—	21 7
	—	Attaching parts for E.G9.80.247:-				
	4101/4/4	Screw, rd. hd. P.K.	2	—	—	21 8
6A/5821	813 FL	INDICATOR, tail trim	1	—	A	20 13
	—	Attaching parts for 813 FL:-				
28S/1017078	A44/B24	Screw, 4BA, rd. hd.	4	—	C	20 14
6A/3161	431 FL	INDICATOR, rudder trim	1	—	A	20 15
	—	Attaching parts for 431 FL:-				
28S/1017078	A44/B24	Screw, 4BA, rd. hd.	4	—	C	20 16
6A/3160	430 FL	INDICATOR, aileron trim	1	—	A	20 17
	—	Attaching parts for 430 FL:-				
28S/1017078	A44/B24	Screw, 4BA, rd. hd.	4	—	C	20 18
	MARCONI AA-6005	INDICATOR, distance flown	1	—	—	20 19
	MARCONI AA-3604.1	INDICATOR, ground speed and drift	1	—	—	20 20
6A/4722	—	INDICATOR, air speed, Mk.9M	1	—	A	21 9
	—	Attaching parts for Ref. 6A/4722				
28M/1279190	ACS. 100.10.1	Nut, 4BA	4	—	C	21 10
28S/1274171	—	Screw, 4BA, rd. hd.	4	—	C	21 11
	—	Tube, distance	4	—	—	21 12

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					MLR. L.M.	
		1 2 3 4 5 6				
	SANGAMO WESTON S-114-B-33	INDICATOR, across track deviation Attaching parts for S-114-B-33:-	1	-	-	21 13
28S/1017078	A43/B24	Screw, 4BA, ch. hd.	4	-	C	21 14
28W/1200328	AGS.2037/B	Washer, 4BA, shakeproof	4	Bronze	C	21 15
	BENDIX 36105/1S/14/C1	INDICATOR, radio magnetic, type MN-72G Attaching parts for 36105/1S/14/C1:-	1	-	-	21 16
	A170/5B or	Bolt, 6 UNC, mush. hd.	4	-	-	21 17
28S/1017078	A44/B24	Screw, 4BA, rd. hd.	4	-	C	
	165/EAP BENDIX	INDICATOR, remote trim	1	-	-	20 21
	2087421-2	INDICATOR, omnibearing selector, type 1NA-21B-1 Attaching parts for 2087421-2:-	1	-	-	21 18
	A170/6B or	Bolt, 6 UNC, mush. hd.	3	-	-	21 19
28S/1017078	A44/B24	Screw, 4BA, rd. hd.	3	-	C	
6A/2697	-	INDICATOR, vertical speed Attaching parts for Ref. 6A/2697:-	1	-	A	21 20
28S/1214186	A44/B28	Screw, 4BA, rd. hd.	4	-	C	21 21
	SMITHS -	INDICATOR, turn and slip, Mk.2A Attaching parts for Ref. 6A/3953/1:-	1	-	A	21 22
28S/1214186	A44/B28	Screw, 4BA, rd. hd.	4	-	C	21 23
28W/1200328	AGS.2037/B	Washer, 4BA, shakeproof	4	Bronze	C	21 24
5CZ/5074	-	INDICATOR, electromagnetic, type B2	1	-	A	21 25
5CZ/5003	-	INDICATOR, electromagnetic, type C1	1	-	A	21 26
	PAGE C500/C/7	LAMP, amber	1	-	-	21 27
	PAGE C500/D/7	LAMP, white	1	-	-	21 28
	PAGE C500/E/7	LAMP, blue	1	-	-	21 29
	5L/995-9118 THORN	LAMP, filament, 28v. 0.04 amp	40	-	-	21 30
	L 1006,6240/99/ 995/9-22	LAMP, filament, 28v. 0.08 amp	4	-	-	21 31
	SIS 6146	MACHMETER, Mk.2 Attaching parts for SIS.6146:-	1	-	-	21 32
28S/1017078	A44/B24	Screw, 4BA, ch. hd.	4	-	C	21 33
28W/1200328	AGS.2037/B	Washer, 4BA, shakeproof	4	Bronze	C	21 34
	PANEL, flying, blank		1	-	-	20 22
5CZ/5074	-	PANEL, amp holder	3	-	C	21 35
5CZ/5003	-	PANEL, amp holder	41	-	C	21 36
	SHIELD, auto p. heading		1	-	-	21 37
	RESISTOR, 250 ohms, 25W		2	-	-	21 38
28S/114-B-33	A44/B24	Screw, 4BA, ch. hd.	2	-	C	

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5CW/4222 5CW/1047693	E.G9.81.687	SPACER	1	—	—	21 39
	—	SWITCH, guard	1	—	B	21 40
	—	SWITCH, S.P.C.O.	1	—	B	21 41
		Attaching parts for Ref. 5CW/4222 and 5CW/1047693:-				
28S/9145185	A44/B12	Screw, 4 BA, rd. hd.	2	—	C	21 42
28W/1200328	AGS.2037/B	Washer, 4 BA, shakeproof	2	Bronze	C	21 43
6B/561	—	UNIT, gyro, type 'B'	1	—	A	21 44
		Attaching parts for Ref. 6B/561:-				
28S/1214174	A44/C28	Screw, 2 BA, rd. hd.	4	—	C	21 45
	SPERRY 188460	UNIT, artificial horizon, Mk 3D, type HL.7	1	—	—	20 23
		Attaching parts for 188460:-				
28S/1214173	A44/C24	Screw, 2 BA, rd. hd.	3	—	C	20 24
	EEAS.27/15/1A	Shim	4	—	—	20 25
28W/9419475	E.G9.81.683	WASHER, taper, at pillar lamp	2	—	—	21 46
	SP.15/C	WASHER, 2 BA, at pillar lamp	2	—	C	21 47
	EEAS.237/7A	WASHER 'D', at pillar lamp	2	—	—	21 48
	E.H8.80.81	PANEL, INSTRUMENT, STARBOARD, ASSEMBLY	—	—	—	22 1
		Spares for:-				
	S.I.S.6117	ACCELEROMETER, Mk.2	1	—	—	22 2
		Attaching parts for S.I.S.6117:-				
28S/1008085	A32/B32	Screw, 4 BA, rd. hd.	2	—	C	22 3
28S/1011488	A32/B28	Screw, 4 BA, rd. hd.	1	—	C	22 4
28W/1200328	AGS.2037/B	Washer, 4 BA, shakeproof	3	Bronze	C	22 5
6A/4245	—	ALTIMETER	1	—	A	22 6
		Attaching parts for Ref. 6A/4245:-				
6A/4246	—	Flange, adaptor	1	—	C	22 7
28S/1017078	A44/B24	Screw, 4 BA, rd. hd.	4	—	C	22 8
28W/1200328	AGS.2037/B	Washer, 4 BA, shakeproof	4	Bronze	C	22 9
	WARD BROOKE WB/UN/1146/S/ 10/N	BLOCK, terminal	2	—	—	22 10
		Attaching parts for WB/UN/1146/S/10/N:-				
28S/1017078	A44/B24	Screw, 4 BA, rd. hd.	2	—	C	22 11
28M/1278189	AGS.2001/B/1	Nut, 4 BA	2	—	C	22 12
	E.G9.80.633	BRACKET, mounting assembly	1	—	—	22 13
	E.H8.80.575	BRACKET, support assembly	1	—	—	22 14
		Attaching parts for E.H8.80.575:-				
28D/9128739	AS.1248/4B	Bolt, mush. hd. 4 BA	2	—	C	22 15
5CW/5057	DOWTY	BUTTON, push	1	—	B	22 16
		Attaching parts for Ref. 5CW/5057:-				
28M/	A53/Z	Nut, 8 BA	2	—	C	22 17
28S/9147229	A43/Z12	Screw, 8 BA, cheese hd.	2	—	C	22 18
28W/1206050	AGS.2037/AA	Washer, 8 BA	2	—	C	22 19
	E.H8.81.285	DIAGRAM, wiring	1	—	—	—

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.F. L.M.	Plate No.
		1 2 3 4 5 6				
28W/1200328	E.A4.81.1687 SMITH 563/4/531	FLAP, spring, assembly	1	—	—	22 16
	A170/18	GAUGE, air temperature	1	—	—	22 17
	AGS.2037/B	Attaching parts for 563/4/531:- Screw, 6 UNC, mush. hd.	4	—	—	22 18
		Washer, 4 BA, shakeproof	4	Bronze	C	22 19
	SP93/A4	GROMMET	10	—	—	22 20
28S/1017078	SMITH 505 FL	INDICATOR, cabin air	1	—	—	22 21
	A44/B24	Attaching parts for 505 FL:- Screw, 4 BA, round hd.	4	—	C	22 22
	or A217/B24	Screw, 6 UNC	4	—	—	—
28W/1200328	AGS.2037/B	Washer, 4 BA, shakeproof	4	Bronze	C	22 23
28S/1008085	THORN 80/10/1190	LAMP, bridge	8	—	—	22 24
	A32/B32	Attaching parts for 80/10/1190:- Screw, 4 BA, rd. hd. (	2	—	C	22 25
	or A217/B32	At cabin air indicator only	2	—	—	—
28S/1214166	A44/B28	Screw, 6 UNC	2	—	C	22 26
28W/1200328	or A217/B24	Screw, 4 BA, rd. hd.	2	—	—	—
	AGS.2037/B	Screw, 6 UNC	2	—	—	—
		Washer, 4 BA, shakeproof	2	Bronze	C	22 27
	THORN 995-1284	LAMP, filament, 28v .04A	2	—	—	22 28
	THORN 995-9118	LAMP, filament, 28v .04A	23	—	—	22 29
	THORN 80/10/0855	LAMP, pillar	QR	—	—	22 30
	E.H8.80.83	Panel, instrument, blank	1	—	—	22 31
	SMITH RL/206.CUF/M8/8	PANEL, flight, type 'A'	1	—	—	22 32
	EEAS.550/10	PLATE, ident	2	—	—	22 33
	EEAS.200	RING, locking	4	—	—	22 34
	N.S.F. 8295-B109	SWITCH	1	—	—	22 35
	N.S.F. 8812-B102	SWITCH, S.P.D.T.	1	—	—	22 36
	N.S.F. 8810-B101	SWITCH, S.P.D.T.	2	—	—	22 37
5CW/6311	—	SWITCH, push	2	—	B	22 38
	SIS.1935	VOLTMETER, type 'A'	1	—	—	22 39
		Attaching parts for SIS 1935:-				
28S/9141665	A45/A16	Screw, 6 BA, c'sk. hd.	4	—	C	22 40
28M/10286	AGS.2001/A/4	Nut, 6 BA	4	—	C	22 41
5CW/4528	—	WINDOW F.1	1	—	B	22 42
		Attaching parts for Ref. 5CW/4528:-				
28S/9145185	A44/B12	Screw, 4 BA, rd. hd.	4	—	C	22 43
28W/1200328	AGS.2037/B	Washer, 4 BA, shakeproof	4	Bronze	C	22 44

**EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
5CW/4529	—	WINDOW, F.2	1	—	—	22 45
28S/9145185	A44/B12	Attaching parts for Ref. 5CW/4529:- Screw, 4 BA, round hd.	4	—	C	22 46
28W/1200328	AGS.2037/B	Washer, 4 BA, shakeproof	4	Bronze	C	22 47
28D/9435770	A26/2C	Attaching parts for E.H8.80.81:- Bolt, 2 BA	6	—	C	22 48
28D/1007932	AS.1248/1/C	Bolt, 2 BA, mush. hd.	3	—	C	22 49
28W/9419475	SP.15/C	Washer, 2 BA	9	—	C	22 50
	E.H8.80.355	PANEL, INSTRUMENT, UNDERCARRIAGE, ASSEMBLY Spares for:-	—	—	—	23 1
	WARD BROOKE WB/UN/1146/S/ 5/W	BLOCK, terminal, 5 way Attaching parts for WB/UN/1146/S/5/W:- Nut, 4 BA	1	—	—	23 2
28M/1278189	AGS.2001/B/1	Screw, 4 BA, rd. hd.	2	—	C	23 3
28S/1212709	A40/B20	Washer, 4 BA	2	—	C	23 4
28W/9143227	SP.14/B	BRACKET, switch assembly Attaching parts for E.A3.81.2081:- Screw, 4 BA, cheese hd.	1	—	—	23 5
28S/9419435	A31/B12	Washer, 4 BA, shakeproof	4	—	C	23 6
28W/1206041	AGS.2035/B	CLIP Attaching parts for AS.3180/7B:- Nut, 4 BA	1	—	C	23 7
28E/9000882	AS.3180/7B	Screw, 4 BA, rd. hd.	1	—	C	23 8
28M/1278189	AGS.2001/B/1	Washer, 'D'	1	—	C	23 9
28S/9992522	A32/B16	FILAMENT, lamp 28v - 3.5w	1	—	C	23 10
	EEAS.238/1A	GUARD, switch	1	—	C	23 11
	6240-99-995- 128F	Attaching parts for 5CW/5765:- Screw, 4 BA, rd. hd.	9	—	—	23 12
5CW/5765	—	Washer, 4 BA, shakeproof	1	—	C	23 13
28S/9992522	A32/B16	GUARD, switch	4	—	C	23 14
28W/1206041	AGS.2035/B	INDICATOR, flap position Attaching parts for 218/FL:- Screw, 4 BA, rd. hd.	4	—	C	23 15
	E.G9.80.429 SMITH 218/FL	INDICATOR, undercarriage Attaching parts for C.1224Y:- Screw, 4 BA, rd. hd.	1	—	—	23 16
28S/1212709	A40/B20	KNOB, switch Attaching parts for E.A3.81.2075:- Screw, 4 BA, cheese hd.	1	—	C	23 17
	6C/4204 C.1224Y	Washer, shakeproof	4	—	—	23 18
28S/1212709	A40/B20		1	—	C	23 19
	E.A3.81.2075		1	—	—	23 20
28S/1005622	A31/B28 BARBER COLEMAN		1	—	C	23 21
28W/1007776	1106		1	—	C	23 22

**EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	THERMOTANKS LTD.					
5042	DAR.2	. . . LOUVRE, punkah Attaching parts for DAR.2:-	1	-	B	23 17
28D/1213215	AS.2922/48	. . . Bolt, 4 BA, rd. hd.	3	-	C	23 18
28M/1278189	AGS.2001/B/1	. . . Nut, 4 BA	3	-	C	23 19
28W/9143227	SP.14/B	. . . Washer, 4 BA	3	-	C	23 20
	E.G9.81.065	. . . PACKING	4	-	-	23 21
	E.H8.80.357	. . . PANEL, instrument, blank	1	-	-	23 22
	EEAS.550.5	. . . PLATE, ident	1	-	-	23 23
	EEAS.200	. . . RING, locking	1	-	-	23 24
	N.S.F.					
	8830/B103	. . . SWITCH	1	-	-	23 25
	DOWTY					
	C.5182Y	. . . SWITCH, push button Attaching parts for C.5182Y:-	1	-	-	23 26
28M/1278189	AGS.2001/B/1	. . . Nut, 4 BA	2	-	C	23 27
28S/9992522	A32/B16	. . . Screw, 4 BA, round hd.	2	-	C	23 28
5CW/1047697	-	. . . SWITCH, double pole	1	-	C	23 29
	E.A3.81.5851	. . . SWITCH, assembly	1	-	-	23 30
	E.H8.81.705	. . . WIRING, U/C INSTRUMENT PANEL	-	-	-	-
		Spares for:-				
5E/4185	-	. . . CABLE, uninyvin, 16	QR	-	C	-
5E/4183	-	. . . CABLE, uninyvin, 20	QR	-	C	-
	PLESSEY					
	508/2/09360/002	. . . CONTACT, plug, 12	1	-	-	23 31
	508/2/03547/002	. . . CONTACT, plug, 16	7	-	-	23 32
	508/2/09362/002	. . . CONTACT, plug, 12/16	3	-	-	23 33
	508/2/05604/002	. . . CONTACT, plug, 16/20	11	-	-	23 34
	PLESSEY					
	UKAN.8000.28.					
	11P	. . . PLUG, fixed, 22 way	1	-	-	23 35
	508/2/04368	. . . PLUG, filler, 12	QR	-	-	23 36
	508/2/04367	. . . PLUG, filler, 16	QR	-	-	23 37
	PLESSEY					
	508/2/06851/011	. . . RING, anti-chafe	1	-	-	23 41
	MAM RUBBER					
	CO. CXH	. . . SLEEVE, 3 mm i/d. x 3/8" long	QR	-	-	-
	EEAS.148/00	. . . SLEEVE, 1/4" long	QR	-	-	-
	EEAS.146/16	. . . SLEEVE, 1/4" long	QR	-	-	-
	EEAS.146/16	. . . SLEEVE, 1/4" long	QR	-	-	-
	EEAS.146/20	. . . SLEEVE, 1/4" long	QR	-	-	-
	EEAS.146/20	. . . SLEEVE, 1/4" long	QR	-	-	-
	EEAS.566	. . . SLEEVE, special	2	-	-	23 38
	PLESSEY					
	2Z.139626	. . . SLEEVE, packing	3	-	-	23 39
	2Z.139623	. . . SLEEVE, packing	21	-	-	23 40
	HELLERMANN					
	HC.305	. . . TAG, ring tongue	7	-	-	23 42
	HC.294	. . . TAG, ring tongue	8	-	-	23 43
	HC.296 D	. . . TAG, ring tongue	2	-	-	23 44
	HC.304	. . . TAG, ring tongue	3	-	-	23 45
	HC.306 D	. . . TAG, ring tongue	5	-	-	23 46
	HC.1199	. . . TAG, ring tongue	2	-	-	23 47
	5310-99-943-6838	. . . WASHER, crinkle	9	-	-	23 48

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. N.R. L.M.	Page No.
		1 2 3 4 5 6				
	E.H8.81.107	PANEL, STARTER, ASSEMBLY	—	—	—	24 1
5X/892	—	Spares for:	—	—	—	—
	—	BLOCK, terminal, 8-way	2	—	C	24 2
28M/1278189	AGS.2001/B/1	Attaching parts for Ref.5X/892:-	2	—	C	24 3
28S/1200039	A31/B32	Nut, 4BA	2	—	C	24 4
	—	Screw, 4BA, ch. hd.	2	—	C	—
	—	CABLE, uniminyvin 16	QR	—	—	—
	—	CABLE, uniminyvin 20	QR	—	—	—
	—	CABLE, uniminyvin 22	QR	—	—	—
5CW/5252	HELVIN					
5K/2724	HV.3711	CAP, dolly	3	—	C	24 5
	—	COVER, spring, assembly	2	—	C	24 6
	SP.40/B18	GROMMET	1	Rubber	—	24 7
	E.H8.81.891	LABEL	1	—	—	24 8
	E.A2.81.403	LABEL	1	—	—	24 9
	E.A2.81.405	LABEL	1	—	—	24 10
	E.A2.81.399	LABEL	1	—	—	24 11
	E.H8.81.319	LABEL	1	—	—	24 12
	E.H8.81.315	PANEL, starter, blank	1	—	—	24 13
5X/6091	—	PLUG	2	—	C	24 14
	or					
	2CZ/111227	PLUG	2	—	—	24 15
	CZ.50357	PLUG	2	—	—	24 16
	or					
	2CZ/111224	PLUG	2	—	—	24 17
	CZ/50355	PLUG	2	—	—	24 18
	or					
	2CZ/111399	PLUG	2	—	—	24 19
5CW/6453	CZ.48992	PLUG, fixed, Mk.4	1	—	—	24 20
	—	RELAY, type 9B, No.2A	1	—	B	24 21
28M/1278189	AGS.2001/B/1	Attaching parts for Ref. 5CW/6453:-	2	—	C	24 22
28S/9995376	A32/B20	Nut, 4BA	2	—	C	24 23
	—	Screw, 4BA, rd. hd	2	—	C	—
	EEAS.200	RING, locking	2	—	—	24 24
	EEAS.270	SCREW, 5BA, at tag	2	—	—	24 25
	EEAS.146/16	SLEEVE, 3/4" long	QR	—	—	—
	EEAS.146/20	SLEEVE, 3/4" long	QR	—	—	—
26DK/23688	EEAS.566	SLEEVE, special	2	—	C	24 26
5X/3148	Z.49428	SLEEVE, 4-7 amp	18	—	C	24 27
5CW/1047697	—	SWITCH	2	—	B	24 28
28S/9992525	A32/B12	Attaching parts for Ref. 5CW/1047697:-	4	—	C	24 29
28W/1206041	AGS.2035/B	Screw, 4BA, rd. hd.	4	—	C	24 30
	—	Washer, 4BA, shakeproof	4	—	C	—
5CW/1047690	ROTAX	SWITCH	2	—	B	24 31
	—	Attaching parts for 5CW/1047690	2	—	C	24 32
28S/9992525	A32/B12	Screw, 4BA, rd. hd.	2	—	C	24 33
28W/1206041	AGS.2035/B	Washer, 4BA, shakeproof	2	—	C	24 34
5C/540	SIS.1932	SWITCH, double pole	2	—	B	24 35
	—	Attaching parts for SIS 1932	4	—	C	24 36
28M/10286	AGS.2001/A/1	Nut, 5BA	4	—	C	24 37
28S/9995324	A37/F	Screw, 5BA, rd. hd.	4	—	C	24 38

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	NSF					
	8820-B121	SWITCH, double pole	1	—	—	24 37
	NSF					
	9830-B103	SWITCH, double pole	1	—	—	24 38
5CW/1047893	ROTAX	SWITCH, change-over	1	—	B	24 39
		Attaching parts for Ref. 5CW/1047893:-				
28S/9992525	A32/B12	Screw, 4BA, rd. hd.	2	—	C	24 40
28W/1206041	AGS.2035/B	Washer, 4BA, shakeproof	2	—	C	24 41
	HELLERMANN					
	HC.294 D	TAG, R.T. 4BA	2	—	—	24 42
	HELLERMANN					
	HC.306	TAG, R.T. 5BA	10	—	—	24 43
	HELLERMANN					
	HC.1189	TERMINAL, R.T., cranked, 4BA	3	—	—	24 44
	HELLERMANN					
	HC.1187	TERMINAL, R.T., cranked, 4BA	3	—	—	24 45
	HELLERMANN					
	HC.294	TERMINAL, R.T., 4BA	3	—	—	24 46
	HELLERMANN					
	HC.304	TERMINAL, R.T., 4BA	3	—	—	24 47
5K/2736	—	TRANSFER, engine starting	2	—	C	24 48
	TYGADURE					
	LTD. T120	TYGAFLOR	QR	—	—	
	BARBER & COLEMAN					
28W/18551	1905	WASHER, 5BA, crinkle, at tag	8	—	C	24 49
8479	EEAS.28/2/HR	WASHER, at Rotax switch	14	—	C	24 50
	AGS.1753/3C	WASHER and screw combined, at terminal blocks	16	—	—	24 51
	E.H8.80.161	PANELS, PILOT'S COAMING, INSTALLATION	—	—	—	
		Spares for:-				
	WARD BROOKE					
5CZ/7120	WB/UN/1146/S/2/W	BLOCK, terminal, 2-way	1	—	C	25 1
		Attaching parts for WB/UN/1146/S/2/W:-				
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	25 2
28S/9997425	A44/B18	Screw, 4BA, rd. hd.	2	—	C	25 3
28W/9419474	SP.15/B	Washer, 4BA	2	—	C	25 4
	SP.40/A24	GROMMET	1	—	—	25 5
	E.H8.80.251	PANEL, PILOT'S COAMING, ASSEMBLY	1	—	—	26 1
		Spares for:-				
	SAUNDERS ROE & NUCLEAR ENTERPRISES LTD.					
	M33/G/65	BETALIGHT	1	—	—	26 2
		BOX, spare lamp. Supplied with SFOM (unsight Type B3D)	1	—	—	26 3
		Attaching parts				
28M/1006962	A53/Z	Nut, 8BA	1	Brass	C	26 4
28S/1006917	A43/ZB	Screw, 8BA	1	Brass	C	26 5
	CH.27/15	CH.27/15 terminal block	1	—	—	27 1
28M/944115	—	FILAMENT, 0.02 amp	5	—	B	26 6
	—	KNOB	4	—	—	26 7
		Attaching parts for Ref. 84, R.T. 308				
28S/94467	—	Screw, 5BA, grub	1	—	C	26 8

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5CX/5364	THORN 80/10/0855	 LAMPHOLDER, pillar	5	-	B	26 7
	E.H8.80.481	 PANEL, pilots coaming, sub-assembly	1	-	-	26 8
	E.H8.80.257	 PLATE, switch mounting	1	-	-	26 9
28D/1213042	AS.4566/4B	 Bolt, 4BA, rd. hd. Attaching parts for E.H8.80.257:-	4	-	C	26 10
	EEAS.200	 RING, locking	3	-	-	26 11
	THORN 01-0106-24	 SWITCH, dimmer	1	-	-	26 12
	THORN 01-0091	 SWITCH, dimmer	2	-	-	26 13
	THORN 01-0089	 SWITCH, dimmer	1	-	-	26 14
	NSF 8820-B125	 SWITCH	1	-	-	26 15
	NSF 8824-B108	 SWITCH	1	-	-	26 16
	NSF 8810-B101	 SWITCH	1	-	-	26 17
	E.H8.80.453	 TRAY, mounting, assembly Attaching parts for E.H8.80.453 and E.H7.80.325:-	1	-	-	27 2
28D/1213042	AS.4566/4B	 Bolt, 4BA, rd. hd.	4	-	C	27 3
28S/1214164	A44/B14	 Screw, 4BA, rd. hd.	4	-	C	27 4
28W/9419474	SP.15/B	 Washer, 4BA	4	-	C	27 5
	E.H8.81.339	 WIRING, PILOTS COAMING PANEL Spares for:-	-	-	-	27 6
	-	 CABLE, uniminyvin 16	QR	BSG.195	-	
	-	 CABLE, uniminyvin 20	QR	BSG.195	-	
5CZ/1035373	WARD BROOKE WB.1146/72	 LINK, 2 way	2	-	C	27 7
5CZ/1982541	WB.1146/73	 LINK, 3-way	2	-	C	27 8
5CZ/7137	WB.1146/75	 LINK, 5-way	1	-	C	27 9
5CZ/8172	WB.1146/76	 LINK, 6-way	1	-	C	27 10
	EEAS.270	 SCREW, special, 5BA	1	-	-	27 11
	EEAS.566	 SLEEVE, special	2	-	-	27 12
	EEAS.563	 SLEEVE, special	1	-	-	27 13
	EEAS.146/22	 SLEEVE, 3/4" long	QR	-	-	27 14
	EEAS.146/16	 SLEEVE, 3/4" long	QR	-	-	27 15
	MAM RUBBER CO. CXH	 SLEEVE, 3mm i/d. x 3/8" long	62	-	-	27 16
5CZ/8168	WARD BROOKE WB.1114/22	 SPACER	26	-	C	27 17
5CZ/6218	WB.1114/23	 SPACER	9	-	C	27 18
	HC.296 B	 TERMINAL, ring tongue, 6BA	32	-	-	27 19
	HC.304	 TERMINAL, ring tongue, 4BA	2	-	-	27 20
	HC.295	 TERMINAL, ring tongue, 5BA	9	-	-	27 21
	HC.294	 TERMINAL, ring tongue, 4BA	30	-	-	27 22
28W/18551	BARBER COLEMAN 1905	 WASHER, shakeproof, 5BA Attaching parts for E.H8.80.251:-	12	-	C	27 23
28D/1213051	AS.4566/4C	 Bolt, 2BA, mush. hd.	3	-	C	26 18
28D/1212939	A61/1C	 Bolt, 2BA	4	-	C	26 19
28W/9457834	SP.124/D	 Washer, 2BA	4	-	C	26 20

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mod. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.H8.80.377	PANEL, PILOTS COAMING, FIXED INSTALLATION	1	—	—	
		Spares for:-				
	E.H8.80.379	PANEL, fixed	1	—	—	25 6
	DZUS					
	PRF 3%	RECEPTACLE	2	—	—	25 7
	PRN 3%	RECEPTACLE	2	—	—	25 8
		Attaching parts for E.H8.80.377:-				
28D/1212939	A61/1C	Bolt, 2BA	1	—	C	25 9
28W/8467834	BSP.124/D	Washer, 2BA	1	—	C	25 10
	E.H8.80.267	PANEL, COAMING, ARMAMENT, INSTALLATION	—	—	—	
		Spares for:-				
	E.H8.81.341	DIAGRAM, wiring	—	—	—	
5L/995-9118	—	FILAMENT, 28v, 0.04 amp	3	—	B	25 11
	SP.93/A4	GROMMET	1	—	—	25 12
5CX/5384	80/10/0855	LAMPHOLDER, pillar	3	—	B	25 13
	E.H8.80.269	PANEL, sub-assembly	1	—	—	25 14
	EEAS.200	RING, locking	1	—	—	25 15
5CW/5056	SIS.6256	SWITCH, push	2	—	B	25 16
		Attaching parts for SIS.6256:-				
28M/1008962	A53/Z	Nut, 8BA	2	—	C	25 17
28S/9147229	A43/Z12	Screw, 8BA, ch. hd.	2	—	C	25 18
	5CW/2530	SIS.3095	1	—	B	25 19
		SWITCH, dimmer, type A				
		Attaching parts for SIS.3095:-				
28M/10286	AGS.2001/A/1	Nut, 6BA	3	—	C	25 20
28S/1213084	A44/A18	Screw, rd. hd. 6BA	3	—	C	25 21
	NSF					
	8810/B104	SWITCH	1	—	—	25 22
	7617/Y	SHROUD, safety flap	2	—	—	25 23

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.L.M. L.M.	
		1 2 3 4 5 6				
	E.H8.73.49	PLATE, mounting, hydraulic pipe	1	—	—	15 36
28D/9140652	A26/1C	Attaching parts for E.H8.73.49:- Bolt, 2BA	4	—	C	15 37
	E.C2.80.2039	PLATE, reinforcing	2	—	—	15 38
		Attaching parts for E.C2.80.2039:-				
28D/1212964	A61/1B	Bolt, 4BA	10	—	C	15 39
28M/1278189	AGS.2001/B/1	Nut, 4BA	10	—	C	15 40
28W/9143227	SP.14/B	Washer, 4BA	10	—	C	15 41
	BURLEY	SECTION	QR	Rubber	—	22 51
	E.B7.80.497	SNUB, panel	4	—	—	15 42
		Attaching parts for E.B7.80.497:-				
28D/1212964	A61/1B	Bolt, 4BA	2	—	C	15 43
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	—	C	15 44
28W/9143227	SP.14/B	Washer, 4BA	2	—	C	15 45
	E.A3.80.1789	WASHER, special at 100 P4 mountings	10	—	—	15 46
18869	EEAS.28.6.GR	WASHER, 4BA, at 100 P4 mountings	2	—	C	15 47
6918	EEAS.28.51 FR	WASHER, 1/2" BSF, at 150 P10 and 150 P12 mountings	10	—	C	15 48
	EEAS.28.51.JR	WASHER, 1/2" BSF, at 150 P10 and 150 P12 mountings	2	—	—	15 49
	E.H8.80.371	SEATING, PRESSURE CABIN, ASSEMBLY	—	—	—	28 1
		Spare for:-				
16704	E.B6.80.25	BRACKET, attachment, L.H. pilots seat rail	1	S.95 or S.96	C	28 2
		Attaching parts for E.B6.80.25:-				
28D/1011256	A25/5G	Bolt, 5/16"	1	—	C	28 3
16705	E.B6.80.26	BRACKET, attachment, R.H. pilots seat rail	1	—	C	28 4
		Attaching parts for E.B6.80.26:-				
28D/1011256	A25/5G	Bolt, 5/16"	1	—	C	28 5
	E.A2.80.5135	BRACKET, pipe clamp, assembly	1	—	—	28 6
		Attaching parts for E.A2.80.5135:-				
28D/9436920	A25/1C	Bolt, 2BA	2	—	C	28 7
28W/9419402	SP.13/C	Washer, 2BA	2	—	C	28 8
	MARTIN BAKER					
27L/5021	MBCJ.159	BREECH-UNIT, and time release	1	—	B	28 9
		Attaching parts for MBCJ.159:-				
28D/1212830	AS.1242/13E	Bolt, 1/2" BSF, csk. hd.	2	—	C	28 10
28D/1212834	AS.1242/17E	Bolt, 1/2" BSF, csk. hd.	1	—	C	28 11
28M/10290	AGS.2001/E/1	Nut, 1/2" BSF	3	—	C	28 12
28W/9418921	SP.13/E	Washer, 1/2" BSF	6	—	C	28 13
12K/1404	—	CARTRIDGE, No.3, Mk.2	1	—	A	28 14
12K/1433	—	CARTRIDGE, set, No.13, Mk.1	3	—	A	28 15
41866	E.G5.80.177	CLAMP, pipe, assembly	1	—	C	28 16
		Attaching parts for E.G5.80.177:-				
28D/9435711	A25/10B	Bolt, 4BA	2	—	C	28 17
28M/10287	AGS.2001/B/1	Nut, 4BA	2	—	C	28 18
28W/9419465	SP.13/B	Washer, 4BA	2	—	C	28 19
5K/3020	AS.4525/8C	CLIP, support	4	—	C	28 20
		Attaching parts for AS.4525/8C:-				
28D/9436920	A25/1C	Bolt, 2BA	1	—	C	28 21
28M/10288	AGS.2001/C/1	Nut, 2BA	1	—	C	28 22
26DK/11172	EEAS.239/1A	Washer, 'D'	1	L.72	C	28 23

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
27L/1445196	MARTIN BAKER C78 EC/MB	COUPLING, armato	2	—	A	32 1
	MARTIN BAKER MBEU 34678	GUN, ejection, type 12, Mk.1, navigator and passenger	2	—	—	28 24
	MARTIN BAKER MBEU 34679	GUN, ejection, type 10, Mk.1 pilot's	1	—	A	28 25
	E.A3.80.2869	LINE, LEG RESTRAINT AND BRACKETS, NAVIGATOR'S AND PASSENGER'S, ASSEMBLY Spares for:-	—	—	—	29 1
	E.A3.80.2887	BRACKET, SHEAR PIN, NAVIGATOR AND PASSENGER, INSTALLATION Spares for:-	—	—	—	29 2
	E.A3.80.2869	BRACKET, SHEAR PIN, PASSENGER'S ASSEMBLY Spares for:-	—	—	—	29 3
27L/510	MARTIN BAKER A/MBEU/3666	BRACKET, floor Attaching parts for A/MBEU/3666:-	2	—	C	29 4
28D/9133012	A25/3C	Bolt, 2BA	4	—	C	29 5
	E.A3.80.2889	BRACKET, SHEAR PIN, NAVIGATOR'S ASSEMBLY Spares for:-	—	—	—	29 6
27L/510	MARTIN BAKER A/MBEU/3666	BRACKET floor Attaching parts for A/MBEU/3666:-	2	—	C	29 7
28D/1010030	A25/7C	Bolt, 2BA	4	—	C	29 8
28M/10288	AGS.2001/C/1	Nut, 2BA	4	—	C	29 9
28W/9419402	SP.13/C	Washer 2BA	4	—	C	29 10
28DK/5862	AS.2809/4/060	TUBE, distance	2	—	C	29 11
27L/2729	MARTIN BAKER B/MBEU/17353	LINE, leg restraint	4	—	C	29 12
27L/1385	MARTIN BAKER MBEU/8921	PIN, shear	4	—	C	29 13
	E.A2.80.5143	LINE, LEG RESTRAINT AND BRACKETS, PILOT'S ASSEMBLY Spares for:-	—	—	—	29 14
	E.G5.80.157	BRACKETS, LEG RESTRAINT, ASSEMBLY Spares for:-	—	—	—	29 15
27L/510	MARTIN BAKER A/MBEU/3666	BRACKET floor Attaching parts for A/MBEU/3666:-	2	—	C	29 16
28D/9140644	A25/3C	Bolt 2BA	4	—	C	29 17
27L/2729	MARTIN BAKER B/MBEU/17353	LINE, leg restraint	2	—	C	29 18
27L/1385	MARTIN BAKER MBEU/8921	PIN, shear	2	—	C	29 19
		MECHANISM, SINGLE LEVER EJECTION INSTALLATION Spares for:-	—	—	—	—
		SPARE	3	S.95	—	30 1
		SPARE	—	S.510	—	30 2

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.N. L.M.	Plate No.
		1 2 3 4 5 6				
34835	E.A3.80.6423	CABLE, secondary firing, assembly	2	—	C	30 3
28P/9140979	SP.4/Z/B4	Attaching parts for E.A3.80.6423:-	2	—	C	30 4
28P/9710567	SP.90/C4	Pin, shackle	2	—	C	30 5
28W/9419402	SP.13/C	Pin, split	2	—	C	30 6
		Washer, 2BA	2	—	C	30 6
34836	E.A3.80.6425	CONDUIT, convoluted, assembly	1	—	C	30 7
34837	E.A3.80.6427	CONDUIT, convoluted, assembly	1	—	C	30 8
	E.A3.80.6407	COVER, assembly	2	S.515	—	30 9
		Attaching parts for E.A3.80.6407:-				
28D/9133011	A25/2C	Bolt, 2BA	10	—	C	30 10
28W/9419475	SP.15/C	Washer, 2BA	10	—	C	30 11
34838	E.A3.80.6417	LEVER, cocking, assembly	2	—	B	30 12
42531	E.A3.80.6413	LINK, cocking, assembly	1	—	C	30 13
42533	E.A3.81.6037	MECHANISM, SINGLE LEVER, EJECTION, PORT, ASSEMBLY	1	—	A	31 1
		Spares for:-				
42534	E.A3.81.6047	ARM, cam follower, assembly	1	S.61	C	31 2
28D/1011026	A25/26C	BOLT, 2BA	3	—	C	31 3
28D/9435711	A25/10B	BOLT, 4BA	2	—	C	31 4
28D/1214046	AS.1242/26C	BOLT, 2BA, csk. hd.	2	—	C	31 5
28D/1214303	AS.1242/10B	BOLT, 4BA, csk. hd.	1	—	C	31 6
	E.A3.81.6061	BLOCK, guide	1	L.64	—	31 7
	E.A3.81.6063	BLOCK, guide	1	L.64	—	31 8
34840	E.A3.81.6083	MASK, assembly	1	L.16	C	31 9
28M/10328	AGS.2002/C/1	NUT, 2BA	5	—	C	31 10
28M/1006504	A27/BT	NUT, 4BA	3	—	C	31 11
34841	E.A3.81.6067	PIN, locating	2	S.1	C	31 12
34842	E.A3.81.6069	PIN, cocking	1	S.1	C	31 13
28P/9451803	SP.28/E6	PIN, taper	1	—	C	31 14
28P/5489	SP.4Z/A2	PIN, shackle	1	—	C	31 15
28P/9486479	SP.90/C5	PIN, split	2	—	C	31 16
	E.A3.81.6087	PLATE, sealing	1	L.72	—	31 17
34843	E.A3.81.6045	PLUNGER, cam	1	L.64	C	31 18
34844	E.A3.81.6051	ROLLER	1	S.61	C	31 19
	MARTIN BAKER					
27L/1155	A/MBEU/2031EE	SEAR	1	—	C	31 20
	E.A3.81.6085	SEAL	1	Neoprene	LM	31 21
	E.A3.81.6049	SPINDLE, adjusting	1	S.1	—	31 22
34845	E.A3.81.6041	SPRING	1	DTD.5A	—	31 23
34846	E.A3.81.6053	SPRING, compression	1	DTD.5A	—	31 24
	DOWTY					
5CW/7412	DN.1241 Z	SWITCH, microseal	2	—	A	31 25
	AS.2811/5/235	TUBE, distance	3	—	—	31 26
28W/9419402	SP.13/C	WASHER, 2BA	5	—	C	31 27
28W/9419465	SP.13/B	WASHER, 1/4" BSF	1	—	C	31 28
28W/9418921	SP.13/E	WASHER, 1/4" BSF	1	—	C	31 29
42535	E.A3.81.6327	MECHANISM, SINGLE LEVER EJECTION, STARBOARD, ASSEMBLY	1	—	A	31 30
		Spares for:-				
42534	E.A3.81.6047	ARM, cam follower, assembly	1	S.61	C	31 2
28D/1011026	A25/26C	BOLT, 2BA	3	—	C	31 3
28D/9435711	A25/10B	BOLT, 4BA	2	—	C	31 4
28D/1214046	AS.1242/26C	BOLT, 2BA, csk. hd.	2	—	C	31 5
28D/1214303	AS.1242/10B	BOLT, 4BA, csk. hd.	1	—	C	31 6

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mtl. Spec.	Cl. of Equip. M.R. L.M.	Rate No.
		1 2 3 4 5 6				
	E.A3.81.6061	BLOCK, guide	1	L.64	-	31 7
	E.A3.81.6063	BLOCK, guide	1	L.64	-	31 8
3840	E.A3.81.6083	MASK, assembly	1	L.64	C	31 9
28M/10328	AGS.2002/C/1	NUT, 2BA	4	-	C	31 10
28M/1006504	A27/BT	NUT, 4BA	3	-	C	31 11
28M/5808673	A27/CS	NUT, 2BA	1	-	C	31 31
28P/9486478	SP.90/C5	PIN, split	2	-	C	31 16
28P/19227	SP.90/C6	PIN, split	1	-	C	31 32
34841	E.A3.81.6067	PIN, locating	2	S.1	C	31 12
28P/9451803	SP.28/E6	PIN, taper	1	-	C	31 14
34842	E.A3.81.6069	PIN, cocking	1	S.1	C	31 13
28P/5489	SP4/Z/A2	PIN, shackle	1	-	C	31 15
	E.A3.81.6087	PLATE, sealing	1	L.72	-	31 17
34843	E.A3.81.6045	PLUNGER, cam	1	L.64	C	31 18
	DOWTY					
	1077.Z.130	RING, retaining, micro switch	2	-	-	31 33
34844	E.A3.81.6061	ROLLER	1	S.61	C	31 19
	E.A3.81.6085	SEAL	1	Neoprene	-	31 21
	MARTIN BAKER					
27L/1155	A/MBEU/2301EE	SEAR	1	-	C	31 20
	DOWTY					
	1077.Z.138	SHROUD, micro switch cable entry	2	-	-	31 34
	E.A3.81.6049	SPINDLE, adjusting	1	S.1	-	31 22
34845	E.A3.81.6041	SPRING	1	DTD.5A	C	31 23
34846	E.A3.81.6053	SPRING, compression	1	DTD.5A	C	31 24
	DOWTY					
5CW/7412	DN.1241.Z	SWITCH, microseal	2	-	A	31 25
	AS.2811/5/236	TUBE, distance	3	-	-	31 26
28W/9419402	SP/13C	WASHER, 2BA	6	-	C	31 27
28W/9419466	SP/13B	WASHER, 4BA	3	-	C	31 28
28W/9418921	SP/13E	WASHER, 1/2" BSF	1	-	C	31 29
	E.A3.80.6463	PACKING	1	L.72	-	30 14
3847	E.A3.80.6416	PLATE, peg	1	S.610	C	30 16
		Attaching parts for E.A3.80.6416:-				
28M/1006473	A27/CT	Nut, 2BA	2	-	C	30 16
1468	EEAS.4E	Screw, 2BA, csk. hd.	2	S.96	C	30 17
28W/9419454	SP.10/C	Washer, 2BA	2	-	C	30 18
1468	EEAS.4C	SCREW, 2BA, csk. hd.	4	S.96	C	30 19
1028	EEAS.1/3C	SCREW, 2BA, csk. hd.	6	S.96	C	30 20
34848	E.A3.80.6421	SEAL, for cover and mechanism	1	Neoprene	C	30 21
34849	E.A3.80.6429	SEAL, for conduit	1	Neoprene	C	30 22
	E.A3.80.6419	STOWAGE, COCKING LEVER, ASSEMBLY	1	-	-	30 23
		Spares for:-				
28W/9486470	AS.1877/20	HINGE	1	-	C	30 24
	E.A3.80.6451	LID	1	L.72	-	30 25
34850	E.A3.80.6453	SPRING	1	DTD.187	C	30 26
		Attaching parts for E.A3.80.6419:-				
28D/1007982	AS.1248/1C	Bolt, 2BA, mush. hd.	2	-	C	30 27
28M/10288	AGS.2001/C/1	Nut, 2BA	2	-	C	30 28
28W/9419475	SP.15/C	Washer, 2BA	2	-	C	30 29
34851	E.A3.80.6431	WASHER, packing	2	L.72	C	30 30
27C/2646	-	PACK, personal survival, M, Mk.2	3	-	A	32 2
15A/1539	-	PARACHUTE, type S, Mk.19	3	-	A	32 3

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
27L/5359	MARTIN BAKER MBCJ.1785	PIPE, assembly	1	—	C	32 4
27L/5380	MARTIN BAKER MBCJ.1786	PIPE, assembly	1	—	C	32 5
27L/	MARTIN BAKER MBCJ.2078	PIPE, assembly	1	—	—	32 6
27L/50129	MARTIN BAKER E/MBEU/ 19022EE	RAIL, guide, pilot's Attaching parts for E/MBEU/19022EE:-	1	—	B	32 7
28D/9133013	A25/5C	Bolt, 2BA	4	—	C	32 8
28D/1006583	A25/5J	Bolt, 3/8"	2	—	C	32 9
28M/8403620	A27/CP	Nut, 2BA	4	—	C	32 10
16680	E.A3.80.1569	Packing, fillet	4	L.72	C	32 11
28W/9419477	SP.15/J	Washer, 3/8"	2	—	C	32 12
27L/50130	MARTIN BAKER E/MBEU/1963EE	RAIL, guide, navigator's Attaching parts for E/MBEU/1963EE:-	1	—	B	32 13
28D/1008145	A25/6E	Bolt, 1/4" BSF	12	—	C	32 14
28D/1011242	A25/7E	Bolt, 1/4" BSF	10	—	C	32 15
28D/1010031	A25/8E	Bolt, 1/4" BSF	1	—	C	32 16
28D/1011257	A25/7G	Bolt, 5/16" BSF	4	—	C	32 17
28D/1011258	A25/8G	Bolt, 5/16" BSF	1	—	C	32 18
28D/1011259	A25/10G	Bolt, 5/16" BSF	2	—	C	32 19
28D/1213582	A25/5L	Bolt, 7/16"	5	—	C	32 20
28D/1013179	AS.1242/6E	Bolt, 1/4" BSF, csk. hd	1	—	C	32 21
28M/10290	AGS.2001/E/1	Nut, 1/4" BSF	24	—	C	32 22
28M/10291	AGS.2001/G/1	Nut, 5/16" B	7	—	C	32 23
28M/10293	AGS.2001/L/1	Nut, 7/16" BSF	5	—	C	32 24
4885	E.A3.80.477	Packing, fillet	2	L.72	C	32 25
4886	E.A3.80.479	Packing, fillet	5	L.72	C	32 26
3897	E.A3.80.481	Packing, fillet	20	L.72	C	32 27
4887	E.A3.80.1725	Packing	1	DTD.683	C	32 28
3802	E.A3.10.2197	Packing	1	DTD.683	C	32 29
3935	E.A3.10.571	Shim, laminated	1	Attwell LS	C	32 30
28W/9419405	SP.15/E	Washer, 1/4" BSF	20	—	C	32 31
28W/9419476	SP.15/G	Washer, 5/16" BSF	2	—	C	32 32
28W/9419478	SP.15/L	Washer, 7/16" BSF	5	—	C	32 33
28W/9419487	SP.16/E	Washer, 1/4" BSF	4	—	C	32 34
28W/9419488	SP.16/G	Washer, 5/16" BSF	4	—	C	32 35
27L/50131	MARTIN BAKER E/MBEU/1964EE	RAIL, guide, passenger's Attaching parts for E/MBEU/1964EE:-	1	—	B	32 36
28D/1008151	A25/4E	Bolt, 1/4" BSF	9	—	C	32 37
28D/1011240	A25/5E	Bolt, 1/4" BSF	8	—	C	32 38
28D/1008145	A25/6E	Bolt, 1/4" BSF	6	—	C	32 39
28D/1018884	A25/9G	Bolt, 5/16" BSF	2	—	C	32 40
28D/1213582	A25/6L	Bolt, 7/16" BSF	5	—	C	32 41
28D/1013178	AS.1242/6E	Bolt, 1/4" BSF, csk. hd.	1	—	C	32 42
28M/10290	AGS.2001/E/1	Nut, 1/4" BSF	24	—	C	32 43
28M/10291	AGS.2001/G/1	Nut, 5/16" BSF	2	—	C	32 44
28M/10293	AGS.2001/L/1	Nut, 7/16" BSF	5	—	C	32 45
4885	E.A3.80.477	Packing, fillet	2	L.72	C	32 46
3802	E.A3.10.2197	Packing	1	L.72	C	32 47
3935	E.A3.10.571	Shim, laminated	1	Attwell LS	C	32 48

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
28W/9419405	SP.15/E	Washer, 1/4" BSF	20	—	C	32 49
28W/9419476	SP.15/G	Washer, 5/16" BSF	2	—	C	32 50
28W/9419478	SP.15/L	Washer 7/16" BSF	5	—	C	32 51
28W/9419487	SP.16/E	Washer, 1/2" BSF	4	—	C	32 52
MARTIN BAKER						
27L/1445204	—	SEAT, ejection, type 2CA1, Mk.2	1	—	—	32 53
MARTIN BAKER						
27L/1445205	—	SEAT, ejection, type 2CA2, Mk.4	2	—	—	32 54
E.A3.80.1231						
		SEAT, MAP READER'S, ASSEMBLY	1	—	—	33 1
Spares for:-						
4537	E.A3.80.1239	CABLE, BOWDEN, ASSEMBLY	1	—	B	33 2
Spares for:-						
5200	E.A3.80.1293	BRACKET	1	L.72	C	33 3
29H/2153	P19/52A	CABLE, "Bowdenite" non-fray, inner	OR	—	C	33 4
29H/2184	B.52	CONDUIT, outer	OR	—	C	33 5
29H/1893	PN.980	FERRULE, plain	2	—	C	33 6
29H/2154	PN.3341A	NIPPLE, spherical	2	—	C	33 7
29H/1901	PN.1159	TOP, plain, adjusting	1	—	C	33 8
5201	E.A3.80.1291	WASHER, topped radiused	1	S.11	C	33 9
2165	EEAS.112/6	CLIP, pipe, 1/4" single	4	L.16	C	33 10
4538	E.A3.80.1237	LOCK, BOTTOM, ASSEMBLY	1	—	B	33 11
Spares for:-						
	E.A3.80.1255	BOLT, special	1	S.11	—	33 12
	E.A3.80.1249	BRACKET, bottom half	1	L.40	—	33 13
	E.A3.80.1250	BRACKET, bottom half	1	L.40	—	33 14
	E.A3.80.1251	CATCH, bottom	1	DTD.124	—	33 15
5066	E.A3.80.1253	SPRING	1	Spring Steel	C	33 16
	E.A3.80.1285	WASHER, saddle, special	1	OTD.124	—	33 17
18859	EEAS.28/6GR	WASHER, special	1	L.72	C	33 18
		PAD, 2" x 1"	1	Sorbo Rubber	—	33 19
	E.A3.80.1957	STOWAGE, MAP READER'S SEAT	1	—	—	33 20
Spares for:-						
	E.A3.80.1961	PLATE, front	1	L.72	LM	33 21
	E.A3.80.1963	PLATE, reinforcing	1	L.72	LM	33 22
5197	E.A3.80.1959	STRAP	1	—	C	33 23
8521	E.A3.80.1235	SUPPORT, MAP READER'S SEAT, ASSEMBLY	1	—	B	33 24
Spares for:-						
31533	E.A3.80.1261	ROLLER, GUIDE, ASSEMBLY	1	—	B	33 25
Spares for:-						
	E.A3.80.1259	BOLT, special	1	S.11	—	33 26
	E.A3.80.1257	ROLLER	1	L.40	—	33 27
	AS.2811/6/020	WASHER, distance	1	T.4	LM	33 28
6228	AS.2811/6/025	WASHER, distance	1	T.4	C	33 29

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.W. L.M.	
		1 2 3 4 5 6				
	E.H6.80.375	SEXTANT, PERISCOPIC, INSTALLATION	—	—	—	
6B/2586	—	Spares for:- MOUNTING, periscope Mk.1A	1	—	A	34 1
28D/1214510	AS.2920/5E	Attaching parts for 6B/2586:- Bolt, 1/2" BSF	8	—	C	34 2
6B/2838	—	SEXTANT, periscopic Mk.2B	1	—	A	34 3
	E.A3.80.1225	STOWAGE, ASBESTOS GLOVES, ASSEMBLY	1	—	—	35 1
		Spares for:-				
29G/	NEWAY 7/7-101	FASTENER, snap	1	—	—	35 2
8613	E.A3.80.1795	STRAP, 2 1/2" wide	1	Blue Webbing	C	35 3
	E.A3.80.1731	STOWAGE, MAP, PILOT'S ASSEMBLY	1	—	—	35 1
		Spares for:-				
27H/2768	—	CASE, pilot's notes	1	—	B	35 2
		Attaching parts for 27H/2768:				
8517	EEAS.27/2GU	Washer	3	—	C	35 3
21708	EEAS.28/1HU	Washer	3	—	C	35 4
	25158	AS.432	1	—	B	35 5
		STOWAGE, map, pilot's				
		Attaching parts for AS.432:-				
28D/9142406	AS.1248/3C	Bolt, 2BA	4	—	C	35 6
28M/10328	AGS.2002/C/1	Nut, 2BA	4	—	C	35 7
	AS.2807/5/02	Tube, distance	4	T.45	LM	35 8
28W/9419475	SP.15/C	Washer	8	—	C	35 9
	E.A3.80.2727	STOWAGE, FOR VISOR, NAVIGATOR'S TABLE	1	—	—	35 10
		Spares for:-				
	E.A3.80.2733	CORD, retaining	1	—	—	35 11
8968	E.A3.80.2783	SPRING	2	—	C	35 12
	E.A3.80.785	STOWAGE, NAVIGATOR'S VALISE	1	—	—	35 13
		Spares for:-				
	E.A3.80.1203	PLATE, base	1	—	—	35 14
		Attaching parts for E.A3.80.1203:-				
	AS.1885/1/8	Screw, 4BA, mush. hd.	6	—	—	35 15
	E.A3.80.775	STRAP, assembly	1	—	—	35 16
	E.86.80.885	STOWAGE, HANDLE, EMERGENCY U/C HAND PUMP	—	—	—	35 17
		Spares for:-				
28D/1214032	AS.1242/9C	BOLT, 2BA	2	—	C	35 18
	TERRY No.257	CLIP	2	—	—	35 19
28M/1278190	AGS.2001/C/1	NUT, 2BA	2	—	C	35 20
	—	PACKING, 0.75" wide (CARP BRAND)	QR	Tufnol	—	35 21
28W/1009752	SP.25/C	WASHER, 2BA	2	—	C	35 22
	E.A1.80.967	STRAP, BACK, OCCASIONAL SEAT, ASSEMBLY	1	—	—	34 4
		Spares for:-				
	E.H6.80.401	ALTERATIONS TO OCCASIONAL SEAT BACK STRAP	—	—	—	34 5
		Spares for:-				
	E.H6.80.405	BRACKET, pick-up	2	—	—	34 6
		Attaching parts for E.H6.80.405:-				
28D/9133013	A25/3C	Bolt, 2BA	2	—	C	34 7
	EEAS/3C	Bolt, 2BA, csk. hd.	1	—	—	34 8
28M/1278190	AGS.2001/C/1	Nut, 2BA	3	—	C	34 9
28W/9419475	SP.15/C	Washer, 2BA	3	—	C	34 10
	E.H6.80.413	PACKING	1	—	—	34 11
	E.H6.80.411	STRAP, back, assembly	1	—	—	34 12

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A1.80.987	LUG	1	—	—	34 13
28D/12631	A26/3C	Attaching parts for E.A1.80.987:-	4	—	C	34 14
28M/10288	AGS.2001/C/1	Bolt, 2BA	4	—	C	34 15
	E.A1.80.985	Nut, 2BA	2	—	—	34 16
		Washer, radiused				
6407	E.A3.80.2685	STRAP, BACK, ASSEMBLY	1	—	C/MR	34 17
		Spares for:-				
	AS.2394	COLLAR	1	—	—	34 18
8809	E.A1.80.971	EYE-BOLT	1	L.72	C	34 19
	E.A1.80.973	PLATE, strap	1	L.72	—	34 20
6180	E.A1.80.975	PLATE, strap	1	L.72	C	34 21
28V/13992	AS.2385	TRUNNION, 5/16" BSF	1	—	C	34 22
8810	E.A3.80.2681	WEBBING, 40" long x 6 1/2" wide (Proof-load)	1	—	C	34 23
		Attaching parts for E.A3.80.2685:-				
28FP/2	AVDEL A.405	PIN, "pip"	1	HTS	C	34 24
	E.H8.83.7	SUNBLIND, PILOTS, INSTALLATION	—	—	—	
		Spares for:-				
8798	E.A3.83.195	BEARING, support, bottom	2	LFS.26	C	35 4
8799	E.A3.83.197	BEARING, support, top	2	LFS.26	C	35 5
		Attaching parts for E.A3.83.195 and 197:-				
28D/1214035	AS.1242/13C	Bolt, 2BA	2	—	C	35 6
28M/9433473	AGS.2002/C/1	Nut, 2BA	2	—	C	35 7
28W/9419402	SP.13/C	Washer, 2BA	2	—	C	35 8
	E.G5.83.47	PLATE, stop, assembly	1	—	—	35 9
		Attaching parts for E.G5.83.47:-				
28D/1200119	A26/4C	Bolt, 2BA	6	—	C	35 10
28M/9433473	AGS.2002/C/1	Nut, 2BA	6	—	C	35 11
28W/9419402	SP.13/C	Washer, 2BA	6	—	C	35 12
5631	E.A3.83.205	SPRING, compression	1	DTD.215	C	35 13
42022	E.A2.83.8067	SUNBLIND, PILOT'S, ASSEMBLY	1	—	B	35 14
		Spares for:-				
	E.G5.83.51	BRACKET, stop, port	1	—	—	35 15
	E.G5.83.53	BRACKET, stop, starboard	1	—	—	35 16
1438983	E.B7.83.7375	COVER, sunblind	1	—	—	35 17
1438984	E.A2.83.6079	FRAME, flexible	1	—	C	35 18
	E.A2.83.6075	FRAME, INNER, ASSEMBLY	1	—	—	35 19
		Spares for:-				
1438985	E.A2.83.8071	FRAME, inner member	1	L.65	C	35 20
	E.A2.83.8073	FRAME, wire	1	DTD.215	—	35 21
	E.G5.83.33	SOCKET, frame, port	1	—	—	35 22
	E.G5.83.35	SOCKET, frame, starboard	1	—	—	35 23
34436	E.G5.83.63	HANDLE, control	1	—	C	35 24
	E.G5.83.45	LEVER, assembly, compression spring	1	—	—	35 25
	E.G5.83.41	SHAFT, inner	1	—	—	35 26
	E.A2.83.8077	SOCKET, outer frame, port	1	—	—	35 27
	E.G5.83.39	SOCKET, outer frame, starboard	1	—	—	35 28
	E.A2.83.8069	STAY, outer, port	1	L.65	—	35 29
	E.B7.83.5357	STAY, outer, starboard	1	L.65	—	35 30
8804	E.A3.83.211	STIFFENER, 3.7" x 7/16" x 1/16" thick	2	Wovellon	C	35 31
8805	E.A3.83.213	STIFFENER, 2.8" x 7/16" x 1/16" thick	2	Wovellon	C	35 32
8806	E.A3.83.215	STIFFENER, 2.6" x 7/16" x 1/16" thick	2	Wovellon	C	35 33
	E.G5.83.43	TUBE, bearing	1	—	—	35 34

EQUIPMENT AIRCRAFT
PRESSURE CABIN EQUIPMENT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
8800	E.A3.83.201	. . TUBE, spring, housing	1	—	C	35 35
8801	E.A3.83.203	. . TUBE, spring, housing	1	—	C	35 35
		Attaching parts for E.A3.83.201 and 203:-				
28N/1045681	AGS.899/1	. . Collar	1	—	C	35 37
28P/814	SP.4Y/A4	. . Pin, shackle	1	—	C	35 38
28P/9710567	SP.90/C4	. . Pin, split	1	—	C	35 39
	E.A2.80.5141	. UNIT, CONTROL, TYPE 522, MOUNTING, ASSEMBLY	1	—	—	34 28
		Spare for:-				
42021	E.A2.80.5139	. . BRACKET, support, assembly	1	L.72	C	34 28
16768	E.B7.80.312	. . BRACKET, support	1	—	C	34 27
16769	E.B7.80.313	. . PLATE, attachment	1	—	C	34 28
		Attaching parts for E.B7.80.313:-				
28D/1011029	A25/1E	. Bolt, 1/4" BSF	4	—	C	34 29

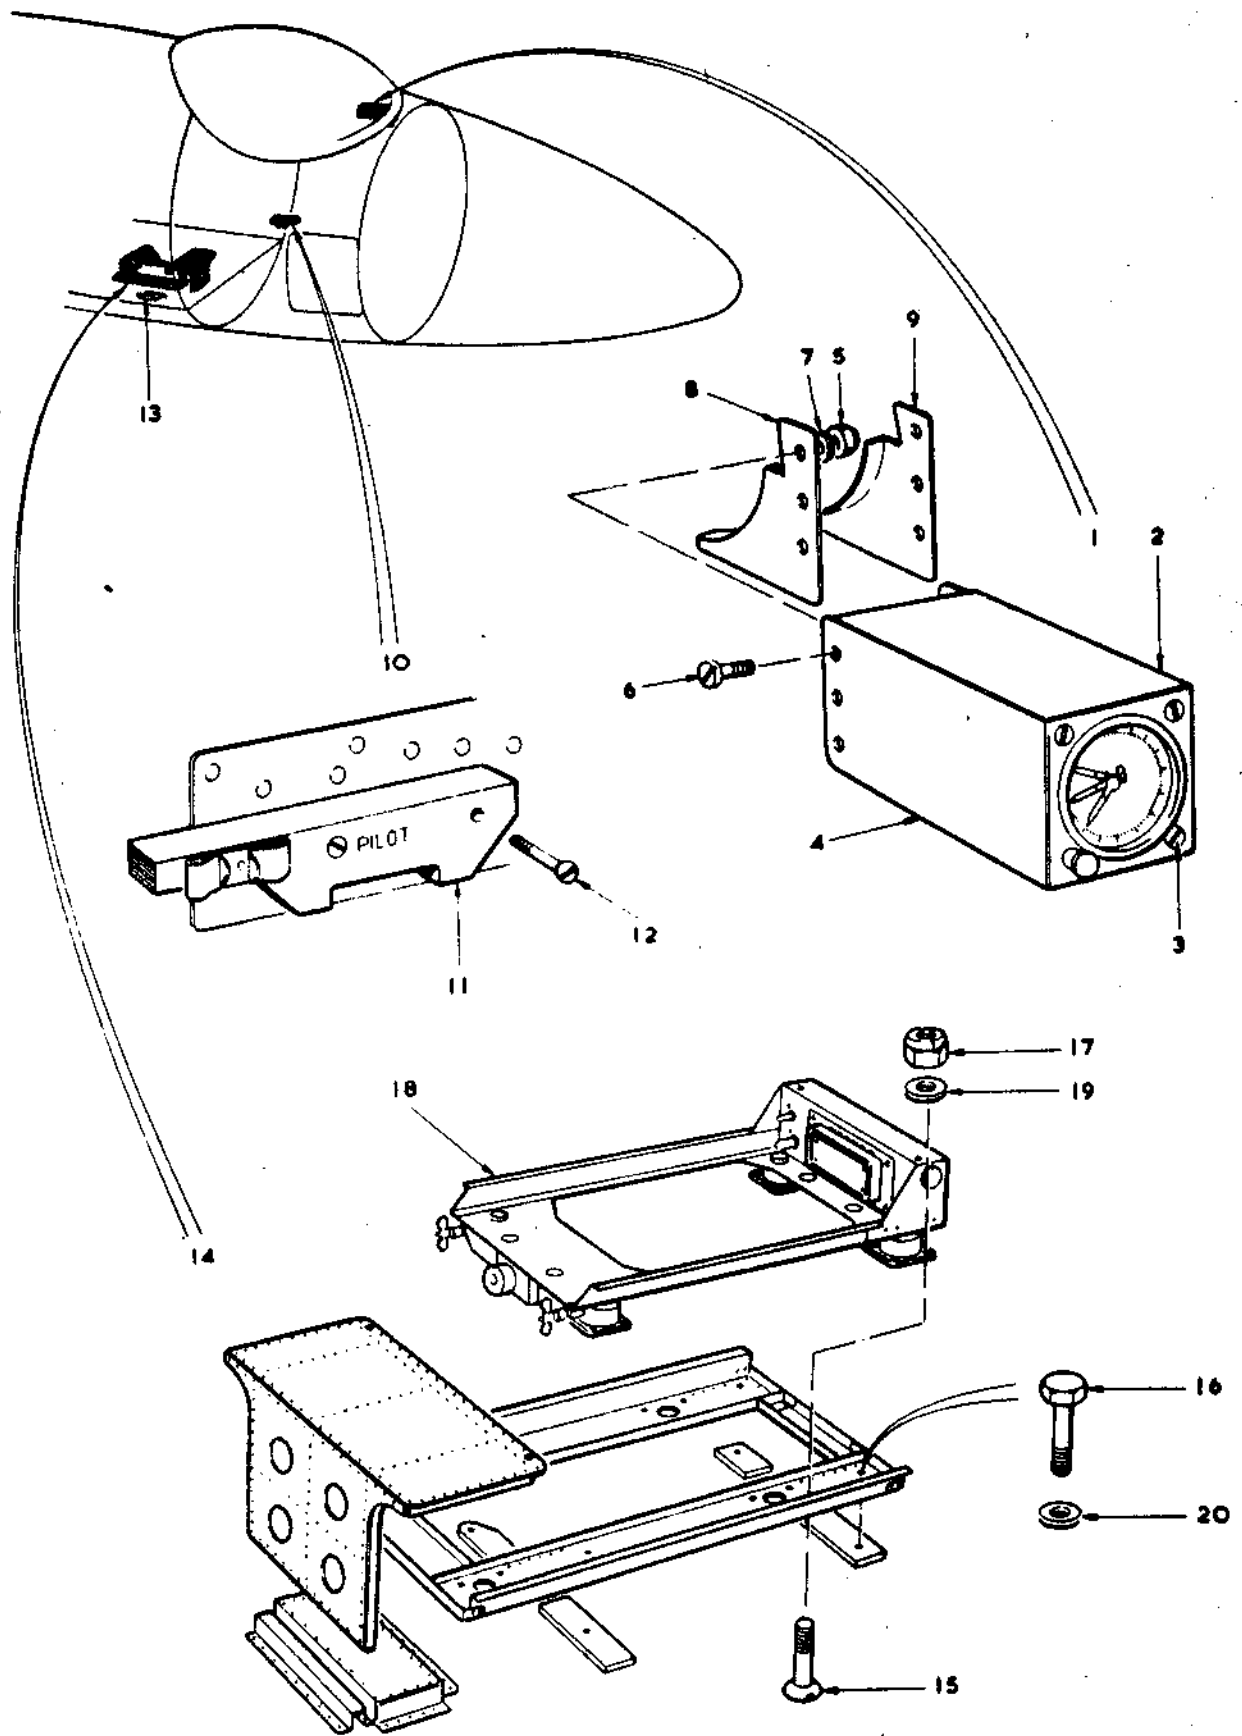


FIG.1 PRESSURE CABIN EQUIPMENT

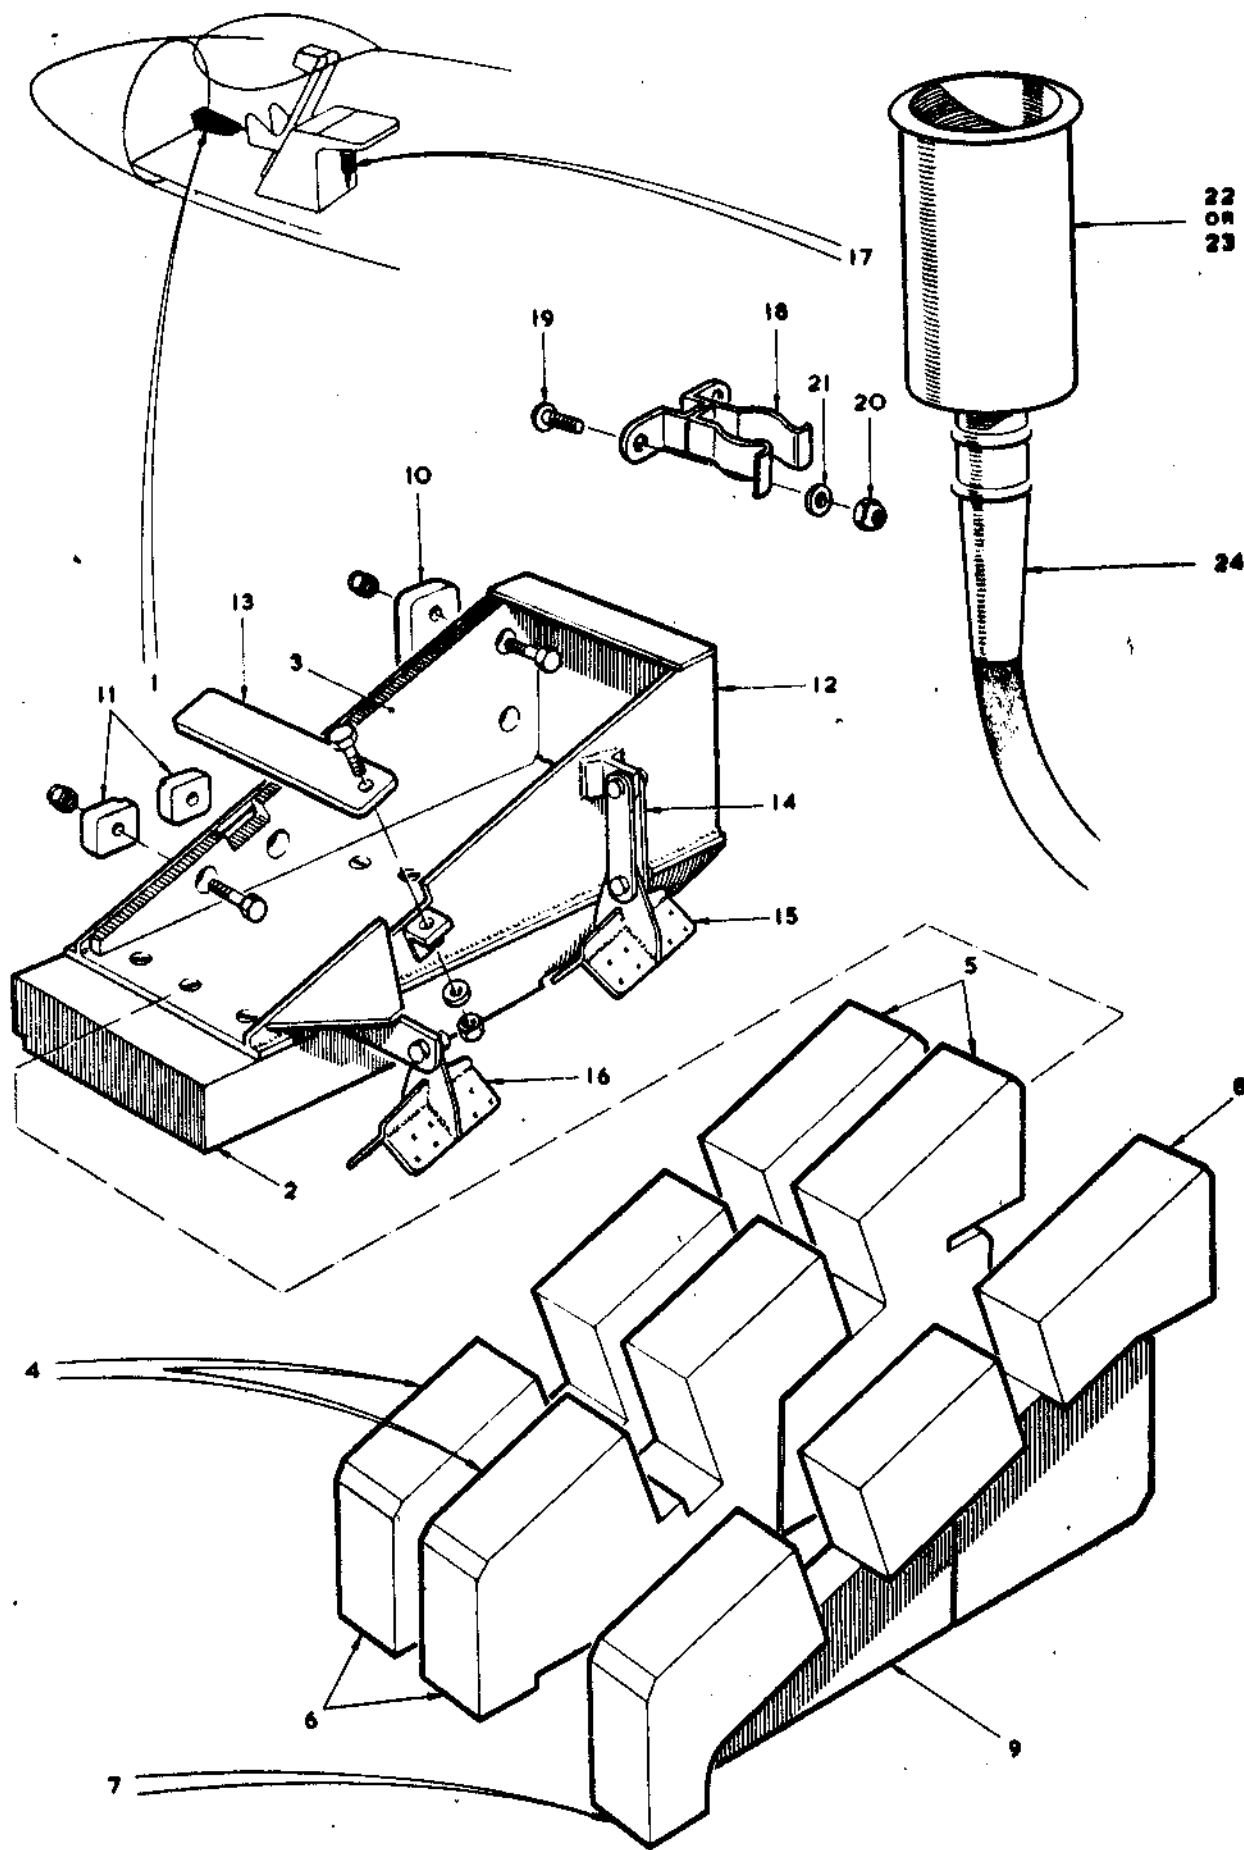


FIG. 2 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

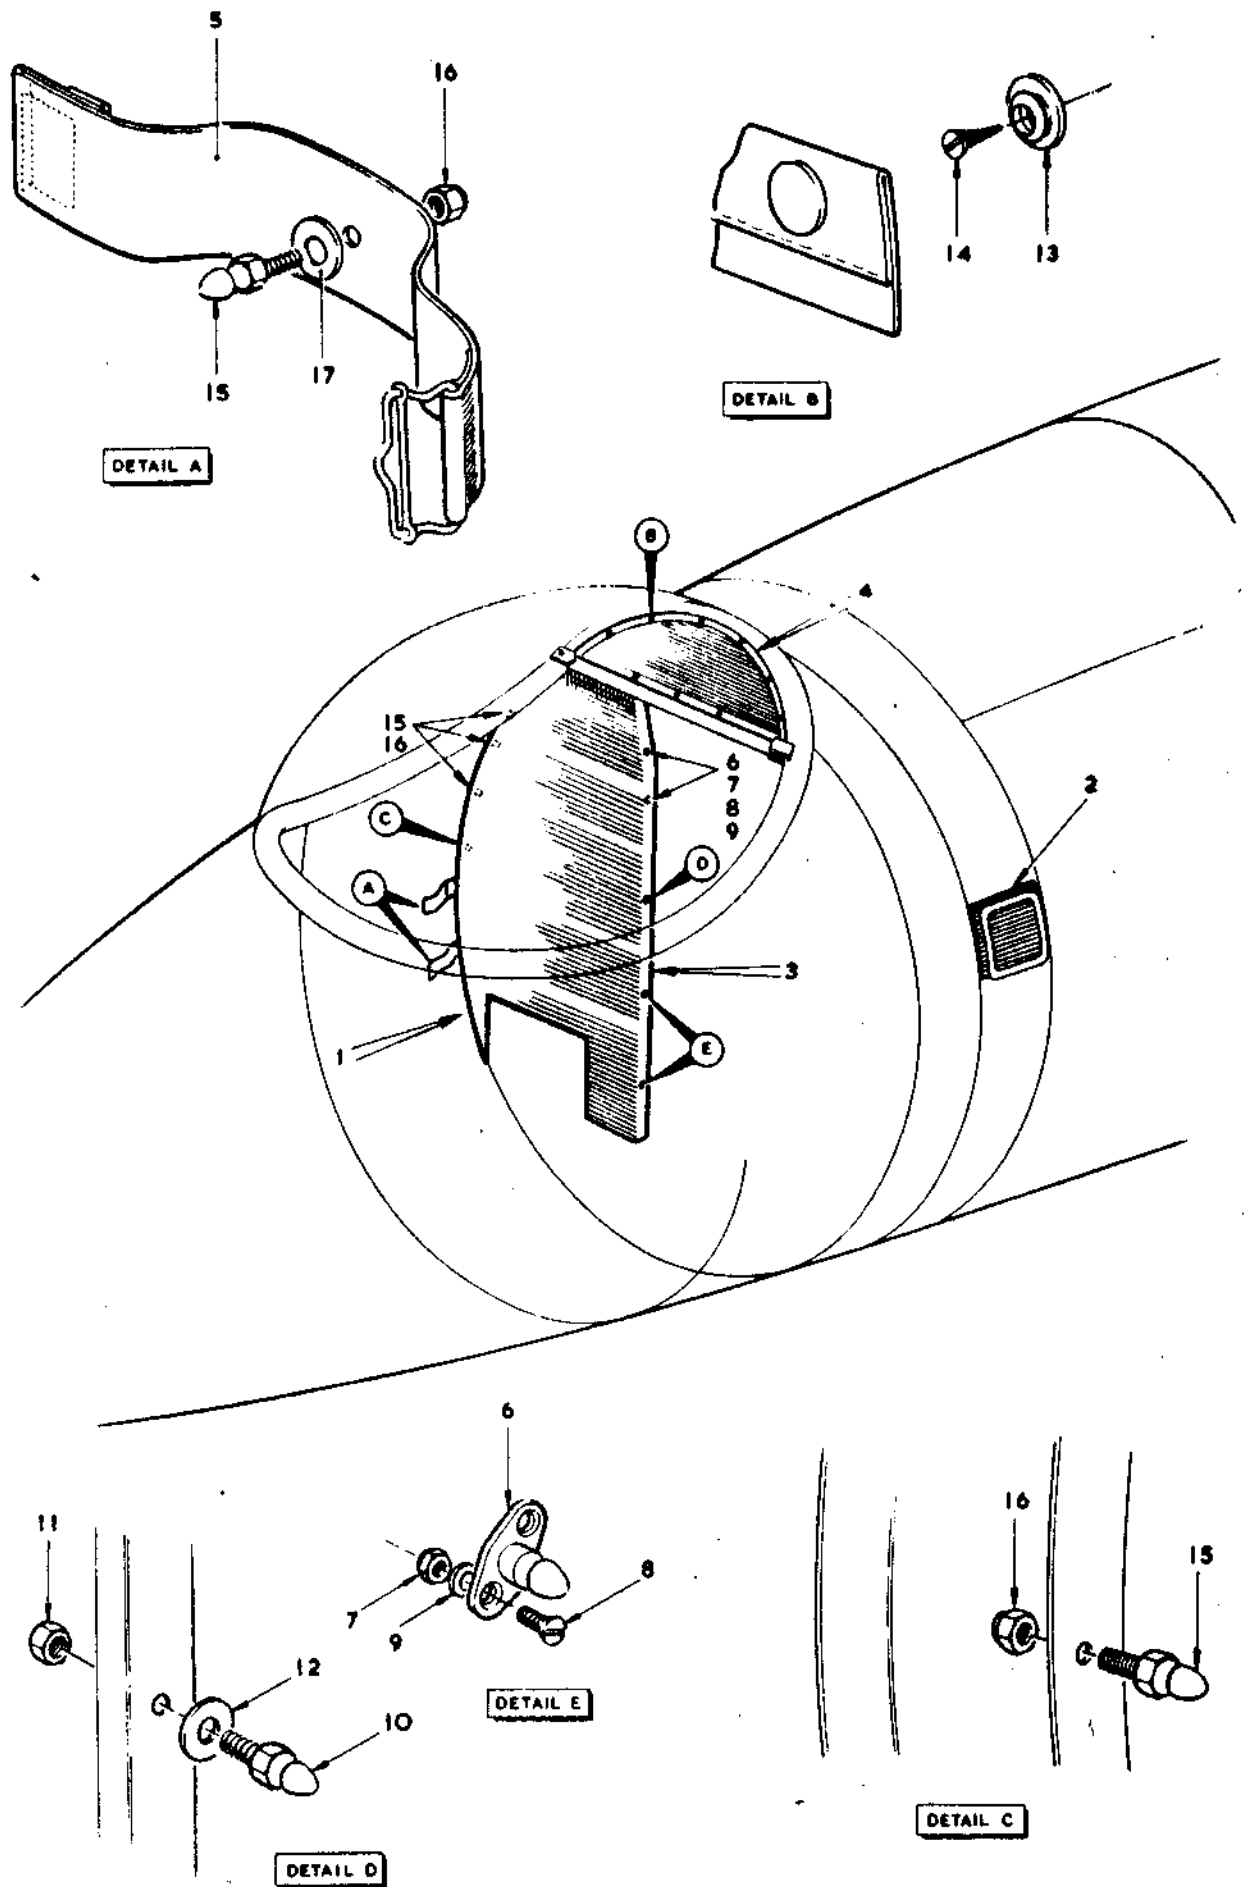


FIG. 3 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

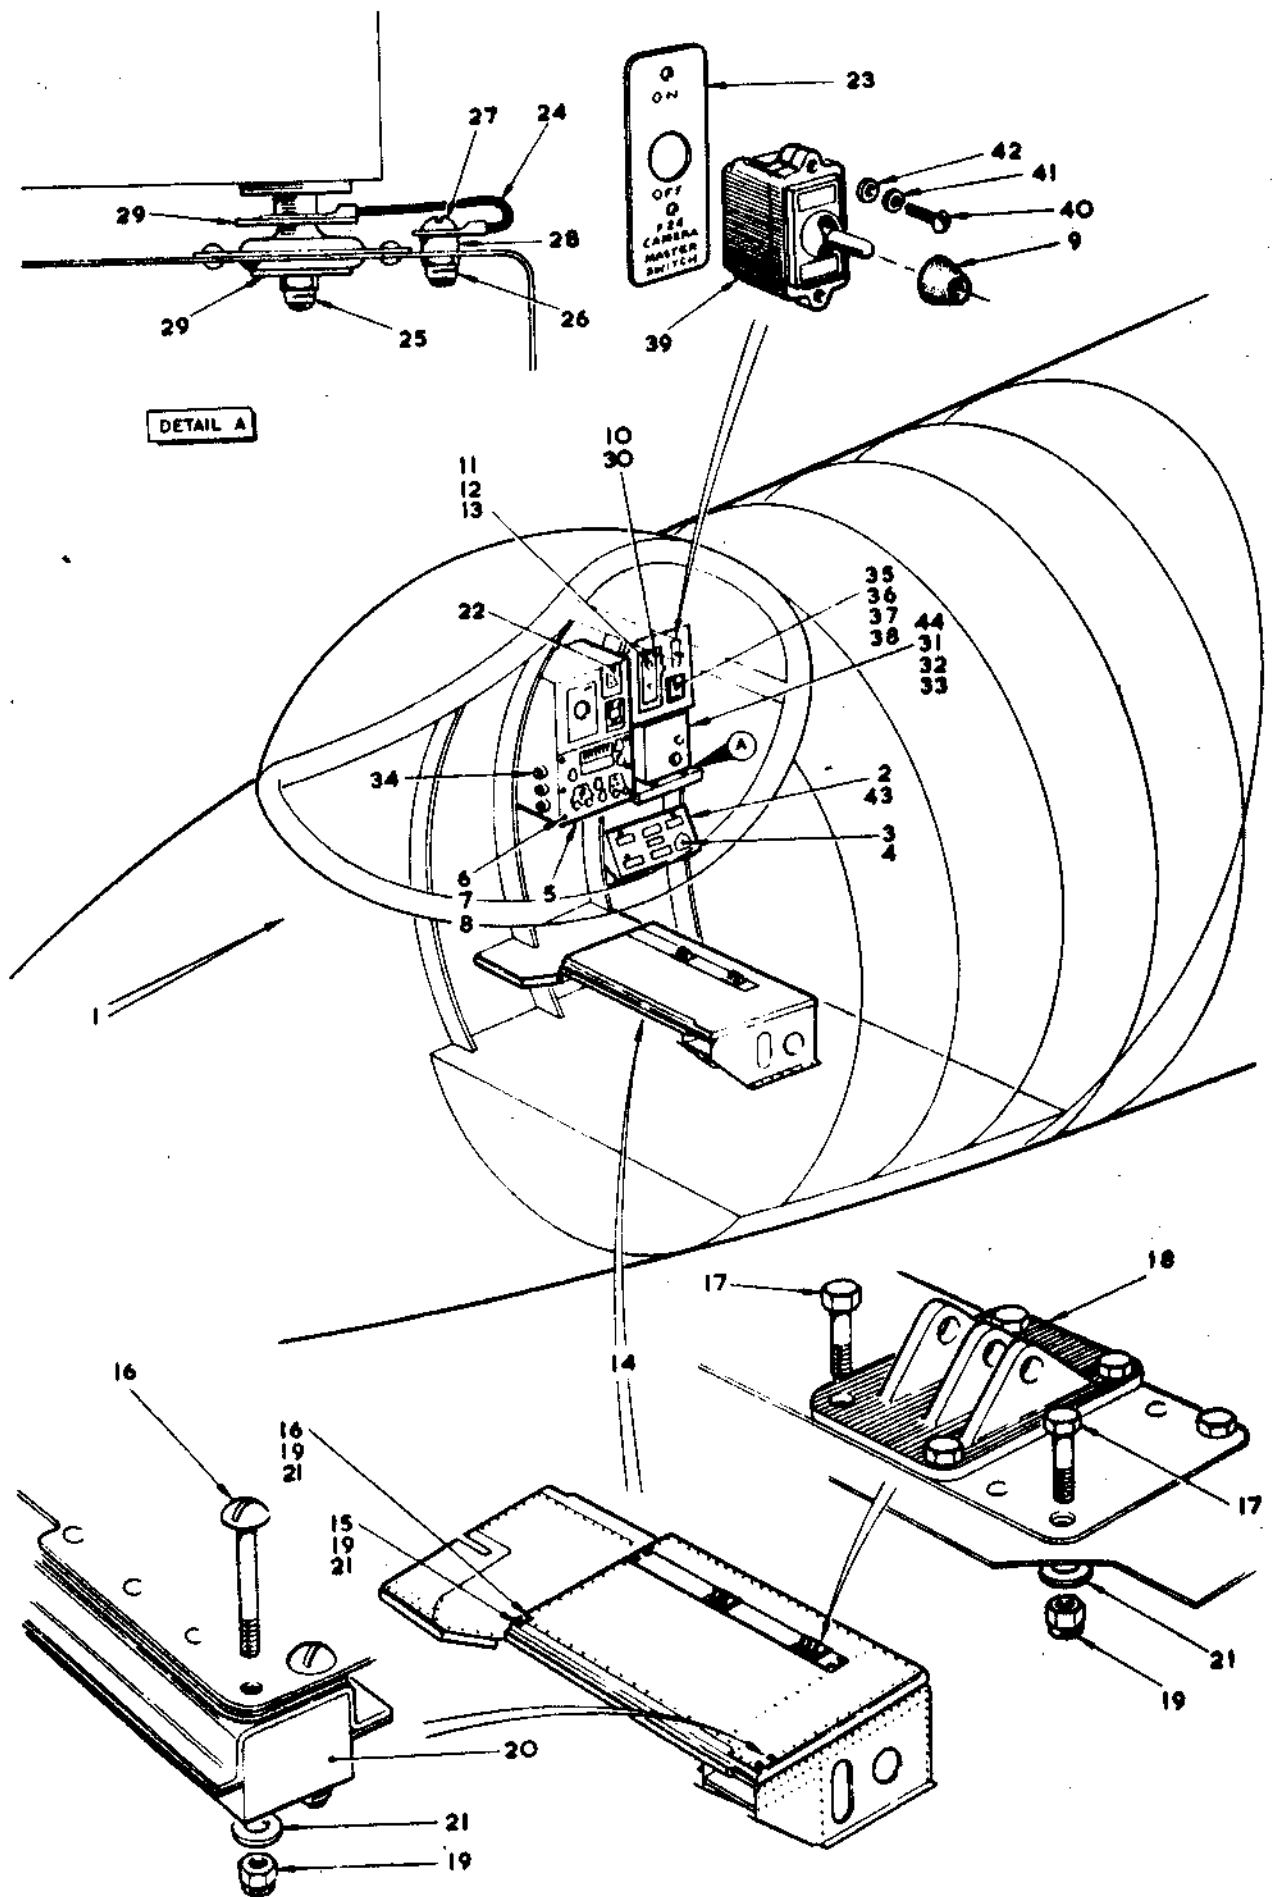


FIG. 4 PRESSURE CABIN EQUIPMENT

CODE A

SECT 6A


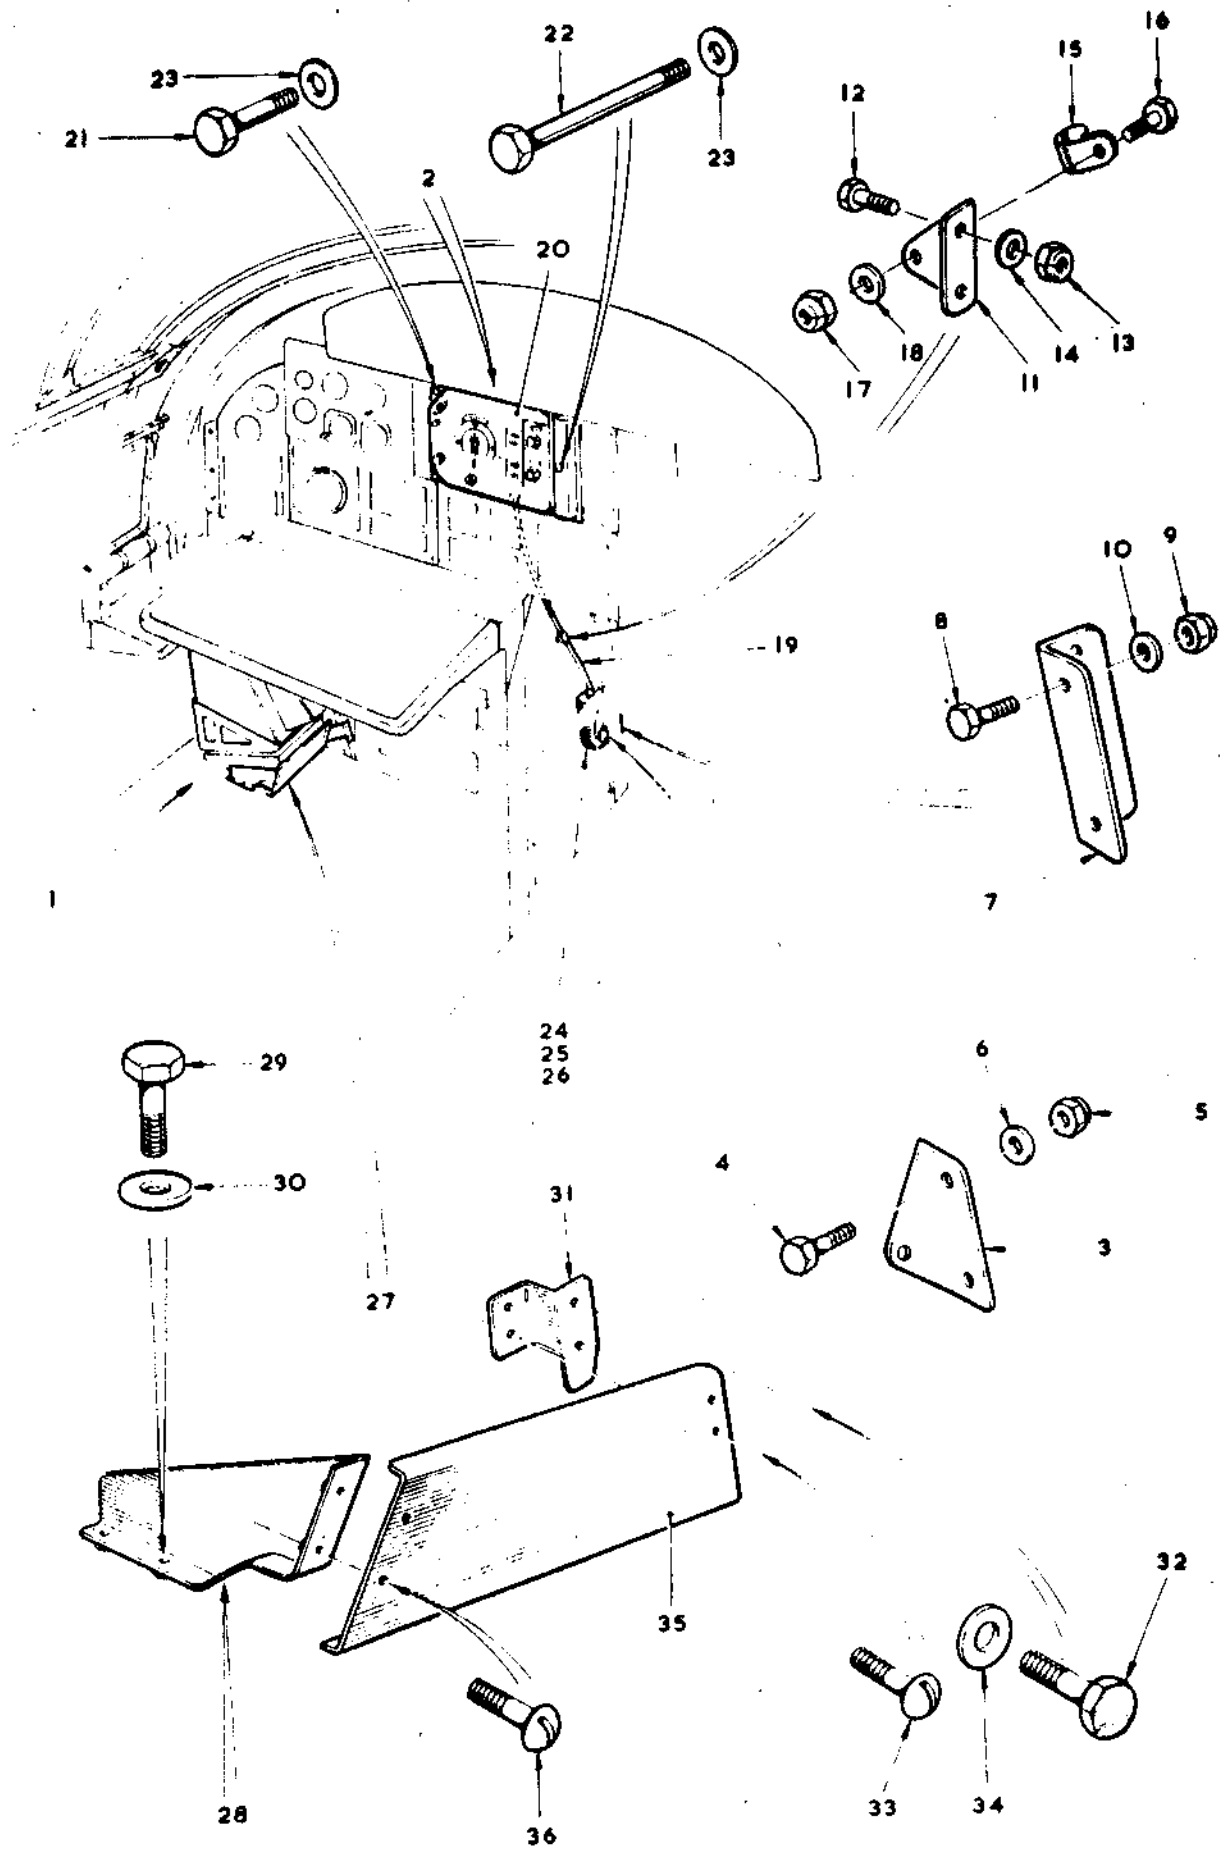


FIG.5 PRESSURE CABIN EQUIPMENT

CODE A

SECT GA

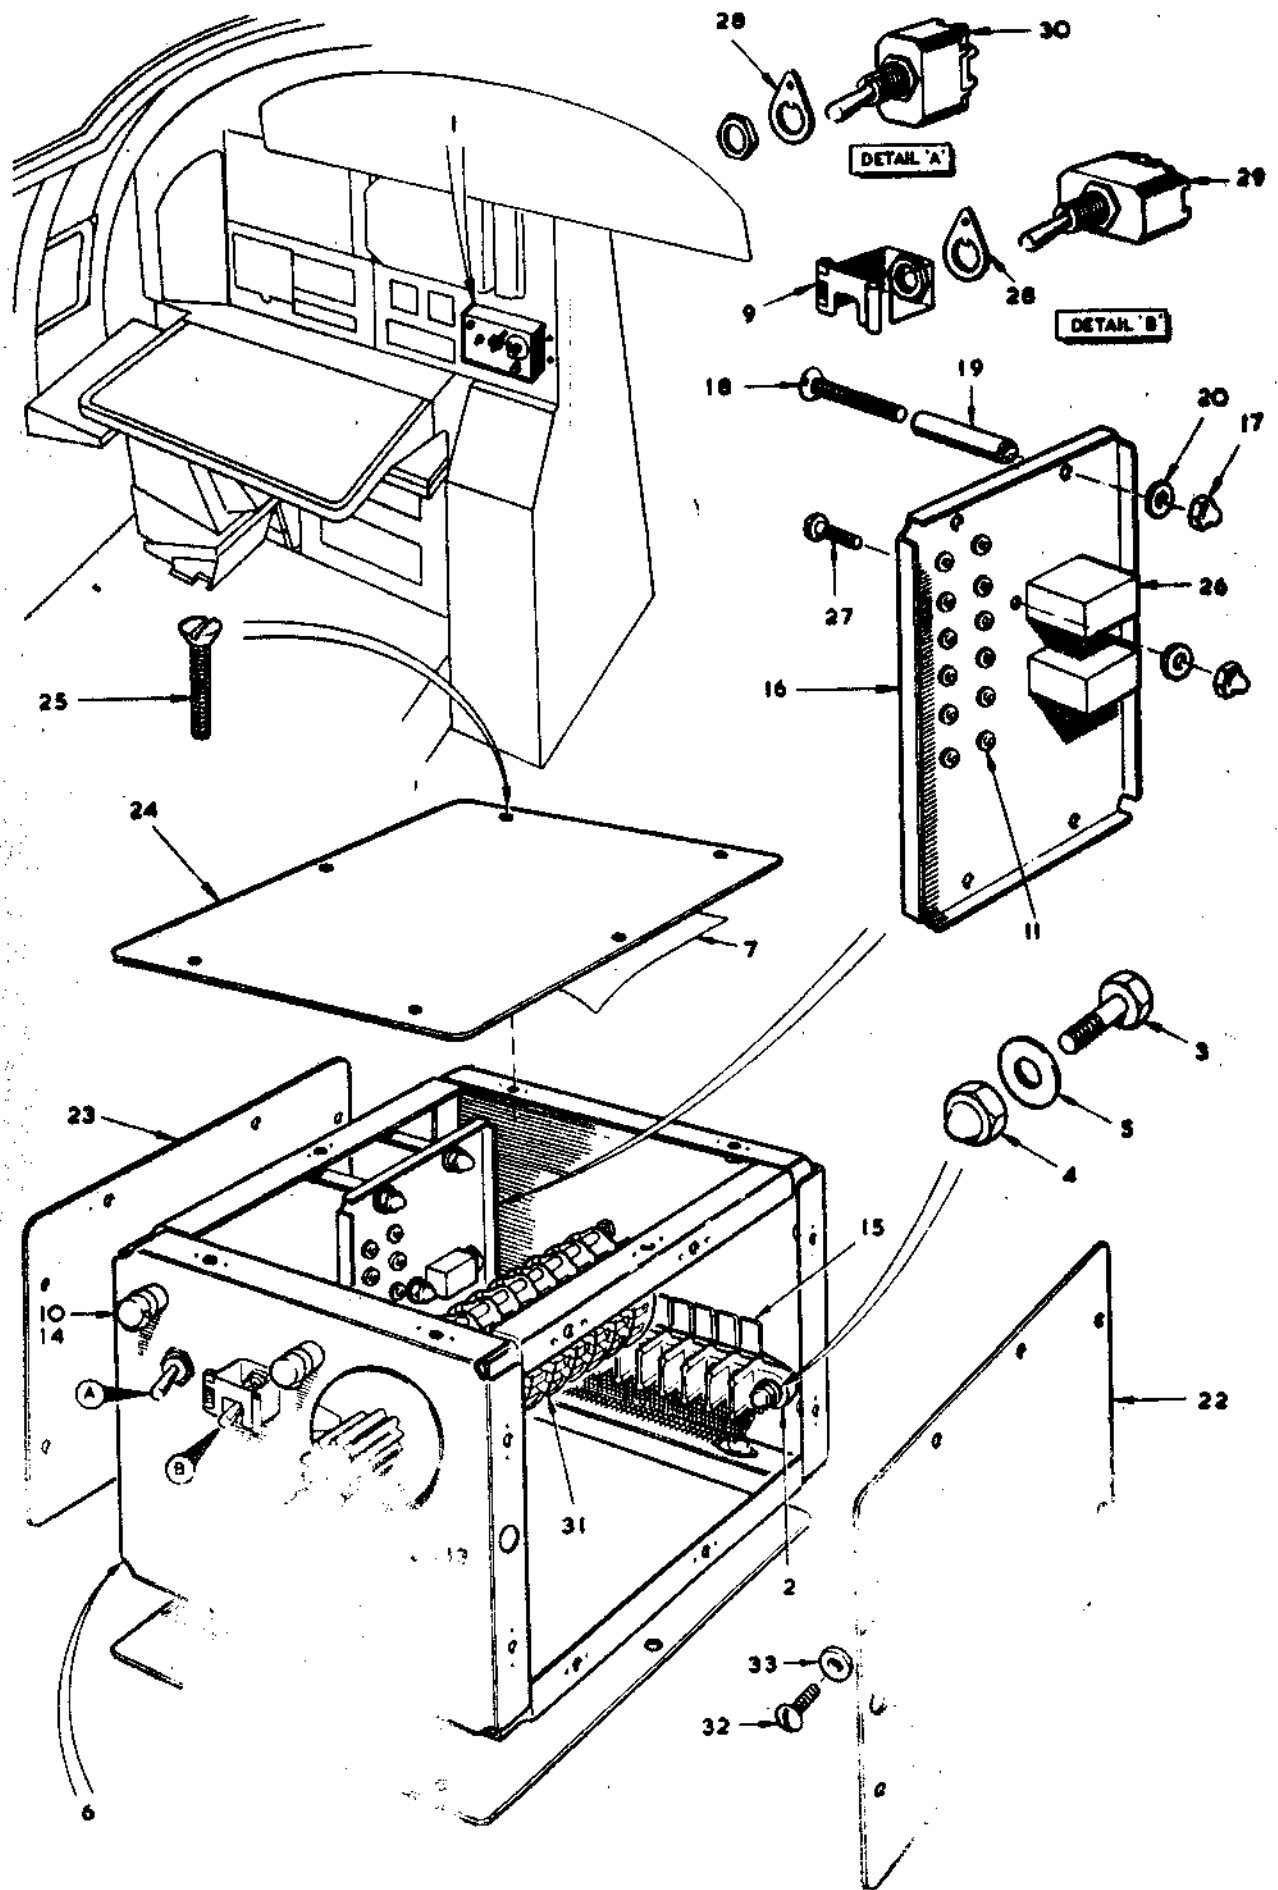

PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

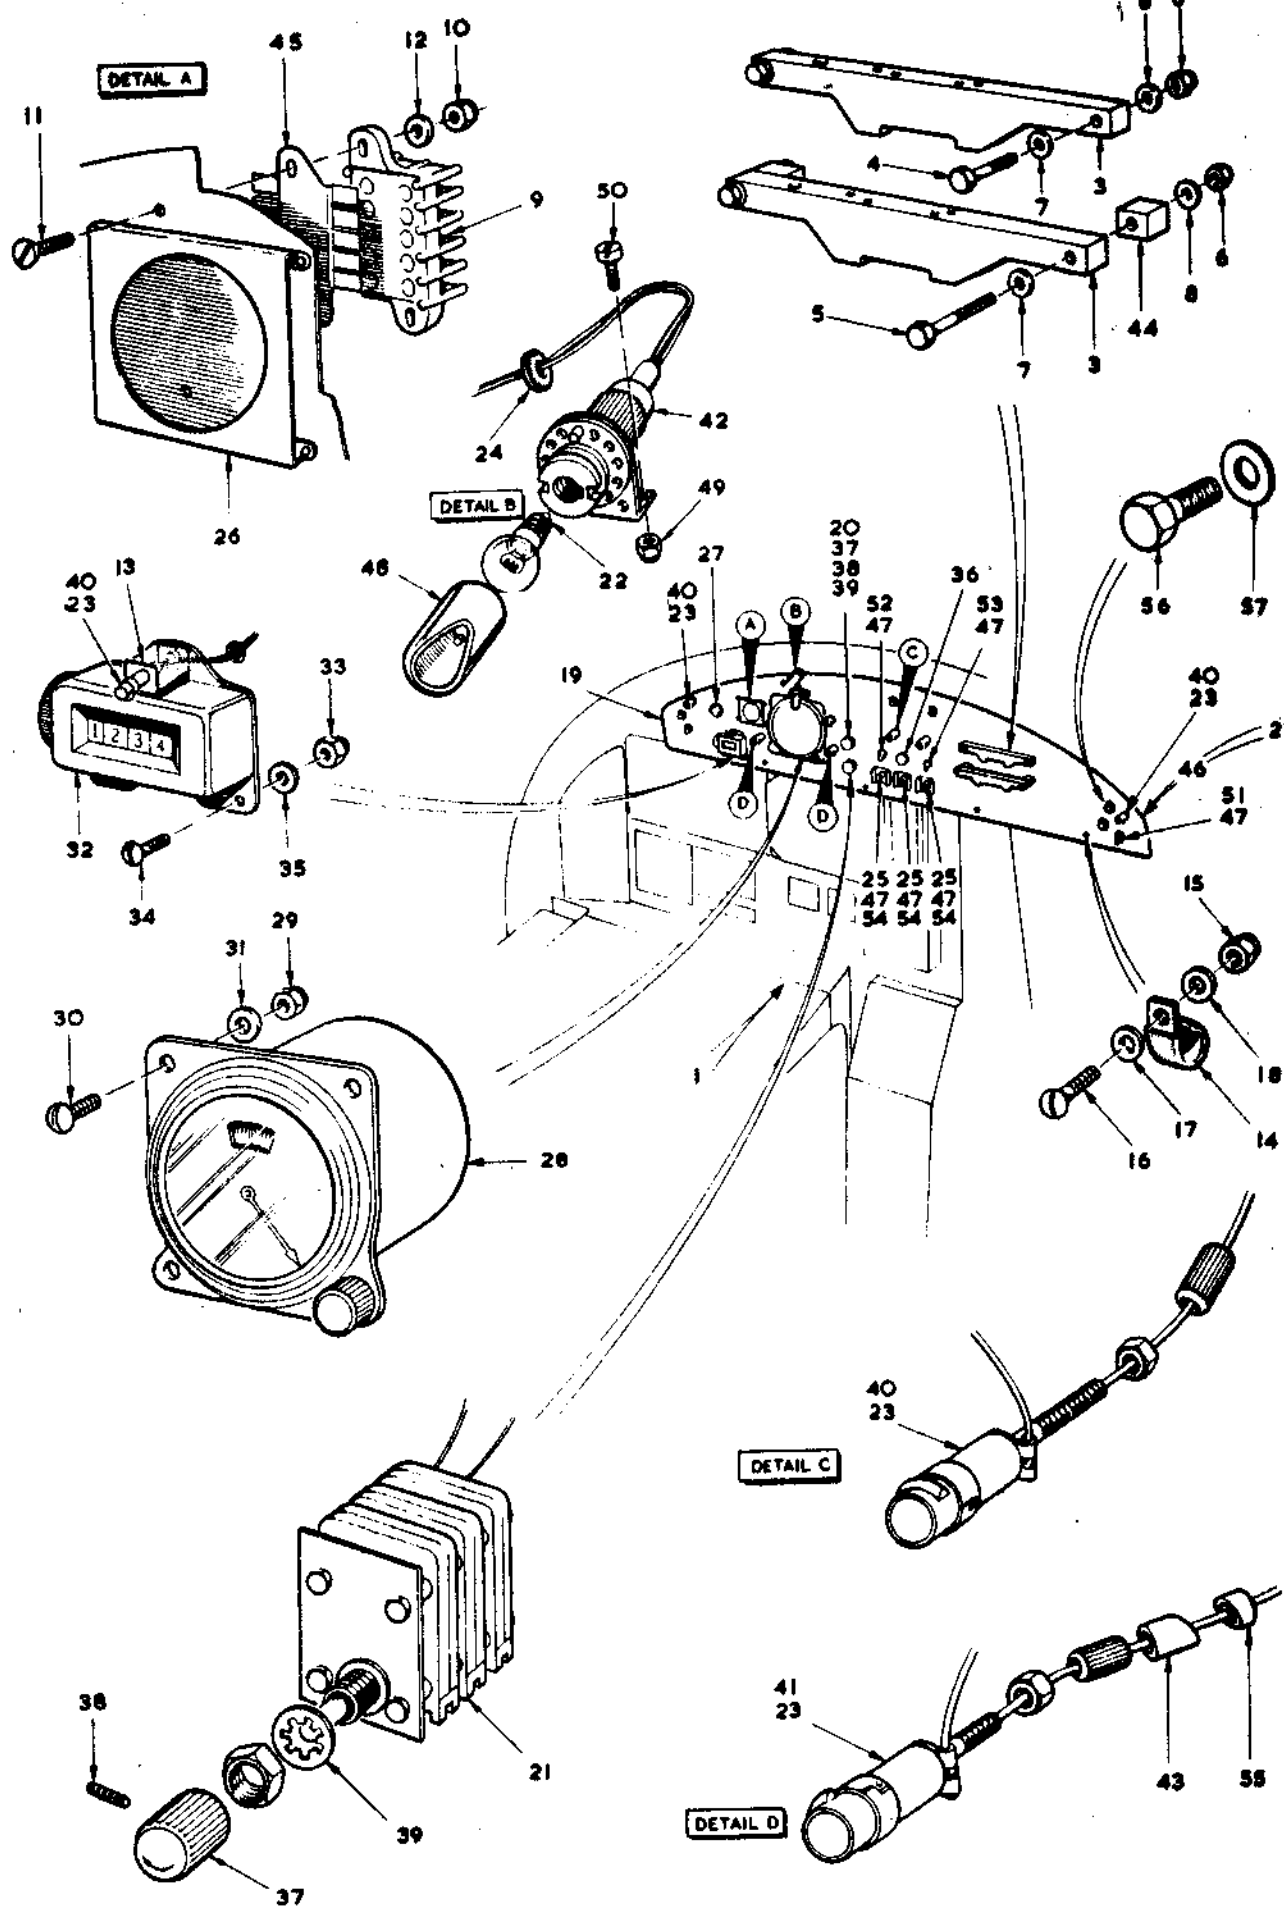


FIG 7 PRESSURE CABIN EQUIPMENT

CODE A

SECT. 6A

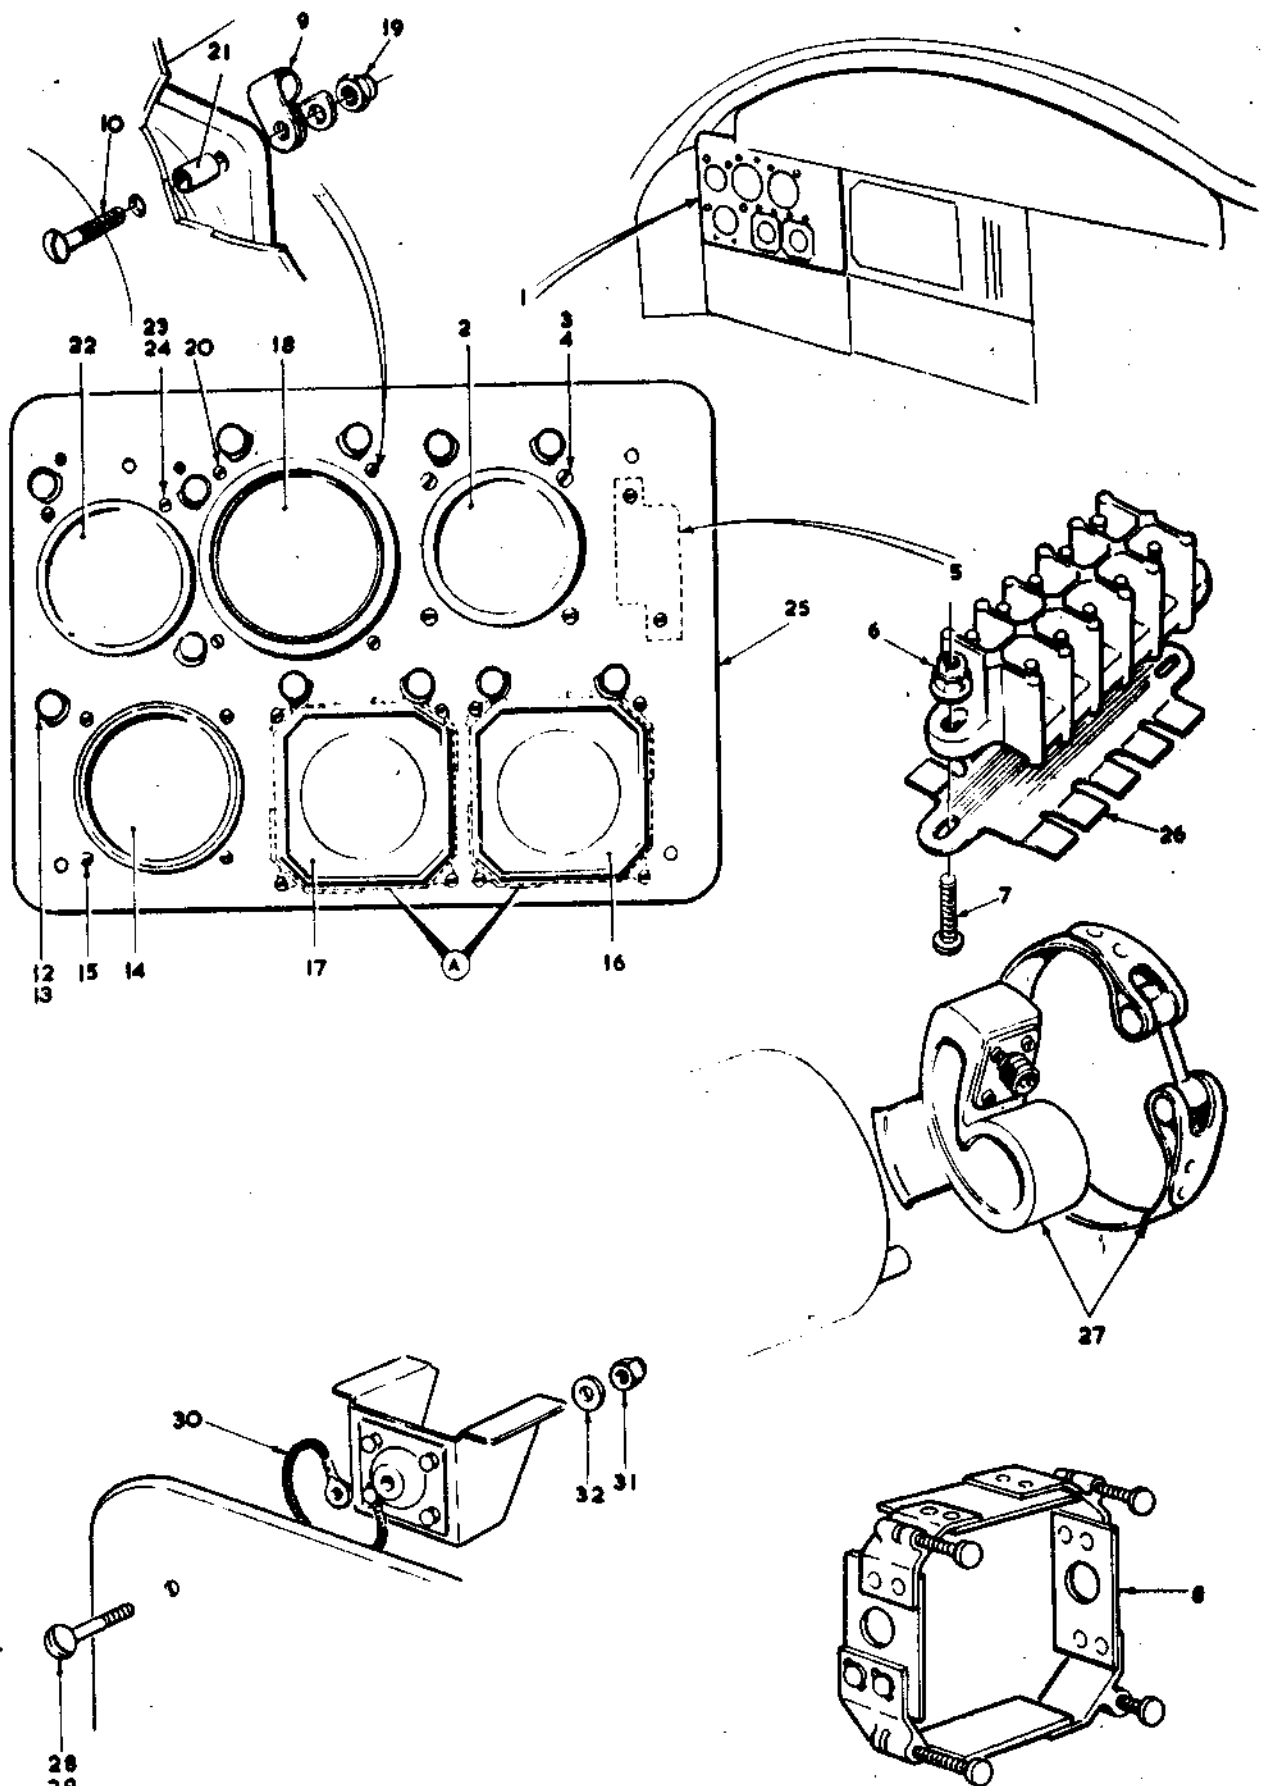


FIG. 8 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

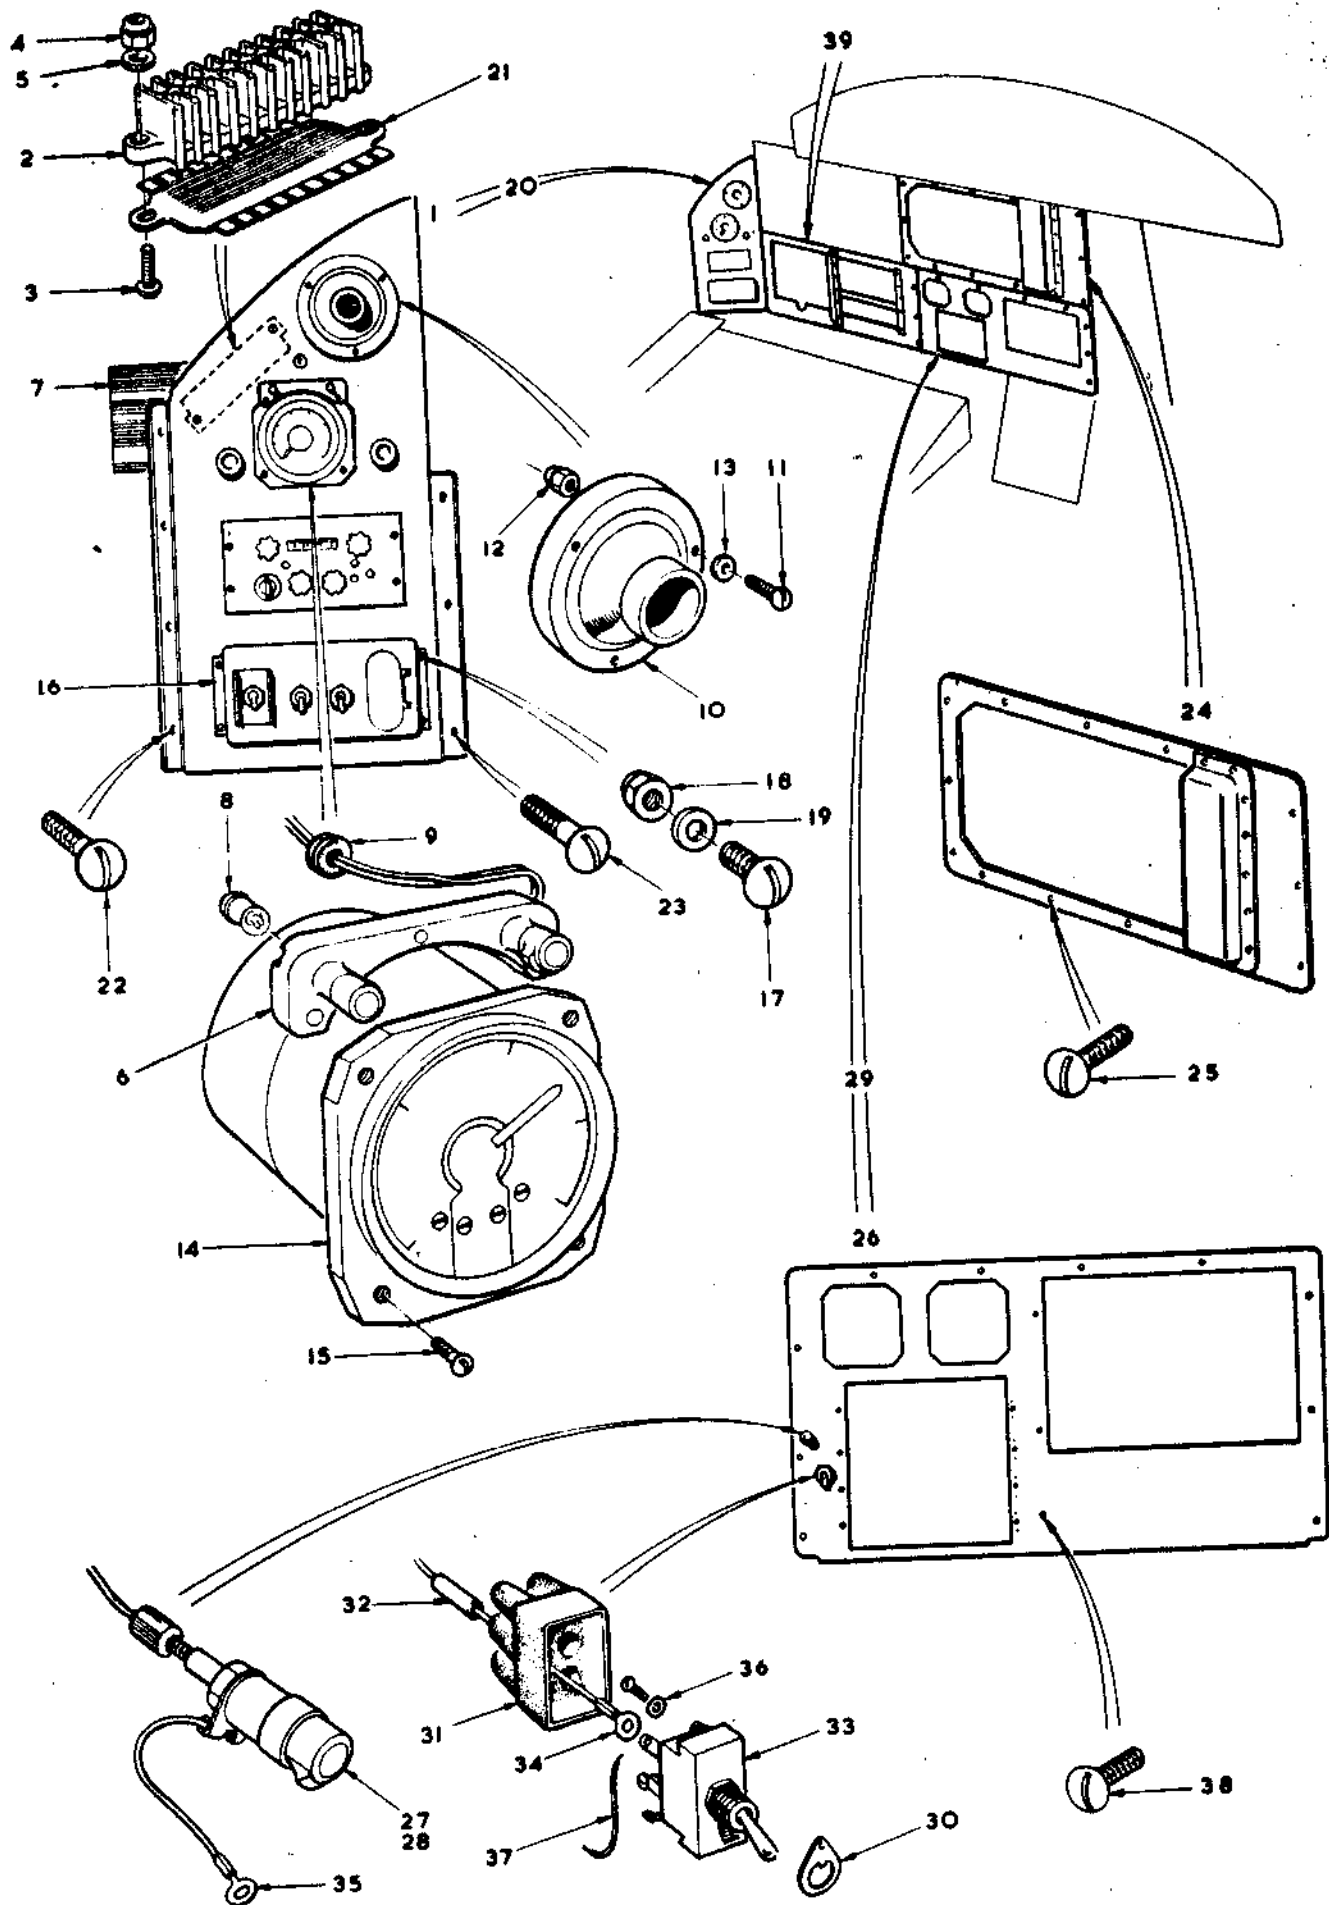


FIG.9 PRESSURE CABIN EQUIPMENT

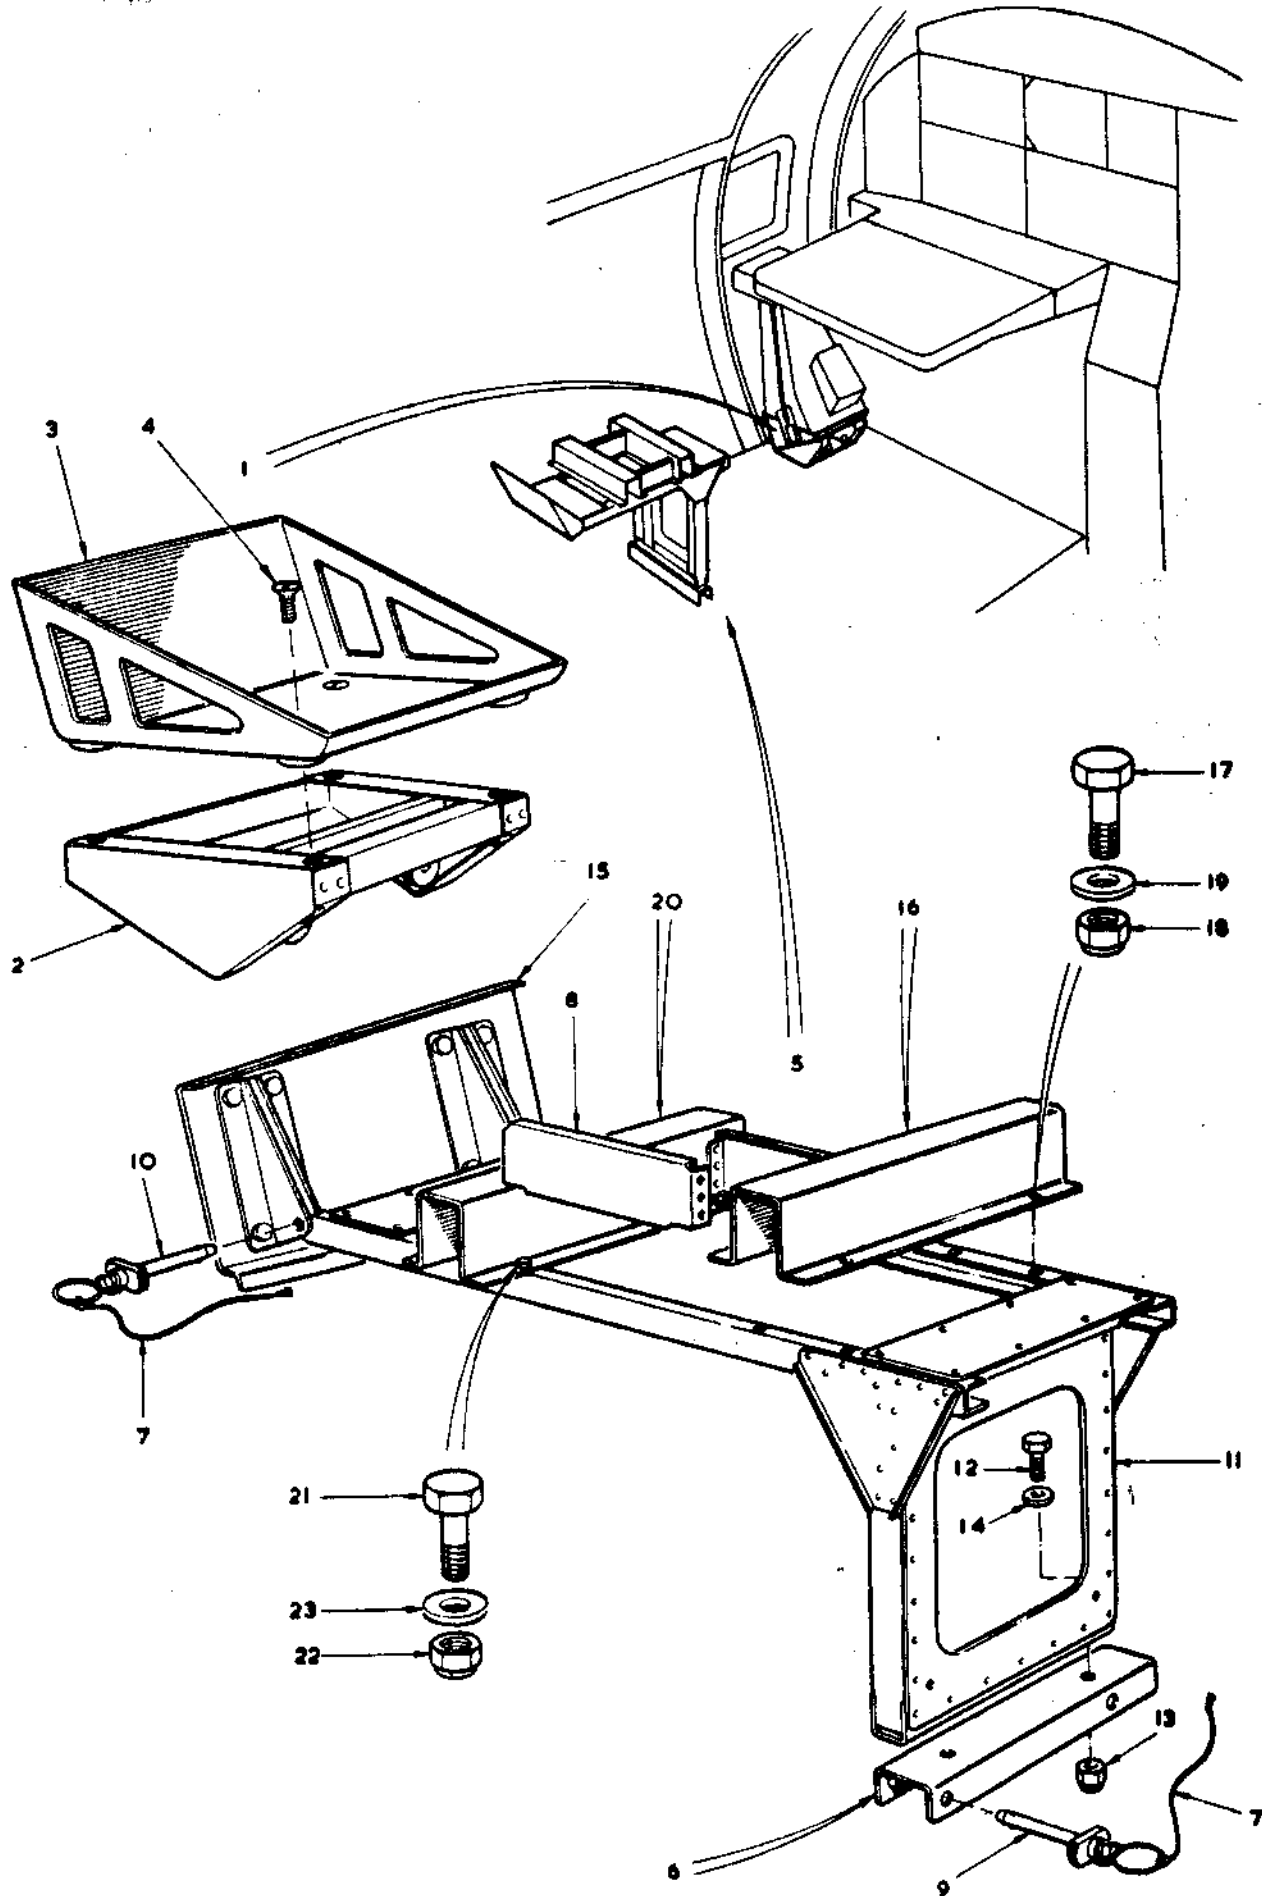


FIG.10 PRESSURE CABIN EQUIPMENT

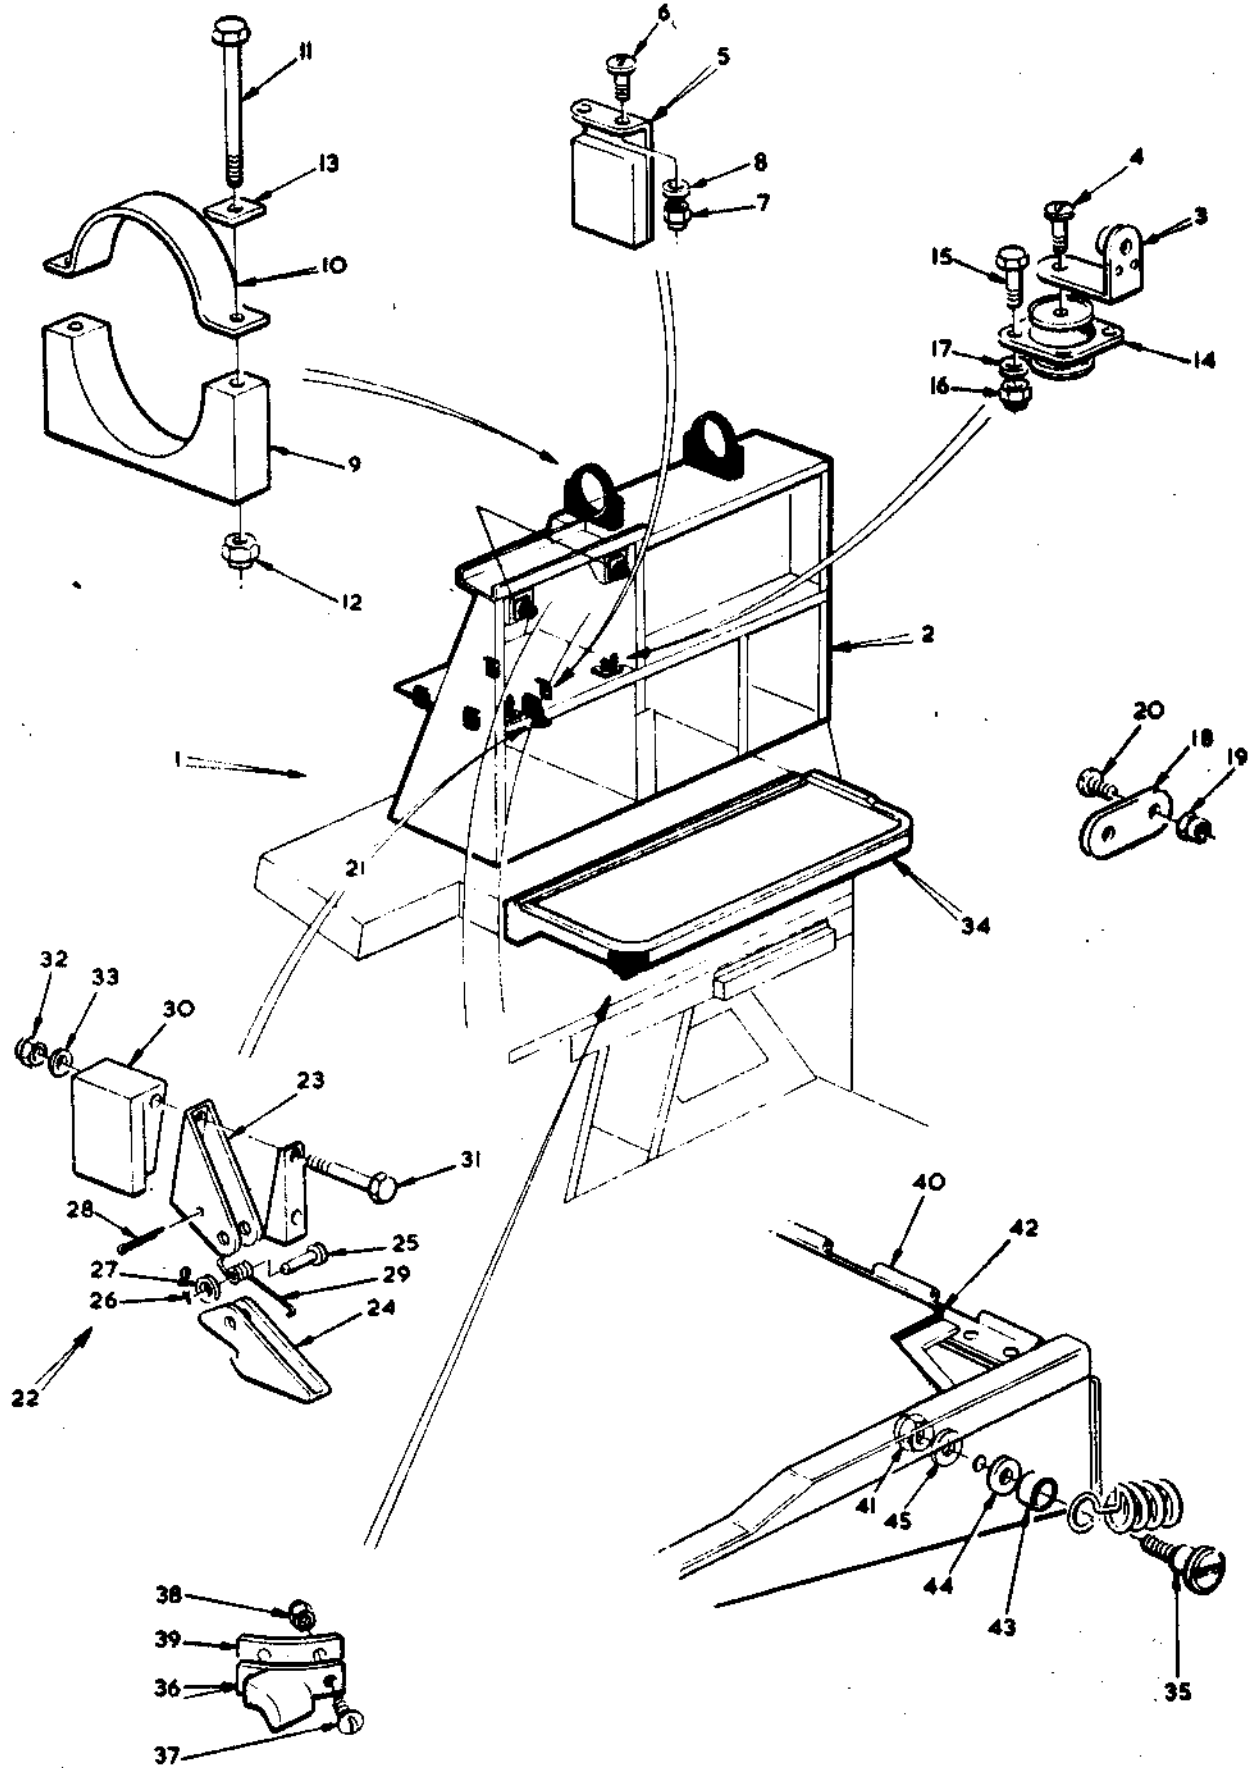
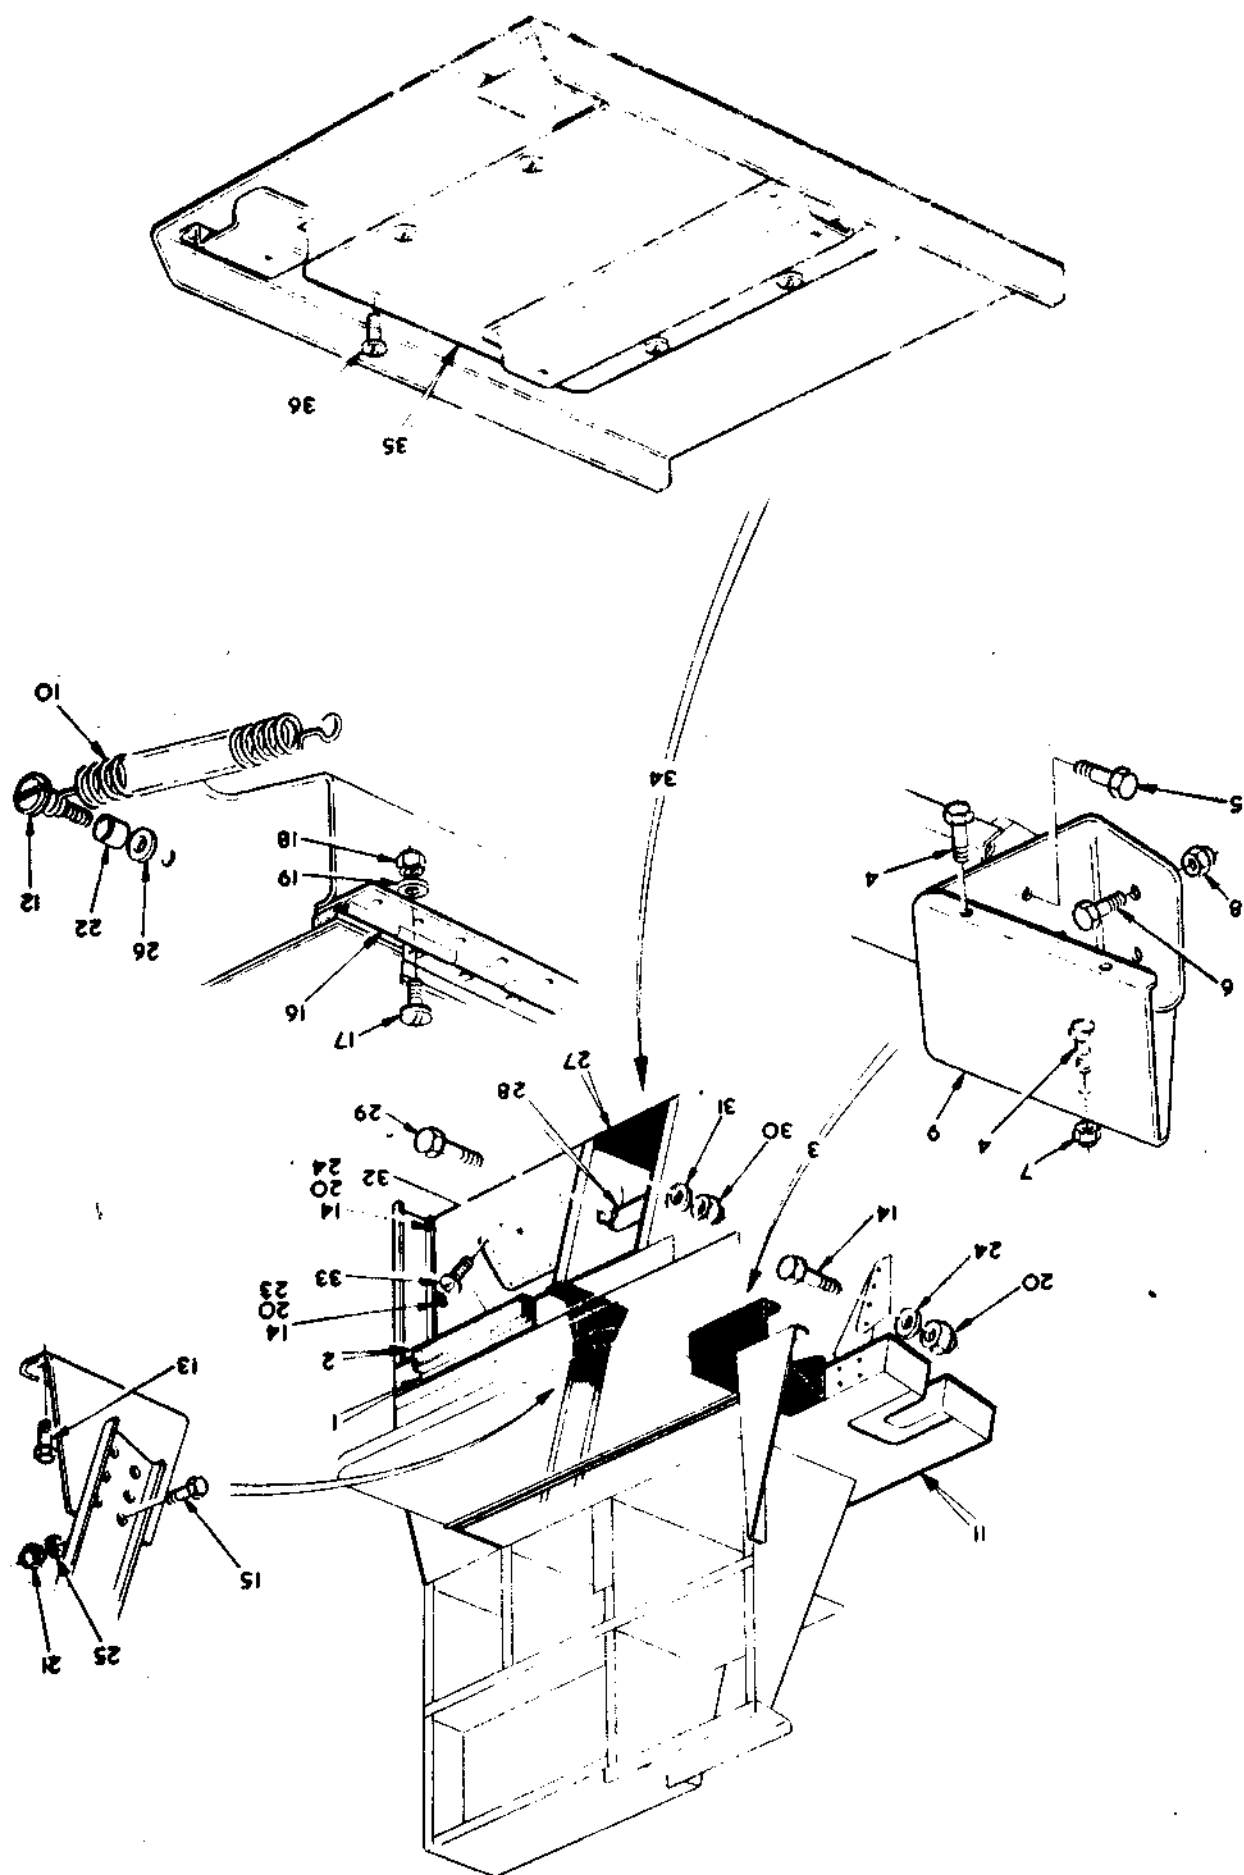


FIG. II PRESSURE CABIN EQUIPMENT

CODE A

SECT GA



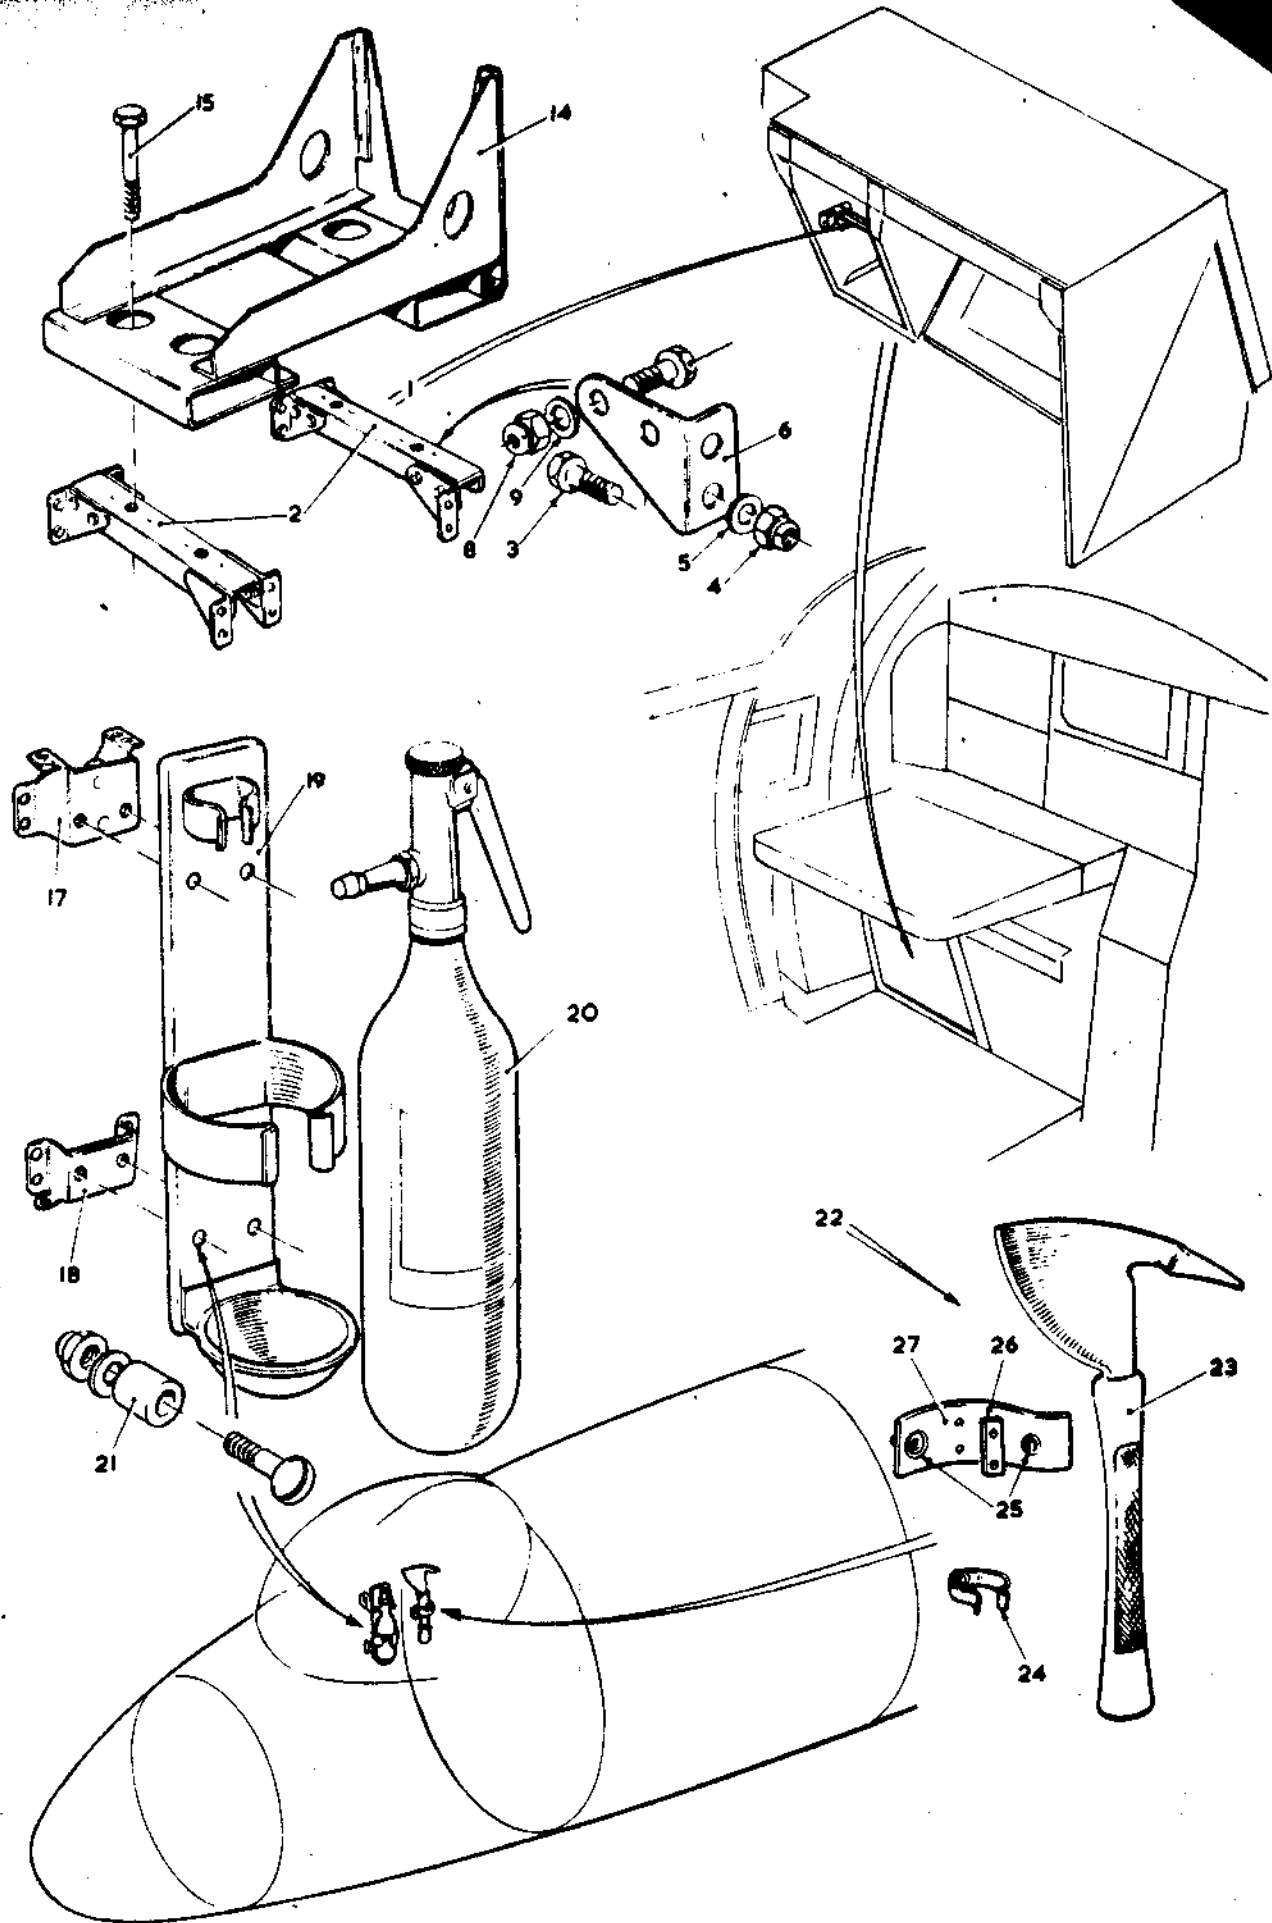


FIG.13 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

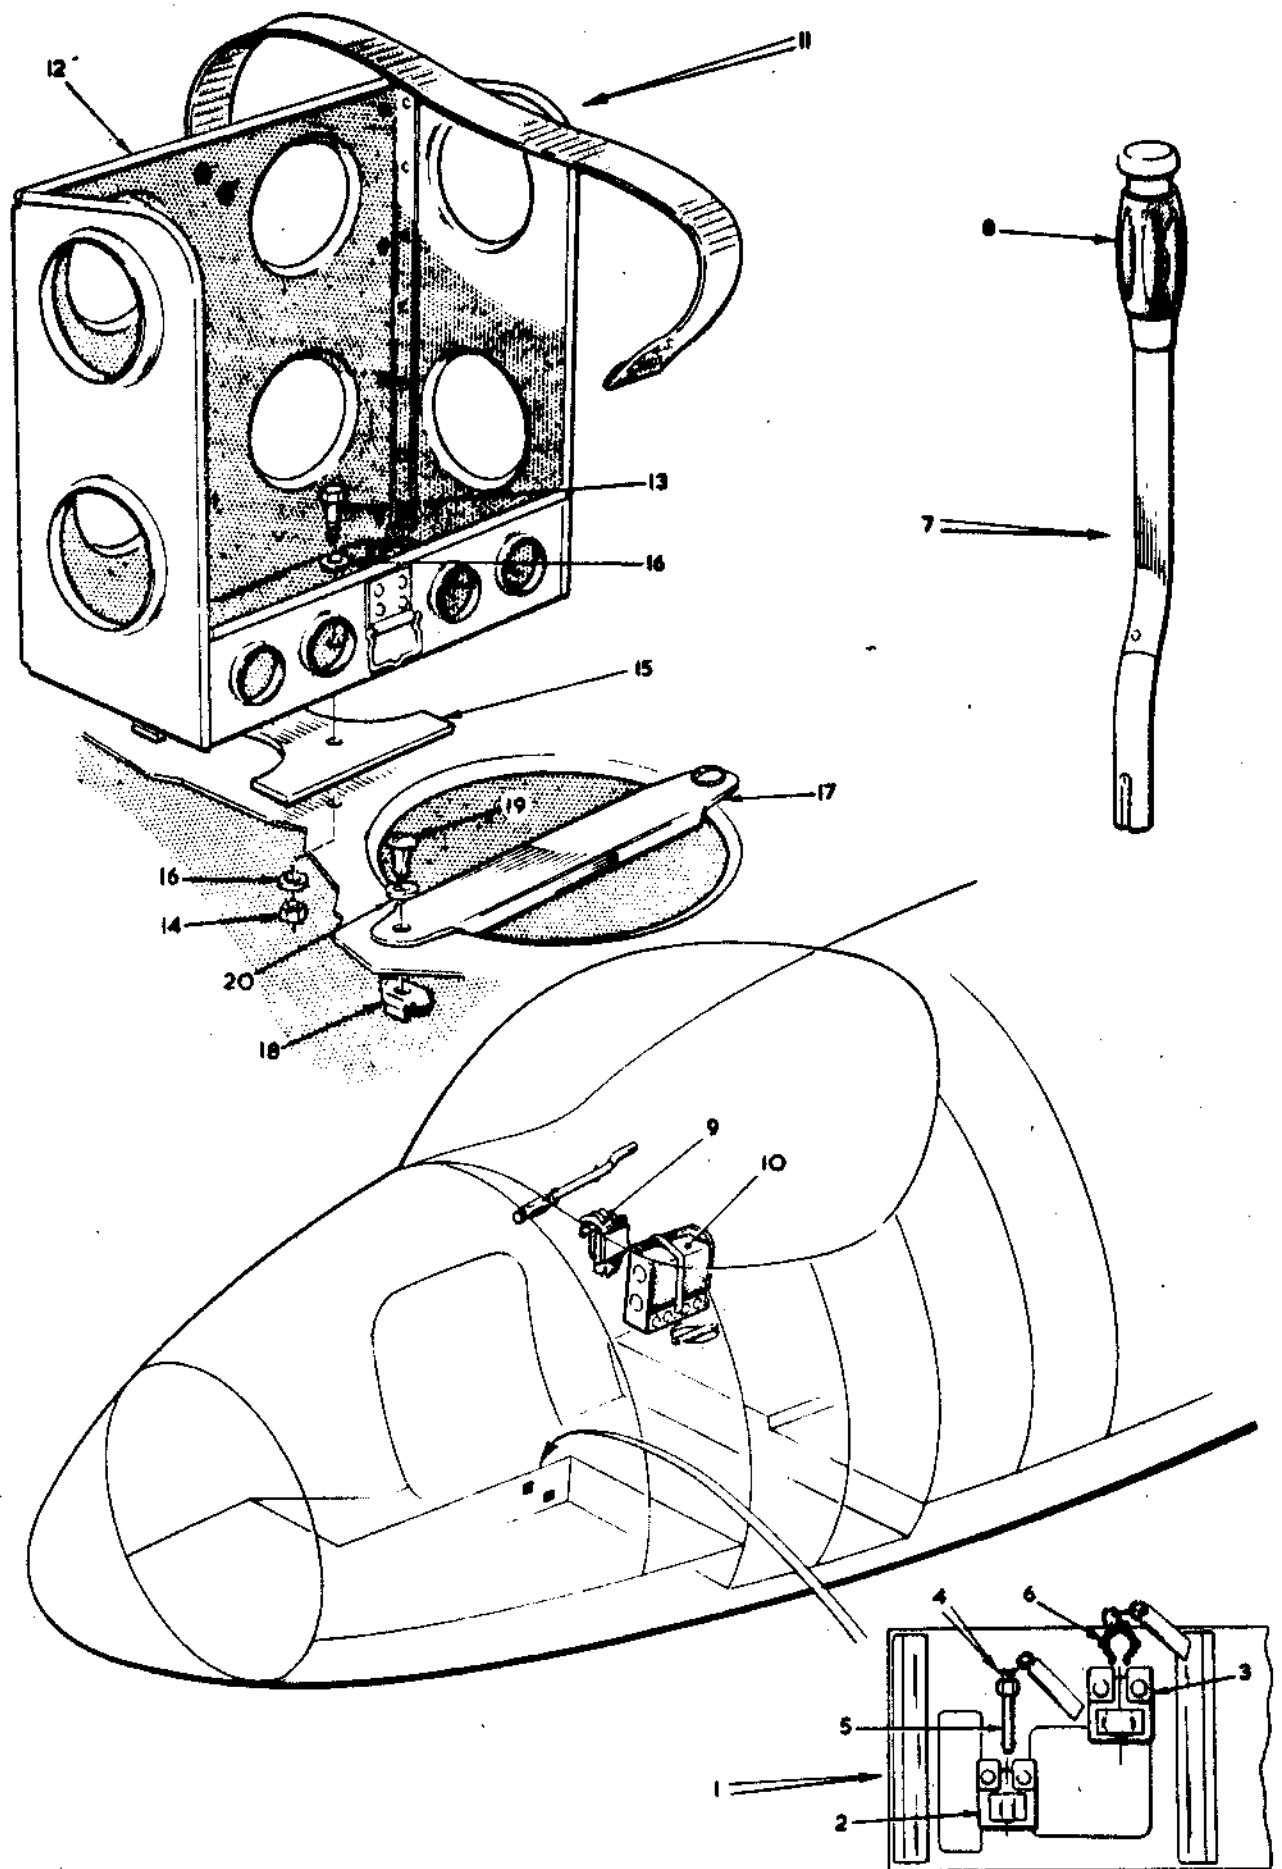


FIG.14 PRESSURE CABIN EQUIPMENT

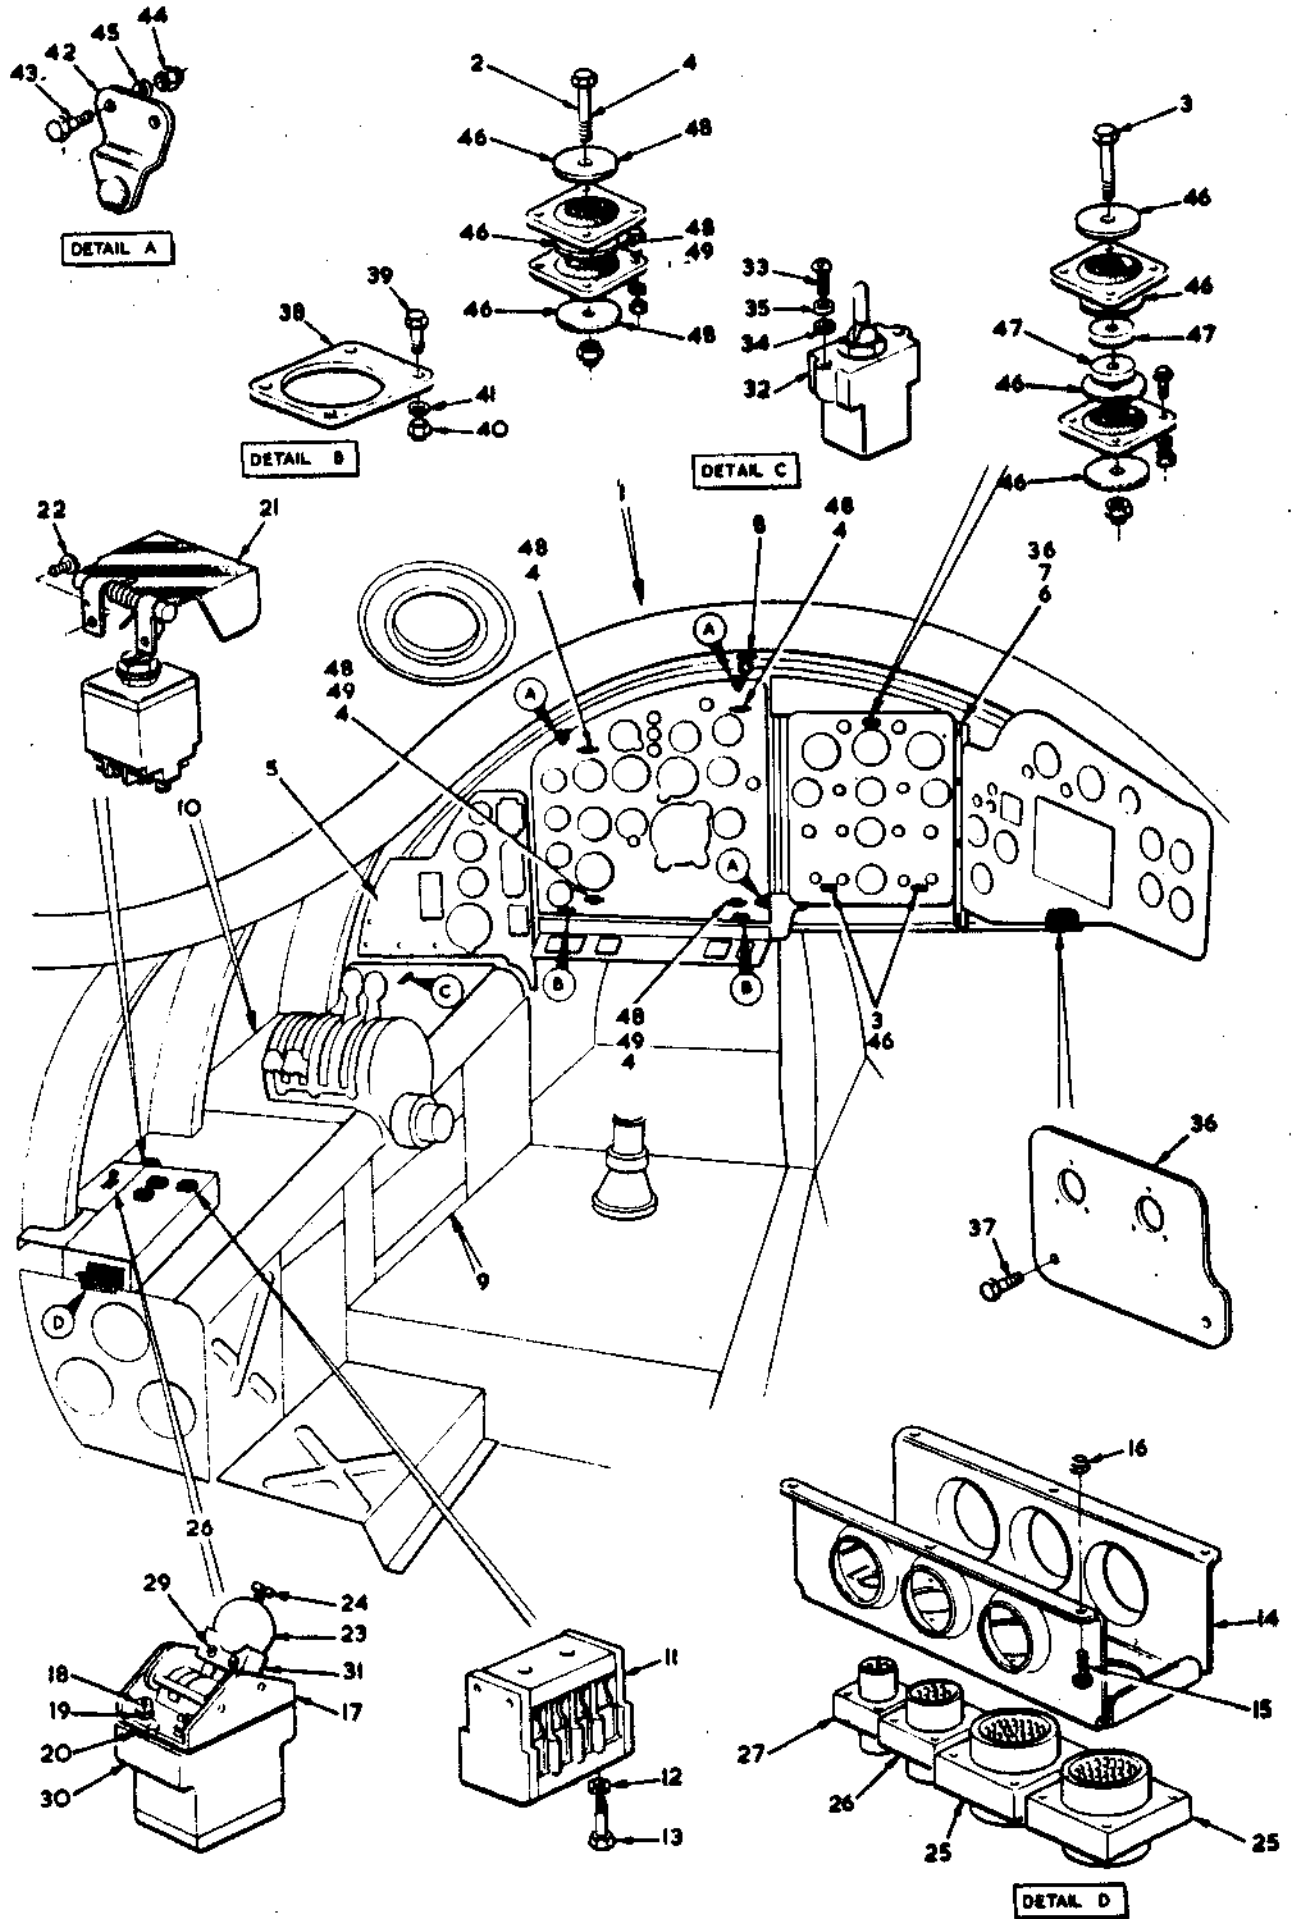


FIG. 15 PRESSURE CABIN EQUIPMENT

CODE A

SECT 6A

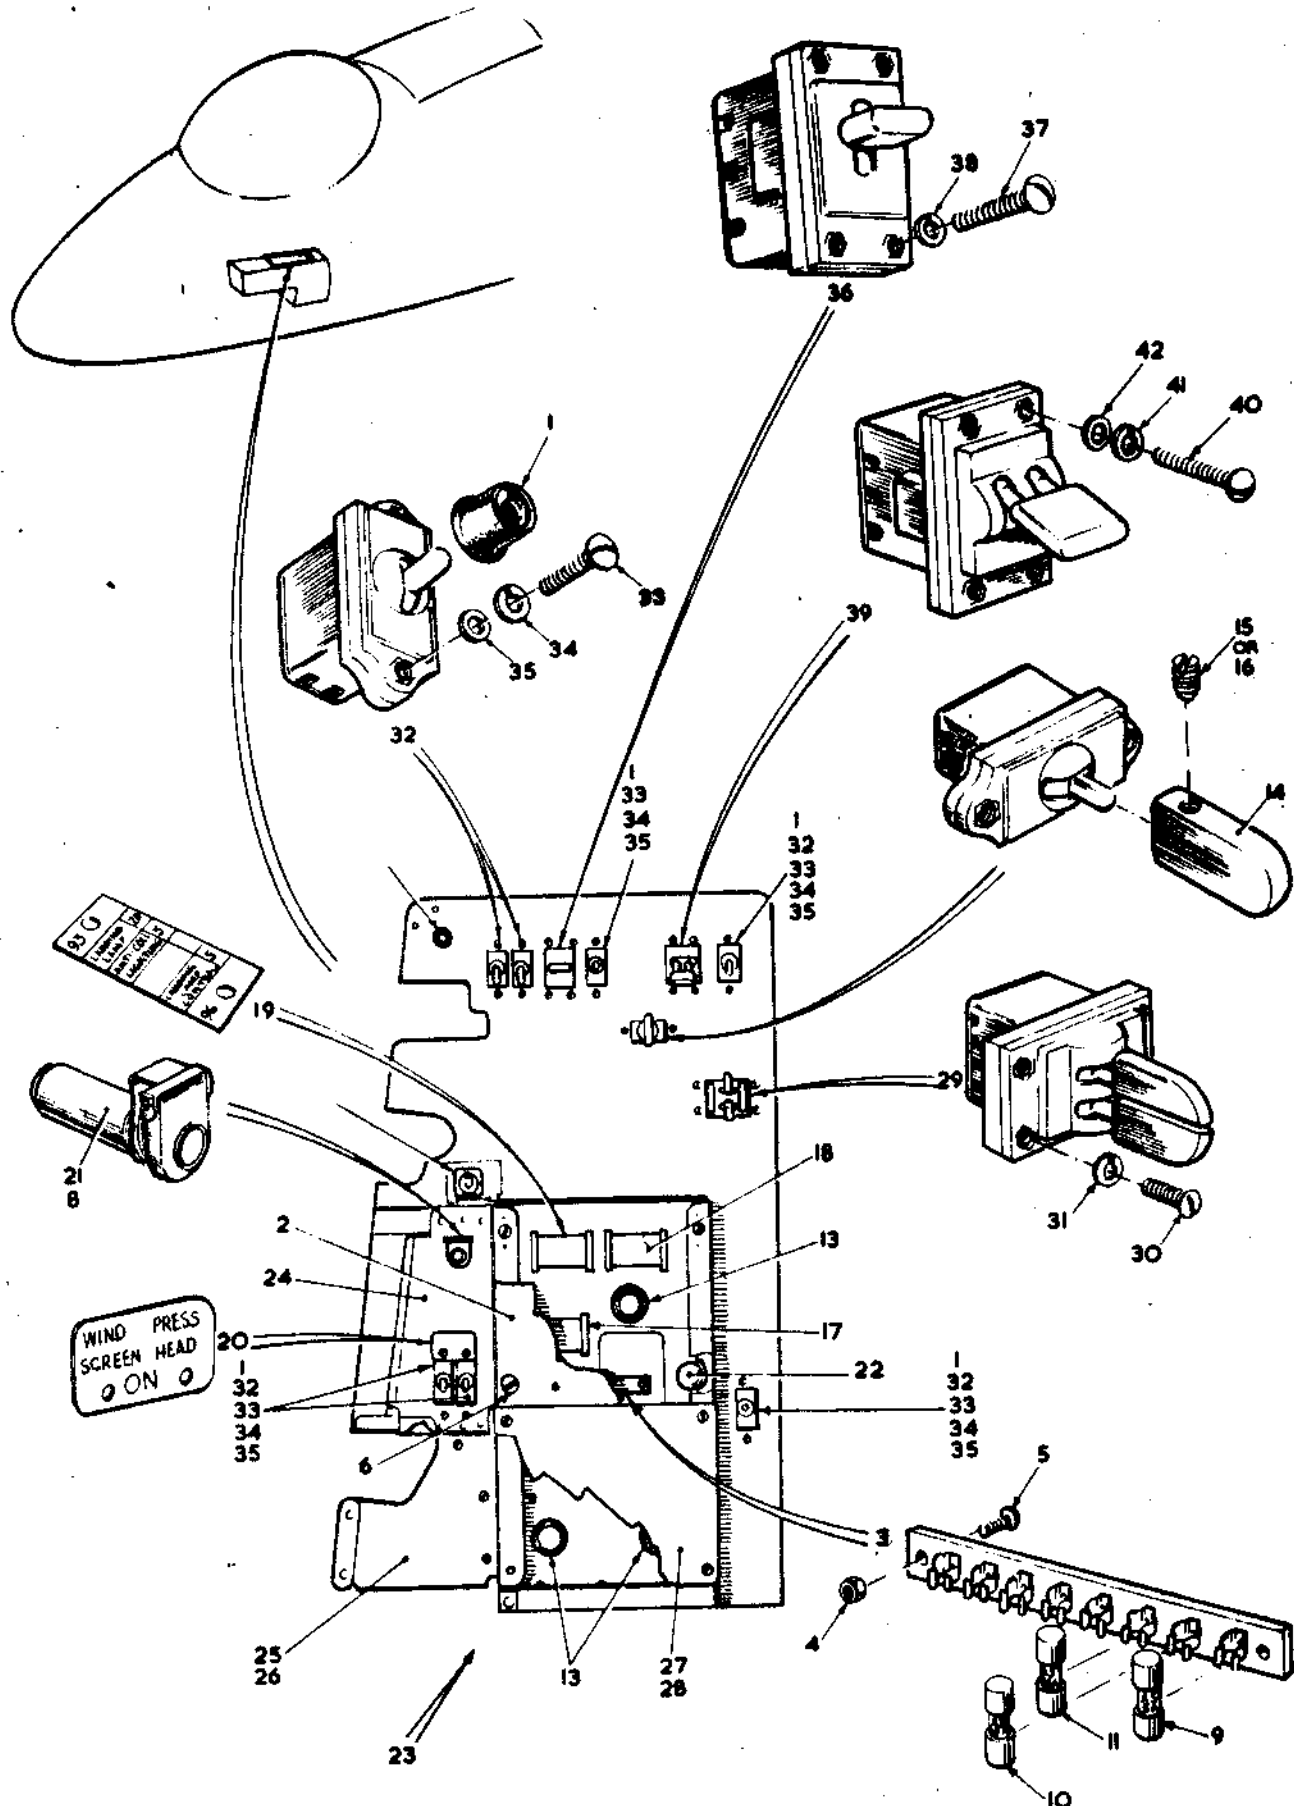


FIG. 16 PRESSURE CABIN EQUIPMENT

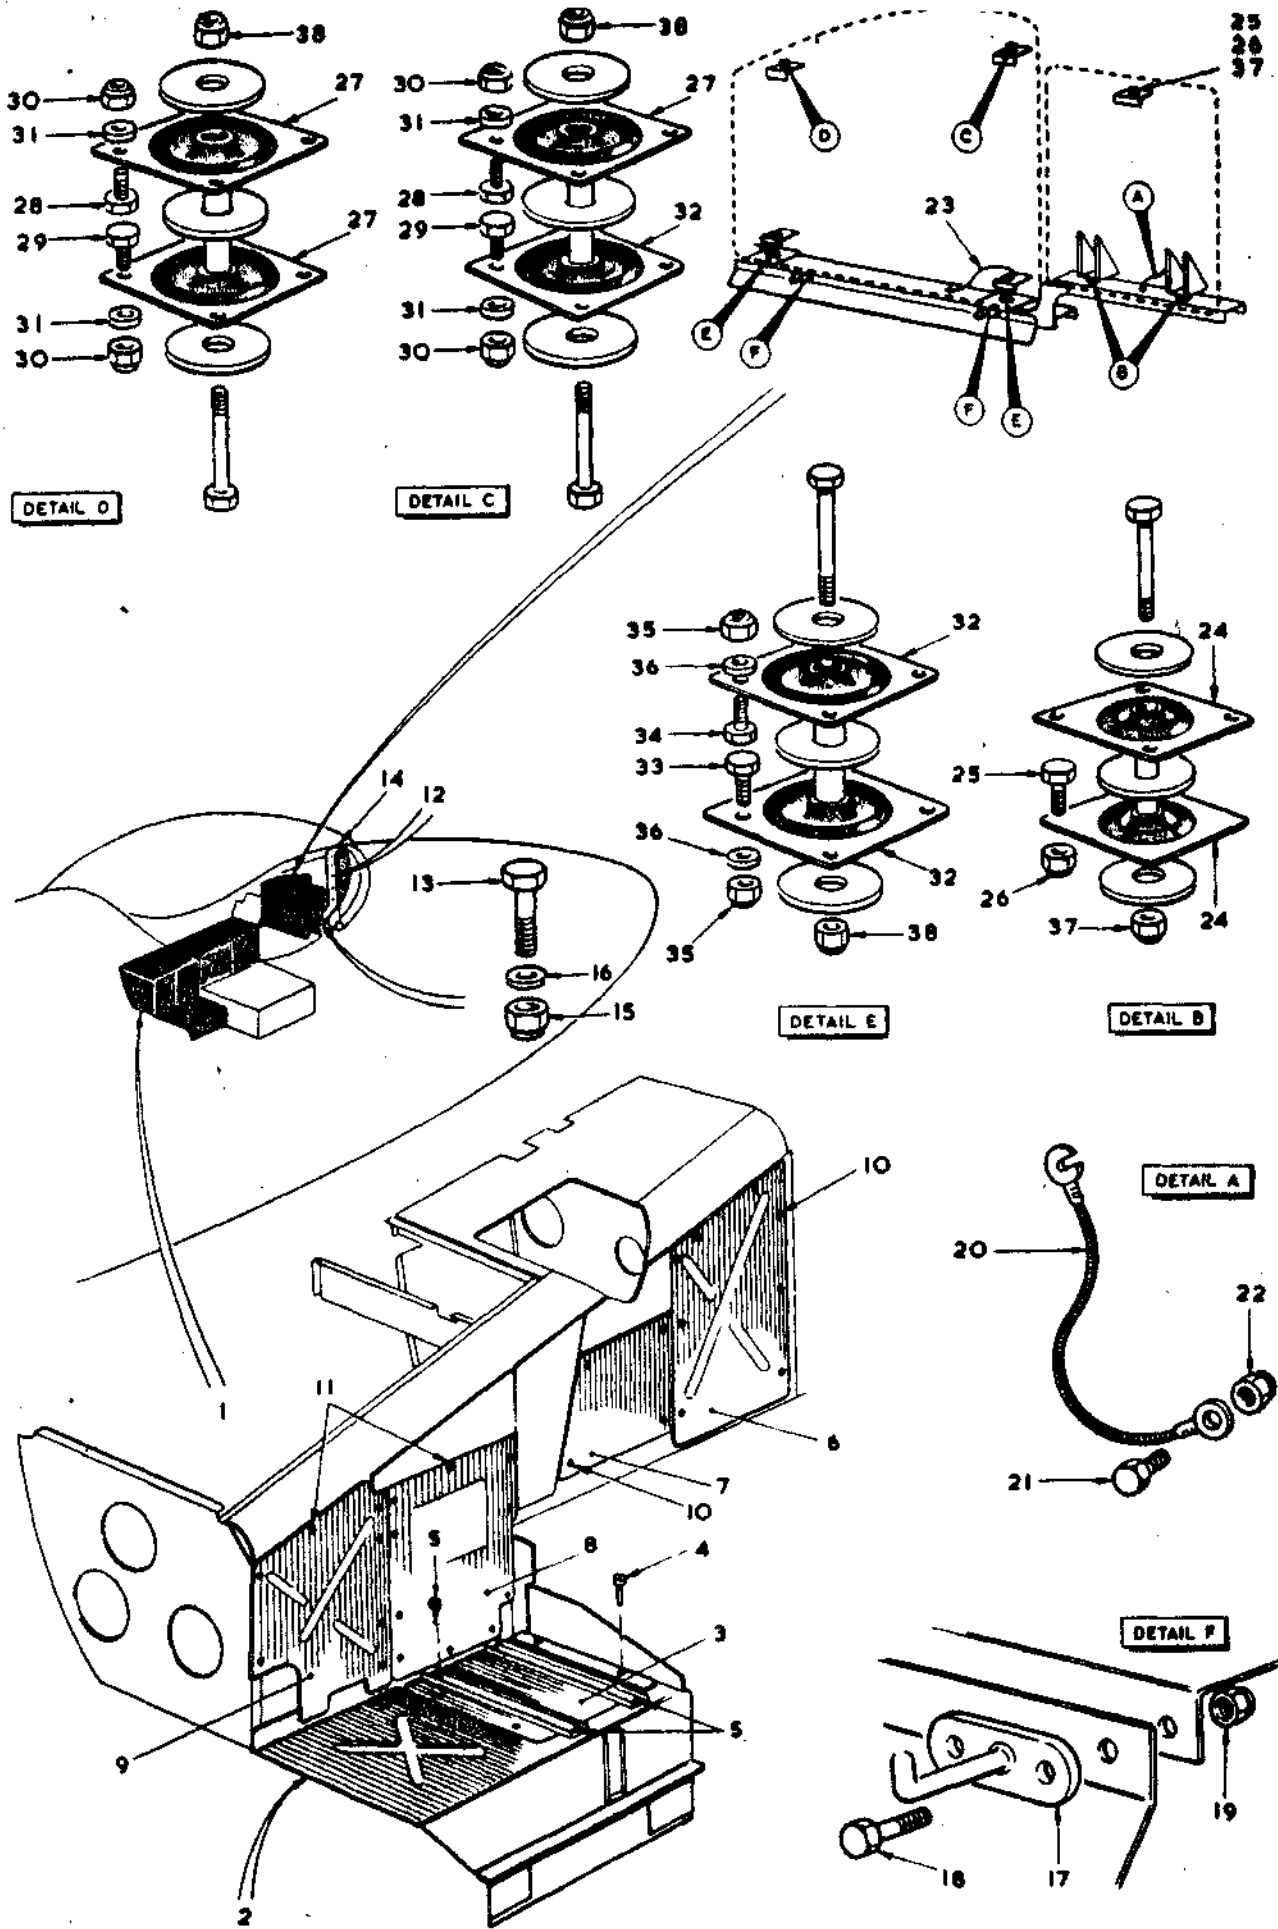


FIG.17 PRESSURE CABIN EQUIPMENT

CODE A

SECT 6A

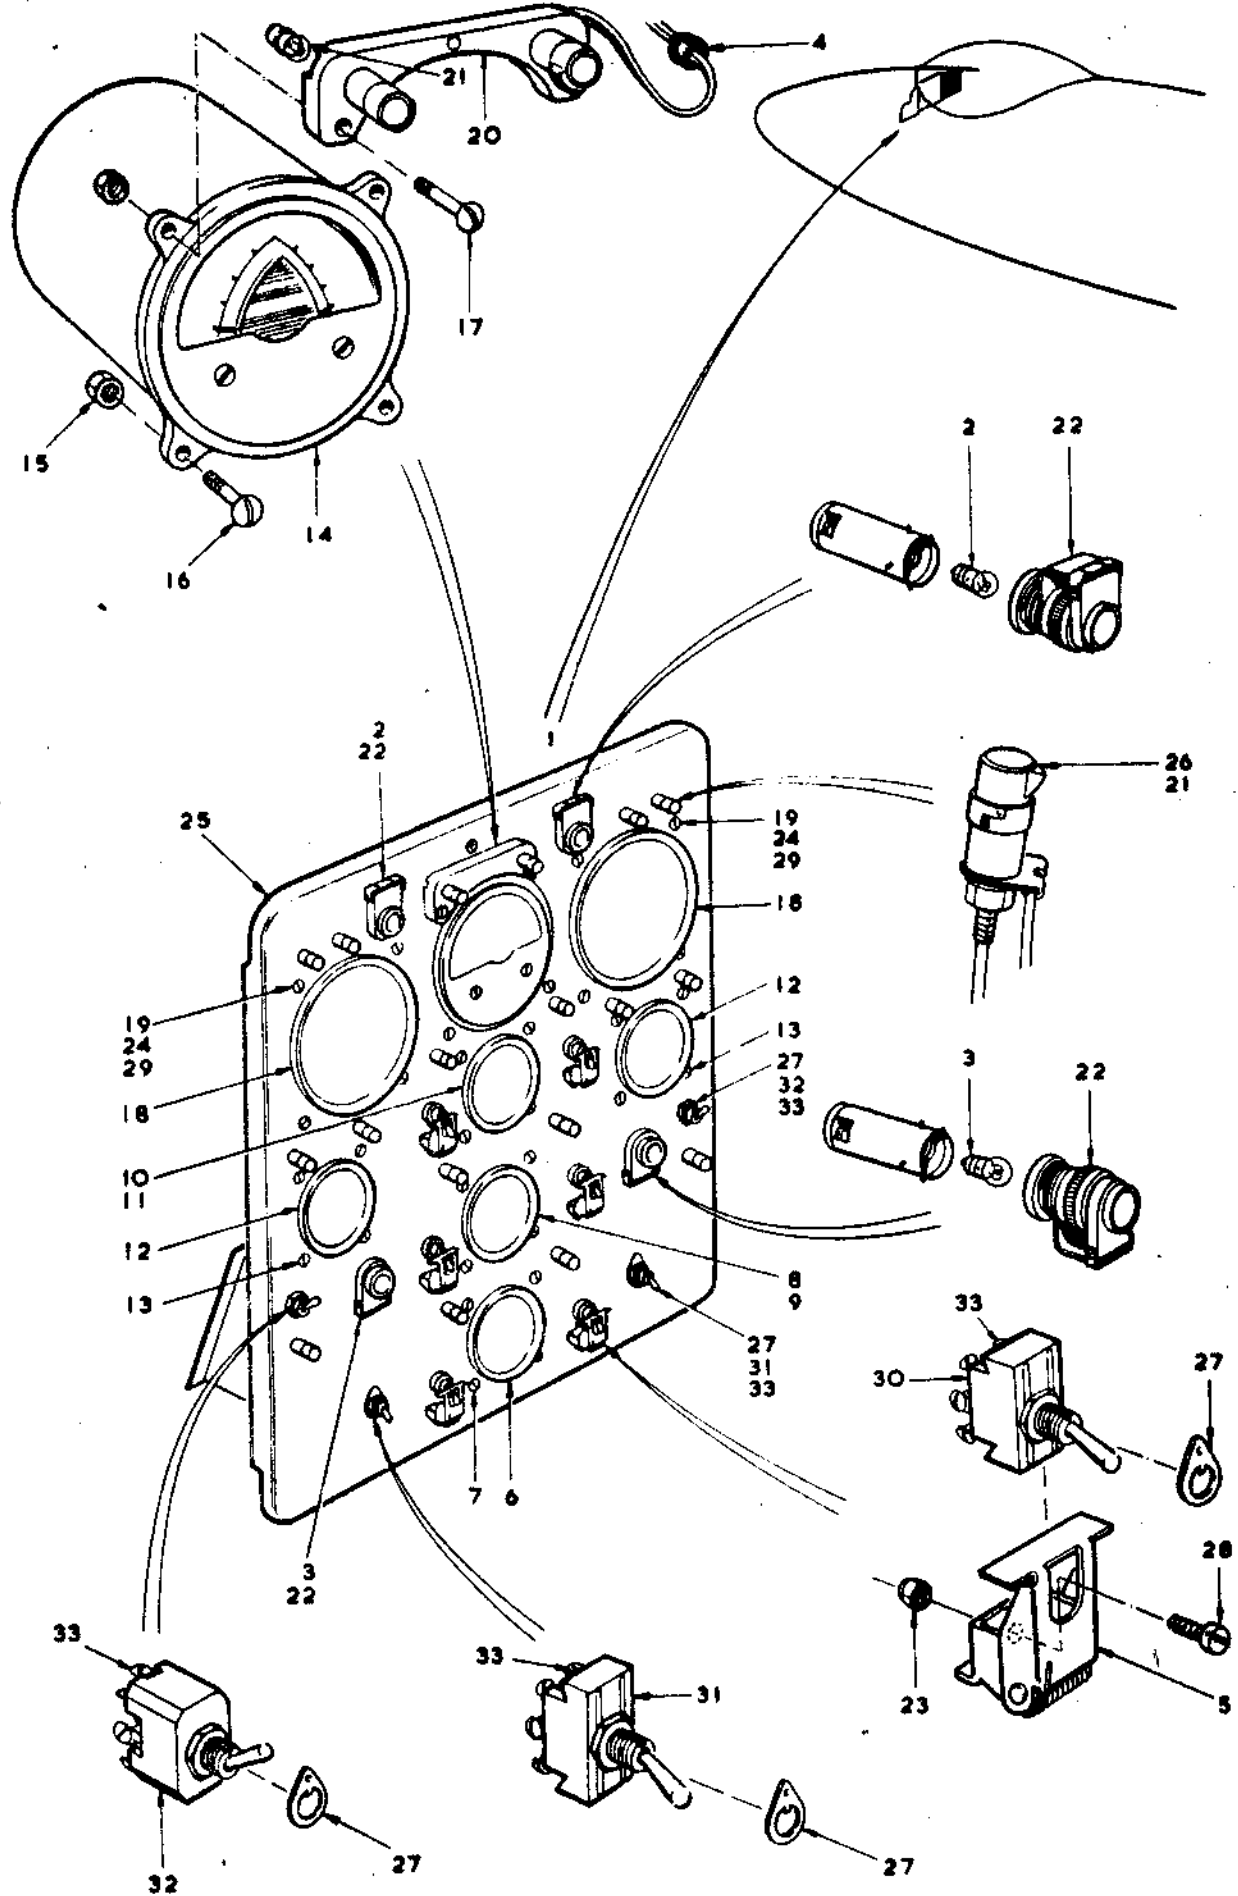


FIG.18 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

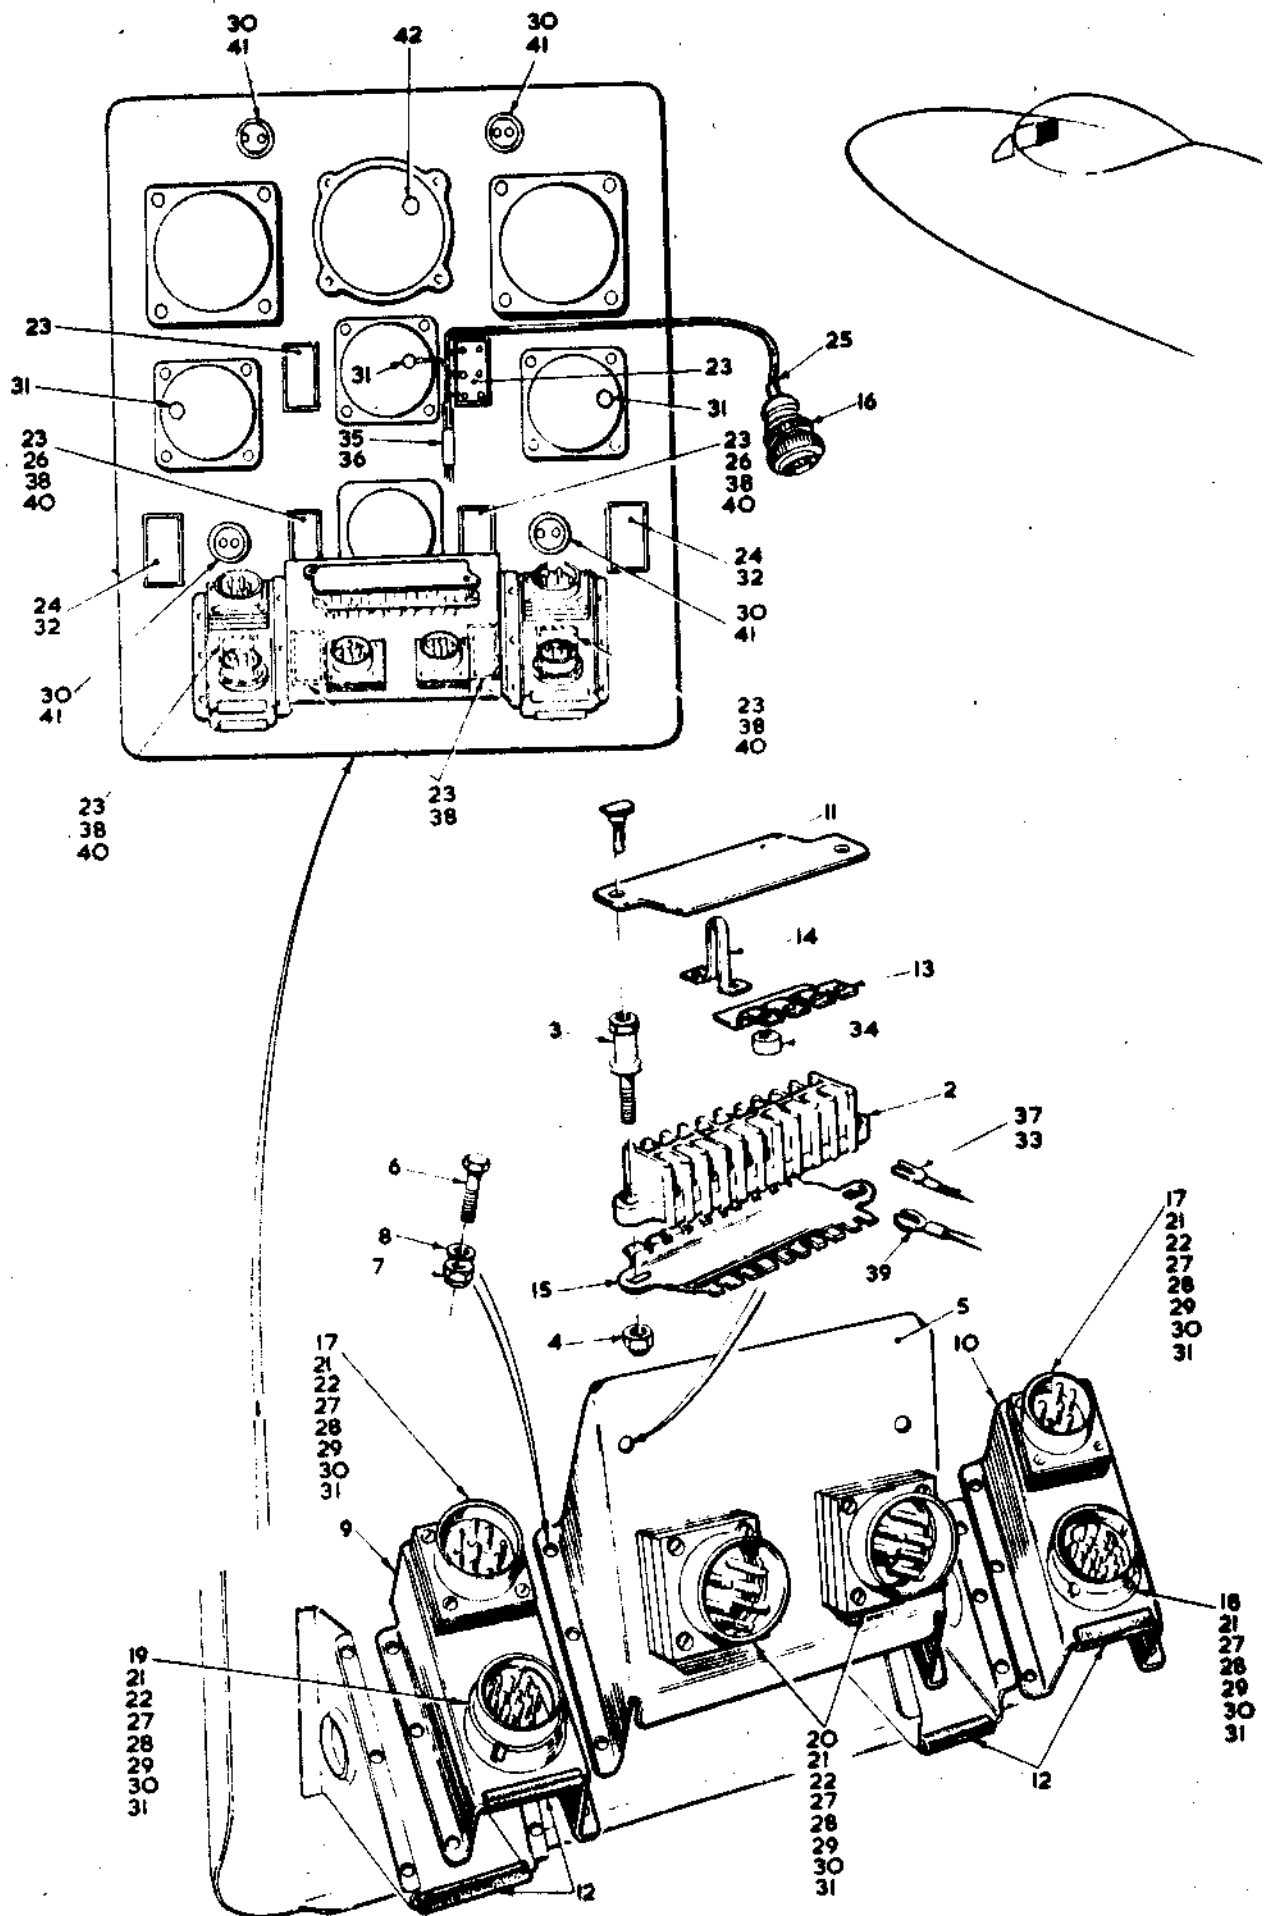


FIG.19 PRESSURE CABIN EQUIPMENT

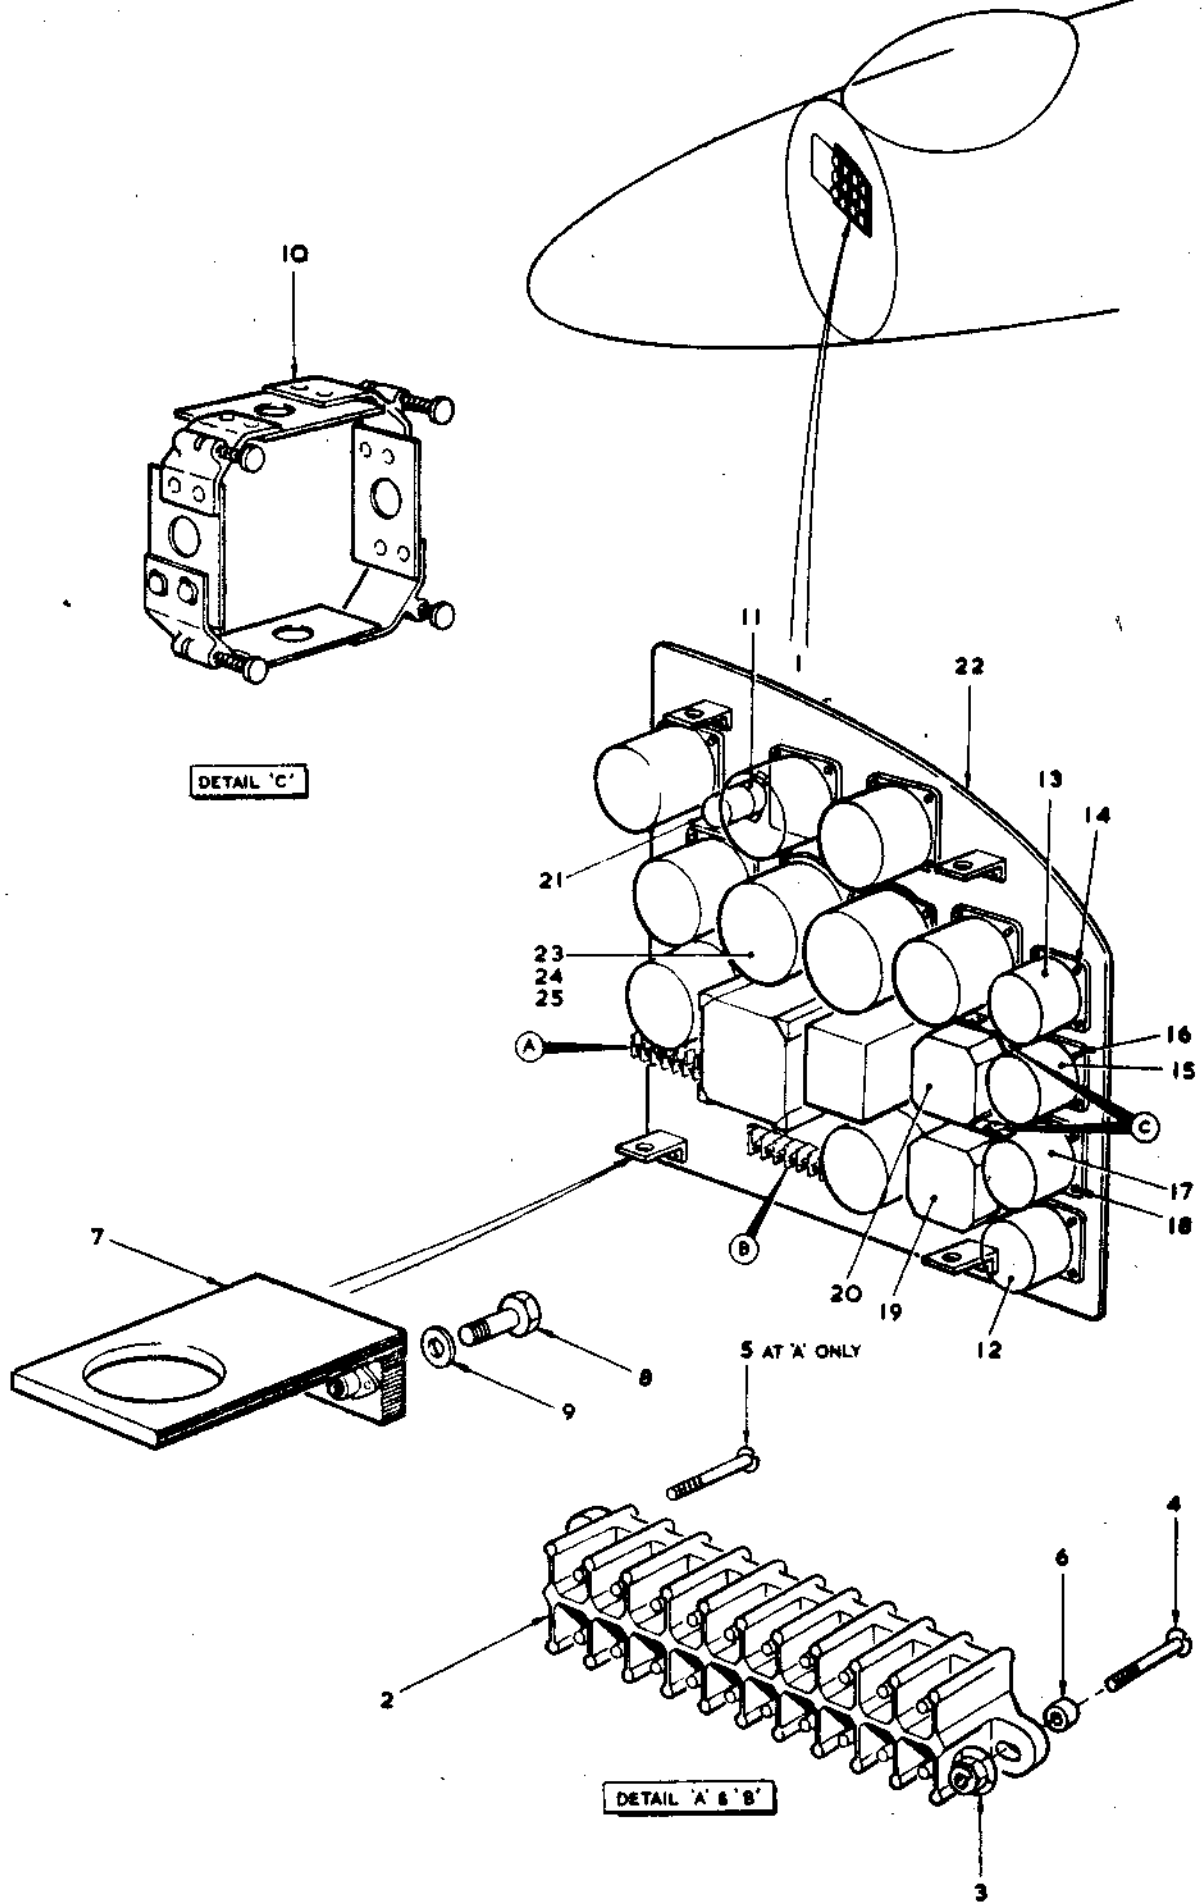


FIG. 20 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

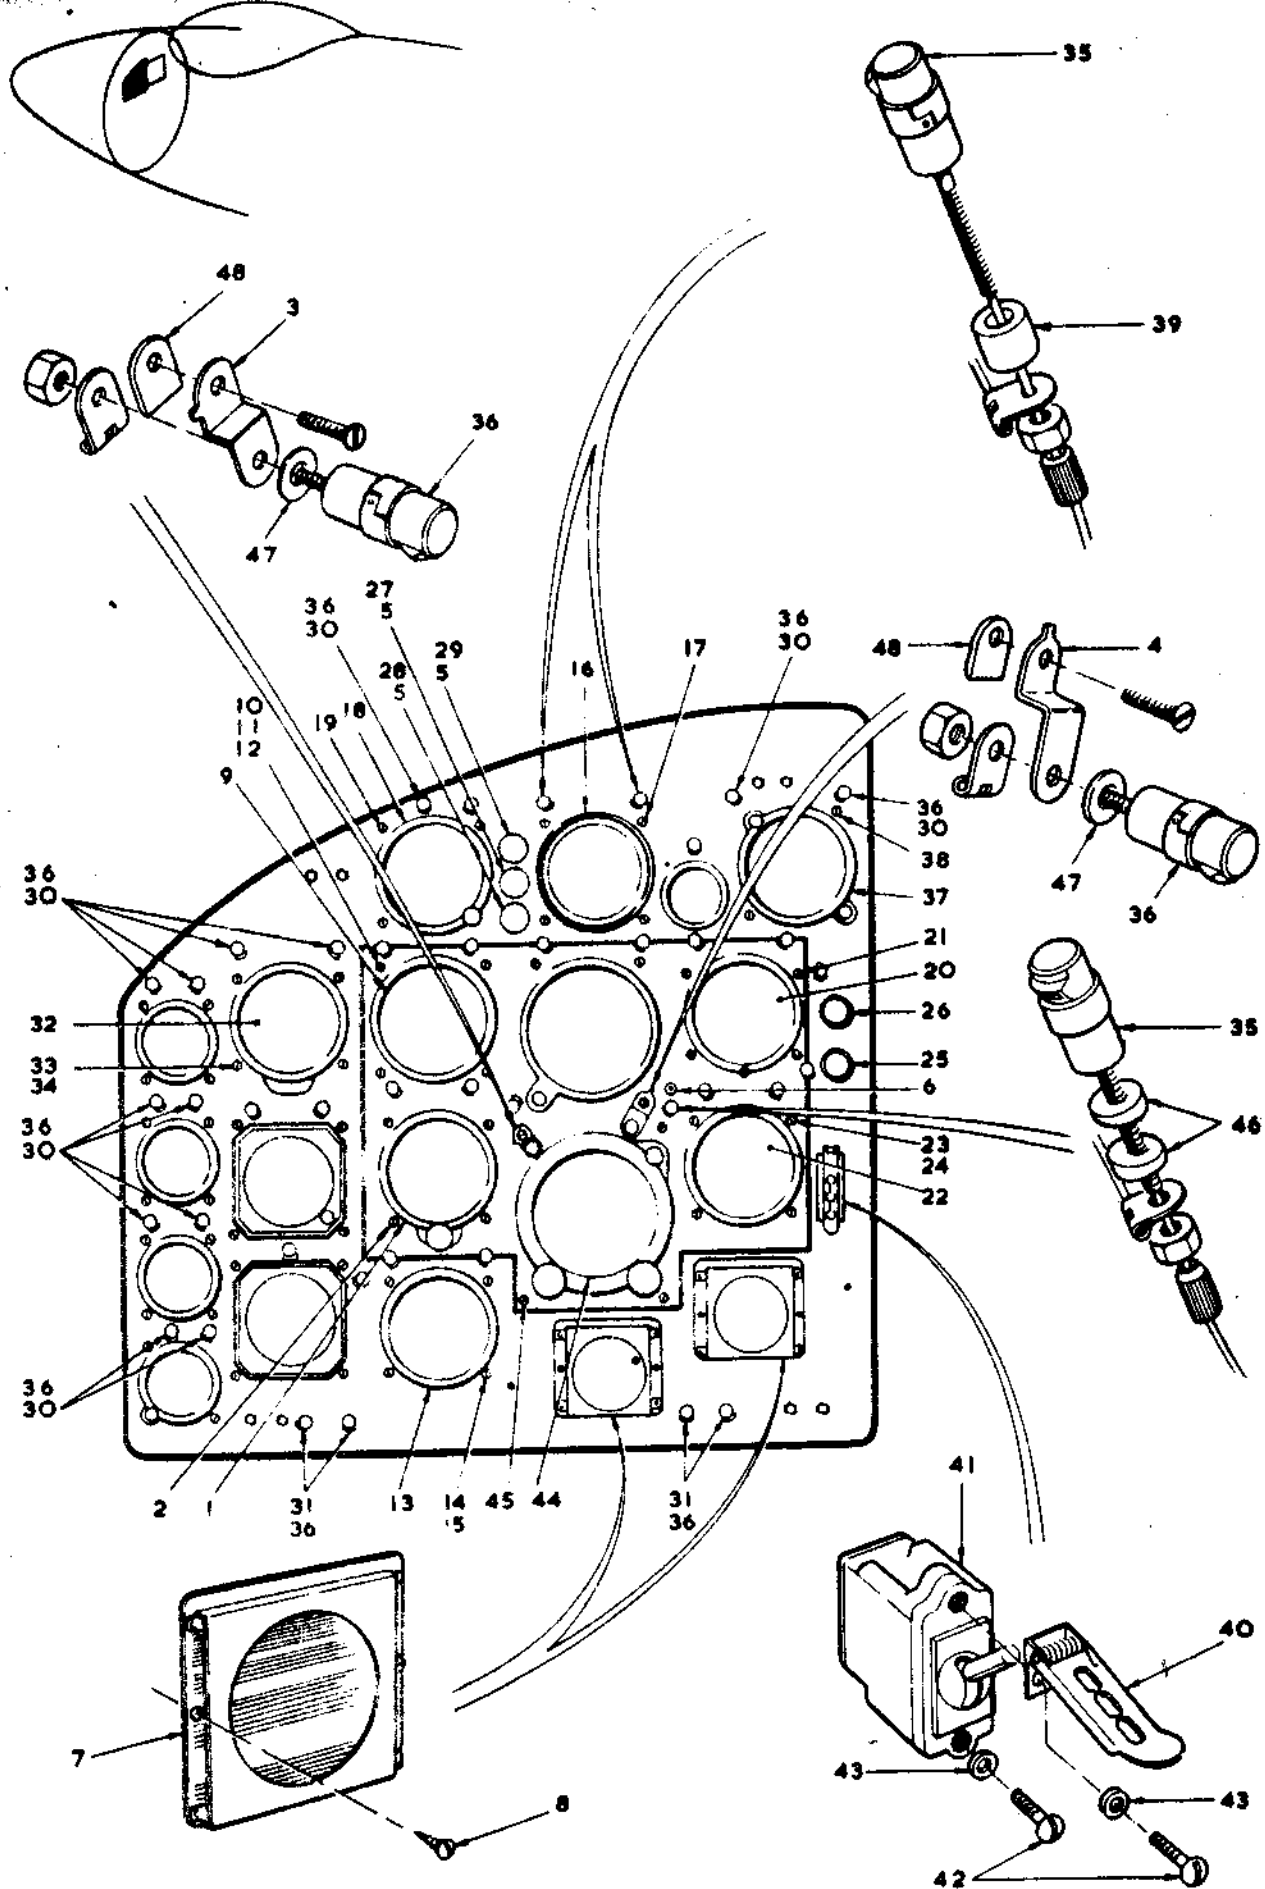


FIG. 21 PRESSURE CABIN EQUIPMENT

CODE A

SECT GA

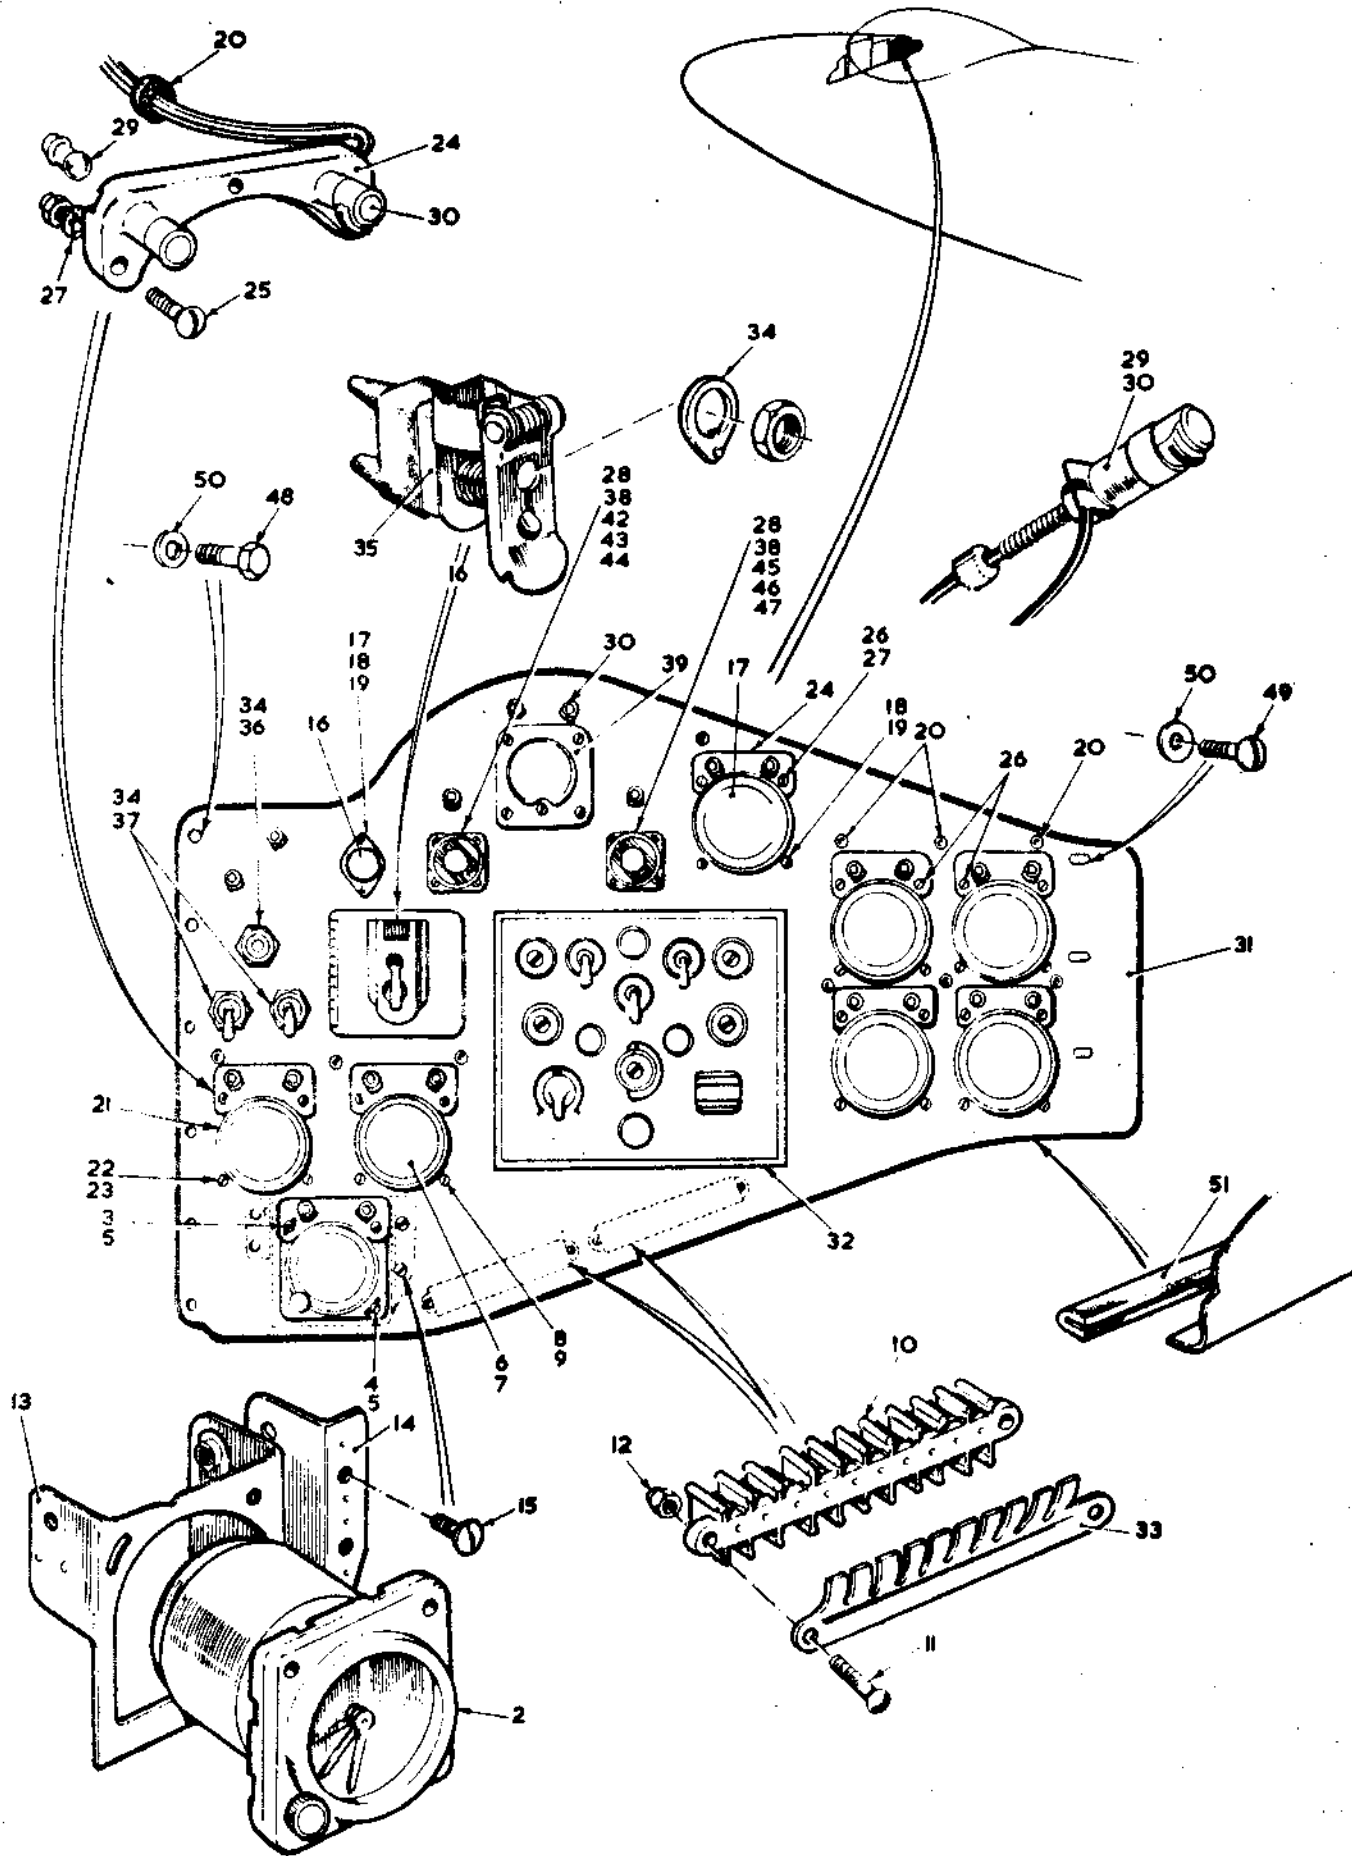


FIG.22 PRESSURE CABIN EQUIPMENT

CODE A

SECT GA

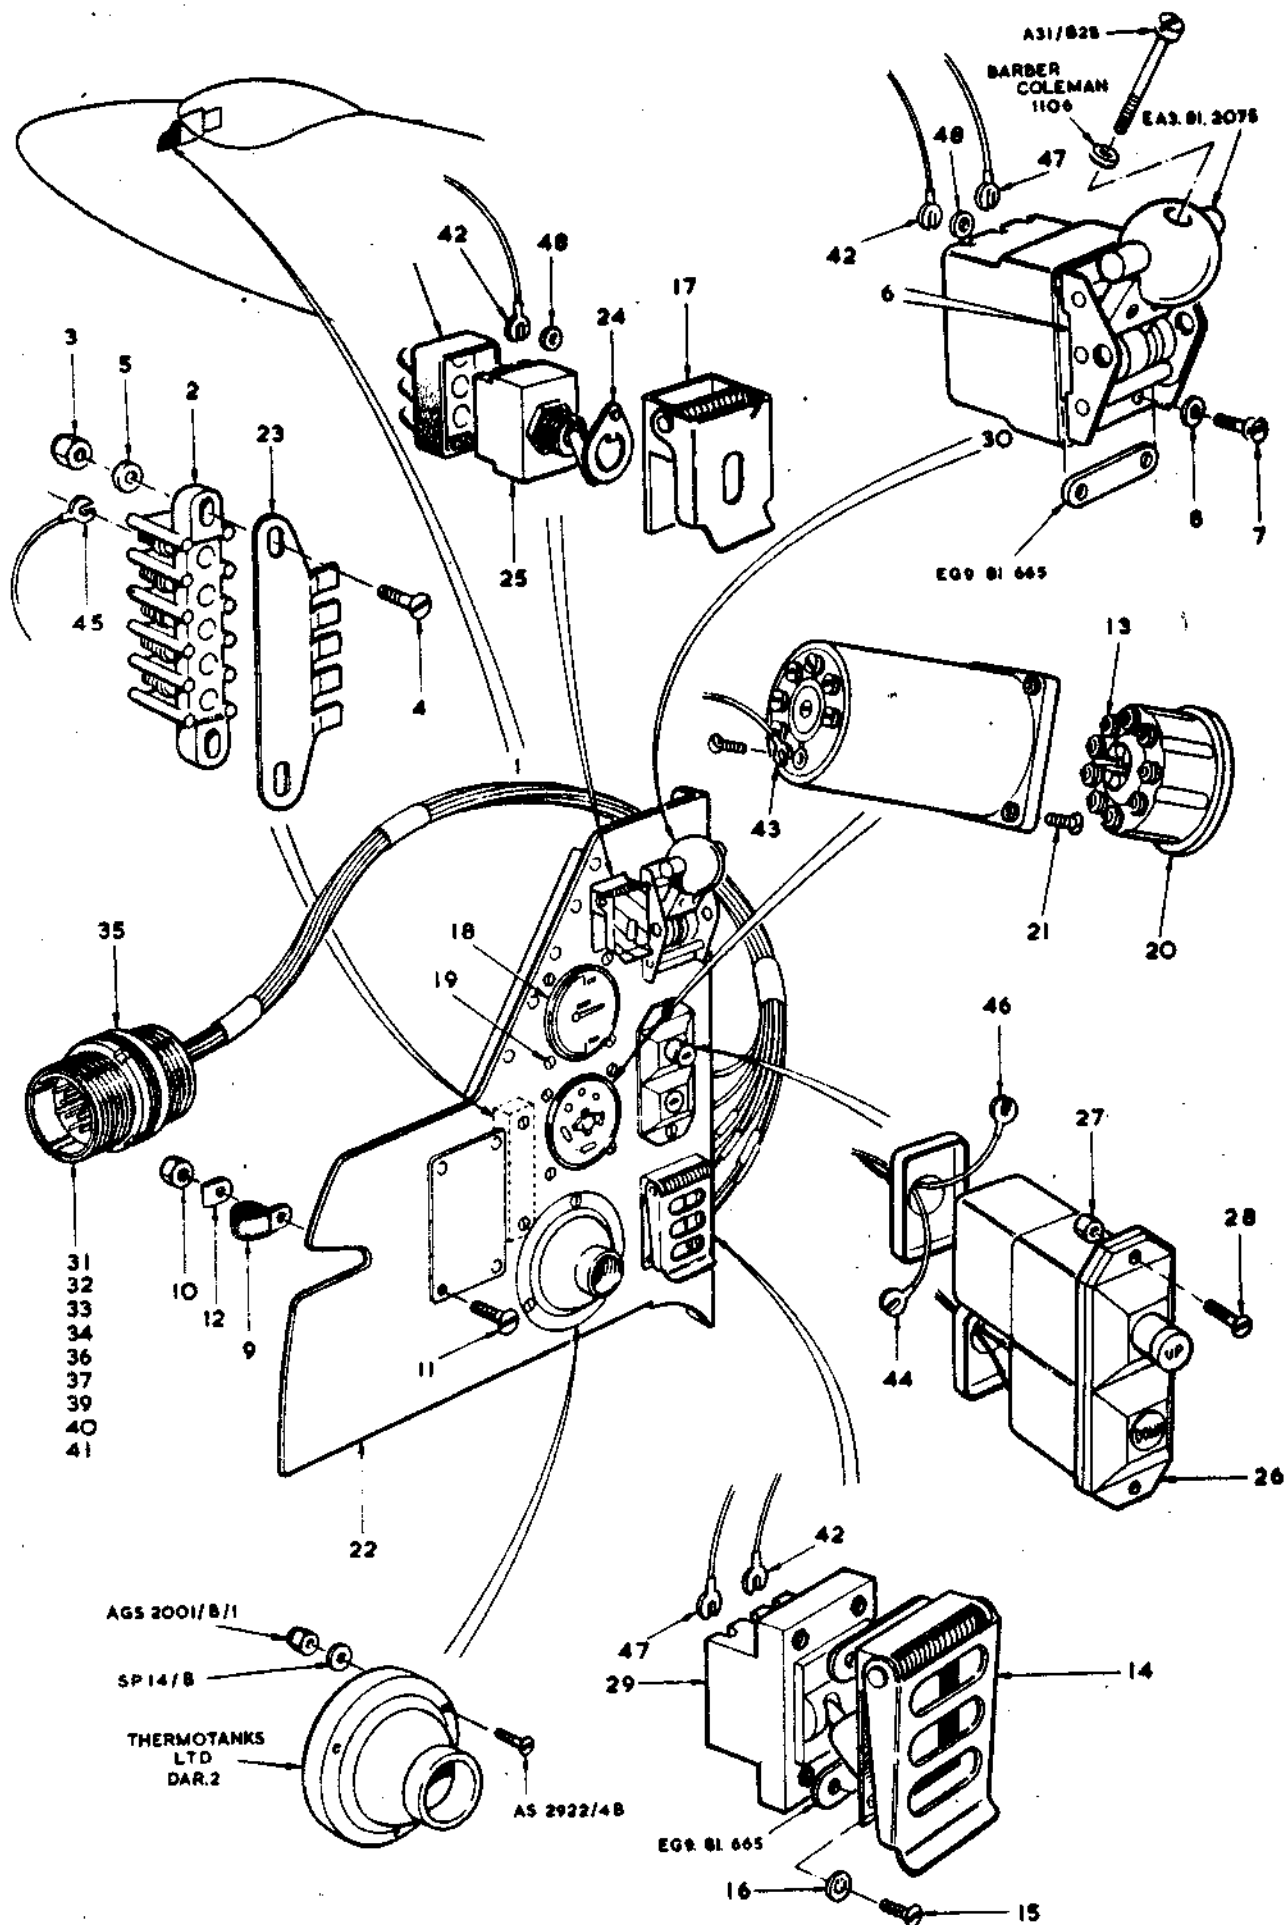


FIG. 23 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

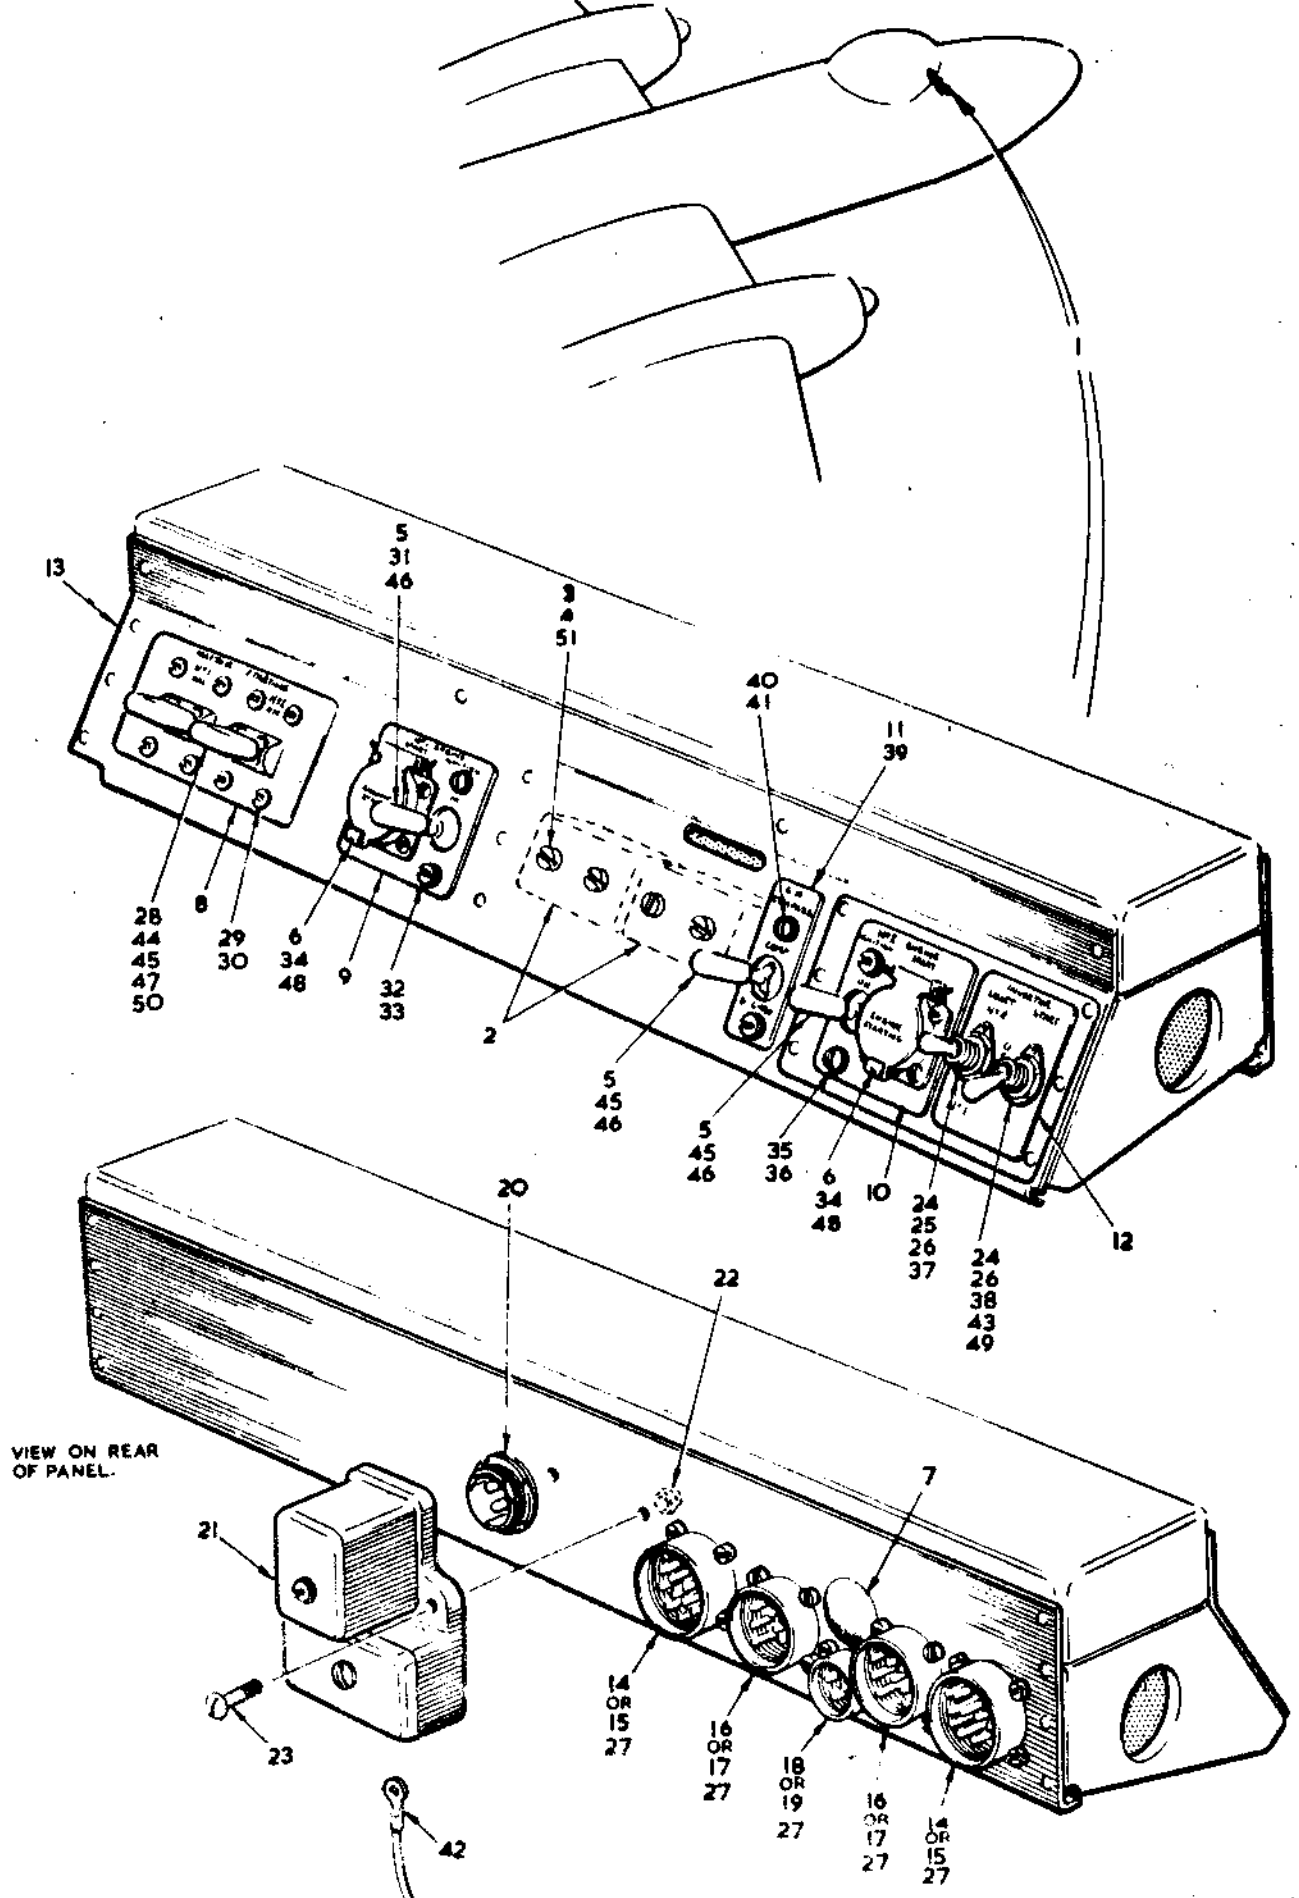


FIG.24 PRESSURE CABIN EQUIPMENT

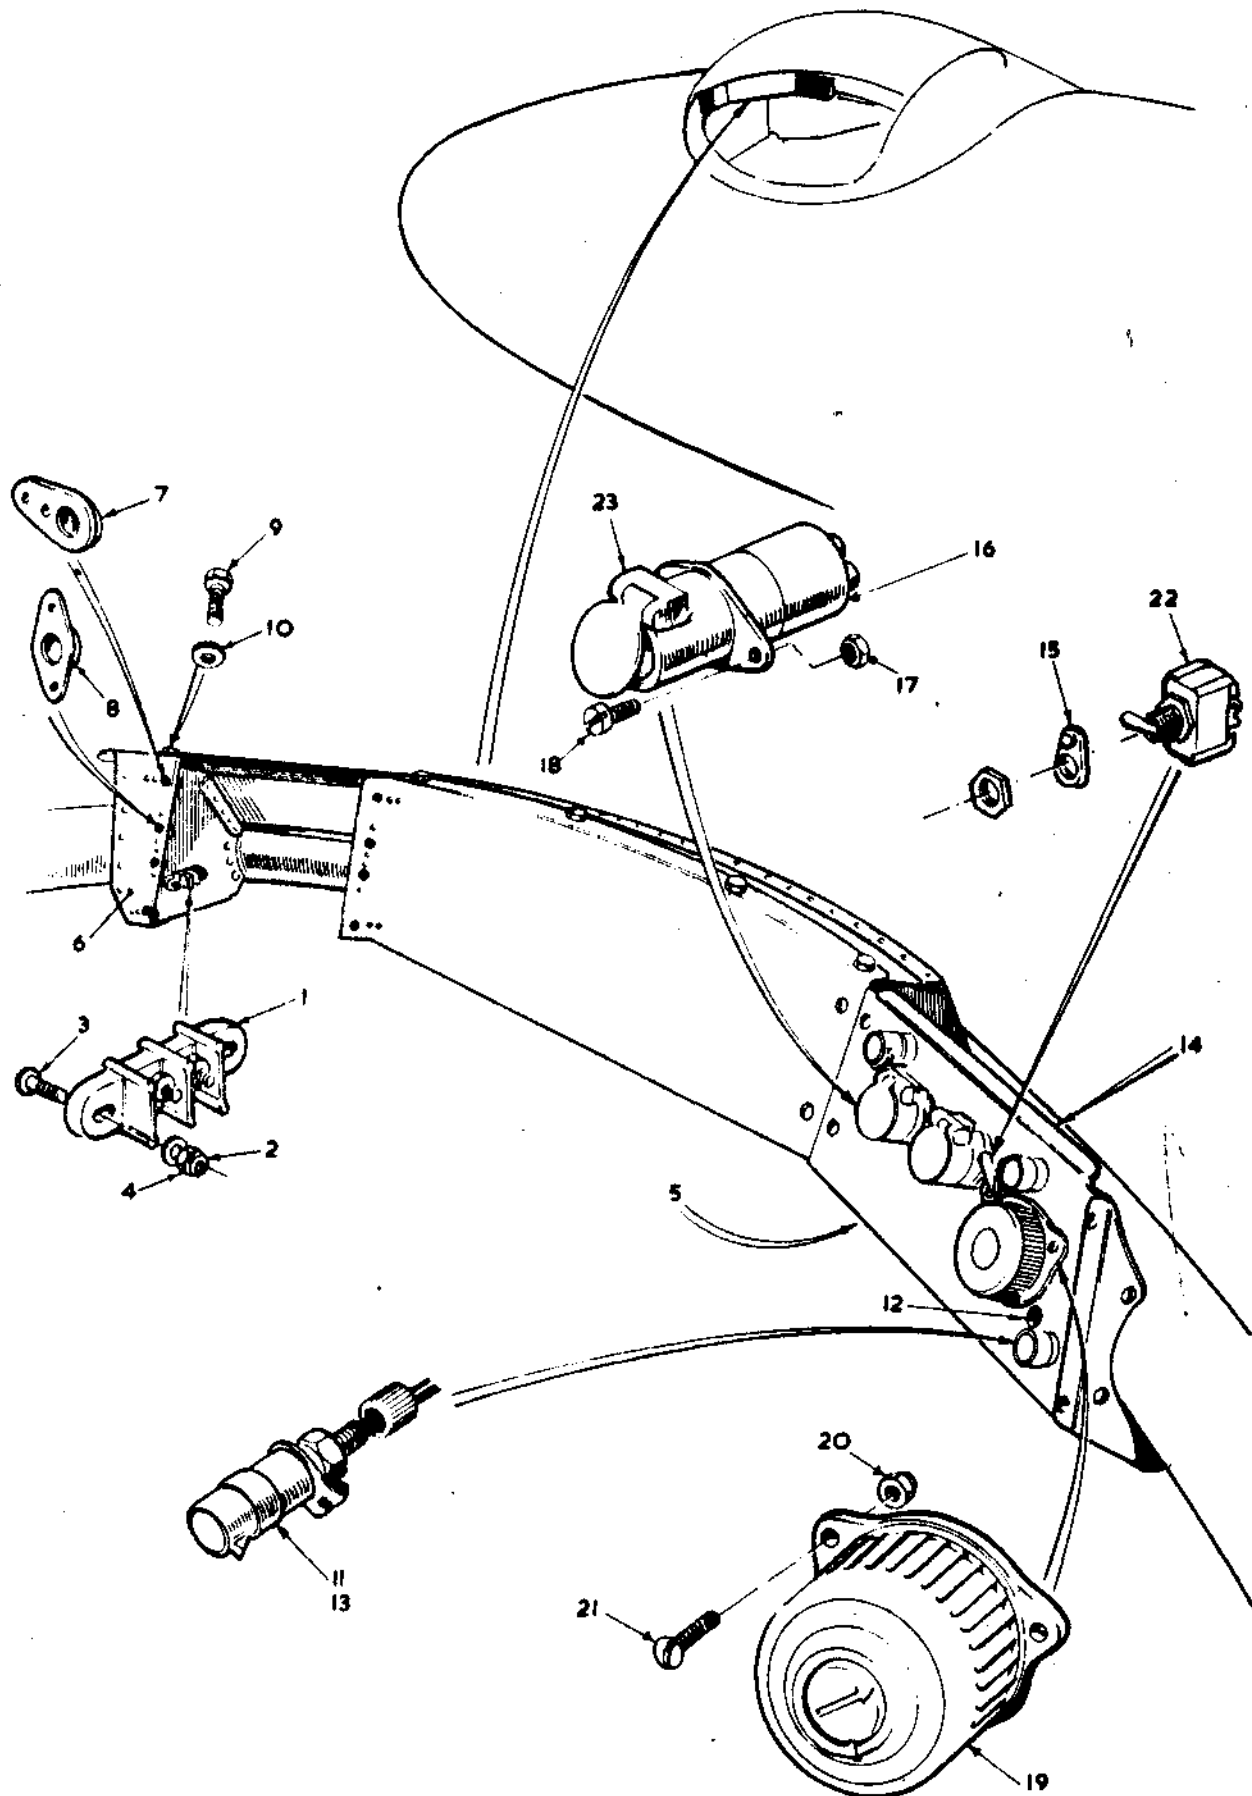


FIG.25 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

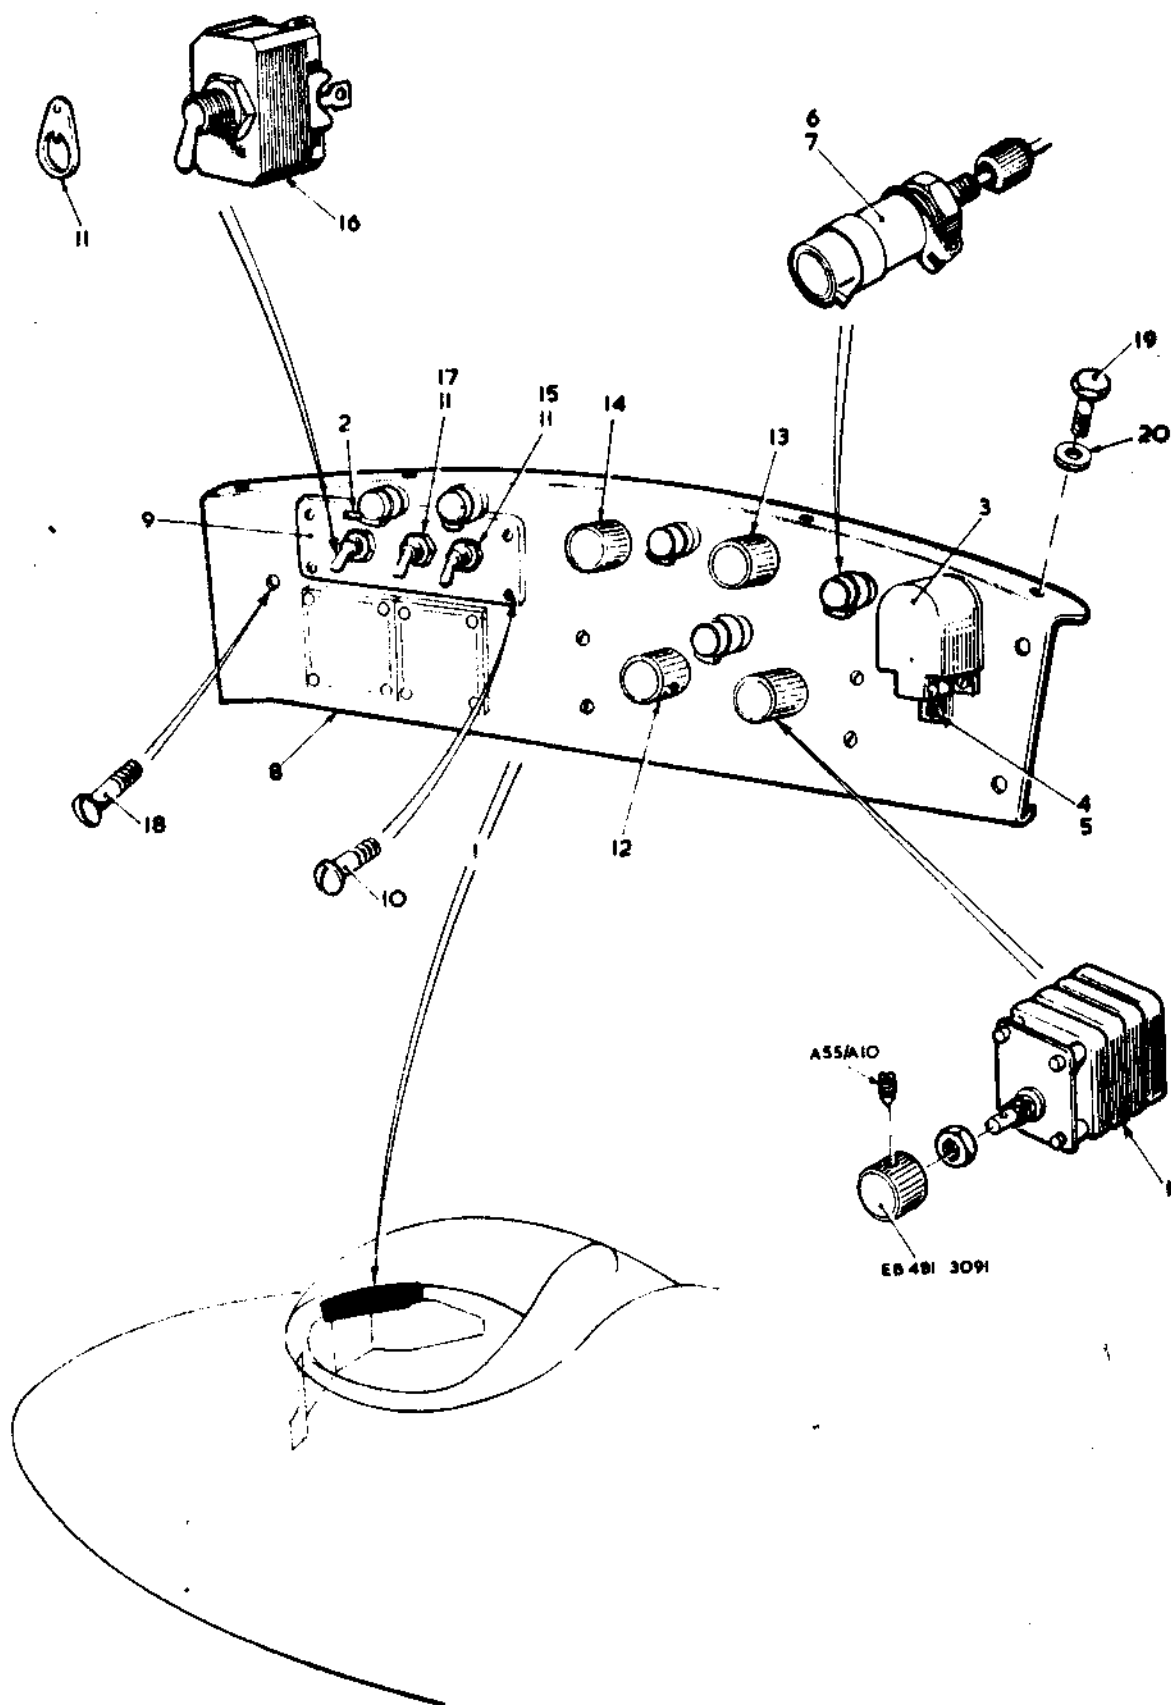


FIG.26 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

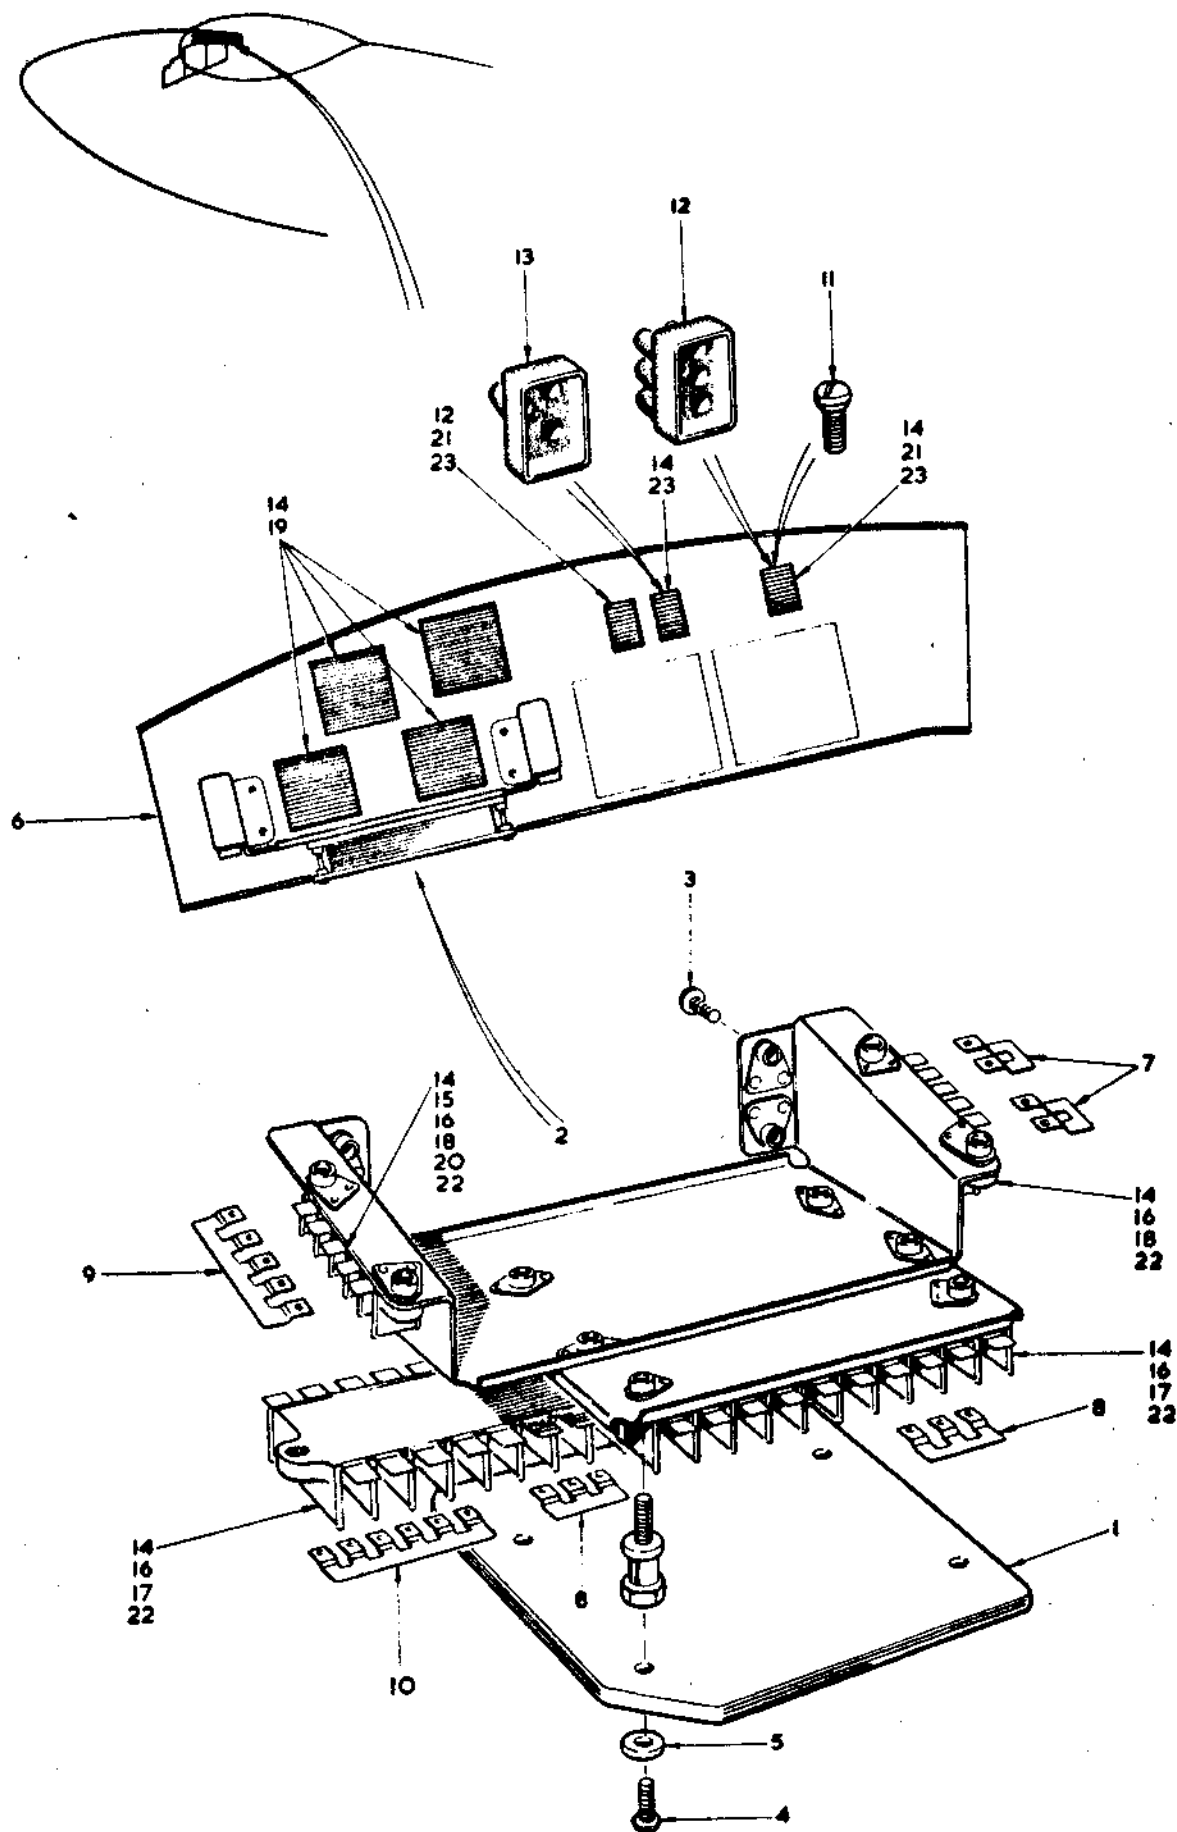


FIG.27 PRESSURE CABIN EQUIPMENT

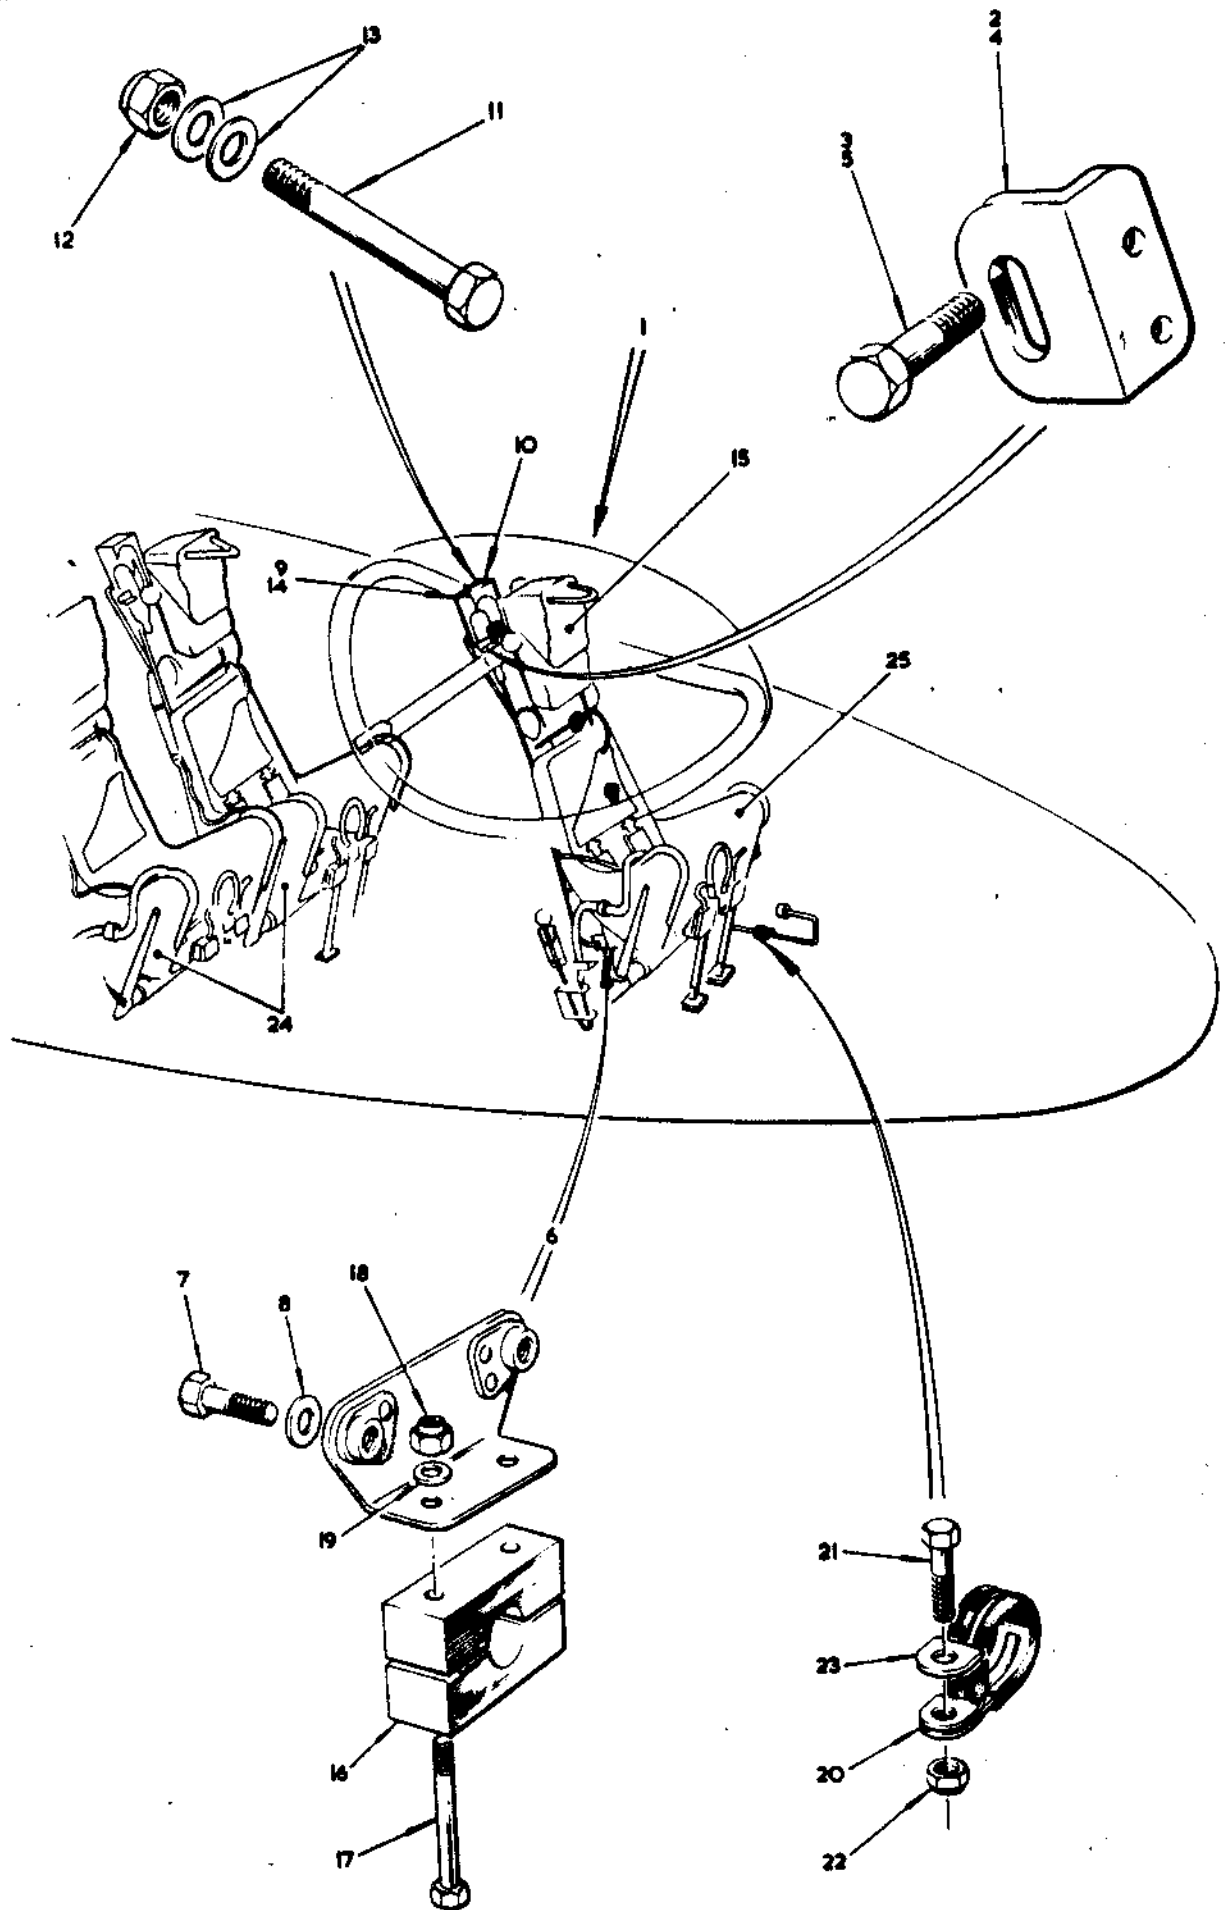


FIG.28 PRESSURE CABIN EQUIPMENT

CODE A

SECT 6A

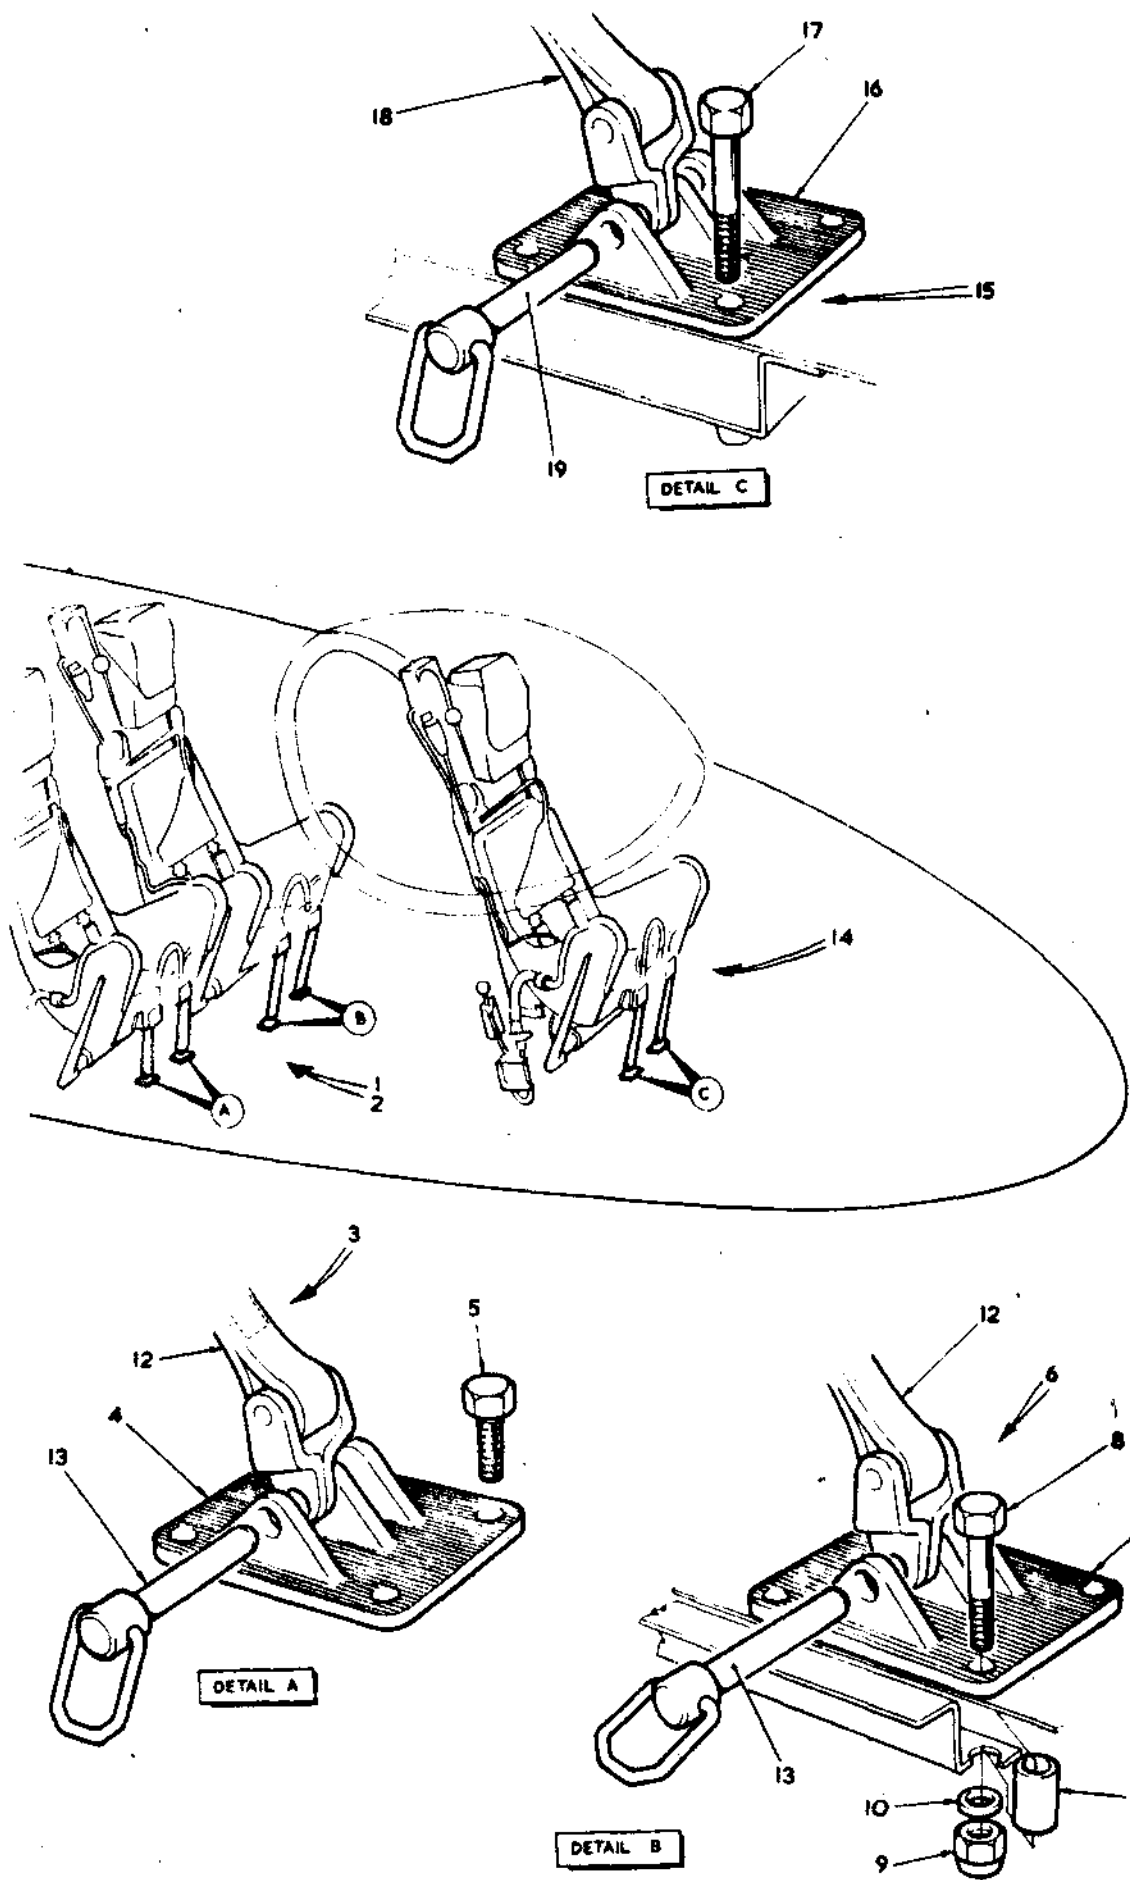


FIG. 29 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

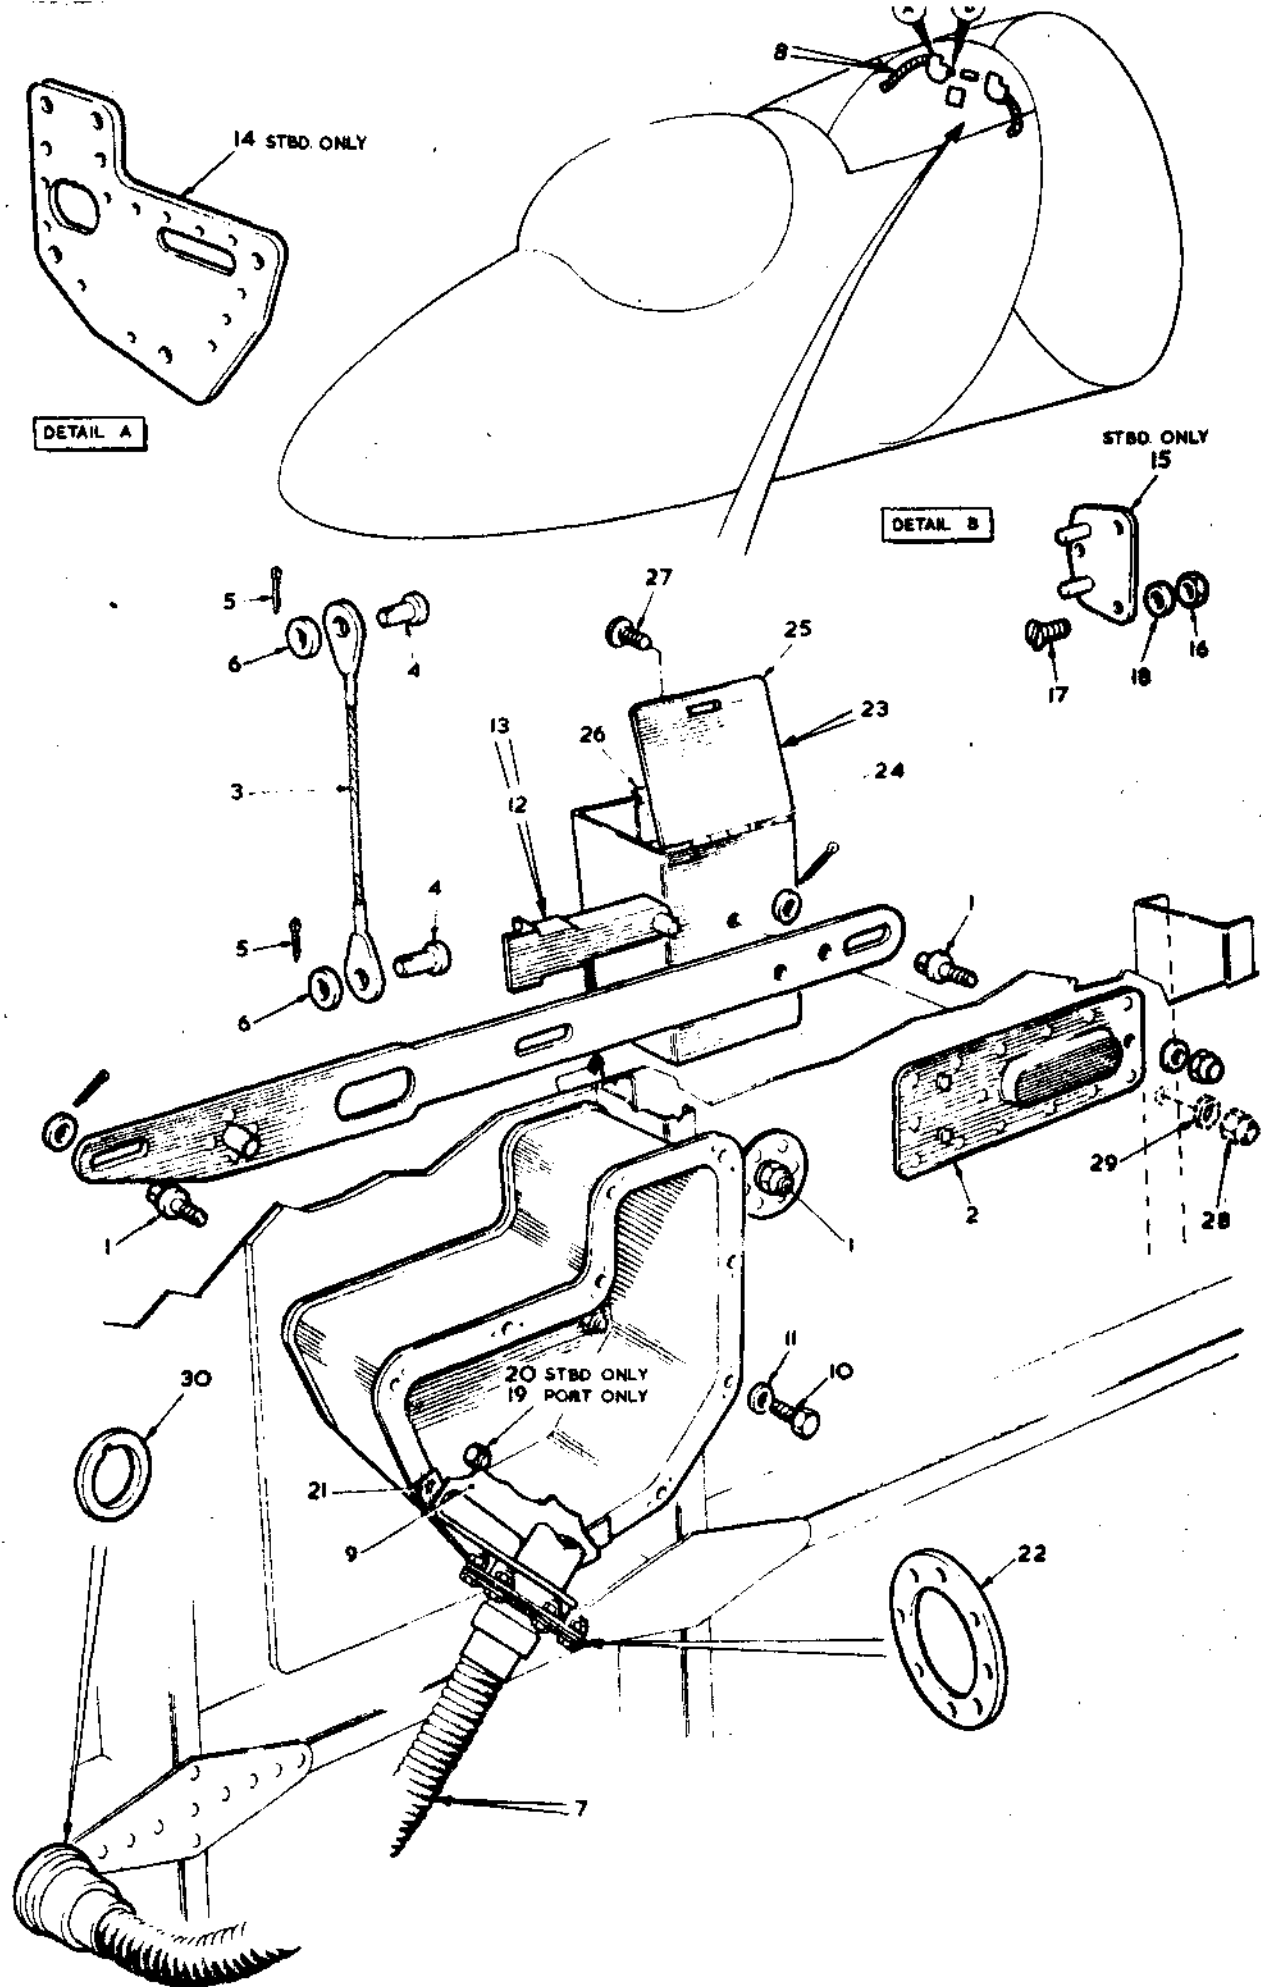


FIG. 30 PRESSURE CABIN EQUIPMENT

CODE A

SECT GA

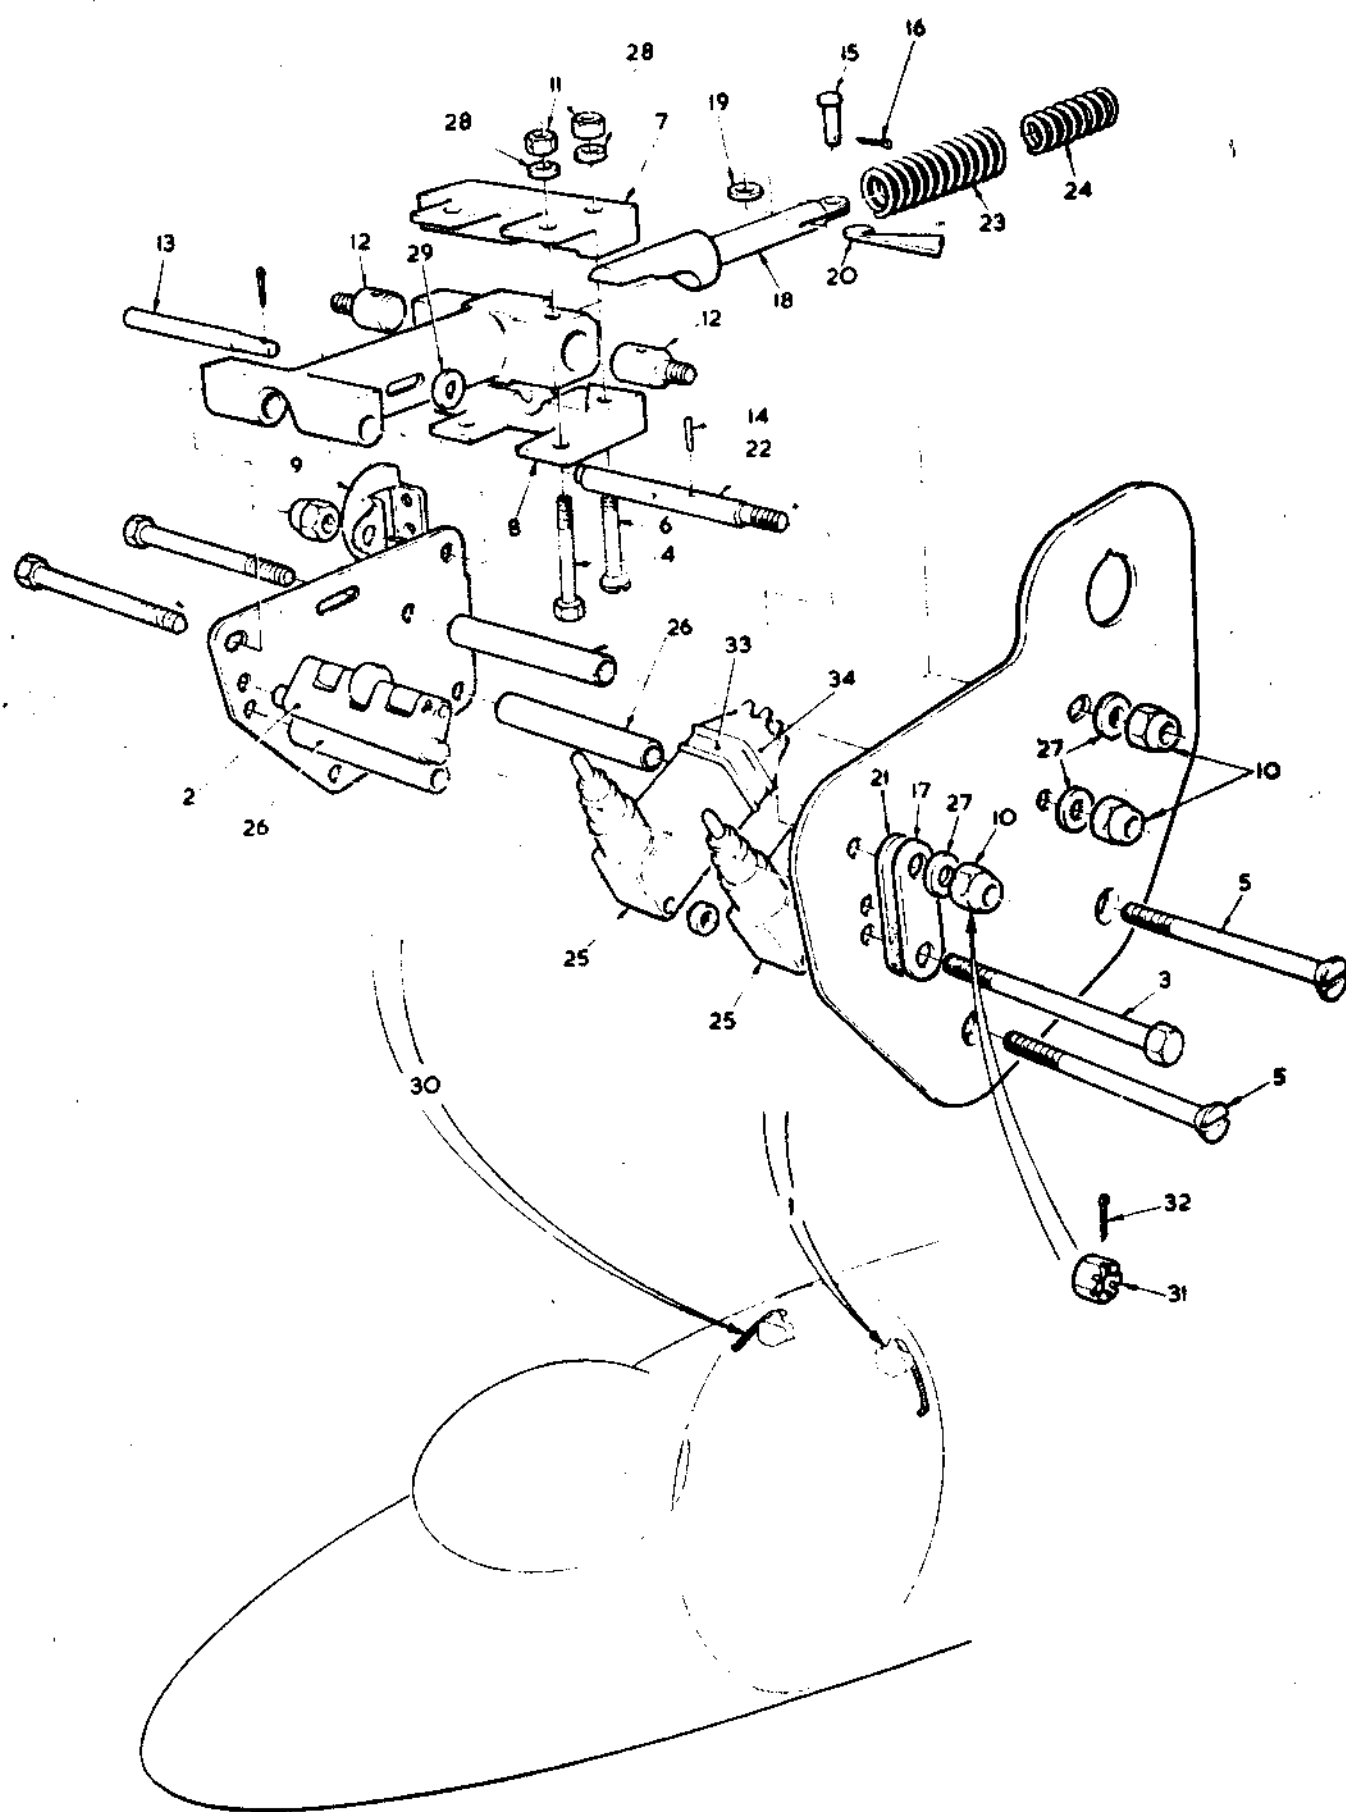


FIG. 31 PRESSURE CABIN EQUIPMENT

CODE A

SECT GA

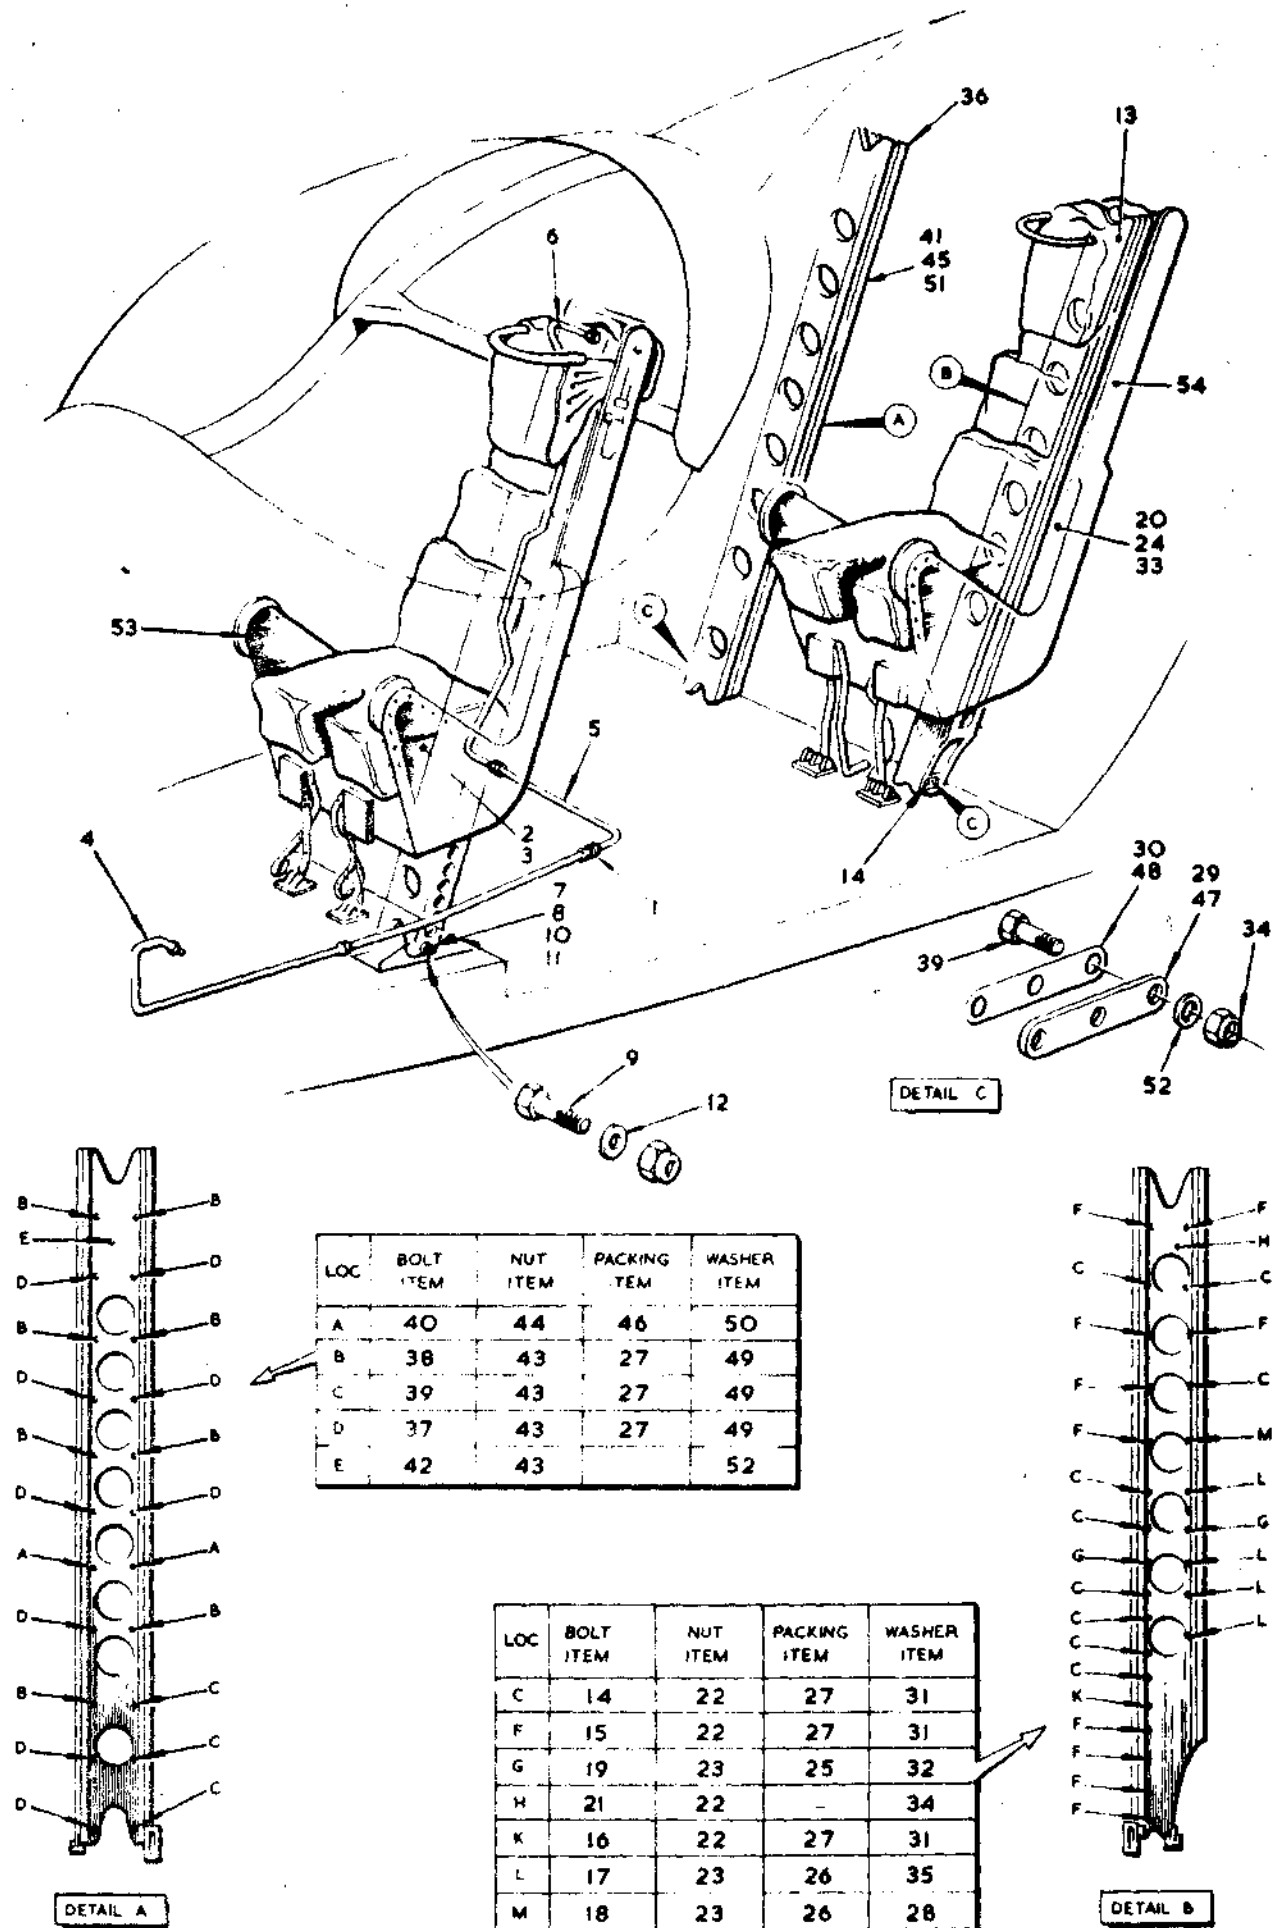


FIG. 32 PRESSURE CABIN EQUIPMENT

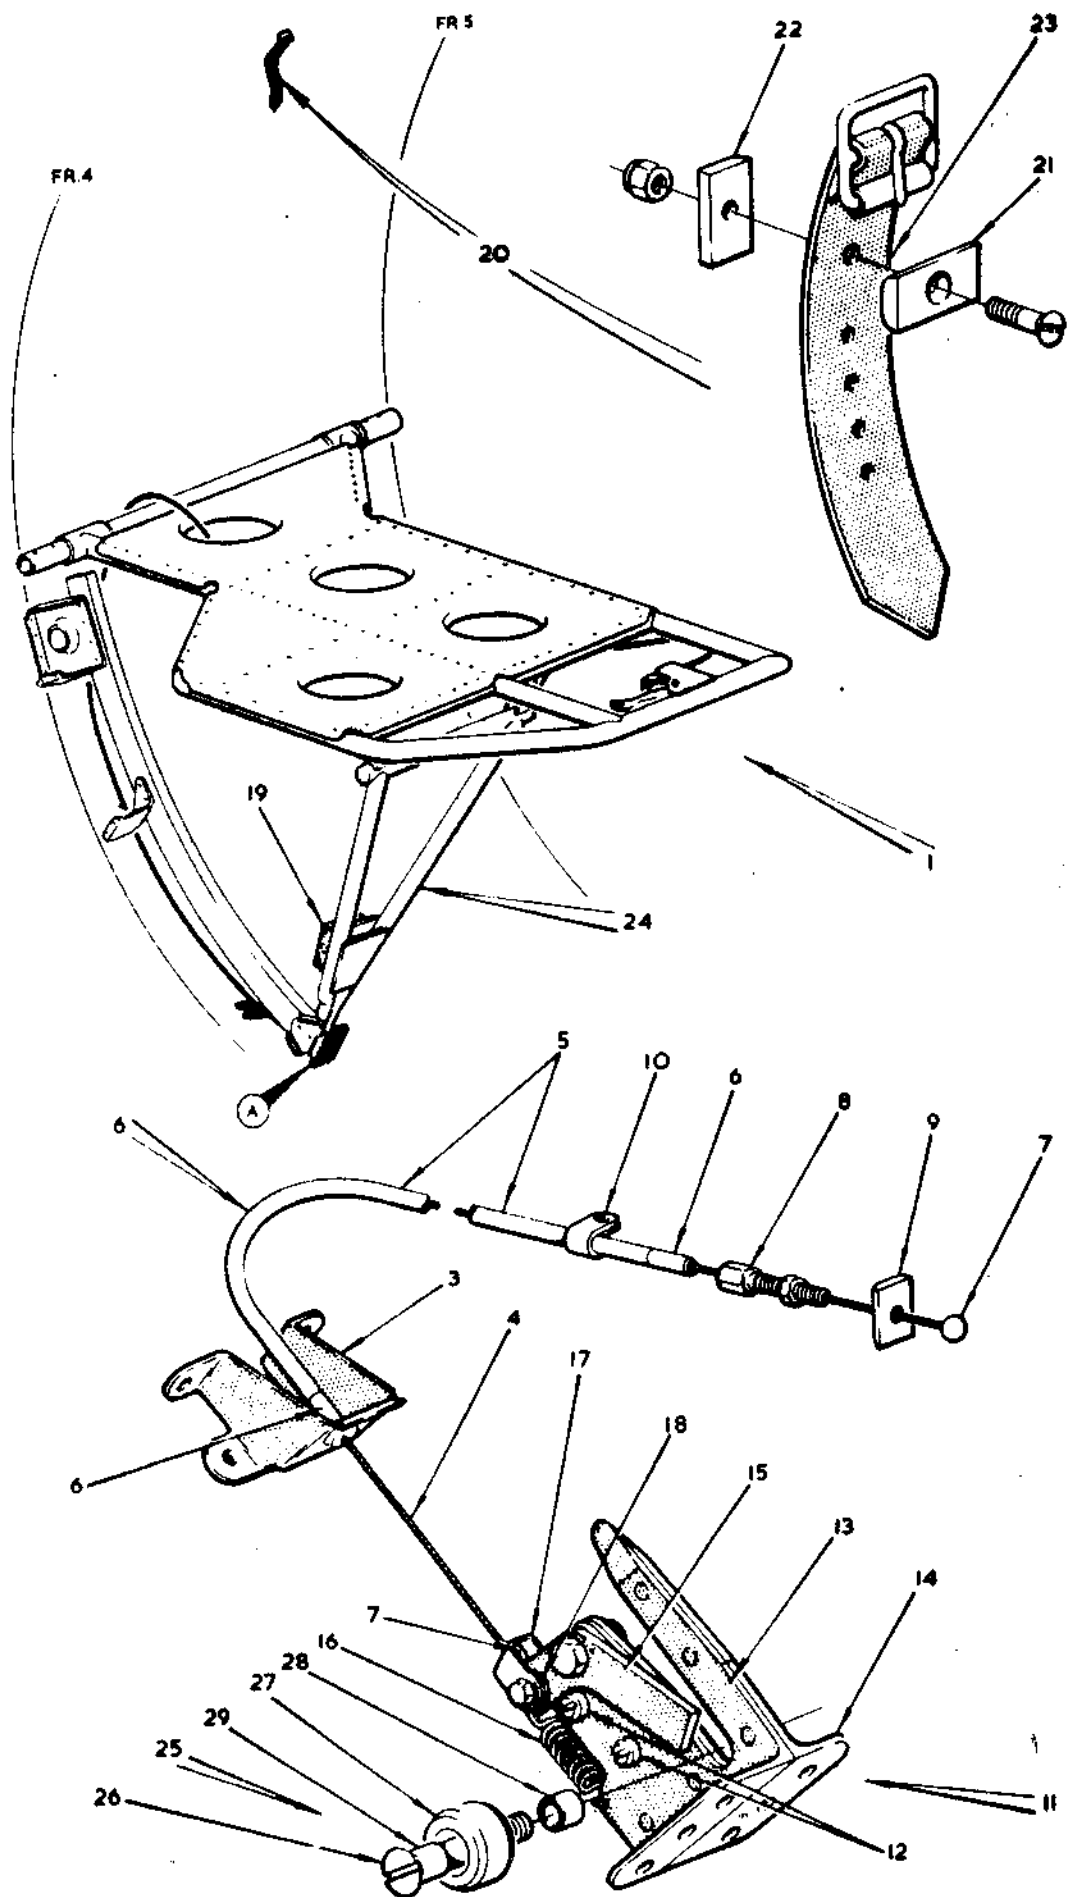


FIG.33 PRESSURE CABIN EQUIPMENT

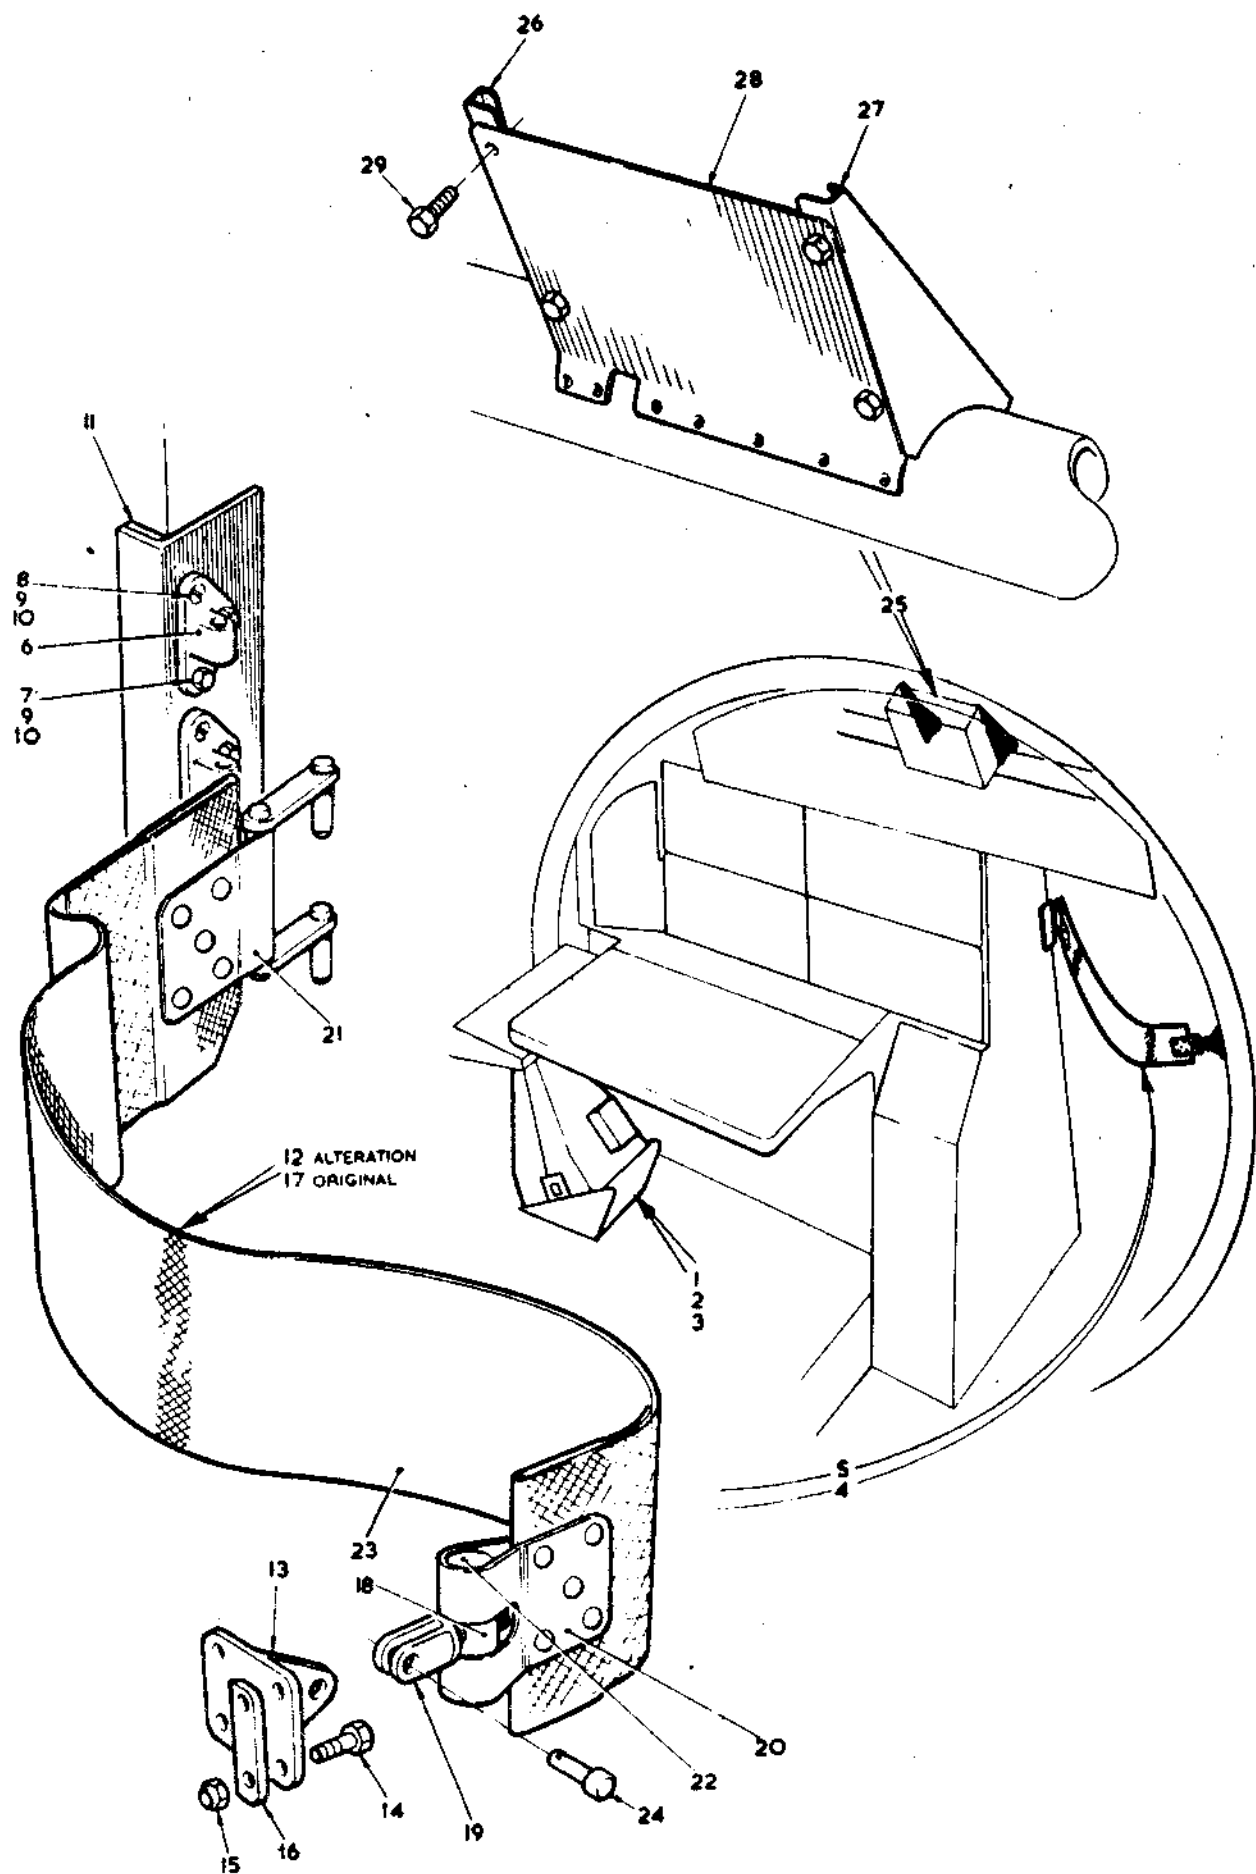


FIG. 34 PRESSURE CABIN EQUIPMENT

CODE A

SECT GA

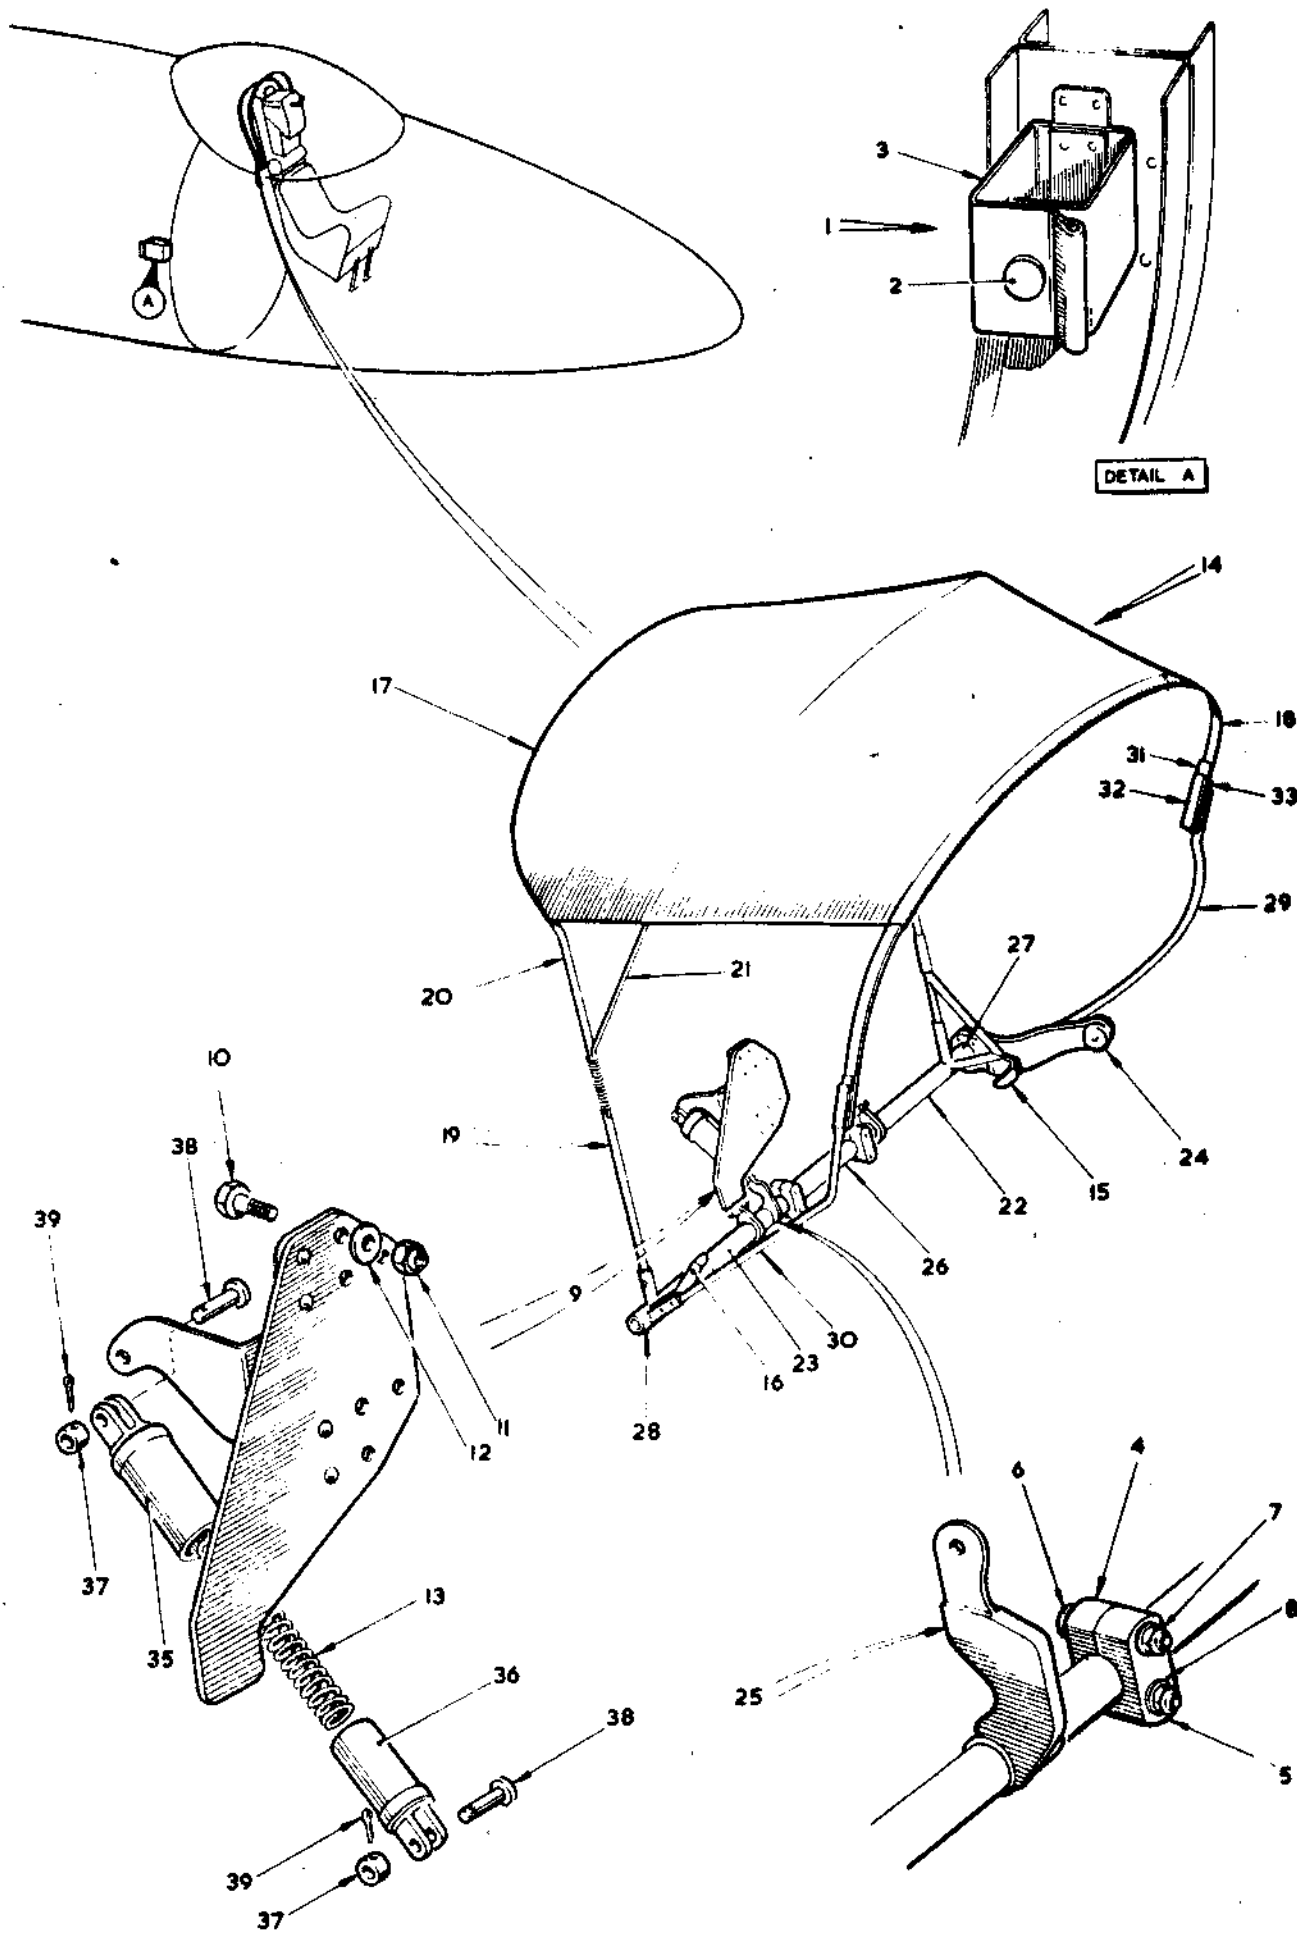


FIG. 35 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

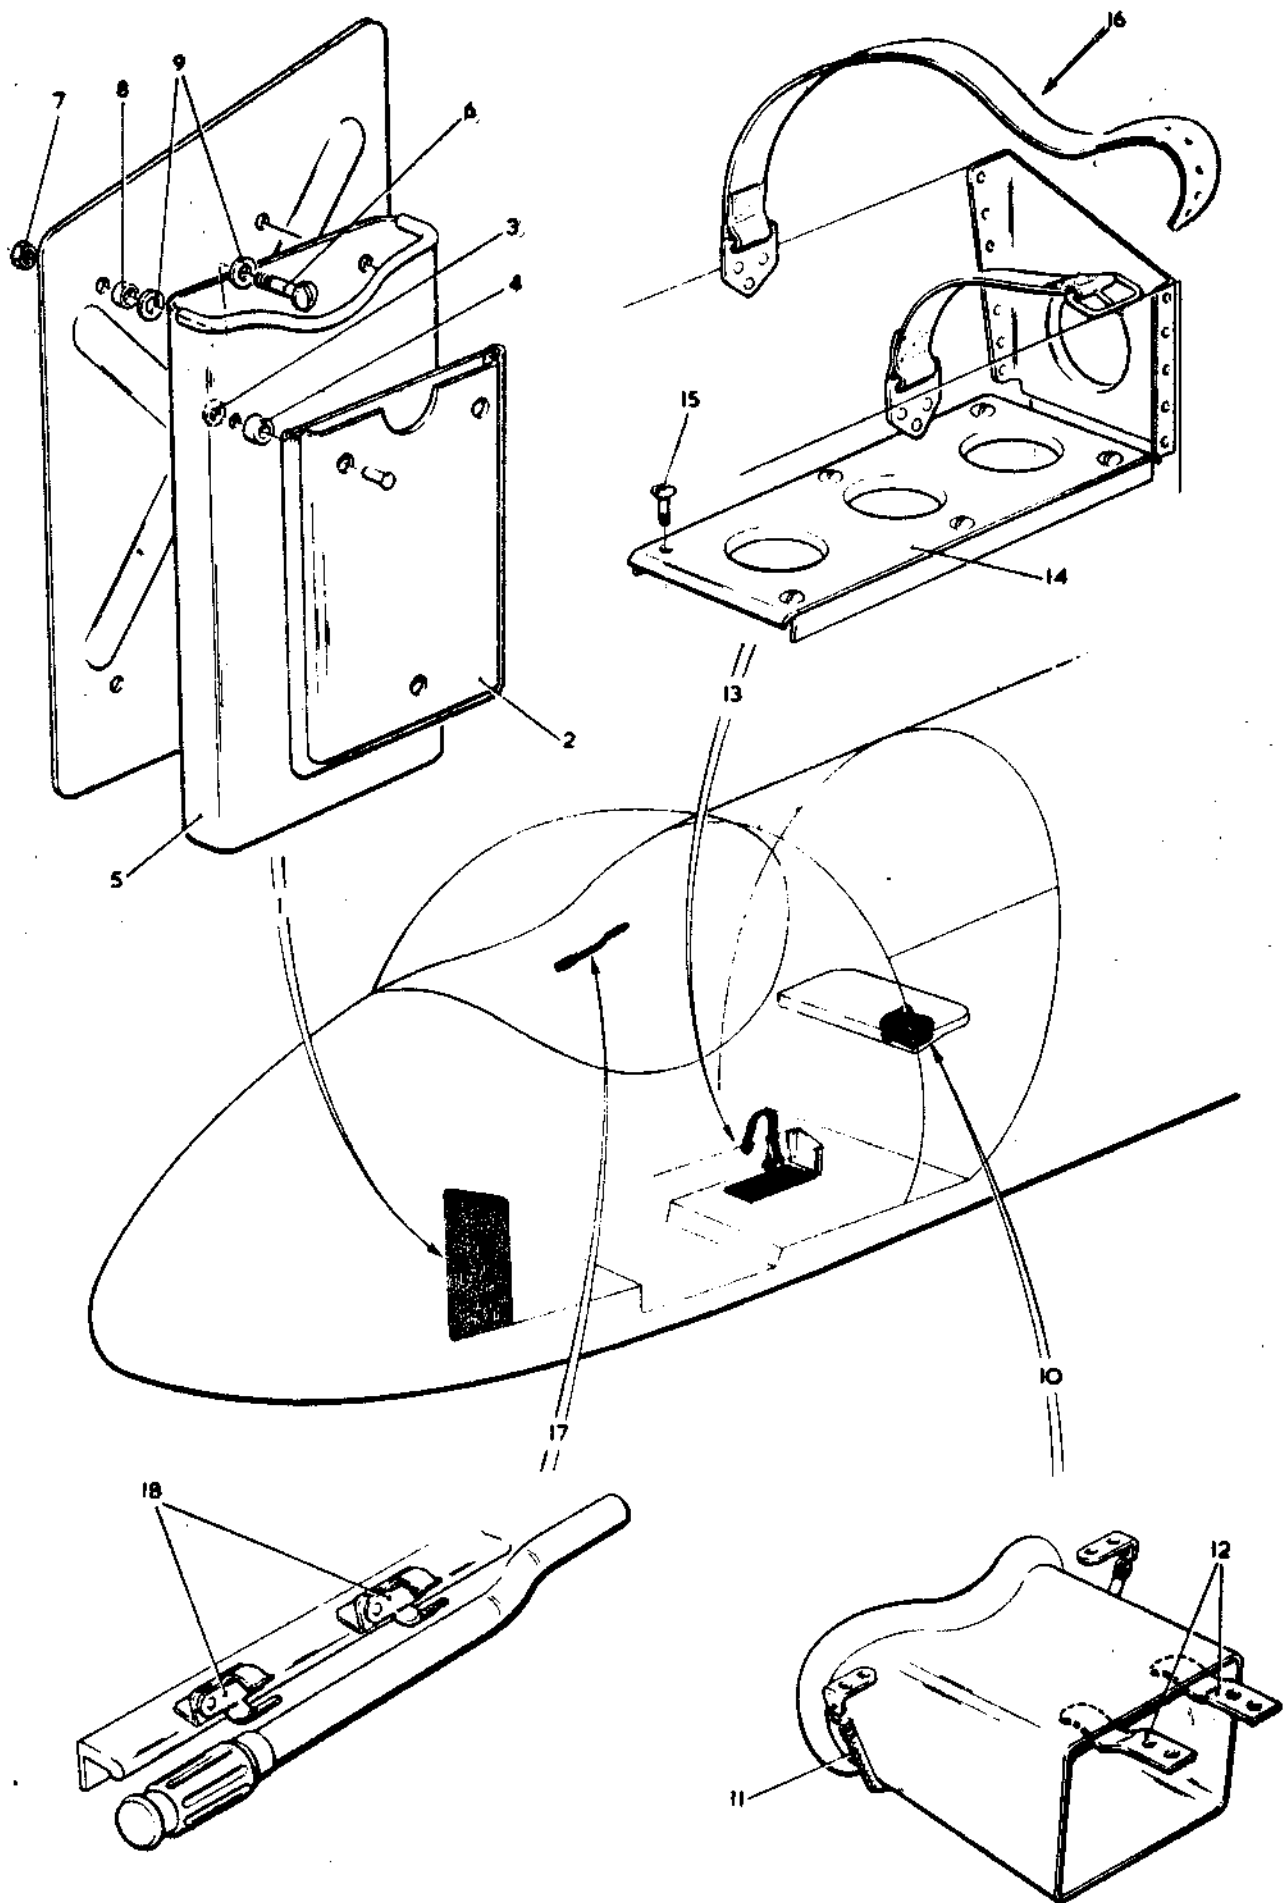


FIG. 36 PRESSURE CABIN EQUIPMENT

CODE A

SECT. GA

SECTION GB
NOT USED

A B D