

STADIUMS 3

SERVICES
AIR SUPPLY BOMBSIGHT COMPUTER

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Photo No.
					M.R. L.M.	
	E.H8.70.31	AIR SUPPLY, BOMBSIGHT COMPUTER	—	—	—	
	E.H8.70.33	Spares for:- BOMBSIGHT AIR SUPPLY FORWARD OF FRAME 1	—	—	—	
	E.H8.70.27	Spares for:- ANGLE	1	—	—	SA1/1
28D/1007981	AS.1248/WC	Attaching parts:- Screw, Mush.head. 4BA	2	—	C	SA1/2
28M/1278189	AGS.2001/B1	Nut, 4BA	2	—	C	
	EEAS.112/5	CLIP, pipe	1	—	—	SA1/3
	AS.4525/3	CLIP, pipe	3	—	—	SA1/4
28F/9463543	AGS.1120/1	CONE, TEE	1	—	C	SA1/5
6A/2685	—	GAUGE, pressure, Mk.14B	1	—	B	SA1/6
	A.2268/01	Attaching parts for 6A/2685:- Screw	4	—	—	SA1/7
28W/1206041	AGS.2035/B	Washer, 4BA, shakeproof	4	—	C	
	E.H8.70.23	MOUNTING, pressure gauge	1	—	—	SA1/8
28D/1010658	A.25/1B	Attaching parts for E.H8.70.23:- Bolt, 4BA	2	—	C	SA1/9
28D/1007981	AS.1248/WC	Screw, Mush.head	3	—	C	SA1/10
28M/1278189	AGS.2001/B1	Nut, 4BA	5	—	C	
28F/9735	AGS.1142/A	NIPPLE, adaptor	1	—	C	SA1/11
	E.H8.70.29	PACKER, at pressure gauge mounting	1	—	—	SA1/12
	E.H8.70.25	PIPE assembly from pressure gauge to tee cone	1	—	—	SA1/13
	E.A3.70.43	PIPES, AIR SUPPLY FORWARD OF FRAME 1	—	—	—	
	17733	Spares for:- BRACKET, cock mounting	1	—	C	SA1/14
	AS.481/37	CLIP	1	—	—	SA1/15
1880	EEAS.91/1	CLIP, pipe double	1	—	C	SA1/16
	VICKERS					
28F/2119	D.253	COCK, 'D' type, shut off	1	—	A	SA1/17
17732	E.A3.70.71	MOUNTING, shut off cock	1	—	C	SA1/18
		Attaching parts for E.A3.70.71:-				
28D/9419397	A.25/12C	Bolt, 2BA	2	—	C	SA1/19
28F/8011885	AGS.1142/B	NIPPLE, adaptor	2	—	C	SA1/20
28M/6931	AGS.957/B	Nut, lock reducing union	1	—	C	SA1/21
5884	E.A3.70.65	PIPE, assembly between cone tee forward and shut off cock	1	—	C	SA1/22
5885	E.A3.70.67	PIPE assembly, from shut off cock to reducing union forward of frame 1	1	—	C	SA1/23
5871	E.A3.70.69	PIPE assembly, from reducing union to computer connection	1	—	C	SA1/24
5872	E.A3.70.77	UNION, reducing, 3/8" x 1/4" B.S.F.	1	L.65	C	SA1/25
18852	EEAS.21/2ER	WASHER, 'D'	2	L.72	C	
28F/8014021	AGS.1138/B	WASHER	1	—	C	
	5259	WASHER, 'D'	1	—	C	
	EEAS.239/AH	WASHER, 'D'	3	—	—	

SERVICES
AIR SUPPLY BOMBSIGHT COMPUTER

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A3.70.45	BOMBSIGHT AIR SUPPLY, FRAME 1 TO PRESSURE BULKHEAD Spare for:-	-	-	-	
2165	EEAS.112/6	. . CLIP, pipe, single	4	L.72	C	SA1/28
17744	EEAS.112/17	. . CLIP, pipe, single	3	L.72	C	SA1/27
28D/1010658	A25/1B	. . Bolt, 4BA	1	-	C	SA1/28
28M/1278189	AGS.2001/B/1	. . Nut, 4BA	1	-	C	
28W/9419465	SP.13/B	. . Washer, 4BA	1	-	C	
12030	EEAS.21/2ER	. . Washer, 'D'	1	L.72	C	
28F/9704	AGS.1102/B	. . CONE, union body	2	-	C	SA1/29
5886	E.A3.70.51	. . PIPE, assembly from cone tee forward of frame 1 to union aft of frame 2	1	L.56	C	SA1/30
5887	E.A3.70.53	. . PIPE, assembly, continuation to union forward of frame 6	1	L.56	C	SA1/31
4918	E.A3.70.55	. . PIPE, assembly, continuation to union at pressure bulkhead	1	L.56	C	SA1/32
	E.H8.70.5	BOMBSIGHT AIR SUPPLY, PRESSURE BULKHEAD TO FRAME 12A Spare for:-	-	-	-	
17744	EEAS.112/17	. . CLIP, pipe	4	L.72	C	SA1/33
28F/8011883	AGS.1102/B	. . CONE, union body	1	-	C	SA1/34
1128	EEAS.69/2	. . GASKET	1	-	C	SA1/35
5888	E.A3.70.57	. . PIPE, assembly from bulkhead union to union aft of frame 12A	1	-	C	SA1/36
28F/1013402	AGS.1111/B	. . UNION, bulkhead	1	-	C	SA1/37
28F/9128928	AGS.1115/2	. . Washer Attaching parts for AGS.1111/B, AGS.1115/2 and EEAS.69/2	1	-	C	SA1/38
28D/1010658	A.25/1B	. . Bolt, 4BA	6	-	C	SA1/39
28M/1278189	AGS.2001/B/1	. . Nut, 4BA	6	-	C	
	E.H8.70.7	BOMBSIGHT AIR SUPPLY, FRAMES 12 TO 13 Spare for:-	-	-	-	
28F/8011809	E.B6.70.75	. . ADAPTOR, air drier	2	-	-	SA2/1
28F/9439102	AGS.1104/B	. . ADAPTOR, cone	1	-	C	SA2/2
	AGS.1105/B	. . ADAPTOR, union	1	-	C	SA2/3
	E.H8.70.55	. . BRACKET, valve mounting Attaching parts for E.H8.70.55:-	1	-	-	SA2/4
28D/9436920	A.25/1C	. . Bolt, 2BA	2	-	C	SA2/5
28D/1007975	AS.1242/1C	. . Bolt, 2BA, csk.	2	-	C	SA2/6
28M/1278190	AGS.2001/C1	. . Nut, 2BA	4	-	C	
28W/9419402	SP13/C	. . Washer, 2BA	4	-	C	
	E.B6.70.71	. . CHARGING POINT AND PRESSURE GAUGE INSTALLATION Spare for:-	-	-	-	
6A/2690	-	. . GAUGE, pressure, Mk.14KK Attaching parts for 6A/2690:-	1	-	C	SA2/7
28S/1200040	A.31/B20	. . Screw	4	-	C	SA2/8
	HYMATIC					
	ECV.3	. . VALVE, ground charging Attaching parts for ECV.3:-	1	-	-	SA2/9
28D/1008149	A.25/2B	. . Bolt, 4BA	6	-	C	SA2/10
28M/1278189	AGS.2001/B/1	. . Nut, 4BA	6	-	C	
28W/9419465	SP.13/B	. . Washer, 4BA	6	-	C	

SERVICES

AIR SUPPLY BOMBSIGHT COMPUTER

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.B6.70.57	CLAMP, assembly, air drier	1	-	-	SA2/11
28D/7002428	A.25/6C	Attaching parts for E.B6.70.57:-	8	-	C	SA2/12
28M/1278190	AGS.2001/C/1	Bolt, 2BA	8	-	C	
28W/9419402	SP.13/C	Nut, 2BA	8	-	C	
		Washer, 2BA				
	AS.4525/4	CLIP, pipe	4	-	-	SA2/13
18861	EEAS.34/9R	CLIP, pipe	1	-	C	SA2/14
28F/9436548	AGS.1120/1	CONE, tee	1	-	C	SA2/15
28F/8011811	AGS.1119/B	CONE, tee	1	-	C	SA2/16
	VICKERS					
28F/2719	D.263	COCK, 'D'	1	-	A	SA2/17
	KING A/C					
	AS.1889	CRADLE, assembly, air cylinder	1	-	-	SA2/18
6A/9429885	-	CYLINDER, air Mk.5D	1	-	A	SA2/19
9/4592	-	DRIER, air, Mk.6	1	-	A	SA2/20
	E.H8.70.15	MOUNTING, tray assembly	1	-	-	SA2/21
		Attaching parts for E.H8.70.15:-				
28D/9436920	A.25/1C	Bolt, 2BA	10	-	C	SA2/22
	E.B6.70.43	MOUNTING, cock	1	-	-	SA2/23
		Attaching parts for E.B6.70.43:-				
28D/9419397	A.25/12C	Bolt,	2	-	C	SA2/24
28F/1013599	AGS.1142/A	NIPPLE, adaptor	1	-	C	SA2/25
28F/8011885	AGS.1142/B	NIPPLE, adaptor	4	-	C	SA2/26
	E.H8.70.17	PACKING, air clamp assembly	2	-	-	SA2/27
	E.H8.70.19	PACKING, at relief valve mounting	1	-	-	SA2/28
	E.H8.70.49	PIPE assembly, continuation from frame	1	-	-	SA2/29
		12A to air drier				
	E.H8.70.47	PIPE assembly, air drier to shut off cock	1	-	-	SA2/30
	E.H8.70.45	PIPE assembly, shut off cock to pressure	1	-	-	SA2/31
		reducing valve				
	E.H8.70.43	PIPE assembly, pressure reducing valve to	1	-	-	SA2/32
		cone tee				
	E.H8.70.41	PIPE assembly, cone tee to relief valve	1	-	-	SA2/33
	E.H8.70.39	PIPE assembly, cone tee to air cylinder	1	-	-	SA2/34
	E.H8.70.51	PIPE assembly, air cylinder to cone tee, frame 13	1	-	-	SA2/35
34027	E.B6.70.93	PIPE assembly, cone tee to ground charging	1	-	C	SA2/36
		valve at frame 13				
34029	E.B6.70.101	PIPE assembly, cone tee to pressure gauge	1	-	C	SA2/37
		at frame 13				
	HYMATIC					
	PS.29/10/2	VALVE, pressure reducing	1	-	-	SA2/38
		Attaching parts for PS.29/10/2:-				
28D/1010658	A.25/1B	Bolt, 4BA	4	-	C	SA2/39
	E.H8.70.57	Nut, spacing	4	-	-	SA2/40
28W/1206041	AGS.2039/B	Washer, shakeproof 4BA	4	-	C	
	HYMATIC					
27VB/5954	R.V.18	VALVE, relief	1	-	B	SA2/41
		Attaching parts for R.V.18:-				
28D/1010029	A.25/6B	Bolt, 4BA	2	-	C	SA2/42
26DK/9852	EEAS.238/1/A	Washer, 'D'	2	-	C	
28F/9428453	AGS.1186/B	WASHER, sealing	2	-	C	SA2/43
	E.B6.70.123	WASHER, sealing	2	-	-	SA2/44

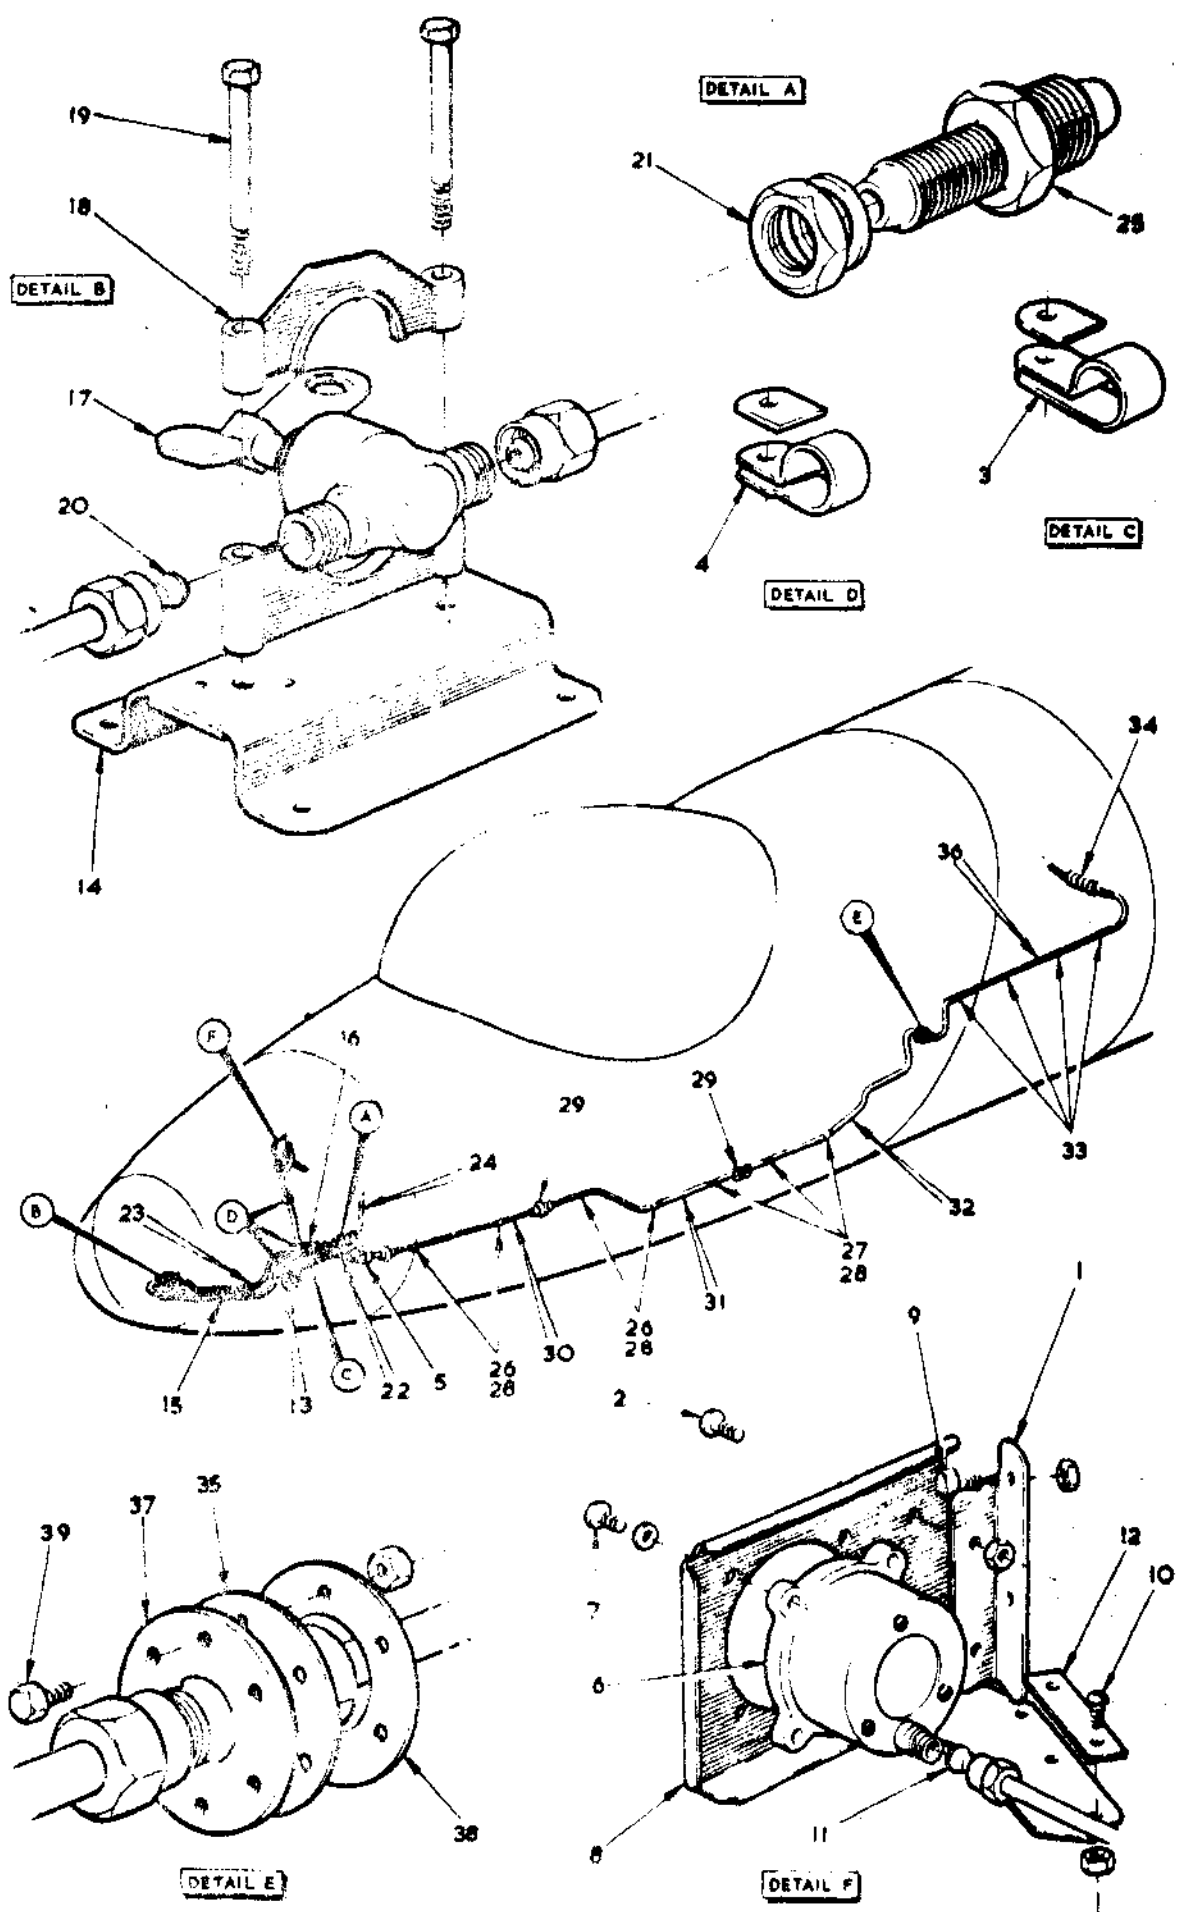


FIG 1 AIR SUPPLY BOMBSIGHT COMPUTOR

CODE A

SECT 8A

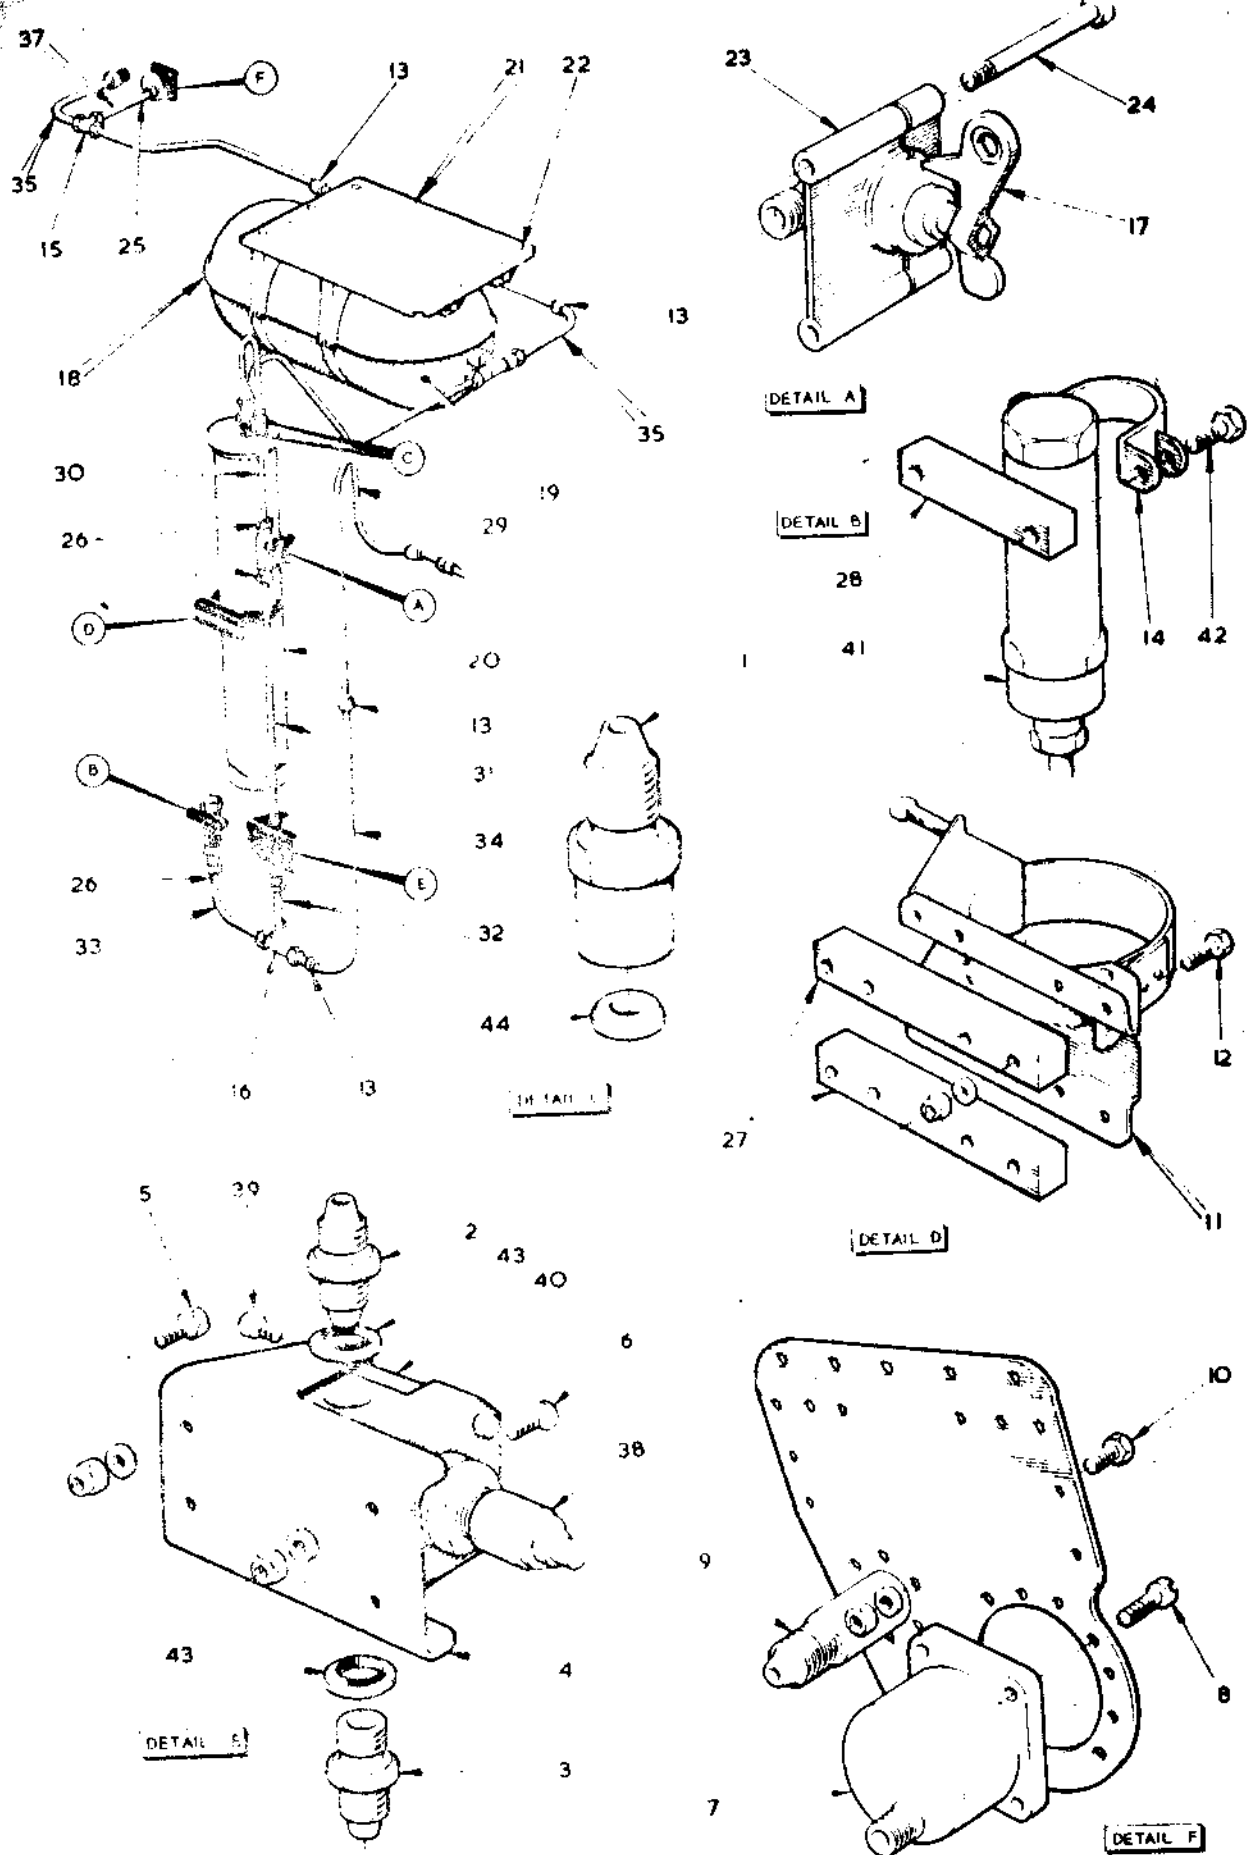


FIG 2 AIR SUPPLY BOMBSIGHT COMPUTOR

CODE A C

SECT SA

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.75.3	CABIN PRESSURE SYSTEM ASSEMBLY - FRONT FUSELAGE Spare for				
27UA/516	GODFREY 22888	ADAPTOR, water extractor drain	1	-	C	SB5/57
	E.A3.75.177	BRACKET, pipe support clip	4	-	-	SB1/7
5303	E.A3.75.283	BRACKET Attaching parts for E.A3.75.283	1	-	C	SB1/20
28D/9133011	A25/2C	Bolt, 2 BA	3	-	C	SB1/22
28M/10288	AGS.2001/C1	Nut, 2 BA	3	-	C	SB1/23
28W/9419475	SP15/C	Washer	3	-	C	SB1/24
16565	E.A3.75.547	BRACKET, pipe support	1	-	C	SB4/1
6734	EEAS.136	BRACKET, pipe support clip	1	-	C	SB4/2
16561	E.B6.75.369	BRACKET, assembly, support forward water extractor	1	-	C	SB5/1
16590	E.B6.75.591	BRACKET, assembly, support aft water extractor Attaching parts for E.B6.75.369 and E.B6.75.591	1	-	C	SB5/2
28D/9435710	A25.11C	Bolt, 2 BA	4	-	C	SB5/3
28M/10288	AGS.2001/C1	Nut, 2 BA	4	-	C	SB5/4
	AS2811/5/093	Piece, distance	4	-	C	SB5/5
28W/9419475	SP15/C	Washer	4	-	C	SB5/6
16592	E.B6.75.621	BRACKET ASSEMBLY Attaching parts for E.B6.75.621	1	-	-	SB1/49
28D/9137408	AS.1246/4B	Bolt, 4 BA	2	-	C	SB1/50
28M/10297	AGS.2001/B2	Nut, 4 BA	2	-	C	SB1/51
	E.B6.75.699	BRACKET, pipe support, frame 12A Attaching parts for E.B6.75.699	1	-	-	SB5/7
28D/9436920	A25/1C	Bolt, 2 BA	2	-	C	SB5/8
28M/10288	AGS.2001/C1	Nut, 2 BA	2	-	C	SB5/9
28W/9419475	SP15/C	Washer	2	-	C	SB5/10
	E.B6.75.697	BRACKET, pipe support frame 12A Attaching parts for E.B6.75.697	1	-	-	SB5/11
28D/1010658	A25/1B	Bolt, 4 BA	2	-	C	SB5/12
28M/10287	AGS.2001/B1	Nut, stiff, 4 BA	2	-	C	SB5/13
28W/9419474	SP15/B	Washer	2	-	C	SB5/14

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.H8.75.15	CABIN PRESSURE STATIC LINE INSTALLATION Spare for:-	1	-	-	SB2/1
28F/5109	AGS.838-5	BUSH, rubber	38	-	C	SB2/2
6734	EEAS.136	CLEAT, angle	10	-	C	SB2/3
	AS.4525/5	CLIP, pipe Attaching parts for AS.4525/5	47	-	C	SB2/4
28D/1212939	A61/1C	Bolt, 2 BA	1	-	C	SB2/5
28M/10281	AGS.2001/C7	Nut, 2 BA	1	-	C	SB2/6
28S/1214070	4101/8/4	Screw, self tapping	1	-	C	SB2/7
28E/2236061	SP91/A	CLIP	2	-	C	SB2/8
28F/9475201	AGS.952 BB	COLLAR	1	-	C	SB2/9
	E.H8.75.19	DRAINS, STATIC PRESSURE Spare for:-	1	-	-	SB2/10
6D/114	-	ADAPTOR, outlet	1	-	-	SB2/11
28F/1037653	AGS.838/13	BUSH, rubber	2	-	C	SB2/12
	AS.4525/5	CLIP, pipe Attaching parts for AS.4525/5	2	-	C	SB2/13
28D/9436920	A25/1C	Bolt, 2 BA	1	-	C	SB2/14
28M/1278190	AGS.2001/C1	Nut, stiff 2 BA	1	-	C	SB2/15
	E.H8.75.23	PIPE, static	1	-	-	SB2/16
	E.82.70.1037	PIECE, distance	1	-	-	SB2/17
28F/1046323	AGS.838-6	TRAP, drain	1	-	C	SB2/18
	E.A1.80.711	UNION, bulkhead	1	-	-	SB2/20
28F/1037653	AGS.838/13	UNION	2	-	C	SB2/21
28F/1046310	AGS.838/9	WASHER, sealing	2	-	C	SB2/22
	E.A1.80.713	GASKET	1	-	-	SB2/23
	E.C4.80.265	HOSE, rubber	1	-	-	SB2/24
	E.C4.80.257	PIPE, static	1	-	-	SB2/25
	E.C4.80.259	PIPE, static	1	-	-	SB2/26
	E.C4.80.269	PIPE, static	1	-	-	SB2/27
	E.H8.80.279	PIPE, static, vent	1	-	-	SB2/28
	E.H8.80.281	PIPE, static, vent	1	-	-	SB2/29

SERVICES
CABIN PRESSURE SYSTEM -- FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.A. L.M.	
		1 2 3 4 5 6				
	E.H8.80.283	. . PIPE, static vent	1	-	-	SB2/30
	E.C4.50.283	. . PIPE, static	1	-	-	SB2/31
	E.H8.80.325	. . PIPE, static	1	-	-	SB2/32
	E.H8.80.327	. . PIPE, static	1	-	-	SB2/33
	E.H8.80.329	. . PIPE, static vent	1	-	-	SB2/34
	E.H8.80.331	. . PIPE, static	1	-	-	SB2/35
	E.H8.80.333	. . PIPE, static	1	-	-	SB2/36
	E.H8.80.335	. . PIPE, static	1	-	-	SB2/37
	E.H8.80.337	. . PIPE, static vent	1	-	-	SB2/38
	E.H8.80.339	. . PIPE, static	1	-	-	SB2/39
	E.G9.80.537	. . PIPE, static vent	1	-	-	SB2/40
	E.H8.80.561	. . PIPE, static	1	-	-	SB2/41
	E.A3.80.1649	. . PIPE, drain	3	-	-	SB2/42
	E.A3.80.1965	. . PIPE, static vent	1	-	-	SB2/43
28F/11492	AGS.1115/3	. . PLATE, reinforcing	1	-	C	SB2/52
28F/1037653	AGS.838-4	. . UNION, nut	38	-	C	SB2/44
28F/1046309	AGS.838-3	. . UNION, elbow	2	-	C	SB2/45
28F/1046308	AGS.838-2	. . UNION, tee	6	-	C	SB2/46
28F/1046307	AGS.838-1	. . UNION, straight	7	-	C	SB2/47
28F/1015879	AGS.904 88	. . UNION, nut	1	-	C	SB2/48
	E.A1.80.711	. . UNION, bulkhead Attaching parts for E.A1.80.711	1	-	C	SB2/49
28D/1008149	A25/28	. . Bolt, 4 BA	6	-	C	SB2/50
28M/1278189	AGS.2001/B1	. . Nut, stiff, 4 BA	6	-	C	SB2/51
1335	E.A1.75.106	. CLIP, pipe at frames 2 and 6	2	-	C	SB1/47
1707	E.A2.75.37	. CLIP, pipe 1½" dia. Attaching parts for E.A1.75.105 and E.A2.75.37	5	-	C	SB1/3
28D/9436920	A25/1C	. Bolt, 2 BA	2	-	C	SB1/4
28M/10288	AGS.2001/C1	. Nut, 2 BA	2	-	C	SB1/5
28W/9419475	SP15/C	. Washer	2	-	C	SB1/6

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
28E/20341	SP91/P	CLIP, lagging	4	—	C	SB4/50
28E/2027591	SP91/L	CLIP, lagging, between frames A and I	3	—	C	SB1/52
16593	E.86.75.623	CLIP, pipe	1	—	C	SB1/53
		Attaching parts for E.86.75.623:-				
28D/9137408	AS.1246/48	Bolt, 4 BA	2	—	C	SB1/54
28M/10297	AGS.2001/9/2	Nut, 4 BA	2	—	C	SB1/55
28F/1014970	AGS.1104/A	CONE, adaptor	2	—	C	SB5/16
		Attaching parts for AGS.1104/A:-				
28W/9147639	AGS.567/A	Washer, jointing	1	Fibre	C	SB5/16
28F/9129082	AGS.1159/A	CONE, cap	1	—	C	SB5/17
1708	E.A3.75.145	CONNECTION, rubber, 1 1/2" i/d	5	Silastic	C	SB1/2
1440	E.A3.75.147	CONNECTION, rubber, 2 1/2" i/d	5	Silastic	C	SB5/18
6976	E.87.75.125	CONNECTOR, flanged, for main pipe at frame 3, L.H.	1	Glass cloth	C	SB4/38
6977	E.87.75.126	CONNECTOR, flanged, for main pipe at frame 4, R.H.	1	Glass cloth	C	SB4/39
6978	E.87.75.127	CONNECTOR, flanged, for main pipe at frame 5	1	—	C	SB4/40
		Attaching parts for E.87.75.125, E.87.75.126 and E.87.75.127:-				
28D/1008149	A25/28	Bolt, 4 BA	6	—	C	SB4/41
28E/9129563	AGS.605/5	Clip	6	—	C	SB4/42
16635	E.87.75.415	Lagging	5	—	C	SB4/43
28M/10287	ACS.2001/8/1	Nut, 4 BA	6	—	C	SB4/45
18659	E.87.75.129	Ring, half, bolt at frames 3 and 4	2	—	C	SB4/46
18660	E.87.75.131	Ring, half, bolt at frame 5	2	—	C	SB4/47
28W/9419474	SB.15/8	Washer	6	—	C	SB4/48
6504	E.86.75.379	COUPLING, water extractor, drain pipe outlet aft of frame 10	1	—	C	SB5/19
6980	E.87.75.23	DIFFUSER, navigator, assembly	1	—	C	SB4/50
		Attaching parts for E.87.75.23:-				
28D/	A25/3C	Bolt, 2 BA	4	—	C	SB4/51
	E.96.75.1299	Bracket, assembly	1	—	C	SB4/52
	E.A3.75.89	Clip	1	—	—	SB4/53
28M/10288	AGS.2001/C/1	Nut, 2 BA	4	—	C	SB4/55
28W/9419402	SP.13/C	Washer	4	—	C	SB4/56
	E.87.75.63	DIFFUSER, PILOT'S, ASSEMBLY	—	—	—	SB4/7
		Spares for:-				
19913	E.87.75.29	BRACKET, diffuser, mounting	1	L.59	C	SB4/8
19914	E.87.75.31	CLIP, diffuser retaining	1	L.59	C	SB4/9
6980	E.87.75.23	DIFFUSER, assembly	1	—	C	SB4/10

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Part No.
		1 2 3 4 5 6				
27UA/555	GODFREY 22697/B	EXTRACTOR, water, Type W.E.30 Mk.2 Attaching parts for 22697/B:-	1	-	B	SB5/20
16568	E.86.75.397	Lagging	1	-	C	SB5/21
16569	E.86.75.398	Lagging	1	-	C	SB5/22
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	-	C	SB5/23
	AS.2811/5/093	Piece, distance	2	-	LM	SB5/24
16563	E.86.75.381	Rod, tension	2	-	C	SB5/25
16562	E.86.75.377	Strap, securing	2	-	C/MR	SB5/26
6617	E.86.75.387	Trunnion	2	-	C	SB5/27
28W/9419475	SP.15/C	Washer	2	-	C	SB5/28
	E.G4.75.249	FISHTAIL, navigator's Attaching parts for E.G4.75.23	1	-	LM	SB4/29
28D/	A25/1C	Bolt, 2 BA	1	-	C	SB4/30
28W/	SP.15/C	Washer	1	-	C	SB4/31
	E.B7.75.59	FISHTAIL, PILOT'S, ASSEMBLY Spares for:-	-	-	-	SB1/8
5722	E.B7.75.21	FISHTAIL, pilot's diffuser Attaching parts for E.B7.75.21:-	1	-	C	SB1/9
28D/1010658	A25/1B	Bolt, 4 BA	4	-	C	SB1/10
	E.B7.75.61	LOUVRE, PILOT'S (PEDAL GUARD), ASSEMBLY Spares for:-	-	-	-	SB3/1
16606	E.B7.75.41	BRACKET, punkah louvre mounting Attaching parts for E.B7.75.41:-	1	-	C	SB3/2
28D/9140202	AS.1246/1C	Bolt, 2 BA	3	-	C	SB3/3
28M/10288	AGS.2001/C/1	Nut, 2 BA	3	-	C	SB3/4
	THERMO TANK DAR.2	LOUVRE, punkah Attaching parts for DAR.2:-	1	-	B	SB3/5
28D/1213215	AS.2922/4B	Bolt, 4 BA	3	-	C	SB3/6
28M/10287	AGS.2001/B/1	Nut, 4 BA	3	-	C	SB3/7
28W/9143227	SP.14/B	Washer	3	-	C	SB3/8
	E.B7.75.65	LOUVRE, PILOT'S (STARBOARD SIDE), ASSEMBLY Spares for:-	-	-	-	SB3/9
34074	E.G5.75.95	BOX, louvre, assembly Attaching parts for E.G5.75.95:-	1	-	C	SB3/10
28D/7002428	A25/6C	Bolt, 2 BA	2	-	C	SB3/11
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	-	C	SB3/12
	AS.2811/5/046	Piece, distance	2	-	LM	SB3/13

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
16604	E.B7.75.36	. . BRACKET, punkah louvre mounting	1	—	C	SB3/14
16605	E.B7.75.37	. . BRACKET, punkah louvre mounting	1	—	C	SB3/15
28D/1010658	A25/18	Attaching parts for E.B7.75.36 and E.B7.75.37:	1	—	C	SB3/16
28M/10287	AGS.2001/B/1	. . Bolt, 4 BA	1	—	C	SB3/17
28W/9419474	SP.15/B	. . Nut, 4 BA	1	—	C	SB3/18
		. . Washer	1	—	C	SB3/18
16608	E.B7.75.523	. . BRACKET, demand, oxygen hose clip attachment	1	—	C	SB3/19
20635	E.B7.75.55	. . LOUVRE, punkah, type DAR 2	1	—	B	SB3/20
		Attaching parts for E.B7.75.55:-				
28D/1213214	AS.2922/38	. . Bolt, 4 BA	3	—	C	SB3/21
28W/9143227	SP.14/B	. . Washer	3	—	C	SB3/22
28F/8011885	AGS.1142/B	. NIPPLE, adaptor	2	—	C	
1730	E.A3.75.167	. NOZZLE, hot air, bomb aimer's window	1	—	C	SB1/17
1738	E.A3.75.279	. PIPE, bend, between nose frames A and B	1	—	C	SB1/18
1739	E.A3.75.281	. PIPE, bend, at nose frame B	1	—	C	SB1/19
5900	E.B6.75.367	. PIPE, assembly, water extractor drain	1	—	C	SB5/29
20866	E.B6.75.687	. PIPE, bend, between Normalair non-return valve and hose coupling at frame 9	1	Glass Cloth	C	SB5/30
		Attachments for E.B6.75.687:-				
28E/9130219	AGS.605/4	. Clip	2	—	C	SB5/31
28E/9129563	AGS.605/5	. Clip	1	—	C	SB5/32
16564	E.B6.75.385	. Lagging	1	—	C	SB5/33
16565	E.B6.75.387	. Lagging	1	—	C	SB5/34
20867	E.B6.75.689	. PIPE, bend, from water extractor forward coupling to hose coupling at frame 9	1	Glass Cloth	C	SB5/35
		Attachments for E.B6.75.689:-				
28E/9129563	AGS.605/5	. Clip	2	—	C	SB5/36
16566	E.B6.75.389	. Lagging	1	—	C	SB5/37
16567	E.B6.75.391	. Lagging	1	—	C	SB5/38
20868	E.B6.75.691	. PIPE, bend, from hose coupling between frames 11 and 12A, to coupling aft of frame 12A	1	Glass Cloth	C	SB5/39
		Attachments for E.B6.75.691:-				
328/1322	E.B6.75.619	. Lagging, fibre glass blanket	QR	—	—	SB5/40
	f	. Tape, adhesive	QR	—	C	SB5/41
20869	E.B6.75.693	. PIPE, from water extractor aft coupling to coupling between frames 11 and 12A	1	Glass Cloth	C	SB5/42
		Attachments for E.B6.75.693:-				
28E/	E.A3.75.147	. Coupling	1	—	—	SB5/43
	AGS.605/3	. Clip	2	—	C	SB5/44
	AGS.605/5	. Clip	2	—	C	SB5/46
	E.B7.75.415	. Lagging	1	—	C	SB5/47
	FEAS.66/14	. Ring, clamping	2	—	—	
12243	E.B6.75.695	. PIPE, main continuation between frames 3 and 4	1	Glass Cloth	C	SB4/11
		Attachments for E.B6.75.695:-				
	AGS.605/4	. Clip	2	—	C	SB4/13
16615	E.B7.75.203	. Lagging	2	—	C	SB4/14

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5723	E.87.75.69	PIPE, branch, assembly, for pilot's louvre, navigator's diffuser and canopy demisting	1	—	C	SB1/25
28E/9129562	AGS.606/3	Attachments for E.87.75.69:-				
18665	E.87.75.209	Clip	6	—	C	SB1/26
18666	E.87.75.211	Lagging	1	—	C	SB1/27
18667	E.87.75.213	Lagging	1	—	C	SB1/28
18668	E.87.75.215	Lagging	1	—	C	SB1/29
18687	E.87.75.597	Lagging	2	—	C	SB1/30
5724	E.87.75.71	PIPE, branch, for pilot's louvre (pedal guard)	1	—	C	SB1/47
5728	E.87.75.79	PIPE, flanged, canopy demisting at frame 2	1	—	C	SB1/32
28E/9129092	AGS.606/2	Attachments for E.87.75.79:-				
18670	E.87.75.219	Clip	3	—	C	SB1/33
37441	E.87.75.805	Lagging	1	—	C	SB1/34
5730	E.87.75.89	PIPE, branch, main, between frames 1 and 2, for diffusers and canopy demisting	1	—	C	SB1/35
28E/9130219	A25/1C	Attachments for E.87.75.89:-				
16616	E.A1.75.106	Bolt	2	—	—	SB1/37
16638	AGS.605/4	Clip	1	—	C	SB1/38
16684	E.87.75.205A	Clip	3	—	C	SB1/39
	E.87.75.511A	Lagging	2	—	C	SB1/40
	E.87.75.513A	Lagging	1	—	C	SB1/41
	AGS.2001/C1	Lagging	1	—	C	SB1/42
	SP15/C	Nut	2	—	—	SB1/43
		Washer	2	—	—	SB1/44
34691	E.87.75.5269	PIPE, flexible, for pilot's fishtail	1	Bells Asbestos	C	
	E.G9.75.105	PIPE, flexible from main branch pipe at frame 2 running aft	1	Bells Asbestos	—	SB1/46
	E.87.75.5279	PIPE, flexible from branch pipe to pilot's diffuser	1	—	—	SB4/37
34696	E.87.75.5275	PIPE, flexible, from branch pipe to pilot's louvre	1	Bells Asbestos	C	SB1/45
	E.A9.75.10229	PIPE, flexible, from pilot's louvre branch pipe, to starboard louvre pipe	1	Bells Asbestos	C	SB4/36
	E.87.75.5281	PIPE, flexible	1	Bells Asbestos	LM	SB1/48
12249	E.87.75.781	PIPE, main, continuation, between frames 5 and 6	1	Glass Cloth	C	SB4/24
27E/9130219	AGS.606/4	Attachments for E.87.75.781:-				
16611	E.87.75.195	Clip	3	—	C	SB4/25
16612	E.87.75.197	Lagging	1	—	C	SB4/26
16613	E.87.75.199	Lagging	1	—	C	SB4/27
		Lagging	2	—	C	SB4/28
12247	E.87.75.783	PIPE, flanged, main, at forward face of pressure bulkhead	1	Glass Cloth	C	SB5/48
28E/9130219	AGS.606/4	Attachments for E.87.75.783:-				
28E/91388	AGS.606/6	Clip	2	—	C	SB5/49
	E.87.75.156	Clip	1	—	C	SB5/50
	E.87.75.157	Lagging	1	—	C	SB5/51
	E.87.75.158	Lagging	1	—	C	SB5/52
	E.87.75.159	Lagging	1	—	C	SB5/53
	E.87.75.525	Lagging	1	—	C	SB5/54
	E.87.75.504	Lagging	1	—	C	SB5/55
	E.87.75.505	Lagging	1	—	C	SB5/56

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
12248	E.B7.75.791	PIPE, branch, pilot's fishtail	1	Glass Cloth	C	SB1/12
	E.B7.75.207	Attachments for E.B7.75.791:- Lagging, fibre glass blanket	QR	-	LM	SB1/15
12245	E.B7.75.793	PIPE, main, continuation, between frames 4 & 5	1	Glass Cloth	C	SB4/17
28D/1212965	A61/2B	Attachments for E.B7.75.793:- Bolt, 4 BA	2	-	C	SB4/18
28E/20341	SP91/P	Clip	1	-	C	SB4/19
	AGS.605/4	Clip	1	-	C	SB4/23
16614	E.B7.75.201	Lagging	2	-	C	SB4/20
28M/10280	AGS.2001/B/3	Nut, 4 BA	2	-	C	SB4/21
28W/9419474	SP.15/B	Washer	4	-	C	SB4/22
	E.H8.75.25	PIPE, branch, pilot's diffuser and navigator's louvre	1	-	C	SB4/35
	E.G9.75.91	PIPE, branch, pilot's diffuser, navigator's louvre and fishtail	1	-	C	SB4/33
	E.G9.75.93	PIPE, from branch pipe to navigator's fishtail	1	-	C	SB4/32
	E.B7.75.5269	PIPE, flexible, to pilot's diffuser and pedal guard	2	Bells Asbestos	-	SB1/11 SB4/33
	E.H8.75.17	PIPE, flexible, to navigator's louvre	1	Bells Asbestos	-	SB4/49
5901	E.B7.75.613	SEAL, canopy demister pipe flange at frame 2	2	Asbestos	C	SB4/3
		Attaching parts for E.B7.75.613:-				
28D/9133012	A25/3C	Bolt, 2 BA	6	-	C	SB4/4
28M/9418396	AGS.2001/C/1	Nut, 2 BA	6	-	C	SB4/5
28W/9419475	SP.15/C	Washer	6	-	C	SB4/6
28F/9128936	AGS.904/A	SLEEVE, outer	1	-	C	
	EEAS.20/4BR	TAB, locking	1	-	C	SB5/76
27KD/3	500326	UNIT, master	1	-	A	SB5/58
		Attaching parts for 500326:-				
28D/1011030	A25/2E	Bolt, 1/4" BSF	2	-	C	SB5/59
28M/10290	AGS.2001/E/1	Nut, 1/4" BSF	2	-	C	SB5/60
28W/9419405	SP.15/E	Washer	2	-	C	SB5/61
27KD/7	NORMALAIR 500457	VALVE, non-return	1	-	A	SB5/62
		Attaching parts for 500457:-				
28D/9133012	A25/3C	Bolt, 2 BA	2	-	C	SB5/63
28D/9133013	A25/5C	Bolt, 2 BA	10	-	C	SB5/64
28M/9418396	AGS.2001/C/1	Nut, 2 BA	10	-	C	SB5/65
18661	E.B7.75.133	Ring, half bolt	2	-	C	SB5/66
1346	E.A1.75.131	Washer, jointing	2	Langite	C	SB5/67
28W/9419475	SP.15/C	Washer	12	-	C	SB5/68
28W/9416643	SP.47/C	Washer	2	-	C	SB5/69

SERVICES
CABIN PRESSURE SYSTEM - FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Ment. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
27KD/2836	NORMALAIR 527060	VALVE, pressure control Attaching parts for 527060:-	1	-	A	SB5/70
28D/1011030	A25/2E	Bolt, 1/4" BSF	7	-	C	SB5/71
28M/1007403	A27/ET	Nut, 1/4" BSF	1	-	C	SB5/72
21927	E.A3.75.573	Stud	1	-	C	SB5/73
28W/9419405	SP.15/E	Washer	11	-	C	SB5/74
28W/9416644	SP.477E	Washer	11	-	C	SB5/75
	EEAS.239/3AH	WASHER, "D", for pipe clips	7	-	C	SB4/34

SERVICES
CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.75.5	CABIN, PRESSURE SYSTEM IN CENTRE FUSELAGE, ASSEMBLY	—	—	—	
11476	E.B6.75.639	Spares for: BRACKET, for starboard cabin pressure wing to fuselage pipe between frames 16 and 17	1	—	C	SB6/1
28D/9133013	A25/5C	Attaching parts for E.B6.75.639:- Bolt, 2 BA	2	—	C	SB6/2
28M/10288	AGS.2001/C/1	Nut, stiff, 2 BA	2	—	C	SB6/3
28W/9419475	SP.15/C	Washer	2	—	C	SB6/4
1335	E.A1.75.105	CLIP, pipe, between frames 12 to 17	4	—	C	SB6/5
1707	E.A2.75.37	CLIP, pipe, for port and starboard elbows and transverse pipe at frame 16	4	—	C	SB6/6
	E.B6.75.181	CLIP, pipe, for transverse pipe at frame 16 Attaching parts for E.A1.75.105, E.A2.75.37 and E.B6.75.181:-	4	—	—	SB6/7
28D/9436920	A25/1C	Bolt, 2 BA (As required)	2	—	C	SB6/8
28D/9133011	A25/2C	Bolt, 2 BA (As required)	2	—	C	SB6/9
28D/9133012	A25/3C	Bolt, 2 BA (As required)	2	—	C	SB6/10
28D/1200119	A25/4C	Bolt, 2 BA (As required)	2	—	C	SB6/11
28M/10288	AGS.2001/C/1	Nut, stiff, 2 BA	2	—	C	SB6/12
28W/9419475	SP.15/C	Washer	2	—	C	SB6/13
5889	E.B6.75.183	CLIP, special, for lagging on transverse pipe on frame 16	6	—	C	SB6/14
28F/8011809	AGS.1104/B	CONE, adaptor	1	—	C	
1440	E.A3.75.147	CONNECTION, rubber, 2."5 i/d x 3/32" x2."5	7	SILASTIC 150	C	SB6/15
	or					
33006	DUNLOP DAS.582/40/24 E.A9.75.567	CONNECTOR, tubing FA: RLEAD, for port cabin pressure wing to fuselage pipe, between frames 16 and 17	OR 1	—	C	SB6/16
28D/1200119	A25/4C	Attaching parts for E.A9.75.567:- Bolt, 2 BA	6	—	C	SB6/17
28M/10288	AGS.2001/C/1	Nut, stiff, 2 BA	6	—	C	SB6/18
28W/9419475	SP.15/C	Washer	6	—	C	SB6/19
28F/12071	E.B6.75.643 AGS.1170/K	NIPPLE, special NIPPLE Attachments for nipple, AGS.1170/K:-	1 1	—	C	SB6/20 SB6/21
28E/9129562	AGS.605/3	Clip	2	—	C	SB6/22
15179	E.B6.75.179A	Lagging	2	—	C	SB6/23
28F/9517920	AGS.1142/K	NIPPLE, adaptor	1	—	C	SB6/24
5890	E.B6.75.157	PIECE, four-way, bombight and cabin pressure air supply at frame 16	1	—	C	SB6/25
1328	E.A3.75.55	PIPE, from rubber joint at frame 13 to rubber joint at frame 12, 2X" o/d. x 20 SWG	1	—	C	SB6/26
28E/9130219	AGS.605/4	Attachments for Pipe, E.A3.75.55:- Clip	2	—	C	SB6/27
15163	E.B6.75.129A	Lagging	1	—	C	SB6/28
15164	E.B6.75.131A	Lagging	1	—	C	SB6/29

SERVICES
CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
1329	E.A3.75.57	PIPE, from rubber joint at frame 13 to rubber joint at frame 14 and frame 14 to frame 15, 2 1/2" o/d x 20 SWG	2	—	C	SB6/30
28E/9130219	AGS.606/4	Attachments for Pipe, E.A3.75.57:-				
15165	E.B6.75.133A	Clip	4	—	C	SB6/31
39007	E.B6.75.135	Lagging	2	—	C	SB6/32
15166	E.B6.75.137A	Lagging	2	—	C	SB6/33
15167	E.B6.75.139A	Lagging	1	—	C	SB6/34
15168	E.B6.75.141A	Lagging	1	—	C	SB6/35
16159	E.B6.75.143A	Lagging	1	—	C	SB6/37
1330	E.A3.75.59	Pipe, from rubber joint at frame 15 to rubber joint at frame 16, 2 1/2" o/d. x 20 SWG	1	—	C	SB6/36
28E/9130219	AGS.606/4	Attachments for Pipe, E.A3.75.59:-				
40127	E.B6.75.707A	Clip	2	—	C	SB6/38
40466	E.B6.75.709A	Lagging	1	—	C	SB6/40
1331	E.A3.75.61	PIPE, from rubber joint at frame 16 to rubber joint at elbow, 2 1/2" o/d x 20 SWG	1	—	C	SB6/42
32B/1270	†	Attachments for Pipe, E.A3.75.61:- Lagging, fibre glass blanket	QR	—	LM	SB6/43
5891	E.B6.75.151	PIPE, assembly, from coupling forward of frame 16 to rear camera bay tee piece	1	—	C	SB6/44
32B/1270	†	Attachments for Pipe, E.B6.75.151:- Lagging, fibre glass blanket	QR	—	LM	SB6/45
5892	E.B6.75.153	PIPE, assembly, transverse from special 4-way union to joint forward of frame 16	1	—	C	SB6/46
5899	E.B6.75.183	Attachments for Pipe, E.B6.75.153:-				
	AGS.606/4	Clip	6	—	C	SB6/47
15174	E.B6.75.167A	Clip	2	—	C	SB6/48
15175	E.B6.75.169A	Lagging	2	—	C	SB6/49
15177	E.B6.75.175A	Lagging	2	—	C	SB6/50
15178	E.B6.75.177A	Lagging	2	—	C	SB6/51
15196	E.B6.75.813A	Lagging	1	—	C	SB6/52
32B/1270	†	Lagging	1	—	C	SB6/53
6812	EEAS.66/14	Lagging, fibre glass blanket	QR	—	—	SB6/54
5893	E.B6.75.503	Ring, clamping	2	—	C	SB6/56
32B/1270	†	PIPE, assembly, from port wing connection to special 4 way piece	1	—	C	SB6/55
		Attachments for Pipe, E.B6.75.503				
		Lagging, fibre glass blanket	QR	—	LM	SB6/56
5894	E.B6.75.505	PIPE, assembly, from starboard wing connection to rear camera bay tee piece	1	—	C	SB6/57
28E/9129092	AGS.606/4	Attachments for Pipe, E.B6.75.505				
15172	E.B6.75.162A	Clip	3	—	C	SB6/58
15173	E.B6.75.163A	Clip	1	—	C	SB6/59
15188	E.B6.75.164A	Lagging	1	—	C	SB6/60
15189	E.B6.75.165A	Lagging	1	—	C	SB6/61
6812	EF/	Lagging	1	—	C	SB6/62
		Lagging	1	—	C	SB6/63
		Lagging	3	—	C	SB6/69

SERVICES
CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE

Ref. No.	Part No.	Description	No. off	Mtd. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
5895	E.B6.75.507	PIPE, elbow joint between port wing and fuselage	1	—	C	886/64
328/1234	†	Attachments for Pipe E.B6.75.507:-	QR	—	LM	886/65
3220	E.B6.75.823	Lagging, fibre glass blanket	1	—	C	886/66
28F/14773	AGS.1121/4	UNION, reducing, special, aft of frame 18 for rear camera bay air supply	1	—	C	886/67
		UNION, tee, special				

SERVICES
CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Ref. No.	Part No.	Description	No. off	Mat. Spec.	Cl. of Equip. M.R. L.M.	Rate No.
		1 2 3 4 5 6				
	E.H8.75.11	CABIN, PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING, ASSEMBLY	—	—	—	
18559	E.B6.75.258	Spares for:- BRACKET, support, non-return valve	1	L.72	C	587/1
27UA/517	GODFREY 50002	CLAMP, half	2	—	C	587/2
27UA/518	GODFREY 50270	CLAMP, segmented, pipe jointing at Marston cooler	2	—	C	587/3
1707	E.A2.75.37	CLIP, pipe, at rib 3	1	L.72	C	587/4
•	E.B6.75.791	CLIP, pipe at rib 2	1	L.72	—	587/5
6990	E.B6.75.261	CONNECTION, flanged, non-return valve and fitting	1	DTD.683	C	587/6
28D/9436820	A25/1C	Attaching parts for E.B6.75.261:- Bolt, 2 BA	3	—	C	587/7
28D/1200119	A25/4C	Bolt, 2 BA	3	—	C	587/8
28M/10288	AGS.2001/C/1	Nut, 2 BA	3	—	C	587/9
28W/9419402	SP.13/C	Washer	3	—	C	587/10
28W/9416843	SP.47/C	Washer	3	—	C	587/11
	E.A3.75.842	DUCTS AND AIR COOLER, ASSEMBLY	—	—	—	587/12
	E.A3.75.840	Spares for:- DUCT, air inlet, at rib 1	1	—	C	587/13
1025	EEAS.1/1C	Attaching parts for E.B6.75.324:- Screw, 2 BA	2	S.96	C	587/14
6623	E.B6.75.329	DUCT, cooler, air outlet, assembly	1	—	C	587/15
1025	EEAS.1/1C	Attaching parts for E.B6.75.329:- Screw, 2 BA	2	S.96	C	587/16
	E.B6.75.318	INSTALLATION OF MARSTON COOLER (PRIMARY)	—	—	—	587/17
12395	E.B6.75.344	Spares for:- BRACKET, bottom support	2	—	C	587/18
28D/1011021	A25/16C	Attaching parts for E.B6.75.344:- Bolt, 2 BA	2	—	C	587/19
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	—	C	587/20
28W/9419475	AS.2809/4/139 SP.15/C	Piece, distance Washer	2 2	L.62 —	LM C	587/21 587/22
12396	E.B6.75.346	BRACKET, top attachment, assembly	1	—	C	587/23
28D/1011021	A25/16C	Attaching parts for E.B6.75.346:- Bolt, 2 BA	3	—	C	587/24
28M/10288	AGS.2001/C/1	Nut, 2 BA	3	—	C	587/25
28W/9419475	AS.2809/4/139 SP.15/C	Piece, distance Washer	3 3	L.62 —	LM C	587/26 587/27
27UA/492	D.106/8A	COOLER, primary (E.B6.75.319)	1	—	A	587/28
28D/1011240	A25/5E	Attaching parts for D.106/8A:- Bolt, 1/2 BSF	1	—	C	587/29
6622	E.B6.75.351	Washer, felt on support bracket	2	DTD.590	C	587/30
28W/9419405	SP.15/E	Washer	1	—	C	587/31

SERVICES
CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					N.R. L.M.	
	E.86.75.336	STRAP, JOINT, INLET AIR DUCT TO MARSTON COOLER, ASSEMBLY Consisting of:-	2	-	-	887/32
12392	E.86.75.337	STRAP, joint	1	-	C	887/33
12393	E.86.75.339	STRAP, clamping Attaching parts for E.86.75.337 and E.86.75.339:-	1	-	C	887/34
28D/1011019	A25/8C	Bolt, 2 BA	2	-	C	887/35
28M/10288	AG8.2001/C/1	Nut, 2 BA	2	-	C	887/36
26922	E.86.75.255	ELBOW, engine connection to non-return valve Attaching parts for E.86.75.255:-	1	-	C	887/37
28D/9436920	A25/1C	Bolt, 2 BA	2	-	C	887/38
28D/9133011	A25/2C	Bolt, 2 BA	7	-	C	887/39
28D/1200119	A25/4C	Bolt, 2 BA	3	-	C	887/40
28E/9129562	AG8.805/3	Clip, hose	2	-	C	887/41
12714	E.86.75.447A	Lagging	1	-	C	887/42
12369	E.86.75.449A	Lagging	1	-	C	887/43
28M/10288	AG8.2001/C/1	Nut, 2 BA	9	-	C	887/44
28W/9419402	8P.13/C	Washer	12	-	C	887/45
28W/9416643	8P.47/C	Washer, spring	3	-	C	887/46
	E.A2.75.345	FAIRLEAD, at rib 1 Attaching parts for E.A2.75.345:-	2	LF8.21	-	887/47
28D/9133012	A25/3C	Bolt, 2 BA	4	-	C	887/48
28M/10288	AG8.2001/C/1	Nut, 2 BA	4	-	C	887/49
28W/9419402	8P.13/C	Washer	4	-	C	887/50
16448	E.87.50.25	FITTING, end, for pipe connection to hot air valve	1	OTD.683	C	887/51
12079	E.86.75.675	GASKET, hot air valve joint	3	Aero Permanite	C	887/52
12078	E.86.75.689	GASKET, non-return valve joint	2	Aero Permanite	C	887/53
28F/9517920	AG8.1142/K	NIPPLE, adaptor	4	-	C	887/54
36120	E.87.75.827	PIPE, assembly, from Marston air cooler to engine and Fuselage 'T' Attaching parts for E.87.75.827:-	1	-	C	887/55
28E/9129562	AG8.805/3	Clip, hose	3	-	C	887/56
36126	E.87.75.839	Lagging, top	1	-	C	887/57
36127	E.87.75.841	Lagging, bottom	1	-	C	887/58
6771	E.86.75.405	PIPE, assembly, from wheel well bulkhead fitting to Marston air cooler	1	-	C	887/59
27241	E.87.75.819	PIPE, assembly, from hot air valve to connection between ribs 2 and 3 Attaching parts for E.87.75.819:-	1	-	C	887/60
28E/9129562	AG8.805/3	Clip, hose	3	-	C	887/61
28E/9130219	AG8.805/4	Clip, hose	1	-	C	887/62
	E.86.75.799A	Lagging	1	-	-	887/63
	E.86.75.799A	Lagging	1	-	-	887/64
25716	E.86.75.801A	Lagging	2	-	C	887/65

SERVICES
CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.C. L.M.	Part No.
		1 2 3 4 5 6				
25710	E.86.75.785	PIPE, flexible from connection between ribs 2 and 3 to pipe coupling between ribs 1 and 2	1	Metallic hose	C	887/66
28E/9129562	AGS.806/3	Attaching parts for E.86.75.785:- Clip, hose	3	-	C	887/67
28E/9130219	AGS.806/4	Clip, hose	2	-	C	887/68
25715	E.86.75.803A	Lagging	1	-	C	887/69
25713	E.86.75.806A	Lagging	1	-	C	887/70
25712	E.86.75.807A	Lagging	1	-	C	887/71
25714	E.86.75.809A	Lagging	1	-	C	887/72
29240	E.86.75.817	PIPE, assembly from connection between ribs 1 and 2 to cooler tee piece	1	-	C	887/73
	E.86.75.20	PIPE, RUN IN WHEEL BAY, ASSEMBLY Spares for:-	-	-	-	888/1
6768	E.86.75.401	ADAPTOR, bulkhead, Marston air cooler Attaching parts for E.86.75.401:-	1	DTD.883	C	888/2
28D/9133011	A25/2C	Bolt, 2 BA	6	-	C	888/3
28M/10288	AGS.2001/C/1	Nut, 2 BA	6	-	C	888/4
16801	E.86.75.847	Shim	1	-	C	888/5
980	EEAS.20/1DR	Tab, locking	2	L.65	C	888/6
	E.86.75.213	CLIP, pipe, in wheel well Attaching parts for E.86.75.213:-	2	L.72	-	888/7
28D/9133011	A25/2C	Bolt, 2 BA	2	-	C	888/8
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	-	C	888/9
28W/9419475	SP.15/C	Washer	2	-	C	888/10
28F/19144	AGS.2120/J	NIPPLE	1	-	C	888/11
28F/9513420	AGS.1142/J	NIPPLE, adaptor	2	-	C	888/12
6769	E.86.75.209	PIPE, assembly, from Marston air cooler bulkhead elbow connection to intermediate pipe coupling	1	L.56	C	888/13
16591	E.86.75.815	PIPE, assembly, from intermediate coupling to fuselage bulkhead connection	1	L.56	C	888/14
28F/12399	AGS.1167/J	UNION, elbow, assembly	1	-	C	888/15
28F/17675	AS.5402	RING, sealing, type 'A' between pipe flanges	3	-	C	887/74
28F/12389	AGS.1119/K	UNION, tee at Marston cooler Attaching parts for AGS.1119/K:-	1	-	C	887/75
28E/9130219	AGS.806/4	Clip, hose	2	-	C	887/76
26395	E.86.75.435A	Lagging	1	-	C	887/77
26396	E.86.75.437A	Lagging	1	-	C	887/78
	E.87.50.31	VALVE, HOT AIR, ASSEMBLY Consisting of:-	1	-	-	887/79
SW/100	E.E. CO. LTD BRADFORD TYPE 234	ACTUATOR	1	-	A	887/80

SERVICES
CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
27V/4282	TEDDINGTON FKH/A/16	VALVE, hot air, 1½ ins. Attaching parts for E.B7.50.31:-	1	—	A	SB7/81
12125	E.B6.75.443A	Lagging	1	—	C	SB7/82
12076	E.B6.75.445A	Lagging	1	—	C	SB7/83
28M/10290	AGS.2001/E/1	Nut, ½" BSF	8	—	C	SB7/84
28W/9418921	SP.13/E	Washer	8	—	C	SB7/85
28W/9418644	SP.47/E	Washer, spring	8	—	C	SB7/86
	NORMALAIR 501670	Valve, non-return Attaching parts for Normalair 501670:-	1	—	A	SB7/87
28E/9129682	AGS.605/3	Clip, hose	2	—	C	SB7/88
12074	E.B6.75.439A	Lagging	1	—	C	SB7/89
12076	E.B6.75.441A	Lagging	1	—	C	SB7/90

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.75.7	CABIN, PRESSURE AND COLD AIR SYSTEM IN PORT WING, ASSEMBLY Spares for:-	-	-	-	
27UA/518	GODFREY 50270	CLAMP, segmented, pipe jointing at Marston cooler	4	-	C	S89/1
27UA/517	GODFREY 50002	CLAMP, half	6	-	C	S89/2
17744	EEAS.143/17	CLIP, pipe, single, 1/4" o/d.	1	L.72	C	S89/3
37419	E.B6.75.833	COLLECTOR, OIL WASTE, ASSEMBLY Spares for:-	1	-	-	S89/4
32552	E.B6.75.849	BRACKET, mounting Attaching parts for E.B6.75.849:	1	-	C	S89/5
28D/9133011	A26/2C	Bolt, 2BA	2	-	C	S89/6
28M/10328	AGS.2002/C/1	Nut, 2BA	2	-	C	S89/7
28W/9419475	SP.15/C	Washer	2	-	C	S89/8
32549	E.B6.75.843	COLLECTOR, top, assembly	1	-	C	S89/9
32551	E.B6.75.847	CONTAINER, waste oil	1	DTD.339	C	S89/10
32550	E.B6.75.845	WIRE, retaining, assembly Attaching parts for E.B6.75.833:-	1	-	C	S89/11
28F/9584	AGS.1148/B	Nut, 1/2" BSP	2	-	C	S89/12
28F/9130664	AGS.1149/2	Washer, plate	1	-	C	S89/13
1708	E.A3.75.145	CONNECTION, rubber, 1.1/5 o/d. x 1/16" x 2 1/5 Silastic 150	2	Glass Fibre	C	S89/14
6619	E.B6.75.461	CONNECTION, duct, tapered, from cold air unit junction pipe Attaching parts for E.B6.75.461:-	1	L.59	C	S89/15
28E/9129562	AGS.605/3	Clip, hose	1	-	C	S89/16
28E/9130219	AGS.605/4	Clip, hose	1	-	C	S89/17
16582	E.B6.75.523	Legging	2	-	C	S89/18
	E.A3.75.641	DUCT AND AIR COOLER, ASSEMBLY Spares for:-	-	-	-	S89/19
	E.A3.75.639	DUCT, air inlet, at rib 1	1	-	C	S89/20
12896	E.B6.75.735	DUCT, cooler, air outlet	1	-	B	S89/21
	E.B6.75.317	INSTALLATION OF MARSTON COOLER (SECONDARY) Spares for:-	-	-	-	S89/22
12390	E.B6.75.343	BRACKET, bottom support	2	-	C	S89/23
12391	E.B6.75.345	BRACKET, top attachment	1	-	C	S89/24
27UA/491	MARSTON D.106/6A	COOLER, secondary (E.B6.75.321)	1	-	A	S89/25
6622	E.B6.75.351	WASHER, felt	2	DTD.590	C	S89/26
1026	EEAS.1/1C	SCREW, 2BA, for air duct attachment	19	HTS	C	S89/27
	E.B6.75.335	STRAP, JOINT, INLET AIR DUCT TO MARSTON COOLER, ASSEMBLY Consisting of:-	2	-	-	S89/28
28D/1011019	A25/8C	BOLT, 2BA	2	-	C	S89/30

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28M/10288	AGS.2001/C/1	NUT, 2BA	2	—	C	SB9/31
12392	E.86.75.337	STRAP, joint	1	—	C	SB9/32
12393	E.86.75.339	STRAP, clamping	1	—	C	SB9/33
	E.87.75.921	FAIRLEAD, assembly, at rib 2 Attaching parts for E.87.75.921:-	1	—	—	SB9/34
28D/9133013	A25/5C	Bolt, 2BA	4	—	C	SB9/35
28M/10288	AGS.2001/C/1	Nut, 2BA	4	—	C	SB9/36
28W/9419402	SP.13/C	Washer	4	—	C	SB9/37
28W/9419404	SP.16/C	Washer	4	—	C	SB9/38
	E.V7.75.915	FAIRLEAD, assembly, at rib 1 Attaching parts for E.87.75.915:-	1	—	—	SB9/39
28D/1200119	A25/4C	Bolt, 2BA	4	—	C	SB9/40
28M/10288	AGS.2001/C/1	Nut, 2BA	4	—	C	SB9/41
28W/9419402	SP.13/C	Washer	4	—	C	SB9/42
	E.A9.73.583	FAIRLEAD, assembly Attaching parts for E.A9.73.583:-	1	—	—	SB9/79
28D/13284	A28/3C	Bolt, 2BA	4	—	C	SB9/80
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	4	—	C	SB9/81
28W/9419475	SP.15/C	Washer	4	—	C	SB9/82
	E.86.75.187	INSTALLATION OF COLD AIR UNIT Spares for:-	—	—	—	SB9/43
	E.86.75.199	UNIT, COLD AIR, ASSEMBLY Spares for	1	—	—	SB9/44
27UA/978	23421/HX	DIPSTICK and filler, oil level	1	—	C	SB9/45
27UA/382	23414	UNIT, cold air, A.C.R.E. 9 Mk. 10E Attaching parts for E.86.75.199:-	1	—	A	SB9/46
28D/9438920	A25/1C	Bolt, 2BA	16	—	C	SB9/47
23W/9464922	AGS.586/L	Washer	16	—	C	SB9/48
28W/9419404	SP.16/C	Washer	16	—	C	SB9/49
	E.A9.75.446	INSTALLATION OF VALVES AND PIPING Spares for:-	—	—	—	SB10/1
	E.A9.75.493	BRACKET, hot air and non-return valve	1	—	—	SB10/2
27UA/517	50002	CLAMP, half	10	—	C	SB10/3
27UA/518	50270	CLAMP, segmented, pipe jointing	3	—	C	SB10/4
6990	E.86.75.261	CONNECTOR, flanged, non-return valve and fitting	1	DTD.683	C	SB10/5
25922	E.86.75.255	ELBOW, from engine connection to non-return valve Attaching parts for E.86.75.255:-	1	—	C	SB10/6
28D/9133011	A25/2C	Bolt, 2BA	6	—	C	SB10/7
28E/9129682	AGS.605/3	Clip, hose	2	—	C	SB10/8
12714	E.86.75.447A	Lagging	1	—	C	SB10/9
12389	E.86.75.449A	Lagging	1	—	C	SB10/10
28M/10288	AGS.2001/C/1	Nut, 2BA	6	—	C	SB10/11
28W/9419402	SP.13/C	Washer	6	—	C	SB10/12
16448	E.87.50.25	FITTING, end, for pipe connection to hot air valve	1	DTD.683	C	SB10/13
12079	E.86.75.675	GASKET, hot air valve joint	3	Aero Permanite	C	SB10/14
12078	E.86.75.689	GASKET, non-return valve joint	2	Aero Permanite	C	SB10/15

SERVICES
CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description	No. off	Mod. Spec.	Cl. of Equip. M.R. L.M.	Pace No.
		1 2 3 4 5 6				
13025	E.86.75.231	PIPE, assembly, from non-return valve on inboard engine rib to tee piece at rib 3 Attaching parts for E.86.75.231:-	1	T.26	C	SB10/16
28E/9129562	AGS.605/3	Clip, hose	3	-	C	SB10/17
26367	E.86.75.275A	Lagging	1	-	C	SB10/18
26368	E.86.75.277A	Lagging	1	-	C	SB10/19
16556	E.86.75.233	PIPE, assembly, from mixing valve to constant flow valve Attaching parts for E.86.75.233:-	1	T.26	C	SB10/20
28E/9129562	AGS.605/3	Clip, hose	5	-	C	SB10/21
26628	E.86.75.279A	Lagging	1	-	C	SB10/22
26629	E.86.75.281	Lagging	1	-	C	SB10/23
13207	E.A9.75.461	PIPE, assembly, from mixing valve to clamping joint at rib 3 Attaching parts for E.A9.75.461:-	1	T.26	C	SB10/24
28E/9129562	AGS.605/3	Clip, hose	2	-	C	SB10/25
27281	E.A9.75.463A	Lagging	1	-	C	SB10/26
27283	E.A9.75.465A	Lagging	1	-	C	SB10/27
16557	E.86.75.237	PIPE, assembly, connection from mixing valve to tee piece at frame 3 Attaching parts for E.86.75.237:-	1	T.26	C/MR	SB10/28
28E/9129562	AGS.605/3	Clip, hose	3	-	C	SB10/29
26632	E.86.75.287A	Lagging	1	-	C	SB10/30
26633	E.86.75.289A	Lagging	1	-	C	SB10/31
16558	E.86.75.239	PIPE, assembly, from mixing valve to wheel well bay connection Attaching parts for E.86.75.239:-	1	T.26	C/MR	SB10/32
28E/9129562	AGS.605/3	Clip, hose	4	-	C	SB10/33
26635	E.86.75.297A	Lagging	1	-	C	SB10/34
26634	E.86.75.295A	Lagging	1	-	C	SB10/35
16597	E.86.75.831A	Lagging	1	-	C	SB10/36
16598	E.86.75.833A	Lagging	1	-	C	SB10/37
28F/17675	AS.5402	RING, sealing, type 'A', between pipe flanges	8	-	C	SB10/38
16560	E.86.75.259	TEE-PIECE, mixing and non-return valve at rib 3 Attaching parts for E.86.75.259:-	1	-	C/MR	SB10/39
38124	E.87.75.835A	Lagging, front	1	-	C	SB10/40
38125	E.87.75.837A	Lagging, rear	1	-	C	SB10/41
	E.87.50.31	VALVE, HOT AIR, ASSEMBLY Consisting of:-	1	-	-	SB10/42
	E.E.CO.LTD. BRADFORD TYPE 234	ACTUATOR	1	-	A	SB10/43
5W/400 27V/4282	FKH/A/16	VALVE, hot air, 1 1/2 ins. Attaching parts for FKH/A/16:-	1	-	A	SB10/44
12125	E.86.75.443A	Lagging	1	-	C	SB10/45
12076	E.86.75.445A	Lagging	1	-	C	SB10/46

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.86.75.243	VALVE, 2-WAY, MIXING, ASSEMBLY	1	—	—	SB10/47
16602	E.86.75.649	Spares for:- ROD, ADJUSTING, MIXING VALVE AND DESYNN TRANSMITTER, ASSEMBLY	1	—	B/MR	SB10/48
		Consisting of:-				
28N/5549	AGS.899/2	COLLAR, shackle pin	2	—	C	SB10/49
	E.86.75.853	FORK, R.H.	1	—	—	SB10/50
	E.86.75.656	FORK, L.H.	1	—	—	SB10/51
28M/1008473	A27/CT	NUT, 2BA	1	—	C	SB10/52
28M/13263	A27/CTL	NUT, 2BA	1	—	C	SB10/53
28P/830	SP.4Y/B4	PIN, shackle	2	—	C	SB10/54
28P/19228	SP.90/C8	PIN, split	2	—	C	SB10/55
	E.86.75.861	ROD, screwed, 2BA	1	—	—	SB10/56
1026	EEAS.1/1C	SCREW, 2BA	2	S.96	C	SB10/57
	E.87.75.103	VALVE, DOUBLE, HOT AIR AND ACTUATOR, ASSEMBLY	1	—	—	SB10/58
		Consisting of:-				
	E.E.CO.LTD. BRADFORD TYPE 233	ACTUATOR	1	—	A	SB10/60
5W/409	FKH/A/15	VALVE, hot air, 2 ins.	1	—	A	SB10/61
		Attaching parts for FKH/A/15:-				
26636	E.86.75.299A	Lagging	1	—	C	SB10/62
13144	E.86.75.301	Lagging	1	—	C	SB10/63
16599	E.86.75.636	Lagging	1	—	C	SB10/64
16600	E.86.75.637	Lagging	1	—	C	SB10/65
	E.A8.75.469	INSTALLATION OF CONSTANT FLOW VALVE	—	—	1	SB11/1
		Spares for:-				
16573	E.86.75.487	BRACKET, pipe support, at rib 2	1	—	C	SB11/2
28E/9129563	AGS.605/5	CLIP, hose	2	—	C	SB11/3
28F/9517920	AGS.1142/K	NIPPLE, adaptor	1	—	C	SB11/4
	E.86.75.481	VALVE, CONSTANT FLOW, ASSEMBLY	1	—	—	SB11/5
		Consisting of:-				
6751	E.86.75.579	ADAPTOR, special	1	DTD.663	C	SB11/6
28D/9133011	A25/2C	BOLT, 2BA	12	—	C	SB11/7
	↑	COMPOUND, sealing	QR	Hermitite	—	SB11/8
6752	E.86.75.491	PIPE, assembly, flanged, 1½" o.d. x 20 SWG	1	L.56	C	SB11/9
		Attaching parts for E.86.75.491:-				
28E/9129562	AGS.605/3	Clip, hose	2	—	C	SB11/10
16579	E.86.75.517	Lagging	1	—	C	SB11/11
16586	E.86.75.629	Lagging	1	—	C	SB11/12
	NORMALAIR 502090	VALVE, constant flow	1	—	A	SB11/13
28W/9419402	SP.13/C	WASHER	12	—	C	SB11/14
27KD/8	497776	WASHER, sealing	1	—	C	SB11/15
28F/1200986	AGS.1138/H	WASHER, jointing	1	—	C	SB11/16
30A/2296	↑	WIRE, locking, 20 SWG	QR	Soft Iron	C	SB11/17

SERVICES
CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.B6.75.727	INSTALLATION OF COLD AIR UNIT RELIEF VALVE AND PIPES Spares for:-	-	-	-	SB11/18
26568	E.B6.75.733	. BRACKET, assembly	1	-	C	SB11/19
27UA/517	50002	. CLAMP, half	6	-	C	SB11/20
12898	E.B6.75.731	. COVER, valve, assembly	1	-	C	SB11/21
12899	E.B6.75.737	. PIPE, assembly, bend, relief valve pipe joint	1	L.59	C	SB11/22
12900	E.B6.75.739	. PIPE, assembly, from relief valve pipe joint bend to inlet tee piece	1	L.54	C	SB11/23
12901	E.B6.75.741	. PIPE, assembly, inlet tee-piece from pipe joint at rib 1 to Marston cooler	1	L.54	C	SB11/24
28F/17675	AS.5402	. RING, sealing, type 'A', between pipe flanges	3	-	C	SB11/25
12902	E.B6.75.729	. VALVE, relief	1	-	A	SB11/26
	E.B6.75.19	PIPE, RUN IN WHEEL BAY, ASSEMBLY Spares for:-	-	-	-	SB11/27
6753	E.B6.75.207	. ADAPTOR, bulkhead, mixing valve pipe connection	1	DTD.683	C	SB11/28
28F/9513420	AGS.1142/J	. NIPPLE, adaptor	2	-	C	SB11/29
28F/19144	AGS.2120/J	. NIPPLE	2	-	C	SB11/30
6754	E.B6.75.201	. PIPE, assembly, from fuselage bulkhead adaptor to pipe joint in wheel well	1	L.56	C	SB11/31
6755	E.B6.75.203	. PIPE, assembly, in wheel well, between ribs A and E	1	L.56	C	SB11/32
6756	E.B6.75.205	. PIPE, assembly, from mixing valve connection to pipe joint on rib E	1	L.56	C	SB11/33
13210	E.A9.75.455	. PIPE, assembly, intermediate from cold air connection to mixing valve connection Attaching parts for E.A9.75.455:-	1	L.56	C	SB9/50
28E/9129562	AGS.605/3	. Clip, hose	4	-	C	SB9/51
	E.B6.75.509	. Lagging	1	-	-	SB9/52
	E.B6.75.511	. Lagging	1	-	-	SB9/53
27279	E.A9.75.457A	. Lagging	1	-	C	SB9/54
27280	E.A9.75.459A	. Lagging	1	-	C	SB9/55
6759	E.B6.75.459	. PIPE, assembly, junction from cold air unit Attaching parts for E.B6.75.459:-	1	L.56	C	SB9/56
28E/9129562	AGS.605/3	. Clip, hose	4	-	C	SB9/57
16579	E.B6.75.517	. Lagging	1	-	-	SB9/58
16580	E.B6.75.519	. Lagging	1	-	C	SB9/59
16581	E.B6.75.521	. Lagging	1	-	C	SB9/60
37477	E.B6.75.835	. PIPE, assembly, from coupling to waste oil collector, adjacent to rib 1	1	-	C	SB9/61
37478	E.B6.75.837	. PIPE, assembly, from cold air unit to coupling adjacent to rib 1	1	-	C	SB9/62
6762	E.B6.75.467	. PIPE, assembly, from cold air unit compressor connection to pipe joint at rib 1	1	L.54	C	SB9/63
6763	E.B6.75.469	. PIPE, assembly, from connection at rib 1 to cold air unit turbine connection	1	L.54	C	SB9/64

SERVICES

CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
6764	E.86.75.471	PIPE, assembly, from Marston cooler to connection at rib 1	1	L.56	C	S89/65
12967	E.A9.75.783	PIPE, assembly, from cold air unit compressor connection to pipe joint at rib 2	1	L.56	C	S89/66
		Attaching parts for E.A9.75.783:-				
28E/9129562	AGS.605/3	Clip, hose	2	-	C	S89/67
27286	E.A9.75.471A	Lagging	1	-	C	S89/68
27286	E.A9.75.473A	Lagging	1	-	C	S89/69
38119	E.B7.75.825	PIPE, assembly, from mixing valve tee piece at rib 3 to connection at rib 2	1	-	C	S89/70
		Attaching parts for E.B7.75.825:-				
28E/9129562	AGS.605/3	Clip, hose	2	-	C	S89/71
28E/9130219	AGS.605/4	Clip, hose	2	-	C	S89/72
	E.B7.75.855	Lagging	1	-	-	S89/73
	E.B7.75.857	Lagging	1	-	-	S89/74
	E.B7.75.859	Lagging	1	-	-	S89/75
38242	E.B7.75.1029	PIPE, flexible, from connection at rib 2 to connection at fuselage skin	1	-	C	S89/76
28F/17675	AS.5402	RING, sealing, type A, between pipe flanges	10	-	C	S89/77
1593	EEAS.66/1	RING, clamping, 1.1/8" i/d.	1	L.72	C	S89/78

SERVICES
CABIN PRESSURE SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A3.04.10943	C.A.U. SYSTEM IN BOMB BAY, ASSEMBLY	1	—	—	
28F/9517916	AGS.1112/J	Spares for ADAPTOR, bulkhead	2	—	C	SB12/1
28D/9133012	A25/3C	Attaching parts for AGS.1112/J:- Bolt, 2 BA	4	—	C	SB12/2
28M/1278190	AGS.2001/C1	Nut, stiff. 2 BA	4	—	C	SB12/3
	EEAS.20/10R	Tab, locking	2	—	C	SB12/4
28F/4051810	AGS.1115/12	Washer, plate	1	—	C	SB12/5
	E.B6.75.213	CLIP	4	—	—	SB12/6
28D/9133011	A25/2C	Attaching parts for E.B6.75.213:- Bolt, Hex. Hd. 2 BA	2	—	C	SB12/7
28D/9133012	A25/3C	Bolt, Hex. Hd. 2 BA	2	—	C	SB12/8
28M/1278190	AGS.2001/C1	Nut, stiff. 2 BA	2	—	C	SB12/9
	E.B6.75.69J	Packing, fibre	1	—	C	SB12/10
28W/9419475	SP15/C	Washer	2	—	C	SB12/11
	—	GAUZE bonding	OR	—	C	SB12/12
	AGS.1170/J	NIPPLE	2	—	C	SB12/13
28F/9513420	AGS.1142/J	NIPPLE	2	—	C	SB12/14
	E.B6.75.215	PIPE, assembly	1	—	—	SB12/15
	E.A9.75.429	PIPE, assembly	1	—	—	SB12/16
	E.B6.75.219	PIPE, assembly	1	—	—	SB12/17
	E.B6.75.697	SHIM	2	—	—	SB12/18

SERVICES

CABIN PRESSURE SYSTEM

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				

SERVICES
CAMERA PIPE RUN

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
	E.H8.75.9	CAMERA, PIPE RUN, WINDOW HEATING	—	—	—	
		Spares for:				
7785	E.A3.75.435	BRACKET, constant flow valve, forward	1	—	C	SB13/1
7786	E.A3.75.241	BRACKET, constant flow valve, rear	1	L.72	C	SB13/2
1707	E.A2.75.37	CLIP, pipe support	12	L.72	C	SB13/3
		Attaching parts for E.A2.75.37:				
28D/9436920	A25/1C	Bolt, 2 BA (frame 29)	2	—	C	SB13/4
28D/9133012	A25/3C	Bolt, 2 BA (frames 18, 19 and 20)	2	—	C	SB13/5
28D/1200119	A25/4C	Bolt, 2 BA (frames 22, 23, 24, 25 and 26)	2	—	C	SB13/6
28D/9133013	A25/5C	Bolt, 2 BA (frames 27 and 28)	2	—	C	SB13/7
28M/1278190	AGS.2001/C/1	Nut, 2 BA	2	—	C	SB13/8
28W/9419402	SP.13/C	Washer	2	—	C	SB13/9
5647	EEAS.143/26	CLIP, pipe, window	4	—	C	SB13/10
		Attaching parts for EEAS 143/26:				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	SB13/11
28M/9403520	A27/CP	Nut, 2 BA	1	—	C	SB13/12
12929	EEAS.21/9ER	Washer, "D"	1	—	C	SB13/13
28W/9416643	SP.47/C	Washer	1	—	C	SB13/14
	E.A9.75.887	Coupling, insulation	1	—	—	SB13/45
15193	E.B6.75.607	COVER at pipe clips	9	—	C	SB13/15
15194	E.B6.75.609	COVER at pipe clips, frame 27	1	—	C	SB13/16
12366	E.B6.75.719	GASKET, for pipe joint at frame 29	2	Aero Permanite	C	SB13/18
28F/11905	AGS.1170/H	NIPPLE, adaptor	1	—	C	SB13/19
28F/12071	AGS.1170/K	NIPPLE	3	—	C	SB13/20
28F/9486111	AGS.1142/H	NIPPLE, adaptor	4	—	C	SB13/21
15190	E.B6.75.583	PIPE, assembly, from cabin pressure tee at frame 16 to constant flow valve	1	L.56	C	SB13/22
		Attachments for E.B6.75.583				
28E/9129092	AGS.605/2	Clip	4	—	C	SB13/23
15151	E.B6.75.41A	Lagging	1	—	C	
15152	E.B6.75.43A	Lagging	1	—	C	
15217	E.A3.75.509	PIPE, assembly, from constant flow valve to frame 22	1	—	C	SB13/24
		Attachments for E.A3.75.509				
28E/9129562	AGS.605/3	Clip	12	—	C	SB13/26
15153	E.B6.75.45A	Lagging	1	—	C	
15154	E.B6.75.47A	Lagging	1	—	C	
15149	E.B6.75.37A	Lagging	1	—	C	
15155	E.B6.75.49A	Lagging	1	—	C	
15150	E.B6.75.39A	Lagging	1	—	C	
15156	E.B6.75.51A	Lagging	1	—	C	
15184	E.B6.75.221A	Lagging	1	—	C	
15185	E.B6.75.223A	Lagging	1	—	C	
15157	E.B6.75.55A	Lagging	2	—	C	
36842	E.A3.75.557	Lagging	2	—	C	
15218	E.A3.75.511	PIPE, assembly, between frames 22 and 28	1	L.54	C	SB13/28
		Attachments for E.A3.75.511				
28E/9129562	AGS.605/3	Clip	8	—	C	SB13/27
15158	E.B6.75.61A	Lagging	5	—	C	
13161	E.B6.75.705A	Lagging	1	—	C	
15159	E.B6.75.67A	Lagging	1	—	C	
15160	E.B6.75.69A	Lagging	1	—	C	

SERVICES
CAMERA PIPE RUN

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
15219	E.A3.75.513	PIPE, assembly, from frame 27 to flanged joint at frame 29	1	T.9	C	SB13/28
28E/9129562	AGS.605/3	Attachments for E.A3.75.513:	4	—	C	SB13/29
15212	E.A3.75.493A	Clip	1	—	C	
15213	E.A3.75.495A	Lagging	1	—	C	
15161	E.B6.75.79A	Lagging	1	—	C	
15162	E.B6.75.81A	Lagging	1	—	C	
15220	E.A3.75.515	PIPE, elbow, at frame 29	1	L.58	C	SB13/30
28E/9129562	AGS.605/3	Attachments for E.A3.75.515:	4	—	C	SB13/31
11457	E.B7.75.189A	Clip	2	—	C	
36843	E.B6.75.603	Lagging	1	—	C	
36844	E.B6.75.605	Lagging	1	—	C	
	E.B6.75.561	PIPE, assembly	1	—	—	SB13/32
	E.A9.75.879	PIPE, assembly	—	—	—	SB13/33
28E/9128961	AGS.605/1	Attaching parts for E.A9.75.879	2	—	C	SB13/34
32B/1023	—	Clip	QR	—	C	SB13/35
	E.B6.75.703	Tape, asbestos	1	—	—	SB13/36
15222	E.A3.75.533	PIPE, insulation assembly	1	—	—	SB13/37
27KD/5	NORMALAIR 502090	PIPE, demisting, camera window	1	L.54	C	SB13/37
		VALVE, constant flow	1	—	A	SB13/38
28E/9129563	AGS.605/5	Attachments for Normalair 502090	2	—	C	SB13/39
15191	E.B6.75.599A	Clip	1	—	C	
15192	E.B6.75.601A	Lagging	1	—	C	
31672	E.A2.75.669	Lagging	1	—	A	SB13/40
		VALVE, TEMPERATURE CONTROL	1	—	A	SB13/40
		Spares for	1	—	—	SB13/41
	E.A2.75.667	PISTON, valve	1	L.65	—	SB13/41
	E.A2.75.477	SPRING	1	—	—	SB13/42
	TEDDINGTON T.H.T.147	THRUSTAT	1	—	—	SB13/43
27KD/8	NORMALAIR 497776	WASHER, sealing, constant flow valve	1	—	C	SB13/44

SB.29 TO 36

NOT USED

SERVICES
COLD AIR SUPPLY TO PILOT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	E.A3.74.21	COLD AIR SUPPLY TO PILOT, ASSEMBLY Spares for:-	-	-	-	
7240	E.A3.74.45	BRACKET, non-return valve mounting	1	L.72	C	SB14/1
2164	EEAS.112/5	CLIP, pipe, 3/16" o/d	5	L.16	C	SB14/2
2163	EEAS.112/15	CLIP, pipe, 1" o/d	6	L.16	C	SB14/3
		Attaching parts for EEAS.112/5 and EEAS.112/15:-				
28D/12953	A28/1B	Bolt, 4 BA	1	-	C	
28M/13479	A29/BP	Nut, 4 BA	1	-	C	
28W/3097	AGS.162/B	Washer	1	-	C	
8995	E.A3.74.47	CLIP, for non-return valve mounting Attaching parts for E.A3.74.47:-	2	L.54	C/MR	SB14/4
28D/18067	A61/16C	Bolt, 2 BA	2	-	C	
28W/9419475	SP.15/C	Washer	2	-	C	
8990	E.A3.74.53	COUPLING, drain pipe outlet	1	DTD.423	C/MR	SB14/5
	E.A3.74.63	HOSE, connection 1" i/d x 3" long, between air pipe sections (make from Ref. 32C/376)	5	DTD.625	LM	SB14/6
	E.A3.74.67	HOSE, connection, 3/16" i/d x 1 1/4" long, from water trap to drain pipe	1	DTD.625	LM	SB14/7
	THERMOTANK					
5042	K1259/43	LOUVRE, "punkah" air, type D.A.R. 2	1	-	B	SB14/8
12990	E.A2.74.33	PIPE, cold air, from non-return valve to hose connection on frame 1	1	T.9	C	
5633	E.A3.74.111	PIPE, cold air, continuation from hose connection on frame 1 to hose connection between frames 1 and 2	1	T.9	C	SB14/9
5634	E.A3.74.113	PIPE, cold air, from hose connection between frames 1 and 2 to louvre	1	T.9	C	SB14/10
5635	E.A3.74.115	PIPE, assembly, drain	1	T.9	C	SB14/11
8991	E.A3.74.51	RING, louvre mounting	1	DTD.36	C/MR	SB14/12
3681	E.A3.74.49	SCOOP, cold air	1	L.59	C	SB14/13
981	EEAS.20/2DR	TAB, locking, for water drain pipe	1	L.72	C	SB14/14
20814	E.A3.74.43	TRAP, water Attaching parts for E.A3.74.49 and E.A3.74.43:-	1	-	B	SB14/15
28M/10279	AGS.2001/A3	Nut, stiff, 6 BA	10	-	C	
28S/1200060	A33/A16	Screw, 6 BA	10	-	C	SB14/25
28W/9419473	SP.15/A	Washer	10	-	C	
5638	E.A3.74.23	VALVE, NON RETURN, ASSEMBLY Consisting of:-	1	-	A	SB14/16
	E.A3.74.39	ADAPTOR	2	DTD.683	-	SB14/17
	E.A3.74.41	BODY, non-return valve	1	DTD.683	-	SB14/18
5639	E.A3.74.25	PLUNGER, VALVE SEAL, ASSEMBLY Spares for:-	1	-	C	SB14/19
5640	E.A3.74.29	SEAL	1	Hallprene 21	C	SB14/20
	E.A3.74.27	WASHER, seal retaining	1	DTD.683	-	SB14/21
5060	E.A3.74.36	SHIM, laminated	1	Laminated aluminium	C	SB14/22
5059	E.A3.74.37	SPRING, compression	1	DTD.215	C	SB14/23
5043	E.A3.74.33	WASHER, sealing	1	DTD.378A	C	SB14/24


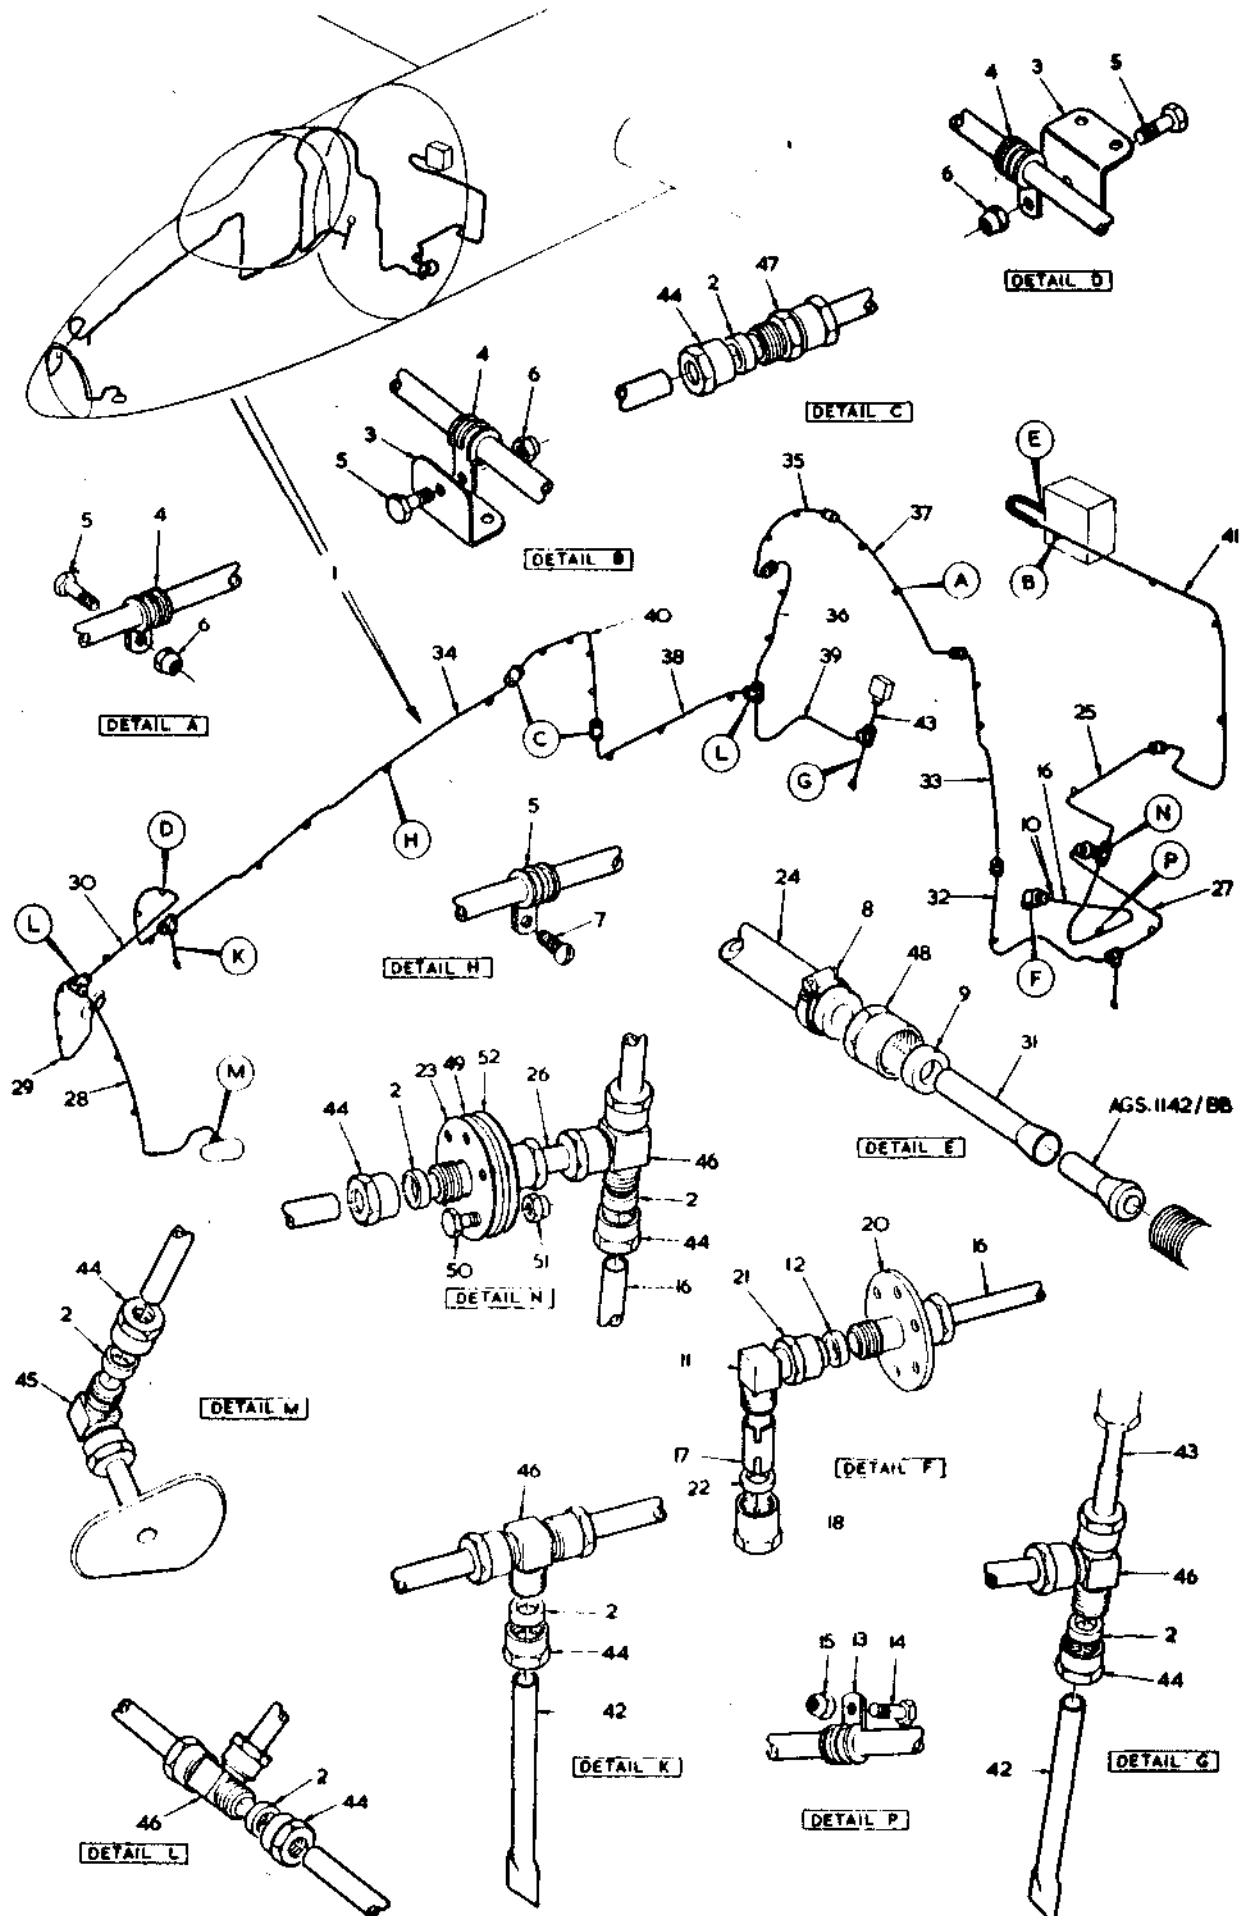



FIG. 2 CABIN PRESSURE SYSTEM-FRONT FUSELAGE

CODE A


SECT 5B

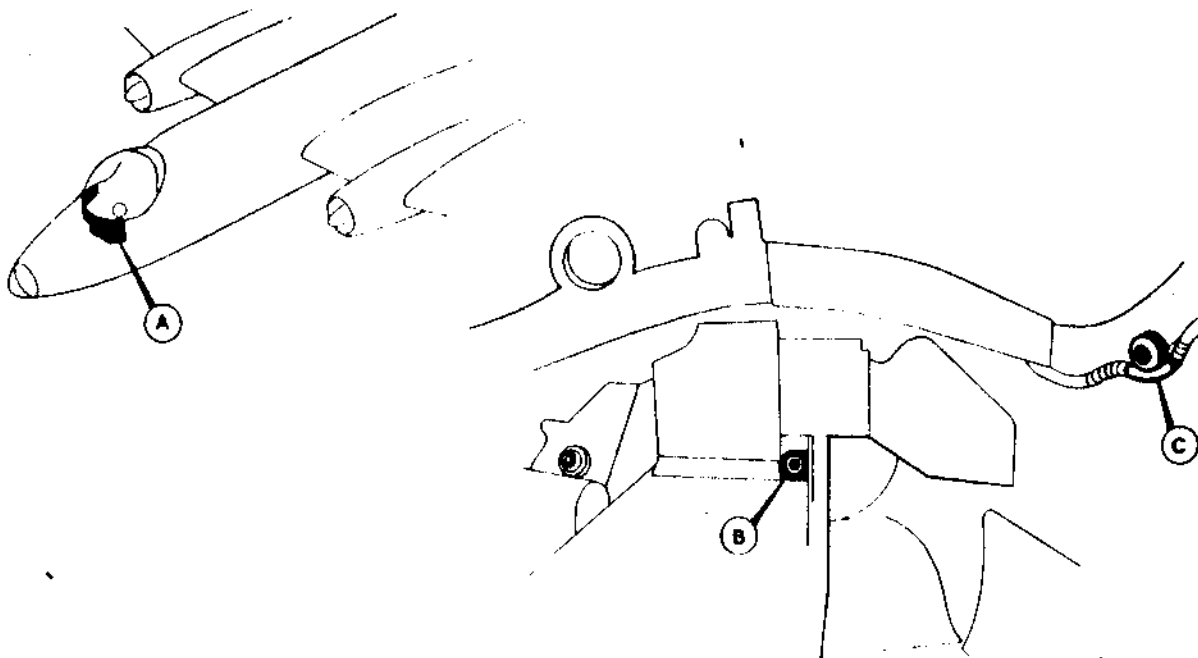

DETAIL A

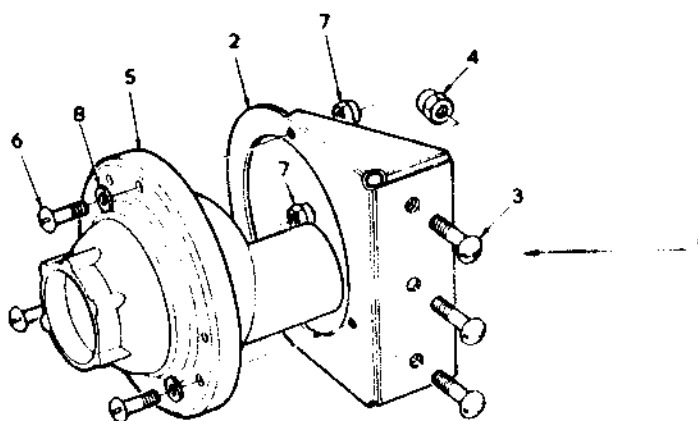

DETAIL B

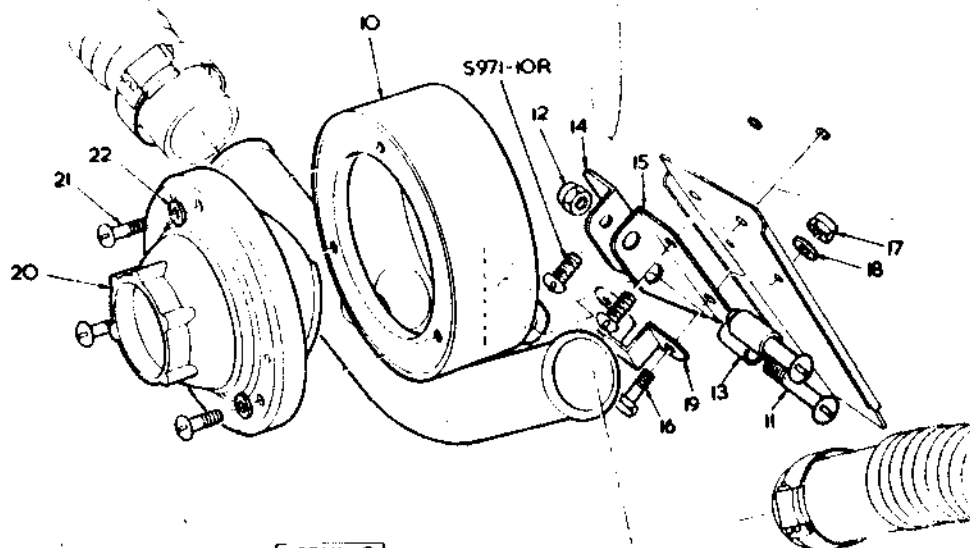

DETAIL C

FIG. 3. CABIN PRESSURE SYSTEM-FRONT FUSELAGE

CODE A

SECT SB



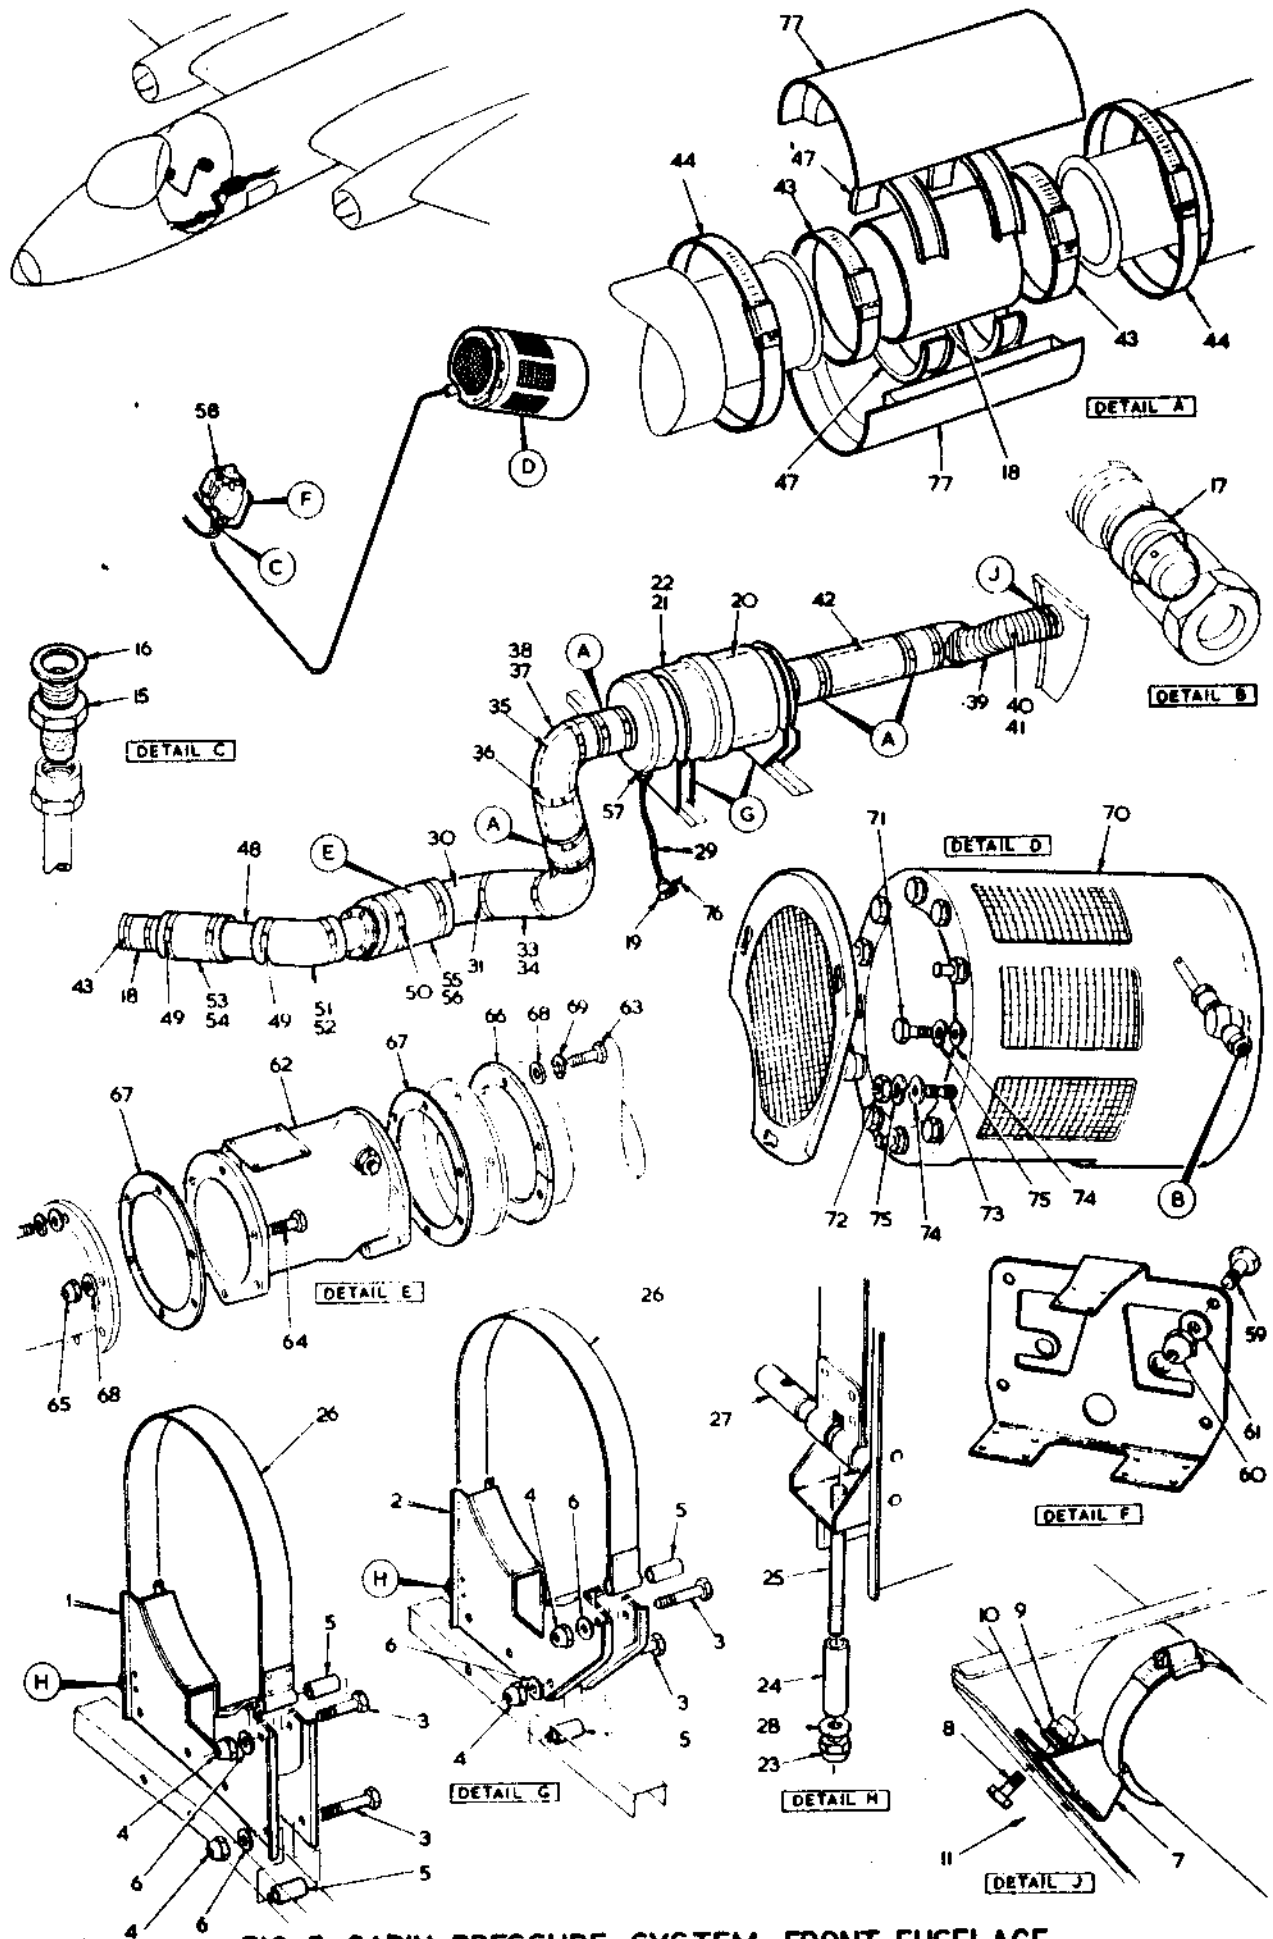


FIG. 5. CABIN PRESSURE SYSTEM-FRONT FUSELAGE

CODE A

SECT 5B


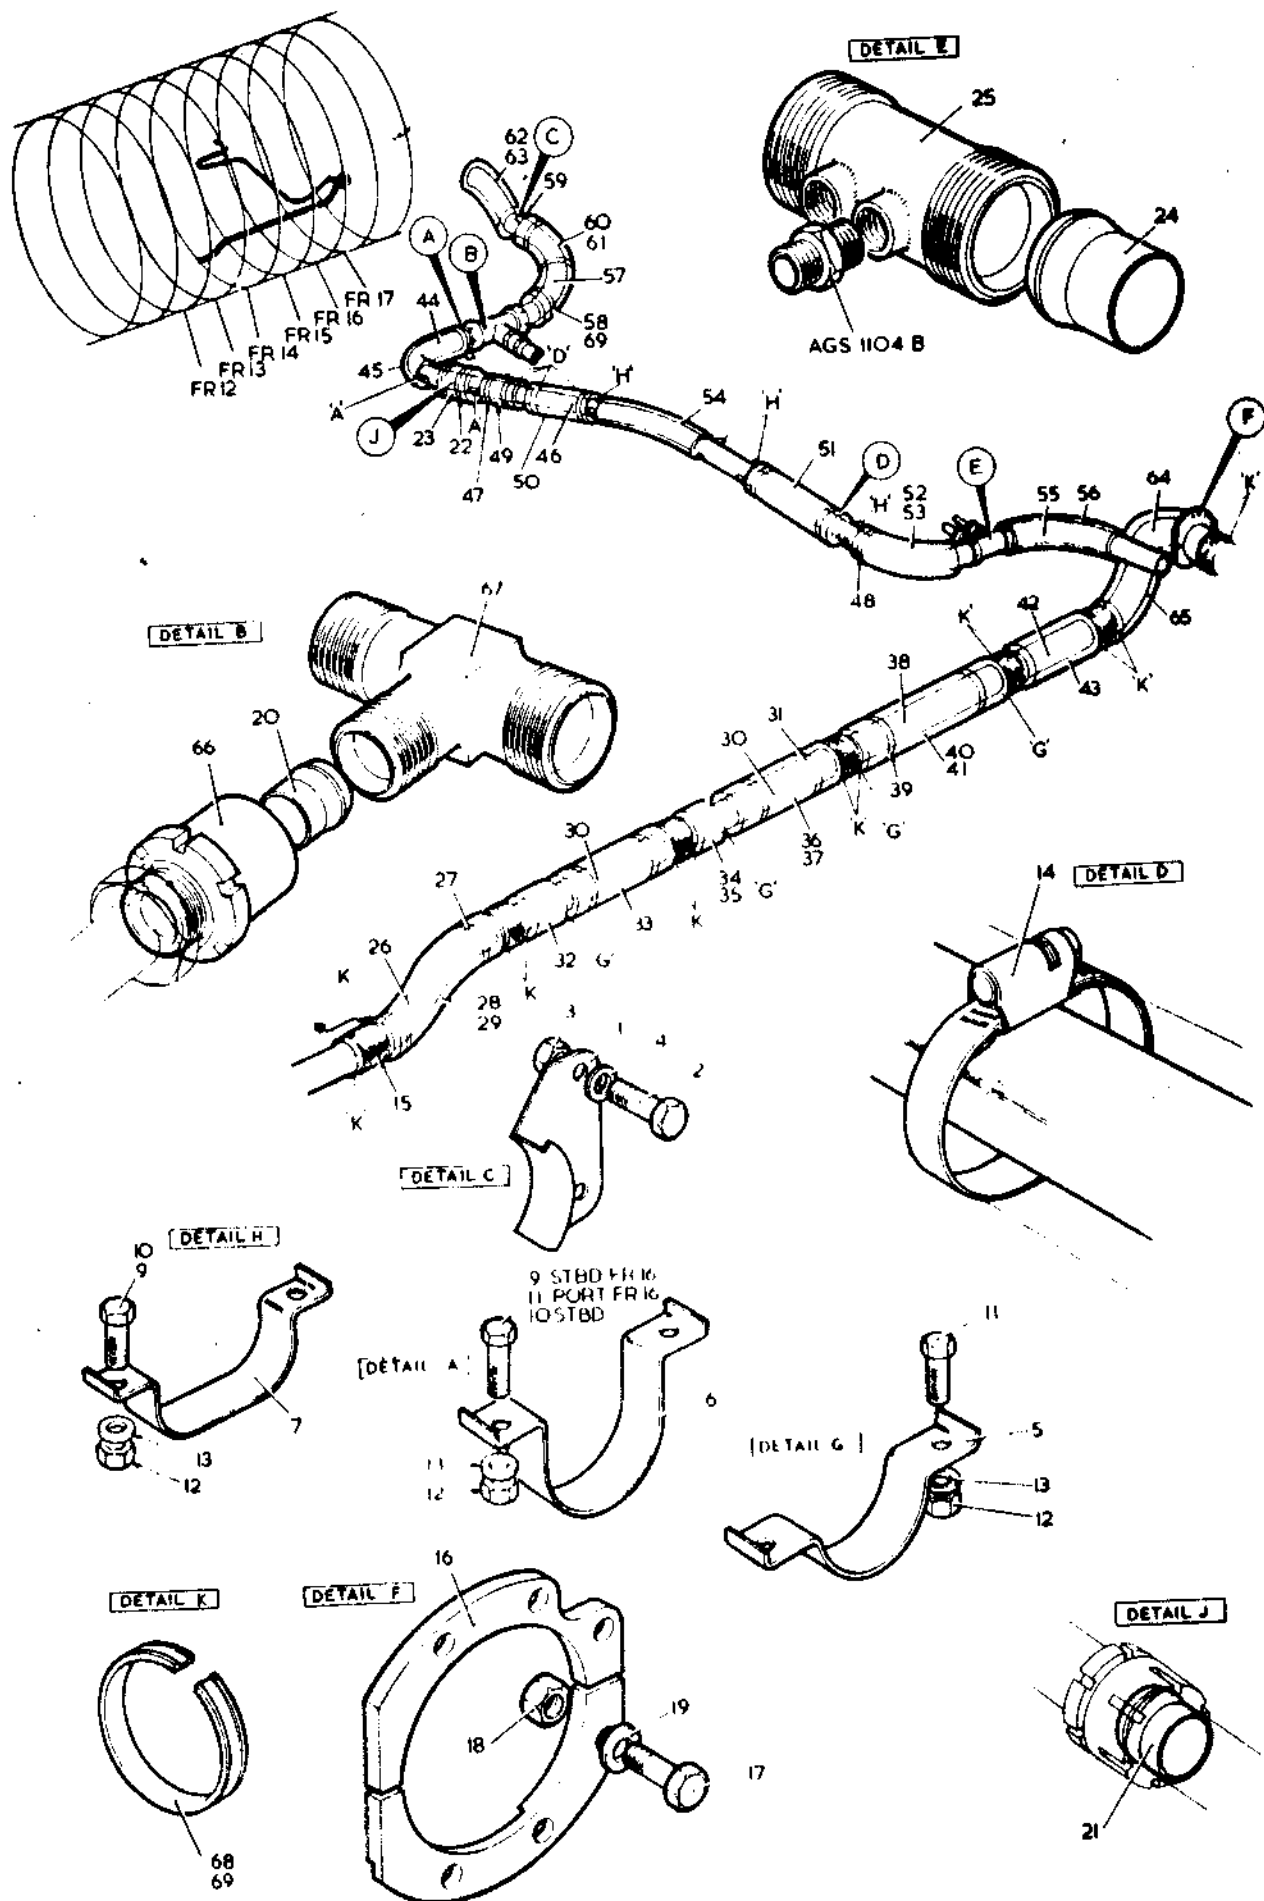


FIG. 6. CABIN PRESSURE SYSTEM IN CENTRE FUSELAGE.

CODE A

SECT 58

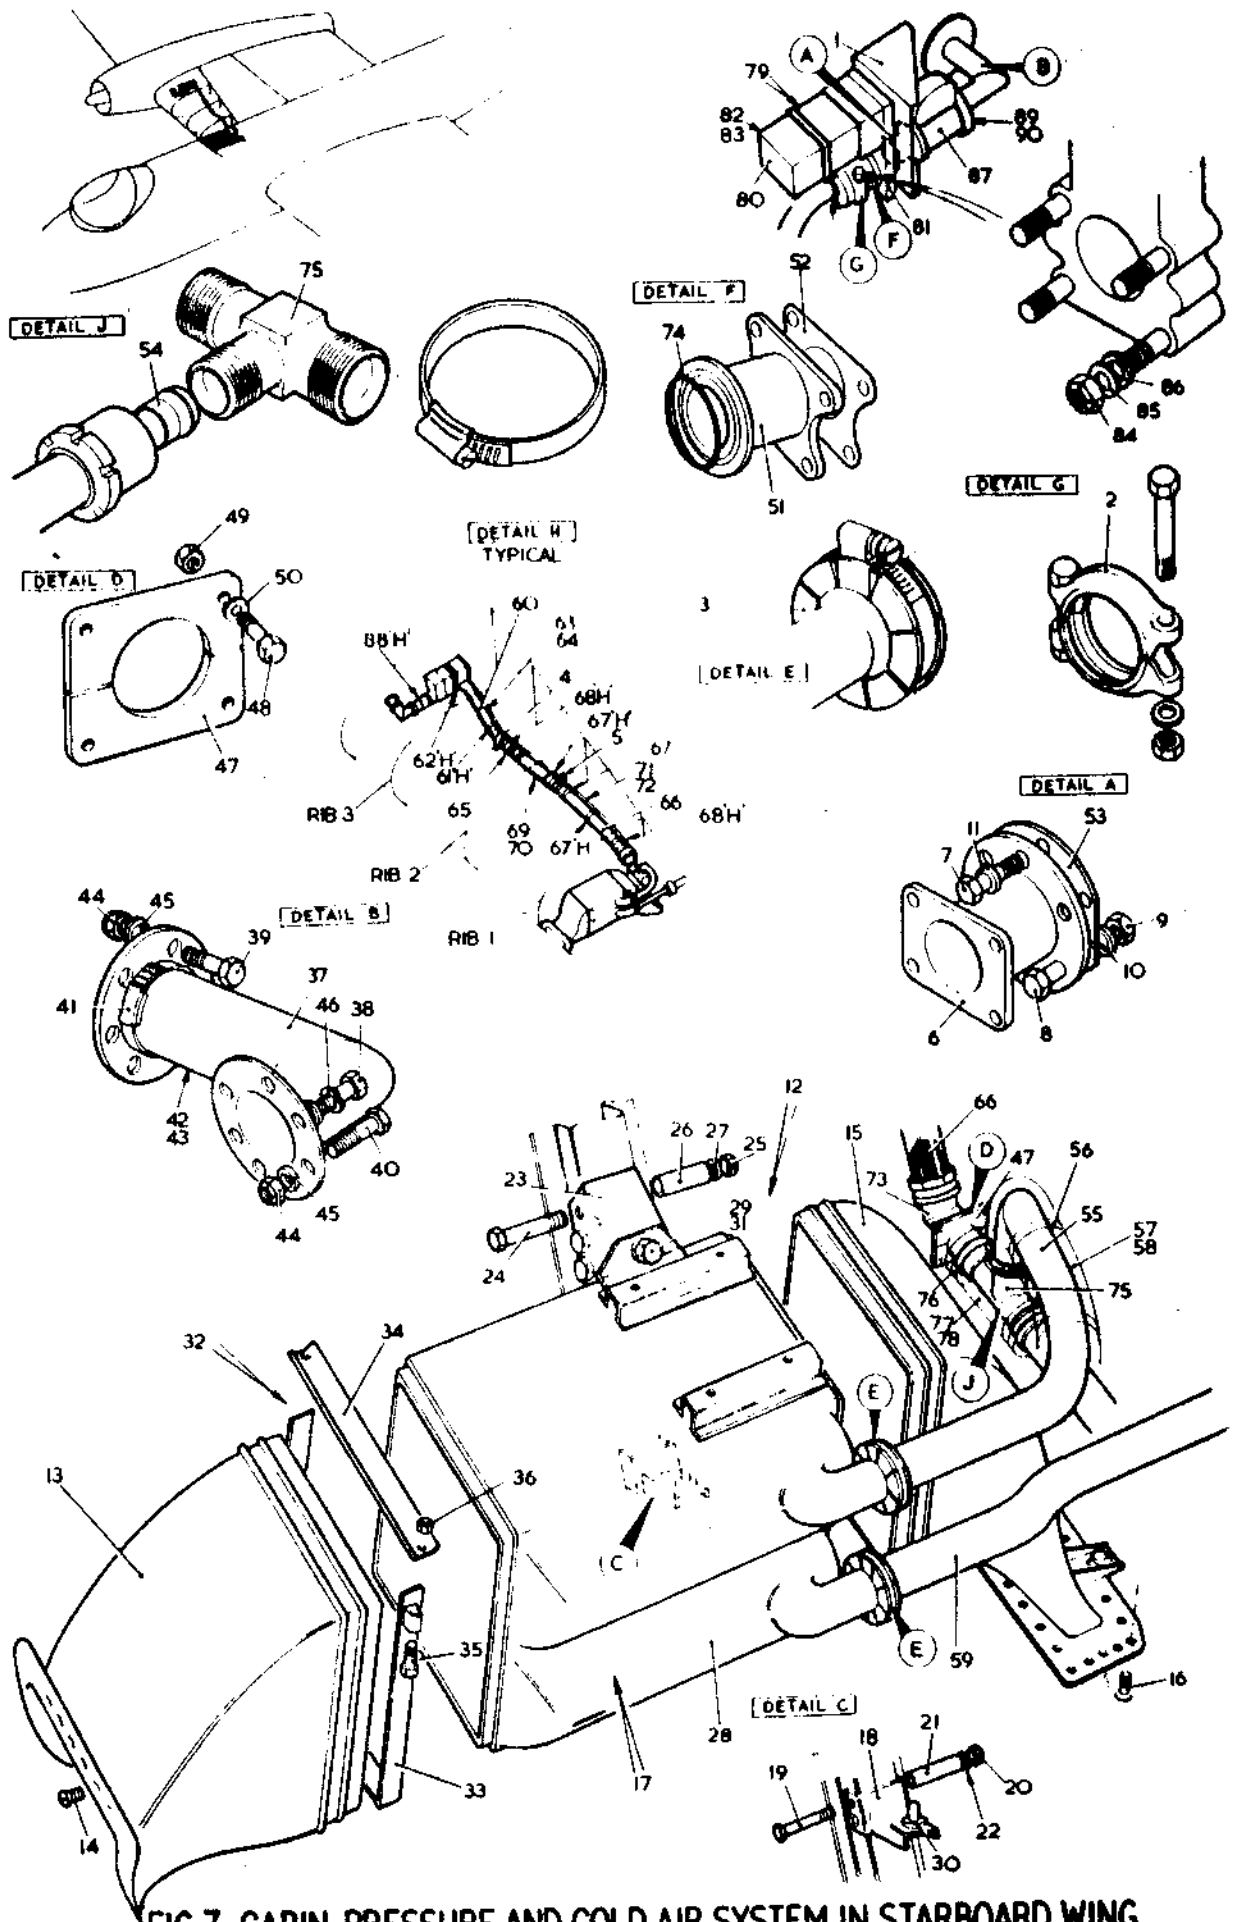

CODE ACD **FIG. 7. CABIN, PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING**

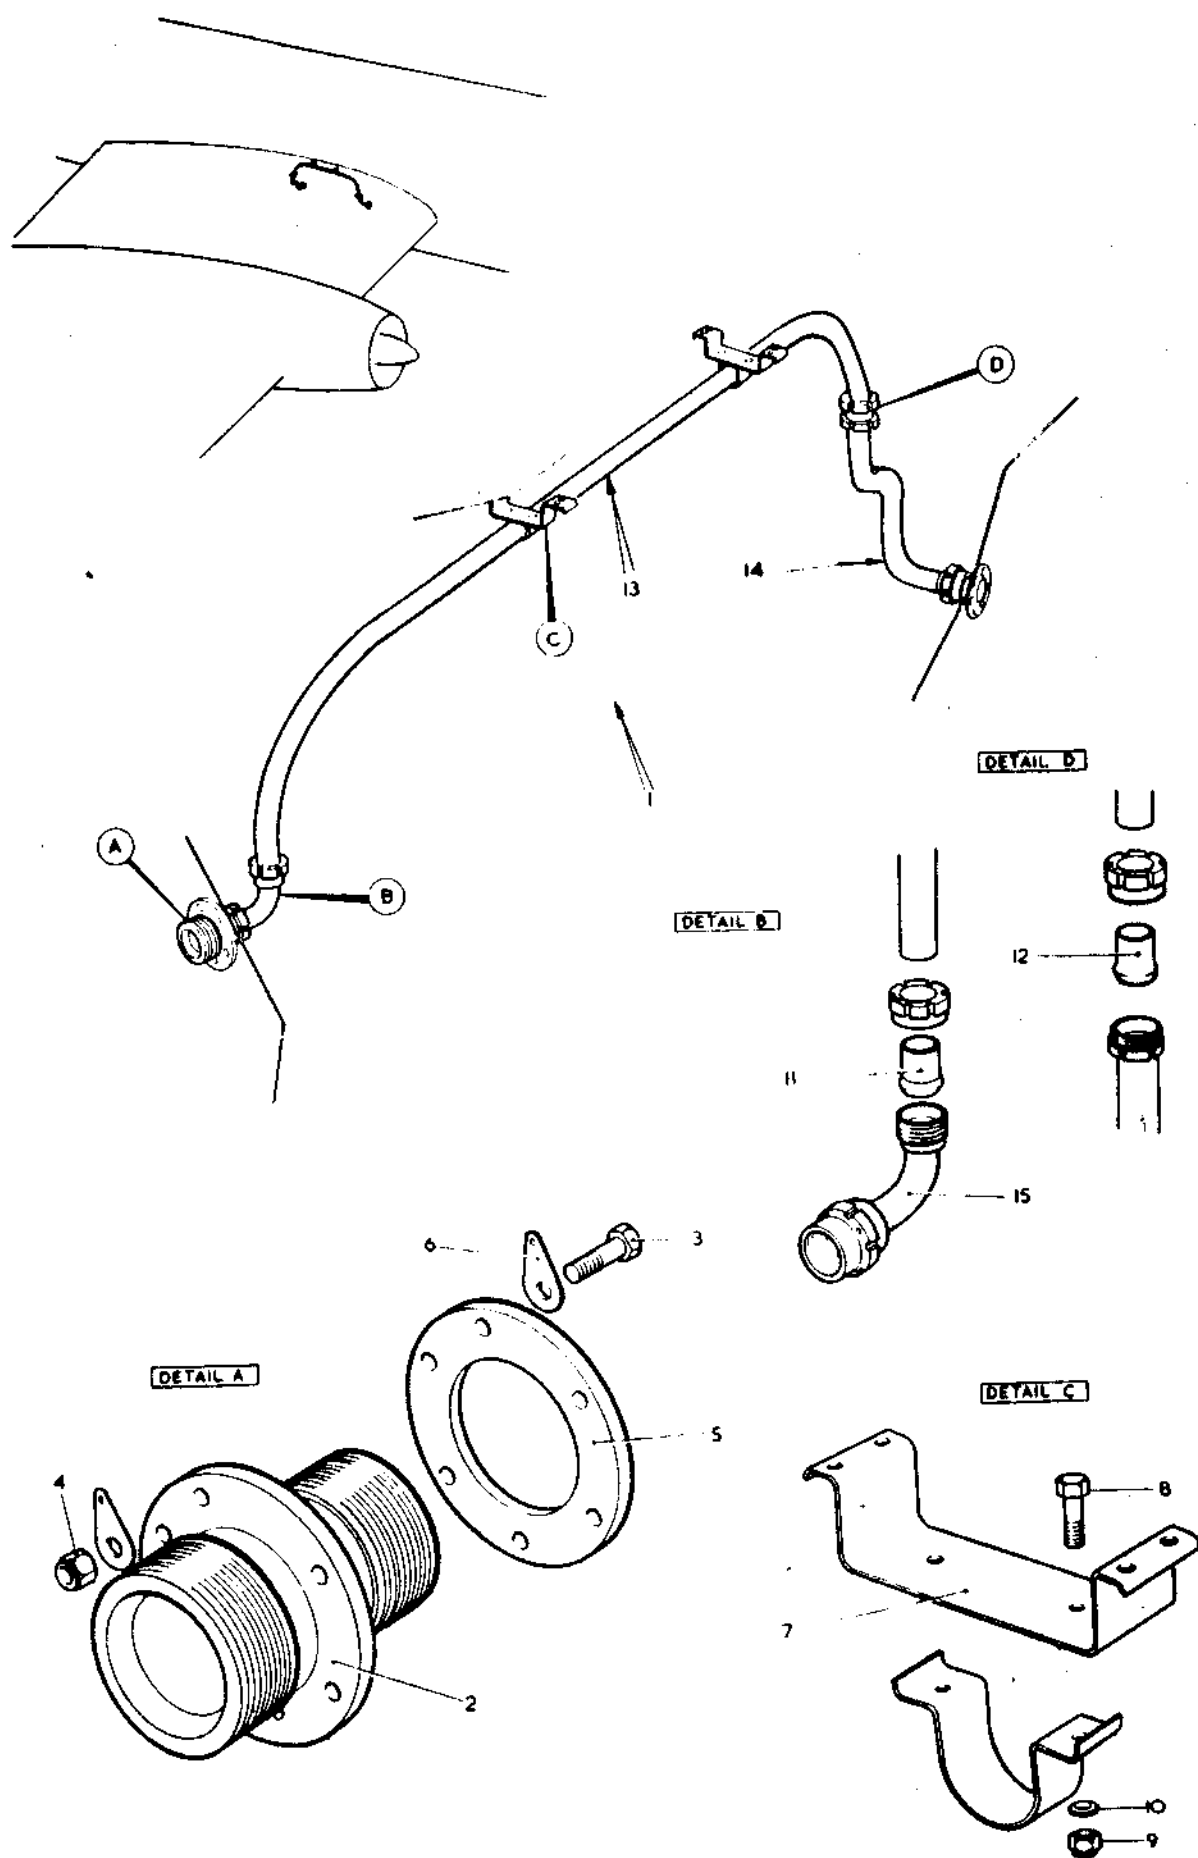


FIG.8 PIPE RUN IN WHEEL BAY, ASSEMBLY

CODE ACD

SECT. 5B

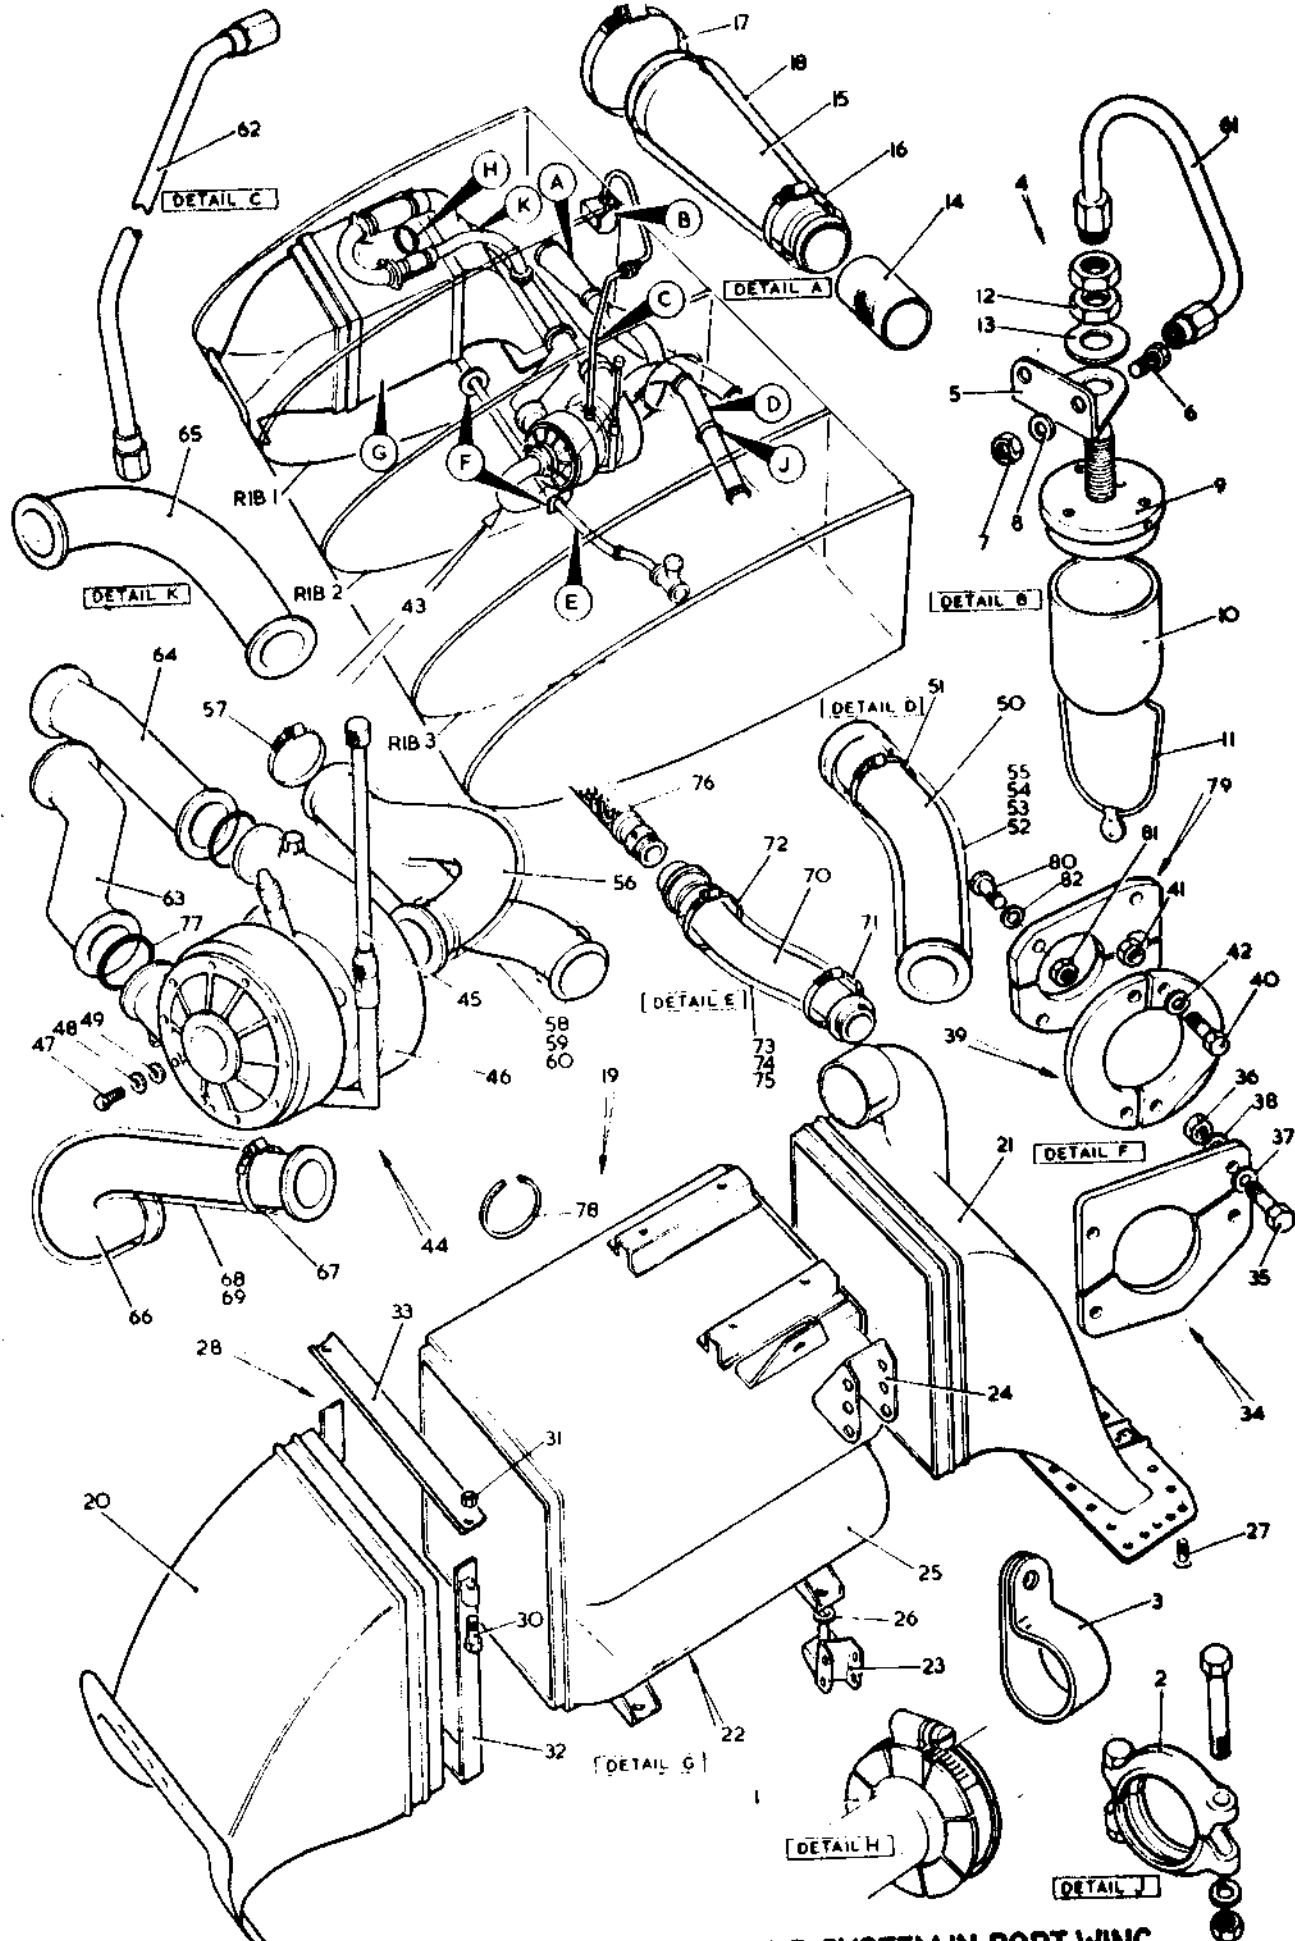


FIG. 9. CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

CODE AB

SECT 5B

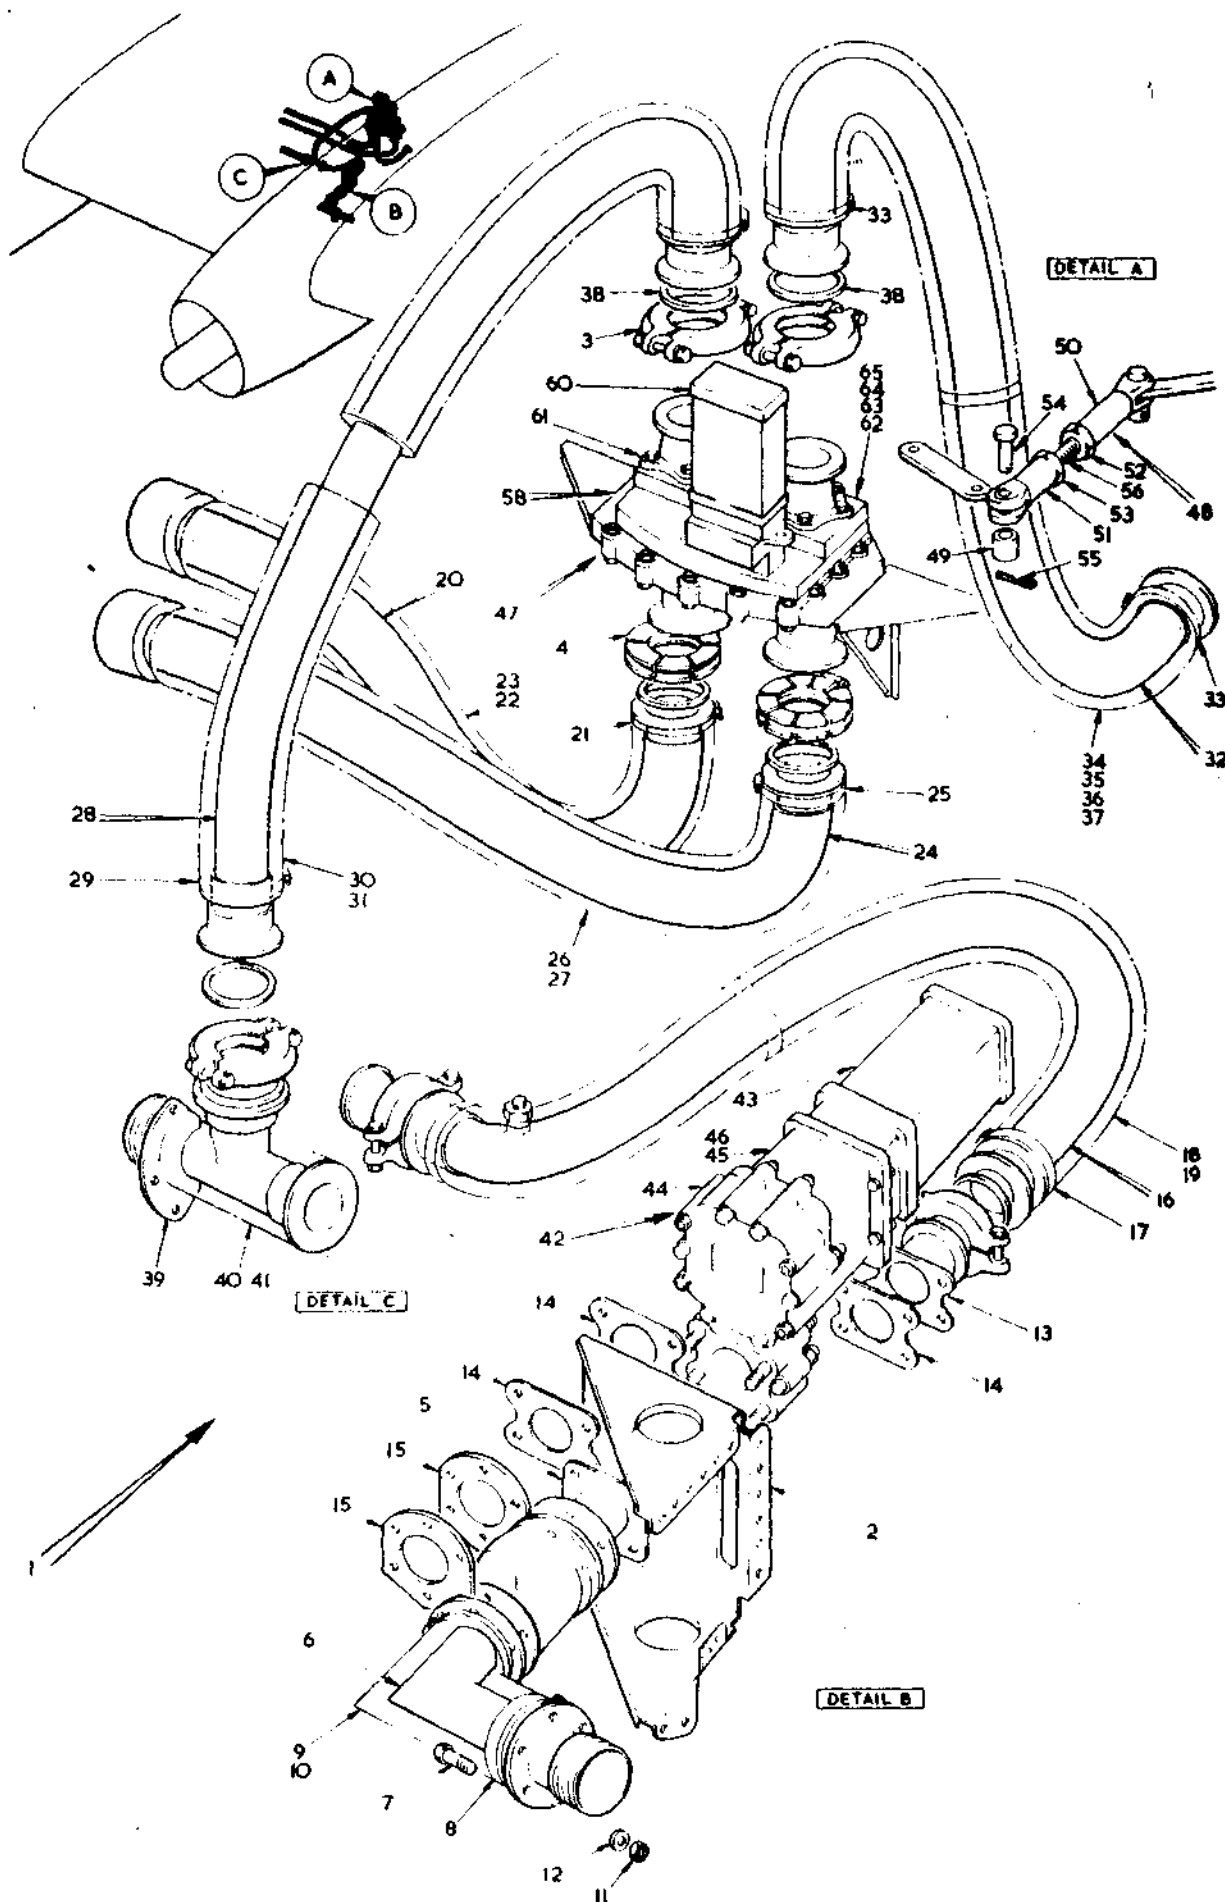


FIG. 10 CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

CODE A B D

SECT. 5B

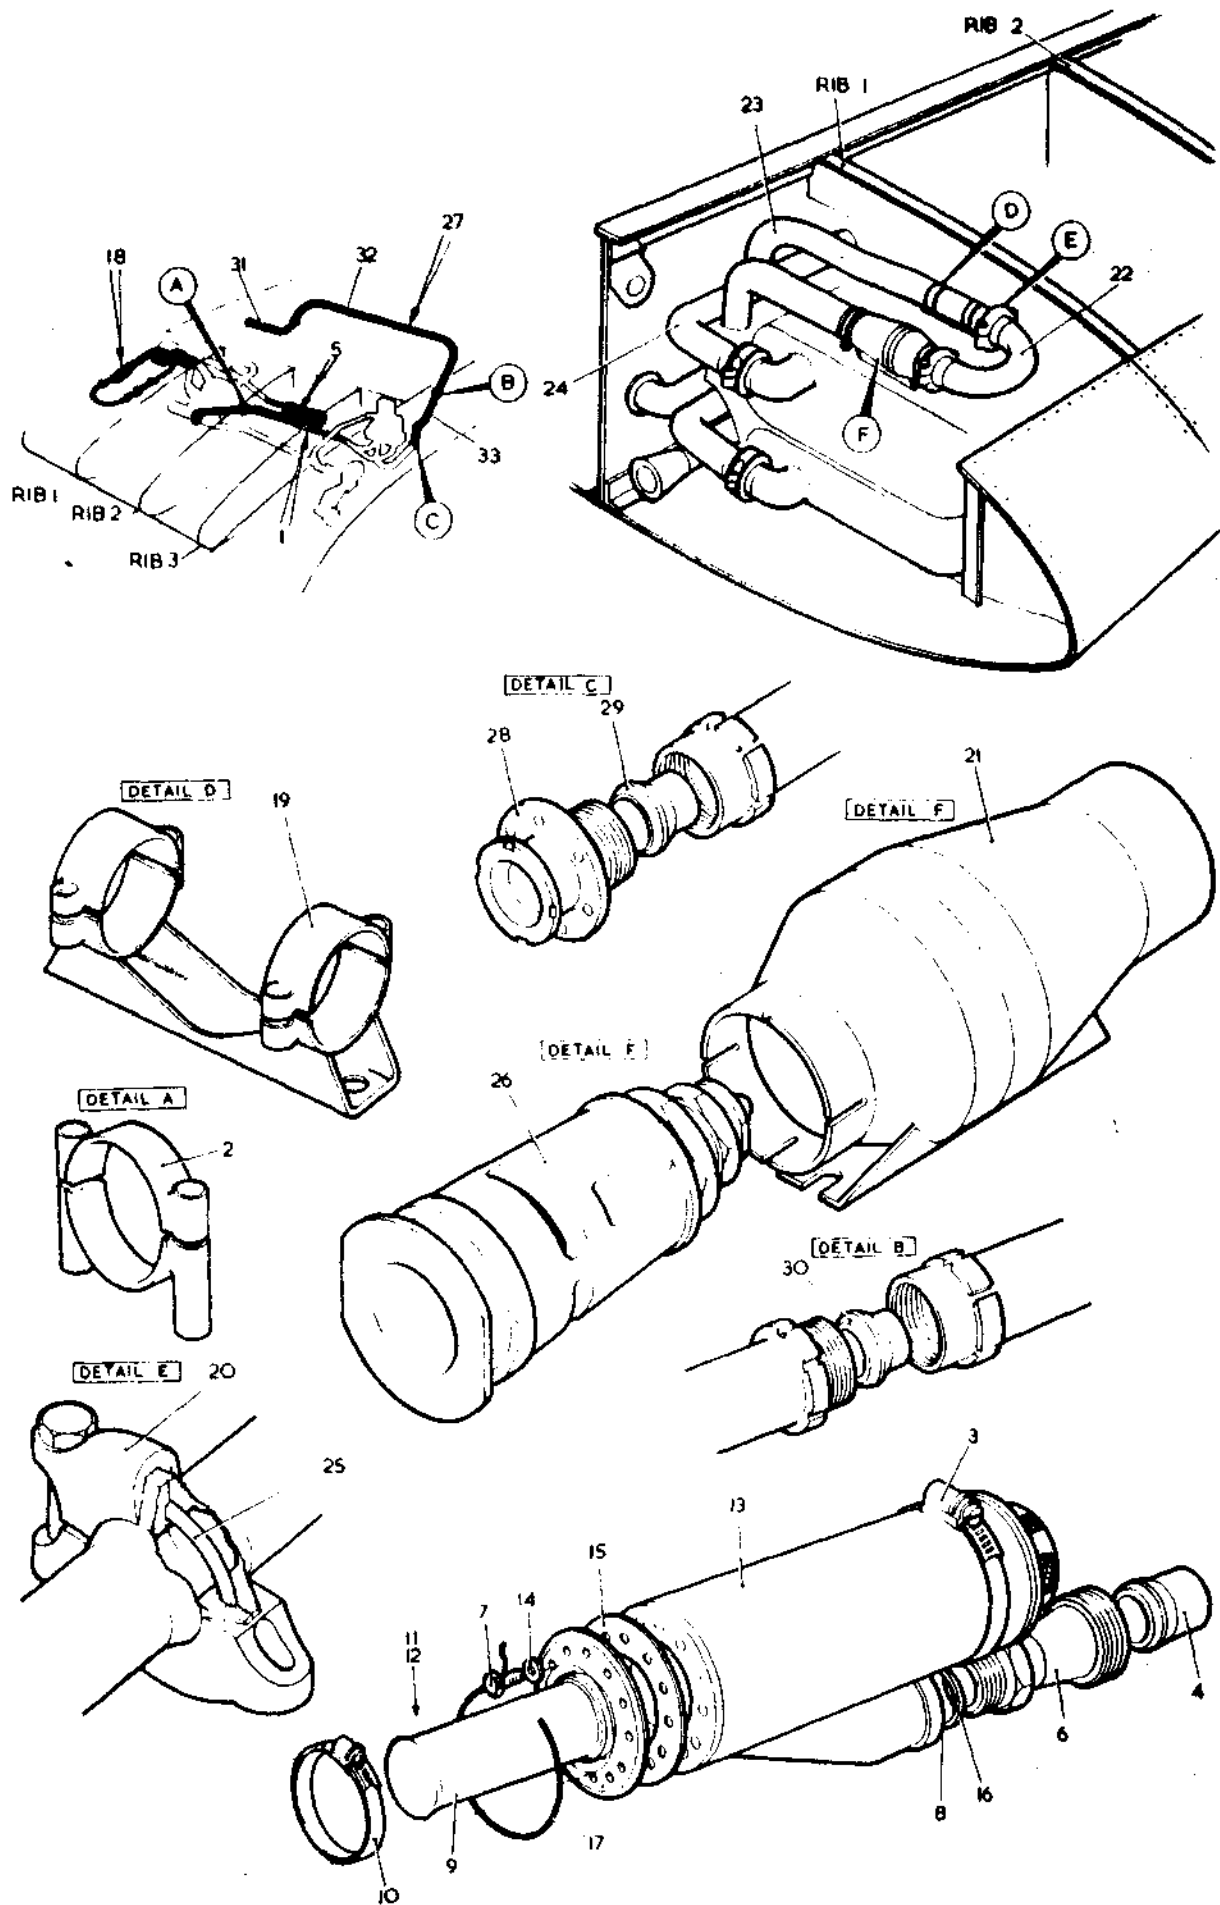


FIG. 11. CABIN PRESSURE AND COLD AIR SYSTEM IN PORT WING

CODE ABD

SECT 58

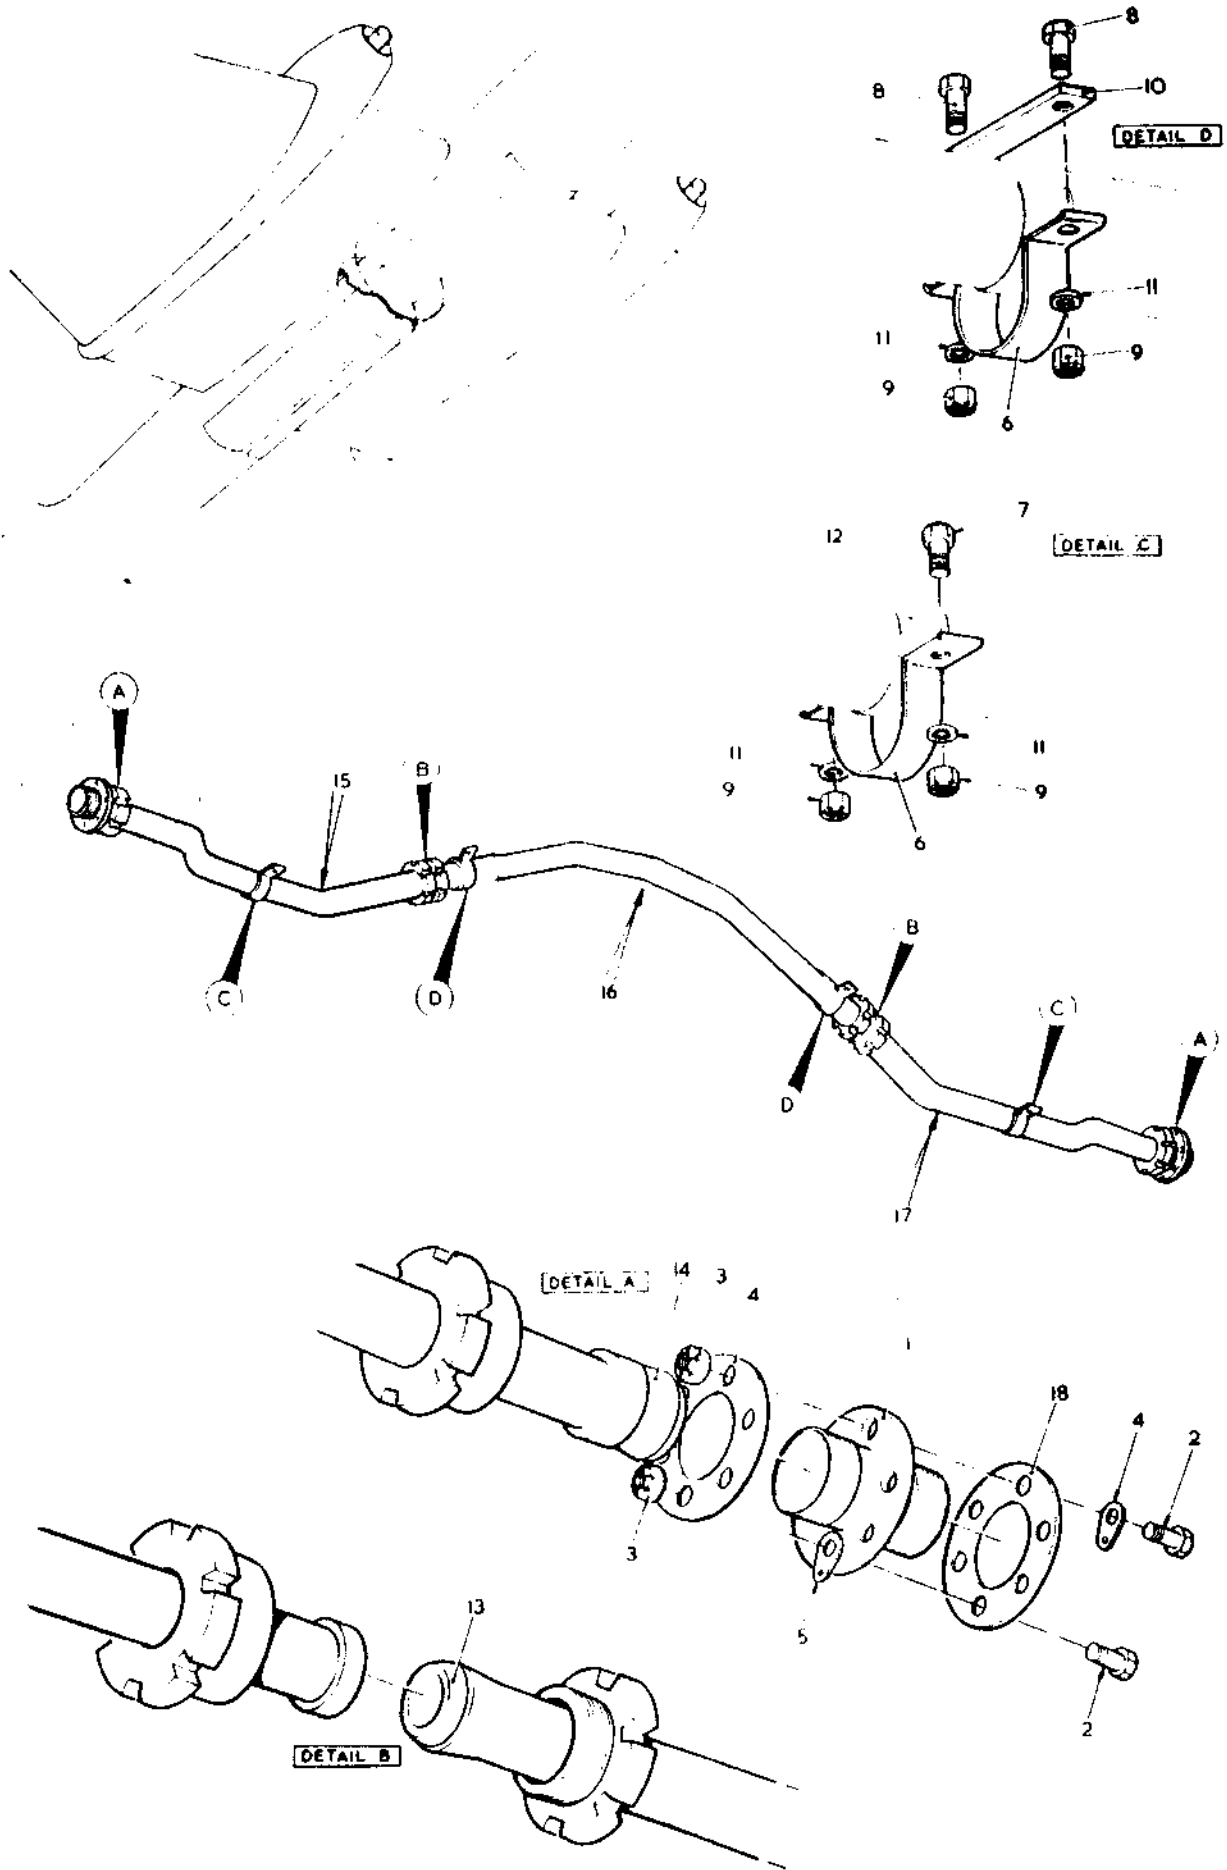


FIG. 12 QAU. SYSTEM IN BOMB BAY ASSEMBLY

SECT. ABC

SECT. 58

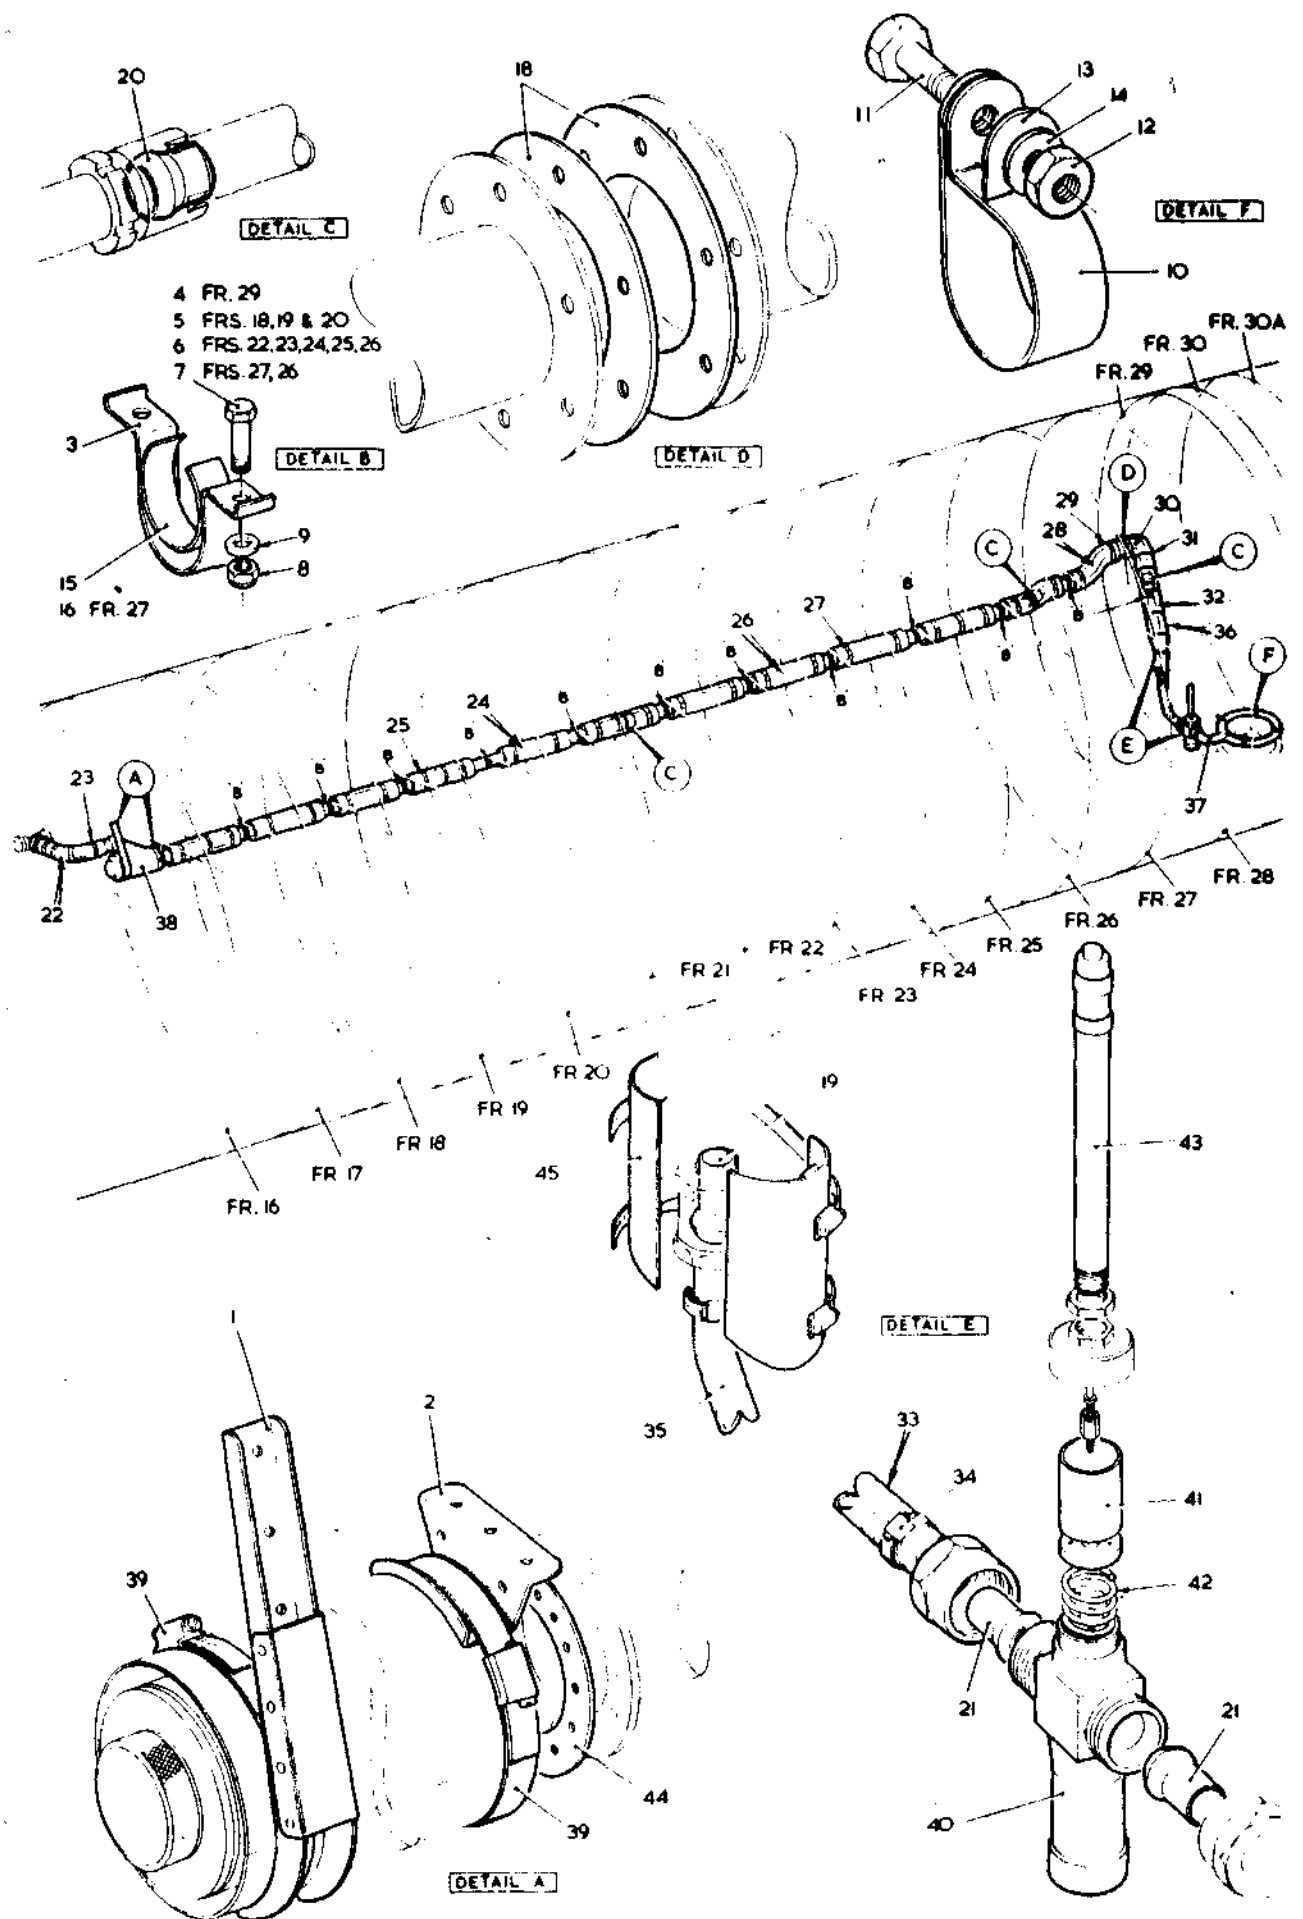


FIG.13. CAMERA PIPE RUN WINDOW HEATING

CODE ABC

SECT. 58

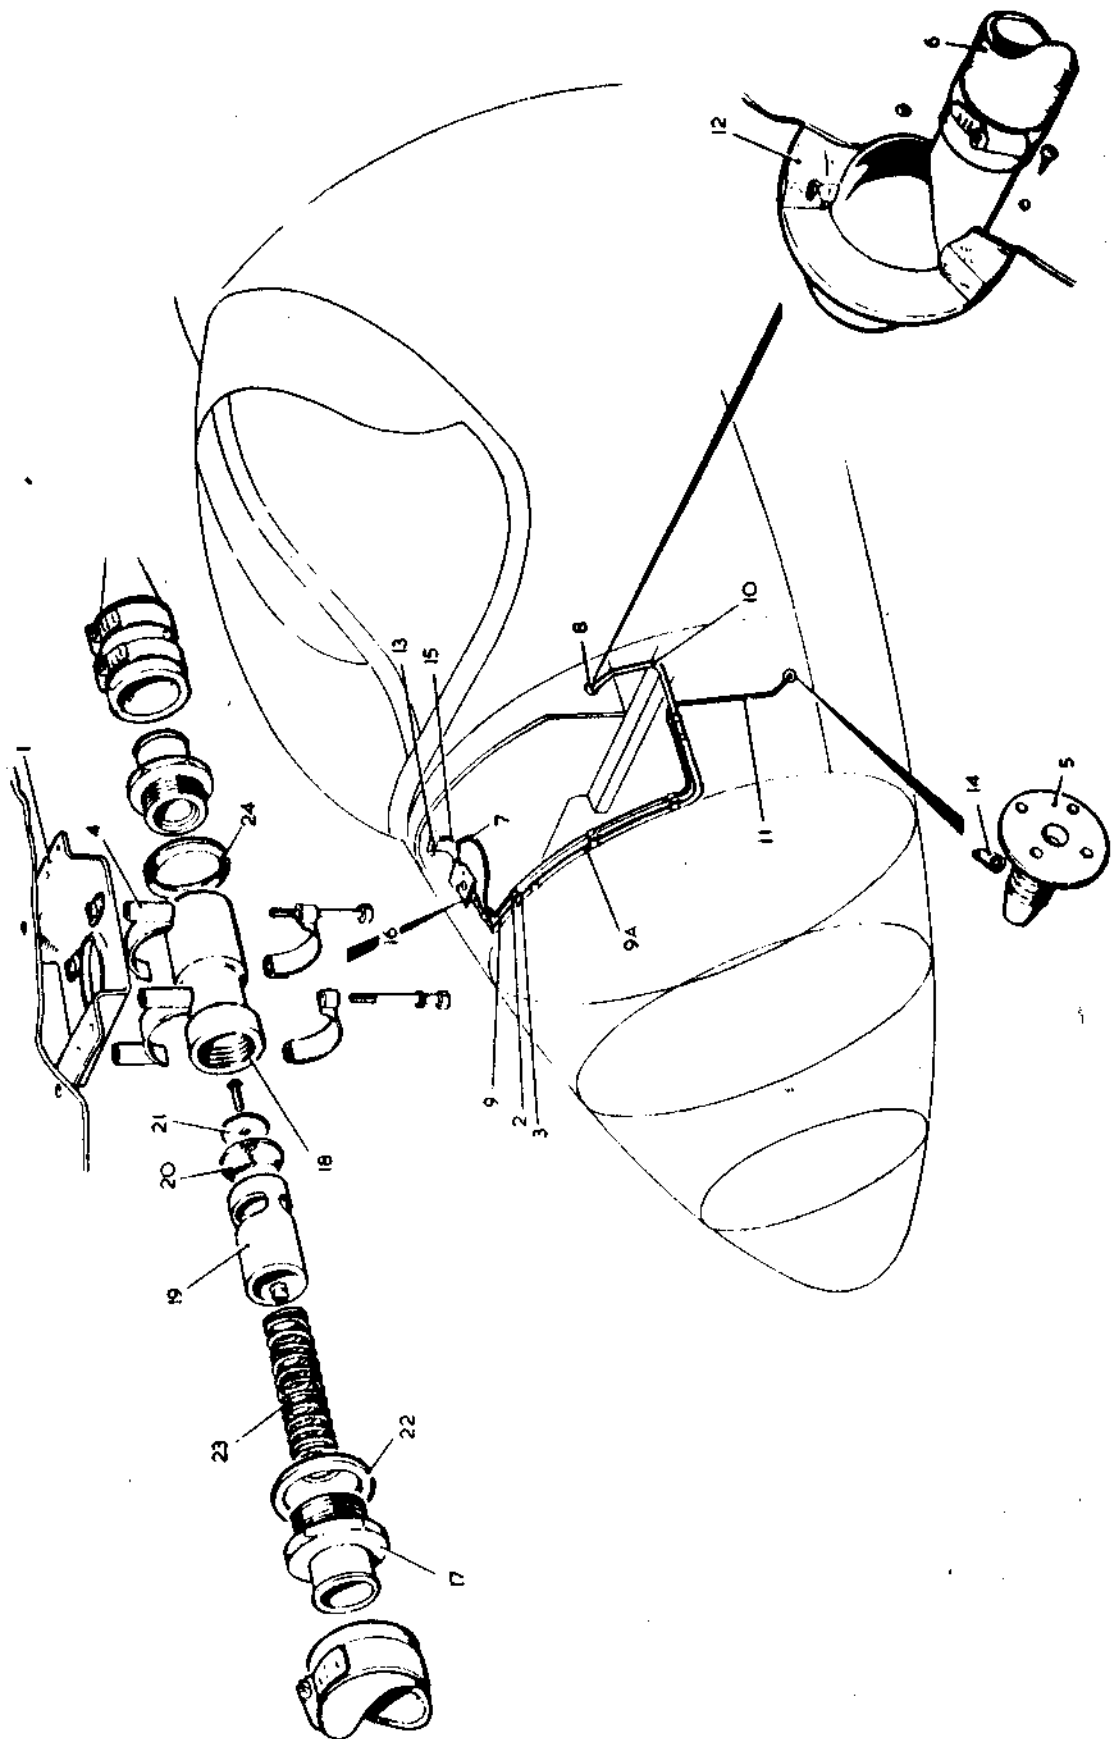


FIG. 14 COLD AIR SUPPLY TO PILOT

SECTION SC
NOT USED

A B C

**SERVICES
DE-MISTING SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.76.1	DE-MISTING SYSTEM ASSEMBLY	—	—	—	
	E.G9.76.49	Spares for:- BLOWER MOUNTING, ASSEMBLY	1	—	—	1 1
	E.G9.76.53	Spares for:- ANGLE, attachment	1	—	—	1 2
28D/9436920	A25/1C	Attaching parts for E.G9.76.53	2	—	C	1 3
28M/10288	AGS.2001/C1	Bolt, 2 BA	2	—	C	1 4
28W/9419475	SP15/C	Nut, 2 BA	2	—	C	1 5
	50D/3310	Washer, 2 BA	1	—	A	1 6
	E.G9.76.51	BLOWER, type 1	1	—	—	1 7
28D/7002428	A25/6C	BRACKET, mounting	4	—	C	1 8
28M/10288	AGS.2001/C1	Attaching parts for E.G9.76.51	4	—	C	1 9
5070	E.A3.76.91	Bolt, 2 BA	12	—	C	1 10
15491	EEAS.27/16EU	Nut, 2 BA	4	—	C	1 11
	9044	Washer, rubber	1	—	C	1 12
28D/9140648	A25/19C	CLIP, blower mounting	4	—	C	1 13
28M/10288	AGS.2001/C1	Attaching parts for E.A3.76.81	4	—	C	1 14
28W/9419475	SP15/C	Bolt, 2 BA	4	—	C	1 15
	BELLS	Nut, 2 BA	4	—	—	1 16
	BAS243-C2	Washer, 2 BA	3	—	—	1 17
	AS4525/8	Attaching parts for AS4525/8	1	—	—	1 18
28W/9419404	4101/10/518	Screw, P.K.	1	—	C	1 19
	SP16/C	Washer, 2 BA	1	—	—	1 20
	EEAS.239/1AH	Washer	1	—	C	1 21
	8974	CONNECTOR, inlet blower	1	—	C	1 22
28D/1212403	A25/33C	Attaching parts for E.A3.76.95	2	—	C	1 23
28M/10288	AGS.2001/C1	Bolt, 2 BA	2	—	C	1 24
28W/9419475	SP15/C	Nut, 2 BA	2	—	C	1 25
5049	E.H3.76.161	Washer, 2 BA	1	—	C	1 26
	8975	Washer, joint	1	—	C	1 27
28S/1011487	A32/A8	CONNECTOR, outlet blower	4	—	C	1 28
28W/6314	AGS.585/A	Attaching parts for E.A3.76.131:-	4	—	C	1 29
	E.G9.76.55	Screw, 6 BA	1	—	—	1 30
	E.G9.76.57	Washer, 6 BA, spring	1	—	—	1 31
	E.A3.76.33	HOSE, inlet blower	2	—	—	1 32
5K/7000208	AS3360/B4B	HOSE, outlet blower	1	—	C	1 33
28M/10280	AGS.2002/B3	HOSE, connecting	1	—	C	1 34
28S/9440345	A40/88	LEAD, bonding	1	—	C	1 35
7724	EEAS.28/2CPH	Attaching parts for AS.3360/B4B	1	—	—	1 36
		Nut, 4 BA	1	—	C	1 37
		Screw, 4 BA	1	—	C	1 38
		Washer	1	—	—	1 39

**SERVICES
DE-MISTING SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.G9.76.59	PIPE, assembly, blower inlet to air drier	1	-	-	1 36
	E.G9.76.61	PIPE, assembly, blower, outlet to hose connection	1	-	-	1 37
2160	EEAS.112/21	CLIP, pipe Attaching parts for EEAS 112/21	16	-	C	1 38
28D/9436920	A25/1C	Bolt, 2 BA	1	-	C	1 39
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	-	C	1 40
28W/9419475	SP.15/C	Washer, 2 BA	1	-	C	1 41
28E/9428425	AS.2294/2	CLIP, spring, 3/8" i/d	5	-	C	1 42
17525	EEAS.143/10	CLIP	1	-	C	1 43
1815	E.A3.76.47	FILTER, ASSEMBLY Consisting of	1	-	B	2 1
1816	E.A3.76.89	BOLT, clamping cover	3	S 96	C	2 2
1817	E.A3.76.51	CAP, end	1	-	C	2 3
	E.A3.76.49	CASE, outer	1	-	C	2 4
1892		ELEMENT, filter (Purolator MFA 36A)	1	-	C	2 5
28M/1013165	AGS.113/B	NUT, wing, 4 BA	3	-	C	2 6
8978	E.A3.76.67	PLUG, sealing	1	DTD.683	C	2 7
1818	E.A3.76.75	SPRING	1	DTD.215	C	2 8
1819	E.A3.76.71	WASHER, sealing, plug, rubber	2	Shore 30	C	2 9
1820	E.A3.76.73	WASHER, sealing, cap, rubber	1	Shore 30	C	2 10
28W/1031013	AGS.163/B	WASHER, spring, clamping bolt	3	-	C	2 11
5X/1200092	Z.1757	GROMMET	1	-	C	1 44
	E.A3.76.21	HOSE, connecting, 3/8" o/d x 1/2" i/d x 4 5" long (Make from Ref. 32C/533)	1	Rubber	LM	1 45
	E.A3.76.23	HOSE, connecting, 3/8" o/d x 1/2" i/d x 60" long (Make from Ref. 32C/533)	1	Rubber	LM	1 46
	E.A3.76.25	HOSE, connecting, 9/16" o/d x 7/16" i/d x 19" long (Make from Ref. 32C/534)	1	Rubber	LM	1 47
	E.A3.76.27	HOSE, connecting, 9/16" o/d x 7/16" i/d x 4" long (Make from Ref. 32C/534)	1	Rubber	LM	1 48
	E.A3.76.29	HOSE, connecting, 9/16" o/d x 7/16" i/d x 6" long (Make from Ref. 32C/534)	1	Rubber	LM	1 49
	E.A3.76.31	HOSE, connecting, 9/16" o/d x 7/16" i/d x 2" long (Make from Ref. 32C/534)	1	Rubber	LM	1 50
	E.A3.76.33	HOSE, connecting, 9/16" o/d x 7/16" i/d x 1.5" long (Make from Ref. 32C/534)	6	Rubber	LM	1 51
	E.A3.76.175	HOSE, connecting, 9/16" o/d x 7/16" i/d x 20" long (Make from Ref. 32C/534)	1	Rubber	LM	1 52
	E.A3.76.209	HOSE, connecting, 9/16" o/d x 7/16" i/d x 3" long (Make from Ref. 32C/534)	1	Rubber	LM	1 53
	E.A3.76.41	MOUNTING, FILTER ASSEMBLY Spares for:	-	-	-	2 12
9042	E.A3.76.85	BRACKET, MOUNTING ASSEMBLY	1	-	C	2 13
9043	E.A3.76.86	BRACKET, MOUNTING ASSEMBLY Spares for	1	-	C	2 14
42334	E.A1.10.1671	EYE-BOLT	1	-	C	2 15
	E.A1.10.1669	HINGE	1	-	C	2 16
1004	E.A1.10.1663	NUT, knurled	1	-	C	2 17
	E.A3.76.89	STRAP	1	-	-	2 18
28W/3089	AGS.163/C	WASHER, spring	1	-	C	2 19

**SERVICES
DE-MISTING SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A3.76.257	PIPE, assembly, connection to connection, blower intake	1	—	—	1 54
1372	E.A3.76.5	TEE, connecting piece at drier tube	1	—	C	1 55
1373	E.A3.76.19	TEE, connecting piece, at bomb aimer's window hose	1	—	C	2 20
1374	E.A1.76.3	TUBE, AIR DRIER, NOSE, ASSEMBLY Consisting of:-	1	—	B	2 21
1376	E.A1.76.7	CAP, container, outlet end	1	—	C	2 22
1376	E.A1.76.9	CAP, container, filter end	1	—	C	2 23
	E.A1.76.5	CONTAINER	1	—	—	2 24
1377	E.A1.76.17	FILTER, ASSEMBLY	2	—	C	2 25
		Spare for:-				
	E.A1.76.23	FILTER, pad, 1/16" thick	1	Felt	LM	2 26
	E.A1.76.21	PLATE, filter, felt retaining	1	L.72	—	2 27
1378	E.A1.76.25	WASHER, rubber sealing container and cap	2	Shore 40-45	C	2 28
		Attaching parts for E.A1.76.3				
28D/9436920	A26/1C	Bolt, 2 BA	4	—	C	2 29
1369	E.A3.76.13	Clip	2	—	C	2 30
28M/10288	AGS.2001/C/1	Nut, 2 BA	4	—	C	2 31
1379	E.A3.76.17	Washer, pad	4	—	C	2 32
	E.G9.76.36	TUBE, AIR DRIER, PORT ASSEMBLY Consisting of:-	1	—	—	1 56
2840	E.A3.76.187	BOLT, clamping cover	3	S.95	C	1 57
	E.G9.76.37	CAP, end assembly	1	—	—	1 58
	E.A3.76.199	CONTAINER, body assembly	1	—	—	1 59
1821	E.A3.76.79	FILTER ASSEMBLY	1	—	C	1 60
		Spare for:-				
	E.A3.76.77	FILTER, pad	1	—	—	1 61
	E.A1.76.21	PLATE, retaining	1	L.72	—	1 62
	E.A1.76.19	RING, mounting	1	—	—	1 63
28M/1013185	AGS.113/B	NUT, wing	3	—	C	1 64
1378	E.A1.76.25	WASHER, rubber, sealing container and cap	2	Shore 40-45	C	1 65
28W/9416642	SP.47/B	WASHER, spring	3	—	C	1 66
		Attaching parts for E.G9.76.35				
1000	E.A1.10.1657	CLIP, top half	2	DTD.124	C	1 67
1001	E.A1.10.1659	CLIP, bottom half	2	DTD.124	C	1 68
1004	E.A1.10.1663	Nut, knurled, finger	4	L.40	C	1 69
2841	E.A3.76.101	TUBE, AIR DRIER, STARBOARD, ASSEMBLY Consisting of:-	1	—	B	2 33
	E.A3.76.159	ADAPTOR	1	—	—	2 34
	E.A3.76.103	CONTAINER, body	1	—	—	2 35
	VOKES					
27B/2900	A.12681	FILTER	2	—	B	2 36
2842	E.A3.76.105	HOSE, connecting, 3 1/8" o/d x 3" i/d x 2" long	1	Rubber	C	2 37
		Attaching parts for E.A3.76.105:-				
28E/9130219	AGS.605/4	Clip, type J. MK.4	2	—	C	2 38
21254	E.A3.76.107	VALVE, ASSEMBLY	1	—	B	2 39
		Spare for:-				
	E.A3.76.139	BODY, valve inlet	1	—	—	2 40
	E.A3.76.137	BODY, valve, outlet	1	—	—	2 41
	E.A3.76.135	CAP, end	1	—	—	2 42
		Attaching parts for E.A3.76.135				
28M/5805573	A27/CS	Nut, 2 BA	6	—	C	2 43
28W/9419402	SP13/C	Washer, 2 BA	6	—	C	2 44

SERVICES
DE-MISTING SYSTEM

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28N/1007986	—	. . . Circlip, filter retaining	1	—	C	2 46
26175	E.A3.76.153	. . . FILTER	1	—	C	2 46
	E.A3.76.143	. . . NUT, lock valve adjusting screw	2	—	—	2 47
	E.A3.76.165	. . . SCREW, valve adjusting	2	—	—	2 48
2843	E.A3.76.147	. . . SEAL, rubber	1	—	C	2 49
	E.A3.76.119	. . . SEATING, valve	1	—	—	2 50
2844	E.A3.76.149	. . . SPRING, valve	2	—	C	2 51
	E.A3.76.151	. . . VALVE	2	—	—	2 52
		Attaching parts for E.A3.76.101				
1000	E.A1.10.1667	. CLIP, top half	2	DTD.124	C	2 53
1001	E.A1.10.1668	. CLIP, bottom half	2	DTD.124	C	2 54
1004	E.A1.10.1663	. NUT, knurled	4	DTD.124	C	2 55
8980	E.A3.76.166	. TUBE, alloy continuation between frames 1 and 4 port side	1	L.56	C	1 70
8981	E.A3.76.167	. TUBE, alloy, from air filter to hose connection eft of frame	1	L.56	C	1 71
7142	E.A3.76.169	. TUBE, alloy, from air filter to canopy hose connection	1	L.56	C	1 72

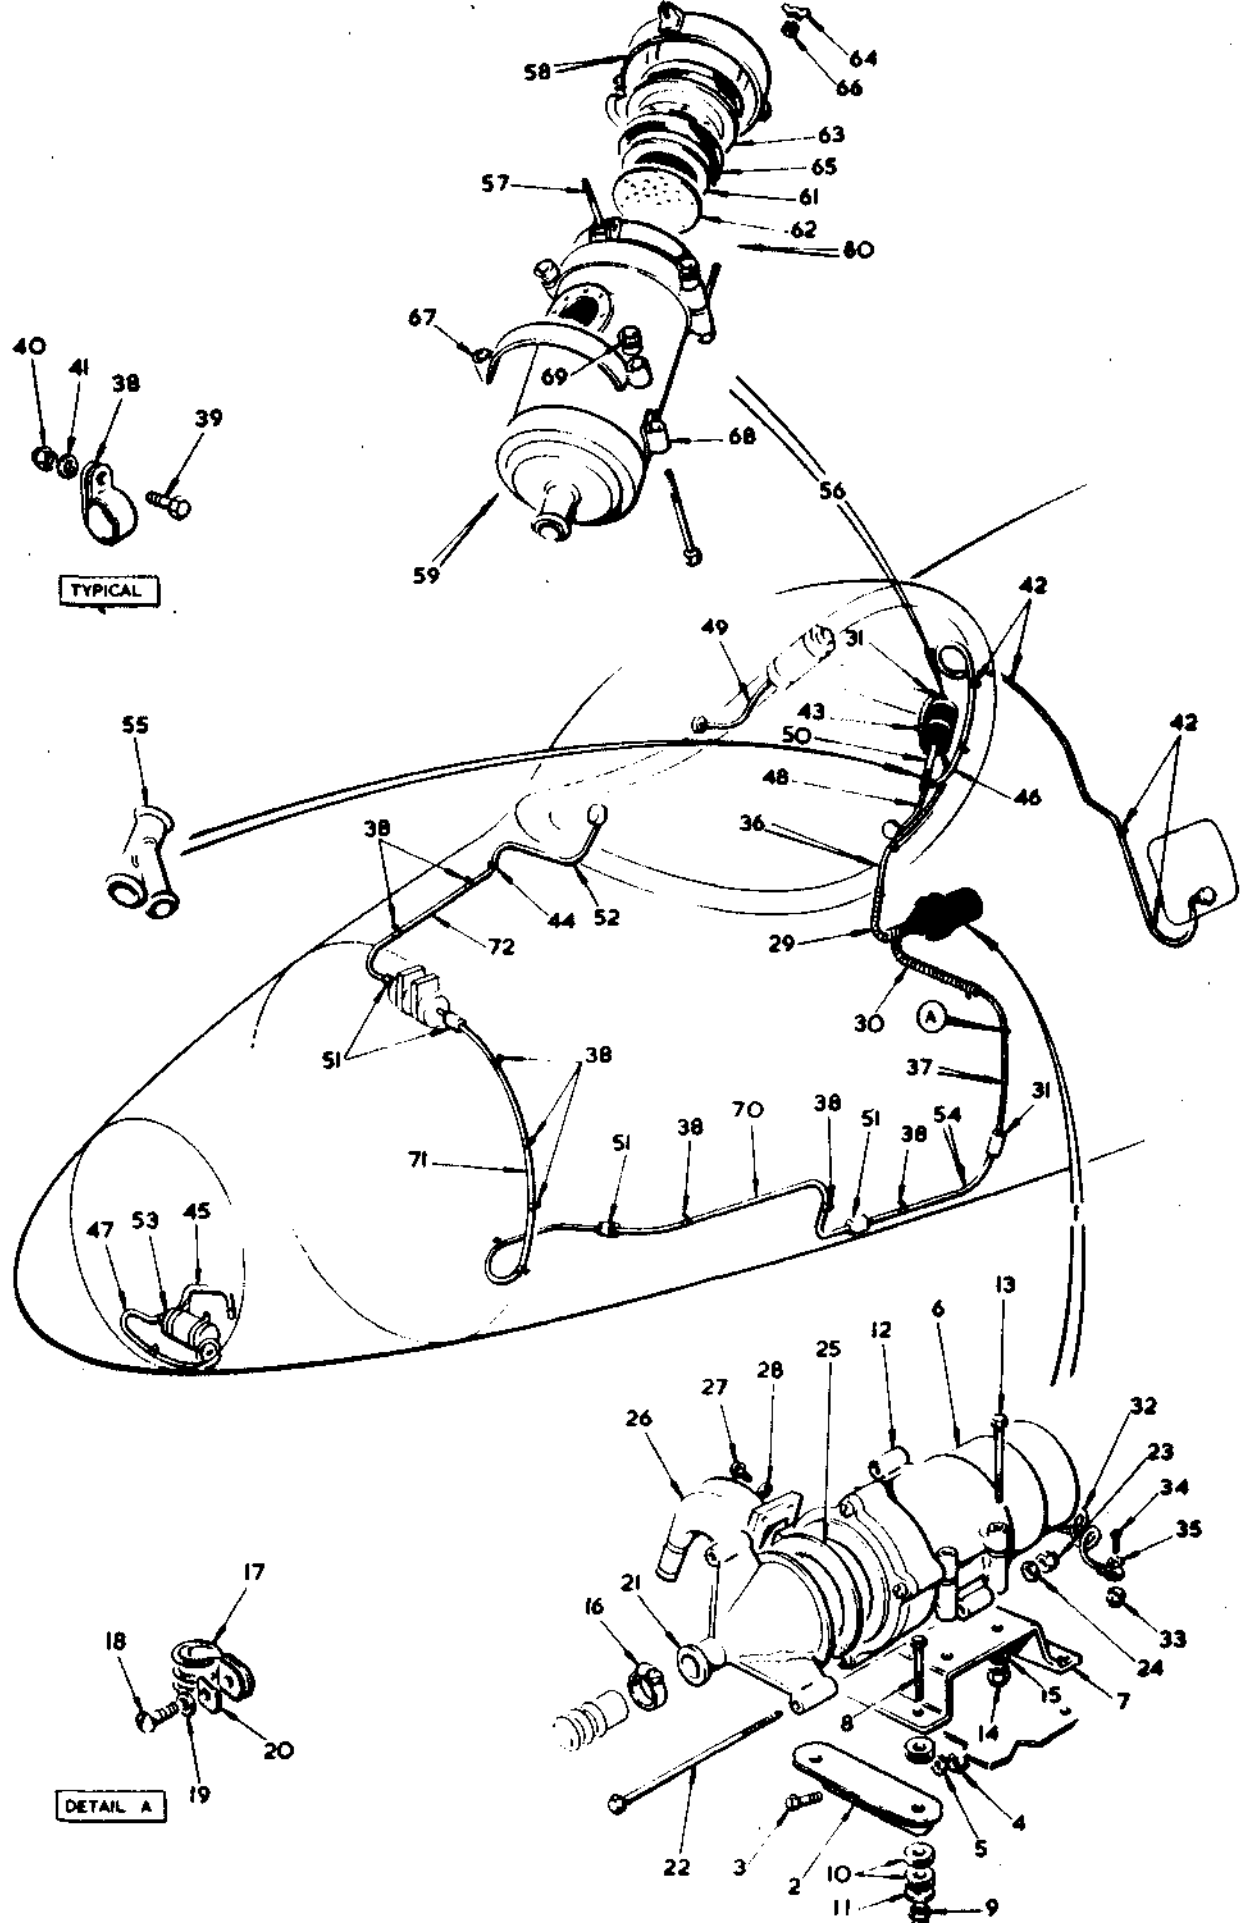


FIG.1 DE-MISTING SYSTEM

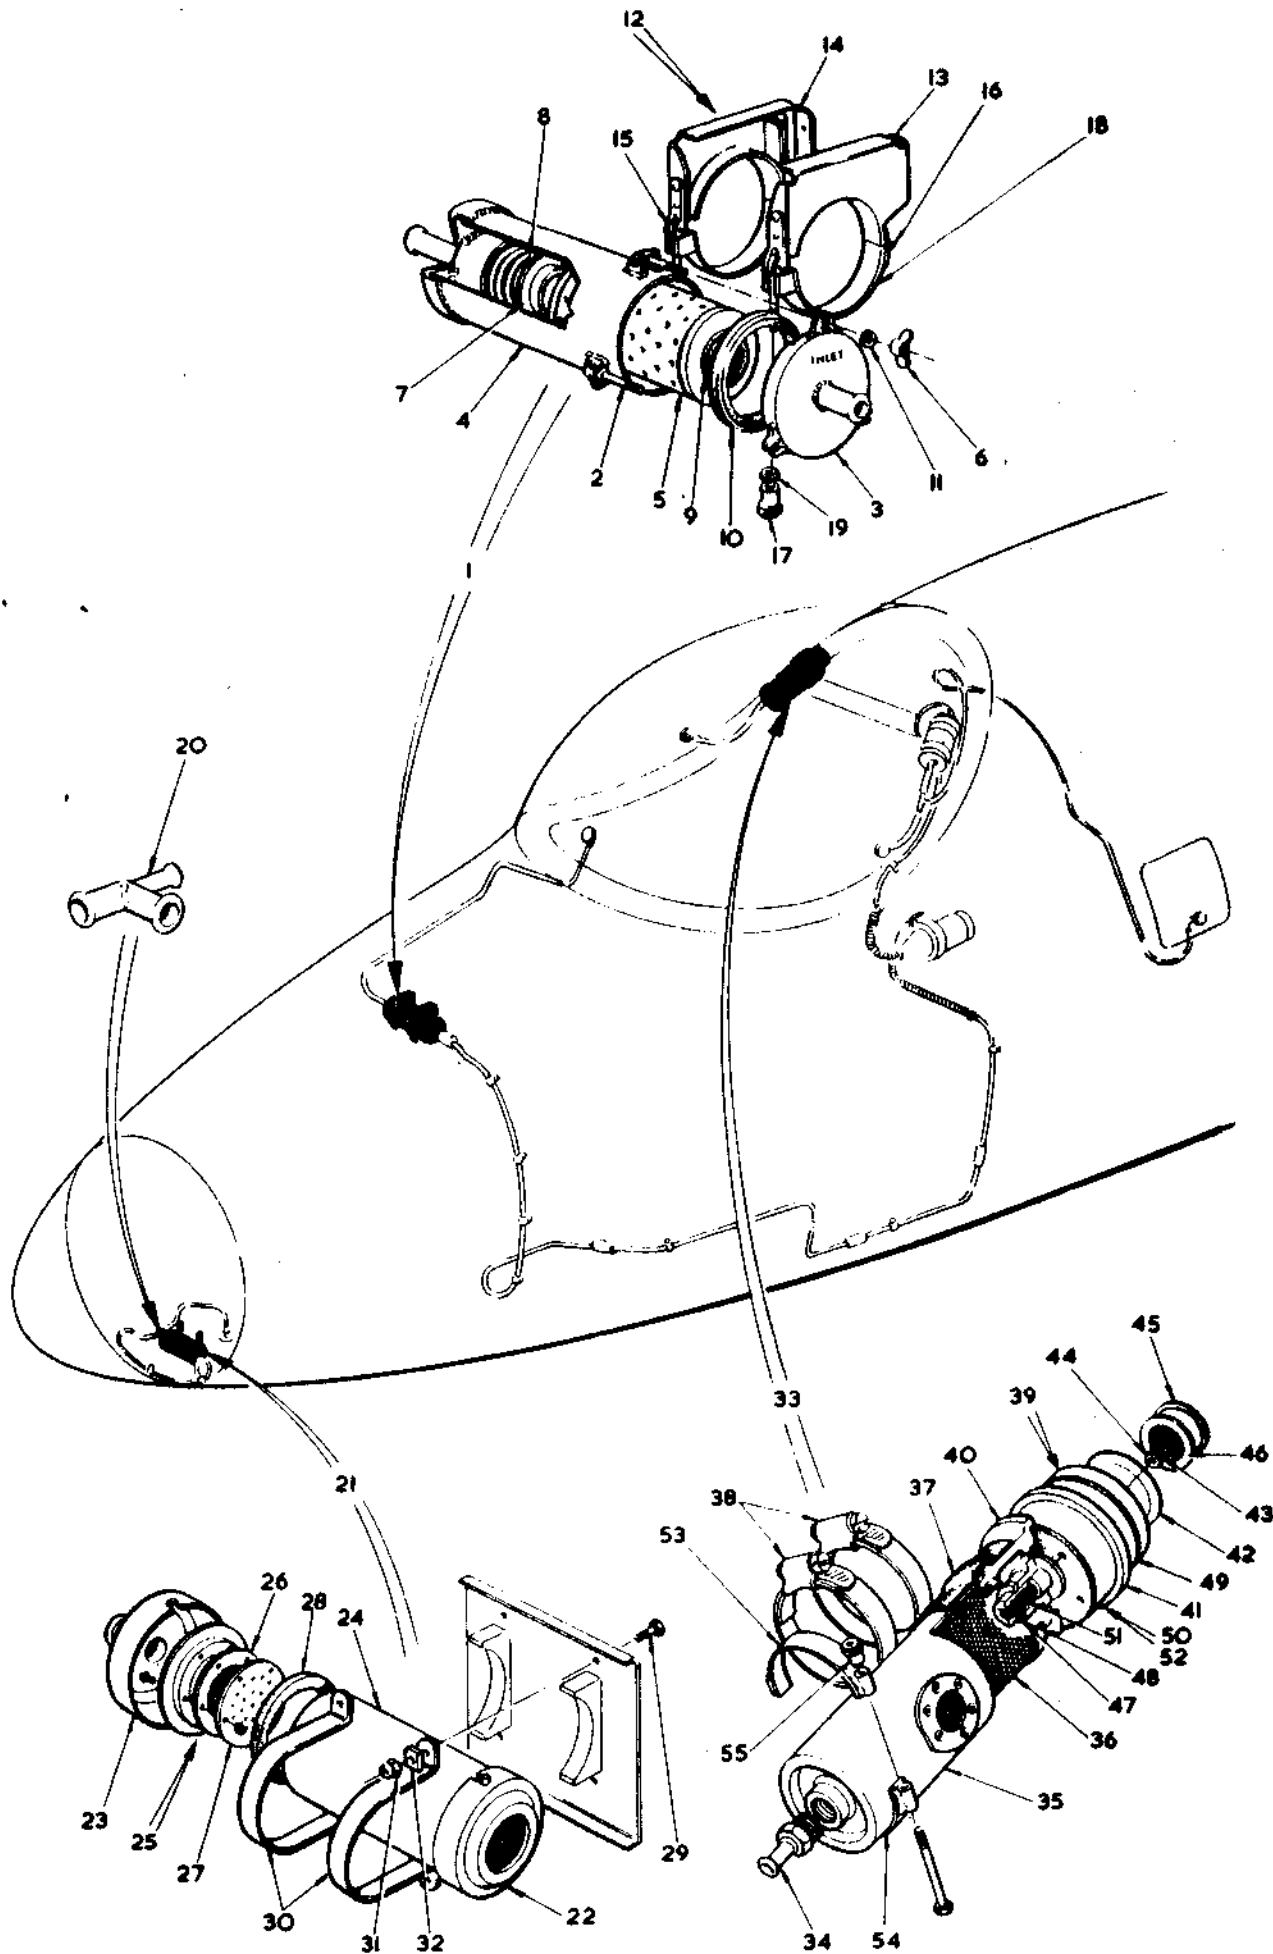


FIG. 2 DE-MISTING SYSTEM

SERVICES
EQUIPMENT IN INNER WING, LEADING EDGE, PORT

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.00.85	EQUIPMENT IN INNER WING, LEADING EDGE, PORT	—	—	—	
	E.B7.61.115	Spares for:- BOX, GEAR, ASSEMBLY	—	—	—	
399	E.A1.50.595	Spares for:- ADAPTOR, for hydraulic pump drain pipe	1	DTD.126	C	SE1/1
37L/189	PTG.3/25	BOX, gear and adaptor Attaching parts for PTG3/25:-	1	—	A	SE1/2
	E.B6.61.1A	Nut, special (make from 28M/1011473)	4	—	C	SE1/3
28W/9416646	SP.47/J	Washer	4	—	C	
28E/8130219	AGS.606/4	CLIP, jubilee	4	—	C	SE1/4
3413	EEAS.91/4	CLIP, pipe, double, for drain pipes Attaching parts for EEAS.91/4:-	2	L.72	C	SE1/5
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	SE1/6
28M/1278189	AGS.2001/81	Nut, stiff, 4 BA	1	—	C	
28W/9419474	SP.15/B	Washer	1	—	C	
13177	E.A9.61.63	CONNECTION, induction pipe outlet elbow, to generator	1	—	C	SE1/7
13198	E.A9.61.27	DUCT, air, leading edge entry Attaching parts for E.A9.61.27:-	1	—	C	SE1/8
1025	EEAS.1/1C	Screw, special, 2 BA	15	S.96	C	SE1/9
12376	E.A9.61.32	DUCT, air generator exhaust Attaching parts for E.A9.61.32:-	1	—	C	SE1/10
1025	EEAS.1/1C	Screw, special 2 BA	8	S.96	C	SE1/11
5UA/6446	E.E.CO.LTD. BRADFORD	GENERATOR, type 519	1	—	A	SE1/12
28F/1013599	AGS.1142/A	NIPPLE, adaptor	1	—	C	
28F/9486111	AGS.1142/H	NIPPLE, adaptor	1	—	C	
28F/11905	AGS.1170/H	NIPPLE	2	—	C	
13178	E.A9.61.35	PIPE, assembly, engine induction air outlet continuation through rib 3	1	T.26	C	SE1/13
13196	E.A9.61.37	PIPE, assembly, engine induction air outlet from connection at engine rib	1	T.26	C	SE1/14
409	E.A1.61.41	PIPE, assembly, hydraulic pump drain	1	L.66	C	SE1/15
13200	E.A9.61.66	PIPE, assembly, gear box drain	1	—	C	SE1/16
	ROTOL LTD.					
37L/357	GD.9/49	SHAFT, drive	1	—	B	SE1/17
12373	E.A9.61.41	SLEEVE, connecting, air inlet	1	Silastic Asbestos	C	SE1/18
12374	E.A9.61.43	SLEEVE, connecting, air exhaust	1	Silastic Asbestos	C	SE1/19
28F/9996122	AGS.1112/H	UNION, body flanged bulkhead	1	—	C	SE1/20
	E.H8.75.7	CABIN, PRESSURE AND COLD AIR SYSTEM IN PORT WING (See Section SB)	—	—	—	
	E.A2.47.291	CONTROLS, ENGINE IN PORT WING (See Section CC)	—	—	—	
	E.H8.57.11	FUEL DELIVERY SYSTEM IN PORT WING (See Section SG)	—	—	—	
	E.H8.73.9	HYDRAULICS IN PORT WING LEADING EDGE (See Section SH)	—	—	—	

SERVICES
EQUIPMENT IN INNER WING, LEADING EDGE, PORT

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	

SERVICES
EQUIPMENT IN INNER WING LEADING EDGE STARBOARD

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plan No.
					M.R. L.M.	
	E.H8.00.85	EQUIPMENT IN INNER WING LEADING EDGE, STARBOARD	—	—	—	
	E.B7.61.116	BOX, GEAR, ASSEMBLY Spares for:-	—	—	—	
399	E.A1.50.595	ADAPTOR, for hydraulic pump drain pipe	1	DTD.126	C	SE1/21
37L/190	ROTOL LTD. P.T.G.3/26	BOX, gear and adaptor Attaching parts for P.T.G.3/26:-	1	—	A	SE1/22
	E.B6.61.1A	Nut, special (Make from Ref. 28M/1011473)	4	—	C	SE1/23
28W/9416646	SP.47/J	Washer	4	—	C	
28E/9130219	AGS.805/4	CLIP, jubilee	4	—	C	SE1/24
3413	EEAS.91/4	CLIP, pipe, double, for drain pipes Attaching parts for EEAS.91/4:-	2	L.72	C	SE1/25
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	SE1/26
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	—	C	
28W/9419474	SP.15/B	Washer	1	—	C	
13197	E.A9.61.64	CONNECTION, induction pipe outlet elbow to generator	1	—	C	SE1/27
13199	E.A9.61.28	DUCT, air, leading edge entry Attachments for E.A9.61.28:-	1	—	C	SE1/28
1025	EEAS.1/1C	Screw, 2 BA	11	S.96	C	SE1/29
1026	EEAS.1/1½C	Screw, 2 BA	3	S.96	C	
1468	EEAS.1/2C	Screw, 2 BA	1	S.96	C	
12376	E.A9.61.32	DUCT, air, generator exhaust Attaching parts for E.A9.61.32.	1	—	C	SE1/30
1025	EEAS.1/1C	Screw, 2 BA	8	S.96	C	SE1/31
	E.E.CO.LTD. BRADFORD					
5UA/6446	↑	GENERATOR, type 519	1	—	A	SE1/32
28F/1013599	AGS.1142/A	NIPPLE, adaptor	1	—	C	
28F/9486111	AGS.1142/H	NIPPLE, adaptor	1	—	C	
28F/11905	AGS.1170/H	NIPPLE	2	—	C	
13187	E.A9.61.36	PIPE, assembly, engine induction air outlet continuation through rib 3	1	T.26	C	SE1/33
13188	E.A9.61.38	PIPE, assembly, engine induction air outlet from connection at engine rib	1	T.26	C	SE1/34
410	E.A1.61.42	PIPE, assembly, hydraulic pump drain	1	L.56	C	SE1/35
13200	E.A9.61.65	PIPE, assembly, gear box drain	1	—	C	SE1/36
	ROTOL LTD.					
37L/356	GD.9/50	SHAFT, drive	1	I.C.	B	SE1/37
12373	E.A9.61.41	SLEEVE, connecting air inlet	1	Silastic Asbestos	C	SE1/38
12374	E.A9.61.43	SLEEVE, connecting air exhaust	1	Silastic Asbestos	C	SE1/39
28F/9996122	AGS.1112/H	UNION, body, flanged bulkhead	1	—	C	SE1/40
	E.H8.75.11	CABIN PRESSURE AND COLD AIR SYSTEM IN STARBOARD WING (See Section SB)	—	—	—	
	E.A2.47.292	CONTROLS, ENGINE IN PORT WING See Section CD)	—	—	—	
	E.B6.57.151	FUEL DELIVERY SYSTEM IN PORT WING (See Section SG)	—	—	—	
	E.H8.73.10	HYDRAULICS IN PORT WING LEADING EDGE (See Section SH)	—	—	—	

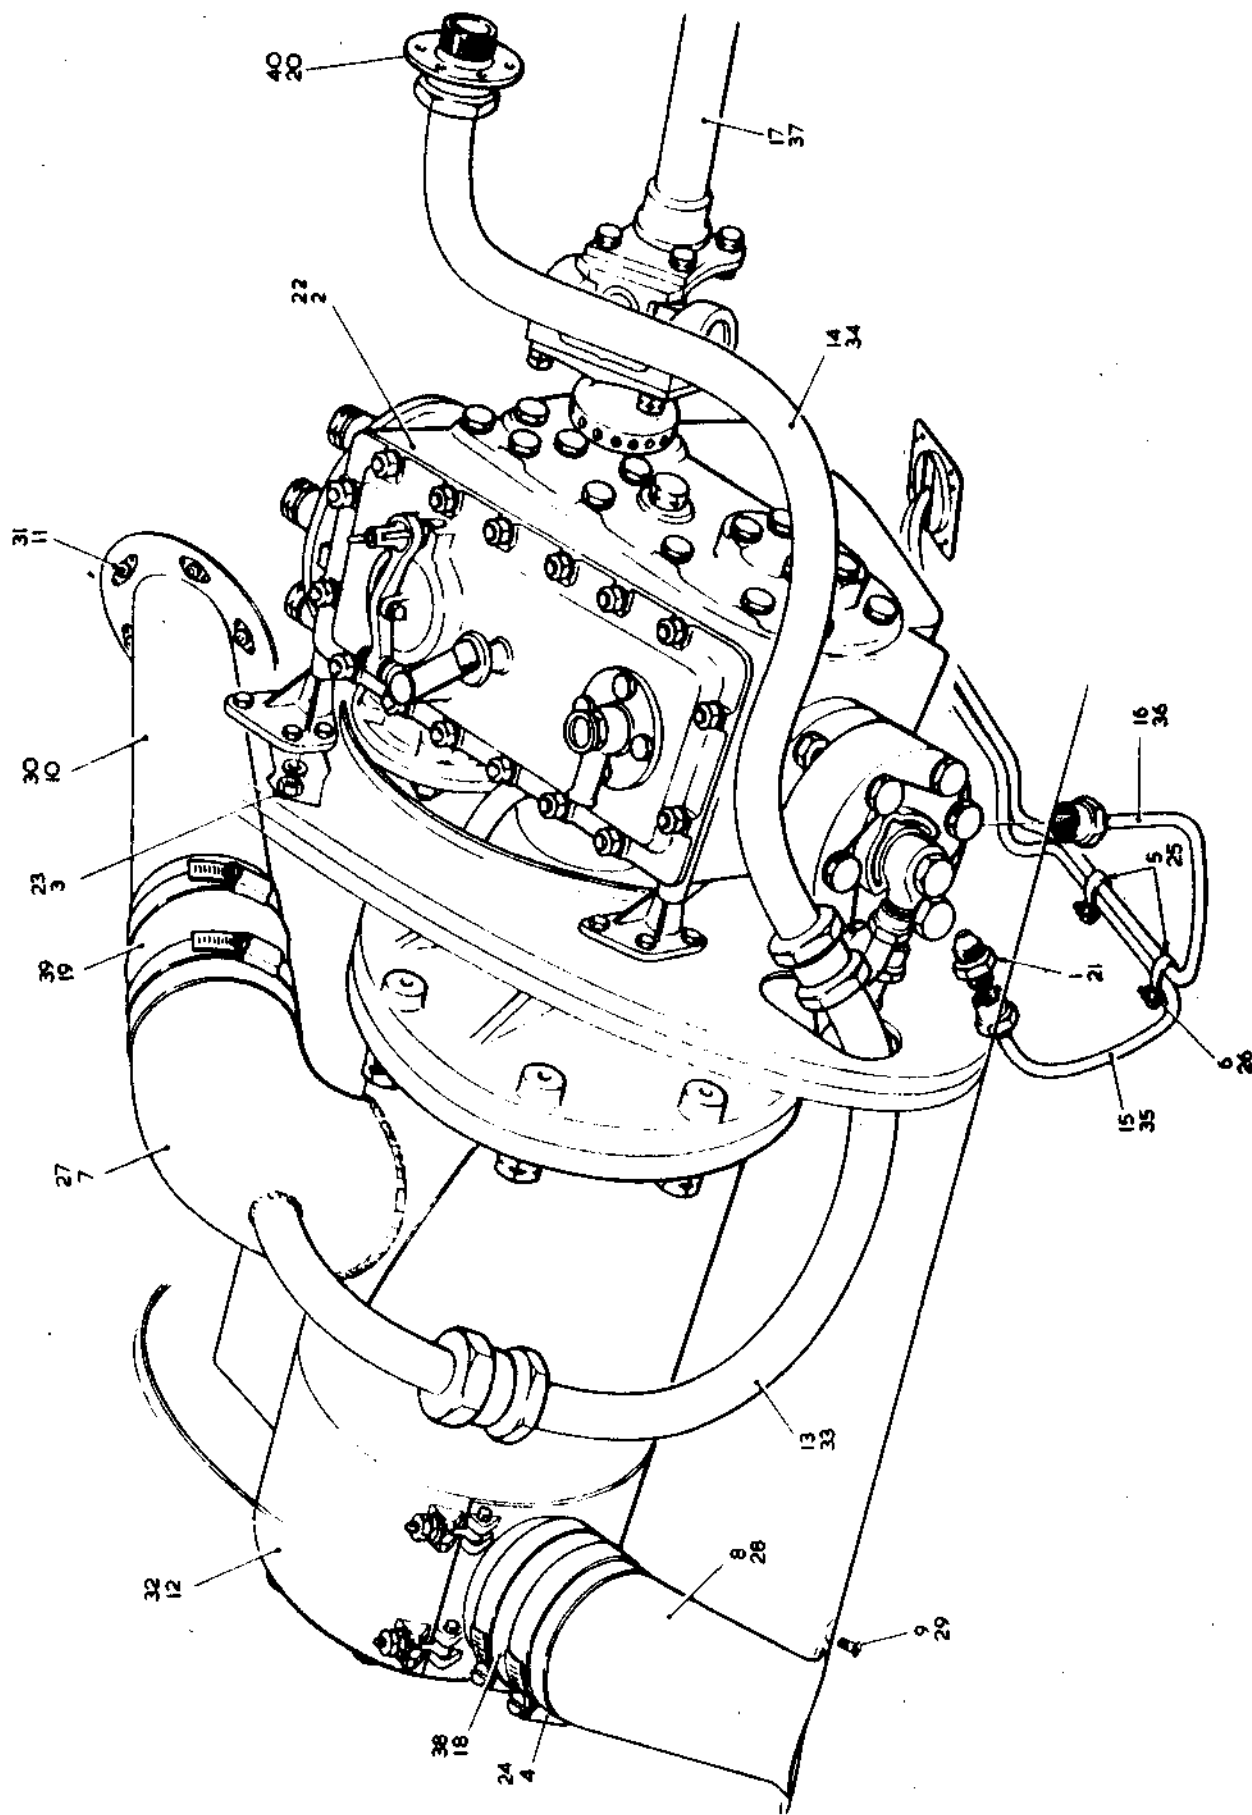


FIG. I. GEARBOX ASSEMBLY MAINPLANE PORT & STBD.

CODE ABCD

SECT SE

SERVICES
FIRE PROTECTION SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.60.1	FIRE PROTECTION SYSTEM IN FUSELAGE	—	—	—	1 1
		Spares for:				
12K/1316	—	CARTRIDGE, electric No.1 MK.3, 2 pin	1	—	C	1 2
28F/14384	AGS.1116/C	CONE, elbow	1	—	C	1 3
28F/9724	AGS.1120/10	CONE, tee	1	—	C	1 4
28F/9706	AGS.1102/D	CONE, union	2	—	C	1 5
28F/9714	AGS.111/C	CONE, union, flanged	2	—	C	1 6
		Attaching parts for AGS.1111/C				
28D/9436920	A25/1C	Bolt, 2 BA	3	—	C	1 7
28M/1278190	AGS.2001/C/1	Nut, 2 BA	3	—	C	1 8
	E.A1.60.13	Plate, washer	1	—	—	1 9
	GRAVINER LTD.					
27N/100	—	EXTINGUISHER, fire	1	—	A	1 10
		Attaching parts for 27N/100				
28D/1212276	A25/15B	Bolt, 4 BA	4	—	C	1 11
28M/1278189	AGS.2001/B/1	Nut, 4 BA	4	—	C	1 12
28S/1011481	A31/C4B	Screw, 2 BA	2	—	C	1 13
11400	E.A2.60.26	Strap, front	4	—	C	1 14
11401	E.A2.60.27	Strap, rear	4	—	C	1 15
11394	E.A2.60.11	Trunnion	2	OTD.126A	C	1 16
11395	E.A2.60.13	Trunnion	2	OTD.126A	C	1 17
296	E.A1.60.49	FAIRLEAD, assembly, wing support at fuselage	2	LFS.21	C	1 18
		Attaching parts for E.A1.60.49				
28D/9419452	A25/3B	Bolt, 4 BA	4	—	C	1 19
28M/1278189	AGS.2001/B/1	Nut, 4 BA	4	—	C	1 20
28W/9419474	SP.15/B	Washer, 4 BA	4	—	C	1 21
28F/8235	AGS.1142/F	NIPPLE, adaptor	2	—	C	1 22
	E.H8.60.3	PIPE, assembly on bulkhead 12 in centre of fuselage	1	—	—	1 23
298	E.A1.60.139	PIPE assembly, from coupling at frame 12 to coupling at frame 13	1	L.56	C	1 24
299	E.A1.60.141	PIPE assembly, from coupling at frame 13 to 4 way coupling forward of frame 18	1	—	C	1 25
300	E.A1.60.143	PIPE assembly, from 4 way coupling to elbow aft of frame 27	1	—	C	1 26
12234	E.A1.60.165	PIPE assembly, from elbow to tee piece at frame 27	1	L.56	C	1 27
20787	E.A1.60.15	PIPE assembly, from tee coupling to reducing union at frame 28	1	L.56	C	1 28
20788	E.B7.60.17	PIPE assembly, from reducing union to fire extinguisher at frame 27	1	L.56	C	1 29
21572	E.A1.60.167	PIPE assembly from tee coupling to blanking union at frame 27	1	L.56	C	1 30
303	E.A1.60.149	PIPE assembly from 4 way coupling between frames 17 and 18 to coupling in port wing	1	—	C	1 31
304	E.A1.60.151	PIPE assembly from 4 way coupling between frames 17 and 18, to coupling in starboard wing	1	—	C	1 32
28F/4051600	AGS.1143/C	PLUG, blanking	2	—	C	1 33
28F/12244	AGS.1125/10	UNION, 4 way coupling	1	—	C	1 34
28F/12959	AGS.1108/C	UNION, reducing	1	—	C	1 35

SERVICES
FIRE PROTECTION SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A1.60.3	FIRE PROTECTION SYSTEM IN WING, PORT ASSEMBLY	—	—	—	2 1
	E.A1.60.4	FIRE PROTECTION SYSTEM IN WING, STARBOARD ASSEMBLY	—	—	—	2 2
		Spares for:-				
3624	E.A1.60.41	BRACKET, support, fire extinguisher (dual head) Attaching parts for E.A1.60.41:	1	—	C	2 3
28D/1010658	A25/1B	Bolt, 4 BA	4	—	C	2 4
28M/1278189	AGS.2001/B/1	Nut, 4 BA	4	—	C	2 5
3411	EEAS.28/2EU	Washer	4	—	C	2 6
12K/1316	—	CARTRIDGE, electric, No.1 MK.3, 2 pin	1	—	C	2 7
12K/1317	—	CARTRIDGE, electric, No.1 MK.3 3 pin	1	—	C	2 8
512	E.A1.60.39	ELBOW connection, at fire extinguisher bottle (dual head)	1	—	C	2 9
	GRAVINER CO. LTD					
27N/102 or 27N/165	—	EXTINGUISHER, fire, dual head	1	—	A	2 10
		Attaching parts for 27N/102 or 27N/165:-				
3410	E.A1.60.121	Bolt, strap	1	S.92	C	2 11
28D/1010658	A25/1B	Bolt, 4 BA	6	—	C	2 12
28M/1278189	AGS.2001/B/1	Nut, 4 BA	6	—	C	2 13
1703	E.A1.60.33	Strap, assembly	1	—	C	2 14
1704	E.A1.60.21	Trunnion, screwed, 2 BA	1	DTD.126A	C	2 15
1705	E.A1.60.23	Trunnion, pin	1	DTD.126A	C	2 16
3411	EEAS.28/2EU	Washer	6	—	C	2 17
	E.B7.60.19	FIRE PROTECTION SYSTEM, ZONE 2 ENGINE BAY, ASSEMBLY, PORT	—	—	—	3 1
	E.B7.60.20	FIRE, PROTECTION SYSTEM, ZONE 2, ENGINE BAY, ASSEMBLY, STARBOARD	—	—	—	3 2
		Spares for:-				
21507	E.A1.60.117	BLOCK, location, fire bottle head Attaching parts for E.A1.60.117:	1	—	C	3 3
28D/1214866	AS.1246/4B	Bolt, 4 BA	4	—	C	3 4
28M/1278189	AGS.2001/B/1	Nut, 4 BA	4	—	C	3 5
28W/9419474	SP15/B	Washer	4	—	C	3 6
13002	E.B7.60.35	BRACKET, FIRE EXTINGUISHER BOTTLE MOUNTING ASSEMBLY	2	—	C	3 7
		Spares for:-				
13003	E.B7.60.45	STRAP, mounting Attaching parts for E.B7.60.45:-	2	L.72	C	3 8
28D/1212276	A25/15B	Bolt, 4 BA	2	—	C	3 9
28M/1278189	AGS.2001/B/1	Nut, 4 BA	2	—	C	3 10
28S/1011481	A31/C48	Screw, 2 BA	1	—	C	3 11
1704	E.A1.60.21	Trunnion, screwed 2 BA	1	DTD.126A	C	3 12
1705	E.A1.60.23	Trunnion, plain	1	DTD.126A	C	3 13
		Attaching parts for E.B7.60.35				
28D/1010658	A25/1B	Bolt, 4 BA	14	—	C	3 14
28M/1278189	AGS.2001/B/1	Nut, 4 BA	14	—	C	3 15
28W/9419474	SP.15/B	Washer	14	—	C	3 16

SERVICES
FIRE PROTECTION SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.B7.60.37	BRACKET, block location, support	1	—	—	3 17
	E.B7.60.38	BRACKET, block location, support	1	—	—	3 18
		Attaching parts for E.B7.60.37 & E.B7.60.38				
28D/1010658	A25/1B	Bolt, 4 BA	3	—	C	3 19
28M/1278189	AGS.2001/B/1	Nut, 4 BA	3	—	C	3 20
28W/9419474	SP.15/B	Washer	3	—	C	3 21
12K/1316	—	CARTRIDGE, No.1 MK.3	1	—	C	3 22
17629	EEAS.143/23	CLIP, pipe, 5/8" o/d	2	L.72	C	3 23
		Attaching parts for EEAS.143/23				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	3 24
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	—	C	3 25
18862	EEAS.21/2DR	Washer	2	L.72	C	3 26
13004	E.B7.60.29	CLIP, pipe, special	1	—	C	3 27
13005	E.B7.60.31	CLIP, pipe, special	3	—	C	3 28
		Attaching parts for E.B7.60.29 & E.B7.60.31				
28D/9435710	A25/11C	Bolt, 2 BA	2	—	C	3 29
28M/1278190	AGS.2001/C/1	Nut, 2 BA	2	—	C	3 30
28W/9419402	SP.13/C	Washer	2	—	C	3 31
	GRAVINER CO. LTD.					
27N/100 or 27N/152	TYPE 12A	EXTINGUISHER, fire	1	—	A	3 32
28F/9439897	AGS.1142/E	NIPPLE, adaptor	3	—	C	3 33
28F/8011897	AGS.1142/F	NIPPLE, adaptor	4	—	C	3 34
13006	E.B7.60.21	PIPE, assembly, from fire extinguisher bottle to bulkhead connection, port	1	—	C	3 35
13012	E.B7.60.22	PIPE, assembly, from fire extinguisher bottle to bulkhead connection, starboard	1	—	C	3 36
13007	E.B7.60.23	PIPE, assembly, top spray, from bulkhead connection to reducing union, port	1	—	C	3 37
13013	E.B7.60.24	PIPE, assembly, top spray, from bulkhead connection to reducing union, starboard	1	—	C	3 38
13008	E.B7.60.25	PIPE, assembly, side spray, from reducing union to pipe coupling, port	1	—	C	3 39
13014	E.B7.60.26	PIPE, assembly, side spray, from reducing union to pipe coupling, starboard	1	—	C	3 40
13009	E.B7.60.27	PIPE, assembly, bottom spray from pipe coupling, port	1	—	C	3 41
13015	E.B7.60.28	PIPE, assembly, bottom spray from pipe coupling, starboard	1	—	C	3 42
	E.A1.60.55	UNION, bulkhead inboard engine rib (Make from Ref. 28F/9157486)	1	—	—	3 43
		Attaching parts for E.A1.60.55:				
28D/9133011	A25/2C	Bolt, 2 BA	3	—	C	3 44
28M/1278190	AGS.2001/C/1	Nut, 2 BA	3	—	C	3 45
28W/9419402	SP.8/C	Washer	3	—	C	3 46
13010	E.B7.60.39	UNION, special, reducing	1	S.110	C	3 47
13011	E.B7.60.41	UNION, pipe, coupling	1	S.110	C	3 48

SERVICES
FIRE PROTECTION SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
613	E.A1.60.3A	. PIPE assembly from wing fuselage joint to fire extinguisher bottle, port	1	L.56	C	
21403	E.A1.60.163	. PIPE assembly, from wing fuselage joint to fire extinguisher bottle, starboard	1	L.56	C	
27422	E.B7.60.11	. PIPE assembly, from fire extinguisher bottle to inboard engine rib connection, port	1	L.56	C	
27423	E.B7.60.12	. PIPE, assembly from fire extinguisher bottle to inboard engine rib connection, starboard	1	L.56	C	
	E.A1.60.55	. UNION, bulkhead, inboard engine rib (Make from Ref. 28F/9157486) Attaching parts for E.A1.60.55:-				
28D/9133011	A26/2C	. Bolt, 2 BA	3	-	C	
28M/1278190	AGS.2001/C/1	. Nut, 2 BA	3	-	C	
28W/9419475	SP.15/C	. Washer	3	-	C	

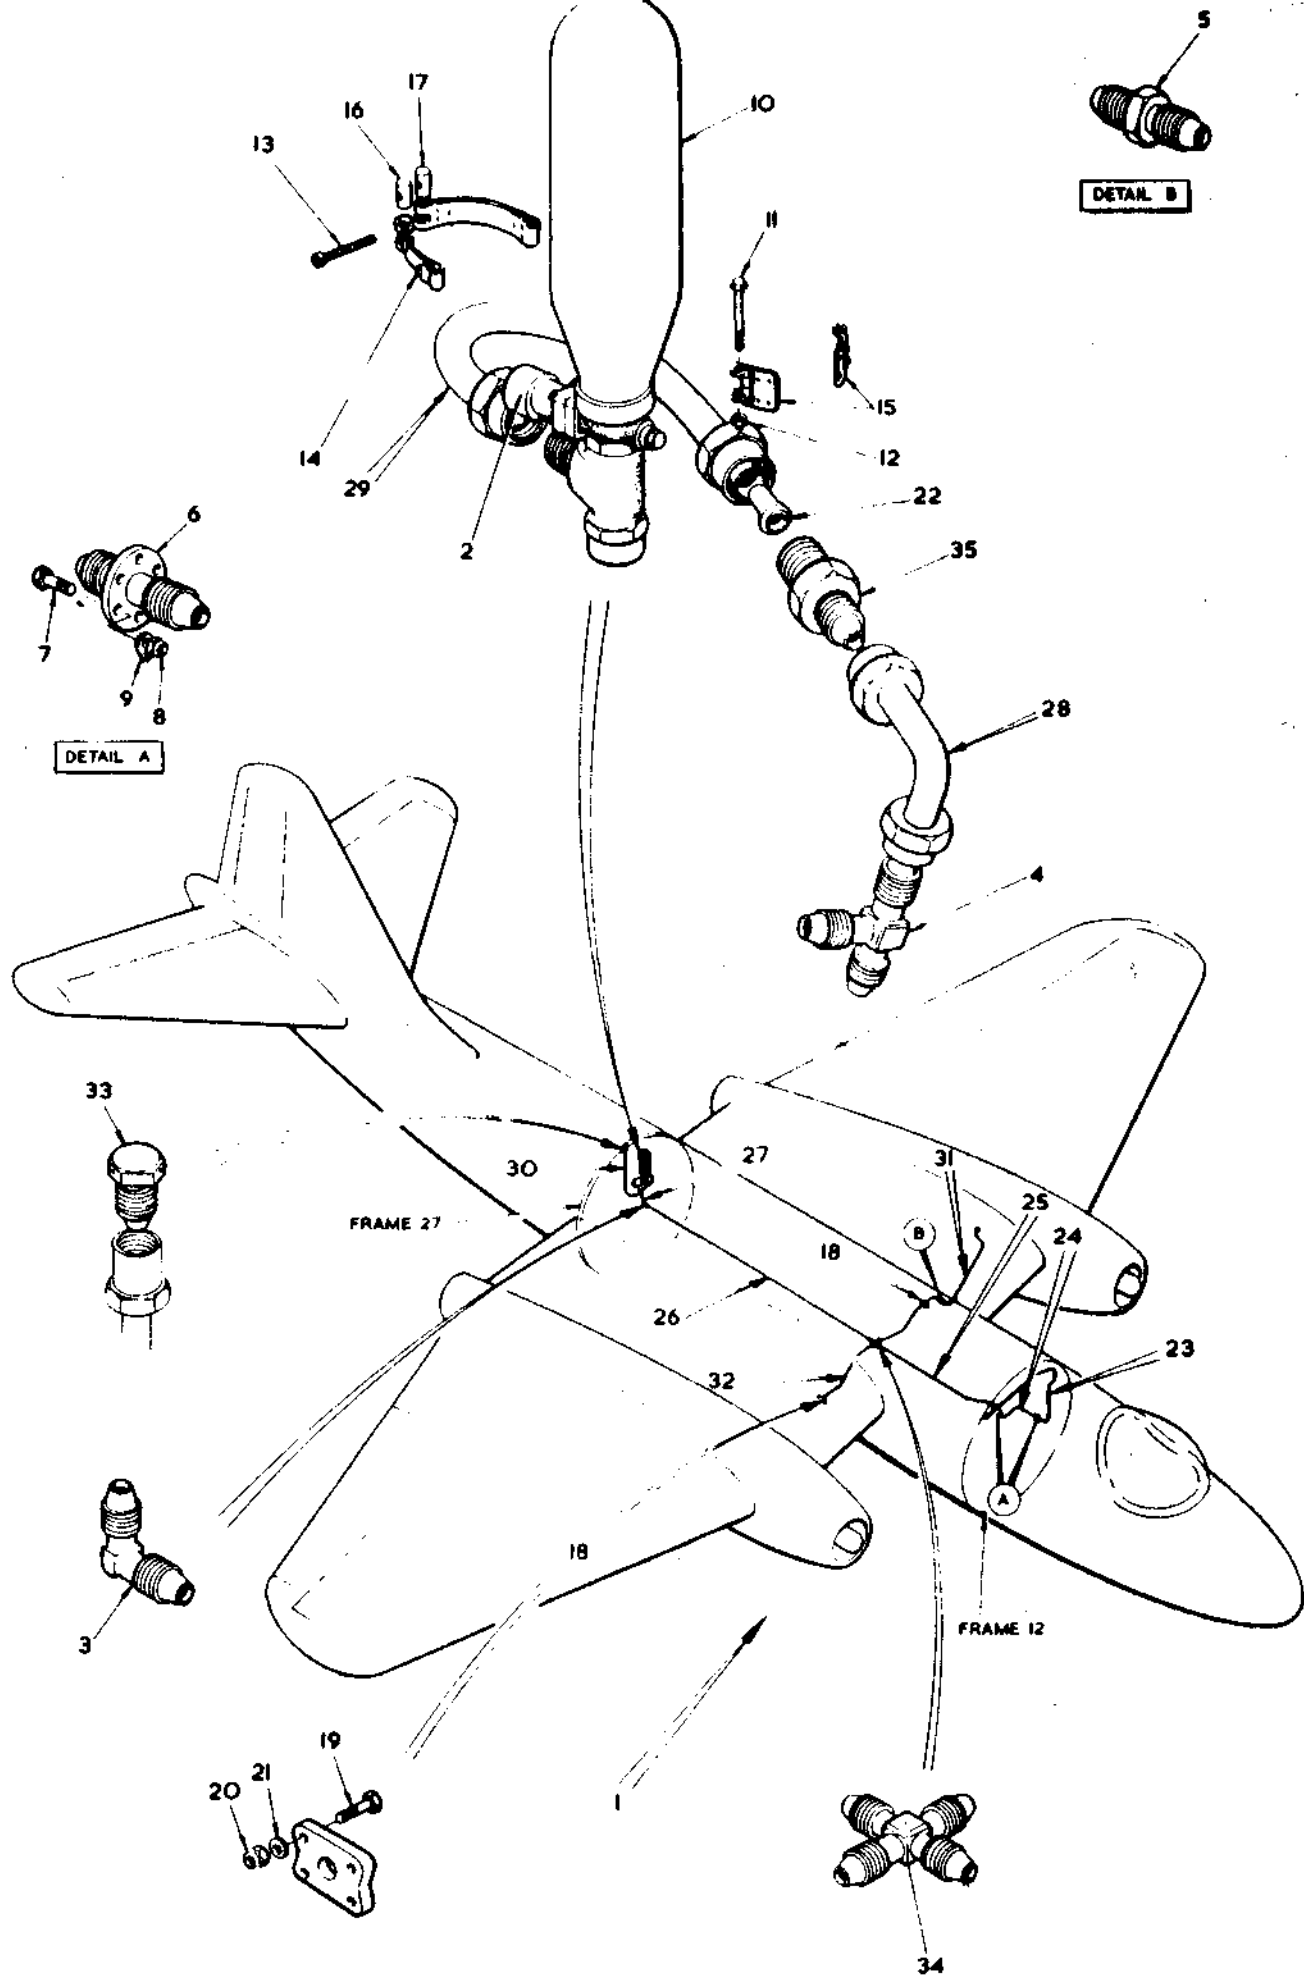


FIG.1 FIRE PROTECTION SYSTEM

CODE A,B,C

SECT 5F

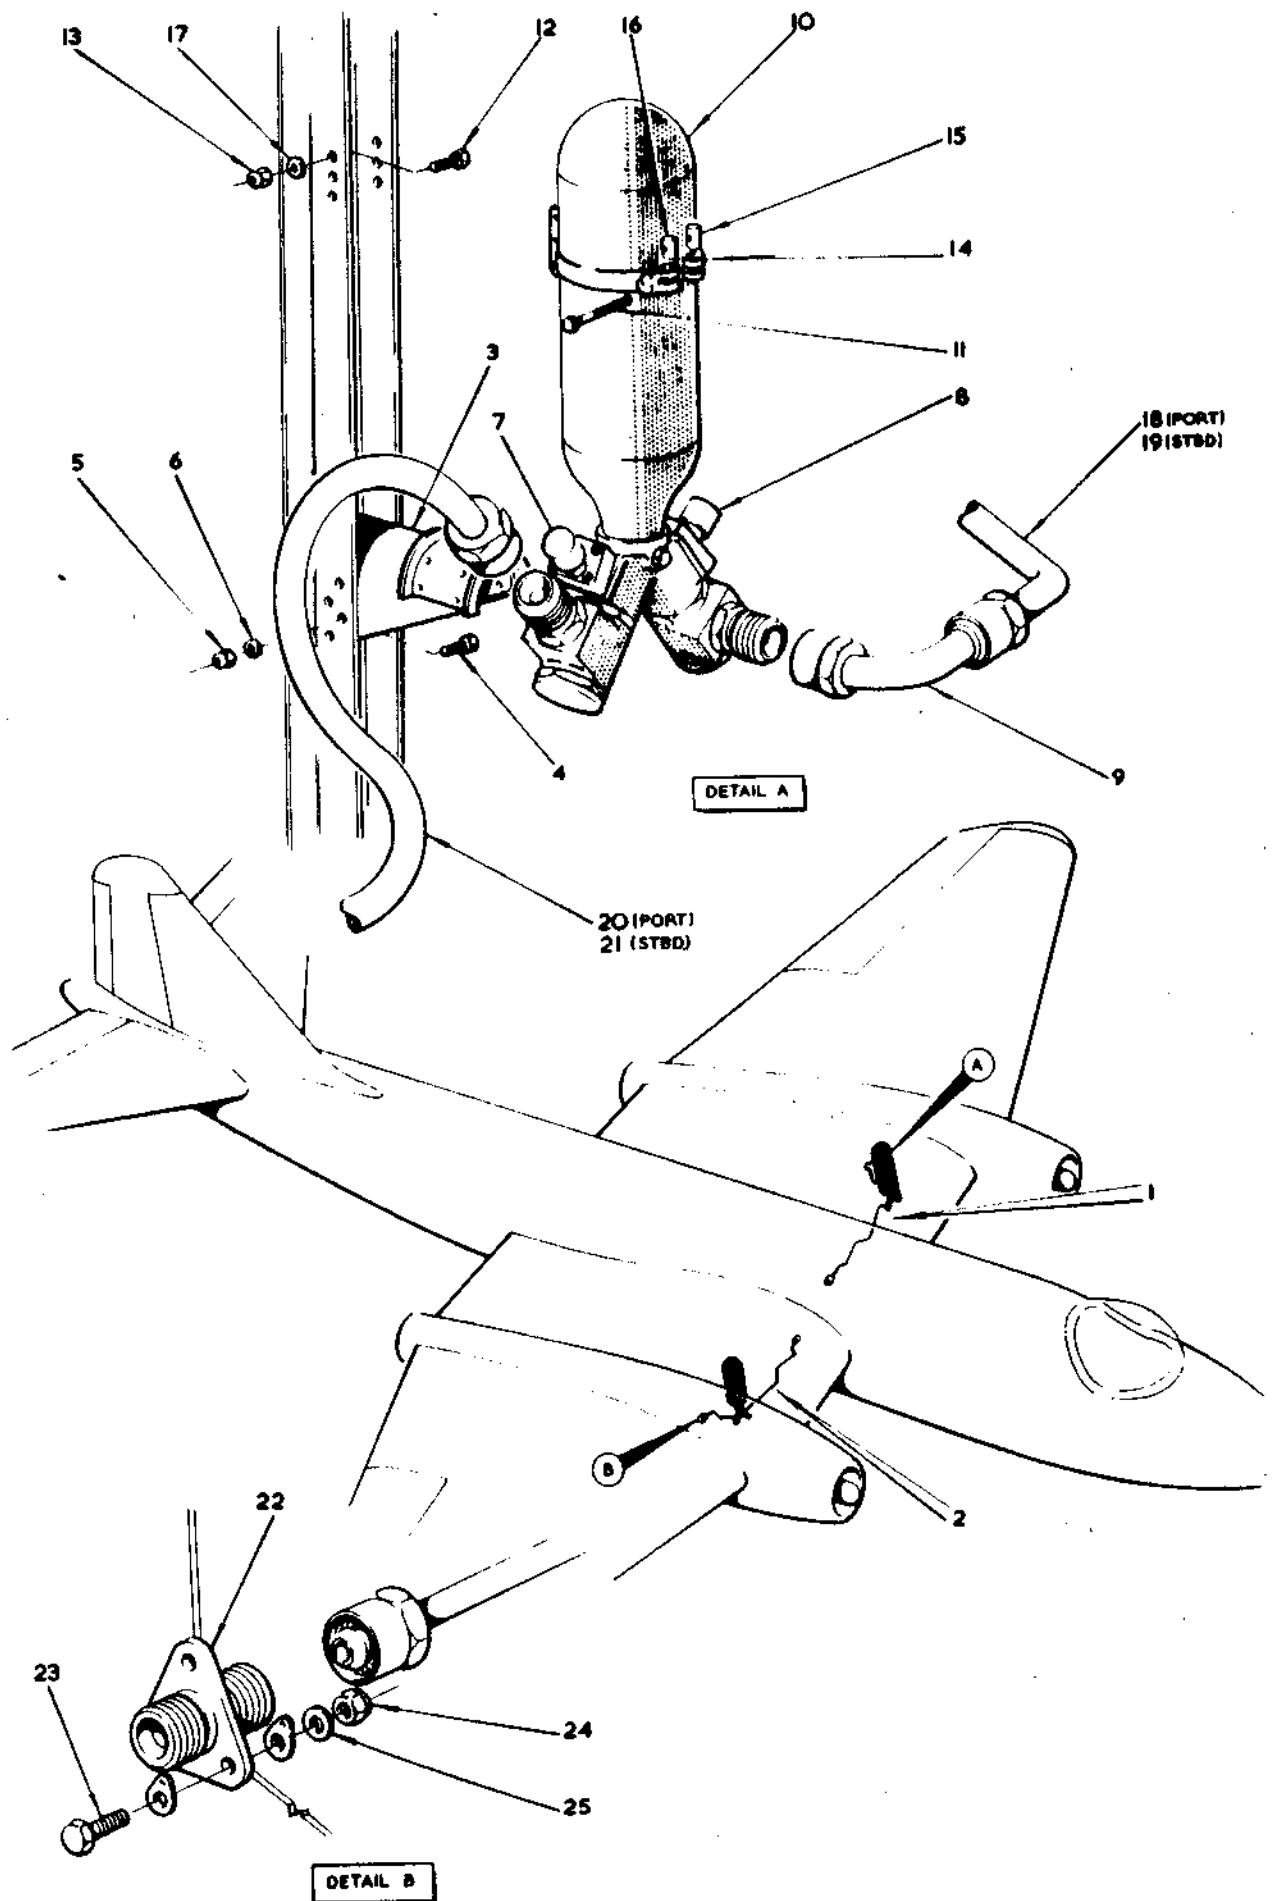


FIG.2 FIRE PROTECTION SYSTEM

CODE ABCD

SECT SF

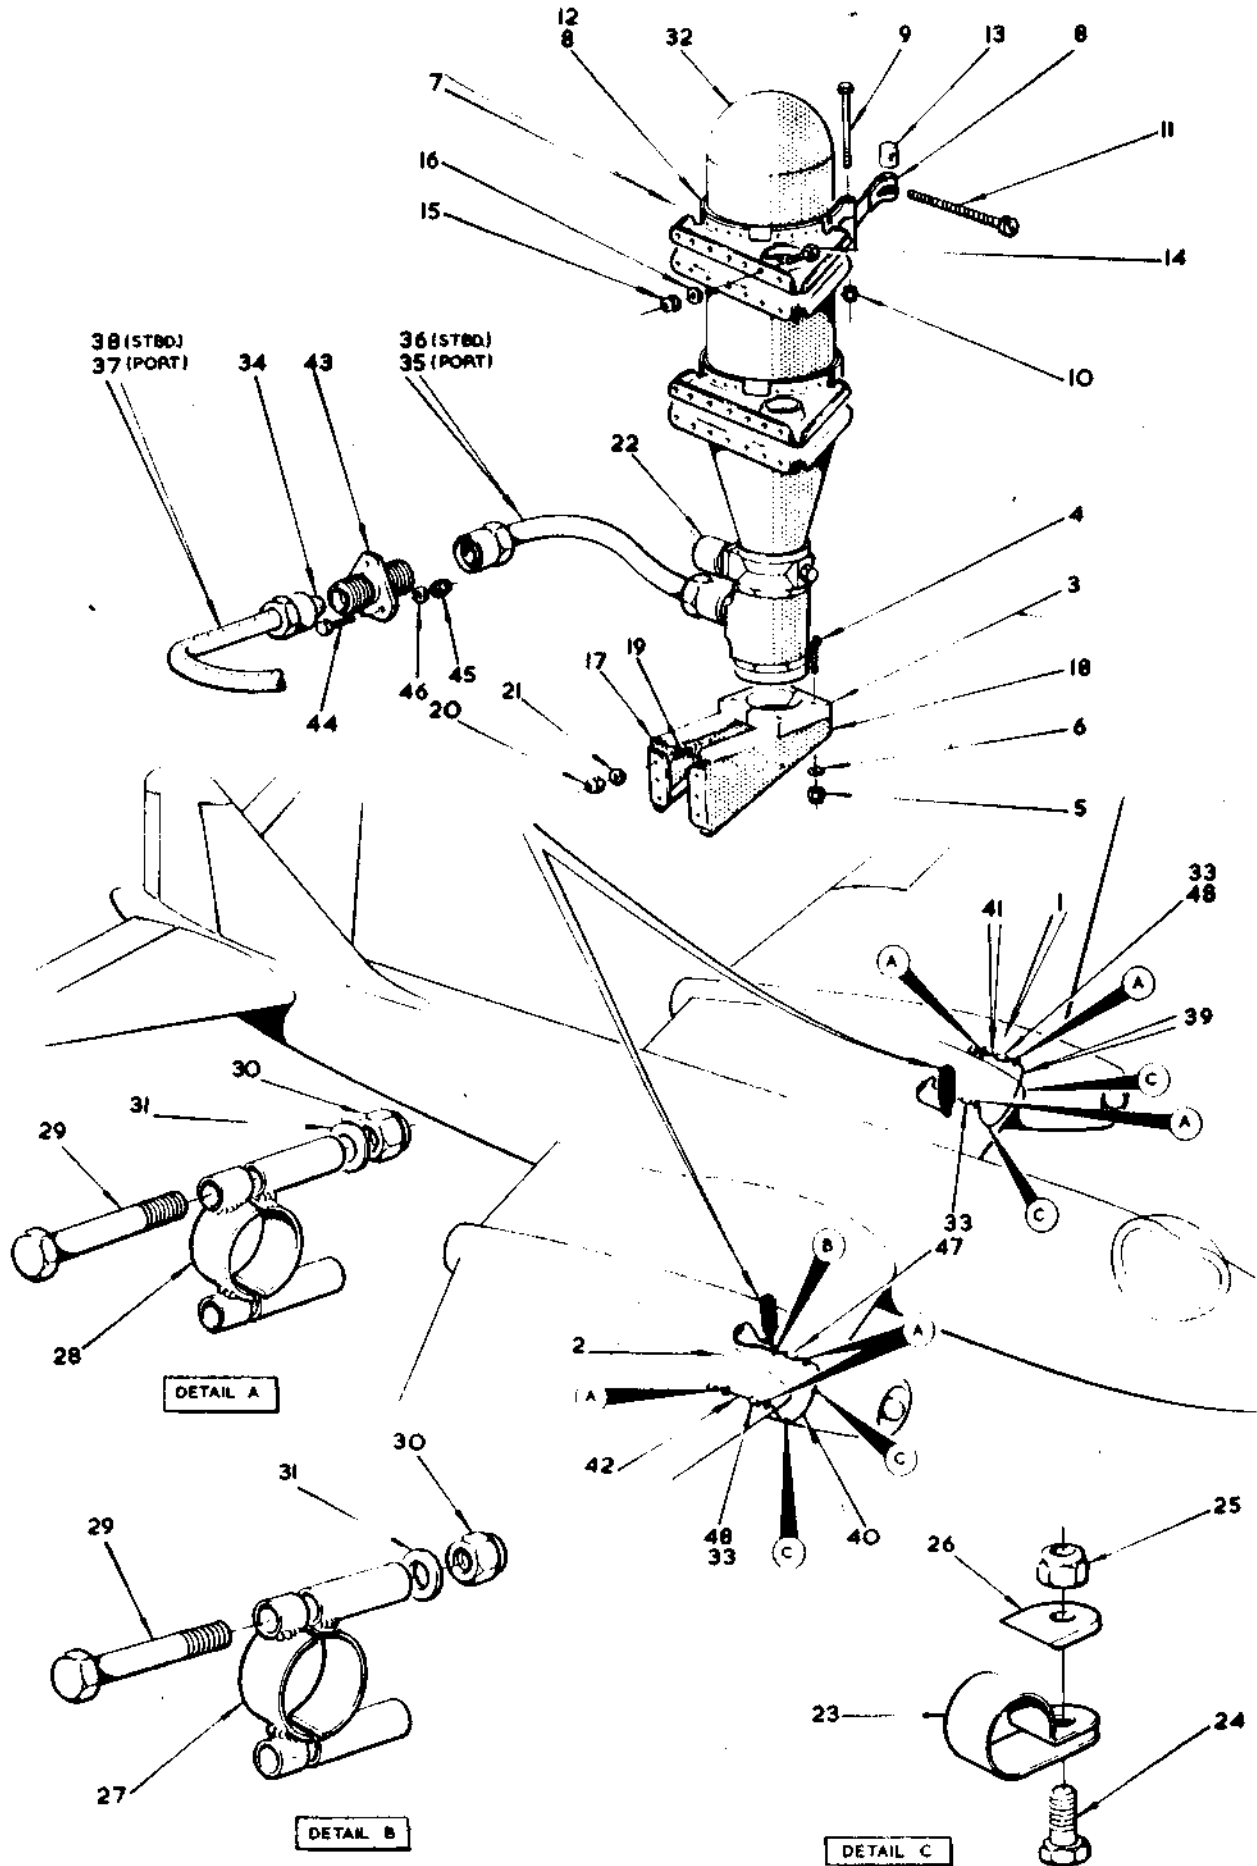


FIG. 3 FIRE PROTECTION SYSTEM

CODE A B C D

SECT 5F

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.N. L.M.	
	E.H8.57.1	FUEL SYSTEM INSTALLATION	—	—	—	
	E.H8.57.3	Consisting of:- FUEL SYSTEM IN CENTRE FUSELAGE, ASSEMBLY	—	—	—	
	E.A3.57.225	Spares for:- CABLE, bonding	3	—	—	SG7/42
	E.H7.57.15	CAP, FILLER, No.1 and No.2 FUEL TANK ASSEMBLY	2	—	—	SGV32
		Spares for:-				
1140	E.A1.57.133	ADAPTOR, filler cap, drain	1	L.40 or L.64	C	SG1/33
1141	AS.2590	CAP, FILLER, ASSEMBLY	1	—	B	SG1/34
		Consisting of:-				
	AS.2591	BASE	1	—	—	SG1/36
12876	AS.2592	CAP	1	—	C	SG1/36
28J/9432438	AS.5364	RING, sealing	1	—	C	SG1/37
		Attaching parts for AS.2590:-				
28D/9133011	A25/2C	Bolt, 2 BA	10	—	C	SG1/38
	CB/1	Nut, aerotight (G.K.N.)	10	—	—	SG1/39
1142	E.A1.57.131	Ring, sealing	1	Neo-K-Tex	C	SG1/40
3141	E.A2.56.71	Screw, csk. hd. 2 BA	15	S.11	C	SG1/41
	AS.471/C	Washer	10	—	—	
	AGS.1661/A or	CLIP	1	—	—	SG1/42
	AGS.606/D	CLIP	1	—	—	
	EEAS.77/13	HOSE, rubber, 1/4" i/d x 1/2" o/d x 3 3/4" long	1	DTD.625	LM	SG1/43
	AS.3033	PACKING	1	—	—	SG1/44
	E.A1.60.13	PLATE	1	—	—	SG1/45
28R/10162	AGS.566/C	PLUG	1	—	C	SG1/46
2172	E.A1.57.125	RING, filler cap attachment	1	L.59	C	SG1/47
		Attaching parts for E.A1.57.125:-				
	CB/1	Nut, aerotight (G.K.N.)	16	—	—	SG1/48
3142	E.A1.57.129	Ring, sealing	1	Neo-K-Tex	C	SG1/49
	AS.471/C	Washer	16	—	—	
28W/9130226	AGS.164/F	WASHER, jointing	1	—	C	SG1/50
28W/9149464	AGS.164/A	WASHER, jointing	1	—	C	SG1/51
	E.H7.57.17	CAP, FILLER, No.3 FUEL TANK ASSEMBLY	1	—	—	SG1/52
		Spares for:-				
1140	E.A1.57.133	ADAPTOR, filler cap, drain	1	L.40 or L.64	C	SG1/33
1141	AS.2590	CAP, FILLER, ASSEMBLY	1	—	B	SG1/34
		Consisting of:-				
	AS.2591	BASE	1	—	—	SG1/36
12876	AS.2592	CAP	1	—	C	SG1/36
28J/9432438	AS.5364	RING, sealing	1	—	C	SG1/37
		Attaching parts for AS.2590:-				
28D/9133011	A25/2C	Bolt, 2 BA	10	—	C	SG1/38
	CB/1	Nut, aerotight (G.K.N.)	10	—	—	SG1/39
1142	E.A1.57.131	Ring, sealing	1	Neo-K-Tex	C	SG1/40
3141	E.A2.56.71	Screw, csk. hd. 2 BA	15	S.11	C	SG1/41
	AS.471/C	Washer	10	—	—	
	AGS.1661/A or	CLIP	1	—	—	SG1/42
	AGS.606/D	CLIP	1	—	—	
	EEAS.77/13	HOSE, rubber, 1/4" i/d x 1/2" o/d x 3 3/4" long	1	DTD.625	LM	SG1/43
	AS.3033	PACKING	1	—	—	SG1/44
	E.A1.60.13	PLATE	1	—	—	SG1/45
28R/10162	AGS.566/C	PLUG	1	—	C	SG1/46

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
3180	E.A1.57.127	... RING, filler cap attachment	1	L.59	C	SG1/53
	CB/1	... Attaching parts for E.A1.57.127:-	16	—	—	SG1/48
3142	E.A1.57.129	... Nut, airtight (GKN)	1	Neo-K-Tex	C	SG1/49
	AS.471/C	... Ring, sealing	16	—	—	
		... Washer				
28W/9130226	AGS.164/F	... WASHER, jointing	1	—	C	SG1/50
28W/9149464	AGS.164/A	... WASHER, jointing	1	—	C	SG1/51
5K/116	AGS.1661/E	... CLIP, bonding	3	—	C	SG7/1
5K/119	AGS.1661/H	... CLIP, bonding	3	—	C	SG7/2
5K/121	AGS.1661/K	... CLIP, bonding	2	—	C	SG7/3
28E/9128961	AGS.605/1	... CLIP, hose	4	—	C	SG7/4
28E/9129092	AGS.605/2	... CLIP, hose	6	—	C	SG7/5
28E/9129562	AGS.605/3	... CLIP, hose	2	—	C	SG7/6
	E.A3.57.401	... CLIP, VENT PIPE, ASSEMBLY	1	—	—	SG7/7
		... Spares for				
	E.A3.57.401	... CLIP, half	1	—	—	SG7/8
	E.A3.57.409	... CLIP, half	1	—	—	SG7/9
		... Attaching parts for E.A3.57.407 and E.A3.57.409:				
28D/9133012	A25/3C	... Bolt, 2 BA	2	—	C	SG7/10
	E.A3.57.115	... CLIP, venting pipe	2	—	—	SG7/11
		... Attaching parts for E.A3.57.115:-				
28D/1200119	A25/4C	... Bolt	1	—	C	SG7/12
28M/1278190	AGS.2001/C/1	... Nut, stiff, 2 BA	1	—	C	SG7/13
	E.A3.57.421	... Washer, packing	2	L.72	—	SG7/14
4761	E.A3.57.249	... CLIP, purging pipe	1	L.72	C	SG7/15
		... Attaching parts for E.A3.57.249:-				
28D/9133011	A25/2C	... Bolt, 2 BA	1	—	C	SG7/16
4758	E.A3.57.253	... DUCT, venting, No.1 tank	1	—	C	SG7/17
4759	E.A3.57.255	... DUCT, venting, No.2 tank	1	—	C	SG7/18
	or					
	E.A3.57.427	... DUCT, venting, No.2 tank	1	—	—	
1232	E.A1.57.63	... ELBOW, nitrogen purging No.1 fuel tank	1	L.52	C	SG7/19
4760	E.A3.57.103	... ELBOW, venting, No.1 fuel tank	1	L.52	C	SG7/20
		... Attaching parts for E.A1.57.63 and E.A3.57.103:-				
28M/1278190	AGS.2001/C/1	... Nut, stiff 2 BA	8	—	C	SG7/21
1240	E.A1.57.59	... Washer, joint	1	Neo-K-Tex	C	SG7/22
	E.A3.57.521	... FELTING, PROTECTION, No.3 FUEL TANK, ASSEMBLY	—	—	—	SG1/54
		... Spares for:-				
	E.A1.57.373	... PAD, 3/16" thick x 4" dia.	24	—	—	SG1/55
	E.A1.57.829	... PAD, 1/4" thick x 4" dia.	1	—	—	SG1/56
	E.H8.57.5	... FUEL, DELIVERY SYSTEM, ASSEMBLY	—	—	—	
		... Spares for:-				
	E.H6.57.1	... BOX, JUNCTION, PORT, ASSEMBLY	1	—	—	SG3/1
	E.H6.57.2	... BOX, JUNCTION, STARBOARD, ASSEMBLY	1	—	—	SG3/2
		... Spares for:-				
1645	SELF PRIMING ENG.CO.Ltd. S.P.E.1235	... BOX, JUNCTION, 3 WAY, ASSEMBLY	1	—	A	SG3/3
		... Spares for:-				
38148	E.B6.57.143	... ADAPTOR, testing	1	—	C	SG3/4
31047	SPE.1229	... GASKET, jointing	1	—	C	SG3/5
13174	SPE.1230	... WASHER, drain valve	1	—	C	SG3/6

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
3645	SPE.1237	GASKET	3	-	C	SG3/7
28M/10281	AGS.2001/C/3	Attaching parts for E.H6.57.1 & E.H6.57.2:-	4	-	C	SG3/8
980	EEAS.20/1DR	Nut, stiff, 2 BA	4	L.72	C	SG3/9
	AS.470/C	Tab, locking	4	-	-	
		Washer	4	-	-	
8183	E.A1.57.1317	CLIP, half top, fuel pipes	12	L.72	C	SG3/10
28D/1008149	A25/28	Attaching parts for E.A1.57.1317:-	2	-	C	SG3/11
28M/1278189	AGS.2001/B/1	Bolt, 4 BA	2	-	C	SG3/12
	AS.470/B	Nut, stiff, 4 BA	2	-	C	
		Washer	2	-	C	
28E/9129092	AGS.1661/G	CLIP, bonding	16	-	C	SG3/13
	AGS.806/2	CLIP, hose	16	-	C	SG3/14
3168	E.A1.57.201	CLIP, hose, lower, fuel pipe at floor	1	L.59	C	SG3/15
		girder 16, port side				
8192	E.A1.57.202	CLIP, hose, lower, fuel pipe at floor	1	L.59	C	SG3/16
		girder 16, starboard side				
1168	E.A1.57.203	CLIP, hose, fuel pipe at floor	6	L.59	C	SG3/17
		girders 17, 19, and 20				
1169	E.A1.57.205	CLIP, hose, fuel pipe at frame 21, port side	1	L.59	C	SG3/18
1170	E.A1.57.206	CLIP, hose, fuel pipe at frame 21, starboard side	1	L.59	C	SG3/19
	E.A9.57.75	CLIP, hose, fuel pipe at frame 22, port side	1	L.59	-	SG3/20
1172	E.A1.57.208	CLIP, hose, fuel pipe at frame 22, starboard side	1	L.59	C	SG3/21
		Attaching parts for E.A1.57.201, E.A1.57.202, E.A1.57.203, E.A1.57.205, E.A1.57.206, E.A9.57.75 and E.A1.57.208:-				
28D/1010658	A25/18	Bolt, 4 BA	2	-	C	SG3/22
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	2	-	C	SG3/23
	AS.470/B	Washer	2	-	C	
28F/8216	EEAS.77/81	HOSE, rubber, 1 1/2" i/d x 1.5/8" o/d x 3" long	8	DTD.625	LM	SG3/24
	AGS.1142/J	NIPPLE, adaptor	10	-	C	SG3/25
	AGS.166/2	PIN, split	2	-	-	
1173	E.A1.57.105	PIPE ASSEMBLY, from hose joint aft of frame	2	L.54	C	SG3/26
		16 to fuel junction box port & starboard				
1174	E.A1.57.107	PIPE ASSEMBLY, from hose joint aft of frame	2	L.56	C	SG3/27
		19 to fuel junction box port & starboard				
1175	E.A1.57.109	PIPE, from hose joint aft of frame 19 to	1	L.56	C	SG3/28
		hose joint forward of frame 22, port				
1176	E.A1.57.110	PIPE, from hose joint aft of frame 19 to hose	1	L.56	C	SG3/29
		joint forward of frame 22, starboard				
5102	E.A3.57.117	PIPE ASSEMBLY, from fuel tank No.1	1	L.56	C	SG3/30
		pump to hose joint aft of frame 16, port				
5103	E.A3.57.119	PIPE ASSEMBLY, from fuel tank No.1	1	L.56	C	SG3/31
		pump to hose joint aft of frame				
		16, 16, starboard				
1179	E.A1.57.715	PIPE ASSEMBLY, from fuel tank No.3 pump	1	L.56	C	SG3/32
		to hose joint forward of frame 22, port				
1180	E.A1.57.717	PIPE ASSEMBLY, from fuel tank No.3	1	L.56	C	SG3/33
		pump to hose joint forward of frame				
		22, starboard				
2963	E.A1.57.1269	PIPE ASSEMBLY, from fuel tank No.2	1	L.56	C	SG3/34
		pump to junction box, port				
2962	E.A1.57.1267	PIPE ASSEMBLY, from fuel tank No.2	1	L.56	C	SG3/35
		pump to junction box, starboard				
28R/9456431	AGS.565/B	PLUG, 1/2" BSF fuel junction box	2	-	C	SG3/36
28F/8011884	AGS.1140/C	PLUG, nipple, fuel junction box	2	-	C	SG3/37

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
	E.H8.57.13	PUMP, FUEL, No.1 PORT, ASSEMBLY Spare for:-	1	—	—	SG2/1
	E.E.Co.LTD BRADFORD TYPE 201.Mk.8	ACTUATOR AND FUEL COCK ASSEMBLY Consisting of:-	1	—	—	SG2/2
5W/328	AED.200152	ACTUATOR, type 200. MK.1	1	—	A	SG2/3
5W/337	—	ADAPTOR, c/w label	1	—	B	SG2/4
27F/2206	SAUNDERS E.42.F.10	COCK, fuel	1	—	A	SG2/5
28M/1278190	AGS.2001/C/1	NUT, stiff, 4 BA	2	—	C	SG2/6
28D/9436920	A25/1C	Attaching parts for Type 201.MK.8:- Bolt, 2 BA	2	—	C	SG2/7
28W/1007983	AGS.162/C	Washer	2	—	C	
28W/9419475	SP15/C	Washer	2	—	C	
1183	E.A1.57.191	ADAPTOR, fuel pump cock	1	L.40	C	SG2/8
8173	E.A1.57.617	ADAPTOR, fuel pump - mounting Attaching parts for E.A1.57.617:-	1	—	C	SG2/9
28M/9403620	A27/CP	Nut, 2 BA	16	—	C	SG2/10
28W/1007983	AGS.162/C	Washer	16	—	C	
1187	E.A1.57.1315	BRACKET, actuator support Attaching parts for E.A1.57.1315:-	1	L.72	C	SG2/11
1184	E.A1.57.561	Bolt	2	—	C	SG2/12
28W/1007983	AGS.162/C	Washer	2	—	C	
28W/9419475	SP15/C	Washer	2	—	C	
8168	E.A1.57.621	BRACKET, channel fuel pump mounting Attaching parts for E.A1.57.621:-	1	L.72	C	SG2/13
28D/9436920	A25/1C	Bolt, 2 BA	14	—	C	SG2/14
28D/9133011	A25/2C	Bolt, 2 BA	1	—	C	SG2/15
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	5	—	C	SG2/16
28W/9419475	SP15/C	Washer	15	—	C	
8174	E.A1.57.601	BRACKET, plate, fuel pump mounting Attaching parts for E.A1.57.601:-	1	DTD.687	C	SG2/17
1185	E.A1.57.606	Bolt, 1/4" BSF	4	DTD.126	C	SG2/18
28M/10290	AGS.2001/E/1	Nut, stiff, 2 BA	4	—	C	SG2/19
	AS.470/E	Washer	4	—	C	
5542	EEAS.143/6	CLIP, pipe, single Attaching parts for EEAS.143/6:-	1	L.72	C	SG2/20
28D/1008149	A25/2B	Bolt, 4 BA	1	—	C	SG2/21
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	SG2/22
28W/9419465	SP13/B	Washer	1	—	C	
28F/9439631	AGS.952/B	COLLAR	1	—	C	SG2/23
	EEAS.77/11	HOSE, rubber, 1/2" i/d x 1/2" o/d x 1 1/2" long	1	DTD.625	LM	SG2/24
28F/8011885	AGS.1142/B	NIPPLE, adaptor	1	—	C	SG2/25
8169	E.A1.57.627	PIPE, drain, 1/4" o/d x 22 SWG	1	L.56	C	SG2/26
	SELF PRIMING ENG. SPE.1003.MK.4	PUMP, fuel Attaching parts for SPE.1003, MK.4:-	1	—	A	SG2/27
28M/9433473	AGS.2002/C/1	Nut, stiff, 2 BA	14	—	C	SG2/28
12251	EEAS.28/48U	Washer	2	—	C	SG2/29
28W/9419475	SP15/C	Washer	12	—	C	

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
28F/8011819	AGS.904/B	 SLEEVE, outer	1	-	C	SG2/30
28F/9423237	AGS.1132/B	 UNION, banjo body	1	-	C	SG2/31
		Attaching parts for AGS.1132/B:-				
28F/9423227	AGS.1135/B	 Bolt, banjo	1	-	C	SG2/32
28W/9130226	AGS.164/F	 Washer	2	-	C	
1190	E.A1.57.31	 WASHER, under fuel pump mounting adaptor	1	Neo-K- Tex	C	SG2/33
1189	E.A1.57.29	 WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	C	SG2/34
27537	E.A3.57.527	 WASHER, between fuel pump and fuel cock adaptor	1	L.17	C	SG2/35
27538	E.A3.57.529	 WASHER, between fuel cock and adaptor	1	L.17	C	SG2/36
	E.H8.57.15	 PUMP, FUEL, No.1, STARBOARD, ASSEMBLY	1	-	-	SG2/37
		Spare for:-				
	E.E.Co.LTD. BRADFORD TYPE 201.Mk.8	 ACTUATOR & FUEL COCK, ASSEMBLY	1	-	-	SG2/2
		Consisting of:-				
5W/328	AED.200152	 ACTUATOR, type 200 MK.1	1	-	A	SG2/3
5W/337	-	 ADAPTOR, c/w label	1	-	B	SG2/4
	SAUNDERS					
27F/2206	E.42.F10	 COCK, fuel	1	-	A	SG2/5
28M/1278190	AGS.2001/C/1	 NUT, stiff, 2 BA	2	-	C	SG2/6
		Attaching parts for TYPE 201.MK.8:-				
28D/9436920	A25/1C	 Bolt, 2 BA	2	-	C	SG2/7
28W/1007983	AGS.162/C	 Washer	2	-	C	
28W/9419475	SP15/C	 Washer	2	-	C	
1183	E.A1.57.191	 ADAPTOR, fuel pump cock	1	L.40	C	SG2/8
8173	E.A1.57.617	 ADAPTOR, fuel pump mounting	1	-	C	SG2/9
		Attaching parts for E.A1.57.617:-				
28M/9403520	A27/CP	 Nut, 2 BA	16	-	C	SG2/10
28W/1007983	AGS.162/C	 Washer	16	-	C	
1186	E.A1.57.607	 BRACKET, actuator support	1	L.72	C	SG2/38
		Attaching parts for E.A1.57.607:-				
28D/9133011	A25/2C	 Bolt, 2 BA	1	-	C	SG2/39
28M/1278190	AGS.2001/C/1	 Nut, stiff, 2 BA	1	-	C	SG2/40
28W/9419475	SP15/C	 Washer	1	-	C	
8175	E.A1.57.603	 BRACKET, channel, fuel pump mounting	1	L.72	C	SG2/41
		Attaching parts for E.A1.57.603:-				
28D/9436920	A25/1C	 Bolt, 2 BA	5	-	C	SG2/14
28D/9133011	A25/2C	 Bolt, 2 BA	10	-	C	SG2/15
28M/1278190	AGS.2001/C/1	 Nut, stiff, 2 BA	10	-	C	SG2/16
28W/9419475	SP15/C	 Washer	20	-	C	
8174	E.A1.57.601	 BRACKET, plate, fuel pump mounting	1	DTD.687	C	SG2/17
		Attaching parts for E.A1.57.601:-				
1185	E.A1.57.605	 Bolt, 1/2" BSF	4	DTD.126	C	SG2/18
28M/10290	AGS.2001/E/1	 Nut, stiff, 1/2" BSF	4	-	C	SG2/19
8772	EEAS.28/30ER	 Washer	4	-	C	

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5542	EEAS.143/6	CLIP, pipe, single	1	L.72	C	SG2/20
		Attaching parts for EEAS.143/6:-				
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	SG2/21
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	SG2/22
28W/9419465	SP13/B	Washer	1	—	C	
28F/9439531	AGS.952/B	COLLAR	1	—	C	SG2/23
	EEAS.77/11	HOSE, rubber, 1/2" i/d x 1/2" o/d x 1 1/2" long	1	DTD.825	LM	SG2/24
28F/9501	AGS.1142/B	NIPPLE, adaptor	1	—	C	SG2/25
8176	E.A1.57.625	PIPE, drain, 1/2" o/d x 22 SWG	1	L.56	C	SG2/42
	SELF PRIMING ENG. SPE.1003 MK4	PUMP, fuel	1	—	A	SG2/27
		Attaching parts for SPE.1003 MK4:-				
28M/9433473	AGS.2002/C/1	Nut, stiff, 2 BA	14	—	C	SG2/28
12251	EEAS.28/4BU	Washer	2	—	C	SG2/29
28W/9419475	SP15/C	Washer	12	—	C	
28F/8011819	AGS.904/B	SLEEVE, outer	1	—	C	SG2/30
28F/9423237	AGS.1132/B	UNION, benjo body	1	—	C	SG2/31
		Attaching parts for AGS.1132/B				
28F/9423227	AGS.1135/B	Bolt, benjo	1	—	C	SG2/32
28W/9130226	AGS.164/F	Washer	2	—	C	
1190	E.A1.57.31	WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	C	SG2/33
1189	E.A1.57.29	WASHER, between fuel pump and mounting	1	Neo-K-Tex	C	SG2/34
27537	E.A3.57.527	WASHER, between fuel pump and fuel cock adaptor	1	L.17	C	SG2/35
27538	E.A3.57.529	WASHER, between fuel cock and adaptor	1	L.17	C	SG2/36
	E.H8.57.17	PUMP, FUEL, No.2 PORT, ASSEMBLY	1	—	—	SG2/43
		Spares for:-				
	E.E.Co.LTD. BRADFORD TYPE.201.MK.8	ACTUATOR AND FUEL COCK ASSEMBLY	1	—	—	SG2/2
		Consisting of:-				
5W/328	AED.200152	ACTUATOR, type 200 MK.1	1	—	A	SG2/3
5W/337	—	ADAPTOR, c/w label	1	—	B	SG2/4
	SAUNDERS					
27F/2206	E.42.F10	COCK, fuel	1	—	A	SG2/5
28M/1278190	AGS.2001/C/1	NUT, stiff, 2 BA	2	—	C	SG2/6
		Attaching parts for TYPE 201.MK.8:-				
28D/9436920	A25/1C	Bolt, 2 BA	2	—	C	SG2/7
28W/1007983	AGS.162/C	Washer	2	—	C	
28W/9419475	SP15/C	Washer	2	—	C	
1183	E.A1.57.191	ADAPTOR, fuel pump cock	1	L.40	C	SG2/8
3175	E.A1.57.571	ADAPTOR, fuel pump mounting	1	—	C	SG2/44
		Attaching parts for E.A1.57.571:-				
28M/9403520	A27/CP	Nut, 2 BA	16	—	C	SG2/10
28W/1007983	AGS.162/C	Washer	16	—	C	
1194	E.A1.57.709	BRACKET, actuator support	1	—	C	SG2/45
		Attaching parts for E.A1.57.709:-				
28D/1007975	AS.1242/1C	Bolt, csk. hd. 2 BA	3	—	C	SG2/46
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	3	—	C	SG2/47
28W/9419475	SP15/C	Washer	3	—	C	

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
8778	E.A1.57.576	BRACKET, channel assembly, fuel pump mounting	1	—	C	SG2/48
28D/9436920	A25/1C	Attaching parts for E.A1.57.576:-	12	—	C	SG2/49
28M/1278190	AGS.2001/C/1	Bolt, 2 BA	12	—	C	SG2/50
28W/9419475	SP15/C	Nut, stiff, 2 BA	12	—	C	
		Washer	12	—	C	
8171	E.A1.57.589	BRACKET, plate, angle, fuel pump mounting	1	DTD.687	C	SG2/61
		Attaching parts for E.A1.57.589:-				
1185	E.A1.57.605	Bolt, 1/2" BSF	4	DTD.126	C	SG2/19
28M/10290	AGS.2001/E/1	Nut, stiff, 1/2" BSF	1	—	C	SG2/19
28W/9419405	SP15/E	Washer	4	—	C	
6542	EEAS.143/6	CLIP, pipe, single	1	L.72	C	SG2/20
		Attaching parts for EEAS.143/6:-				
28D/1007285	AS.1242/1B	Bolt, 4 BA	1	—	C	SG2/21
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	SG2/22
28W/9419465	SP13/B	Washer	1	—	C	
28F/9439531	AGS.952/B	COLLAR	1	—	C	SG2/23
	EEAS.77/11	HOSE, rubber 1/2" i/d x 1/2" o/d x 1 1/2" long	1	DTD.625	LM	SG2/24
28F/8011885	AGS.1142/B	NIPPLE, adaptor	1	—	C	SG2/25
8774	E.A1.57.629	PIPE, drain, 1/2" o/d x 20 SWG	1	L.56	C	SG2/26
	SELF PRIMING ENG.					
5UE/5535	SPE.1002.MK4	PUMP, fuel	1	—	A	SG2/27
		Attaching parts for SPE.1003.MK.4:-				
28M/9433473	AGS.2002/C/1	Nut, stiff, 2 BA	14	—	C	SG2/28
12251	EEAS.28/4BU	Washer	2	—	C	SG2/29
28W/9419475	SP15/C	Washer	12	—	C	
28F/8011819	AGS.904/B	SLEEVE, outer	1	—	C	SG2/30
28F/9423237	AGS.1132/B	UNION, banjo body	1	—	C	SG2/31
		Attaching parts for AGS.1132/B:-				
28F/9423227	AGS.1135/B	Bolt, banjo	1	—	C	SG2/32
28W/9130226	AGS.164/F	Washer	2	—	C	
1190	E.A1.57.31	WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	C	SG2/33
1189	E.A1.57.29	WASHER, between fuel pump and mounting	1	Neo-K-Tex	C	SG2/34
27537	E.A3.57.527	WASHER, between fuel pump and fuel cock adaptor	1	L.17	C	SG2/35
27538	E.A3.57.529	WASHER, between fuel cock and adaptor	1	L.17	C	SG2/36
	E.H8.57.19	PUMP, FUEL No.2, STARBOARD, ASSEMBLY	1	—	—	SG2/53
		Spares for:-				
	E.E.Co.Ltd. BRADFORD TYPE.201.MK.8	ACTUATOR & FUEL COCK, ASSEMBLY	1	—		SG2/2
		Consisting of:-				
5W/328	AED.200152	ACTUATOR, type 200.MK.1	1	—	A	SG2/3
5W/337	—	ADAPTOR, c/w label	1	—	B	SG2/4
	SAUNDERS					
27F/2206	E.42.F10	COCK, fuel	1	—	A	SG2/5
28M/1278190	AGS.2001/C/1	NUT, stiff, 2 BA	2	—	C	SG2/6

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
1190	E.A1.57.31	WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	C	SG2/23
1189	E.A1.57.29	WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	C	SG2/34
27537	E.A3.57.527	WASHER, between fuel pump and fuel cock adaptor	1	L.17	C	SG2/35
27538	E.A3.57.529	WASHER, between fuel cock and adaptor	1	L.17	C	SG2/36
	E.A1.57.1299	WASHER, packing	2	—	—	SG2/62
	E.H8.57.21	PUMP, FUEL, No.3, PORT, ASSEMBLY	1	—	—	SG2/63
		Spares for:-				
	E.E.Co.Ltd. BRADFORD TYPE 201.MK.8	ACTUATOR AND FUEL COCK ASSEMBLY	1	—	—	SG2/2
		Consisting of:-				
5W/328	AED.200152	ACTUATOR, type 200, MK.1	1	—	A	SG2/3
5W/337	—	ADAPTOR, c/w label	1	—	B	SG2/4
	SAUNDERS					
27F/2206	E.42.F10	COCK, fuel	1	—	A	SG2/5
28M/1278190	AGS.2001/C/1	NUT, stiff, 2 BA	2	—	C	SG2/6
		Attaching parts for TYPE 201.MK.8:-				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	SG2/7
28W/1007983	AGS.162/C	Washer	1	—	C	
1183	E.A1.57.191	ADAPTOR, fuel pump cock	1	L.40	C	SG2/8
3175	E.A1.57.571	ADAPTOR, fuel pump mounting	1	—	C	SG2/44
		Attaching parts for E.A1.57.571:-				
28M/9403520	A27/CP	Nut, stiff, 2 BA	16	—	C	SG2/10
28W/1007983	AGS.162/C	Washer	16	—	C	
3178	E.A1.57.39	BRACKET, fuel pump mounting	1	L.72	C	SG2/64
		Attaching parts for E.A1.57.39:-				
28D/9436920	A25/1C	Bolt, 2 BA	12	—	C	SG2/49
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	12	—	C	SG2/50
28W/9419475	SP15/C	Washer	12	—	C	
5542	EEAS.143/6	CLIP, pipe, single	1	L.72	C	SG2/20
		Attaching parts for EEAS.143/6:-				
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	SG2/21
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	SG2/22
28W/9419465	SP13/B	Washer, 4 BA	1	—	C	
28F/9439531	AGS.952/B	COLLAR	1	—	C	SG2/23
	EEAS.77/11	HOSE, rubber, 1/4" i/d x 1/2" o/d x 1 1/2" long	1	DTD.625	C	SG2/24
28F/8011885	AGS.1142/B	NIPPLE, adaptor	1	—	C	SG2/25
8775	E.A3.57.53	PIPE, drain, 1/2" o/d x 22 SWG	1	L.58	C	SG2/65
	SELF					
	PRIMING ENG.					
5UE/6535	SPE.1003.MK.4	PUMP, fuel	1	—	A	SG2/27
		Attaching parts for SPE.1003.MK.4:-				
28M/9433473	AGS.2002/C/1	Nut, stiff, 2 BA	14	—	C	SG2/28
12251	EEAS.28/4BU	Washer	2	—	C	SG2/29
28W/9419475	SP15/C	Washer	12	—	C	
28F/8011819	AGS.904/B	SLEEVE, outer	1	—	C	SG2/30
28F/9423237	AGS.1132/B	UNION, benjo body	1	—	C	SG2/31
		Attaching parts for AGS.1132/B:-				
28F/9423227	AGS.1135/B	Bolt, benjo	1	—	C	SG2/32
28W/9130226	AGS.164/F	Washer	2	—	C	

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Pete No.
					M.R. L.M.	
		1 2 3 4 5 6				
1190	E.A1.57.31	WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	C	SG2/33
1189	E.A1.57.29	WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	C	SG2/34
27537	E.A3.57.527	WASHER, between fuel pump and fuel cock adaptor	1	L.17	C	SG2/35
27538	E.A3.57.529	WASHER, between fuel cock and adaptor	1	L.17	C	SG2/36
	E.H8.67.23	PUMP, FUEL, No.3 STARBOARD ASSEMBLY	1	—	—	SG2/65
		Spare for:-				
	E.E.CO.Ltd. BRADFORD TYPE 201.MK.8	ACTUATOR AND FUEL COCK ASSEMBLY	1	—	—	SG2/2
		Consisting of:-				
5W/328	AED.200152	ACTUATOR, Type 200.MK.1	1	—	A	SG2/3
5W/337	—	ADAPTOR, c/w label	1	—	B	SG2/4
	SAUNDERS E.42.F10	COCK, fuel	1	—	A	SG2/5
27F/2206	AGS.2001/C/1	NUT, stiff, 2 BA	2	—	C	SG2/6
28M/1278190		Attaching parts for TYPE 201 MK.8:-				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	SG2/7
28W/1007983	AGS.162/C	Washer	1	—	C	
	1183	ADAPTOR, fuel pump cock	1	L.40	C	SG2/8
	3175	ADAPTOR, fuel pump mounting	1	—	C	SG2/44
		Attaching parts for E.A1.57.571:-				
28M/9403520	A27/CP	Nut, 2 BA	16	—	C	SG2/10
28W/1007983	AGS.162/C	Washer	16	—	C	
	3178	BRACKET, fuel pump mounting	1	L.72	C	SG2/67
		Attaching parts for E.A1.57.41:-				
28D/9436920	A25/1C	Bolt, 2 BA	12	—	C	SG2/49
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	12	—	C	SG2/50
28W/9419475	SP15/C	Washer, 2 BA	12	—	C	
	5542	CLIP, pipe, single	1	L.72	C	SG2/20
		Attaching parts for EEAS.143/6:-				
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	SG2/21
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	SG2/22
28W/9419465	SP13/B	Washer, 4 BA	1	—	C	
	28F/9439531	COLLAR	1	—	C	SG2/23
	EEAS.77/11	HOSE, rubber, 1/2" i/d x 1/2" o/d x 1 1/2" long	1	DTD.626	LM	SG2/24
28F/8011885	AGS.1142/B	NIPPLE, adaptor	1	—	C	SG2/25
3179	E.A1.57.847	PIPE, drain, 1/2" o/d x 20 SWG	1	L.56	C	SG2/68
	SELF PRIMING ENG. SPE.1003.MK.4	PUMP, fuel	1	—	A	SG2/27
		Attaching parts for SPE.1003.MK.4:-				
28M/9433473	AGS.2002/C/1	Nut stiff, 2 BA	14	—	C	SG2/28
12251	EEAS.28/4BU	Washer	2	—	C	SG2/29
28W/9419475	SP15/C	Washer	12	—	C	
28F/8011819	AGS.904/B	SLEEVE, outer	1	—	C	SG2/30
28F/9423237	AGS.1132/B	UNION, banjo body	1	—	C	SG2/31
		Attaching parts for AGS.1132/B:-				
28F/9423227	AGS.1135/B	Bolt, banjo	1	—	C	SG2/32
28W/9130226	AGS.164/F	Washer	2	—	C	
1190	E.A1.57.31	WASHER, under fuel pump mounting adaptor	1	Neo-K-Tex	C	SG2/33
1189	E.A1.57.29	WASHER, between fuel pump and mounting adaptor	1	Neo-K-Tex	C	SG2/34

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
27537	E.A3.57.527	WASHER, between fuel pump and fuel cock adaptor	1	L.17	C	SG2/35
27538	E.A3.57.529	WASHER, between fuel cock and adaptor	1	L.17	C	SG2/36
28F/9140970	AGS.904/C	SLEEVE, outer	2	—	C	SG3/38
28W/9130226	AGS.164/F	WASHER	2	—	C	
	EEAS.77/72	HOSE, rubber 1" i/d x 1.3/8" o/d x 2 1/2' long	1	DTD.625	LM	SG7/23
	EEAS.77/91	HOSE, rubber, 1 1/2" x 1.7/8" o/d x 3" long	3	DTD.625	LM	SG7/24
4762	E.A3.57.185	HOSE, rubber, venting pipe joint	1	Elastic	C	SG7/25
4763	E.A3.57.187	HOSE, rubber, purging pipe joint	1	Elastic	C	SG7/26
5K/7000227	AS.3360/B/5/B	LEAD, bonding	2	—	C	SG7/27
5K/3372	AS.3360/B/5/C	LEAD, bonding	4	—	C	SG7/28
28F/9488111	AGS.1142/H	NIPPLE, adaptor	2	—	C	SG7/29
	E.A1.57.825	NITROGEN, H.P. SYSTEM, ASSEMBLY	—	—		
		Spares for:—				
1880	EEAS.91/1	CLIP, pipe, double	3	L.16	C	SG4/1
5542	EEAS.143/6	CLIP, pipe, single, 1/2" dia. Attaching parts for EEAS.91/1 and EEAS.143/6:—	28	L.72	C	SG4/2
28D/1008149	A25/2B	Bolt, 4 BA	1	—	C	SG4/3
28D/9419452	A25/3B	Bolt, 4 BA	1	—	C	SG4/4
28M/1276189	AGS.2001/B/1	Nut, stiff, 4 BA	1	—	C	SG4/5
12030	EEAS.21/2ER	Washer, 'D'	1	L.72	C	SG4/6
28W/9419474	SP15/B	Washer	1	—	C	
	E.A3.57.25	NUT, blanking	3	—	C	SG4/7
6D/575	—	PIECE, connecting, 2 way, MK.3A	2	—	C	SG4/8
1160	E.A1.57.835	PIPE ASSEMBLY, c/w nut and nipple, from coupling forward of frame 13 to coupling aft of frame 15, H.P. line	1	DTD.323	C	SG4/9
1161	E.A1.57.837	PIPE ASSEMBLY, c/w nut and nipple from supply tee forward of frame 17 to coupling tee forward of frame 13 H.P. line	1	DTD.323	C	SG4/10
1162	E.A1.57.839	PIPE ASSEMBLY, c/w nut and nipple from coupling aft of frame 15 to coupling aft of frame 27, H.P. line	1	DTD.323	C	SG4/11
1167	E.A1.57.849	PIPE ASSEMBLY, c/w nut and nipple, from coupling aft of frame 27 to reducing valve, H.P. line	1	DTD.323	C	SG4/12
4764	E.A3.11.141	PANEL, detachable, No.1 fuel tank Attaching parts for E.A3.11.141:—	1	—	C	SG1/57
1026	EEAS.1/13C	Screw, 2 BA	56	S.96	C	SG1/58
1028	EEAS.1/3C	Screw, 2 BA	2	S.96	C	SG1/59

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
4765	E.A3.11.233	PANEL, detachable, No.2 fuel tank	1	—	C	SG1/80
1026	EEAS.1/1½C	Attaching parts for E.A3.11.233:- Screw, 2 BA	38	S.96	C	SG1/81
4766	E.A3.57.83	PANEL, detachable, No.3 fuel tank	1	—	C	SG1/82
1468	EEAS.1/2C	Attaching parts for E.A3.57.83:- Screw, 2 BA	18	S.96	C	SG1/83
	E.H8.57.25	PIPES, FUEL TRANSFER ASSEMBLY	—	—	—	
		Spares for:-				
	E.E.CO.Ltd. BRADFORD TYPE 219.MK.1	ACTUATOR AND FUEL COCK ASSEMBLY	2	—	—	SG5/1
		Consisting of:-				
5W/328	AED.200152	ACTUATOR, Type 200.MK.1	1	—	A	SG5/2
	SAUNDERS					
27F/2206	E.42.F10	COCK, fuel	1	—	A	SG5/3
	AEA.219012	LABEL	1	—	—	SG5/4
28M/1278190	AGS.2001/C/1	NUT, stiff, 2 BA	2	—	C	SG5/5
		Attaching parts for Type 219.MK.1:-				
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	3	—	C	SG5/6
28T/2904	AGS.884/B	Stud	3	—	C	SG5/7
28W/9419402	SP13/C	Washer	3	—	C	
20470	E.A3.57.259	BRACKET ASSEMBLY, fuel cock, port	1	—	C	SG5/8
	E.A3.57.261	BRACKET ASSEMBLY, fuel cock, starboard	1	—	—	SG5/9
		Attaching parts for E.A3.57.259 and E.A3.57.261:-				
28D/9436920	A25/1C	Bolt, 2 BA	6	—	C	SG5/10
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	6	—	C	SG5/11
28W/9419402	SP13/C	Washer	6	—	C	
3107	E.A1.57.267	BRACKET ASSEMBLY, float valve	1	—	C	SG5/12
		Attaching parts for E.A1.57.267:-				
28D/12837	A28/1C	Bolt, 2 BA	3	—	C	SG5/13
28D/1214980	A28/6C	Bolt, 2 BA	3	—	C	SG5/14
28M/10281	AGS.2001/C/3	Nut, stiff, 2 BA	6	—	C	SG5/15
	AS.2809/4/06	Tube, distance	3	—	—	SG5/16
28W/9419402	SP13/C	Washer	6	—	C	
5K/118	AGS.1661/G	CLIP, bonding	19	—	C	SG5/17
28D/9129092	AGS.806/2	CLIP, hose	20	—	C	SG5/18
1145	E.A1.57.317	CLIP, pipe, fuel	10	L.72	C	SG5/19
		Attaching parts for E.A1.57.317:-				
28D/12953	A28/18	Bolt, 4 BA	2	—	C	SG5/20
28M/1966039	AGS.2001/B/3	Nut, stiff, 4 BA	2	—	C	SG5/21
28W/9419465	SP13/B	Washer	2	—	C	
	E.A3.57.285	CLIP, pipe, vent	1	L.72	—	SG5/22
		Attaching parts for E.A3.57.285:-				
28D/1010658	A25/1B	Bolt, 4 BA	2	—	C	SG5/23
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	2	—	C	SG5/24
28W/9419465	SP13/B	Washer	2	—	C	

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
8190	E.A3.57.481	FAIRLEAD, frame 27	2	LFS.21	C	SG5/25
28D/9419452	A25/38	Attaching parts for E.A3.57.481:-	4	—	C	SG5/26
28M/1278189	AGS.2001/B/1	Bolt, 4 BA	4	—	C	SG5/27
28W/9419485	SP13/B	Nut, stiff, 4 BA	4	—	C	
		Washer	4	—	C	
12231	E.A3.57.491	FILTER, float valve	1	—	C	SG5/28
	EEAS.77/81	HOSE, rubber, 1 1/2" i/d x 1.5/8" o/d x 3" long	10	DTD.625	—	SG5/29
28F/9513	AGS.1142/J	NIPPLE, adaptor	9	—	C	SG5/30
	AGS.166/6	PIN, split	2	—	—	
5999	E.A3.57.441	PIPE, fuel, from branch pipe to hose coupling centre, port, frame 27	1	L.54	C	SG5/31
8501	E.A3.57.445	PIPE, fuel, between hose couplings, centre of frame 27	1	L.54	C	SG5/32
21170	E.A3.57.493	PIPE ASSEMBLY, fuel, from branch pipe to fuel cock, port	1	L.54	C	SG5/33
12976	E.A3.57.495	PIPE ASSEMBLY, fuel, from branch pipe to fuel cock, starboard	1	L.54	C	SG5/34
12974	E.A3.57.497	PIPE, fuel, four way branch, at frame 27, port	1	T.26	C	SG5/36
12975	E.A3.57.499	PIPE, fuel branch, between non-return valve and hose connection	1	L.54	C	SG5/38
1726	E.A1.57.1127	PIPE ASSEMBLY, from port and starboard non-return valve to flexible coupling	2	L.56	C	SG5/37
5998	E.A3.57.451	PIPE, fuel, between hose coupling branch pipe and No.3 fuel tank pipe	1	L.54	C	SG5/38
1147	E.A1.57.271	PIPE ASSEMBLY, fuel from rubber hose connection at frame 27 to connection at No.3 fuel tank	1	L.54	C	SG5/39
	E.A3.57.271	PIPE ASSEMBLY, vent, inlet to vent valve	1	L.54	C	SG5/40
28F/9152509	AGS.1140/J	PLUG, nipple, fuel cock	2	—	C	SG5/41
1446	EEAS.66/5	RING, clamping, fuel pipe hose clips	20	L.72	C	SG5/42
28W/13593	AGS.568/J	RING, sealing	1	—	C	SG5/43
28F/9563150	AGS.904/J	SLEEVE, outer, fuel cock	2	—	C	SG5/44
5X/6240	E.A1.81.429	TERMINAL, earth	1	—	C	SG5/45
28F/4051610	AGS.1103/J	UNION, body, float valve	1	—	C	SG5/46
	SELF PRIMING ENG.CO.LTD.					
27F/6459	FV.1250.S.MK.8	VALVE, float, 1 1/2" BSP	1	—	A	SG5/47
		Attaching parts for FV.1250.S.MK.8:-				
28M/10281	AGS.2001/C/3	Nut, stiff, 2 BA	12	—	C	SG5/48
6502	E.A3.57.455	Ring, sealing	2	Neo-K-Tex	C	SG5/49
1729	EEAS.20/1/DU	Tab, locking	1	DTD.124	C	SG5/50
28W/9419402	SP13/C	Washer	12	—	C	
	SELF PRIMING ENG.CO.LTD.					
27F/5178	SPE.2706	VALVE, non-return, Type P24A, MK.3	2	—	A	SG5/51
		Attaching parts for SPE.2706:-				
28D/1200119	A25/4C	Bolt, 2 BA	4	—	C	SG5/52
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	4	—	C	SG5/53
1729	EEAS.20/1/DU	Tab, locking	2	—	C	SG5/54

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A1.57.249	PIPES, AIR AND BLOW-OFF VALVE, FORWARD OF FRAME 22, ASSEMBLY Spares for:-	-	-	-	
17525	EEAS.143/10	CLIP, pipe, single	4	L.72	C	SG8/1
28D/1007979	AS.1246/18	Attaching parts for EEAS.143/10:-	1	-	C	SG8/2
28M/1278189	AGS.2001/B/1	Bolt, rd. chd. 4 BA	1	-	C	SG8/3
		Nut, stiff, 4 BA				
7223	E.A1.57.1179	FAIRLEAD	4	LES.21	C	SG8/4
		Attaching parts for E.A1.57.1179:-				
28D/1011019	A25/8C	Bolt, 2 BA	1	-	C	SG8/5
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	1	-	C	SG8/6
28W/9419475	SP15/C	Washer	1	-	C	
	EEAS.77/33	HOSE, rubber, 1/2" i/d x 3/4" o/d x 2" long	8	DTD.625	LM	SG8/7
1605	E.A1.57.1147	PIPE, air from connection at starboard side, to blow-off valve, side, forward connection	1	L.56	C	SG8/8
1606	E.A1.57.1149	PIPE, air, from connection at starboard side, to blow-off valve, side, aft connection	1	L.56	C	SG8/9
1603	E.A1.57.1151	PIPE, air, from connection at port side to blow-off valve, side, aft, connection	1	L.56	C	SG8/10
1604	E.A1.57.1153	PIPE, air, from connection at port side, to blow-off valve, side, forward connection	1	L.56	C	SG8/11
	E.A1.57.1131	VALVE, BLOW OFF, ASSEMBLY Spares for:-	1	-	-	SG8/12
1722	E.A1.57.1171	BODY, valve	1	-	C	SG8/13
1648	E.A1.57.1073	VALVE, AIR RELIEF, ASSEMBLY Consisting of:-	3	-	A	SG8/14
	E.A1.57.1071	BODY, relief valve	1	-	-	SG8/15
1649	E.A1.57.1143	BOLT, relief valve spring mounting	1	DTD.683	C	SG8/16
28M/10281	AGS.2001/C/3	NUT, stiff, 2 BA	2	-	C	SG8/17
1650	E.A1.57.1039	SPRING, relief valve operating	1	DTD.215	C	SG8/18
1658	E.A1.57.1027	WASHER, spring retaining	1	L.72	C	SG8/19
1659	E.A1.57.1029	WASHER, rubber seal, seating	1	L.72	C	SG8/20
1661	E.A1.57.1031	WASHER, rubber seating	1	-	C	SG8/21
1660	E.A1.57.1033	WASHER, rubber seal seating	1	L.72	C	SG8/22
28W/9419475	SP.15/C	WASHER	2	-	C	SG8/23
1723	E.A1.57.1173	WASHER, sealing, valve body	3	Petrolite	C	SG8/24
		Attaching parts for E.A1.57.1131:-				
28D/9436920	A25/1C	Bolt, 2 BA	4	-	C	SG8/25
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	4	-	C	SG8/26
28W/9419402	SP13/C	Washer	4	-	C	
	E.A9.57.77	PIPES, RECUPERATOR, ASSEMBLY Spares for:-	-	-	-	
5K/1037287	AS.4525/3	CLIP, bonding	11	-	C	SG6/1
5K/3018	AS.4525/6	CLIP, bonding	9	-	C	SG6/2
		Attaching parts for AS.4525/3 and AS.4525/6:-				
28D/1010658	A25/1B	Bolt, 4 BA	1	-	C	SG6/3
28D/1008149	A25/2B	Bolt, 4 BA	1	-	C	SG6/4
28D/9140638	A25/4B	Bolt, 4 BA	1	-	C	SG6/5
28M/1278189	AGS.2001/B/1	Nut, stiff, 4 BA	1	-	C	SG6/6
	EEAS.21/8CRH	Washer, 'D'	1	-	-	SG6/7

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Page No.
					M.R. L.M.	
		1 2 3 4 5 6				
28E/16216	AS.5418/20	CLIP, 'P'	2	—	C	SG6/8
28E/9482116	AS.5418/6	CLIP, 'P'	16	—	C	SG6/9
28E/1052524	AS.5418/3	CLIP, 'P'	16	—	C	SG6/10
		Attaching parts for AS.5418/20, AS.5418/6, and AS.5418/3:-				
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	SG6/11
28D/1008149	A25/2B	Bolt, 4BA	1	—	C	SG6/12
28D/9419452	A25/3B	Bolt, 4BA	1	—	C	SG6/13
28D/9133011	A26/2C	Bolt, 2BA	1	—	C	SG6/14
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	1	—	C	SG6/15
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	1	—	C	SG6/16
28W/9419465	SP.13/B	Washer	1	—	C	
	EEAS.21/8CR	Washer, 'D'	1	—	—	SG6/17
	EEAS.21/2DR	Washer, 'D'	1	—	—	SG6/18
28F/11914	AGS.1131/A	CONE, banjo body	1	—	C	SG6/19
		Attaching parts for AGS.1131/A:-				
28F/12852	AGS.1213/A	Bolt, banjo body	1	—	C	SG6/20
28F/1202394	AGS.1138/A	Washer, jointing	2	—	C	
28F/10796	AGS.1131/C	CONE, banjo body	1	—	C	SG6/21
		Attaching parts for AGS.1131/C:-				
28F/9140977	AGS.1213/C	Bolt, banjo body	1	—	C	SG6/22
28F/9649	AGS.1138/C	Washer, jointing	2	—	C	
28F/9129085	AGS.1102/A	CONE, union body	6	—	C	SG6/23
28F/9471001	AGS.1102/C	CONE, union body	6	—	C	SG6/24
28F/11852	AGS.1111/A	CONE, union body, flanged	2	—	C	SG6/25
		Attaching parts for AGS.1111/A:-				
28D/1008149	A26/2B	Bolt, 4BA	3	—	C	SG6/26
28M/9403519	A27/8P	Nut, 4BA	3	—	C	SG6/27
981	EEAS.20/2DR	Tab, locking	2	—	C	SG6/28
28F/9152415	AGS.1115/1	Washer, plate	1	—	C	SG6/29
28W/9416642	SP.47/B	Washer, spring	3	—	C	
28F/9714	AGS.1111/C	CONE, union body, flanged	2	—	C	SG6/30
		Attaching parts for AGS.1111/C:-				
28D/9133011	A26/2C	Bolt, 2BA	3	—	C	SG6/31
28M/9403520	A27/CP	Nut, 2BA	3	—	C	SG6/32
38736	E.B7.57.123	Tab, locking	2	—	C	SG6/33
28F/9128929	AGS.1115/4	Washer, plate	1	—	C	SG6/34
28W/9416643	SP.47/C	Washer, spring	3	—	C	
5K/7000206	AS.3380/B4B	LEAD, bonding	4	—	C	SG6/35
	E.A9.57.51	PIPE ASSEMBLY, from wing fuselage connection to coupling between frames 22 and 23, fuel bleed line, port	1	DTD.323	LM	SG6/36
	E.A9.57.53	PIPE ASSEMBLY, from coupling between frames 22 and 23 to coupling forward of frame 27 fuel bleed line, port	1	DTD.323	LM	SG6/37
	E.B6.57.91	PIPE ASSEMBLY, from coupling forward of frame 27 to coupling at frame 27, fuel bleed line, port	1	DTD.323	LM	SG6/38
	E.B6.57.99	PIPE ASSEMBLY, continuation on frame 27 to banjo union at frame 27, fuel bleed line, port	1	DTD.323	LM	SG6/39
	E.B6.57.93	PIPE ASSEMBLY, from wing fuselage connection to coupling between frames 22 and 23, fuel bleed line, starboard	1	DTD.323	LM	SG6/40

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.B6.57.95	PIPE ASSEMBLY, from coupling between frames 22 and 23 to coupling forward of frame 27, fuel bleed line, starboard	1	DTD.323	LM	SG8/41
	E.B6.57.97	PIPE ASSEMBLY, from coupling forward of frame 27 to coupling at frame 27, fuel bleed line, starboard	1	DTD.323	LM	SG8/42
	E.B6.57.101	PIPE ASSEMBLY, continuation on frame 27 to benjo union at frame 27, fuel bleed line, starboard	1	DTD.323	LM	SG8/43
	E.A9.57.55	PIPE ASSEMBLY, from wing fuselage connection to coupling between frames 22 and 23, air balance line, port	1	L.56	LM	SG8/44
	E.A9.57.57	PIPE ASSEMBLY, from coupling between frames 22 and 23 to coupling forward of frame 27, air balance line, port	1	L.56	LM	SG8/45
34791	E.B6.57.107	PIPE ASSEMBLY, from coupling forward of frame 27 to coupling at frame 27, air balance line, port	1	L.56	C	SG8/46
41977	E.B6.57.115	PIPE ASSEMBLY, from frame 27 to benjo union on vent pipe, air balance line, port	1	L.56	C	SG8/47
43264	E.B6.57.109	PIPE ASSEMBLY, from wing fuselage connection to coupling between frames 22 and 23, air balance line, starboard	1	L.56	C	SG8/48
40656	E.B6.57.111	PIPE ASSEMBLY, from coupling between frames 22 and 23 to coupling forward of frame 27, air balance line, starboard	1	L.56	C	SG8/49
39281	E.B6.57.113	PIPE ASSEMBLY, from coupling forward of frame 27 to coupling at frame 27, air balance line, starboard	1	L.56	C	SG8/50
	E.B6.57.117	PIPE ASSEMBLY, from frame 27 to benjo union on vent pipe, air balance line, starboard	1	L.56	LM	SG8/51
6878	EEAS.66/2	RING, clamping, No.3 tank, purging pipe	2	L.72	C	SG7/30
1444	EEAS.66/3	RING, clamping, No.2 tank, purging pipe	2	L.72	C	SG7/31
1443	EEAS.66/7	RING, clamping, No.2 tank, vent pipe	6	L.72	C	SG7/32
1447	EEAS.66/11	RING, clamping, No.3 tank, vent pipe	2	L.72	C	SG7/33
988	E.A1.56.247	TANK, FUEL, No.1 ASSEMB Spares for:-	1	-	B	SG1/1
6A/2766	SMITH WAYMOUTH JCB/1A	BOX, terminal	1	-	B	SG1/2
6A/2763	SMITH WAYMOUTH TB/44A	UNIT, tank	1	-	B	SG1/3
6A/2754	SMITH WAYMOUTH TB/45A	UNIT, tank	1	-	B	SG1/4
6A/2755	SMITH WAYMOUTH TB/46A	UNIT, tank	1	-	B	SG1/5
6A/2756	SMITH WAYMOUTH TB/47A	UNIT, tank	1	-	B	SG1/6
987	E.A1.56.243	TANK, FUEL, No.2 ASSEMBLY Spares for:-	1	-	B	SG1/7
6A/2766	SMITH WAYMOUTH JCB/1A	BOX, terminal	1	-	B	SG1/8

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
6A/2757	SMITH WAYMOUTH TB/48A	UNIT, tank	1	~	B	SG1/9
6A/2758	SMITH WAYMOUTH TB/49A	UNIT, tank	1	~	B	SG1/10
6A/2759	SMITH WAYMOUTH TB/50A	UNIT, tank	1	~	B	SG1/11
6A/2760	SMITH WAYMOUTH TB/51A	UNIT, tank	1	~	B	SG1/12
	E.A3.00.1055	TANK, FUEL, No.3 ASSEMBLY (Spares Condition) (Ref Drg.E A3.56.695, Ref.No.40126) Spares for:-	1	~	A	SG1/13
6A/2766	SMITH WAYMOUTH JCB/1A	BOX, terminal	1	~	B	SG1/14
6A/7517	SMITH WAYMOUTH PS.30	CABLE ASSEMBLY	1	~	C	SG1/15
6A/7518	SMITH WAYMOUTH PS.54	CABLE ASSEMBLY	2	~	C	SG1/16
6A/7519	SMITH WAYMOUTH PS.73	CABLE ASSEMBLY	2	~	C	SG1/17
19844	E.A3.57.457	PIPE, vent	2	~	C/MR	SG1/18
19845	E.A3.57.463	RING, rubber, for vent pipe clip	2	~	C	SG1/19
6A/2804	SMITH WAYMOUTH TC/17	UNIT, tank	2	~	A	SG1/20
6A/2805	SMITH WAYMOUTH TC/18	UNIT, tank	2	~	A	SG1/21
	E.A3.57.161	Attaching parts for E.A3.00.1055:- WIRE SUPPORT, No.3 FUEL TANK, ASSEMBLY Spares for:-	~	~	~	~
3507	E.A1.57.377	Grommet, tank support, nylon cord	22	Shore 50	C	SG1/22
2746	E.A1.57.371	Plate, spreader, fuel tank	124	L.72	C	SG1/23
29H/4099	TERRY 169/%	Ring, split	22	~	C	SG1/24
3508	E.A1.57.1175	Support, end, nylon cord	4	~	C	SG1/25
3509	E.A1.57.1177	Support, intermediate, nylon cord	20	~	C	SG1/26
1236	E.A1.57.65	TEE, nitrogen purging, No.2 fuel tank	1	DTD.300	C	SG7/34
4770	E.A3.57.101	TEE, vent, No.2 fuel tank	1	L.52	C	SG7/35
28M/1278190	AGS.2001/C/1	Attaching parts for E.A1.57.65 and E.A3.57.101:- Nut, stiff, 2BA	8	~	C	SG7/36
1240	E.A1.57.59	Washer	1	Neo-K-Tex	C	SG7/37
	E.A1.57.23	TRANSMITTER, FUEL GAUGE, INSTALLATION Spares for:-	~	~	~	SG1/27
6A/2813	SMITH WAYMOUTH XA	BRACKET, attachment	3	~	C	SG1/28
6A/2762	SMITH WAYMOUTH F.A.A.	GAUGE, fuel Attaching parts for XA and F.A.A.:-	3	~	A	SG1/31
28D/1214091	AS.1242/2C	Bolt, csk. hd. 2BA	4	~	C	SG1/29
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	4	~	C	SG1/30
28W/9419404	SP.16/C	Washer	4	~	C	~

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
1238	E.A1.57.73	. . . TUBE, purging, between frames 20 and 22	1	L.56	C	SG7/38
4771	E.A3.57.415	. . . TUBE, purging, from No.1 fuel tank to connection at frame 20	1	—	C	SG7/39
27F/2145	SELF PRIMING ENG.CO.LTD. SPE.1705	. . . VALVE, non-return, No.1 and 2 fuel tank purging pipe connections (Type P23A) Attaching parts for SPE.1705:-	2	—	A	SG7/40
1241	E.A1.57.93	. . . Washer, joint	1	Fibre	C	SG7/41
	E.B6.57.145	. . . VENTING, FUEL, BETWEEN BULKHEAD FRAME 27A AND FRAME 30, ASSEMBLY Spares for:-	—	—	—	
25546	E.B7.57.315	. . . BRACKET, vent pipe, at frame 28 and 29	2	L.59	C/MR	SG9/12
25547	E.B7.57.317	. . . CLIP, vent pipe, at frame 28 and 29 Attaching parts for E.B7.57.315 and E.B7.57.317:-	2	L.59	C/MR	SG9/13
28D/9133012	A25/3C	. . . Bolt, 2BA	2	—	C	SG9/14
28M/1278190	AGS.2001/C/1	. . . Nut, stiff, 2BA	2	—	C	SG9/15
25548	E.B7.57.319	. . . Washer, corner	2	L.72	C/MR	SG9/16
28W/9419402	SP.13/C	. . . Washer	2	—	C	
1201	E.A1.57.159	. . . ELBOW, moulded rubber connecting at bulkhead frame 27A	1	—	C	SG9/17
	or					
1438597	E.A3.57.411	. . . ELBOW, moulded rubber connecting at bulkhead frame 27A	1	—	C	
12890	E.B7.57.203	. . . FERRULE, fuel bleed line, frame 27	1	—	C	SG9/18
	EEAS.77/71	. . . HOSE, rubber, 1" i/d. x 1.3/8" o/d. x 2 1/2" long	2	DTD.625	LM	SG9/19
	EEAS.77/121	. . . HOSE, rubber, 2" i/d. x 2 1/2" o/d. x 2.5/R" long	2	DTD.625	LM	SG9/20
	EEAS.164/40/45	. . . HOSE, rubber, 2 1/2" i/d. x 3" o/d. x 4 1/2" long	2	DTD.625	LM	SG9/21
20670	E.A3.57.23	. . . PIPE, vent, at frame 27A	1	—	C	SG9/22
20933	E.B6.57.119	. . . PIPE, branch vent, at frame 27A	1	L.54	C	SG9/23
25536	E.B6.57.147	. . . PIPE ASSEMBLY, vent from frame 27A to hose coupling between frames 28 and 29	1	—	C	SG9/24
25550	E.B7.57.339	. . . PIPE, vent, from hose couplings forward of frame 29 to aft of frame 30	1	56	C	SG9/25
1444	EEAS.66/3	. . . RING, clamping, 1.3/8" dia.	4	L.72	C	SG9/26
1447	EEAS.66/11	. . . RING, clamping, 2.3/8" dia.	2	L.72	C	SG9/27
1442	EEAS.66/12	. . . RING, clamping, 2 1/2" dia.	4	L.72	C	SG9/28
	E.H8.57.29	. . . VENT PIPES AND TROUGH FOR No.3 FUEL TANK ASSEMBLY Spares for:-	—	—	—	
	E.A3.57.141	. . . BLOCK, packing, purging	4	LFS.21	—	SG9/1
	E.A3.57.143	. . . BLOCK, packing, venting	4	LFS.21	—	SG9/2
	E.A3.57.197	. . . BRACKET, lacing	1	—	—	SG9/3
	E.A3.57.201	. . . BRACKET, lacing Attaching parts for E.A3.57.201:-	1	—	—	SG9/4
28D/9436920	A25/1C	. . . Bolt, 2BA	1	—	C	SG9/5
28M/1278190	AGS.2001/C/1	. . . Nut, stiff, 2BA	1	—	C	SG9/6
4772	E.A3.57.139	. . . CLIP, pipe, purging	4	L.72	C	SG9/7
	E.A3.57.189	. . . CLIP, pipe, venting Attaching parts for E.A3.57.139 and E.A3.57.189:-	4	L.72	—	SG9/8
28D/1007972	A25/1C	. . . Bolt, 2BA	1	—	C	SG9/9
28D/9436920	A25/1C	. . . Bolt, 2BA	1	—	C	SG9/10
31530	E.A3.57.525	. . . DUCT, venting, No.3 fuel tank between main spar and frame 27	1	—	C	SG9/11

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Ci. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A3.57.413	TUBE, purging, between main spar and frame 27	1	—	—	SG9/29
4435	E.A3.11.129	WASHER, fuel contents gauge terminal box	3	L.72	C	
	E.H8.57.7	FUEL SYSTEM IN PORT WING, ASSEMBLY	—	—	—	
	E.H8.57.8	FUEL SYSTEM IN STARBOARD WING, ASSEMBLY	—	—	—	
	E.H8.57.11	FUEL DELIVERY SYSTEM, PORT INNER WING, ASSEMBLY	—	—	—	
	E.H8.57.9	FUEL DELIVERY SYSTEM, STARBOARD INNER WING, ASSEMBLY	—	—	—	
1255	E.A1.57.259	CLIP, pipe at ribs 1, 2 and 3, port Attaching parts for E.A1.57.259:-	3	L.72	C	SG10/1
28D/9133011	A25/2C	Bolt, 2BA	2	—	C	SG10/2
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	2	—	C	SG10/3
28W/9419402	SP.13/C	Washer	2	—	C	
1293	E.A1.57.183	CLIP, half, base, fuel pipe, at ribs 2 and 3, starboard	2	L.59	C	SG10/4
1294	E.A1.57.185	CLIP, half, top, fuel pipe, at ribs 2 and 3, starboard Attaching parts for E.A1.57.183 and E.A1.57.185:-	2	L.72	C	SG10/5
28D/9436920	A25/1C	Bolt, 2BA	2	—	C	SG10/6
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	2	—	C	SG10/7
28W/9419402	SP.13/C	Washer	2	—	C	
6879	EEAS.143/28H	CLIP, bonding	QR	—	C	SG10/8
	AGS.505/2	CLIP, hose, port	8	—	—	SG10/9
28E/9129092	AGS.605/2	CLIP, hose, starboard	8	—	C	SG10/10
1295	E.A1.57.173	ELBOW, connection on engine rib, port	1	DTD.304/A	C	SG10/11
1296	E.A1.57.174	ELBOW, connection on engine rib, starboard Attaching parts for E.A1.57.173 and E.A1.57.174:-	1	DTD.304/A	C	SG10/12
28D/9133012	A25/3C	Bolt, 2BA	4	—	C	SG10/13
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	4	—	C	SG10/14
980	EEAS.201/1/DR	Tab, locking, starboard only	4	L.72	C	SG10/15
28W/9419402	SP.13/C	Washer, port only	4	—	C	
5K/1037444	EEAS.77/82 AS.3360/C/4/C	HOSE, rubber, 1 1/4" i/d x 1 5/8" o/d x 5 1/4" long LEAD, bonding Attaching parts for AS.3360/C/4/C:-	2 QR	DTD.625 —	LM C	SG10/16 SG10/17
28D/9133011	A25/2C	Bolt, 2BA, port only	2	—	C	SG10/18
28D/9436920	A25/1C	Bolt, 2BA, starboard only	2	—	C	SG10/19
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	2	—	C	SG10/20
5259	EEAS.21/2ERH	Washer	2	L.72	C	SG10/21
28W/9419402	SP.13/C	Washer	2	—	C	
28F/9513420	AGS.1142/J	NIPPLE, adaptor	2	—	C	SG10/22
6881	E.B6.57.67	PIPE ASSEMBLY, fuel, from fuselage connection to hose joint at rib 1, port	1	L.56	C	SG10/23
	E.A2.57.264	PIPE ASSEMBLY, fuel from fuselage connection to hose joint at rib 1, starboard	1	—	—	SG10/24
6880	E.B6.57.77	PIPE, fuel, continuation between hose joints 1 1/4" o/d. x 20 SWG, port	1	L.56	C	SG10/25
13206	E.A9.57.21	PIPE, fuel, continuation between hose joints 1 1/4" o/d. x 20 SWG, starboard	1	L.56	C	SG10/26
5684	E.B7.57.131	PIPE ASSEMBLY, fuel, from hose joint between ribs 2 and 3 to engine rib elbow connection, port	1	L.56	C	SG10/27
13205	E.A9.57.19	PIPE ASSEMBLY, fuel, from hose joint between ribs 2 and 3 to engine rib elbow connection, starboard	1	L.56	C	SG10/28

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28R/9719126	AGS.566/B	PLUG	1	—	C	SG10/29
1446	EEAS.66/5	RING, clamping, for hose clips	8	L.72	C	SG10/30
16479	E.B6.57.75	SUPPORT, fuel, pipe at rib 3, port	1	—	C	SG10/31
28486	E.B7.57.137	SUPPORT, fuel, pipe at rib 2, port	1	—	C	SG10/32
		Attaching parts for E.B6.57.75 and E.B7.57.137:-				
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	SG10/33
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	—	C	SG10/34
28W/9419474	SP.15/B	Washer	2	—	C	
1304	E.A1.57.209	SUPPORT, fuel pipe, 2 off port, 4 off starboard	OR	—	C	SG10/35
		Attaching parts for E.A1.57.209:-				
28D/9419462	A25/3B	Bolt, 4BA	6	—	C	SG10/36
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	6	—	C	SG10/37
6384	E.A1.57.199	Plate, connecting, starboard only	2	L.72	C	SG10/38
28W/9419465	SP.13/B	Washer	6	—	C	
28W/9130226	AGS.164/F	WASHER, fibre	1	—	C	SG10/39
	E.A4.57.5211	PIPE, FUEL, FLEXIBLE, INSTALLATION, PORT	—	—	—	
	E.A4.57.5212	PIPE, FUEL, FLEXIBLE, INSTALLATION, STARBOARD	—	—	—	
		Spares for:-				
1383	E.A1.57.15	PIPE, FUEL, FLEXIBLE, PORT	1	WH2/1	C	SG11/1
1384	E.A1.57.16	PIPE, FUEL, FLEXIBLE, STARBOARD	1	WH2/1	C	SG11/2
	E.A4.57.5243	SLEEVE, pipe	1	—	—	SG11/3
		Attaching parts for E.A4.57.5243:-				
28D/1010658	A25/1B	Bolt, 4BA	2	—	C	SG11/4
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	2	—	C	SG11/5
	E.A1.57.245	PIPES, FUEL, TRANSFER, RIB 1, INNER WING, DROP TANK ASSEMBLY, PORT	—	—	—	
	E.A1.57.246	PIPES, FUEL TRANSFER, RIB 1, INNER WING, DROP TANK ASSEMBLY, STARBOARD	—	—	—	
		Spares for:-				
1256	E.A1.57.259	CLIP, pipe, special	5	L.72	C	SG14/1
	EEAS.77/81	HOSE, rubber, 1/4" i/d. x 1.5/8" o/d. x 3" long	2	DTD.625	LM	SG14/2
2725	E.A1.57.1257	PIPE, fuel, 1/4" o/d. x 20 SWG, port	1	L.56	C	SG14/3
2724	E.A1.57.1258	PIPE, fuel, 1/4" o/d. x 20 SWG, starboard	1	L.56	C	SG14/4
2723	E.A1.57.1259	PIPE, fuel, 1/4" o/d. x 20 SWG, port	1	L.56	C	SG14/5
2722	E.A1.57.1260	PIPE, fuel, 1/4" o/d. x 20 SWG, starboard	1	L.56	C	SG14/6
1446	EEAS.66/5	RING, clamping, 1.5/8" i/d.	4	L.72	C	SG14/7
	E.A1.57.247	PIPES, FUEL TRANSFER AND AIR IN INNER WING DROP TANK ASSEMBLY, PORT	—	—	—	
	E.A1.57.248	PIPES, FUEL, TRANSFER AND AIR IN INNER WING DROP TANK ASSEMBLY, STARBOARD	—	—	—	
		Spares for:-				
17526	EEAS.143/10	CLIP, pipe, single, 1/2" o/d.	4	L.16	C	SG14/8
1146	E.A1.57.317	CLIP, pipe, special	2	L.72	C	SG14/9
	EEAS.77/33	HOSE, rubber, 1/4" i/d. x 3/4" o/d. x 2" long	1	DTD.625	LM	SG14/10
	EEAS.77/81	HOSE, rubber, 1/4" i/d. x 1.5/8" o/d. x 3" long	1	DTD.625	LM	SG14/2
1261	E.A6.57.103	PIPE, fuel, 1/4" o/d. x 20 SWG, port	1	L.56	C	SG14/11
1263	E.A6.57.104	PIPE, fuel, 1/4" o/d. x 20 SWG, starboard	1	L.56	C	SG14/12
1675	E.A6.57.105	PIPE, air, 1/4" o/d. x 20 SWG, port	1	L.56	C	SG14/13
1676	E.A6.57.106	PIPE, air, 1/4" o/d. x 20 SWG, starboard	1	L.56	C	SG14/14
1673	E.A6.57.107	PIPE, air, 1/4" o/d. x 20 SWG, port	1	L.56	C	SG14/15
1674	E.A6.57.108	PIPE, air, 1/4" o/d. x 20 SWG, starboard	1	L.56	C	SG14/16
1446	EEAS.66/5	RING, clamping, 1.5/8" i/d.	2	L.72	C	SG14/17

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Plan No.
		1 2 3 4 5 6				
	E.A1.57.251	PIPES, FUEL AND AIR IN ENGINE NACELLE, ASSEMBLY, PORT	-	-	-	
	E.A1.57.252	PIPES, FUEL AND AIR IN ENGINE NACELLE, ASSEMBLY, STARBOARD	-	-	-	
		Spares for:-				
1265	E.A1.57.259	CLIP, pipe, special	3	L.72	C	SG14/1
6383	E.A3.57.417	CLIP, pipe, special	1	L.72	C	SG14/18
2160	EEAS.112/21	CLIP, pipe, single, 1/2" o/d.	3	L.16	C	SG14/19
	EEAS.77/81	HOSE, rubber, 1 1/4" i/d. x 1 5/8" o/d. x 3" long	1	DTD.625	LM	SG14/2
1269	E.A1.57.251C	PIPE ASSEMBLY, fuel, continuation between couplings in outer wing, port	1	L.56	C	SG14/20
1274	E.A1.57.252C	PIPE ASSEMBLY, fuel, continuation between couplings in outer wing, starboard	1	L.56	C	SG14/21
1661	E.A3.57.37	PIPE ASSEMBLY, fuel, continuation from coupling in inner wing to coupling in engine nacelle, port	1	T.26	C	SG14/22
1662	E.A3.57.38	PIPE ASSEMBLY, fuel, continuation from coupling in inner wing to coupling in engine nacelle, starboard	1	T.26	C	SG14/23
1663	E.A3.57.39	PIPE ASSEMBLY, between engine nacelle and outer wing, port	1	T.26	C	SG14/24
1664	E.A3.57.40	PIPE ASSEMBLY, between engine nacelle and outer wing, starboard	1	T.26	C	SG14/25
1665	E.A3.57.41	PIPE ASSEMBLY, air, continuation from coupling in inner wing to coupling union in engine nacelle, port	1	T.26	C	SG14/26
1666	E.A3.57.42	PIPE ASSEMBLY, air, continuation from coupling in inner wing to coupling union in engine nacelle, starboard	1	T.26	C	SG14/27
1667	E.A3.57.43	PIPE ASSEMBLY, air, continuation from coupling union in engine nacelle to coupling in outer wing, port	1	T.26	C	SG14/28
1668	E.A3.57.44	PIPE ASSEMBLY, air, continuation from coupling union in engine nacelle to coupling in outer wing, starboard	1	T.26	C	SG14/29
1671	E.A3.57.45	PIPE ASSEMBLY, air, continuation from coupling in inner wing to reducing union in engine bay, port	1	T.26	C	SG14/30
1672	E.A3.57.46	PIPE ASSEMBLY, air, continuation from coupling in inner wing to reducing union in engine bay, starboard	1	T.26	C	SG14/31
1669	E.A3.57.35	PIPE ASSEMBLY, air, from non-return valve to reducing union, port	1	T.26	C	SG14/32
1670	E.A3.57.36	PIPE ASSEMBLY, air, from non-return valve to reducing union, starboard	1	T.26	C	SG14/33
1446	EEAS.66/5	RING, clamping, 1 5/8" i/d	1	L.72	C	SG14/34
27F/2743	VICKERS A.6287/C	VALVE, non-return	1	-	A	SG14/35
	E.A1.57.255	PIPES, FUEL TRANSFER AND AIR IN OUTER WING, DROP TANK ASSEMBLY, PORT	-	-	-	
	E.A1.57.256	PIPES, FUEL TRANSFER AND AIR IN OUTER WING, DROP TANK ASSEMBLY, STARBOARD	-	-	-	
		Spares for:-				
1145	E.A1.57.317	CLIP, pipe, special	5	L.72	C	SG16/1
	EEAS.77/33	HOSE, rubber, 1/2" i/d. x 3/4" o/d. x 2" long	2	DTD.625	LM	SG16/2
	EEAS.77/81	HOSE, rubber, 1 1/4" i/d. x 1 5/8" o/d. x 3" long	1	DTD.625	LM	SG16/3
1284	E.A6.57.93	PIPE, fuel, 1 1/4" o/d. x 20 SWG	1	L.56	C	SG16/4
1285	E.A6.57.95	PIPE, fuel, 1 1/4" o/d. x 20 SWG	1	L.56	C	SG16/5

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
1286	E.A6.57.97	PIPE, air, 1/2" o/d. x 20 SWG	1	L.58	C	SG16/6
1287	E.A6.57.99	PIPE, air, 1/2" o/d. x 20 SWG, port	1	L.58	C	SG16/7
1702	E.A6.57.100	PIPE, air, 1/2" o/d. x 20 SWG, starboard	1	L.58	C	SG16/8
1446	EEAS.66/5	RING, clamping, 1.5/8" i/d.	2	L.72	C	SG16/9
	EEAS.20/1DU	TAB, locking	1	DTD.124	C	SG16/10
	SELF PRIMING ENG.CO.LTD.					
27F/5178	SPE.1706	VALVE, non-return, Type P24AM Mk.3	1	-	A	SG16/11
	E.A4.57.5209	PIPES, AIR, IN ENGINE NACELLE, ASSEMBLY, PORT	-	-	-	
	E.A4.57.5210	PIPES, AIR, IN ENGINE NACELLE, ASSEMBLY, STARBOARD	-	-	-	
		Spares for:-				
28F/12147	AGS.1130/C	BANJO, body, connection to recuperator ... Attaching parts for AGS.1130/C:-	1	-	C	SG15/1
28F/9140977	AGS.1213/C	Bolt, banjo	1	-	C	SG15/2
28F/1202393	AGS.1138/C	Washer	2	-	C	SG15/3
28E/1059359	AGS.2081/6	CLIP, pipe Attaching parts for AGS.2081/6:-	3	-	C	SG15/4
28S/1212717	A40/C16	Screw, rd. hd. 2BA	1	-	C	SG15/5
28S/1214093	4101/8/5/8	Screw, rd. hd. P.K.	1	-	C	SG15/6
	AS 2808/4/02	Tube, distance	1	-	-	SG15/7
28W/9419475	SP 15/C	Washer	1	-	C	
1278	E.A1.57.861	COUPLING, pipe	1	DTD.126	C	SG15/8
	LOCKHEED					
27M/695	MPA.30068	FILTER, PUROLATOR, ASSEMBLY Spares for:-	1	-	B	SG15/9
27M/9671	MPA.30110	ELEMENT, complete	1	-	C	SG15/10
27M/9672	MPA.29540	GASKET	2	-	C	SG15/11
51915	E.86.57.55	PIPE ASSEMBLY, from hose coupling joint to running coupling at purolator, port	1	-	C	SG15/12
5925	E.86.57.56	PIPE ASSEMBLY, from hose coupling joint to running coupling at purolator, starboard	1	-	C	SG15/13
1679	E.A3.57.51	PIPE ASSEMBLY, from restrictor coupling forward of main spar to non-return valve connection, port	1	T.26	C	SG15/14
1682	E.A3.57.52	PIPE ASSEMBLY, from restrictor coupling forward of main spar to non-return valve connection, starboard	1	T.26	C	SG15/15
12886	E.87.57.211	PIPE ASSEMBLY, from purolator to fuel recuperator banjo connection, port	1	-	C	SG15/16
12893	E.87.57.212	PIPE ASSEMBLY, from purolator to fuel recuperator banjo connection, starboard	1	-	C	SG15/17
12887	E.87.57.213	PIPE ASSEMBLY, from recuperator banjo connection to coupling forward of main spar, port	1	-	C	SG15/18
12894	E.87.57.214	PIPE ASSEMBLY, from recuperator banjo connection to coupling forward of main spar, starboard	1	-	C	SG15/19
	E.A4.57.5207	PIPES, RECUPERATOR, AFT OF SPAR, ASSEMBLY, PORT	-	-	-	
	E.A4.57.5208	PIPES, RECUPERATOR, AFT OF SPAR, ASSEMBLY, STARBOARD	-	-	-	
		Spares for:-				
	E.87.57.265	BRACKET, port	1	-	-	SG13/1
	E.87.57.266	BRACKET, starboard	1	-	-	SG13/2

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28E/1038164	AGS.2080/3	 CLIP, pipe	8	-	C	SG13/3
28E/1069061	AGS.2080/6	 CLIP, pipe	8	-	C	SG13/4
28E/9129045	AGS.2080/8	 CLIP, pipe	2	-	C	SG13/5
28E/1069357	AGS.2081/3	 CLIP, pipe	3	-	C	SG13/6
28E/1069359	AGS.2081/6	 CLIP, pipe	3	-	C	SG13/7
		Attaching parts for AGS.2080/3, AGS.2080/6, AGS.2080/8, AGS.2081/3 & AGS.2081/6:				
28D/9436920	A25/1C	 Bolt, 2BA	1	-	C	SG13/8
28D/9133011	A25/2C	 Bolt, 2BA	1	-	C	SG13/9
28M/1278190	AGS.2001/C/1	 Nut, stiff, 2BA	1	-	C	SG13/10
12888	EEAS.21A/8CR	 Washer, 'D'	1	-	C	SG13/11
12889	EEAS.21A/8CRH	 Washer, 'D'	1	-	C	SG13/12
28W/9419402	SP.13/C	 Washer	1	-	C	
28F/9129085	AGS.1102/A	 CONE, union body	1	-	C	SG13/13
28F/9471001	AGS.1102/C	 CONE, union body	1	-	C	SG13/14
28F/1036556	AGS.1111/A	 CONE, union body, flanged	2	-	C	SG13/15
		Attaching parts for AGS.1111/A:				
28D/1008149	A25/2B	 Bolt, 4BA	3	-	C	SG13/16
28M/1278189	AGS.2001/B/1	 Nut, stiff, 4BA	3	-	C	SG13/17
28F/9152415	AGS.1115/1	 Washer, plate	1	-	C	SG13/18
28W/9419465	SP.13/B	 Washer	3	-	C	
28F/9714	AGS.1111/C	 CONE, union body, flanged	2	-	C	SG13/19
		Attaching parts for AGS.1111/C:				
28D/9133011	A25/2C	 Bolt, 2BA	3	-	C	SG13/20
28M/1278190	AGS.2001/C/1	 Nut, stiff, 2BA	3	-	C	SG13/21
28F/9128929	AGS.1115/4	 Washer, plate	1	-	C	SG13/22
28W/9419402	SP.13/C	 Washer	3	-	C	
	E.87.57.249	 PIPE ASSEMBLY, air balance, from connection aft of main spar to connection at outer wing, rib 1, port	1	-		SG13/23
	E.87.57.250	 PIPE ASSEMBLY, air balance, from connection aft of main spar to connection at outer wing, rib 1, starboard	1	-		SG13/24
28585	E.87.57.251	 PIPE ASSEMBLY, air balance, across engine nacelle, from connection at outer wing rib 1 to connection at inner wing rib 7, port	1	-	C	SG13/25
31534	E.87.57.252	 PIPE ASSEMBLY, air balance, across engine nacelle, from connection at outer wing rib 1 to connection at inner wing rib 7, starboard	1	-	C	SG13/26
24675	E.87.57.253	 PIPE ASSEMBLY, air balance, from connection at rib 7, to connection between ribs 4 and 5 inner wing, port	1	-	C	SG13/27
38737	E.87.57.254	 PIPE ASSEMBLY, air balance from connection at rib 7, to connection between ribs 4 and 5 inner wing, starboard	1	-	C	SG13/28
24876	E.87.57.255	 PIPE ASSEMBLY, air balance from connection between ribs 4 and 5 to fuselage connection, port	1	-	C	SG13/29
	E.87.57.256	 PIPE ASSEMBLY, air balance, from connection between ribs 4 and 5 to fuselage connection, starboard	1	-		SG13/30
24677	E.87.57.257	 PIPE ASSEMBLY, fuel bleed line, from connection between ribs 4 and 5 to fuselage connection, port	1	-	C	SG13/31

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
38738	E.87.57.258	PIPE ASSEMBLY, fuel bleed line, from connection between ribs 4 and 5 to fuselage connection, starboard	1	-	C	SG13/32
24678	E.87.57.259	PIPE ASSEMBLY, fuel bleed line, from connection aft of main spar to connection at outer wing rib 1, port	1	-	C	SG13/33
38739	E.87.57.260	PIPE ASSEMBLY, fuel bleed line, from connection aft of main spar to connection at outer wing rib 1, starboard	1	-	C	SG13/34
24679	E.87.57.261	PIPE ASSEMBLY, fuel bleed line, across engine nacelle, from connection at outer wing rib 1, to connection at inner wing rib 7, port	1	-	C	SG13/35
38740	E.87.57.262	PIPE ASSEMBLY, fuel bleed line, across engine nacelle, from connection at outer wing rib 1, to connection at inner wing rib 7, starboard	1	-	C	SG13/36
24680	E.87.57.263	PIPE ASSEMBLY, fuel bleed line, from connection at rib 7 to connection between ribs 4 and 5 inner wing, port	1	-	C	SG13/37
38741	E.87.57.264	PIPE ASSEMBLY, fuel bleed line, from connection at rib 7 to connection between ribs 4 and 5 inner wing, starboard	1	-	C	SG13/38
	E.A4.57.5205	PIPES, FUEL DELIVERY, RECUPERATOR ASSEMBLY, PORT	-	-	-	-
	E.A4.57.5206	PIPES, FUEL DELIVERY, RECUPERATOR ASSEMBLY, STARBOARD	-	-	-	-
		Spares for:				
24670	E.86.57.45	BRACKET, support, actuated fuel cock, port	1	-	C	SG11/6
24671	E.86.57.47	BRACKET, support, actuated fuel cock, starboard	1	-	C	SG11/7
		Attaching parts for E.86.57.45 and E.86.57.47:-				
28D/9436920	A25/1C	Bolt, 2BA	4	-	C	SG11/8
28W/9419402	SP.13/C	Washer	4	-	C	
1255	E.A1.57.259	CLIP, pipe, rib 2A, at actuator	2	-	C	SG11/9
24673	E.86.57.51	CLIP, pipe, rib 2A forward of recuperator, port	1	-	C	SG11/10
24674	E.86.57.52	CLIP, pipe, rib 2A, forward of recuperator, starboard	1	-	C	SG11/11
		Attaching parts for E.A1.57.259, E.86.57.51 and E.86.57.52:-				
28D/9436920	A25/1C	Bolt, 2BA	2	-	C	SG11/12
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	2	-	C	SG11/13
28W/9419402	SP.13/C	Washer	2	-	C	
28E/4062113	AGS.2081/20	CLIP, pipe	3	-	C	SG11/14
		Attaching parts for AGS.2081/20:-				
28D/9436920	A25/1C	Bolt, 2BA	1	-	C	SG11/15
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	1	-	C	SG11/16
	EEAS.21A/4DRH	Washer, 'D'	1	-	-	SG11/17
	E.E.CO.LTD. BRADFORD TYPE 219 Mk.1	COCK, FUEL, ACTUATED ASSEMBLY Consisting of:-	1	-	-	SG11/18
5W/328	AED.200152	ACTUATOR, type 200 Mk.1	1	-	A	SG11/19
5W/343	-	ADAPTOR, c/w label	1	-	B	SG11/20
27F/2237	SAUNDERS E.42.A10	COCK	1	-	A	SG11/21
28M/1278190	AGS.2001/C/1	NUT, stiff, 2BA	1	-	C	SG11/22

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		Attaching parts for Type 219 Mk. 1:-				
28D/9138768	A25/1C	Bolt, 2BA	3	-	C	SG11/23
28W/9416643	SP47/C	Washer, spring	3	-	C	
6K/1037444	AS.3360/C/4/C	LEAD, bonding	3	-	C	SG11/24
28F/9513420	AGS.1142/J	NIPPLE, adaptor	4	-	C	SG11/25
	AGS.1170/J	NIPPLE	2	-	-	SG11/26
	E.A4.57.5213	PACKING, fireproof, for fuel pipe at rib 1	-	-	-	SG11/27
12885	E.B6.57.35	PIPE ASSEMBLY, front connection at rib 1	1	-	C	SG11/28
		to actuated fuel cock connection, port				
12892	E.B6.57.36	PIPE ASSEMBLY, from connection at rib 1	1	-	C	SG11/29
		to actuated fuel cock connection, starboard				
12884	E.B6.57.37	PIPE ASSEMBLY, from connection at rib 1	1	-	C	SG11/30
		to engine connection, port				
12891	E.B6.57.38	PIPE ASSEMBLY, from connection at rib 1	1	-	C	SG11/31
		to engine connection, starboard				
12411	E.B6.57.39	PIPE ASSEMBLY, from recuperator connection	1	-	C	SG11/32
		to non-return valve and fuel cock connection at rib 2A, port				
12422	E.B6.57.41	PIPE ASSEMBLY, from recuperator connection	1	-	C	SG11/33
		to non-return valve and fuel cock connection at rib 2A, starboard				
	E.A4.57.5219	PLATE, patch	1	-	-	SG11/34
		Attaching parts for E.A4.57.5219:-				
28D/9436920	A25/1C	Bolt, 2BA	4	-	C	SG11/35
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	4	-	C	SG11/36
980	EEAS.20/1DR	Tab, locking	1	-	C	SG11/37
34358	E.A3.57.467	PLUG, blanking at actuator	1	-	C	SG11/38
	E.A4.57.5215	RING, retaining, fireproof packing	1	-	-	SG11/39
		Attaching parts for E.A4.57.5215:-				
28D/9419452	A25/3B	Bolt, 4BA	8	-	C	SG11/40
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	8	-	C	SG11/41
28W/9419465	SP.13/B	Washer	8	-	C	
	E.A4.57.5203	PIPES, FUEL, RECUPERATOR, OUTER WING, ASSEMBLY, PORT	-	-	-	
	E.A4.57.5204	PIPES, FUEL, RECUPERATOR, OUTER WING, ASSEMBLY, STARBOARD	-	-	-	
		Spares for:-				
16116	E.A1.20.5399	ADAPTOR, drain	1	-	C	SG12/1
28F/9140973	AGS.1129/C	BANJO, body	1	-	C	SG12/2
		Attaching parts for AGS.1129/C:-				
28F/9140977	AGS.1213/C	Bolt, banjo	1	-	C	SG12/3
28F/1202393	AGS.1138/C	Washer	2	-	C	SG12/4
24667	E.B7.57.41	BRACKET, recuperator mounting, port	1	-	C	SG12/5
24668	E.B7.57.42	BRACKET, recuperator mounting, starboard	1	-	C	SG12/6
		Attaching parts for E.B7.57.41 and E.B7.57.42:-				
28D/1011019	A25/8C	Bolt, 2BA	4	-	C	SG12/7
	AS.2809/4/05	Tube, distance	4	-	C	SG12/8
28W/9419402	SP.13/C	Washer	4	-	C	
28E/1069061	AGS.2080/6	CLIP, 'P'	2	-	C	SG12/9
28E/17131	AGS.2080/20	CLIP, 'P'	1	-	C	SG12/10
28E/1069357	AGS.2081/3	CLIP, 'P'	1	-	C	SG12/11
28E/1069358	AGS.2081/4	CLIP, 'P'	1	-	C	SG12/12
28E/1069359	AGS.2081/6	CLIP, 'P'	4	-	C	SG12/13

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28E/1069356	AGS.2081/8	CLIP, 'P'	1	—	C	SG12/14
28E/4082113	AGS.2081/20	CLIP, 'P'	1	—	C	SG12/15
		Attaching parts for AGS.2080/8, AGS.2080/20, AGS.2081/3, AGS.2081/4, AGS. 2081/6, AGS.2081/8 and AGS.2081/20:-				
28D/9436920	A25/1C	Bolt, 2BA	1	—	C	SG12/16
28D/9133011	A25/2C	Bolt, 2BA	1	—	C	SG12/17
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	1	—	C	SG12/18
28W/9419402	SP.13/C	Washer	1	—	C	
	EEAS.21A/8DR	Washer, 'D'	1	—	—	SG12/19
	EEAS.21A/8/DRH	Washer, 'D'	1	—	—	SG12/20
28F/9489323	AGS.1120/10	CONE, tee	1	—	C	SG12/21
28F/8129085	AGS.1102/A	CONE, union body	1	—	C	SG12/22
28F/9471001	AGS.1102/C	CONE, union body	1	—	C	SG12/23
28F/1013401	AGS.1107/A	CONE, union body	2	—	C	SG12/24
28F/9710	AGS.1107/E	CONE, union reducing	1	—	C	SG12/25
5K/3416	AS.3360/C9C	LEAD, bonding	1	—	C	SG12/26
5K/1007443	AS.3360/C6C	LEAD, bonding	1	—	C	SG12/27
28F/1013599	AGS.1142/A	NIPPLE, adaptor	1	—	C	SG12/28
28F/8011885	AGS.1142/B	NIPPLE, adaptor	2	—	C	SG12/29
28F/8011886	AGS.1142/C	NIPPLE, adaptor	5	—	C	SG12/30
28F/8011886	AGS.1142/D	NIPPLE, adaptor	1	—	C	SG12/31
28587	E.87.57.89	PANEL ASSEMBLY, port	1	—	C	SG12/32
38735	E.87.57.90	PANEL ASSEMBLY, starboard	1	—	C	SG12/33
12398	E.87.57.103	PIPE ASSEMBLY, air balance, from reducing union to tee piece in air line, port	1	—	C	SG12/34
12412	E.87.57.104	PIPE ASSEMBLY, air balance, from reducing union to tee piece in air line, starboard	1	—	C	SG12/35
12399	E.87.57.105	PIPE ASSEMBLY, from recuperator non-return bleed valve to reducing union connection, port	1	—	C	SG12/36
12413	E.87.57.106	PIPE ASSEMBLY, from recuperator non-return bleed valve to reducing union connection, starboard	1	—	C	SG12/37
12400	E.87.57.107	PIPE ASSEMBLY, fuel bleed line from reducing union to coupling aft of main spar, port	1	—	C	SG12/38
12414	E.87.57.108	PIPE ASSEMBLY, fuel bleed line from reducing union to coupling aft of main spar, starboard	1	—	C	SG12/39
12401	E.87.57.109	PIPE ASSEMBLY, drain, from recuperator to reducing union connection, port	1	—	C	SG12/40
12415	E.87.57.110	PIPE ASSEMBLY, drain, from recuperator to reducing union connection, starboard	1	—	C	SG12/41
12402	E.87.57.113	PIPE ASSEMBLY, air balance from recuperator air inlet to reducing tee connection, port	1	—	C	SG12/42
12416	E.87.57.114	PIPE ASSEMBLY, air balance from recuperator air inlet to reducing tee connection, starboard	1	—	C	SG12/43
12403	E.87.57.115	PIPE ASSEMBLY, air balance from reducing tee to connection aft of main spar, port	1	—	C	SG12/44
12417	E.87.57.116	PIPE ASSEMBLY, air balance from reducing tee to connection aft of main spar, starboard	1	—	C	SG12/45
12404	E.87.57.117	PIPE ASSEMBLY, air supply, from banjo fitting on rib 1 to non-return valve in recuperator air supply line, port	1	—	C	SG12/46
12418	E.87.57.118	PIPE ASSEMBLY, air supply, from banjo fitting on rib 1 to non-return valve in recuperator air supply line, starboard	1	—	C	SG12/47

SERVICES
FUEL SYSTEM

Ref. No.	Part No.	Description	No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
12405	E.87.57.119	PIPE ASSEMBLY, air supply, from reducing valve to recuperator air inlet, port	1	—	C	SG12/48
12419	E.87.57.120	PIPE ASSEMBLY, air supply, from reducing valve to recuperator air inlet, starboard	1	—	C	SG12/49
26644	E.87.57.151	PIPE ASSEMBLY, drain, from reducing union to outlet adaptor, port	1	—	C	SG12/50
26645	E.87.57.152	PIPE ASSEMBLY, drain from reducing union to outlet adaptor, starboard	1	—	C	SG12/51
12406	E.87.57.167	PIPE ASSEMBLY, air balance, from reducing valve to reducing union, port	1	—	C	SG12/52
12420	E.87.57.168	PIPE ASSEMBLY, air balance, from reducing valve to reducing union, starboard	1	—	C	SG12/53
12407	E.87.57.277	PIPE ASSEMBLY, recuperator air supply from non-return valve to reducing valve, port	1	—	C	SG12/54
12421	E.87.57.278	PIPE ASSEMBLY, recuperator air supply from non-return valve to reducing valve, starboard	1	—	C	SG12/55
	SELF PRIMING ENG.CO.LTD.					
27F/2868	SPE.3889	RECUPERATOR, Type PRC.40 Mk.3	1	—	A	SG12/56
28F/9707349	AGS.1114/C	SLEEVE, screwed, flanged Attaching parts for AGS.1114/C:-	1	—	C	SG12/57
28D/9133011	A25/2C	Bolt, 2BA	3	—	C	SG12/58
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	3	—	C	SG12/59
28F/4051652	AGS.1115/5	Washer, plate	1	—	C	SG12/60
28W/9419402	SP.13/C	Washer	3	—	C	
12408	E.87.57.77	STRAP, RECUPERATOR MOUNTING ASSEMBLY Spares for:-	1	—	C	SG12/61
28U/14094	AS.2381	ROD, tension, 1/2" BSF	1	—	C	SG12/62
12409	E.87.57.57	TRUNNION, L.H.	1	—	C	SG12/63
12410	E.87.57.63	TRUNNION, R.H.	1	—	C	SG12/64
	HYMATIC ENG.CO.					
27VB/5119	C.51690	VALVE, reducing, Type PS.29/16 (E.87.57.183) Attaching parts for C.51690:-	1	—	A	SG12/65
28M/1278189	AGS.2001/B/1	Nut, stiff, 4BA	4	—	C	SG12/66
28W/9419465	SP.13/B	Washer	4	—	C	
27F/2853	703.A.A.04 or VICKERS A.5494.Mk.C E.A1.57.257	VALVE, non-return, 3/8" VALVE, non-return, 3/8" PIPES, FUEL AND AIR, DELIVERY, WING TIP, PORT, ASSEMBLY	1	—	A	SG12/67
	E.A1.57.258	PIPES, FUEL AND AIR, DELIVERY, WING TIP, STARBOARD, ASSEMBLY Spares for:-	—	—	—	
5K/1201351	AGS.1617/9	CLEAT Attaching parts for AGS.1617/9:-	1	—	C	SG16/12
28D/1008149	A25/2B	Bolt, 4BA	1	—	C	SG16/13
	BA/3	Nut	1	—	—	SG16/14
	AS.470/B	Washer	1	—	—	
1146	E.A1.57.317	CLIP, pipe Attaching parts for E.A1.57.317:-	1	L.72	C	SG16/1
	A1/2B	Bolt, 4BA	2	—	—	SG16/15
	BA/1	Nut	2	—	—	SG16/16
	AS.470/B	Washer	2	—	—	
1399	E.A1.57.343	CLIP, pipe Attaching parts for E.A1.57.343:-	1	L.72	C	SG16/17
	A17/3C	Bolt, 2BA	2	—	—	SG16/18

**SERVICES
FUEL SYSTEM**

Ref. No.	Part No.	Description	No. off	Mtl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
1400	E.A1.57.345	CLIP, pipe	1	L.72	C	SG16/19
28D/1214980	A28/6C	Attaching parts for E.A1.57.345:-	1	—	C	SG16/20
	CA/3	Bolt, 2BA	1	—	—	SG16/21
	E.A1.57.257/G	Nut	1	—	—	SG16/22
	AS.470/C	Tube, distance, 1/4" o/d. x 0".528 long x 22 SWG	1	DTD.310	—	SG16/22
		Washer	1	—	—	
	AGS.606/2	CLIP	6	—	—	SG16/23
	AGS.605/0	CLIP	6	—	—	SG16/24
	AGS.1661/A	CLIP, bonding	5	—	—	SG16/25
	AGS.1661/G	CLIP, bonding	5	—	—	SG16/26
1401	E.A1.57.265	ELBOW, fuel pipe	1	DTD.625	C	SG16/27
2112	E.A1.57.1243	ELBOW, fuel pipe	1	DTD.625	C	SG16/28
	EEAS.77/33	HOSE, rubber, 1/4" i/d. x 1/2" o/d. x 2" long	2	DTD.625	LM	SG16/2
	EEAS.77/81	HOSE, rubber, 1 1/4" i/d. x 1.5/8" o/d. x 3" long	2	DTD.625	LM	SG16/3
	E.A1.57.347	PIECE, packing	1	—	—	SG16/29
1403	E.A1.57.257/A	PIPE, fuel delivery, from drop tank to wing tip joint, port	1	DTD.310	C	SG16/30
1407	E.A1.57.258/A	PIPE, fuel delivery, from drop tank to wing tip joint, starboard	1	DTD.310	C	SG16/31
1404	E.A1.57.257/B	PIPE, fuel delivery, from wing tip joint to main plane	1	DTD.310	C	SG16/32
1405	E.A1.57.257/C	PIPE, air delivery, from drop tank to wing tip joint	1	DTD.310	C	SG16/33
1406	E.A1.57.257/D	PIPE, air delivery, from wing tip joint to main plane	1	DTD.310	C	SG16/34
1446	EEAS.66/5	RING, clamping, for pipe clips 1.5/8" i/d.	6	L.72	C	SG16/35
2170	E.A1.57.1245	RING, clamping, for pipe clips, 1/4" i/d.	2	L.72	C	SG16/36
	E.B7.57.293	VENTING, FUEL, BETWEEN FRAME 30 AND FRAME 40, REAR FUSELAGE, ASSEMBLY	—	—	—	
		Spares for:-				
25546	E.B7.57.315	BRACKET, fuel vent pipes	9	L.59	C/MR	SG9/12
25547	E.B7.57.317	CLIP, for vent pipes	9	L.59	C/MR	SG9/13
		Attaching parts for E.B7.57.315 and E.B7.57.317:-				
28D/9133012	A26/3C	Bolt, 2BA	2	—	C	SG9/14
28M/1278190	AGS.2001/C/1	Nut, stiff, 2BA	2	—	C	SG9/15
	E.B7.57.319	Washer, corner	2	L.72	C	SG9/16
28W/9419475	SP.15/C	Washer	2	—	C	
	AGS.605/4	CLIP	16	—	—	SG9/30
	AGS.1661/M	CLIP, bonding	11	—	—	SG9/31
	EEAS.164/40/45	HOSE, rubber, 2 1/4" i/d. x 3" o/d. x 4 1/2" long	4	DTD.625	LM	SG9/21
	AS.3380/C/7/C	LEAD, bonding	4	—	—	SG9/32
	E.G4.57.7	MAST, OUTLET, INSTALLATION	—	—	—	
		Spares for:-				
34533	E.G4.57.5	OUTLET, mast	1	—	C	SG9/33
		Attaching parts for E.G4.57.5:-				
25541	E.B7.57.303	Gasket	1	—	C	SG9/34
1468	EEAS.1/2C	Screw, 2BA	6	—	C	SG9/35
25542	E.B7.57.305	PIPE, vent, from hose couplings, between frames 30 and 33	1	L.56	C	SG9/36
25543	E.B7.57.307	PIPE, vent, from hose couplings, between frames 32 and 36	1	L.56 or L.54	C	SG9/37
25544	E.B7.57.309	PIPE, vent, from hose coupling between frames 35 and 38	1	L.56	C	SG9/38
25545	E.B7.57.311	PIPE, vent, from hose coupling between frames 37 and 41	1	L.56	C	SG9/39

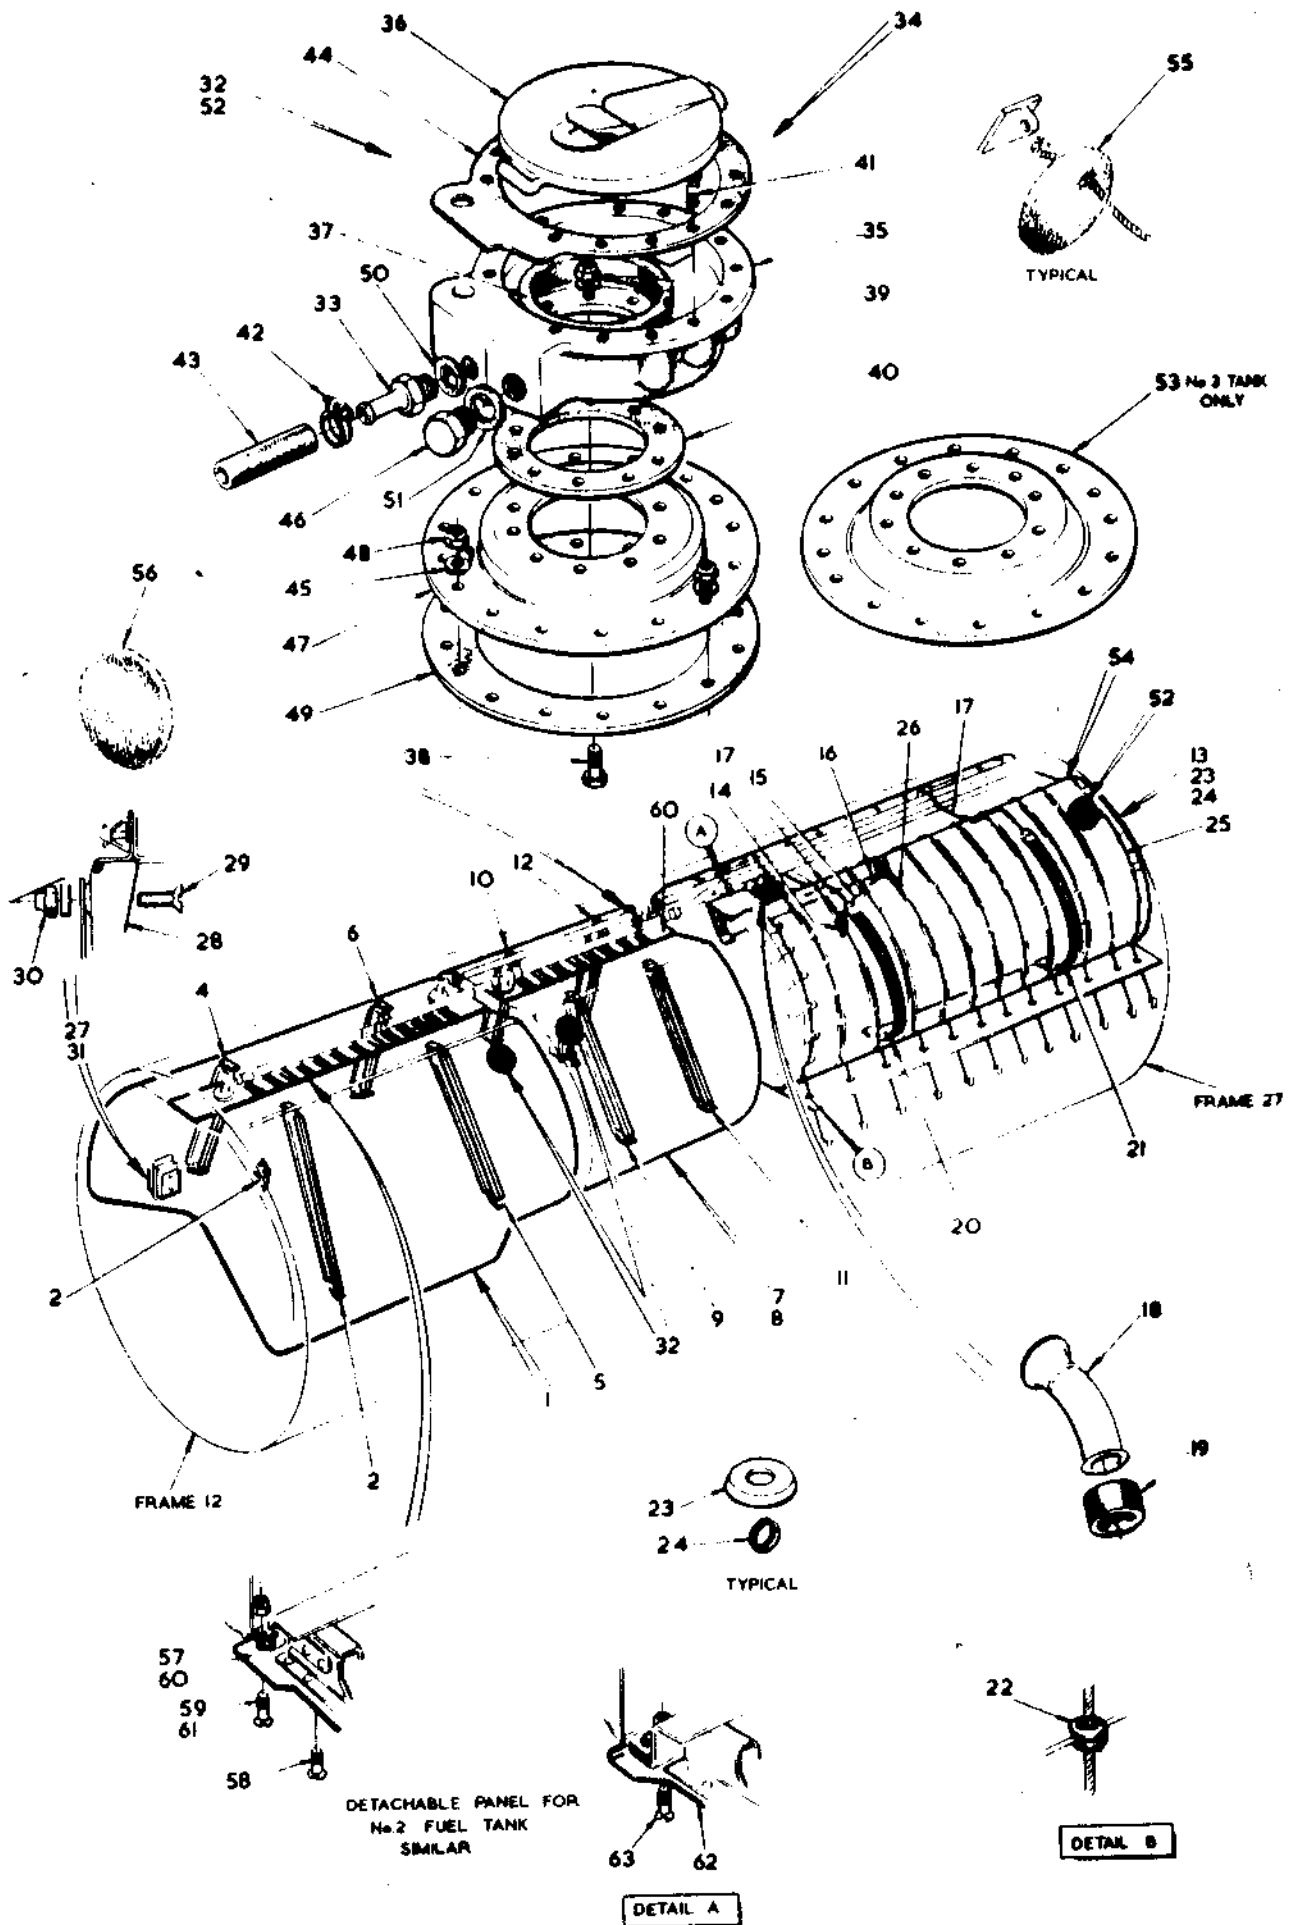


FIG.1 FUEL SYSTEM

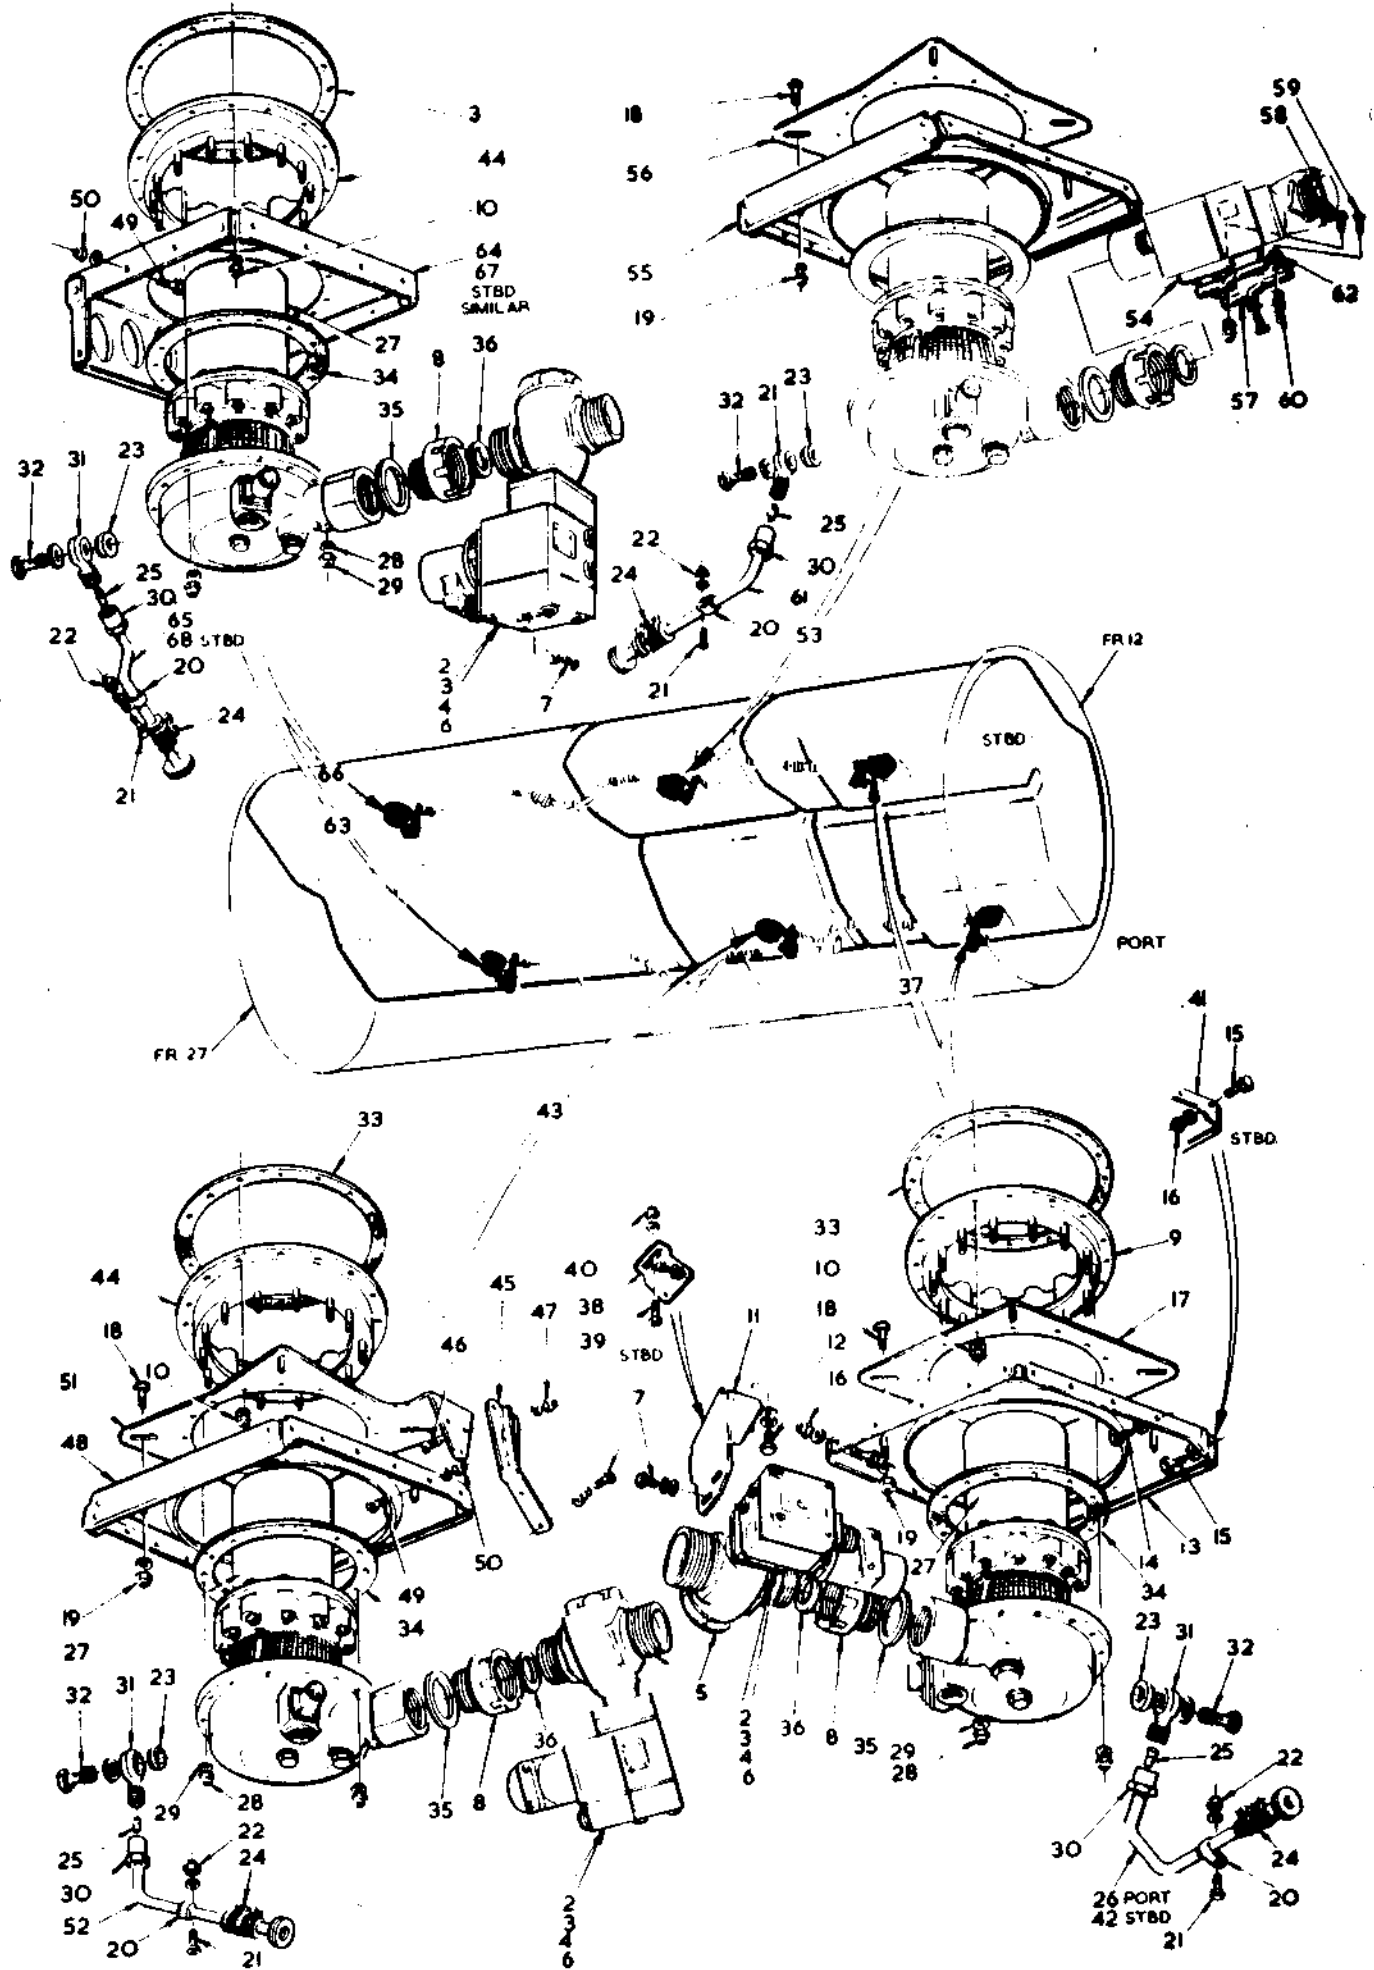


FIG. 2 FUEL SYSTEM

CODE ABC

SECT 5G

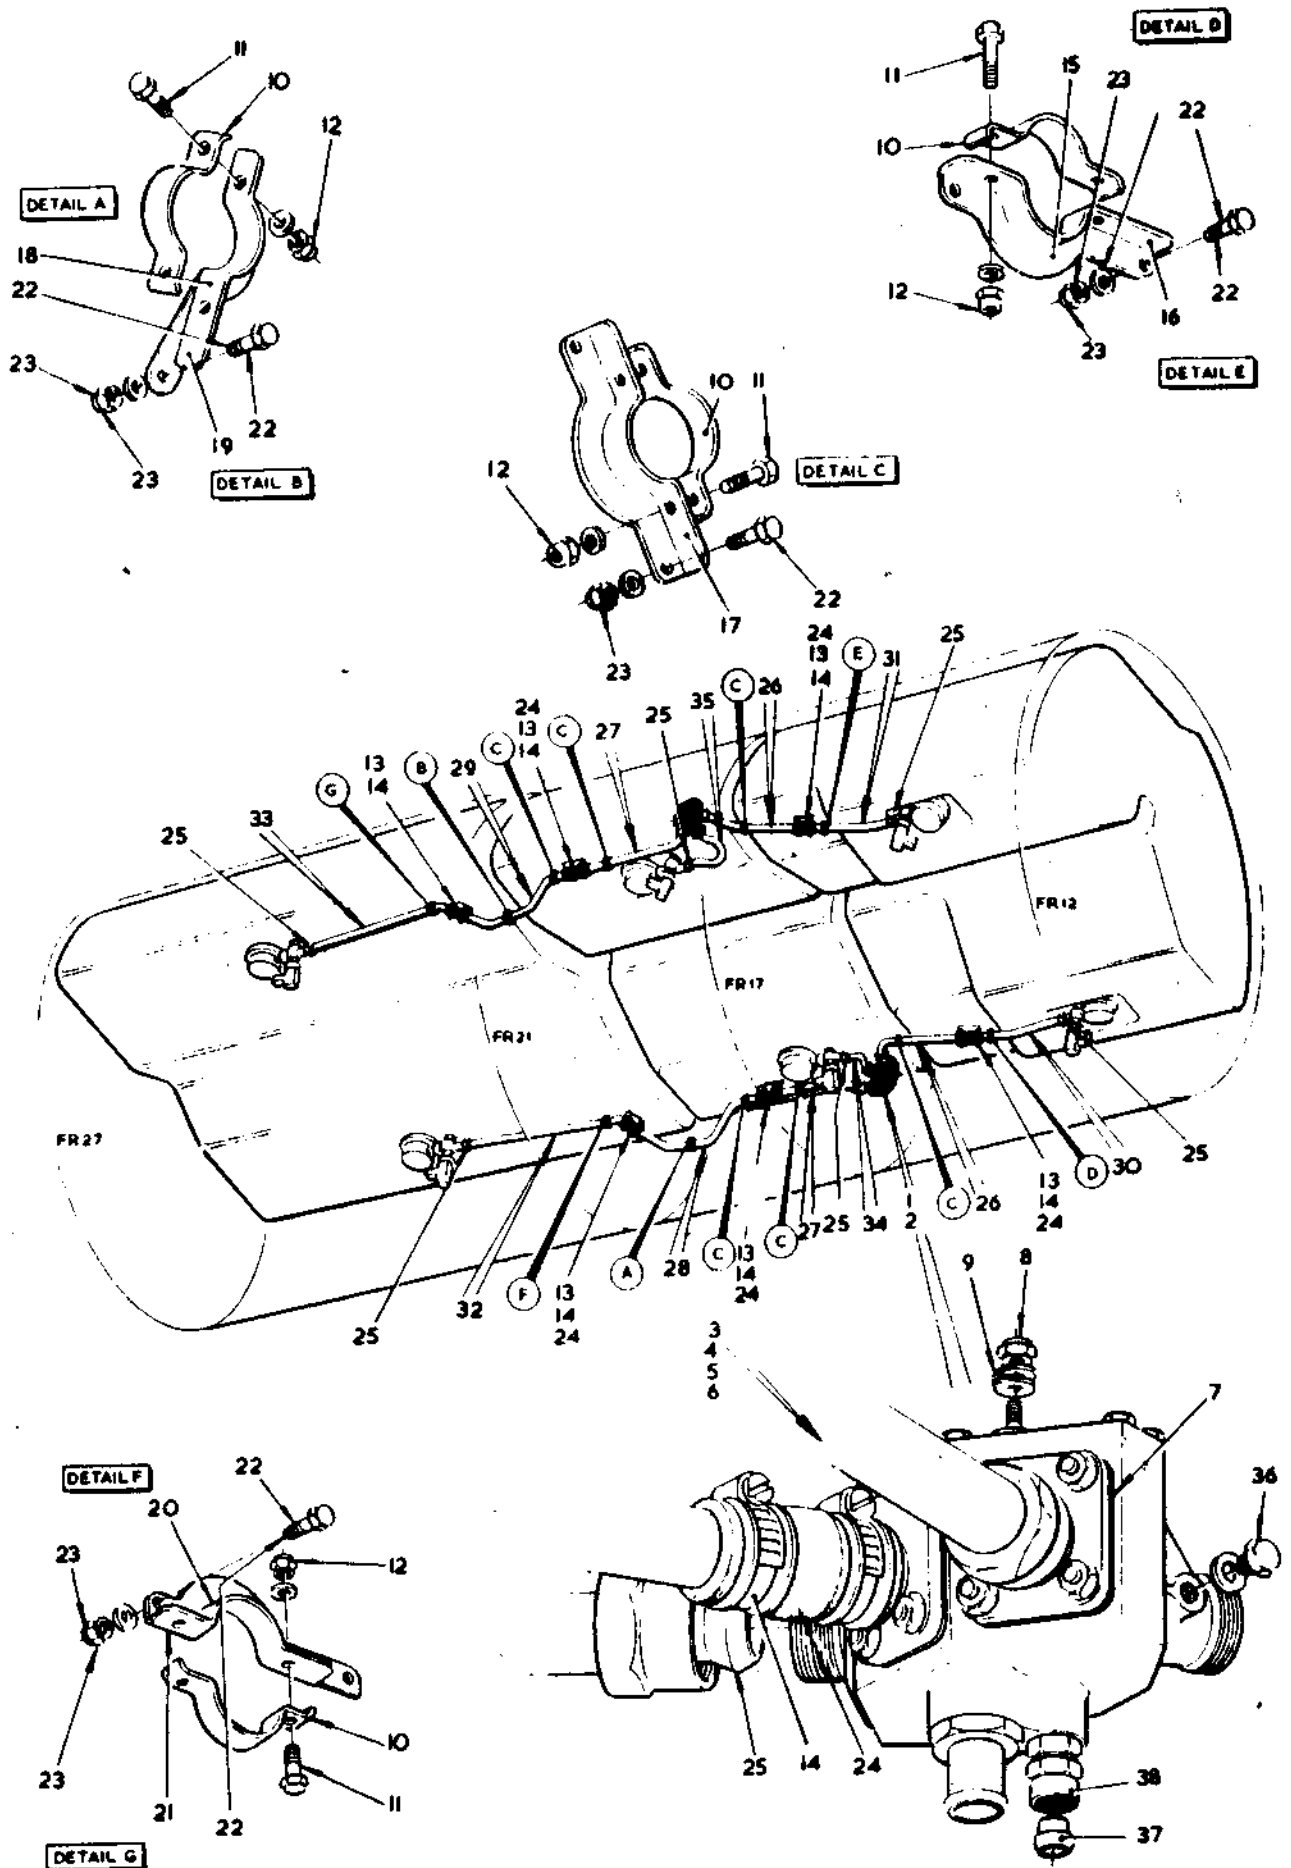


FIG. 3 FUEL SYSTEM

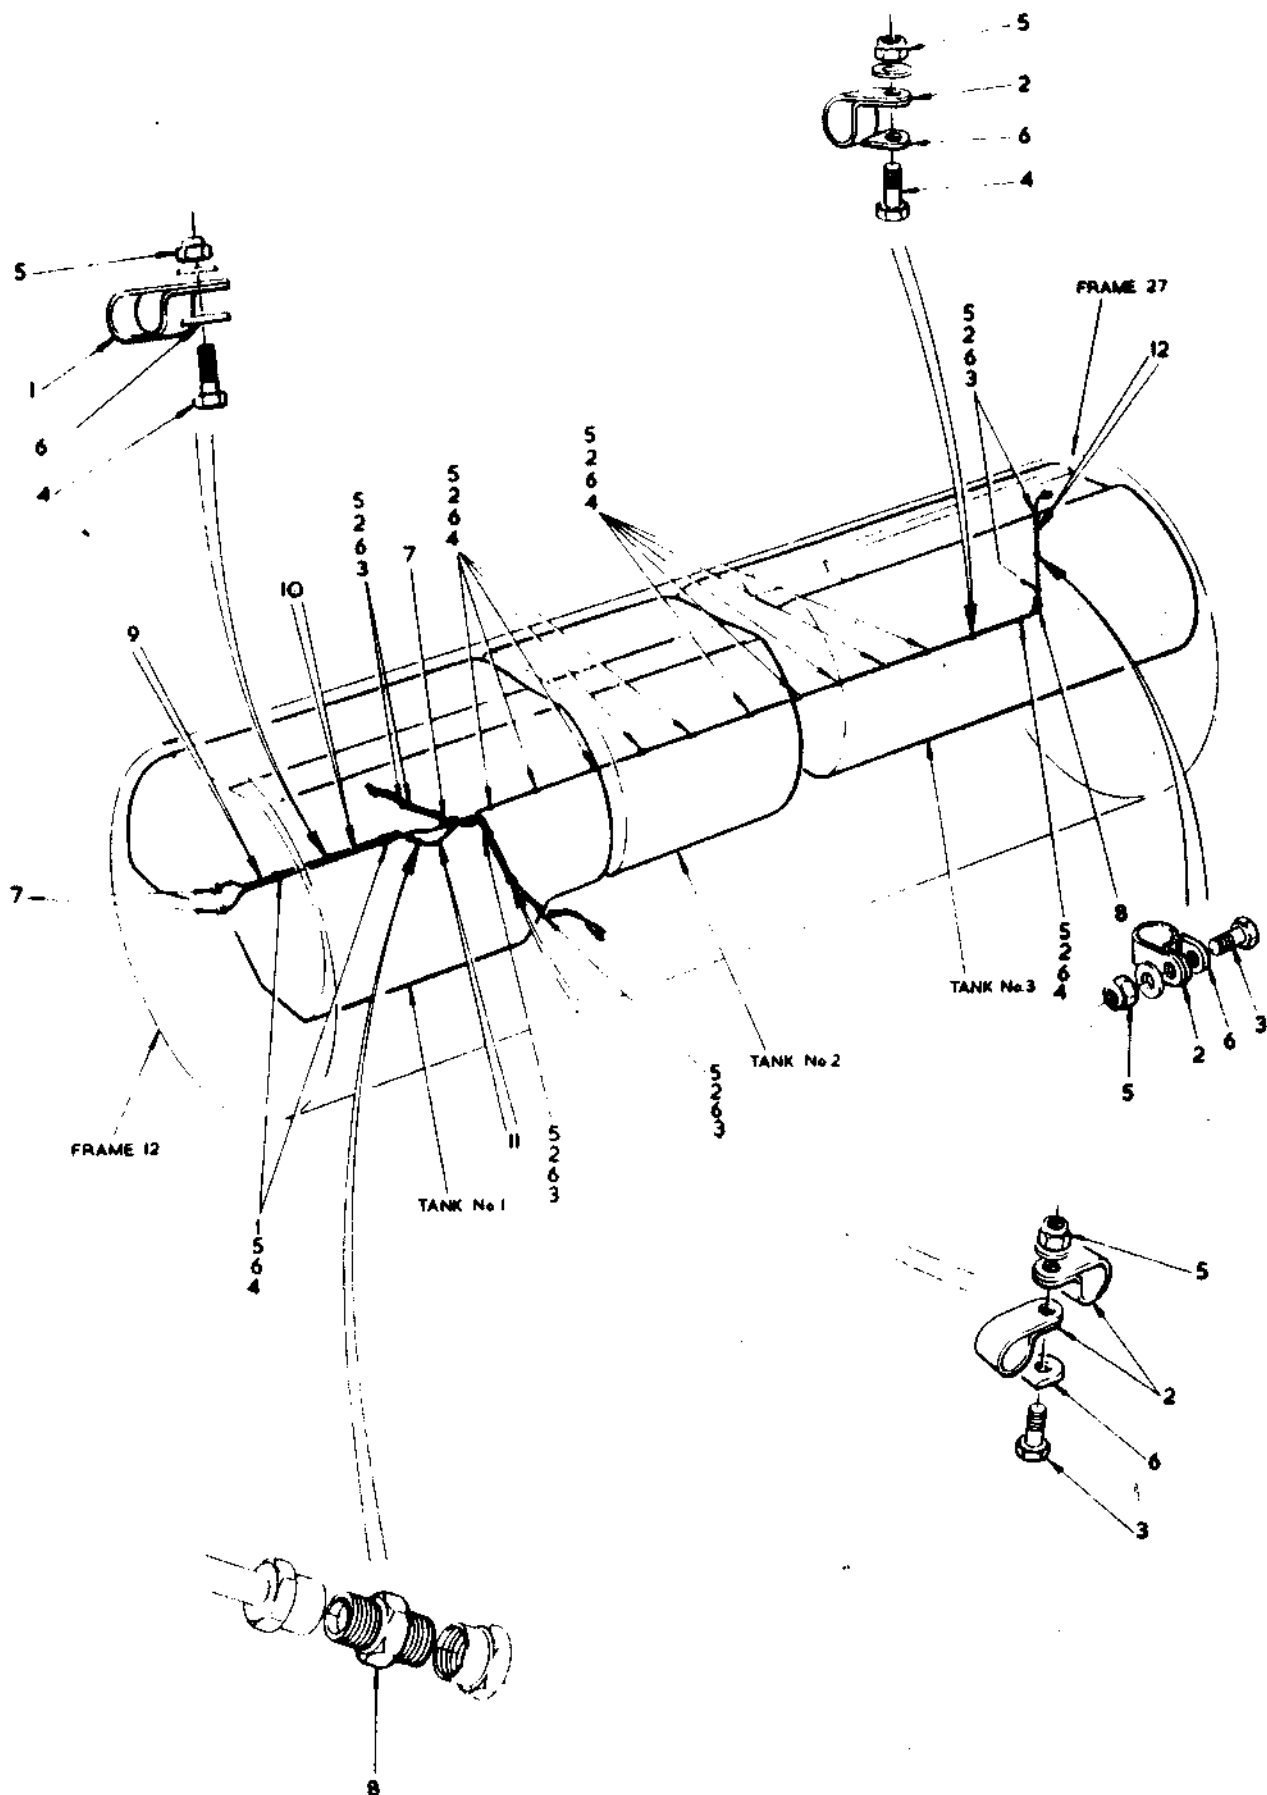


FIG.4 FUEL SYSTEM

CODE A,B,C

SECT 5G

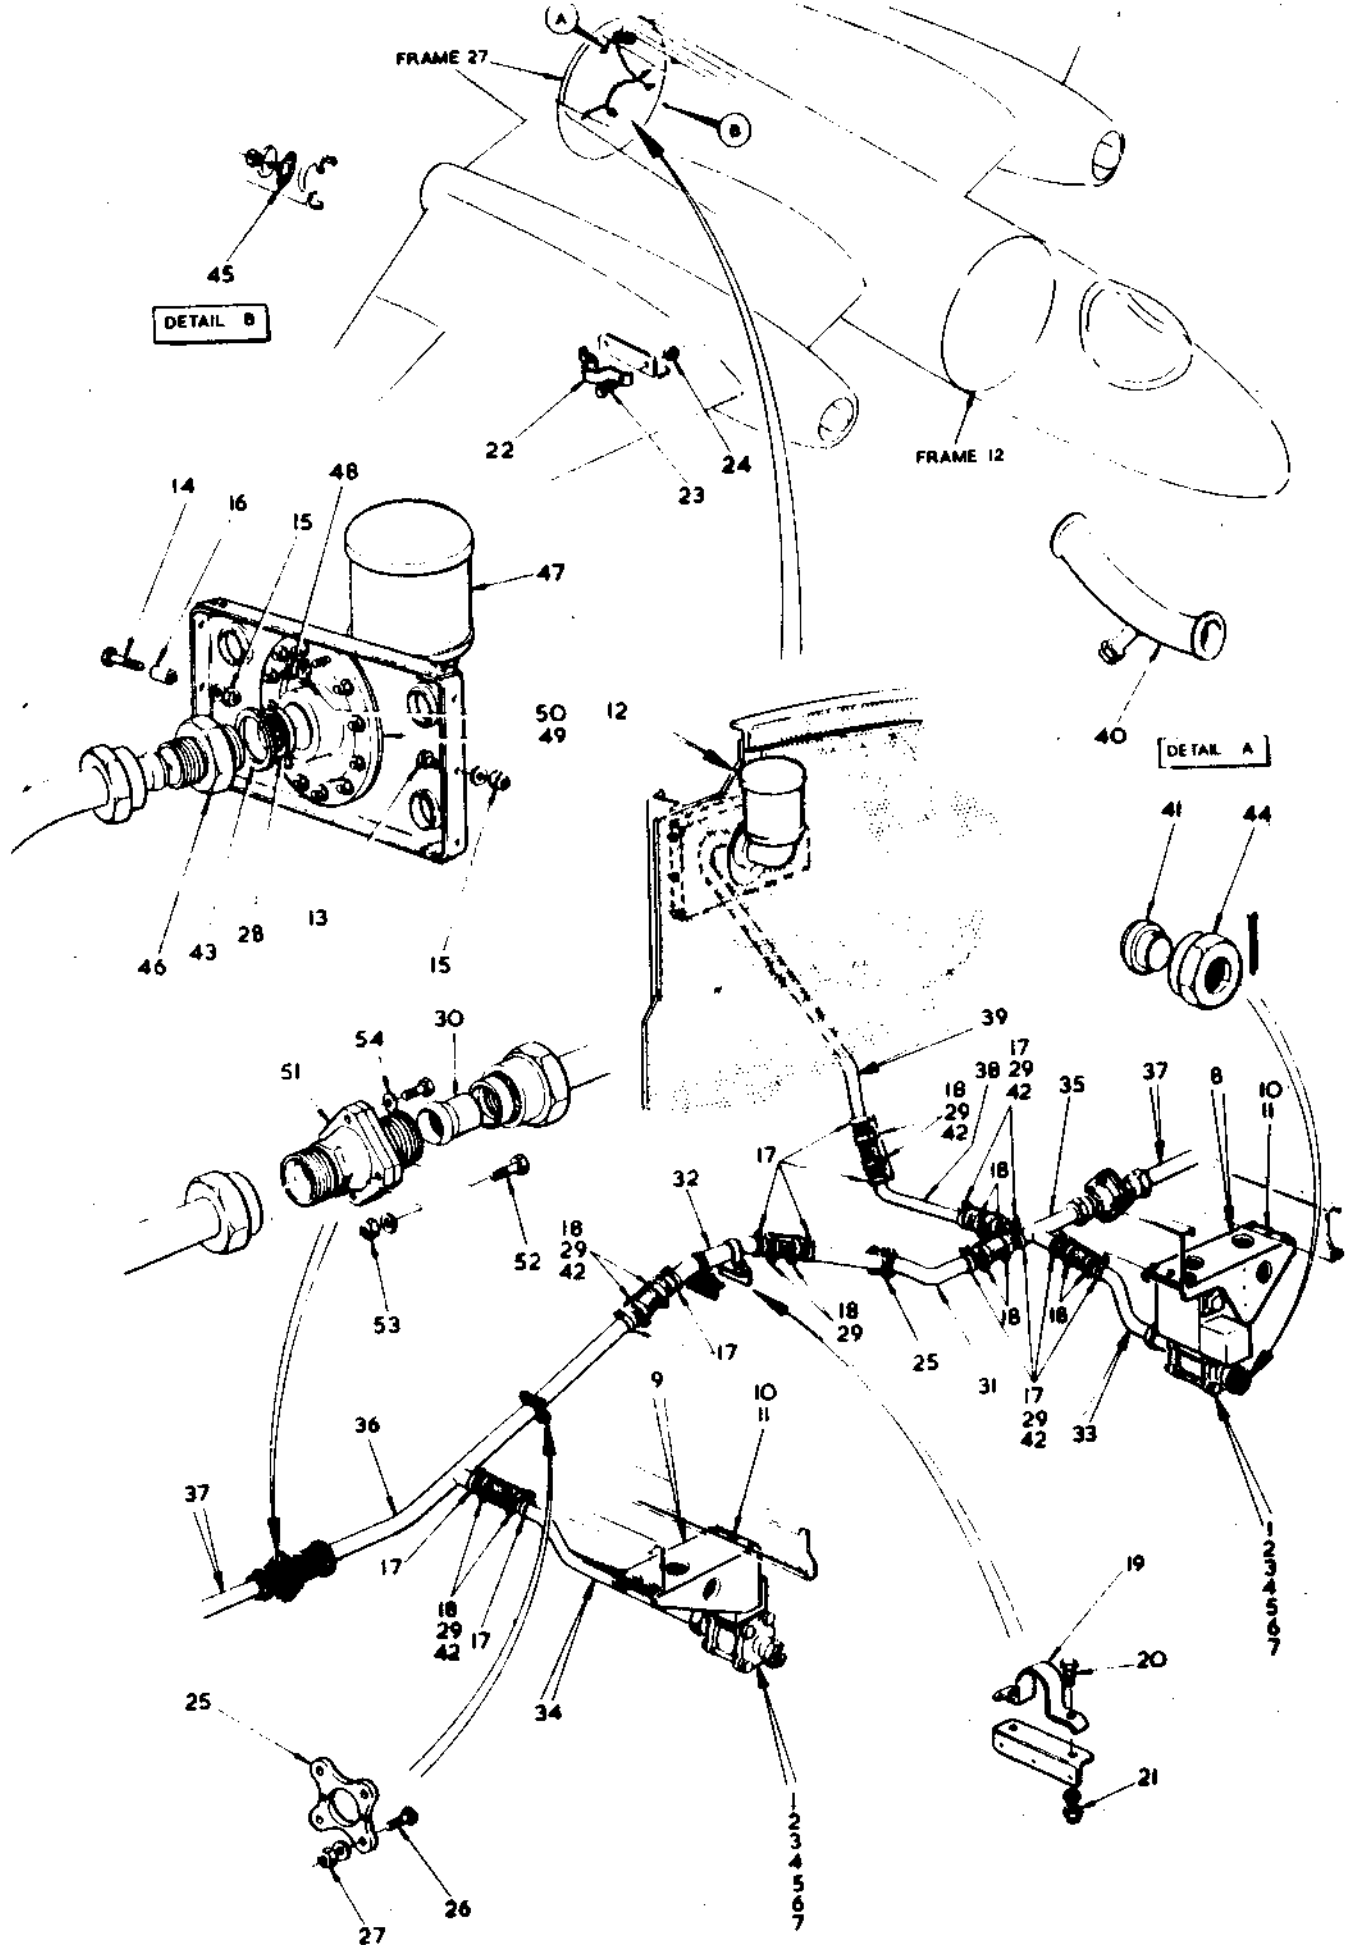


FIG. 5 FUEL SYSTEM

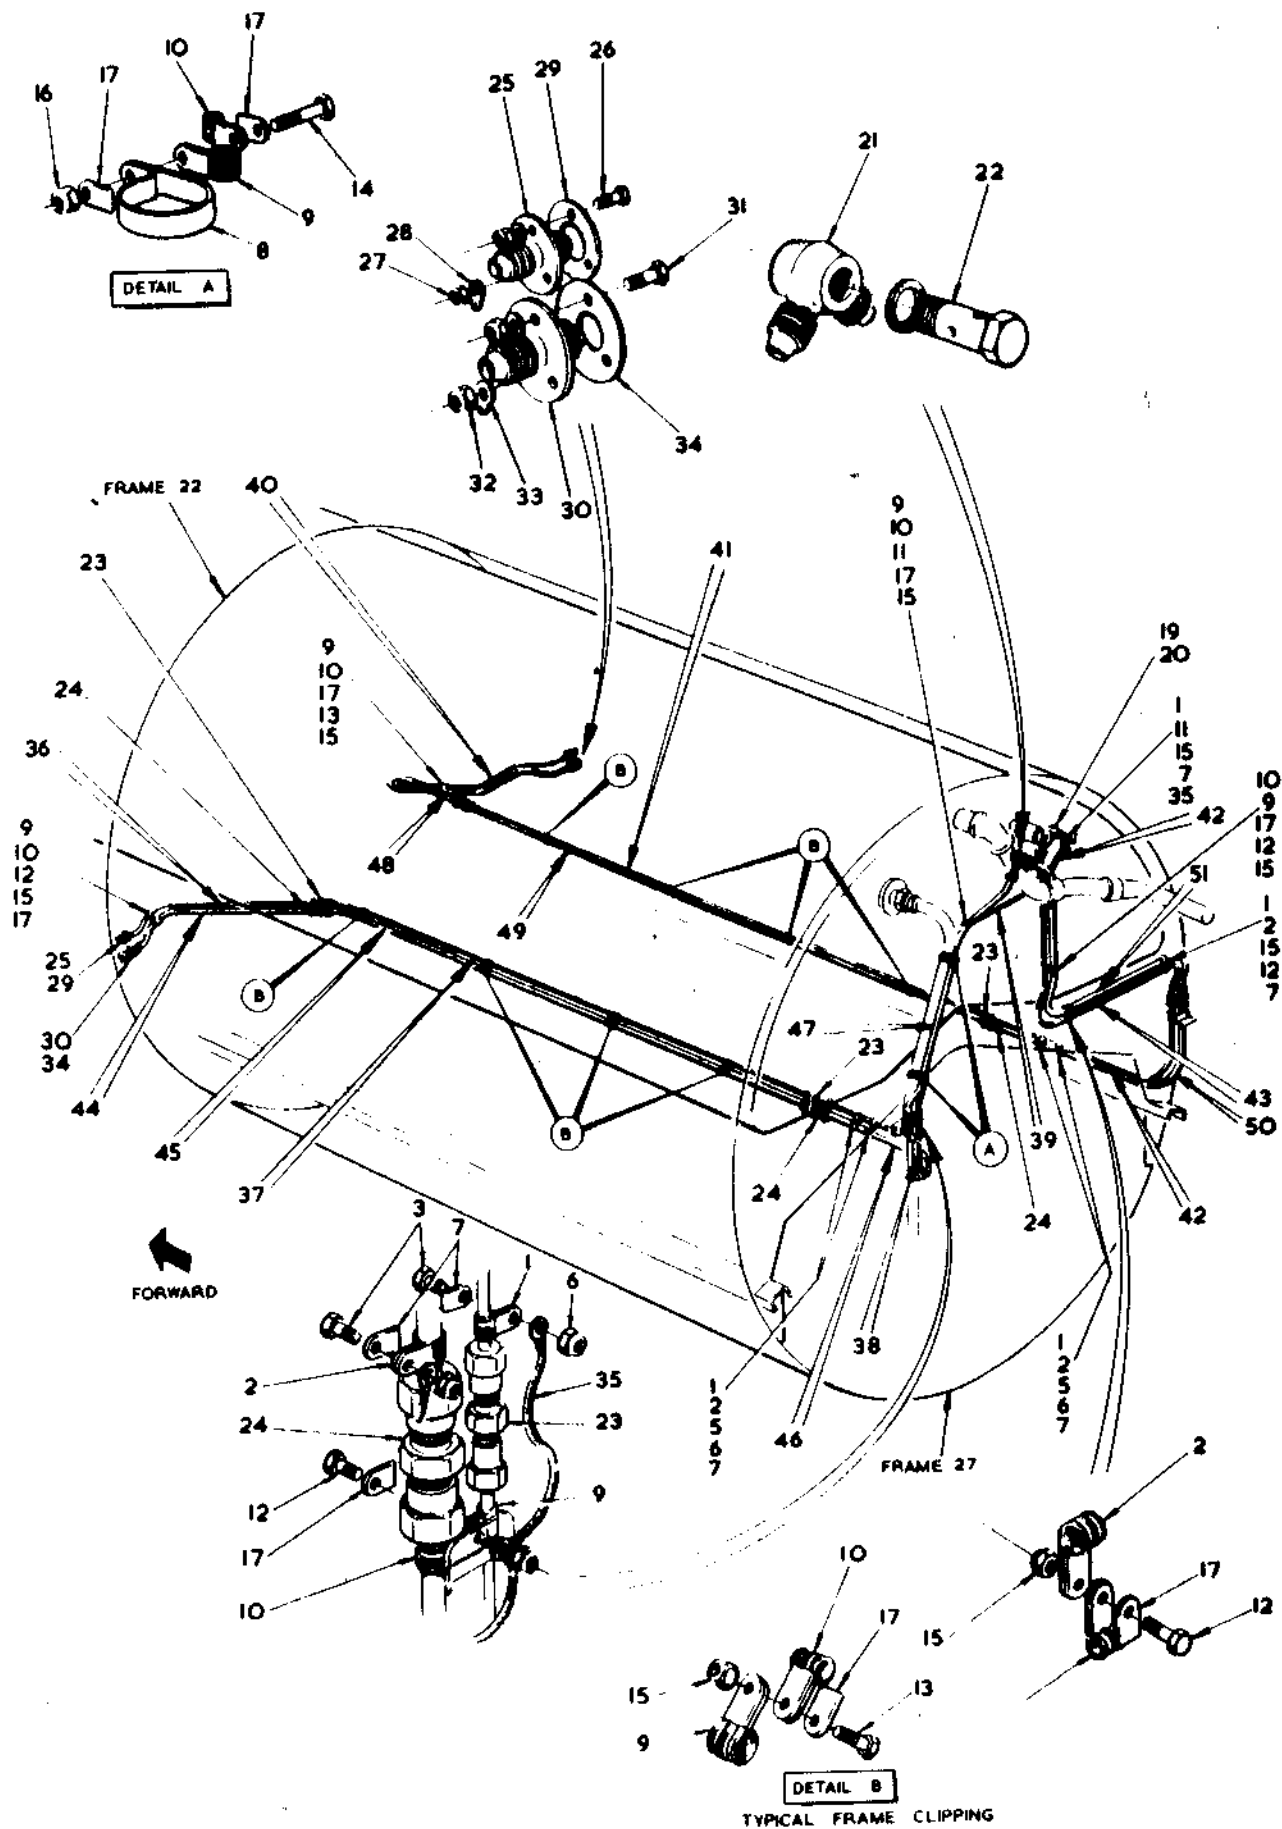


FIG. 6 FUEL SYSTEM

CODE ABC

SECT 56

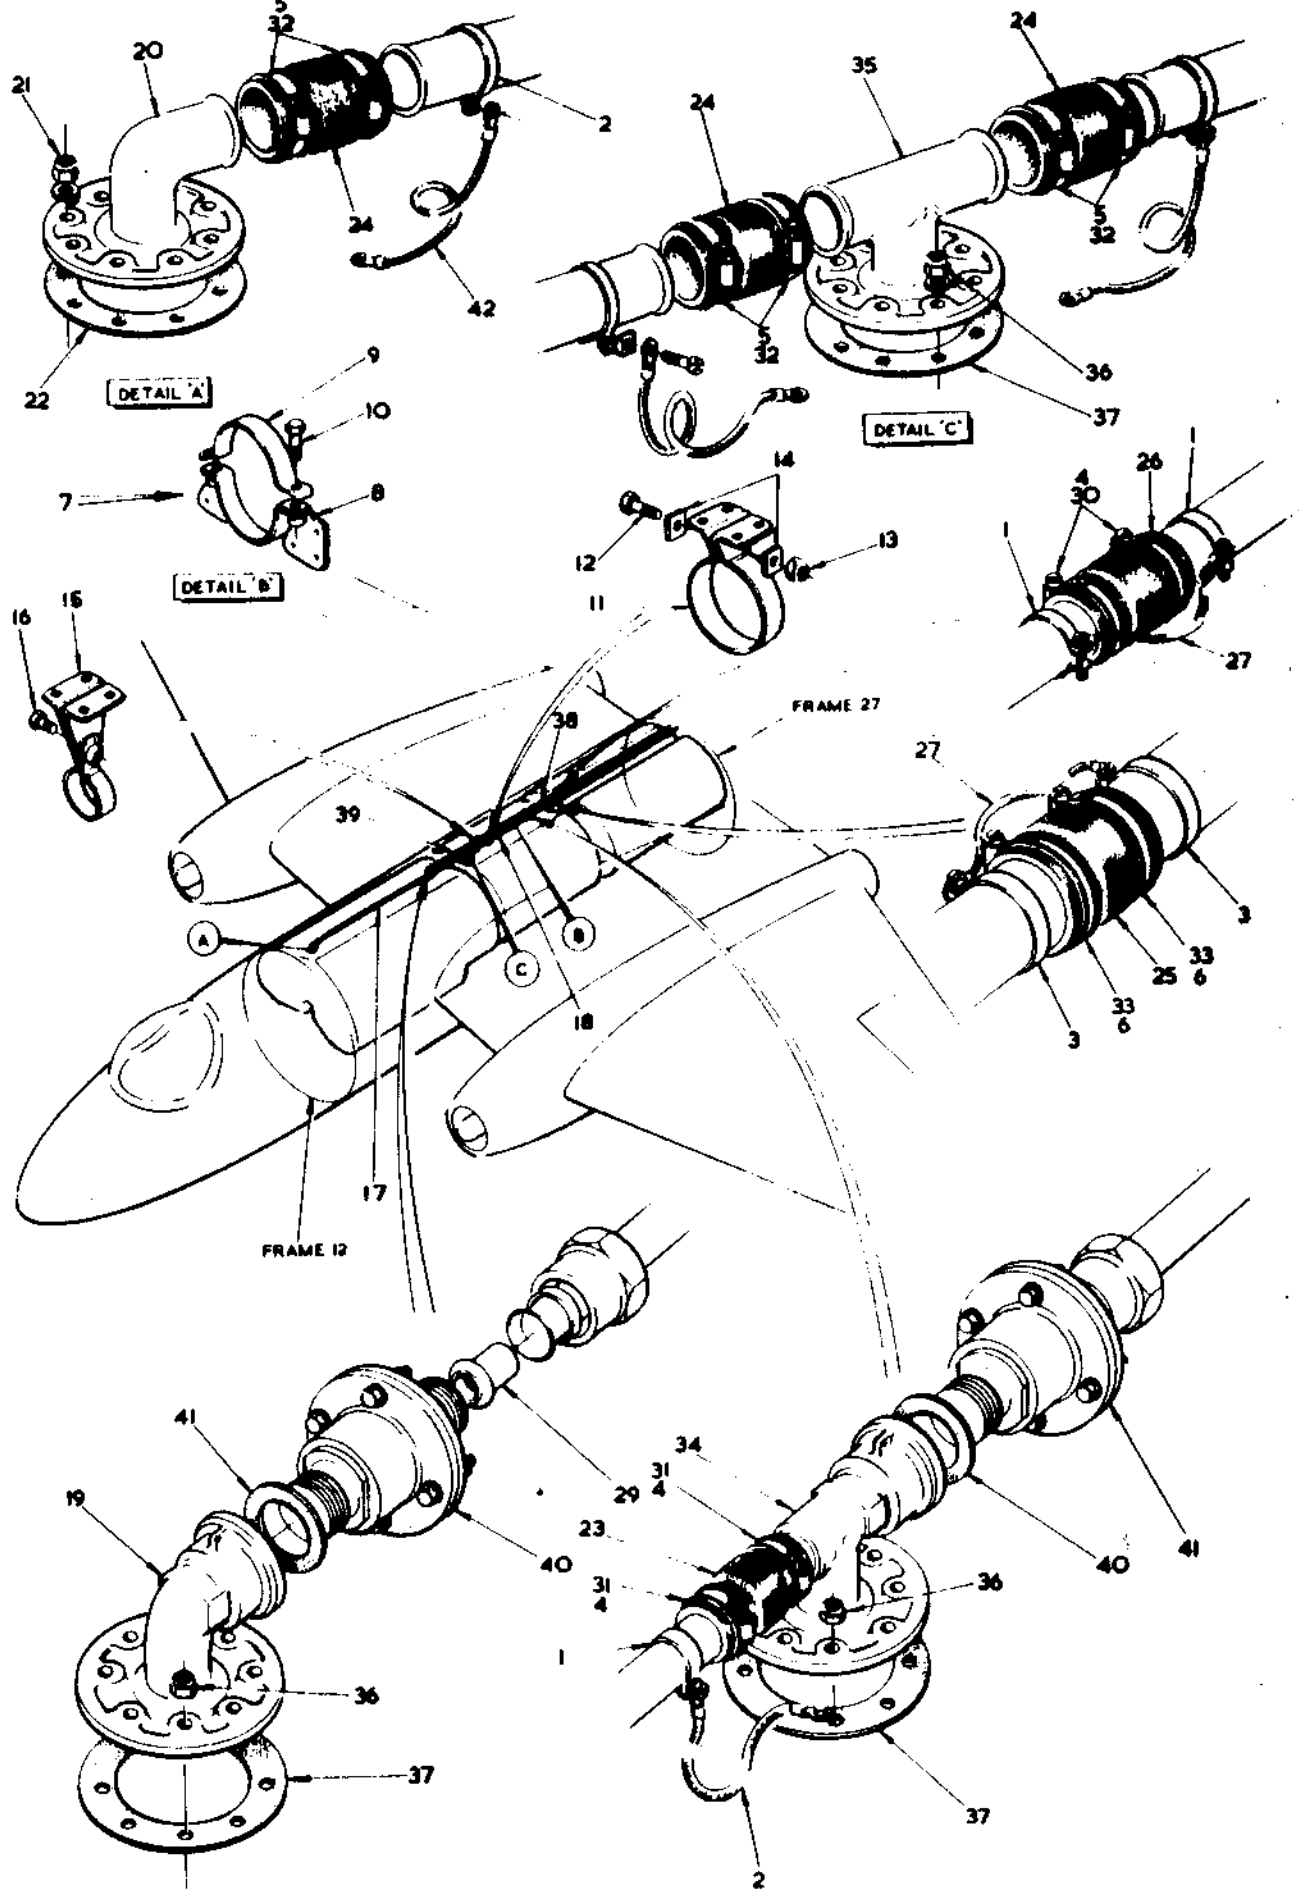


FIG. 7 FUEL SYSTEM

CODE A B C

SECT. 56

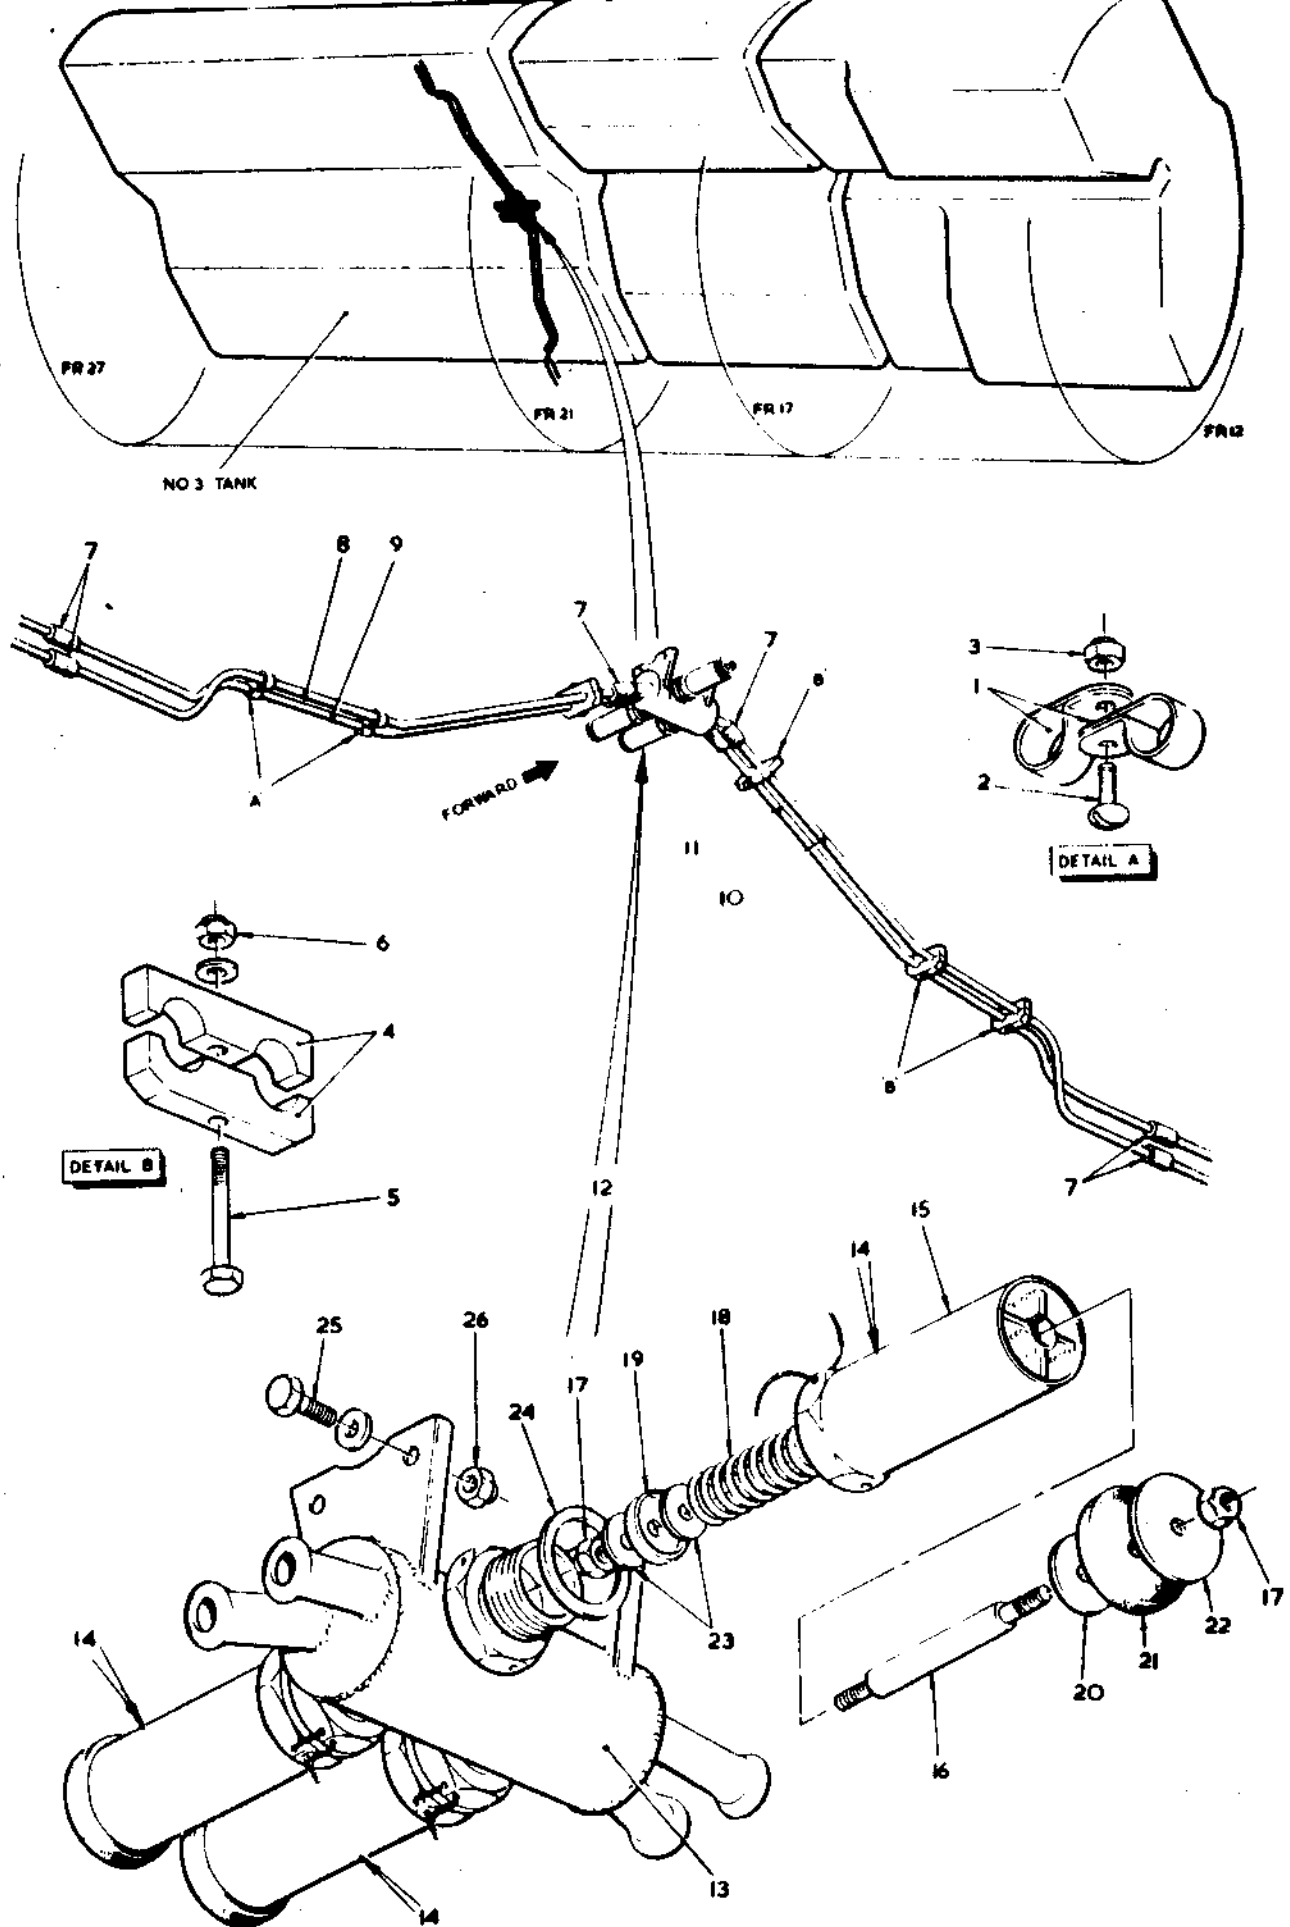


FIG.8 FUEL SYSTEM

CODE ABC

SECT 86

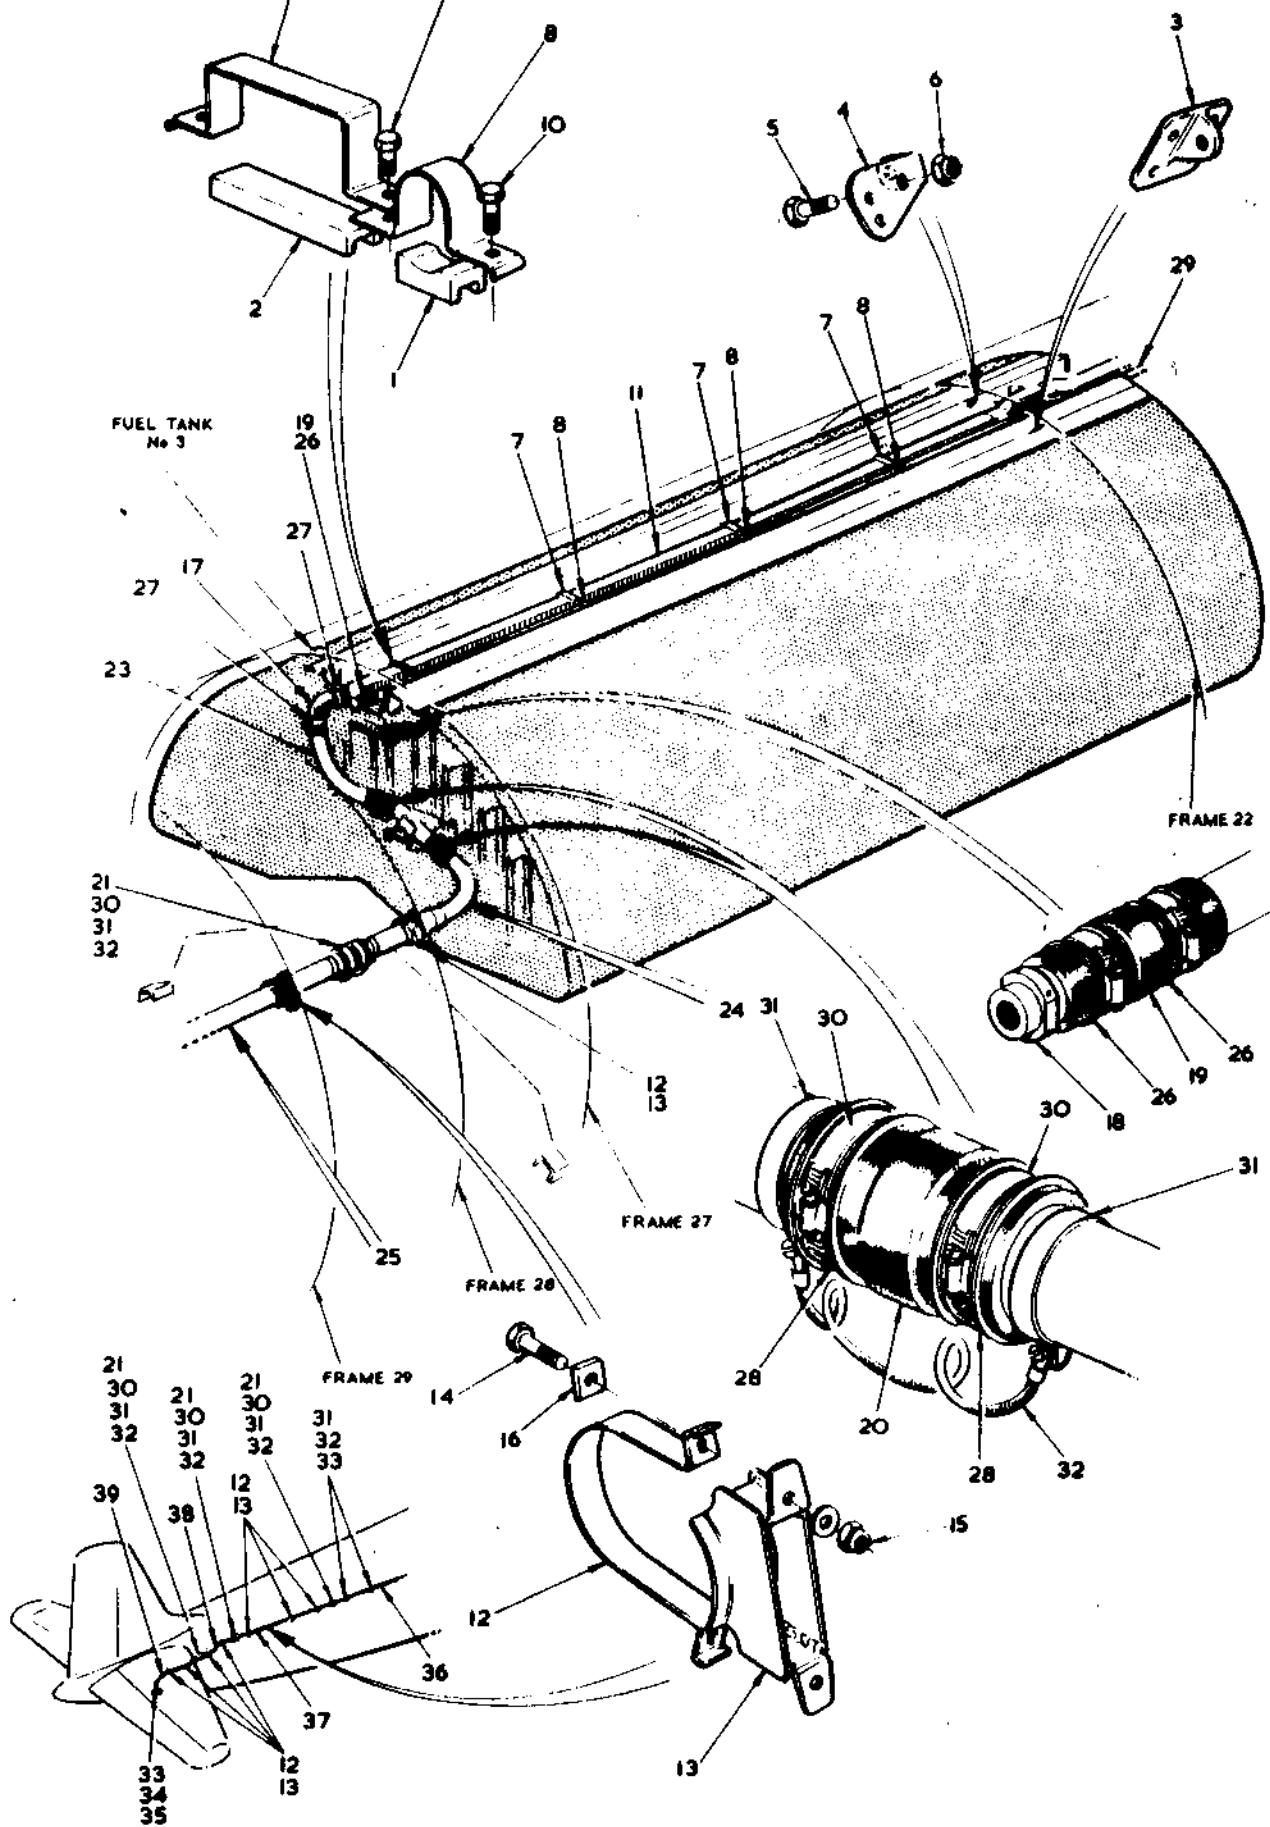


FIG. 9 FUEL SYSTEM

CODE ABC

SECT. 86

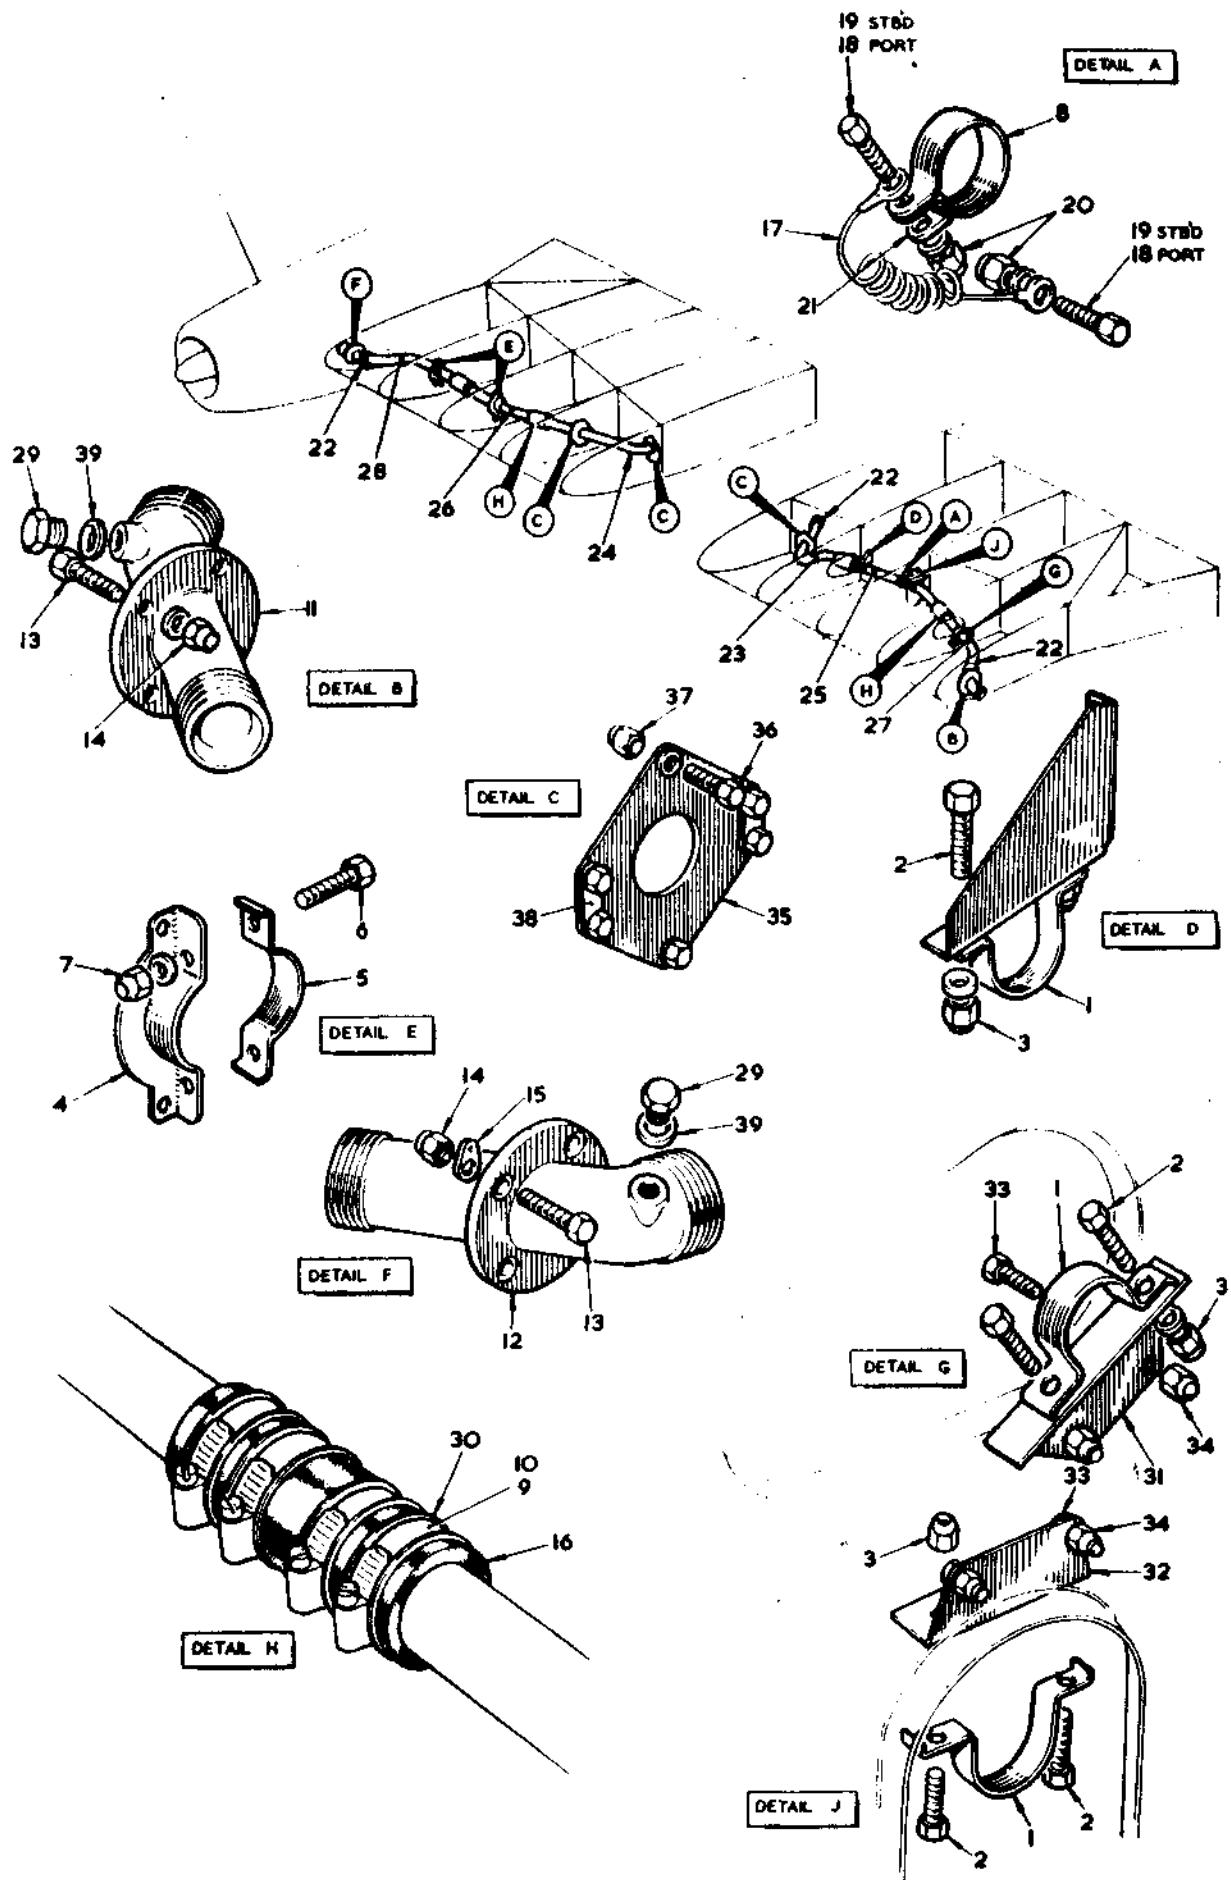


FIG. 10 FUEL SYSTEM

CODE A,B

SECT 5G

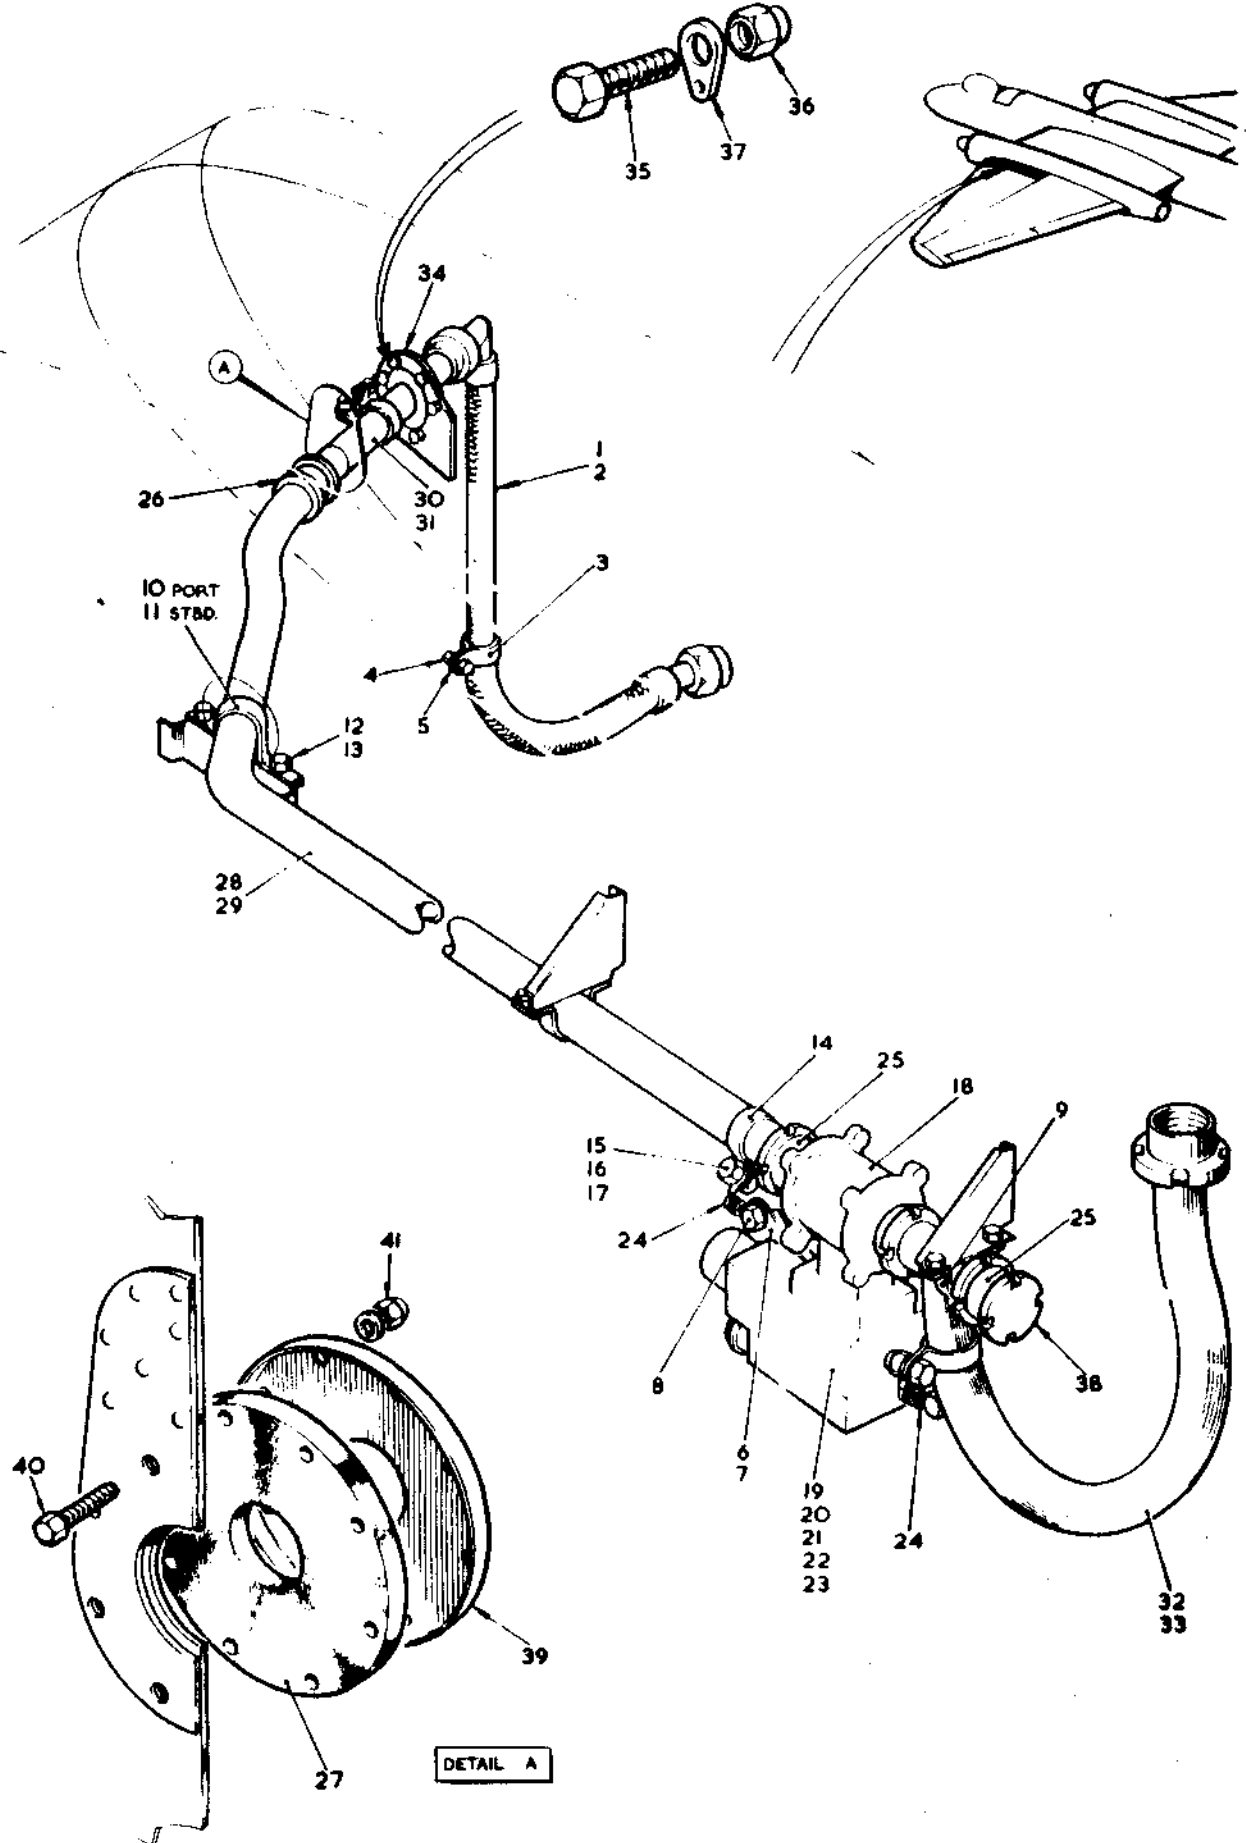


FIG II FUEL SYSTEM

CODE A,B

SECT 5G

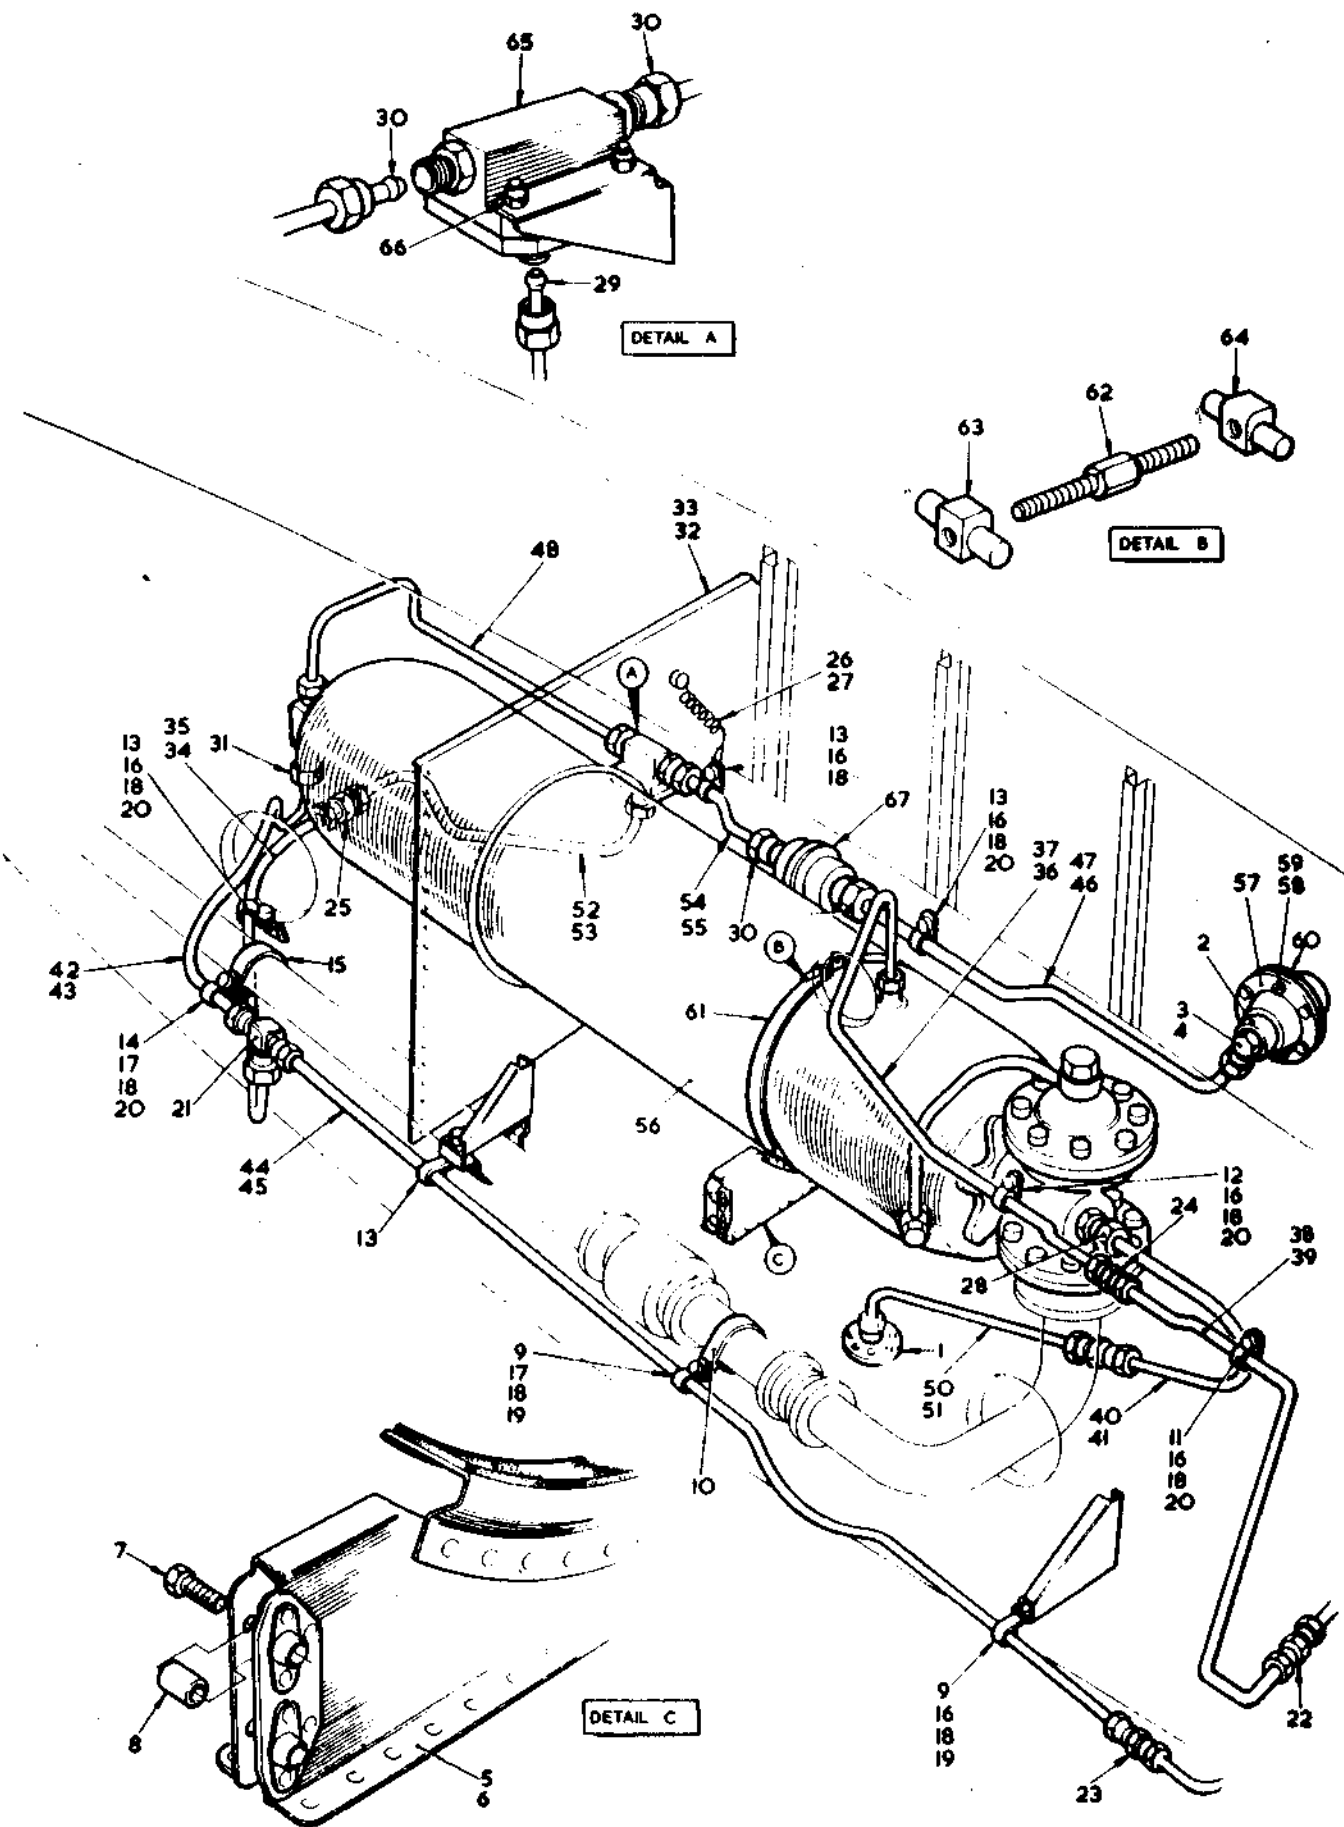


FIG.12 FUEL SYSTEM

CODE A,B

SECT 5G

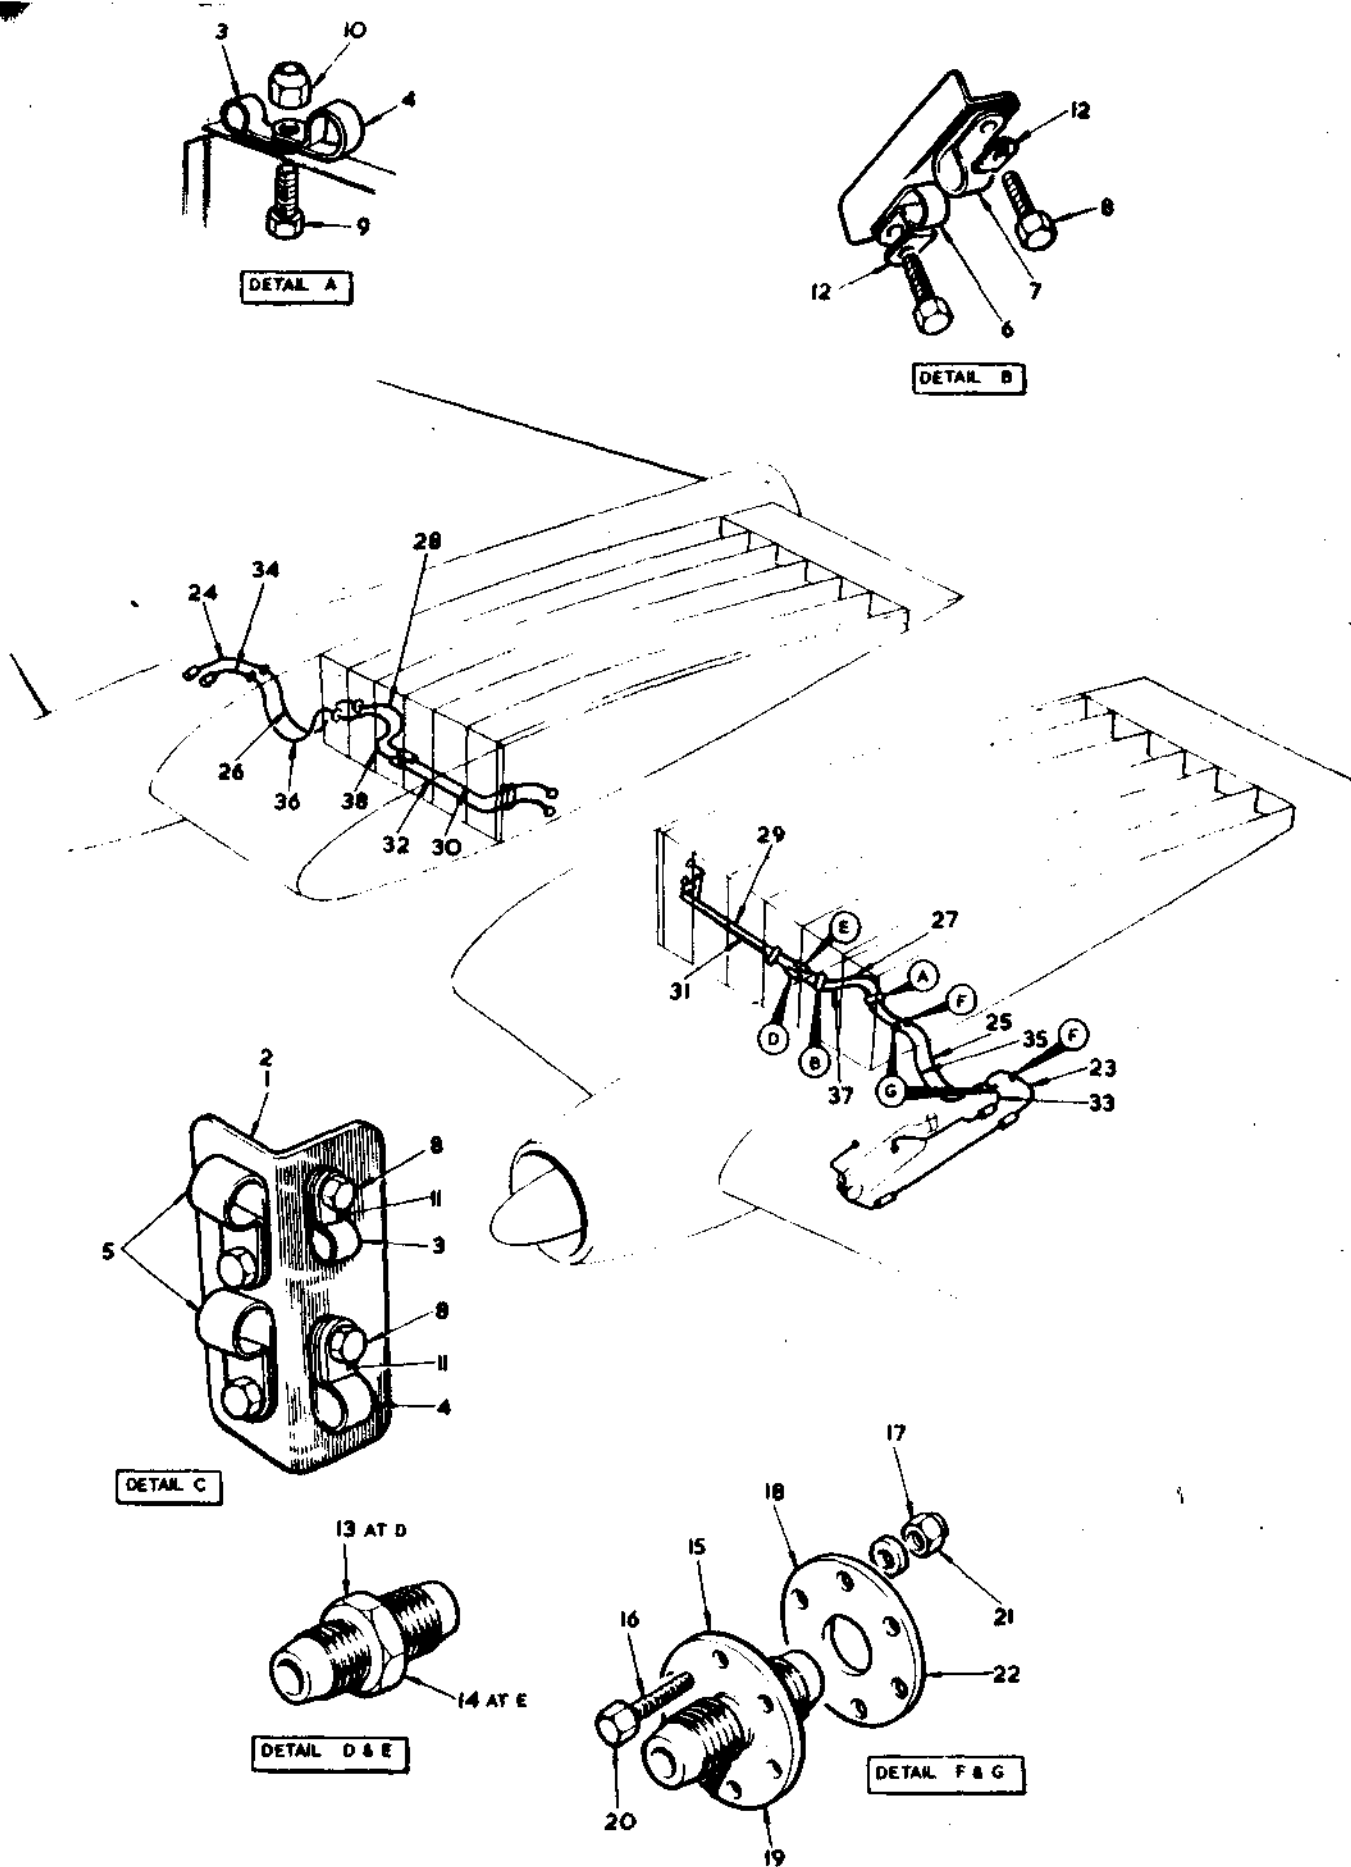


FIG. 13 FUEL SYSTEM

CODE A, B

SECT. 56

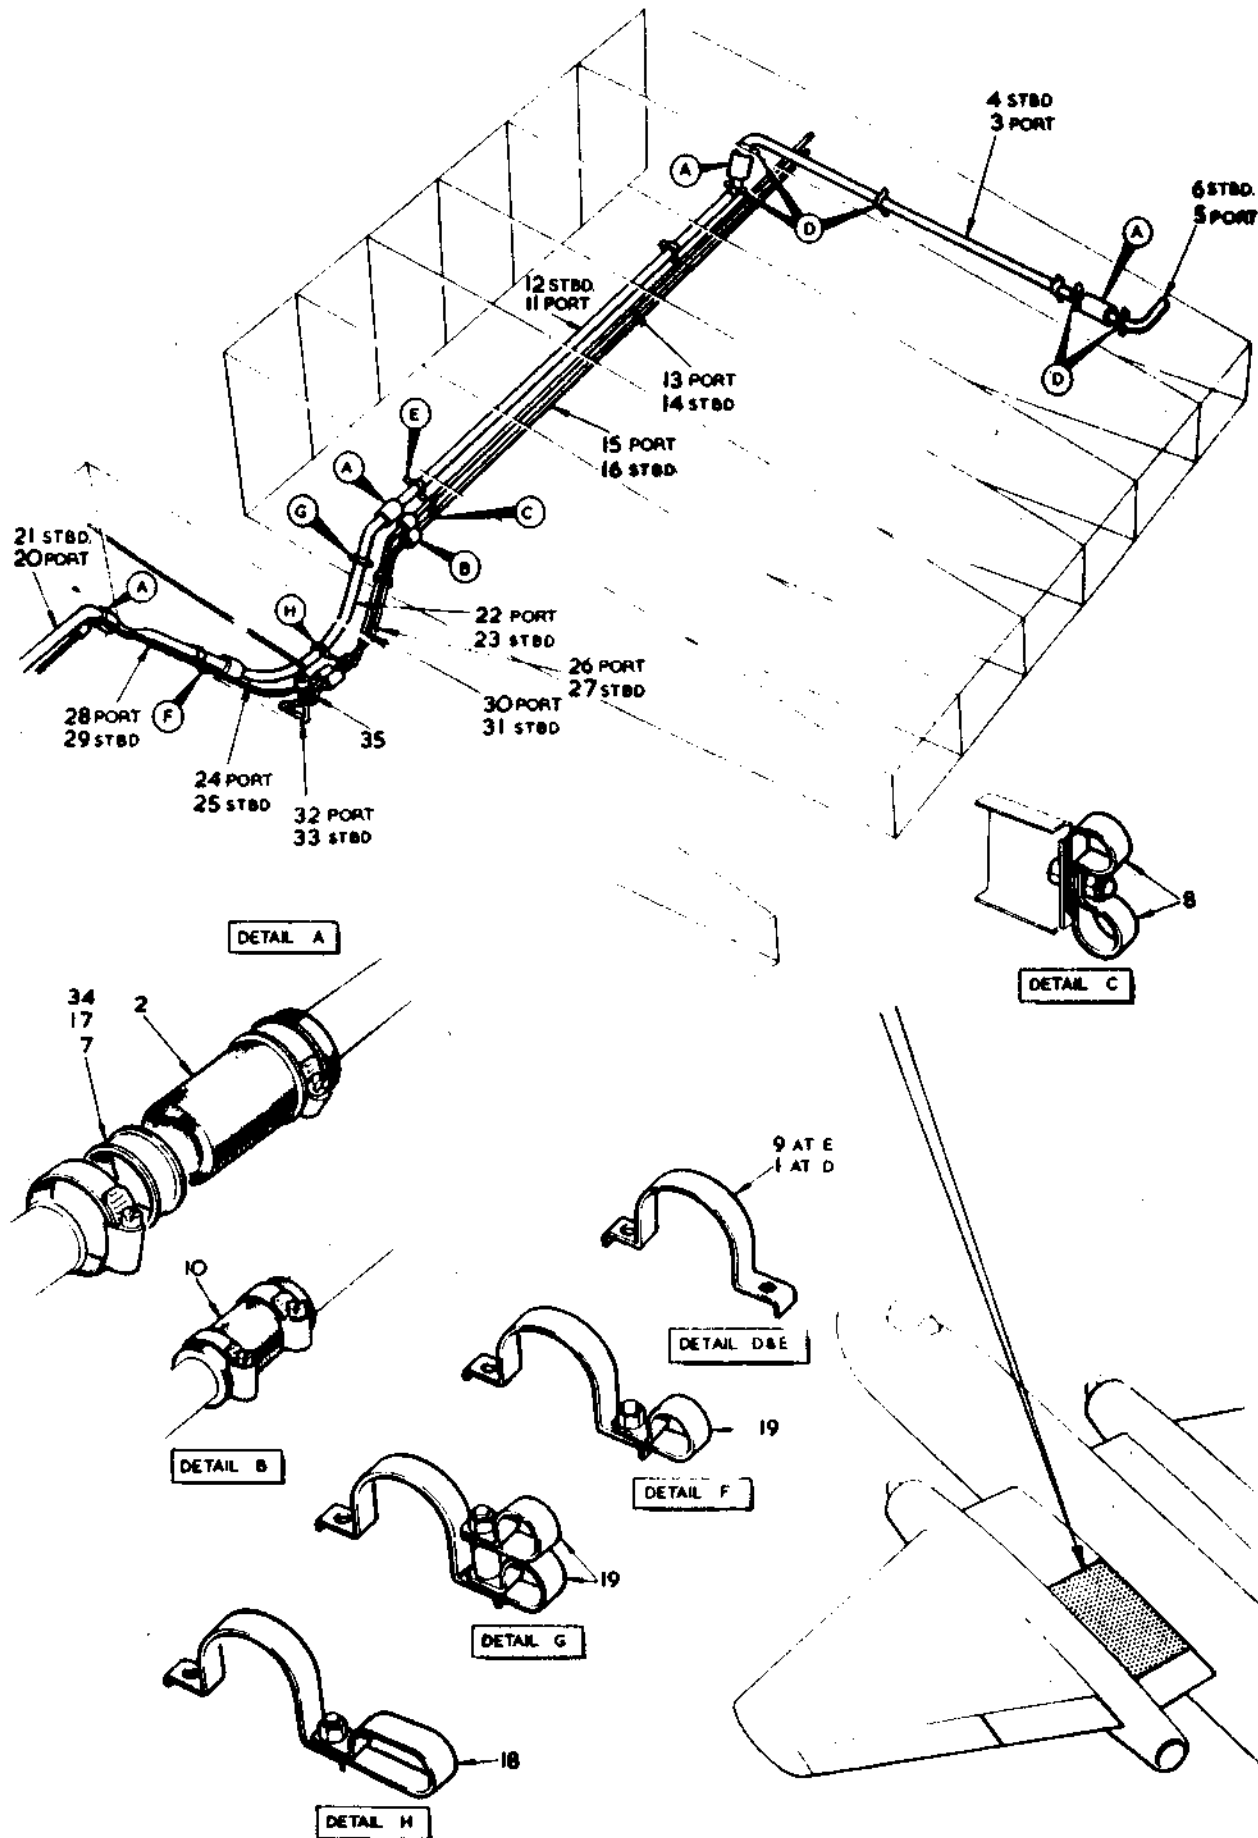


FIG. 14 FUEL SYSTEM

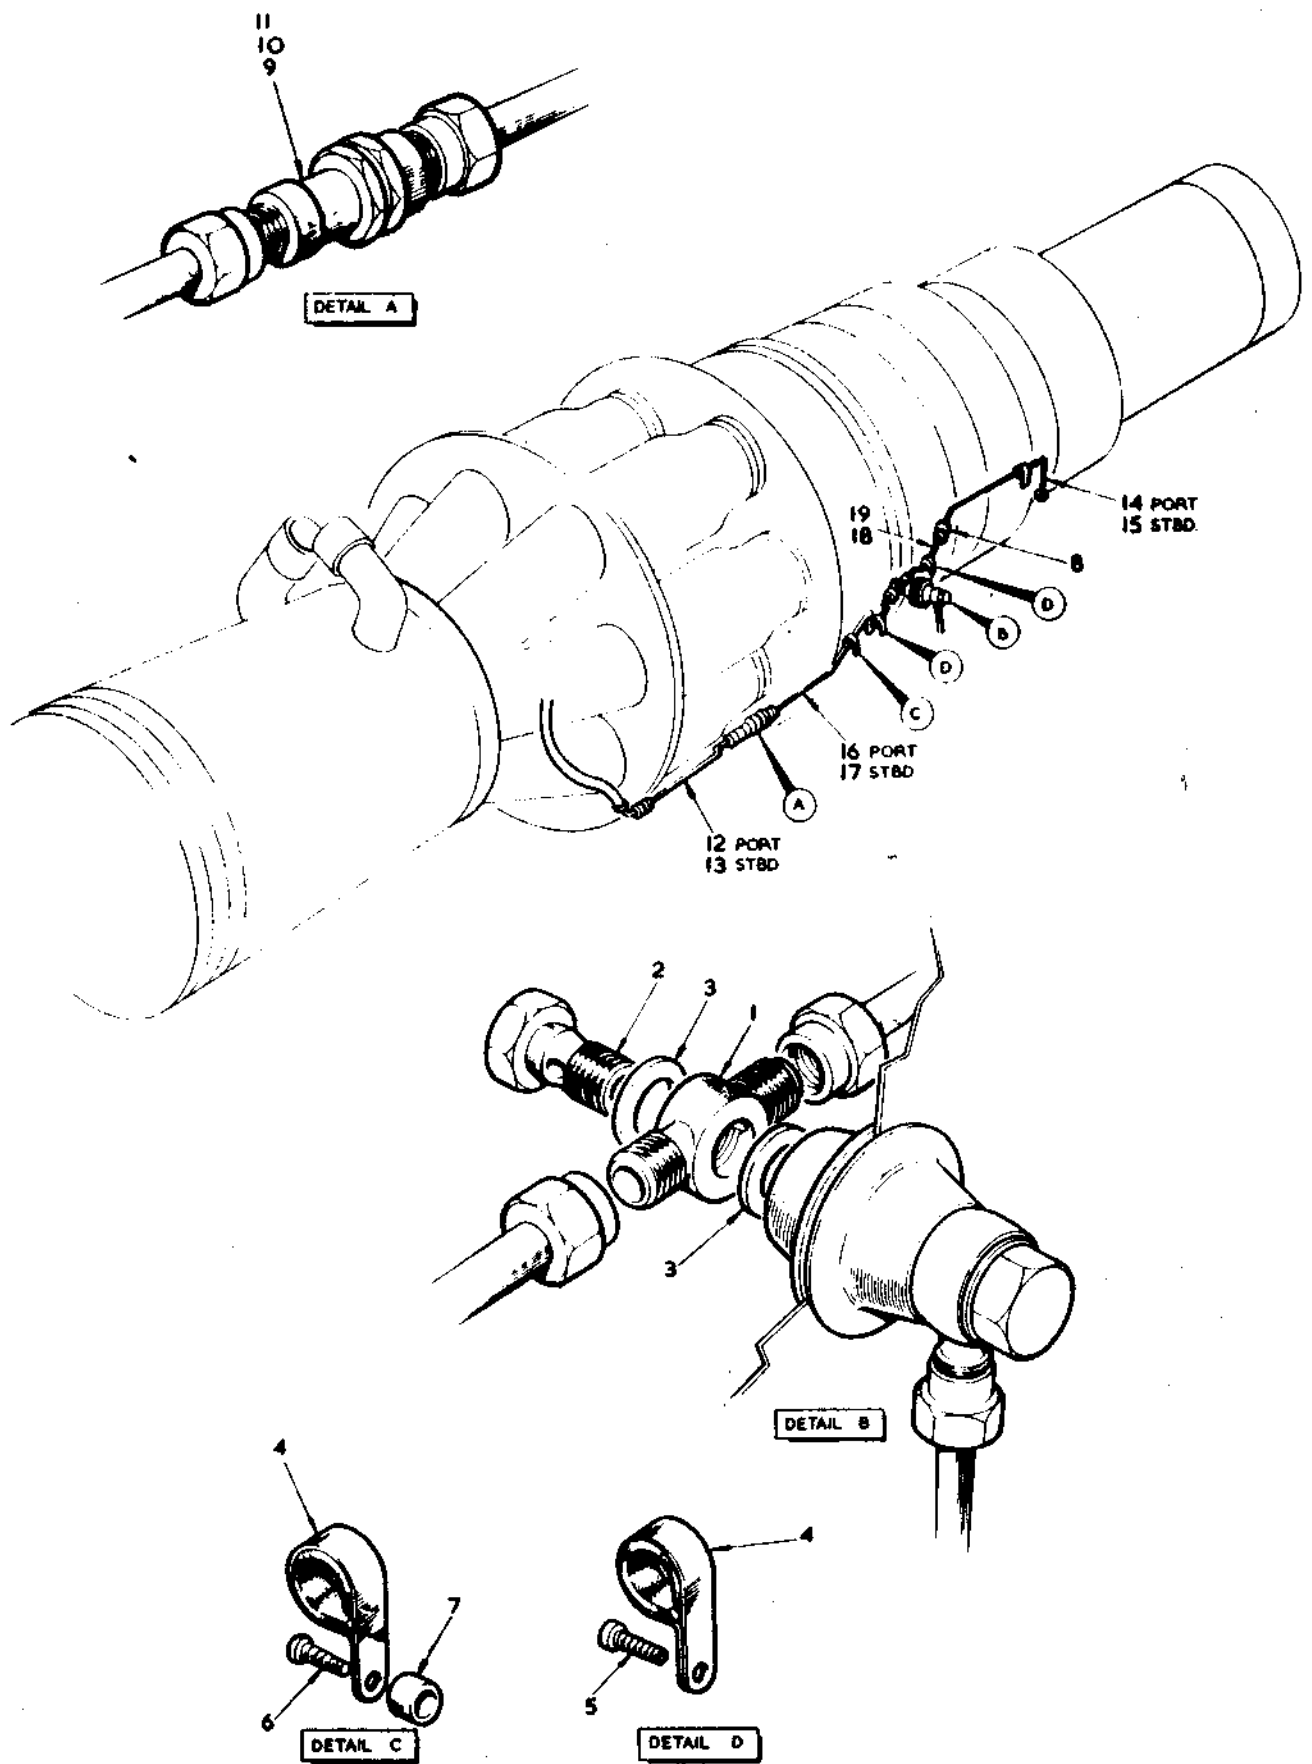


FIG. 15 FUEL SYSTEM

CODE A,B

SECT 5G

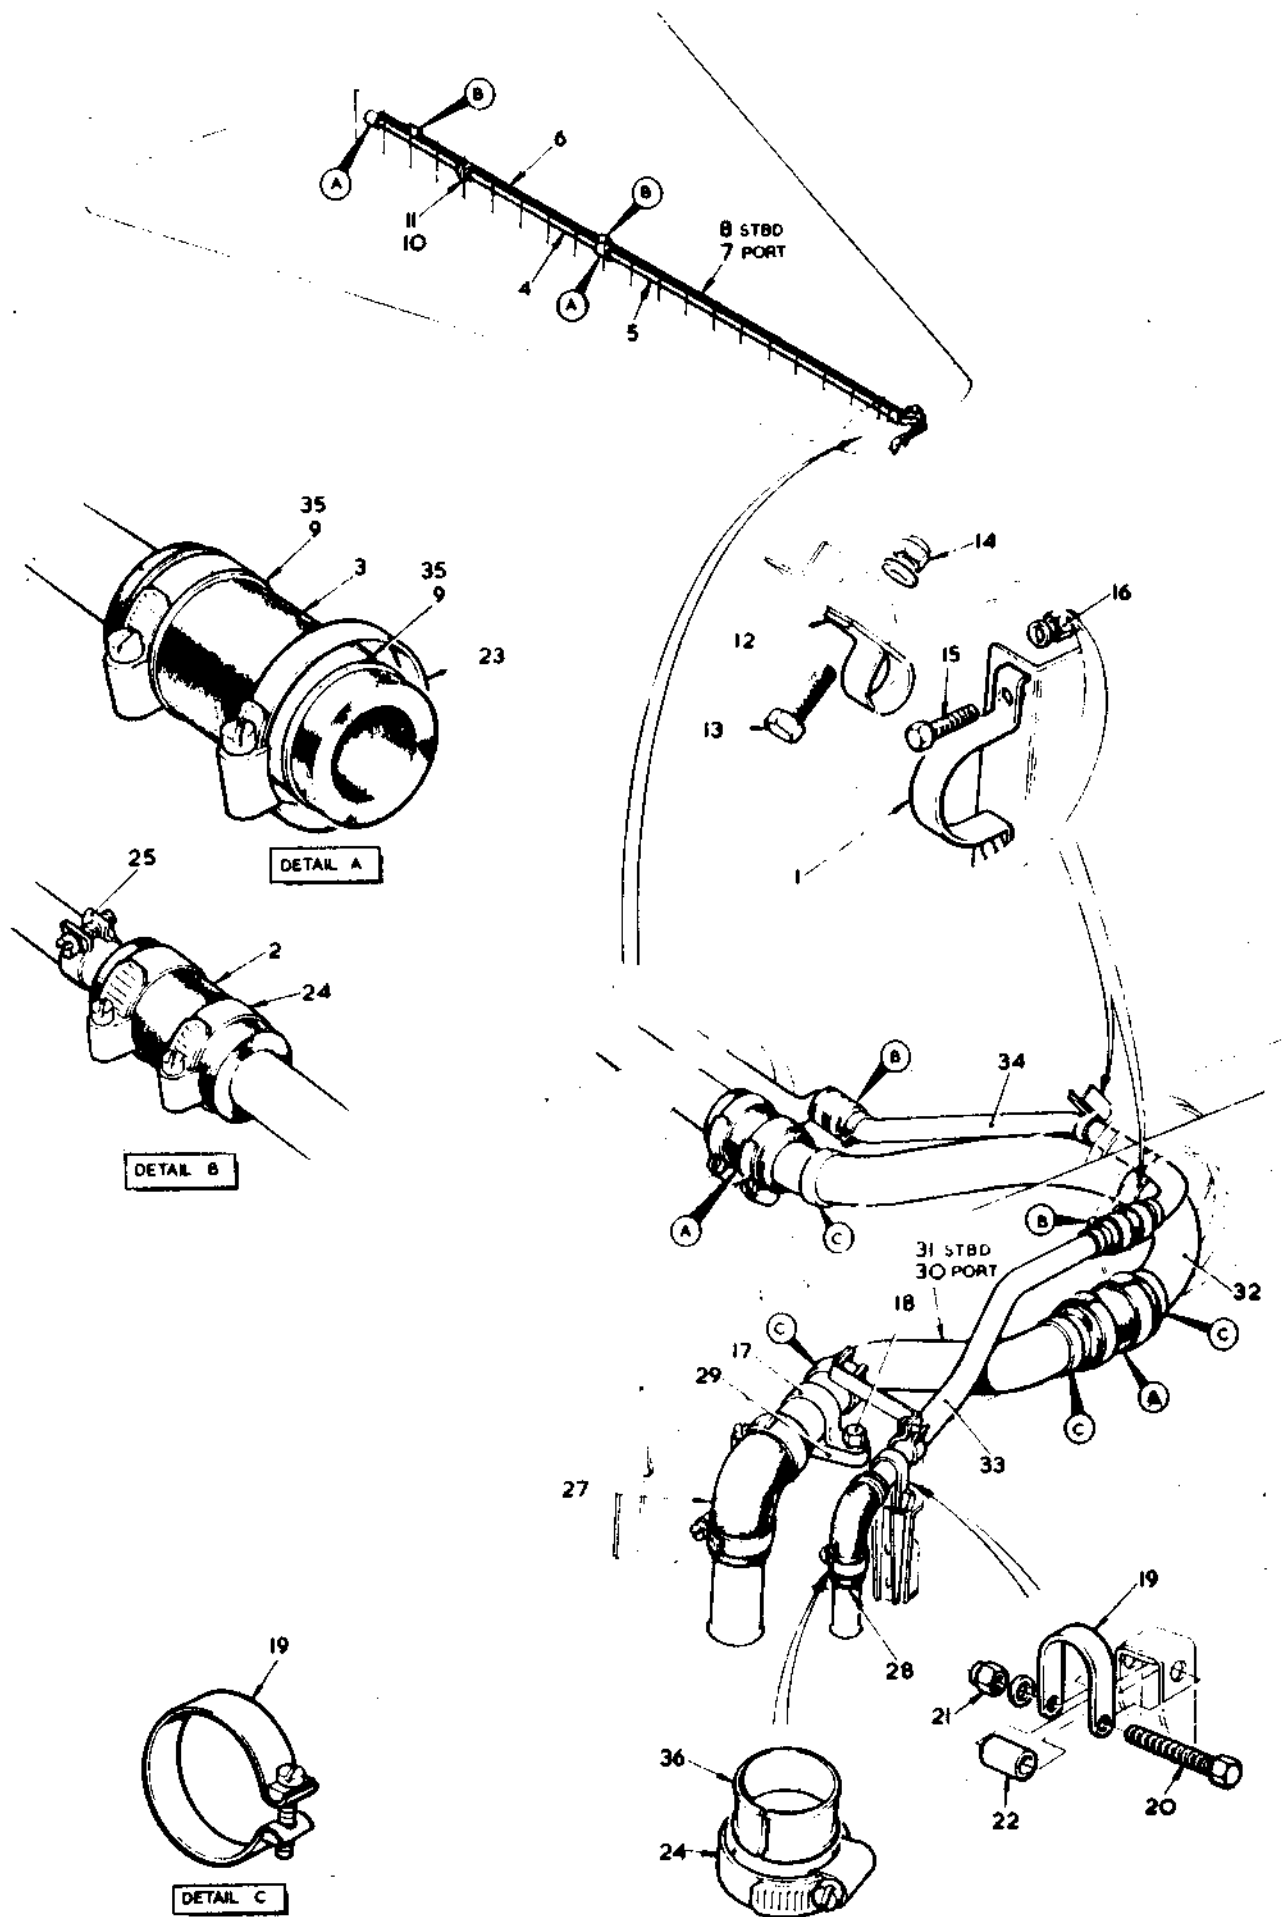


FIG.16 FUEL SYSTEM

CODE A,B,C

SECT. 5G

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mtd. Spec.	Cl. of Equip. N.H. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.73.7	HYDRAULIC EQUIPMENT IN CENTRE FUSELAGE, ASSEMBLY	—	—	—	SH1/1
	E.H8.73.1	Consisting of:- HYDRAULIC EQUIPMENT, CIRCUIT ASSEMBLY Spare for:-	—	—	—	
27Q/30024	MESSIER 8076/52	DIVIDER, flow Attaching parts for 8076/52 (E.A9.73.687):-	2	—	A	SH1/2
28D/1212313	A25/15E	Bolt, 1/2" BSF	2	—	C	SH1/3
28D/12671	A25/21E	Bolt, 1/2" BSF	2	—	C	SH1/4
28M/1011475	A27/EP	Nut, 1/2" BSF	4	—	C	SH1/5
28W/1007016	AGS.162/D VOKES	Washer, spring	4	—	C	
27B/1877	E.30L/1"/7915 or	FILTER	1	—	A	SH1/6
27B/2620	E.30L/1"/22537	FILTER	1	—	A	
6A/2693	—	GAUGE, pressure, Mk.14 LL	1	—	A	SH1/7
27Q/70192	DOWTY 1.00522.001	JACK, bomb door, front, assembly (E.A3.76.643)	1	—	A	SH1/8
27Q/70193	DOWTY 1.00523.001	JACK, bomb door, rear, assembly (E.A3.73.641)	1	—	A	SH1/9
27Y/108	ELECTRO HYDRAULICS 7391	RELAY, HYDRAULIC PRESSURE GAUGE Consisting of:-	1	—	A	SH1/10
27Y/3623	9913	ADAPTOR, outlet to gauge	1	—	C	
27Y/3624	9938	ADAPTOR, hydraulic supply inlet	1	—	C	
	73082	BODY	1	OTD.1308	—	
27Y/3625	30M/38X4	CIRCLIP, nut to body	1	—	C	
	73081	CYLINDER	1	S.1	—	
27Y/3627	73039	Nut, cylinder to body	1	—	C	
	73083	PISTON	1	L.1	—	
27Y/3629	40044	PLUG, bleed	1	—	C	
27Y/3630	7379	RESTRICTOR	1	—	C	
27Y/3632	739112	RING, piston	1	—	C	
27Y/3633	739113	RING, piston	1	—	C	
27Y/4431	739114	RING, sealing, cylinder to body	1	—	C	
27Y/3634	2M/14X10	WASHER, at adaptors and restrictor	3	—	C	
30A/3085	—	WIRE, locking	QR	—	C	
27Q/70283	DOWTY 408Y MK.BN	SELECTOR, and non-return valve for flap and air brake isolation	1	—	A	SH1/11
27Q/70287	DOWTY O.1183Y.B.02	VALVE, rotary control, nosewheel	1	—	A	SH1/12
27Q/778	DOWTY D.857Y	VALVE, restrictor	1	—	A	SH1/13
27Q/1216	DOWTY C.4603Y MK.E	VALVE, thermal relief	7	—	A	SH1/14
27W/17	LOCKHEED UMC.706/4	VALVE, non-return, 3/8" BSP	1	—	A	SH1/15
28Y/15486	H.P.COMPS. A58	VALVE, inflation	1	—	B	SH1/16
27Q/30022	MESSIER 6330	VALVE, solenoid operated	1	—	A	SH1/17
27Q/1105	DOWTY 6240Y	VALVE, non-return, flap and brake isolation	1	—	A	SH1/18
27Q/790	DOWTY C.1034Y/Q	VALVE, pressure relief	1	—	A	SH1/19

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A3.73.398	MOUNTING OF ROTARY CONTROL VALVE AND ACTUATOR FOR WING FLAPS, ASSEMBLY Spares for:-	-	-	-	SH6/1
	E.E.CO.LTD. BRADFORD TYPE 206 Mk.6	ACTUATOR AND HYDRAULIC VALVE FOR FLAPS, ASSEMBLY Consisting of:-	1	-	-	SH6/2
5W/328	AED.200152	ACTUATOR, Type 200, Mk.1	1	-	A	SH6/3
5W/339	-	BRACKET, mounting, c/w label	1	-	B	SH6/4
27Q/781	DOWTY C.408Y/MK.L	VALVE Attaching parts for Type 200 Mk.6:-	1	-	A	SH6/5
28D/12517	A25/17C	Bolt, 2 BA	2	-	C	SH6/6
28M/9403520	A27/CP	Nut, 2 BA	2	-	C	SH6/7
	AS.2811/5/149	Tube, distance	2	L.72	LM	SH6/8
28W/9419475	SP.16/C	Washer, plain	2		C	
28W/9418843	SP.47/C	Washer, spring	2		C	
5528	EEAS.91/3	CLIP, pipe, double, 3/8" o/d.	1	L.72	C	SH6/9
5348	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d. Attaching parts for EEAS.91/3 and EEAS.143/8H:	20	L.72	C	SH6/10
28D/9419452	A25/3B	Bolt, 4 BA (as required)	1	-	C	SH6/11
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	-	C	SH6/12
28M/10287	AGS.2001/B/1	Nut, 4 BA (as required)	1	-	C	SH6/13
28W/9419474	SP.15/B	Washer, 4 BA (as required)	1	-	C	
5259	EEAS.21/2ERH	Washer 'D' (as required)	1	L.72	C	SH6/14
28F/9476124	AGS.1118/C	CONE, tee	3	-	C	SH6/15
784	E.A3.73.423	PIPE, assembly, from selector to reducing union cone aft of frame 18, flaps "up" line	1	DTD.323	C	SH6/16
785	E.A3.73.425	PIPE, assembly, from selector to reducing union cone aft of frame 18, flaps "down" line	1	DTD.323	C	SH6/17
1718	E.A3.73.427	PIPE, assembly, from tee cone to adaptor cone (starboard) in pipe run connecting port and starboard under- carriage door, jack "closed"	1	DTD.323	C	SH6/18
1721	E.A3.73.429	PIPE, assembly, from flap selector tee cone (aft) to air brake tee in reservoir return line	1	DTD.323	C	SH6/19
788	E.A3.73.431	PIPE, assembly, from flap selector tee (forward) to tee cone aft of frame 17 in reservoir return line	1	L.56	C	SH6/20
786	E.A3.73.433	PIPE, assembly, from flap selector to tee cone in reservoir return line	1	L.56	C	SH6/21
787	E.A3.73.437	PIPE, assembly, from flap selector to tee cone (aft)	1	DTD.323	C	SH6/22
1720	E.A3.73.439	PIPE, assembly, from tee cone aft flap selector to air brake selector	1	DTD.323	C	SH6/23
3495	E.A3.73.645	PIPE, assembly, from flap selector tee forward to 4 way union cone in reservoir return line	1	L.56	C	SH6/24

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Place No.
					M.N. L.M.	
		1 2 3 4 5 6				
	E.HB.73.11	MOUNTING OF ROTARY CONTROL VALVES AND ACTUATORS FOR UNDERCARRIAGE AND BOMB DOORS ASSEMBLY Spares for:-	-	-	-	SH4/1
	E.E.CO.LTD. BRADFORD TYPE 204 MK.6	ACTUATOR UNDERCARRIAGE ROTARY CONTROL VALVE ASSEMBLY Consisting of:-	1	-	-	SH4/2
5W/328	AED.200162	ACTUATOR, Type 200 Mk.1	1	-	A	SH4/3
5W/338	-	BRACKET, mounting, c/w label	1	-	B	SH4/4
27Q/779	DOWTY C.408Y MK.Q	VALVE	1	-	A	SH4/5
30A/3361	-	WIRE, locking	QR	-	C	
		Attaching parts for Type 204 Mk.6:-				
28D/12617	A26/17C	Bolt, 2 BA	2	-	C	SH4/6
28M/9403520	A27/CP	Nut, 2 BA	2	-	C	SH4/7
	AS.2811/5/149	Tube, distance	2	-	C	SH4/8
28W/9419476	SP.15/C	Washer, 2 BA	2	-	C	
28W/9418643	SP.47/C	Washer, spring	2	-	C	
	E.E.CO.LTD. BRADFORD Type 206 Mk.6	ACTUATOR, BOMB DOOR ROTARY CONTROL VALVE ASSEMBLY Consisting of:-	1	-	-	SH4/9
5W/328	AED.200162	ACTUATOR, Type 200 Mk.1	1	-	A	SH4/10
5W/340	-	BRACKET, mounting, c/w label	1	-	B	SH4/11
28Q/780	DOWTY C.408Y Mk.R	VALVE	1	-	A	SH4/12
30A/3361	-	WIRE, locking	QR	-	C	
		Attaching parts for Type 206 Mk.6:-				
28D/12617	A26/17C	Bolt, 2 BA	2	-	C	SH4/13
28M/9403520	A27/CP	Nut, 2 BA	2	-	C	SH4/14
	AS.2811/5/149	Tube, distance	2	-	C	SH4/15
28W/9419476	SP.15/C	Washer, 2 BA	2	-	C	
28W/9418643	SP.47/C	Washer, spring	2	-	C	
5544	EEAS.143/21H	CLIP, pipe, single 1/2" o/d.	1	L.72	C	SH4/16
5521	EEAS.143/24H	CLIP, pipe, single 1/2" o/d.	2	L.72	C	SH4/17
5260	EEAS.143/5H	CLIP, pipe, single 3/16" o/d.	6	L.72	C	SH4/18
5258	EEAS.143/6H	CLIP, pipe, single 1/2" o/d.	2	L.72	C	SH4/19
5348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d.	7	L.72	C	SH4/20
		Attaching parts for EEAS.143/5H, EEAS.143/6H, EEAS.143/21H and EEAS.143/24H:-				
28D/9133012	A26/3C	Bolt, 2 BA (as required)	1	-	C	SH4/21
28D/1010658	A26/1B	Bolt, 4 BA (as required)	1	-	C	SH4/22
28D/9419452	A26/3B	Bolt, 4 BA (as required)	1	-	C	SH4/23
28M/1278180	AGS.2001/C/1	Nut, 2 BA (as required)	1	-	C	SH4/24
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	-	C	SH4/25
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	-	C	SH4/26
28F/8011883	AGS.1102/B	CONE, body	1	-	C	SH4/27
28F/9476127	AGS.1120/5	CONE, tee	1	-	C	SH4/28
28F/4051566	AGS.1120/3	CONE, tee	2	-	C	SH4/29
28F/9476124	AGS.1118/C	CONE, tee	2	-	C	SH4/30

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Plots No.
					M.R. L.M.	
		1 2 3 4 5 6				
5944	E.86.73.65	PIPE, assembly, from tee in pressure line to non-return valve at bomb door selector unit	1	DTD.323	C	SH4/31
12124	E.86.73.149	PIPE, assembly, between bomb door selector unit and undercarriage selector tee	1	DTD.323	C	SH4/32
5945	E.86.73.67	PIPE, assembly, from supply tee joint to undercarriage non-return valve	1	DTD.323	C	SH4/33
5946	E.86.73.69	PIPE, assembly, from pressure relief valve tee to pressure line	1	DTD.323	C	SH4/34
16505	E.86.73.121	PIPE, assembly, from selector to undercarriage door jack tee "up" line	1	DTD.323	C	SH4/35
1699	E.A3.73.333	PIPE, assembly, from undercarriage selector to thermal relief valve tee, nosewheel "up" line	1	DTD.323	C	SH4/36
16506	E.86.73.123	PIPE, assembly, from undercarriage selector unit to undercarriage door jack junction tee, "down" line	1	DTD.323	C	SH4/37
776	E.A3.73.337	PIPE, assembly, from undercarriage selector to thermal valve tee, nosewheel "down" line	1	DTD.323	C	SH4/38
776	E.A3.73.339	PIPE, assembly, from bomb door selector to forward bomb door jack thermal valve coupling tee, "closed" line	1	DTD.323	C	SH4/39
12440	E.A9.73.169	PIPE, assembly, from bomb door selector to rear bomb door jack, "closed" line coupling between frames 12 and 13	1	—	C	SH4/40
778	E.A3.73.343	PIPE, assembly, from bomb door selector to forward bomb door jack and thermal valve coupling tee, "open" line	1	DTD.323	C	SH4/41
12441	E.A9.73.171	PIPE, assembly, from bomb door selector to rear bomb door jack "open" line coupling between frames 12 and 13	1	DTD.323	C	SH4/42
780	E.A3.73.347	PIPE, assembly, from undercarriage selector to tee coupling for hand pump in suction line	1	L.56	C	SH4/43
781	E.A3.73.349	PIPE, assembly, between undercarriage bomb door selector tee couplings in reservoir return line	1	L.56	C	SH4/44
782	E.A3.73.351	PIPE, assembly, from bomb door selector to coupling tee at frame 15 in reservoir return line	1	L.56	C	SH4/45
783	E.A3.73.353	PIPE, assembly, from bomb door selector to tee in reservoir return line	1	L.56	C	SH4/46
1701	E.A3.73.356	PIPE, assembly, from coupling aft of frame 15 to coupling aft of frame 19, port brake	1	DTD.323	C	SH4/47
	E.H8.73.19	MOUNTING OF ROTARY CONTROL VALVE AND ACTUATOR FOR AIR BRAKES, ASSEMBLY Spares for:-	—	—	—	SH8/1
	E.E.CO.LTD. BRADFORD TYPE 217 Mk.1	ACTUATOR AND HYDRAULIC VALVE FOR AIR BRAKES, ASSEMBLY Consisting of:-	1	—	—	SH8/2
5W/328	AED.200152	ACTUATOR, type 200 Mk.1	1	—	A	SH8/3
5W/342	—	BRACKET, mounting	1	—	B	SH8/4
27Q/781	DOWTY C.408Y/Mk.L	VALVE	1	—	A	SH8/5

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
28D/12517 28M/9403500 28W/9419475 28W/9416843	A25/17C A27/CP AS.2811/5/149 SP.15/C SP.47/C	Attaching parts for type 217 Mk.1:- Bolt, 2 BA Nut, 2 BA Tube, distance Washer, 2 BA Washer, spring	2 2 2 2 2	- - L.62 - -	C C C C C	SH8/6 SH8/7 SH8/8
829	E.A1.73.181	CLIP, for thermal relief valve mounting at frame 19	2	-	C	SH8/9
28D/9435710 28M/9403520 28W/9416843	A25/11C A27/CP SP.47/C	Attaching parts for E.A1.73.181:- Bolt, 2 BA Nut, 2 BA Washer, spring	2 2 2	- - -	C C C	SH8/10 SH8/11
5260 5258 5348	EEAS.143/5H EEAS.143/6H EEAS.143/8H	CLIP, pipe single 3/16" o/d. CLIP, pipe single 1/2" o/d. CLIP, pipe single 3/8" o/d.	10 2 17	L.72 L.72 L.72	C C C	SH8/12 SH8/13 SH8/14
28D/1010658 28M/1278189 28W/9419474 5259	A25/1B AGS.2001/B/1 SP.15/B EEAS.21/2ERH	Attaching parts for EEAS.143/5H, EEAS.143/6H and EEAS.143/8H:- Bolt, 4 BA (as required) Nut, 4 BA (as required) Washer 4 BA (as required) Washer 'D' (as required)	1 1 1 1	- - - -	C C C C	SH8/15 SH8/16 SH8/17
28F/9718 28F/9463543 28F/9703 28F/9705 845	AGS.1118/C AGS.1120 AGS.1102/A AGS.1102/C E.A3.73.467	CONE, tee CONE, tee, 1/2" x 1/2" x 3/16" CONE, union body CONE, union body PIPE, assembly, from air brake selector to 4-way union forward of frame 19, return line	1 1 1 1 1	- - - - L.58	C C C C C	SH8/18 SH8/19 SH8/20 SH8/21 SH8/22
846	E.A3.73.469	PIPE, assembly, from thermal relief valve tee cone to 4-way union forward of frame 19, return line	1	DTD.323	C	SH8/23
847	E.A3.73.471	PIPE, assembly, from outer thermal relief valve to tee cone aft of frame 19	1	DTD.323	C	SH8/24
848	E.A3.73.473	PIPE, assembly, from tee cone aft of frame 19 to inner thermal relief valve, return line	1	DTD.323	C	SH8/25
849	E.A3.73.475	PIPE, assembly, from tee cone aft frame 20 to inner thermal relief valve, reservoir, return line	1	DTD.323	C	SH8/26
12052	E.B6.73.117	PIPE, assembly, from union cone at centre line of aircraft to union cone forward of frame 20, starboard undercarriage "down" line	1	DTD.323	C	SH8/27
12053	E.B6.73.119	PIPE, assembly, from cone tee forward of frame 20, to union cone at centre line of aircraft, "down" line	1	DTD.323	C	SH8/28
15142	E.B6.73.135	PIPE, assembly, from air brake actuator to tee cone forward of main spar, pressure line	1	DTD.323	C	SH8/29
15144	E.B6.73.137	PIPE, assembly, from outer thermal relief valve to tee cone forward of main spar return line	1	DTD.323	C	SH8/30
15146	E.B6.73.147	PIPE, assembly, from air brake selector to tee cone forward of main spar, return line	1	DTD.323	C	SH8/31
28F/1013401	AGS.1107/A	UNION, reducing, 1/2" x 3/16"	1	-	C	SH8/32

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A3.73.396	PIPES, HYDRAULIC, BETWEEN FRAMES 27 AND 28, ASSEMBLY	—	—	—	SH10/1
5258	EEAS.143/6H	Spares for CLIP, pipe, 1/2" o/d	12	L.72	C	SH10/2
28D/12528	A25/18	Attaching parts for EEAS.143/6H:	1	—	C	SH10/3
28M/10287	AGS.2001/8/1	Bolt, 4 BA	1	—	C	SH10/4
28W/9419474	SP.15/8	Nut, 4 BA	1	—	C	SH10/5
5259	EEAS.21/2ERH	Washer, 4 BA	1	L.72	C	SH10/6
28F/10610	AGS.1118/B	Washer, 'D'	2	—	C	SH10/7
828	E.A1.73.205	CONE, tee	2	LFS.21	C	SH10/8
		FAIRLEAD, at pipe entry to port and starboard wing forward of frame 28. flaps "up" and "down"	2	—	C	SH10/9
28D/13284	A25/3C	Attaching parts for E.A1.73.205:	4	—	C	SH10/10
28M/13324	A29/CP	Bolt, 2 BA	4	—	C	SH10/11
28W/9419474	SP.15/8	Nut, 2 BA	4	—	C	SH10/12
28W/9416643	SP.47/C	Washer, 2 BA	4	—	C	SH10/13
		Washer, spring	4	—	C	SH10/14
2003	E.A3.73.513	PIPE, assembly, from tee cone forward of frame 28 to union cone between wing ribs 1 and 2 flaps "down" line starboard	1	—	C	SH10/15
2004	E.A3.73.515	PIPE, assembly, from tee cone forward of frame 28 to union cone between wing ribs 1 and 2 flaps "down" line port	1	—	C	SH10/16
2005	E.A3.73.517	PIPE, assembly, from tee cone forward of frame 28 to union cone between wing ribs 1 and 2 flaps "up" line, starboard	1	—	C	SH10/17
2006	E.A3.73.519	PIPE, assembly, from tee cone forward of frame 28 to union cone between wing ribs 1 and 2 flaps "up" line, port	1	—	C	SH10/18
	E.A3.73.404	PIPES, HYDRAULIC, BETWEEN FRAMES 17 AND 18, STARBOARD, ASSEMBLY	—	—	—	SH6/25
5526	EEAS.91/3	Spares for:- CLIP, pipe, double 3/8" o/d.	—	L.72	C	SH6/26
5348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d.	4	L.72	C	SH6/27
28D/12511	A25/2B	Attaching parts for EEAS.91/3 and EEAS.143/8H:-	1	—	C	SH6/28
28D/9419452	A25/3B	Bolt, 4 BA (as required)	1	—	C	SH6/29
28M/10287	AGS.2001/8/1	Bolt, 4 BA (as required)	1	—	C	SH6/30
28W/9419474	SP.15/8	Nut, 4 BA (as required)	1	—	C	SH6/31
5259	EEAS.21/2ERH	Washer, 4 BA	1	L.72	C	SH6/32
28F/10410	AGS.1104/C	Washer, 'D'	1	—	C	SH6/33
28F/1120/3	AGS.1120/3	CONE, adaptor	1	—	C	SH6/34
19875	E.86.73.187	CONE, tee	1	—	C	SH6/35
28F/9429532	AGS.1186/C	PIPE, assembly, between tee cones forward and aft of frame 17 flap "return" line	1	—	C	SH6/36
28F/12076	AGS.1114/C	SEAL, bonded	1	—	C	SH6/37
28D/9436920	A25/1C	SLEEVE, screwed, flanged, bulkhead	1	—	C	SH6/38
28M/9403520	A27/CP	Attaching parts for AGS.1114/C:-	3	—	C	SH6/39
28F/11736	AGS.1115/5	Bolt, 2 BA	3	—	C	SH6/40
28W/9416643	SP.47/C	Nut, 2 BA	1	—	C	SH6/41
		Washer, plate	3	—	C	SH6/42
		Washer, spring	3	—	C	SH6/43
980	EEAS.20/1DR	TAB, locking	1	L.72	C	SH6/44

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.73.406	PIPES, HYDRAULIC, BETWEEN FRAMES 18 AND 19, ASSEMBLY	—	—	—	SH7/1
806	E.A1.73.175	Spares for:- CLIP, pressure, relief valve	2	—	C	SH7/2
28D/9435710	A25/11C	Attaching parts for E.A1.73.175: Bolt, 2 BA (Aft end)	2	—	C	SH7/3
28D/9419397	A25/12C	Bolt, 2 BA (Forward end)	2	—	C	SH7/4
28M/9403520	A27/CP	Nut, 2 BA	2	—	C	SH7/5
28W/9416643	SP.47/C	Washer, spring	2	—	C	
829	E.A1.73.181	CLIP, thermal relief valve	1	—	C	SH7/6
28D/9435710	A26/11C	Attaching parts for E.A1.73.181:- Bolt, 2 BA	2	—	C	SH7/7
28M/9403520	A27/CP	Nut, 2 BA	2	—	C	SH7/8
28W/9416643	SP.47/C	Washer, spring	2	—	C	
4966	EEAS.143/6	CLIP, pipe, single 3/16" o/d	4	L.72	C	SH7/9
5268	EEAS.143/8H	CLIP, pipe, single 1/4" o/d	2	L.72	C	SH7/10
5346	EEAS.143/8H	CLIP, pipe, single 3/8" o/d	8	L.72	C	SH7/11
		Attaching parts for EEAS.143/6 EEAS.143/6 and EEAS.143/8H:				
28D/12528	A25/1B	Bolt, 4 BA	1	—	C	SH7/12
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	SH7/13
28W/9419474	SP.15/B	Washer, 4 BA	1	—	C	
5259	EEAS.21/2ERH	Washer, 'D'	1	L.72	C	SH7/14
28F/10020	AGS.1120/1	CONE, tee	1	—	C	SH7/15
28F/10610	AGS.1118/B	CONE, tee	1	—	C	SH7/16
28F/9710	AGS.1107/E	CONE, union reducing	2	—	C	SH7/17
28F/9501	AGS.1142/B	NIPPLE, adaptor	1	—	C	SH7/18
820	E.A3.73.443	PIPE, assembly, from reducing cone aft of frame 18 to restrictor valve, flaps "down" line	1	DTD.323	C	SH7/19
821	E.A3.73.445	PIPE, assembly, from restrictor valve to tee cone at frame 19 flaps "down" line	1	DTD.323	C	SH7/20
1977	E.A3.73.447	PIPE, assembly, from tee cone at frame 19 to tee cone aft of frame 27 flaps "down" line	1	DTD.323	C	SH7/21
822	E.A3.73.449	PIPE, assembly, from flaps "down" line to tee cone at frame 19 to pressure relief valve	1	DTD.323	C	SH7/22
823	E.A3.73.451	PIPE, assembly, from reducing cone aft of frame 18 to thermal relief valve tee flaps "up" line	1	DTD.323	C	SH7/23
1998	E.A3.73.453	PIPE, assembly, from thermal relief valve tee to tee cone aft of frame 27 flaps "up" line	1	DTD.323	C	SH7/24
824	E.A3.73.455	PIPE, assembly, from thermal relief valve to flaps "up" line tee cone	1	DTD.323	C	SH7/25
4518	E.A3.73.557	PIPE, assembly, from 4-way union cone forward of frame 19 (port) to reducing cone forward of frame 20, port air brake return line	1	L.56	C	SH7/26
4520	E.A3.73.559	PIPE, assembly, from pressure relief valve to 4-way union cone aft of frame 18 return line	1	L.56	C	SH7/27
4521	E.A3.73.561	PIPE, assembly, from 4-way union cone aft of frame 18 to tee cone aft of frame 17 return line	1	L.56	C	SH7/28

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
4517	E.A3.73.663	PIPE, assembly, from pressure relief valve to 4-way cone return line	1	DTD.323	C	SH7/29
4619	E.A3.73.665	PIPE, assembly, from 4-way cone aft of frame 18 to union cone forward of frame 20 return line	1	DTD.323	C	SH7/30
28F/12373	AGS.1125/1	UNION, piece, cone 4-way	1		C	SH7/31
28F/12960	AGS.1125/4	UNION, piece, cone 4-way	1	-	C	SH7/32
	E.A3.73.407	PIPES, HYDRAULIC, FRAME 19 TO FRAME 28, BOMB BAY, ASSEMBLY	-	-	-	SH7/33
		Spares for:-				
1880	EEAS.91/1	CLIP, pipe double, 1/2" o/d.	1	L.72	C	SH7/34
5526	EEAS.91/3	CLIP, pipe double, 3/8" o/d	1	L.72	C	SH7/35
5258	EEAS.143/6H	CLIP, pipe single, 1/2" o/d.	20	L.72	C	SH7/36
5348	EEAS.143/8H	CLIP, pipe single, 3/8" o/d.	22	L.72	C	SH7/37
		Attaching parts for EEAS.91/1, EEAS.91/3, EEAS.143/6H and EEAS.143/8H:-				
28D/12528	A25/1B	Bolt, 4 BA (as required)	1		C	SH7/38
28D/12511	A25/2B	Bolt, 4 BA (as required)	1	-	C	SH7/39
28D/9419452	A25/3B	Bolt, 4 BA (as required)	1	-	C	SH7/40
28M/10287	AGS.2001/B/1	Nut, 4 BA (as required)	1	-	C	SH7/41
5259	EEAS.21/2ERH	Washer 'D' (as required)	1	-	C	SH7/42
28W/9419474	SP.15/B	Washer, 4 BA (as required)	1	-	C	
28F/9706	AGS.1102/C	CONE, union body	2	-	C	SH7/43
13160	E.B6.73.333	PIPE, assembly, from union cone aft of frame 19 to union cone aft of frame 28, bomb doors "open" line	1	DTD.323	C	SH7/44
13162	E.B6.73.335	PIPE, assembly, from union cone aft of frame 19 to union cone aft of frame 28, bomb doors "closed" line	1	DTD.323	C	SH7/45
	E.A9.73.687	PIPES, HYDRAULIC, AIR BRAKE, BETWEEN FRAMES 21 AND 23, ASSEMBLY	-	-	-	SH9/1
		Spares for:-				
1880	EEAS.91/1	CLIP, pipe double, 1/2" o/d.	1	L.72	C	SH9/2
5258	EEAS.143/6H	CLIP, pipe single, 1/2" o/d.	17	L.72	C	SH9/3
5348	EEAS.143/8H	CLIP, pipe single, 3/8" o/d.	4	L.72	C	SH9/4
		Attaching parts for EEAS.143/6H and EEAS.143/8H:-				
28D/12528	A25/1B	Bolt, 4 BA (as required)	1	-	C	SH9/5
28D/12511	A25/2B	Bolt, 4 BA (as required)	1	-	C	SH9/6
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	-	C	SH9/7
5259	EEAS.21/2ERH	Washer 'D' (as required)	1	-	C	SH9/8
28W/9419474	SP.15/B	Washer, 4 BA (as required)	1	-	C	
28F/8011803	AGS.1102/B	CONE, union body	1	-	C	SH9/9
28F/9708	AGS.1104/B	CONE, adaptor	4	-	C	SH9/10
28F/10410	AGS.1104/C	CONE, adaptor	2	-	C	SH9/11
28F/11268	AGS.1111/B	CONE, union body, flanged, bulkhead	4	-	C	SH9/12
		Attaching parts for AGS.1111/B:-				
28D/12511	A25/1B	Bolt, 4 BA	6	-	C	SH9/13
28M/9403519	A27/8P	Nut, 4 BA	6	-	C	SH9/14
28F/11274	AGS.1115/2	Washer, plate	1	-	C	SH9/15
28W/1010155	SP.162/B	Washer, spring	6	-	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
26104	E.A9.73.675	PIPE, assembly, from inner flow divider to flanged union cone at port wing joint forward of frame 22, air brake 'out' line	1	DTD.323	C	SH9/16
26105	E.A9.73.677	PIPE, assembly, from outer flow divider to flanged union cone at port wing joint, aft of frame 22, air brake 'in' line	1	DTD.323	C	SH9/17
26106	E.A9.73.678	PIPE, assembly, from inner flow divider to flanged union cone at starboard wing joint, aft of frame 22, air brake 'out' line	1	DTD.323	C	SH9/18
26107	E.A9.73.681	PIPE, assembly, from outer flow divider to union cone aft of frame 22, air brake 'in' line	1	DTD.323	C	SH9/19
26108	E.A9.73.683	PIPE, assembly, from union cone to starboard wing joint, aft of frame 22, air brake 'in' line	1	DTD.323	C	SH9/20
28F/8215	AGS.1138/B	WASHER, jointing	1	-	C	SH9/21
28F/8649	AGS.1138/C	WASHER, jointing	1	-	C	SH9/22
	E.H8.73.17	PIPES, HYDRAULIC, BETWEEN FRAMES 20 AND 21, ASSEMBLY Spare for:-	-	-	-	SH9/23
5260	EEAS.143/5H	CLIP, pipe, 3/16" o/d.	19	L.72	C	SH9/24
5268	EEAS.143/6H	CLIP, pipe, 1/4" o/d.	13	L.72	C	SH9/25
5348	EEAS.143/8H	CLIP, pipe, 3/8" o/d. Attaching parts for EEAS.143/5H, EEAS.143/6H and EEAS.143/8H:-	16	L.72	C	SH9/26
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	-	C	SH9/27
28D/1008149	A25/2B	Bolt, 4 BA (as required)	1	-	C	SH9/28
28D/1007979	AS.1246/1B	Bolt, 4 BA (as required)	1	-	C	SH9/29
28M/1278189	AGS.2001/8/1	Nut, 4 BA (as required)	1	-	C	SH9/30
5259	EEAS.21/2ERH	Washer 'D' (as required)	1	-	C	SH9/31
28W/9419474	SP.15/B	Washer, 4 BA (as required)	1	-	C	
28W/9416642	SP.47/B	Washer, spring (as required)	1	-	C	
28F/10410	AGS.1104/C	CONE, adaptor	2	-	C	SH9/32
28F/9716	AGS.1118/C	CONE, tee	3	-	C	SH9/33
28F/9704	AGS.1102/B	CONE, union body	1	-	C	SH9/34
806	E.A1.73.177	COUPLING, tee	2	-	C	SH9/35
6520	E.A6.73.65	FAIRLEAD Attaching parts for E.A6.73.65:-	2	LFS.21	C	SH9/36
	A25/3C	Bolt, 2 BA	4	-	C	SH9/37
28M/13324	A29/CP	Nut, 2 BA	4	-	C	SH9/38
28W/9419402	SP.13/C	Washer, 2 BA	4	-	C	
28W/9416643	SP.47/C	Washer, spring	4	-	C	
4515	E.A3.73.653	PIPE, assembly, from union cone forward of frame 20 to union cone at starboard wing joint, brake return line	1	DTD.323	C	SH9/39
4516	E.A3.73.655	PIPE, assembly, from union cone forward of frame 20 to union cone at port wing joint, brake return line	1	DTD.323	C	SH9/40

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
12051	E.86.73.85	PIPE, assembly, from union cone forward of main spar to union cone at starboard wing joint, brake pressure line	1	DTD.323	C	SH9/41
15137	E.86.73.115	PIPE, assembly, from union cone forward of frame 20 to 4-way union at starboard wing joint, undercarriage 'down' line	1	DTD.323	C	SH9/42
15138	E.86.73.127	PIPE, assembly, from tee cone forward of frame 20 to 4-way union at starboard wing joint, undercarriage 'down' line	1	DTD.323	C	SH9/43
26109	E.A9.73.686	PIPE, assembly, from tee cone forward of main spar to outer flow divider aft of frame 22, return line	1	DTD.323	C	SH9/44
15140	E.86.73.131	PIPE, assembly, from union cone forward of main spar to union cone forward of frame 20, starboard brake pressure line	1	DTD.323	C	SH9/45
15141	E.86.73.133	PIPE, assembly, from tee cone forward of main spar to inner flow divider aft of frame 22, air brake pressure line	1	DTD.323	C	SH9/46
12006	E.86.73.145	PIPE, assembly, from union cone forward of frame 20 to union cone at port wing joint, brake pressure line	1	DTD.323	C	SH9/47
12008	E.86.73.153	PIPE, assembly, from solenoid operated valve to tee cone aft of frame 20	1	DTD.323	C	SH9/48
12009	E.86.73.155	PIPE, assembly, from tee cone to non-return valve aft of frame 20	1	DTD.323	C	SH9/49
12010	E.86.73.157	PIPE, assembly, from non-return valve to thermal relief valve tee, aft of frame 20	1	DTD.323	C	SH9/50
12011	E.86.73.159	PIPE, assembly, from thermal relief valve tee cone to solenoid operated valve tee cone forward of main spar	1	DTD.323	C	SH9/51
12012	E.86.73.161	PIPE, assembly, from solenoid operated valve to tee cone forward of main spar, air brake pressure line	1	DTD.323	C	SH9/52
28F/9649	AGS.1138/C	WASHER, jointing	2	-	C	SH9/53

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.H8.73.27	PIPES, HYDRAULIC, BETWEEN FRAMES 12 AND 13, ASSEMBLY Spares for:-	-	-	-	SH2/1
836	E.A1.70.61	CLAMP, pipe at accumulator door frame Attaching parts for E.A1.70.61:	1	LFS.21	C	SH2/2
28D/1011006	A26/5B	Bolt, 4 BA	2	-	C	SH2/3
28M/9403519	A27/8P	Nut, 4 BA	2	-	C	SH2/4
28W/1010155	AGS.162/B	Washer, spring	2	-	C	
1536	E.A1.73.325	CLAMP, pipe at frame 13 Attaching parts for E.A1.73.325:-	1	-	C	SH2/5
28D/1010142	A26/9B	Bolt, 4 BA	2	-	C	SH2/6
28M/9403519	A27/8P	Nut, 4 BA	2	-	C	SH2/7
28W/1010155	AGS.162/B	Washer, spring	2	-	C	
841	E.A1.73.257	CLAMP, pipe at frame 13 Attaching parts for E.A1.73.257:-	1	-	C	SH2/8
28D/9140645	A25/10C	Bolt, 2 BA	2	-	C	SH2/9
28M/1006473	A27/CT	Nut, 2 BA	2	-	C	SH2/10
28W/1007983	AGS.162/C	Washer, spring	2	-	C	
5260	EEAS.91/1H	CLIP, pipe, double 1/4" o/d.	2	L.16	-	SH2/11
5258	EEAS.143/5H	CLIP, pipe, single 3/16" o/d	1	L.72	C	SH2/12
5521	EEAS.143/6H	CLIP, pipe, single 1/4" o/d.	6	L.72	C	SH2/13
	EEAS.143/24H	CLIP, pipe, single 1/4" o/d. Attaching parts for EEAS.91/1H, EEAS.143/5H, EEAS.143/6H and EEAS.143/24H:-	6	L.72	C	SH2/14
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	-	C	SH2/15
28D/9436920	A25/1C	Bolt, 2 BA (as required)	1	-	C	SH2/16
28M/1278189	AGS.2001/B/1	Nut, 4BA, (as required)	1	-	C	SH2/17
28M/1278180	AGS.2001/C/1	Nut, 2 BA (as required)	1	-	C	SH2/18
5259	EEAS.21/2ERH	Washer "D" (as required)	1	-	C	SH2/19
28F/8011809	AGS.1104/B	CONE, adaptor	1	-	C	SH2/20
28F/8011883	AGS.1102/B	CONE, body	4	-	C	SH2/21
28F/9129086	AGS.1102/A	CONE, body	1	-	C	SH2/22
28F/9463643	AGS.1120/1	CONE, tee	2	-	C	SH2/23
7770	E.A1.73.129	MOUNTING, "VOKES" FILTER ON FRAME 13 BULKHEAD, ASSEMBLY Spares for:-	1	-	B	SH2/24
1498	E.A1.73.377	ADAPTOR, engine suction line pipe to filter	2	DTD.683	C	SH2/26
3393	E.A1.73.393	CLIP, filter mounting	1	L.72	C	SH2/26
28F/1013599	AGS.1142/A	NIPPLE, adaptor	1	-	C	SH2/27
28F/8011897	AGS.501189		4	-	C	SH2/28
837	E.A1.73.331	PIPE, assembly from ground selector to union cone, nosewheel 'up' line	1	DTD.323	C	SH2/29
838	E.A1.73.333	PIPE, assembly from ground selector to union cone, nosewheel 'down' line	1	DTD.323	C	SH2/30
840	E.A1.73.337	PIPE, assembly, from ground selector to tee cone, hand pump pressure line	1	DTD.323	C	SH2/31
1692	E.A3.73.223	PIPE, assembly, from hydraulic air pressure gauge to tee cone	1	DTD.323	C	SH2/32
1609	E.A3.73.233	PIPE, assembly, from air pressure gauge tee cone to brake accumulator on frame 12	1	DTD.323	C	SH2/33

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
1693	E.A3.73.417	PIPE, assembly, from air pressure gauge tee cone to air changing valve on frame 13 bulkhead	1	DTD.323	C	SH2/34
1694	E.A3.73.419	PIPE, assembly, from union cone aft of frame 12B to union cone aft of frame 15, port brake line	1	DTD.323	C	SH2/35
1695	E.A3.73.421	PIPE, assembly, from union cone aft of frame 12B to union cone aft of frame 19, starboard brake line	1	DTD.323	C	SH2/36
2014	E.A3.73.625	PIPE, assembly, from oil filter to union at frame 12B, suction line	1	DTD.323	C	SH2/37
3094	E.A3.73.637	PIPE, assembly, from nosawheel selector tee to tee cone aft of frame 12B, hand pump pressure line	1	DTD.323	C	SH2/38
5949	E.A3.73.787	PIPE, assembly, from union cone aft of frame 12B to union cone forward of frame 15, pressure gauge line	1	DTD.323	C	SH2/39
21864	E.A9.73.651	PIPE, assembly, from union body at frame 13 to oil filter, suction line	1	L.66	C	SH2/40
28F/9128943	AGS.1114/B	SLEEVE, screwed, flanged bulkhead Attaching parts for AGS.1114/B:-	1	-	C	SH2/41
28D/1010658	A25/1B	Bolt, 4 BA	6	-	C	SH2/42
28M/9403519	A27/BP	Nut, 4 BA	6	-	C	SH2/43
28F/8014021	AGS.1138/B	Washer, jointing	2	-	C	SH2/44
28F/11492	AGS.1115/3	Washer, plate	1	-	C	SH2/45
28W/9416642	SP.47/B	Washer, spring	6	-	C	
981	EEAS.20/2DR	TAB, locking, 20 SWG	2	L.72	C	SH2/46
	E.A3.73.389	PIPES, HYDRAULIC, BETWEEN FRAMES 13 AND 14 AND FOR FRONT BOMB DOOR JACK, ASSEMBLY Spare for:-		-	-	SH3/1
5348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d Attaching parts for EEAS.143/8H:-	1	-	C	SH3/2
28D/1010658	A25/1B	Bolt, 4 BA	1	-	C	SH3/3
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	-	C	SH3/4
5259	EEAS.21/2ERH	Washer, 'D'	1	-	C	SH3/5
28F/9471001	AGS.1102/C	CONE, union body	2	-	C	SH3/6
5349	E.A1.73.323	FAIRLEAD Attaching parts for E.A1.73.323:-	2	LFS.21	C	SH3/7
28D/1010142	A25/9B	Bolt, 4 BA	2	-	C	SH3/8
28M/1278189	AGS.2001/B/1	Nut, 4 BA	2	-	C	SH3/9
28W/9419465	SP.13/B	Washer, 4 BA	2	-	C	
1697	E.A3.73.411	PIPE, assembly, from union cone on front face of frame 13 bulkhead to connection with bomb door jack pipe 'closed' line	1	DTD.323	C	SH3/10
1698	E.A3.73.413	PIPE, assembly, from union cone front face of frame 13 bulkhead to connection with bomb door jack pipe 'open' line	1	DTD.323	C	SH3/11

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
		1 2 3 4 5 6				
	E.B6.73.253	PIPES, SPIRAL, BOMB DOOR JACKS, ASSEMBLY	—	—	—	SH3/12
		Spares for:-				
28E/9713018	AS.3181/6C	CLIP, pipe 3/8" o/d.	4	—	C	SH3/13
		Attaching parts for AS.3181/6C:-				
28D/1009984	A27/7B	Bolt, 4 BA (as required)	1	—	C	SH3/14
28D/9438920	A25/1C	Bolt, 2 BA (as required)	1	—	C	SH3/15
28D/9133011	A25/2C	Bolt, 2 BA (as required)	1	—	C	SH3/16
28M/9403520	A27/CP	Nut, 2 BA (as required)	1	—	C	SH3/17
27578	E.B6.73.619	Piece, distance (as required)	1	—	C	SH3/18
26494	EEAS.21/98RH	Washer, 'D'	1	L.72	C	SH3/19
28W/9416643	SP.47/C	Washer, spring	1	—	C	
26488	E.B6.73.613	FAIRLEAD	2	LFS.21	C	SH3/20
		Attaching parts for E.B6.73.613:-				
28D/9133014	A25/13C	Bolt, 2 BA (as required)	2	—	C	SH3/21
28D/1011024	A25/21C	Bolt, 2 BA (as required)	2	—	C	SH3/22
28M/1278190	AGS.2001/C/1	Nut, 2 BA (as required)	2	—	C	SH3/23
	E.B6.73.615	Packing (as required)	1	—	L.M.	SH3/24
28W/9419475	SP.15/C	Washer, 2 BA (as required)	2	—	C	
28F/8011896	AGS.1142/C	NIPPLE, adaptor	3	—	C	SH3/25
26484	E.B6.73.605	PIPE, assembly, coiled, front bomb door jack pipe, doors 'closed' line	1	DTD.323	C	SH3/26
26485	E.B6.73.607	PIPE, assembly, coiled, front bomb door jack pipe, doors 'open' line	1	DTD.323	C	SH3/27
28F/9439766	AGS.1106/C	UNION, body	2	—	C	SH3/28
	E.A3.73.391	PIPES, HYDRAULIC, BETWEEN FRAMES 14 AND 15, ASSEMBLY	—	—	—	SH3/29
		Spares for:-				
5280	EEAS.143/5H	CLIP, pipe, single 3/16" o/d.	2	L.72	C	SH3/30
5258	EEAS.143/6H	CLIP, pipe, single 1/4" o/d.	3	L.72	C	SH3/31
5348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d.	6	L.72	C	SH3/32
5544	EEAS.143/21H	CLIP, pipe, single 1/2" o/d.	1	L.72	C	SH3/33
5521	EEAS.143/24H	CLIP, pipe, single 5/8" o/d.	1	L.72	C	SH3/34
5852	EEAS.143/16	CLIP, pipe, single 3/16" o/d.	2	L.72	C	SH3/35
		Attaching parts for EEAS.143/5H, EEAS.143/6H, EEAS.143/8H, EEAS.143/21H, EEAS.143/24H and EEAS.143/16				
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	—	C	SH3/36
28D/1008149	A25/2B	Bolt, 4 BA (as required)	1	—	C	SH3/37
28D/9133011	A25/2C	Bolt, 2 BA (as required)	1	—	C	SH3/38
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	—	C	SH3/39
28M/13324	A29/CP	Nut, 2 BA (as required)	1	—	C	SH3/40
28M/1008473	A27/CT	Nut, 2 BA (as required)	1	—	C	SH3/41
28W/1007983	AGS.162/C	Washer, spring (as required)	1	—	C	
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	—	C	SH3/42
829	E.A1.73.181	CLIP, thermal relief valve mounting	4	—	C	SH3/43
		Attaching parts for E.A1.73.181:-				
28D/9435710	A25/11C	Bolt, 2 BA	2	—	C	SH3/44
28M/1008473	A27/CT	Nut, 2 BA	2	—	C	SH3/45
28W/1007983	AGS.162/C	Washer, spring, 2 BA	2	—	C	
28F/11018	AGS.1159/B	CONE, Cap	2	—	C	SH3/46
28F/9440831	AGS.1118/A	CONE, tee	2	—	C	SH3/47
28F/8011811	AGS.1118/B	CONE, tee	1	—	C	SH3/48

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
28F/9463543	AGS.1120/1	CONC, tee	2	—	C	SH3/49
28F/9129085	AGS.1102/A	CONC, union body	1	—	C	SH3/50
806	E.A1.73.177	COUPLING, tee at thermal relief valve pipe junction with bomb door jack line	2	—	C	SH3/51
7764	E.A3.73.593	FAIRLEAD, between frames 14 and 15 Attaching parts for E.A3.73.593:-	1	—	C	SH3/52
28D/9140645	A25/10C	Bolt, 2 BA	2	—	C	SH3/53
1987	E.A1.73.339	PIPE, assembly, from nosewheel rotary control valve to tee cone aft of frame 14, hand pump pressure line	1	DTD.323	C	SH3/54
1988	E.A1.73.343	PIPE, assembly, from nosewheel rotary control valve to tee cone aft of frame 14, nosewheel 'up' line	1	DTD.323	C	SH3/55
1989	E.A1.73.345	PIPE, assembly, from nosewheel rotary control valve to tee cone aft of frame 14, nosewheel 'down' line	1	DTD.323	C	SH3/56
808	E.A1.73.347	PIPE, assembly, from aft thermal relief valve to tee cone aft of frame 14 (port)	1	DTD.323	C	SH3/57
809	E.A1.73.349	PIPE, assembly, from forward thermal relief valve to tee cone aft of frame 14 (port)	1	DTD.323	C	SH3/58
1990	E.A1.73.351	PIPE, assembly, from tee cone aft of frame 14 to union body forward of frame 13, bomb door 'open' line	1	DTD.323	C	SH3/59
1991	E.A1.73.353	PIPE, assembly, from tee cone aft of frame 14 to union body forward of frame 13, bomb door 'closed' line	1	DTD.323	C	SH3/60
810	E.A1.73.355	PIPE, assembly, from forward thermal relief valve to tee cone aft of frame 14, (starboard)	1	DTD.323	C	SH3/61
811	E.A1.73.357	PIPE, assembly, from aft thermal relief valve to tee cone aft of frame 14 (starboard)	1	DTD.323	C	SH3/62
813	E.A1.73.361	PIPE, assembly, from 4-way union to tee cone forward of frame 15, reservoir return line	1	L.56	C	SH3/62
814	E.A1.73.363	PIPE, assembly, from forward (port) thermal relief valve to tee cone reservoir return line	1	DTD.323	C	SH3/63
815	E.A1.73.365	PIPE, assembly, from aft (port) thermal relief valve to tee cone reservoir return line	1	DTD.323	C	SH3/63
816	E.A1.73.367	PIPE, assembly, from port thermal relief valve tee to 4-way union cone reservoir return line	1	DTD.323	C	SH3/64
817	E.A1.73.369	PIPE, assembly, from forward (starboard) thermal relief valve to tee cone reservoir return line	1	DTD.323	C	SH3/65
818	E.A1.73.371	PIPE, assembly, from aft (starboard) thermal relief valve to tee cone, reservoir return line	1	DTD.323	C	SH3/66
819	E.A1.73.373	PIPE, assembly, from starboard thermal relief valves tee to 4-way union cone, reservoir return line	1	DTD.323	C	SH3/67
1992	E.A1.73.375	PIPE, assembly, from tee cone at frame 15 to adaptor nipple at frame 12, reservoir return line	1	L.56	C	SH3/67

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5950	E.A3.73.777	PIPE, assembly, from union cone forward of frame 15 to pressure gauge relay	1	DTD.323	C	SH3/68
28F/5722	AGS.904/B	SLEEVE, outer, in 4-way piece	2	—	C	SH3/69
28F/12373	AGS.1125/1	UNION, CONE, 4-way	1	—	C	SH3/70
	E.H8.73.15	PIPES, HYDRAULIC, BETWEEN FRAMES 16 AND 17, PORT AND STARBOARD, ASSEMBLY Spares for:-	—	—	—	SH5/1
5522	EEAS.91/3H	CLIP, pipe, double 3/8" o/d.	1	L.72	C	SH5/2
9348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d.	10	L.72	C	SH5/3
5543	EEAS.143/10H	CLIP, pipe, single 1/2" o/d.	1	L.72	C	SH5/4
5523	EEAS.143/23H	CLIP, pipe, single 5/8" o/d.	11	L.72	—	SH5/5
28E/17186	AGS.2081/6	CLIP, pipe, 3/8" o/d. rubber covered Attaching parts for EEAS.91/3H, EEAS.143/8H, EEAS.143/10H, EEAS.143/23H and AGS.2081/6:-	7	L.72	C	SH5/6
28D/12528	A25/1B	Bolt, 4 BA (as required)	1	—	C	SH5/7
28D/9419452	A25/3B	Bolt, 4 BA (as required)	1	—	C	SH5/8
28D/9438920	A25/1C	Bolt, 2 BA (as required)	1	—	C	SH5/9
28D/9133012	A25/3C	Bolt, 2 BA (as required)	1	—	C	SH5/10
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	—	C	SH5/11
28M/1278190	AGS.2001/C/1	Nut, 2 BA (as required)	1	—	C	SH5/12
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	—	C	SH5/13
28F/9716	AGS.1118/C	CONE, tee	3	—	C	SH5/14
28F/9724	AGS.1120/10	CONE, tee	1	—	C	SH5/15
30965	E.A3.73.915	COUPLING, pipe	3	S.91	C	SH5/16
803	E.A1.73.249	COUPLING, tee	1	DTD.683	C	SH5/17
16510	E.B6.73.197	FAIRLEAD, at starboard wing joint Attaching parts for E.B6.73.197:-	1	LFS.21	C	SH5/18
28D/9133013	A25/5C	Bolt, 2 BA	4	—	C	SH5/19
28M/13324	A27/CP	Nut, 2 BA	4	—	C	SH5/20
28W/1007983	AGS.162/C	Washer, spring	4	—	C	
16512	E.B6.73.203	FAIRLEAD, at port wing joint Attaching parts for E.B6.73.203:-	1	LFS.21	C	SH5/21
28D/9133013	A25/5C	Bolt, 2 BA	4	—	C	SH5/22
28M/13324	A27/CP	Nut, 2 BA	4	—	C	SH5/23
28W/10007983	AGS.162/C	Washer, spring	4	—	C	
16511	E.B6.73.199	FAIRLEAD, half, for pipes to starboard wing Attaching parts for E.B6.73.199:-	2	—	C	SH5/24
28D/12534	A25/9C	Bolt, 2 BA	3	—	C	SH5/25
28M/1278190	AGS.2001/C/1	Nut, 2 BA	3	—	C	SH5/26
28W/9419402	SP.13/C	Washer, 2 BA	3	—	C	
28F/8278	AGS.1142/E	NIPPLE, adaptor	8	—	C	SH5/27
28F/8235	AGS.1142/F	NIPPLE, adaptor	2	—	C	SH5/28
7758	E.A3.73.717	PEG Attaching parts for E.A3.73.717:-	1	—	C	SH5/29
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	—	C	SH5/30
792	E.A3.73.375	PIPE, assembly, between union bodies aft of frame 16, port engine driven pump suction line	1	L.56	C	SH5/31
794	E.A3.73.383	PIPE, assembly, from union body to tee coupling aft of frame 16, port engine driven pump suction line	1	L.56	C	SH5/32

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
801	E.A3.73.499	PIPE, assembly, from tee coupling to union body aft of frame 16, engine driven pump suction line	1	L.56	C	SH5/33
3661	E.A3.73.703	PIPE, assembly, from tee cone forward to tee cone aft pressure line	1	DTD.323	C	SH5/34
3663	E.A3.73.705	PIPE, assembly, from tee cone to ground/flight selector, pressure line	1	DTD.323	C	SH5/35
5959	E.A3.73.779	PIPE, assembly, from ground/flight selector to tee cone forward of frame 16	1	DTD.323	C	SH5/36
5960	E.A3.73.811	PIPE, assembly, from tee cone to pressure relay gauge	1	DTD.323	C	SH5/37
30957	E.A3.73.911	PIPE, assembly, between couplings aft of frame 16, port engine driven pump delivery line	1	DTD.743	C	SH5/38
30956	E.A3.73.913	PIPE, assembly, between couplings aft of frame 16, port engine driven pump delivery line	1	DTD.743	C	SH5/39
30975	E.A4.73.266	PIPE, assembly, from coupling aft of frame 16 to union body at rib 1 port wing, engine driven pump delivery line	1	DTD.743	C	SH5/40
30977	E.A4.73.271	PIPE, assembly, from coupling aft of frame 16 to connection at rib 1, starboard wing engine driven pump delivery line	1	DTD.743	C	SH5/41
21853	E.A9.73.649	PIPE, assembly, from tee coupling aft of frame 16 to cone body aft of frame 13, engine driven pumps, suction line	1	L.56	C	SH5/42
5962	E.B6.73.75	PIPE, assembly, from rotary control valve to tee cone forward of frame 16, pressure line	1	DTD.323	C	SH5/43
5966	E.B6.73.93	PIPE, assembly, from union body aft of frame 16 to connection at rib 1, starboard wing engine driven pump suction line	1	L.56	C	SH5/44
5967	E.B6.73.97	PIPE, assembly, from tee cone aft of frame 16 to non-return valve in starboard wing between fuselage and rib 1 engine driven pump pressure line	1	DTD.323	C	SH5/45
5958	E.B6.73.99	PIPE, assembly, from tee cone aft of frame 16 to union cone in starboard wing between fuselage and rib 1, engine driven pump return line	1	DTD.323	C	SH5/46
12060	E.B6.73.141	PIPE, assembly, from non-return valve forward of frame 16 to tee cone aft of frame 16, engine driven pump return line	1	L.56	C	SH5/47
16509	E.B6.73.143	PIPE, assembly, from tee cone forward of frame 16, to tee cone aft of frame 16, pressure line	1	DTD.323	C	SH5/48
6999	E.B6.73.189	PIPE, assembly, from coupling aft of frame 16 to union body at rib 1, port wing engine driven pump, suction line	1	DTD.323	C	SH5/49
	E.B6.73.701	PLATE, stop Attaching parts for E.B6.73.701:	1	-	-	SH5/50
28D/1011023	A26/20C	Bolt, 2 BA	2	-	C	SH5/51
28M/1278190	AGS.2001/C/1	Nut, 2 BA	2	-	C	SH5/52
	AS.2809/4/05	Tube, distance	2	-	-	SH5/53
28F/9877	AGS.1103/E	UNION, body	3	-	C	SH5/54

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.73.403	PIPES, HYDRAULIC, BETWEEN FRAMES 17 AND 18 PORT, ASSEMBLY	—	—	—	SH6/41
6348	EEAS.143/8H	Spares for:- CLIP, pipe, single 3/8" o/d.	2	L.72	C	SH6/42
28D/12528	A25/1B	Attaching parts for EEAS.143/8H:- Bolt, 4 BA	1	—	C	SH6/43
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	—	C	SH6/44
28W/9419474	SP.15/B	Washer, 4 BA	1	—	C	SH6/45
5259	EEAS.21/2ERH	Washer 'D'	1	—	C	SH6/46
28F/10410	AGS.1104/C	CONE, adaptor	1	—	C	SH6/48
804	E.A3.73.479	PIPE, assembly, from tee cone forward of frame 18, to cone adaptor at port wing joint undercarriage door jacks 'closed' line	1	—	C	SH6/47
28F/12076	AGS.1114/C	SLEEVE, screwed, flanged, bulkhead	1	—	C	SH6/48
28D/9436920	A25/1C	Attaching parts for AGS.1114/C:- Bolt, 2 BA	3	—	C	SH6/49
28M/9403520	A27/CP	Nut, 2 BA	3	—	C	SH6/50
28F/11736	AGS.1115/5	Washer, plate	1	—	C	SH6/51
28W/9416643	AGS.162/C	Washer, spring	3	—	C	SH6/51
980	EEAS.20/1DR	TAB, locking	1	—	—	SH6/52
28F/9649	AGS.1138/C	WASHER, jointing	1	—	C	SH6/53
	E.A3.73.487	PIPES, HYDRAULIC, BETWEEN FRAMES 18 AND 19, ASSEMBLY	—	—	—	SH9/54
5258	EEAS.143/6H	Spares for:- CLIP, pipe, single 1/2" o/d.	8	—	C	SH9/55
5348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d. Attaching parts for EEAS.143/6H and EEAS.143/8H:-	5	—	C	SH9/56
28D/101065	A25/1B	Bolt, 4 BA	1	—	C	SH9/57
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	—	C	SH9/58
5259	EEAS.21/2ERH	Washer, 'D'	1	—	C	SH9/59
	E.A3.73.401	PIPES, HYDRAULIC, AT REAR BOMB DOOR JACK, ASSEMBLY	—	—	—	SH10/14
7778	EEAS.143/3H	Spares for:- CLIP, pipe, double 3/8" o/d.	1	—	C	SH10/15
5348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d. Attaching parts for EEAS.143/3H and EEAS.143/8H:-	7	—	C	SH10/16
28D/1008149	A25/2B	Bolt, 4 BA (as required)	1	—	C	SH10/17
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	—	C	SH10/18
28W/9419474	SP.15/B	Washer, 4 BA (as required)	1	—	C	SH10/19
5259	EEAS.20/2ERH	Washer, 'D' (as required)	1	—	C	SH10/19
28F/9705	AGS.1102/C	CONE, union body	2	—	C	SH10/20

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mtl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.B6.73.621	PIPE, assembly, from union cone aft of frame 28 to rear bomb door operating jack pipe connection, doors 'closed' line	1	-	C	SH10/21
	E.B6.73.623	PIPE, assembly, from union cone aft of frame 28 to rear bomb door operating jack pipe connection, doors 'open' line	1	-	C	SH10/22
	E.B6.73.253	PIPES, SPIRAL, BOMB DOOR JACKS, ASSEMBLY	-	-	-	SH10/23
26486	E.B6.73.609	ADAPTOR, assembly Attaching parts for E.B6.73.609:-	1	-	C	SH10/24
28D/12539	A25/16C	Bolt, 2 BA	2	-	C	SH10/25
28W/9419475	E.B6.73.611 SP.15/C	Piece, distance Washer, 2 BA	2 2	- -	- C	SH10/26 SH10/27
28E/14200	AS.3181/6C	CLIP, pipe 3/8" o/d. Attaching parts for AS.3181/6C:-	4	-	C	SH10/28
28D/9438920	A25/1C	Bolt, 2 BA	1	-	C	SH10/29
28M/9403520	A27/CP	Nut, 2 BA	1	-	C	SH10/30
26494	EEAS.21/98RH	Washer, 'D'	1	L.72	C	SH10/31
28W/9416643	SP.47/C	Washer, spring	1	-	C	
26488	E.B6.73.613	FAIRLEAD Attaching parts for E.B6.73.613:-	1	LFS.21	C	SH10/32
28D/12539	A25/16C	Bolt, 2 BA	2	-	C	SH10/33
28M/1278190	AGS.2001/C/1	Nut, 2 BA	2	-	C	SH10/34
28W/9419475	SP.15/C	Washer, 2 BA	2	-	C	
28F/9619	AGS.1142/C	NIPPLE, adaptor	-	-	-	SH10/35
26482	E.B6.73.601	PIPE, assembly, coiled, rear bomb door jack pipe, doors 'open' line	1	DTD.323	C	SH10/36
33022	E.B6.73.625	PIPE, assembly, coiled rear bomb door jack pipe, 'closed' line	1	DTD.323	C	SH10/37
28F/11948	AGS.1106/C	UNION, body	1	-	C	SH10/38
	E.H8.73.13	PIPES, HYDRAULIC, BETWEEN FRAMES 15 AND 16, STARBOARD, ASSEMBLY	-	-	-	SH4/48
2446	E.A3.73.221	BRACKET, relay valve mounting Attaching parts for E.A3.73.221:-	1	T.45	C	SH4/49
28D/9140847	A25/14C	Bolt, 2 BA	2	-	C	SH4/50
28M/1278190	AGS.2001/C/1	Nut, 2 BA	2	-	C	SH4/51
5348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d	1	L.72	C	SH4/52
5544	EEAS.143/21H	CLIP, pipe, single 1/2" o/d.	3	L.72	C	SH4/53
5521	EEAS.143/24H	CLIP, pipe, single 3/4" o/d. Attaching parts for EEAS.143/8H, EEAS.143/21H and EEAS.143/24H:-	2	L.72	C	SH4/54
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	-	C	SH4/55
28D/9438920	A25/1C	Bolt, 2 BA (as required)	1	-	C	SH4/56
28D/9133012	A25/3C	Bolt, 2 BA (as required)	1	-	C	SH4/57
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	-	C	SH4/58
28M/1278190	AGS.2001/C/1	Nut, 2 BA (as required)	1	-	C	SH4/59
28W/9419475	SP.15/C	Washer, 2 BA (as required)	1	-	C	
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	L.72	C	SH4/60
15145	E.B6.73.139	PIPE, assembly, from tee cone forward of frame 15 to non-return valve between frames 15 and 16, bomb doors 'return' line	1	L.56	C	SH4/61

CANBERRA		SERVICES					Page SH.18	
HYDRAULIC SYSTEM								
Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.		
					M.R. L.M.			
		1 2 3 4 5 6						
	E.A1.73.113	. SELECTOR, NOSEWHEEL GROUND ASSEMBLY Spares for:-	-	-	-	SH2/47		
3414	E.A1.73.395	. BRACKET, nosewheel selector mounting Attaching parts for E.A1.73.395:-	1	-	C	SH2/48		
28D/9436920	A25/1C	. Bolt, 2 BA	5	-	C	SH2/49		
28D/9133011	A25/2C	. Bolt, 2 BA	1	-	C	SH2/50		
28M/9403520	A27/CP	. Nut, 2 BA	6	-	C	SH2/51		
28W/9416643	SP.47/C	. Washer, spring	6	-	C			
3506	E.A1.73.391	. LEVER GROUND SELECTOR, NOSEWHEEL ASSEMBLY Spares for:-	1	-	C	SH2/52		
858	E.A1.73.233	. SPRING, tension, 20 SWG	1		C	SH2/53		

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.73.5	HYDRAULIC EQUIPMENT IN FRONT FUSELAGE, ASSEMBLY	—	—	—	SH11/1
	E.H8.73.1	HYDRAULIC EQUIPMENT, CIRCUIT Consisting of:-	—	—	—	
27M/481	LOCKHEED					
6A/2693	AIR.40016	ACCUMULATOR, hydraulic	1	—	A	SH11/2
	—	GAUGE, pressure, Mk.14LL	2	—	A	SH11/3
27Q/1834	DOWTY	JACK, nosewheel	1	—	A	SH11/4
27Q/1836	08214Y.Co.1					
	DOWTY	JACK, nosewheel, door	1	—	A	SH11/5
27VA/3615	08246Y.Co.1					
	DUNLOP					
	4/W3/101/8/8/					
	11.2	PIPE, flexible, nosewheel door, 'closed'	1	—	B	SH11/6
27VA/3647	DUNLOP					
	4/W3/101/8/9/10	PIPE, flexible, nosewheel door, 'open'	1	—	B	SH11/7
27VA/3792	DUNLOP					
	4/W3/101/8/9/16	PIPE, flexible, nosewheel, 'up' line	1	—	B	SH11/8
27VA/5206	DUNLOP					
	4/W3/101/8/9/24	PIPE, flexible, nosewheel, 'down' line	1	—	B	SH11/9
27Z/1	TURNER					
	77/C.1275	PUMP, hand, Duplex	1	—	A	SH11/10
		Attaching parts for 77/C 1275 when not supplied with pump (E A3.73.211):-				
28D/1011248	A25/16E	Bolt, 1/2" BSF	3	—	C	SH11/11
28D/9435710	A25/11C	Bolt, 2BA	2	—	C	SH11/12
28M/9403520	A27/CP	Nut 2BA	2	—	C	SH11/13
28E/9128861	AGS.605/1	Clip	1	—	C	SH11/14
28W/9416643	AGS.47/C	Washer, spring	2	—	C	
28W/1007016	AGS.162/D	Washer, spring	3	—	C	
28W/9419402	SP.13/C	Washer, 2BA	2	—	C	
	ELECTRO HYDRAULICS					
27Y/108	7391	RELAY, HYDRAULIC PRESSURE GAUGE Consisting of:-	1	—	A	SH11/15
27Y/3623	9913	ADAPTOR, outlet to gauge	1	—	C	
27Y/3624	9938	ADAPTOR, hydraulic supply inlet	1	—	C	
	73082	BODY	1	DTD.1308	—	
27Y/3625	30M/36x4	CIRCLIP, nut to body	1	—	C	
	73081	CYLINDER	1	S.1	—	
27Y/3627	73039	NUT, cylinder to body	1	—	C	
	73083	PISTON	1	L.64	—	
27Y/3629	40044	PLUG, bleed	1	—	C	
27Y/3630	7379	RESTRICTOR	1	—	C	
27Y/3632	739112	RING, piston	1	—	C	
27Y/3633	739113	RING, piston	1	—	C	
27Y/4431	739114	RING, sealing, cylinder to body	1	—	C	
27Y/3634	2M/14X10	WASHER, at adaptor and restrictor	3	—	C	
27Q/628	DOWTY					
	C.2254Y	UNIT, oil filter	1	—	A	SH11/16
		Attaching parts for C.2254Y (E.A3.04.10903):-				
28D/1011244	A25/8E	Bolt, 1/2" BSF	2	—	C	SH11/17
28M/9480017	AGS.2001/E/1	Nut, 1/2"	2	—	C	SH11/18
	AS.2811/6/050	Tube, distance	2	—	—	SH11/19

SERVICES HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.N. L.M.	Plate No.
		1 2 3 4 5 6				
27G/3460	DUNLOP AC.61762	VALVE, brake control	1	—	A	SH11/20
27Q/772	DOWTY 401Y.Mk.G	VALVE, sequence, nosewheel	1	—	A	SH11/21
27Q/773	DOWTY 401Y.Mk.H	VALVE, sequence, nosewheel door	1	—	A	SH11/22
27Q/771	DOWTY D.2568Y	VALVE, pressure relief, reservoir	1	—	A	SH11/23
27Q/1216	DOWTY C4603Y.Mk.E	VALVE, thermal relief	2	—	A	SH11/24
27Q/30Q25	MESSIER 8557	VALVE, non-return, pressurisation	1	—	A	SH11/25
27W/8	LOCKHEED UMC.704	VALVE, non-return	2	—	A	SH11/26
28Y/15486	H.P.COMPS. A.58	VALVE, inflation	2	—	C	SH11/27
	E.H8.73.53	PIPES, HYDRAULIC BRAKE, FRAME 1 TO FRAME 3, ASSEMBLY Spares for:-	—	—	—	SH12/1
2446	E.A3.73.221	BRACKET, mounting, relay valve Attaching parts for E.A3.73.221:-	1	T.45	C	SH12/2
28D/9140647	A25/14C	Bolt, 2BA	2	—	C	SH12/3
1880	EEAS.91/1	CLIP, pipe, double	1	L.16	C	SH12/4
5260	EEAS.143/5H	CLIP, pipe, single, 3/16" o/d.	21	L.72	C	SH12/5
5258	EEAS.143/6H	CLIP, pipe, single, 1/4" o/d.	1	L.72	C	SH12/6
5348	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d. Attaching parts for EEAS.91/1, EEAS.143/5H, EEAS.143/6H and EEAS.143/8H:-	3	L.72	C	SH12/7
28D/1010658	A25/1B	Bolt, 4BA (as required)	1	—	C	SH12/8
28D/1008149	A25/2B	Bolt, 4BA (as required)	1	—	C	SH12/9
28M/1278189	AGS.2001/B/1	Nut, 4BA (as required)	1	—	C	SH12/10
5259	EEAS.21/2/ERH	Washer, 'D'	1	—	C	SH12/11
28F/9129085	AGS.1102/A	CONE, union body	1	—	C	SH12/12
28F/1013401	AGS.1107/A	CONE, union, reducing	1	—	C	SH12/13
28F/9710	AGS.1107/E	CONE, union, reducing	1	—	C	SH12/14
28F/9440881	AGS.1118/A	CONE, tee	1	—	C	SH12/15
28F/9488812	AGS.1120/8	CONE, tee, 3/8" x 1/4" x 1/4"	1	—	C	SH12/16
1611	E.A3.73.157	FAIRLEAD, at frame 2	1	—	C	SH12/17
1727	E.A3.73.577	FAIRLEAD, between frames 1 and 2 Attaching parts for E.A3.73.157 and E.A3.73.577:-	1	—	C	SH12/18
28D/1011019	A25/8C	Bolt, 2BA	2	—	C	SH12/19
28M/9403520	A27/CP	Nut, 2BA	2	—	C	SH12/20
28W/1010155	AGS.162/B	Washer, spring	2	—	C	
28F/1013699	AGS.1142/A	NIPPLE, adaptor	2	—	C	SH12/21
	E.H8.73.51	PIPES, HYDRAULIC, BRAKE CHARGING POINT, ASSEMBLY Spares for:-	—	—	—	
8761	EEAS.143/7H	CLIP, pipe single, 5/16" o/d. Attaching parts for EEAS.143/7H:-	1	—	C	SH12/22
28D/1010658	A25/1B	Bolt, 4BA	1	—	C	SH12/23
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	—	C	SH12/24
5259	EEAS.21/2/ERH	Washer, 'D'	1	—	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28F/9440881	AGS.1118/A	 CONE, tee	1	—	C	SH12/25
28F/1013401	AGS.1107/A	 CONE, union, reducing	1	—	C	SH12/26
28F/1036556	AGS.1111/A	 CONE, union, bulkhead	2	—	C	SH12/27
		Attaching parts for AGS.1111/A:-				
28D/1008149	A25/28	 Bolt, 4BA	3	—	C	SH12/28
28M/1278189	AGS.2001/B/1	 Nut, 4BA	3	—	C	SH12/29
28F/9152415	AGS.1115/1	 Washer, plate	1	—	C	SH12/30
28W/9419465	SP.13/B	 Washer, 4BA	3	—	C	
28F/10403	AGS.1168/A	 ELBOW, union	2	—	C	SH12/31
28F/1013599	AGS.1142/A	 NIPPLE, adaptor	2	—	C	SH12/32
40212	E.B7.73.383	 PIPE, assembly, from relay valve tee to relay valve	1	DTD.323	C	SH12/33
40213	E.B7.73.385	 PIPE, assembly, from relay valve tee to charging valve	1	DTD.323	C	SH12/34
	E.G9.73.109	 PIPE, assembly, from relay valve tee to cone union, bulkhead	1	—	—	SH12/35
	E.G9.73.111	 PIPE, assembly, from tee piece to cone union, bulkhead	1	—	—	SH12/36
	E.H8.73.47	 PIPE, assembly, from cone union bulkhead to brake pressure gauge	1	—	—	SH12/37
	E.H8.73.45	 PIPE, assembly, from cone union bulkhead to hydraulic pressure gauge	1	—	—	SH12/38
28F/9428453	AGS.1186/B	 SEAL, bonded	2	—	C	SH12/39
28F/9128943	AGS.1114/B	 SLEEVE, screwed, flanged, bulkhead	1	—	C	SH12/40
		Attaching parts for AGS.1114/B:-				
28D/1008149	A25/28	 Bolt, 4BA	6	—	C	SH12/41
28M/1278189	AGS.2001/B/1	 Nut, 4BA	6	—	C	SH12/42
28F/9152415	AGS.1115/1	 Washer, plate	1	—	C	SH12/43
28W/9419465	SP.13/B	 Washer, 4BA	6	—	C	
981	EEAS.20/2DR	 TAB, locking	6	—	C	SH12/44
1613	E.A3.73.259	 PIPE, assembly, from relay valve to differential unit tee, supply line	1	DTD.323	C	SH12/45
1614	E.A3.73.261	 PIPE, assembly, from union at frame 1 to differential unit tee return line	1	DTD.323	C	SH12/46
1615	E.A3.73.263	 PIPE, assembly, from differential unit to tee, supply line	1	DTD.323	C	SH12/47
1616	E.A3.73.285	 PIPE, assembly, from union cone at frame 1 to union at frame 3, return line	1	DTD.323	C	SH12/48
1617	E.A3.73.267	 PIPE, assembly, from differential unit to union at frame 3, port brake line	1	DTD.323	C	SH12/49
1618	E.A3.73.269	 PIPE, assembly, from differential unit tee to union at frame 3, supply line	1	DTD.323	C	SH12/50
1619	E.A3.73.271	 PIPE, assembly, from differential unit to union at frame 3, starboard brake line	1	DTD.323	C	SH12/51
5838	E.A3.73.825	 PIPE, assembly, from hydraulic pressure gauge tee to valve fitting on frame 1	1	DTD.323	C	SH12/52

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
5837	E.A3.73.829	PIPE, assembly, from hydraulic pressure gauge tee to union at frame 1	1	DTD.323	C	SH12/53
5858	E.A2.73.1137	PIPE, assembly, from union at frame 1 to union at frame 3-4, pressure gauge line	1	DTD.323	C	SH12/54
28F/9128943	AGS.1114/B	SLEEVE, screwed flanged, bulkhead Attaching parts for AGS.1114/B:-	1	-	C	SH12/55
28D/1008419	A25/2B	Bolt, 4BA	6	-	C	SH12/56
28M/1278189	AGS.2001/B/1	Nut, 4BA	6	-	C	SH12/57
28F/4051641	AGS.1115/3	Washer, plate	1	-	C	SH12/58
28W/9419465	SP.13/B	Washer, 4BA	6	-	C	
981	EEAS.20/2DR	TAB, locking	3	-	C	SH12/59
28F/8014021	AGS.1138/B	WASHER, jointing	1	-	C	SH12/60
	E.A3.73.211	PIPES, HYDRAULIC, FROM HAND PUMP TO FRAMES 3-4, ASSEMBLY Spares for:-	-	-	-	SH13/1
761	E.A1.73.289	BODY, banjo, special	1	-	C	SH13/2
28F/9140973	AGS.1129/C	BODY, banjo	1	-	C	SH13/3
28F/9423229	AGS.1135/C	BOLT, banjo	2	-	C	SH13/4
5258	EEAS.143/6H	CLIP, pipe, single, 1/4" o/d.	2	-	C	SH13/5
5348	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d.	2	-	C	SH13/6
		Attaching parts for EEAS.143/6H & EEAS.143/8H:-				
28D/1010658	A25/1B	Bolt, 4BA	1	-	C	SH13/7
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	-	C	SH13/8
28W/9419465	SP.13/B	Washer, 4BA	1	-	C	
20778	EEAS.20/2ER	Washer, 'D'	1	-	C	SH13/9
762	E.A3.73.299	PIPE, assembly, from hand pump to running coupling in suction line	1	L.56	C	SH13/10
763	E.A3.73.301	PIPE, assembly, from hand pump to running coupling in pressure line	1	DTD.323	C	SH13/11
28F/9649	AGS.1138/C	WASHER, jointing	4	-	C	SH13/12
	E.A3.73.209	PIPES, HYDRAULIC, FRAME 3 TO PRESSURE BULKHEAD, ASSEMBLY Spares for:-	-	-	-	
8336	E.A3.73.837	BRACKET, fairlead between frames 4-5	1	L.72	C	SH13/13
2165	EEAS.112/6	CLIP, pipe, single, 1/4" o/d.	1	L.16	C	SH13/14
2166	EEAS.112/8	CLIP, pipe, single, 3/8" o/d.	1	L.16	C	SH13/15
5260	EEAS.143/5H	CLIP, pipe, single, 3/16" o/d.	8	L.72	C	SH13/16
		Attaching parts for EEAS.112/6, EEAS.112/8 and EEAS.143/5H:-				
28D/1010658	A25/1B	Bolt, 4BA	1	-	C	SH13/17
28M/9403519	A27/BP	Nut, 4BA	1	-	C	SH13/18
5269	EEAS.21/2ERH	Washer, 'D' (as required)	1	-	C	SH13/19
28W/1010155	AGS.162/B	Washer, spring (as required)	1	-	C	
28F/9129085	AGS.1102/A	CONE, union body	2	-	C	SH13/20
28F/8011893	AGS.1102/B	CONE, union body	8	-	C	SH13/21
28F/9471001	AGS.1102/C	CONE, union body	4	-	C	SH13/22

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
28F/1036566	AGS.1111/A	CONE, union body, flanged Attaching parts for AGS.1111/A:-	1	—	C	SH13/23
28D/1010658	A25/1B	Bolt, 4BA	6	—	C	SH13/24
5853	EEAS.69/1	Gasket	1	Neo-K-Tex	C	SH13/26
28M/9403519	A27/BP	Nut, 4BA	6	—	C	SH13/26
28F/9152415	AGS.1115/1	Washer, plate	1	—	C	SH13/27
28W/1010155	AGS.162/B	Washer, spring	6	—	C	
28F/1013402	AGS.1111/B	CONE, union body, flanged Attaching parts for AGS.1111/B:-	4	—	C	SH13/28
28D/1008149	A25/2B	Bolt, 4BA	6	—	C	SH13/29
1128	EEAS.69/2	Gasket	1	Neo-K-Tex	C	SH13/30
28M/9403519	A27/BP	Nut, 4BA	6	—	C	SH13/31
28F/9128928	AGS.1115/2	Washer, plate	1	—	C	SH13/32
28W/1010155	AGS.162/B	Washer, spring	6	—	C	
28F/9714	AGS.1111/C	CONE, union body, flanged Attaching parts for AGS.1111/C:-	2	—	C	SH13/33
28D/9133011	A25/2C	Bolt, 2BA	6	—	C	SH13/34
1620	EEAS.69/4	Gasket	1	Neo-K-Tex	C	SH13/35
28M/9403520	A27/CP	Nut, 2BA	6	—	C	SH13/36
28F/9128929	AGS.1115/4	Washer, plate	1	—	C	SH13/37
28W/1007983	AGS.162/C	Washer, spring	6	—	C	
12930	E.A3.73.879	FAIRLEAD, at frames 3 and 4 Attaching parts for E.A3.73.879:-	2	—	C	SH13/38
28D/9140645	A25/10C	Bolt, 2BA	3	—	C	SH13/39
28W/9419475	SP.15/C	Washer, 2BA	3	—	C	
28W/9419404	SP.16/C	Washer, 2BA	3	—	C	
8334	E.A3.73.731	FAIRLEAD, between frames 7 and 8 Attaching parts for E.A3.73.731:-	1	—	C	SH13/40
28D/9133012	A25/3C	Bolt, 2BA	4	—	C	SH13/41
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	
8335	E.A3.73.683	FAIRLEAD, between frames 4 and 8 Attaching parts for E.A3.73.683:-	4	—	C	SH13/42
28D/9140644	A25/9C	Bolt, 2BA	2	—	C	SH13/43
28M/9403520	A27/CP	Nut, 2BA	2	—	C	SH13/44
28W/1007983	AGS.162/C	Washer, spring	2	—	C	
757	E.A3.73.181	PIPE, assembly, from coupling aft of frame 5 to coupling aft of frame 3, hand pump suction line	1	L.56	C	SH13/45
13018	E.A3.73.183	PIPE, assembly, from coupling aft of frame 3 to coupling aft of frame 5, hand pump pressure line	1	DTD.323	C	SH13/46
759	E.A3.73.185	PIPE, assembly, from coupling aft of frame 5 to coupling at pressure bulkhead, pressure return line	1	L.56	C	SH13/47
760	E.A3.73.187	PIPE, assembly, from coupling aft of frame 5 to coupling at pressure bulkhead, hand pump pressure line	1	DTD.323	C	SH13/48

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
1621	E.A3.73.283	PIPE, assembly, from coupling aft of frame 5 to coupling aft of frame 3, brake pressure return line	1	L.56	C	SH13/49
1623	E.A3.73.285	PIPE, assembly, from coupling aft of frame 3 to coupling aft of frame 5, port brake line	1	DTD.323	C	SH13/50
1624	E.A3.73.287	PIPE, assembly, from coupling aft of frame 3 to coupling aft of frame 5, brake supply line	1	DTD.323	C	SH13/51
1625	E.A3.73.289	PIPE, assembly, from coupling aft of frame 3 to coupling aft of frame 5, starboard brake line	1	DTD.323	C	SH13/52
1626	E.A3.73.291	PIPE, assembly, from coupling at pressure bulkhead to coupling aft of frame 5, brake pressure return line	1	L.56	C	SH13/53
1627	E.A3.73.293	PIPE, assembly, from coupling aft of frame 5 to coupling at pressure bulkhead, hand pump pressure line	1	DTD.323	C	SH13/54
1628	E.A3.73.295	PIPE, assembly, from coupling aft of frame 5 to coupling at pressure bulkhead, brake supply line	1	DTD.323	C	SH13/55
1629	E.A3.73.297	PIPE, assembly, from coupling aft of frame 5 to coupling at pressure bulkhead starboard brake line	1	L.56	C	SH13/56
5942	E.A3.73.781	PIPE, assembly, from coupling aft of frame 5 to coupling aft of frame 3	1	DTD.323	C	SH13/57
5943	E.A3.73.783	PIPE, assembly, from coupling aft of frame 5 to coupling at pressure bulkhead	1	DTD.323	C	SH13/58
980	EEAS.20/1DR	TAB, locking	4	L.72	C	SH13/59
981	EEAS.20/2DR	TAB, locking	10	L.72	C	SH13/60
	E.A3.04.10903	PIPES, HYDRAULIC, BETWEEN PRESSURE BULKHEAD AND FRAME 12A, ASSEMBLY Spares for:	-	-	-	SH14/1
5260	EEAS.143/5H	CLIP, pipe, single, 3/16" o/d	4	-	C	SH14/2
1880	EEAS.91/1	CLIP, pipe, double	2	-	C	SH14/3
1083	EEAS.35/12	CLIP, pipe, single, 1/4" o/d	3	-	C	SH14/4
28D/1010658	A25/1B	Attaching parts for EEAS.91/1 and EEAS.35/12:- Bolt, 4BA	1	-	C	SH14/5
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	-	C	SH14/6
5259	EEAS.21/2ERH	Washer, 'D'	1	-	C	SH14/7
28F/9476124	AGS.111B/C	CONE, tee	1	-	C	SH14/8
1520	E.A3.73.195	FAIRLEAD, frames 9 to 12A Attaching parts for E.A3.73.195:-	4	-	C	SH14/8
28D/1011019	A25/8C	Bolt, 2BA	1	-	C	SH14/10
28D/8140644	A25/9C	Bolt, 2BA	1	-	C	SH14/11
28M/1278190	AGS.2001/C/1	Nut, 2BA	2	-	C	
5259	EEAS.21/2ERH	Washer, 'D'	1	-	C	SH14/12

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
731	E.A3.73.237	PIPE, assembly, from pressure bulkhead to non-return valve at frame 12, hand pump pressure line	1	DTD.323	C	SH14/13
732	E.A3.73.239	PIPE, assembly, from pressure bulkhead to filter at frame 12A	1	L.56	C	SH14/14
1591	E.A3.73.241	PIPE, assembly, from reservoir tee under floor to filter in hand pump, suction line	1	L.56	C	SH14/15
734	E.A3.73.243	PIPE, assembly, from coupling aft of frame 12A to coupling at wheel well wall	1	DTD.323	C	SH14/16
735	E.A3.73.245	PIPE, assembly, from coupling aft of frame 12A to coupling at wheel well wall	1	DTD.323	C	SH14/17
1607	E.A3.73.247	PIPE, assembly, from pressure bulkhead to frame 12A, port brake	1	DTD.323	C	SH14/18
1630	E.A3.73.249	PIPE, assembly, from pressure bulkhead to coupling aft of frame 12A, supply line	1	DTD.323	C	SH14/19
1631	E.A3.73.251	PIPE, assembly, from pressure bulkhead to frame 12A, starboard brake	1	DTD.323	C	SH14/20
	E.A3.04.9555	PIPE, assembly, from tee piece under floor to connection in compartment floor	1	-	-	SH14/21
1633	E.A3.73.255	PIPE, assembly, from tee piece under floor to pressure bulkhead	1	L.56	C	SH14/22
839	E.A1.73.335	PIPE, assembly, from non-return valve forward of frame 12A to tee, hand pump pressure line	1	DTD.323	C	SH14/23
5928	E.A3.73.785	PIPE, assembly, from pressure bulkhead to frame 12A	1	DTD.323	C	SH14/24
	E.A3.73.217	PIPES, HYDRAULIC ON FRAME 12, ASSEMBLY Spares for:-	-	-	-	-
	E.A1.71.75	CLIP, pipe	1	-	-	SH14/25
5258	EEAS.143/6H	CLIP, pipe, single, 1/4" o/d. Attaching parts for E.A1 71.75 & EEAS 143/6H:-	12	-	C	SH14/26
28D/1010658	A25/1B	Bolt, 4BA	1	-	C	SH14/27
28M/1278189	AGS.2001/B/1	Nut, 4BA	1	-	C	SH14/28
5259	EEAS.21/2/ERH	Washer, spring	1	-	C	SH14/29
28F/8011809	AGS.1104/B	CONE, adaptor	1	-	C	SH14/30
28F/9710	AGS.1107/E	CONE, union reducing	1	-	C	SH14/31
28F/8011811	AGS.1118/B	CONE, tee	2	-	C	SH14/32
28F/8011883	AGS.1102/B	CONE, union body	1	-	C	SH14/33

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.73.219	MOUNTING, BRAKE ACCUMULATOR, ASSEMBLY Spares for:-	-	-	-	
	E.A3.73.281	CLIP, half Attaching parts for E.A3.73.281:-	2	-	-	SH14/34
28D/9133011	A25/2C	Bolt, 2BA	4	-	C	SH14/35
28M/1278189	AGS.2001/C/1	Nut, 2BA	4	-	C	SH14/36
28W/9419402	SP.13/C	Washer, 2BA	4	-	C	
1634	E.A3.73.227	PIPE, assembly, from tee on frame 12 to non-return valve, supply line	1	DTD.323	C	SH14/37
1635	E.A3.73.229	PIPE, assembly, from tee piece on frame 12 to coupling	1	DTD.323	C	SH14/38
1608	E.A3.73.231	PIPE, assembly, from non-return valve to tee piece	1	DTD.323	C	SH14/39
1609	E.A3.73.233	PIPE, assembly, from accumulator to tee piece	1	DTD.323	C	SH14/40
1610	E.A3.73.235	PIPE, assembly, from tee piece to accumulator	1	DTD.323	C	SH14/41
28F/8014021	AGS.1138/B	WASHER, jointing	1	-	C	SH14/42
28F/1202393	AGS.1138/C	WASHER, jointing	1	-	C	SH14/43
	E.H8.73.37	PIPES, HYDRAULIC IN NOSEWHEEL BAY, ASSEMBLY Spares for:-	-	-	-	SH15/1
20796	E.86.73.249	BRACKET, thermal relief valve Attaching parts for E.86.73.249:-	1	-	C	SH15/2
28D/1010658	A25/1B	Bolt, 4BA	2	-	C	SH15/3
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	-	C	SH15/4
4966	EEAS.143/5	CLIP, pipe, single, 3/16" o/d.	9	L.72	C	SH15/5
5517	EEAS.143/1H	CLIP, pipe	4	L.72	C	SH15/6
5518	EEAS.143/2H	CLIP, pipe	2	L.72	C	SH15/7
5K/1037287	AS.4525/3	CLIP, pipe	1	-	C	SH15/8
	E.A3.73.773	CLIP, pipe Attaching parts for EEAS.143/5, EEAS.143/1H, EEAS.143/2H, AS.4525/3 and E.A3.73.773:-	2	-	-	SH15/9
28D/1008147	A25/1A	Bolt, 6BA (as required)	1	-	C	SH15/10
28D/1010658	A25/1B	Bolt, 4BA (as required)	1	-	C	SH15/11
28D/9436920	A25/1C	Bolt, 2BA (as required)	1	-	C	SH15/12
28M/10286	AGS.2001/A/1	Nut, 6BA (as required)	1	-	C	SH15/13
28M/1278189	AGS.2001/B/1	Nut, 4BA (as required)	1	-	C	SH15/14
28M/1278190	AGS.2001/C/1	Nut, 2BA (as required)	1	-	C	SH15/15
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	-	C	SH15/16
5519	EEAS.21/3ERH	Washer, 'D' (as required)	1	-	C	SH15/17
829	E.A1.73.181	CLIP, mounting, thermal relief valve Attaching parts for E.A1.73.181:-	1	-	C	SH15/18
28D/9435710	A25/11C	Bolt, 2BA	2	-	C	SH15/19
28M/9403520	A27/CP	Nut, 2BA	2	-	C	SH15/20
28W/1007983	AGS.162/C	Washer, 2BA	2	-	C	

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
737	E.A3.73.179	CLIP, special, flexible pipe Attaching parts for E.A3.73.179:-	2	-	C	SH15/21
28D/1010030	A25/7C	Bolt, 2BA	2	-	C	SH15/22
28M/9403520	A27/CP	Nut, 2BA	2	-	C	SH15/23
28W/1007983	AGS.162/C	Washer, spring, 2BA	2	-	C	
739	E.A3.73.245	CLIP, special, flexible pipe Attaching parts for E.A3.73.245:-	2	-	C	SH15/24
28D/9140641	A25/14C	Bolt, 2BA	2	-	C	SH15/25
28M/9403520	A27/CP	Nut, 2BA	2	-	C	SH15/26
28W/1007983	AGS.162/C	Washer, spring, 2BA	2	-	C	
738	E.A1.73.213	CLIP, pipe, special Attaching parts for E.A1.73.213:-	1	-	C	SH15/27
	A28/1C	Bolt, 2BA	1	-	C	SH15/28
28M/13324	A29/CP	Nut, 2BA	1	-	C	SH15/29
28W/1007983	AGS.162/C	Washer, spring	1	-	C	
	E.A3.73.775	CLIP, thermal relief valve Attaching parts for E.A3.73.775:-	1	-	-	SH15/30
28D/9436920	A25/1C	Bolt, 2BA	2	-	C	SH15/31
28F/9440881	AGS.1118/A	CONE, tee	1	-	C	SH15/32
28F/9011811	AGS.1118/B	CONE, tee	2	-	C	SH15/33
28F/9463543	AGS.1120/1	CONE, tee	2	-	C	SH15/34
28F/1013402	AGS.1111/B	CONE, union body, flanged Attaching parts for AGS.1111/B:-	2	-	C	SH15/35
28D/1010658	A25/1B	Bolt, 4BA	3	-	C	SH15/36
28M/1278189	AGS.2001/B/1	Nut, 4BA	3	-	C	SH15/37
28F/9128928	AGS.1115/2	Washer, plate	1	-	C	SH15/38
28F/1013743	AGS.1167/B	ELBOW, 90°	2	-	C	SH15/39
	E.H8.73.39	FAIRLEAD Attaching parts for E.H8.73.39:-	1	-	C	SH15/40
28D/1008149	A25/2B	Bolt, 4BA	4	-	C	SH15/41
28M/9403519	A27/BP	Nut, 4BA	4	-	C	SH15/42
28W/1010156	AGS.162/B	Washer, spring	4	-	C	
750	E.A3.73.741	PIPE, assembly, from wheel well running coupling to sequence valve and nosewheel undercarriage jack tee piece 'down' line	1	DTD.323	C	SH15/43
749	E.A3.73.743	PIPE, assembly, from wheel well running coupling to sequence valve and nosewheel undercarriage jack tee piece, 'up' line	1	DTD.323	C	SH15/44
740	E.A3.73.745	PIPE, assembly, from nosewheel 'up' supply line tee to sequence valve	1	DTD.323	C	SH15/45
741	E.A3.73.747	PIPE, assembly, from sequence valve to thermal relief valve and nosewheel undercarriage jack tee, 'up' line	1	DTD.323	C	SH15/46
751	E.A3.73.749	PIPE, assembly, from thermal relief valve and sequence valve tee, to nosewheel undercarriage jack 'up' line	1	DTD.323	C	SH15/47

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
752	E.A3.73.753	PIPE, assembly, from nosewheel undercarriage jack supply tee to sequence valve, undercarriage 'down' line	1	DTD.323	C	SH15/48
753	E.A3.73.835	PIPE, assembly, from supply tee to nosewheel undercarriage door jack flexible connection 'down' line	1	DTD.323	C	SH15/49
743	E.A3.73.757	PIPE, assembly, from sequence valve to nosewheel door jack and thermal relief valve tee, doors 'open' line	1	DTD.323	C	SH15/50
745	E.A3.73.761	PIPE, assembly, from sequence valve and nosewheel door jack tee to thermal relief valve, 'open' line	1	DTD.323	C	SH15/51
4512	E.A3.73.667	PIPE, assembly, from thermal relief valve to tee piece	1	DTD.323	C	SH15/52
4513	E.A3.73.669	PIPE, assembly, from relief valve tee at wheel well wall to hydraulic reservoir tee forward of frame 12, return line	1	DTD.323	C	SH15/53
4514	E.A3.73.671	PIPE, assembly, from nosewheel door jack thermal relief valve to nosewheel jack thermal relief valve tee	1	DTD.323	C	SH15/54
4511	E.A3.73.673	PIPE, assembly, from sequence valve and nosewheel jack tee to thermal relief valve nosewheel 'up' line	1	DTD.323	C	SH15/55
4495	E.A3.73.769	PIPE, assembly, from supply line and sequence valve tee to nosewheel undercarriage door jack flexible coupling, doors 'closed' line	1	DTD.323	C	SH15/56
5516	E.A3.73.771	PIPE, assembly, from sequence valve and thermal relief valve tee to nosewheel door jack flexible connection 'open' line	1	DTD.323	C	SH15/57
981	EEAS.20/2DR	TAB, locking	4	L.72	C	SH15/58
28F/1010341	AGS.1106/B	UNION, body	4	—	C	SH15/59
	E.H8.73.23	PIPES, HYDRAULIC, FROM RESERVOIR TO FRAME 12 AND PRESSURE BULKHEAD, ASSEMBLY	—	—	—	SH16/1
	E.G9.73.75	Spares for: ADAPTOR, special, bulkhead, 1/2"	1	—	—	SH16/2
28D/9438920	A25/1C	Attaching parts for E.G9.73.75:- Bolt, 2BA	6	—	C	SH16/3
28M/1006473	A27/CT	Nut, 2BA	6	—	C	SH16/4
	E.G9.73.107	Washer, special	1	—	C	SH16/5
28F/10603	AGS.1115/6	Washer, plate	1	—	C	SH16/6
28W/1007983	AGS.162/C	Washer, spring	6	—	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.G9.73.77	ADAPTOR, special, bulkhead, 1/2"	1	—	—	SH16/7
28D/9436920	A25/1C	Attaching parts for E.G9.73.77:-	6	—	C	SH16/8
28M/1006473	A27/CT	Bolt, 2BA	6	—	C	SH16/9
28F/	AGS.1115/8	Nut, 2BA	1	—	C	SH16/10
28W/1007983	AGS.162/C	Washer, plate	6	—	C	
		Washer, spring				
28F/	AGS.1129/C	BODY, banjo	1	—	C	SH16/11
28F/9423243	AGS.1132/F	BODY, banjo	1	—	C	SH16/12
28F/9423229	AGS.1135/C	BOLT, banjo	1	—	C	SH16/13
28F/9423233	AGS.1135/F	BOLT, banjo	1	—	C	SH16/14
9016	E.A2.73.507	BOX, oil collector (E.A3.73.47)	1	—	B/MR	SH16/15
5260	EEAS.143/5H	CLIP, pipe, single, 3/16" o/d. (E.A3.73.151)	6	—	C	SH16/16
		Attaching parts for EEAS.143/5H:-				
28D/1010858	A25/1B	Bolt, 4BA (as required)	1	—	C	SH16/17
28D/9419452	A25/3H	Bolt, 4BA (as required)	1	—	C	SH16/18
28M/1278189	AGS.2001/8/1	Nut, 4BA (as required)	1	—	C	SH16/19
28W/9419465	SP.13/B	Washer, 4BA	1	—	C	
5269	EEAS.21/2ERH	Washer, 'D'	1	—	C	SH16/20
28E/1059358	AGS.2081/4	CLIP, pipe, 1/4" i/d.	10	—	C	SH16/21
28E/1059369	AGS.2081/6	CLIP, pipe, 3/8" i/d.	7	—	C	SH16/22
28E/1059358	AGS.2081/8	CLIP, pipe, 1/2" i/d.	1	—	C	SH16/23
28E/1059360	AGS.2081/12	CLIP, pipe, 1/2" i/d.	6	—	C	SH16/24
28E/4062101	AGS.2081/16	CLIP, pipe, 1" i/d.	1	—	C	SH16/25
		Attaching parts for AGS.2081/4, AGS.2081/6, AGS.2081/8, AGS.2081/12 and AGS.2081/16:-				
28D/9436920	A25/1C	Bolt, 2BA (as required)	1	—	C	SH16/26
28D/9133011	A25/2C	Bolt, 2BA (as required)	1	—	C	SH16/27
28M/1278190	AGS.2001/C/1	Nut, 2BA (as required)	1	—	C	SH16/28
28W/9419476	SP.15/C	Washer, 2BA (as required)	1	—	C	
	EEAS.237/7AH	Washer, 'D' (as required)	1	—	C	SH16/29
22371	EEAS.21/9/2ERH	Washer, 'D' (as required)	1	—	C	SH16/30
28F/9714	AGS.1111/C	CONE, union body, flanged, bulkhead	1	—	C	SH16/31
		Attaching parts for AGS.1111/C:-				
28D/9436920	A25/1C	Bolt, 2BA	6	—	C	SH16/32
28M/1006473	A27/CT	Nut, 2BA	6	—	C	SH16/33
28F/9128929	AGS.1115/4	Washer, plate	1	—	C	SH16/34
28W/1007983	AGS.162/C	Washer, spring	6	—	C	
28F/1010171	AGS.1123/B	CONE, 4-way	1	—	C	SH16/35
28F/1014970	AGS.1104/A	CONE, adaptor	1	—	C	SH16/36
28F/8011808	AGS.1104/D	CONE, adaptor	1	—	C	SH16/37
	E.A3.73.313	ELBOW, assembly (E.A3.73.151)	1	—	—	SH16/38
	E.A1.73.225	FAIRLEAD	1	—	—	SH16/39
		Attaching parts for E.A1.73.225:-				
28D/9133011	A25/2C	Bolt, 2BA	4	—	C	SH16/40
28M/9403620	A27/CP	Nut, 2BA	4	—	C	SH16/41
28W/1007983	AGS.162/C	Washer, spring	4	—	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A1.73.239	FILTER, CABIN BLOWER NON-RETURN VALVE, ASSEMBLY (E.A3.73.47) Consisting of:-	1	—	C	SH16/42
	E.A1.73.241	BODY, filter	1	DTD.683	—	SH16/43
28N/2001711	AGS.2030/6	CIRCLIP, internal	1	—	C	SH16/44
5036	E.A1.73.243	GAUZE, 200 mesh	1	Brass	C	SH16/45
28F/1014650	AGS.1170/B	NIPPLE	1	—	C	SH16/46
28F/4051760	AGS.1170/C	NIPPLE	1	—	C	SH16/47
28F/19141	AGS.1170/D	NIPPLE	1	—	C	SH16/48
28F/8011897	AGS.1142/F	NIPPLE	3	—	C	SH16/49
	E.H8.73.29	PIPE, assembly, from special adaptor to running coupling	1	—	—	SH16/50
	E.H8.73.31	PIPE, assembly, from running coupling to reservoir	1	—	—	SH16/51
	E.G9.73.85	PIPE, assembly, from reservoir to running coupling	1	—	—	SH16/52
	E.G9.73.87	PIPE, assembly, from running coupling to special adaptor	1	—	—	SH16/53
	E.G9.73.89	PIPE, assembly, from reservoir to running coupling at frame 9	1	—	—	SH16/54
	E.H8.73.35	PIPE, assembly, from running coupling at frame 9 to bulkhead coupling in floor	1	—	—	SH16/55
	E.G9.73.93	PIPE, assembly, from reservoir to pressure relief valve	1	—	—	SH16/56
	E.G9.73.95	PIPE, assembly, from pressure relief valve to 4-way connector	1	—	—	SH16/57
	E.G9.73.97	PIPE, assembly, from reservoir to 4-way connector	1	—	—	SH16/58
	E.G9.73.99	PIPE, assembly, from reservoir to 4-way connector	1	—	—	SH16/59
	E.G9.73.101	PIPE, assembly, from reservoir to 4-way connector	1	—	—	SH16/60
	E.G9.73.103	PIPE, assembly, from running coupling to oil collector box	1	—	—	SH16/61
	E.H8.73.33	PIPE, assembly, from banjo at special adaptor	1	—	—	SH16/62
	E.A3.73.737	PIPE, assembly, from reservoir to filter (E.A3.73.151)	1	—	—	SH16/63
28F/9428452	AGS.1186/A	SEAL, bonded	1	—	C	SH16/64
28F/9429532	AGS.1186/C	SEAL, bonded	2	—	C	SH16/65
28F/9428455	AGS.1186/D	SEAL, bonded	1	—	C	SH16/66
28F/9428456	AGS.1186/F	SEAL, bonded	3	—	C	SH16/67
28F/1051097	AGS.1114/A	SLEEVE, screwed, flanged (E.A3.73.47) Attaching parts for AGS.1114/A:-	1	—	C	SH16/68
28D/1008149	A25/2B	Bolt, 4BA	6	—	C	SH16/69
28M/1006504	A27/BT	Nut, 4BA	6	—	C	SH16/70
1128	EEAS.69/2	Gasket	1	Neo-K-Tex	C	SH16/71
28F/9128928	AGS.1115/2	Washer, plate	1	—	C	SH16/72
28F/1202394	AGS.1138/A	Washer, jointing	1	—	C	SH16/73
28W/1010155	AGS.162/B	Washer, spring	6	—	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mtrl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
981	EEAS.20/DR E.G9.73.47	TAB, locking TRAY, DRIP, ASSEMBLY Spares for:-	4 —	— —	C —	SH16/74
	E.G9.73.49	TRAY Attaching parts for E.G9.73.49:-	1	—	—	SH16/75
28D/9133011	A25/2C	Bolt, 2BA	4	—	C	SH16/76
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	
28F/1011798	AGS.1103/F	UNION, body	1	—	C	SH16/77
28F/9439107	AGS.1105/F	UNION, adaptor	1	—	C	SH16/78
28F/9439163	AGS.1109/K	UNION, reducing (E.A3.73.151)	1	—	C	SH16/79
28F/8012021	AGS.1138/B	WASHER, jointing (E.A3.73.151)	1	—	C	SH16/80
	E.A3.73.37	RESERVOIR, HYDRAULIC, MOUNTING, ASSEMBLY Spares for:-				SH17/1
28F/11170	AGS.1129/D	BODY, banjo	1	—	C	SH17/2
28F/9423231	AGS.1135/D	BOLT, banjo	1	—	C	SH17/3
28F/8011809	AGS.1104/B	CONE, adaptor	1	—	C	SH17/4
2447	E.A1.73.49	COUPLING, pipe	1	—	C	SH17/5
6850	E.A3.73.607	EXTENSION, HYDRAULIC RESERVOIR FILLER, ASSEMBLY Spares for:-	1	—	B	SH17/6
28F/8011809	AGS.1104/B	CONE, adaptor	1	—	C	SH17/7
9019	E.A3.73.29	EXTENSION, filler	1	—	C	SH17/8
9018	E.A3.73.605	GUARD, splash Attaching parts for E.A3.73.605:-	1	—	C	SH17/9
28D/9133012	A25/3C	Bolt, 2BA	1	—	C	SH17/10
2125	E.A3.73.603	Circlip, special, 5.2" dia.	1	L.72	C	SH17/11
28M/1278190	AGS.2001/C/1	Nut, 2BA	1	—	C	SH17/12
2123	E.A3.73.609	Strip, rubber	1	Neoprene	C	SH17/13
5502	EEAS.21/2ER	Washer, 'D'	2	L.72	C	SH17/14
28F/8041021	AGS.1138/B	WASHER, jointing Attaching parts for E.A3.73.607:-	1	—	C	SH17/15
28D/16045	A61/1B	Bolt, 4BA	8	—	C	SH17/16
764	E.A1.73.41	Gasket, filler neck	1	Neo-K-Tex	C	SH17/17
28M/9129529	A29/BP	Nut, 4BA	8	—	C	SH17/18
28W/9416642	SP.47/B	Washer, spring	8	—	C	
12905	E.B6.73.351	RESERVOIR, HYDRAULIC, ASSEMBLY Spares for:-	1	—	A	SH17/19
22234	E.B6.73.347	ADAPTOR, filler cap Attaching parts for E.B6.73.347:-	1	S.95 or S.96	C	SH17/20
28S/9998146	A35/Z10	Screw, 8BA	4	—	C	SH17/21
28N/3720	AGS.607	CAP, filler, complete	1	DTD.424	C	SH17/22
1886	E.A1.73.381	FILTER, oil pressure	1	—	C	SH17/23
22235	E.B6.73.349	GASKET, filler neck	1	Neo-K-Tex	C	SH17/24
28U/4054	SP.8Y/4	ROD, tension, strap mounting	4	L.72	C	SH17/25
2124	E.A3.73.611	SEAL, rubber	1	Neo-K-Tex	C	SH17/26
766	E.A1.73.39	STRAP, reservoir mounting Attaching parts for E.A1.73.39:-	4	L.72	C	SH17/27
28P/1012221	SP.4Y/B12	Pin, shackle, 3/16" dia.	4	—	C	SH17/28
28W/9419475	SP.15/C	Washer, 2BA	4	—	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
981	EEAS.20/2DR	TAB, locking	1	L.72	C	SH17/29
767	E.A1.70.21	TRUNNION, R.H. thread	2	MS	C	SH17/30
788	E.A1.70.22	TRUNNION, L.H. thread	2	MS	C	SH17/31
28F/9439107	AGS.1105/F	UNION, adaptor	1	—	C	SH17/32
28F/8014021	AGS.1138/B	WASHER, jointing	2	—	C	SH17/33
28F/1200995	AGS.1138/D	WASHER, jointing	2	—	C	SH17/34
28F/9129566	AGS.1138/F	WASHER, jointing	1	—	C	SH17/36

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.H8.73.9	HYDRAULIC EQUIPMENT IN PORT WING, ASSEMBLY	—	—	—	
	E.H8.73.1	Spares for:- HYDRAULIC EQUIPMENT CIRCUIT ASSEMBLY Consisting of:-	—	—	—	SH18/1
	LOCKHEED AVA.50E	COUPLING, AVERY, ASSEMBLY Consisting of:-	1	—	—	SH18/2
27BA/8751	AVA.55E	FLANGE, half	1	—	B	
27BA/8769	AVA.62E	NUT, tube	1	—	B	
27BA/8744	AVA.54E	UNION, half	1	—	B	
		Attaching parts for AVA.50E (E.B6.73.395):-				
28D/1008149	A26/28	Bolt, 4 BA	6	—	C	SH18/3
28M/1006504	A27/8T	Nut, 4 BA	6	—	C	SH18/4
28W/6315	AGS.585/B	Washer, spring	6	—	C	
	LOCKHEED AVA.52C	COUPLING, AVERY, ASSEMBLY Consisting of:-	1	—	—	SH18/5
27BA/8760	AVA.57C	COUPLING, half union	1	—	B	
27BA/8762	AVA.58C	FLANGE, half	1	—	B	
27BA/8767	AVA.62C	NUT, tube	1	—	B	
		Attaching parts for AVA.52C (E.B6.73.395):-				
28D/1008149	A26/28	Bolt, 4 BA	6	—	C	SH18/6
28M/1006504	A27/8T	Nut, 4 BA	6	—	C	SH18/7
28W/6315	AGS.585/B	Washer, spring	6	—	C	
	DOWTY					
27Q/1833	0.7017Y.CO1	JACK, operating, main undercarriage	1	—	A	SH18/8
	DOWTY					
27Q/1832	0.7018Y.CO1	JACK, operating, flap	2	—	A	SH18/9
	DOWTY					
27Q/1836	0.8246.CO1	JACK, operating, main undercarriage door	1	—	A	SH18/10
18503	E.B6.73.221	JACK, FOR AIR BRAKE, ASSEMBLY Consisting of:-	1	—	A	
	DOWTY					
27Q/1446726	1.03035.001 or	JACK, assembly	1	—	A	SH18/11
27Q/1446725	1.03036.001	JACK, assembly	1	—	A	
1642	E.A3.73.303	NUT, special	1	S.11	C	SH18/12
1641	E.A3.73.305	WASHER, tab	1	—	C	SH18/13

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
27VA/4028	DUNLOP 2/W3/101/8/ 8/63	. . PIPE, flexible, maxaret unit	1	—	B	SH18/14
27VA/4029	DUNLOP 2/W3/101/8/ 8/30	. . PIPE, flexible, maxaret unit	1	—	B	SH18/15
27VA/3617	DUNLOP 4/W3/101/8/ 8/14	. . PIPE, flexible, undercarriage door, 'open'	1	—	B	SH18/16
27VA/3618	DUNLOP 4/W3/101/8/ 8/18	. . PIPE, flexible, undercarriage door 'closed'	1	—	B	SH18/17
27VA/3621	DUNLOP 4/W3/101/8/ 8/63	. . PIPE, flexible, hydraulic brake	1	—	B	SH18/18
27VA/4287	DUNLOP 4/W3/101/8/ 10/28.5	. . PIPE, flexible, hydraulic brake	1	—	B	SH18/19
27VA/3624	DUNLOP 6/W3/101/8/ 8/18	. . PIPE, flexible, undercarriage 'up'	1	—	B	SH18/20
27VA/3625	DUNLOP 4/W3/101/8/ 8/25	. . PIPE, flexible, undercarriage 'down'	1	—	B	SH18/21
27VA/5302	DUNLOP 6/W3/101/8/ 10/42	. . PIPE, flexible, engine driven pump, delivery line	1	—	B	SH18/22
27VA/3659	DUNLOP 10/W3/121/8/ 10/40	. . PIPE, flexible, engine driven pump, suction line	1	—	B	SH18/23
37J/266	LOCKHEED AIR.68000	. . PUMP, engine driven	1	—	A	SH18/24
27Q/1216	DOWTY 4803Y.MKE	. . VALVE, thermal relief	2	—	A	SH18/25
27Q/1961	DOWTY 8697Y.MKA	. . VALVE, thermal relief	1	—	A	SH18/26
27Q/775	DOWTY 401Y.MKK	. . VALVE, sequence, undercarriage door	1	—	A	SH18/27
27Q/776	DOWTY 401Y.MKL	. . VALVE, sequence, undercarriage	1	—	A	SH18/28

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
27Q/70289	DOWTY 0.3371Y.B0.6	VALVE, restrictor	1	—	A	SH18/29
27Q/1162	DOWTY 6790Y.MKA	VALVE, transfer, undercarriage jack	1	—	A	SH18/30
27Q/702191	DOWTY 06209Y.B0.1	VALVE, restrictor, undercarriage door jack	1	—	A	SH18/31
28Y/15486	H.P. COMPONENTS GYP.A58	VALVE, charging	1	—	B	SH18/32
	E.H8.73.21	PIPES, HYDRAULIC, ON MAIN SPAR ASSEMBLY Spare for:-	—	—	—	SH19/1
9787	E.A1.73.107	BRACKET	1	—	C	SH19/2
16500	E.A6.73.61	BRACKET	1	—	C	SH19/3
9772	E.A3.73.789	BRACKET	1	—	C	SH19/4
16498	E.A3.73.793	BRACKET	1	—	C	SH19/5
		Attaching parts for E.A1.73.107, E.A6.73.61, E.A3.73.789 and E.A3.73.793:-				
28D/9436920	A25/1C	Bolt, 2 BA	4	—	C	SH19/6
28M/9403520	A27/CP	Nut, 2 BA	4	—	C	SH19/7
28W/9416643	SP.47/C	Washer, spring	4	—	C	
16502	E.A6.73.79	BRACKET, pipe, flexible Attaching parts for E.A6.73.79:-	1	—	C	SH19/8
28S/9992525	A32/B12	Screw, 4 BA	4	—	C	SH19/9
28W/9416642	SP.47/B	Washer, spring	4	—	C	
829	E.A1.73.181	CLIP, thermal relief valves and flexible pipes Attaching parts for E.A1.73.181:-	4	L.72	C	SH19/10
28D/9140645	A25/10C	Bolt, 2 BA (as required)	2	—	C	SH19/11
28D/9436710	A25/11C	Bolt, 2 BA (as required)	2	—	C	SH19/12
28M/1278190	AGS.2001/C1	Nut, 2 BA (as required)	2	—	C	SH19/13
28M/9403520	A27/CP	Nut, 2 BA (as required)	2	—	C	SH19/14
28W/9419402	SP13/C	Washer, 2 BA (as required)	2	—	C	
28W/9416643	SP.47/C	Washer, spring (as required)	2	—	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
5528	E.A3.73.797	CLIP, transfer valve	1	—	C	SH19/15
28D/9140647	A25/14C	Attaching parts for E.A3.73.797:- Bolt, 2 BA	2	—	C	SH19/16
28E/18410	AS.2081/3	CLIP, 3/16" i/d	4	—	C	SH19/17
28E/18233	AS.2081/4	CLIP, 1/2" i/d	1	—	C	SH19/18
28E/17185	AS.2081/6	CLIP, 3/8" i/d	7	—	C	SH19/19
7136	EEAS.143/21	CLIP, pipe, single, 1/2" o/d	3	L.72	C	SH19/20
6068	EEAS.143/24	CLIP, pipe, single 1/2" o/d Attaching parts for AS.2081/3, AS.2081/4, AS.2081/6, EEAS.143/21, and EEAS.143/24:-	3	L.72	C	SH19/21
28D/9436920	A25/1C	Bolt, 2 BA (as required)	1	—	C	SH19/22
28D/9133011	A25/2C	Bolt, 2 BA (as required)	1	—	C	SH19/23
28D/9133012	A25/3C	Bolt, 2 BA (as required)	1	—	C	SH19/24
28D/1011019	A25/8C	Bolt, 2 BA (as required)	1	—	C	SH19/25
28M/9403520	A27/CP	Nut, 2 BA	1	—	C	SH19/26
28W/9419402	SP13/C	Washer, 2 BA (as required)	1	—	C	
28W/9416643	SP.47/C	Washer, spring (as required)	1	—	C	
12929	EEAS.21/9ER	Washer, 'D' (as required)	1	—	C	SH19/27
6062	E.A1.70.73	Washer, special (as required)	1	—	C	SH19/28
806	E.A1.73.177	CONE, tee, special	1	DTD.683	C	SH19/29
28F/9129085	AGS.1102/A	CONE, union body	1	—	C	SH19/30
28F/8011883	AGS.1102/B	CONE, union body	1	—	C	SH19/31
28F/9475460	AGS.1123/A	CONE, 4 way	1	—	C	SH19/32
28F/9508223	AGS.1123/C	CONE, 4-way	1	—	C	SH19/33
9789	E.A1.73.109	GUARD, pipe, flexible Attaching parts for E.A1.73.109:-	1	—	C	SH19/34
28D/15907	A61/2	Bolt, 2 BA	4	—	C	SH19/35
28M/13324	A29/CP	Nut, 2 BA	4	—	C	SH19/36
28W/9416643	SP.47/C	Washer, spring	4	—	C	
923	E.A3.73.537	PIPE, assembly, from sequence 4-way cone to union body undercarriage jack 'down' line	1	DTD.323	C	SH19/37
2009	E.A3.73.543	PIPE, assembly, from sequence 4-way cone to sequence valve connection on rib 3, wheel well wall bay undercarriage 'open' line	1	DTD.323	C	SH19/38

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
2011	E.A3.73.549	PIPE, assembly, from union body on rib B, to union body inboard rib A, brake pressure line	1	OTD.323	C	SH19/39
4522	E.A3.73.651	PIPE, assembly, from undercarriage and door jacks, thermal relief valve to 4 way cone, return line	1	OTD.323	C	SH19/40
5529	E.A3.73.729	PIPE, assembly, from 4 way cone to union cone inboard rib A, return line	1	L.56	C	SH19/41
41175	E.A3.73.5135	PIPE, assembly, from union cone inboard rib A, to transfer valve undercarriage jack, 'up' line	1	OTD.323	C	SH19/42
41177	E.A3.73.5139	PIPE, assembly, from thermal relief valve to tee-piece	1	OTD.323	C	SH19/43
41173	E.A3.73.5133	PIPE, assembly, from thermal relief valve to 4 way piece	1	OTD.323	C	SH19/44
41179	E.A3.73.5141	PIPE, assembly, from thermal relief valve to 4 way piece	1	OTD.323	C	SH19/45
5531	E.A3.73.803	PIPE, assembly, from thermal relief valve tee to transfer valve undercarriage jack 'up' line	1	OTD.323	C	SH19/46
5532	E.A3.73.807	PIPE, assembly, from transfer valve to union body at rib C, undercarriage jack 'up' line	1	OTD.323	C	SH19/47
13147	E.A3.73.887	PIPE, assembly, from union body on rib B, to 4 way cone maxaret unit return line	1	OTD.323	C	SH19/48
9790	E.A1.73.297	PLATE, back (used with E.A1.73.109)	1	—	C	SH19/49
28F/9439768	AGS.1108/C	UNION, body	2	—	C	SH19/50
28F/9504828	AGS.1147/A	UNION, body	1	—	C	SH19/51
28F/9453689	AGS.1148/A	Attaching parts for AGS.1147/A	1	—	C	SH19/52
28F/9157985	AGS.1149/1	Nut	1	—	C	SH19/53
28F/9130662	AGS.1147/B	Washer, plate	2	—	C	SH19/54
28F/1010558	AGS.1148/B	UNION, body	1	—	C	SH19/55
28F/9130664	AGS.1149/2	Attaching parts for AGS.1147/B:	1	—	C	SH19/56
28F/9489760	AGS.1125/4	Nut	2	—	C	SH19/57
		Washer, plate	1	—	C	SH19/58
		UNION, piece, 4 way	1	—	C	SH19/59

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.F. L.M.	
	E.A6.73.41	PIPES, HYDRAULIC ON FIXED FAIRING, ASSEMBLY	—	—	—	SH20/1
		Spares for:-				
1875	E.A3.73.601	ADAPTOR, special	1	—	C	SH20/2
17735	E.A6.73.277	BRACKET, for flexible connections	1	L.72	C	SH20/3
		Attaching parts for E.A6.73.277:-				
6970	E.A6.73.93	Washer	2	—	C	SH20/4
4965	EEAS.143/6	CLIP, pipe, single 3/16" o/d	1	L.72	C	SH20/5
5542	EEAS.143/6	CLIP, pipe, single, 1/2" o/d	1	L.72	C	SH20/6
7146	EEAS.143/21	CLIP, pipe, single, 1/2" o/d	1	L.72	C	SH20/7
6068	EEAS.143/24	CLIP, pipe, single, 1/2" o/d	1	L.72	C	SH20/8
		Attaching parts for EEAS.143/5, EEAS.143/6, EEAS.143/21 and EEAS.143/24:-				
28D/1010658	A25/18	Bolt, 4 BA (as required)	1	—	C	SH20/9
28D/9133011	A25/2C	Bolt, 2 BA (as required)	1	—	C	SH20/10
28M/9403519	A27/BP	Nut, 4 BA (as required)	1	—	C	SH20/11
28W/1010155	AGS.162/B	Washer, spring (as required)	1	—	C	
28W/9419404	SP.16/C	Washer, 2 BA (as required)	1	—	C	
28F/8011809	AGS.1104/B	CONE, adaptor	1	—	C	SH20/12
5967	E.A6.73.113	PIPE, assembly, from union body at brake flexible pipe bracket to adaptor cone at charging valve pressure line	1	DTD.323	C	SH20/13
5968	E.A6.73.115	PIPE, assembly, from union body at brake flexible pipe bracket to union body at charging valve bracket, maxaret unit, return line	1	DTD.323	C	SH20/14
1876	E.A3.73.599	TEE, piece	1	DTD.683	C	SH20/15
28F/9504828	AGS.1147/A	UNION, body	2	—	C	SH20/16
		Attaching parts for AGS.1147/A:-				
28F/9453689	AGS.1148/A	Nut	1	—	C	SH20/17
28F/9157985	AGS.1149/1	Washer, plate	2	—	C	SH20/18
28F/9130662	AGS.1147/B	UNION, body	1	—	C	SH20/19
		Attaching parts for AGS.1147/B:-				
28F/1010558	AGS.1148/B	Nut	1	—	C	SH20/20
28F/9130664	AGS.1149/2	Washer, plate	2	—	C	SH20/21

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.N. L.M.	
		1 2 3 4 5 6				
25585	E.A6.73.275	WASHER, special	2	—	C	SH20/22
28F/8014021	AGS.1138/B	WASHER, jointing	3	—	C	SH20/23
	E.A1.73.91	PIPES, HYDRAULIC, FLAP JACK, ASSEMBLY	—	—	—	SH21/1
		Spares for:-				
1890	EEAS.91/1	CLIP, pipe, double, 1/2" o/d	11	L.16	C	SH21/2
1242	E.A3.73.773	CLIP, pipe, double, 1/2" o/d	3	L.72	C	SH21/3
6258	EEAS.143/6H	CLIP, pipe, single, 1/2" o/d	4	L.72	C	SH21/4
		Attaching parts for EEAS.91/1, E.A3.73.773 and EEAS.143/6H:-				
28D/1010658	A25/18	Bolt, 4 BA (as required)	1	—	C	SH21/5
28D/1011008	A25/5B	Bolt, 4 BA (as required)	1	—	C	SH21/6
28M/9403519	A27/8P	Nut, 4 BA (as required)	1	—	C	SH21/7
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	—	C	SH21/8
	AS.2907/4/04	Tube, distance (as required)	1	—	C	SH21/9
6259	EEAS.21/2/ERH	Washer, special (as required)	1	—	C	SH21/10
28W/9419465	SP.13/B	Washer, 4 BA (as required)	1	—	C	
28W/1010155	AGS.162/B	Washer, spring (as required)	1	—	C	
28F/8011811	AGS.1118/B	CONE, tee	2	—	C	SH21/11
28F/8011883	AGS.1102/B	CONE, union body	6	—	C	SH21/12
859	E.A1.73.93	FAIRLEAD, at inboard rib 7	1	LFS.21	C	SH21/13
		Attaching parts for E.A1.73.93:-				
28D/1011013	A25/13B	Bolt, 4 BA	2	—	C	SH21/14
28M/9403519	A27/8P	Nut, 4 BA	2	—	C	SH21/15
28W/1010155	AGS.162/B	Washer, spring	2	—	C	
860	E.A1.73.91A	PIPE, assembly, from union cone between inboard wing ribs 1 and 2 to inboard flap jack tee cone, 'down' line	1	DTD.323	C	SH21/16
861	E.A1.73.91B	PIPE, assembly, from union cone between inboard wing ribs 1 and 2 to inboard flap jack tee cone 'up' line	1	DTD.323	C	SH21/17
862	E.A1.73.91C	PIPE, assembly, from tee to inboard flap jack, 'down' line	1	DTD.323	C	SH21/18
863	E.A1.73.91D	PIPE, assembly, from tee to inboard flap jack 'up' line	1	DTD.323	C	SH21/19

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
864	E.A1.73.91E	PIPE, assembly, from inboard flap jack tee cone to union cone at inboard wing rib 7, 'down' line	1	DTD.323	C	SH21/20
865	E.A1.73.91F	PIPE, assembly, from inboard flap jack tee cone to union cone at inboard wing rib 7, 'up' line	1	DTD.323	C	SH21/21
866	E.A1.73.91G	PIPE, assembly, from union cone at inboard wing rib 7 to union cone at outboard wing rib 2A, 'up' line	1	DTD.323	C	SH21/22
867	E.A1.73.91H	PIPE, assembly, from union cone at inboard wing rib 7 to union cone at outboard wing rib 2A, 'down' line	1	DTD.323	C	SH21/23
868	E.A1.73.91J	PIPE, assembly, from union cone at outboard wing rib 2A to outboard flap jack 'up' line	1	DTD.323	C	SH21/24
869	E.A1.73.91K	PIPE, assembly, from union cone at outboard wing rib 2A to outboard flap jack, 'down' line	1	DTD.323	C	SH21/25
	E.A1.73.281	PIPES, HYDRAULIC, FOR AIR BRAKE, CENTRE WING, ASSEMBLY Spares for:-	—	—	—	SH22/1
5258	EEAS.143/6H	CLIP, pipe, single 1/2" o/d Attaching parts for EEAS.143/6H:-	14	L.72	C	SH22/2
28D/1010658	A25/18	Bolt, 4 BA	1	—	C	SH22/3
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	—	C	SH22/4
5259	EEAS.21/2/ERH	Washer, 'D'	1	—	C	SH22/5
28W/1010155	AGS.162/B	Washer, spring	1	—	C	
28F/8011883	AGS.1102/B	CONE, union body	4	—	C	SH22/6
931	E.A1.73.281A	PIPE, assembly, between fuselage and union cone at centre wing ribs 3 and 4 'in' line	1	DTD.323	C	SH22/7
933	E.A1.73.281B	PIPE, assembly, between fuselage and cone at centre wing ribs 3 and 4, 'out' line	1	DTD.323	C	SH22/8

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
1636	E.A1.73.281E	PIPE, assembly, between union cone at ribs 3 and 4 to union cone between ribs 6 and 7, 'in' line	1	DTD.323	C	SH22/9
1637	E.A1.73.281F	PIPE, assembly, between union cone at ribs 3 and 4 to union cone between ribs 6 and 7, 'out' line	1	DTD.323	C	SH22/10
	E.A1.73.283	PIPES, FOR AIR BRAKE, OUTER WING ASSEMBLY Speres for:-				
5258	EEAS.143/6H	CLIP, pipe, single 1/2" o/d Attaching parts for EEAS.143/6H:-	18	L.72	C	SH22/11
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	-	C	SH22/12
28D/1008149	A25/2B	Bolt, 4 BA (as required)	1	-	C	SH22/13
28M/9403519	A27/8P	Nut, 4 BA (as required)	1	-	C	SH22/14
28M/1278189	AGS.2001/8/1	Nut, 4 BA (as required)	1	-	C	SH22/15
5259	EEAS.21/2ERH	Washer, special (as required)	1	-	C	SH22/16
28W/9416642	SP.47/B	Washer, spring (as required)	1	-	C	
28F/8011883	AGS.1102/B	CONE, union body	6	-	C	SH22/17
939	E.A1.73.283C	PIPE, assembly, from running coupling between outer wing ribs 1 and 2A, to running coupling between outer wing ribs 2 and 2B, 'in' position	1	DTD.323	C	SH22/18
940	E.A1.73.283D	PIPE, assembly, from running coupling between outer wing ribs 1 and 2A to running coupling between outer wing ribs 2 and 2B, 'out' position	1	DTD.323	C	SH22/19
941	E.A1.73.283E	PIPE, assembly, from running coupling between outer wing ribs 2 and 2B, and outer wing ribs 3 and 3A 'in' position	1	DTD.323	C	SH22/20
942	E.A1.73.283F	PIPE, assembly, from running coupling between outer wing ribs 2 and 2B and outer wing ribs 3 and 3A, 'out' position	1	DTD.323	C	SH22/21

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mett. Spec.	Cl. of Equip.	Plate No.
					M.H. L.M.	
1983	E.A1.73.283J	PIPE, assembly, from coupling between outer wing ribs 1 and 2A, to running coupling forward of frame 7, 'out' position	1	DTD.323	C	SH22/22
1984	E.A1.73.283K	PIPE, assembly, from coupling between outer wing ribs 1 and 2A, to running coupling forward of frame 7, 'in' position	1	DTD.323	C	SH22/23
	E.86.73.361	PIPES, HYDRAULIC, FOR AIR BRAKES ON OUTER WING RIB 3, ASSEMBLY Spares for:	—	—	—	
28F/9439533	AGS.1129/B	BODY, banjo (E.A1.73.285)	1	—	C	SH22/24
28F/9423227	AGS.1135/B	BOLT, banjo (E.A1.73.285)	1	—	C	SH22/25
28E/1059358	AGS.2081/4	CLIP, pipe Attaching parts for AGS.2081/4:-	2	—	C	SH22/26
28D/9438920	A25/1C	Bolt, 2 BA	1	—	C	SH22/27
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	—	C	SH22/28
40061	EEAS.237/1A	Washer, 'D'	1	—	C	SH22/29
28F/8011809	AGS.1104/B	CONE, adaptor (E.A1.73.285)	1	—	C	SH22/30
28F/1013402	AGS.1111/B	CONE, union body (E.A1.73.285) Attaching parts for AGS.1111/B:-	2	—	C	SH22/31
28D/1010658	A25/1B	Bolt, 4 BA	3	—	C	SH22/32
28M/9403519	A27/BP	Nut, 4 BA	3	—	C	SH22/33
28F/9128928	AGS.1115/2	Washer, plate	1	—	C	SH22/34
28W/9416642	SP.47/B	Washer, spring	3	—	C	
33300	E.86.73.363	PIPE, assembly, from union cone between ribs 3A and 3 to bracket on rib 3, 'out' line	1	DTD.323	C	SH22/35
33301	E.86.73.365	PIPE, assembly, from union cone between ribs 3A and 3 to bracket on rib 3, 'in' line	1	DTD.323	C	SH22/36
12504	E.A9.73.583	PIPE, assembly, from bracket on rib 3 to air brake operating jack, 'out' position	1	DTD.323	C	SH22/37

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
12503	E.A9.73.561	PIPE, assembly from bracket on rib 3 to air brake operating jack 'in' position	1	DTD.447	C	SH22/38
28F/8014021	AGS.1138/B	WASHER, jointing (E.A1.73.285)	3	—	C	SH22/38
	E.A3.73.815	PIPES, HYDRAULIC ON FUSELAGE SIDE WHEEL WELL BAY ASSEMBLY Spares for:-	—	—	—	SH23/1
912	E.A1.73.183	BODY, banjo, special	1	—	C	SH23/2
911	E.A1.73.277	BOLT, banjo, special	1	—	C	SH23/3
737	E.A1.73.179	CLIP, pipe, flexible, 1/2" o/d Attaching parts for E.A1.73.179:-	1	—	C	SH23/4
28D/1010030	A26/7C	Bolt, 2 BA	2	—	C	SH23/5
28M/9403520	A27/CP	Nut, 2 BA	2	—	C	SH23/5
28W/9418643	SP.47/C	Washer, spring	2	—	C	
5348	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d	5	L.72	C	SH23/7
5526	EEAS.91/3	CLIP, pipe, double, 3/8" o/d Attaching parts for EEAS.148/H and EEAS.91/3:-	3	L.72	C	SH23/8
28D/1010658	A26/1B	Bolt, 4 BA	1	—	C	SH23/9
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	—	C	SH23/10
5259	EEAS.21/2ERH	Washer, 'D'	1	—	C	SH23/11
28F/9476124	AGS.1118/C	CONE, tee	1	—	C	SH23/12
913	E.A3.73.551	PIPE, assembly from special banjo to tee cone, 'closed' line	1	DTD.323	C	SH23/13
914	E.A3.73.553	PIPE, assembly, from door sequence valve to thermal relief valve tee at wing main spar, 'closed' line	1	DTD.323	C	SH23/14
916	E.A3.73.585	PIPE, assembly, from tee cone to variable flow valve undercarriage door jack 'closed' line	1	DTD.323	C	SH23/15
5524	E.A3.73.817	PIPE, assembly, from sequence valve to 4 way cone at main spar undercarriage door, 'closed' line	1	DTD.323	C	SH23/16

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
5526	E.A3.73.819	PIPE, assembly, from tee cone to tee cone, 'closed' line	1	DTD.323	C	SH23/17
20998	E.A3.73.855	PIPE, assembly, from variable flow valve to undercarriage jack hose connection 'closed' line	1	DTD.323	C	SH23/18
28F/8429532	AGS.1186/C	SEAL, bonded	2	-	C	SH23/19
28F/8011809	AGS.1108/B	UNION, body cone	1	-	C	SH23/20
28F/8014021	AGS.1138/B	WASHER, jointing	2	-	C	SH23/21
	E.A3.73.531	PIPES, HYDRAULIC, AT WHEEL WELL BAY DIAPHRAGM, ASSEMBLY Spare for:-	-	-	-	
829	E.A1.73.181	CLIP, thermal relief valve Attaching parts for E.A1.73.181:-	1	-	C	SH23/22
28D/9133014	A25/13C	Bolt, 2 BA	2	-	C	SH23/23
28M/1278190	AGS.2001/C/1	Nut, 2 BA	2	-	C	SH23/24
	AS.2307/030	Tube, distance	2	-	C	SH23/25
5280	EEAS.143/5H	CLIP, pipe, single 3/16" o/d	3	L.72	C	SH23/26
5288	EEAS.143/6H	CLIP, pipe, single, 1/4" o/d Attaching parts for EEAS.143/5H, and EEAS.143/6H:-	6	L.72	C	SH23/27
28D/1010658	A25/18	Bolt, 4 BA (as required)	1	-	C	SH23/28
28D/1011019	A25/8C	Bolt, 2 BA (E.A3.73.977) (as required)	1	-	C	SH23/29
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	-	C	SH23/30
5269	EEAS.21/2ERH	Washer, 'D' (as required)	1	L.72	C	SH23/31
	AS.2810/8/070	Tube, distance (E.A3.73.977) (as required)	1	-	-	SH23/32
28F/9463543	AGS.1120/1	CONE, tee	1	-	C	SH23/33
906	E.A3.73.561	PIPE, assembly, from union cone at wheel well diaphragm to tee cone, 'open' line	1	DTD.323	C	SH23/34
4523	E.A3.73.847	PIPE, assembly, from tee cone to thermal relief valve 'open' line	1	DTD.323	C	SH23/35
4524	E.A3.73.849	PIPE, assembly, from thermal relief valve to 4 way cone	1	DTD.323	C	SH23/36

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.73.529	PIPES, HYDRAULIC, ON RIB E, WHEEL BAY ASSEMBLY	-	-	-	
5258	EEAS.143/8H	Spares for:- CLIP, pipe, single 1/2" o/d	2	L.72	C	SH23/37
28D/1010858	A25/1B	Attaching parts for EEAS.143/8H:- Bolt, 4 BA	1	-	C	SH23/38
28M/1278189	AGS.2001/8/1	Nut, 4 BA	1	-	C	SH23/39
5259	EEAS.21/2ERH	Washer, 'D'	1	-	C	SH23/40
2007	E.A3.73.535	PIPE, assembly, from undercarriage door jack sequence valve to running coupling at wheel well diaphragm 'open' line	1	DTD.326	C	SH23/41
	E.A3.73.395	PIPES, HYDRAULIC, LEADING EDGE, ASSEMBLY	-	-	-	SH24/1
		Spares for:-				
886	E.A1.73.189	BODY, benjo, special	1	L.40	C	SH24/2
38585	E.A1.73.403	BODY, benjo, special	1	-	C	SH24/3
881	E.A1.73.191	BOLT, benjo, special	1	S.11	C	SH24/4
882	E.A1.73.193	BOLT, benjo, special	1	S.11	C	SH24/5
5348	EEAS.143/8H	CLIP, pipe, single, 3/8" o/d	1	L.72	C	SH24/6
		Attaching parts for EEAS.143/8H:-				
28D/1010858	A25/1B	Bolt, 4 BA	1	-	C	SH24/7
28M/1278189	AGS.2001/8/1	Nut, 4 BA	1	-	C	SH24/8
5259	EEAS.21/2ERH	Washer, special	1	-	C	SH24/9
5523	EEAS.143/23H	CLIP, pipe, 5/8" o/d	1	L.72	C	SH24/10
		Attaching parts for EEAS.143/23H:-				
28D/9438920	A25/1C	Bolt, 2 BA	1	-	C	SH24/11
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	-	C	SH24/12
9763	E.A3.73.55	Washer, special	2	-	C	SH24/13
17529	EEAS.143/23	CLIP, pipe, single 5/8" o/d	1	L.72	C	SH24/14
28E/1059369	AGS.2081/6	CLIP, pipe, single 3/8" o/d	1	-	C	SH24/15
		Attaching parts for EEAS.143/23 and AGS.2081/6:-				
28D/9438920	A25/1C	Bolt, 2 BA	1	-	C	SH24/16
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	-	C	SH24/17
28W/9419475	SP.15/C	Washer, 2 BA	1	-	C	

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Mtg. Spec.	Cl. of Equip. M.R. L.M.	Part No.
		1 2 3 4 5 6				
12436	E.A9.73.165	. . CLIP, pipe, special Attaching parts for E.A9.73.165:-	1	—	C	SH24/18
28D/12814	A25/9E	. . Bolt, 1/2" BSF	2	—	C	SH24/19
28M/10290	AGS.2001/E/1	. . Nut, 1/2" BSF	2	—	C	SH24/20
22804	E.A9.73.167	. . Washer, special	1	L.72	C	SH24/21
22806	E.A9.73.168	. . Washer, special	1	L.72	C	SH24/22
30865	E.A3.73.915	. . COUPLING, pipe	1	S.91	C	SH24/23
22789	E.A9.73.93	. . FAIRLEAD, at diaphragm between ribs 2 and 3, rear Attaching parts for E.A9.73.93:-	2	LF8.21	C	SH24/24
28D/1017157	A25/25C	. . Bolt, 2 BA	4	—	C	SH24/25
28M/1278190	AGS.2001/C/1	. . Nut, 2 BA	4	—	C	SH24/26
28M/9419402	AS.2810/5/143 SP.13/C	. . Tube, distance . . Washer, 2 BA	4 4	L.82 —	C C	SH24/27
22802	E.A9.73.163	. . FAIRLEAD, at diaphragm between ribs 2 and 3, front Attaching parts for E.A9.73.163:-	1	LF8.21	C	SH24/28
28D/7002428	A25/6C	. . Bolt, 2 BA	4	—	C	SH24/29
28W/9419402	SP.13/C	. . Washer, 2 BA	4	—	C	
28F/8011896	AGS.1142/C	. . NIPPLE, adaptor	1	—	C	SH24/30
28F/9439897	AGS.1142/E	. . NIPPLE, adaptor	3	—	C	SH24/31
8888	E.98.73.191	. . PIPE, assembly, from coupling at rib 2 to union body, inboard of rib 1 suction line	1	DTD.323	C	SH24/32
30978	E.A4.73.283	. . PIPE, assembly, from coupling at rib 2, to union body inboard of rib 1, delivery line	1	DTD.323	C	SH24/33
981	EEAS.20/2DR	. . TAB, locking	4	L.72	C	SH24/34
28F/4061589	AGS.1103/E	. . UNION, body	1	—	C	SH24/35
28F/1034229	AGS.1138/BB	. . WASHER, jointing	2	—	C	SH24/36
28F/108392	AGS.1138/CC	. . WASHER, jointing	2	—	C	SH24/37

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Mett. Spec.	Cl. of Equip.	Place No.
					M.N. L.M.	
		1 2 3 4 5 6				
	E.H8.73.10	HYDRAULIC EQUIPMENT IN STARBOARD WING, ASSEMBLY	-	-	-	
	E.H8.73.1	Spares for:- HYDRAULIC EQUIPMENT CIRCUIT ASSEMBLY	-	-	-	SH18/1
		Consisting of:-				
27M/461	LOCKHEED AIR.40016	. . . ACCUMULATOR, hydraulic	1	-	A	SH18/33
	LOCKHEED AVA.50E	. . . COUPLING, AVERY ASSEMBLY	1	-	-	SH18/2
		Consisting of:-				
27BA/8751	AVA.55E	. . . FLANGE, half	1	-	B	
27BA/8769	AVA.62E	. . . NUT, tube	1	-	B	
27BA/8744	AVA.54E	. . . UNION, half	1	-	B	
		Attaching parts for AVA.50E (E.86.73.397):-				
28D/1008149	A25/28	. . . Bolt, 4 BA	6	-	C	SH18/3
28M/1278189	AGS.2001/B/1	. . . Nut, 4 BA	6	-	C	SH18/4
28W/9419465	SP.13/B	. . . Washer, 4 BA	8	-	C	
	LOCKHEED AVA.52C	. . . COUPLING, AVERY ASSEMBLY	1	-	-	SH18/5
		Consisting of:-				
27BA/8760	AVA.57C	. . . COUPLING, half union	1	-	B	
27BA/8762	AVA.58C	. . . FLANGE, half	1	-	B	
27BA/8767	AVA.52C	. . . NUT, tube	1	-	B	
		Attaching parts for AVA.52C (E.86.73.397):-				
28D/1008149	A25/28	. . . Bolt, 4 BA	4	-	C	SH18/6
28M/1278189	AGS.2001/B/1	. . . Nut, 4 BA	4	-	C	SH18/7
28W/9419465	SP.13/B	. . . Washer, 4 BA	4	-	C	
6A/2683	-	. . . GAUGE, pressure, MK.14	1	-	A	SH18/34
27Q/1833	DOWTY 0.7017Y.CO1	. . . JACK, operating, main undercarriage	1	-	A	SH18/8
27Q/1832	DOWTY 0.7016Y.CO1	. . . JACK, operating, flap	2	-	A	SH18/9
27Q/1836	DOWTY 0.8246.CO1	. . . JACK, operating, main undercarriage door	1	-	A	SH18/10

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mtrl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
16504	E.86.73.223	JACK, FOR AIR BRAKE, ASSEMBLY	1	—	A	SH18/35
		Spares for:-				
	E.A3.20.1195	BLOCK, pecking	1	TUFNOL	LM	SH18/36
4427	E.A3.20.1199	BRACKET, switch mounting	1	—	C	SH18/37
		Attaching parts for E.A3.20.1199:-				
28D/1215678	A59/22C	Bolt, 2 BA	2	—	C	SH18/38
28M/1278190	AGS.2001/C/1	Nut, 2 BA	2	—	C	SH18/39
28W/9419402	SP.13/C	Washer, 2 BA	2	—	C	
35362	E.A3.20.1193	CHANNEL	1	—	C	SH18/40
27Q/1446726	1.03035.001	JACK, assembly	1	—	A	SH18/41
	or					
27Q/1446726	1.03036.001	JACK, assembly	1	—	A	
1642	E.A3.73.303	NUT, special	1	8.11	C	SH18/42
4428	E.A3.20.1191	SHOE, micro switch operating	2	—	C	SH18/43
26708	E.86.20.819	SLIDE, OPERATING, ASSEMBLY	1	—	B	SH18/44
		Spares for:-				
14715	E.86.20.935	BOLT, special (may be made from A25/68)	4	—	C	SH18/45
	E.86.20.821	CLAMP, half	2	—	C	SH18/46
5972	E.A3.20.1199	PLATE, rubbing	2	—	C	SH18/47
286/9995325	A33/88	SCREW, csk. 4 BA	6	—	C	SH18/48
	E.86.20.823	SLIDE, block	1	—	—	SH18/49
	E.A3.73.305	WASHER, tab	1	—	—	SH18/50
	DUNLOP					
27VA/4028	2/W3/101/8/ 8/63	PIPE, flexible, maxaret unit	1	—	B	SH18/14
	DUNLOP					
27VA/4029	2/W3/101/8/ 10/30	PIPE, flexible, maxaret unit	1	—	B	SH18/15
	DUNLOP					
27VA/3617	4/W3/101/8/ 8/14	PIPE, flexible, undercarriage door, 'open'	1	—	B	SH18/16
	DUNLOP					
27VA/3618	4/W3/101/8/ 8/18	PIPE, flexible, undercarriage door, 'closed'	1	—	B	SH18/17
	DUNLOP					
27VA/3621	4/W3/101/8/ 8/63	PIPE, flexible, hydraulic brake	1	—	B	SH18/18
	DUNLOP					
27VA/4287	4/W3/101/8/ 10/26.5	PIPE, flexible, hydraulic brake	1	—	B	SH18/19

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
27VA/3624	DUNLOP 6/W3/101/8/ 8/18	. . . PIPE, flexible, undercarriage, 'up'	1	-	B	SH18/20
27VA/3625	DUNLOP 4/W3/101/8/ 8/25	. . . PIPE, flexible, undercarriage, 'down'	1	-	B	SH18/21
27VA/5303	DUNLOP 6/W3/102/8/ 10/44	. . . PIPE, flexible, engine driven pump, delivery	1	-	B	
27VA/3659	DUNLOP 10/W3/121/8/ 10/40	. . . PIPE, flexible, engine driven pump suction	1	-	B	SH18/23
37J/286	LOCKHEED AIR.68000	. . . PUMP, engine driven	1	-	A	SH18/24
5CW/9438275	-	. . . SWITCH, micro type 1A, 3 terminal Attaching parts for Ref. 5CW/9438275, (E.86.73.223)	2	-	B	SH18/51
28D/9016170	A25/168	. . . Bolt, 4 BA	2	-	C	SH18/52
28M/1278189	AGS.2001/B/1	. . . Nut, 4 BA	2	-	C	SH18/53
28W/9419465	SP.13/B	. . . Washer, 4 BA	2	-	C	
27Q/1216	DOWTY 4603Y.MK.E	. . . VALVE, thermal relief	2	-	A	SH18/25
27Q/1961	DOWTY 8697Y.MK.A	. . . VALVE, thermal relief	1	-	A	SH18/26
27Q/744	DOWTY 401Y.MK.J	. . . VALVE, sequence, undercarriage door	1	-	A	SH18/54
27Q/777	DOWTY 401Y.MK.M	. . . VALVE, sequence, undercarriage door	1	-	A	SH18/55
27Q/70289	DOWTY 0.3371Y.B01	. . . VALVE, restrictor	1	-	A	SH18/29
27Q/1152	DOWTY 6790Y.MK.A	. . . VALVE, transfer, undercarriage jack	1	-	A	SH18/30
27Q/702191	DOWTY 6209Y.B01 H.P.	. . . VALVE, restrictor, undercarriage door jack	1	-	A	SH18/31
28Y/15496	COMPONENTS GYP.A58	. . . VALVE, charging	2	-	C	SH18/32
27M/744	LOCKHEED AIR.43634	. . . VALVE, cut out	1	-	A	SH18/56
27W/17	LOCKHEED UMC.706/4	. . . VALVE, non-return	3	-	A	SH18/57

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.H8.73.22	PIPES, HYDRAULIC, ON MAIN SPAR ASSEMBLY Spares for:-	-	-	-	SH19/1
9787	E.A1.73.107	BRACKET	1	-	C	SH19/2
	E.A6.73.62	BRACKET	1	-	-	SH19/58
9772	E.A3.73.790	BRACKET	1	-	C	SH19/59
16498	E.A3.73.793	BRACKET	1	-	C	SH19/5
		Attaching parts for E.A1.73.107, E.A6.73.62, E.A3.73.790 and E.A3.73.793:-				
28D/9436920	A25/1C	Bolt, 2 BA	4	-	C	SH19/8
28M/9403520	A27/CP	Nut, 2 BA	4	-	C	SH19/7
28W/9416643	SP.47/C	Washer, spring	4	-	C	
18502	E.A6.73.79	BRACKET, pipe, flexible Attaching parts for E.A6.73.79:-	1	-	C	SH19/8
28S/9992526	A32/B12	Screw, 4 BA	4	-	C	SH19/9
28W/9416642	SP47/B	Washer, spring	4	-	C	
829	E.A1.73.181	CLIP, thermal relief valves and flexible pipes Attaching parts for E.A1.73.181:-	4	L.72	C	SH19/10
28D/9140645	A25/10C	Bolt, 2 BA (as required)	1	-	C	SH19/11
28D/9436710	A25/11C	Bolt, 2 BA (as required)	1	-	C	SH19/12
28M/1278190	AGS.2001/C/1	Nut, 2 BA (as required)	1	-	C	SH19/13
28M/9403520	A27/CP	Nut, 2 BA (as required)	1	-	C	SH19/14
28W/9419402	SP.13/C	Washer, 2 BA (as required)	1	-	C	
28W/9416643	SP.47/C	Washer, spring (as required)	1	-	C	
5528	E.A3.73.797	CLIP, transfer valve Attaching parts for E.A3.73.797:-	1	-	C	SH19/15
28D/9140647	A25/14C	Bolt, 2 BA	2	-	C	SH19/16
28E/18410	AS.2081/3	CLIP, 3/16" o/d	4	-	C	SH19/17
28E/18233	AS.2081/4	CLIP, 1/4" o/d	1	-	C	SH19/18
28E/17185	AS.2081/6	CLIP, 3/8" o/d	7	-	C	SH19/19
7136	EEAS.143/21	CLIP, pipe, single, 1/2" o/d	3	L.72	C	SH19/20
6068	EEAS.143/24	CLIP, pipe, single 1/2" o/d	3	L.72	C	SH19/21

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
		Attaching parts for AS.2081/3, AS.2081/4, AS.2081/6, EEAS.143/21 and EEAS.143/24:-				
28D/9436920	A25/1C	. . Bolt, 2 BA (as required)	1	—	C	SH19/22
28D/9133011	A25/2C	. . Bolt, 2 BA (as required)	1	—	C	SH19/23
28D/9133012	A25/3C	. . Bolt, 2 BA (as required)	1	—	C	SH19/24
28D/1011019	A25/8C	. . Bolt, 2 BA (as required)	1	—	C	SH19/25
28M/9403520	A27/CP	. . Nut, 2 BA	1	—	C	SH19/26
28W/9419402	SP13/C	. . Washer, 2 BA (as required)	1	—	C	
28W/9146643	SP47/C	. . Washer, spring (as required)	1	—	C	
12919	EEAS.21/9ER	. . Washer, 'D' (as required)	1	—	C	SH19/27
6062	E.A1.70.73	. . Washer, special (as required)	1	—	C	SH19/28
808	E.A1.73.177	. . CONE, tee, special	1	DTD.883	C	SH19/29
28F/9129086	AGS.1102/A	. . CONE, union, body	1	—	C	SH19/30
28F/8011883	AGS.1102/B	. . CONE, union body	1	—	C	SH19/31
28F/9475480	AGS.1123/A	. . CONE, 4 way	1	—	C	SH19/32
28F/9508223	AGS.1123/C	. . CONE, 4 way	1	—	C	SH19/33
9789	E.A1.73.109	. . GUARD, pipe, flexible	1	—	C	SH19/34
		Attaching parts for E.A1.73.109:-				
28D/15907	A.81/2C	. . Bolt, 2 BA	4	—	C	SH19/35
28M/13324	A29/CP	. . Nut, 2 BA	4	—	C	SH19/36
28W/9416643	SP47/C	. . Washer, spring	4	—	C	
927	E.A3.73.538	. . PIPE, assembly, from sequence 4 way cone to union body undercarriage jack, 'down' line	1	DTD.323	C	SH19/80
32815	E.A3.73.937	. . PIPE, assembly, from sequence 4 way cone to sequence valve connection on rib 3 wheel well bay undercarriage door, 'open' line	1	DTD.323	C	SH19/81
1740	E.A3.73.550	. . PIPE, assembly, from union body on rib B, to union body inboard rib A, brake pressure line	1	DTD.323	C	SH19/82
4525	E.A3.73.652	. . PIPE, assembly, from undercarriage and door jacks thermal relief valve, to 4 way cone, return line	1	DTD.323	C	SH19/83

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5536	E.A3.73.730	. . PIPE, assembly, from 4 way cone, to union cone inboard rib A, return line	1	DTD.323	C	SH19/64
41176	E.A3.73.5137	. . PIPE, assembly, from union cone inboard rib A, to transfer valve, undercarriage jack 'up' line	1	DTD.323	C	SH19/65
41178	E.A3.73.5140	. . PIPE, assembly, from thermal relief valve to tee piece	1	DTD.323	C	SH19/66
41180	E.A3.73.5142	. . PIPE, assembly, from thermal relief valve to 4 way piece	1	DTD.323	C	SH19/67
41174	E.A3.73.5134	. . PIPE, assembly, from thermal relief valve to 4 way piece	1	DTD.323	C	SH19/68
5538	E.A3.73.805	. . PIPE, assembly, from thermal relief valve tee to transfer valve, under- carriage jack 'up' line	1	DTD.323	C	SH19/69
5539	E.A3.73.808	. . PIPE, assembly, from transfer valve to union body at rib C, under- carriage jack 'up' line	1	DTD.323	C	SH19/70
13148	E.A3.73.888	. . PIPE, assembly, from union body on rib B to 4 way cone, maxaret unit return	1	DTD.323	C	SH19/71
9790	E.A1.73.297	. . PLATE, back (used with E.A1.73.109)	1	-	C	SH19/49
28F/9439786	AGS.1106/C	. . UNION, body	2	-	C	SH19/50
28F/9604828	AGS.1147/A	. . UNION, body Attaching parts for AGS.1147/A:-	1	-	C	SH19/51
28F/9453689	AGS.1148/A	. . Nut	1	-	C	SH19/52
28F/9157965	AGS.1149/1	. . Washer, plate	2	-	C	SH19/53
28F/9130862	AGS.1147/B	. . UNION, body Attaching parts for AGS.1147/B:-	1	-	C	SH19/54
28F/1010558	AGS.1148/B	. . Nut	1	-	C	SH19/55
28F/9130864	AGS.1149/2	. . Washer, plate	2	-	C	SH19/56
28F/9489760	AGS.1125/4	. . UNION, piece, 4 way	1	-	C	SH19/57

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	E.A6.73.42	PIPES, HYDRAULIC, ON FIXED FAIRING ASSEMBLY	—	—		SH20/1
1875	E.A3.73.801	ADAPTOR, special	1	—	C	SH20/2
17736	E.A6.73.278	BRACKET, for flexible connections Attaching parts for E.A6.73.278:-	1	L.72	C	SH20/24
5970	E.A6.73.93	Washer	2	—	C	SH20/4
4965	EEAS.143/5	CLIP, pipe, single, 3/16" o/d	1	L.72	C	SH20/5
5542	EEAS.143/8	CLIP, pipe, single, 1/4" o/d	1	L.72	C	SH20/6
7146	EEAS.143/21	CLIP, pipe, single, 1/4" o/d	1	L.72	C	SH20/7
6068	EEAS.143/24	CLIP, pipe, single, 1/4" o/d Attaching parts for EEAS.143/5, EEAS.143/6, EEAS.143/21 and EEAS.143/24.	1	L.72	C	SH20/8
28D/1010858	A25/1B	Bolt, 4 BA (as required)	1	—	C	SH20/9
28D/9133011	A25/2C	Bolt, 2 BA (as required)	1	—	C	SH20/10
28M/9403519	A27/8P	Nut, 4 BA (as required)	1	—	C	SH20/11
28W/1010155	AGS.162/B	Washer, spring (as required)	1	—	C	
28W/9419404	SP.16/C	Washer, 2 BA (as required)	1	—	C	
28F/8011809	AGS.1104/B	CONE, adaptor	1	—	C	SH20/12
5977	E.A6.73.114	PIPE, assembly, from union body at brake flexible pipe bracket to union body at charging valve, pressure line	1	DTD.323	C	SH20/25
5978	E.A6.73.116	PIPE, assembly, from union body at brake flexible pipe bracket to union body at charging valve bracket, maxaret unit, return line	1	DTD.323	C	SH20/26
1876	E.A3.73.599	TEE, piece, special	1	DTD.683	C	SH20/15
28F/9504828	AGS.1147/A	UNION, body Attaching parts for AGS.1147/A:-	2	—	C	SH20/16
28F/9453689	AGS.1148/A	Nut	1	—	C	SH20/17
28F/9157965	AGS.1149/1	Washer, plate	2	—	C	SH20/18
28F/9130662	AGS.1147/B	UNION, body Attaching parts for AGS.1147/B:-	1	—	C	SH20/19
28F/1010558	AGS.1148/B	Nut	1	—	C	SH20/20
28F/9130664	AGS.1149/2	Washer, plate	2	—	C	SH20/21

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Note No.
25585	E.A6.73.275	WASHER, special	2	—	C	SH20/22
28F/8014021	AGS.1138/B	WASHER, jointing	3	—	C	SH20/23
	E.A1.73.92	PIPES, HYDRAULIC, FLAP JACK, ASSEMBLY Spare for:-	—	—	—	SH21/1
1880	EEAS.91/1	CLIP, pipe, double 1/2" o/d	11	L.16	C	SH21/2
1242	E.A3.73.773	CLIP, pipe, double, 1/2" o/d	3	L.72	C	SH21/3
5258	EEAS.143/6H	CLIP, pipe, single, 1/2" o/d Attaching parts for EEAS.91/1, EEAS.143/6H and EEAS.73.773:-	4	L.72	C	SH21/4
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	—	C	SH21/5
28D/10111006	A25/6B	Bolt, 4 BA (as required)	1	—	C	SH21/6
28M/9403519	A27/BP	Nut, 4 BA (as required)	1	—	C	SH21/7
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	—	C	SH21/8
	AS.2807/4/04	Tube, distance (as required)	1	—	C	SH21/9
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	—	C	SH21/10
28W/9419485	SP.13/B	Washer, 4 BA (as required)	1	—	C	
28W/1010155	AGS.182/B	Washer, spring (as required)	1	—	C	
28F/8011811	AGS.1118/B	CONE, tee	2	—	C	SH21/11
28F/8011883	AGS.1102/B	CONE, union body	6	—	C	SH21/12
870	E.A1.73.94	FAIRLEAD, at inboard rib 7 Attaching parts for E.A1.73.94:-	1	LFS.21	C	SH21/26
28D/1011013	A25/13B	Bolt, 4 BA	2	—	C	SH21/14
28M/9403519	A27/BP	Nut, 4 BA	2	—	C	SH21/15
871	E.A1.73.92A	PIPE, assembly, from union cone between inboard wing ribs 1 and 2, to inboard flap jack tee cone, 'down' line	1	DTD.323	C	SH21/27
872	E.A1.73.92B	PIPE, assembly, from union cone between inboard wing ribs 1 and 2, to inboard flap jack tee cone, 'up' line	1	DTD.323	C	SH21/28
873	E.A1.73.92C	PIPE, assembly, from tee to inboard flap jack, 'up' line	1	DTD.323	C	SH21/29

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
874	E.A1.73.92D	PIPE, assembly, from tee to inboard flap jack, 'down' line	1	DTD.323	C	SH21/30
875	E.A1.73.92E	PIPE, assembly, from inboard flap jack tee to union at inboard wing rib 7, 'down' line	1	DTD.323	C	SH21/31
876	E.A1.73.92F	PIPE, assembly, from inboard flap jack tee to union at inboard wing rib 7, 'up' line	1	DTD.323	C	SH21/32
877	E.A1.73.92G	PIPE, assembly, from union at inboard wing rib 7 to union at outboard wing rib 2A, 'down' line	1	DTD.323	C	SH21/33
878	E.A1.73.92H	PIPE, assembly, from union at inboard wing rib 7 to union at outboard wing rib 2A, 'up' line	1	DTD.323	C	SH21/34
879	E.A1.73.92J	PIPE, assembly, from union at outboard wing rib 2A to outboard flap jack 'down' line	1	DTD.323	C	SH21/35
880	E.A1.73.92K	PIPE, assembly, from union at outboard wing rib 2A to outboard flap jack 'up' line	1	DTD.323	C	SH21/36
	E.A1.73.282	PIPES, HYDRAULIC, FOR AIR BRAKE CENTRE WING ASSEMBLY Spares for:-	-	-	-	SH22/1
5258	EEAS.143/6H	CLIP, pipe, single, 1/2" o/d Attaching parts for EEAS.143/6H:-	14	L.72	C	SH22/2
28D/1010658	A25/1B	Bolt, 4 BA	1	-	C	SH22/3
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	-	C	SH22/4
5259	EEAS.21/2ERH	Washer, 'D'	1	-	C	SH22/5
28W/1010155	AGS.162/B	Washer, spring	1	-	C	
28F/8011883	AGS.1102/B	CONE, union body	4	-	C	SH22/6
935	E.A1.73.282A	PIPE, assembly, between fuselage and union cone at centre wing ribs 3 and 4, 'in' line	1	DTD.323	C	SH22/40

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
936	E.A1.73.282B	PIPE, assembly, between fuselage and union at centre wing ribs 3 and 4, 'out' line	1	DTD.323	C	SH22/41
1638	E.A1.73.282E	PIPE, assembly, between union at ribs 3 and 4 to union between ribs 6 and 7, 'in' line	1	DTD.323	C	SH22/42
1639	E.A1.73.282F	PIPE, assembly, union at ribs 3 and 4 to union between ribs 6 and 7, 'out' line	1	DTD.323	C	SH22/43
	E.A1.73.284	PIPES, HYDRAULIC, FOR AIR BRAKE OUTER WING, ASSEMBLY Sparee for:	-	-	-	
5158	EEAS.143/6H	CLIP, pipe, single 1/2" o/d Attaching parts for EEAS.143/6H:-	18	L.72	C	SH22/11
28D/1010658	A25/1B	Bolt, 4 BA (as required)	1	-	C	SH22/12
28D/1008149	A25/2B	Bolt, 4 BA (as required)	1	-	C	SH22/13
28M/9403519	A27/8P	Nut, 4 BA (as required)	1	-	C	SH22/14
28M/1278189	AGS.2001/B/1	Nut, 4 BA (as required)	1	-	C	SH22/15
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	-	C	SH22/16
28W/1010155	AGS.162/B	Washer, spring (as required)	1	-	C	
28F/8011883	AGS.1102/B	CONE, union body	6	-	C	SH22/17
945	E.A1.73.284C	PIPE, assembly, from running coupling between outer wing ribs 1 and 2A, to coupling between outer wing ribs 2 and 2B 'in' position	1	DTD.323	C	SH22/44
946	E.A1.73.284D	PIPE, assembly, from running coupling between outer wing ribs 1 and 2A to running coupling between outer wing ribs 2 and 2B, 'out' position	1	DTD.323	C	SH22/45
947	E.A1.73.284E	PIPE, assembly, from running coupling between outer wing ribs 2 and 2B, and outer wing ribs 3 and 3A, 'in' position	1	DTD.323	C	SH22/46

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
948	E.A1.73.284F	PIPE, assembly, from running coupling between outer wing ribs 2 and 2B, and outer wing ribs 3 and 3A, 'out' position	1	DTD.323	C	SH22/47
949	E.A1.73.284G	PIPE, assembly, from coupling between outer wing ribs 3 and 3A, to operating jack coil pipe connection 'out' position	1	DTD.323	C	SH22/48
950	E.A1.73.284H	PIPE, assembly, from coupling between outer wing ribs 3 and 3A, to operating jack coil pipe connection 'in' position	1	DTD.323	C	SH22/49
1085	E.A1.73.284J	PIPE, assembly, from running coupling between outer wing ribs 1 and 2A, to running coupling between centre wing ribs 6 and 7 'out' position	1	DTD.323	C	SH22/50
1086	E.A1.73.284K	PIPE, assembly, from running coupling between outer wing ribs 1 and 2A to running coupling between centre wing ribs 6 and 7, 'in' position	1	DTD.323		SH22/51
	E.86.73.382	PIPES, HYDRAULIC, FOR AIR BRAKES ON OUTER WING RIB 3 ASSEMBLY	-	-	-	
28F/9439533	AGS.1129/B	BODY, banjo (E.A1.73.286)	1	-	C	SH22/24
28F/9423227	AGS.1136/B	BOLT, banjo (E.A1.73.286)	1	-	C	SH22/25
28E/1060368	AGS.2081/4	CLIP, pipe Attaching parts for AGS.2081/4:	2	-	C	SH22/26
28D/9438920	A25/1C	Bolt, 2 BA	1	-	C	SH22/27
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	-	C	SH22/28
40081	EEAS.237/1A	Washer, 'D'	1	-	C	SH22/29
28F/8011809	AGS.1104/B	CONE, adaptor (E.A1.73.286)	1	-	C	SH22/30

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Metl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
28F/1013402	AGS.1111/B	. . CONE, union body (E.A1.73.286) Attaching parts for AGS.1111/B:-	2	-	C	SH22/31
28D/1010658	A25/18	. . Bolt, 4 BA	3	-	C	SH22/32
28M/9403519	A27/BP	. . Nut, 4 BA	3	-	C	SH22/33
28F/9128928	AGS.1115/2	. . Washer, plate	1	-	C	SH22/34
28W/9416842	SP.47/B	. . Washer, spring	3	-	C	
33302	E.B6.73.364	. . PIPE, assembly, from union cone between ribs 3A and 3 to bracket on rib 3, 'out' line	1	DTD.323	C	SH22/62
33303	E.B6.73.366	. . PIPE, assembly, from union cone between ribs 3A and 3 to bracket on rib 3, 'in' line	1	DTD.323	C	SH22/63
12515	E.A9.73.564	. . PIPE, assembly, from bracket on rib 3 to air brake operating jack 'out' position	1	DTD.323	C	SH22/64
12516	E.A9.73.562	. . PIPE, assembly, from bracket on rib 3, to air brake operating jack 'in' position	1	DTD.447	C	SH22/65
28F/8014021	AGS.1138/B	. . WASHER, jointing (E.A1.73.286)	3	-	C	SH22/38
	E.A3.73.816	. PIPES, HYDRAULIC, ON FUSELAGE SIDE WHEEL WELL BAY, ASSEMBLY Spare for:-	-	-	-	SH23/1
912	E.A1.73.183	. . BODY, banjo, special	1	-	C	SH23/2
911	E.A1.73.277	. . BOLT, banjo, special	1	-	C	SH23/3
737	E.A1.73.179	. . CLIP, pipe, flexible, 1/2" o/d Attaching parts for E.A1.73.179:-	1	-	C	SH23/4
28D/1010030	A27/7C	. . Bolt, 2 BA	2	-	C	SH23/5
28M/9403510	A27/CP	. . Nut, 2 BA	2	-	C	SH23/6
5348	EEAS.143/8H	. . CLIP, pipe, single 3/8" o/d	5	L.72	C	SH23/7
5528	EEAS.91/3	. . CLIP, pipe, double, 3/8" o/d Attaching parts for EEAS.143/8H, and EEAS.91/3:-	3	L.72	C	SH23/8
28D/1010658	A25/18	. . Bolt, 4 BA	1	-	C	SH23/9
28M/1278189	AGS.2001/B/1	. . Nut, 4 BA	1	-	C	SH23/10
5259	EEAS.21/2ERH	. . Washer, 'D'	1	-	C	SH23/11

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
28F/9476124	AGS.1118/C	. . CONE, tee	1	-	C	SH23/12
919	E.A3.73.552	. . PIPE, assembly, from special banjo to tee cone 'closed' line	1	DTD.323	C	SH23/40
918	E.A3.73.554	. . PIPE, assembly, from door sequence valve to thermal relief valve tee at wing main spar, 'closed' line	1	DTD.323	C	SH23/41
921	E.A3.73.586	. . PIPE, assembly, from tee cone to variable flow valve, undercarriage door jack 'closed' line	1	DTD.323	C	SH23/42
5534	E.A3.73.818	. . PIPE, assembly, from sequence valve to 4 way cone at main spar undercarriage door, 'closed' line	1	DTD.323	C	SH23/43
5536	E.A3.73.820	. . PIPE, assembly, from tee cone to tee cone, 'closed' line	1	DTD.323	C	SH23/44
20997	E.A3.73.856	. . PIPE, assembly, from variable flow valve to undercarriage jack hose connection, 'closed' line	1	DTD.323	C	SH23/45
28F/9429532	AGS.1186/C	. . SEAL, bonded	2	-	C	SH23/19
28F/8011809	AGS.1106/B	. . UNION, body cone	1	-	C	SH23/20
28F/8014021	AGS.1138/B	. . WASHER, jointing	1	-	C	SH23/21
	E.A3.73.532	. PIPES, HYDRAULIC, AT WHEEL WELL BAY DIAPHRAGM, ASSEMBLY Spare for:-	-	-	-	
829	E.A1.73.181	. . CLIP, thermal relief valve Attaching parts for E.A1.73.181.	1	-		SH23/22
28D/9133014	A25/13C	. . Bolt, 2 BA	2	-	C	SH23/23
28M/1278190	AGS.2001/C/1	. . Nut, 2 BA	2	-	C	SH23/24
	AS.2307/030	. . Tube, distance	2	-	C	SH23/25
5260	EEAS.143/5H	. . CLIP, pipe, single 3/16" o/d	3	L.72	C	SH23/26
5268	EEAS.143/6H	. . CLIP, pipe, single 1/4" o/d Attaching parts for EEAS.143/6H and EEAS.143/8H:-	6	L.72	C	SH23/27
28D/1010658	A25/1B	. Bolt, 4 BA (as required)	1	-	C	SH23/28
28D/1011019	A25/8C	. Bolt, 2 BA (E.A3.73.977) (as required)	1	-	C	SH23/29
28M/1278189	AGS.2001/B/1	. Nut, 4 BA (as required)	1	-	C	SH23/30

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
5259	EEAS.21/2ERH	Washer, 'D' (as required)	1	L.72	C	SH23/31
	AS.2810/8/070	Tube, distance (E.A3.73.977) (as required)	1	-	C	SH23/32
28F/9463543	AGS.1120/1	CONE, tee	1	-	C	SH23/33
908	E.A3.73.562	PIPE, assembly, from union cone at wheel well diaphragm to tee cone 'open' line	1	DTD.323	C	SH23/46
4526	E.A3.73.548	PIPE, assembly, from thermal relief valve tee to thermal relief valve, 'open' line	1	DTD.323	C	SH23/47
4527	E.A3.73.660	PIPE, assembly, from thermal relief valve to undercarriage jack thermal return valve and relief line 4 way cone	1	DTD.323	C	SH23/48
	E.A3.73.530	PIPES, HYDRAULIC ON RIB E, WHEEL BAY ASSEMBLY Spares for:-	-	-	-	
5258	EEAS.143/6H	CLIP, pipe, single, 1/2" o/d	2	L.72	C	SH23/37
28D/1010659	A26/1B	Attaching parts for EEAS.143/6H:-	1	-	C	SH23/38
28M/127B189	AGS.2001/B/1	Bolt, 4 BA	1	-	C	SH23/39
5259	EEAS.21/2ERH	Nut, 4 BA	1	-	C	SH23/40
		Washer, 'D'	1	-	C	SH23/40
2008	E.A3.73.536	PIPE, assembly, from undercarriage door jack sequence valve to running coupling at wheel well bay diaphragm 'open' line	1	DTD.323	C	SH23/49
	E.A3.73.397	PIPES, HYDRAULIC, LEADING EDGE ASSEMBLY Spares for:-	-	-	-	SH25/1
28F/9439533	AGS.1129/B	BODY, benjo	1	-	C	SH25/2
37585	E.A1.73.403	BODY, benjo, special	1	-	C	SH25/3
886	E.A1.73.189	BODY, benjo, special	1	-	C	SH25/4
28F/9143383	AGS.1135/B	BOLT, benjo	1	-	C	SH25/5
881	E.A1.73.191	BOLT, benjo, special	1	-	C	SH25/6
882	E.A1.73.193	BOLT, benjo, special	1	-	C	SH25/7

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Meth. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
2340	E.A3.73.281	CLIP, half, accumulator, mounting	2	—	C	SH25/8
28D/9133011	A25/2C	Attaching parts for E.A3.73.281:-	4	—	C	SH25/9
28W/9419402	SP.13/C	Bolt, 2 BA	4	—	C	
		Washer, 2 BA				
12436	E.A9.73.165	CLIP, pipe, special	1	L.72	C	SH25/10
		Attaching parts for E.A9.73.165:-				
28D/12814	A25/29E	Bolt, 1/4" BSF	2	—	C	SH25/11
28M/10290	AGS.2001/E/1	Nut, 1/4" BSF	2	—	C	SH25/12
22804	E.A9.73.167	Washer, special	1	—	C	SH25/13
22805	E.A9.73.168	Washer, special	1	—	C	SH25/14
6348	EEAS.143/8H	CLIP, pipe, single 3/8" o/d	2	L.72	C	SH25/15
		Attaching parts for EEAS.143/8H:-				
28D/1010658	A25/18	Bolt, 4 BA	1	—	C	SH25/16
28M/1278189	AGS.2001/B/1	Nut, 4 BA	1	—	C	SH25/17
5259	EEAS.21/2ERH	Washer, 'D'	1	—	C	SH25/18
5523	EEAS.143/23H	CLIP, pipe, single	2	—	C	SH25/19
		Attaching parts for EEAS.143/23H:-				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	SH25/20
28M/1278190	AGS.2001/C/1	Nut, 2 BA	1	—	C	SH25/21
9763	E.A3.73.55	Washer, special	1	—	C	SH25/22
78E/14200	AS.3181/6C	CLIP, pipe, single, 3/8" o/d	1	—	C	SH25/23
		Attaching parts for AS.3181/6C, see Fairlead, E.A9.73.91:-				
28F/8011809	AGS.1104/B	CONE, adaptor	1	—	C	SH25/24
28F/9140971	AGS.1104/C	CONE, adaptor	1	—	C	SH25/25
28F/9476124	AGS.1118/C	CONE, tee	1	—	C	SH25/26
28F/9463543	AGS.1120/1	CONE, tee	1	—	C	SH25/27
30986	E.A3.73.905	CONE, tee	1	—	C	SH25/28
	or					
36815	E.A3.73.919	CONE, tee	1	—	C	
28F/9471001	AGS.1102/C	CONE, union body	2	—	C	SH25/29
28F/1013402	AGS.1111/B	CONE, union body, flanged	1	—	C	SH25/30
		Attaching parts for AGS.1111/B:-				
28D/1008149	A25/28	Bolt, 4 BA	6	—	C	SH25/31
28M/1278189	AGS.2001/B/1	Nut, 4 BA	6	—	C	SH25/32
28F/9128928	AGS.1115/2	Washer, plate	1	—	C	SH25/33
28W/9418466	SP.13/B	Washer, 4 BA	6	—	C	

SERVICES
HYDRAULIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
30967	E.A3.73.907	COUPLING, bulkhead, special	1	S.91	C	SH25/34
28D/9133011	A25/2C	Attaching parts for E.A3.73.907:	6	—	C	SH25/35
28M/1278190	AGS.2001/C/1	Bolt, 2 BA	6	—	C	SH25/36
28F/9128929	AGS.1115/4	Nut, 2 BA	1	—	C	SH25/37
28W/9419402	SP.13/C	Washer, plate	6	—	C	SH25/38
2364	E.A2.73.111	Washer, 2 BA	1	—	C	SH25/39
891	E.A1.73.199	ELBOW, union, special	1	LFS.21	C	SH25/40
28D/9133012	A25/3C	FAIRLEAD, at rib 1	6	—	C	SH25/41
28M/1278190	AGS.2001/C/1	Attaching parts for E.A1.73.199:-	6	—	C	SH25/42
28W/9419402	SP13/C	Bolt, 2 BA	6	—	C	SH25/43
		Nut, 2 BA	6	—	C	SH25/44
		Washer, 2 BA	6	—	C	SH25/45
22789	E.A9.73.93	FAIRLEAD, rear, at diaphragm between ribs 2 and 3	2	LFS.21	C	SH25/46
28D/1017157	A25/25C	Attaching parts for E.A9.73.93:-	4	—	C	SH25/47
28M/1278190	AGS.2001/C/1	Bolt, 2 BA	4	—	C	SH25/48
28W/9419402	AS.2810/5/143	Nut, 2 BA	4	L.62	LM	SH25/49
	SP13/C	Tube, distance	4	—	C	SH25/50
		Washer, 2 BA	4	—	C	SH25/51
22788	E.A9.73.91	FAIRLEAD, at frame 2	1	—	C	SH25/52
28D/9140644	A25/9C	Attaching parts for E.A9.73.91:-	2	—	C	SH25/53
28M/1278190	AGS.2001/C/1	Bolt, 2 BA	2	—	C	SH25/54
28W/9419402	SP13/C	Nut, 2 BA	2	—	C	SH25/55
		Washer, 2 BA	2	—	C	SH25/56
22803	E.A9.73.164	FAIRLEAD, front at diaphragm between ribs 2 and 3	1	LFS.21	C	SH25/57
28D/1002428	A25/8C	Attaching parts for E.A9.73.164:-	4	—	C	SH25/58
28W/9419402	SP13/C	Bolt, 2 BA	4	—	C	SH25/59
28F/1013599	AGS.1142/A	Washer, 2 BA	1	—	C	SH25/60
28F/8011885	AGS.1142/E	NIPPLE, adaptor	3	—	C	SH25/61
6904	E.B6.73.175	NIPPLE, adaptor	1	DTD.323	C	SH25/62
		PIPE, assembly, from coupling at rib 1 to charging valve tee	1	—	C	SH25/63
6903	E.B6.73.181	PIPE, assembly, from union at rib 1, to fuselage union, return line	1	DTD.323	C	SH25/64

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
6895	E.86.73.183	PIPE, assembly, from cut-out valve to union at rib 1, return line	1	DTD.323	C	SH25/65
6901	E.86.73.185	PIPE, assembly, from accumulator tee to fuselage union non-return valve, pressure line	1	DTD.323	C	SH25/66
32573	E.86.73.399	PIPE, assembly, from accumulator to coupling at rib 1	1	DTD.323	C	SH25/67
6896	E.87.73.61	PIPE, assembly, from cut-out valve to accumulator and non-return valve tee, pressure line	1	DTD.323	C	SH25/68
6897	E.87.73.65	PIPE, assembly, from accumulator to tee, pressure line	1	DTD.323	C	SH25/69
6898	E.87.73.69	PIPE, assembly, from tee to pressure gauge	1	DTD.323	C	SH25/60
6899	E.87.73.71	PIPE, assembly, from tee to charging valve	1	DTD.323	C	SH25/61
30987	E.87.73.361	PIPE, assembly, from Avery coupling to non-return valve, delivery line	1	DTD.743	C	SH25/62
30988	E.87.73.363	PIPE, assembly, from non-return valve to tee between ribs 1 and 2	1	DTD.743	C	SH25/63
30989	E.87.73.365	PIPE, assembly, from tee to cut-out valve, delivery line	1	DTD.323	C	SH25/64
30990	E.87.73.367	PIPE, assembly, from tee to non-return valve, rib 1	1	DTD.743	C	SH25/65
30991	E.87.73.369	PIPE, assembly, from non-return valve to adaptor on rib 1	1	DTD.743	C	SH25/66
12439	E.A9.73.79	PIPE, assembly, from Avery coupling to coupling at rib 1, suction line	1	L.56	C	SH25/67
28F/9128943	AGS.1114/B	SLEEVE, flanged, bulkhead Attaching parts for AGS.1114/B:-	1	-	C	SH25/68
28D/1008149	A25/28	Bolt, 4 BA	6	-	C	SH25/69
28M/1278189	AGS.2001/B/1	Nut, 4 BA	6	-	C	SH25/70
28F/4056141	AGS.1115/B	Washer, plate	1	-	C	SH25/71
28W/9419465	SP13/B	Washer, 4 BA	6	-	C	

**SERVICES
HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Metl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
980	EEAS.20/1DR	. . TAB, locking	4	L.72	C	SH25/72
981	EEAS.20/2DR	. . TAB, locking	6	L.72	C	SH25/73
28F/9476128	AGS.1112/E	. . UNION, body, flanged, bulkhead Attaching parts for AGS.1112/E:-	1	-	C	SH25/74
28D/9133011	A25/2C	. . Bolt, 2 BA	4	-	C	SH25/76
28M/1278190	AGS.2001/C/1	. . Nut, 2 BA	4	-	C	SH25/76
28F/4061153	AGS.1115/7	. . Washer, plate	1	-	C	SH25/77
28W/9419402	SP13/C	. . Washer, 2 B	-	C		
28F/3014021	AGS.1138/B	. . WASHER, jointing		-	C	SH25/78
28F/1034229	AGS.1138/BB	. . WASHER, jointing	2	-	C	SH25/79
28F/1202393	AGS.1138/C	. . WASHER, jointing	1	-	C	SH25/80
28F/1018392	AGS.1138/CC	. . WASHER, jointing	2	-	C	SH25/81

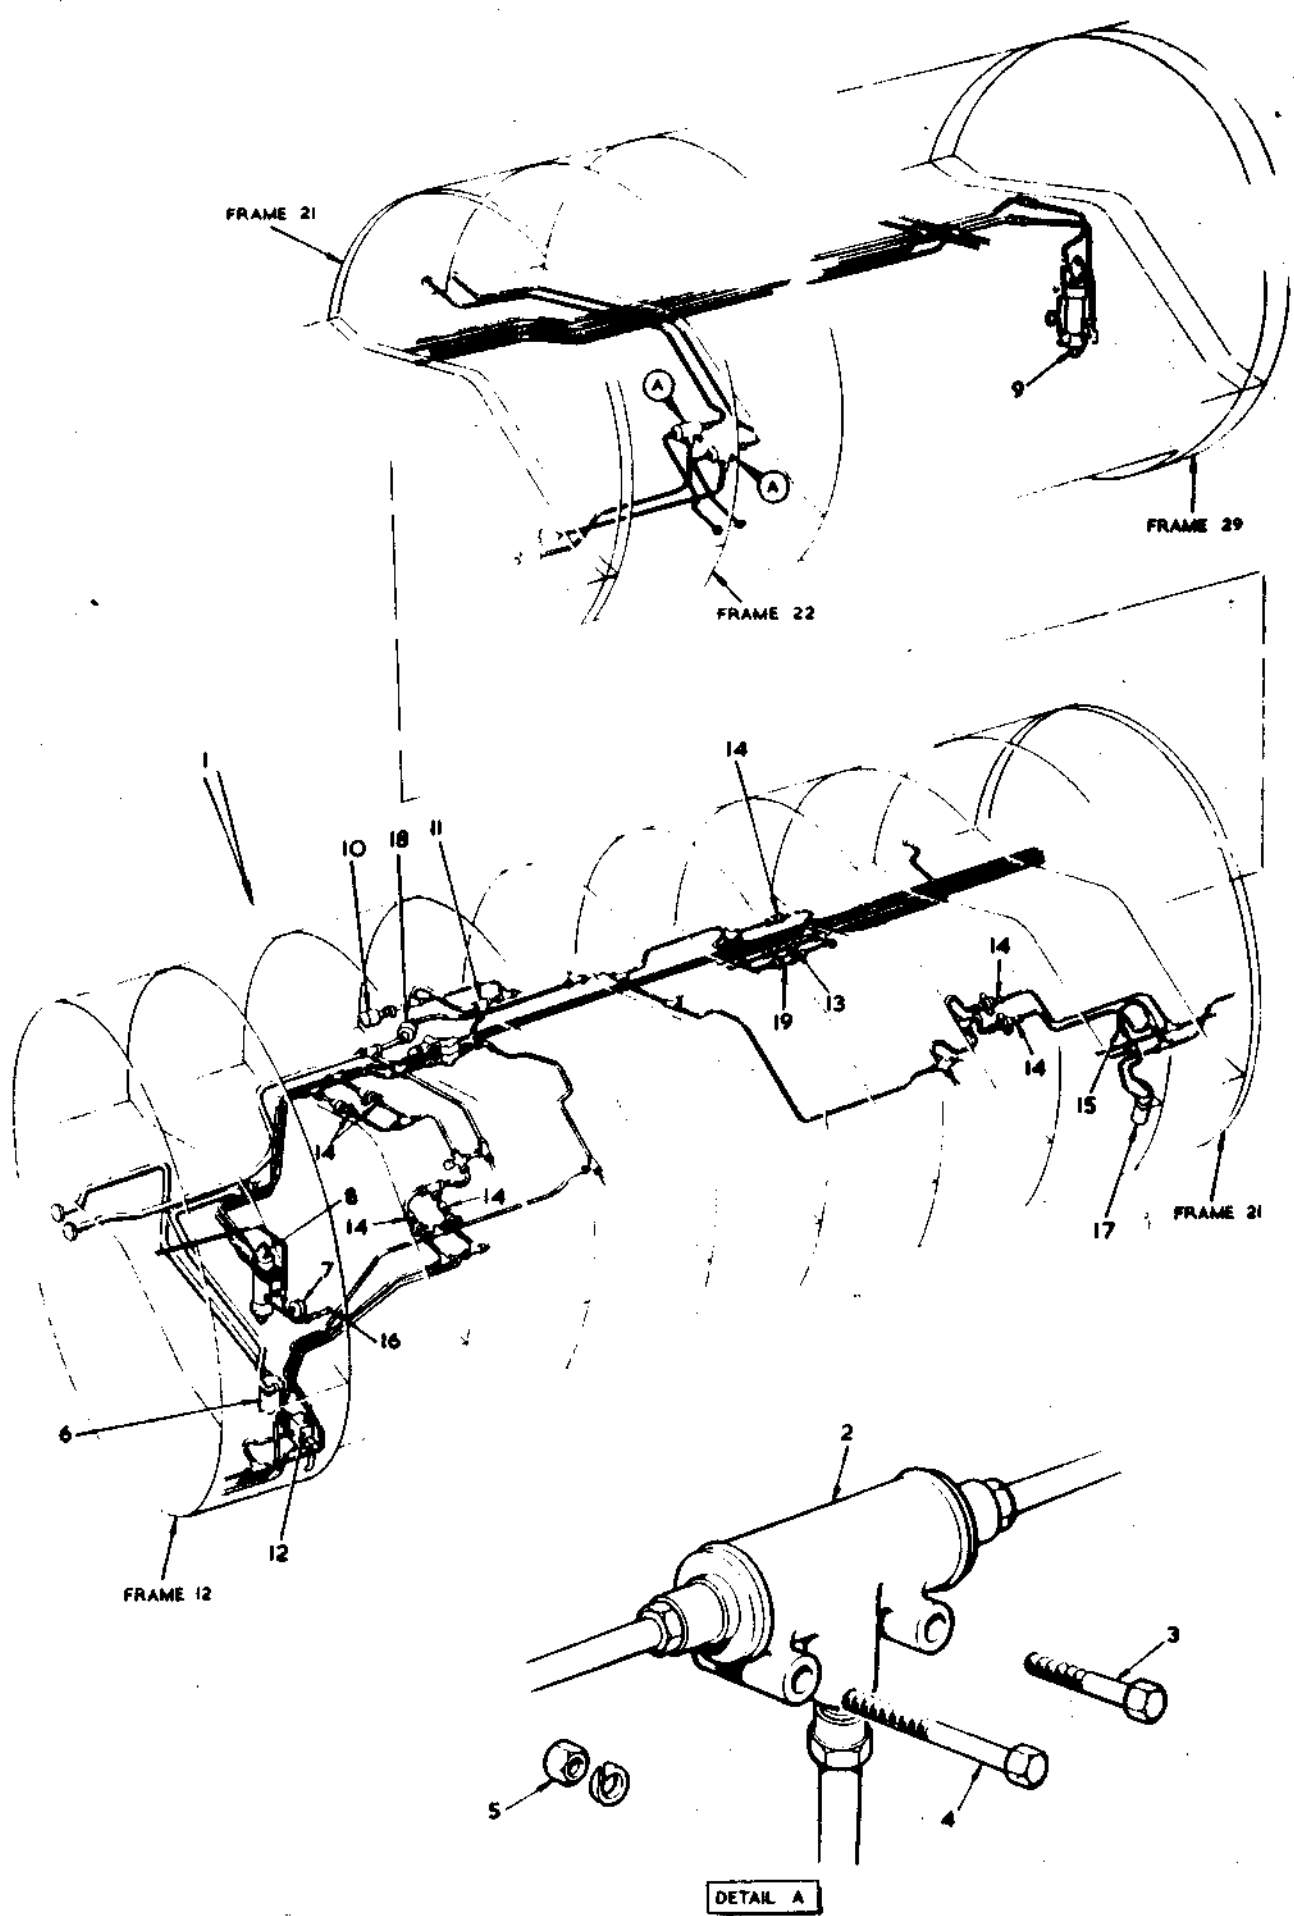


FIG.1 HYDRAULIC SYSTEM

CODE A B

SECT 5H

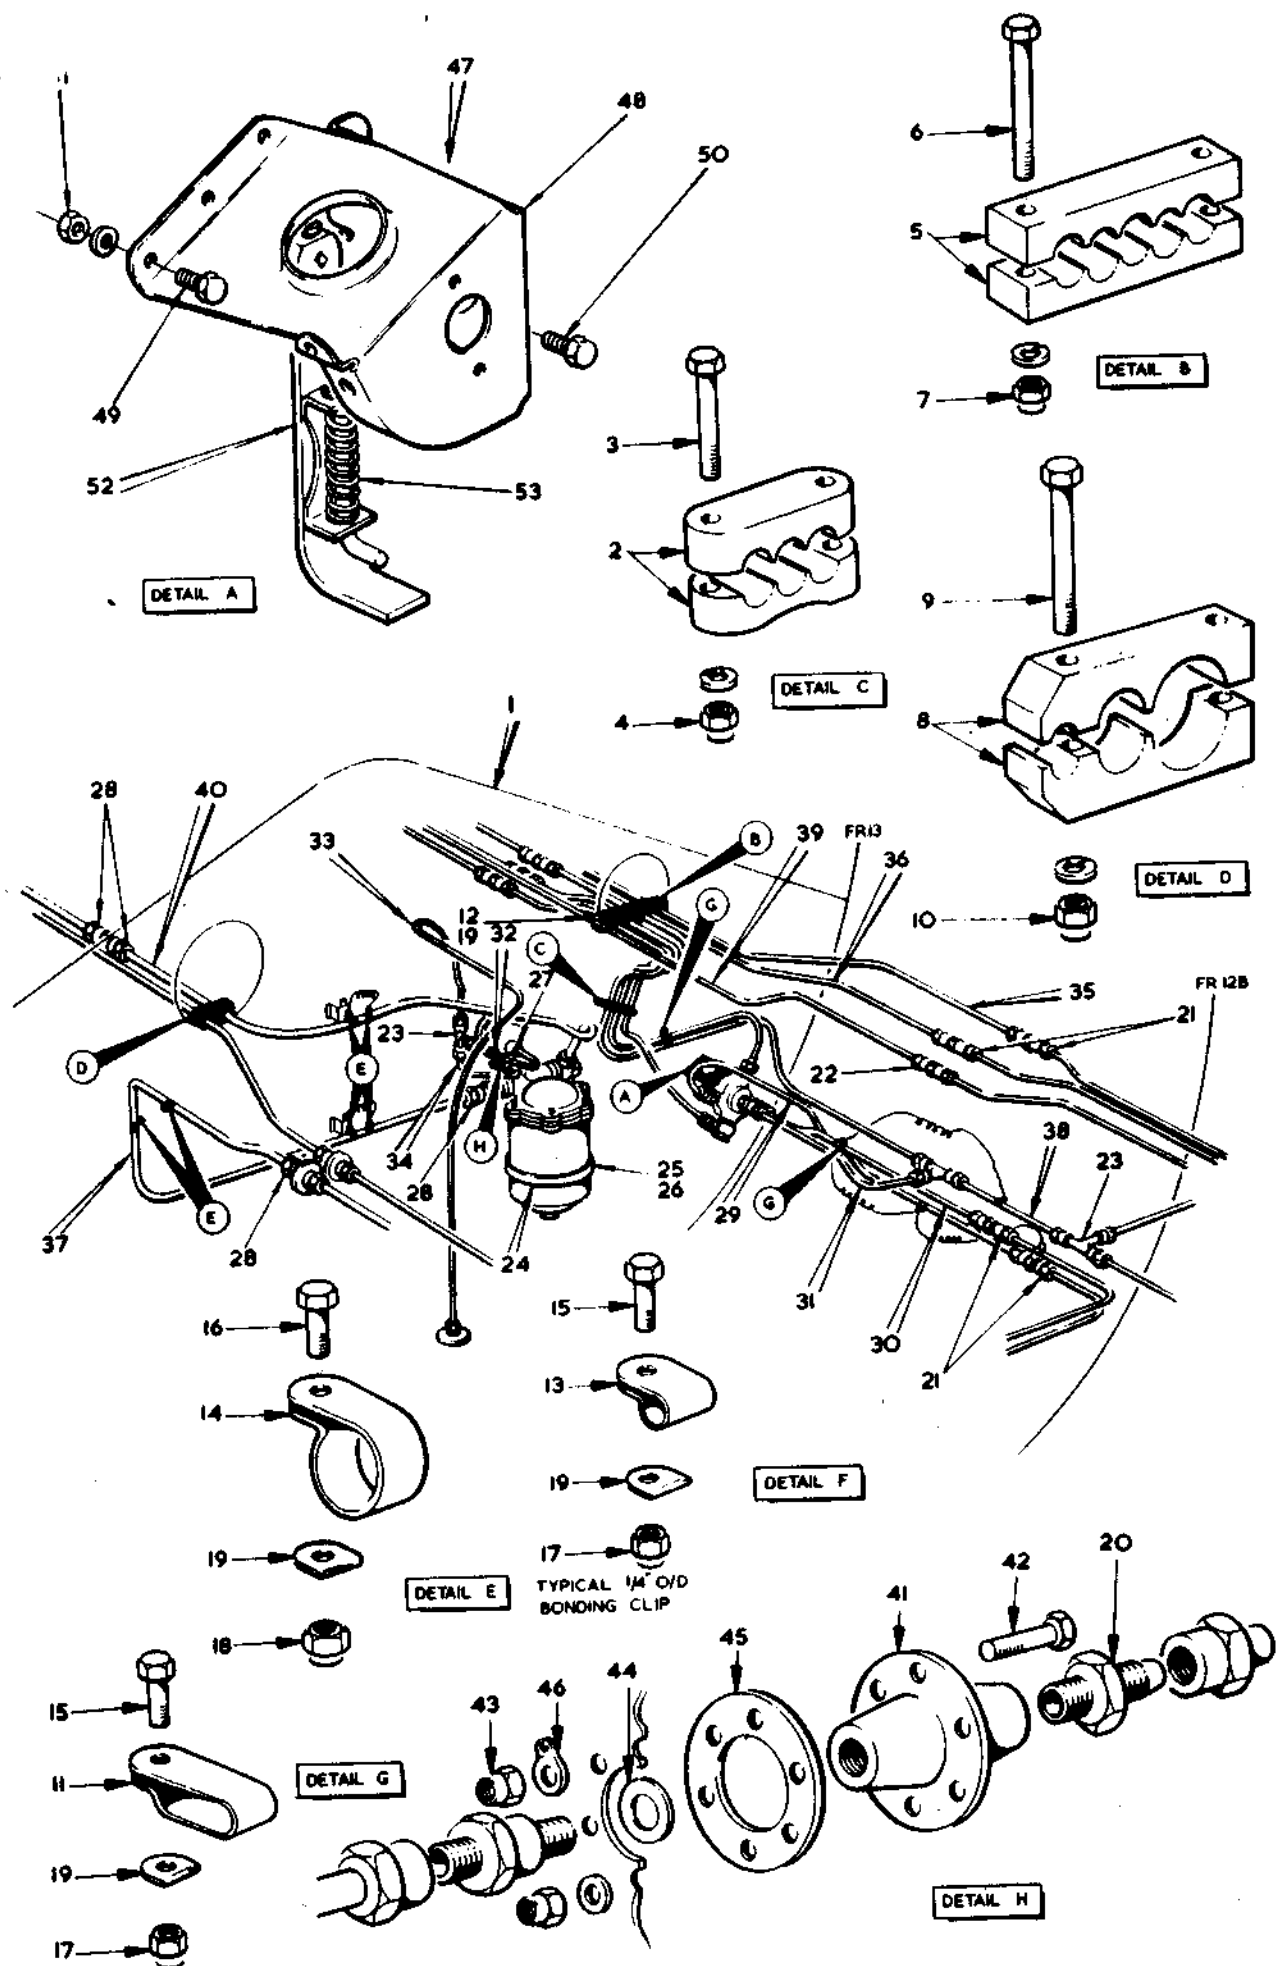


FIG. 2 HYDRAULIC SYSTEM

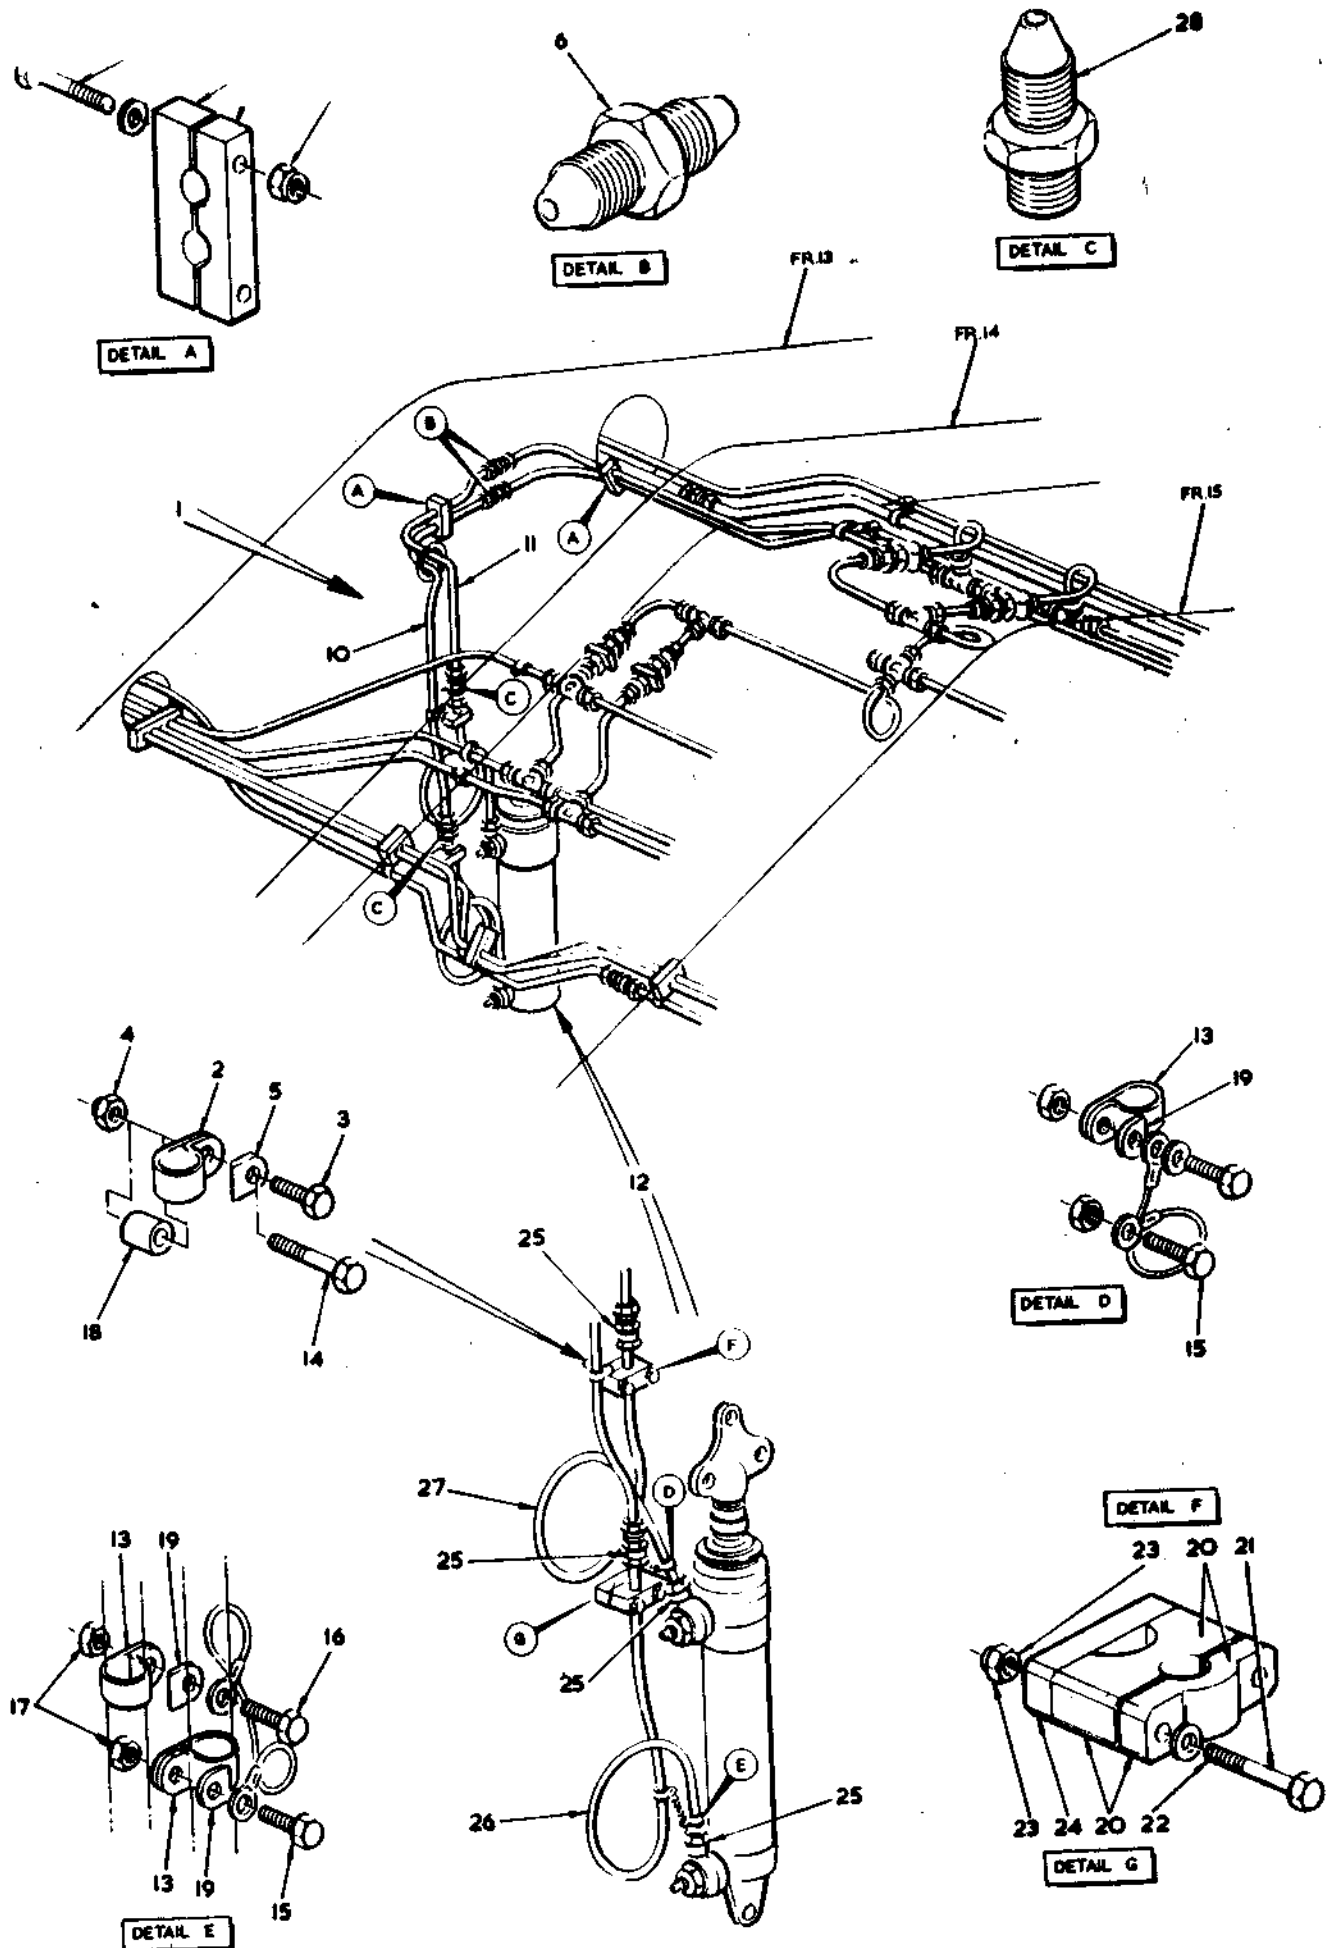


FIG.3A HYDRAULIC SYSTEM

CODE A

SECT 5H

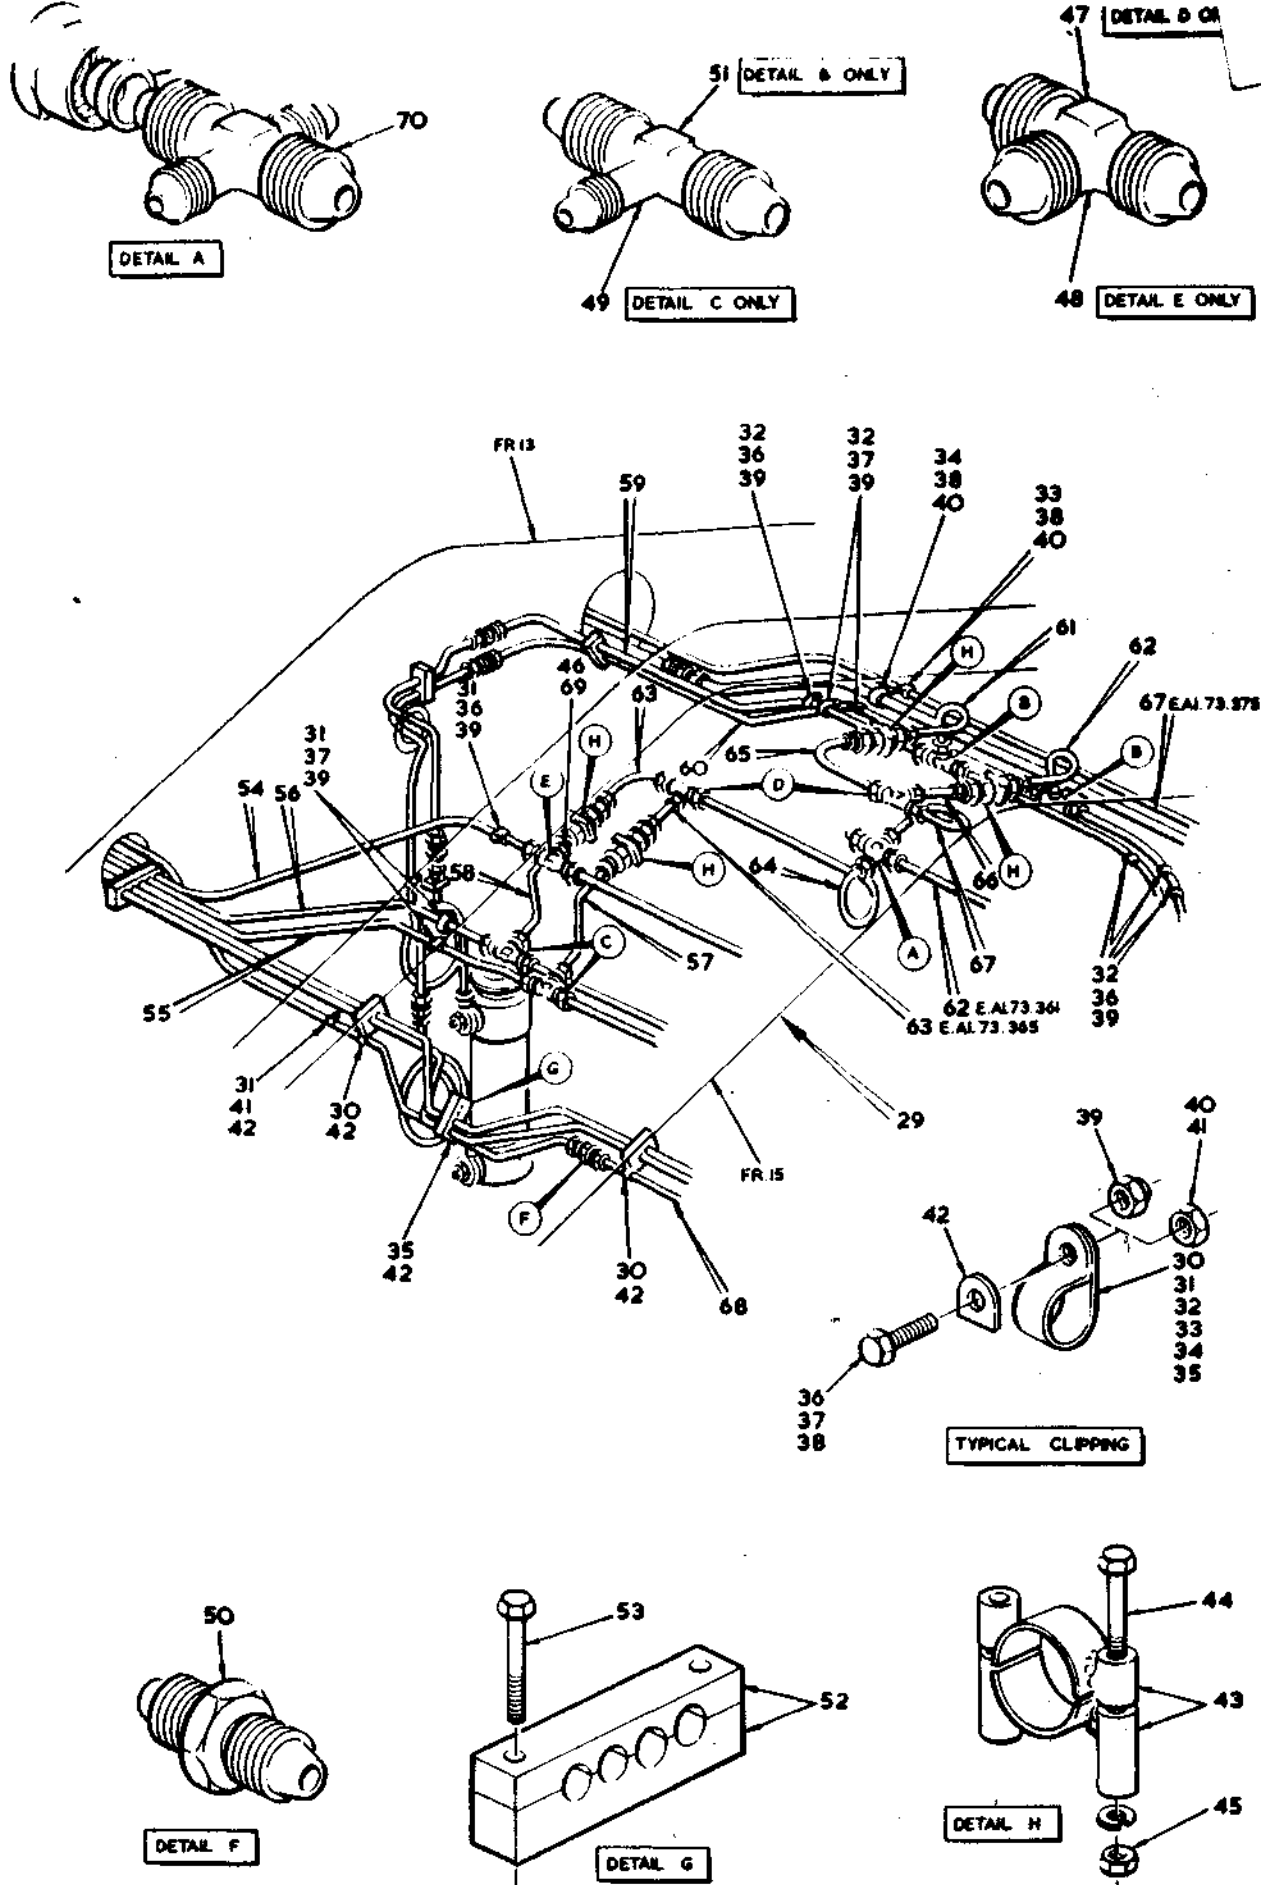


FIG.3B HYDRAULIC SYSTEM

CODE A

SECT. 34

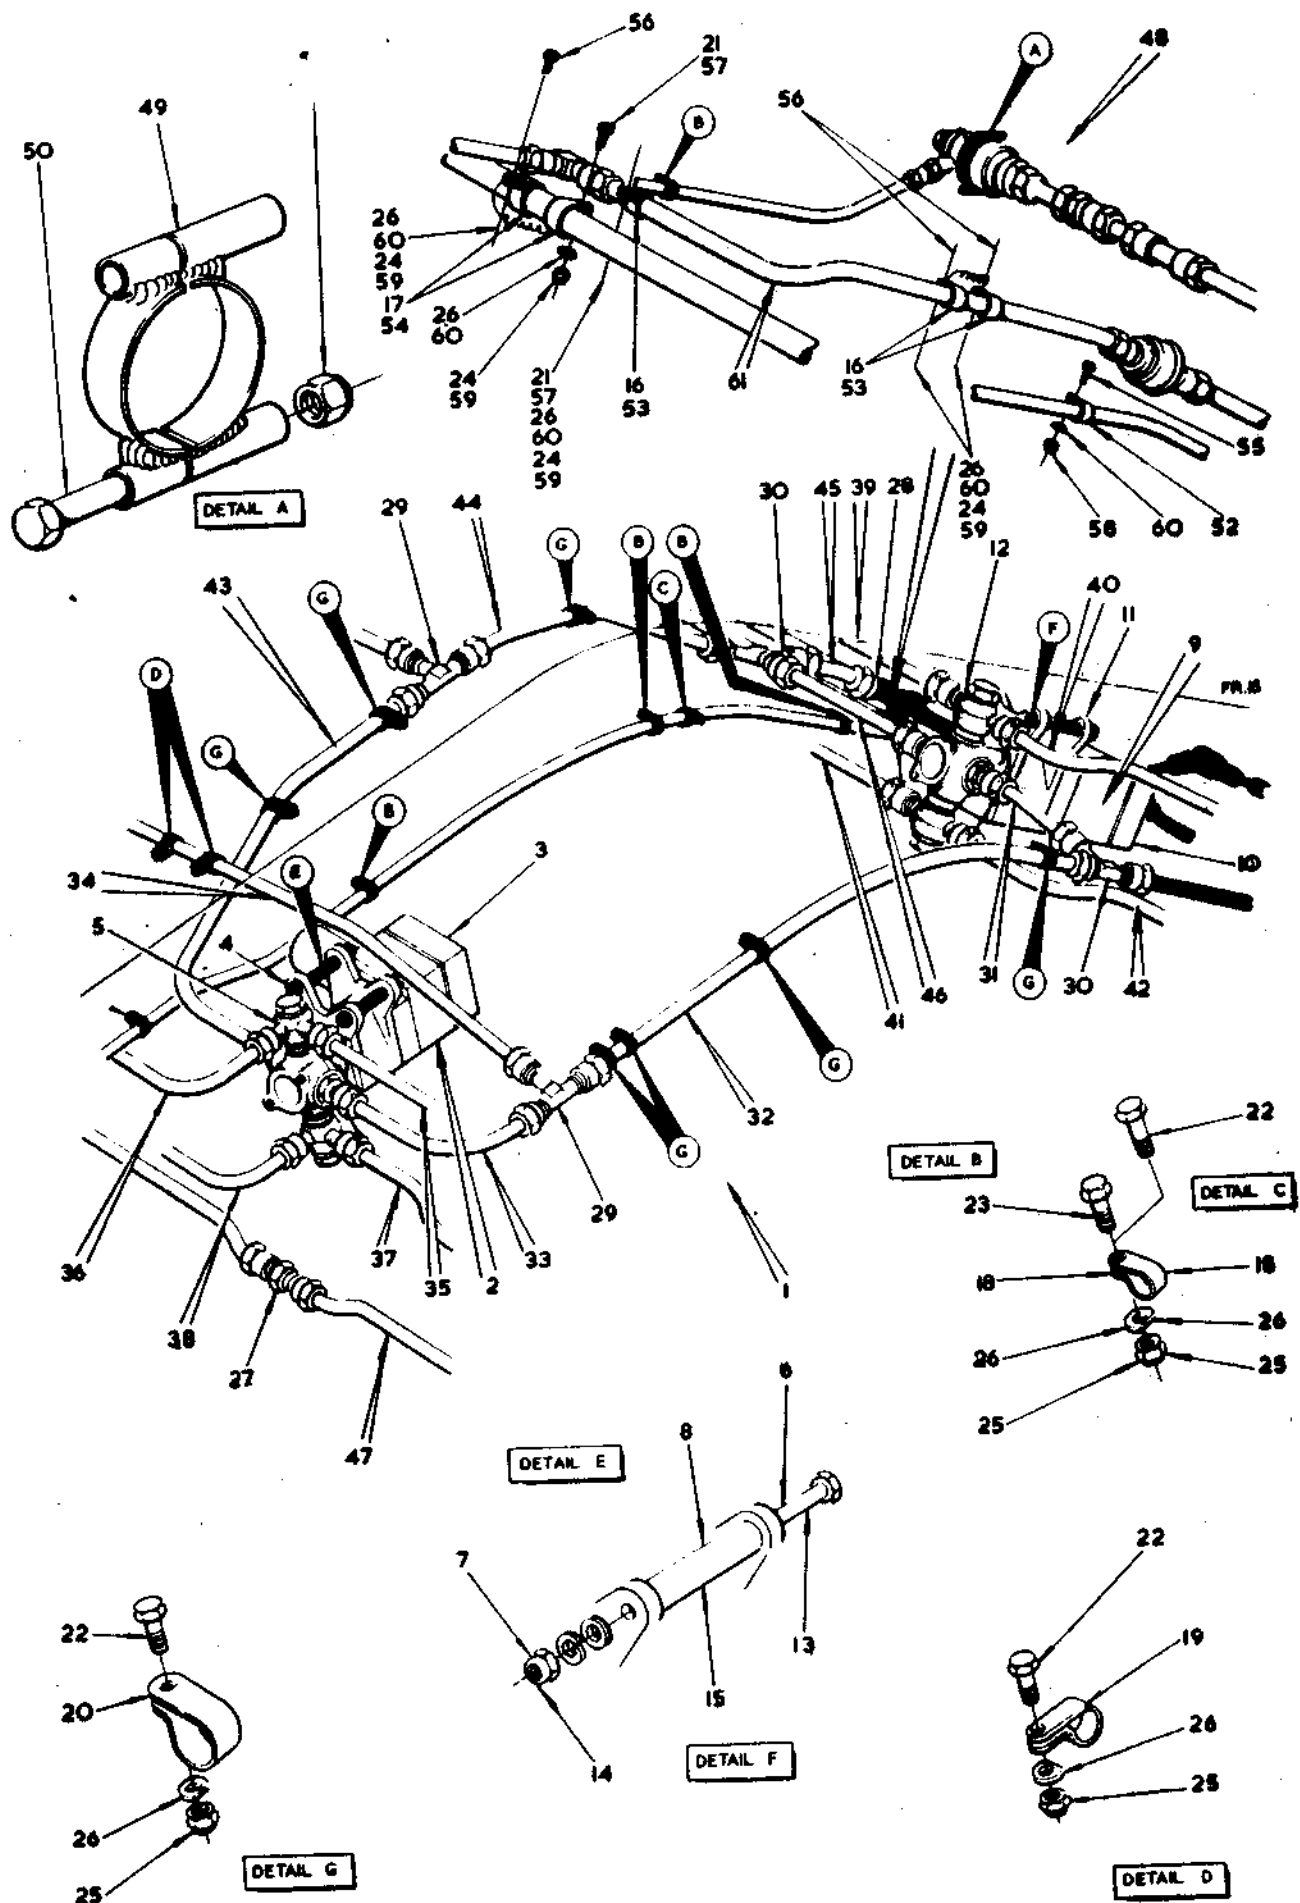


FIG.4 HYDRAULIC SYSTEM

CODE A

SECT SH

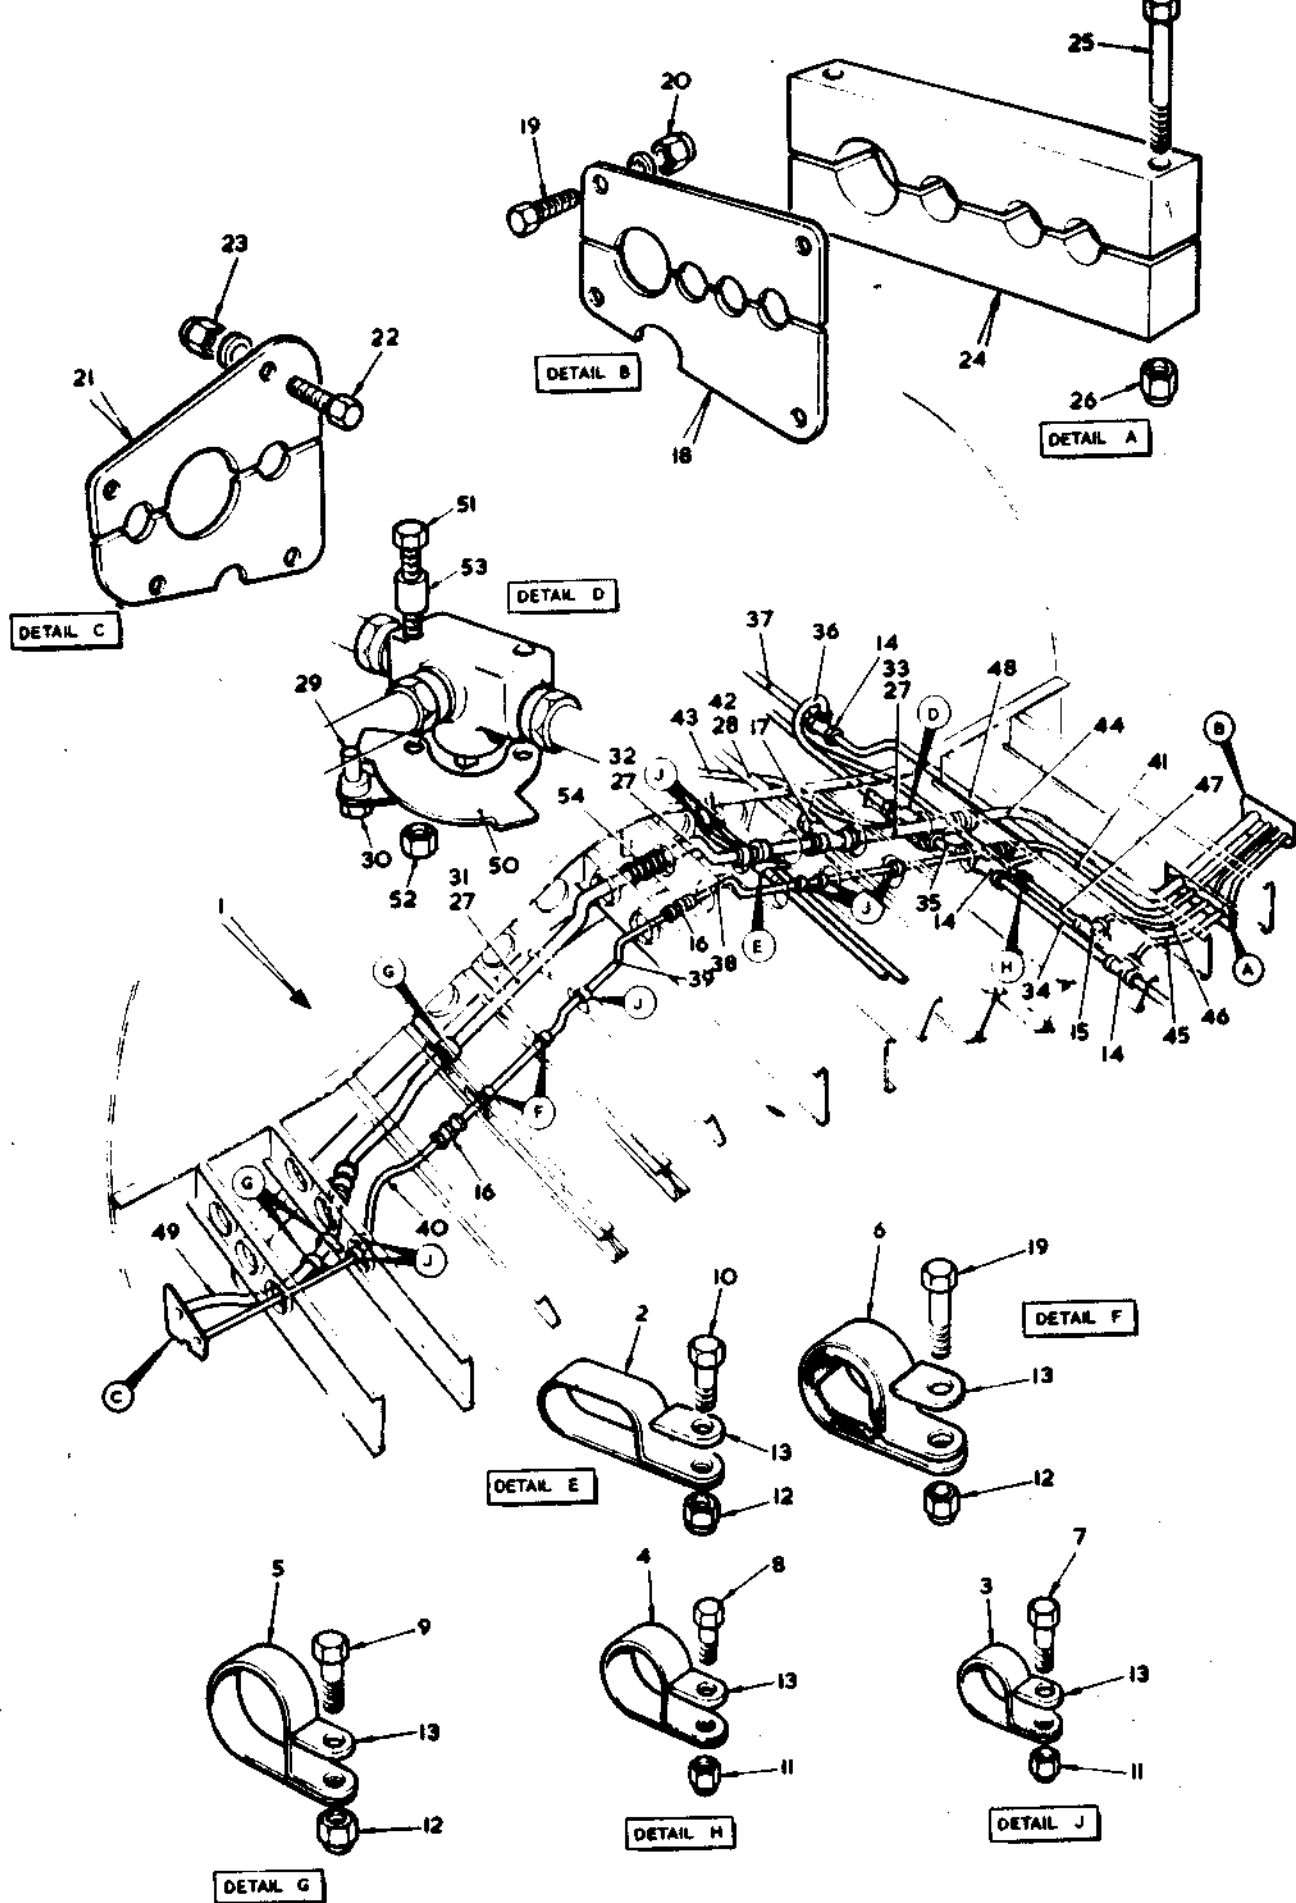


FIG.5 HYDRAULIC SYSTEM

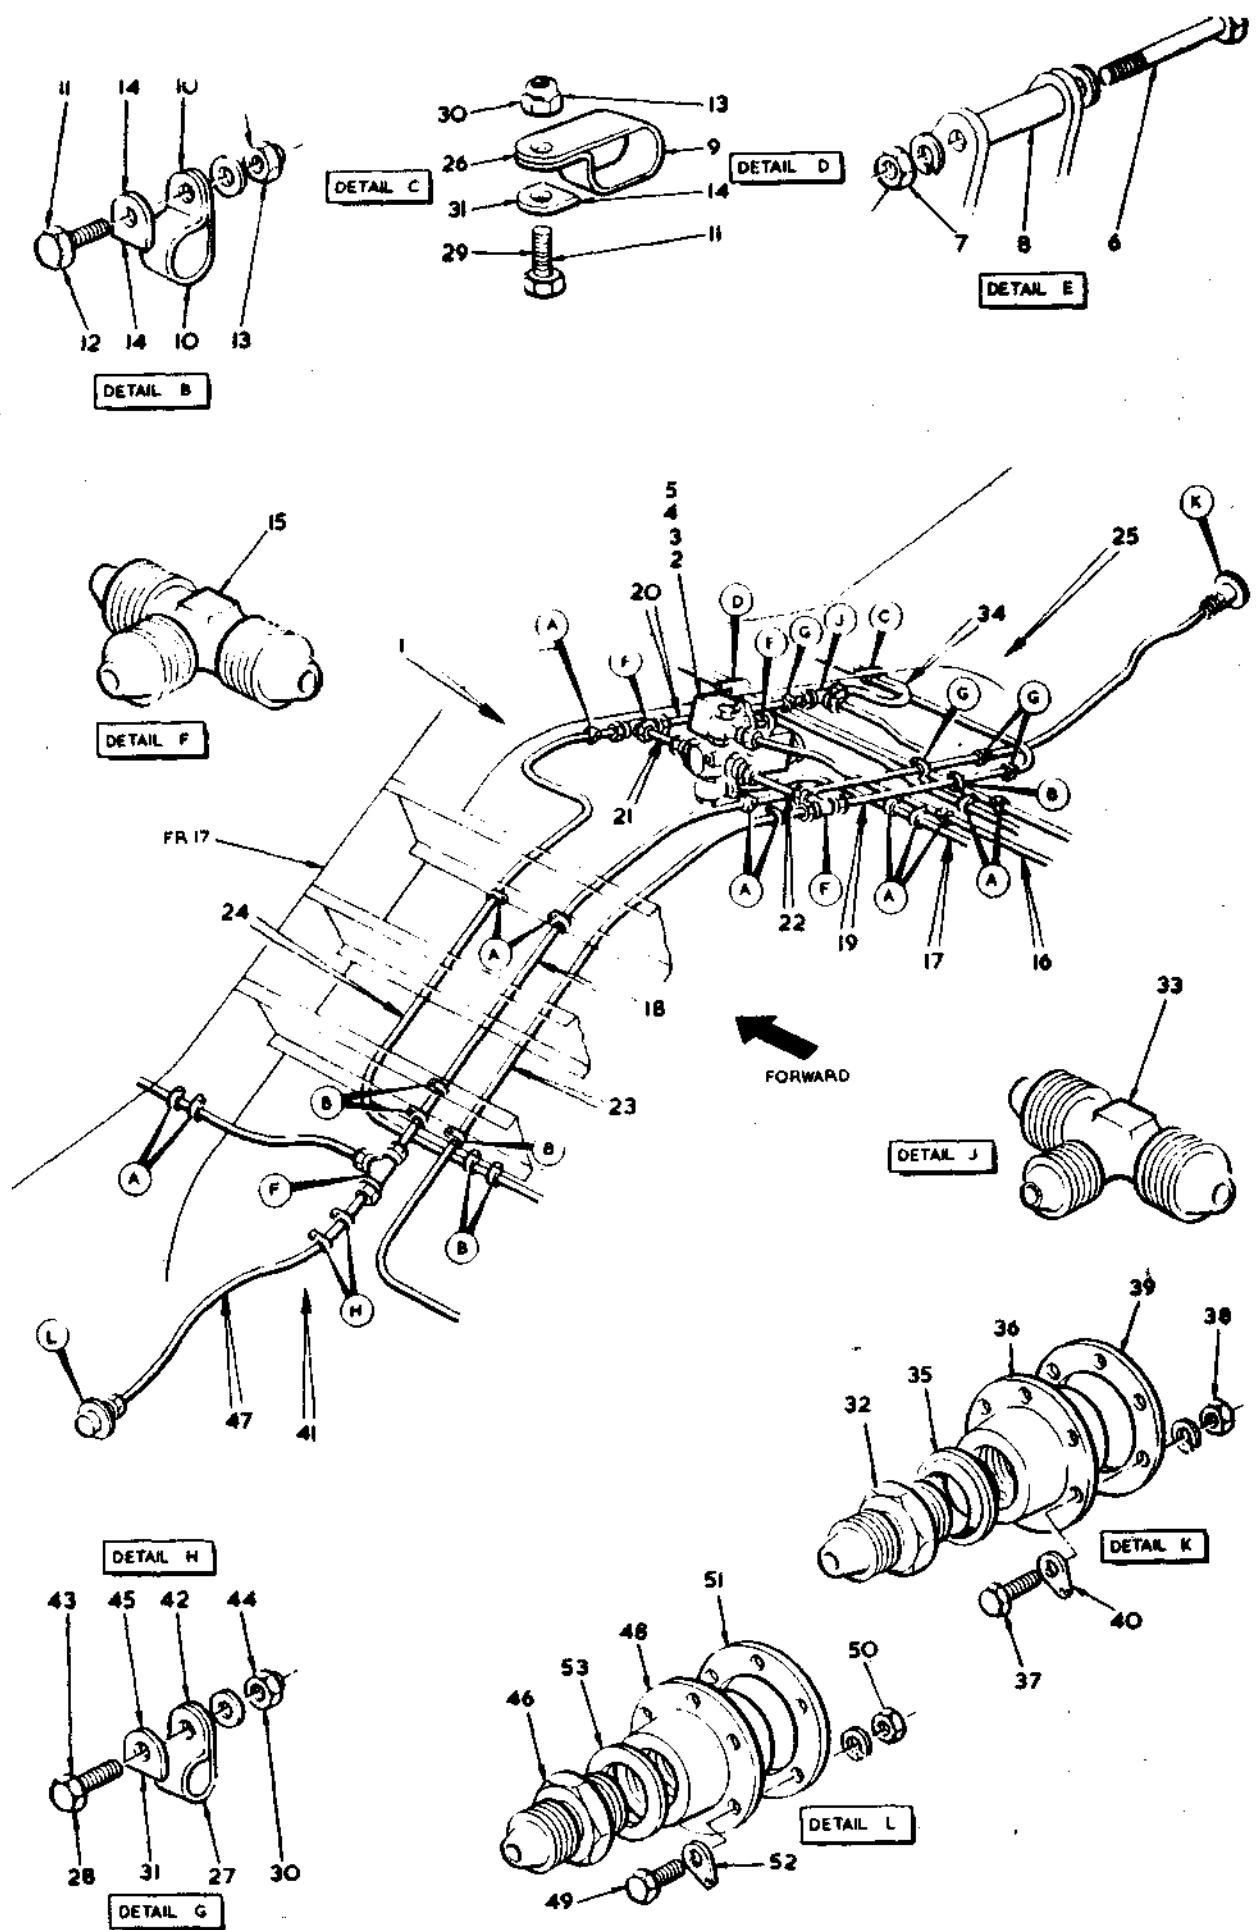


FIG. 6 HYDRAULIC SYSTEM

CODE AC

SECT 5H

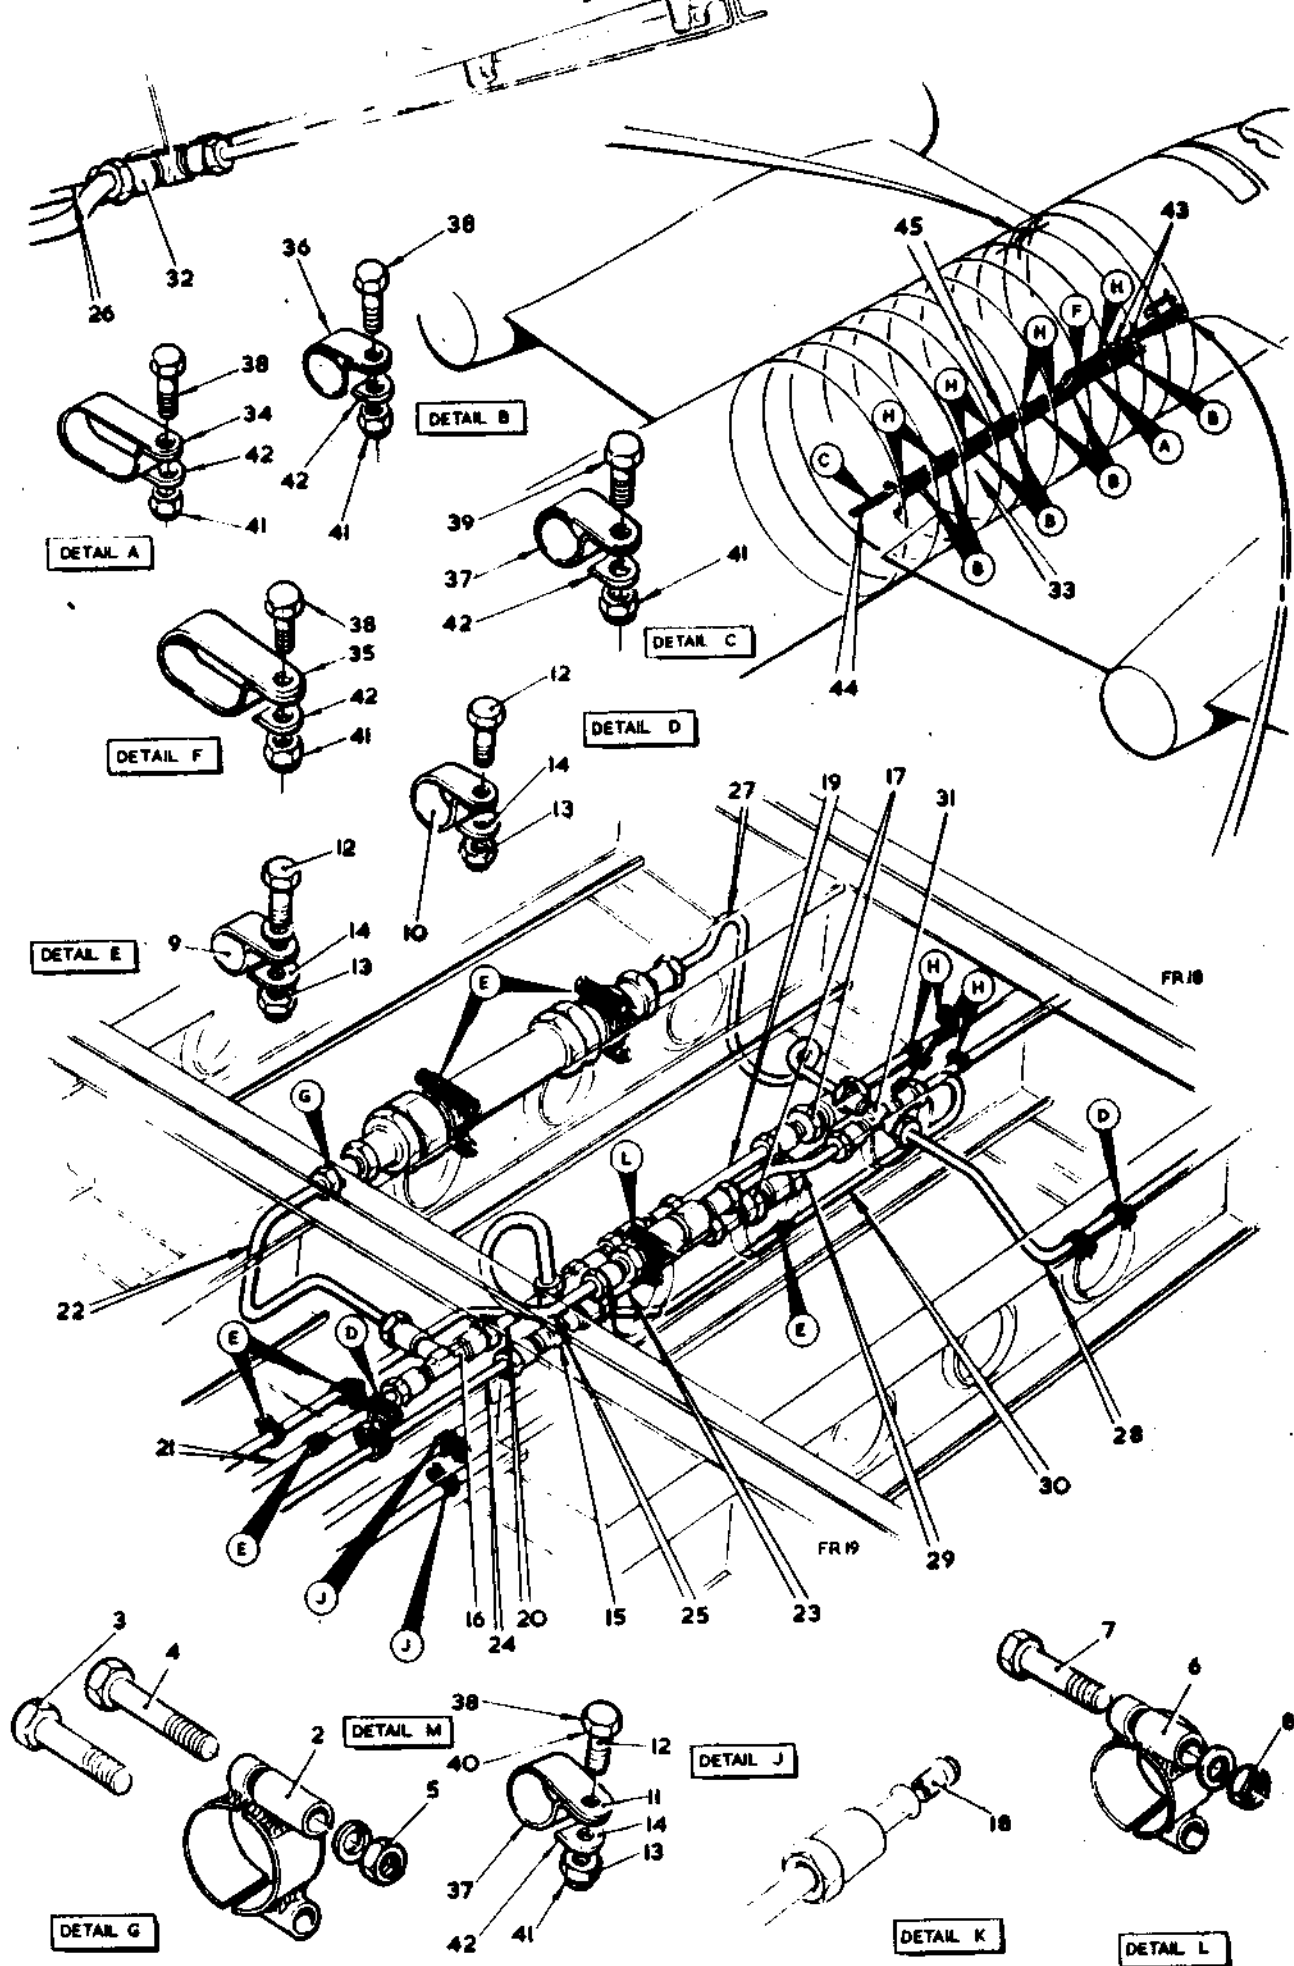


FIG. 7 HYDRAULIC SYSTEM

CODE A

SECT 5H

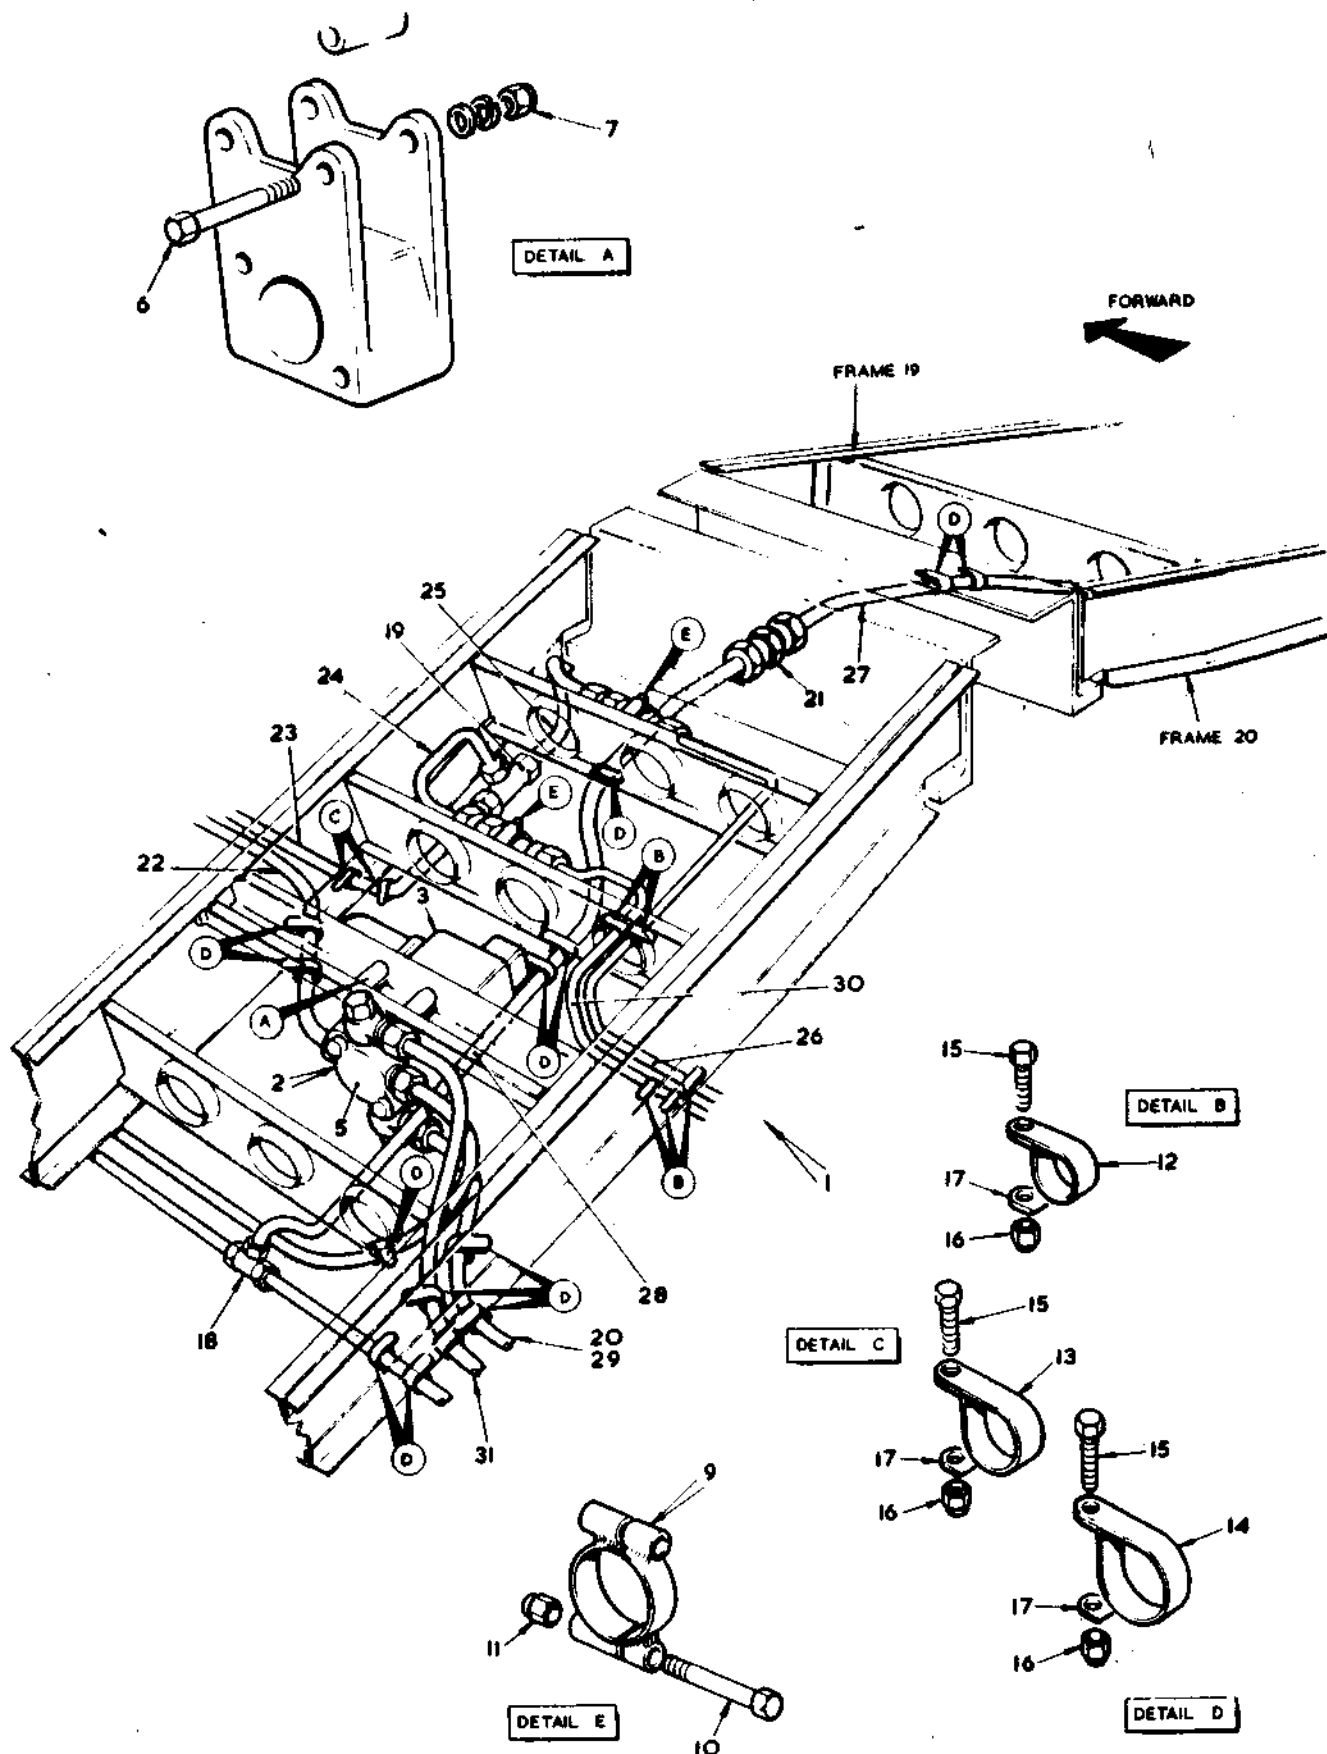


FIG.8 HYDRAULIC SYSTEM

CODE A,B,C

SECT.54

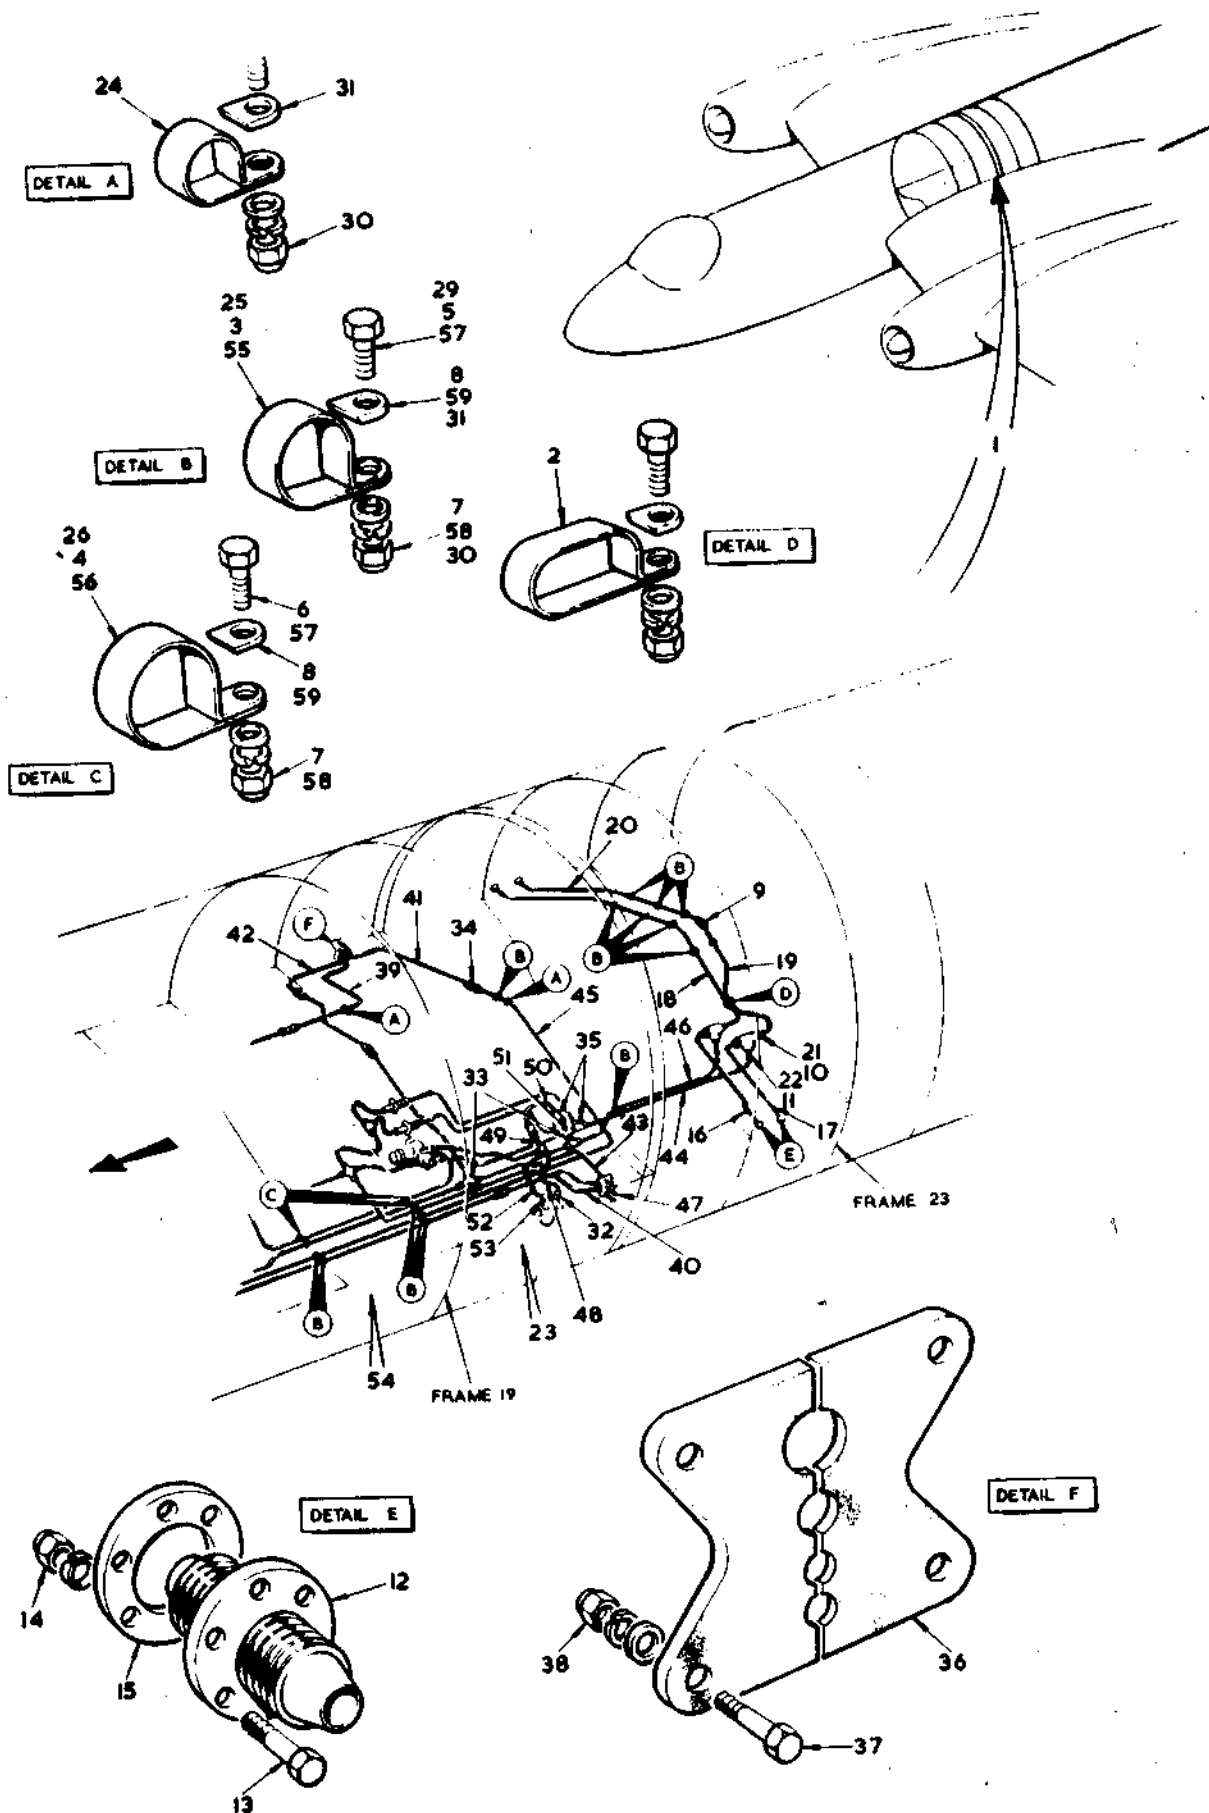


FIG.9 HYDRAULIC SYSTEM

CODE A

SECT.5H

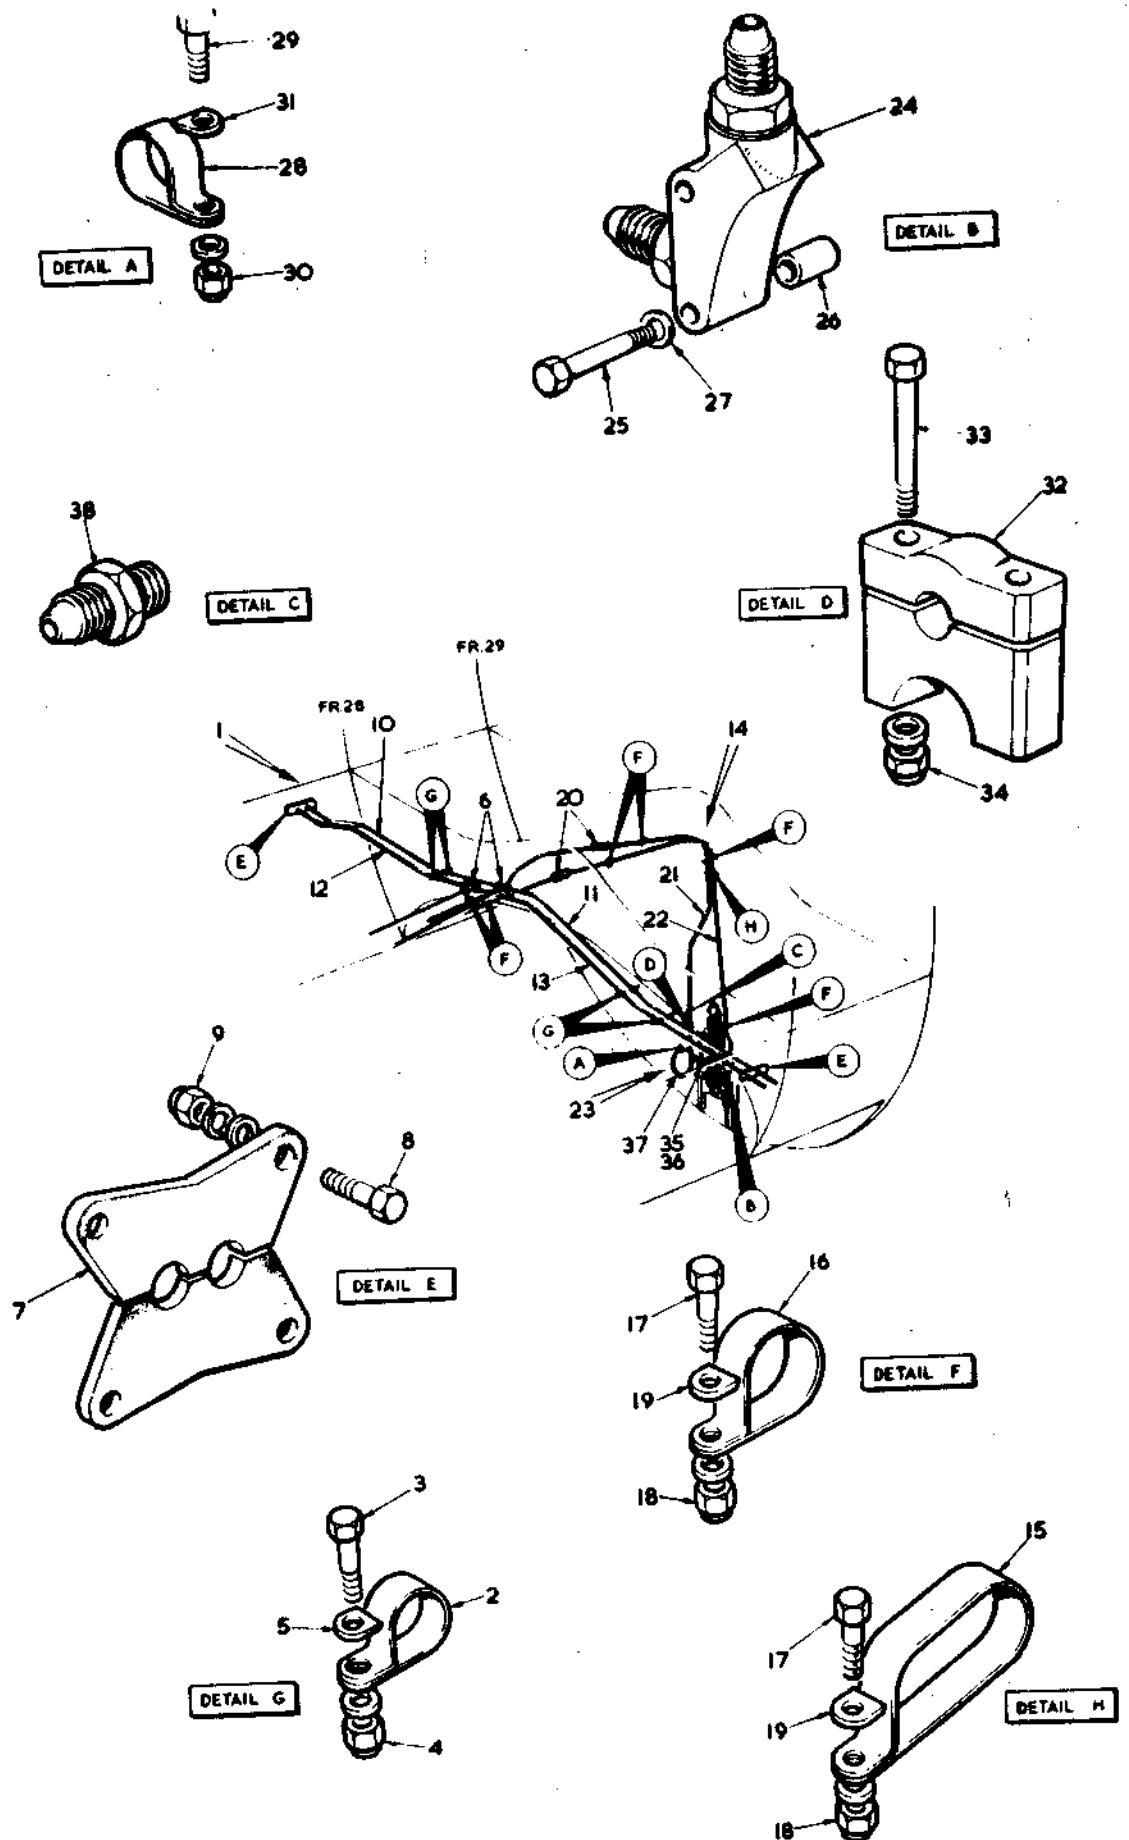


FIG.10 HYDRAULIC SYSTEM

CODE A

SECT. 2

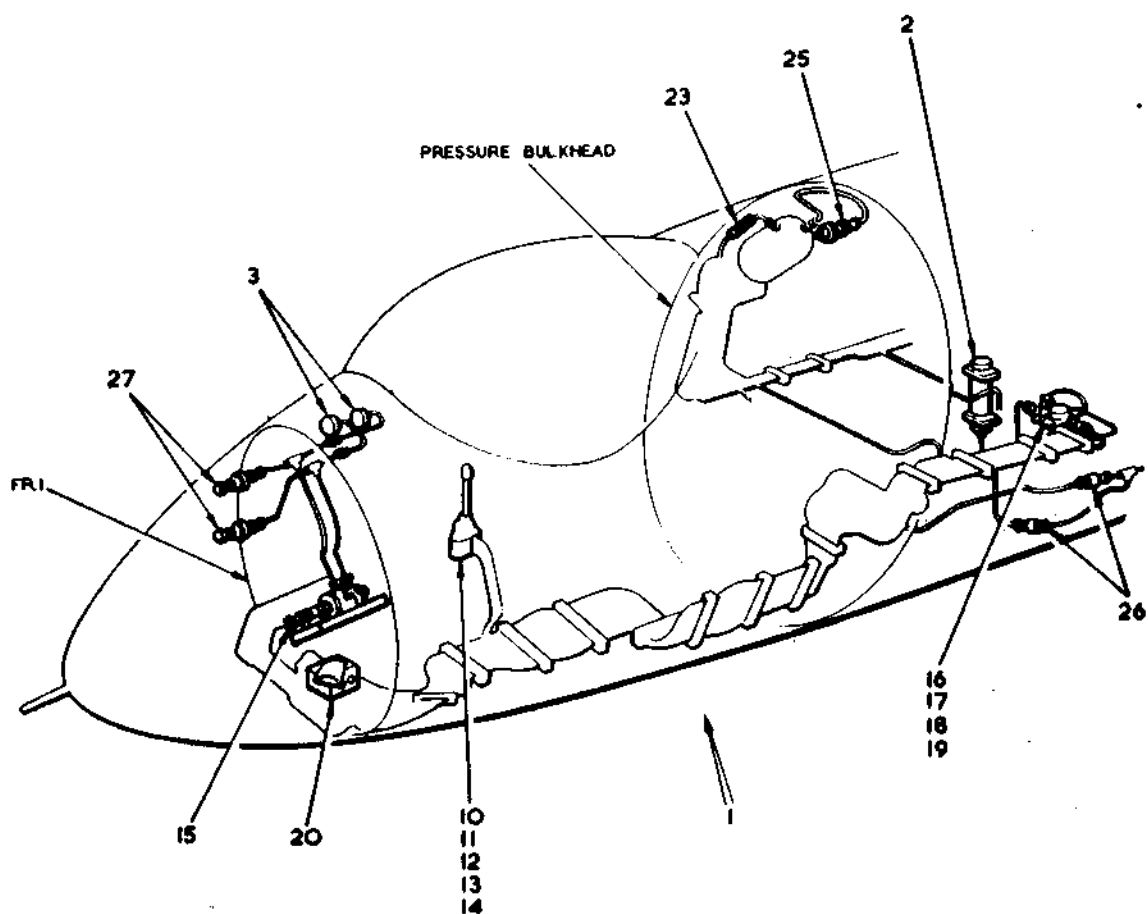
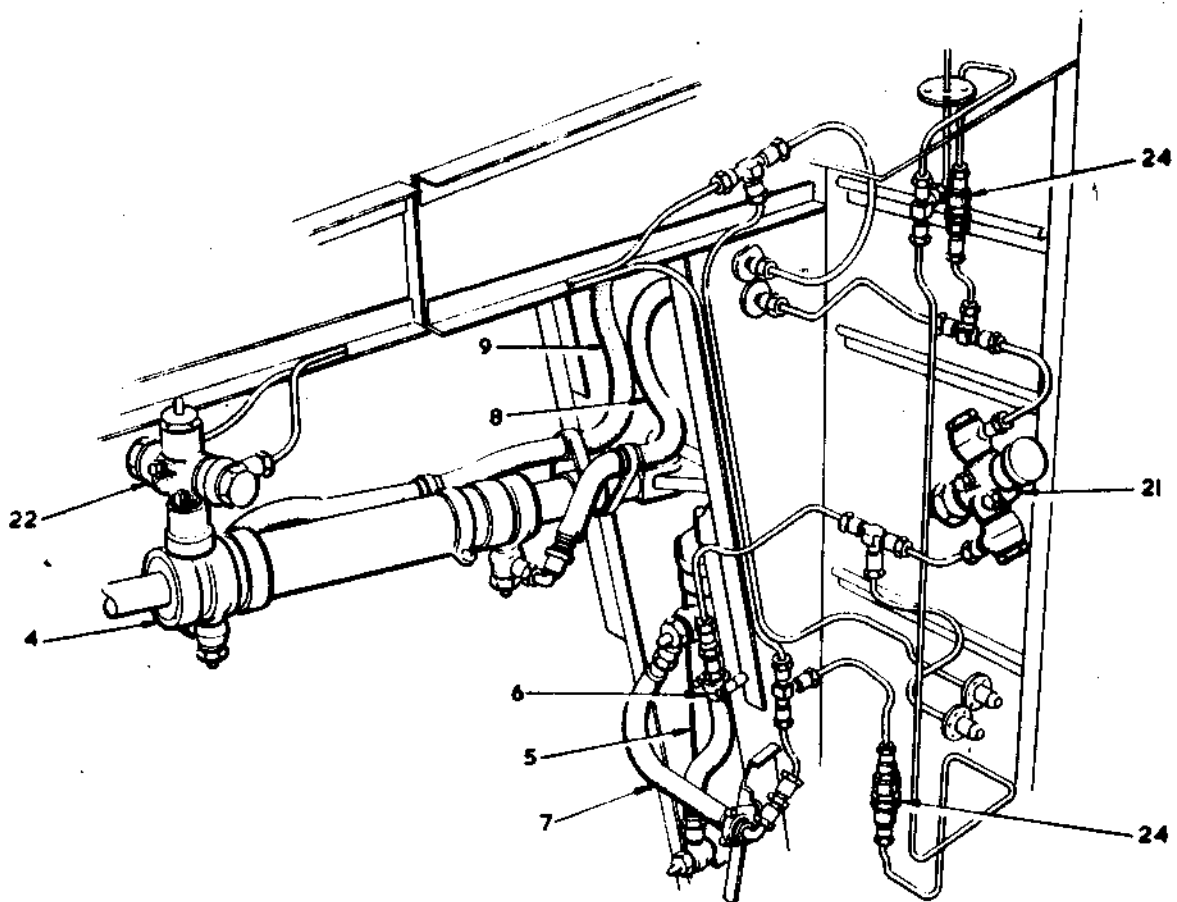


FIG. II HYDRAULIC SYSTEM


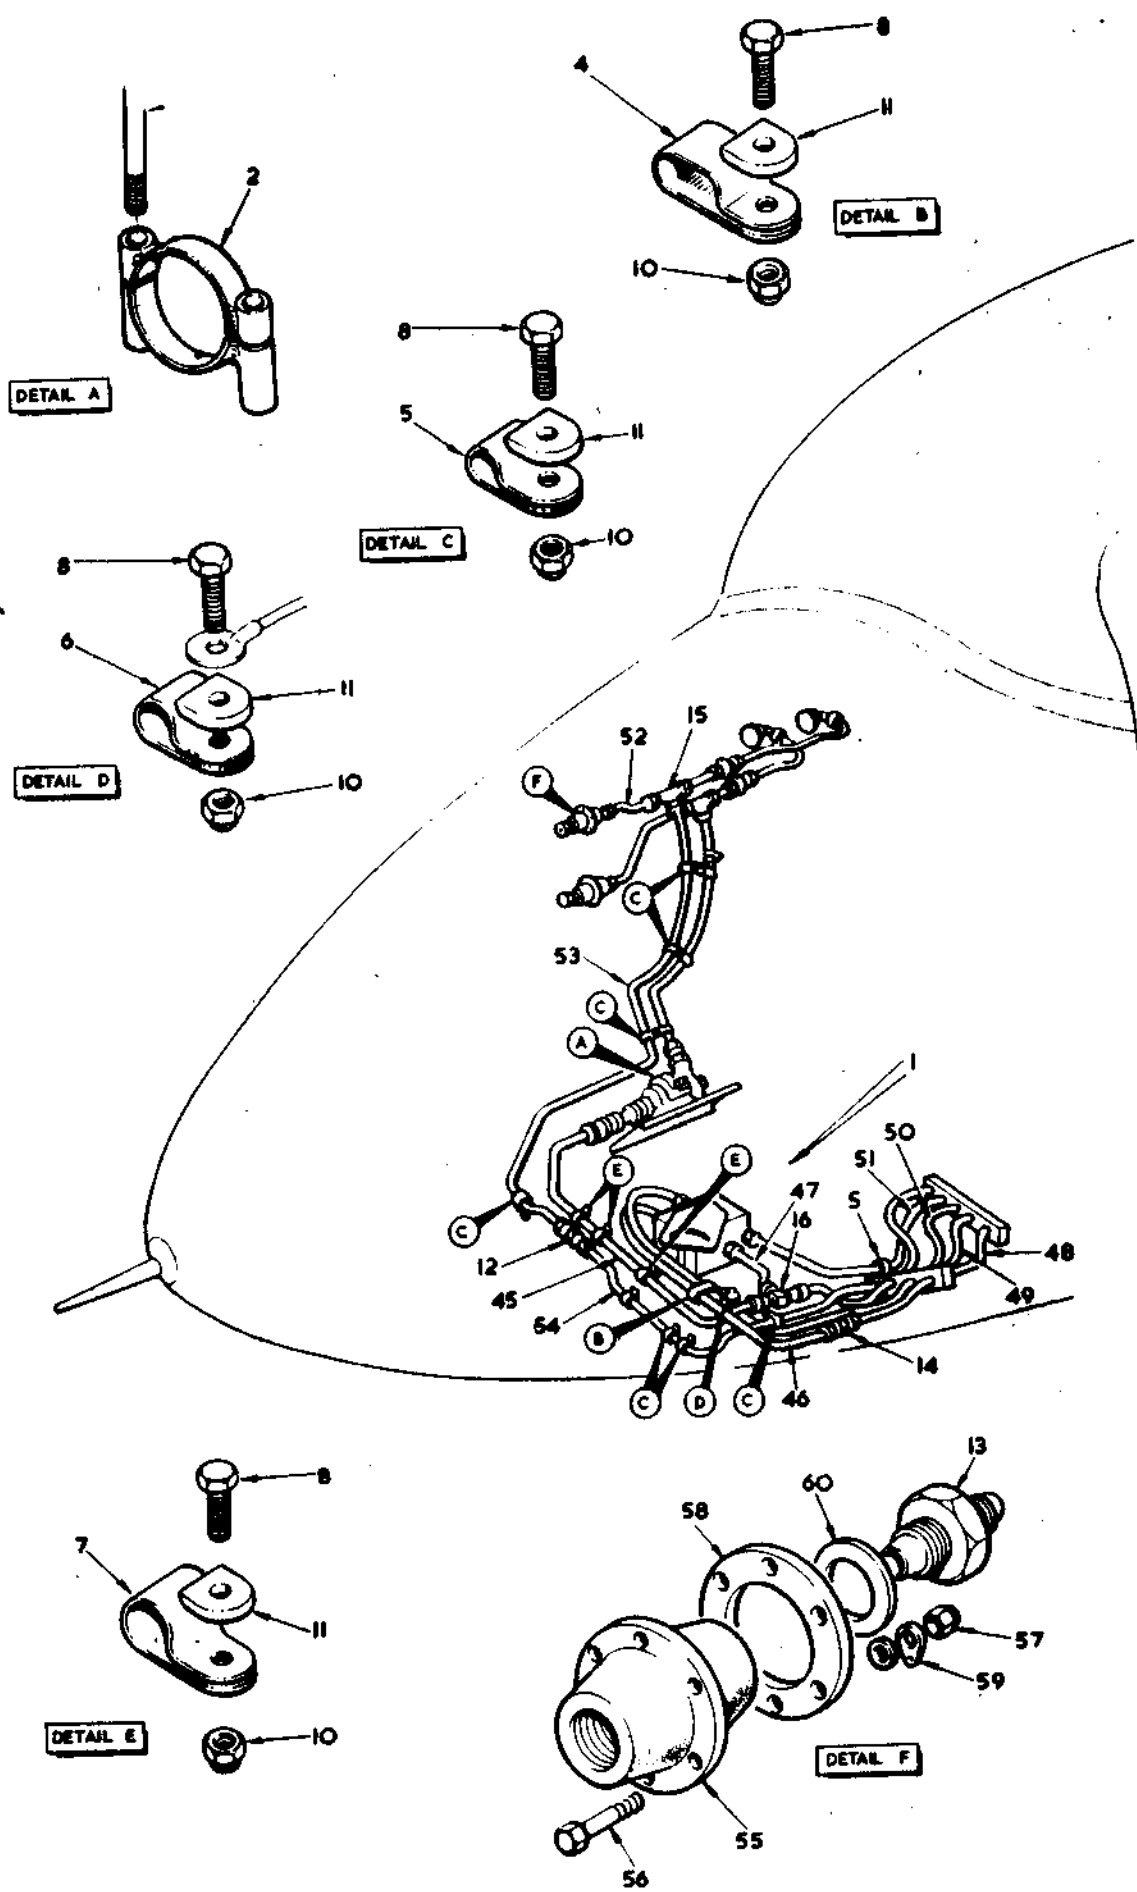


FIG.12A HYDRAULIC SYSTEM

CODE A

SECT 54

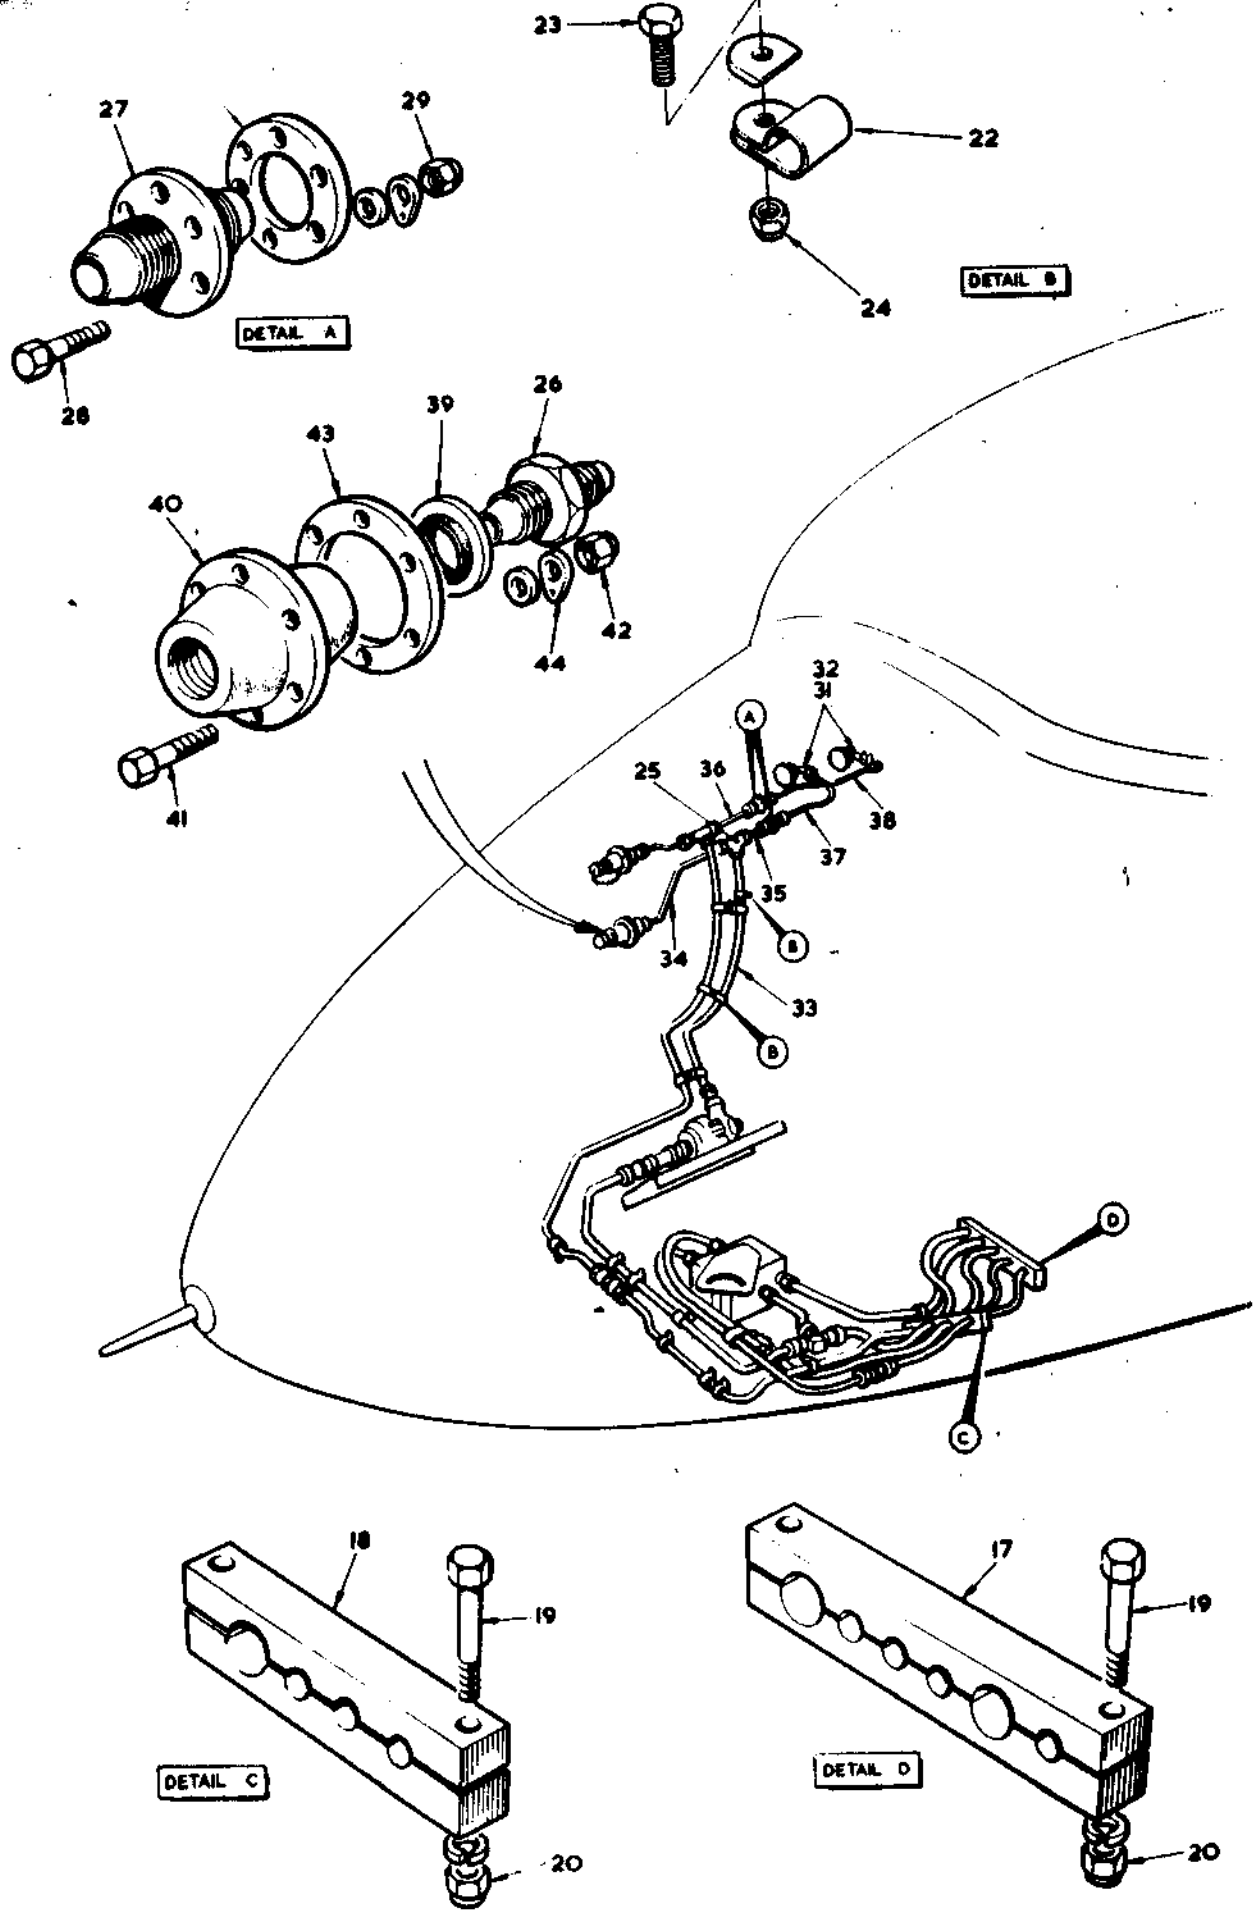

HYDRAULIC SYSTEM

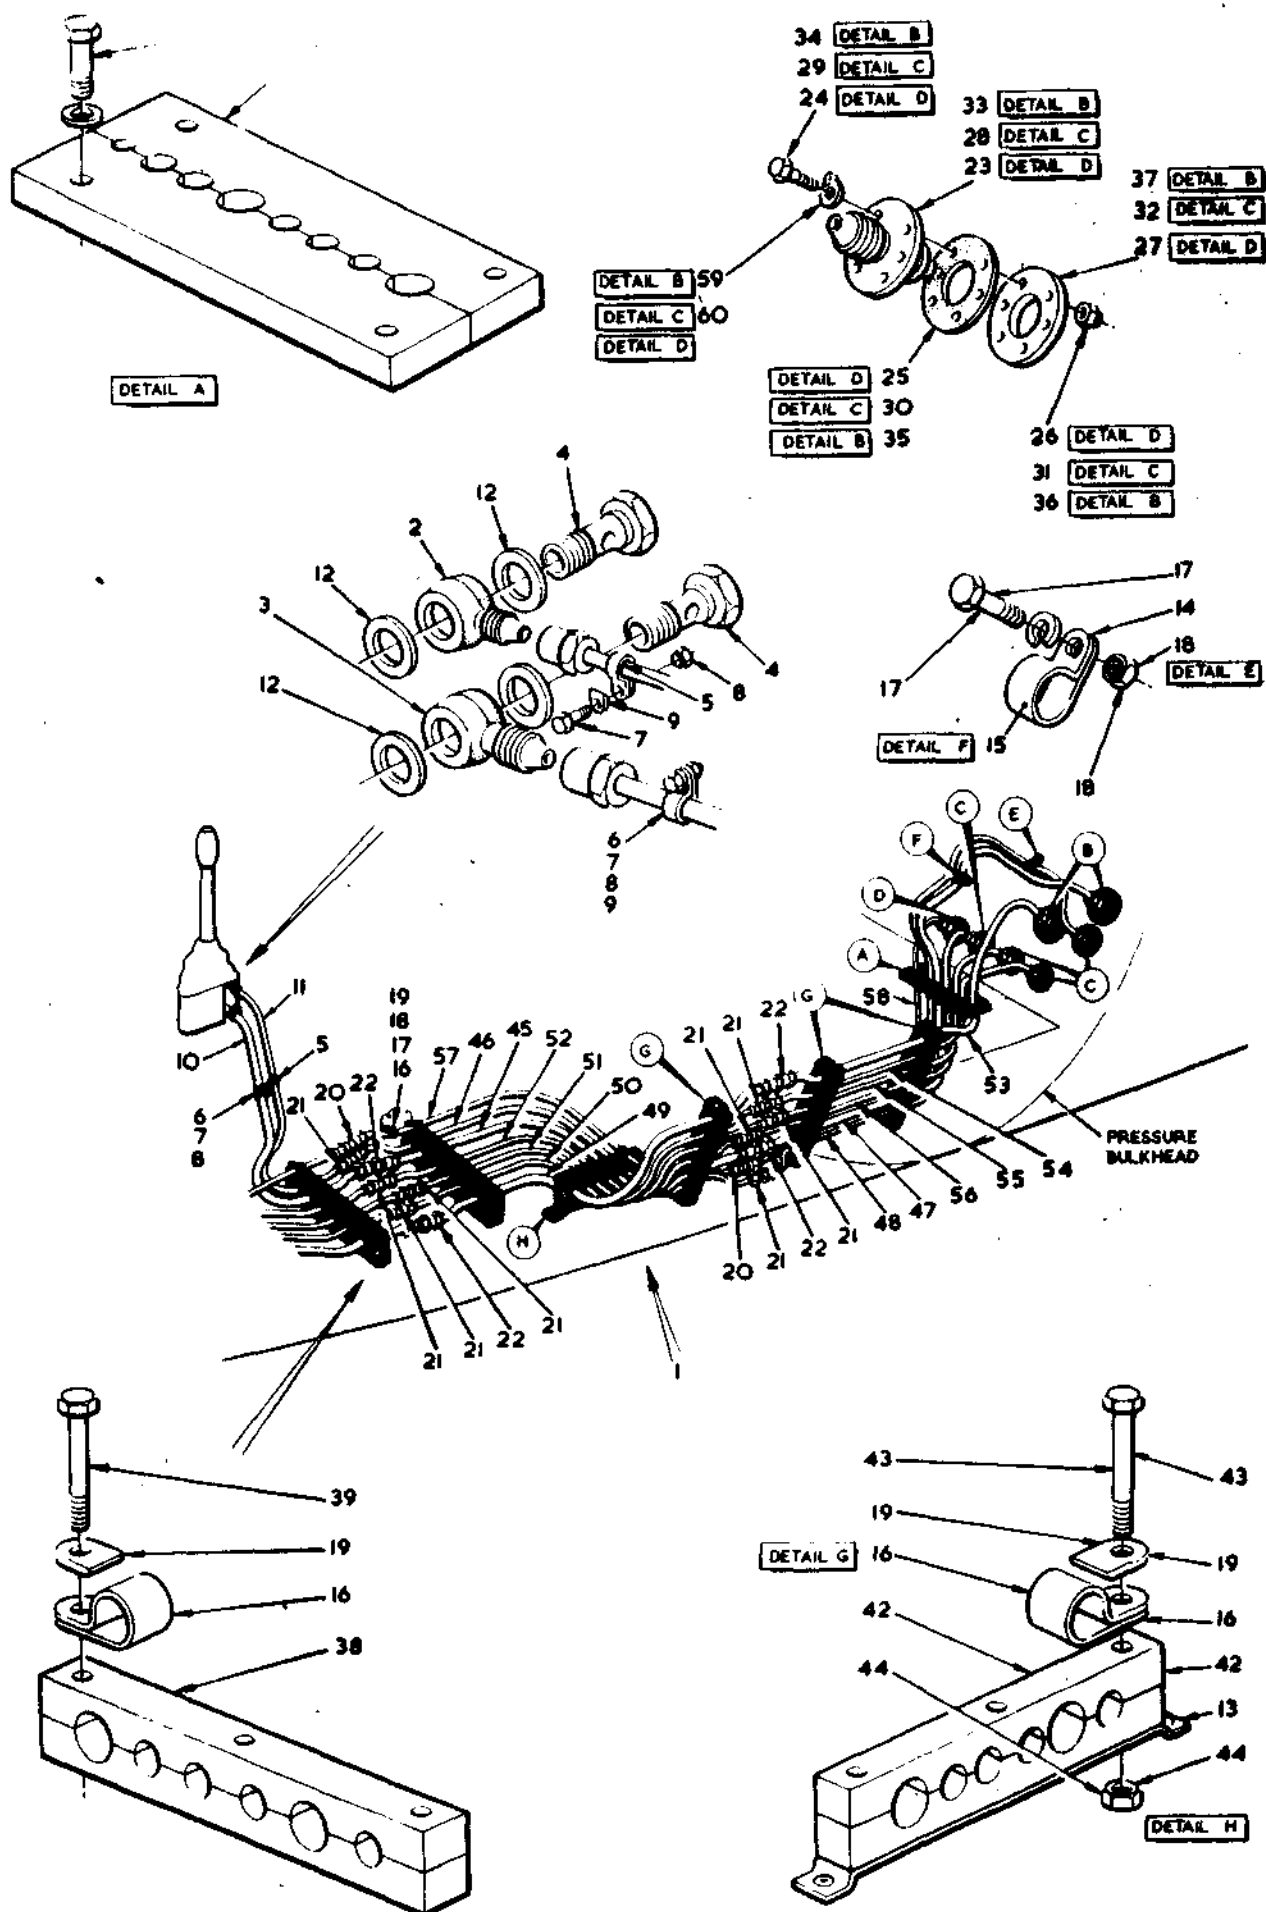


FIG.13 HYDRAULIC SYSTEM

CODE A

SECT 5H

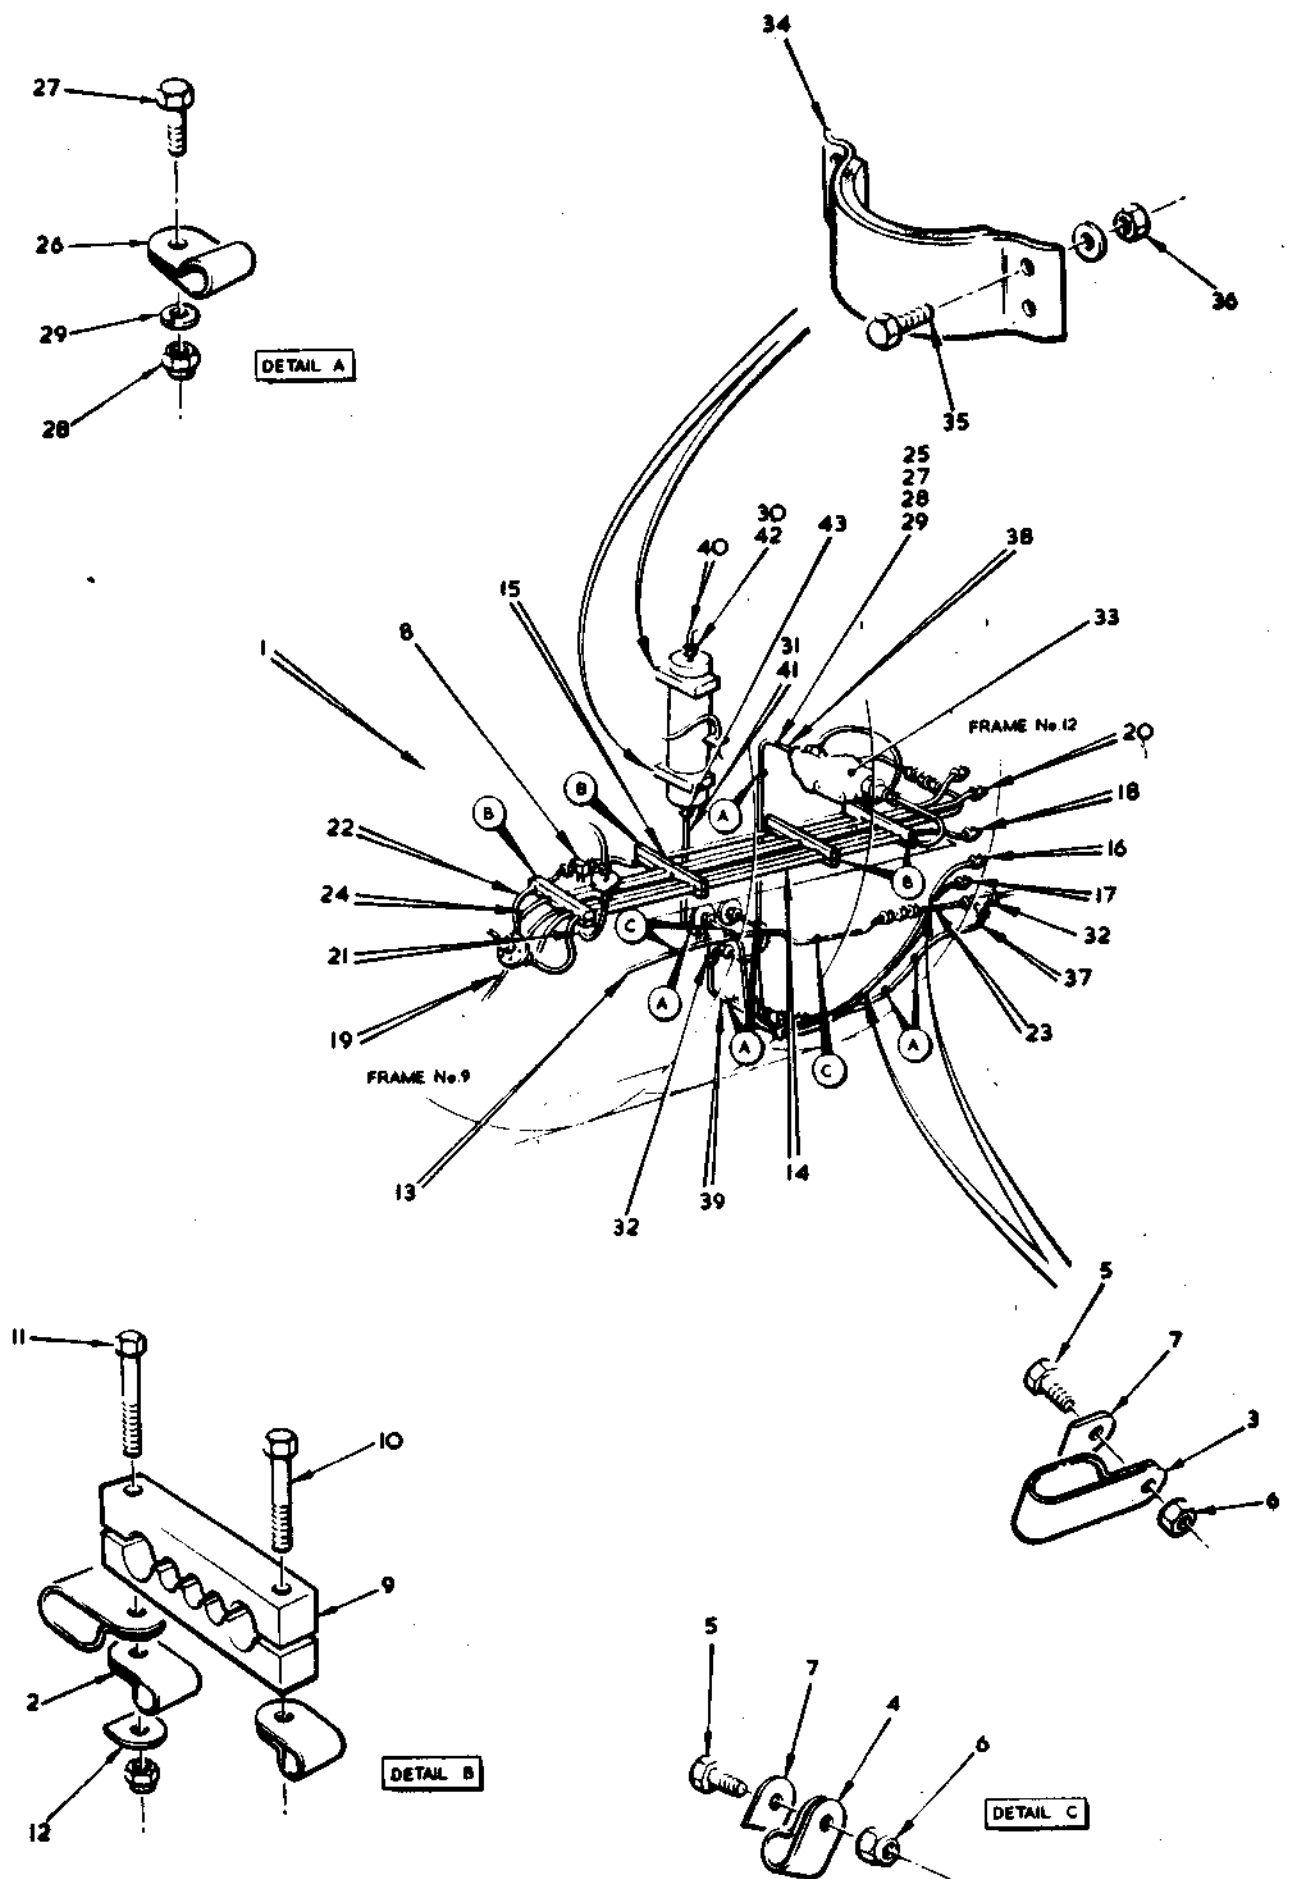


FIG.14 HYDRAULIC SYSTEM

CODE A

SECT. 8H

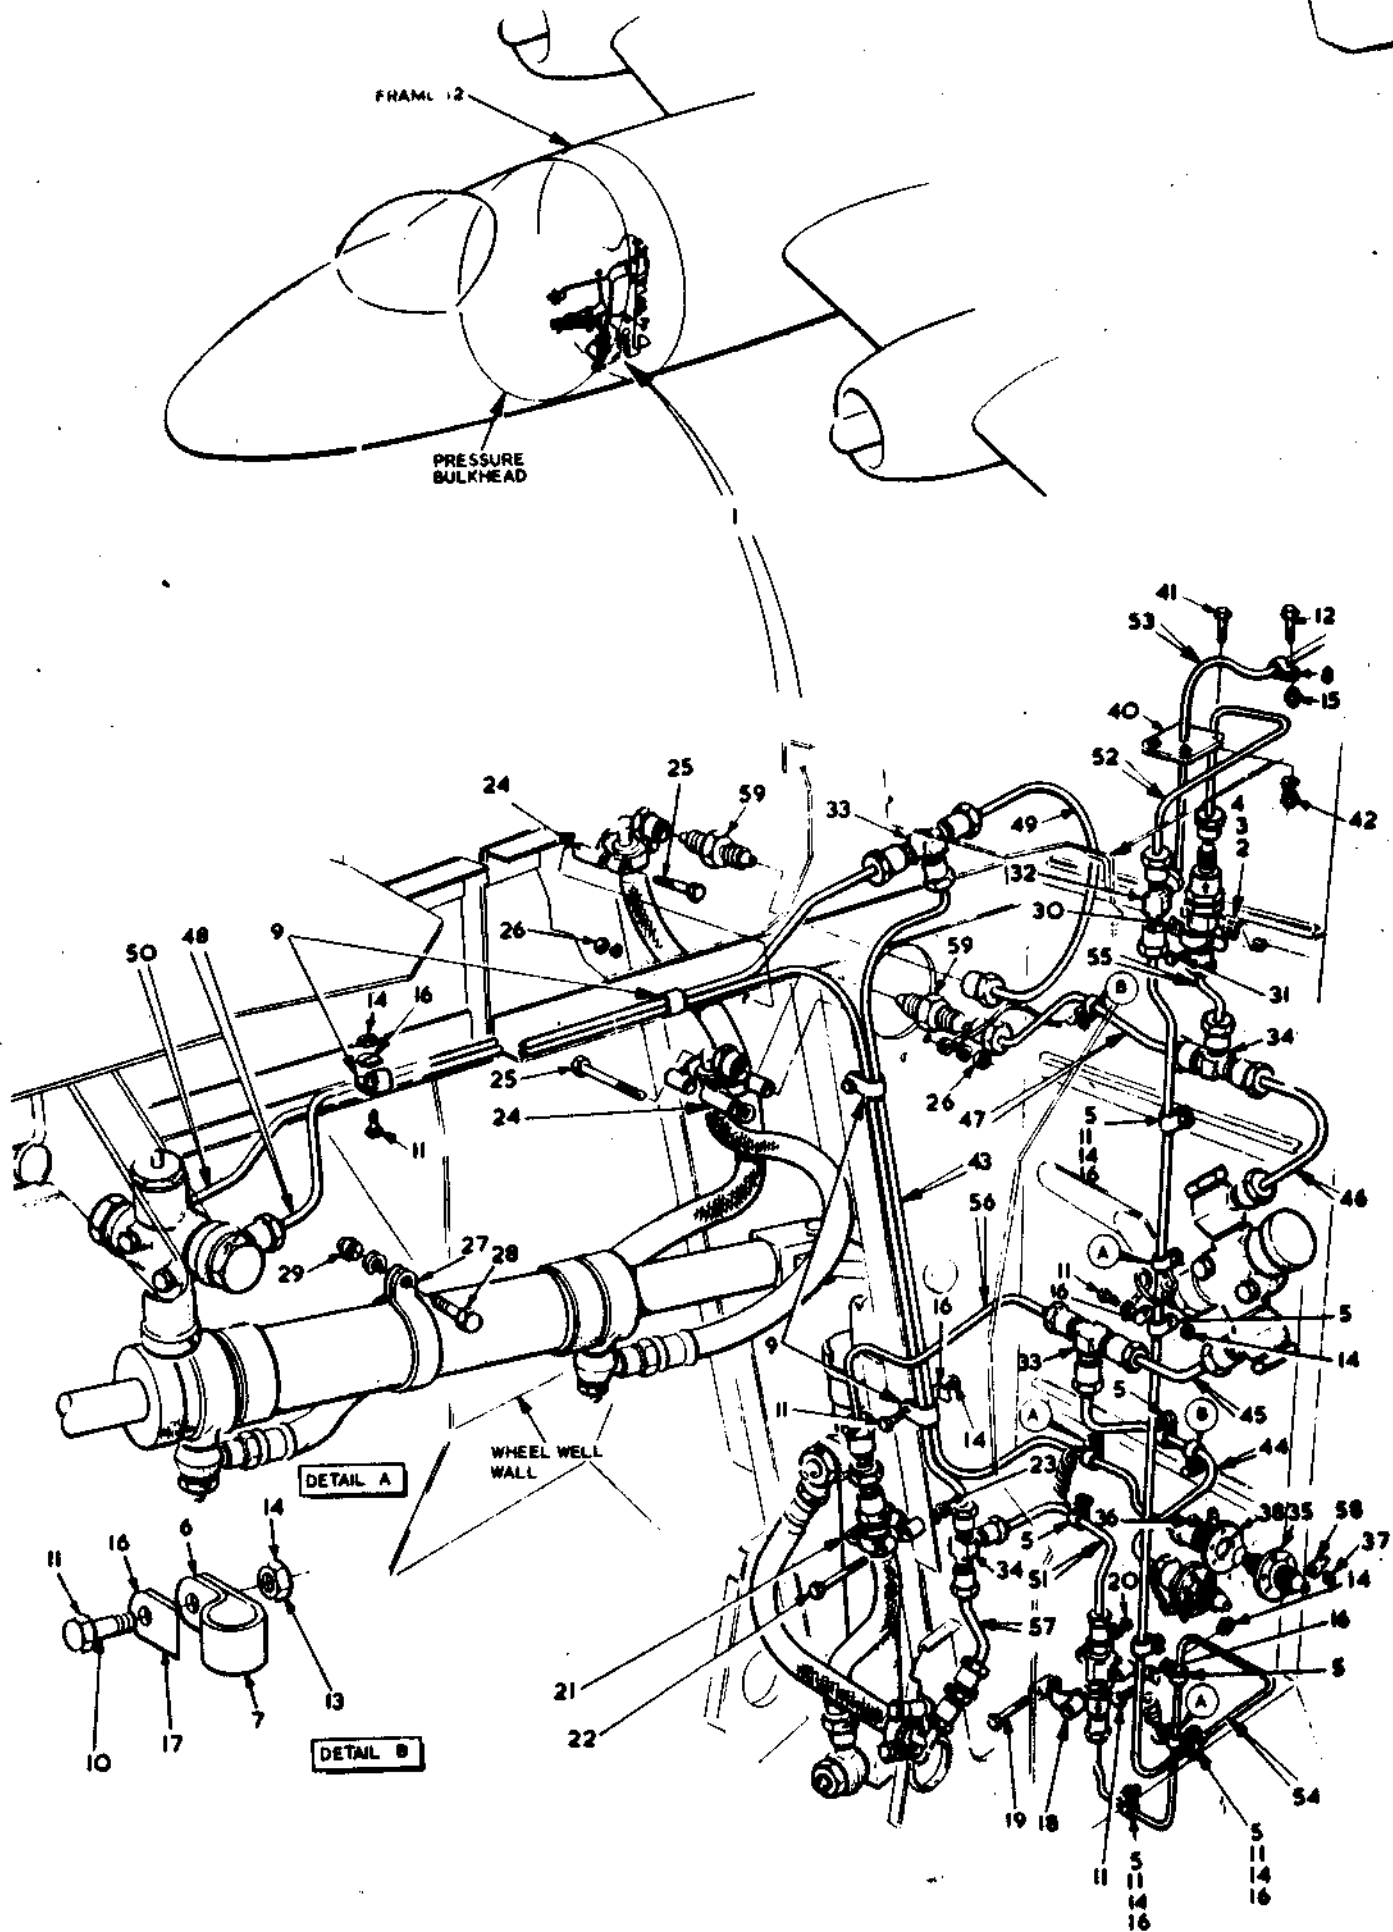


FIG. 15 HYDRAULIC SYSTEM

CODE A

SECT 34

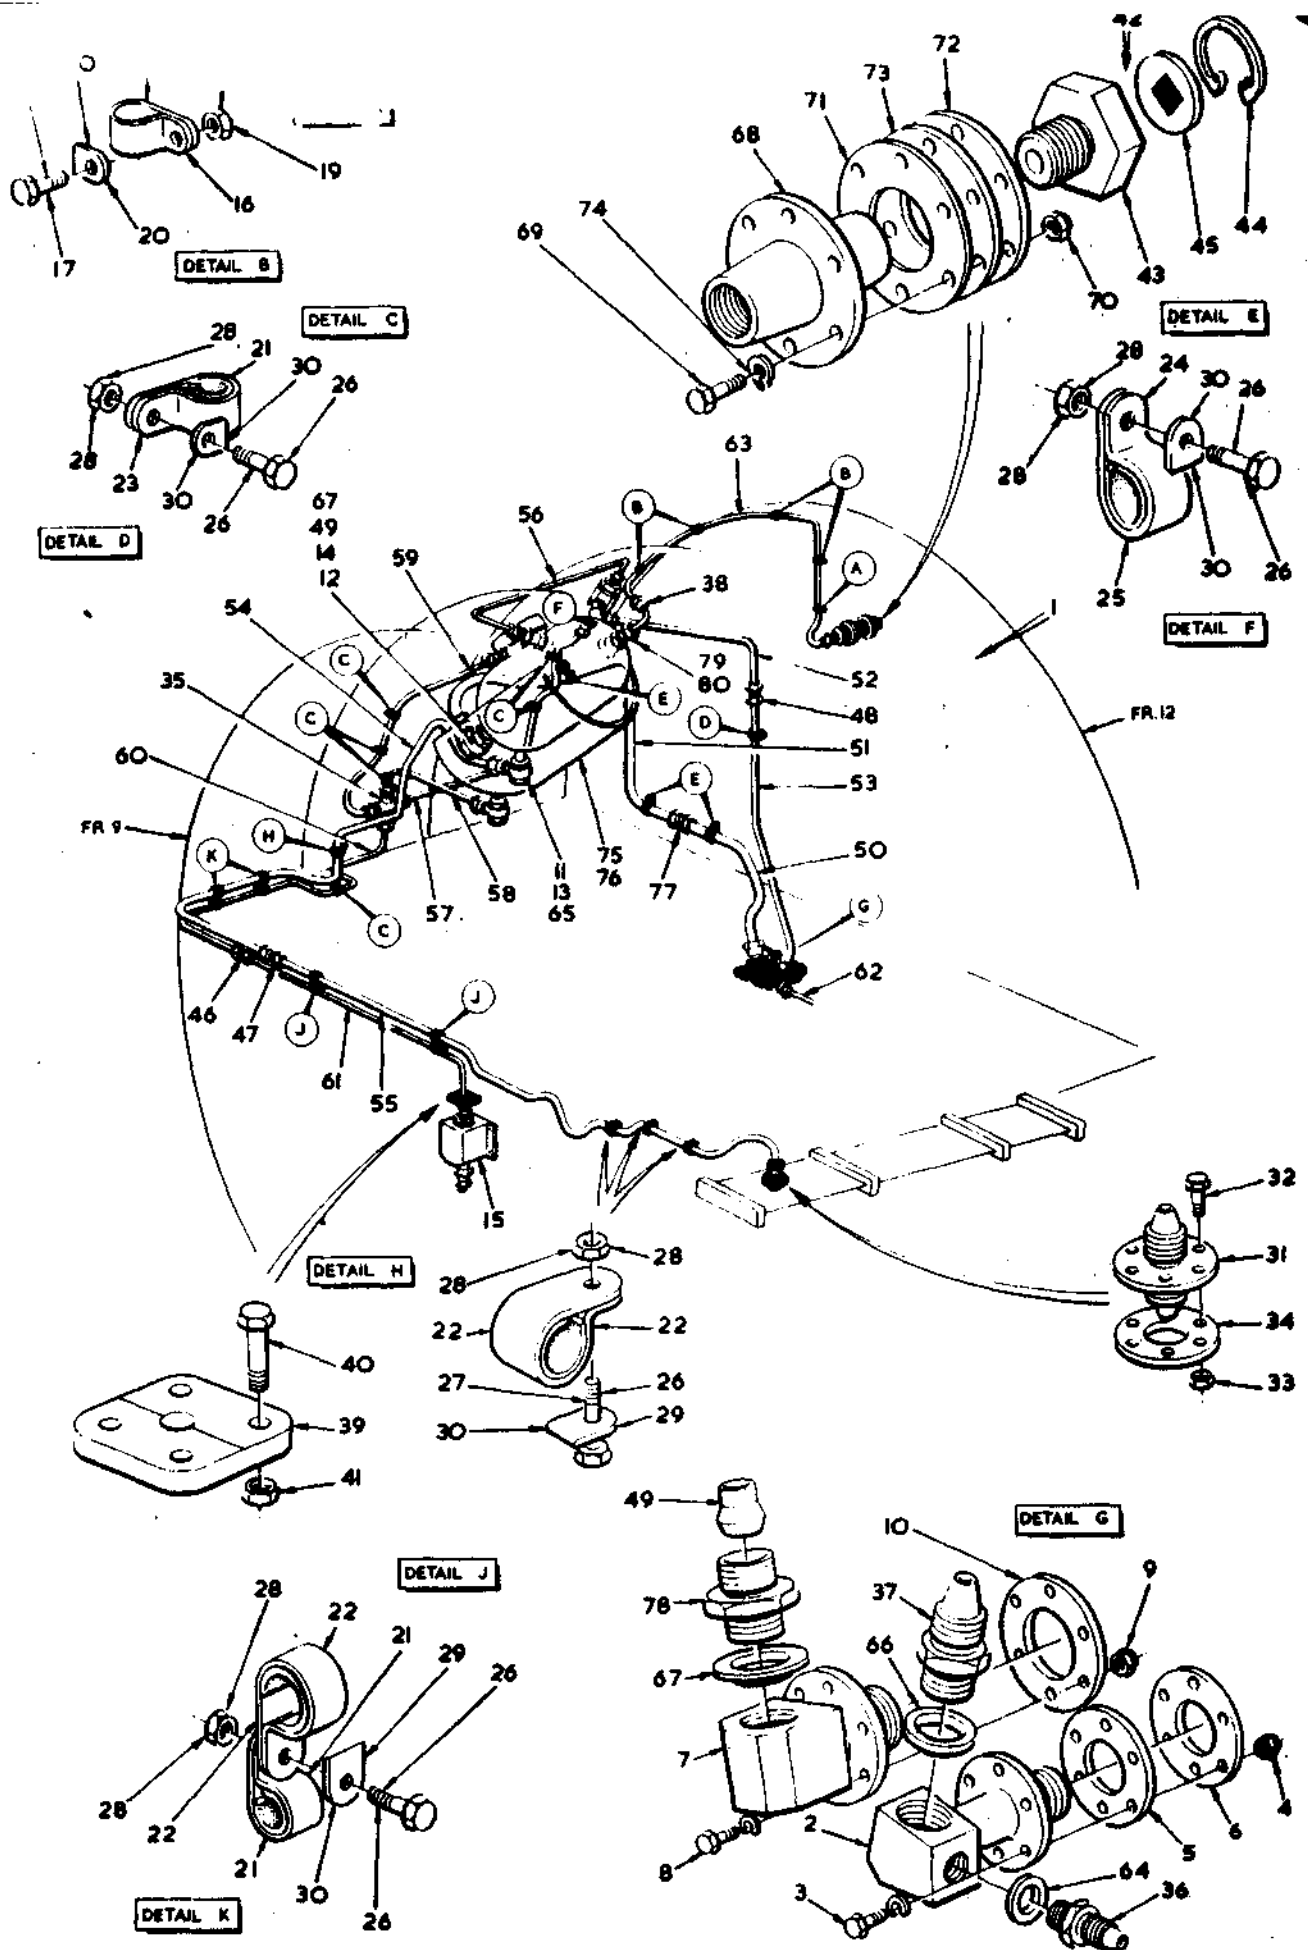


FIG.16 HYDRAULIC SYSTEM

CODE A,B

SECT 5H

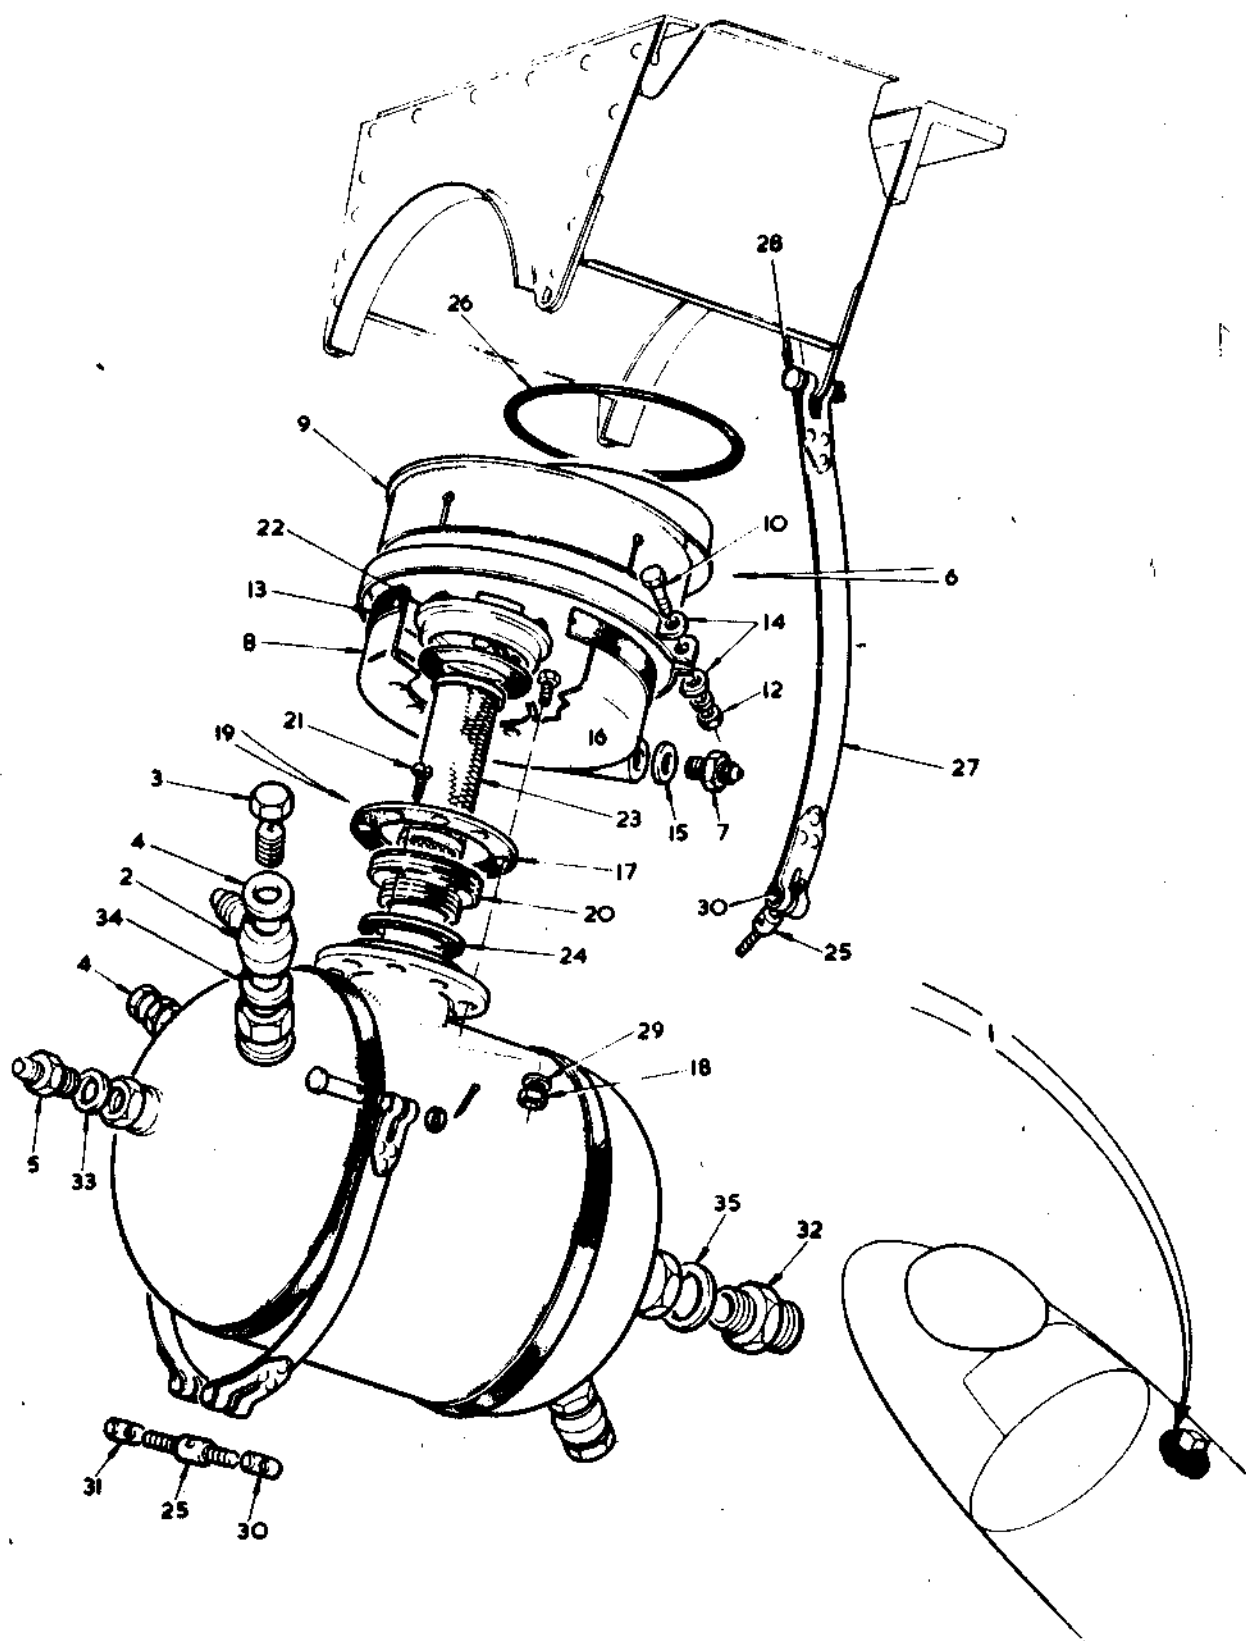


FIG.17 HYDRAULIC SYSTEM

CODE A,B,C

SECT SH

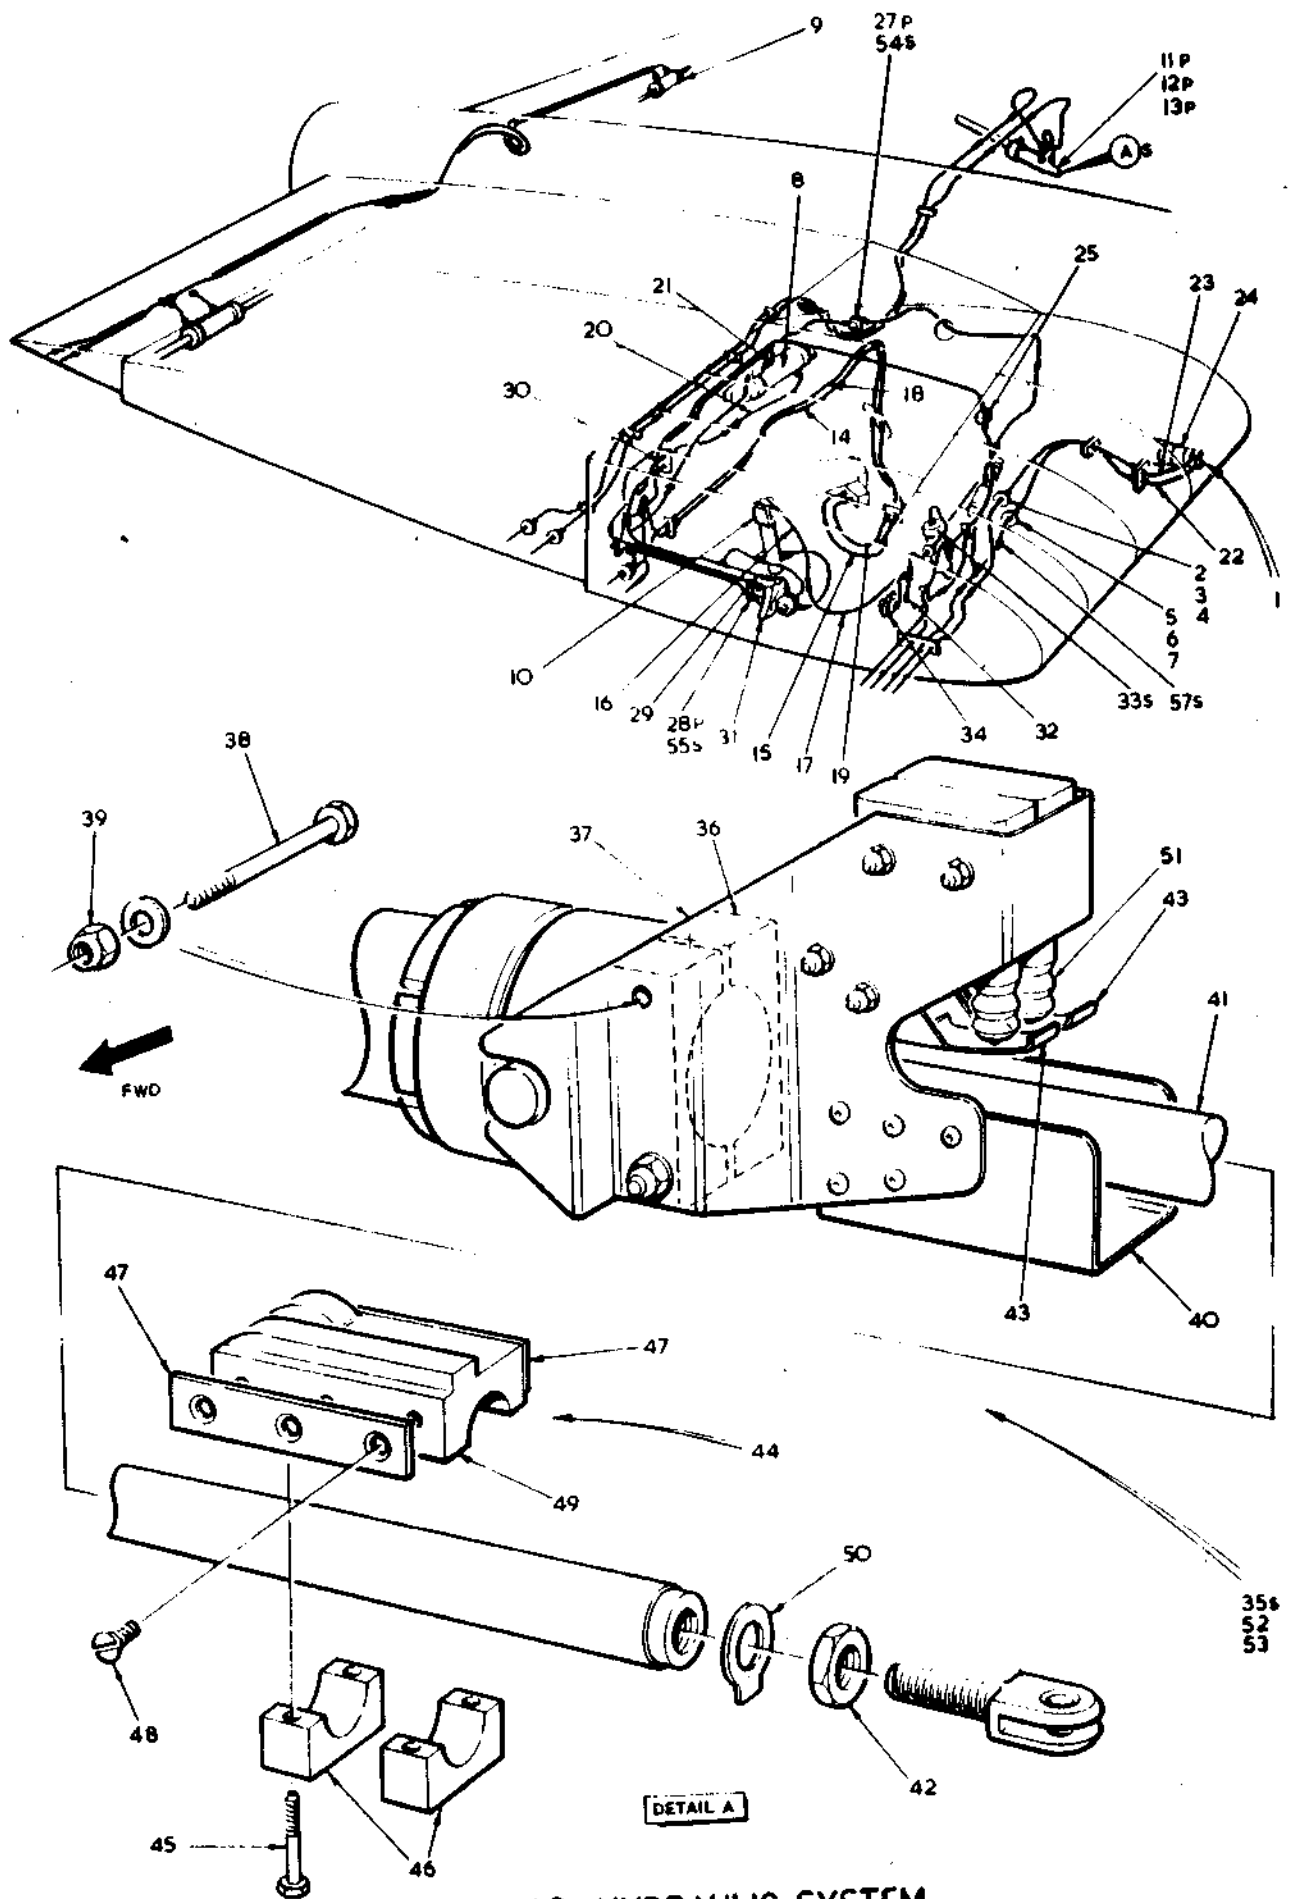


FIG.18 HYDRAULIC SYSTEM

SECT. SH.

CODE A & B

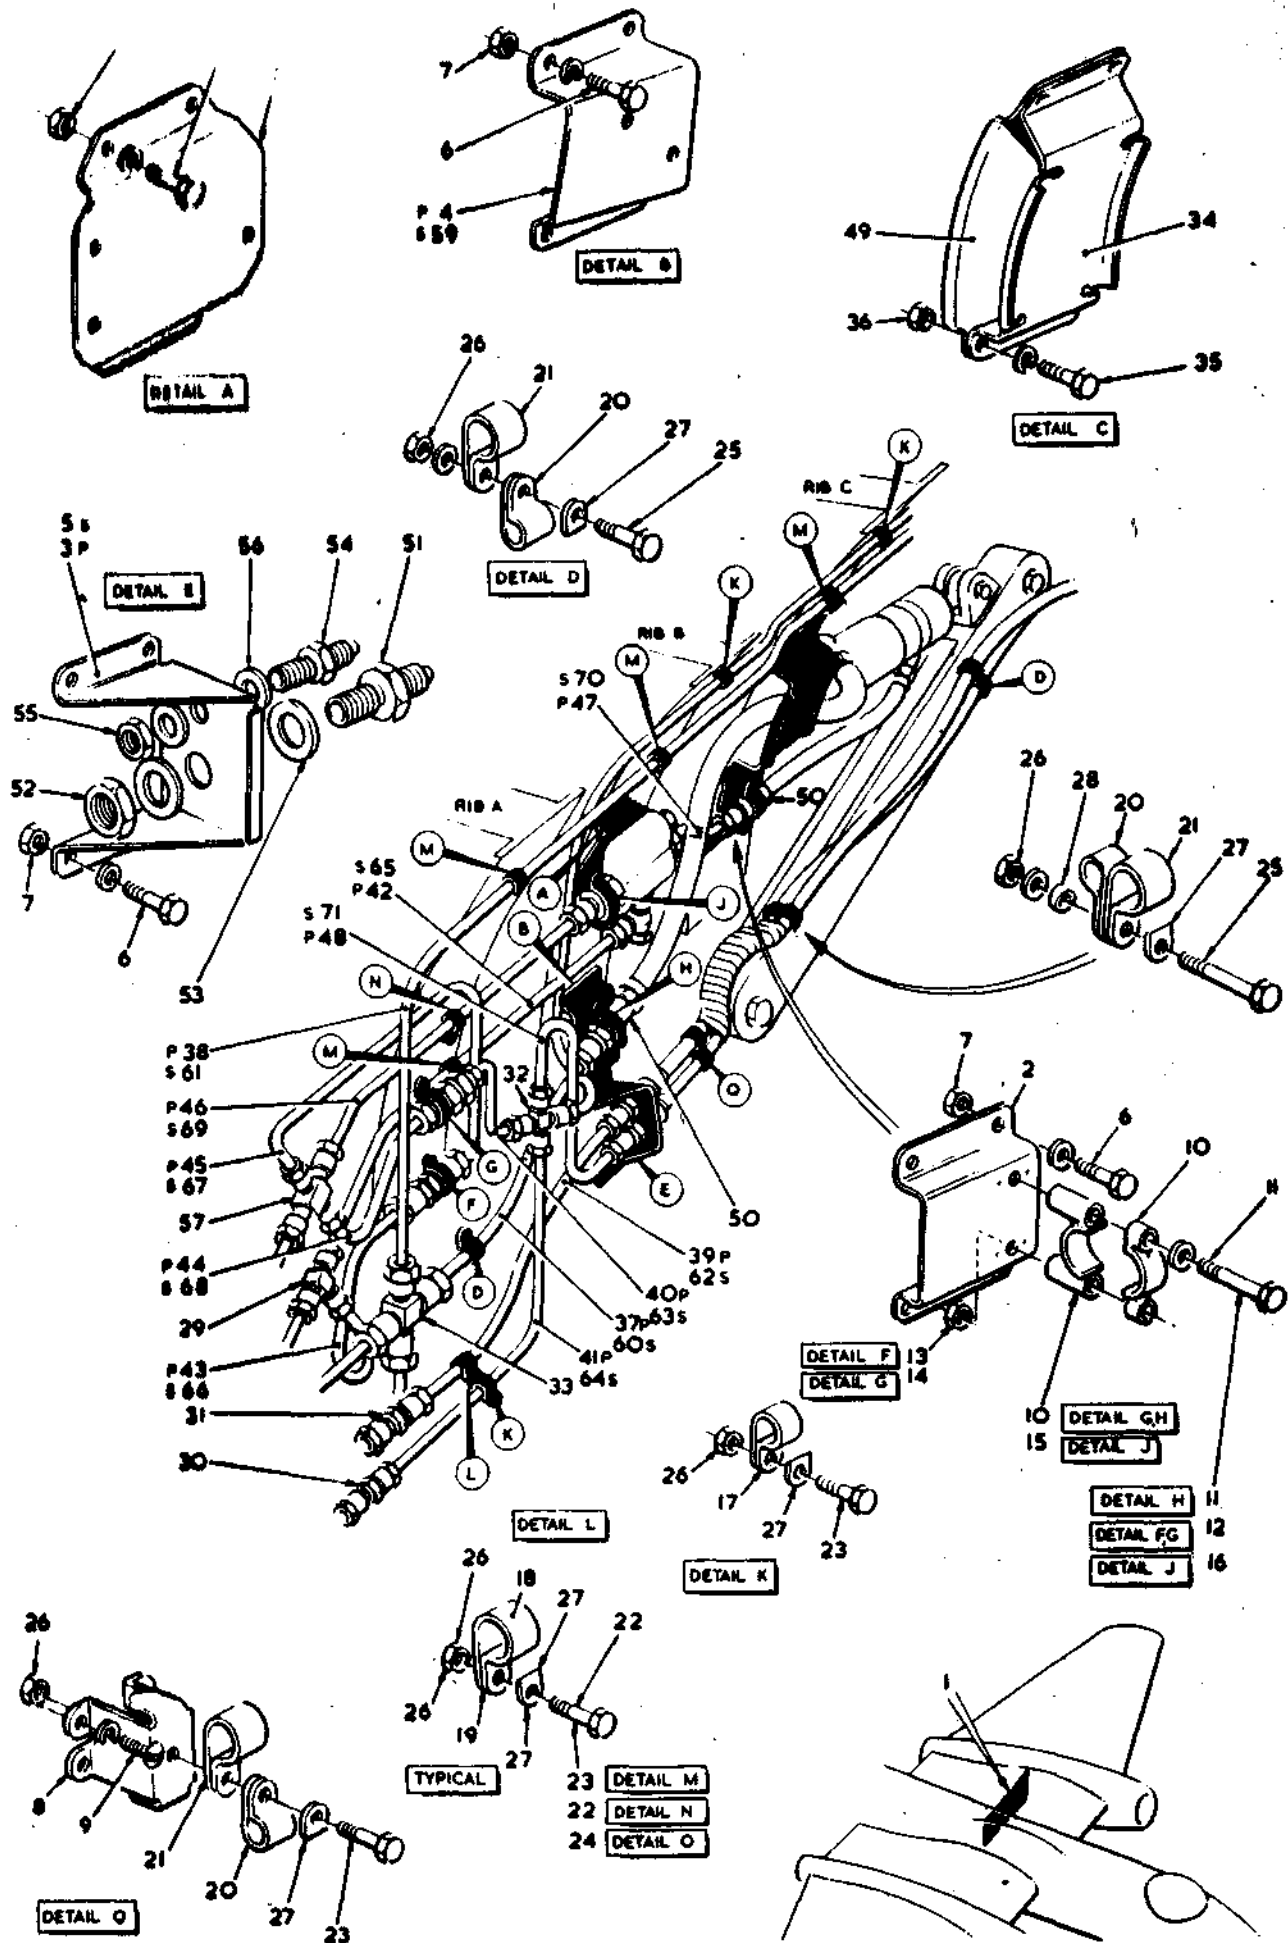


FIG. 19 HYDRAULIC SYSTEM

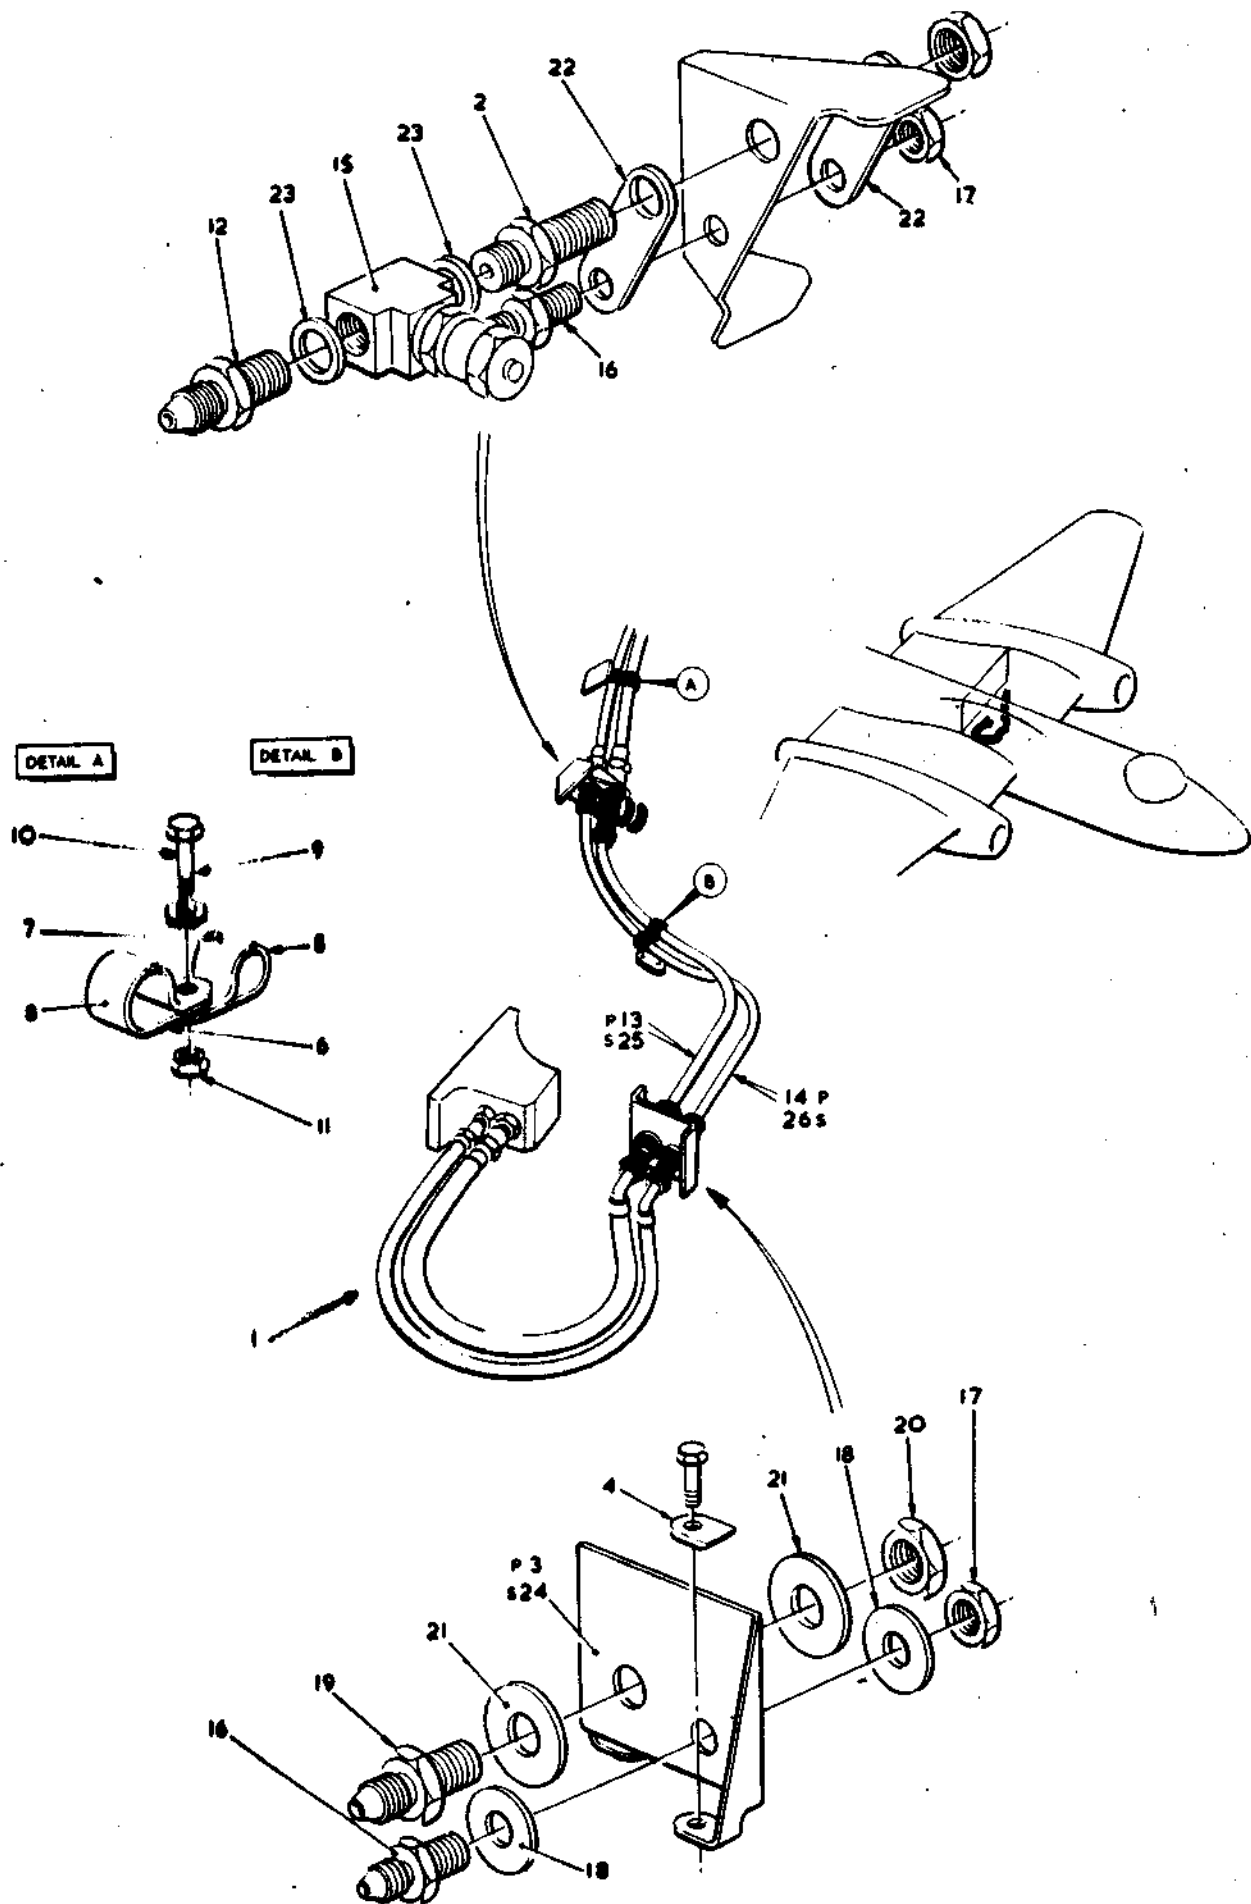


FIG. 20 HYDRAULIC SYSTEM

CODE A B & C

SECT 5H

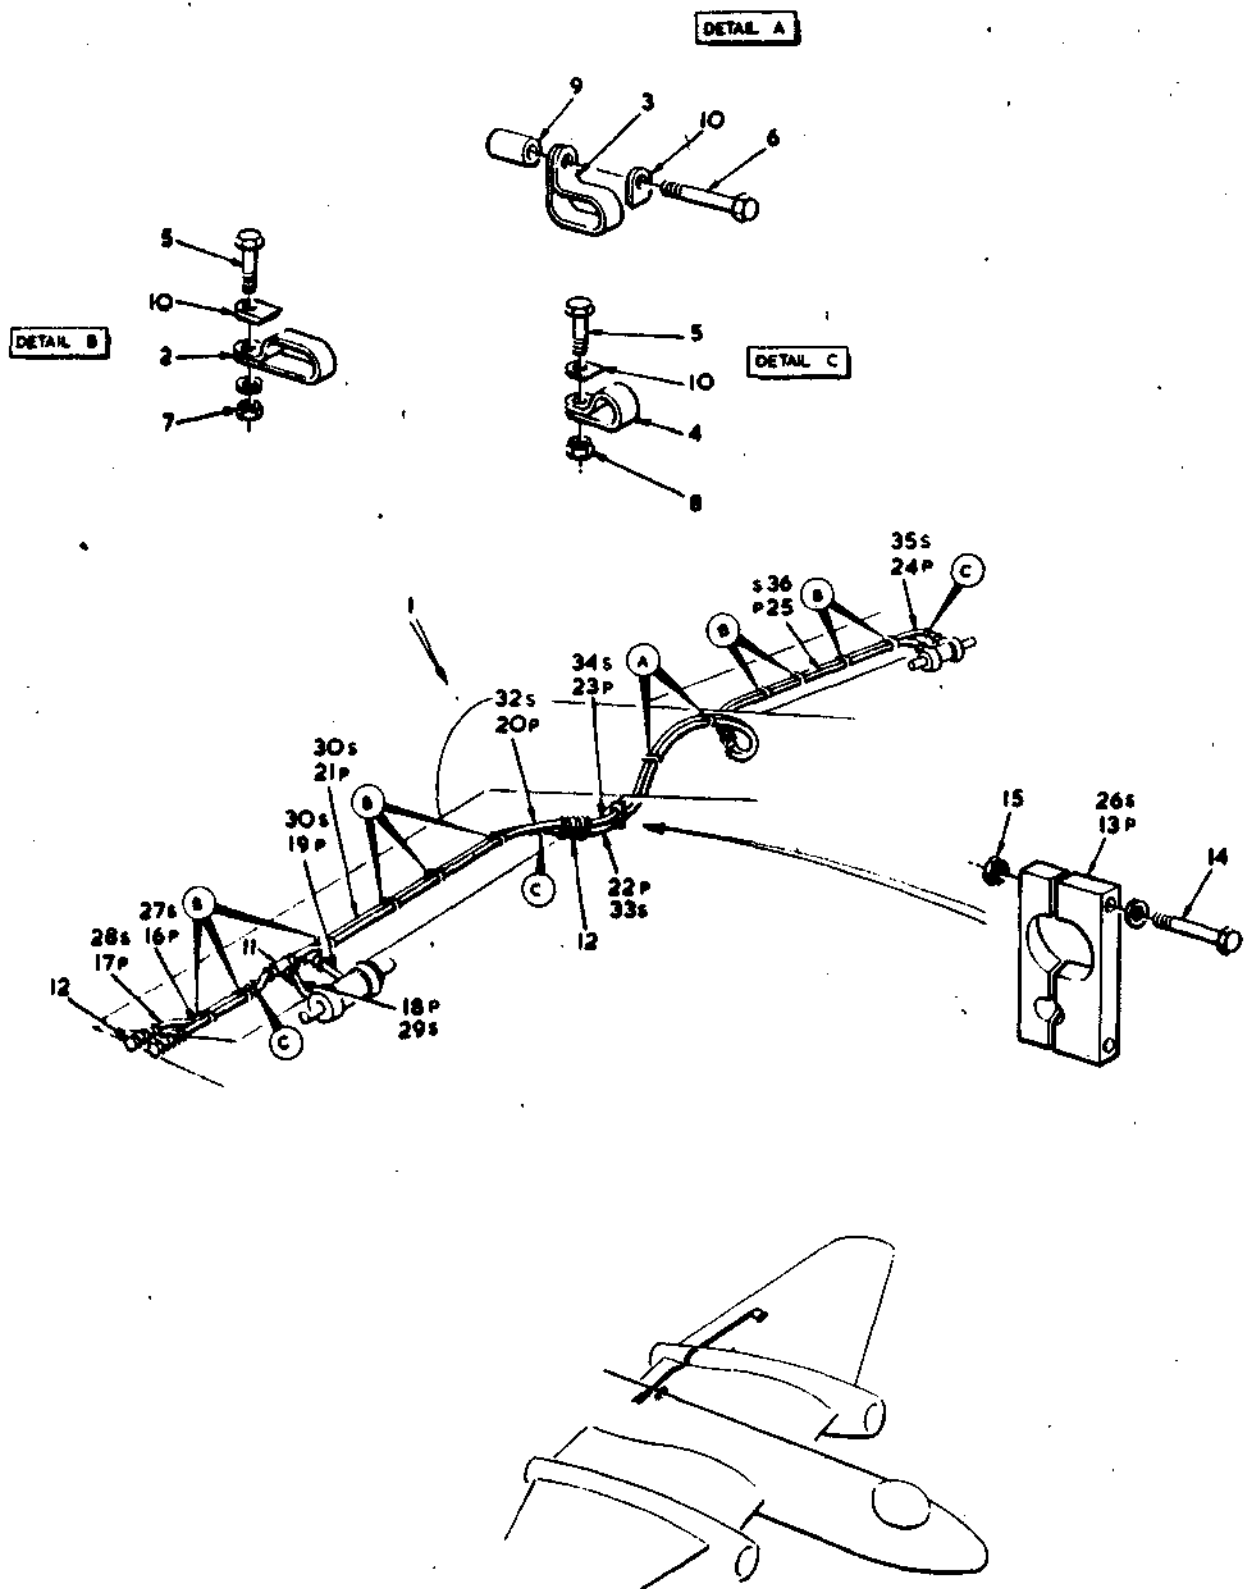


FIG 21 HYDRAULIC SYSTEM

CODE A 884

SECT. 54

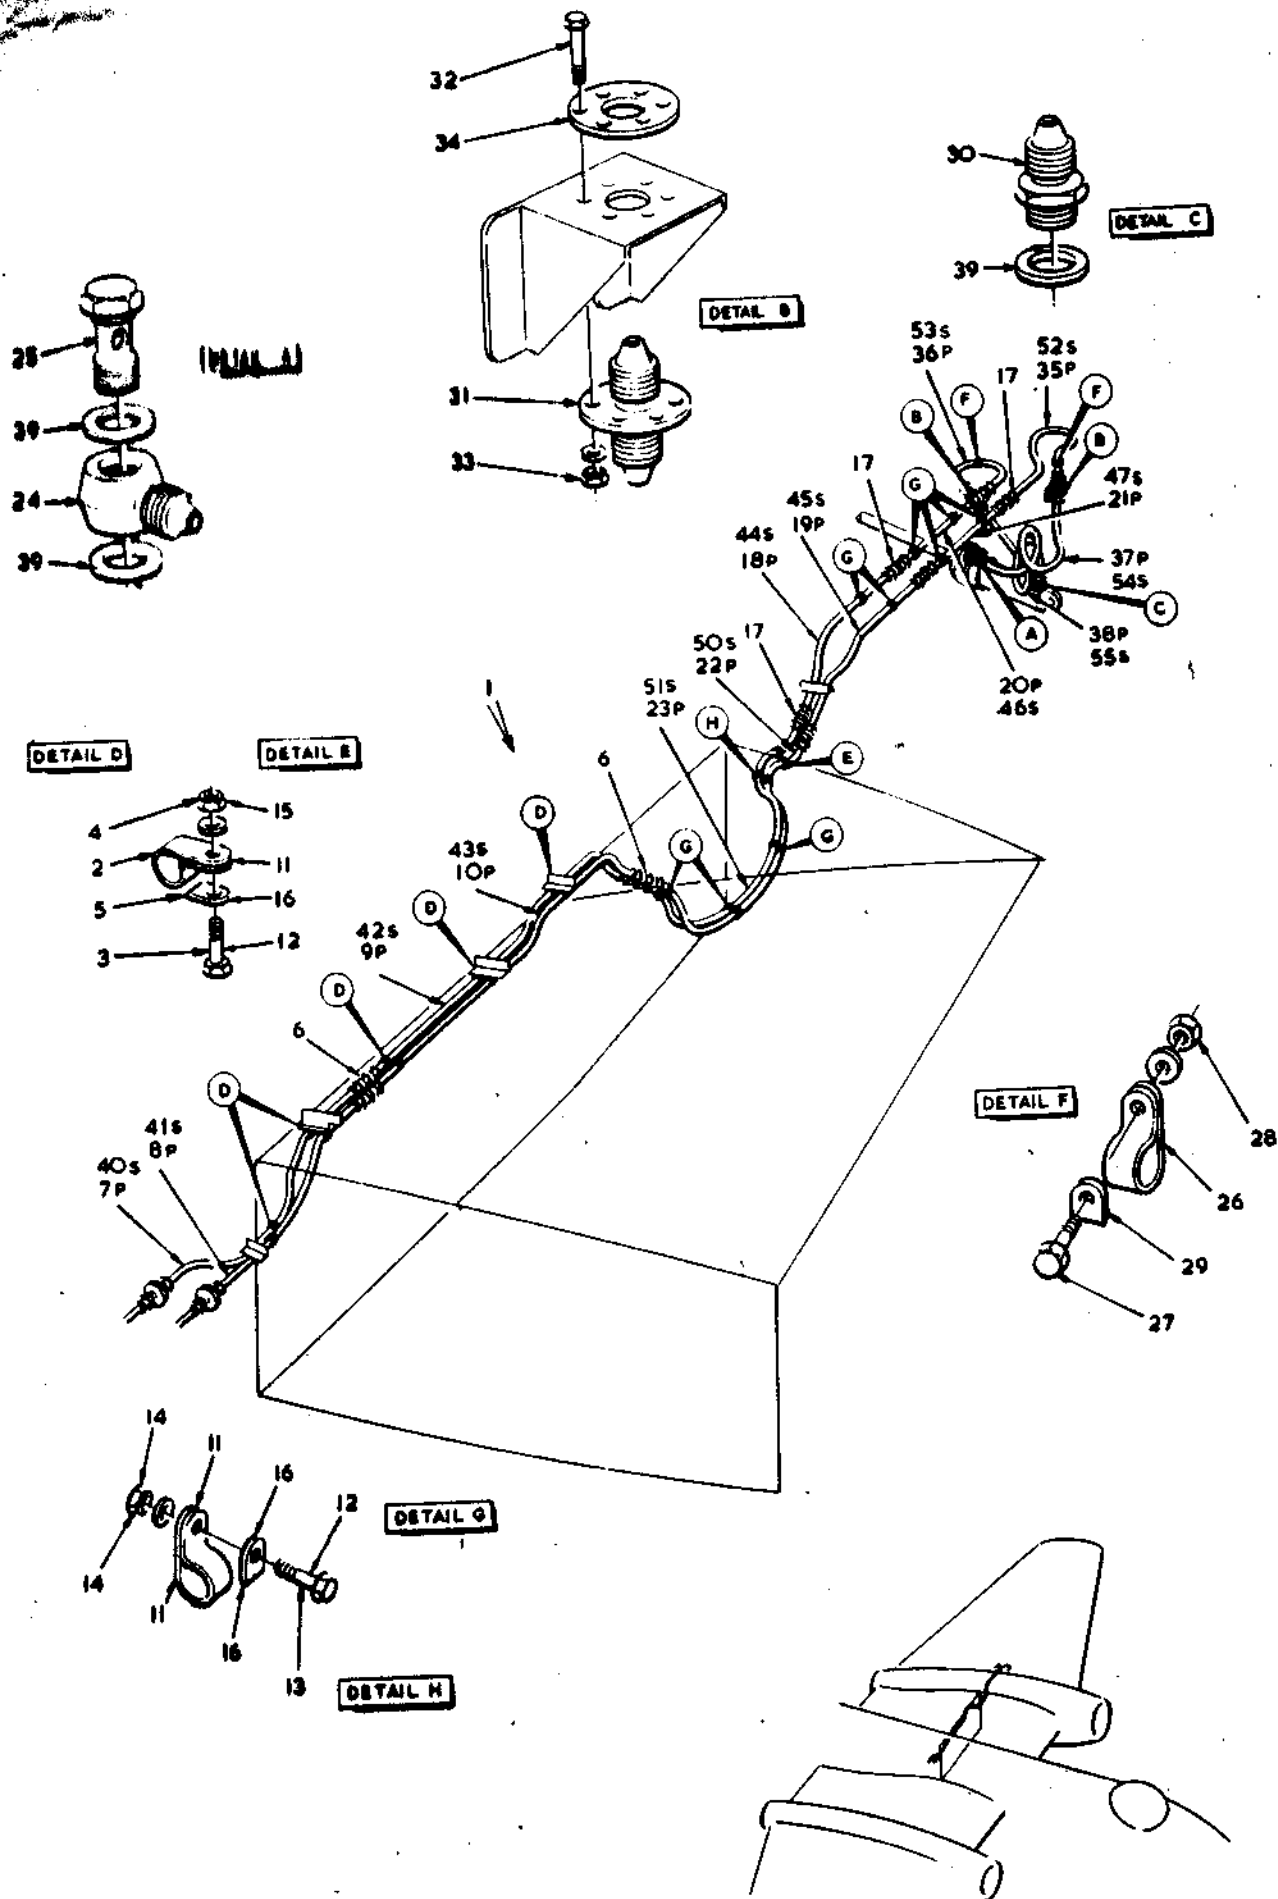


FIG. 22 HYDRAULIC SYSTEM

CODE A & B

SECT. 84.

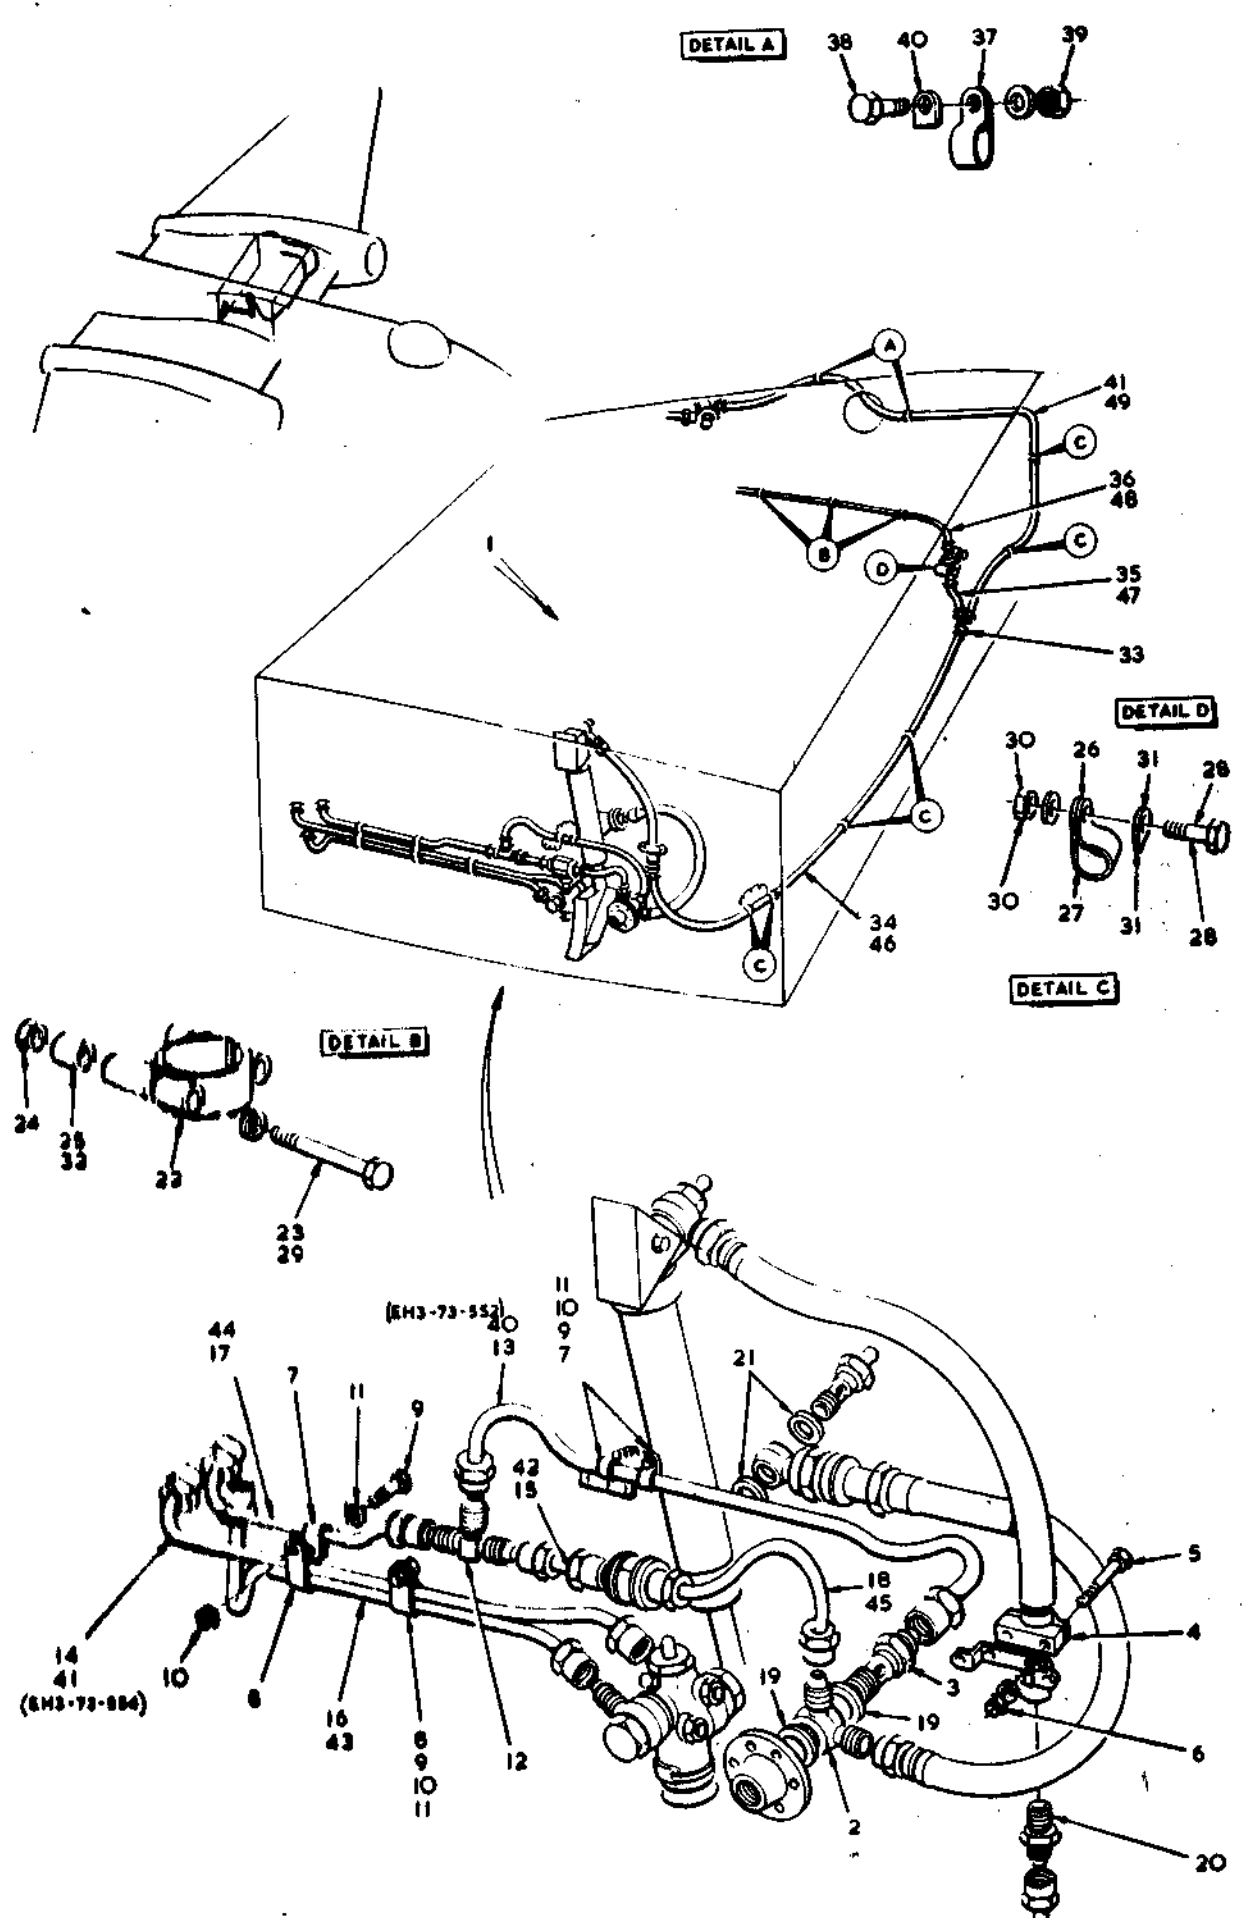


FIG. 23 HYDRAULIC SYSTEM

CODE A88

SECT 8H

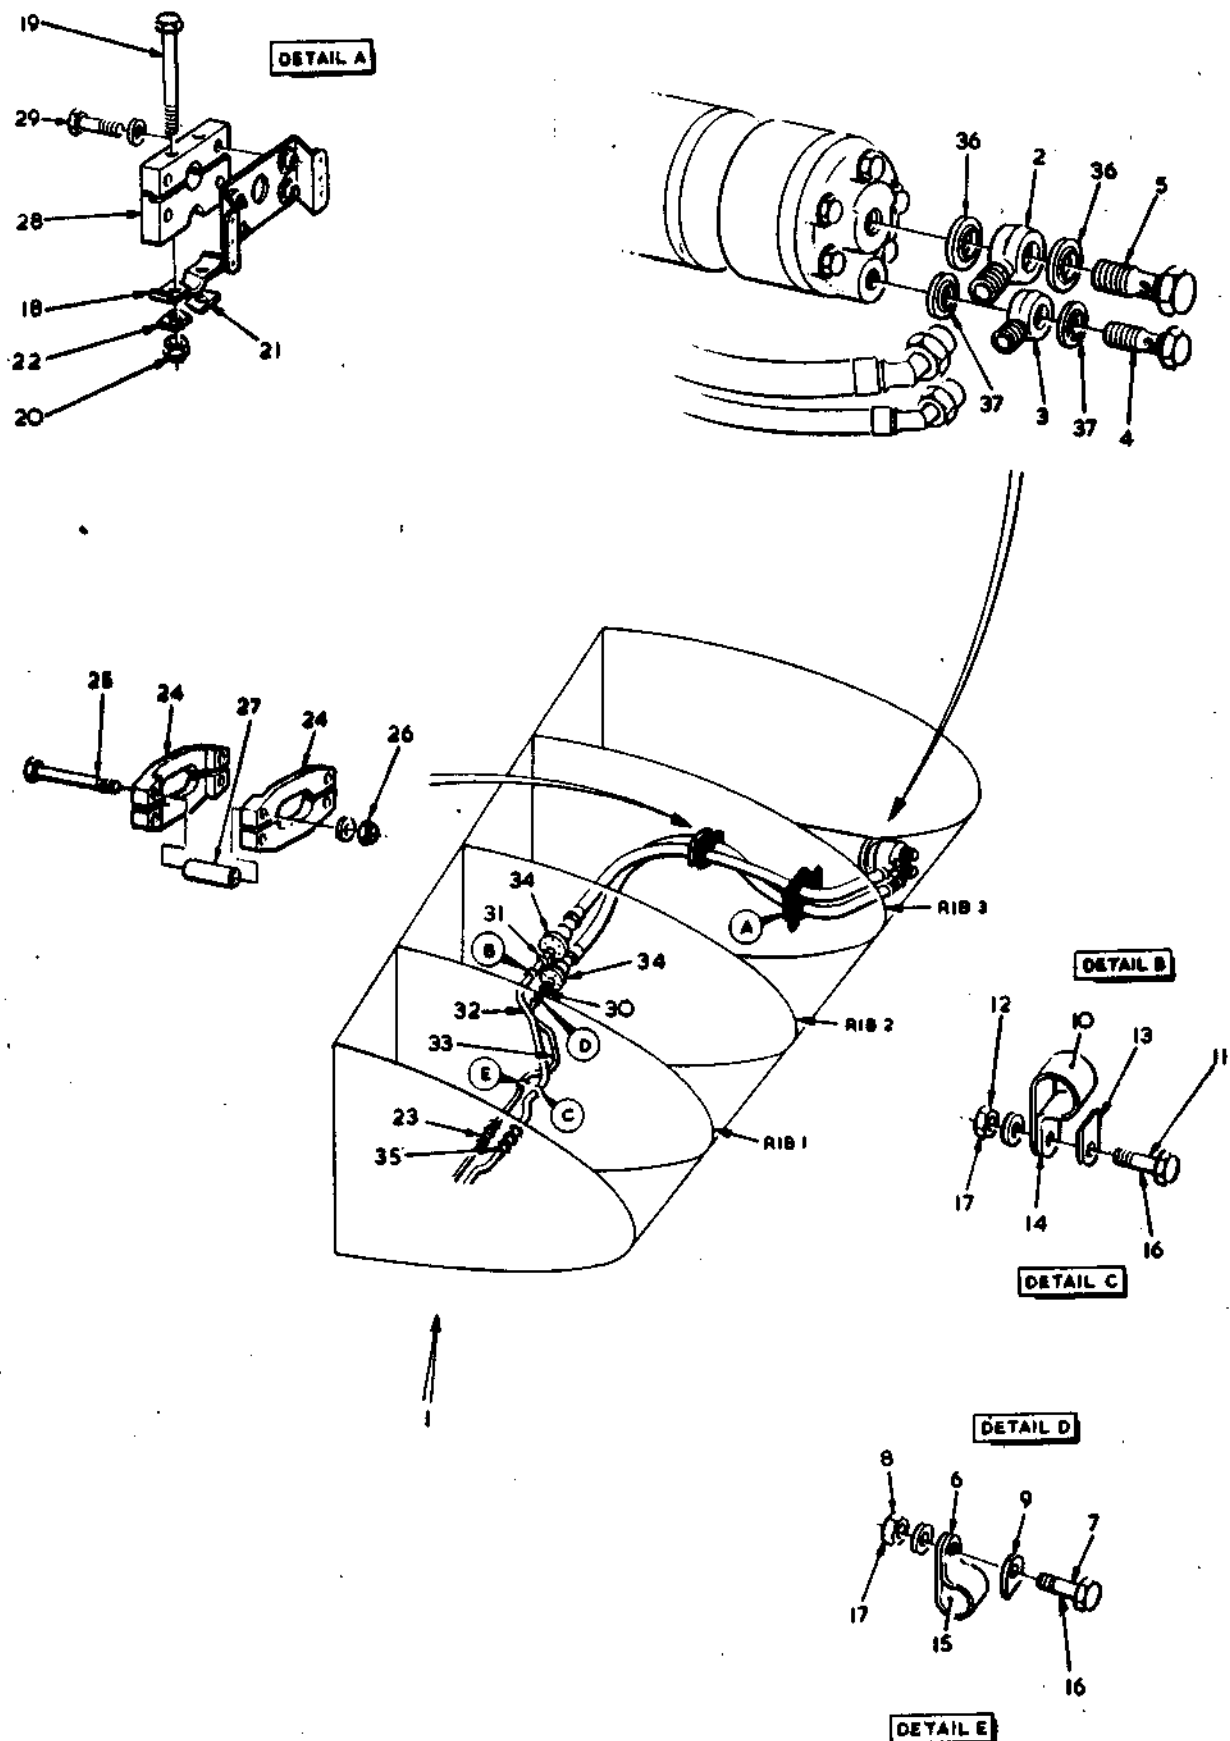


FIG.24 HYDRAULIC SYSTEM

CODE A B C

SECT 9M

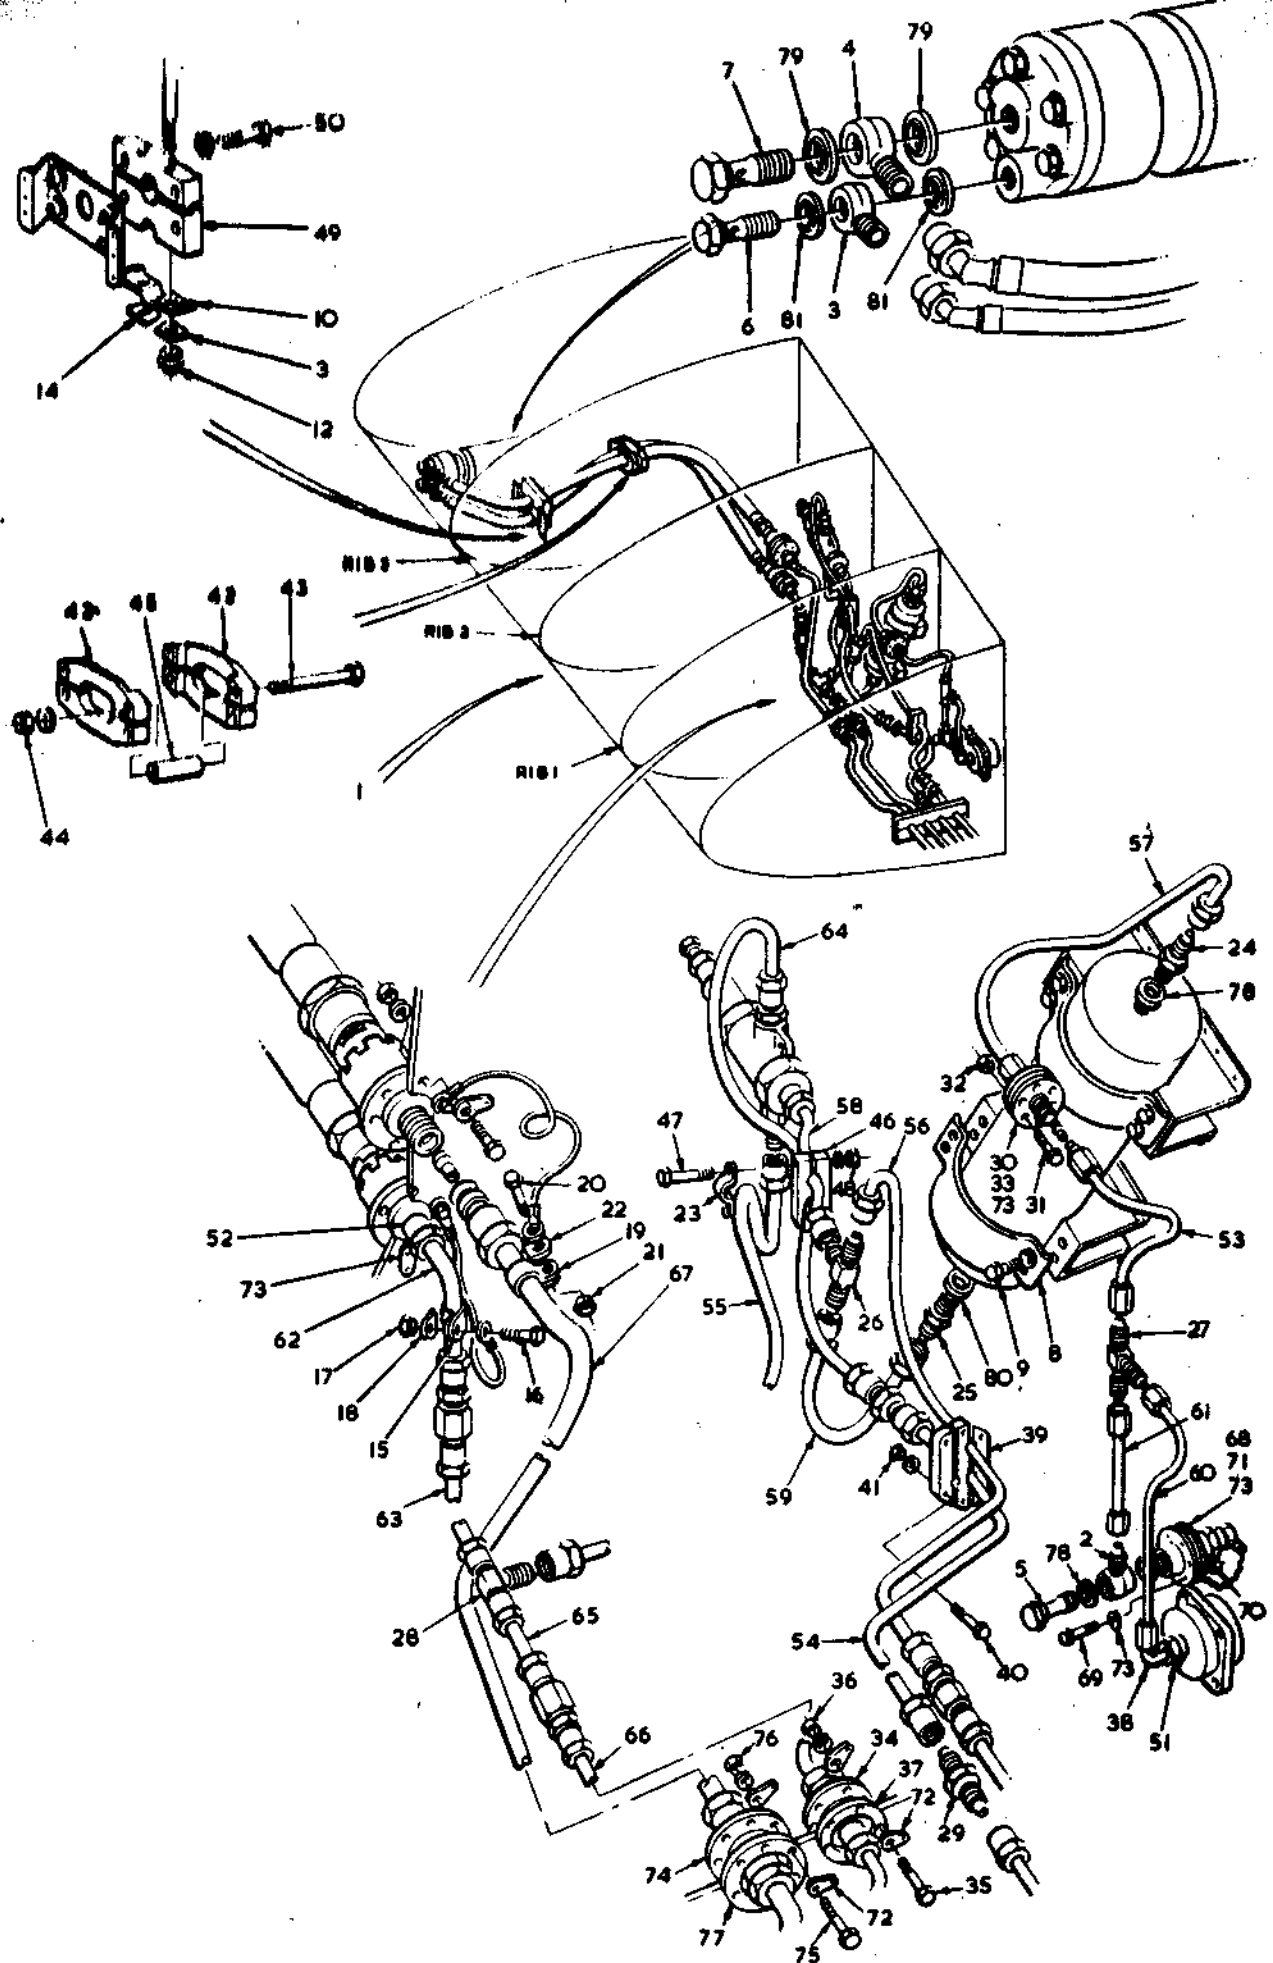


FIG. 25 HYDRAULIC SYSTEM

CODE A8&C

SECT 5H

**SERVICES
OXYGEN SYSTEM**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.71.1	OXYGEN SYSTEM ASSEMBLY Spares for:-	-	-	-	
	E.H8.71.3	OXYGEN SYSTEM IN FRONT FUSELAGE Spares for:-	-	-	-	
	E.H8.71.11	BOMB AIMER'S OXYGEN SYSTEM Spares for:-	-	-	-	1 1
6D/1648	-	ADAPTOR, banjo type, oxygen regulator	2	-	B	1 2
28E/	AGS.606/MK.1	CLIP, hose	10	-	C	1 3
6D/603	-	CONNECTOR, 3 way	4	-	C	1 4
6D/576	-	CONNECTOR, MK.3A, 2 way	1	-	C	1 5
	AGS.1118/B8	CONNECTOR, 3 way	1	-	C	1 6
	AGS.1102/B8	CONNECTOR, 2 way	1	-	C	1 7
	E.B7.71.63	FAIRLEAD, half at frames A and 1 Attaching parts for E.B7.71.53	4	-	-	1 8
28D/9419462	A25/38	Bolt, 4 BA	4	-	C	1 9
28M/1278189	AGS.2001/B/1	Nut, 4 BA	4	-	C	1 10
6D/2237	-	GAUGE, pressure, MK.4	2	-	A	1 11
6D/1580	-	HOSE, L.P. 7/8" i/d x 6'0" long	1	-	C	1 12
	E.B7.71.55	HOSE, connection, 7/8" i/d x 1 1/2" o/d x 3" long	3	-	-	1 13
	E.B7.71.73	MOUNTING oxygen regulator	1	-	-	1 14
	E.B8.71.31	PIPE, oxygen demand from aft oxygen regulator to hose connection frame 7, 7/8" o/d x 22 SWG	1	L.56	-	1 15
	E.B8.71.20	PIPE, oxygen demand between hose connection at frame 7 and pressure bulkhead, 7/8" o/d x 22 SWG	1	L.56	-	1 16
5754	E.B7.71.91	PIPE, oxygen demand from nose regulator to hose connection aft of frame A 7/8" o/d x 22 SWG	1	L.54	C	1 17
5755	E.B7.71.92	PIPE oxygen demand from hose connection aft of frame A to connection aft of frame 2, 7/8" o/d x 22 SWG	1	L.56	C	1 18
5756	E.B7.71.96	PIPE, assembly, L.P. from nose regulator to coupling aft of frame A	1	L.54	C	1 19
5757	E.B7.71.97	PIPE, assembly, L.P. from coupling aft of frame A to coupling tee, frame 1, starboard	1	L.54	C	1 20
	E.B7.71.155	PIPE, assembly, from tee coupling to reducing valve	1	-	-	1 21
	E.B7.71.151	PIPE assembly from reducing valve to tee coupling N.R.V.	1	-	-	1 22
	E.B7.71.117	PIPE, assembly, from tee coupling N.R.V. to tee coupling forward of frame 2	1	-	-	1 23
	E.H8.71.87	PIPE, assembly, from tee coupling to coupling at frame 2	1	T.51	-	1 24
	E.H7.71.81	PIPE, assembly, from tee coupling to coupling at frame 2	1	T.51	-	1 25
	E.H8.71.87	PIPE, assembly, from forward oxygen gauge to reducing valve tee forward of frame 2	1	T.51	-	1 26
	E.H8.71.89	PIPE, assembly, from rear oxygen gauge tee to reducing valve tee forward of frame 2	1	T.51	-	1 27
	E.H8.71.86	PIPE, assembly, from rear oxygen gauge to tee coupling	1	T.51	-	1 28

**SERVICES
OXYGEN SYSTEM**

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Ct. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
27360	E.86.71.157	PIPE, assembly, from oxygen gauge tee coupling	1	T.51	C	1 29
	E.87.71.103	PIPE, assembly, from tee coupling aft of frame 6 to tee coupling forward of frame 4, starboard	1	-	-	1 30
	E.H8.71.81	PIPE, assembly, from stop valve on pressure bulkhead to tee coupling aft of frame 6, starboard	1	T.51	-	1 31
6D/2671	-	REGULATOR, oxygen, Mk. 17F	2	-	A	1 32
6D/1644	-	SET, OXYGEN, emergency Mk. 2A for Bomb Aimer's prone position	1	-	A	1 33
6D/2344	-	VALVE, reducing, Mk. 1A	1	-	A	1 34
	E.86.71.571	BOMB AIMER AND NAVIGATOR'S EMERGENCY OXYGEN FITTINGS Spares for:-	-	-	-	1 35
6D/2055	-	CABLE, operating, socket anchor	2	-	C	1 36
6D/1698	-	CLIP, Aeroflex, type B	2	-	C	1 37
	AGS.806 Mk.1	CLIP, hose	2	-	-	1 38
6D/1484	-	SOCKET, anchor	2	-	C	1 39
6D/1652	-	SOCKET, Mk. 9	2	-	C	1 40
6D/2678	-	SET, OXYGEN, Mk. 7J, Emergency	2	-	A	1 41
6D/2203310	-	TUBE, upper, assembly	2	-	B	1 42
6D/1579	-	TUBING, L.P. demand type, 4'0" long	2	-	C	1 43
	E.H8.71.13	NAVIGATOR'S OXYGEN SYSTEM Spares for:-	-	-	-	2 1
6D/1647	-	ADAPTOR, straight	1	-	B	3 1
	E.87.71.49	BRACKET, reducing valve mounting Attaching parts for E.87.71.49:-	1	-	-	3 2
28D/1220052	A25/17B	Bolt, 4BA	2	-	C	3 3
28M/1278189	AGS.2001/B/1	Nut, 4BA	2	-	C	3 4
	AGS.806 Mk.1	CLIP, hose	8	-	-	2 2
6D/603	-	CONNECTOR, 3-way	1	-	C	3 5
6D/1650	-	CONNECTOR, flanged	2	-	C	2 3
	AGS.1118/BB	CONNECTOR, 3-way	1	-	-	3 6
	E.86.71.9	FITTINGS ON PRESSURE BULKHEAD Spares for:-	-	-	-	3 7
1835	E.A3.57.21	BRACKET, valve mounting	1	-	C	3 8
18646	E.87.71.21	BRACKET, flexible hose connector Attaching parts for E.87.71.21:-	2	-	C	2 4
28D/9436920	A26/1C	Bolt, 2BA	4	-	C	2 6
28M/1278190	AGS.2001/C/1	Nut, 2BA	4	-	C	2 6
W/9418475	SP.15/C	Washer, 2BA	4	-	C	2 7
1128	EEAS.69/2	GASKET	2	Neo-K-Tex	C	3 9
	AGS.1112/B	UNION, bulkhead	2	-	-	3 10
	AGS.1115/2	WASHER, plate Attaching parts for EEAS.69/2, AGS.1112/B and AGS.1115/2:-	2	-	-	3 11
28D/9419452	A26/3B	Bolt, 4BA	6	-	C	3 12
28M/1278189	AGS.2001/B/1	Nut, 4BA	6	-	C	3 13
	E.87.71.56	HOSE, connector	4	-	-	2 8

SERVICES
OXYGEN SYSTEM

Ref. No.	Part No.	Description	No. off	Mod. Spec.	Cl. of Equip. M.N. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H. 71.88	MOUNTING PLATE ASSEMBLY, NAVIGATOR'S EMERGENCY RELEASE Spares for:-	-	-	-	2 9
	E.B6.75.1091	PLATE, assembly Attaching parts for E.B6.75.1091:-	1	-	-	2 10
28D/9436920	A25/1C	Bolt, 2BA	5	-	C	2 11
	E.B6.71.575	OXYGEN EMERGENCY RELEASE, BOMB AIMER Spares for:-	-	-	-	2 12
	E.B6.71.583	EMERGENCY RELEASE ASSEMBLY Spares for:-	1	-	-	2 13
	E.B6.71.591	CABLE, assembly	1	-	-	2 14
	E.B6.71.581	TUBE, assembly	1	-	-	2 15
	E.B6.71.572	OXYGEN EMERGENCY RELEASE, NAVIGATOR Spares for:-	-	-	-	2 16
	E.B6.71.579	EMERGENCY RELEASE ASSEMBLY Spares for:-	1	-	-	2 17
	E.B6.71.591	CABLE, assembly	1	-	-	2 18
	E.B6.71.577	TUBE, assembly	1	-	-	2 19
	E.H8.71.21	PIPE, demand, from regulator to hose connector	1	-	-	2 20
	E.H8.71.19	PIPE, demand, continuation to hose connector	1	-	-	2 21
	E.G9.71.17	PIPE, demand, continuation to hose connector at pressure bulkhead	1	-	-	2 22
	E.G9.71.9	PIPE, assembly, from reducing valve to tee connector	1	-	-	3 14
	E.G9.71.13	PIPE, assembly, from tee connector to reducing valve	1	-	-	3 15
	E.G9.71.11	PIPE, assembly, from regulator to tee connector	1	-	-	3 16
	E.G9.71.81	PIPE, assembly, from tee connector to connector	1	-	-	3 17
	E.G9.71.83	PIPE, assembly, from tee connector to tee connector	1	-	-	3 18
	E.H8.71.35	PIPE, assembly, from tee connector to H.P. valve	1	-	-	3 19
6161	E.A3.71.453	PIPE, assembly, from H.P. valve to pressure bulkhead, port	1	-	-	3 20
	E.H8.71.49	PIPE, assembly, from H.P. valve to pressure bulkhead, starboard	1	-	-	3 21
	E.H6.71.13	PIPE, assembly, from tee connector to connector	1	-	-	3 22
6D/2671	-	REGULATOR, oxygen, Mk. 17F	1	-	A	3 23
6D/2344	-	VALVE, reducing, Mk. 1A	1	-	A	3 24
6D/2313	-	VALVE, master, Mk. 10A Attaching parts for 6D/2313:-	2	-	A	3 25
28D/9436920	A25/1C	Bolt, 2BA, for valve between ribs 8 and 9	4	-	C	3 26
28D/9133011	A25/2C	Bolt, 2BA, for valve on pressure bulkhead	4	-	C	3 27
	E.A3.71.339	VALVE, H.P. OXYGEN ASSEMBLY BETWEEN RIBS 8 and 9 Spares for:-	-	-	-	3 28
1835	E.A3.57.21	BRACKET, valve mounting	1	-	C	3 29
	E.A1.71.91	LABEL Attaching parts for E.A1.71.91:-	1	-	-	3 30
	S.971/2R	Screw, P.K. 3/16" long	2	-	-	3 31

SERVICES
OXYGEN SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1 2 3 4 5 6				
	E.H8.71.15	PILOT'S OXYGEN SYSTEM	—	—	—	4 1
		Spares for:-				
6D/1647	—	ADAPTOR, straight	1	—	C	4 2
	E.B7.71.43	BRACKET	1	DTD.124	—	4 3
		Attaching parts for E.B7.71.43:-				
28D/1010558	A25/1B	Bolt, 4 BA	2	—	C	4 4
28M/1278189	AGS.2001/B/1	Nut, 4 BA	2	—	C	4 5
28W/9419474	SP15/B	Washer, 4 BA	2	—	C	4 6
	E.B7.71.169	CLIP, half	1	—	—	4 7
		Attaching parts for E.B7.71.169:-				
28D/1010558	A25/1B	Bolt, 4 BA	2	—	C	4 8
28M/1278189	AGS.2001/B/1	Nut, 4 BA	2	—	C	4 9
28W/9419474	SP15/B	Washer, 4 BA	2	—	C	4 10
	AGS.805 MK.1	CLIP, hose	12	—	—	4 11
	AGS.1102/BB	CONNECTOR, 2 way	4	—	—	4 12
6D/575	—	CONNECTOR, 2 way	3	—	C	4 13
6D/603	—	CONNECTOR, 3 way	1	—	C	4 14
	E.G7.71.141	GUARD, PIPE INSTALLATION	1	—	—	4 15
		Spares for:-				
	E.G7.71.147	GUARD, pipe assembly	1	—	—	4 16
		Attaching parts for E.G7.71.147:-				
	4101/7/ 3/8	Screw, roundhead P.K.	6	—	—	4 17
	E.B7.71.55	HOSE, connector, 7/8" i/d x 1 1/4" o/d x 3" long	5	DTD.625	—	4 18
	E.H8.71.37	MOUNTING, OXYGEN REDUCING VALVE	—	—	—	4 19
		Spares for:-				
	E.B7.71.49	BRACKET	1	—	—	4 20
		Attaching parts for E.B7.71.49:-				
28D/1220052	A25/17B	Bolt, 4 BA	2	—	C	4 21
28W/9419474	SP15/B	Washer, 4 BA	2	—	C	4 22
	E.G7.71.77	OXYGEN EMERGENCY RELEASE INSTALLATION	—	—	—	4 23
		Spares for:-				
	E.G7.71.79	EMERGENCY RELEASE ASSEMBLY	1	—	—	4 24
		Spares for:-				
	E.B6.71.591	CABLE, release assembly	1	—	—	4 25
	E.G7.71.151	TUBE, assembly	1	—	—	4 26
		Attaching parts for E.G7.71.79:-				
28D/9438920	A25/1C	Bolt, 2 BA	6	—	C	4 27
28W/9419475	SP13/C	Washer, 2 BA	6	—	C	4 28
	E.G7.71.87	PIPE, demand, regulator to hose connector	1	—	—	4 29
	E.G7.71.89	PIPE, demand, continuation to hose connector	1	—	—	4 30
	E.G7.71.93	PIPE, demand, continuation to hose connector	1	—	—	4 31
	E.G7.71.95	PIPE, demand, continuation to hose connector	1	—	—	4 32
	E.G7.71.101	PIPE, assembly from regulator to connector between frames 2 and 3	1	—	—	4 33
	E.G7.71.103	PIPE, assembly, continuation to connector	1	—	—	4 34
	E.G7.71.105	PIPE, assembly, continuation to connector	1	—	—	4 35
	E.G7.71.37	PIPE, assembly, from tee connector aft of frame 5 to connector between frames 2 and 3	1	—	—	4 36
	E.G7.71.39	PIPE, assembly, continuation to connector	1	—	—	4 37
	E.H8.71.85	PIPE, assembly, continuation to connector	1	—	—	4 38
		REGULATOR, gen. Mk. 7:-	1	—	A	4 39

SERVICES
OXYGEN SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.F. L.M.	Plate No.
		1 2 3 4 5 6				
	E.G5.71.23	. . . PILOT'S EMERGENCY OXYGEN FITTINGS Spare for:-	-	-	-	4 40
6D/3065	-	. . . CABLE, operating socket anchor	1	-	C	4 41
6D/1898	-	. . . CLIP, aeroflex, type D	1	-	C	4 42
	AGS.650 MK.1	. . . CLIP, hose	1	-	C	4 43
6D/1484	-	. . . SOCKET, anchor	1	-	C	4 44
6D/1652	-	. . . SOCKET, Mk.9	1	-	C	4 45
6D/2678	-	. . . SET, oxygen emergency, Mk.7J	1	-	A	4 46
6D/2203310	-	. . . TUBE, assembly upper	1	-	B	4 47
6D/1579	-	. . . TUBING, LP demand type, 4' 0" long	1	-	C	4 48
	E.H8.71.17	. . . PIPING BETWEEN PRESSURE BULKHEAD AND FRAME 12 Spare for:-	-	-	-	3 32
6D/575	-	. . . CONNECTOR, 2 way	3	-	C	3 33
1128	EEAS.89/2	. . . GASKET	2	-	C	3 34
	E.H8.71.23	. . . PIPE, assembly from bulkhead connector on frame 12 to connector between frames 10 and 11, port	1	-	-	3 35
	E.H8.71.25	. . . PIPE, assembly continuation to connector between frames 9 and 10, port	1	-	-	3 36
	E.H8.71.27	. . . PIPE, assembly continuation to bulkhead connector frame 9, port	1	-	-	3 37
	E.G4.71.106	. . . PIPE, assembly from bulkhead connector on frame 12 to connector between frames 10 and 11, starboard	1	-	-	3 38
	E.H8.71.51	. . . PIPE, assembly continuation to bulkhead connector, frame 9, starboard	1	-	-	3 39
981	EEAS.20/2DR	. . . PLATE, locking	4	-	C	3 40
	AGS.1115/2	. . . PLATE, washer	2	-	-	3 41
	AGS.1112/B	. . . UNION, bulkhead Attaching parts for EEAS.89/2, EEAS.20/DR, AGS.1115/2 and AGS.1112/B:-	2	-	-	3 42
28D/1008149	A25/28	. . . Bolt, 4 BA	6	-	C	3 43
28M/1278189	AGS.2001/B1	. . . Nut, 4 BA	6	-	C	3 44

SERVICES
OXYGEN SYSTEM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Pile No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.HB.71.5	OXYGEN EQUIPMENT IN CENTRE FUSELAGE	—	—	—	5 1
		Spares for:-				
6D/1892		ADAPTOR	1	—	C	5 2
	AGS.1112/B	CONNECTOR, bulkhead	4	—	—	5 3
6D/575	—	CONNECTOR, 2 way	11	—	C	5 4
6D/603	—	CONNECTOR, 3 way	1	—	C	5 5
6D/574	—	FILTER	1	—	C	5 6
1128	EEAS.68/2	GASKET	4	—	C	5 7
	AGS.1115/2	PLATE, washer	4	—	C	5 8
	E.G4.71.149	PIPE, assembly, charge, from charging valve at frame 12 to connector, port	1	—	—	5 9
	E.HB.71.29	PIPE, assembly, charge, continuation to connector between frames 13 and 14, port	1	—	—	5 10
	E.G4.71.145	PIPE, assembly, charge, continuation to connector between frames 15 and 16, port	1	—	—	5 11
	E.G4.71.143	PIPE, assembly, charge, continuation to connector between frames 18 and 19, port	1	—	—	5 12
	E.G4.71.141	PIPE, assembly, charge, continuation to connector tee at frame 22, port	1	—	—	5 13
	E.G4.71.115	PIPE, assembly, charge, continuation to bulkhead connector aft of frame 21B, port	1	—	—	5 14
	E.C3.71.83	PIPE, assembly, charge, continuation to tee connector aft of frame 21B, starboard	1	—	—	5 15
	E.C3.71.46	PIPE, assembly, supply from bulkhead connector at frame 12 to connector between frames 13 and 14, port	1	—	—	5 16
	E.C3.71.49	PIPE, assembly, supply, continuation to connector between frames 15 & 16, port	1	—	—	5 17
	E.C3.71.53	PIPE, assembly, supply, continuation to connector between frames 18 & 19, port	1	—	—	5 18
	E.C3.71.57	PIPE, assembly, supply, continuation to connector aft of frame 21B, port	1	—	—	5 19
	E.G4.71.113	PIPE, assembly, supply, continuation to bulkhead connector at frame 21B, port	1	—	—	5 20
	E.G4.71.125	PIPE, assembly, supply, continuation, bulkhead connector at frame 12 to connector between frames 13 and 14, starboard	1	—	—	5 21
	E.C3.71.47	PIPE, assembly, supply, continuation to connector between frames 16 and 17, starboard	1	—	—	5 22
	E.C3.71.51	PIPE, assembly, supply, continuation to connector between frames 18 and 19, starboard	1	—	—	5 23
	E.C3.71.55	PIPE, assembly, supply, continuation to connector aft of frame 21B, starboard	1	—	—	5 24
	E.C3.71.59	PIPE, assembly, supply, continuation to bulkhead connector, aft of frame 21B, starboard	1	—	—	5 25
6D/1497	—	UNION, blanking	1	—	C	5 26
	E.A1.71.81	VALVE, CHARGING ASSEMBLY, INSTALLATION	—	—	—	5 27
		Spares for:-				
6D/2313	—	VALVE, oxygen master, Mk.10A	1	—	B	5 28
		Attaching parts for 6D/2313:-				
	A15Y/1C	Bolt, 2 BA	4	—	—	5 29
	C.A.1	Nut, 2 BA	4	—	—	5 30

SERVICES
OXYGEN SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
28D/1010558 28M/1278189 28W/9419474	E.H8.71.9	OXYGEN EQUIPMENT IN WING, PORT	—	—	—	6 1
	E.H8.71.10	OXYGEN EQUIPMENT IN WING, STARBOARD	—	—	—	6 2
	E.B8.71.241	BRACKET Attaching parts for E.B8.71.241:-	3	—	—	6 3
	A25/1B	Bolt, 4BA	3	—	C	6 4
	AGS.2001/B/1	Nut, 4BA	3	—	C	6 5
	SP.13/B	Washer, 4BA	3	—	C	6 6
	E.B8.20.3065	CHANNEL, assembly	10	—	—	6 7
	6D/575	CONNECTOR, 2-way	2	—	C	6 8
	6D/9429896	CYLINDER, oxygen, Mk. 5D, 750 litres	5	—	—	6 9
	E.C3.71.19	PIPE, assembly, cylinder to cylinder between ribs 3 and 4	2	—	—	6 10
E.C3.71.21 E.C3.71.23 E.C3.71.24 E.C3.71.25 E.C3.71.26 E.C3.71.27 E.C3.71.28 E.C3.71.29 E.C3.71.30 E.G4.71.117 E.H8.71.69 E.G4.71.119 E.H8.71.71 E.C3.71.31 E.C3.71.32 E.C3.71.33 E.C3.71.34	E.C3.71.21	PIPE, assembly, cylinder to cylinder between ribs 3 and 4	2	—	—	6 11
	E.C3.71.23	PIPE, assembly, cylinder to cylinder between ribs 3 and 4, port	1	—	—	6 12
	E.C3.71.24	PIPE, assembly, cylinder to cylinder between ribs 3 and 4, starboard	1	—	—	6 13
	E.C3.71.25	PIPE, assembly, cylinder to cylinder between ribs 3 and 4, port	1	—	—	6 14
	E.C3.71.26	PIPE, assembly, cylinder to cylinder between ribs 3 and 4, starboard	1	—	—	6 15
	E.C3.71.27	PIPE, assembly, cylinder to cylinder between ribs 5 and 6, port	1	—	—	6 16
	E.C3.71.28	PIPE, assembly, cylinder to cylinder between ribs 5 and 6, starboard	1	—	—	6 17
	E.C3.71.29	PIPE, assembly, cylinder to cylinder between ribs 5 and 6, port	1	—	—	6 18
	E.C3.71.30	PIPE, assembly, cylinder to cylinder between ribs 5 and 6, starboard	1	—	—	6 19
	E.G4.71.117	PIPE, assembly, charge, from bulkhead union on fuselage skin, to connector between ribs 1 and 2, port	1	—	—	6 20
	E.H8.71.69	PIPE, assembly, charge, from bulkhead union on fuselage skin, to connector between ribs 1 and 2, starboard	1	—	—	6 21
	E.G4.71.119	PIPE, assembly, supply, from bulkhead union on fuselage skin to connector between ribs 1 and 2, port	1	—	—	6 22
	E.H8.71.71	PIPE, assembly, supply, from bulkhead union on fuselage skin to connector between ribs 1 and 2, starboard	1	—	—	6 23
	E.C3.71.31	PIPE, assembly, charge, connector between ribs 1 and 2 to oxygen, cylinder, port	1	—	—	6 24
	E.C3.71.32	PIPE, assembly, charge connector between ribs 1 and 2 to oxygen cylinder, starboard	1	—	—	6 25
	E.C3.71.33	PIPE, assembly, supply, connector between ribs 1 and 2 to oxygen cylinder, port	1	—	—	6 26
	E.C3.71.34	PIPE, assembly, supply, connector between ribs 1 and 2 to oxygen cylinder, starboard	1	—	—	6 27

SERVICES
OXYGEN SYSTEM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.88.20.3063	. . STRAP, assembly	10	—	—	6 28
	E.88.20.3011	. . STRAP, assembly	10	—	—	6 29
		Attaching parts for E.88.20.3063 and E.88.20.3011:-				
28D/1011247	A25/13E	. . Bolt, 1/2 BSF	2	—	C	6 30
	E.88.20.3063	. . Bolt, tie	1	—	—	6 31
	AS.2811/6/100	. . Piece, distance	2	—	—	6 32
28W/9419405	SP.16/E	. . Washer	2	—	C	6 33
6D/1497	—	. . UNION, blanking	2	—	C	6 34

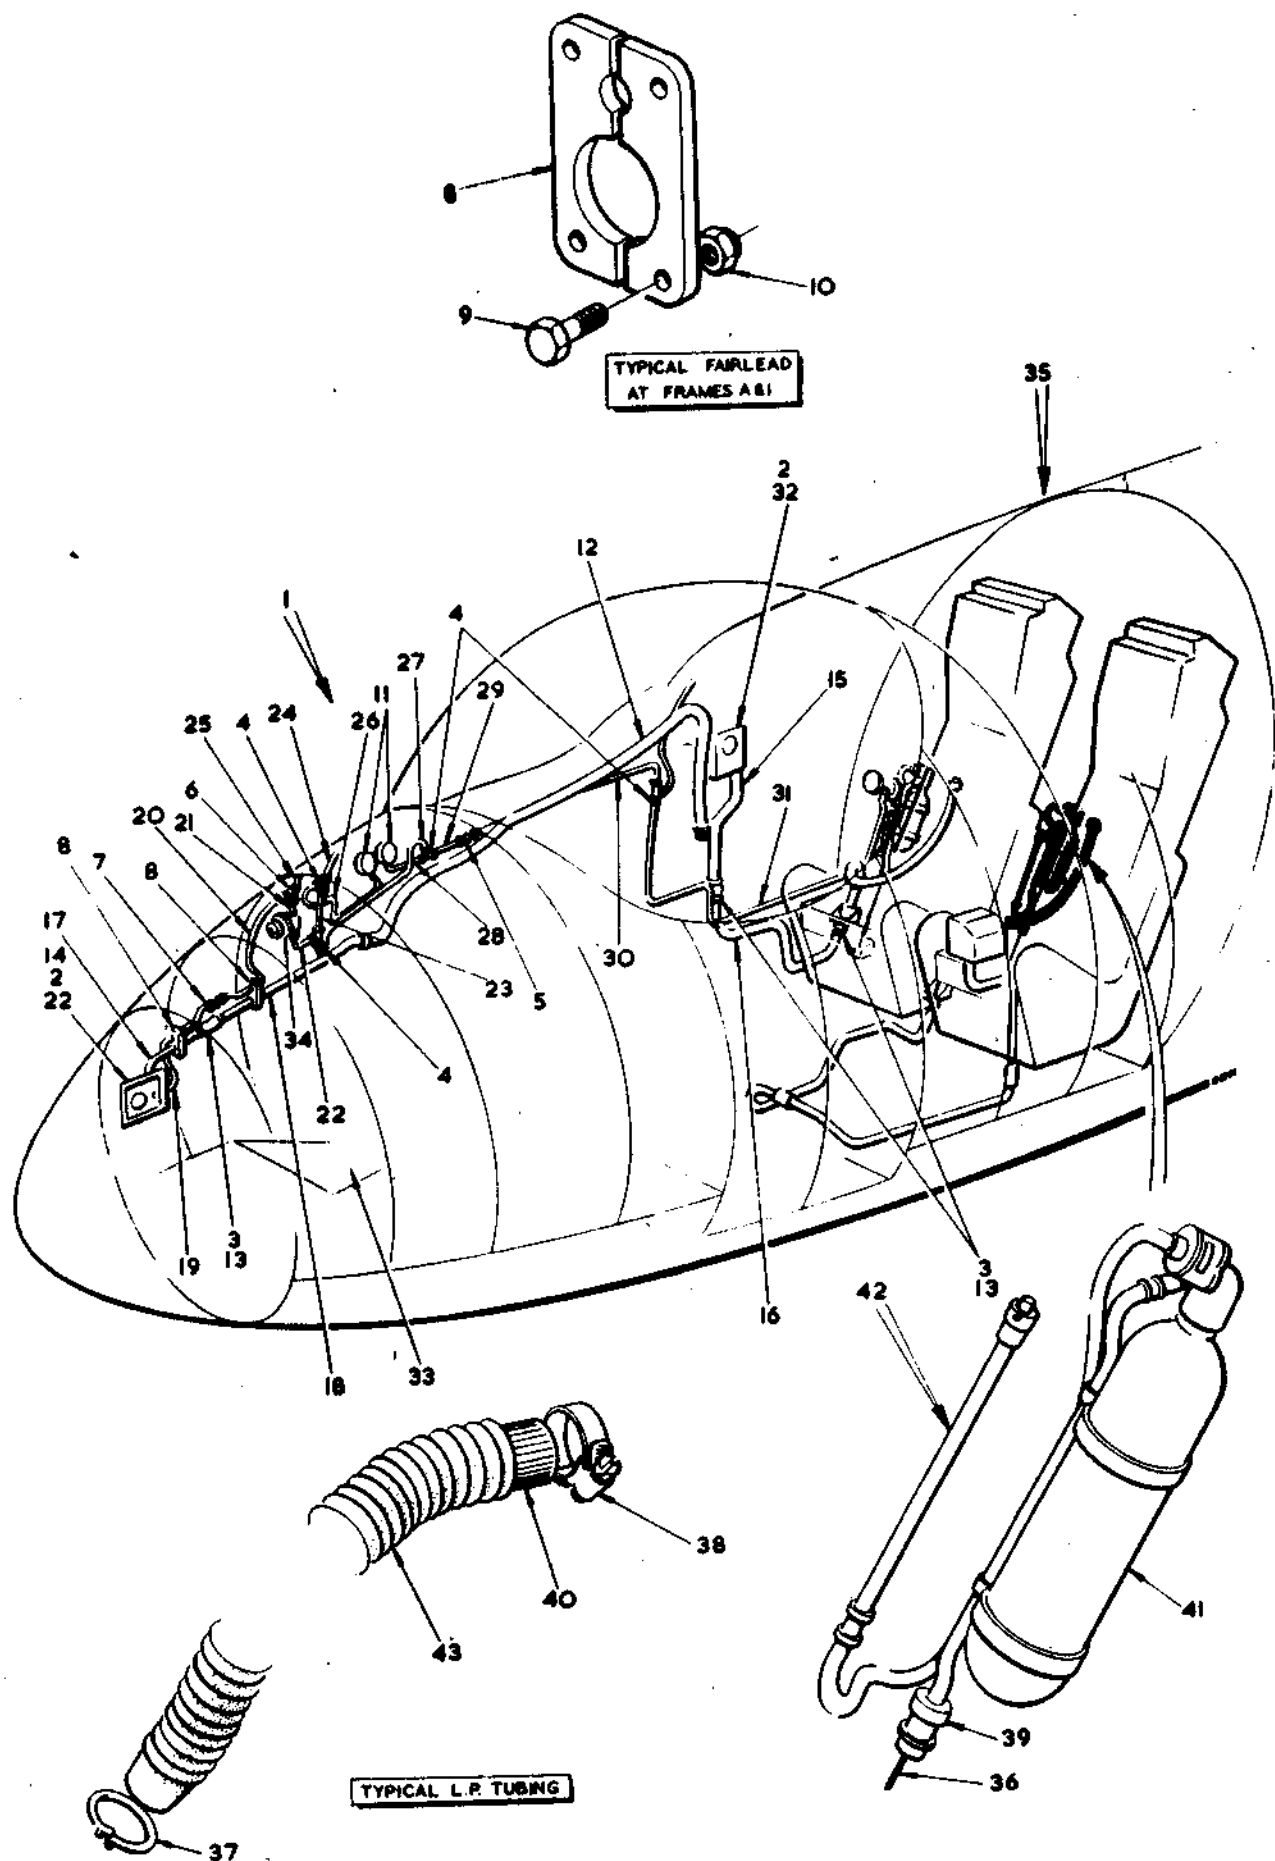


FIG.1 OXYGEN SYSTEM

CODE A

SECT SJ

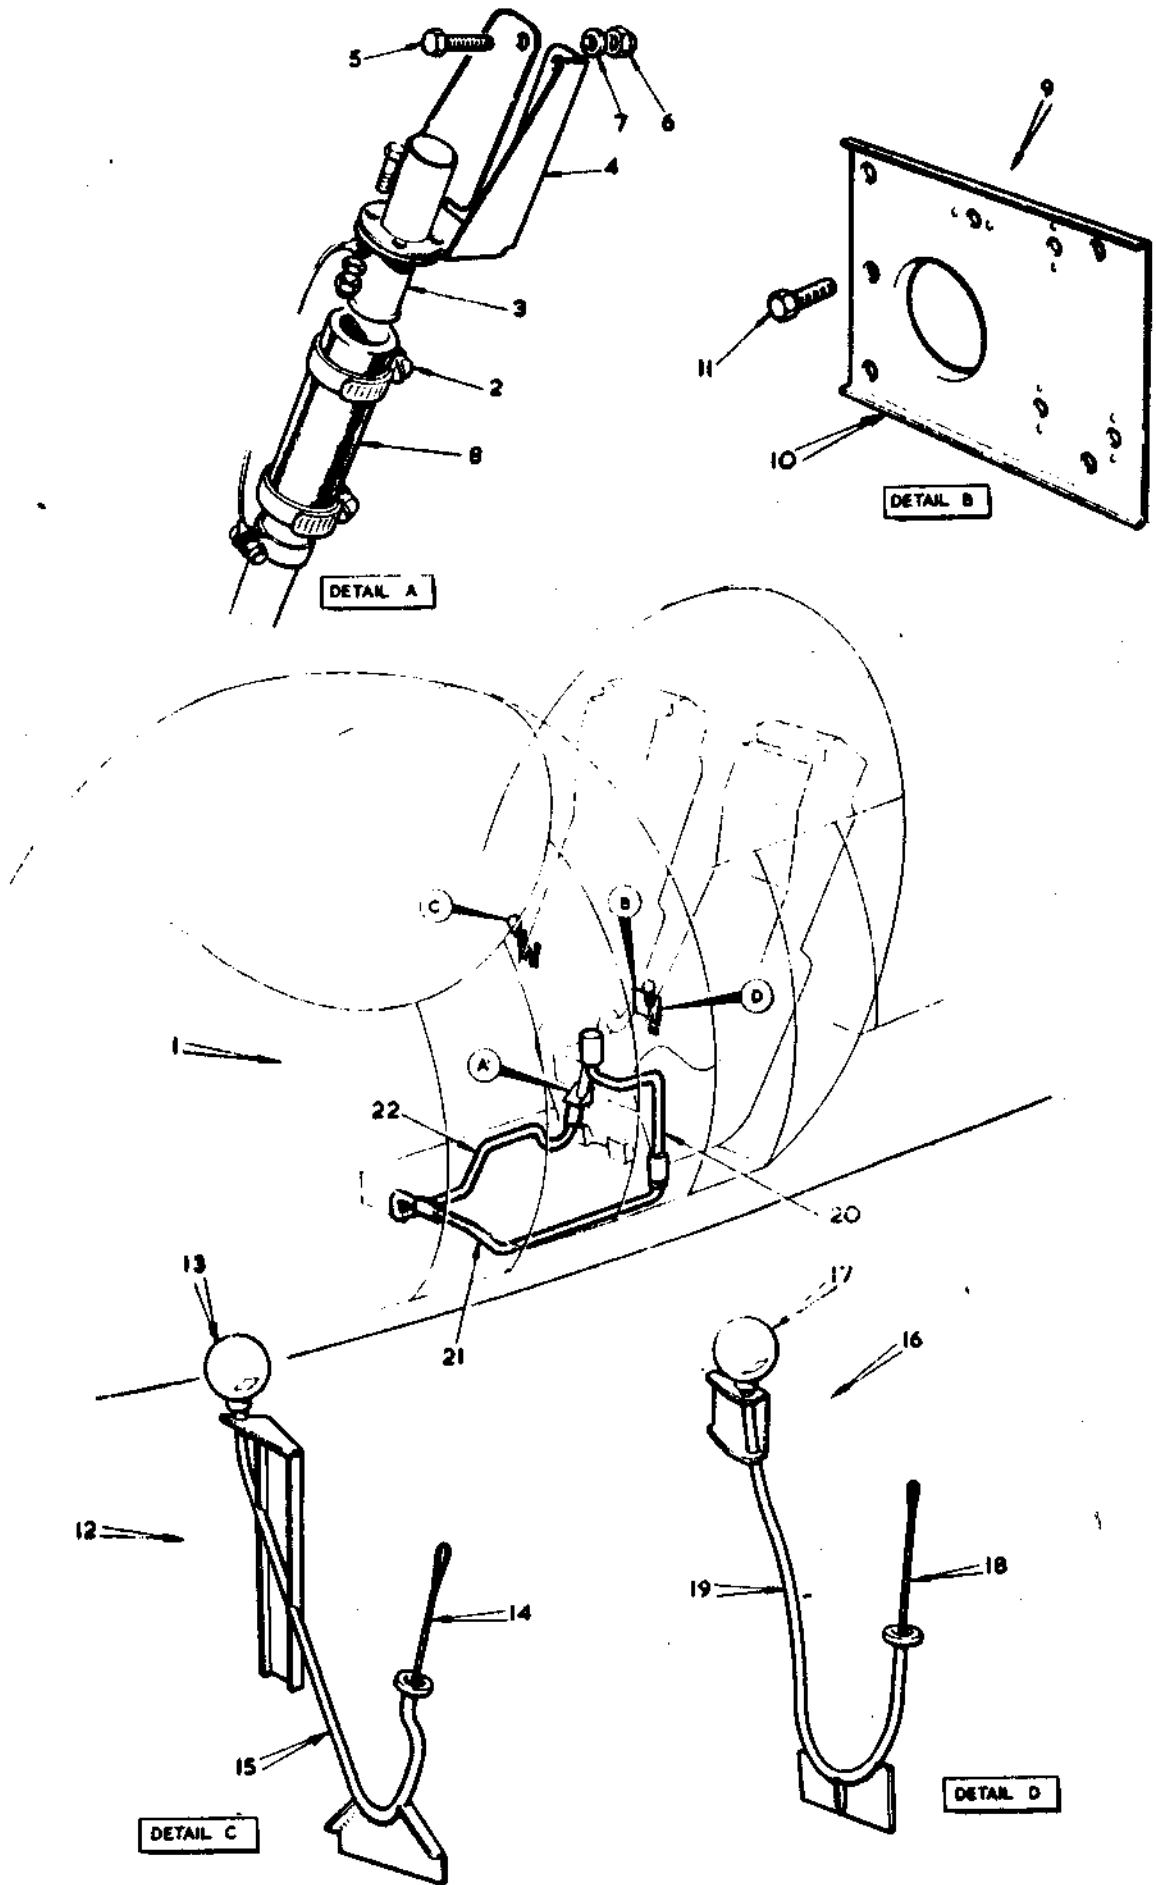


FIG. 2 OXYGEN SYSTEM

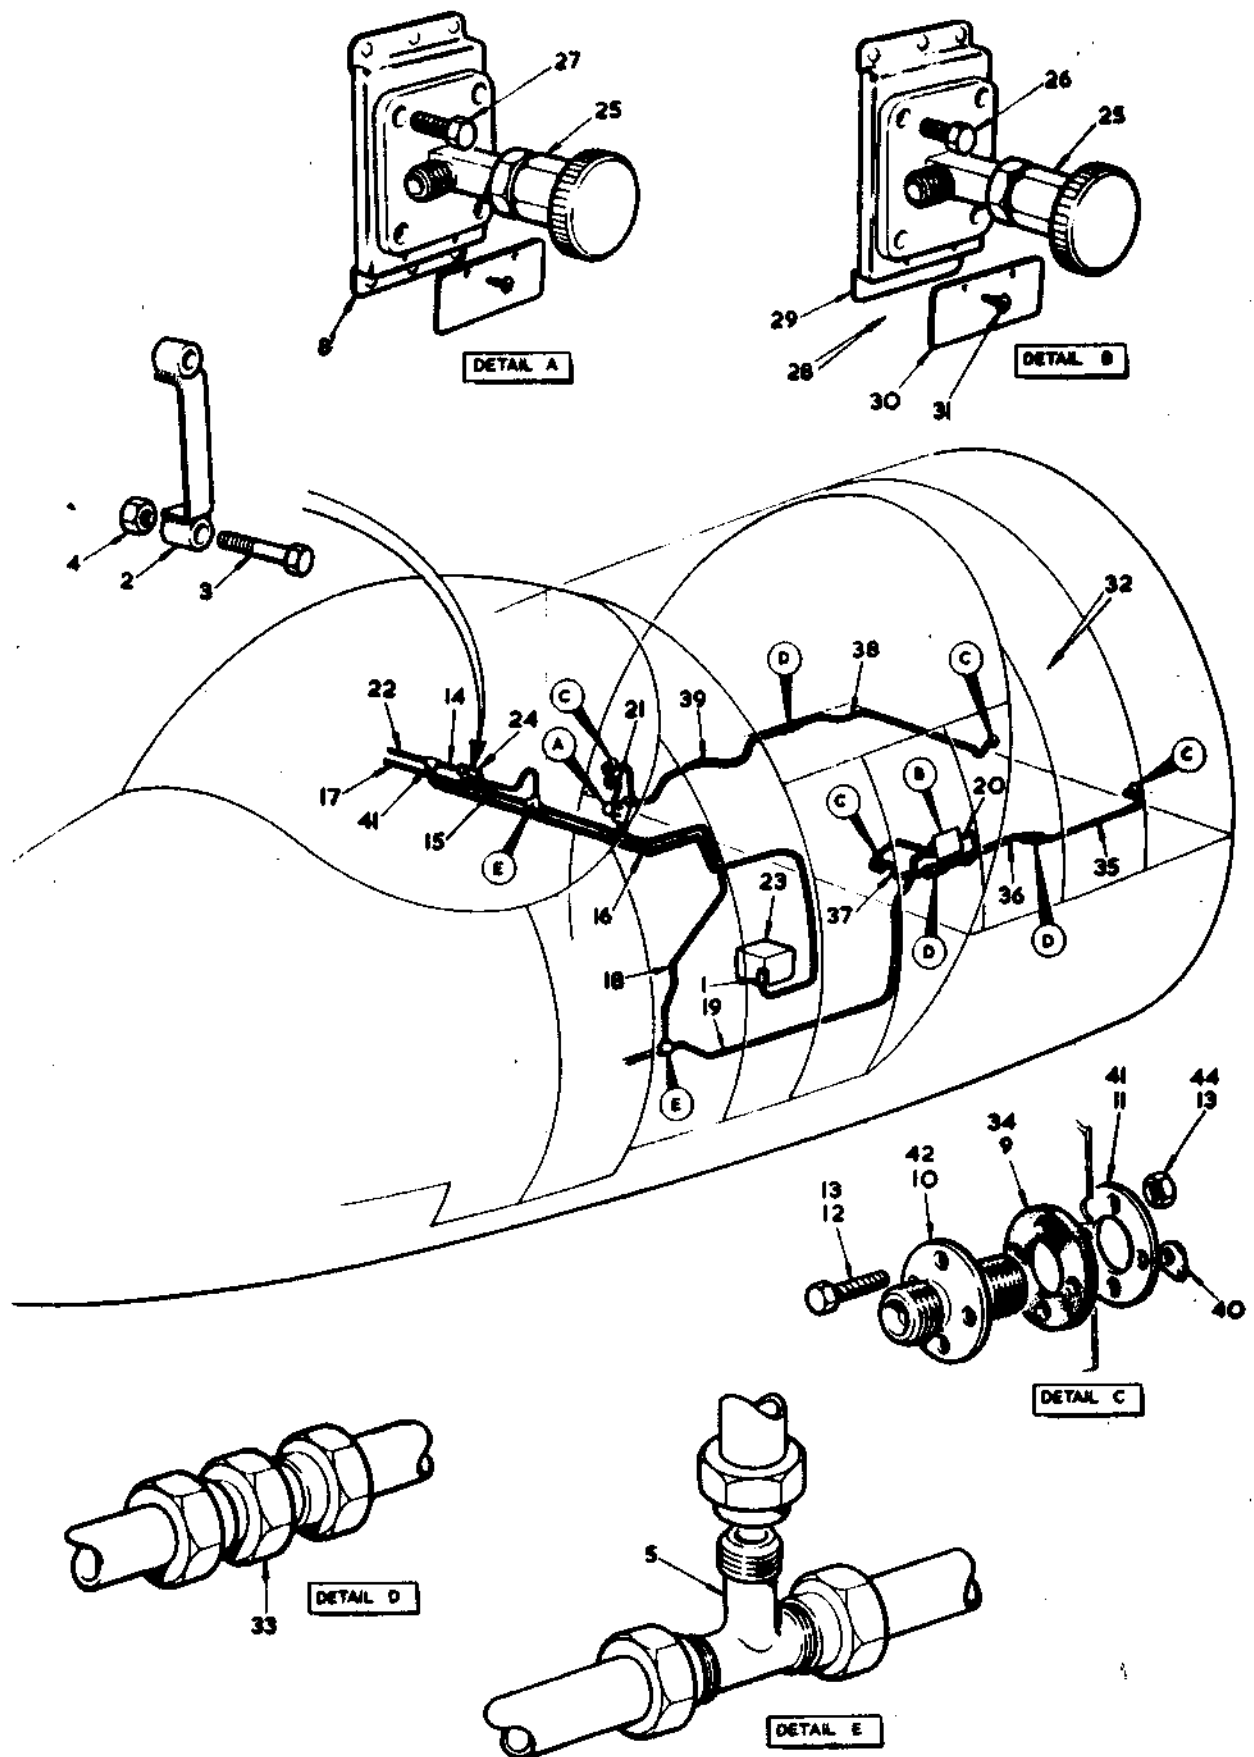


FIG. 3 OXYGEN SYSTEM

CODE A.C

SECT SJ

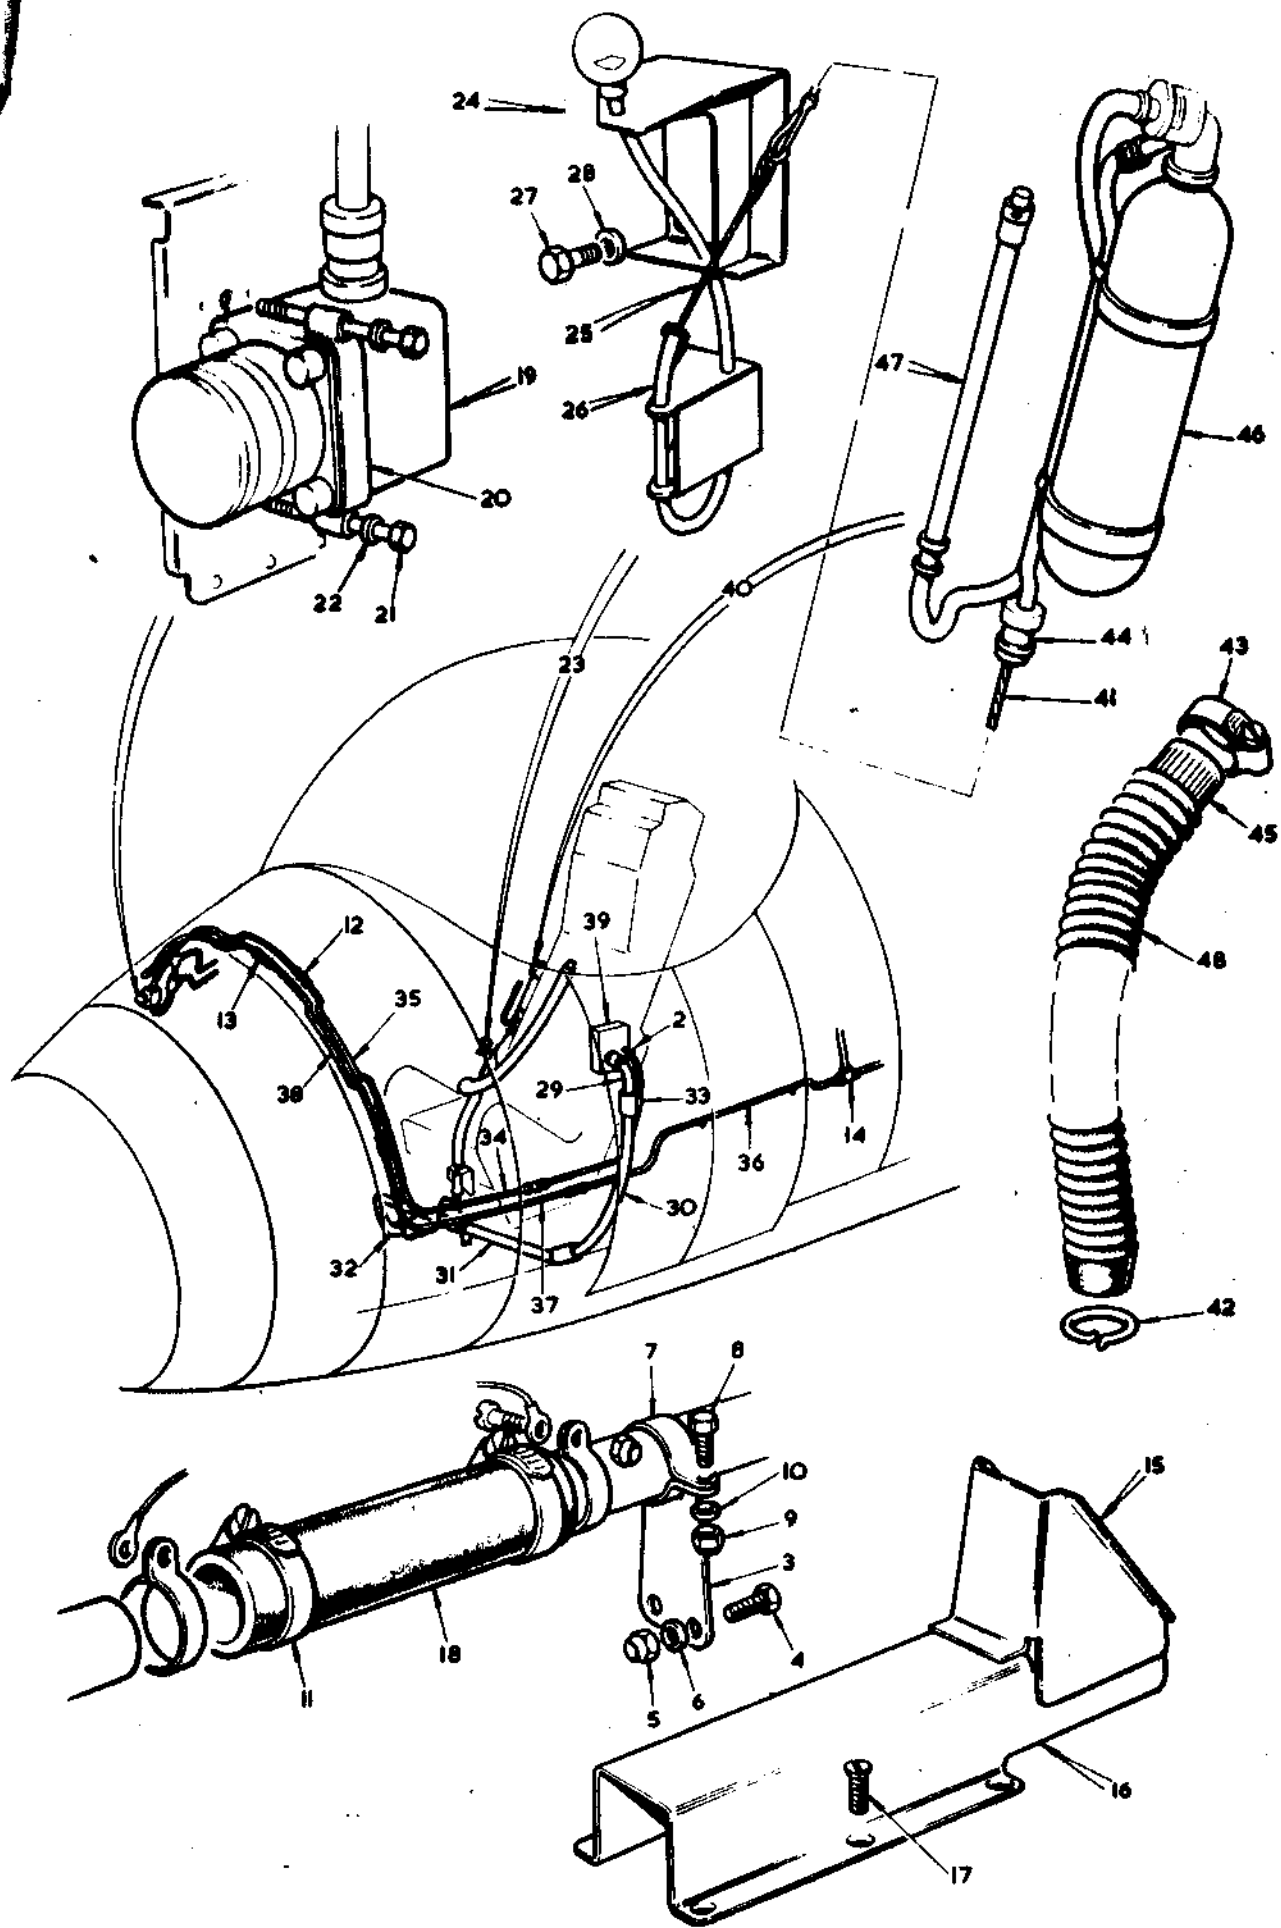


FIG. 4 OXYGEN SYSTEM

CODE A

SECT 8J

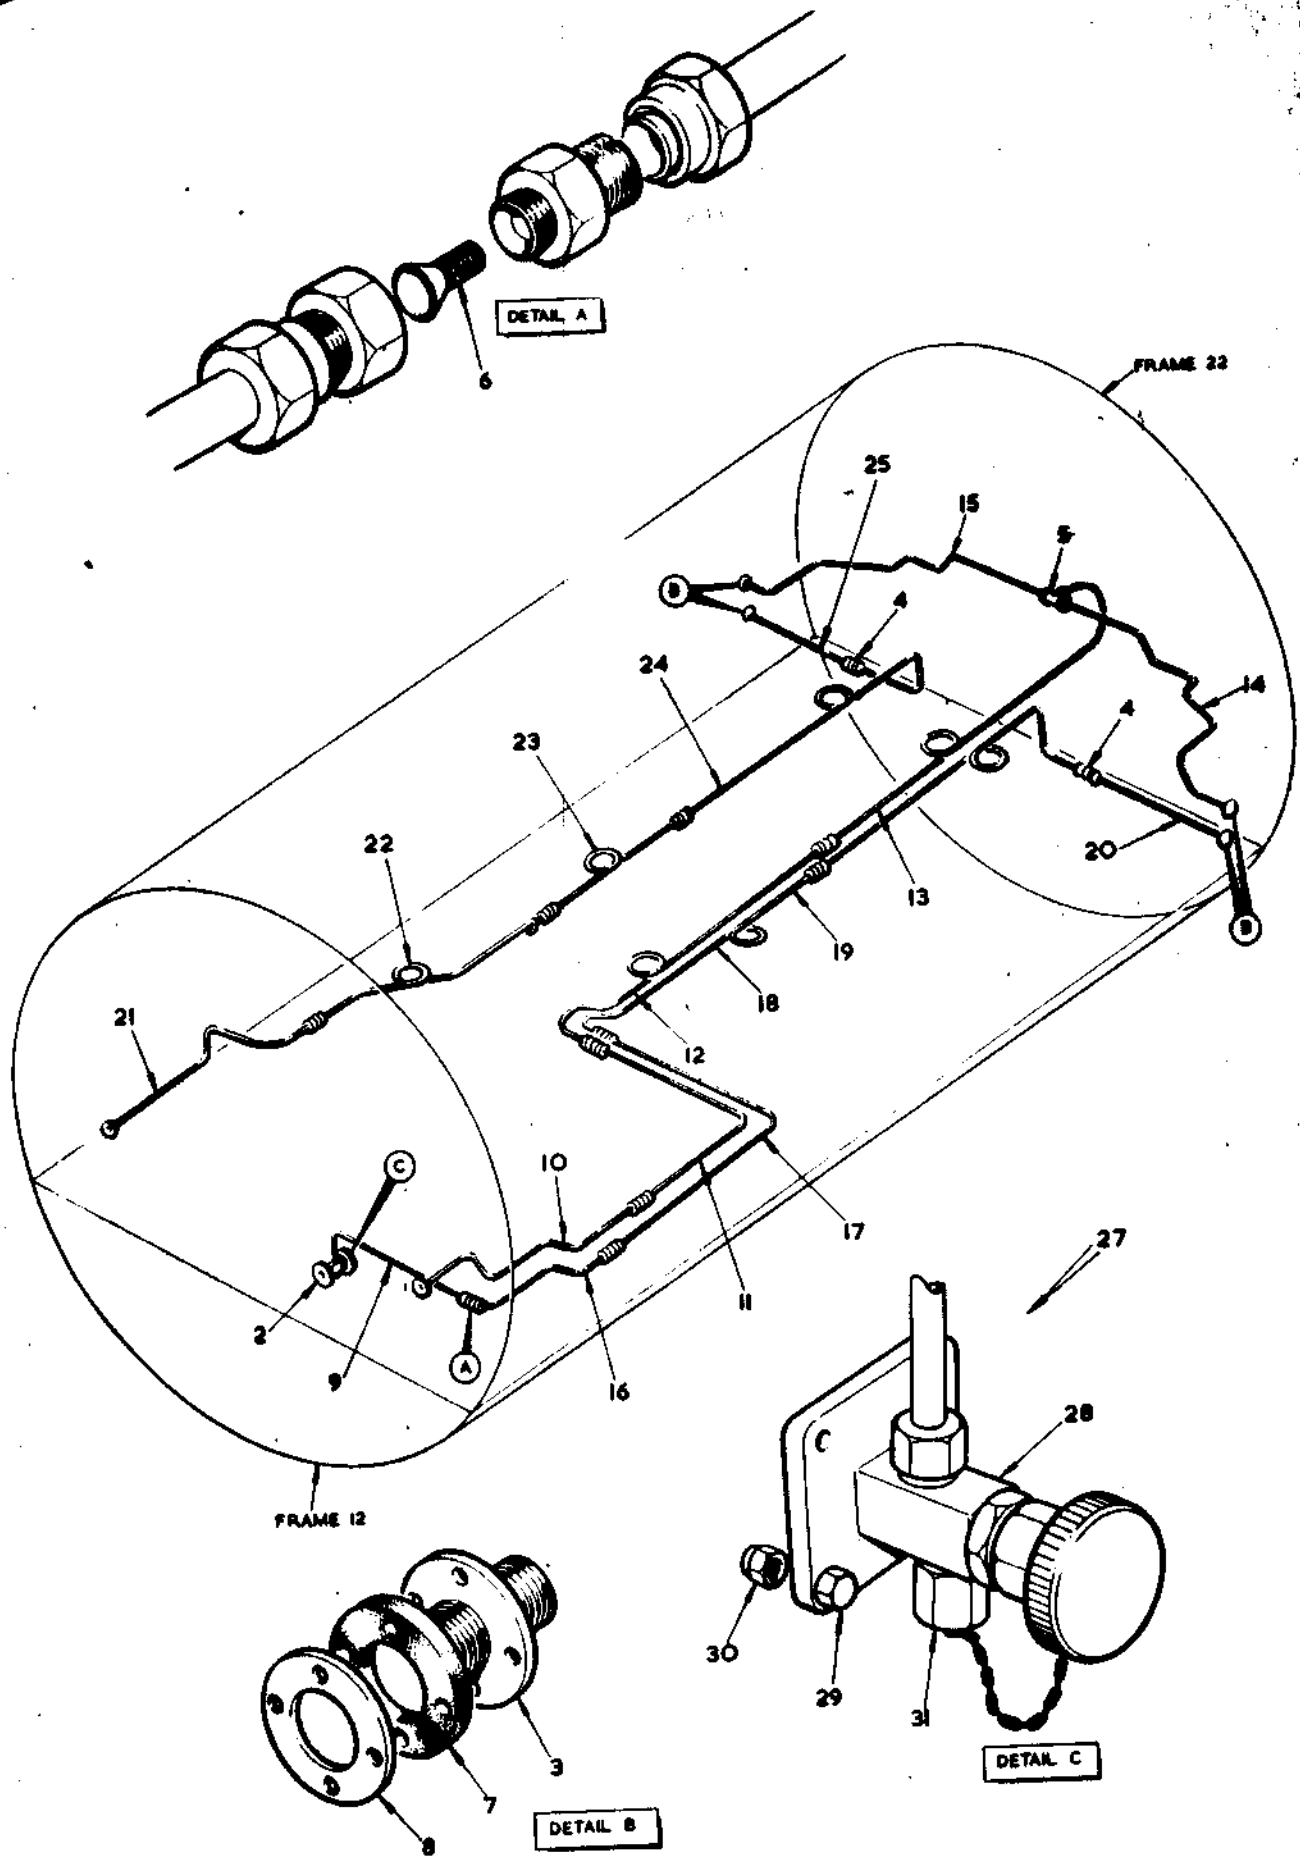


FIG.5 OXYGEN SYSTEM

CODE A

SECT 5J

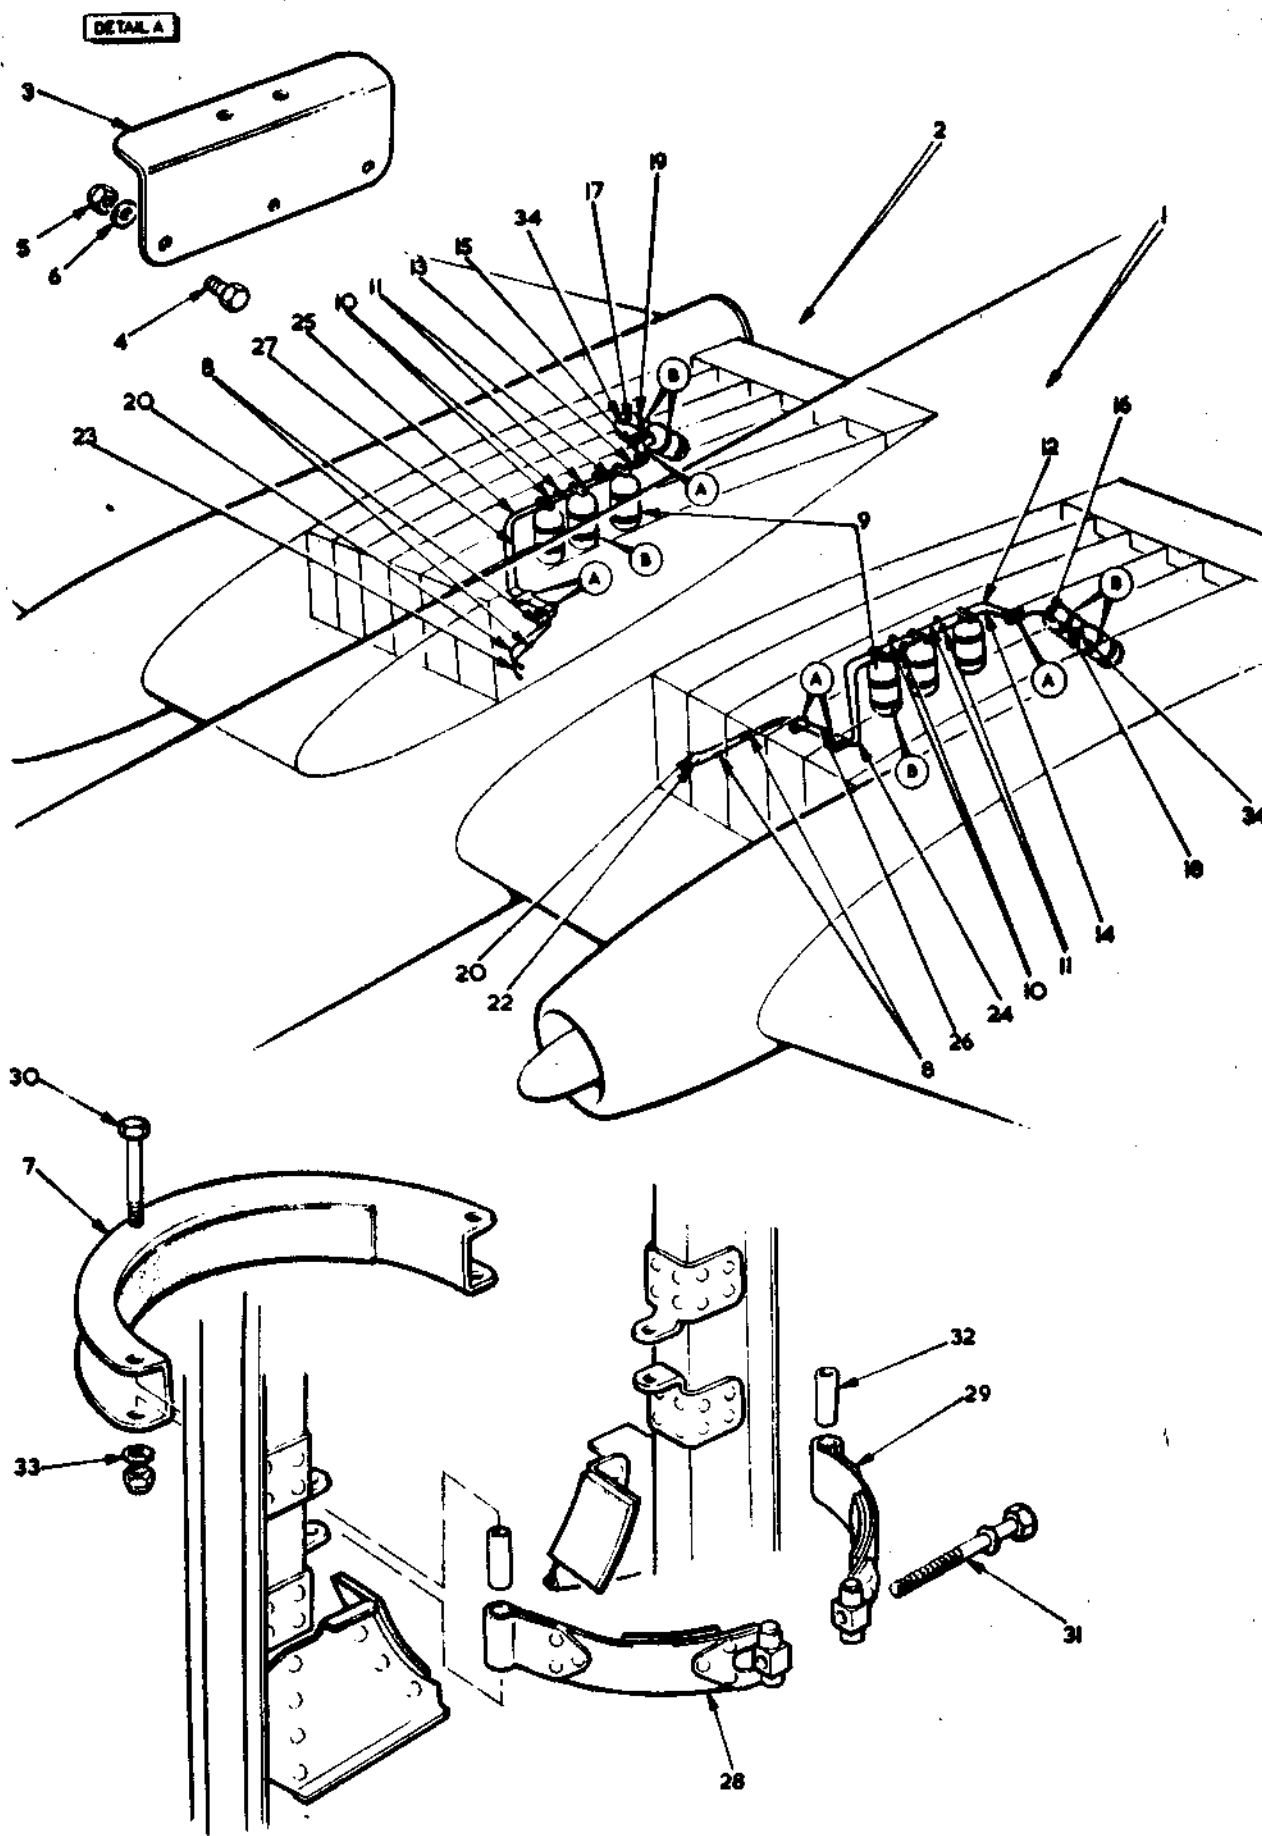


FIG. 6. OXYGEN SYSTEM

SERVICES
PITOT AND STATIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mtrl. Spec.	Cl. of Equip. M.N. L.M.	Plate No.
		1 2 3 4 5 6				
6D/114	E.H8.80.107	PITOT AND STATIC SYSTEM, FRONT FUSELAGE	-	-	-	1 1
	†	Spares for:-				
	E.A3.80.1871	. ADAPTOR, outlet	2	-	C	1 2
	AGS.838/1	. ADAPTOR, tube	3	-	-	1 3
	AGS.838/2	. BODY, union straight	14	-	-	1 4
	AGS.838/3	. BODY, union, tee	17	-	-	1 5
	AGS.838/8	. BODY, union, elbow	12	-	-	1 6
	AGS.838/9	. BUSH, rubber	115	-	-	1 7
	AS.4563/12C	. BUSH, rubber	2	-	-	1 8
	AS.4563/14C	. BOLT, csk. 28A	2	-	-	2 1
	E.A3.80.1885	. BOLT, csk. 28A	3	-	-	2 2
		. CLAMP, at frames 6 and 7	4	-	-	2 3
		Attaching parts for E. A3.80.1885:-				
	A25/68	. Bolt, 48A	1	-	-	2 4
	A25/78	. Bolt, 48A	1	-	-	2 5
1823	AGS.2001/B1	. Nut, 48A	2	-	-	2 6
	AS.470/B	. Washer, 48A	1	-	-	2 7
	SP.13/B	. Washer, 48A	1	-	-	2 8
	EEAS.91/2	. CLIP, pipe, double	8	-	C	2 9
	AGS.805Mk.00	. CLIP, hose	4	-	-	2 10
	AS.4525/5	. CLIP, pipe	33	-	-	2 11
	E.F3.70.1201	. CONNECTOR	1	-	-	1 9
	E.F2.70.27	. CONNECTOR, 4-way	2	-	-	1 10
	AGS.1107/C	. CONE, reducing	2	-	C	1 11
	AGS.952/BB	. COLLAR, 5/16" pipe	2	-	C	1 12
	E.H8.80.441	. DRAIN INSTALLATION AFT OF PRESSURE BULKHEAD	-	-	-	1 13
	†	Spares for:-				
	AGS.838/8	. ADAPTOR, outlet	2	-	C	1 14
	AS.4525/5	. BUSH, rubber	4	-	-	1 15
		. CLIP, pipe	2	-	-	1 16
28F/10525 28F/9475201		Attaching parts for AS.4525/5:-				
	A25/1C	. Bolt, 28A	1	-	-	1 17
	AGS.2001/C/1	. Nut, 28A	1	-	-	1 18
	E.B2.70.1037	. Piece, distance	2	-	-	1 19
	AGS.838/6	. DRAIN, trap	2	-	-	1 20
	E.H8.80.437	. PIPE, assembly, pitot, from pressure bulkhead to bulkhead union in wheel bay	1	-	-	1 21
	E.H8.80.439	. PIPE, assembly, static, from pressure bulkhead to bulkhead union in wheel bay	1	-	-	1 22
	AGS.838/4	. UNION	4	-	-	1 23
	E.A1.80.711	. UNION, bulkhead	2	-	-	1 24
	AGS.838/6	. DRAIN, trap	2	-	-	1 25
	E.86.80.5457	. FAIRLEAD, assembly, navigator's lower tray	1	-	C	2 12
		Attaching parts for E.86.80.5457:-				
	A25/13B	. Bolt, 48A	2	-	C	2 13
	AGS.2001/B1	. Nut, 48A	2	-	C	2 14
	SP.13/B	. Washer, 48A	2	-	C	2 15
33599	AGS.3089	. GASKET, 'O' ring at climb indicator, pilot's panel	1	-	-	1 26

SERVICES
PITOT AND STATIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Rate No.
					M.R. L.M.	
		1 2 3 4 5 6				
6A/3820	†	HEAD, pressure, Mk. SW	1	—	—	3 1
	A38/A8	Attaching parts for Ref. 6A/3820:- Screw, 6BA	8	—	—	3 2
	E.H8.80.315	HOSE, flexible to altimeter between frames A-1	1	—	—	3 3
	E.H8.80.465	HOSE, flexible, static line	1	—	—	1 27
4412	E.A3.80.2375	MOUNTING, pressure head Attaching parts for E.A3.80.2375:-	1	—	C	3 4
13218	E.A3.80.2901	Nut	1	DTD.683	C	3 5
4415	E.A3.80.2379	Sleeve, rubber	1	Shore 70	C	3 6
4416	E.A3.80.2381	Washer, inner, seal retaining	2	L.72	C	3 7
4418	E.A3.80.2391	Washer, outer sealing	1	L. 72	C	3 8
4417	E.A3.80.2383	Washer, rubber, inner sealing	1	Shore 70	C	3 9
	AGS.838/4	Nut, union	115	—	—	1 28
3400	E.A3.80.1649	PIPE, drain reservoir	2	—	C	3 10
	E.A3.80.2389	PIPE, pitot to pressure head	1	—	—	3 11
	E.B6.80.879	PIPE, pitot, continuation to tee piece	1	—	—	3 12
	E.B6.80.881	PIPE, pitot, continuation to connection	1	—	—	3 13
	E.A3.80.2385	PIPE, pitot, continuation to connection	1	—	—	3 14
	E.B6.80.4647	PIPE, pitot continuation to tee piece, bomb sight computer	1	—	—	3 15
6431	E.A3.80.1749	PIPE, pitot, tee piece to connection, bomb sight computer	1	—	—	3 16
1540	E.A3.80.1630	PIPE, pitot, continuation to flexible hose bomb sight computer	1	—	—	3 17
	E.B6.80.4633	PIPE, pitot, tee piece to connection	1	—	—	3 18
	E.H8.80.311	PIPE, pitot, connection to tee piece	1	—	—	3 19
	E.H8.80.313	PIPE, pitot, tee piece to connection	1	—	—	3 20
	E.H8.80.309	PIPE, pitot, connection to A.S.I. between frames A-1	1	—	—	3 21
	E.H8.80.307	PIPE, pitot tee piece to tee piece	1	—	—	3 22
	E.G9.80.485	PIPE, pitot, tee piece to flexible tube, pilot's panel	1	—	—	1 29
	E.H8.80.131	PIPE, pitot, flexible tube to tee piece, pilot's panel	1	—	—	1 30
	E.H8.80.199	PIPE, pitot, tee piece to machmeter, pilot's panel	1	—	—	1 31
	E.H8.80.123	PIPE, pitot, tee piece to A.S.I., pilot's panel	1	—	—	1 32
	E.H8.80.487	PIPE, pitot, tee piece to connection between frames 4-5	1	—	—	3 23
	E.H8.80.475	PIPE, pitot, continuation to 4-way connector	1	—	—	3 24
	E.H8.80.485	PIPE, pitot, 4-way connector to connector	1	—	—	3 25
	E.G9.80.503	PIPE, pitot, connector to flexible tube	1	—	—	3 26
	E.G9.80.499	PIPE, pitot, flexible tube to A.S.I. navigator's panel	1	—	—	3 27
	E.H8.80.479	PIPE, pitot, tee piece to bulkhead union	1	—	—	3 28
8640	E.A3.80.1805	PIPE, pitot, bulkhead union to connection aft of frame 12	1	L.54	C	3 29
	E.H8.80.277	PIPE, static, tee piece to vent, port	1	—	—	3 30
	E.H8.80.273	PIPE, static, tee piece to vent, starboard	1	—	—	3 31
	E.H8.80.275	PIPE, static, tee piece to tee piece	1	—	—	3 32
	E.H8.80.317	PIPE, static, tee piece to altimeter between frames A-1	1	—	—	3 33

SERVICES
PITOT AND STATIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plass No.
					MLR L.M.	
		1 2 3 4 5 6				
6433	E.H8.80.305	PIPE, static, tee piece to tee piece drain	1	—	—	3 34
	E.A3.80.1579	PIPE, static, tee piece drain to tee piece, bomb sight computer	1	L.54	C	3 35
6434	E.A3.80.1577	PIPE, static, tee piece, bomb sight computer to connection	1	L.54	C	3 36
1504	E.A3.80.1629	PIPE, static, continuation to flexible hose, bomb sight computer	1	L.54	C	3 37
	E.B6.80.4636	PIPE, static, tee piece to connection at frame 1	1	—	—	3 38
	E.H8.80.343	PIPE, static, connection to tee piece at frame 1	1	—	—	3 39
	E.H8.80.319	PIPE, static, tee piece to flexible hose altimeter between frames A-I	1	—	—	3 40
	E.G9.80.463	PIPE, static, tee piece to flexible hose, pilot's panel	1	—	—	1 33
	E.H8.80.127	PIPE, static, flexible hose to tee piece	1	—	—	1 34
	E.H8.80.126	PIPE, static, tee piece to tee piece, pilot's panel	1	—	—	1 35
	E.H8.80.129	PIPE, static, tee piece to machmeter	1	—	—	1 36
	E.H8.80.193	PIPE, static, tee piece to tee piece, pilot's panel	1	—	—	1 37
	E.H8.80.133	PIPE, static, tee piece to climb indicator, pilot's panel	1	—	—	1 38
	E.H8.80.341	PIPE, static, tee piece to tee piece, pilot's panel	1	—	—	3 41
	E.H8.80.451	PIPE, static, tee piece to connection between frames 4-5	1	—	—	3 42
	E.H8.80.477	PIPE, static, continuation to tee piece, navigator's panel	1	—	—	3 43
	E.H8.80.121	PIPE, static, tee piece to A.S.I. pilot's panel	1	—	—	1 39
	E.H8.80.483	PIPE, static, tee piece to connection	1	—	—	3 44
	E.H8.80.505	PIPE, static, connection to flexible hose	1	—	—	3 45
	E.G9.80.501	PIPE, static, flexible hose to A.S.I. navigator's panel	1	—	—	3 46
	E.G9.80.497	PIPE, static, A.S.I. to altimeter, navigator's panel	1	—	—	3 47
7126	E.H8.80.481	PIPE, static, forward to pressure bulkhead	1	—	—	3 48
	E.H8.80.1803	PIPE, static, aft of pressure bulkhead	1	L.54	C	3 49
	E.B2.70.1037	PIECE, distance, at 4-way connectors	2	—	—	1 40
	E.A1.80.713	RING, sealing, bulkhead union	2	—	—	1 41
	AGS.904/88	SLEEVE, outer	2	—	—	1 42
	E.G9.80.281	TUBE, flexible, static line	1	—	—	3 50
	E.H8.80.487	TUBE, flexible, pitot line	1	—	—	1 43
	E.G9.80.989	TUBE, flexible, pitot	1	—	—	3 51
	E.A1.80.711	UNION, bulkhead	2	—	—	1 44
		Attaching parts for E.A1.80.711:-				
	A25/28	Bolt, 4BA	6	—	—	1 45
	AGS.2001/B1	Nut, 4BA	6	—	—	1 46
	SP.13/B	Washer, 4BA	6	—	—	1 47
	E.H8.80.449	VENT, STATIC, ASSEMBLY, PORT	1	—	—	2 16
		Spares for:-				
	E.A3.80.2001	PACKING	1	—	—	2 17
	E.A4.80.1193	PLATE, clamping	1	—	—	2 18
	E.A4.80.1191	PLATE, sealing	1	—	—	2 19
	E.A4.80.1189	VENT, static	1	—	—	2 20
		Attaching parts for E.H8.80.449:-				
	E.A9.80.1273	Bolt, special, 4BA	4	—	—	2 21
	AGS.2001/B/4	Nut, 4BA	4	—	—	2 22
	SP.16/B	Washer, thick, 4BA	4	—	—	2 23

SERVICES
PITOT AND STATIC SYSTEM

Ref. No.	Part No.	Description 1 2 3 4 5 6	No. off	Mach. Spec.	Cl. of Equip. M.J. L.M.	Plate No.
	E.HS.80.450	. VENT, STATIC	1	—	—	2 24
		Spares for:-				
	E.A3.80.2001	. . PACKING	1	—	—	2 25
	E.A4.80.1194	. . PLATE, clamping	1	—	—	2 26
	E.A4.80.1191	. . PLATE, sealing	1	—	—	2 27
	E.A4.80.1190	. . VENT, static	1	—	—	2 28
		Attaching parts for E.HS.80.450:-				
	E.A9.80.1273	. Bolt, special, 48A	4	—	—	2 29
	AGS.2001/8/4	. Nut, 48A	4	—	—	2 30
	SP.16/B	. Washer thick, 48A	4	—	—	2 31

SERVICES
PITOT AND STATIC SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Pilot No.
		1 2 3 4 5 6				
	E.A3.80.057	PITOT AND STATIC SYSTEM IN CENTRE FUSELAGE Spares for:-	-	-	-	4 1
	AGS.838/8	. BUSH, rubber	11	-	-	4 2
6626	EEAS.91/3	. CLIP, pipe double	2	-	C	4 3
6443	E.A1.80.891	. FAIRLEAD, at frames 14, 16 and 17 Attaching parts for E.A1.80.891:-	3	-	C	4 4
	A25/138	. Bolt, 4BA, at frames 14 and 17	2	-	-	4 5
	A25/158	. Bolt, 4BA, at frame 16	2	-	-	4 6
7795	E.A3.80.1851	. Packing, place at frame 16	1	-	C	4 7
	AGS.2001/81	. Nut, 4BA	2	-	-	4 8
	AS.470/8	. Washer, 4BA	2	-	-	4 9
7795	E.A3.80.1655	. FAIRLEAD, at frame 16 Attaching parts for E.A3.80.1655:-	1	-	C	4 10
	A25/138	. Bolt, 4BA	2	-	-	4 11
	AGS.2001/81	. Nut, 4BA	2	-	-	4 12
	AS.470/8	. Washer 4BA	2	-	-	4 13
	AGS.838/4	. Nut, union	11	-	-	4 14
	AGS.838/8	. Nut, blanking	1	-	-	4 15
4053	E.A3.80.1635	. PIPE, static, forward of frame 13 to tee piece between frames 15-16	1	-	C	4 16
	E.A3.80.1637	. PIPE, static, union between frames 15-16 to port wing	1	-	-	4 17
4052	E.A3.80.1641	. PIPE, pitot, forward of frame 13 to tee piece between frames 15-16	1	-	C	4 18
	E.A3.80.1639	. PIPE, pitot, union between frames 15-16 to tee piece	1	-	-	4 19
7794	E.A3.80.1643	. PIPE, pitot, tee union to union on fuselage skin	1	-	C	4 20
3400	E.A3.80.1649	. PIPE, drain	2	-	C	4 21
	AGS.838/1	. UNION, straight	1	-	-	4 22
	AGS.838/2	. UNION, tee	3	-	-	4 23
	AGS.838/7	. WASHER	1	-	-	4 24
6289	EEAS.21/2ERH	. WASHER, 'D'	14	-	C	4 25

SERVICES
PITOT AND STATIC SYSTEM

Ref. No.	Part No.	Description	No. off	Mater. Spec.	Cl. of Equip. M.F. L.M.	Plate No.
		1 2 3 4 5 6				
	E.A3.80.650	PITOT AND STATIC SYSTEM IN PORT WING	—	—	—	5 1
		Spares for:-				
28F/12803	AGS.838/B	. BUSH, rubber	14	—	C	5 2
	E.A1.80.781	. MOUNTING OF AIR MILEAGE UNIT, ASSEMBLY	—	—	—	5 3
		Spares for:-				
68/554	†	. UNIT, air mileage	1	—	A	5 4
		Attaching parts for Ref. 68/554:-				
28D/12531	A25/3C	. Bolt, 2BA	6	—	C	5 5
	EEAS.88	. Packing	2	—	—	5 6
	E.A3.80.1799	. MOUNTING OF V.G. RECORDER, AND VALVES ASSEMBLY	—	—	—	5 7
		Spares for:-				
2823	E.A3.80.1891	. ADAPTOR, valve body	2	—	C	5 8
28F/5100	AGS.838/5	. BUSH, rubber, union	2	—	C	5 9
28F/5353	AGS.952/B	. COLLAR	4	—	C	5 10
28F/9501	AGS.1142/B	. NIPPLE, adaptor	4	—	C	5 11
28F/5106	AGS.838/4	. NUT, union	2	—	C	5 12
4880	E.A3.80.1827	. PLATE, stop valve	2	—	C	5 13
		Attaching parts for E.A3.80.1827:-				
28D/12528	A26/1B	. Bolt, 4BA	4	—	C	5 14
28M/10327	AGS.2002/B/1	. Nut, 4BA	4	—	C	5 15
4859	E.A3.80.1899	. TUBE, adaptor	2	—	C	5 16
9676	E.A3.80.1805	. TUBE, pitot, from drain trap to valve	1	L.54	C	5 17
9677	E.A3.80.1807	. TUBE, static, from drain trap to valve	1	L.54	C	5 18
4858	E.A3.80.1813	. TUBE, rubber	1	—	C	5 19
4857	E.A3.80.1815	. TUBE, rubber	1	—	C	5 20
	VICKERS					
27F/2131	D.517	. VALVE, 3-way	2	—	B	5 21
28F/5108	AGS.838/4	. NUT, union	14	—	C	5 22
7216	E.A3.80.659E	. PIPE, drain, reservoir, 5/16" o/d. x 4"	2	L.54	C	5 23
7126	E.A3.80.1817	. PIPE, pitot, from drain trap to A.M.U.	1	L.54	C	5 24
7129	E.A3.80.1823	. PIPE, pitot, from drain trap to wing, fuselage coupling	1	L.54	C	5 25
7127	E.A3.80.1819	. PIPE, static, from drain trap to A.M.U.	1	L.54	C	5 26
7128	E.A3.80.1821	. PIPE, static, from drain trap to wing fuselage coupling	1	L.54	C	5 27
28F/5105	AGS.838/2	. UNION, body, tee	4	—	C	5 28

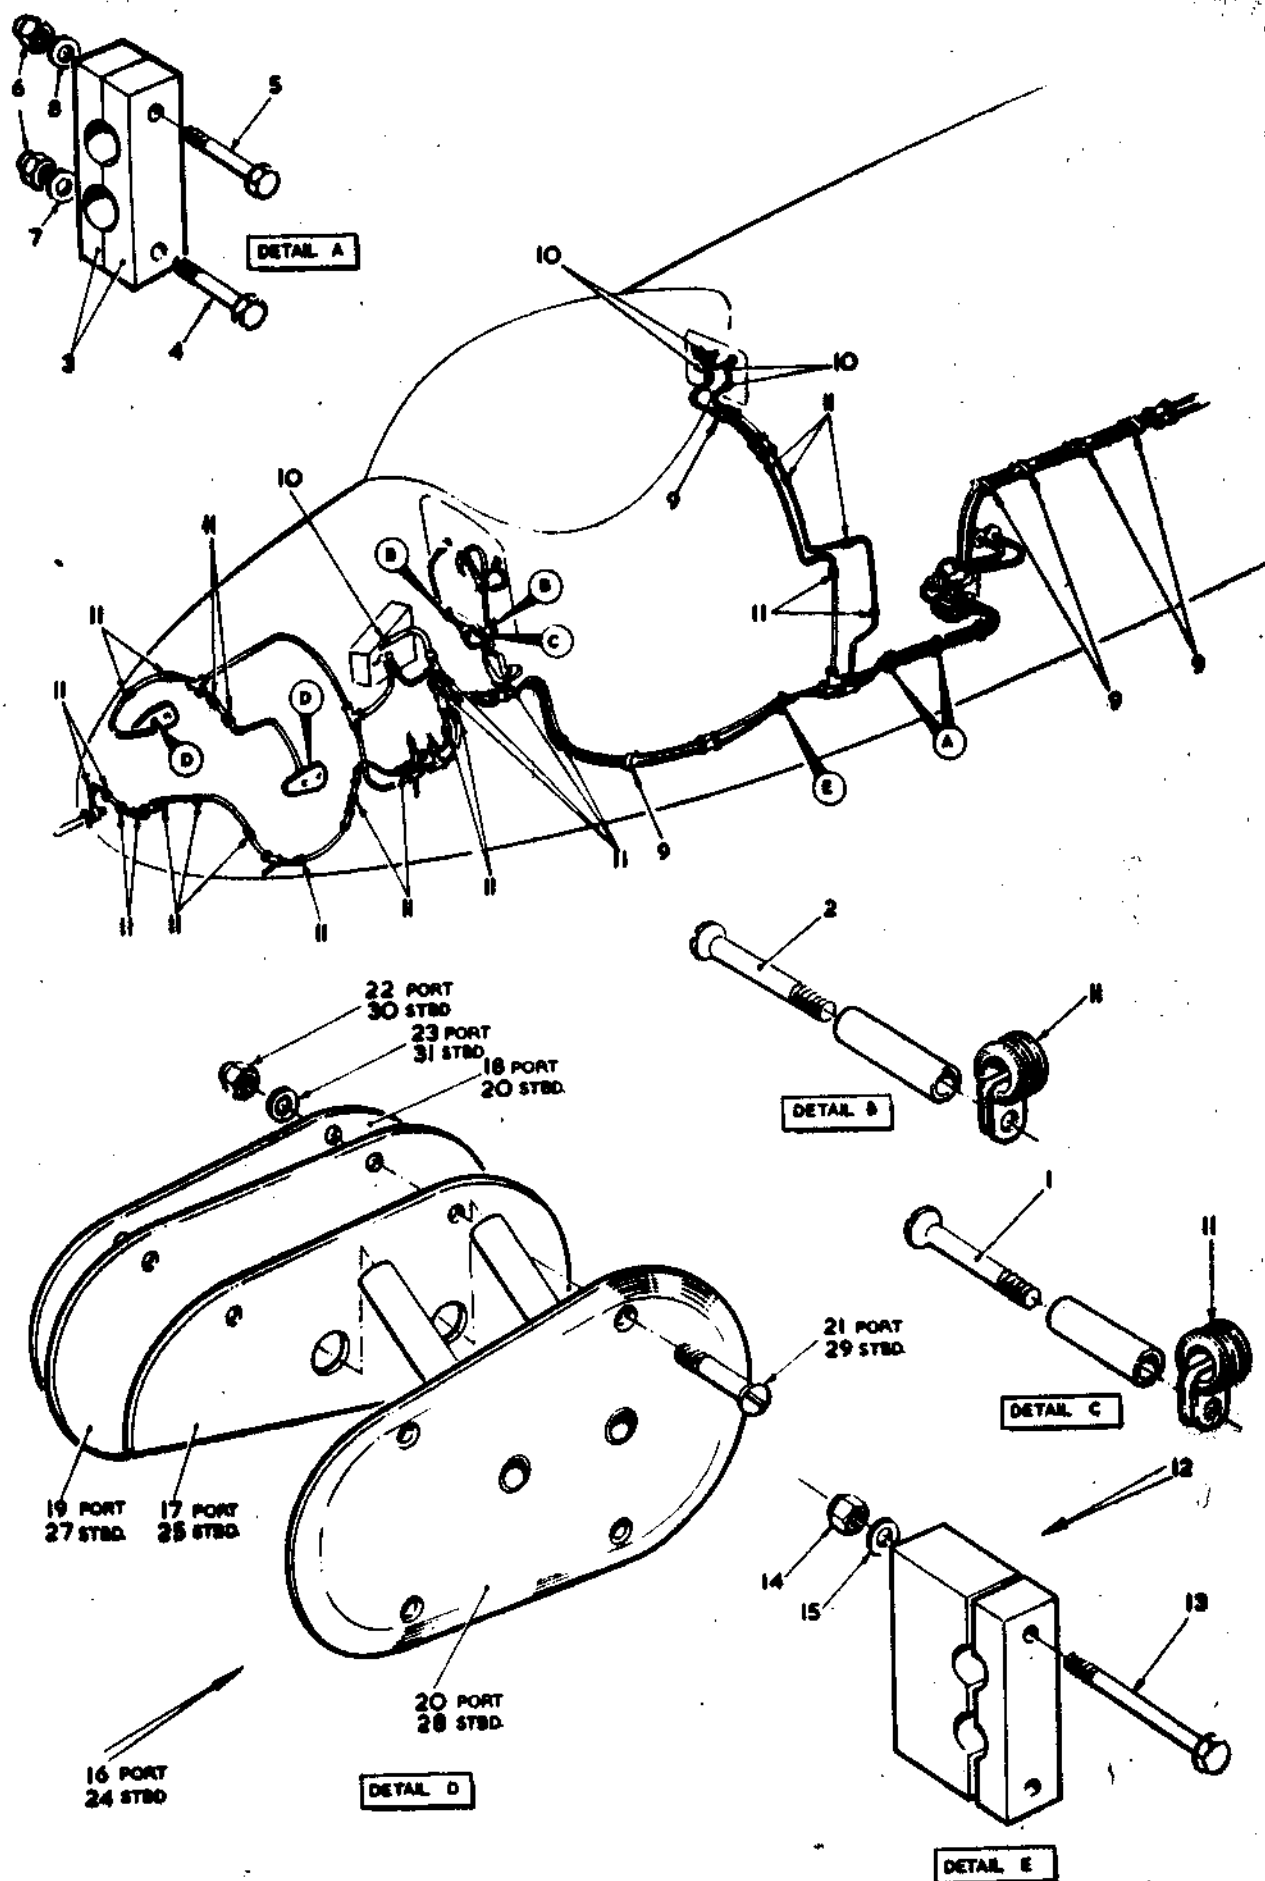


FIG. 2 PITOT & STATIC SYSTEM

CODE A

SECT. 8K

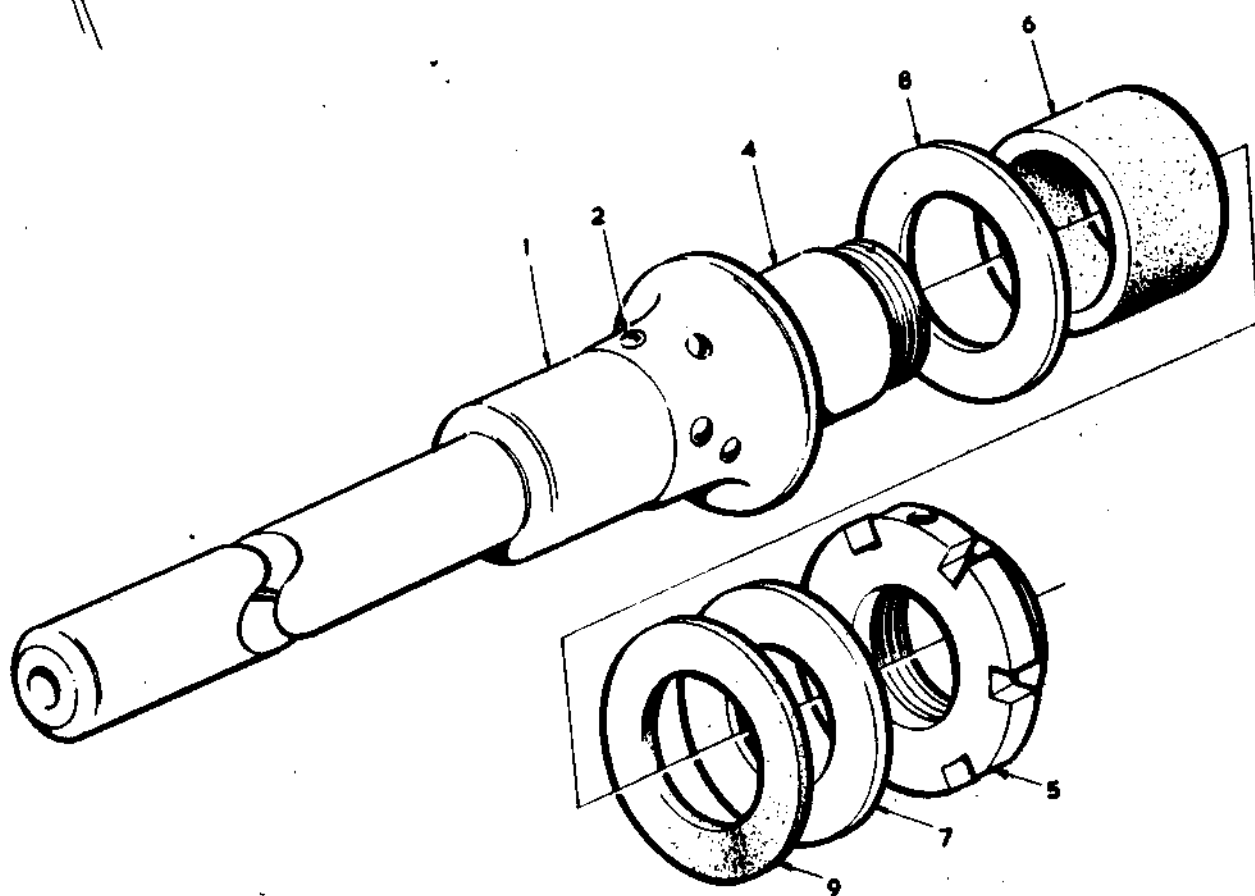
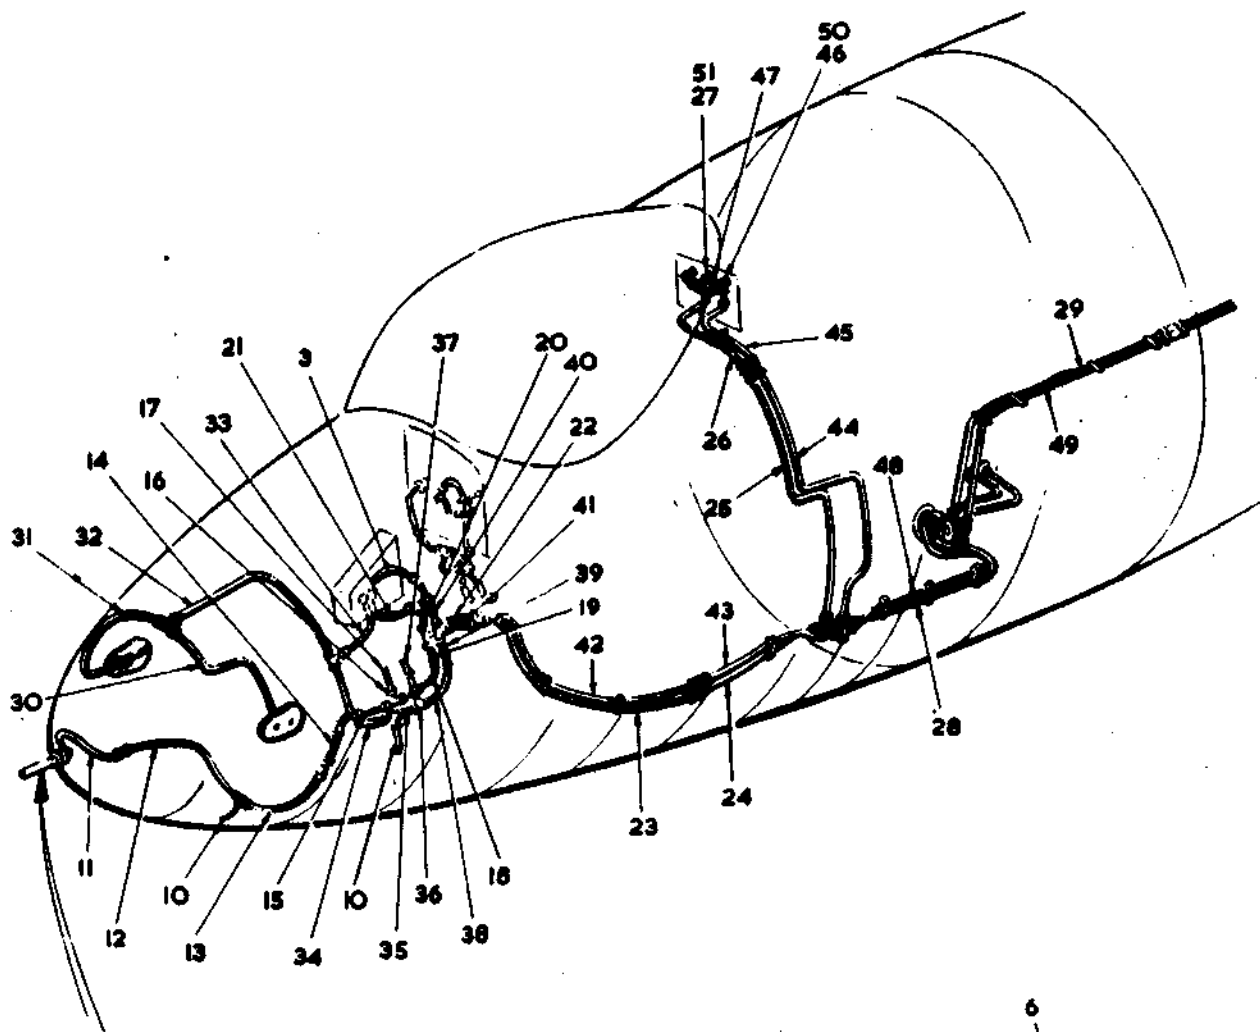


FIG. 3 PITOT & STATIC SYSTEM

CODE A

SECT. 5K

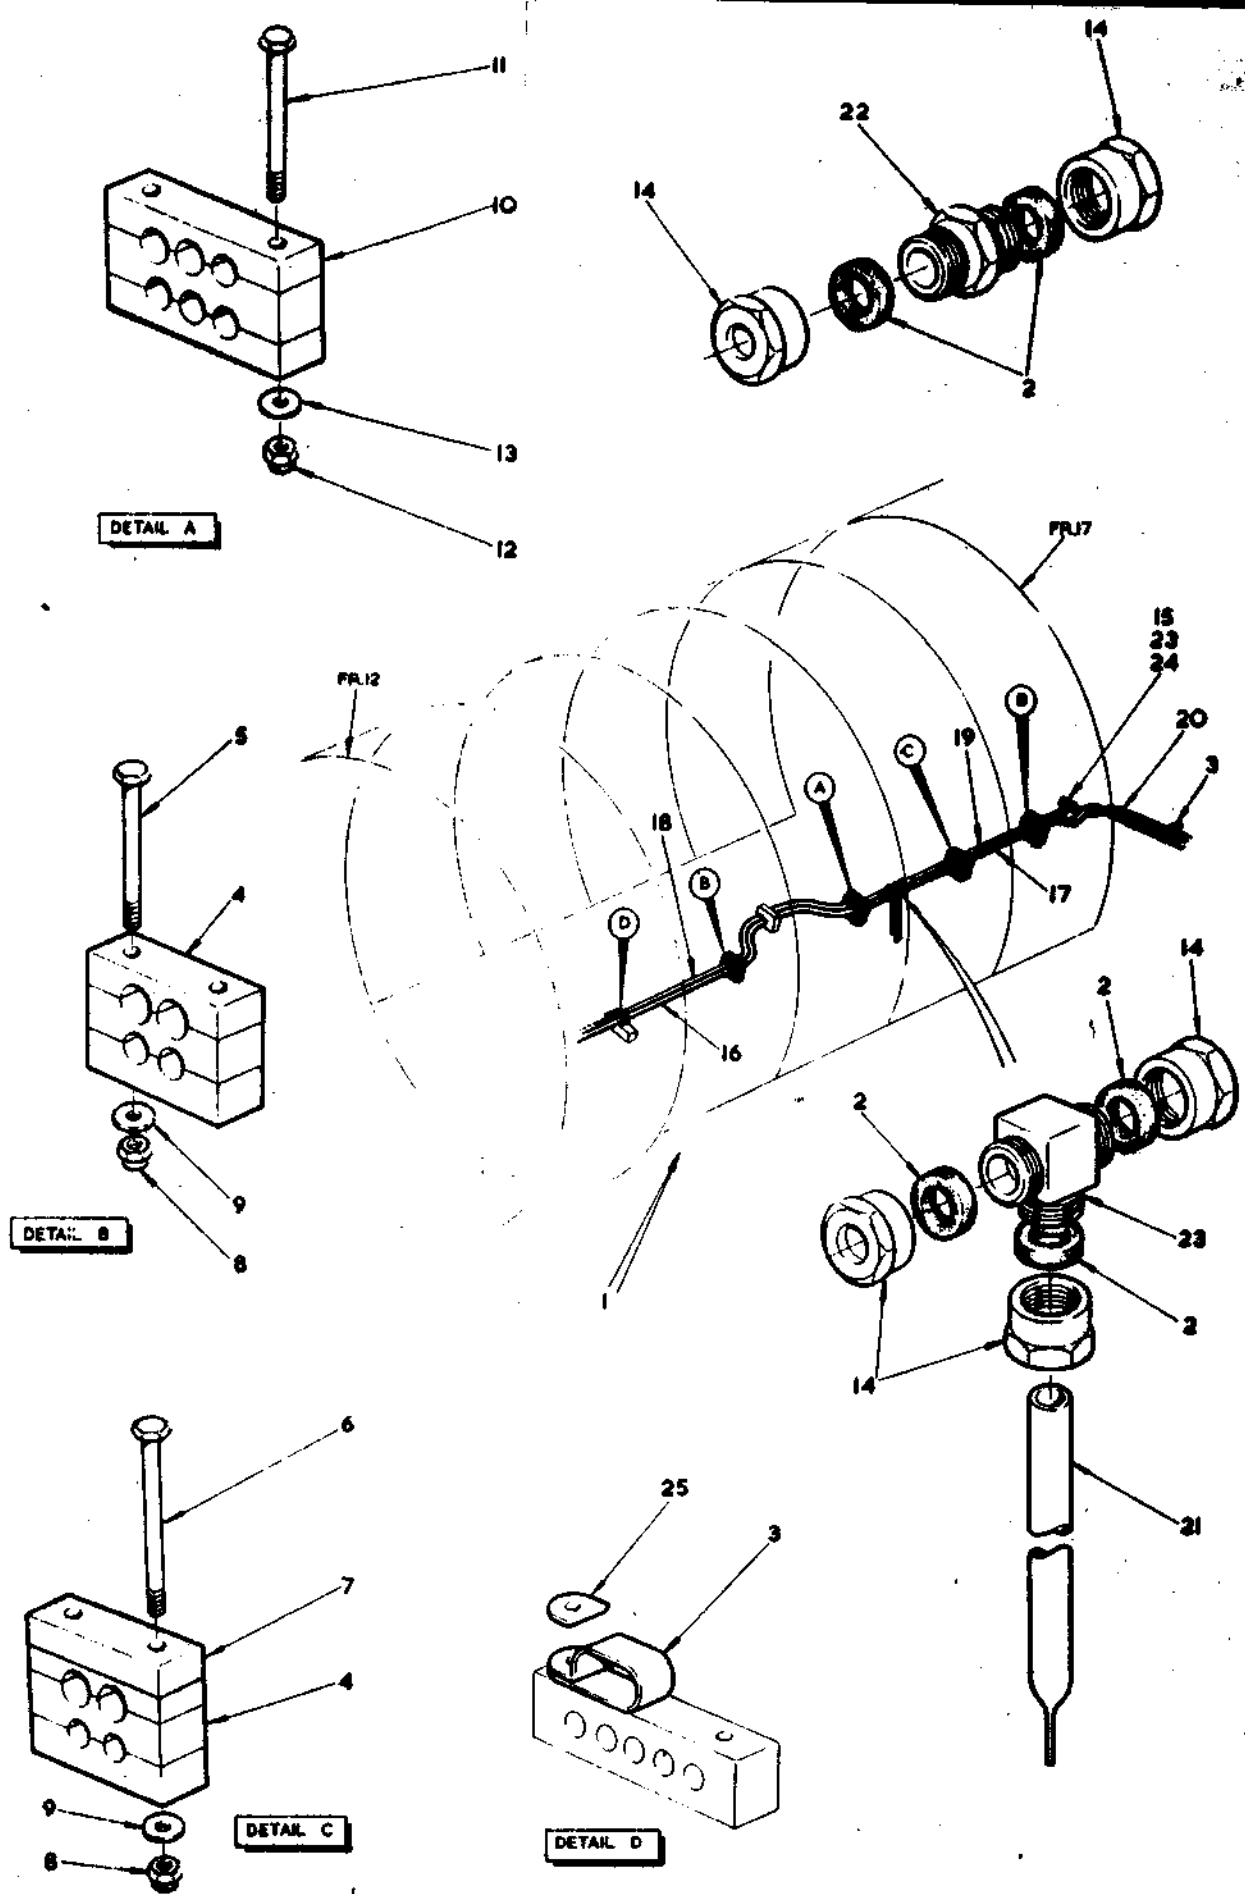


FIG.4 PITOT & STATIC SYSTEM

CODE A,B

SECT 5K

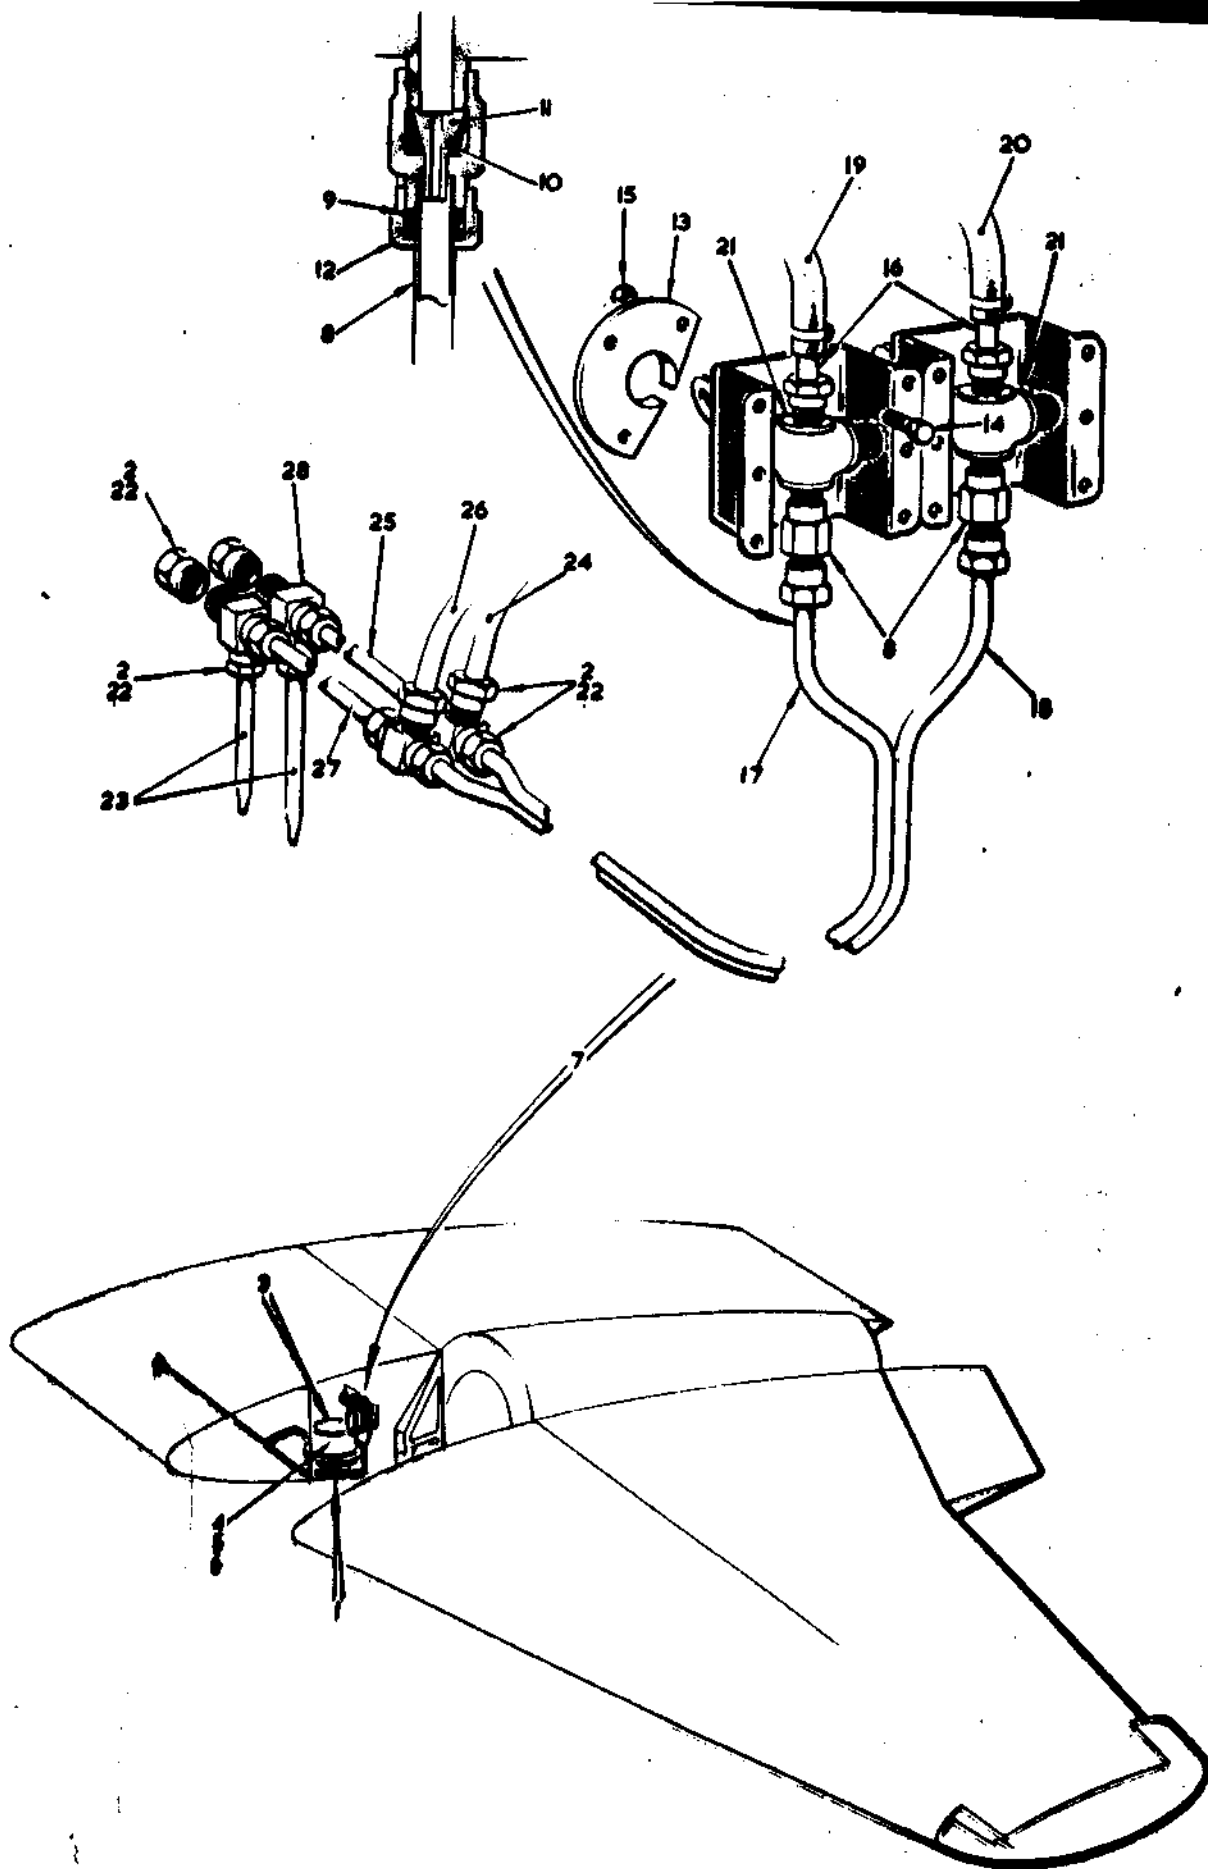


FIG. 5 PITOT & STATIC SYSTEM