

SERVICES—FUEL SYSTEM REAR FUSELAGE


Ref. No.	Part No.	Description	1 2 3 4 5					No. Off	Material Specification	M.R. Class of Store	Plate No.
			1	2	3	4	5				
	D.202256	<b>FUEL SYSTEM, REAR FUSELAGE, ASSEMBLY</b>						—			
2727	F.195128	Block, clamp, for pressure pipe					3	LFS.21	MR/C	NB.1	
27N/173	Graviner E.502	Block, terminal (explosion suppressor) (Mod. 582)					2	—	C.		
421	A.185593	Clamp, for twin gate and suction relief valves, group					3	—	C.	NB.1	
2723	F.184931	Bolt, eye					1	S.94.B	C.	NB.1	
6526	F.213079	Nut, special					1	S.96	C.		
2724	F.185592	Washer					1	DTD.364	C.	NB.1	
4764	Std.840/21	Clip, support, $\frac{3}{16}$ " wide x 22 S.W.G. x 2-1" long					1	DTD.610	MR/C	4	
	Std.851/38	Clip, support, $\frac{3}{16}$ " wide x 22 S.W.G. x 3-8" long (Make from 30B/1433)					3	DTD.160			
	Std.853/51	Clip, vent pipe seat					3	S.3		4	
	F.210152	Clip, support, for pressure pipe					2	—		NB.1	
1385	F.190242	Collar, at vent pipe connection					1	DTD.364	C.		
	Std.1285.7CC	Connection, bonding (Alternative to AS.3360.C7C)					1	—			
12G/1441	Graviner E.859	Detonator (to be fitted to special instructions)					2	—	C.		
422	A.186347	Extension, for twin gate valve					2	DTD.364	C.	NB.1	
2095	F.194603	Fairlead, for pressure pipes					4	LFS.21	C.	NB.1	
3895	A.189935	Fairlead, for pressure pipes					4	LFS.21	C.	NB.1	
2725	F.195096	Fairlead, for pressure pipes					2	LFS.21	MR/C	NB.1	
27N/174	Graviner E.504	Plate, pivot explosion suppressor (Mod. 582)					2	—	C.		
2028	B.195140/1	Pipe, fuel, valve to connection, port					1	DTD.253	C.	NB.1	
2029	B.195140/2	Pipe, fuel, valve to connection, starboard					1	DTD.253	C.	NB.1	
437	B.184767/4	Pipe, fuel, pressure reducing valve to diaphragm, port					1	DTD.253	C.	NB.1	
438	B.184767/5	Pipe, fuel, pressure reducing valve to diaphragm, starboard					1	DTD.253	C.	NB.1	
1879	B.184767/6	Pipe, fuel diaphragm to filter					2	DTD.253	C.	NB.1	
6261	B.202258/1	Pipe, fuel, coupling to coupling, port					1	DTD.253	B.	NB.1	
6262	B.202258/2	Pipe, fuel, coupling to coupling, starboard					1	DTD.253	B.	NB.1	
6263	B.202258/3	Pipe, fuel, relief valve to coupling, port					1	DTD.253	B.	NB.1	
6264	B.202258/4	Pipe, fuel, relief valve to coupling, starboard					1	DTD.253	B.	NB.1	
6266	B.202258/6	Pipe, pressure, coupling to coupling					2	DTD.253	B.	NB.1	
6267	C.213400	Pipe, vent branch					1	DTD.253	B.	NB.1	
8515	A.216508	Pipe, vent					1	DTD.253	C.	NB.1	
9587	B.228306	Pipe, vent extension					1	T.26	C.	NB.1	
9083	A.217436	Pipe, vent, between frames 46 and 51					1	DTD.253	C.	NB.1	
27QA/361	Dowty Seals GD.1308/2	Ring, sealing, "O" type, at twin gate valve					4	—	C.		
27N/175	Graviner E.518	Screw (explosion suppressor)					6	—	C.		
8519	F.217013	Seat, pipe, vent at frames 47, 50 and 52					3	LFS.21	C.	NB.1	
1659	Std.1744/10	Sleeve, at vent pipe connection, frames 50 and 51					1	Rubber	C.		
27N/234	Graviner E.771	Suppressor, explosion (Mod. 582)					2	—	A.		
	D.201057	<b>TANK INSTALLATION, ASSEMBLY</b>						—			
6A/4315	Smiths JM.14	Box, terminal					2	—	B.		
	A.219025	Connector					2	L.65	—	NB.1	
426	A.186493	Connector					2	DTD.364	C.	NB.1	
8478	D.218734	Pipe, outlet, port					1	—	C.	NB.1	
8479	D.218735	Pipe, outlet, starboard					1	—	C.	NB.1	
8471	F.217756	Seal, "U," at float switch					2	Rubber	C.		
8476	B.218973	Support, outlet pipe, port					1	—	C.		
8477	B.218974	Support, outlet pipe, starboard					1	—	C.		

## SERVICES—FUEL SYSTEM REAR FUSELAGE

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
5CW/6159	Flight Refuelling C.3504100/38	Switch, float, Mk. 4	2	—	A.	
5CW/4642	Smiths 1696FG	Switch, fluid level	2	—	A.	
	—	<b>TANKS (SEE SECTION Q)</b>	—	—		
9467	F.226366	Washer, sealing	2	DTD.1177 & L.72	C.	
9648	F.226357	Washer, sealing	2	DTD.1177 & L.72	C.	
8474	F.218936	Washer, sealing, at outlet pipe	4	E.75	C.	
8475	F.218937	Washer, sealing, float switch	2	E.75	C.	
9712	F.226374	Washer, sealing	4	DTD.1177 & L.72	C.	
4601	F.203207	Tube, spacer, at vent pipe connection	1	DTD.253	C.	
27F/2242	Saunders 812.BR.03	Valve, gate	1	—	A.	
7049	B.215824	Valve, suction and pressure relief, group	2	—	B.	NB.1
2726	A.195020	Adaptor, union	1	DTD.364	MR/C	NB.1
428	F.184477	Adjuster, valve	1	DTD.364	C.	NA.2
429	A.184476	Cap, valve	1	DTD.364	C.	NA.2
430	F.184480	Collar, valve	1	—	C.	NA.2
6200	F.209640	Collar, valve	2	DTD.364	C.	NB.1
1882	F.195019	Plug	1	DTD.364	C.	NA.2
27QA/365	Dowty Seals GD.1308/B	Ring, sealing, "O" type	1	—	C.	NB.1
431	A.184478	Ring, cap	1	DTD.364	C.	NA.2
432	F.184482	Screw, adaptor, attachment to body	4	—	C.	NB.1
433	F.186042	Screw, adaptor, attachment to body	2	—	C.	NB.1
27QA/143	Dowty Seals GD.1307/23	Seal, bonded, between cap and ring	1	—	C.	NA.2
27QA/149	Dowty Seals GD.1307/G	Seal, bonded, between plug and adaptor	1	—	C.	NB.1
27QA/141	Dowty Seals GD.1307/6	Seal, bonded	2	—	C.	NB.1
434	F.184473	Seat, valve	2	DTD.364	C.	NB.1
8127	F.217607	Spring	1	DTD.239	C.	NB.1
6199	F.209155	Spring, at valve seat	2	Phos. Br.	C.	NB.1
441	A.184484	Valve	1	DTD.364	C.	NA.2
7050	F.215727	Valve	2	DTD.364	C.	NB.1
27QA/120	Dowty Seals GD.1288	Washer, between body and cap ring	1	—	C.	NB.1
4666	F.201931	Washer, between main spring and adjuster	1	DTD.610	C.	NA.2
7051	F.215989	Washer	2	—	C.	
4124	Std.821/35	Washer, for twin gate valve extension	2	L.4	C.	4
9855	F.233552	Washer, sealing, at vent pipe extension	2	DTD.1177 or L.72		NB.1
	Std.1547/16/12	Washer, at vent pipe attachment clips	3	—		
3812	Std.1547/22/14	Washer, at vent pipe attachment clips	3	—	MR/C	4

SERVICES—FUEL SYSTEM REAR FUSELAGE

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
<b>SUMMARY OF STOCK ITEMS</b>										
28D/1010658	A25.2B	<b>Bolt, 4 B.A.</b>	...	...	...	...	...	—	—	—
28D/9436920	A25.1C	<b>Bolt, 2 B.A.</b>	...	...	...	...	...	—	—	—
28D/9133011	A25.2C	<b>Bolt, 2 B.A.</b>	...	...	...	...	...	—	—	—
28D/9133012	A25.3C	<b>Bolt, 2 B.A.</b>	...	...	...	...	...	—	—	—
28D/1013284	AS.1248.2C	<b>Bolt, 2 B.A.</b>	...	...	...	...	...	—	—	—
5K/3389	AS.3360.C4C	<b>Lead, bonding</b>	...	...	...	...	...	—	—	—
5K/3403	AS.3360.C.6C	<b>Lead, bonding</b>	...	...	...	...	...	—	—	—
5K/3412	AS.3360.C7C	<b>Lead, bonding</b>	...	...	...	...	...	—	—	—
28F/8011897	AGS.1142F	<b>Nipple, ...</b>	...	...	...	...	...	—	—	—
28F/11777	AGS.1142K	<b>Nipple</b>	...	...	...	...	...	—	—	—
28F/4528	AGS.1170A	<b>Nipple</b>	...	...	...	...	...	—	—	—
28F/10772	AGS.1170E	<b>Nipple</b>	...	...	...	...	...	—	—	—
28F/12071	AGS.1170K	<b>Nipple</b>	...	...	...	...	...	—	—	—
28M/10287	AGS.2001.B1	<b>Nut, 4 B.A.</b>	...	...	...	...	...	—	—	—
28M/9436836	AGS.2001.C2	<b>Nut, 2 B.A.</b>	...	...	...	...	...	—	—	—
28M/10328	AGS.2002.C1	<b>Nut, 2 B.A.</b>	...	...	...	...	...	—	—	—
28M/7002430	AGS.2002.E1	<b>Nut, 1/2" B.S.F.</b>	...	...	...	...	...	—	—	—
28P/19154	SP.90.C7	<b>Pin, split</b>	...	...	...	...	...	—	—	—
28F/11884	AGS.1143A	<b>Plug, cone</b>	...	...	...	...	...	—	—	—
28D/12965	AS.2933.1C	<b>Screw, 2 B.A.</b>	...	...	...	...	...	—	—	—
28F/11931	AGS.904K	<b>Sleeve, outer</b>	...	...	...	...	...	—	—	—
28VV/9419454	SP.10.C	<b>Washer, 2 B.A.</b>	...	...	...	...	...	—	—	—
28VV/9418920	SP.10.E	<b>Washer, 1/2" B.S.F.</b>	...	...	...	...	...	—	—	—
28VV/9419474	SP.15.B	<b>Washer, 4 B.A.</b>	...	...	...	...	...	—	—	—
28VV/9419475	SP.15.C	<b>Washer, 2 B.A.</b>	...	...	...	...	...	—	—	—
28VV/9419404	SP.16.C	<b>Washer, 2 B.A.</b>	...	...	...	...	...	—	—	—

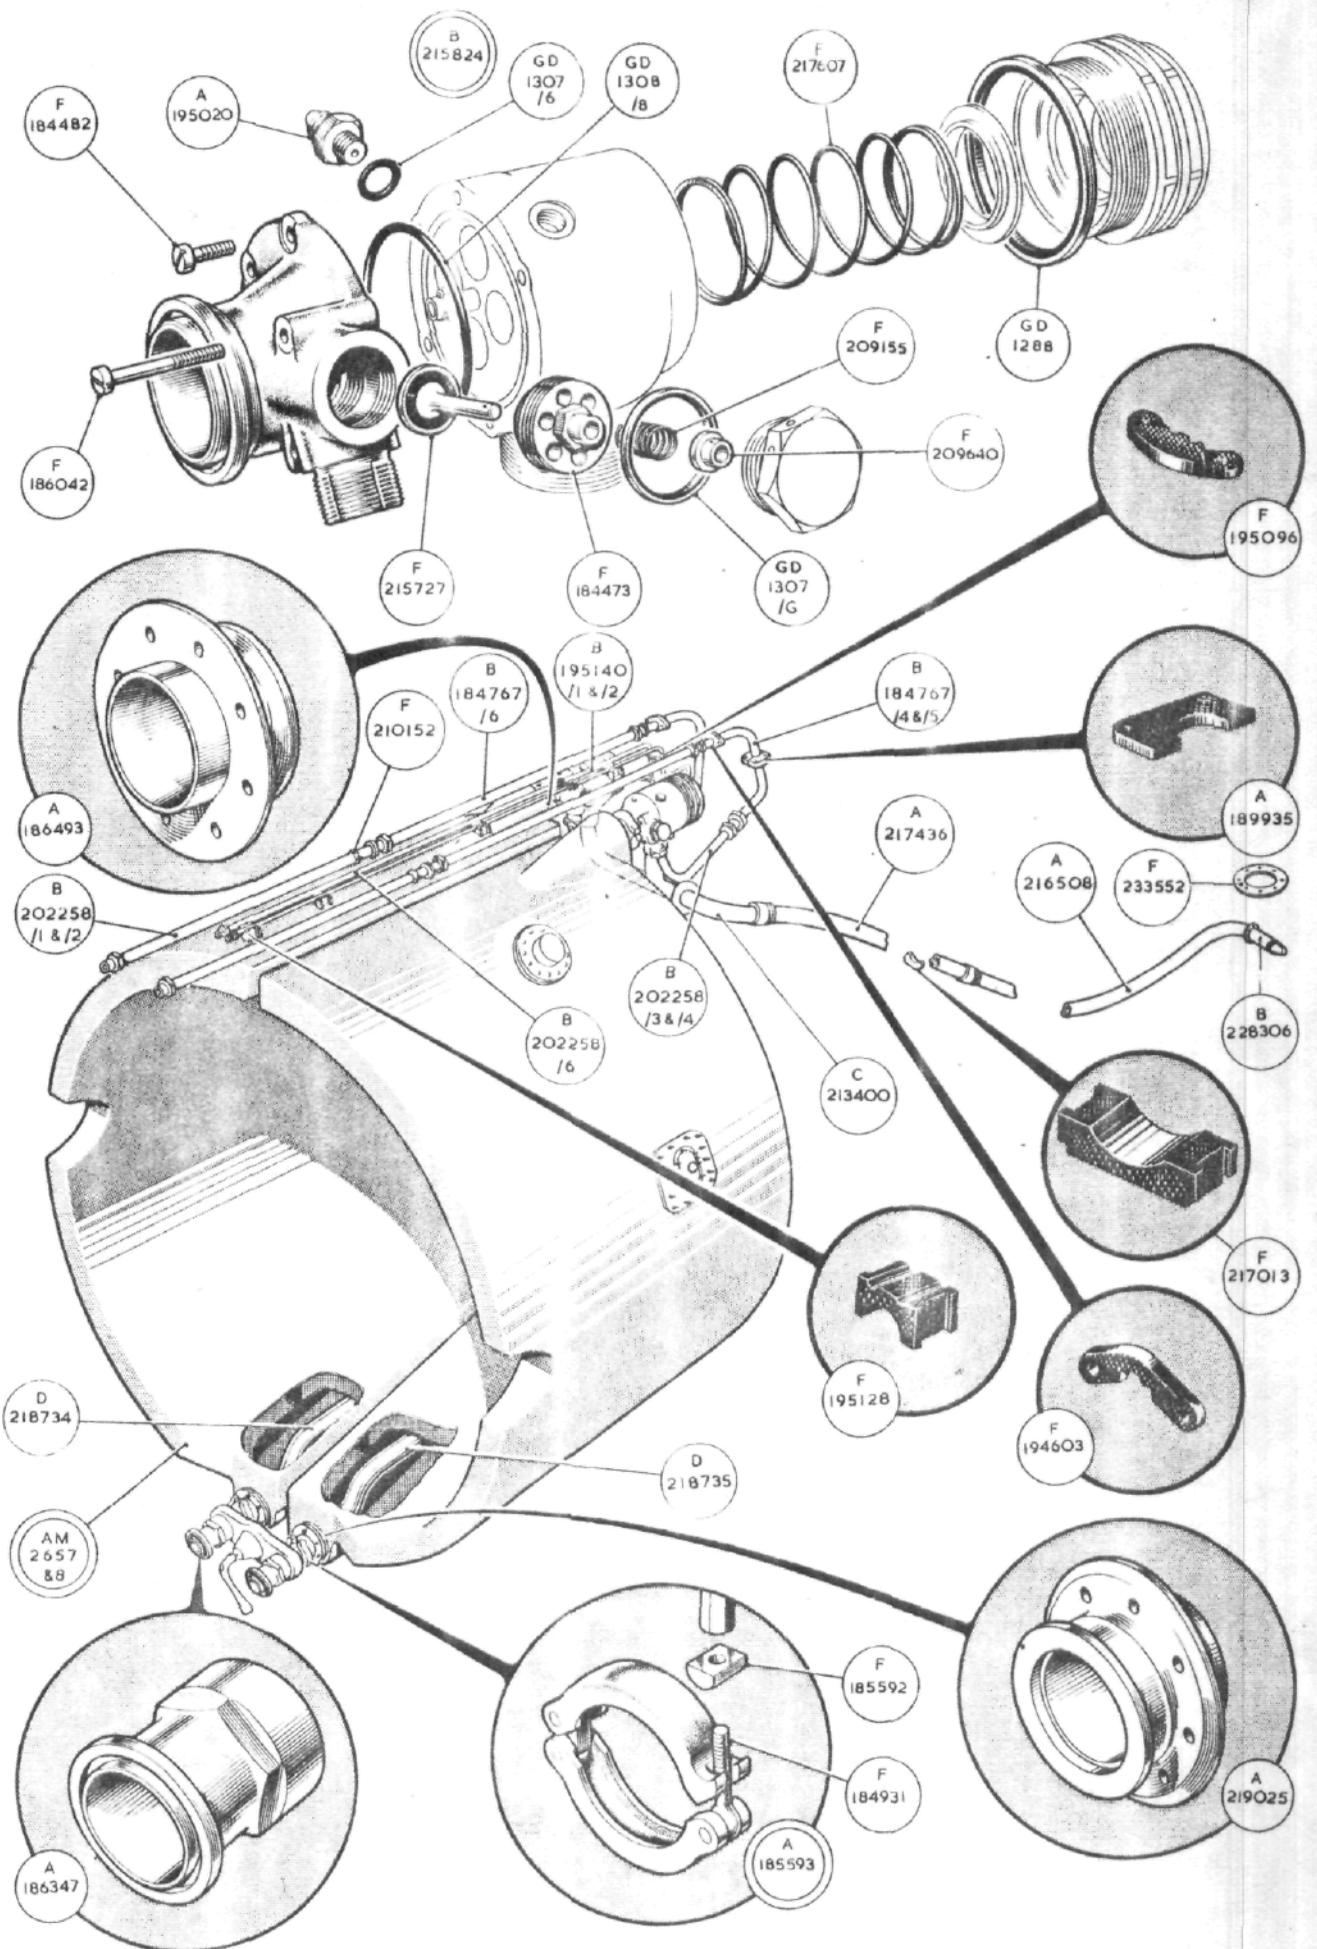

FUEL SYSTEM

This file was downloaded  
from the RTFM Library:

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

