

FUSELAGE - HOOD WINDING GEAR

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
	D.187117	HOOD WINDING GEAR, ASSEMBLY	-	-		
	D.186215	Actuator and cross shaft, assembly	-	-		
5W/309	B.186227	Actuator, group	1	-		
560	Rotax C.5209/1	Actuator, rotary	1	-	A.	
	B.186228	Housing, group	1	-	B.	JF.1
	Torrington	Bearing, needle roller	1	-		
561	B.1012					
	F.186230	Bush	2	BSS.369	C.	JF.1
562	A.186231	Sprocket	1	S.95.B	C.	JF.1
563	F.186232	Washer, sprocket retaining	1	S.3	C.	JF.1
5256	F.202895	Bolt, for cross shaft pinion housing	4	S.95.B	C.	JF.1
27KB/161	AS.924/48P	Chain	1	-	B.	
567	F.169576	Eye-end, tension rod	2	S.1	C.	JF.1
568	F.186217	Eye-end, tension rod	2	S.1	C.	JF.1
569	A.186224	Housing, cross shaft pinion, group	2	-	C.	JF.1
570	F.186225	Bearing	1	BSS.369	C.	JF.1
571	F.186226	Bearing	1	BSS.369	C.	JF.1
573	F.186219	Pinion, cross shaft	2	S.95.B	C.	JF.1
1503	F.189478	Rod, tension, for actuator	2	S.96.B	C.	JF.1
575	F.186218	Shim, cross shaft housing	QR	L.2	C.	JF.1
5252	B.202856	Shaft, cross, group	1	-	B.	JF.1
564	F.188564	Block, bearing	1	Stamping	C.	JF.1
4001	Std.1292/9C	Bolt, attaching plug end	2	S.2	MR/C	4
565	Std.1292/8C	Bolt, attaching plug end	2	S.2	C.	4
1564	Std.1292/10C	Bolt, attaching sprocket	2	S.2	C.	4
27QA/369	Dowty	Seal, "O"	2	-	C.	JF.1
	GD.1309/6					
27QA/371	Dowty	Seal, "O"	2	-	C.	JF.1
	GD.1309/9					
577	F.186865	Sprocket	1	S.95.B	C.	JF.1
3808	Std.1509/23/040	Tube, distance, 5/16" o/d x 17 S.W.G. x 0.40" long	1	T.4	MR/C	4
2192	Std.915/C/14	Washer, 2 B.A.	2	DTD.610	C.	4
4117	Std.1283/G	Washer, shim	3	Laminum	C.	4
578	Std.1547/50/12	Washer, profile	2	DTD.610	C.	4
9553	A.225246	Box, control, group (Mod.685)	1	-	B.	JF.1
6204	A.211786	Box, actuator control, group (Mod.376)	1	-	B.	JF.1
	A.211785	Gate, group (Mod.376)	1	-		
6206	F.211257	Piece, distance	2	L.65.C	C.	JF.1
6205	F.211244	Spring, leaf	1	DTD.166	C.	JF.1
555	F.188527	Knob, lever	1	BSS.771	C.	JF.1
554	A.188524	Lever	1	S.3	C.	JF.1
559	A.188987	Cable, control box to bell crank lever, group	1	-	B.	JF.1
		Consisting of :-				
	Std.1920	Adjuster, complete with sleeve and nut	1	-		5
28X/5870	Bowden	Cable, 5 cwt.	QR	-	C.	
28H/	Bowden T.3	Conduit	QR	-	C.	
28U/16264	SP.37.A	Eye-end	1	-	C.	
28U/15288	SP.38.A	Fork-end	1	-	C.	


FUSELAGE - HOOD WINDING GEAR

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
5K/ 3214 1200718	SP. 40. B. 14 -	Grommet	2	-	C.	
	F. 178859	Plug	1	DTD. 364		
9H/	Bowden PN. 999	Stop	1	-	C.	
9554	A. 225244	Switch, hood actuator, group (Mod. 685) ...	1	-	A.	JF. 1
-	B. 205376	Cable, F. 40 (See Cable Chart) ...	1	-	-	JF. 1
	A. 225245	Cover (Mod. 685) ...	1	L. 72		
9706	F. 225223	Guard, switch (Mod. 685) ...	1	-	C.	
586	F. 188532	Lever	1	S. 80	C.	JF. 1
587	F. 188531	Lever	1	S. 80	C.	JF. 1
588	F. 188533	Link	1	S. 3	C.	JF. 1
589	Mills GP. 5	Pin, grooved, 1/16" dia. x 3/8" long ...	2	S. 1	C.	JF. 1
F/	Hellermann	Sleeve, P. V. C., .6" long ...	1	1738	C.	
	P. 9 Grey			Type B		
590	F. 188534	Spring	1	Sp. St.	C.	JF. 1
5CW/7548	-	Switch	1	-	B.	
5CW/4331	-	Transfer, "Open"	1	-	C.	
5CW/4332	-	Transfer, "Shut"	4	-	C.	
-	Std. 1509/12/052	Tube, distance, 1/4" o/d x 20 S.W.G. x .52" long (Make from 30B/554)	4	T. 4	-	4
556	A. 188986	Cable, bell crank lever to actuator, group ...	1	-	B.	JF. 1
	Std. 1920	Consisting of :-				
	Adjuster, complete with sleeve and nut ...		2	-		5
28X/5870	-	Cable, 5 cwt.	QR	W. 11	C.	
29H/	Bowden T. 3	Conduit	QR	-	C.	
28N/9943	SP. 38. A	Fork-end	1	-	C.	
557	F. 171912	Nipple	1	BSS. 250	C.	
28M/12931	A27. ET	Nut, 1/4" B. S. F.	1	-	C.	
	F. 172899	Pin, taper	1	M. S.		
	F. 189131	Plate, stop	1	DTD. 610		
1563	F. 191834	Spring	1	Sp. St.	C.	JF. 1
	F. 190950	Stop	1	DTD. 364		
	F. 214243	Cover, pulley at frame 14	1	-		
	F. 214244	Cover, pulley at frame 14	1	-		
579	F. 188317	Lever, front limit switch	1	S. 80	C.	JF. 1
580	F. 188316	Plunger, front limit switch	1	S. 1	C.	JF. 1
6207	F. 210854	Plunger, rear limit switch, group (Mod. 377) ...	1	-	C.	JF. 1
	F. 187272	Plunger	1	S. 80. B		JF. 1
	F. 187273	Spring	1	Sp. St.		JF. 1
582	F. 182857	Ring, "D," cable locking at actuator	1	Sp. St.	C.	JF. 1
583	F. 188318	Screw, front limit switch	1	S. 95. B	C.	JF. 1
84	F. 188319	Spring, torsion, front limit switch	1	Sp. St.	C.	JF. 1
3784	Std. 1507/4/036	Tube, distance, 3/8" o/d x 22 S.W.G. x .36" long (Make from 30A/974)	1	T. 25	MR/C	4

Hunter Single Seater

FUSELAGE - HOOD WINDING GEAR

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
SUMMARY OF STOCK ITEMS						
28D/1010658	A25.1B	Bolt, 4 B.A.	-	-	-	-
28D/11540	AS.1246/2B	Bolt, 4 B.A.	-	-	-	-
28D/9130082	AS.1246/3B	Bolt, 4 B.A.	-	-	-	-
28D/12137	AS.1246/4B	Bolt, 4 B.A.	-	-	-	-
28D/9918	AS.1248/4B	Bolt	-	-	-	-
28D/8340	AS.1248/7B	Bolt	-	-	-	-
28D/1007978	AS.1242/7C	Bolt, 2 B.A.	-	-	-	-
28D/9133012	A25.3C	Bolt, 2 B.A.	-	-	-	-
28D/1200119	A25.4C	Bolt, 2 B.A.	-	-	-	-
28D/7002428	A25.6C	Bolt, 2 B.A.	-	-	-	-
28D/1010030	A25.7C	Bolt, 2 B.A.	-	-	-	-
28D/8316	AS.1242/13C	Bolt, 2 B.A.	-	-	-	-
28D/1008151	A25.4E	Bolt, 1/4" B.S.F.	-	-	-	-
28D/1011242	A25.7E	Bolt, 1/4" B.S.F.	-	-	-	-
28N/13091	AGS.2031/6	Circlip	-	-	-	-
28M/9403518	A27.AP	Nut, 6 B.A.	-	-	-	-
28M/9403520	A27.CP	Nut, 2 B.A.	-	-	-	-
28M/1006473	A27.CT	Nut, 2 B.A.	-	-	-	-
28M/1007403	A27.ET	Nut, 1/4" B.S.F.	-	-	-	-
28M/13454	A27.ETL	Nut, 1/4" B.S.F.	-	-	-	-
28M/10287	AGS.2001/B1	Nut, 4 B.A.	-	-	-	-
28M/10288	AGS.2001/C1	Nut, 2 B.A.	-	-	-	-
28M/10290	AGS.2001/E1	Nut, 1/4" B.S.F.	-	-	-	-
28M/7002430	AGS.2002/E1	Nut, 1/4" B.S.F.	-	-	-	-
28P/9143877	SP9.C4	Pin, split	-	-	-	-
28P/1006943	SP9.C6	Pin, split	-	-	-	-
28P/812	SP4.Y.A2	Pin	-	-	-	-
28R/13502	AS.111	Pulley	-	-	-	-
28S/9992531	A33.A24	Screw, 6 B.A.	-	-	-	-
28S/9419435	A31.B.12	Screw, 4 B.A.	-	-	-	-
28S/9992525	A32.B.12	Screw, 4 B.A.	-	-	-	-
28W/9419454	SP.10.C	Washer, 2 B.A.	-	-	-	-
28W/9419474	SP.15.B	Washer, 4 B.A.	-	-	-	-
28W/9419475	SP.15.C	Washer, 2 B.A.	-	-	-	-
28W/9419405	SP.15.E	Washer, 1/4" dia.	-	-	-	-
28W/9419476	SP.15.G	Washer, 3/16" dia.	-	-	-	-
28W/9419404	SP.16.C	Washer, 2 B.A.	-	-	-	-
28W/9419487	SP.16.E	Washer, 1/4" dia.	-	-	-	-

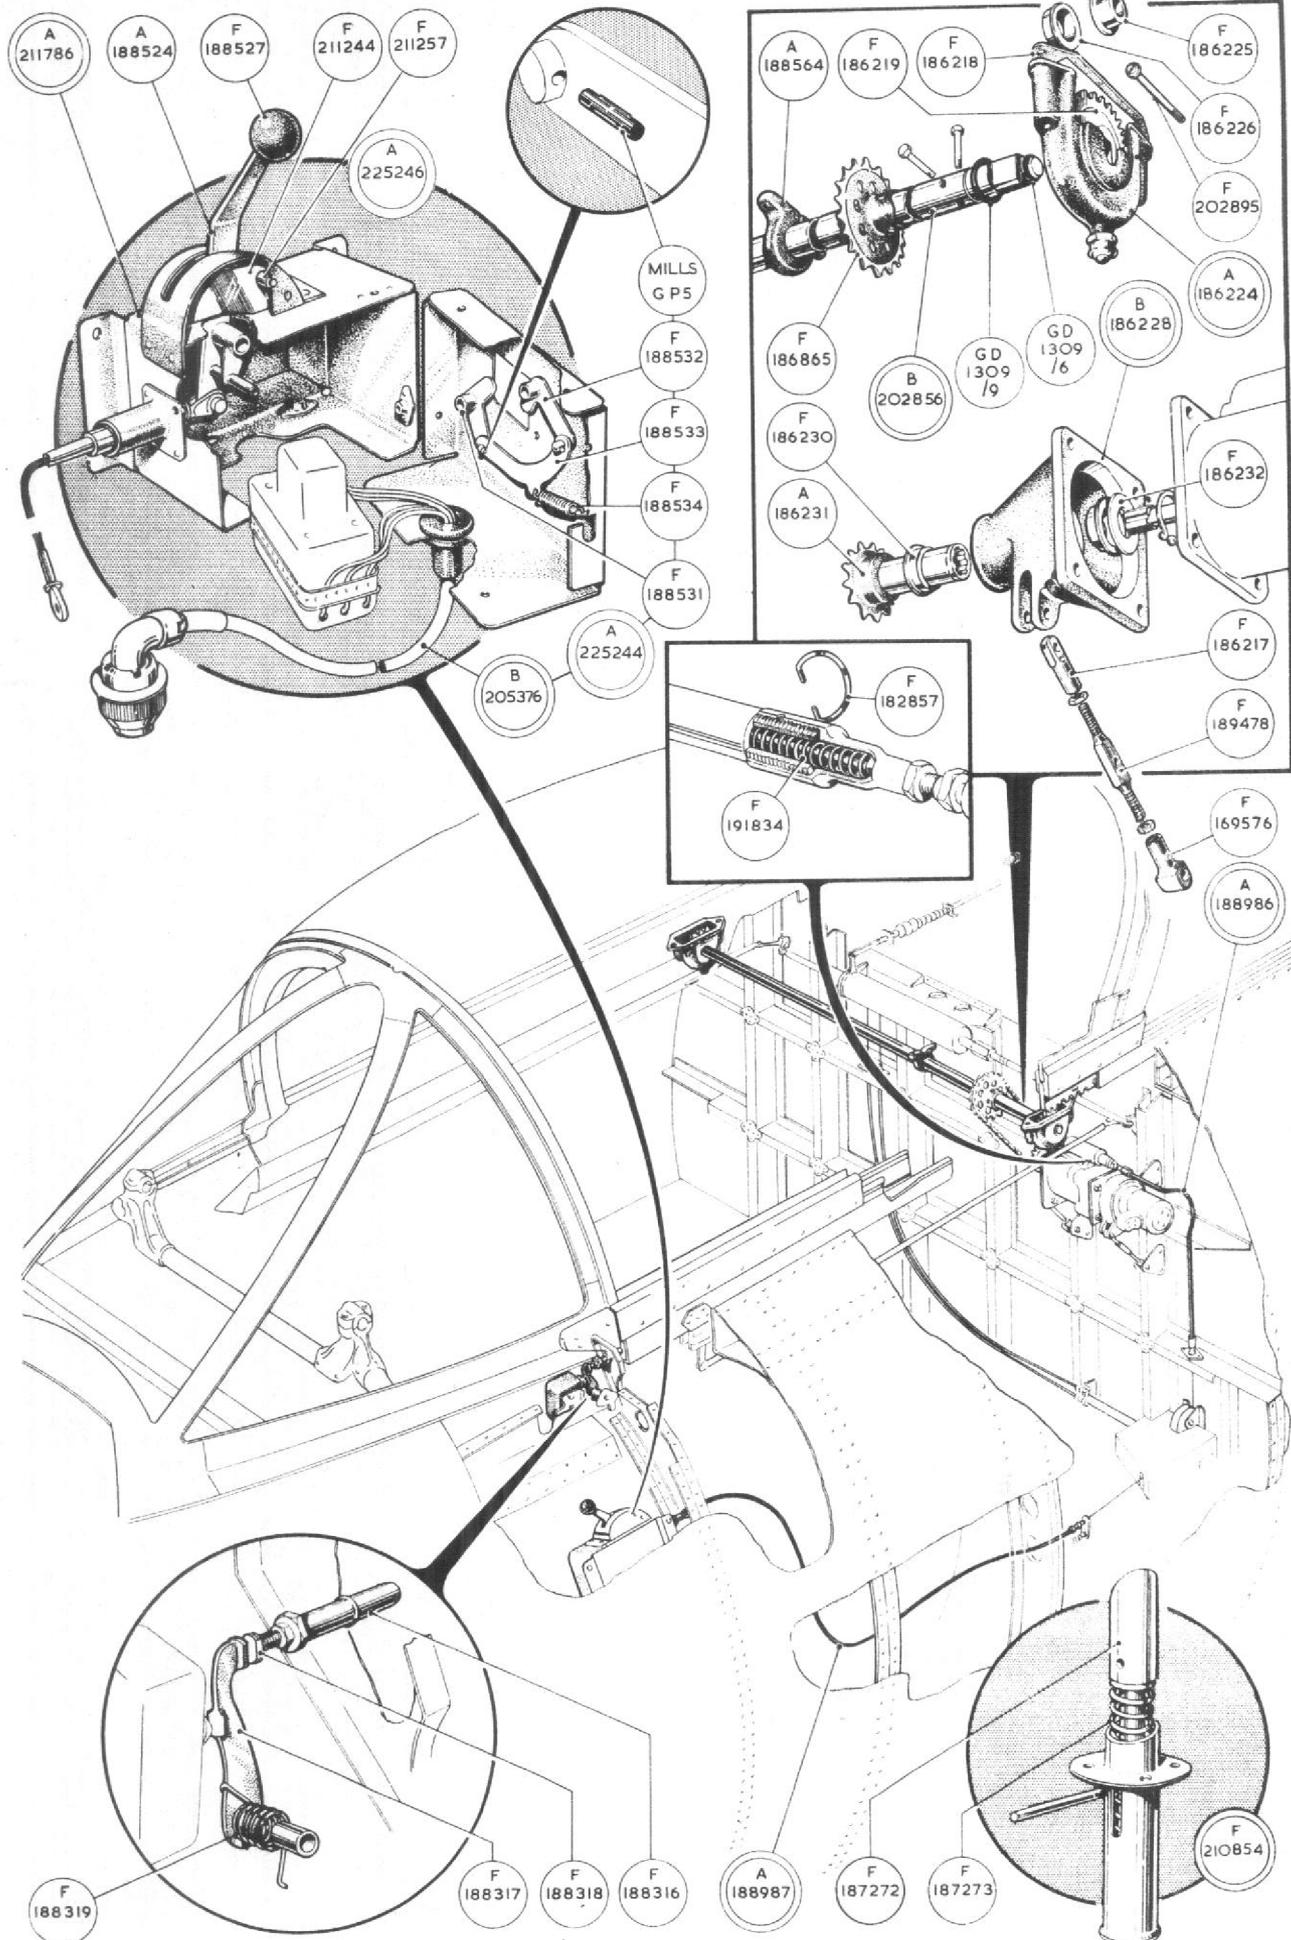

HOOD WINDING GEAR

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

