

EQUIPMENT AIRCRAFT - INSTRUMENT PANELS

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
		INSTRUMENT PANELS, ASSEMBLY				
8543	E.315295 Std.1285/3.DE	Connector, earthing	6			
	F.218495	Mounting, for panel	12	Rubber	C	FA.1
	D.263351	MOUNTING, PANEL, ASSEMBLY (Mod.1015)				
5384	DTD.487/13E	Bolt, for "Lord" mountings	4	DTD.487	C	FA.1
5372	A.203163	Bracket, top centre panel mounting	2		C	FA.1
	A.261856	Bracket, bottom mounting (Mod.1015)	1			
5373	A.203162	Bracket, bottom centre panel mounting	1		C	FA.1
	F.203235	Clip, for cross tube	2	S.3		FA.1
1538	Std.1285/3BB	Connector, earthing	4		C	4
27H/3219		Mounting	4		B	
27H/3248	F.211792	Mounting, "Lord"	4		B	
1542	F.187614	Plate, support	1	DTD.610	C	
	F.261845	Plate, support (Mod.1015)	1	L.72		FA.1
	F.260316	Strut, support, port (Mod.1015)	1	T.4		FA.1
	F.230565	Strut, support, starboard (Mod.654)	1			FA.1
	A.203240	Tube, cross	1	L.72		FA.1
3797	Std.1509/24/080	Tube, distance, 3/8" o/d x 17 S.W.G. x .80" long	2	T.4	MR/C	4
3798	Std.1509/24/034	Tube, distance, 3/8" o/d x 17 S.W.G. x .34" long	4	T.4	MR/C	4
2724	A.185592	Washer	2	DTD.364	C	FA.1
3868	F.168524	Washer, at "Lord" mounting	12	DTD.610	C	FA.1
	A.315293	PANEL, CENTRE, ASSEMBLY				
6A/7622		Air timer, Mk.22D	1		A	
	F.260318	Bracket, for static connectors	1	L.72		
	D.286354	Cable, #.12, group	1			
	A.221368	Cable, #.139, group	1			
	B.283455	Cable, Mk.3	1			
	B.226184	Cable, PC.12, group	1			
	Std.2045/20/24	Clip	2		MR/C	
	Std.2045/23/24	Clip	2		MR/C	
6A/1061012		Connector, static and pressure	2		C	
	Bendix GE.47	Filaments	3			
5CW/4222	Rotax ZA.2401	Guard, switch (Mod.488)	1		B	
	F.293713	Guard	1			
	Sperry PN. 19702-0	Indicator, compass C.6	1			
	Bendix INA-21B-1	Indicator, VOR/ILS	1			
6A/2697		Indicator, rate of climb, Mk.3P )	1		A	
6A/2966		Indicator, rate of climb, Mk.3AP) Alter-	1		A	
6A/5845		Indicator, rate of climb, Mk.3P*) natives	1		A	
6A/7677		Indicator, rate of climb, Mk.3Q))	1		A	
6A/2945		Indicator, turn and slip, Mk.2 ) Alter-	1		A	
6A/3953		Indicator, turn and slip, Mk.2A ) natives	1		A	
6A/5546		Indicator, turn and slip, Mk.3 )	1			
6A/5039		Indicator, artificial horizon, Mk.4A (Mod.654)	1		A	
6A/3158		Indicator, air speed, Mk.12A	1		A	
6A/6438	Smiths MF.858FL	Indicator, tail plane position (Mod.841)	1		A	
6A/4333338	Smiths 473/FL	Indicator, flap position	1		A	
5CZ/5074	Dowty C.5165Y Mk.2	Indicator, magnetic (Mod.452)	2		B	
	A.216336	Label	1		C	
9833	F.236168	Label	1		C	
10856		Machmeter, Mk.3A	1		A	
6A/3300						

# For details see Cable Chart.

EQUIPMENT AIRCRAFT - INSTRUMENT PANELS

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
11720	D.315292 A.191177/12					Panel, group Pipe, static, elbow union R.O.C. to tee union A.S.1 (used with Mk.30 R.O.C. IHD)	1 1			FA.1
3598 11564	A.191177/2 A.1991177/17					Pipe, static, A.S.1, to machmeter Pipe, static machmeter to altimeter (Mod. 1015)	1 1	T.9 T.9	C C	
3601 11566	A.191177/5 A.191177/18					Pipe, pressure A.S.1 to machmeter Pipe, static, tee union to altimeter to static connector (Mod.1015)	1 1	T.9 T.9	C C	
11565	A.191177/15 A.191177/1 A.236242/14 A.236242/12					Pipe, pressure, tee union to machmeter to pitot connector (Mod.1015) Pipe, static, elbow R.O.C. indicator to the union A.S.1 Pipe, static, tee union to tubing for altimeter Pipe, tee union to tubing altimeter Mk.19	1 1 1 1	T.9  T.9	C  C	
27QA/238	SP.900/9					Ring, sealing, "0" (Mod.1233) (For R.O.C. IND. Mk.30)	1		C	
1720 3857 1943	Std.1606/44/B24 Std.1606/44/C24 Std.1606/45/B16 Std.1606/45/B28					Screw, round head, 4 B.A. Screw, round head, 2 B.A. Screw, countersunk, 4 B.A. Screw, countersunk, 4 B.A. (Alt. to Std. 1606/45/C20)	4 6 2 4	Brass Brass Brass Brass	C C C C	5 5 5 5
4114 4115	Std.1606/45/B32 Std.1606/45/C20					Screw, countersunk, 4 B.A. Screw, countersunk, 2 B.A. (Alt. to Std. 1606/45/B28)	4 4	Brass Brass	C C	5 5
3863 3865	Std.1606/45/C24 Std.1606/45/C28 Std.1606/45/C32					Screw, countersunk, 2 B.A. Screw, countersunk, 2 B.A. Screw, countersunk, 2 B.A. (Alt. to Std. 1606/45/B32)	2 4 4	Brass Brass Brass	C C C	5 5 5
9952	Std.2095/208/B24					Screw, c/s. unified thread ) (Alt. to Std.2095/208/D32) For use only	4		C	
9954 9955 9956	Std.2095/208/B32 Std.2095/208/D24 Std.2095/208/D28 Std.2095/209/B24					Screw, c/s. unified thread) when instru- Screw, c/s. unified thread) ments have uni- Screw, c/s. unified thread) fied threads Screw, p/hd.unified thread)	7 2 4 4		C C C	
10154	Std.2095/209/D24 Std.2135/11 Std.2136/11					Screw, p/hd.unified thread) Sleeve, marker Sleeve	2 QR 1		C C	
68/2575						Shield, magnetic (not used with Gyro Unit 6B/563)	1		B	
5F/9454141 5F/9138822 5CW/1047693	NY.18007A NY.3342					Strapping Stud, Hellermann type NY.3342 Switch, S.P., change over no "OFF" position	QR QR 1		C C B	
5CW/1047697						Switch, D.P., no "centre" position (Mod. 1040)	1		B	
4042 68/2035 68/4343642	Std.1509/23/030					Tube, distance Unit, gyro, type "A" (Alt to 6B/563) Unit, gyro, type "B" (Alternative to 6B/2035)	4 1 1	T.4	C A A	
5CW/5253 3738	Std.915/B/22 B.192073 Std.840/29					Washer PANEL, PORT, ASSEMBLY Cap, sea grey (Mod.452) Clip, 7/16" wide x 22 S.W.G. x 2.9" long (Make from 30B/1734)	8 1 1			
3951 5CW/4405593 5L/9951286 5L/9951273 5CX/5164 5CZ/5074	Std.840/26 Std.1512/28					Clip, 7/16" wide x 22 S.W.G. x 2.6" long Disc, hydraulic pressure warning lamp Filament, 28V., 2.5W Filament, 28V., 3.5W Indicator, undercarriage position, type D.1 Indicator, magnetic, aileron and elevator	1 1 9 2 1 1	DTD.610	C C B B B	4
5CZ/4335566	Dowty C.5165Y.Mk.2 C.5165Y.Mk.1					Indicator, magnetic air brake	1 1		B	

EQUIPMENT AIRCRAFT - INSTRUMENT PANELS

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
5CX/4013	Smiths 38 CFP.	Lamp, undercarriage warning, Iris type	1		B	
5CX/1553		Lamp, hydraulic pressure warning, type "B"	1		B	
	A.217498	Panel, group	1			FA.1
	A.208107	Bracket, undercarriage position indicator	1	L.72		FA.1
	B.192562	Bracket, undercarriage control switch	1	S.3		FA.1
	F.217564	Collar	1			
	B.217444	Panel	1	DTD.610		
3837	Std.1606/44/B10	Screw, roundhead, 4 B.A.	2	Brass	C	
1637	Std.1606/44/B14	Screw, roundhead, 4 B.A.	2	Brass	C	5
3839	Std.1606/44/B16	Screw, roundhead, 4 B.A.	2	Brass	C	5
1720	Std.1606/44/B24	Screw, roundhead, 4 B.A.	4	Brass	C	5
6356	Std.1606/44/B32	Screw, roundhead, 4 B.A. (AS.770/80)	1	Brass	C	5
4661	Std.1606/45/B12	Screw, countersunk, 4 B.A.	1	Brass	C	5
4660	Std.1606/45/B14	Screw, countersunk, 4 B.A.	1			5
5CW/6983	C.5182Y. Mk.3D	Switch, undercarriage push button	1		A	
5CW/12977	C.1223Y Mk.27	Switch, flap lever	1		A	
5CW/1047697		Switch, D.P. change over (Mod.686)	1		B	
10893	Std.1509/12/050	Tube, distance	1	T.4	MR/C	4
	B.280993	PANEL, STARBOARD, ASSEMBLY				
	6A/4246	Adaptor, flange, for Mk.21, altimeter	1		C	
1 6A/1037854		Altimeter, cabin, Mk.21 (Alt. to 6A/4333072)	1		A	
1 6A/4333072		Altimeter, cabin Mk.18 (Alternative to 6A/4246 and 6A/1037854)	1			
	# B.286336	Cable, F.11, assembly	1			
	# A.215942	Cable, F.118, assembly	1			
	A.226393	Cover, switch, safety	1		C	FA.1
5CX/5001	Std.1512/29	Disc, warning lamp	1		C	4
6A/2801		Indicator, Engine speed	1		A	
5L/9951273		Lamp, filament, 28V., 3.5W	2		B	
5CX/1069		Lamp, warning	1		B	
5CX/1553		Lamp, warning, type "B" (with night screen)	1		B	
	C.280992	Panel	1	DTD.610	B	FA.1
	Std.2095/208/B24	Screw	4			
3838	Std.1606/44/B.8	Screw, roundhead, 4 B.A. (Mod.538)	1	Brass	C	5
3858	Std.1606/45/B8	Screw, countersunk, 4 B.A.	3	Brass	C	5
	Std.1606/45/B20	Screw, countersunk, 4 B.A.	4	Brass	C	5
	Std.1606/45/B24	Screw, countersunk, 4 B.A.	8	Brass	C	5
3861		Switch, S.P., 3-way	1		B	
5CW/7543		Switch, S.P., "ON-OFF"	1		B	
5CW/1047690		Thermometer, exhaust	1			
6A/4333344		Transfer, "OUT"	1		C	
5CW/4347		Transfer, "BRIGHT"	1		C	
5CW/4345		Transfer, "DIM"	1		C	
5CW/4405560		Transfer, "OFF"	1		C	
5CW/1055545		PANEL, TOP, AND GLARE SHIELDS, ASSEMBLY				
1 6A/3451	D.315294	Accelerometer, Mk.2	1		A	
	F.262358	Angle	1	L.72		
	A.301639	Bracket	1	L.72		
	B.301838	Bracket, stowage, for safety plug	1			
6B/5209604		Chronometer	1		A	
6B/4193		Plate, mounting	1			
	F.214593/1	Clip, mounting, top	2	L.72		
	F.214593/2	Clip, mounting, bottom	2	L.72		
5L/9951286		Filament, 28V., 2.5 amp.	1		C	
	A.300698	Mounting, chronometer	1			
	A.301640	Clip	1			
	C.307842	PANEL, TOP, PORT, ASSEMBLY				
	F.269772	Base, terminal	1	BS.2966		
8706	F.214078	Cover, spring, "inboard stores"	1		C	
8707	F.214079	Cover, spring, "outboard stores"	1		C	

# For details see Cable Chart.

EQUIPMENT AIRCRAFT - INSTRUMENT PANELS

Ref. No.	Part No.	Description	No. Off	Material Specification	M.R. Class of Store	Plate No.
5E/9516201		Cable, electric, type B, 19/0.0076	QR	EL.1930	C	
5E/3896		Cable, electric, unifersil 16	QR	EL.1934	C	
8708	C.307843/1	Diagram, wiring	1	Photo		
	F.214077	Flap, for switch	1		C	
	B.267531	Panel, sub-assembly	1			
	F.215611	Angle	1	L.72		
	F.215612	Angle	1	L.72		
	F.267526	Angle	2	L.72		
	A.267529	Panel	1	L.72		
	C.267530	Panel, instrument, top	1	L.72		
	F.267551	Plate	1	L.72		
	F.269771	Platform, terminal	1	L.72		
5X/	PT.02SE-12-10S	Receptacle, box mounting	1		C	
5X/	PT.02SE-14-5S	Receptacle, bos mounting	1		C	
5X/	PT.02SE-16-8P	Receptacle, box mounting	1		C	
10F/	Ferranti ZS-78	Rectifier	5		B	
	Ferranti ZS-178	Rectifier (Alternative to ZS-78)	1		B	
10F/	Clare RP.7633	Relay, type F.675 ohm.	1		B	
5245	Std.1606/44/A10	Screw, c/sk. 6 B.A.	12	Brass	C	5
5829	Std.1606/44/A14	Screw, c/sk. 6 B.A.	8	Brass	C	5
3861	Std.1606/45/B24	Screw, rh/hd., 4 B.A.	2	Brass	C	5
5F/	Hellermann	Sleeve, Helsyn 150, HT.15 x 1"	15		C	
5F/	Hellermann	Sleeve, Helsyn 150, HT.30.x 1"	2		C	
	Std.2133/11	Sleeve, marker	44			
	Std.2135/11	Sleeve, marker	11			
5CW/1102662	Rotax D.0701	Switch, D.P. push	2		B	
5CW/11616	Honeywell 1TL1-3F	Switch, S.P.	5		B	
5CW/11618	Honeywell 2TL1-10F	Switch, D.P.	1		B	
5X/9709513	H.C.294D	Terminal, ring tongue	20		C	
5X/1930218	H.C.304D	Terminal, ring tongue	3		C	
	B.267969	Panel, switch	1	L.72		
	B.315296	PANEL, TOP, STARBOARD, ASSEMBLY				
6A/8267/1	A.315298	Altimeter, Mk.19F	1		A	
		Bracket, support	1	L.72		
5CX/5355	Thorn 80/10/1191	Bridge, Light, type "F"	1		B	
	A.310809	Clip, for altimeter	1			
1 26VA/6041140	Std.2045/17/24	Clip, securing cable	1			
5L/9959118		Filament, 28V., 04 amp.	2		C	
5L/9951286		Filament, 28V., 25 amp.	1			
	B.315297	Panel	1	L.72		
	Std.1606/44/B10	Screw	4			
1943	Std.1606/45/B16	Screw	1		C	
	Std.1606/45/C16	Screw	2			
	Std.2095/208/B28	Screw	2			
	Std.2095/209/B36	Screw	2			
5CY/4376512		Socket, type "R"	1		B	
5CW/6311		Switch, push, fire warning	1		B	
5CW/11616	Honeywell 1TL1-3F	Switch S.P.	2		B	
5CW/11617	Honeywell 2TL1-3F	Switch D.P.	1		B	
5CW/11618	Honeywell 2TL1-10F	Switch, D.P.	1		B	
3815	Std.1547-20-14	Washer, packing, at mounting clip	8		MR/C	
5CW/4528		Window, red	1		C	


EQUIPMENT AIRCRAFT - INSTRUMENT PANELS

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
1437806	F.270432					Plug, armament, safety, group	1		B	
5245	Std.1606/44/A10					Screw	1	Brass	C	5
3837	Std.1606/44/B10					Screw	4	Brass	C	5
	Std.1606/45/C16					Screw	1	Brass		5
	A.216817					Shield, centre, lower, group	1	L.72		
10275	B.216818					Shield, centre, lower, group	1		B	
28R/17665	AS.4573/1					Ring, retaining	2		C	
	D.301938					Shield, glare, port, group	1		B	
	E.315291					Shield, glare, starboard, group	1		B	
	D.215634/3					Beading (Make from 26FX/3882)	1			
	Std.1569C					Nut	1			
1	Std.1509/3/020					Tube, distance, outboard, starboard	1			
1	Std.1509/3/040					Tube, distance	2			
1	10930					Std.1509/3/026 Tube, distance, at P. & S. mounting	3	T.4	C	
	Std.1509/3/076					Tube, distance, at P. & S. mounting	6	T.4	C	
9777	F.231121					Washer, at P. & S. panel mounting	6	DTD.5509/D	C	FA.1
	C.187563/4					Tubing, rubber	1			

EQUIPMENT AIRCRAFT - INSTRUMENT PANELS

Hunter Single Seater

Ref. No.	Part No.	Description					No. Off	Material Specification	M.R. Class of Store	Plate No.
		1	2	3	4	5				
SUMMARY OF STOCK ITEMS										
28D/1010658	A.25.1B	Bolt	4	B.A.						
28D/9436920	A.25.1C	Bolt	2	B.A.						
28D/9133011	A.25.2C	Bolt	2	B.A.						
28D/9133012	A.25.3C	Bolt	2	B.A.						
28D/9140645	A.25.10C	Bolt	2	B.A.						
28D/1011244	A.25.9E	Bolt	1/4"	B.S.F.						
28D/1011245	A.25.10E	Bolt	1/4"	B.S.F.						
28D/1007285	AS.1242.1B	Bolt	4	B.A.						
28D/1007973	AS.1242.2B	Bolt	4	B.A.						
28D/1007468	AS.1242.3B	Bolt	4	B.A.						
28D/1007975	AS.1242.1C	Bolt	2	B.A.						
28D/9128739	AS.1248.1/2B	Bolt	4	B.A.						
28D/1007981	AS.1248.1/2C	Bolt	2	B.A.						
28D/1007982	AS.1248.1C	Bolt	2	B.A.						
28D/1212381	AS.1248.12E	Bolt	1/4"	B.S.F.						
28N/258	SP.58G	Burr								
28E/1059443	AGS.606D	Clip, hose								
28F/19985	AGS.3095	Connectar								
5K/	SP.93.A6	Grommet								
28M/9136152	A.54B	Nut	4	B.A.						
28M/9129528	A.54C	Nut	2	B.A.						
28M/10286	AGS.2001.A1	Nut	6	B.A.						
28M/10287	AGS.2001.B1	Nut	4	B.A.						
28M/10288	AGS.2001.C1	Nut	2	B.A.						
28M/10290	AGS.2001/E1	Nut	1/4"	B.S.F.						
28M/10327	AGS.2002/B1	Nut	4	B.A.						
28M/10309	AGS.2002/B4	Nut	4	B.A.						
28M/10328	AGS.2002/C1	Nut	2	B.A.						
28M/7002430	AGS.2002/E1	Nut	1/4"	B.S.F.						
88M/9438426	A.126.B	Nut	No.6	U.N.C.						
28S/1012450	A.32.B10	Screw	4	B.A.						
28S/9992525	A.32.B12	Screw	4	B.A.						
28S/1008327	A.32.B14	Screw	4	B.A.						
28S/9474099	A.45.B10	Screw	4	B.A.						
28S/	A.205.B40	Screw	No.6	U.N.C.						
28S/9523008	A.217.B40	Screw	No.6	U.N.C.						
28S/1220216	A.218.B16	Screw	No.6	U.N.C.						
28S/1285522	A.218.B18	Screw	No.6	U.N.C.						
28F/18957	AGS.6711	Union, body								
28F/17910	AGS.838.13	Union, nut and bush, assembly								
28F/5104	AGS.838.1	Union, straight								
28F/5105	AGS.838.2	Union, tee								
28F/1046309	AGS.838.3	Union, elbow								
28F/18961	AS.8599	Union, nut and bush, assembly								
28W/9419474	SP.15B	Washer	4	B.A.						
28W/9419475	SP.15C	Washer	2	B.A.						
28W/9419405	SP.15E	Washer	1/4"	dia.						
28W/9419404	SP.16C	Washer	2	B.A.						
28W/9419487	SP.16E	Washer	1/4"							

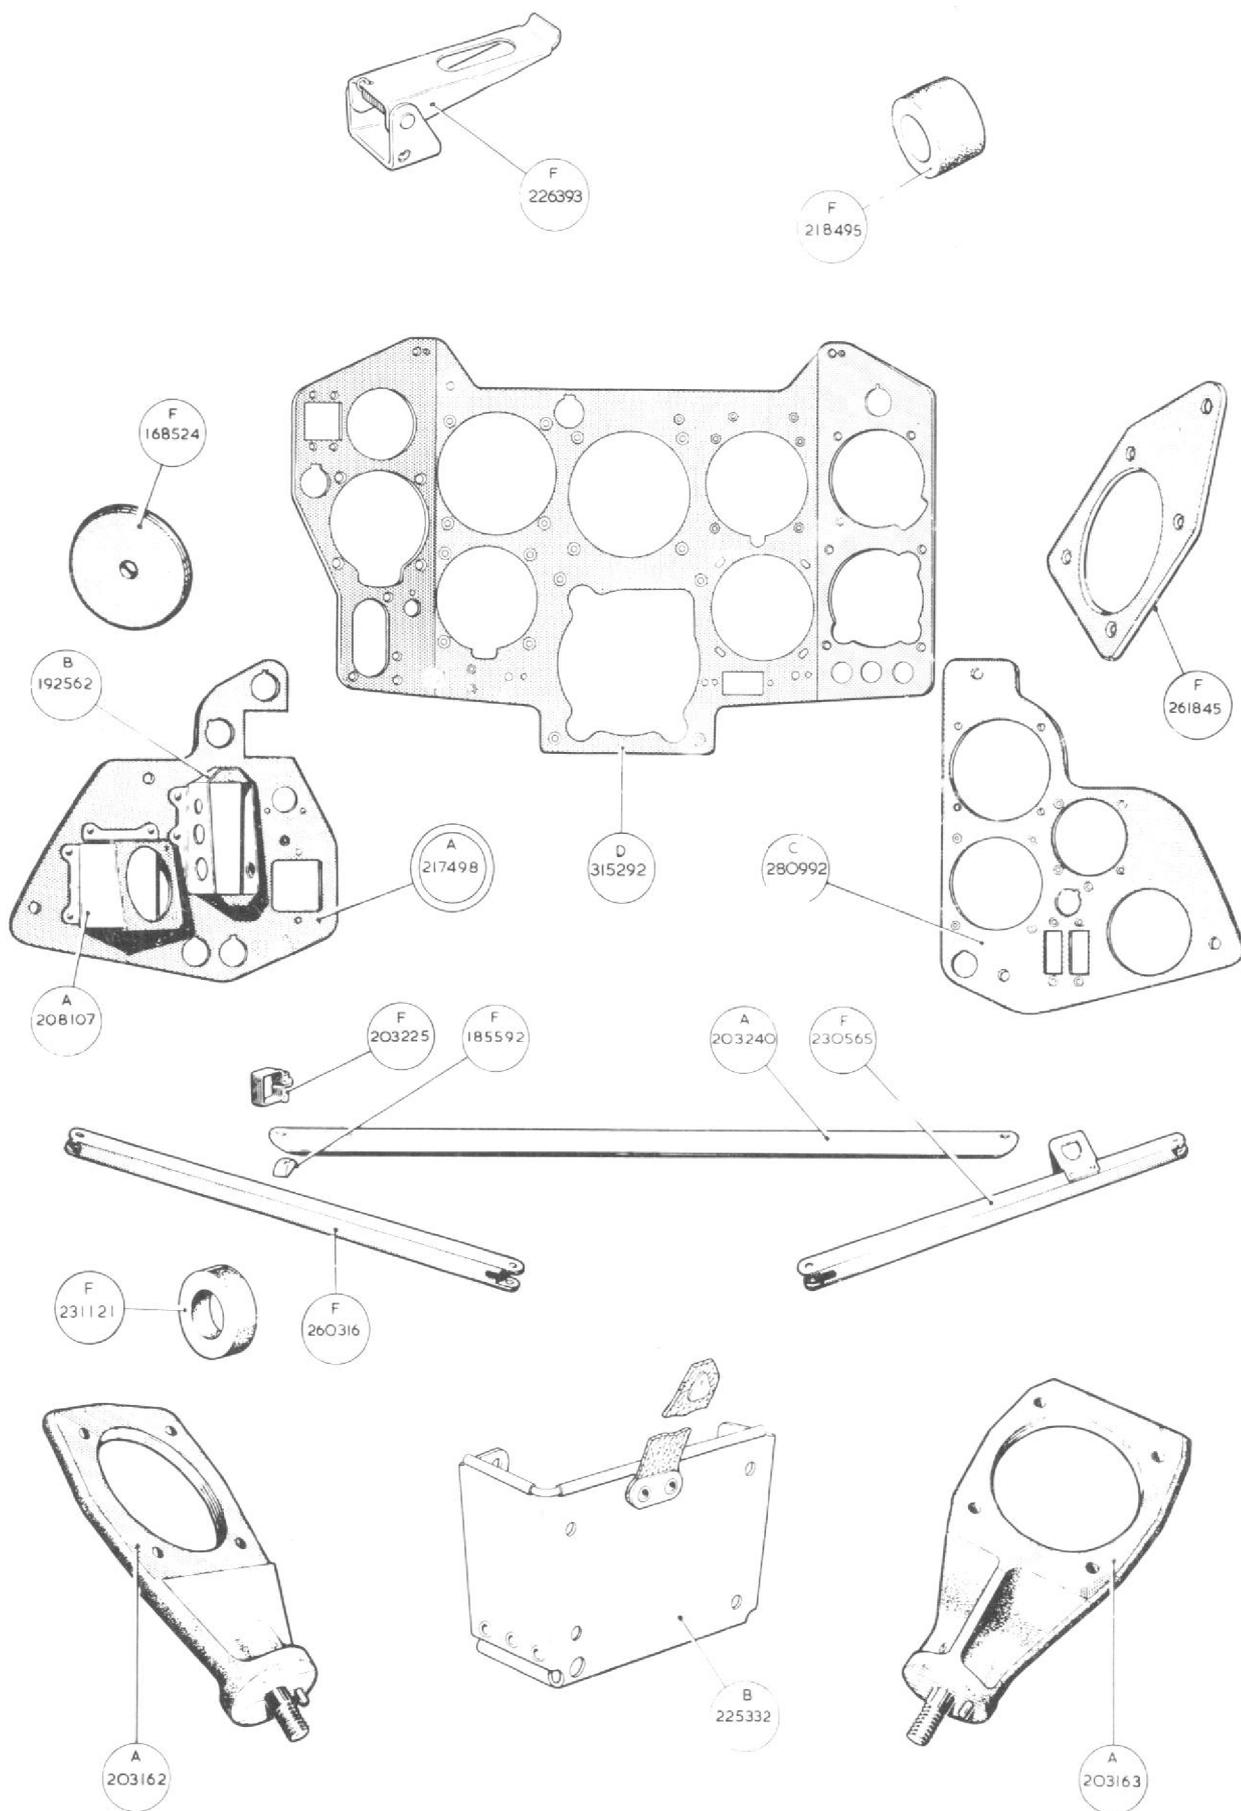



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

