

TANKS
JETTISON WING FUEL TANK, PORT

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
12867	E.A3.00.505	TANK, 250 GALLON, JETTISONABLE, WING FUEL INSTALLATION (LESS DETONATORS) PORT GROUP, WITHOUT VORTEX GENERATORS (PRE-MOD. 2395) Consisting of:—	1	—	A	
	E.A1.00.81	ATTACHMENT DETAILS, DROP TANK TO WING Consisting of:—	—	—	—	
1577	E.A1.20.2031	BOLT, explosive	3	DTD.683	C	U.1
	—	CONDUIT, DETONATOR, ASSEMBLY (SCD.79641) (SRIM.3533) (MOD. 4799) (For details see pages ED.10 and EE.11)	—	—	—	
	E.A1.81.317	DETONATOR, FORWARD, EXPLOSIVE BOLT, ASSEMBLY Consisting of:—	1	—	—	
12G/1279	E.A3.81.353	DETONATOR, No. 109, Mk. 1	1	—	C	U.1
1578	E.A1.81.939	PLUG, detonator	1	—	C	U.1
5K/4346887	†	SLEEVE, 3/4" long	2	—	C	U.1
5K/4346875	†	SLEEVE, 1/2" long	1	—	C	U.1
1579	E.A1.81.938	SPRING	1	—	C	U.1
5X/9450396	HC.490	TAG, quick release	2	—	C	
1580	E.A1.81.428	TUBE, detonator	1	—	C	U.1
5F/2124	†	TUBE, rubber (Pre-Mod. 4799)	QR	—	C	
	E.A1.81.318	DETONATOR, REAR, OUTBOARD, EXPLOSIVE BOLT, ASSEMBLY Spares for this group are identical with those for group Pt. No. E.A1.81.317	1	—	—	
	E.A1.81.599	DETONATOR, REAR, INBOARD, EXPLOSIVE BOLT, ASSEMBLY Spares for this group are identical with those for group Pt. No. E.A1.81.317	1	—	—	
28M/10335	AGS.2002/Q/1	NUT, stiff, 5/8" BSF	3	—	C	
2134	E.A1.57.1239	PIPE, air brake, c/w stop	1	—	C	U.1
2135	E.A1.57.1241	PIPE, fuel break, c/w stop	1	—	C	U.1
1583	E.A1.20.10505	WASHER, special, explosive bolt	3	S.514	C	U.1
1584	E.A1.20.8833	WASHER, special, explosive bolt	3	DTD.683	C	U.1
	E.A3.62.175	TANK, DROP (LESS ATTACHMENTS) ASSEMBLY	1	—	—	
	or					
14683	BRISTOL A/C 75-04-0001		1	Durestos Plastic	A	
		Spares for:—				
5CZ/4335532	E.A3.62.113	BLOCK, contact, navigation light... ..	1	—	C	U.1
		Attaching parts for E.A3.62.113:—				
28S/9535715	A33/B16	Screw, 4 BA	2	—	C	
20505	E.A3.62.151	BODY, adaptor for filler cap	1	—	C	U.1
		Attaching parts for E.A3.62.151:—				
28D/1215515	AS.4563/1C	Bolt, 2 BA, countersunk	18	—	C	
21607	E.A2.62.57	Ring, nut	1	—	C	
5250	E.A2.62.71	Washer, sealing	1	—	C	
12940	E.A3.62.191	CAP, FILLER, C/W INWARD VENT VALVE, ASSEMBLY Spares for:—	1	—	C	U.1
5249	E.A2.62.143	WASHER, sealing, filler cap, assembly	1	—	C	U.1
13158	E.A3.62.197	WASHER, sealing, vent valve head	1	Hycatrol 257	C	

TANKS
JETTISON WING FUEL TANK, PORT

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
5L/9952431	† E.A2.62.73	FILAMENT, lamp FUEL PIPE AND MOUNTING, ASSEMBLY ...	1 —	— —	C —	—	U.1
		Spares for:—					
2136	E.A2.62.227	CLIP, bottom, air pipe	1	—	C	—	U.1
2137	E.A2.62.229	CLIP, bottom, fuel pipe	1	—	C	—	U.1
28E/20012	SP.91/C	CLIP, top, air pipe	1	—	C	—	U.1
28E/19824	SP.91/J	CLIP, top, fuel pipe	1	—	C	—	U.1
	EEAS.77/81	HOSE, connection, for fuel break pipe, 1½" i/d x 1½" o/d x 3" long (Make from 32C/1275041)	1	BSF.67 Type 1	LM	—	U.1
	EEAS.77/32	HOSE, connection for air break pipe, ½" i/d x ¾" o/d x 2¾" long (Make from 32C/1275034)	1	BSF.67 Type 1	LM	—	U.1
6381	E.A1.57.339	PLUG, wooden	1	—	C	—	
6382	E.A1.57.341	PLUG, wooden	1	—	C	—	
6158	E.A2.62.203	RING, joint	1	—	C	—	
6155	E.A2.62.79	WASHER, joint	1	—	C	—	
6156	E.A2.62.81	WASHER, joint	1	—	C	—	
5CX/887	†	LAMP, navigation, type B Attaching parts for 5CX/887:—	1	—	B	—	
28M/9418829	AGS.2002/A1	Nut, 6 BA	4	—	C	—	
	3392	PANEL, access, top skin Attaching parts for E.A3.62.77:—	1	—	C	—	
28D/1007982	AS.1248/1C	Bolt, mushroom head	18	—	C	—	
21607	E.A2.62.57	Ring nut	1	—	C	—	
5250	E.A2.62.71	Washer, sealing	1	—	C	—	
12922	E.A3.62.189	SOCKET, EARTHING, ASSEMBLY Consisting of:—	1	—	C	—	U.1
	E.A3.62.181	CAP, sealing	1	DTD.683	—	—	U.1
	E.A3.62.177	SOCKET, earth plug	1	DTD.683	—	—	U.1
	E.A3.62.183	SPRING	1	S.201	—	—	U.1
		Attaching parts for E.A3.62.189:—					
28S/7100783	4100/4/¾"	Screw, self tapping, type Z	6	—	C	—	
12923	E.A3.62.185	Washer, sealing	1	Neo-K-Tex	C	—	U.1
	BRISTOL A/C						
34543	75.04.0341	SOCKET, insulating (Bristol tank only)	2	—	C	—	
	E.A3.62.115	STRIP, sealing on tank flange, 72" long (Make from Ref. 4432)	1	—	LM	—	U.1
5511	E.A1.20.10897	VALVE, DRAIN, ASSEMBLY Spares for:—	1	—	B	—	U.1
21522	E.A1.20.10901	PLUG, DRAIN, GROUP Spares for:—	3	—	B	—	
	E.A1.20.10903	PLUG, housing	1	L.65	—	—	
5512	E.A1.20.10907	PLUG	1	L.65	—	—	
12335	E.A1.20.10905	RING, Hycatrol	1	Grade HE/4	C	—	
12904	E.A3.62.117	WASHER, special	50	Petrolite	C	—	
3458	E.A1.20.2903	WASHER, sealing	2	Neo-K-Tex	C	—	
6154	E.A2.62.61	WASHER, sealing, inner explosive bolt housing	3	—	C	—	
6153	E.A2.62.59	WASHER, sealing, forward explosive bolt housing	3	—	C	—	
	BRISTOL A/C						
34525	75.04.0386	WASHER, distance (Bristol tank only)	3	—	C	—	
34526	75.04.0387	WASHER, distance (Bristol tank only)	6	—	C	—	

TANKS
JETTISON WING FUEL TANK, PORT

Ref. No.	Part No.	1	2	3	4	5	6	Description	No. off	Mati. Spec.	Cl. of Equip.	Plate No.
											M.R. L.M.	
14717	E.B6.00.347							TANK, 250 GALLON, JETTISONABLE, WING FUEL INSTALLATION (LESS DETONATORS) PORT GROUP, WITH VORTEX GENERATORS (MOD. 2395) Spares for this group are identical with those for group Pt. No. E.A3.00.505 on page UA.1 except for the following deletion and addition: Delete:—	1	—	A	
	E.A3.62.175 or BRISTOL A/C 75-04-0001							TANK, DROP (LESS ATTACHMENTS) ASSEMBLY	1	—	—	
14683								Add:—	1	Durestos Plastic	A	
	E.A3.62.217 or BRISTOL A/C 75-04-0001							TANK, DROP (LESS ATTACHMENTS) ASSEMBLY	1	—	—	U.1
14683									1	Durestos Plastic	A	

TANKS
JETTISON WING FUEL TANK, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
12868	E.A3.00.506	TANK, 250 GALLON, JETTISONABLE, WING FUEL INSTALLATION (LESS DETONATORS) STARBOARD GROUP, WITHOUT VORTEX GENERATORS (PRE-MOD. 2395) Consisting of:—	1	—	A	
	E.A1.00.82	ATTACHMENT DETAILS, DROP TANK TO WING Spares for this group are identical with those for group Pt. No. E.A1.00.81 on page UA.1.	—	—	—	
	E.A3.62.176 or BRISTOL A/C	TANK, DROP (LESS ATTACHMENTS) ASSEMBLY	1	—	—	
14684	75-04-0002	Spares for this group are identical with those for group Pt. No. E.A3.62.175 on page UA.1 except for the following deletions and additions. Delete:—	1	Durestos Plastic	A	
5CX/887	E.A2.62.73 †	FUEL PIPE AND MOUNTING, ASSEMBLY ... LAMP, navigation, type B Add:—	— 1	—	— B	U.1
	E.A2.62.74	FUEL PIPE AND MOUNTING, ASSEMBLY ... Spares for this assembly are identical with those for Pt. No. E.A2.62.73 on page UA.2.	—	—	—	U.1
5CX/889 14718	† E.B6.00.348	LAMP, navigation, type B TANK, 250 GALLON, JETTISONABLE, WING FUEL INSTALLATION (LESS DETONATORS) STARBOARD GROUP, WITH VORTEX GENERATORS (MOD. 2395) Spares for this group are identical with those for group Pt. No. E.A3.00.506 except for the following deletion and addition:— Delete:—	1	—	B A	
	E.A3.62.176 or BRISTOL A/C	TANK, DROP (LESS ATTACHMENTS) ASSEMBLY	1	—	—	
14684	75-04-0002	Add:—	1	Durestos Plastic	A	
	E.A3.62.218 or BRISTOL A/C	TANK, DROP (LESS ATTACHMENTS) ASSEMBLY	1	—	—	U.1
14684	75-04-0002		1	Durestos Plastic	A	

TANKS
FUSELAGE FUEL TANKS

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
988	E.A1.56.247	TANK, FUEL, NO. 1, ASSEMBLY Spares for:—	1	—	B	
6A/2766	SMITH WAYMOUTH JCB./1A	BOX, terminal	1	—	B	
6A/2753	SMITH WAYMOUTH TB./44A	UNIT, tank	1	—	B	
6A/2754	SMITH WAYMOUTH TB./45A	UNIT, tank	1	—	B	
6A/2755	SMITH WAYMOUTH TB./46A	UNIT, tank	1	—	B	
6A/2756	SMITH WAYMOUTH TB./47A	UNIT, tank	1	—	B	
987	E.A1.56.243	TANK, FUEL, NO. 2, ASSEMBLY Spares for:—	1	—	B	
6A/2766	SMITH WAYMOUTH JCB./1A	BOX, terminal	1	—	B	
6A/2757	SMITH WAYMOUTH TB./48A	UNIT, tank	1	—	B	
6A/2758	SMITH WAYMOUTH TB./49A	UNIT, tank	1	—	B	
6A/2759	SMITH WAYMOUTH TB./50A	UNIT, tank	1	—	B	
6A/2760	SMITH WAYMOUTH TB./51A	UNIT, tank	1	—	B	
12994	E.A3.56.445	TANK, FUEL, NO. 3, ASSEMBLY (PRE-MOD. 3367 AND 3391) (Supplied to Part No. E.A3.00.513, less capacitor units, for spares purposes) Spares for:—	1	—	A	
6A/2766	SMITH WAYMOUTH JCB./1A	BOX, terminal	1	—	B	
19844	E.A3.57.457	PIPE, vent	2	—	C/MR	
19845	E.A3.57.463	RING, rubber, for vent pipe clip	2	—	C	
6A/2804	SMITH WAYMOUTH TC./17	UNIT, tank	2	—	A	
6A/2805	SMITH WAYMOUTH TC./18	UNIT, tank	2	—	A	

TANKS
FUSELAGE FUEL TANKS

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip.		Plate No.
		1	2	3	4	5	6			M.R.	L.M.	
40126	E.A3.56.695	TANK, FUEL, NO. 3, ASSEMBLY (MOD. 3367 AND 3391) (Supplied to Part No. E.A3.00.1055, less capacitor units, for spares purposes) Spares for this assembly are identical with those for assembly Part No. E.A3.56.445, except for the following additions:— Add:—						1	—	A		
6A/7517	SMITH WAYMOUTH PS.30	CABLE, assembly						1	—	C		
6A/7518	SMITH WAYMOUTH PS.54	CABLE, assembly						2	—	C		
6A/7519	SMITH WAYMOUTH PS.73	CABLE, assembly						2	—	C		
	E.A3.57.161	Attaching parts for E.A3.56.445 or E.A3.56.695:— WIRE SUPPORT, NO. 3 FUEL TANK, ASSEMBLY						—	—	—		
		Spares for:—										
3507	E.A1.57.377	Grömsmet, tank, support, nylon cord						24	Shore 50	C		
2746	E.A1.57.371	Plate, spreader, fuel tank						124	L.72	C		
29H/4099	TERRY.169/¼"	Ring, split						22	—	C		
3508	E.A1.57.1175	Support, end, nylon cord						4	—	C		
3509	E.A1.57.1177	Support, intermediate, nylon cord						20	—	C		

TANKS
INTEGRAL FUEL TANK — WING, PORT

Ref. No.	Part No.	Description	No. off	Mati Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
17748	E.A1.20.3505	TANK, INTEGRAL, PORT, ASSEMBLY ... (Supplied to Part No. E.B7.00.111 for spares purposes) Spares for:—	1	—	A	
21016	E.A1.20.5067	BLOCK , rubber, inboard ...	1	—	C	U.4
21017	E.A1.20.5068	BLOCK , rubber, inboard ...	1	DTD.560	C	U.4
21018	E.A1.20.5069	BLOCK , rubber, outboard ...	1	Shore 50-61	C	U.4
21019	E.A1.20.5070	BLOCK , rubber, outboard ...	1	—	C	U.4
	E.A1.20.5003	BLOCK , rubber, sealing (Pre-Mod. 1463) ...	6	—	—	
21020	E.B6.20.751	BLOCK , rubber, sealing (Mod. 1463) ...	6	—	C	U.4
	or					
	E.B6.20.769	BLOCK , rubber, sealing ...	6	—	—	U.4
3523	EEAS.134/1½C SMITHS INSTRUMENTS JKB.1	BOLT , special, sealing, 2 BA ...	525	S.91	C	U.4
6A/3020	JKB.1	BOX , terminal ... Attaching parts for JKB.1:—	2	—	B	
28D/1200119	A25/4C	Bolt , 2 BA ...	8	—	C	
28F/9429636	AGS.1186/3	Seal , bonded ...	8	—	C	
28E/9128961	AGS.605/1	CLIP , hose connection, securing ...	10	—	C	
2163	EEAS.112/15	CLIP , pipe, securing ...	3	—	C	
12333	E.A1.20.5201	CLIP , pipe, securing (Pre-Mod. 3432) ...	3	L.72	C	U.4
28E/1009753	AS.3180/3C	CLIP , cable, securing ... Attaching parts for EEAS.112/15, E.A1.20.5201 and AS.3180/3C:—	1	—	C	
28D/9446920	A25/1C	Bolt , 2 BA (As required) ...	1	—	C	
28D/1200119	A25/4C	Bolt , 2 BA (As required) ...	1	—	C	
28D/7002428	A25/6C	Bolt , 2 BA (As required) ...	1	—	C	
28M/1278190	AGS.2001/C/1	Net , 2 BA (As required) ...	1	—	C	
28M/9433473	AGS.2002/C/1	Net , 2 BA (As required) ...	1	—	C	
28F/9429636	AGS.1186/3	Seal , bonded (As required) ...	2	—	C	
18856	EEAS.27/56JR	Washer , sealing (As required) ...	2	—	C	
18638	E.A1.57.353	ELBOW , special, nitrogen connection (Pre-Mod. 3432) ...	1	DTD.133C	C/MR	U.4
18637	E.A1.57.354	ELBOW , special, nitrogen connection (Pre-Mod. 3432) ... Attaching parts for E.A1.57.353 and E.A1.57.354:—	1	DTD.133C	C/MR	U.4
28D/1214311	A25/17C	Bolt , 2 BA ...	1	—	C	
28D/1011021	A25/16C	Bolt , 2 BA ...	2	—	C	
28D/1200119	A25/4C	Bolt , 2 BA ...	7	—	C	
28F/9429636	AGS.1186/3	Seal , bonded ...	10	—	C	
	E.B6.20.1163	FUEL DRAIN ADAPTER, AFT INBOARD CORNER, INSTALLATION Spares for:—	—	—	—	
36599	E.B6.20.1165	ADAPTER , drain ...	1	—	C	
36597	E.B6.20.1167	CUP , suction fairing, drain ...	1	L.59	C	
	EEAS.77/72	HOSE , connection (Make from Ref. 32C/1275038) ...	4	BSF.67 Type 1	LM	U.4
12334	E.A1.20.5073	JOINT , tee, through main spar, nitrogen system (Pre-Mod. 3432) ...	1	L.54	C	
6928	E.A1.20.4423	PANEL, FUEL PUMP ACCESS, ASSEMBLY ... Spares for:—	1	—	B	U.4
5511	E.A1.20.10897	VALVE DRAIN, ASSEMBLY ... Consisting of:—	1	—	B	U.5
	E.A1.20.10909	DISH , syphon ...	1	—	—	U.5
	E.A1.20.10911	Attaching parts for E.A1.20.10909:— Screw , special, 4 BA ...	4	—	—	U.5

TANKS
INTEGRAL FUEL TANK — WING, PORT

Ref. No.	Part No	Description						No. off	Mati Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
21522	E.A1.20.10899	HOUSING , drain plug						1	—	—	U.5
	E.A1.20.10901	PLUG, VALVE, ASSEMBLY						1	—	C	U.5
		Consisting of:—									
5512	E.A1.20.10903	PLUG , drain valve						1	L.65	—	U.5
12335	E.A1.20.10907	PLUG , ¼" BSP						1	L.65	C	U.5
12335	E.A1.20.10905	RING , resilient						1	—	C	U.5
3458	E.A1.20.2903	WASHER , sealing						1	Neo-K-Tex	C	U.5
		Attaching parts for E.A1.20.4423:—									
6218	EEAS.1/1½E	Screw, ¼" BSF						44	S.96	C	
16107	E.A1.20.5313	PANEL, ACCESS, REAR WALL, ASSEMBLY						2	—	B	U.4
16106	E.A1.20.5311	PANEL, ACCESS, REAR WALL, ASSEMBLY						1	—	B	U.4
16028	E.A1.20.4801	PANEL, ACCESS, REAR WALL, ASSEMBLY						1	—	B	U.4
		Spares for:—									
21040	E.A1.20.4927	RING , seal						1	—	C	
		Attaching parts for E.A1.20.5313, E.A1.20.5311 and E.A1.20.4801:—									
28M/7002430	AGS.2002/E/1	Nut, ¼" BSF						28	—	C	
28W/9419405	SP.15/E	Washer						28	—	C	
12336	E.A1.20.5155	PIPE , from outer elbow connection to tee piece (Pre-Mod. 3432)						1	L.5	C	U.4
12337	E.A1.20.5157	PIPE , from inner elbow connection to tee piece (Pre-Mod. 3432)						1	L.5	C	U.4
		PULSOMETER									
5UE/6788	PUL.907 Mk.3	PUMP , fuel (Mod. 2611)						1	—	A	
		Attaching parts for P.U.L.907, Mk. 3:—									
28D/7002428	A25/6C	Bolt, 2 BA						14	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA						14	—	C	
28F/9429636	AGS.1186/6	Seal, bonded						14	—	C	
28W/9419475	SP.15/C	Washer						14	—	C	
6930	E.A1.20.5265	RING , nut						1	—	C	U.4
34723	E.A1.20.5195	RING , packing, between rear wall elbow connection and tank (Pre-Mod. 3432)						2	DTD.118	C	U.4
5653	E.A1.57.1145	RING , sealing, at flanged elbow connection (Pre-Mod. 3432)						2	—	C	U.4
15973	E.A1.20.4153	SEAL						1	Neo-K-Tex	C	U.4
6925	E.A6.20.251	SEAL						1	Petrolite	C	U.4
36261	E.A3.20.2611	SPIGOT						3	—	C	U.4
		Attaching parts for E.A3.20.2611:—									
37408	E.A3.20.2617	Bolt, special						4	—	C	U.4
36263	E.A3.20.2615	Shim, packing						1	—	C	U.4
		STRUCTURE, MAIN INTEGRAL TANK, ASSEMBLY (PRE-MOD. 1781)						—	—	—	
		Spares for:—									
12338	EEAS.134/3½C	BOLT , special, sealing, 2 BA						8	S.97	C	
	E.A1.20.5151	BRACKET , pipe clip support						5	—	—	
	E.A1.20.5152	BRACKET , pipe clip support						7	—	—	
		Attaching parts for E.A1.20.5151 and E.A1.20.5152:—									
28D/1008149	A25/2B	Bolt, 4 BA						2	—	C	
28M/1086618	AGS.2002/B/1	Nut, 4 BA						2	—	C	
28W/9419474	SP.15/B	Washer						2	—	C	

TANKS
INTEGRAL FUEL TANK — WING, PORT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
		1 2 3 4 5 6					
21726	E.B7.57.283	CONNECTOR , rigid, tank unit, rib 3A to rib 3B	1	—	C		U.4
21728	E.B7.57.291	CONNECTOR , rigid, tank unit, rib 4B to rib 5A Attaching parts for E.A6.57.21, E.A6.57.23, E.A6.57.31, E.A6.57.33, E.A6.57.35, E.A6.57.37, E.B7.57.281, E.B7.57.283 and E.B7.57.291:—	1	—	C		U.4
28D/9436920	A25/1C	Bolt, 2 BA (As required)	1	—	C		
28D/9233011	A25/2C	Bolt, 2 BA (As required)	1	—	C		
28D/9133012	A25/3C	Bolt, 2 BA (As required)	1	—	C		
28M/10288	AGS.2001/C/1	Nut, 2 BA (As required)	1	—	C		
28M/10328	AGS.2002/C/1	Nut, 2 BA (As required)	1	—	C		
28W/9419475	SP.15/C	Washer (As required)	1	—	C		
16240	E.B6.20.31	EXTENSION , nitrogen purging pipe, bay No. 5 ... (Pre-Mod. 3432)	2	—	C		U.4
16244	E.B6.20.35	EXTENSION , vent pipe, bay No. 2	1	—	C		U.4
16248	E.B6.20.39	EXTENSION , vent pipe, bay No. 4	1	—	C		U.4
	E.B7.57.275	FAIRLEAD , at ribs 3A, 3B, 5A and 5	4	LFS.21	—		U.4
	E.B7.57.289	FAIRLEAD , at rib 3	1	LFS.21	—		U.4
		Attaching parts for E.B7.57.275 and E.B7.57.289:—					
28D/1008149	A25/2B	Bolt, 4 BA	2	—	C		
28M/10327	AGS.2022/B/1	Nut, 4 BA	2	—	C		
28W/9419474	SP.15/B	Washer	2	—	C		
	EEAS.77/72	HOSE , rubber, coupling nitrogen purging pipes (Make from 32C/376)	7	DTD.625	LM		
	E.A1.20.5409	PIPE , drain, assembly, inboard filler cap to fuel vent drain pipe tee	1	—	—		U.4
	E.A1.20.5417	PIPE , drain, assembly, outboard filler cap to fuel vent drain pipe tee	1	—	—		U.4
15987	E.A1.20.4279	PIPE , fuel pump compartment to bay No. 3 ...	1	—	C		U.4
16266	E.B6.20.387	PIPE , fuel, in bay No. 3	1	—	C		U.4
	E.A1.20.5401	PIPE , fuel, vent drain, assembly, upper, bay No. 3	1	—	—		
	E.A1.20.5405	PIPE , fuel, vent drain, assembly, lower, bay No. 3	1	—	—		U.4
	E.A1.20.5421	PIPE , fuel, vent drain, assembly, upper, bay No. 5	1	—	—		U.4
	E.A1.20.5413	PIPE , fuel, vent drain, assembly, lower, bay No. 5	1	—	—		U.4
16234	E.B6.20.25	PIPE , nitrogen purging, bay No. 2 (Pre-Mod. 3432)	1	—	C		U.4
16236	E.B6.20.27	PIPE , nitrogen purging, bay No. 2 (Pre-Mod. 3432)	1	—	C		U.4
16238	E.B6.20.29	PIPE , nitrogen purging, bay No. 2 (Pre-Mod. 3432)	1	—	C		U.4
16246	E.B6.20.37	PIPE , nitrogen purging, bay No. 4 (Pre-Mod. 3432)	1	—	C		U.4
16252	E.B6.20.43	PIPE , nitrogen purging, bay No. 4 (Pre-Mod. 3432)	1	—	C		U.4
16242	E.B6.20.33	PIPE , vent, bay No. 3	1	—	C		U.4
16250	E.B6.20.41	PIPE , vent, bay No. 5	1	—	C		U.4
16075	E.A1.20.5103	PLUG , screwed, slinging point blanking ...	3	—	C/MR		U.4
28R/9719126	AGS.566/B	PLUG , vent valve blanking	1	—	C		
30996	E.B6.20.1157	RING , bolt, half, filler cap	2	S.510	C		U.5
15973	E.A1.20.4153	SEAL	2	Neo-K-Tex	C/MR		

TANKS
INTEGRAL FUEL TANK — WING, PORT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
		1 2 3 4 5 6					
6927	E.A1.20.5099	SEAL	3	Neo-K-Tex	C		
16042	E.A1.20.4831	SEAL, filler cap	2	Neo-K-Tex	C		
16043	E.A1.20.4833	SEAL, vent valve	2	Neo-K-Tex	C		
15993	E.A1.20.4413	SKIN, LEADING EDGE, INTEGRAL TANK, BAY NO. 2, ASSEMBLY (PRE-MOD. 1781)	1	—	C/MR		
		Spares for:—					
16085	E.A1.20.5131	PLATE, nut (Pre-Mod. 1463)	2	DTD.683	C		
20770	E.B6.20.755	PLATE, nut (Mod. 1463)	2	DTD.683	C		
16084	E.A1.20.5129	RING, nut (Pre-Mod. 1463)	2	DTD.683	C		
20771	E.B6.20.757	RING, nut (Mod. 1463)	2	DTD.683	C		
6926	E.B6.20.279	RING, sealing, fuel pump access cover	1	Shore 45	C		
16471	E.A6.57.29	SUPPORT, cable	2	—	C		
		Attaching parts for E.A6.57.29:—					
28D/9419452	A25/3B	Bolt, 4 BA	2	—	C		
28M/10327	AGS.2002/B/1	Nut, 4 BA	2	—	C		
28W/9419474	SP.15/B	Washer	2	—	C		
16470	E.A6.57.27	SUPPORT, connector	2	—	C		U.4
		Attaching parts for E.A6.57.27:—					
28D/1008149	A25/2B	Bolt, 4 BA	3	—	C		
28M/10327	AGS.2002/B/1	Nut, 4 BA	3	—	C		
28W/9419474	SP.15/B	Washer	3	—	C		
28F/8011811	AGS.1118/B	TBE, connection, vent drain pipes	2	—	C		
30997	E.B6.20.1153	TUBE, fuelling	1	—	C		U.5
		Attaching parts for E.B6.20.1153:—					
28D/9133011	A25/2C	Bolt, 2 BA	9	—	C		
28M/1006473	A27/CT	Nut, 2 BA	5	—	C		
28M/10328	AGS.2002/C/1	Nut, 2 BA	9	—	C		
28W/9419402	SP.13/C	Washer	5	—	C		
30998	E.B6.20.1159	Washer, clamping, bolt ring	4	—	C		U.5
16033	E.A1.20.4821	TUBE, static, vent, assembly	1	—	C		U.4
6A/3560	SMITH/ WAYMOUTH TB/113	UNIT, tank, fuel contents, at rib 3A	1	—	B		
6A/3559	SMITH/ WAYMOUTH TB/112	UNIT, tank, fuel contents, at rib 3B	1	—	B		
6A/3558	SMITH/ WAYMOUTH TB/111	UNIT, tank, fuel contents, at rib 5A	1	—	B		
6A/3557	SMITH/ WAYMOUTH TB/110	UNIT, tank, fuel contents, at rib 5B	1	—	B		
28445	E.A1.20.4533	VALVE, NON-RETURN, ASSEMBLY	1	—	C		U.4
		Spares for:—					
30999	E.B6.20.1151	BOLT, special (Make from A25/2C) (Mod. 2572)	1	—	C		U.4
27173	E.A1.20.5119	WASHER	1	Petrolite	C		U.4
		Attaching parts for E.A1.20.4533:—					
28D/9133011	A25/2C	Bolt, 2 BA	8	—	C		
28M/10328	AGS.2002/C/1	Nut, 2 BA	8	—	C		
28W/9419475	SP.15/C	Washer	6	—	C		
28444	E.B6.20.795	VALVE, NON-RETURN, ASSEMBLY	1	—	C		
		Spares for:—					
27173	E.A1.20.5119	WASHER	1	Petrolite	C		

TANKS
INTEGRAL FUEL TANK — WING, PORT

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip.		Plate No.
		1	2	3	4	5	6			M.R.	L.M.	
		Attaching parts for E.B6.20.795:—										
28D/9133012	A25/3C	Bolt, 2 BA	6	—		C		
28D/9140203	AS.1246/3C	Bolt, 2 BA	2	—		C		
28M/10328	AGS.2002/C/1	Nut, 2 BA	8	—		C		
28W/9419475	SP.15/C	Washer	2	—		C		
28W/9419404	SP.16/C	Washer	2	—		C		
27120	E.A2.57.745	VALVE , non-return, nitrogen purging pipe lines (Pre-Mod. 3432)						2	—		B	U.4
12016	E.A1.57.663	VALVE, VENT, ASSEMBLY						2	—		B	U.5
	E.A1.57.919	Spares for:— ARM , float pivot						1	—		—	U.5
		Attaching parts for E.A1.57.919:—										
28D/1010030	A25/7C	Bolt, 2 BA	1	—		C		
28M/13121	A27/CS	Nut, 2 BA	1	—		C		
28W/9419475	SP.15/C	Washer	2	—		C		
37567	E.A1.57.913	BALL JOINT , assembly						1	—		C/MR	U.5
37865	E.A1.57.1337	BOLT , special, vent valve top and bottom element housing (Make from A25/2C)						6	—		C/MR	U.5
25722	E.A1.57.891	CONNECTION , screwed, vent heater cable						1	—		C/MR	U.5
21938	E.A1.57.887	COVER , valve						1	L.72		C	U.5
		Attaching parts for E.A1.57.887:—										
28S/9995325	A33/B8	Screw, 4 BA						7	—		C	
36838	E.A1.57.1121	FLOAT , assembly						1	—		B/MR	U.5
		Attaching parts for E.A1.57.1121:—										
28D/1009984	A25/7B	Bolt, 4 BA	1	—		C		
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—		C		
28W/9419465	SP.13/B	Washer	1	—		C		
21764	E.A1.57.885	GASKET , 3"5 o/d. (Pre-Mod. 2720)						1	Hycar HE/4		C	
37821	E.B6.57.135	GASKET , 3"5 o/d. (Mod. 2720)						1	Hycar HE/4		C	
	HELLERMAN											
5X/6988	HC.304	LUG , vent heater cable						4	—		C	
37569	E.A1.57.923	PLATE , rubber washer, retaining						1	L.72		C/MR	U.5
		Attaching parts for E.A1.57.923:—										
28M/10328	AGS.2002/C/1	Nut, 2 BA						1	—		C	
28W/9419475	SP.15/C	Washer						1	—		C	
21767	E.A1.57.895	RING , joint (Pre-Mod. 2720)						1	Hycar Shore 62		C	
37820	E.B6.57.131	RING , joint (Mod. 2720)						1	HE/4 Shore 62		C	U.5
25729	E.A1.57.899	SOCKET , plug, vent heater cable						2	—		C/MR	U.5
13159	E.A3.57.523	VALVE, VENT, SUB-ASSEMBLY (PRE-MOD. 2721)						1	—		B	
		Consisting of:—										
21766	E.A1.57.893	GASKET , 3"5 o/d.						1	Hycar Shore 50		C	
21771	E.A1.57.1097	GASKET , 1"8 o/d.						1	Hycar Shore 50		C	
21765	E.A1.57.889	GUIDE , plug						1	LFS.21		C	U.5
26681	E.A1.57.881	HEAD , valve						1	DTD.276 or 133		C	U.5
21772	E.A1.57.1191	HEATER , vent valve						1	—		C	U.5

TANKS
INTEGRAL FUEL TANK — WING, PORT

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
25794	E.B6.20.837	PLATE , landing, access cover, assembly ...	1	—	C/MR	U.4
		Attaching parts for E.B6.20.837:—				
22151	EEAS.135/2½E	Bolt, ½" BSF ...	14	—	C	
3524	EEAS.134/2½C	Bolt, 2 BA ...	20	—	C	
28M/1006473	A27/CT	Nut, 2 BA ...	20	—	C	
28M/12931	A27/ET	Nut, ½" BSF ...	14	—	C	
28W/9419404	SP.16/C	Washer ...	20	—	C	
28W/9419487	SP.16/E	Washer ...	14	—	C	
20770	E.B6.20.755	PLATE , nut, fuel pump access cover, attachment	2	—	C	U.4
		Attaching parts for E.B6.20.755:—				
28S/11429	No.4 x ⅝"	Screw, self-tapping, type 4100 (Pre-Mod. 1715)	8	—	C	
28S/6233	No.4 x ¼"	Screw, self-tapping, type 4100 (Mod. 1715)	8	—	C	
20771	E.B6.20.757	RING , nut, fuel pump access cover, attachment	2	—	C	U.4
		Attaching parts for E.B6.20.757:—				
28S/11429	No.4 x ⅝"	Screw, self-tapping, type 4100 (Pre-Mod. 1715)	12	—	C	
28S/6233	No.4 x ¼"	Screw, self-tapping, type 4100 (Mod. 1715)	12	—	C	
6926	E.B6.20.279	RING , sealing, fuel pump access cover ...	1	—	C	U.4
2621	EEAS.104	VALVE , water drain ...	3	—	C	
		Attaching parts for EEAS.104:—				
5842	EEAS.134/2C	Bolt, 2 BA ...	2	—	C	
28M/1006473	A27/CT	Nut, 2 BA ...	2	—	C	
28W/9419404	SP.16/C	Washer ...	2	—	C	
	E.B6.20.829	SKIN, LEADING EDGE, INTEGRAL TANK, BAY NO. 3, ASSEMBLY	1	—	—	U.4
		Spares for:—				
	E.A9.20.2767	ADAPTOR , water drain valve ...	1	—	—	U.4
	or					
	E.A9.20.47	ADAPTOR , water drain valve ...	1	—	—	U.4
25801	E.B6.20.847	COVER , access, fuel contents unit ...	1	—	C	U.4
		Attaching parts for E.B6.20.847:—				
1028	EEAS.1/3C	Screw, 2 BA ...	14	S.96	C	U.4
1034	EEAS.1/3E	Screw, ½" BSF ...	10	S.96	C	U.4
25799	E.B6.20.845	PLATE , landing, assembly ...	1	—	C/MR	U.4
		Attaching parts for E.B6.20.845:—				
3524	EEAS.134/2½C	Bolt, 2 BA ...	18	—	C	
22151	EEAS.135/2½E	Bolt, ½" BSF ...	14	—	C	
28M/1006473	A27/CT	Nut, 2 BA ...	18	—	C	
28M/1007403	A27/ET	Nut, ½" BSF ...	14	—	C	
28W/9419404	SP.16/C	Washer ...	18	—	C	
28W/9419487	SP.16/E	Washer ...	14	—	C	
2621	EEAS.104	VALVE , water drain ...	1	—	C	
		Attaching parts for EEAS.104:—				
5842	EEAS.134/2C	Bolt, 2 BA ...	2	—	C	
28M/1006473	A27/CT	Nut, 2 BA ...	2	—	C	
28W/9419402	SP.13/C	Washer ...	2	—	C	

TANKS
INTEGRAL FUEL TANK — WING, PORT

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	E.B6.20.831	SKIN, LEADING EDGE, INTEGRAL TANK, BAY NO. 4 ASSEMBLY						1	—	—	U.4
		Spares for:—									
25805	E.B6.20.915	COVER , access, fuel contents unit						1	—	C	
		Attaching parts for E.B6.20.915:—									
1028	EEAS.1/3C	Screw, 2 BA						14	S.96	C	U.4
1034	EEAS.1/3E	Screw, 1/4" BSF						10	S.96	C	U.4
25803	E.B6.20.913	PLATE , landing, assembly						1	—	C	U.4
		Attaching parts for E.B6.20.913:—									
3524	EEAS.134/2 1/2 C	Bolt, 2 BA						20	—	C	
22151	EEAS.135/2 1/2 E	Bolt, 1/4" BSF						12	—	C	
28M/1006473	A27/CT	Nut, 2 BA						20	—	C	
28M/1007403	A27/ET	Nut, 1/4" BSF						12	—	C	
28W/9419404	SP.16/C	Washer						20	—	C	
28W/9419487	SP.16/E	Washer						12	—	C	
2621	EEAS.104	VALVE , water drain						1	—	C	
		Attaching parts for EEAS.104:—									
5842	EEAS.134/2C	Bolt, 2 BA						2	—	C	
28M/1006473	A27/CT	Nut, 2 BA						2	—	C	
28W/9419402	SP.13/C	Washer						2	—	C	
	E.B6.20.833	SKIN, LEADING EDGE, INTEGRAL TANK, BAY NO. 5, ASSEMBLY						1	—	—	U.4
		Spares for:—									
	E.A9.20.2767 or	ADAPTER , water drain valve						1	—	—	U.4
41888	E.A9.20.47	ADAPTER , water drain valve						1	—	C	U.4
25809	E.B6.20.927	COVER , access, fuel contents unit						1	—	C	U.4
		Attaching parts for E.B6.20.927:—									
1028	EEAS.1/3C	Screw, 2 BA						14	—	C	U.4
1034	EEAS.1/3E	Screw, 1/4" BSF						10	—	C	U.4
25807	E.B6.20.925	PLATE , landing, assembly						1	—	C	U.4
		Attaching parts for E.B6.20.925:—									
3524	EEAS.134/2 1/2 C	Bolt, 2 BA						18	—	C	
22151	EEAS.135/2 1/2 E	Bolt, 1/4" BSF						16	—	C	
28M/1006473	A27/CT	Nut, 2 BA						18	—	C	
28M/1007403	A27/ET	Nut, 1/4" BSF						16	—	C	
28W/9419404	SP.16/C	Washer						18	—	C	
28W/9419487	SP.16/E	Washer						16	—	C	
2621	EEAS.104	VALVE , water drain						1	—	C	
		Attaching parts for EEAS.104:—									
5842	EEAS.134/2C	Bolt, 2 BA						2	—	C	
28M/1006473	A27/CT	Nut, 2 BA						2	—	C	
28W/9419402	SP.13/C	Washer						2	—	C	
21984	EEAS.20/3CU	TAB , locking						4	—	C	U.4
		Attaching parts for E.A1.20.3505:—									
2917	EEAS.1/3 1/2 E	Screw, 1/4" BSF						522	—	C	
18849	EEAS.1/5 1/2 G	Screw, 1/4" BSF						22	—	C	

TANKS
INTEGRAL FUEL TANK — WING, STARBOARD

Ref. No.	Part No.	Description	No. off	Mati Spec.	Cl. of Equip.	Plate No.
					M.R.	
		1 2 3 4 5 6				
17749	E.A1.20.3506	TANK, INTEGRAL, STARBOARD, ASSEMBLY ... (Supplied to Drg. E.B7.00.112 for spares purposes) Spares for:—	1	—	A	
21016	E.A1.20.5067	BLOCK , rubber, inboard	1	DTD.	C	U.4
21017	E.A1.20.5068	BLOCK , rubber, inboard	1	560	C	U.4
21018	E.A1.20.5069	BLOCK , rubber, outboard	1	Shore	C	U.4
21019	E.A1.20.5070	BLOCK , rubber, outboard	1	50-61	C	U.4
	E.A1.20.5003	BLOCK , rubber, sealing (Pre-Mod. 1463)	6	—	—	
21020	E.B6.20.751	BLOCK , rubber, sealing (Mod. 1463)	6	—	C	U.4
	or					
	E.B6.20.769	BLOCK , rubber, sealing	6	—	—	U.4
3523	EEAS.134/1½C SMITHS INSTRUMENTS	BOLT , special, sealing, 2 BA	525	S.91	C	U.4
6A/3020	JKB.1	BOX , terminal Attaching parts for JKB.1:—	2	—	A	
28D/1200119	A25/4C	Bolt, 2 BA	8	—	C	
28F/9429636	AGS.1186/3	Seal, bonded	8	—	C	
28E/9128961	AGS.605/1	CLIP , hose connection, securing	10	—	C	
2163	EEAS.112/15	CLIP , pipe, securing	3	—	C	
12333	E.A1.20.5201	CLIP , pipe, securing (Pre-Mod. 3432) Attaching parts for EEAS.112/15 and E.A1.20.5201:—	1	—	—	U.4
28D/1200119	A25/4C	Bolt, 2 BA (As required)	1	—	C	
28D/7002428	A25/6C	Bolt, 2 BA (As required)	1	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA (As required)	1	—	C	
28M/9433473	AGS.2002/C/1	Nut, 2 BA (As required)	1	—	C	
28F/9429636	AGS.1186/3	Seal, bonded (As required)	2	—	C	
18856	EEAS.27/56JR	Washer, sealing (As required)	2	—	C	
18638	E.A1.57.353	ELBOW , special, nitrogen connection (Pre-Mod. 3432)	1	DTD.133C	C/MR	U.4
18637	E.A1.57.354	ELBOW , special, nitrogen connection (Pre-Mod. 3432) Attaching parts for E.A1.57.353 and E.A1.57.354:—	1	DTD.133C	C/MR	U.4
28D/1214311	A25/17C	Bolt, 2 BA	1	—	C	
28D/1011021	A25/16C	Bolt, 2 BA	2	—	C	
28D/1200119	A25/4C	Bolt, 2 BA	7	—	C	
28F/9429636	AGS.1186/3	Seal, bonded	10	—	C	
	E.B6.20.1164	FUEL DRAIN ADAPTER, AFT INBOARD CORNER, INSTALLATION Spares for:—	—	—	—	
36599	E.B6.20.1165	ADAPTER , drain	1	—	C	
36598	E.B6.20.1168	CUP , suction fairing, drain	1	L.59	C	
	EEAS.77/72	HOSE , connection (Make from Ref. 32C/1275038)	4	BSF.67 Type 1	LM	U.4
21334	E.A1.57.783	HOSE , rubber, blanking tube connection (Make from Ref. 32C/1275038)	1	BSF.67 Type 1	LM	
12344	E.A1.20.5074	JOINT , tee, through main spar, nitrogen system (Pre-Mod. 3432)	1	L.54	C	
6929	E.A1.20.4424	PANEL, FUEL PUMP ACCESS, ASSEMBLY Spares for this assembly are identical with those for Ref. No. 6928 on Page UC.1	1	—	B	U.4
16107	E.A1.20.5313	PANEL, ACCESS, REAR WALL, ASSEMBLY	2	—	B	U.4
16106	E.A1.20.5311	PANEL, ACCESS, REAR WALL, ASSEMBLY	1	—	B	U.4
16028	E.A1.20.4801	PANEL, ACCESS, REAR WALL, ASSEMBLY Spares for:—	1	—	B	U.4
21040	E.A1.20.4927	RING , sealing Attaching parts for E.A1.20.5313, E.A1.20.5311 and E.A1.20.4801:—	1	—	C	
28M/7002430	AGS.2002/E/1	Nut, ½" BSF	28	—	C	
28W/9419405	SP.15/E	Washer	28	—	C	

TANKS
INTEGRAL FUEL TANK — WING, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
12336	E.A1.20.5155	PIPE, from outer elbow connection to tee piece (Pre-Mod. 3432)	1	L.56	C	U.4
12337	E.A1.20.5157	PIPE, from inner elbow connection to tee piece (Pre-Mod. 3432)	1	L.56	C	U.4
5UE/6788	PULSOMETER PUL.907 Mk.3	PUMP, fuel (Mod. 2611)	1	—	A	
28D/7002428	A25/6C	Attaching parts for PUL 907 Mk. 3:—				
28M/1278190	AGS.2001/C/1	Bolt, 2 BA	14	—	C	
6930	E.A1.20.5265	Nut, 2 BA	14	—	C	
28F/9429636	AGS.1186/3	Ring, nut	1	—	C	U.4
28V/9419475	SP.15/C	Seal, bonded	14	—	C	
		Washer	14	—	C	
34723	E.A1.20.5195	RING, packing, between rear wall elbow connection and tank (Pre-Mod. 3432)	2	DTD.118	C	U.4
5653	E.A1.57.1145	RING, sealing, at flanged elbow connection (Pre-Mod. 3432)	2	Hycar Rubber	C	U.4
15973	E.A1.20.4153	SEAL	1	Neo-K-Tex	C	U.4
6925	E.A6.20.251	SEAL	1	Petrolite	C	U.4
36261	E.A3.20.2611	SPIGOT	3	—	C	U.4
		Attaching parts for E.A3.20.2611:—				
37408	E.A3.20.2617	Bolt, special	4	—	C	U.4
36263	E.A3.20.2615	Shim, packing	1	—	C	U.4
	E.A1.20.3508	STRUCTURE, MAIN INTEGRAL TANK, ASSEMBLY (PRE-MOD. 1781)	—	—	—	
		Spare for:—				
12338	EEAS.134/3½C	BOLT, special, sealing, 2 BA	8	S.97	C	
	E.A1.20.5151	BRACKET, pipe clip support	7	—	—	
	E.A1.20.5152	BRACKET, pipe clip support	5	—	—	
		Attaching parts for E.A1.20.5151 and E.A1.20.5152:—				
28D/1008149	A25/2B	Bolt, 4 BA	2	—	C	
28M/1086618	AGS.2002/B/1	Nut, 4 BA	2	—	C	
28V/9419474	SP.15/B	Washer	2	—	C	
	SMITHS INSTRUMENTS PL/T/9/T	CABLE, fuel contents gauge terminal box to tank unit connector	2	—	C	
16480	E.B7.57.139	CAP, FILLER, ASSEMBLY, INBOARD	1	—	B/MR	U.5
		Consisting of:—				
1141	AS.2590	CAP, FILLER, ASSEMBLY	1	—	B	
		Consisting of:—				
	AS.2591	BASE	1	—	—	
12876	AS.2592	CAP	1	—	C	
28J/9432438	AS.5364	RING, sealing	1	—	C	
28E/9467497	TERRY-169-½"	RING, split key	1	—	C	
33693	E.B6.57.139	CAP, FILLER, ASSEMBLY, OUTBOARD (MOD. 2572)	1	—	B	U.5
		Consisting of:—				
1141	AS.2590	CAP, FILLER, ASSEMBLY	1	—	B	
		Consisting of:—				
	AS.2591	BASE	1	—	—	
12876	AS.2592	CAP	1	—	C	
28J/9432438	AS.5364	RING, sealing	1	—	C	
28E/9467497	TERRY-169-½"	RING, split key	1	—	C	U.5
		Attaching parts for E.B7.57.139 and E.B6.57.139:—				
16044	E.A1.20.4869	Bolt, special, 2 BA	5	—	C	
1025	EEAS.1/IC	Screw 2 BA	10	—	C	

TANKS
INTEGRAL FUEL TANK — WING, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.	
					M.R. L.M.		
2163	EEAS.112/15	CLIP	7	—	C	U.4	
16041	E.A1.20.4829	CLIP	2	—	C		
	E.A1.20.5153	CLIP (Make from Ref. 30B/778)	12	L.16	LM		
	E.B6.20.747	CLIP, special (Make from Ref. 30B/1732) Pre-Mod. 3432)	1	L.72	LM		
Attaching parts for EEAS.112/15, E.A1.20.4829, E.A1.20.5153 and E.B6.20.747:—							
28D/1010658	A25/1B	Bolt, 4 BA (As required)	1	—	C	U.4	
28D/1008149	A25/2B	Bolt, 4 BA (As required)	1	—	C		
28D/1009984	A25/7B	Bolt, 4 BA (As required)	1	—	C		
28D/9436920	A25/1C	Bolt, 2 BA (As required)	1	—	C		
28M/10327	AGS.2002/B/1	Nut, 4 BA (As required)	1	—	C		
28M/10328	AGS.2002/C/1	Nut, 2 BA (As required)	1	—	C		
	E.A3.20.1973	Piece, distance (As required)	1	—	—		
28W/9419474	SP.15/B	Washer (As required)	1	—	C		
28W/9419486	SP.16/B	Washer (As required)	1	—	C		
28W/9419475	SP.15/C	Washer (As required)	1	—	C		
	E.A1.20.5048	Washer, packing (As required)	1	—	—		
16032	E.A1.20.4820	CONDUIT, vent heater, bay No. 3	1	—	C		U.4
16171	E.A1.20.11032	CONDUIT, vent heater, bay No. 5	1	—	C/MR		U.4
16467	E.A6.57.22	CONNECTOR, rigid, tank unit, rib 5A to rib 5	1	—	C		U.4
16469	E.A6.57.24	CONNECTOR, rigid, tank unit, rib 3A to rib 3	1	—	C		
20786	E.A6.57.31	CONNECTOR, rigid, tank unit, cable to rib 3A ...	1	—	C		
16472	E.A6.57.34	CONNECTOR, rigid, tank unit, cable to rib 4B ...	1	—	C		
16475	E.A6.57.36	CONNECTOR, rigid, tank unit, rib 5 to unit ...	1	—	C		
16477	E.A6.57.38	CONNECTOR, rigid, tank unit, rib 3 to unit ...	1	—	C		
21725	E.B7.57.281	CONNECTOR, rigid, tank unit, rib 5A to rib 5B	1	—	C		
21726	E.B7.57.283	CONNECTOR, rigid, tank unit, rib 3A to rib 3B	1	—	C		
21729	E.B7.57.292	CONNECTOR, rigid, tank unit, rib 4B to rib 5A	1	—	C		
Attaching parts for E.A6.57.22, E.A6.57.24, E.A6.57.31, E.A6.57.34, E.A6.57.36, E.A6.57.38, E.B7.57.281, E.B7.57.283 and E.B7.57.292:—							
28D/9436920	A25/1C	Bolt, 2 BA (As required)	1	—	C	U.4	
28D/9133011	A25/2C	Bolt, 2 BA (As required)	1	—	C		
28D/9133012	A25/3C	Bolt, 2 BA (As required)	1	—	C		
28M/10288	AGS.2001/C/1	Nut, 2 BA (As required)	1	—	C		
28M/10328	AGS.2002/C/1	Nut, 2 BA (As required)	1	—	C		
28W/9419475	SP.15/C	Washer (As required)	1	—	C		
16241	E.B6.20.32	EXTENSION, nitrogen purging pipe, bay No. 5 (Pre-Mod. 3432)	2	—	C		
16245	E.B6.20.36	EXTENSION, vent pipe, bay No. 3	1	—	C	U.4	
16249	E.B6.20.40	EXTENSION, vent pipe, bay No. 4	1	—	C	U.4	
	E.B7.57.275	FAIRLEAD, at ribs 3A, 3B, 5A and 5	4	LFS.21	LM	U.4	
	E.B7.57.289	FAIRLEAD, at rib 3	1	LFS.21	LM	U.4	
Attaching parts for E.B7.57.275 and E.B7.57.289:—							
28D/1008149	A25/2B	Bolt, 4 BA	2	—	C	U.4	
28M/10327	AGS.2002/B/1	Nut, 4 BA	2	—	C		
28W/9419474	SP.15/B	Washer	2	—	C		
	EEAS.77/72	HOSE, rubber, coupling, nitrogen purging pipes (Make from Ref. 32C/376)	7	DTD.625	LM	U.4	
	E.A1.20.5410	PIPE, drain, assembly, inboard filler cap to fuel vent drain pipe tee	1	—	—		

TANKS
INTEGRAL FUEL TANK — WING, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A1.20.5418	PIPE, drain, assembly, outboard filler cap to fuel vent drain pipe tee	1	—	—	U.4
15987	E.A1.20.4279	PIPE, fuel pump compartment to bay No. 3 ...	1	—	C	U.4
16267	E.B6.20.388	PIPE, fuel, in bay No. 3 ...	1	—	C	U.4
	E.A1.20.5402	PIPE, fuel, vent drain, assembly, upper, bay No. 3	1	—	—	U.4
	E.A1.20.5406	PIPE, fuel, vent drain, assembly, lower, bay No. 3	1	—	—	U.4
	E.A1.20.5422	PIPE, fuel, vent drain, assembly, upper, bay No. 5	1	—	—	U.4
	E.A1.20.5414	PIPE, fuel, vent drain, assembly, lower, bay No. 5	1	—	—	U.4
16235	E.B6.20.26	PIPE, nitrogen purging, bay No. 2 (Pre-Mod. 3432)	1	—	C	U.4
16237	E.B6.20.28	PIPE, nitrogen purging, bay No. 2 (Pre-Mod. 3432)	1	—	C	U.4
16239	E.B6.20.30	PIPE, nitrogen purging, bay No. 2 (Pre-Mod. 3432)	1	—	C	U.4
16247	E.B6.20.38	PIPE, nitrogen purging, bay No. 4 (Pre-Mod. 3432)	1	—	C	U.4
16253	E.B6.20.44	PIPE, nitrogen purging, bay No. 4 (Pre-Mod. 3432)	1	—	C	U.4
16243	E.B6.20.34	PIPE, vent, bay No. 3 ...	1	—	C	U.4
16251	E.B6.20.42	PIPE, vent, bay No. 5 ...	1	—	C	U.4
16075	E.A1.20.5103	PLUG, screwed, slinging point blanking ...	3	—	C/MR	U.4
28R/9719126	AGS.566/B	PLUG, vent valve blanking ...	1	—	C	U.4
30996	E.B6.20.1157	RING, bolt, half, filler cap (Mod. 2572) ...	1	S.510	C/MR	U.5
15973	E.A1.20.4153	SEAL ...	2	Neo-K-Tex	C/MR	U.5
6927	E.A1.20.5099	SEAL ...	1	Neo-K-Tex	C	U.5
16042	E.A1.20.4831	SEAL, filler cap ...	2	Neo-K-Tex	C	U.5
16043	E.A1.20.4833	SEAL vent valve ...	2	Neo-K-Tex	C	U.5
15994	E.A1.20.4414	SKIN LEADING EDGE INTEGRAL TANK BAY NO. 2, ASSEMBLY (PRE-MOD. 1781) Spare parts for this assembly are identical with those for assembly Ref. No. 15993 on page UC.5	1	—	C/MR	U.5
16471	E.A6.57.29	SUPPORT, Cable ... Attaching parts for E.A6.57.29:—	2	—	C	U.5
28D/9419452	A25/3B	Bolt, 4 BA ...	2	—	C	U.5
28M/10327	AGS.2002/B/1	Nut, 4 BA ...	2	—	C	U.5
28W/9419474	SP.15/B	Washer ...	2	—	C	U.5
16470	E.A6.57.27	SUPPORT, connector ... Attaching parts for E.A6.57.27:—	2	—	C	U.4
28D/1008149	A25/2B	Bolt, 4 BA (As required) ...	3	—	C	U.4
28M/10327	AGS.2002/B/1	Nut, 4 BA ...	3	—	C	U.4
28W/9419474	SP.15/B	Washer ...	3	—	C	U.4
28F/8011811	AGS.1118/B	TEE, connection, vent drain pipes ...	2	—	C	U.4
30997	E.B6.20.1153	TUBE, fuelling ... Attaching parts for E.B6.20.1153:—	1	—	C	U.5
28D/9133011	A25/2C	Bolt, 2 BA ...	9	—	C	U.5
28M/1006473	A27/CT	Nut, 2 BA ...	5	—	C	U.5
28M/10328	AGS.2002/C/1	Nut, 2 BA ...	9	—	C	U.5
28W/9419402	SP.13/C	Washer ...	5	—	C	U.5
30998	E.B6.20.1159	Washer, clamping, bolt ring ...	4	L.72	C	U.5
16034	E.A1.20.4822	TUBE, static, vent, assembly ...	1	—	C	U.4

TANKS
INTEGRAL FUEL TANK — WING, STARBOARD

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip.		Plate No.
		1	2	3	4	5	6			M.R.	L.M.	
6A/3560	SMITH/ WAYMOUTH TB/113							1	—		B	
6A/3559	SMITH/ WAYMOUTH TB/112							1	—		B	
6A/3558	SMITH/ WAYMOUTH TB/111							1	—		B	
6A/3557	SMITH/ WAYMOUTH TB/110							1	—		B	
28445	E.A1.20.4533							1	—		C	U.4
30999	E.B6.20.1151							1	—		C	U.4
27173	E.A1.20.5119							1	Petrolite		C	U.4
28D/9133011	A25/2C							8	—		C	
28M/10328	AGS.2002/C/1							8	—		C	
28W/9419475	SP.15/C							6	—		C	
28444	E.B6.20.795							1	—		C	
27173	E.A1.20.5119							1	Petrolite		C	
28D/9133012	A25/3C							6	—		C	
28D/9140203	AS.1246/3C							2	—		C	
28M/10328	AGS.2002/C/1							8	—		C	
28W/9419475	SP.15/C							2	—		C	
28W/9419404	SP.16/C							2	—		C	
27120	E.A2.57.745							2	—		B	U.4
12017	E.A1.57.664							2	—		B	U.5
	E.A1.20.3988							—	—		—	
	E.A1.20.5275							1	—		—	
6930	E.A1.20.5265							1	—		C	
28W/9467259	AGS.568/B							1	—		C	
	E.B6.20.826							—	—		—	U.4
15994	E.A1.20.4414							1	—		C/MR	

TANKS
INTEGRAL FUEL TANK — WING, STARBOARD

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.B6.20.828	SKIN, LEADING EDGE INTEGRAL TANK, BAY NO. 2, ASSEMBLY	1	—	—	U.4
		Add:—				
		Spares for:—				
25797	E.B6.20.840	COVER, access, fuel, contents unit	1	—	C	U.4
		Attaching parts for E.B6.20.840:—				
1028	EEAS.1/3C	Screw, 2 BA	13	S.96	C	U.4
1034	EEAS.1/3E	Screw, 1/4" BSF	12	S.96	C	U.4
25795	E.B6.20.838	PLATE, landing, access cover, assembly	1	—	C/MR	U.4
		Attaching parts for E.B6.20.838:—				
22151	EEAS.135/2 1/2 E	Bolt, 1/2" BSF	14	—	C	
3524	EEAS.134/2 1/2 C	Bolt, 2 BA	20	—	C	
28M/1006473	A27/CT	Nut, 2 BA	20	—	C	
28M/1007403	A27/ET	Nut, 1/2" BSF	14	—	C	
28V/9419404	SP.16/C	Washer	20	—	C	
28V/9419487	SP.16/E	Washer	14	—	C	
20770	E.B6.20.755	PLATE, nut, fuel pump, access cover, attachment	2	—	C	U.4
		Attaching parts for E.B6.20.755:—				
28S/11429	No.4 x 1/8"	Screw, self-tapping, type 4100 (Pre-Mod. 1715)	8	—	C	
28S/6233	No.4 x 1/4"	Screw, self-tapping, type 4100 (Mod. 1715) ...	8	—	C	
20771	E.B6.20.757	PLATE, nut, fuel pump, access cover, attachment	2	—	C	U.4
		Attaching parts for E.B6.20.757:—				
28S/11429	No.4 x 1/8"	Screw, self-tapping, type 4100 (Pre-Mod. 1715)	12	—	C	
28S/6233	No.4 x 1/4"	Screw, self-tapping, type 4100 (Mod. 1715) ...	12	—	C	
6926	E.B6.20.279	RING, sealing, fuel pump, access cover	1	—	C	U.4
2621	EEAS.104	VALVE, water drain	3	—	C	
		Attaching parts for EEAS.104:—				
5842	EEAS.134/2C	Bolt, 2 BA	2	—	C	
28M/1006473	A27/CT	Nut, 2 BA	2	—	C	
28V/9419404	SP.16/C	Washer	2	—	C	
	E.B6.20.830	SKIN, LEADING EDGE INTEGRAL TANK, BAY NO. 3, ASSEMBLY	1	—	—	U.4
		Spares for:—				
	E.A9.20.2767	ADAPTOR, water drain valve	1	—	—	U.4
	or					
	E.A9.20.47	ADAPTOR, water drain valve	1	—	C	U.4
25802	E.B6.20.848	COVER, access, fuel contents unit	1	—	C	U.4
		Attaching parts for E.B6.20.848:—				
1028	EEAS.1/3C	Screw, 2 BA	14	S.96	C	U.4
1034	EEAS.1/3E	Screw, 1/4" BSF	10	S.96	C	U.4
25800	E.B6.20.846	PLATE, landing, assembly	1	—	C/MR	U.4
		Attaching parts for E.B6.20.846:—				
3524	EEAS.134/2 1/2 C	Bolt, 2 BA	18	—	C	
22151	EEAS.135/2 1/2 E	Bolt, 1/2" BSF	14	—	C	
28M/1006473	A27/CT	Nut, 2 BA	18	—	C	
28M/1007403	A27/ET	Nut, 1/2" BSF	14	—	C	
28V/9419404	SP.16/C	Washer	18	—	C	
28V/9419487	SP.16/E	Washer	14	—	C	

TANKS
INTEGRAL FUEL TANK — WING, STARBOARD

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
2621	EEAS.104	VALVE, water drain						1	—	C	
		Attaching parts for EEAS.104:—									
5842	EEAS.134/2C	Bolt; 2 BA						2	—	C	
28M/1006473	A27/CT	Nut; 2 BA						2	—	C	
28W/9419402	SP.13/C	Washer						2	—	C	
	E.B6.20.832	SKIN, LEADING EDGE, INTEGRAL TANK, BAY NO. 4 ASSEMBLY						1	—	—	U.4
		Spares for:—									
25806	E.B6.20.916	COVER, access, fuel contents unit						1	—	C	
		Attaching parts for E.B6.20.916:—									
1028	EEAS.1/3C	Screw; 2 BA						14	S.96	C	U.4
1034	EEAS.1/3E	Screw; 1/4" BSF						10	S.96	C	U.4
25804	E.B6.20.914	PLATE, landing, assembly						1	—	C	U.4
		Attaching parts for E.B6.20.914:—									
3524	EEAS.134/2 1/2 C	Bolt; 2 BA						20	—	C	
22151	EEAS.135/2 1/2 E	Bolt; 1/2" BSF						12	—	C	
28M/1006473	A27/CT	Nut; 2 BA						20	—	C	
28M/1007403	A27/ET	Nut; 1/4" BSF						12	—	C	
28W/9419404	SP.16/C	Washer						20	—	C	
28W/9419487	SP.16/C	Washer						12	—	C	
2621	EEAS.104	VALVE, water drain						1	—	C	
		Attaching parts for EEAS.104:—									
5842	EEAS.134/2C	Bolt; 2 BA						2	—	C	
28M/1006473	A27/CT	Nut; 2 BA						2	—	C	
28W/9419402	SP.13/C	Washer						2	—	C	
	E.B6.20.834	SKIN, LEADING EDGE, INTEGRAL TANK, BAY NO. 5, ASSEMBLY						1	—	—	U.4
		Spares for:—									
	E.A9.20.2767	ADAPTER, water drain valve						1	—	—	U.4
	or										
41888	E.A9.20.47	ADAPTER, water drain valve						1	—	—	U.4
25810	E.B6.20.928	COVER, access, fuel contents unit						1	—	C	U.4
		Attaching parts for E.B6.20.928:—									
1028	EEAS.1/3C	Screw; 2 BA						14	—	C	U.4
1034	EEAS.1/3E	Screw; 1/4" BSF						10	—	C	U.4
25808	E.B6.20.926	PLATE, landing, assembly						1	—	C	U.4
		Attaching parts for E.B6.20.926:—									
3524	EEAS.134/2 1/2 C	Bolt; 2 BA						18	—	C	
22151	EEAS.135/2 1/2 E	Bolt; 1/2" BSF						16	—	C	
28M/1006473	A27/CT	Nut; 2 BA						18	—	C	
28M/1007403	A27/ET	Nut; 1/4" BSF						16	—	C	
28W/9419404	SP.16/C	Washer						18	—	C	
28W/9419487	SP.16/E	Washer						16	—	C	
2621	EEAS.104	VALVE, water drain						1	—	C	
		Attaching parts for EEAS.104:—									
5842	EEAS.134/2C	Bolt; 2 BA						2	—	C	
28M/1006473	A27/CT	Nut; 2 BA						2	—	C	
28W/9419402	SP.13/C	Washer						2	—	C	
21984	EEAS.20/3CU	TAB, locking						4	—	C	U.4
		Attaching parts for E.A1.20.3506:—									
2917	EEAS.1/3 1/2 E	Screw; 1/2" BSF						522	—	C	
18849	EEAS.1/5 1/2 G	Screw; 3/8" BSF						22	—	C	


TANKS
300 GALLON FUEL TANK

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
	E.A3.56.453	INSTALLATION OF 300 GALLON FUEL TANK ...	—	—	—	—	
	E.A3.56.221	TANK, FUEL, 300 GALLON, ASSEMBLY ...	1	—	—	—	
12601	E.A3.56.261	BRACKET AND STRAP, ASSEMBLY ...	4	—	B	—	U.3
12602	E.A3.56.361	BRACKET, sub-assembly ...	1	—	—	—	
	E.A3.56.363	STRAP, tank ...	1	—	C	—	
28D/	A25/47N	Bolt, 1/2" BSF (Make from A25/48N) ...	1	—	C	—	
	E.A3.56.465	Bush ...	2	—	—	—	U.3
	E.A3.56.467	Link, plate ...	2	—	—	—	
28M/13259	A27/NS	Nut, 1/2" BSF ...	1	—	C	—	
	E.A3.56.463	Tube, distance ...	1	—	—	—	U.3
28W/9419468	SP.13/N	Washer ...	2	—	C	—	
28D/	A25/38J	Bolt, 1/2" BSF (Make from A25/39J) ...	1	—	C	—	
28D/	A25/38L	Bolt, 1/2" BSF (Make from A25/39L) ...	1	—	C	—	
28M/1011476	A27/JS	Nut, 1/2" BSF ...	1	—	C	—	
28M/9129449	A27/LS	Nut, 1/2" BSF ...	1	—	C	—	
28W/9419466	SP.13/J	Washer ...	2	—	C	—	
28W/9419467	SP.13/L	Washer ...	2	—	C	—	
	EEAS.164/16/25	HOSE, rubber, 1" i/d. x 2"5 long, vent pipe (Make from Ref. 32C/376)	2	DTD.625	LM	—	U.2
12603	E.A3.56.245	PIPE, assembly, fuel, from non-return valve to fuel cock, starboard side	1	L.54 or L.56	C	—	U.2
12604	E.A3.56.247	PIPE, assembly, fuel, from non-return valve to fuel cock, port side	1	L.54 or L.56	C	—	U.2
12606	E.A3.56.249	PIPE, assembly, venting, from pipe elbow joint to No. 3 fuel tank junction pipe	1	L.56	C	—	U.3
12605	E.A3.56.251	PIPE, elbow venting ...	1	L.56	C	—	U.3
1444	EEAS.66/3	RING, clamping ...	4	L.56	C	—	U.3
12609	E.A3.56.45	SCREW, trunnion ...	2	S.95	C	—	U.3
12592	E.A3.56.243	TANK, ASSEMBLY ...	1	—	A	—	
	E.A3.81.2689	CABLE, ASSEMBLY, CS3, from aft fuel pump to suppressor	1	—	—	—	U.2
	E.A3.81.2691	CABLE, ASSEMBLY, CS4, from forward fuel pump to suppressor	1	—	—	—	U.2
	E.A3.81.2527	CABLE, ASSEMBLY, CS2A, from suppressor to junction box	1	—	—	—	U.2
28J/9508352	AS.2398	CAP, filler, assembly ...	1	—	B	—	U.3
28M/10288	AGS.2001/C/1	Nut, stiff, 2 BA ...	12	—	C	—	
26724	E.A3.56.291	Ring, sealing ...	1	—	C	—	U.3
28W/9419475	SP.15/C	Washer ...	12	—	C	—	
	E.A3.56.119	CARTRIDGE, moisture absorber ...	1	—	LM	—	U.3
	E.A3.56.107	CLIP, fuel pipe ...	2	L.72	—	—	U.3
28D/9133011	A25/2C	Bolt ...	2	—	C	—	
28W/9419402	SP.13/C	Washer ...	2	—	C	—	

TANKS
300 GALLON FUEL TANK


Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip.		Plate No.
		1	2	3	4	5	6			M.R.	L.M.	
28F/8011809 12593	AGS.1104/B E.A3.56.171							2	—	C		
								1	L.59	B	U.3	
28D/9133012 12596 12598	A25/3C E.A3.56.103 E.A3.56.117							10	—	C		
								1	L.72	C	U.3	
								2	Neo-K-Tex	C	U.3	
27Q/10454	DOWTY SP.815/2							10	—	C		
	E.A3.56.81							2	L.72	—	U.2	
28M/10288 12597	AGS.2001/C/1 E.A3.56.83							14	—	C		
28W/9419475	SP.15/C							2	Neo-K-Tex	C	U.2	
								14	—	C		
28F/8216 12594	AGS.1142/J E.A3.56.283							2	—	C		
								1	L.56	C	U.2	
	12595							1	L.56	C	U.2	
	E.A3.56.433							2	L.56	—	U.3	
5UE/6787	PULSOMETER PUL.1003 Mk.4							2	—	A	U.3	
28M/10288 12597	AGS.2001/C/1 E.A3.56.83							14	—	C		
28W/9419475	SP.15/C							1	Neo-K-Tex	C	U.3	
								14	—	C		
	12600							1	—	C	U.3	
28D/1200119	A25/4C DOWTY SP.815/2							34	—	C		
27Q/10454 12599	E.A3.56.479							34	—	C		
28W/9419475	SP.15/C							1	Neo-K-Tex	C	U.3	
								34	—	C		
5CY/2967	†							2	—	A		
28S/13573	A39/B20							4	—	C		
28Y/11843	AS.3573							1	—	C		
28M/10288 28W/9419475 28W/12509	AGS.2001/C/1 SP.15/C AS.410							8	—	C		
								8	—	C		
								1	Neo-K-Tex	C		
	K.A.C. LTD. C.3191							1	—	—	U.3	
12607	E.A3.56.47							2	S.95	C	U.3	
12608	E.A3.56.49							2	S.95	C	U.3	
	SELF PRIMING ENG. CO. LTD. SPE.1706							2	—	A		
27F/2152								2	—	A		
27F/5178	†							2	—	A		

Plate UI

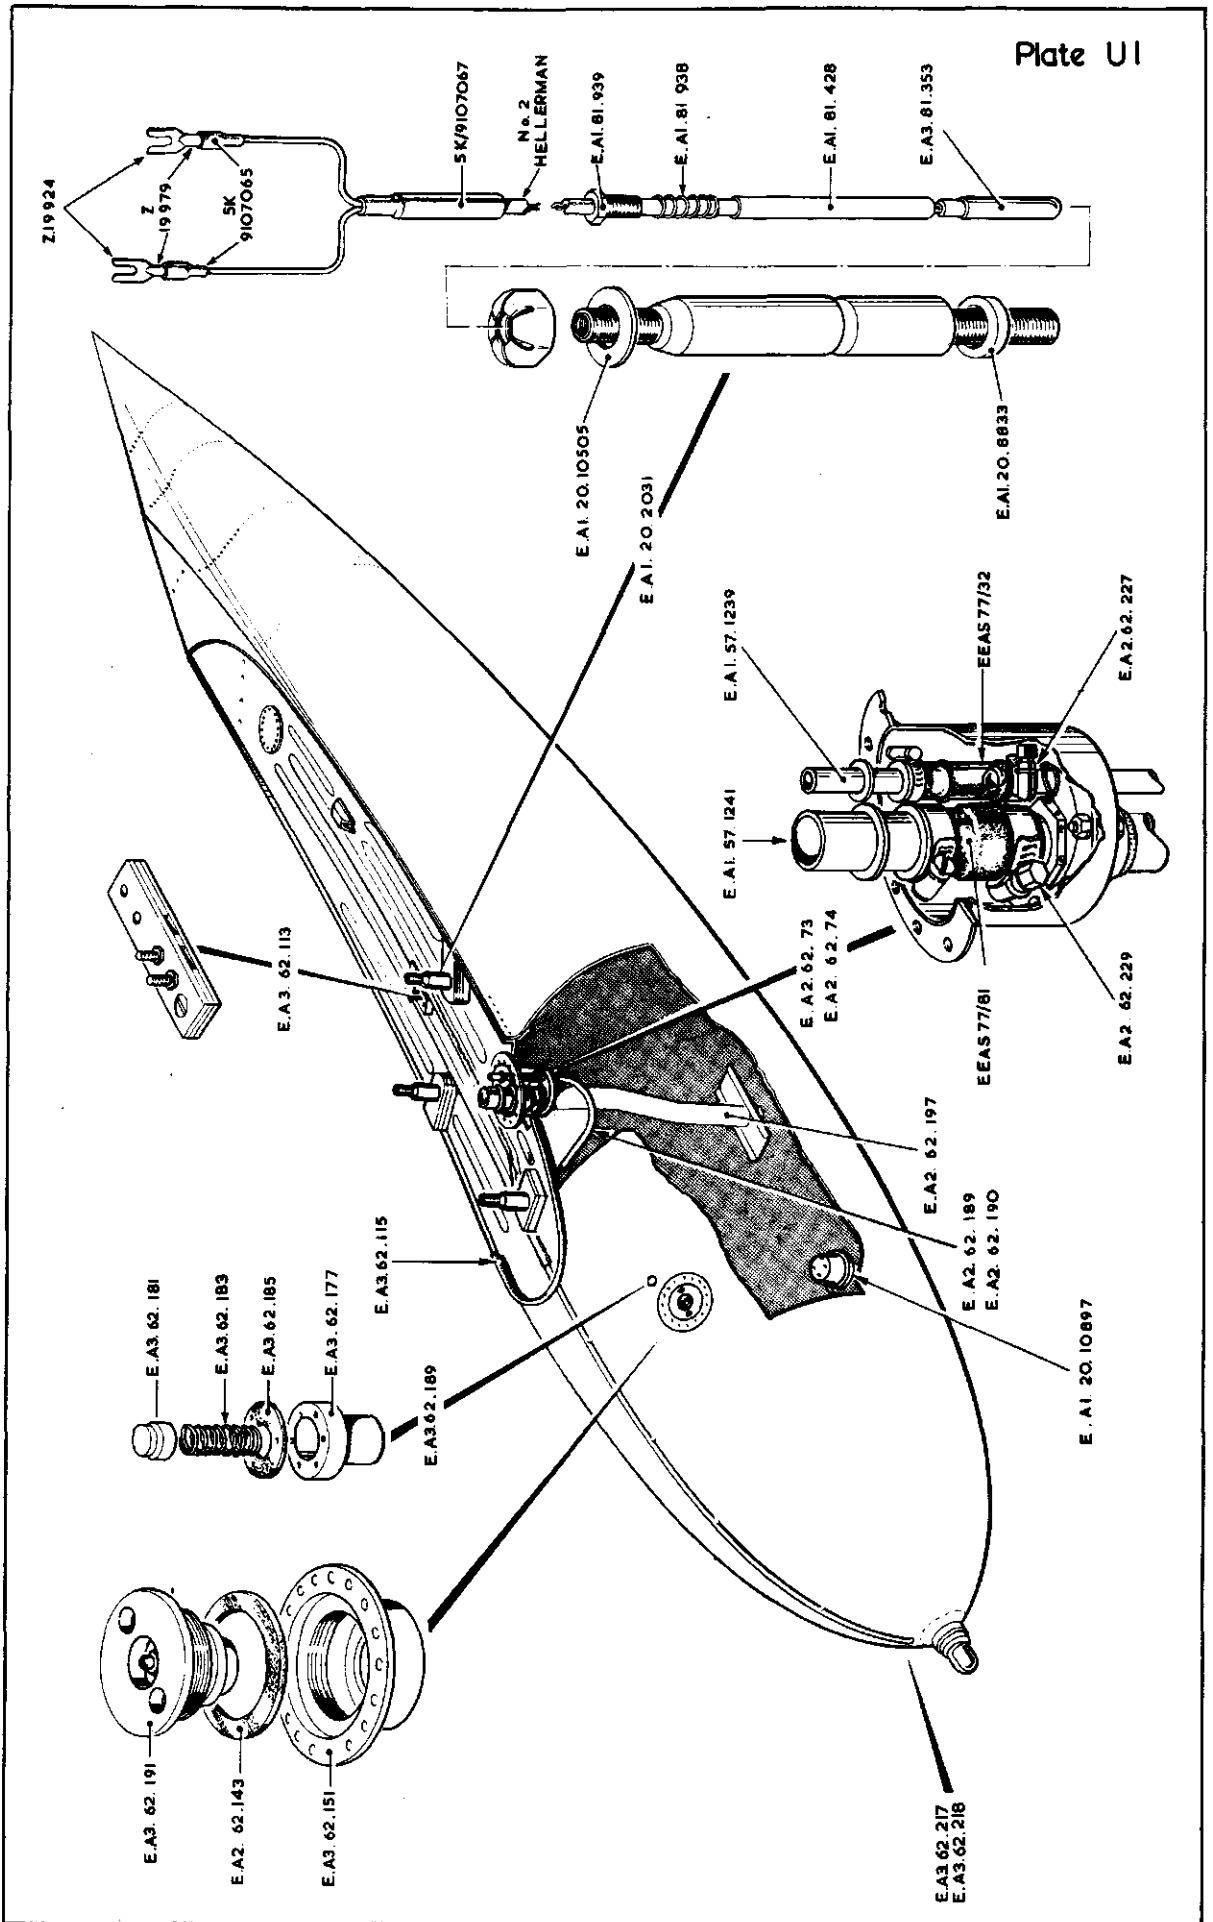


JETTISONABLE WING FUEL TANK


Plate U2

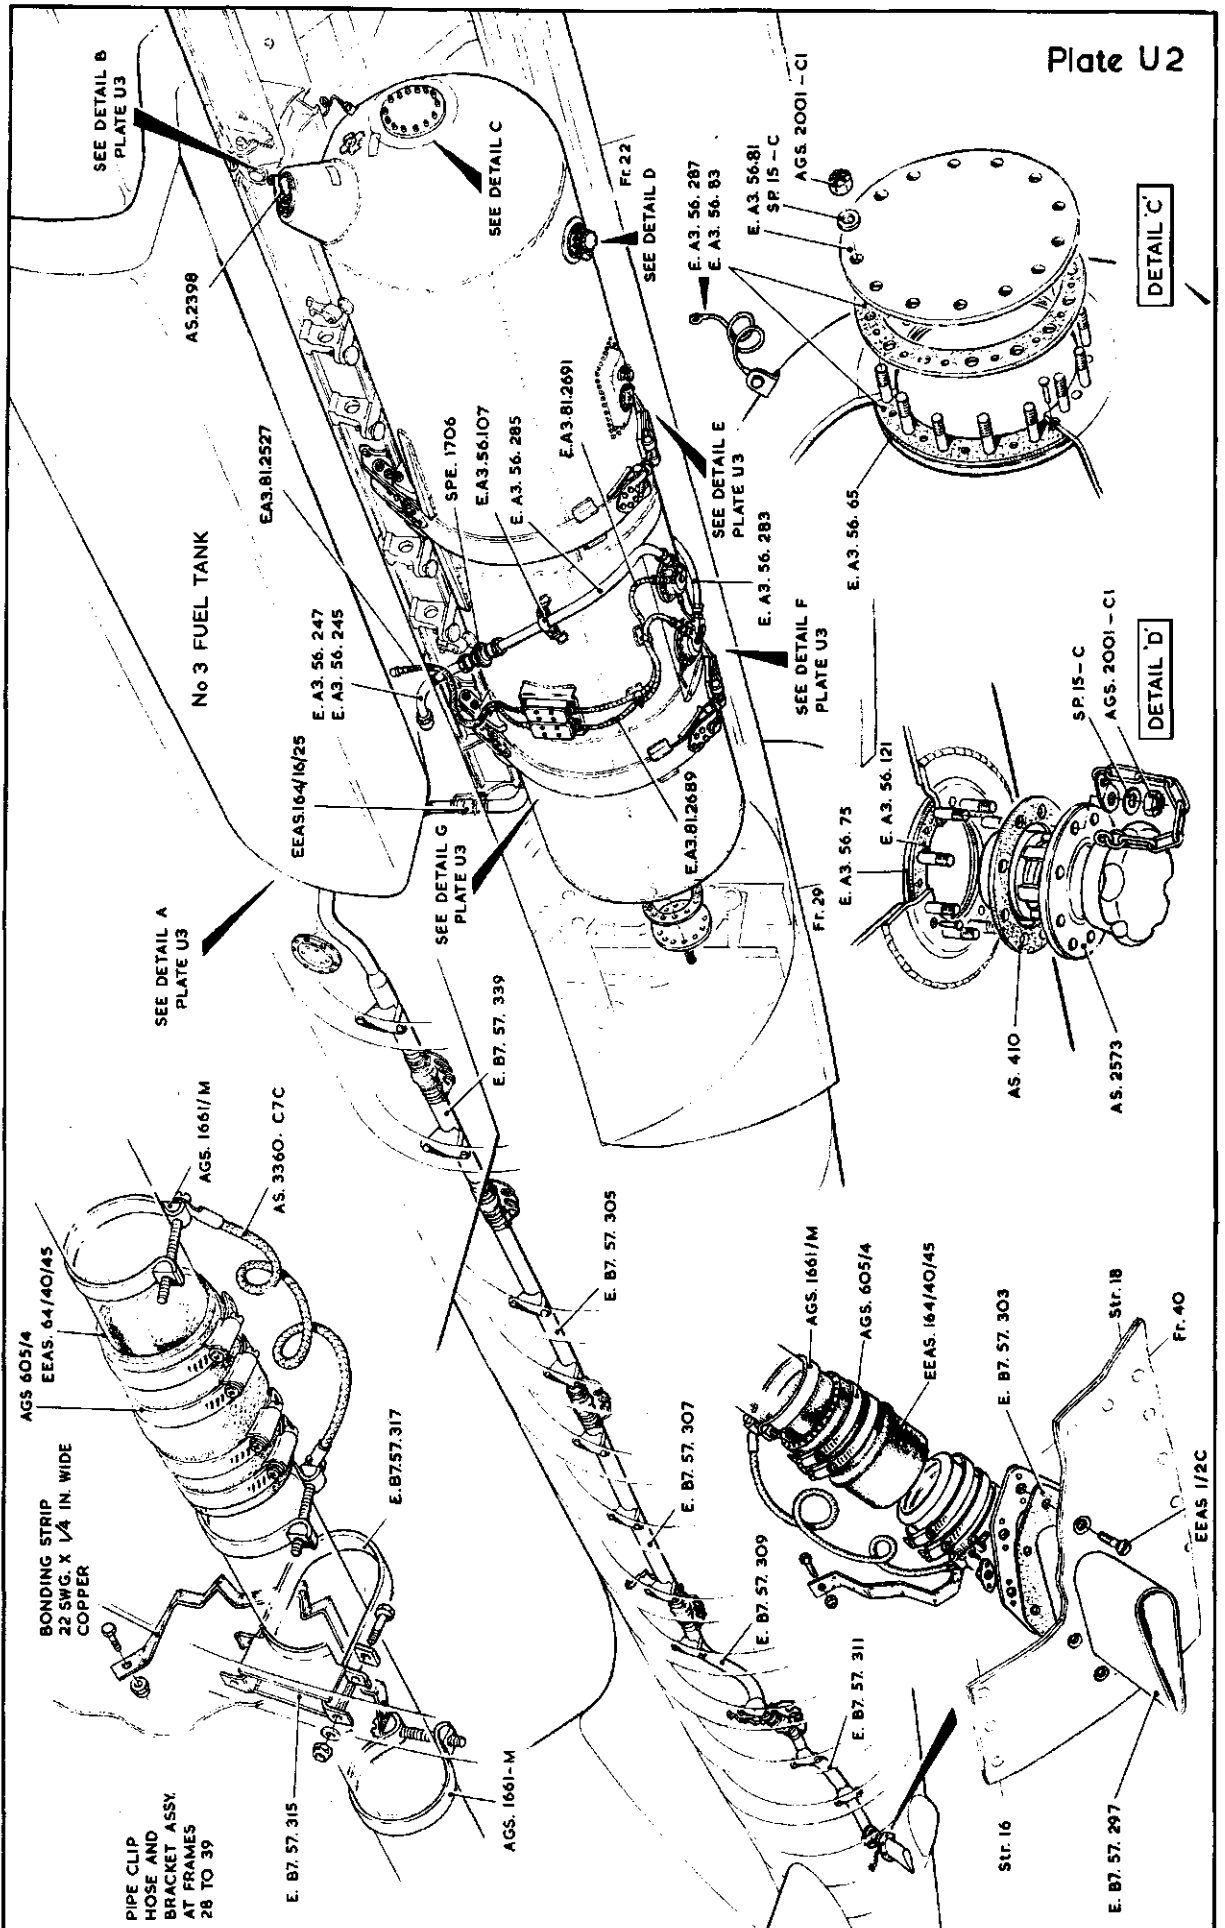

300 GALLON FUEL TANK

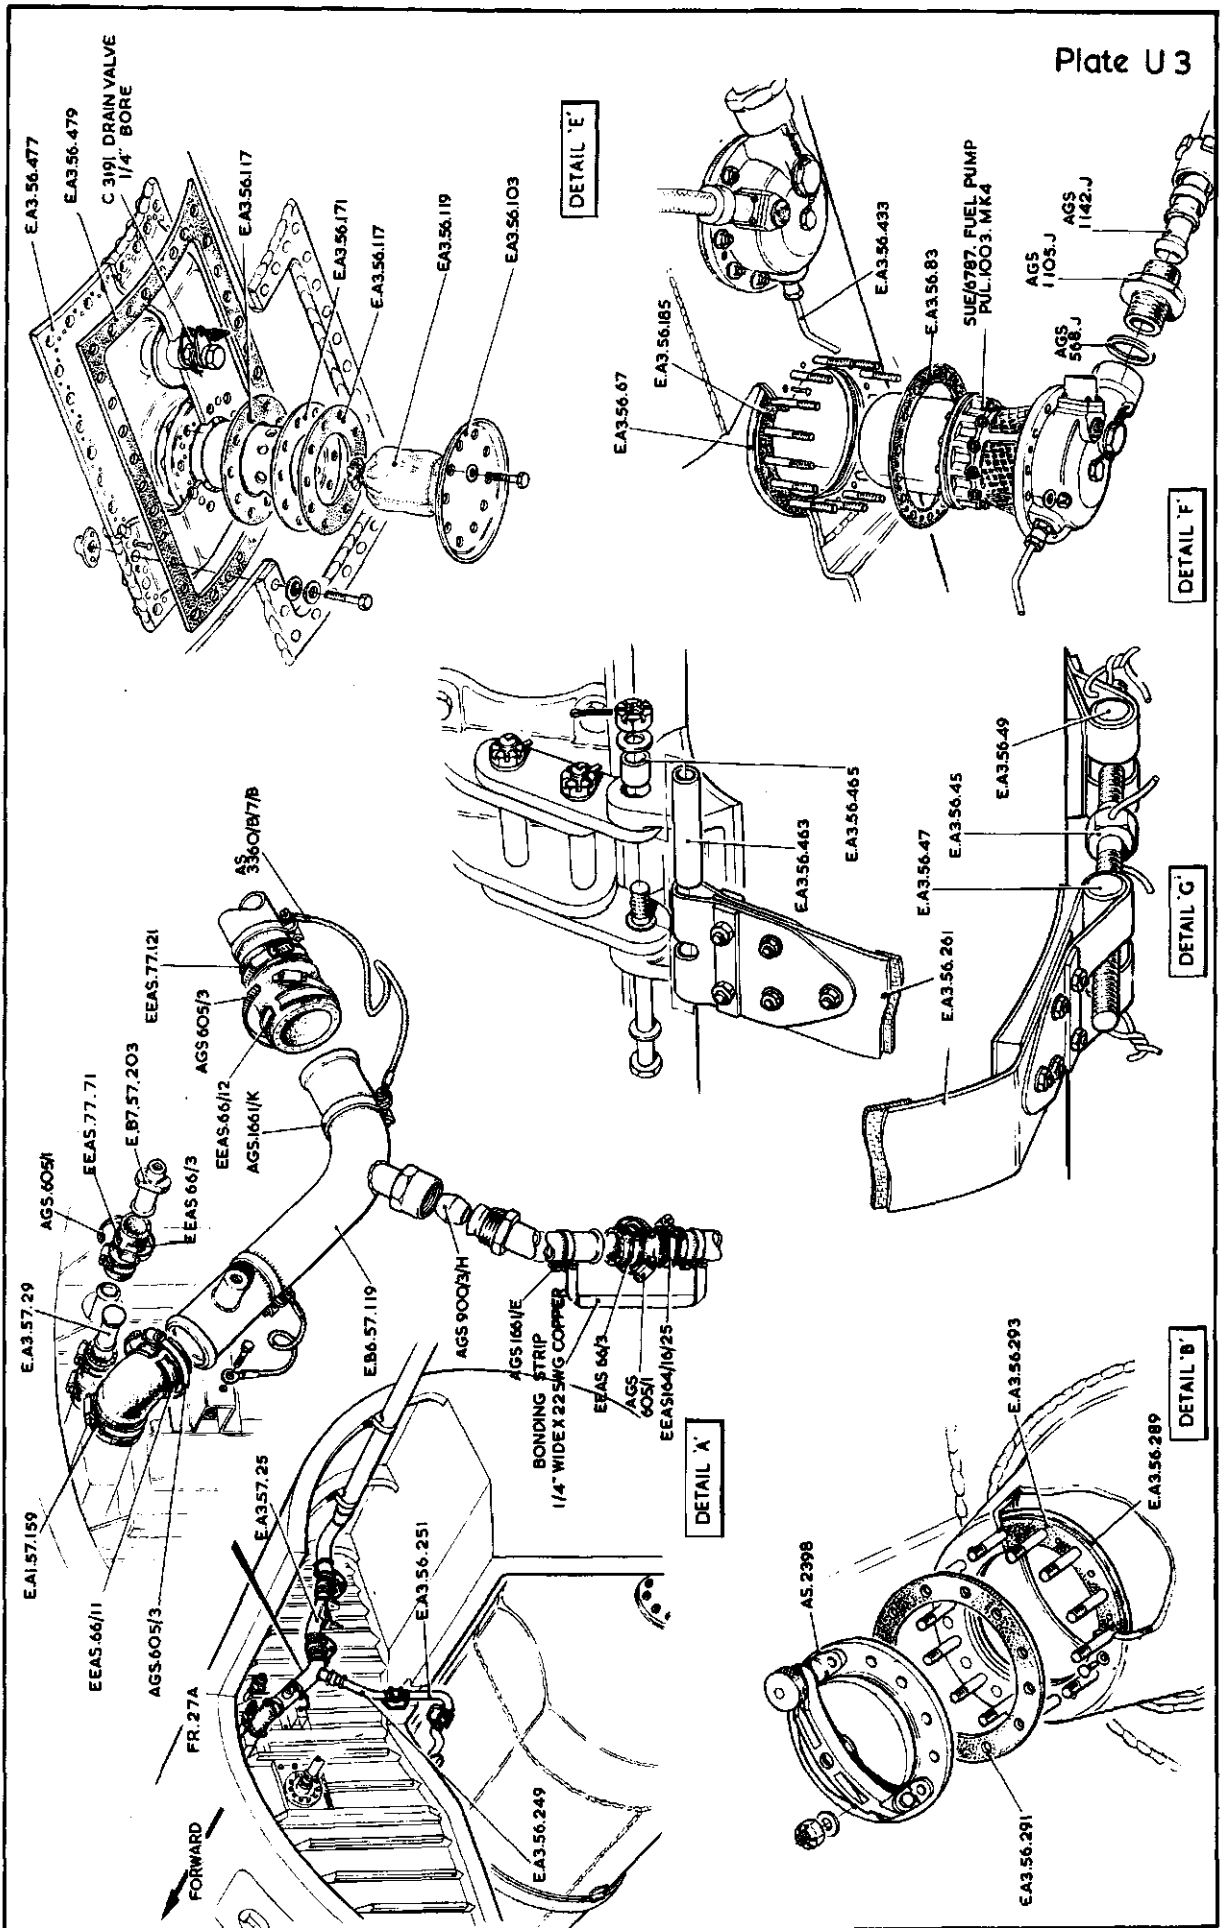

300 GALLON FUEL TANK DETAILS

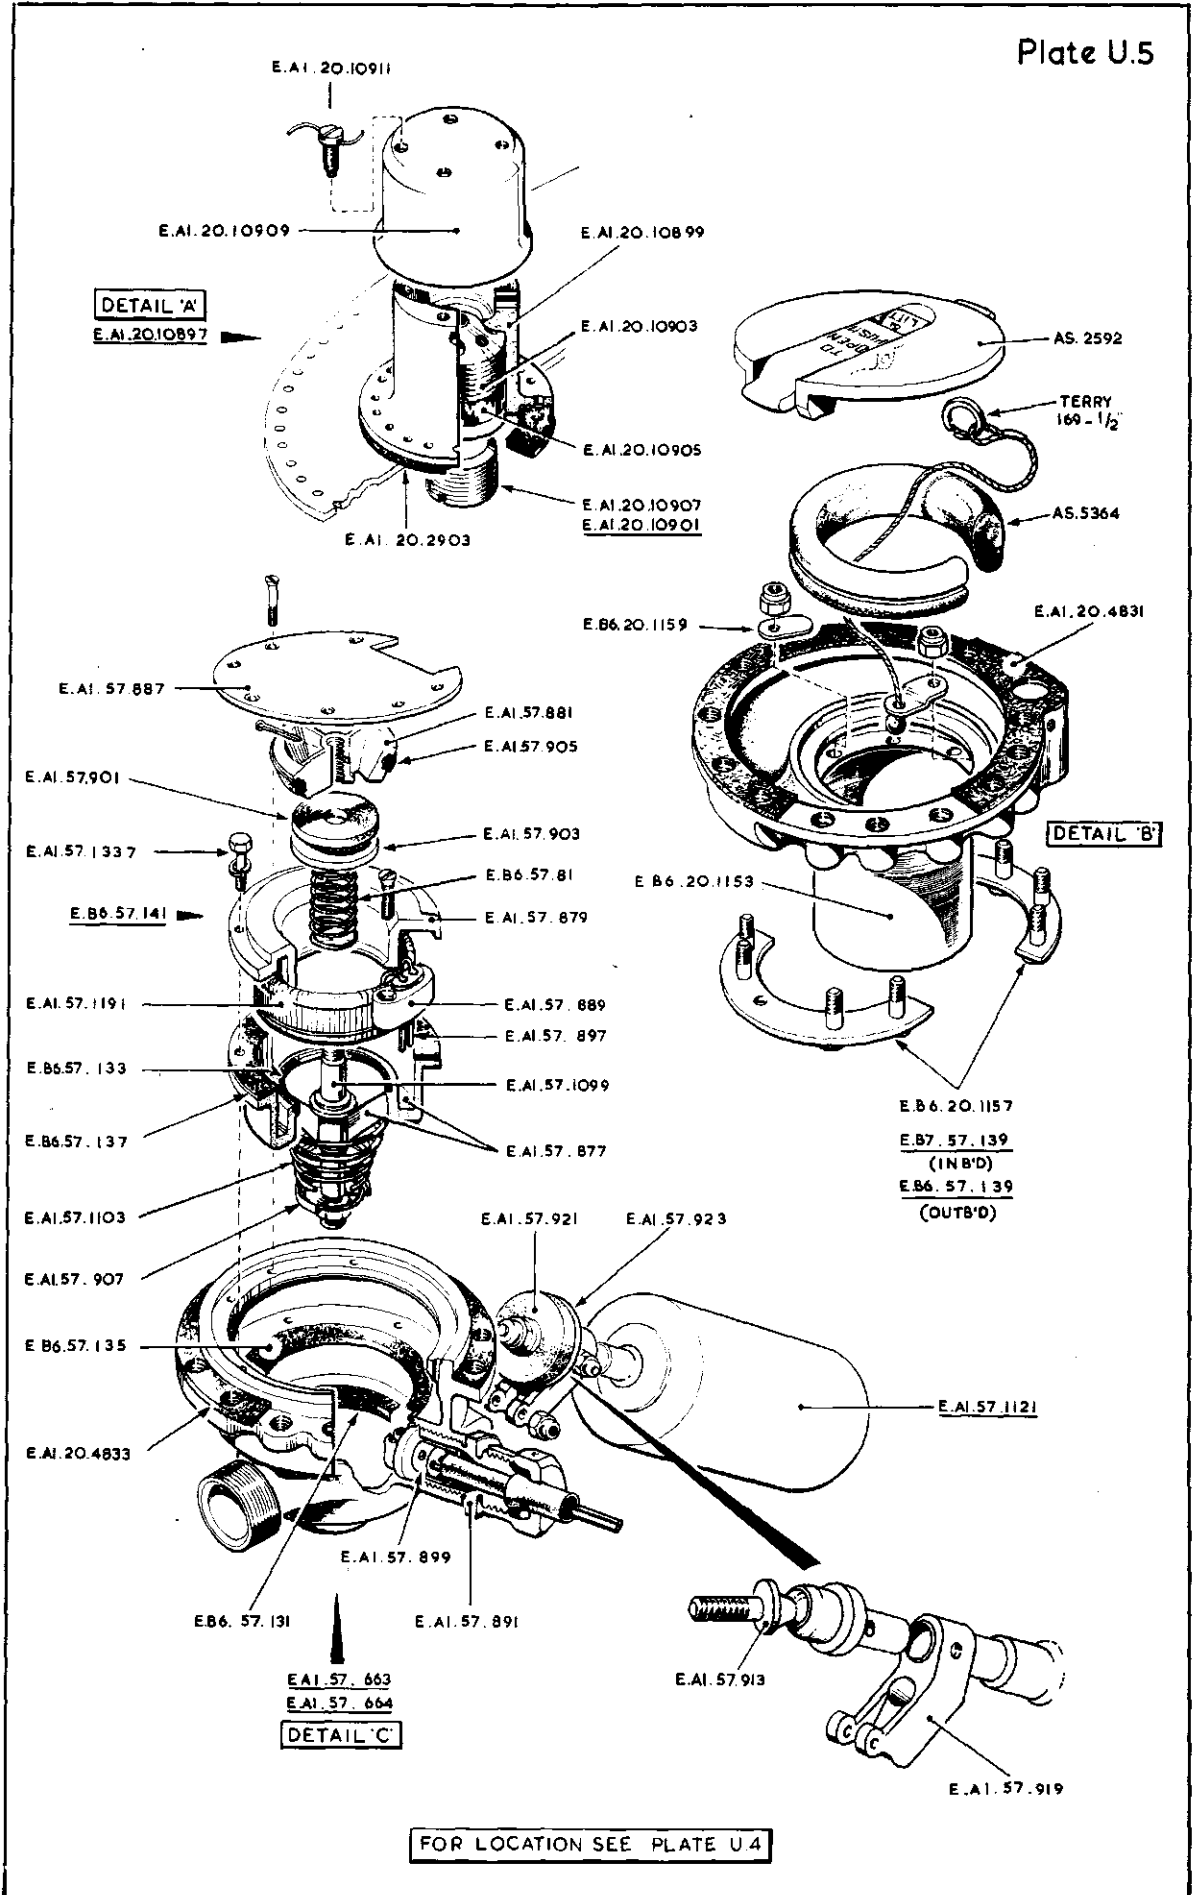

INTEGRAL TANKS - DETAIL

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

