

Fig. 1. Control panel

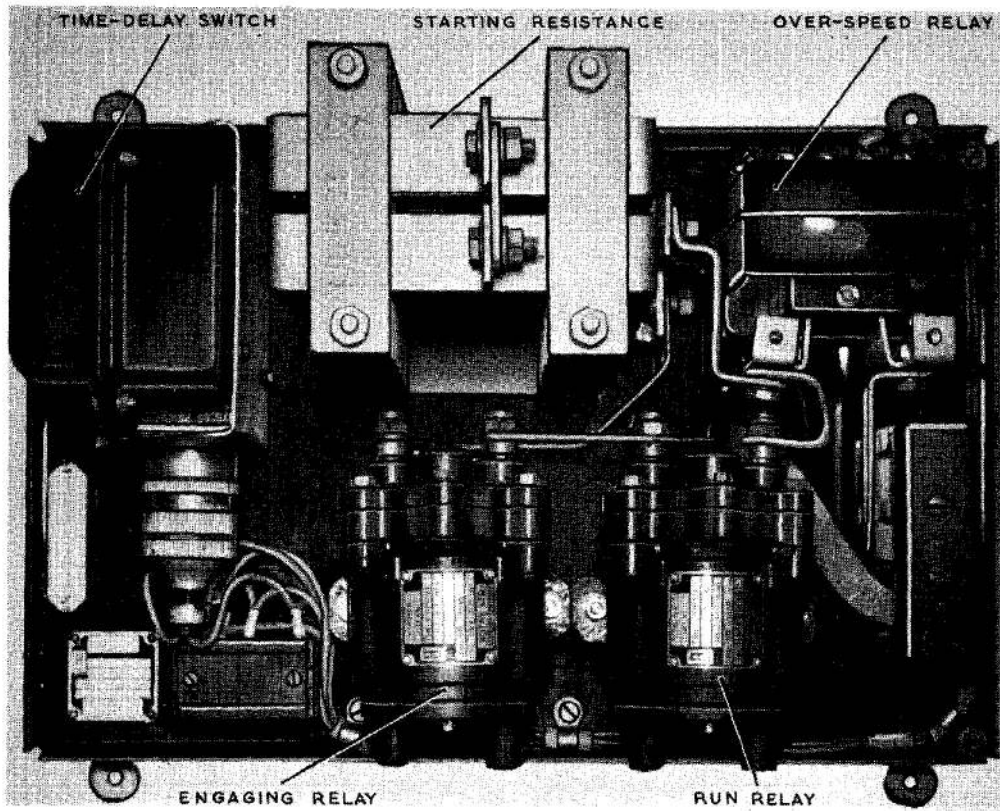


Fig. 2. Start panel

RESTRICTED

trolley to the stand-by condition, in preparation for a four engine start, is referred to in Sect. 1, Chap. 2, Para's 15 to 20 of this Air Publication.

5. The following sequence of events should follow the operation of the START PUSH buttons, which should be pressed at one second intervals:

(1) The high energy ignition units to be supplied via the master switch, 15A circuit breakers, 24V supply control switches, start pushes, ignition switches and the small poles of the N.A.T.O. plugs and sockets.

(2) The first stage engaging relay should close, being supplied via time delay switch terminal B and the normally closed contacts No. 1.

(3) The starter motors should now begin to run, being supplied from the 120V battery bank via the isolating contactors engaging relays, starting resistances, overspeed relay coils and the N.A.T.O. sockets.

(4) The POWER TO AIRCRAFT indicator should also be illuminated.

(5) Starter motor current flowing through the overspeed relay coils will close their contacts, followed by:

(a) The time delay switch winding operation. The coil is supplied initially through the time delay switch contacts No. 3, after three seconds, No. 4 contacts close and No. 3 open, winding is completed via No. 4 contacts which should then open.

(b) The START IN PROGRESS indicator should light.

(c) The start pushes should be held in the de-pressed position by their energized coils.

6. Due to the subsequent closing of contacts 2 of the time delay switch, the timing of which may be seen in A.P.4343C, Vol. 1, Book 2, Sect. 3, the motor speeds will accelerate until the self sustaining speeds of the engines are reached.

7. The starting cycle is terminated by one of the following:—


(1) Opening of the overspeed relays due to the high motor speeds reducing the current in the overspeed relay coils to a point where the contacts open, so causing the start push buttons to be re-set to normal due to the de-energizing of their coils. The 24V supplies to the start panels will now be cut-off, which will de-energize the stage relays. Supply to the high energy ignition units will also terminate when the start push contacts open.

(2) Opening of time delay switch contacts No. 2 will cause the overspeed relays to open, so terminating the starting cycles as in para. 7 (1).

8. The time delay switches continue to unwind, finally coming to rest with the contacts re-set to the position shown in the circuit diagram.

#### SERVICING

9. The general servicing of the trolley and chassis is referred to in Sect. 1, Chap. 2 of this publication. Control panel servicing is given in A.P.4343C, Vol. 1, Book 3, Sect. 8, Chap. 5.

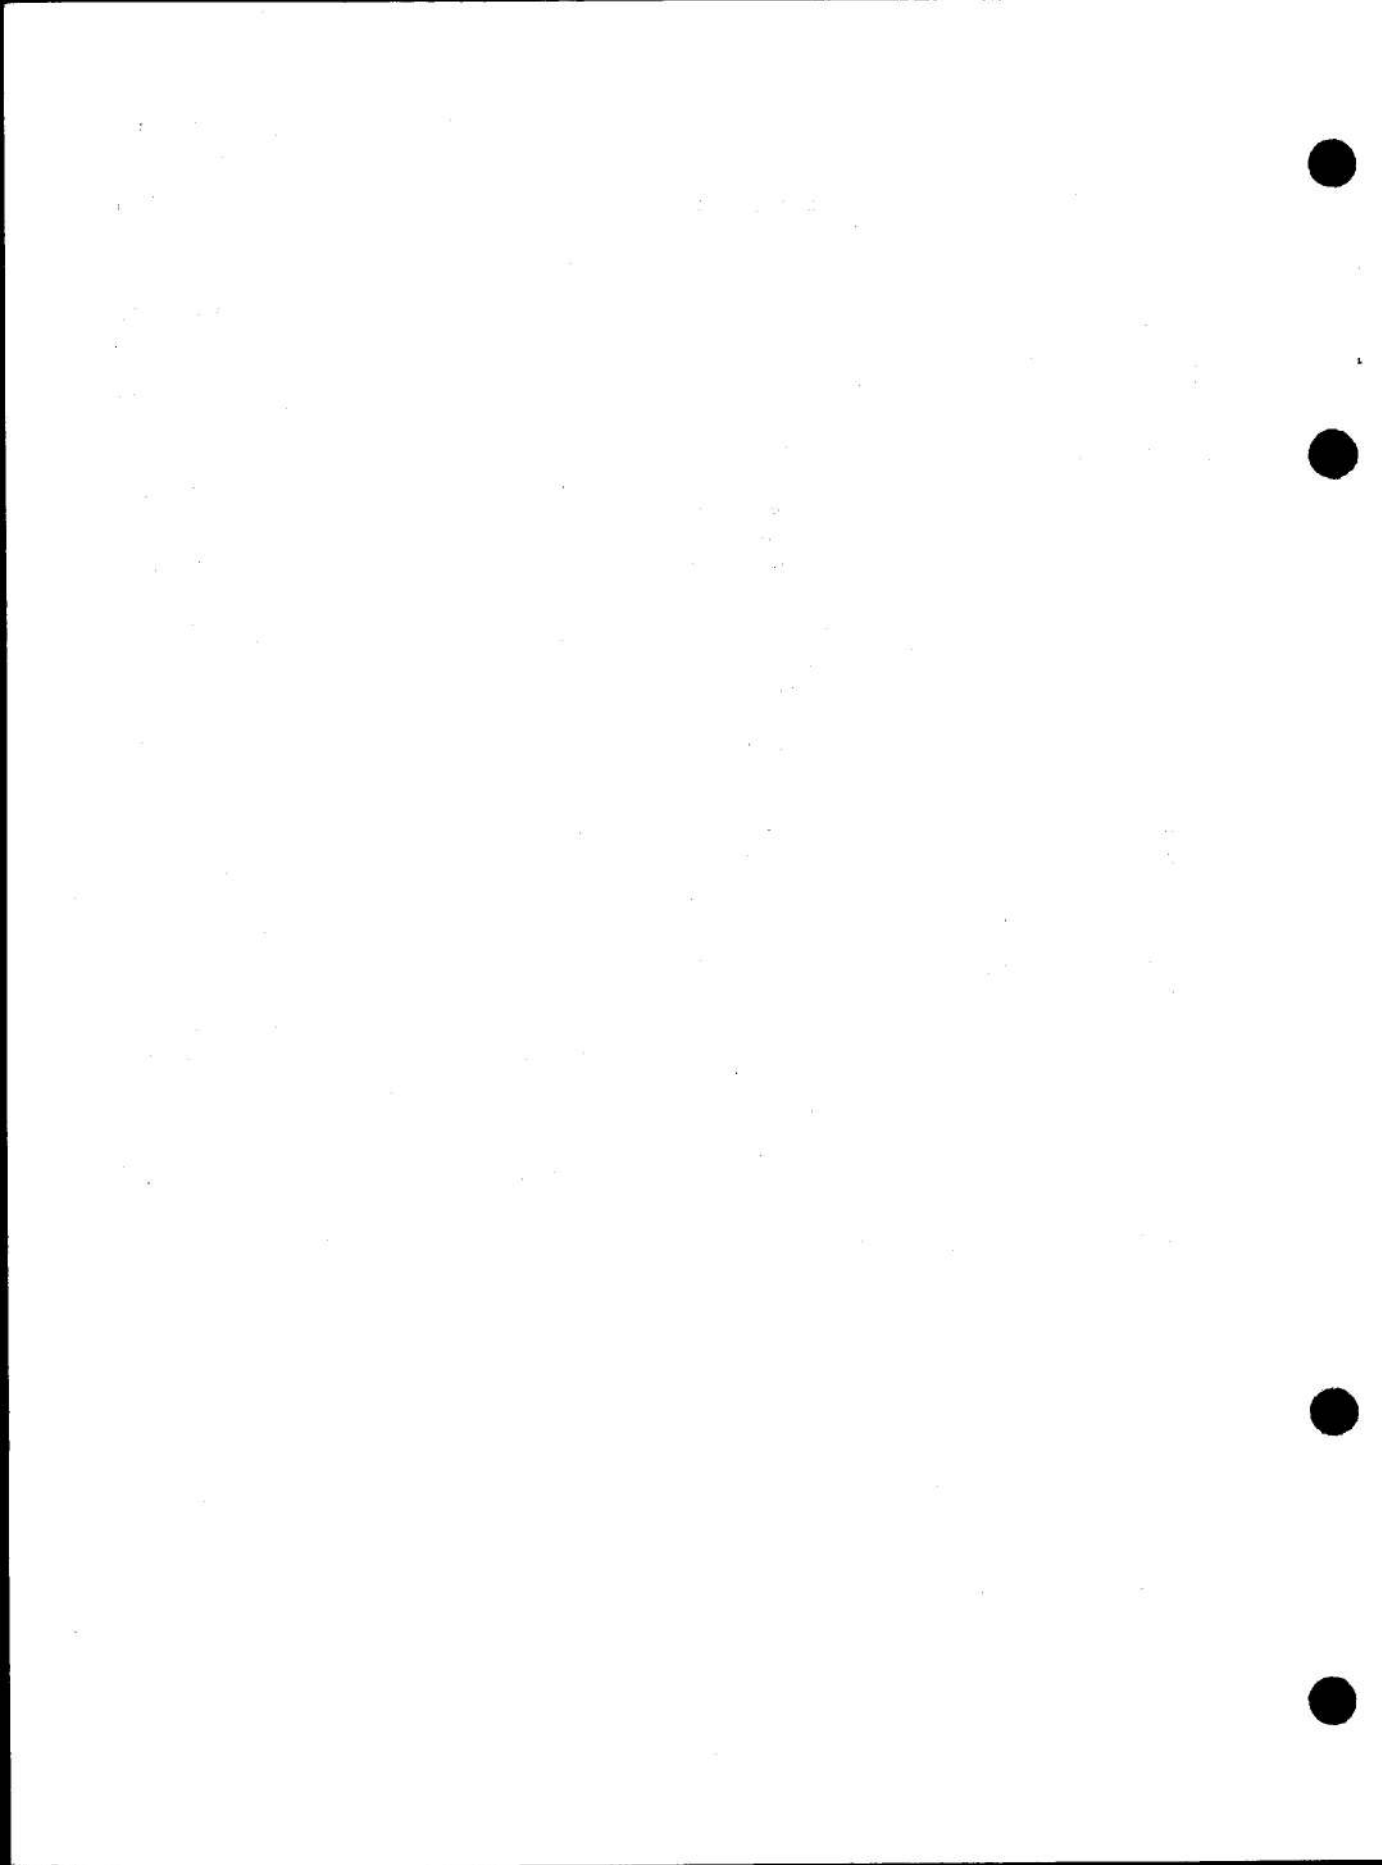



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

