FUSELAGE
CENTRE PORTION

Ref. No.	Part No.	Description (1 2 3 4 5 6)	No. off	Matl Spec	Cl. of Equip. M.R / L.M.	Plate No.
	EH5-00-121	FUSELAGE, CENTRE, ASSEMBLY Spares for:—Identical to assembly Pt. No. EA3-00-43, AP.101B-0402-3A, except for the following deletions and additions:—	—	—	—	
		Delete:—				
	EA3-75-5	CABIN, PRESSURE SYSTEM	—	—	—	
	EA3-75-223	CAMERA, PIPE RUN, ASSEMBLY	—	—	—	
	EA3-81-7	ELECTRICAL SYSTEM	—	—	—	
	EA1-57-729	FUEL SYSTEM (PRE-MOD. 648)	—	—	—	
	EA3-57-67	FUEL SYSTEM (MOD. 648)	—	—	—	
	EA1-83-93	MOUNTING, CAMERA (Not used)	—	—	—	
	EA3—80-657	PIPES, PITOT AND STATIC, ASSEMBLY	—	—	—	
	EA1-11-1	STRUCTURE, ASSEMBLY	—	—	—	
		Add:—				
	EH5-81-349	ELECTRICAL EQUIPMENT, CENTRE FUSELAGE (See page CA.1)	—	—	—	
	EA3-57-5015	FUEL SYSTEM, CENTRE FUSELAGE (PRE-MOD. 648) (See page LC.1)	—	—	—	
	EA3-57-5017	FUEL SYSTEM, CENTRE FUSELAGE (MOD. 648) (See page LC.2)	—	—	—	
	EA3-75-5127	HEATING SYSTEM, ASSEMBLY (See page LF.1)	—	—	—	
	EA3-80-5305	PITOT AND STATIC PRESSURE SYSTEM, ASSEMBLY Spares for:—	—	—	—	
16682	EA3-80-1665	FAIRLEAD	1	LFS.21	C	
6443	EA1-80-891	FAIRLEAD	3	LFS.21	C	
	EA3-80-5609	FAIRLEAD	3	LFS.21	—	
	EA3-80-5611	FAIRLEAD	1	LFS.21	—	
28F/1037653	AGS.838/13	NUT, union and bush, assembly	18	—	C	
	EG4-80-517	PIPE, pitot, from tee piece forward of frame 12 to coupling aft of frame 15, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	—	
7793	EA3-80-1639	PIPE, pitot, from coupling aft of frame 15 to tee coupling aft of frame 17, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	C	
	EA3-80-5603	PIPE, pitot, from coupling aft of frame 17 to drain trap aft of frame 20, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5605	PIPE, pitot, from drain trap to elbow coupling aft of frame 22, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
4953	EA3-80-1635	PIPE, static, from coupling forward of frame 12 to coupling aft of frame 15, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	C	
	EA3-80-5593	PIPE, static, from coupling aft of frame 15 to pipe EA3-80-5595, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5595	PIPE, static, between pipes EA3-80-5593 and EA3-80-5597, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	

FUSELAGE
CENTRE PORTION

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec	Cl. of Equip M.R / L.M	Plate No
	EA3-80-5597	PIPE, static, from pipe EA3-80-5595 to port wing coupling, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
5259	EEAS.21/2ERH	WASHER, 'D', 18 SWG	2	L.73	C	
	EA3-11-5001	STRUCTURE, CENTRE FUSELAGE, ASSEMBLY Spares for:—Identical to assembly Pt. No. EA1-11-1, AP.101B-0402-3A, except for the following deletions and additions	—	—	—	
		Delete:—				
3080	EA1-11-1097	DOOR, BOMB, PORT, ASSEMBLY	1	—	A	
3081	EA1-11-1098	DOOR, BOMB, STARBOARD, ASSEMBLY	1	—	A	
		Add:—				
14509	EA3-11-5009	DOOR, BOMB, PORT, ASSEMBLY Spares for:—Identical to assembly Pt. No. EA1-11-1097, AP.101B-0402-3A, except for the following additions	1	—	A	
		Add:—				
14513	EA3-11-5017	PLATE, cover, aft	1	—	C	
14511	EA3-11-5015	PLATE, cover, forward	1	—	C	
14510	EA3-11-5010	DOOR, BOMB, STARBOARD, ASSEMBLY Spares for:—Identical to assembly Pt. No. EA1-11-1098, AP.101B-0402-3A, except for the following additions	1	—	A	
		Add:—				
14514	EA3-11-5018	PLATE, cover, aft	1	—	C	
14512	EA3-11-5016	PLATE, cover, forward	1	—	C	

FUSELAGE

CENTRE FUSELAGE STRUCTURE.

REF. NO.	PART NO.	1	2	3	4	5	DESCRIPTION	No. OFF	MATL. SPEC.	Class of Equipt. M.R.	Plate and Illust'n. No.
							SUMMARY OF STOCK ITEMS USED ON CENTRE FUSELAGE STRUCTURE ASSEMBLY				
							REFER TO AP.4326B.Vol.3, PART 1, PAGES 403 TO 406				

FUSELAGE
FRONT PORTION

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	EA3-10-5899	FRONT FUSELAGE, ASSEMBLY Spares for:—Identical to Assembly No. EA3-10-1, AP.101B-0402-3A, except for the following Delete:—	—	—	—	
34554	EA3-10-6301	HATCH, NAVIGATOR'S ESCAPE, GROUP AP.101B-0402-3A	1	—	A	
	EA3-10-17	KEEL UNIT, COMPLETE ASSEMBLY, AP.101B-0402-3A	—	—	—	
4411	EA3-10-2901	NOSE, PERSPEX GROUP AP.101B-0402-3A	1	—	A	
	EA3-10-1091	STRUCTURE, NOSE FORWARD OF FRAME 1, ASSEMBLY AP.101B-0402-3A Add:—	—	—	—	
	EA3-10-6045	COVER, WINDBREAK DOOR CONTROL ROD INSTALLATION ASSEMBLY Spares for:—	—	—	—	
	EA3-10-6047	COVER, assembly	1	—	—	
	EA3-10-6049	PLATE stud	6			
	EA3-10-6051	PLATE, stud	2			
	EA3-10-6037	COVER, MECHANISM, WINDBREAK DOOR ASSEMBLY Spares for:—	—	—	—	
14524	EA3-10-6035	COVER	1	—	C	F/1
	EA3-10-5825	DOOR, WINDBREAK, AND MECHANISM ASSEMBLY Spares for:—	—	—	—	
12128	EA9-10-29	DOOR, windbreak	1	—	A	
23516	EA9-10-2653	HINGE, pin, door to structure	2	—	C/MR	
23517	EA9-10-2655	HINGE, pin, hydraulic jack to door	2	—	C/MR	
23518	EA9-10-2657	HINGE, pin, hydraulic jack to structure	2	—	C/MR	

FUSELAGE
FRONT PORTION

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	EA3-10-5827	MECHANISM, WINDBREAK DOOR ASSEMBLY	—	—	—	
		Spares for:—				
	EA3-10-5997	BLOCK, pivot, release handle	1	—	—	
	EA3-10-5971	BRACKET, AIR BOTTLE INSTALLATION	—	—	—	
		Spares for:—				
	EA3-10-5983	BRACKET, air bottle assembly	1	—	—	
12284	EA9-10-2665	CLIP, assembly	1	—	C	
	EA3-10-5973	LEVER, assembly	1	—	—	
23717	EA9-10-4709	COLLAR	1	T.45	C/MR	
	EA3-10-5927	FITTING END CONTROL ROD GROUP	1	—		
		Consisting of:—				
28N/13510	HOFFMANN CJ0	BEARING, spherical	1		C	
	EA3-10-5933	FITTING, end	1			
	EA3-10-5851	GUIDE, control rod, assembly	1			
	EA3-10-5999	HANDLE, operating 8 SWG	1	L.72		
	EEAS.164/8/13	HOSE, rubber	2	BSF.67	LM	
	EEAS.164.10.15	HOSE, rubber	1	BSF.67	LM	
23521	EA9-10-2671	LEVER, door lock, assembly	1	—	C/MR	
	EA3-10-5917	LEVER, group				
		Consisting of:—				
28N/13510	HOFFMANN CJ0	BEARING, spherical	1	—	C	
	EA3-10-5929	BOSS	1	L.64		
	EA3-10-5925	LEVER	1	L.73		
	EA3-10-6003	LEVER, operating handle assembly	1	—	—	
	EA3-10-6005	LEVER, catch, assembly	1	—	—	
	EA3-10-2587	LEVER, at lower end of control tube, assembly	1	—	—	
	EA3-10-5853	LINK, connecting lever and control rod, assembly	2	S.3		
	EA3-10-6013	LINK, override	1	L.72		
	EA9-10-2591	PIN, door locking	2	DTD.5024		
	EA3-10-6007	PIN, at operating handle	1	S.1		
	EA3-10-6009	PIN, latch	1	L.65		
14522	EA3-10-5931	RING, sealing $\frac{1}{32}$" at frame 1, control tube	1	Rubber SH.50	C	F/1
	EA3-10-5849	ROD, CONTROL GROUP	1			
		Consisting of:—				
28N/13510	HOFFMANN CJ0	BEARING, spherical	1	—	C	
	EA3-10-5855	ROD, control	1	—	—	

FUSELAGE
FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
37031	EA3-10-5989	ROD, CONTROL, GROUP	1	—	B	
		Spares for:—				
	EA3-10-5993	FITTING, end	1	L.65	—	
	EEAS.51	FORK, end	1	—		
	EA3-10-5995	LINK, plate	2	L.72	—	
	EA3-10-5991	TUBE	1	T.4	—	
21310	EA3-10-2677	ROD, CONTROL, GROUP	1	—	B/MR	
		Spares for:—				
	EEAS.51	FORK, end	1	—		
1115	EEAS.50	FORK, end, adjustable	1	—	C	
	EA9-10-4717	TUBE	1	—	—	
14523	EA3-10-6011	SPRING, at release handle	1	—	C	F/1
	EEAS.27.9GX	WASHER, at control tube	4	—	—	
	EA3-10-6249	HATCH, NAVIGATOR'S ESCAPE, ASSEMBLY (MOD. 4081) (Supplied to Drawing No. EA3-00-5323 for spares purposes)	—	—	—	
		Spares for:—				
	Martin Baker					
5076	MBEU/320EE	CLIP, safety harness stowage	2	—	C	
		Attaching parts for MBEU/320EE:—				
28D/1011006	A25/5B	Bolt, 4 BA	4	—	C	
28M/1278189	AGS.2001/B1	Nut	4	—	C	
	EA3-10-2277	Packing	1	—	—	
	EA3-10-2281	Packing	2	—	—	
28W/9419474	SP.15/B	Washer	4	—	C	
5075	MBEU/321EE	CLIP, parachute harness stowage	2	—	C	
		Attaching parts for MBEU/321EE:—				
28D/1011006	A25/5B	Bolt, 4 BA	4	—	C	
28M/1278189	AGS.2001/B1	Nut	4	—	C	
	EA3-10-2275	Packing	1	—	—	
	EA3-10-2279	Packing	2	—	—	
28W/9419474	SP.15/B	Washer	4	—	C	
20515	EA6-10-2683	CURTAIN	2	—	C	
41775	EB7-10-5093	FORK, END, attachment for secondary release cable	1	—	C	
		Attaching parts for EB7-10-5093:—				
28M/1278190	AGS.2001/C1	Nut, 2 BA	1	—	C	
28W/9419475	SP.15/C	Washer	1	—	C	
41063	EA3-10-3017	HOUSING, spigot	2	—	C	
		Attaching parts for EA3-10-3017:—				
28D/9436920	A25/1C	Bolt, 2 BA	5	—	C	
28M/1278190	AGS.2001/C1	Nut	5	—	C	
28W/9419475	SP.15/C	Washer	5	—	C	
	EA3-10-111	PLATE, window securing	2	—	—	
		Attaching parts for EA3-10-111:—				
1025	EEAS.1/1C	Bolt, 2 BA	48	—	C	
28M/1278190	AGS.2001/C1	Nut	48	—	C	
	EA3-10-109	Plate, sealing	1	—	—	
28W/9419475	SP.15/C	Washer	48	—	C	

FUSELAGE
FRONT FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No
	EA3-10-311	SEAL, aft, 65" long (Make from Ref. 208)	1	Shore 35	LM	
	EA3-10-313	SEAL, fwd., 61" long (Make from Ref. 208)	1	Shore 35	LM	
	EA3-10-309	SEAL, side, 38" long (Make from Ref. 208)	1	Shore 35	LM	
	EA3-10-2883	SPIGOT, screwed	2	—	—	
		Attaching parts for EA3-10-2883:—				
28M/1007404	A27/JT	Nut	1	—	C	
148	EA3-10-305	WINDOW, Perspex	2	—	C	
		Attaching parts for EA3-10-305:—				
1031	EEAS.1/6C	Bolt, 2 BA	20	—	C	
28M/1278190	AGS.2001/C1	Nut	20	—	C	
149	EA3-10-307	Seal, rubber	2	—	C	
28W/9419475	SP.15/C	Washer	40	—	C	
26230	EA9-10-1921	HINGE, RELEASE MECHANISM MAIN DOOR, ASSEMBLY	1	—	B/MR	
		Spares for:—				
	EA9-10-1923	BRACKET	1	—	—	
	EA1-10-1437	COLLAR	1	—	—	
	EA1-10-881	COLLAR	1	—	—	
	EA9-10-933	COLLAR	1	—	—	
	EA9-10-1925	GEAR and shaft	1	S.11	—	
	EA9-10-1929	GEAR, bevelled	1	S.11	—	
	EA9-10-1931	SHAFT	1	—	—	
	EA9-10-2755	SLEEVE	1	—	—	
12291	EA9-10-1935	HINGE, PRESSURE PLATE, ASSEMBLY	1	—	B	
		Spares for:—				
	EA1-10-893	CAP, sealing ring housing	1	—	—	
	EA3-10-2829	HOUSING, shaft sealing ring	1	L.40		
	EA3-10-2973	RING, sealing	1	Felt	—	
	EA3-10-5117	KEEL UNIT, COMPLETE, ASSEMBLY	—	—	—	
		Spares for:—				
13091	EA3-11-655	BOLT, special	1	—	C	
		(Made from A25/4E)				
	EA3-10-5119	SKINNING PRESSURE CABIN KEEL UNIT, ASSEMBLY	—	—	—	
		Spares for:—Identical to assembly No. EA3-10-11, AP.101B-0402-3A				
	EA3-10-5121	MAIN FLOOR STRUCTURE, PRESSURE CABIN KEEL UNIT, ASSEMBLY	—	—	—	
		Spares for:—Identical to assembly No. EA3-10-9, AP.101B-0402-3A				

FUSELAGE
FRONT FUSELAGE

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		FLOOR COCKPIT, ASSEMBLY EA3-16-5001 (Called up on EA3-45-5003)	—	—	—	
		Spares for:—				
27L/	Martin Baker A/MBUE 3666	BRACKET, ejection seat	2	—	—	
17777	EA3-16-135	BRACKET, mounting, lever	1	DTD.610	C	
17778	EA3-16-136	BRACKET, mounting, lever	1	DTD.610	C	
	EA3-16-5009	PANEL, detachable (Make from EA3-16-141, Ref. 26FZ/19288)	1	—	—	
	EA3-16-5011	PANEL, cover (Make from EA3-16-95)	1	—	—	
	EA3-16-5013	PANEL, cover (Make from EA3-16-95)	1	—	—	
25707	EA3-16-97	PANEL, cover	1	DTD.610	C	
31050	EA3-16-95	PANEL, COVER, ASSEMBLY	1	—	C	
		Spares for:—				
20987	EA3-16-143	PANEL, cover	1	—	C	
32714	EA3-16-5023	PLATE, TOP AFT, ASSEMBLY (Mod. 2737)	1	—	C	
		Spares for:—				
32713	EA3-16-5019	PLATE, cover	1	L.72	C	
	EA3-16-5021	STRIP, seating	1	L.72	—	
17774	EA3-16-125	PLATE, top aft assembly	1	—	C	
17781	EA3-16-183	PLATE, top assembly	1	—	C	

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	Description (1 2 3 4 5 6)	No. off	Matl Spec	Cl of Equip. M.R L.M.	Plate No
	EH5-00-5	FUSELAGE, NOSE, ASSEMBLY Spares for:—Identical to assembly Pt. No. EA3-00-5, AP.101B-0402-3A, except for the following deletions and additions Delete:—	—	—	—	
	EA3-74-83	BLAST COOLING FOR INVERTER TYPE 201	—	—	—	
	EA3-74-21	COLD AIR SUPPLY TO PILOT	—	—	—	
	EA3-76-215	DE-MISTING SYSTEM (MOD. 176)	—	—	—	
	EA3-76-35	DE-MISTING SYSTEM (PRE-MOD. 176)	—	—	—	
	EA3-81-5	ELECTRICAL EQUIPMENT, FRONT FUSELAGE	—	—	—	
	EA3-10-1	FUSELAGE, FRONT	—	—	—	
	EA3-73-205	HYDRAULIC EQUIPMENT IN FRONT FUSELAGE	—	—	—	
	EA3-71-519	OXYGEN SYSTEM (MOD. 1413)	—	—	—	
	EA3-71-513	OXYGEN SYSTEM (PRE-MOD. 1413)	—	—	—	
	EA3-80-2411	PIPES, PITOT AND STATIC	—	—	—	
	EA3-80-2007	PRESSURE CABIN EQUIPMENT	—	—	—	
	EA3-82-1	RADIO AND INTERCOMM., INSTALLATION	—	—	—	
	EA3-10-2845	TUNNEL, BOMB AIMER'S, ASSEMBLY	—	—	—	
		Add:—				
	EA3-74-5001	BLAST COOLING FOR INVERTER, TYPE 103, ASSEMBLY Spares for:—	—	—	—	
32B/1250461		BLANKET, fibre glass	QR	DTD 900/4140	C	
14567	EA3-74-5005	DUCT, connecting, assembly (undrilled)	1	—	C	F.2
14566	EA3-74-5003	PIPE, cooling (Pre-Mod. 4719)	1	L.56	C	
	40771	PIPE, cooling, fork (Mod. 4719)	1	—	—	
	EA3-74-5007	PLATE, reinforcing	1	L.72	—	
14558	EA3-10-5401	SCOOP, air, assembly (undrilled)	1	—	C	
	40772 (SRIM.3491)	BLAST COOLING, FOR INVERTER, TYPE 108A (See page KC2) (Mod. 4719)	—	—	—	
	19C/40107	BLAST COOLING AND INVERTER, TYPE 200, MOUNTINGS, INSTALLATION (MOD. 4098) (SRIM.2964) Spares for:—	—	—	—	
14572	EA3-74-5027	HOSE, connector (Alternative to EA3-74-5081)	1	—	C	
	EA3-74-5081	HOSE, connector (Alternative to EA3-74-5027)	1	—	—	
	19C-30536	PANEL, mounting, inverter	1	L.72	—	
	EA3-75-5121A	RING, clamping	2	—	—	
	19C/11629	SCOOP, air	1	L.59	—	
	19C/11621	TOP-HAT, section	2	L.72	—	
	EH5-80-307	PIPE, assembly (Mod. 4867)	1	—		
	EH5-80-311	PIPE, duct (Mod. 4867)	1	—		
	EA3-75-5053	CABIN PRESSURE SYSTEM (See page LA.1)	—	—	—	
	EA3-74-5009	COLD AIR SUPPLY TO PILOT, ASSEMBLY Spares for:—	—	—	—	
	EA3-74-5031	BRACKET, pipe clip	1	L.72	—	
7240	EA3-74-45	BRACKET, non-return valve	1	L.72	C	
8995	EA3-74-47	CLIP, non-return valve	2	L.72	C	
8990	EA3-74-53	COUPLING, drain pipe	1	DTD.423	C	
	EA3-74-63	HOSE, connection, 1" i/d x 3" long, between drain pipe sections (Make from 32C/376)	5	DTD 625	LM	
	EA3-74-67	HOSE, connection, $\frac{3}{16}$" i/d x $1\frac{1}{4}$" long, water trap drain pipe (Make from 32C/488)	1	DTD.625	LM	

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No
	Thermotank					
5042	K.1259/43	LOUVRE, punkah, air type D.A.R.2	1	—	B	
5634	EA3-74-113	PIPE, cold air system	1	L.54	C	
14574	EA3-74-5013	PIPE, cold air system	1	L.54	C	
14575	EA3-74-5015	PIPE, cold air system	1	L.54	C	
	EA3-74-5029	PIPE, cold air system	1	L.54	—	
	EA3-74-5017	PIPE, drain, assembly	1	L.56	—	
	EA3-74-5473	RING, louvre mounting	1	—	—	
3681	EA3-74-49	SCOOP, air	1	L.59	C	
981	EEAS.20/2DR	TAB, locking, 20 SWG	1	L.72	C	
5637	EA3-74-109	TRAP, water	1	—	C	
5638	EA3-74-23	VALVE, NON-RETURN, ASSEMBLY	1	—	A	
		Spares for:—				
		See AP.101B-0402-3A				
	EA3-45-5011	CONTROLS, FLYING (See page BB.1)	—	—	—	
	EA3-80-5285	COMPASS IVB, INSTALLATION	—	—	—	
		Spares for:—				
	EA3-80-5939	HOLDER, CARD, INSTALLATION	—	—	—	
		Spares for:—				
6B/1054118	—	HOLDER, compass card	1	—	C	
	EA3-80-5941	PLATE, backing	1	L.72	—	
	EA3-80-5479	MOUNTING, CONTROL PANEL, GROUP	—	—	—	
		Spares for:—				
6B/408	—	PANEL, control	1	—	A	
	EA3-80-5711	PLATE, assembly	2	—	—	
	EA3-76-5001	DEMISTING, SYSTEM (See page LB.1)	—	—	—	
14504	EA3-10-5001	DIELECTRIC NOSE, GROUP	1	—	A	
		(Supplied with trim allowance)				
		Spares for:—				
	King Aircraft					
	C.4953	LEVER, and attachment fitting assembly	10	—	—	
	EA3-10-5035	NOSE, DIELECTRIC, ASSEMBLY	1	—	—	
		Spares for:—				
	EA3-10-5101	BUSH, nose cap	1	Glass Cloth	—	
	EA3-10-5105	CAP, nose	1	S.94	—	
14516	EA3-10-5107	DISC, screening	1	DX.1	C	F.2
	EA3-10-5901	SCREENING, Plessey	1	MS3-A	—	
14515	EA3-10-5103	WASHER, conical	1	—	C	F.2
	EH5-81-341	ELECTRICAL EQUIPMENT (See page C.1)	—	—	—	
	EH5-80-1	EQUIPMENT IN PRESSURE CABIN (See page D.1)	—	—	—	
	EA3-57-5015	FUEL SYSTEM (PRE-MOD. 648) (See page LC.1)	—	—	—	
	EA3-57-5017	FUEL SYSTEM (MOD. 648) (See page LC.2)	—	—	—	
	EA3-10-5899	FUSELAGE, FRONT (See page FA.1)	—	—	—	
	EA3-10-5367	NOSE, FORWARD OF FRAME No. 1, GROUP	—	—	—	
		Spares for:—				
	King Aircraft					
14518	C.4708	FASTENER, ASSEMBLY	23	—	B	F.2
		Consisting of:—				
26DK/10076	C.7810	BODY, lower, fitted to structure	23	—	C	F.2
12791	C.5331	BODY, upper, fitted to panel	23	—	C	F.2

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	Description (1 2 3 4 5 6)	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
	King Aircraft					
14517	C.3102	HOUSING, toggle fastener	10	—	C	F.2
14519	EA3-10-5857	PAD, buffer, toggle fastener	10	—	C	
14505	EA3-10-5227	PANEL, ACCESS, UPPER, PORT, GROUP	1	—	A	F.2
		Spares for:—				
	King Aircraft					
12791	C.5331	BODY, fastener, upper	11	—	C	
	EA3-10-5385	SEAL, rubber (Make from EEAS.121, Ref. 26FZ/4432)	1	—	LM	
14506	EA3-10-5229	PANEL, ACCESS, LOWER, PORT, GROUP	1	—	A	F.2
		Spares for:—				
	King Aircraft					
12791	C.5331	BODY, fastener, upper	12	—	C	
	EA3-10-5399	SEAL rubber (Make from EEAS.121, Ref. 26FZ/4432)	1	—	LM	
14507	EA3-10-5437	PANEL, ACCESS, UPPER, STARBOARD, GROUP	1	—	A	F.2
		Spares for:—				
28FP/9483306	Dzus FJ4/50	FASTENER	12	—	C	
	EA3-10-5443	SEALING, rubber	1	Shore 30	—	
14508	EA3-10-5551	PANEL, ACCESS, LOWER, STARBOARD, GROUP	1	—	A	F.2
		Spares for:—				
28FP/9483306	Dzus FJ4/50	FASTENER	12	—	C	
	EA3-10-5555	SEALING, rubber	1	Shore 30	—	
36867	EA3-10-5045	PLATE, LANDING, UPPER, STARBOARD, ASSEMBLY	1	—	MR	
		Spares for:—				
29FP/9438491	Dzus S4/275	SPRING, fastener	12	—	C	
36868	EA3-10-5047	PLATE, LANDING, LOWER, STARBOARD, ASSEMBLY	1	—	MR	
		Spares for:—				
28FP/9438491	Dzus S4/275	SPRING, fastener	12	—	C	
	EH5-71-1	OXYGEN, SYSTEM (See page LE.1)	—	—	—	
	EA3-73-5003	PIPES, AIR AND HYDRAULIC, WINDBREAK DOOR, GROUP (See page LD.3)	—	—	—	
	EA3-73-5005	PIPES, HYDRAULIC IN FRONT FUSELAGE (See page LD.1)	—	—	—	
	EH5-80-371	PITOT-STATIC LINES, FRONT FUSELAGE (MOD. 4867)	—	—	—	
		Spares for:—				
6D/114		ADAPTER, outlet	2	—	C	
28F/1367578	AS.8680	BANJO body	1	—	C	
28F/1367579	AS.8681	BANJO body	3	—	C	
28F/1367580	AS.8682	BANJO body	1	—	C	
28F/1367581	AS.8683	BANJO body	3	—	C	
26DK/23431	EEAS.552/6	BOBBIN	1	—	C	
26DK/23436	EEAS.552/7	BOBBIN	1	—	C	
	AGS.2097/4C	BONDING, strip	2	—	—	
6734	EEAS.136	BRACKET	12	—	C	
	EEAS.29/1ER	BRACKET	2	—	—	
16682	EA3-80-1665	CLAMP, pipe	8	—	C	
28E/20012	SP.91/C	CLIP, hose	4	—	C	
	AGS.606/D	CLIP, hose (For spares use 28E/1222181)	8	—	—	

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No
2156	EEAS.112/7	CLIP, pipe, single flat	2	—	C	
5K/4345963	AS.4525/5	CLIP, pipe, single	40	—	C	
	EA1-71-77	CLIP, pipe, double angle	1	—	—	
1823	EEAS.91/2	CLIP, pipe, double flat	14	—	C	
28F/9475201	AGS.952/BB	COLLAR, pipe	1	—	C	
28F/1046323	AGS.838/6	DRAIN trap	5	—	C	
3400	EA3-80-1649	DRAIN trap reservoir	6	—	C	
	Dunlop					
27VA/	DC.403A/30	HOSE, at Zero Reader computer	1	—	—	
	EG9.80.1175	MOUNTING, P.E.C., INSTALLATION	—	—	—	
		Spares for:—				
	EG4.80.1117	ANGLE	1	—	—	
	EG9.80.1177	BRACKET, assembly	1	—	—	
28F/4051729	AGS.1106/BB	NIPPLE, adapter	1	—	C	
28F/1037653	AGS.838/13	NUT, union, assembly	97	—	C	
28F/1037452	AS.8599	NUT, union, assembly	2	—	C	
26DK/7759	EB2-70-1037	PIECE, spacing	5	—	—	
	EH5-80-243	PIPE, flexible	1	—	—	
	EH5-80-247	PIPE, flexible	1	—	—	
	EG4-80-517	PIPE, pitot, from centre fuselage to tee piece forward of frame 12 (See page F.1)	1	—	—	
	EG4-80-1055	PIPE, pitot, from tee piece forward of frame 12 to P.E.C. unit, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EG4-80-519	PIPE, pitot, from tee piece forward of frame 12 to bulkhead union at pressure bulkhead $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EA3-80-5793	PIPE, pitot, from pressure bulkhead union to tee piece at navigator's position, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5787	PIPE, pitot, from tee piece to flexible pipe at navigator's A.S.I., $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5791	PIPE, pitot, from tee piece to drain trap at frame 4, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5789	PIPE, pitot, from drain trap at frame 4 to drain trap tee at pilot's station, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
8643	EA3-80-1615	PIPE, pitot, from drain trap tee to flexible pipe, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EH5-80-235	PIPE, pitot, from flexible pipe to tee piece, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EH5-80-237	PIPE, pitot, from tee piece to machmeter, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EH5-80-239	PIPE, pitot, from tee piece to airspeed indicator, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec	Cl. of Equip. M.R L.M	Plate No
	EA3-80-5565	PIPE, static, from flexible hose at Zero Reader computer to drain trap tee, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5567	PIPE, static, from drain trap tee to tee piece at pilot's position $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
16681	EA3-80-1583	PIPE, static, from tee piece to flexible pipe, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EH5-80-223	PIPE, static, from flexible pipe to pilot's altimeter tee union, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1057	PIPE, static, from pilot's altimeter tee union to flexible pipe, $\frac{5}{16}$" o/d x 22 SWG stepped to $\frac{3}{8}$" OD x 22 SWG	1	L.54	LM	
	EH5-80-225	PIPE, static, from pilot's altimeter tee union to four-way union, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EH5-80-227	PIPE, static, from four-way union to machmeter, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EH5-80-231	PIPE, static, from four-way union to rate of climb indicator, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EH5-80-233	PIPE, static, from four-way union to air speed indicator, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EA3-80-5775	PIPE, static, from tee piece at pilot's position to drain trap tee, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5777	PIPE, static, from drain trap tee to tee piece at navigator's position, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5779	PIPE, static, from tee piece to pipe Pt. No. EA3-80-5781, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5781	PIPE, static, from pipe Pt. No. EA3-80-5779 to flexible pipe at navigator's A.S.I., $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-5785	PIPE, static, from tee piece at navigator's position to bulkhead union at pressure bulkhead, $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EA3-80-1603	PIPE, static, from drain trap at pressure bulkhead union to pipe Pt. No. EA3-80-1635 (See page F.1) $\frac{5}{16}$" o/d x 22 SWG	1	L.56	LM	
	EG4-80-1075	PIPE, static, from starboard static vent between frames 10 and 11, to pipe Pt. No. EG4-80-5071, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1071	PIPE, static, from pipe Pt. No. EG4-80-1075 to pipe Pt. No. EG4-80-1083, $\frac{5}{16}$" o/d x 22 SWG	1	L.54	LM	

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No
	EG4-80-1083	PIPE, static, from pipe Pt. No. EG4-80-1071 to tee piece at frame 12A, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1073	PIPE, static, from port static vent between frames 10 and 11, to pipe Pt. No. EG4-80-1081, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1081	PIPE, static, from pipe Pt. No. EG4-80-1073 to pipe Pt. No. EG4-80-1059, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1059	PIPE, static, from pipe Pt. No. EG4-80-1081 to tee at frame 12A, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1149	PIPE, static, from tee piece at frame 12A to pipe Pt. No. EG4-80-1051 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1051	PIPE, static, from pipe Pt. No. EG4-80-1149 to P.E.C. unit, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1053	PIPE, static, from P.E.C. unit to bulkhead union at pressure bulkhead, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1079	PIPE, static, from pressure bulkhead union to pipe Pt. No. EG4-80-1077, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1077	PIPE, static from pipe Pt. No. EG4-80-1079 to pipe Pt. No. EG4-80-1157, 5/16" o/d x 22 SWG	1	L.54	LM	
	EG4-80-1157	PIPE, static, from pipe Pt. No. EG4-80-1077 to pipe Pt. No. EH5-80-241, 5/16" o/d x 22 SWG	1	L.54	LM	
	EH5-80-241	PIPE, static, from pipe Pt. No. EG4-80-1157 to pipe Pt. No. EH5-80-249, 5/16" o/d x 22 SWG	1	L.54	LM	
	EH5-80-249	PIPE, static, from pipe Pt. No. EH5-80-241 to flexible pipe at navigator's altimeter, 5/16" o/d x 22 SWG	1	L.54	LM	
28F/4051641	AGS.1115/3	PLATE, washer	3	—	C	
2086	EA1-80-713	RING, sealing, at bulkhead union	3	—	—	
	EA3-80-5827	ROD, screwed, clip support at pressure bulkhead, frame 1	1	—	—	
	EA3-80-5829	ROD, screwed, clip support at pressure bulkhead, frame 1	1	—	—	
28F/19986	AS.3098	SEAL, O-ring	2	—	C	
28F/19987	AS.3099	SEAL, O-ring	6	—	C	
28F/1015879	AGS.904/BB	SLEEVE, adapter	1	—	C	
4956	EA3-80-1671	TUBE, adapter	2	—	C	
	EA3-80-5563	TUBE, rubber, flexible	2	—	—	
	EA3-80-5589	TUBE, rubber, flexible	2	—	—	
2087	EA1-80-711	UNION, bulkhead	3	—	C	
28F/18958	AS.6712	UNION, elbow	1	—	C	
28F/1046309	AGS.838/3	UNION, elbow	6	—	C	
26DK/11156	EF2-70-27	UNION, four-way	3	—	C	
28F/1046307	AGS.838/1	UNION, straight	16	—	C	
28F/1046308	AGS.838/2	UNION, tee	13	—	C	

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec	Cl. of Equip. M.R / L.M	Plate No.
6A/6203321	L83271-00-000	UNIT, pressure error correction	1	—		
		Attaching parts for L83271-00-000:—				
28D/9419452	A25/3B	Bolt, 4 BA	3	—	C	
28W/9419474	SP.15/B	Washer	3	—	C	
	EG4-80-1061	VENT, STATIC, PORT INSTALLATION	—	—	—	
		Spares for:—				
	EG4-80-1063	PLATE, static vent, assembly	1	—	—	
	EG4-80-1065	DOUBLER	1	—	—	
	EG4-80-1179	DOUBLER	1	—	—	
		Attaching parts for EG4-80-1063, 1065, 1179:—				
58770	EB8-10-7870	Bolt, special, 2 BA	8	—	—	
28M/1278190	AGS.2001/C1	Nut	8	—	C	
28W/9419475	SP.15/C	Washer	8	—	C	
28W/9419487	SP.16/C	Washer	8	—	C	
	EG4-80-1062	VENT, STATIC, STARBOARD INSTALLATION	—	—	—	
		Spares for:—				
	EG4-80-1064	PLATE, static vent, assembly	1	—	—	
	EG4-80-1066	DOUBLER	1	—	—	
	EG4-80-1180	DOUBLER	1	—	—	
		Attaching parts for EG4-80-1064, 1066, 1180:—				
58770	EB8-10-7870	Bolt, special, 2 BA	8	—	—	
28M/1278190	AGS.2001/C1	Nut	8	—	C	
28W/9419475	SP.15/C	Washer	8	—	C	
28W/9419487	SP.16/C	Washer	8	—	C	
26DK18487	EEAS239/1/AH	WASHER, 'D'	35	—	—	
	EA3-45-5039	UNDERCARRIAGE AND BOMB DOOR, EMERGENCY RELEASE MECHANISM, GROUP	—	—	—	
		Spares for:—				
	EA1-45-813	BRACKETS AND LEVER AT FRAME 4, ASSEMBLY	—	—	—	
		Spares for:—				
		See AP.101B-0402-3A				
6481	EA3-45-275	CABLES, BOMB DOOR AND UNDERCARRIAGE, ASSEMBLY	1	—	B	
		Spares for:—				
		See AP.101B-0402-3A				
9005	EA1-45-881	FAIRLEAD, frames 5 to 11	7	—	C	
9006	EA1-45-883	FAIRLEAD, at frome 3	1	—	C	
6750	EA1-45-1121	FAIRLEAD, at frame 12A (adjust to suit frame)	1	—	C	
	EA3-45-5037	PULLEYS AND HANDLE AT FRAMES 1 AND2, GROUP	—	—	—	
		Spares for:—				
9004	EA3-45-291	HANDLE, assembly	1	—	C	
28R/13491	AS.107	PULLEY, shrouded	2	—	B	
9007	EA2-45-415	WASHER, wedge, at pressure bulkhead	2	—	C	
	EA9-40-1	UNDERCARRIAGE, NOSE, ASSEMBLY	1	—	—	
		Spares for:—				
		See AP.101B-0402-3A				

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	Description	No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No
	EA3-90-5755	WAVEGUIDE, PRESSURISATION, GROUP Spares for:—	—	—	—	
	EA3-90-5757	WAVEGUIDE, PRESSURISATION, FORWARD OF FRAME 3, GROUP Spares for:—	—	—	—	
	EA3-90-5921	BRACKET, STOP VALVE MOUNTING, ASSEMBLY Spares for:—	1	—	—	
	EA3-90-5923	BRACKET	1	—	—	
	EA3-90-5941	LABEL	1	—	—	
2165	EEAS.112/6	CLIP, pipe support	6	L.16	C	
1128	EEAS.69/2	GASKET, at pressure bulkhead, pipe connection	1	—	C	
	EA3-90-5835	LABEL, instruction	1	—	—	
14626	EA3-90-5765	PIPE, assembly, from frame 1C to coupling aft of frame 1B	1	DTD.5019	C	
14627	EA3-90-5927	PIPE, assembly, from coupling aft of frame 1B to tee piece at frame 1	1	DTD.5019	C	
	EA3-90-5935	PIPE, assembly, from stop valve to tee piece	1	DTD.5019	—	
14628	EA3-90-5931	PIPE, assembly, from stop valve to coupling at frame 2	1	DTD.5019	C	
14629	EA3-90-5771	PIPE, assembly, from coupling aft of frame 1 to coupling aft of frame 2	1	DTD.5019	C	
	EA3-90-5947	PLATE, label	1	L.72	—	
	EA3-90-5833	SLEEVE, screwed, aft, frame 1C	1	—	—	
981	EEAS.20/2DR	TAB, locking	3	—	C	
27VB/3441	Hymatic C.50964	VALVE, stop, type SV.9	1	—	B	
	EA3-90-5759	WAVEGUIDE, PRESSURISATION, FRAME 3 TO PRESSURE BULKHEAD, GROUP Spares for:—Identical to group Pt. No. EA3-70-45, AP.101B-0402-3A	—	—	—	
	EA3-90-5761	WAVEGUIDE, PRESSURISATION, PRESSURE BULKHEAD TO FRAME 12A, GROUP Spares for:—	—	—	—	
3757	EA1-70-69	BLOCK, filter mounting at frame 12	1	DTD.36(B)	C	
	EA3-90-5805	BRACKET, mounting, reducing valve, assembly	1	—	—	
3756	EA1-70-33	CLIP, filter mounting	1	L.72	C	
17744	EEAS.143/17	CLIP, pipe securing	4	—	C	
27G/2091	Dunlop ACO.1268	FILTER, air	1	—	A	
1128	EEAS.69/2	GASKET, pressure bulkhead adapter	1	—	C	
5888	EA3-70-57	PIPE, assembly, from pressure bulkhead to air filter at frame 12	1	L.56	C	
14630	EA3-90-5887	PIPE, assembly, from reducing valve to coupling at frame 12A	1	DTD.5019	C	
	EA3-90-5885	PIPE, assembly, from reducing valve to non-return valve	1	DTD.5019	—	

FUSELAGE

NOSE PORTION

Ref. No.	Part No.	1 2 3 4 5 6	Description	No. off	Matl Spec	Cl. of Equip. M.R L M	Plate No.
14631	EA3-90-5883		PIPE, assembly, from non-return valve to air filter	1	DTD.5019	C	
980	EEAS.20/1DR Hymatic		TAB, locking	1	L.72	C	
27VB/5349	D.13334 Saunders Valve		VALVE, reducing, type PS.29/78	1	—	B	
27F/2302	6270.B		VALVE, non-return	1	—	C	
	EA3-90-5763		WAVEGUIDE, PRESSURISATION, FRAME 12A TO FRAME 16, GROUP Spares for:—Identical to group Pt. No. EA3-70-49, AP.101B-0402-3A	—	—	—	

FUSELAGE
REAR PORTION

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. Off	M.R. Mat. Spec.	C.O.S. L.M.	Plate No.
	EA3-12-5001	FUSELAGE, REAR, ASSEMBLY Spares for:—Identical to assembly Pt. No. EA1-12-1, AP.4326B, Vol. 3, except for the following deletions and additions:—	—	—	—	
		Delete:—				
	EA1-12-9	STRUCTURE, FUSELAGE, REAR, C/W SKIN, ASSEMBLY	—	—	—	
		Add:—				
	EA3-12-5055	STRUCTURE, FUSELAGE, REAR, C/W SKIN, ASSEMBLY Spares for:—Identical to assembly Pt. No. EA1-12-9, AP.4326B, Vol. 3, except for the following deletions and additions:—	—	—	—	
		Delete:—				
	EA1-12-7	STRUCTURE, REAR FUSELAGE, LESS SKIN	—	—	—	
		Add:—				
	EA3-12-5057	STRUCTURE, REAR FUSELAGE, LESS SKIN Spares for:—Identical to assembly Pt. No. EA1-12-7, AP.4326B, Vol. 3	—	—	—	
	EA3-12-5027	STRUCTURAL PROVISION FOR RADIO ALTIMETER, AFT Spares for:—	—	—	—	
	EA3-12-5029	MOUNTING, assembly, radio altimeter, aft	1	—	—	
	EA3-12-5003	STRUCTURAL PROVISION FOR RADIO ALTIMETER, FORWARD Spares for:—	—	—	—	
	EA3-12-5005	MOUNTING, assembly, radio altimeter, forward	1	—		

FUSELAGE
REAR FUSELAGE AND TAIL UNIT

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
	EH5-00-123	REAR FUSELAGE AND TAIL UNIT, ASSEMBLY Spares for:—	—	—	—	
	EA3-45-385	CONTROLS, FLYING IN REAR FUSELAGE Spares for:— See AP.101B-0402-3A	—	—	—	
	EA1-00-63	CONTROLS, RUDDER AND ELEVATOR ATTACHMENT DETAILS Spares for:— See AP.101B-0402-3A	—	—	—	
	EA3-81-5541	ELECTRICAL EQUIPMENT IN REAR FUSELAGE (See page CB.1)	—	—	—	
2988	EA1-12-17	FAIRING, REAR, GROUP Spares for:— See AP.101B-0402-3A	1	—	A	
	EA1-00-59	FAIRING, REAR, ATTACHMENT TO FUSELAGE Spares for:— See AP.101B-0402-3A	—	—	—	
2989	EA1-32-1	FIN, TAIL, GROUP (Mod. 626, Pre-Mod. 4478) (Supplied undrilled at base)	1	—	A	
1439172	EA3-00-1071	FIN, TAIL, GROUP (Spares conditioned) (Mod. 4478, Pre-Mod. 5043)	1	—	A	
6119234	EA3-00-5399	FIN, TAIL, GROUP (Spares conditioned) (Mod. 5043) Spares for:— See AP.101B-0402-3A	1	—	A	
	EA1-00-55	FIN TO FUSELAGE ATTACHMENT Spares for:— See AP.101B-0402-3A	—	—	—	
	EA3-12-5001	FUSELAGE, REAR (See page FC.1)	—	—	—	
3071	EA1-12-597	PLATE, sealing, tailplane to fuselage, forward, port	1	—	MR	
3072	EA1-12-598	PLATE, sealing, tailplane to fuselage, forward, starboard	1	—	MR	
3073	EA1-12-599	PLATE, sealing, tailplane to fuselage, aft, port	1	—	MR	
3074	EA1-12-600	PLATE, sealing, tailplane to fuselage, aft, starboard	1	—	MR	
	EA1-00-57	RUDDER TO FIN AND FUSELAGE ATTACHMENT Spares for:— See AP.101B-0402-3A	—	—	—	
2990	EA1-33-1	RUDDER, c/w TAB (Pre-Mod. 894)	1	—	A	
5173	EA3-33-1	RUDDER, c/w TAB (Mod. 894, Pre-Mod. 4478)	1	—	A	
1439171	EA3-00-1069	RUDDER, c/w TAB (Mod. 4478, Pre-Mod. 5043)	1	—	A	
6119223	EA3-00-5897	RUDDER, c/w TAB (Mod. 5043) Spares for:— See AP.101B-0402-3A	1	—	A	
	EA3-83-5481	STOWAGE, BOMB DOOR COVER PLATES, BETWEEN FRAMES 32 AND 33, INSTALLATION Spares for:—	—	—	—	
	EA3-83-5491	ANGLE	3	—	—	
14620	EA3-83-5483	BAG, STOWAGE, ASSEMBLY Consisting of:—	1	—	B	
	EA3-83-5485	BAG, stowage	1	Canvas	—	

FUSELAGE
REAR FUSELAGE AND TAIL UNIT

Ref. No.	Part No.	1 2 3 4 5 6 Description	No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
29G/4054	Tenax-31	BUTTON	3	—	C	
	AGS.232/F	EYELET	6	—	—	
	Tenax-302	NUT	3	—	—	
	EA3-83-5487	PATCH, reinforcing	3	Hide	—	
	Tenax-41	PEG, clinch	3	—	—	
	Tenax-99	SOCKET	3	—	—	
	EA3-83-5489	STRIP, reinforcing	6	Hide	—	
		Attaching parts for EA3-83-5483				
28D/1013284	AS.1248/2C	Bolt, 2 BA	6	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA	6	—	C	
28W/9419475	SP.15/C	Washer	6	—	C	
	EA3-83-143	STOWAGE, ENGINE CARTRIDGE, INSTALLATION Spares for:— See AP.101B-0402-3A	—	—	—	
	EA3-00-5007	TAILPLANE AND ELEVATORS (See page M. 1)	—	—	—	
	EA1-00-53	TAILPLANE TO REAR FUSELAGE ATTACHMENT Spares for:— See AP.101B-0402-3A	—	—	—	

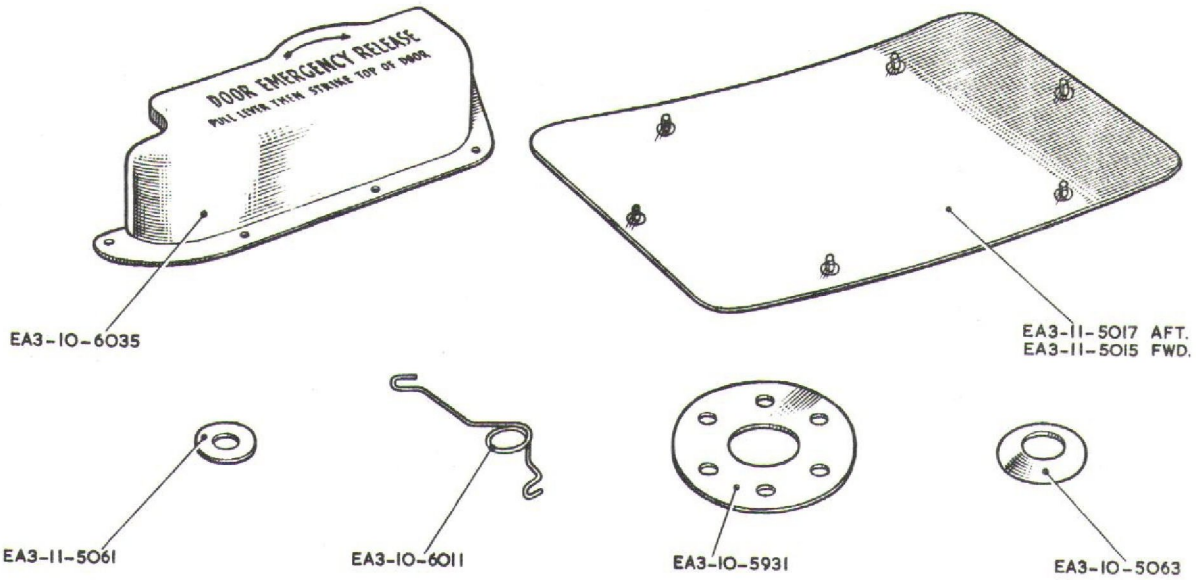

WINDBRAKE DOOR RELEASE & BOMB DOOR COVER PLATES

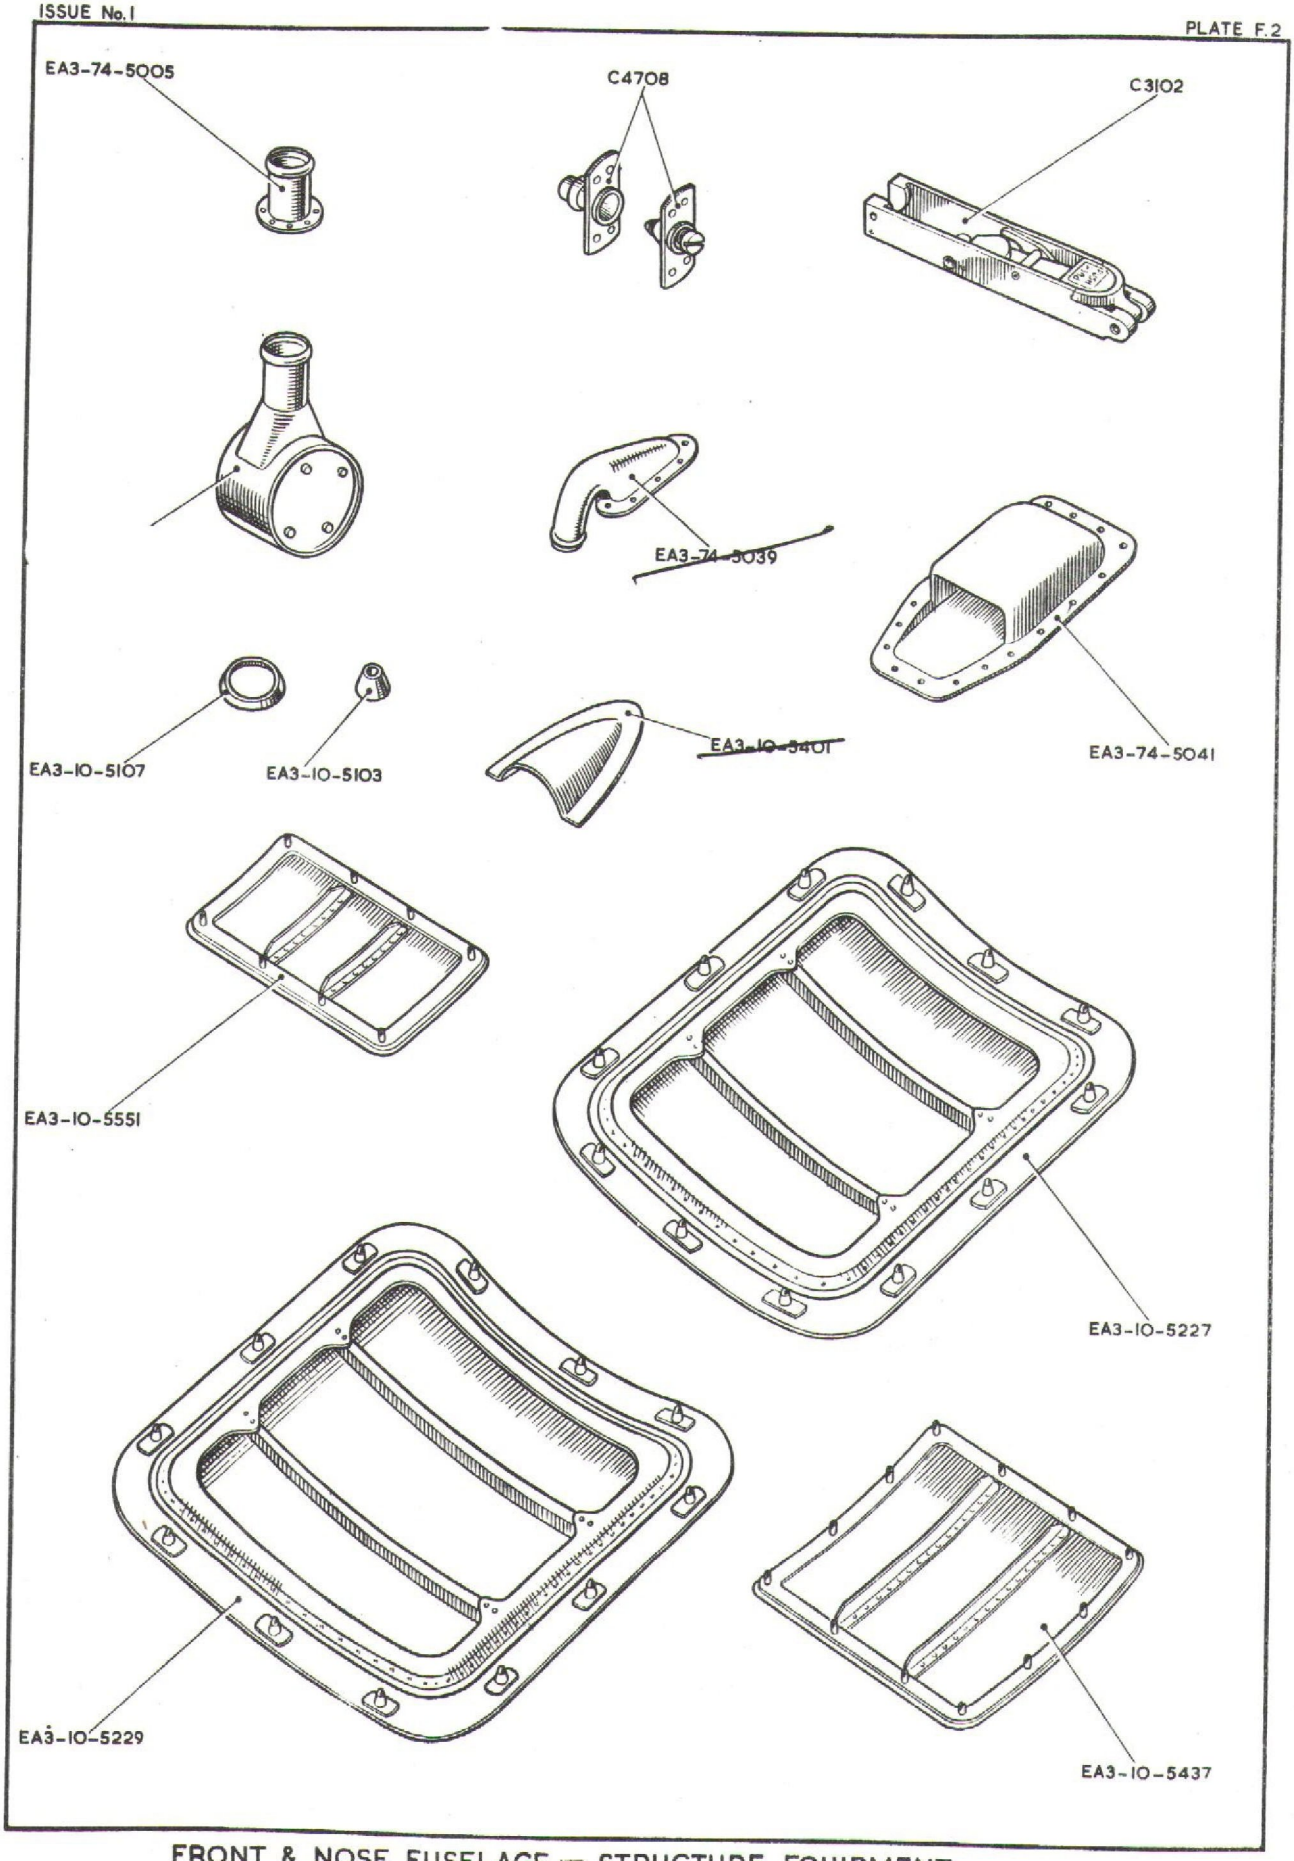

FRONT & NOSE FUSELAGE — STRUCTURE EQUIPMENT