Chapter 10

WARNING LAMPS, SMITHS, TYPE CFP

LIST OF CONTENTS

			OI (.01111				Pa	ıra.
Introduction			•••	•••	,	•••	•••	•••	1
Description	•••	• • • •		•••	•••		***		2
Installation	•••	•••		•••	•••	•••	•••	•••	5
		LI	ST OF	TABI	LES				
								Ta	ble
Warning lamp	details	•••	•••	•••	•••	•••	•••	•••	1
	I	IST O	F ILL	USTR	ATION	IS		_	
								F	ig.
Type CFP war	ning lam	ірехі	oloded	view	•••	•••	•••	•••	1
			NG D			~			

LEADING PARTICULARS

Length	• • •	•••	•••	•••	•••	•••	•••	•••	2.187 in.
Maximum	diam	eter	•••		• • • •		• • •		1.00 in.

Introduction


1. The Smiths Type CFP warning lamps fall into two main categories, those fitted with a dimming device and those without.


Lamps within each category are identical except for the colour of the glass fitted. Details of the glass fitted to a particular lamp will be found in Table 1.

TABLE 1
Warning lamp Details

Colour	without dimmer	Lamps	Lamps with dimmer		
– of glass	Smiths Type No.	Ref. No.	Smiths Type No.	Ref. No.	
Red	CFP 10	5CX/5199	36 CFP		
Green	CFP 12		37 CFP		
Red			38 CFP	5CX/4013	
Green			39 CFP	5CX/5202	
Amber	48 CFP		43 CFP	5CX/5154	
White			44 CFP	5CX/5203	
Blue	CFP 18		45 CFP	5CX/5155	
Red			46 CFP		
Clear	CFP127				

RESTRICTED

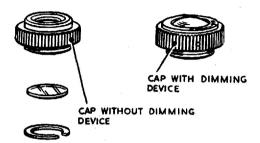

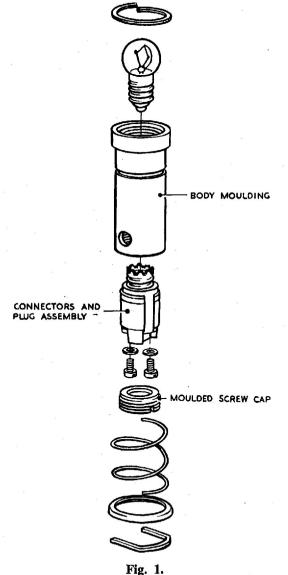

Type CFP Warning lamp—exploded view

DESCRIPTION

- 2. The construction of the two categories of lamp is identical except for the lamp cap which, in the case of those fitted with a dimming device, has an iris type shutter.
- 3. The exploded view shown in fig. 1 clearly indicates the construction of the lamps, which comprise a lamp cap (with or without dimming device), a miniature filament lamp, a body moulding, and a connector and plug assembly. A fixing spring which fits over the body moulding is retained by a cup and clip located in a circumferential groove and enables the lamp to be resiliently mounted on the instrument panel.
- 4. Two letters, "D" and "N" are engraved in the front of the cap fitted with a dimming shutter and represent Day position (full opening) and Night position (small opening). The knurled cap must be turned in the appropriate direction (indicated by an arrow) to obtain the correct setting.

INSTALLATION

- 5. To mount the lamp, the cup ring should be pushed forward and the retaining clip removed; the spring and cup ring can then be removed from the lamp body. Insert the lamp in the cut-out from the front of the panel ensuring that the key locates with the keyway in the panel. Replace the securing spring and cup ring and retain with the fixing clip.
- 6. The terminals are 6 B.A. screws and washers and the connecting cables enter via 0.250 in cable holes drilled in the lamp body.