

Group F.1

CABIN LIGHTING (CODE M)

LIST OF CONTENTS

	Para.		Para.		Para.
<i>Introduction</i> 1	<i>Centre instrument panel</i> 4	<i>Standby compass lamp</i> 13
Description		<i>Standby instrument panel</i> 6	<i>Integrated flight instrument lamps</i> ...	14
<i>Cabin lighting</i>		<i>Port instrument panel</i> 7	<i>Operation</i> 15
<i>General</i> 2	<i>Starboard instrument panel</i> 8	Servicing	
<i>Instrument panel lamps</i>		<i>Cabin side lamps</i> 9	<i>General</i> 16
<i>General</i> 3	<i>Emergency lamps</i> 11	Removal and Assembly	
		<i>Centre console lamps</i> 12	<i>General</i> 17

LIST OF ILLUSTRATIONS

	Fig.
<i>Cabin lighting (theoretical)</i> 1
<i>Cabin lighting (routeing sheet 1)</i> 2
<i>Cabin lighting (routeing sheet 2)</i> 3

TABLE

	Table
<i>Equipment type and Air Publication reference</i> 1

RESTRICTED

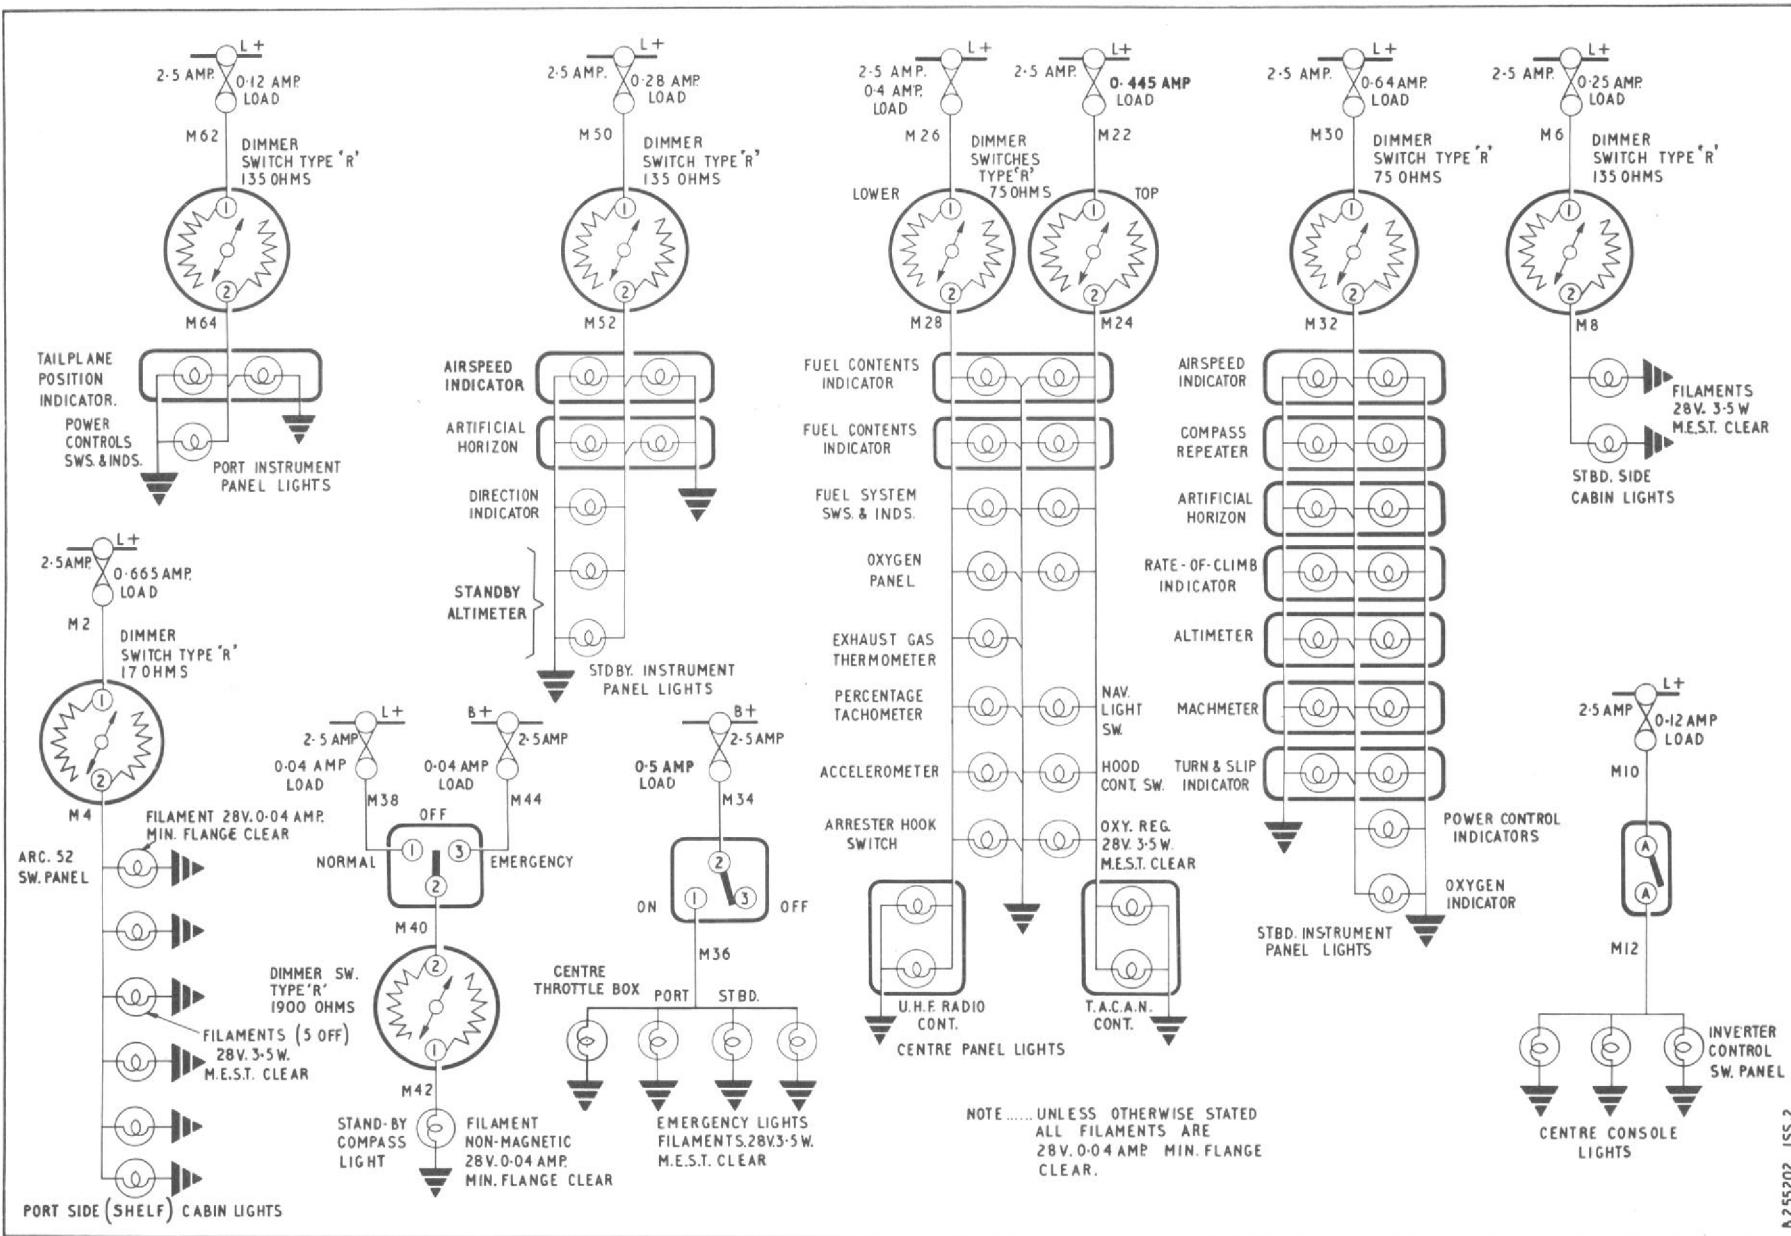


Fig. 1 Cabin Lighting (theoretical)
◀ Mod. 1382 and 1415 added ▶

T.P.(E)24760

RESTRICTED

Introduction

1. This Group contains the description and operation of the aircraft's cabin lighting circuits, together with the information necessary to maintain the equipment in an efficient condition. Routeing and theoretical circuit diagrams are also included. For a general description of the aircraft's electrical system, reference should be made to Groups A.1, A.2 and A.3. Detailed information on the standard items of equipment used in the circuit will be found in the Air Publications listed in Table 1.

DESCRIPTION**Cabin lighting***General*

2. The cabin lighting installation consists of eleven separately fused and controlled circuits supplying lamps to illuminate the instrument panels, cabin shelves, centre console and the standby compass. The lamps are grouped on the various panels and the circuits are described accordingly. Routeing and theoretical diagrams of the circuits are given in Fig.1, 2 and 3.

Instrument panel lamps*General*

3. The instruments, indicators and control switches on the centre, standby, port and starboard instrument panels are illuminated by groups of lamp filaments in Thorn pillar (*single filament*) and Thorn bridge (*multi-filament*) type lamp holders. These lamp holders are mounted on the panels adjacent to the components they serve. Each group of lamp filaments is separately fused and the filaments are wired in parallel, being switched on and dimmed, as required, by separate dimmer switches located on the panels.

Centre instrument panel

4. The lamp filaments on the centre instrument panel are wired in two groups, each group being controlled by a separate dimmer switch on the panel. Where two filaments are provided for any one instrument, they are wired in such a manner, that should one fail or the circuit fuse blow, the instrument will remain illuminated by the remaining lamp filament.

5. The two fuel contents indicators on the panel are both provided with a bridge type lamp containing two filaments and the oxygen panel and fuel system controls are each illuminated by a pair of filaments carried in pillar type lamps. The oxygen regulator, ▶ ◀ exhaust gas thermometer, tachometer, accelerometer and the control switches for the navigation lamps, hood and arresting hook are each illuminated by a single filament carried

TABLE 1**Equipment type and Air Publication reference**

Equipment Type	Air Publication
Dimmer switches, Type R, 17, 75, 135 and 1,900 ohm. A.P.113D-1106-1
Emergency lamps switch, C.W.C. Type XD776 No.6	
Emergency compass lamp switch, C.W.C. Type XD.779 No. 4 A.P.113D-1100 Series
Centre console lamp switch, Type 170	
Side and emergency lamps, Type D A.P.4343E, Vol.1, Book 1, Sect.7
Panel and console lamps, Thorn bridge and pillar type { A.P.113F-0223-1 A.P.113F-0224-1

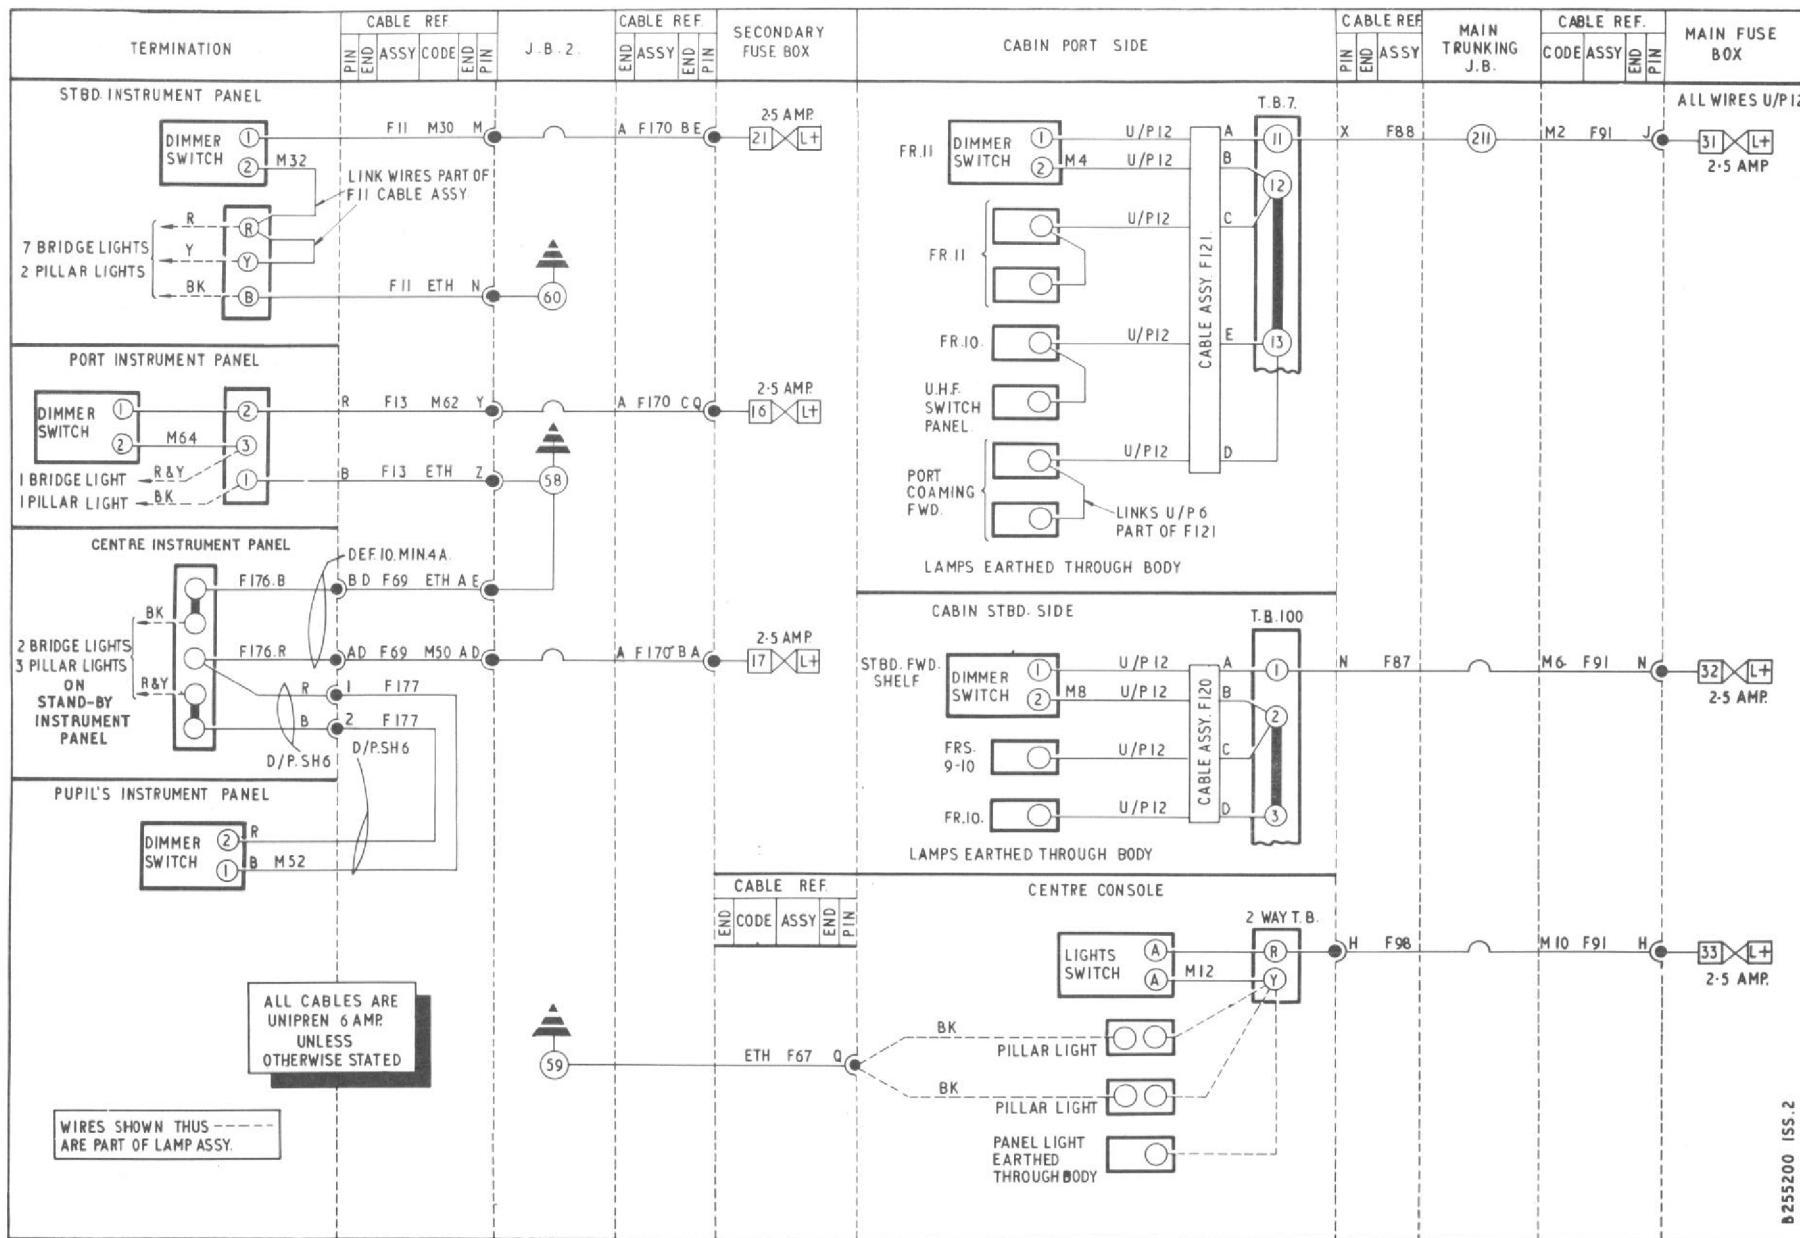


Fig. 2 Cabin Lighting (routing sheet 1)

◀ Mod. 1382 and 1415 added ▶

in a pillar type lamp. The U.H.F. radio and Tacan control units, each contain a pair of lamp filaments, and these are connected into the centre instrument panel lighting circuit.

Standby instrument panel

6. The artificial horizon and A.S.I. on the standby instrument panel are each illuminated by bridge type lamps containing two filaments. The panel also carries three pillar type lamps, two of which illuminate the standby altimeter, and the other, the direction indicator. All these lamp filaments are controlled by a dimmer switch mounted above the Tacan offset computor on the pupil's instrument panel.

Port instrument panel

7. The port instrument panel lighting consists of one bridge and one pillar type lamp. The bridge lamp, which contains two filaments, is used to illuminate the tailplane indicator and the pillar lamp serves the power control switches and indicators on the panel. The lamp filaments are controlled by a dimmer switch mounted on the panel.

Starboard instrument panel

8. The airspeed indicator, machmeter, rate of climb indicator, turn and slip indicator, artificial horizon, altimeter and the compass repeater on the starboard instrument panel are each illuminated by two filaments in bridge type lamps. The oxygen indicator and the power control indicators, also located on this panel, are each served by one filament in a pillar

type lamp. All these filaments are controlled by a dimmer switch mounted on the panel.

Cabin side lamps

9. Five hooded red lamps and one pillar type lamp, all controlled by a common dimmer switch are positioned on the port side of the cabin to illuminate the cabin port shelves and side walls. Two of the hooded lamps are attached to brackets on frame 11, another on frame 10 and the remaining two are located on the port coaming. The pillar type lamp is attached to the U.H.F. control switch panel, which is located below the windscreens platform. The lamps are switched on and dimmed, as required, by a dimmer switch mounted on a bracket located below the lamps on frame 11.

10. The cabin starboard shelf and side walls are illuminated by two hooded red lamps which are also controlled by a common dimmer switch. These lamps are located one on frame 10 and the other is mounted below the top longeron between frames 9 and 10. The dimmer switch, controlling these lamps, is mounted on the cabin starboard shelf.

Emergency lamps

11. Should the normal cabin lighting fail, four hooded red lamps, located one below the port gun sight, two below the starboard gun sight, and one on the centre throttle box, may be brought into use by operation of the EMERGENCY LIGHTS switch mounted on the centre instrument panel. These lamps are not

connected to the normal electrical system, but obtain their supply from a pair of standby batteries located in the radio bay (Group B.1).

Centre console lamps

12. The equipment on the centre console is illuminated by two pillar type lamps and one panel lamp. The two pillar lamps are located on the top face of the console just aft of the throttle box and the panel lamp is mounted on the inverter control panel on the rear face of the console. These lamps are not provided with a dimmer switch, but are controlled by a single-pole ON/OFF switch, mounted on the top of the console.

Standby compass lamp

13. The lamp incorporated in the standby compass is switched on by a centre-off change-over switch marked NORMAL, OFF and EMERGENCY, which is mounted on the forward end of the throttle box on the centre console. When this switch is in the NORMAL position, the lamp is supplied from the main supply line of the aircraft's electrical system, but when the switch is in the EMERGENCY position, the lamp is supplied from the standby batteries (Group B.1). The compass can then be illuminated should the aircraft's normal electrical system fail. The degree of compass illumination is controlled, in both positions of the switch, by a dimmer switch mounted just aft of the lamp control switch on the throttle box. It should be noted that the lamp in this compass is a special non-magnetic type.

RESTRICTED

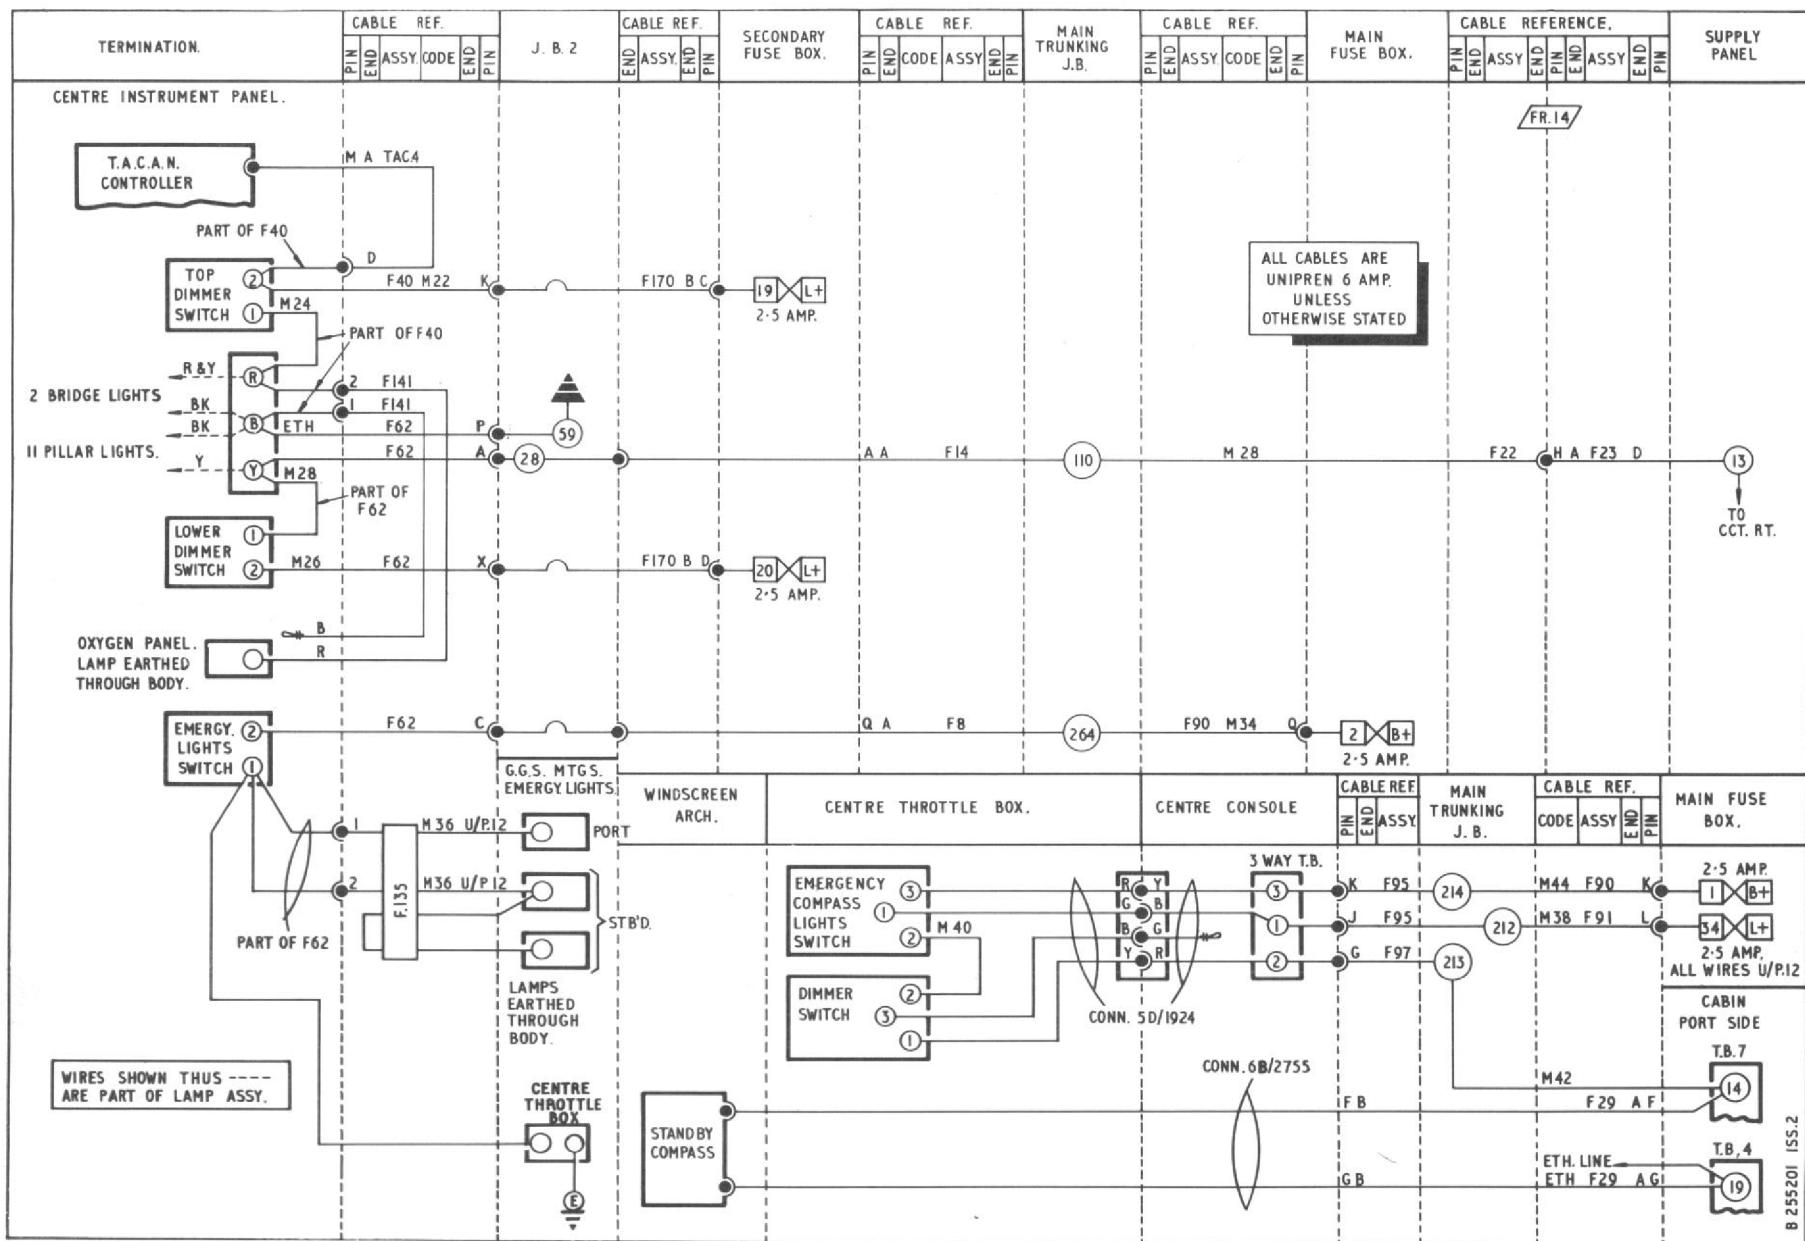


Fig. 3 Cabin Lighting (routeing sheet 2)

◀ Mod. 1382 and 1415 added ▶

RESTRICTED

T.P.(E)24764

Integrated flight instrument lamps

14. The control circuit for the lamps of the aircraft's integrated flight instrument system is described in Sect.5, Chap.2, Group 3.A.

Operation

15. The operation of the various cabin lamp circuits will be obvious when reference is made to the theoretical diagram given in fig.1.

SERVICING**General**

16. For general servicing of the aircraft's electrical system, reference should be made to Group A.1, which also contains a table giving the details of the lamps used in the cabin lighting circuits. Apart from keeping all the components clean and checking the lamps for serviceability, no further servicing should be necessary.

REMOVAL AND ASSEMBLY**General**

17. The removal and assembly of the components forming the cabin lighting circuits should present no difficulties. The location and access to all the components is indicated in Group A.3. The removal of the instrument panels, which carry the majority of the cabin lamps, is fully described in Sect.5, Chap.2.



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.